

2016.0 RANGE ROVER (LG), 308-07

TRANSFER CASE - VEHICLES WITH: TWIN SPEED TRANSFER CASE

# TRANSFER CASE FRONT OUTPUT SEAL (G1550230)

REMOVAL AND INSTALLATION

---

## SPECIAL TOOL(S)



**205-818**

Installer, Seal



**308-620**

Installer, Seal



308-636



E55702

# 308-636


Installer



E15 8794

# JLR-308-926

Support Tool,  
Transfer Case

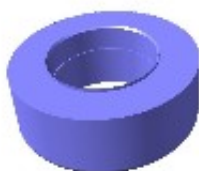

E15 8799

# JLR-308-933

Remover, Transfer  
Case Flange

---

## REMOVAL

## NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

1.


### WARNING:

Do not work on or under a vehicle supported only by a jack.  
Always support the vehicle on safety stands.

Raise and support the vehicle.

2. Refer to: Transfer Case Draining and Filling (308-07 Transfer Case, General Procedures).
3. Refer to: Transfer Case - TDV6 3.0L Diesel (308-07 Transfer Case, Removal).  
Refer to: Transfer Case - TDV6 3.0L Diesel - Hybrid Electric Vehicle (308-07 Transfer Case, Removal).  
Refer to: Transfer Case - TDV8 4.4L Diesel (308-07 Transfer Case, Removal).  
Refer to: Transfer Case - V6 S/C 3.0L Petrol /V8 5.0L Petrol/V8 S/C 5.0L Petrol (308-07 Transfer Case, Removal).
4. With assistance, secure the transfer case with it's transmission mating face down on a flat surface.

5.

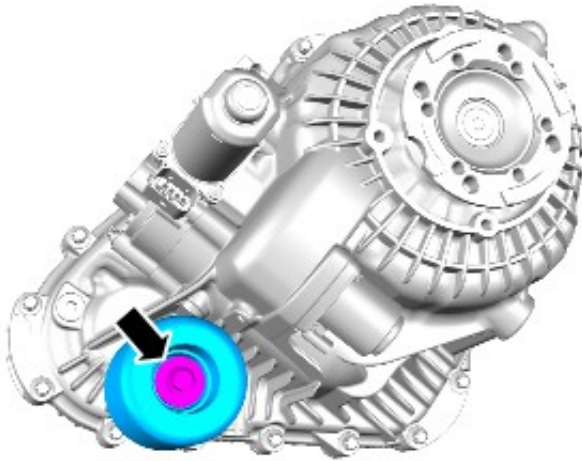

E159189

6.

**WARNING:**

Eye protection must be worn.

**CAUTION:**

Make sure the bolt holes are clean and free of swarf.



7.

**WARNING:**

Eye protection must be worn.

**CAUTION:**

Make sure the bolt holes are clean and free of swarf.



E159191

8.

**CAUTION:**



Care must be taken when turning the transfer case over. The transfer case halves must not be allowed to separate.

With assistance, release the transfer case and secure with the rear face of the transfer case facing down on a flat surface.

9.

**CAUTION:**

Care must be taken to avoid damage to the mating surfaces.

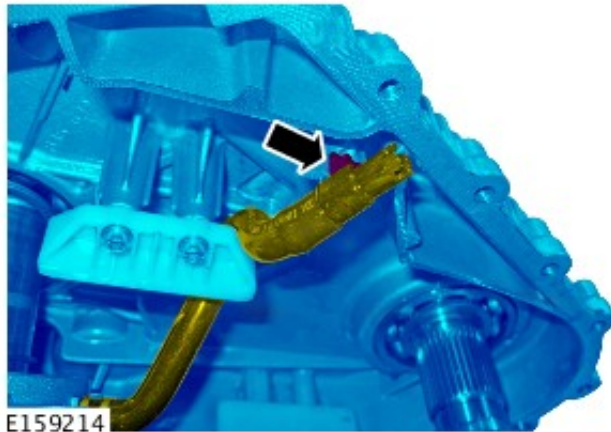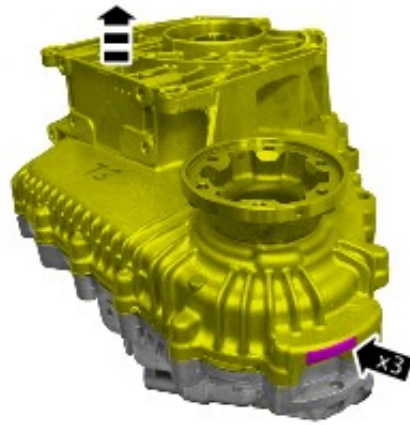


Using a soft faced mallet, release the front casing.

10. Remove the sealant from the transfer case mating faces.

- 11.



12.

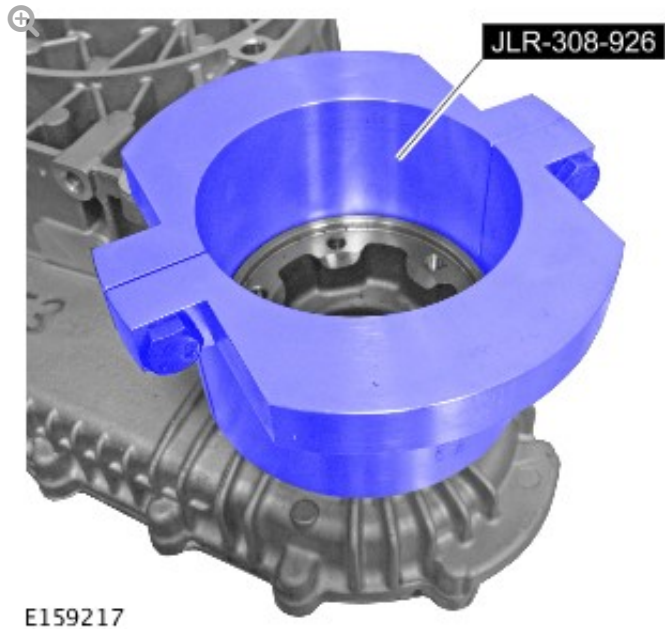


*Special Tool(s):* [JLR-308-926](#)

13.

**CAUTION:**

Make sure that the special tool is correctly located. This will make sure that the snap ring is fully compressed during the next step.

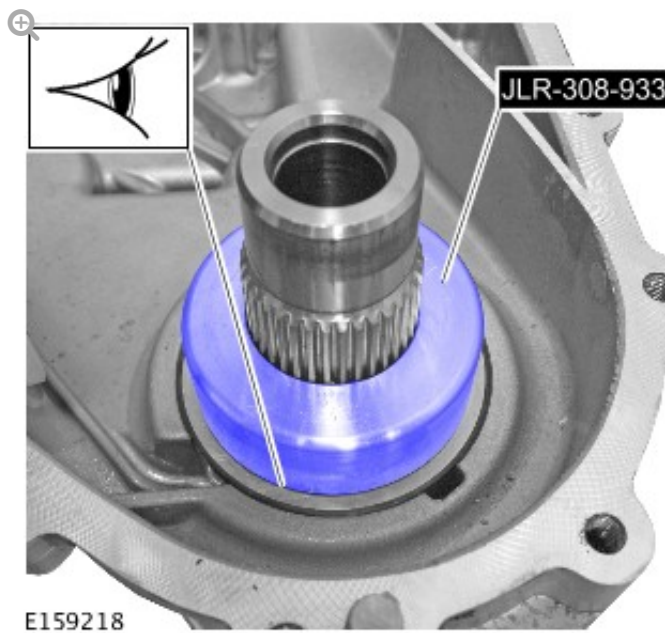

*Special Tool(s):* [JLR-308-933](#)



14.

### CAUTIONS:

- Do not use excessive force whilst removing the flange assembly.
- Discard the snap ring.



*Special Tool(s):* [JLR-308-933](#)

15.



16.



E159221


---

## INSTALLATION

### CAUTION:

During the installation, make sure that all components are clean and free from foreign material.

1.

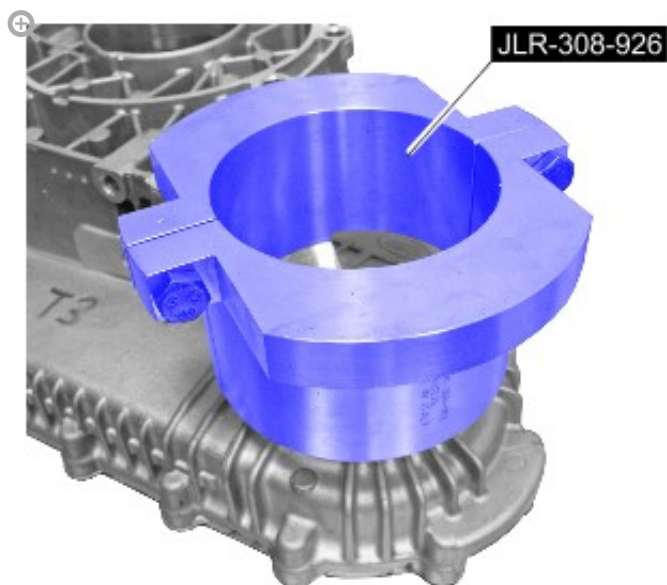

E159222

Position the special tool as shown, to support the transfer case


during the next step.

*Special Tool(s):* [JLR-308-926](#)

2.

### CAUTIONS:


- The chamfer on the bearing inner track must face the seal.
- The transfer case must be supported by the special tool on a flat surface during this step.

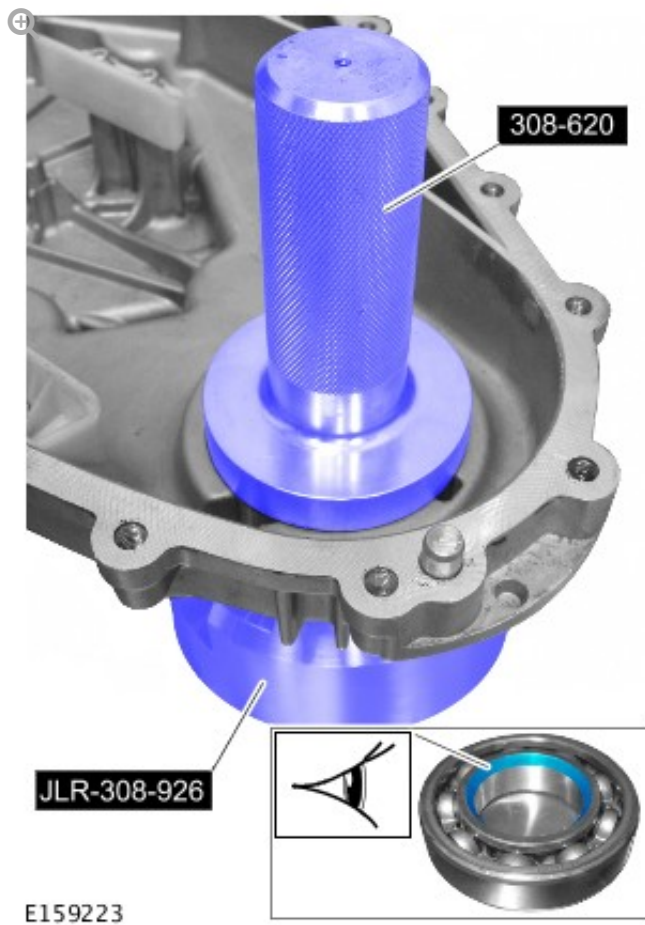

Install the bearing.

*Special Tool(s):* [308-620](#), [JLR-308-926](#)

3.

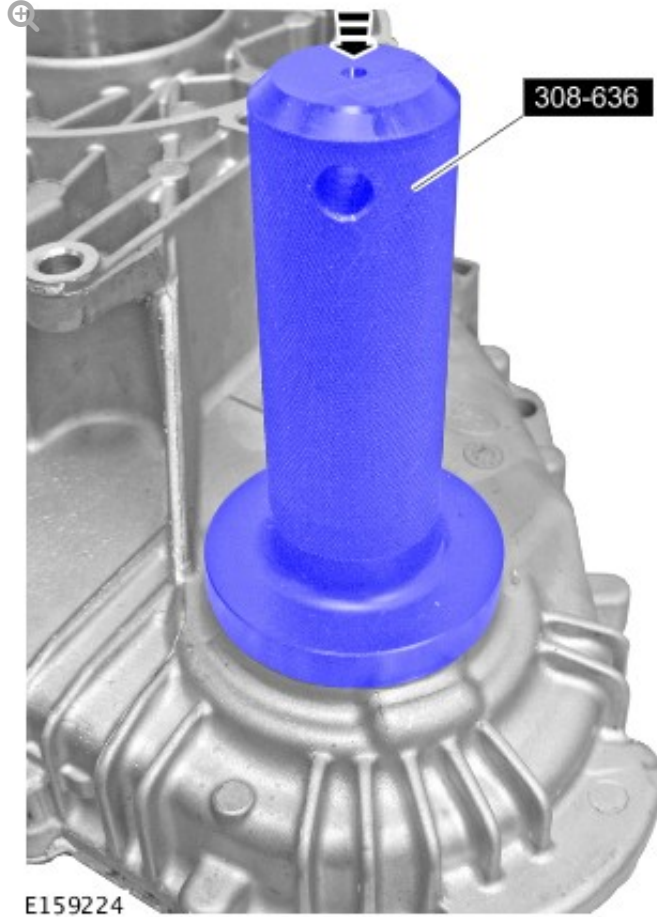

Install the seal.

*Special Tool(s):* [308-636](#)

4.

#### CAUTIONS:

- Centralise the snap ring in the snap ring groove before installing the output flange.
- Extreme care is necessary to make sure the snap ring enters the bearing squarely.
- Install a new snap ring.



E159225


Using the special tool and with assistance, install the drive flange.

*Special Tool(s):* [205-818](#)

5.

**CAUTION:**

Make sure that the oil pump is installed over its location peg.

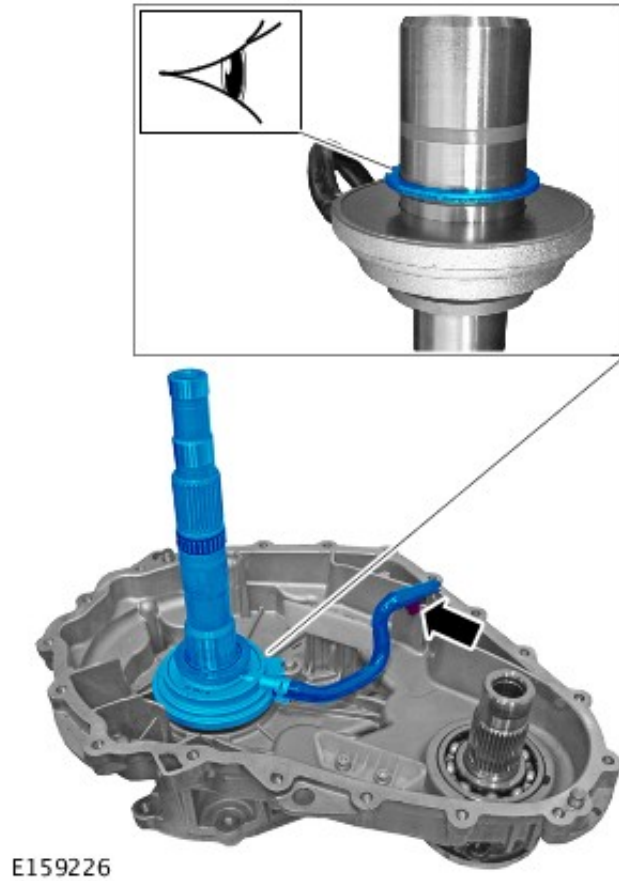

E159226


6. Clean the magnetic filter.

7.

**CAUTION:**

Make sure that the clutch assembly is correctly located as illustrated.



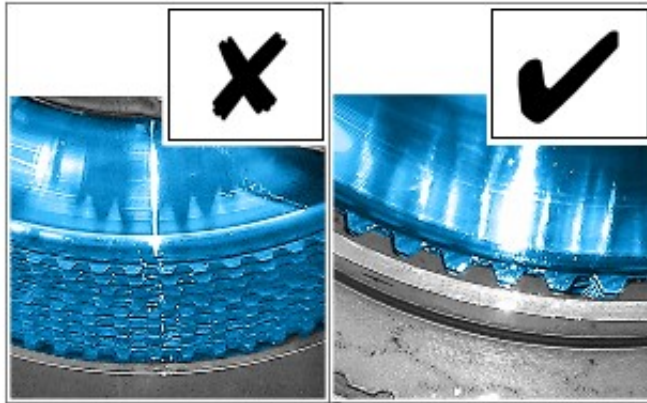

E 149289

8.


### CAUTION:

Make sure that the clutch assembly is correctly located as illustrated.



E149286

9.

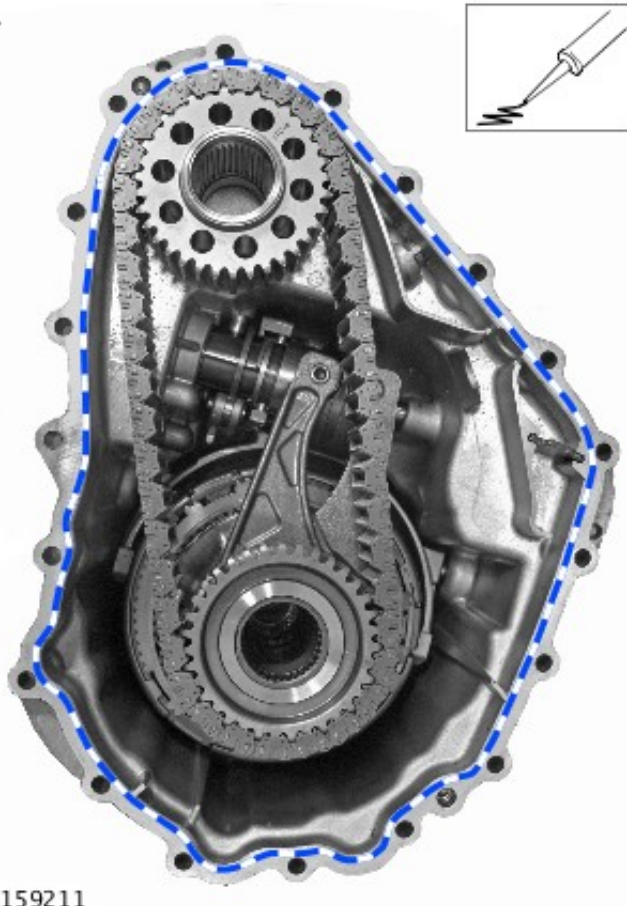


Apply a 2 mm bead of sealant to one surface of the transfer case mating face, as shown.

10.

#### CAUTIONS:

- Make sure that the input shaft spacer is correctly located.
- The input shaft and fluid pump assembly must be supported and held in place by hand, until it is located securely into the clutch assembly.



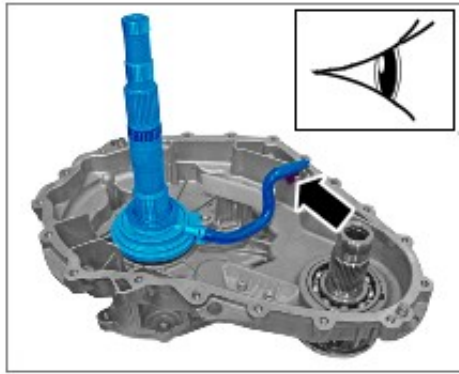

E159212

Install the front half of the transfer case.

11.

**CAUTION:**

Care must be taken when turning the transfer case over. The transfer case halves must not be allowed to separate.

With assistance, release the transfer case and secure with it's transmission mating face down on a flat surface.

12.

**CAUTION:**

Only tighten the bolts finger-tight at this stage.



E159191

13.



E159409

*Torque: 10 Nm*

14.



E159191

*Torque: 35 Nm*


15.



E159190

*Torque: 35 Nm*

16.

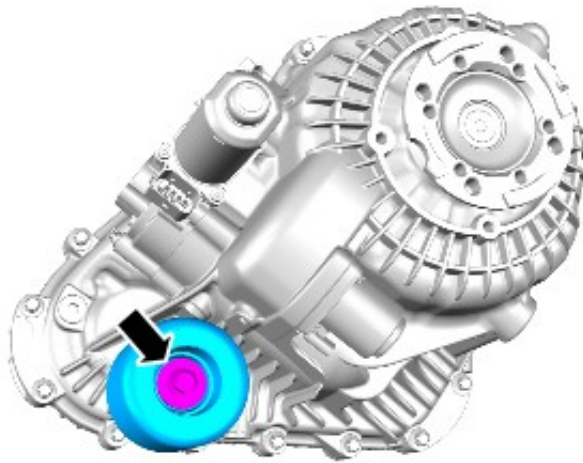

**E159189**

***Torque: 75 Nm***

17. With assistance, release the transfer case from the flat surface.
18. Refer to: Transfer Case - TDV6 3.0L Diesel (308-07B, Installation).  
Refer to: Transfer Case - TDV6 3.0L Diesel - Hybrid Electric Vehicle (308-07B, Installation).  
Refer to: Transfer Case - TDV8 4.4L Diesel (308-07B, Installation).  
Refer to: Transfer Case - V6 S/C 3.0L Petrol /V8 5.0L Petrol/V8 S/C 5.0L Petrol (308-07B, Installation).
19. Refer to: Transfer Case Draining and Filling (308-07 Transfer Case, General Procedures).