

2016.0 RANGE ROVER (LG), 308-07

TRANSFER CASE - VEHICLES WITH: TWIN SPEED TRANSFER CASE

TRANSFER CASE REAR OUTPUT SEAL (G1550231)

REMOVAL AND INSTALLATION

41.20.54	OIL SEAL(S) -	3000 CC, TDV6,	5.1	USED WITHINS	+
	REAR OUTPUT SHAFT - RENEW	DIESEL, WITH PARTICULATE FILTER, WITH DIESEL EXHAUST FLUID			

SPECIAL TOOL(S)



204-525-
1

Replacer, Drive
Flange



205-726




E87692

205-726

Remover/Installer,
Wheel Hub Bearing




308-637

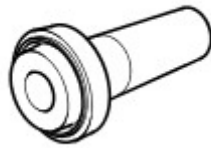

E55697

308-637


Installer

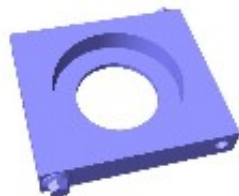

E15 8795

JLR-308-927

Support Tool,
Transfer Case

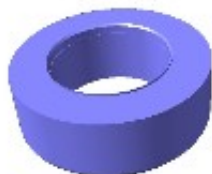

E15 8797

JLR-308-931

Remover, Transfer
Case Flange

REMOVAL

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

1.


WARNING:

Do not work on or under a vehicle supported only by a jack.
Always support the vehicle on safety stands.

Raise and support the vehicle.

2. Refer to: Transfer Case Draining and Filling (308-07B, General Procedures).
3. Refer to: Transfer Case - TDV6 3.0L Diesel (308-07B, Removal).
Refer to: Transfer Case - TDV6 3.0L Diesel - Hybrid Electric Vehicle (308-07B, Removal).
Refer to: Transfer Case - TDV8 4.4L Diesel (308-07B, Removal).
Refer to: Transfer Case - V6 S/C 3.0L Petrol /V8 5.0L Petrol/V8 S/C 5.0L Petrol (308-07B, Removal).
4. With assistance, secure the transfer case with it's transmission mating face down a flat surface.

5.

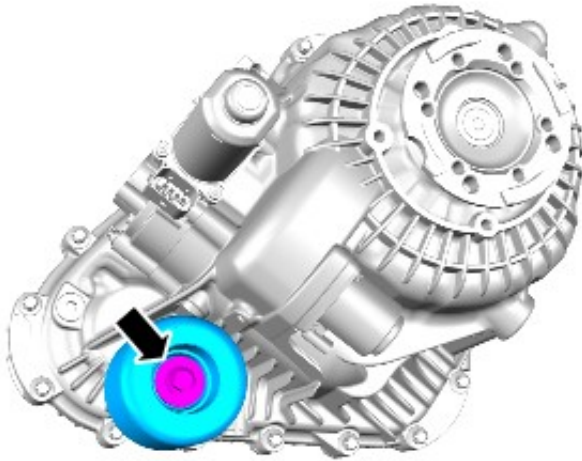

E159189

6.

WARNING:

Eye protection must be worn.

CAUTION:

Make sure the bolt holes are clean and free of swarf.



7.

WARNING:

Eye protection must be worn.

CAUTION:

Make sure the bolt holes are clean and free of swarf.




E159191

8.

CAUTION:

Care must be taken to avoid damage to the mating surfaces.

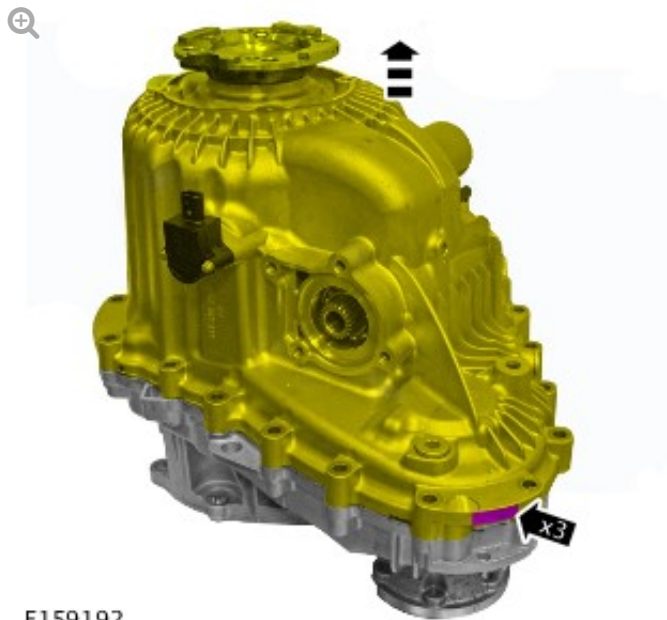

E159192

Using a soft faced mallet, release the rear casing.

9.



E159215

10.



E159213

Locate the magnetic filter. The filter may have dropped into the front housing in the previous step.


11.

CAUTION:

Make sure that the mating faces are clean and free of foreign material.

Remove the sealant from the transfer case mating faces.

12.

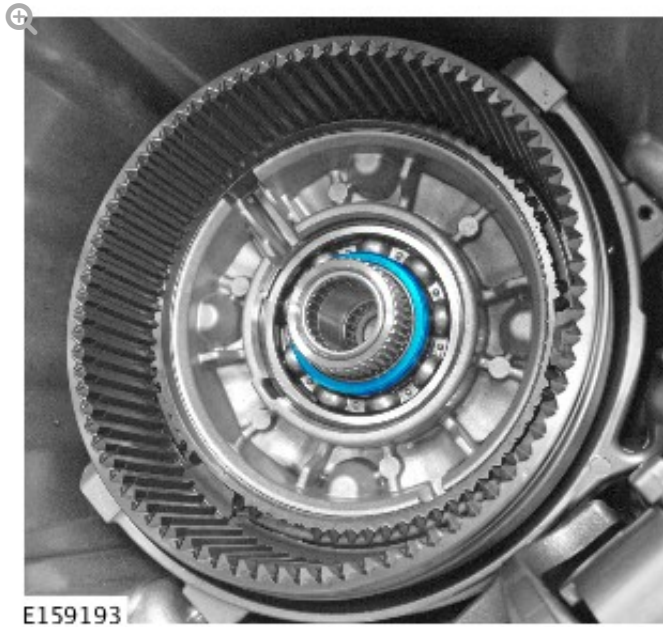

Remove the spacer.

13.



14.


NOTE:

Remove as an assembly.



E159195

15.

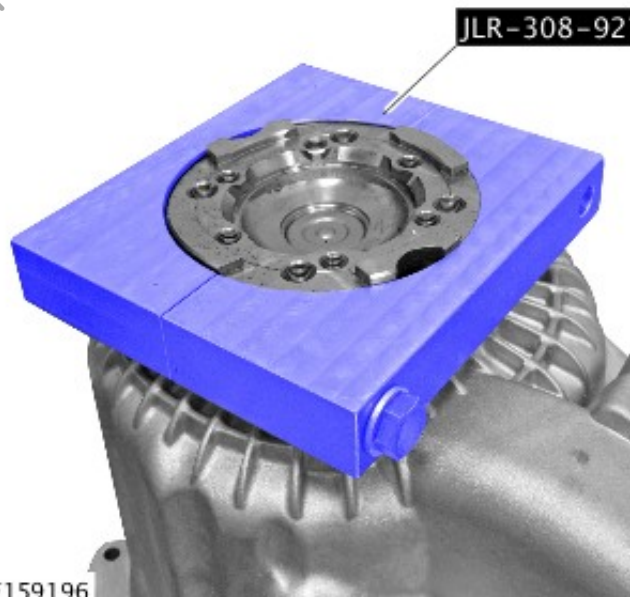

E159196

Special Tool(s): [JLR-308-927](#)

16.

CAUTION:

Make sure that the special tool is correctly located. This will make sure that the snap ring is fully compressed during the next step.




Special Tool(s): [JLR-308-931](#)

17.

CAUTIONS:

- Do not use excessive force whilst removing the flange assembly.
- Discard the snap ring.

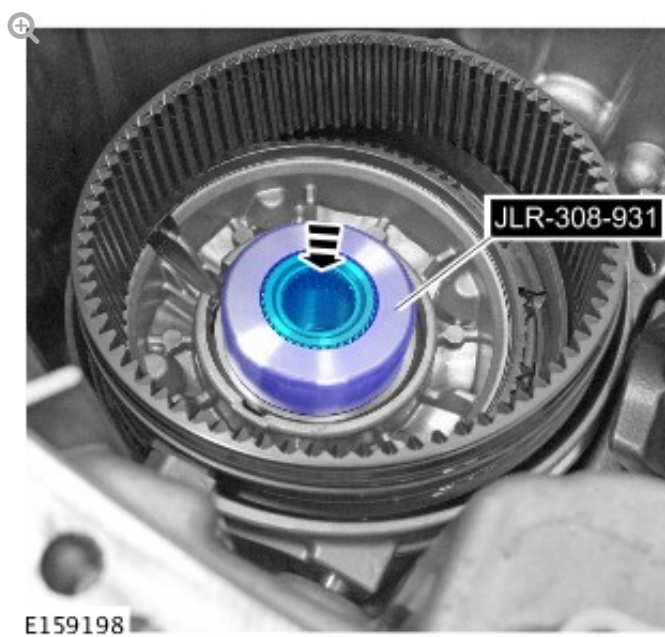


18.




E159199

19.

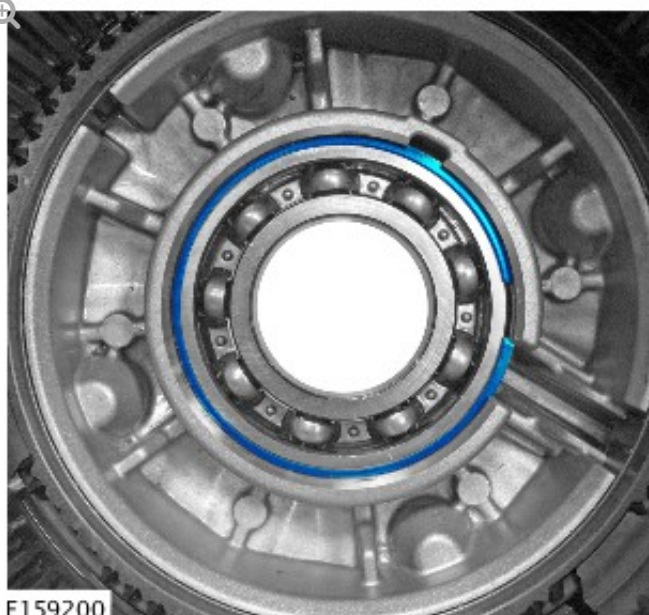

E159200

20.

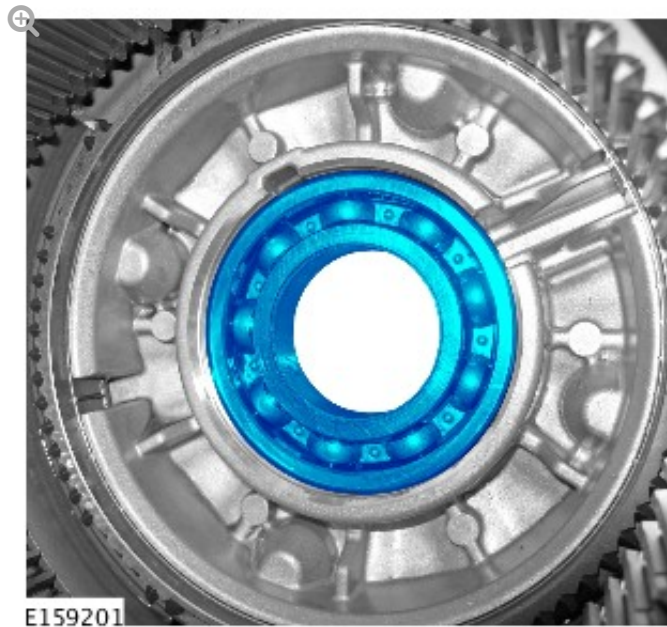


21. With assistance, release the transfer case from the flat surface.

INSTALLATION

CAUTION:

During the installation, make sure that all components are clean and free from foreign material.

1.

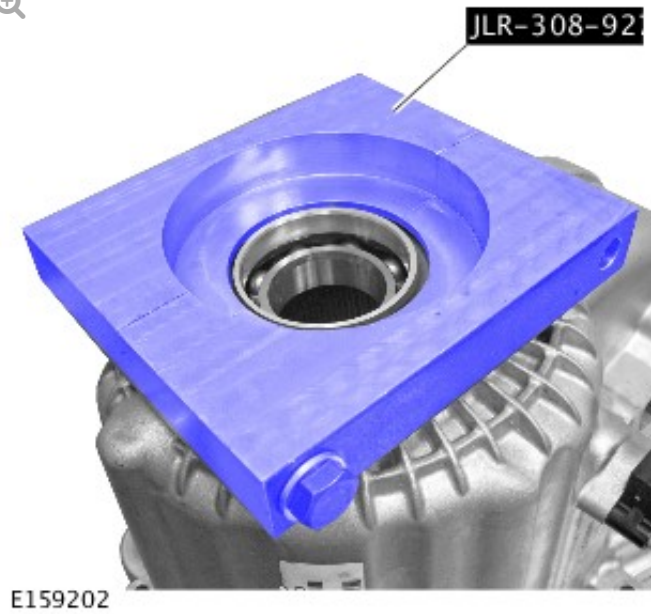

Position the special tool as shown, to support the transfer case during the next step.

Special Tool(s): [JLR-308-927](#)

2.

CAUTION:

The chamfer on the bearing inner track must face the seal.




E159203

Install the bearing.


Special Tool(s): [205-726](#)

3.

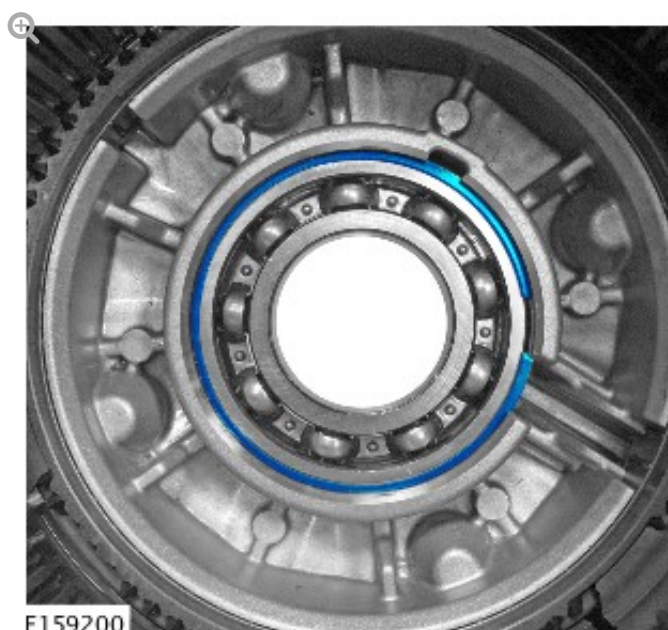

E159200

4.

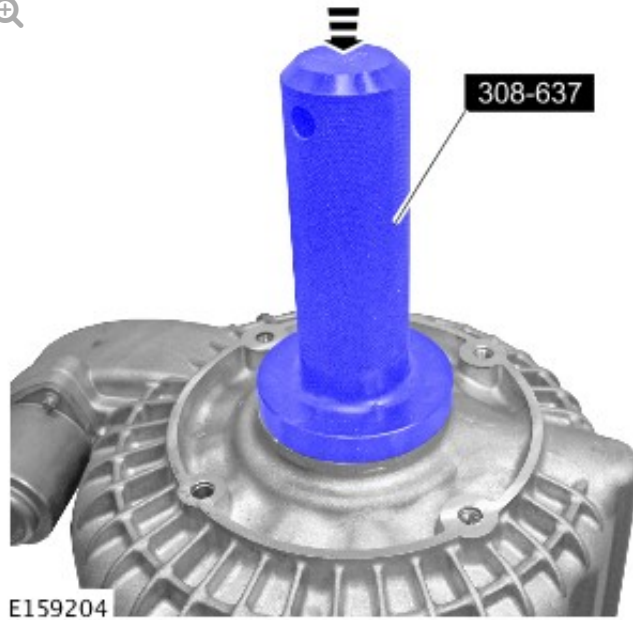

Install the seal.

Special Tool(s): [308-637](#)

5.

CAUTIONS:

- Centralise the snap ring in the snap ring groove before installing the output flange.
- Extreme care is necessary to make sure the snap ring enters the bearing squarely.
- Install a new snap ring.




Using the special tool and with assistance, install the drive flange.

Special Tool(s): [204-525-1](#)

6. With assistance, secure the rear half of the transfer case with it's rear face down on a flat surface.

7.

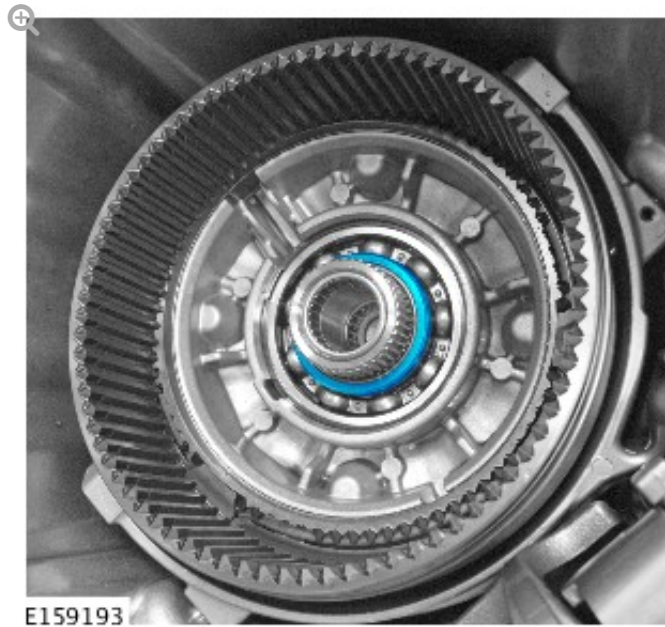

Install the spacer.

8.

NOTE:


Rotate the differential to engage the splines.




9.

NOTE:

Rotate the assembly to engage the clutch plates.

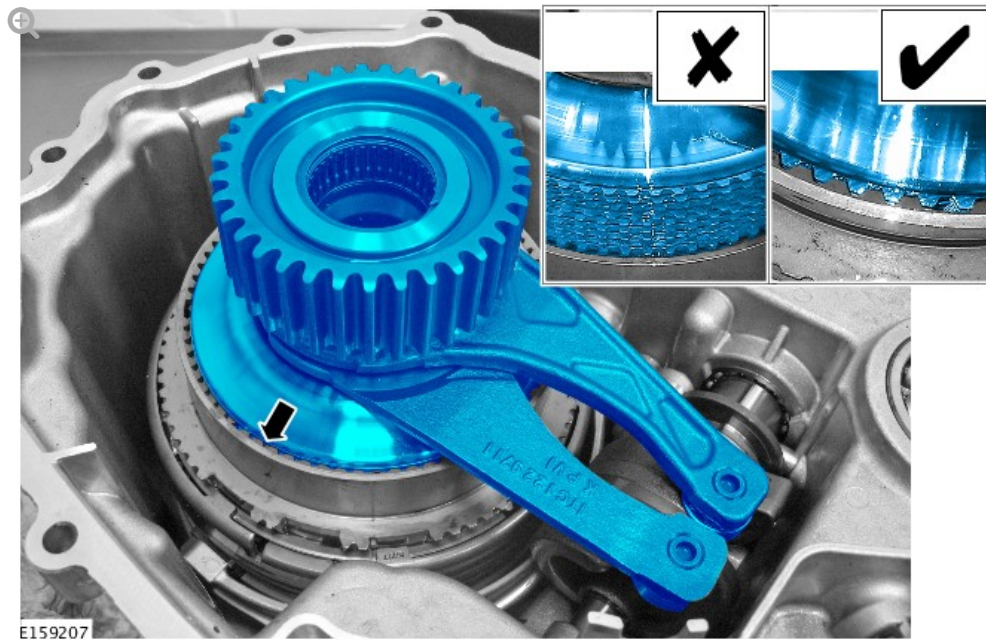


10.

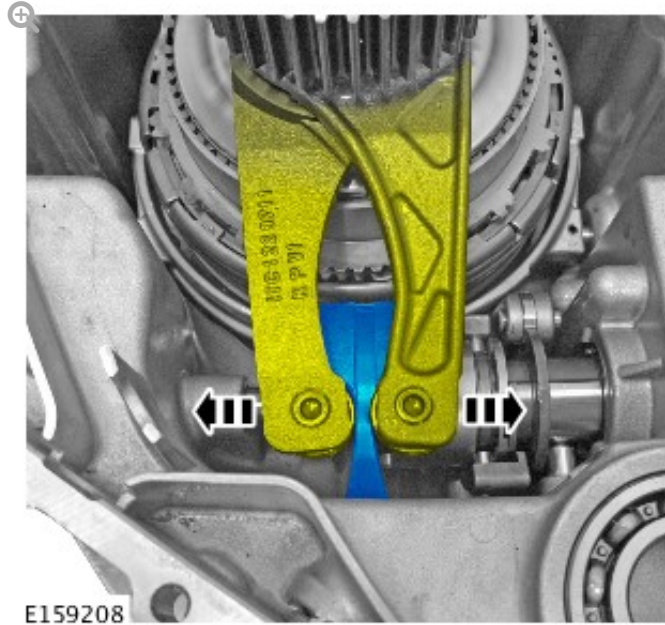

11.

CAUTION:

Make sure that the front driveshaft gear bearing is fully seated before installing the chain and gear.

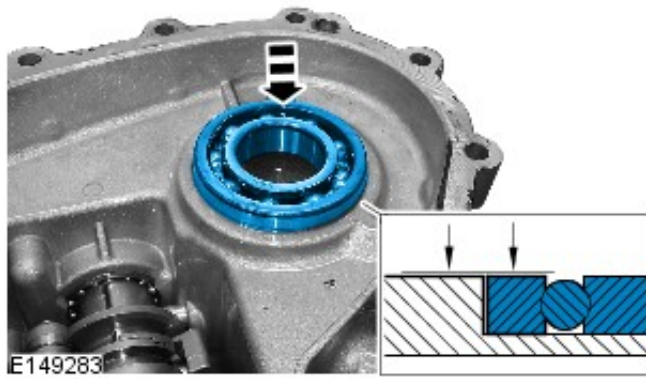

E149283


12.

CAUTION:

Make sure that the chain is installed with the dark links facing down.

NOTE:

The relieved splined inner diameter of the sprocket must face up as shown.

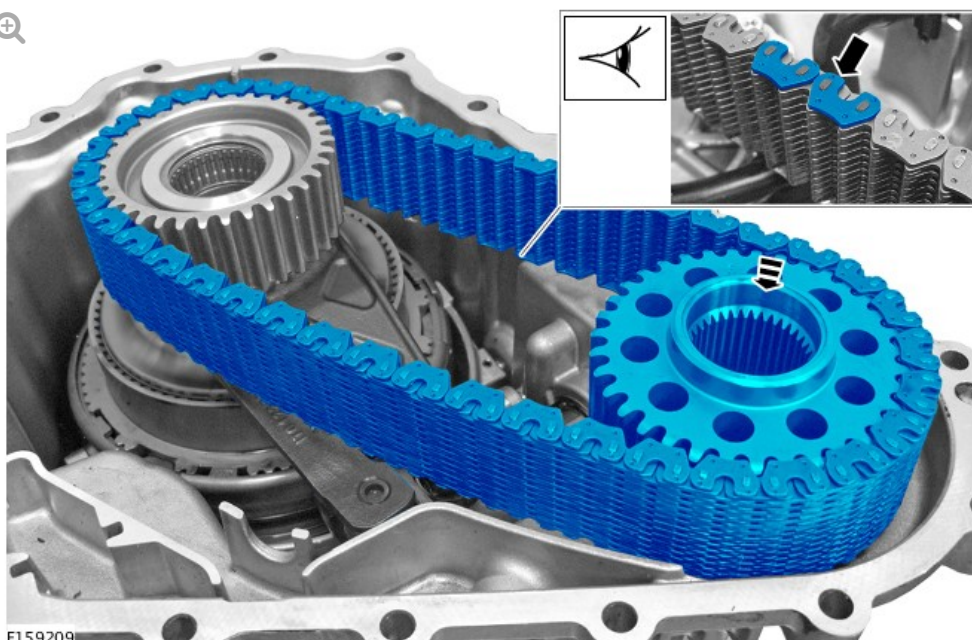


E159209


13.

CAUTION:

Make sure that the component is clean and free of foreign material .

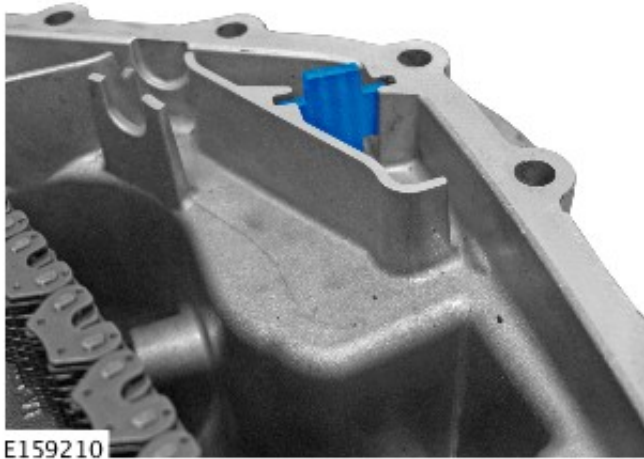

14.

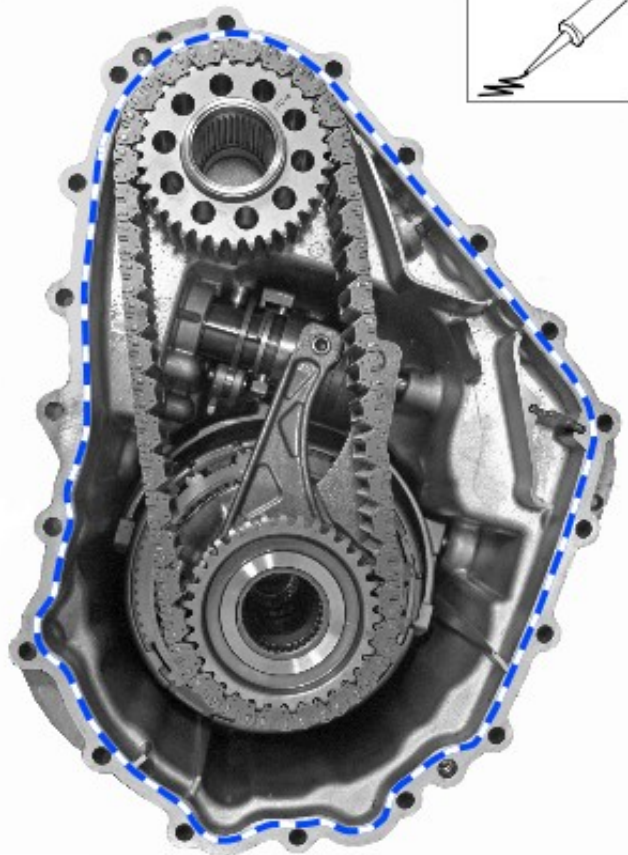


E159211

Apply a 2 mm bead of sealant to one surface of the transfer case mating face, as shown.

15.

CAUTIONS:

- Make sure that the input shaft spacer is located correctly.
- The input shaft and fluid pump assembly must be supported and held in place by hand, until it is located securely into the clutch assembly.

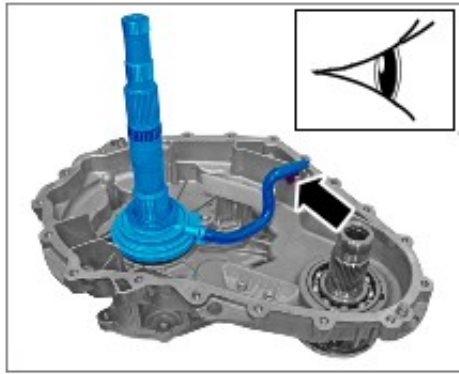

E159212

Install the front half of the transfer case.

16.

CAUTION:

Care must be taken when turning the transfer case over. The transfer case halves must not be allowed to separate.

With assistance, release the transfer case and secure with it's transmission mating face down on a flat surface.

17.


CAUTION:

Only tighten the bolts finger-tight at this stage.



E159191

18.

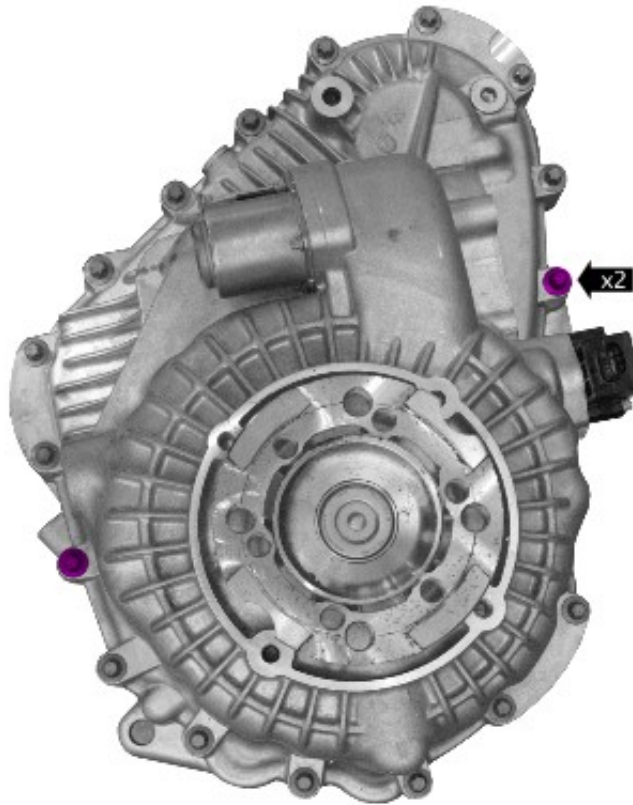

E159409

Torque: 10 Nm

19.



E159191

Torque: 35 Nm


20.



E159190

Torque: 35 Nm

21.

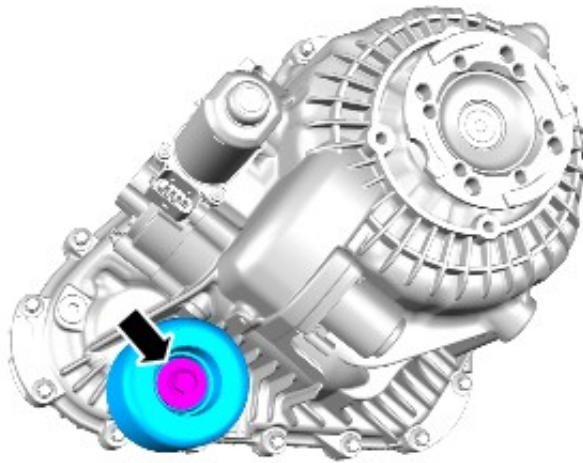

E159189

Torque: 75 Nm

22. With assistance, release the transfer case from the flat surface.
23. Refer to: Transfer Case - TDV6 3.0L Diesel (308-07B, Installation).
Refer to: Transfer Case - TDV6 3.0L Diesel - Hybrid Electric Vehicle (308-07B, Installation).
Refer to: Transfer Case - TDV8 4.4L Diesel (308-07B, Installation).
Refer to: Transfer Case - V6 S/C 3.0L Petrol /V8 5.0L Petrol/V8 S/C 5.0L Petrol (308-07B, Installation).
24. Refer to: Transfer Case Draining and Filling (308-07B, General Procedures).