

2016.0 RANGE ROVER (LG), 308-07

TRANSFER CASE - VEHICLES WITH: TWIN SPEED TRANSFER CASE

TRANSFER CASE - SDV6 3.0L DIESEL - HYBRID ELECTRIC VEHICLE (G1670844)

INSTALLATION

INSTALLATION

SPECIAL TOOL(S)



**303-
1069**

Adapter,
Wrench



308-598

Installer, Oil
Seal

GENERAL EQUIPMENT

EQUIPMENT NAME

Powertrain Jack

Vehicle/axle stands

Wooden Block

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Component shown removed for clarity.


1.

CAUTION:

Oil seals must be fitted dry.

NOTES:

- This step is only required if previously removed.
- Make sure that this component is installed to the noted removal position.

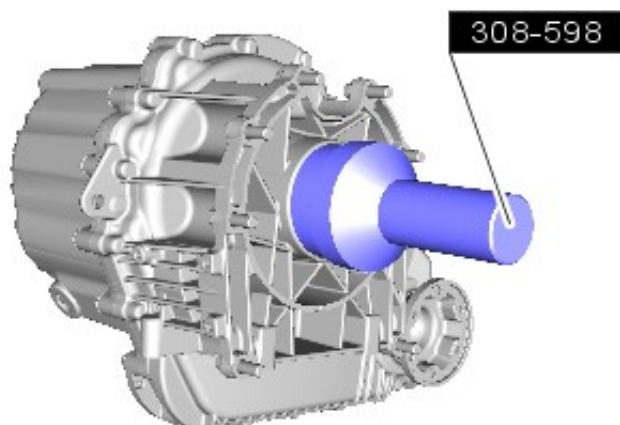


E50943

Special Tool(s): [308-598](#)

2.


NOTES:

- This step is only required if previously removed.
- Install a new O-ring seal.

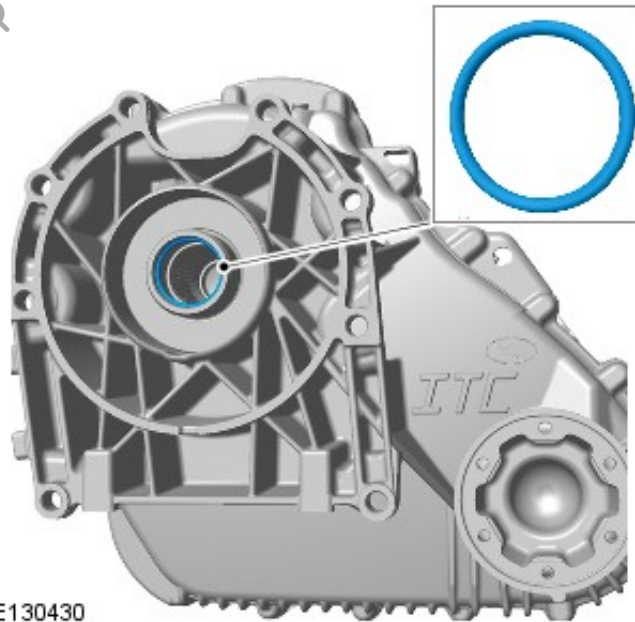

E130430


3.

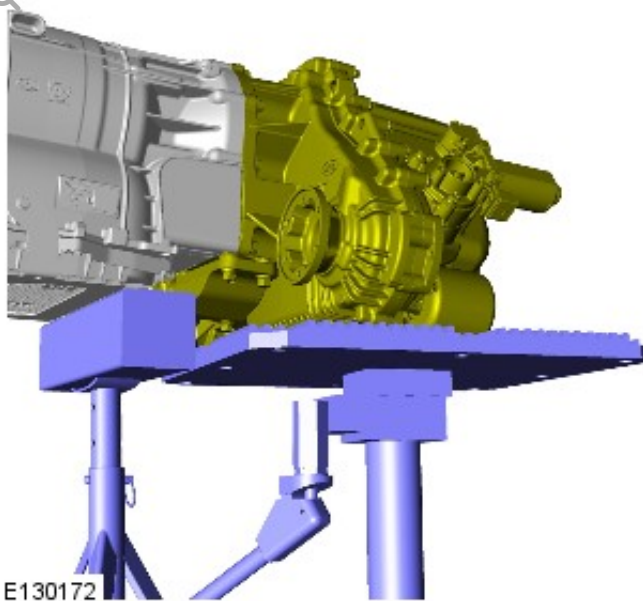

E130172


- Clean the component mating faces.
- Lubricate input shaft splines with 'Weicon TL7391' grease.
- *General Equipment:* [Powertrain Jack](#)
General Equipment: [Vehicle/axle stands](#)
General Equipment: [Wooden Block](#)

4.

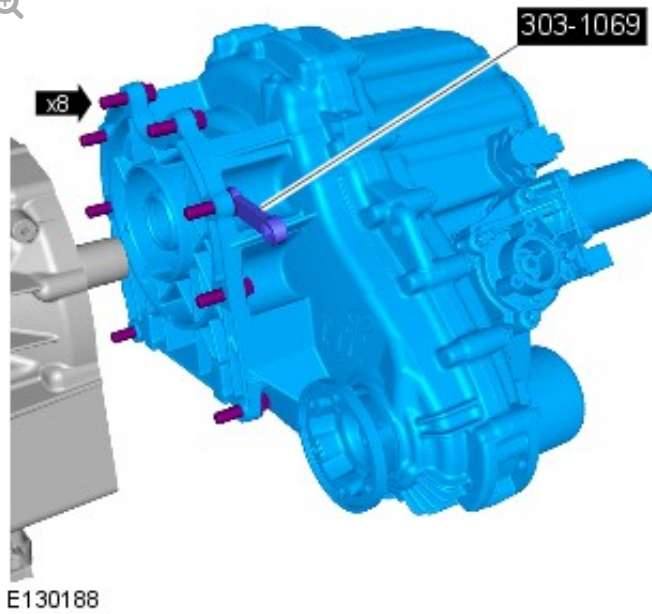


- *Special Tool(s):* 303-1069
- *Torque:* 45 Nm


5.

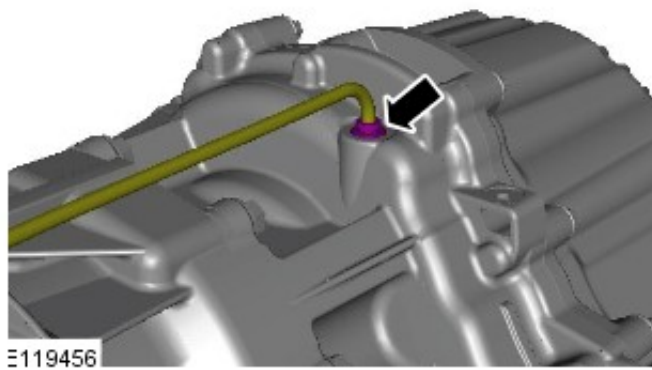

6.

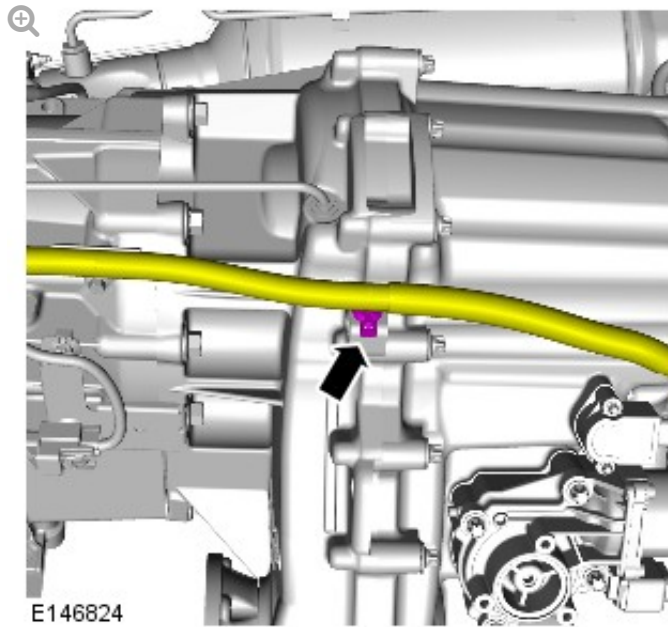


7.

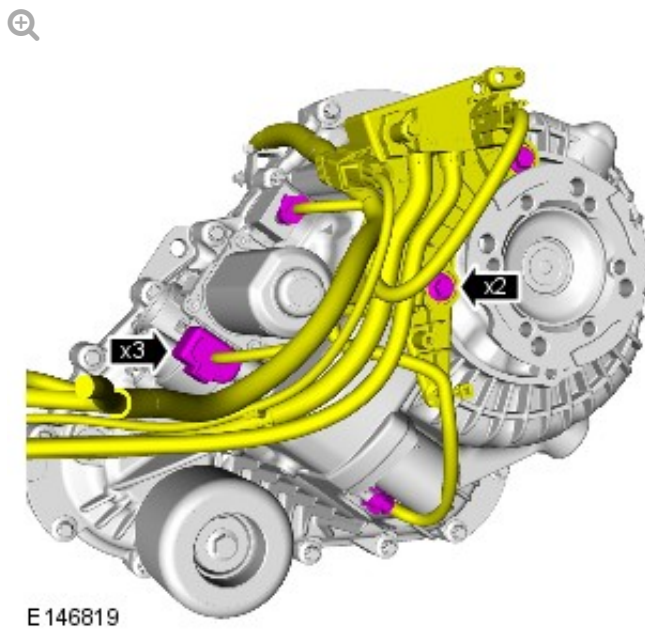


Torque: 25 Nm

8.

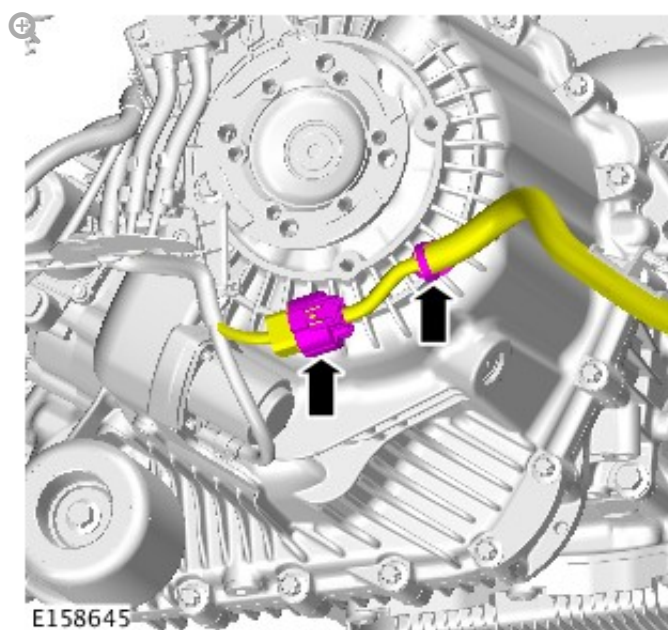


9.

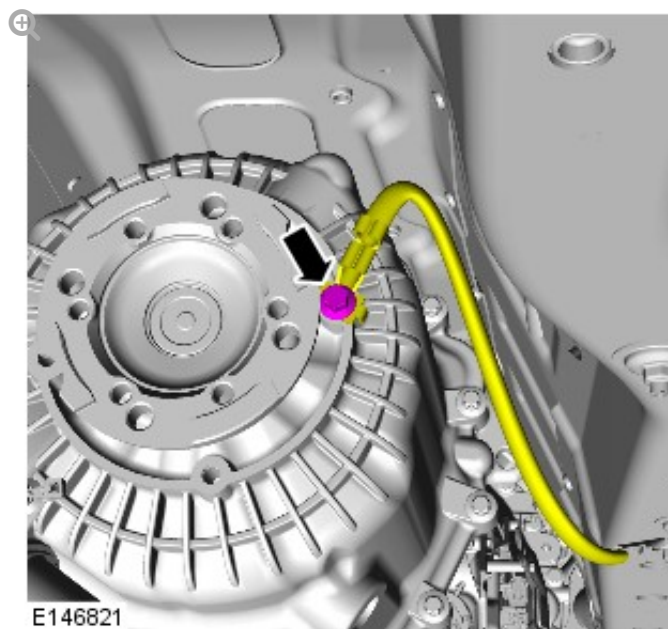

Torque: 25 Nm

10.

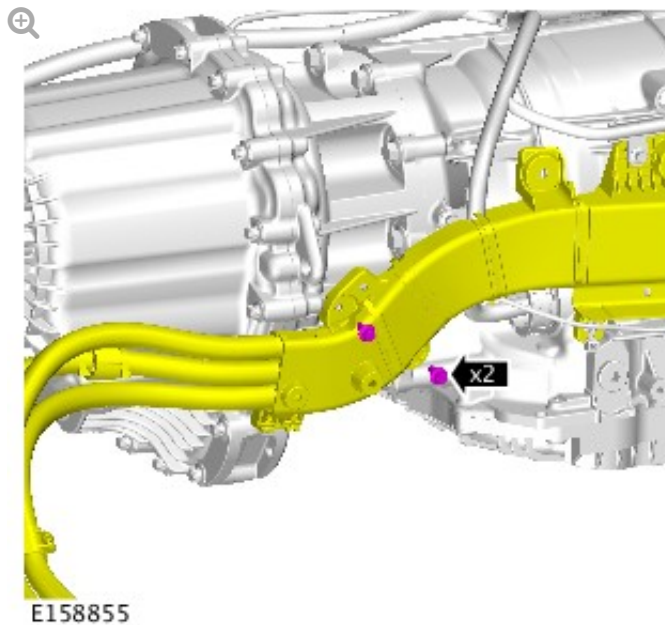

Torque: 10 Nm


11.

CAUTION:

Make sure that new bolts are installed.

NOTE:

Make sure that the component aligns with the installation mark noted in the removal step.

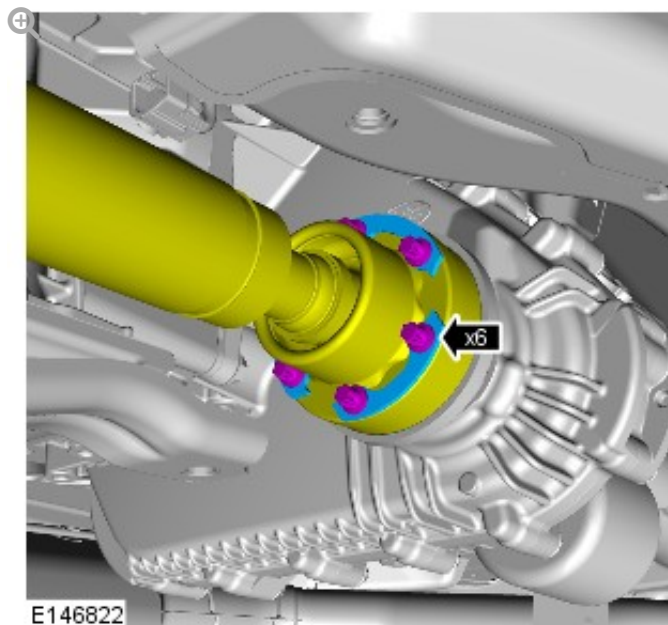

Torque:


Stage 1 45 Nm

Stage 2 90°

12.

CAUTION:


Make sure the driveshaft is aligned to the transfer case output flange.

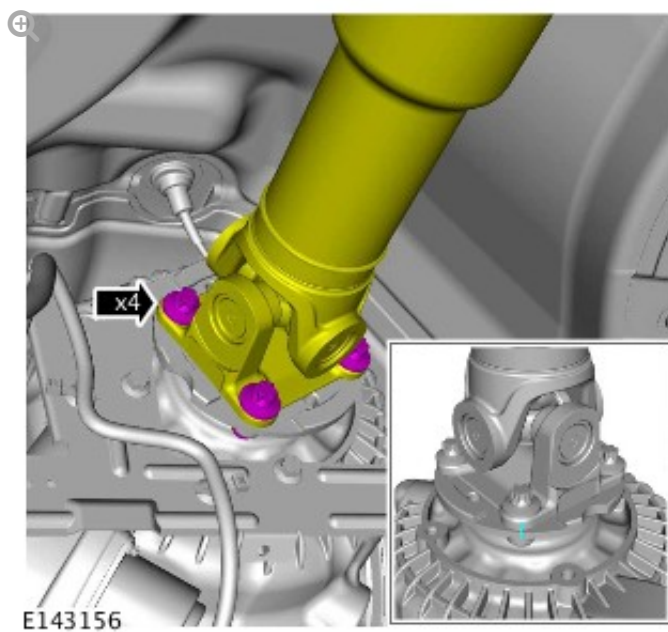

Install the driveshaft to the transfer case.

Torque: 150 Nm

13.

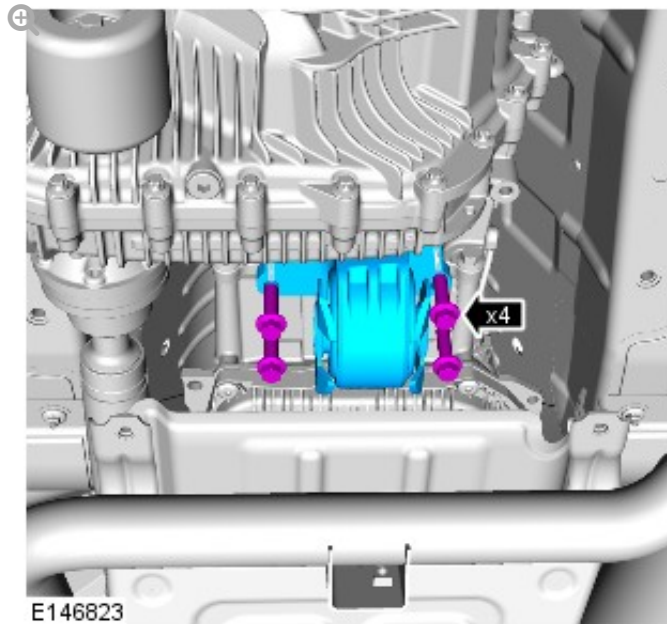

Torque: 60 Nm

14. Refer to: [Transmission Support Crossmember - TDV6 3.0L Diesel](#) (502-02 Full Frame and Body Mounting, Removal and Installation).

15.

NOTE:

Do not carry out this step if the component was removed for access only.

Refer to: [Transfer Case Draining and Filling](#) (308-07C Transfer Case - Vehicles With: Twin Speed Transfer Case, General Procedures).

16. Refer to: [Hybrid Electric Vehicle System Bonding Test](#) (414-01 Battery, Mounting and Cables, General Procedures).

17. Refer to: [Hybrid Electric Vehicle Decommission](#) (414-01 Battery, Mounting and Cables, General Procedures).

NOTE:

Do not carry out this step if the component was removed for access only.

1. Connect the Land Rover approved diagnostic equipment.
2. Start the diagnostic service function **transfer case-transfer case replacement**.
3. Clear any Diagnostic Trouble Codes (DTCs) after calibration and check for correct operation.