

2016.0 RANGE ROVER (LG), 308-07

TRANSFER CASE - VEHICLES WITH: TWIN SPEED TRANSFER CASE

TRANSFER CASE - TDV6 3.0L DIESEL (G1509696)

INSTALLATION

41.20.25	TRANSFER GEARBOX - RENEW	3000 CC, TDV6, DIESEL, WITH PARTICULATE FILTER, WITH DIESEL EXHAUST FLUID	3.2	USED WITHINS	+
----------	--------------------------------	--	-----	-----------------	---

INSTALLATION

SPECIAL TOOL(S)



**303-
1069**

Adapter,
Wrench



308-598

Installer, Oil
Seal

GENERAL EQUIPMENT

EQUIPMENT NAME

Powertrain Jack
Vehicle/axle stands
Wooden Block

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Component shown removed for clarity.


1.

CAUTION:

Oil seals must be fitted dry.

NOTES:

- This step is only required if previously removed.
- Make sure that this component is installed to the noted removal position.

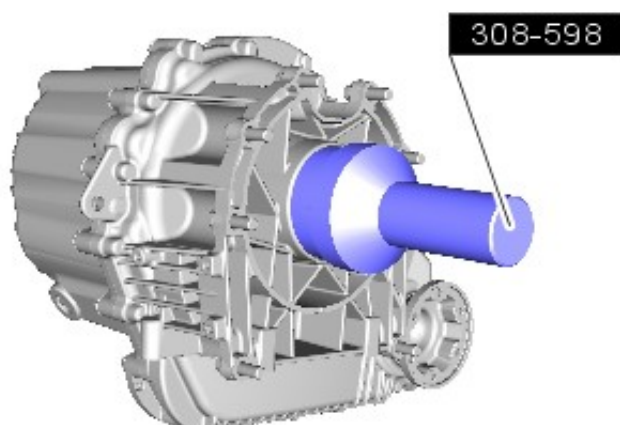


E50943

Special Tool(s): [308-598](#)

2.


NOTE:

This step is only required if previously removed.

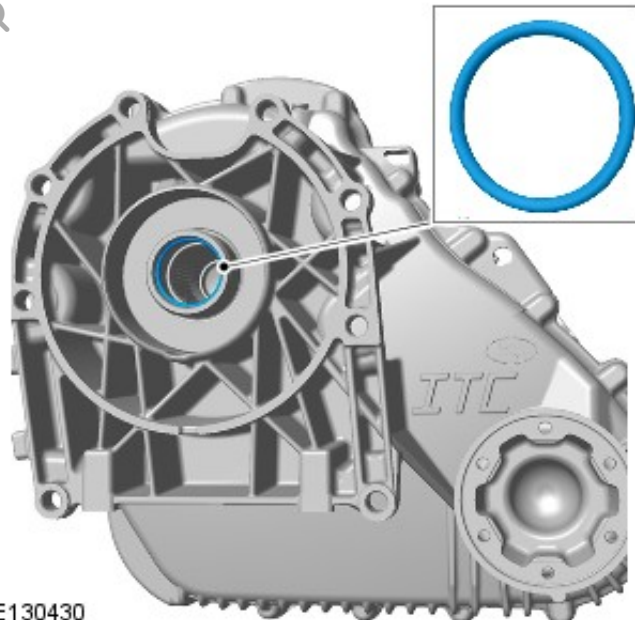

E130430


3.

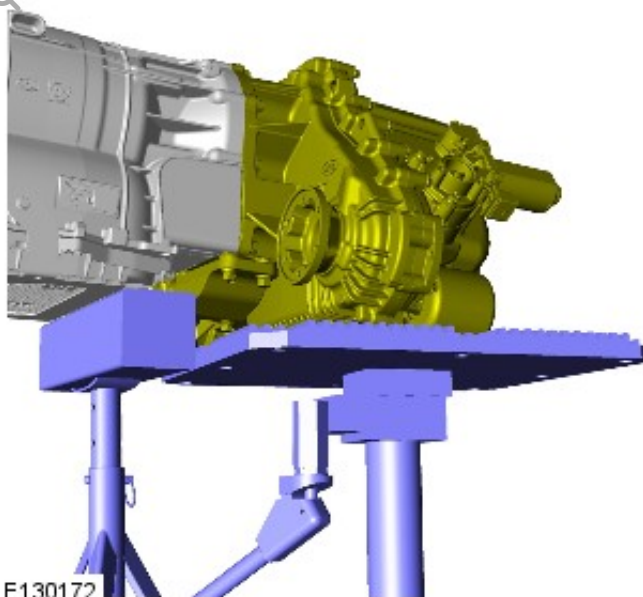

E130172


- Clean the component mating faces.
- Lubricate input shaft splines with 'Weicon TL7391' grease.
- *General Equipment:* [Powertrain Jack](#)
General Equipment: [Vehicle/axle stands](#)
General Equipment: [Wooden Block](#)

4.

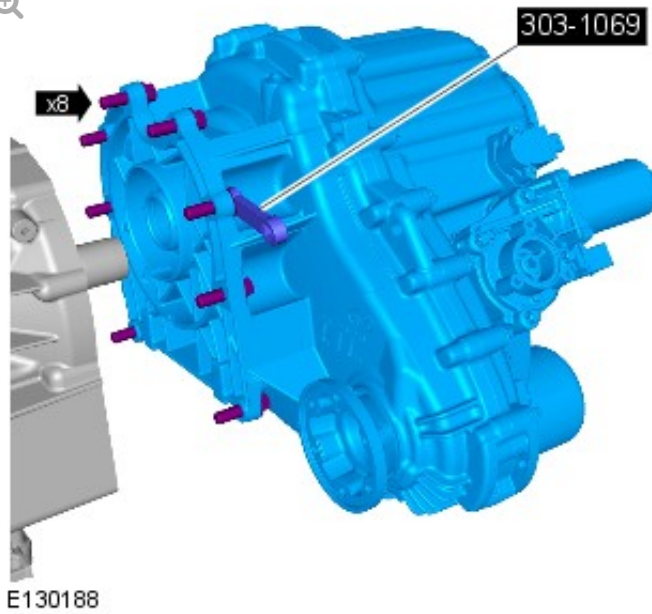


- *Special Tool(s):* 303-1069
- *Torque:* 45 Nm


5.

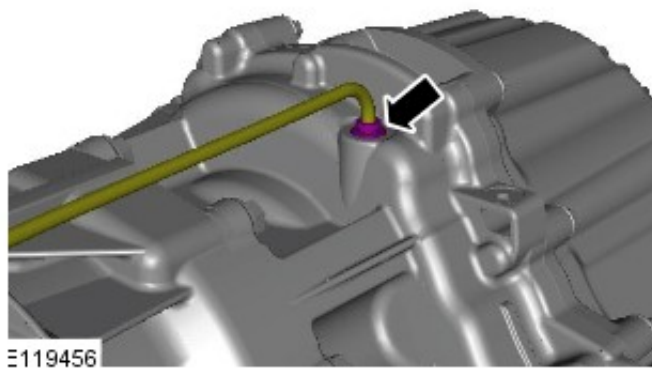

6.

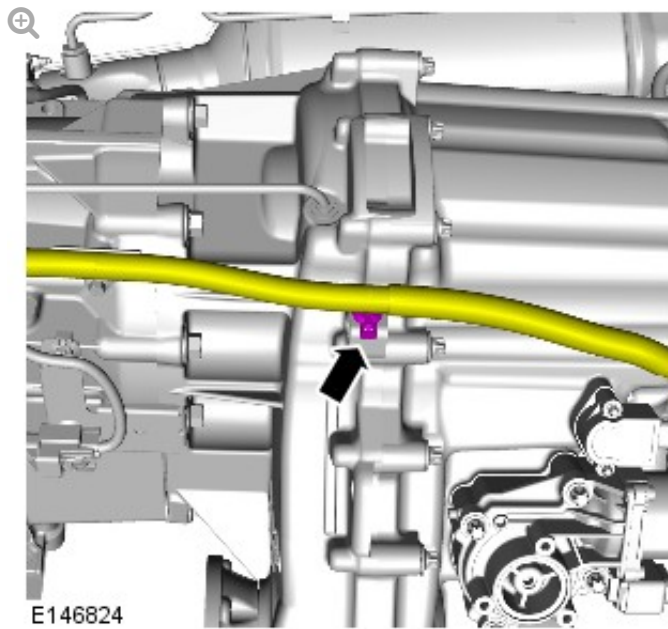


7.

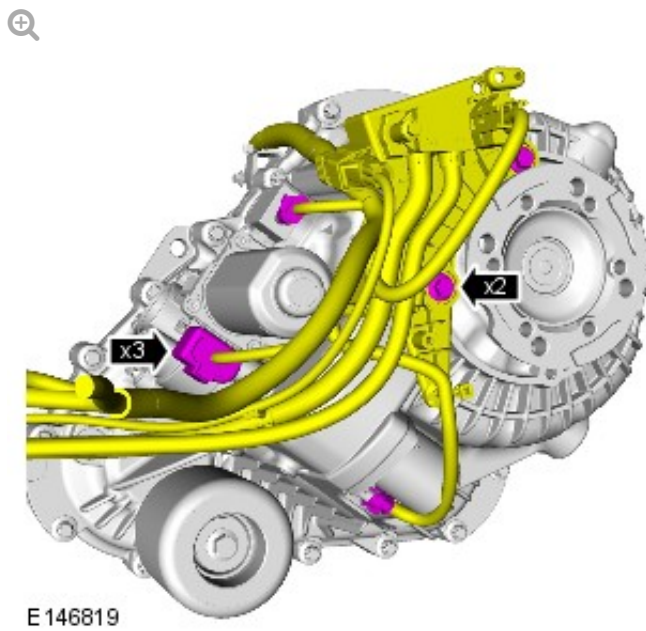

Vehicles with diesel particulate filter (DPF).
Torque: 25 Nm

8.

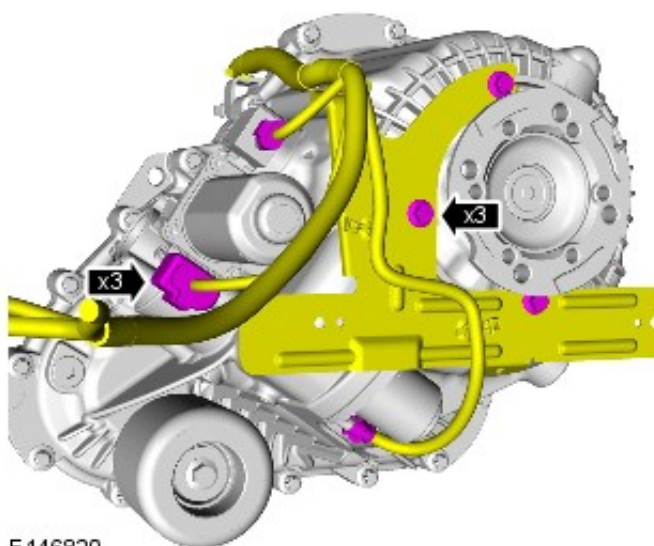


E 146820

Vehicles without diesel particulate filter (DPF).

Torque: 25 Nm

9.

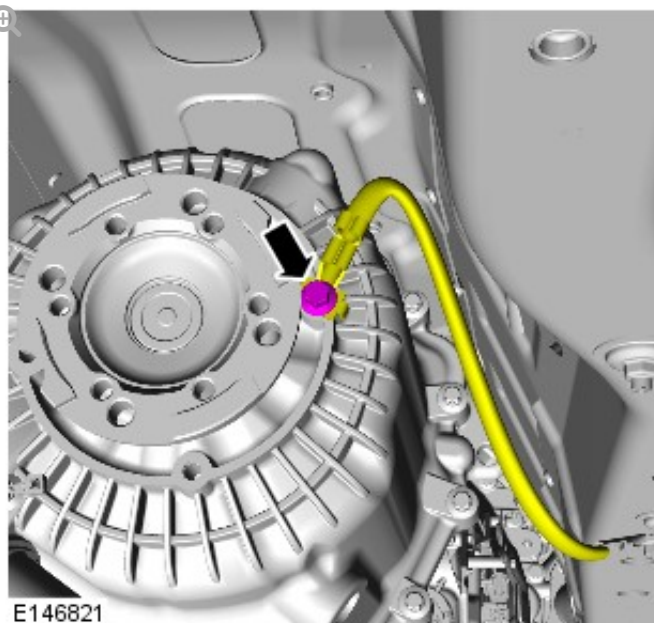


E146821

Torque: 25 Nm

10.

CAUTION:

Make sure that new bolts are installed.

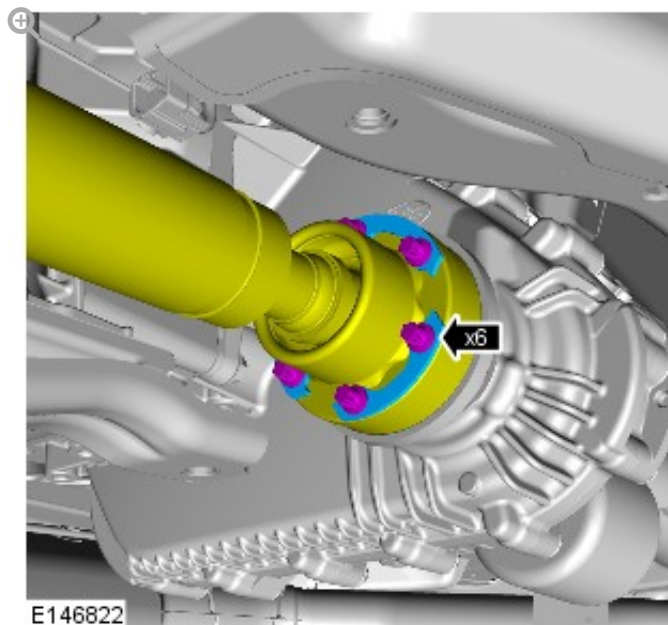

Torque:


Stage 1 45 Nm

Stage 2 90°

11.

CAUTION:


Make sure the driveshaft is aligned to the transfer case output flange.

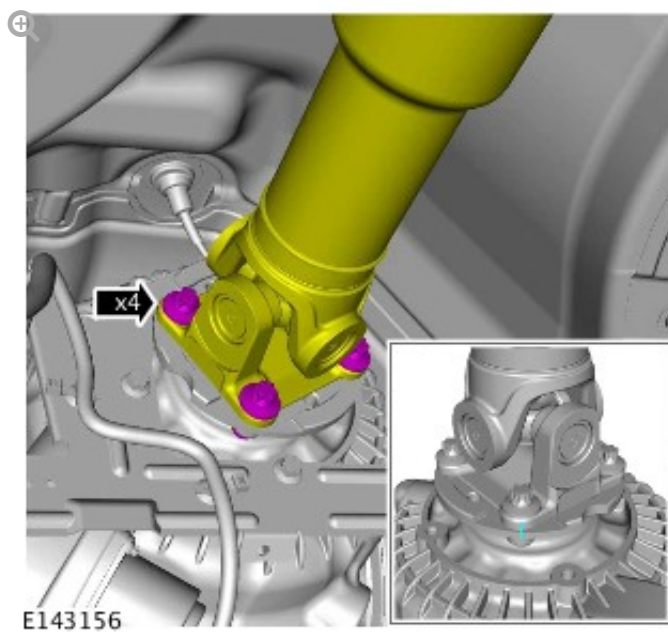

Install the driveshaft to the transfer case.

Torque: 150 Nm

12.

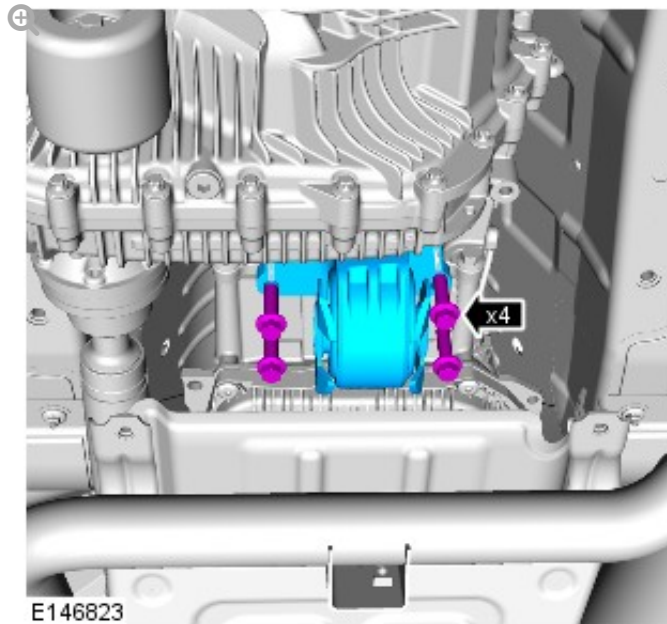

Torque: 60 Nm

13.

NOTE:

Do not carry out this step if the component removed for access only.

Refer to: [Transfer Case Draining and Filling](#) (308-07C Transfer Case - Vehicles With: Twin Speed Transfer Case, General Procedures).

14.

Connect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

15.

NOTE:

Do not carry out this step if the component was removed for access only.

1. Connect the Land Rover approved diagnostic equipment.
2. Start the diagnostic service function **transfer case-transfer case replacement**.
3. Clear any Diagnostic Trouble Codes (DTCs) after calibration and check for correct operation.