

2016.0 RANGE ROVER (LG), 308-07

TRANSFER CASE - VEHICLES WITH: TWIN SPEED TRANSFER CASE

TRANSFER CASE - TDV6 3.0L DIESEL (G1509693)

REMOVAL

41.20.25	TRANSFER GEARBOX - RENEW	3000 CC, TDV6, DIESEL, WITH PARTICULATE FILTER, WITH DIESEL EXHAUST FLUID	3.2	USED WITHINS	+
----------	--------------------------------	--	-----	-----------------	---

REMOVAL

SPECIAL TOOL(S)



100-012

Slide Hammer



100-012-01

Slide Hammer Adapter



303-1069

Adapter, Wrench



308-375

Remover, Input and Output Seal

GENERAL EQUIPMENT

EQUIPMENT NAME

Transmission jack

Vehicle/axle stands

Wooden Block

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Component shown removed for clarity.

1. Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

- 2.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

- 3.


NOTE:

Do not carry out this step if the component removed for access only.

Refer to: [Transfer Case Draining and Filling](#) (308-07C Transfer Case - Vehicles With: Twin Speed Transfer Case, General Procedures).

4. Refer to: [Transmission Support Crossmember - TDV6 3.0L Diesel](#) (502-02 Full Frame and Body Mounting, Removal and Installation).

5.

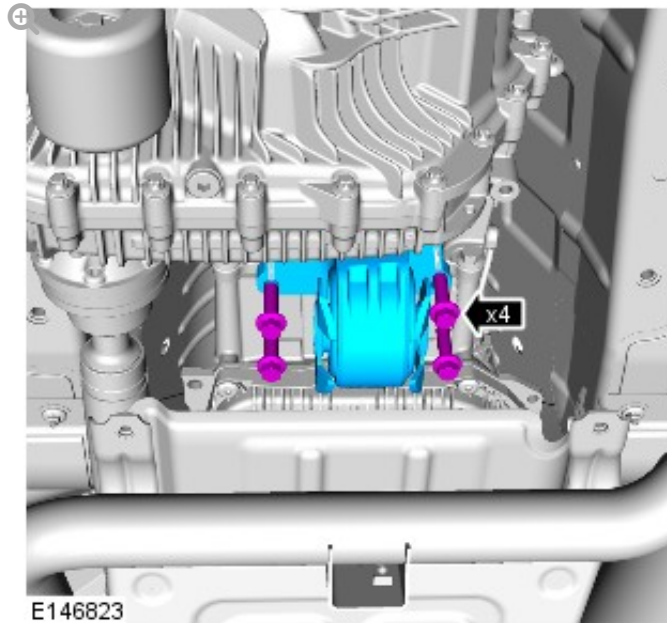


6.

CAUTION:

Make sure to support the driveshaft with a suitable strap. Do not let the full weight of the driveshaft hang on the centre bearing.

NOTE:

Mark the position of the driveshaft to the transfer case output flange.

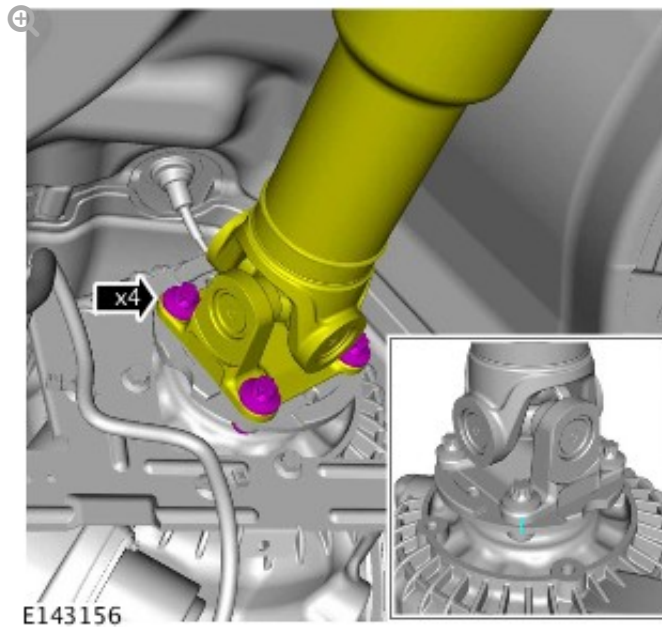


Remove the driveshaft and tie aside.


7.

CAUTIONS:


- Mark the position of the driveshaft flange in relation to the drive pinion flange.
- To avoid damage to the joint or gaiter, do not allow the driveshaft to hang.
- Discard the bolts.

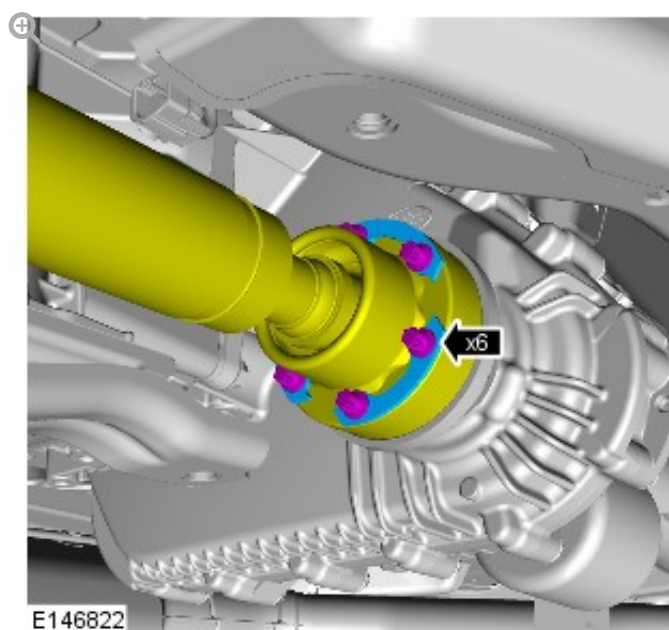

8.

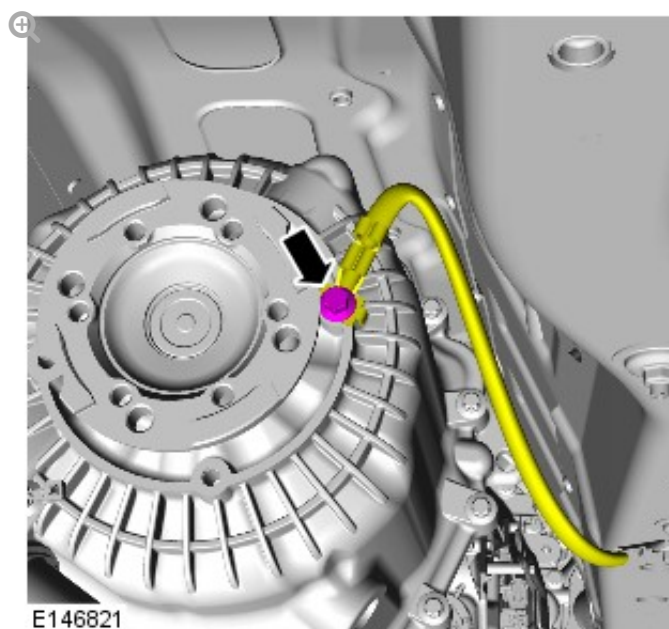


9.

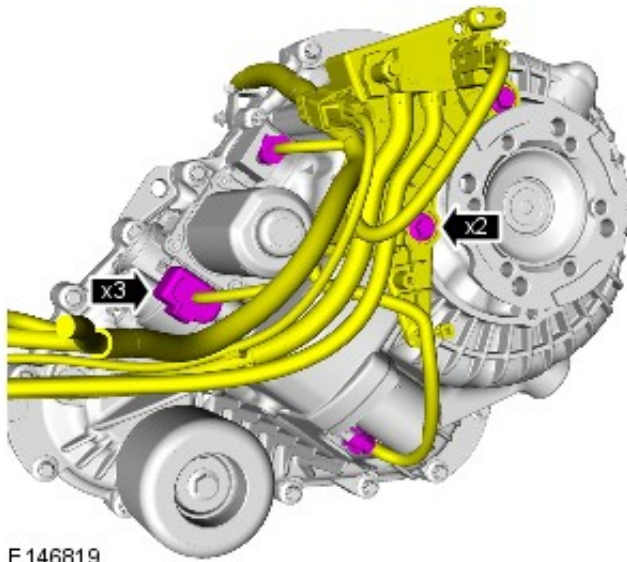

E 146819

Vehicles with diesel particulate filter (DPF).


10.

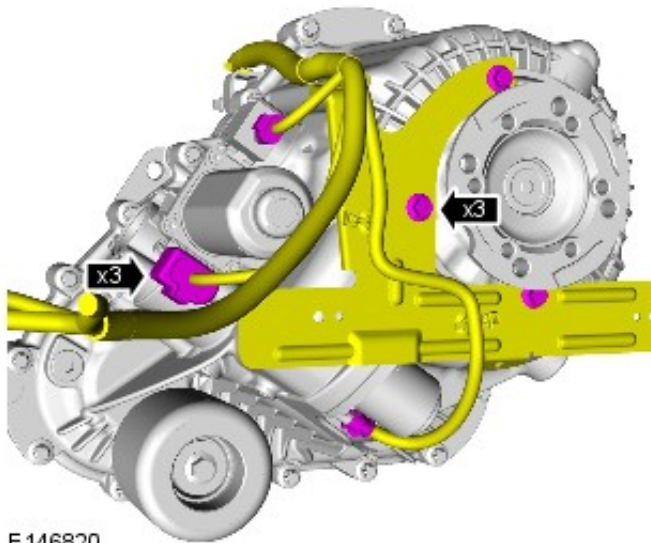

E 146820

Vehicles without diesel particulate filter (DPF).


11.

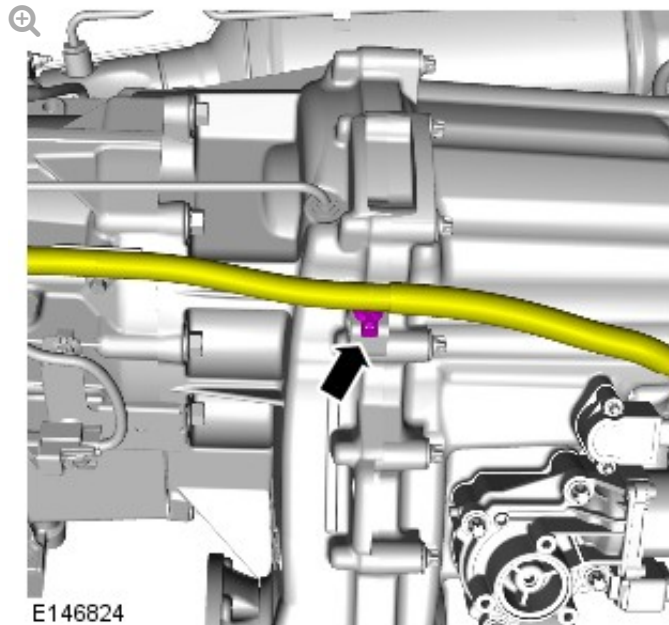

12.

CAUTION:


Always plug any open connections to prevent contamination.

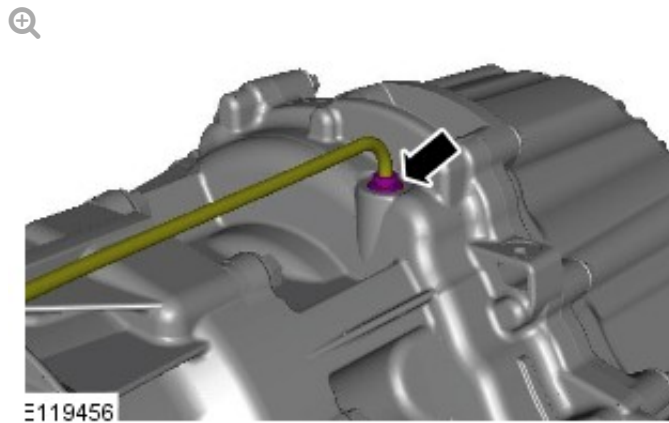

13.


WARNING:

Secure the component to the transmission jack.

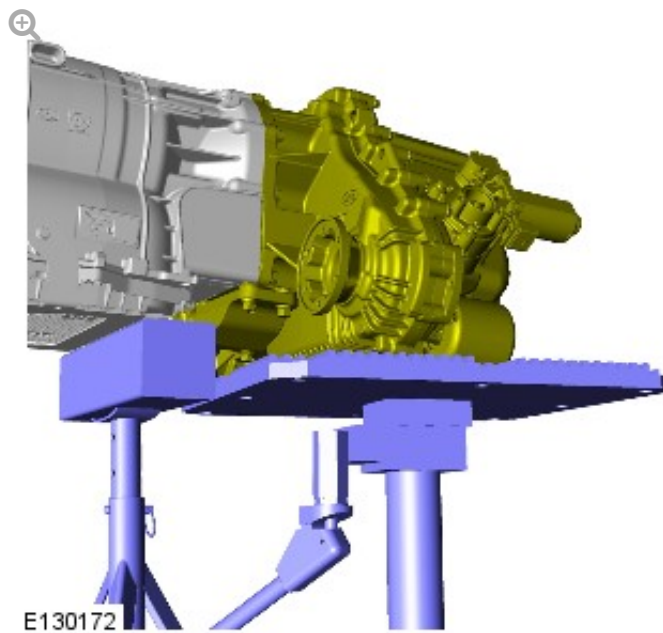

- General Equipment: [Wooden Block](#)
- General Equipment: [Transmission jack](#)
- General Equipment: [Vehicle/axle stands](#)

14.

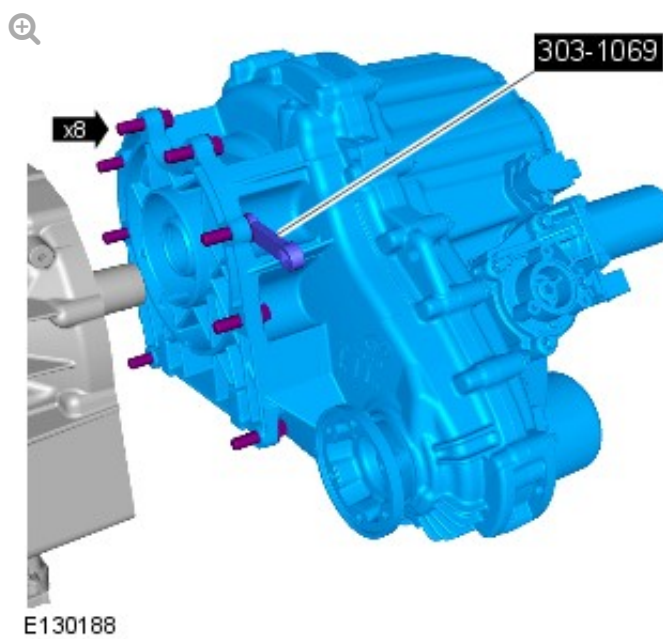


Special Tool(s): [303-1069](#)

15.

CAUTION:


Do not carry out this step if a new transfer box is to be installed.

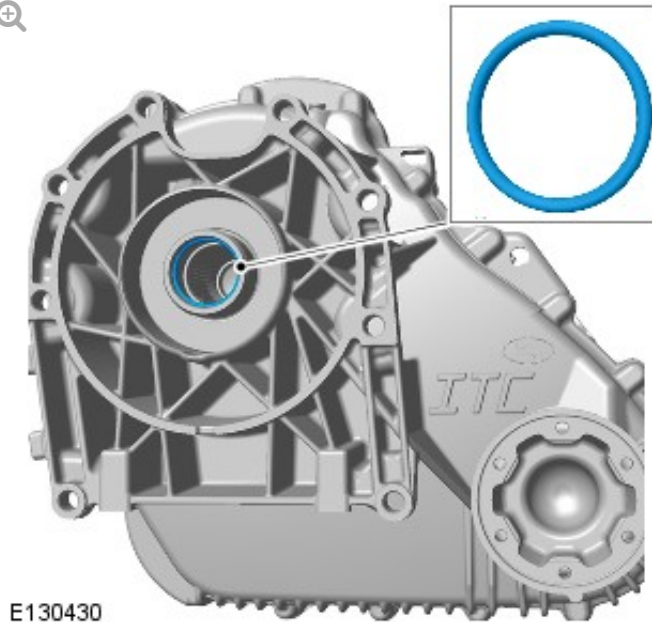

16.

CAUTIONS:

- Care must be taken to avoid damage to the seal register and running surface.
- Do not carry out this step if a new transfer box is to be installed.
- Note the fitted position of the component prior to removal.

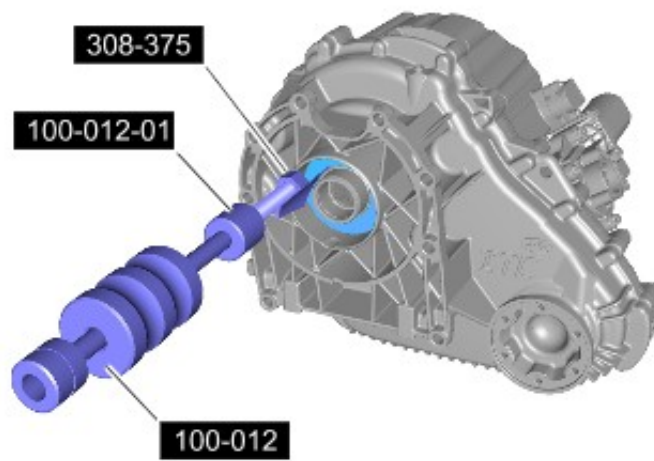

E131138

- *Special Tool(s):* 100-012, 100-012-01, 308-375