

PUBLISHED: 28-APR-2017
2015.0 RANGE ROVER (LG), 308-07

TRANSFER CASE - VEHICLES WITH: TWIN SPEED TRANSFER CASE

TRANSFER CASE - TDV8 4.4L DIESEL



(G1509694)



REMOVAL

41.20.25	TRANSFER GEARBOX - RENEW	4400 CC, TDV8, WITH PARTICULATE FILTER	2.7	USED WITHINS	
----------	--------------------------------	---	-----	-----------------	--

REMOVAL

SPECIAL TOOL(S)

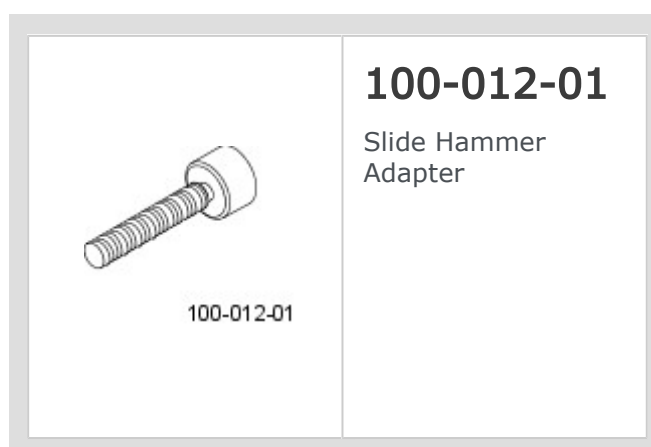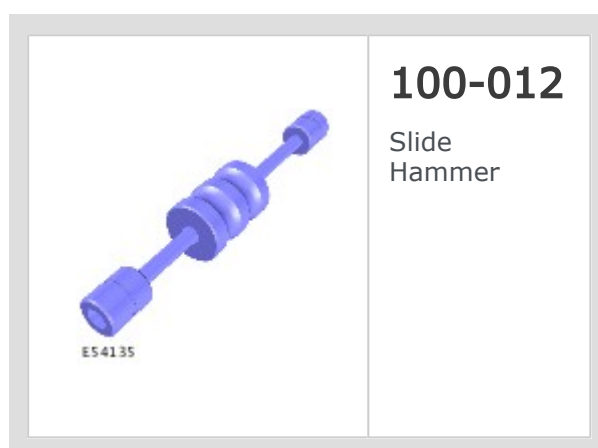

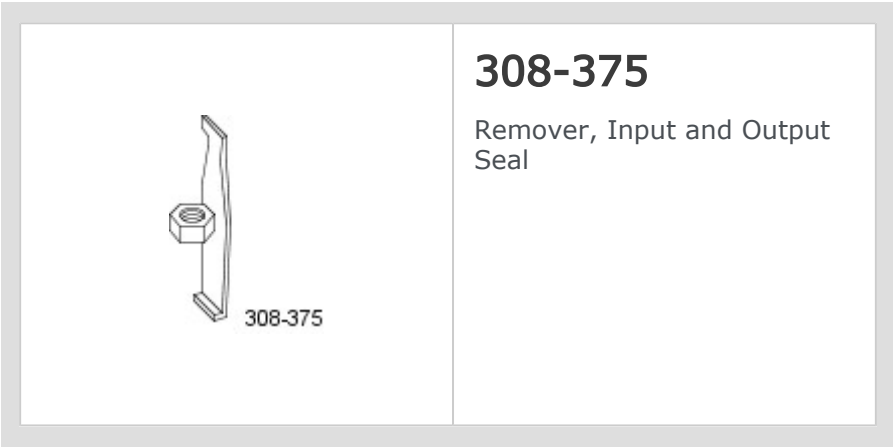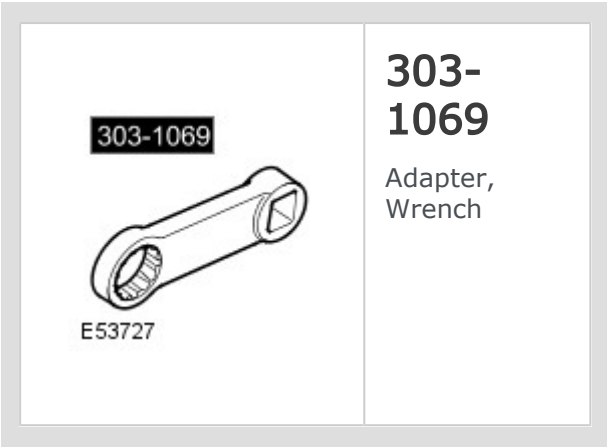

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME	
Step 7	Renew Part	Driveshaft to front output flange bolts	1

 **NOTES:**

- Some variation in the illustrations may occur, but the essential information is always correct.
- Component shown removed for clarity.

1. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.



WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3.



NOTE:


Do not carry out this step if the component removed for access only.

Refer to: [Transfer Case Draining and Filling](#) (308-07C Transfer Case - Vehicles With: Twin Speed Transfer Case, General Procedures).

4.

Refer to: [Transmission Support Crossmember - TDV8 4.4L Diesel](#) (502-02 Full Frame and Body Mounting, Removal and Installation).

5.

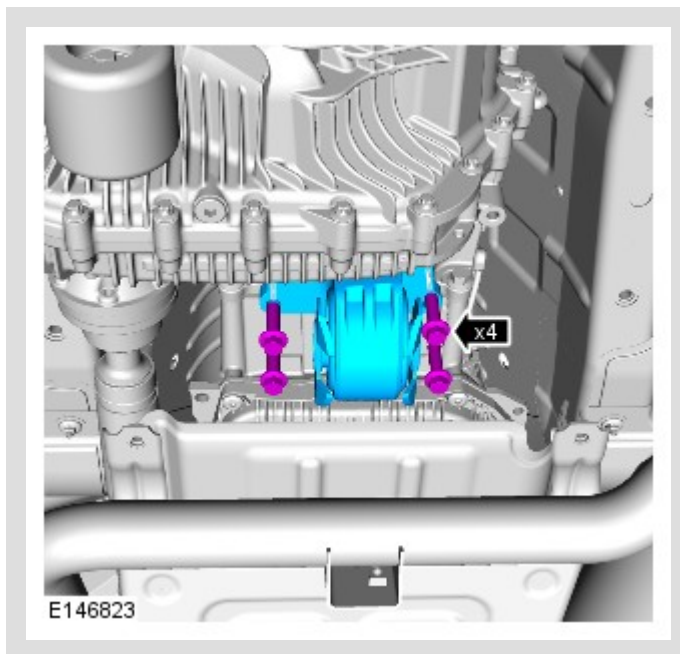


6.

⚠ CAUTION:

Make sure to support the driveshaft with a suitable strap. Do not let the full weight of the driveshaft hang on the centre bearing.

⚠ NOTE:

Mark the position of the driveshaft to the transfer case output flange.

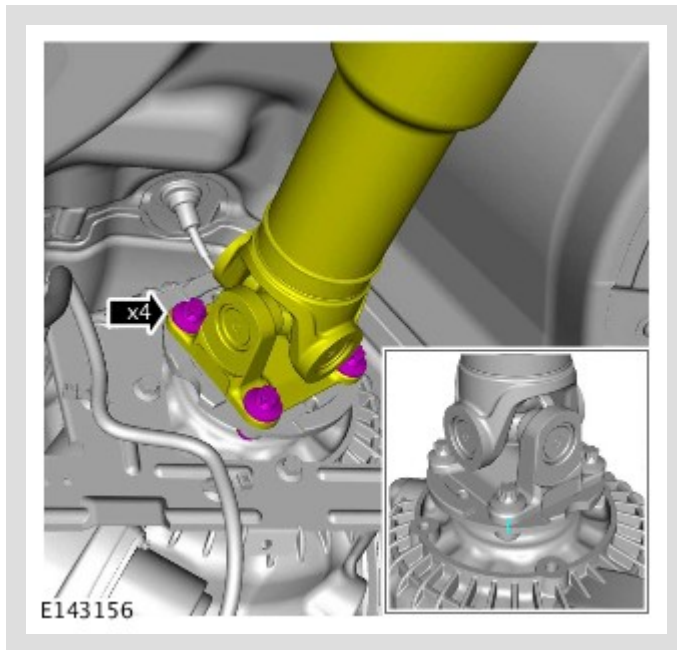


Remove the driveshaft and tie aside.

7.


ⓘ CAUTIONS:


- Mark the position of the driveshaft flange in relation to the drive pinion flange.
- To avoid damage to the joint or gaiter, do not allow the driveshaft to hang.
- Discard the bolts.

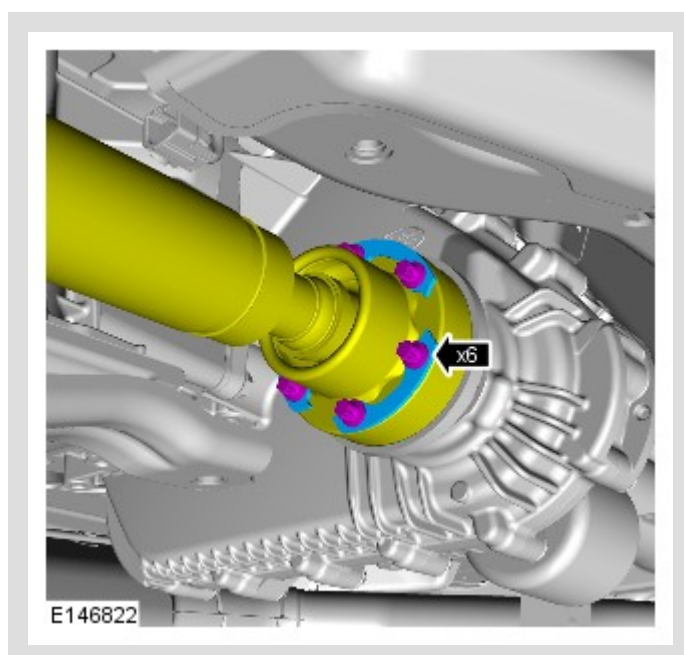


Renew Part: *Driveshaft to front output flange bolts : 1 .*

8.

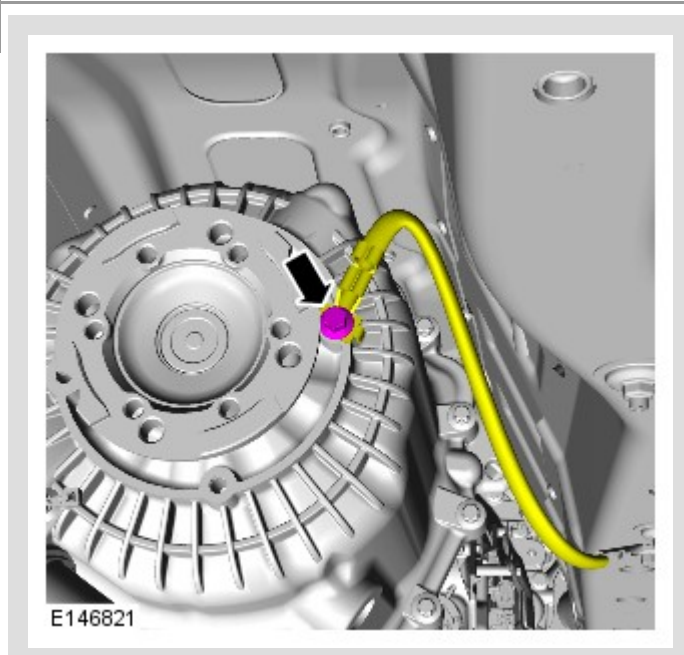


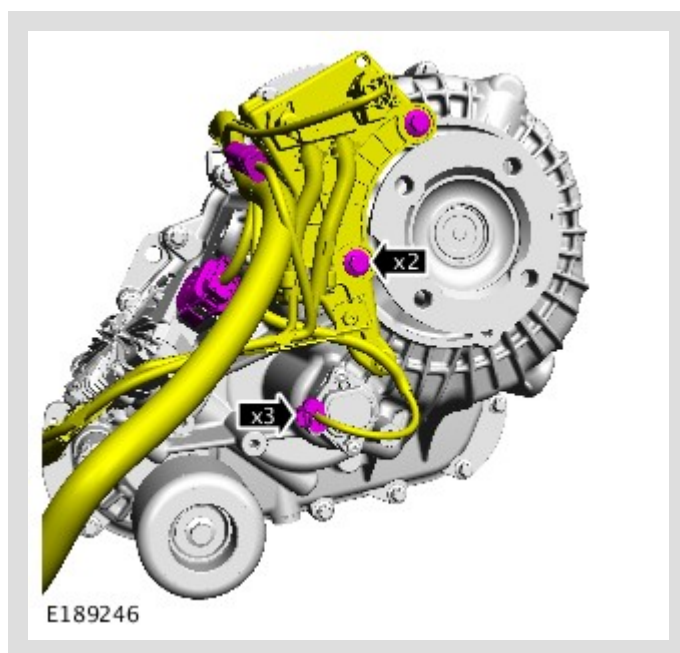

Vehicles with diesel particulate filter (DPF).

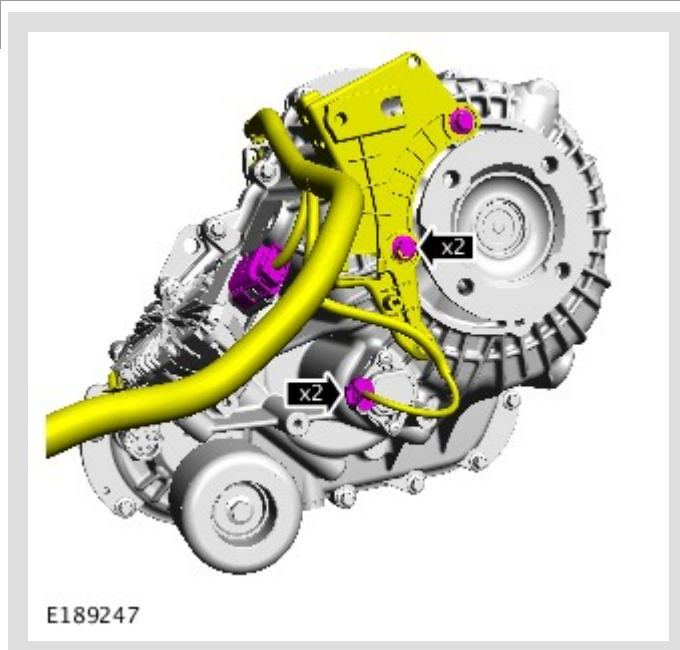


Vehicles without diesel particulate filter (DPF).

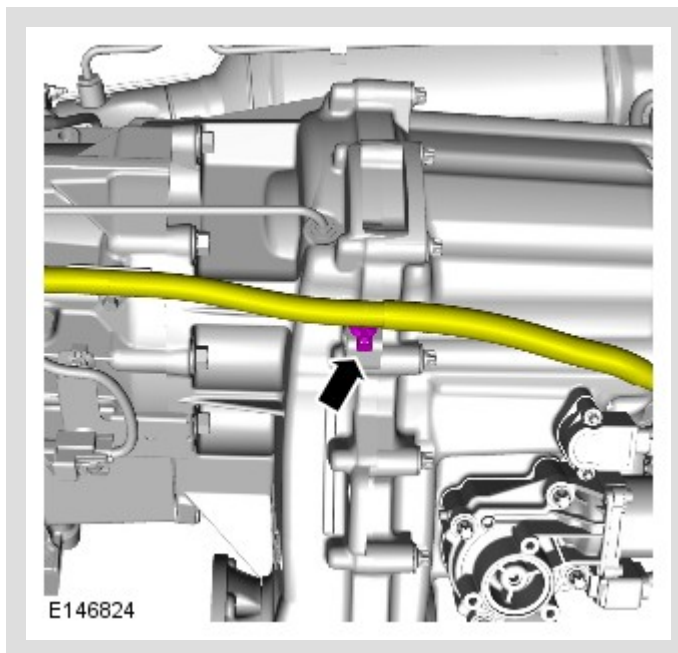

⚠ CAUTION:

Always plug any open connections to prevent contamination.

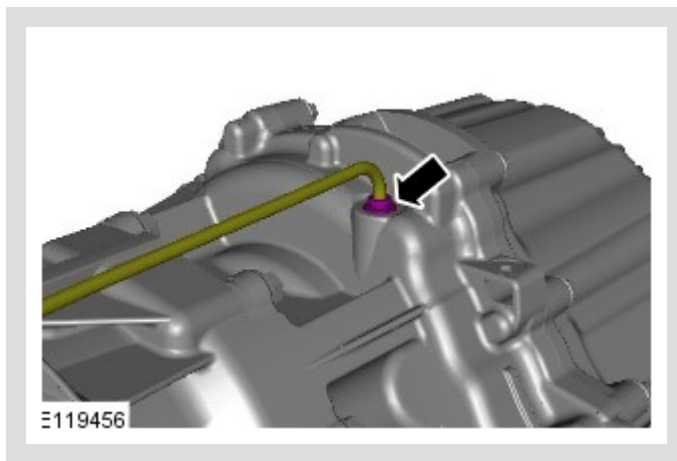


13.




WARNING:

Secure the component to the transmission jack.

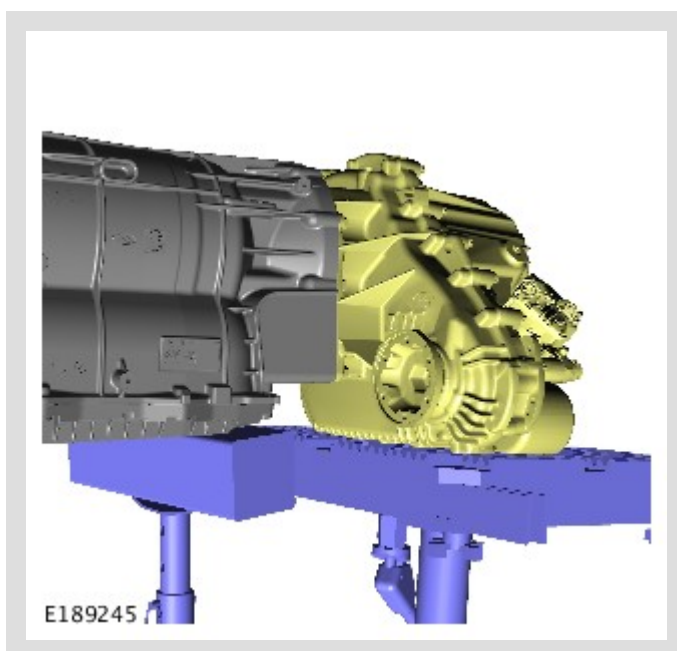

14.

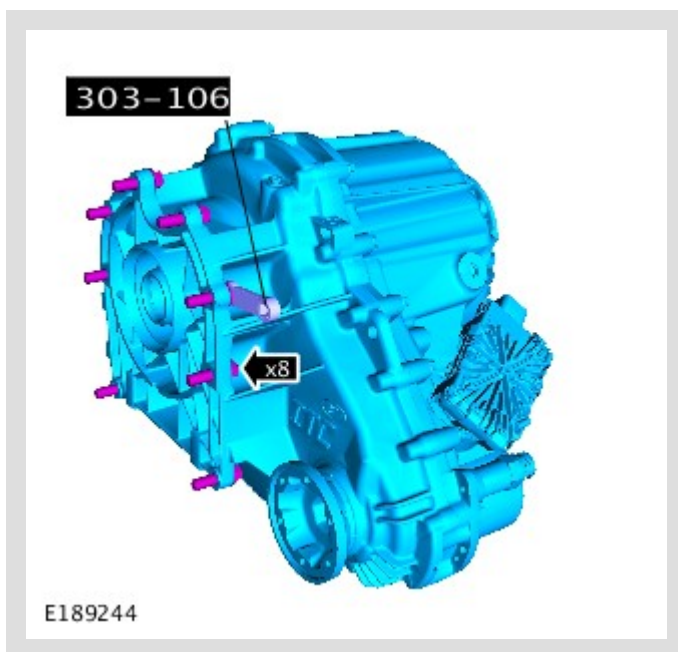


Special Tool(s): 303-1069

15.



CAUTION:


Do not carry out this step if a new transfer box is to be installed.

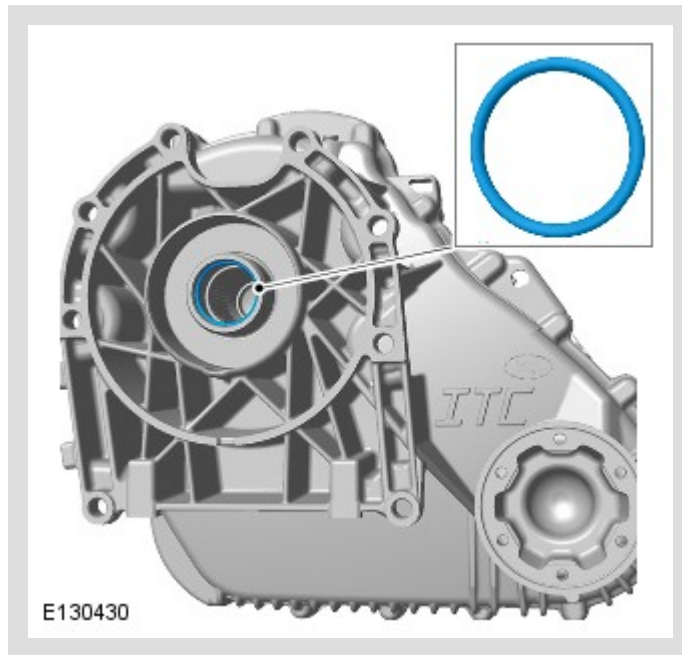

16.

⚠ CAUTIONS:

- Care must be taken to avoid damage to the seal register and running surface.
- Do not carry out this step if a new transfer box is to be installed.
- Note the fitted position of the component prior to removal.

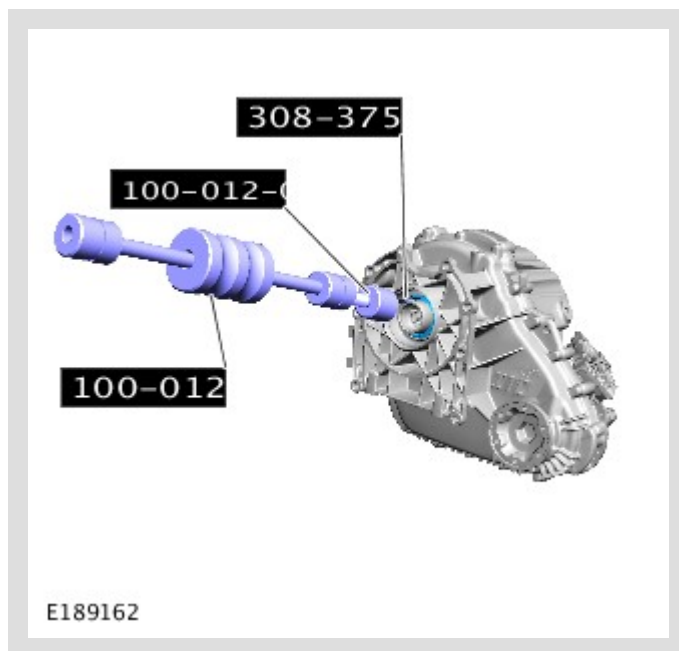

- *Special Tool(s):* 100-012 , 100-012-01 , 308-375