

PUBLISHED: 20-OCT-2017
2014.0 RANGE ROVER (LG), 308-07



TRANSFER CASE - VEHICLES WITH: TWIN SPEED TRANSFER CASE

**TRANSFER CASE - V6 S/C 3.0L
PETROL /V8 N/A 5.0L PETROL/V8 S/C
5.0L PETROL** (G1509698)

INSTALLATION

INSTALLATION

SPECIAL TOOL(S)

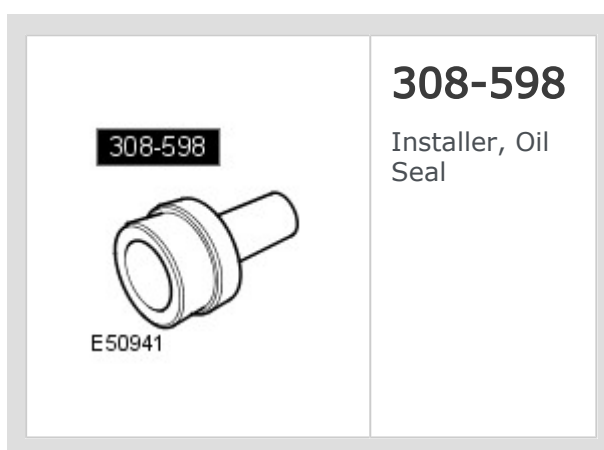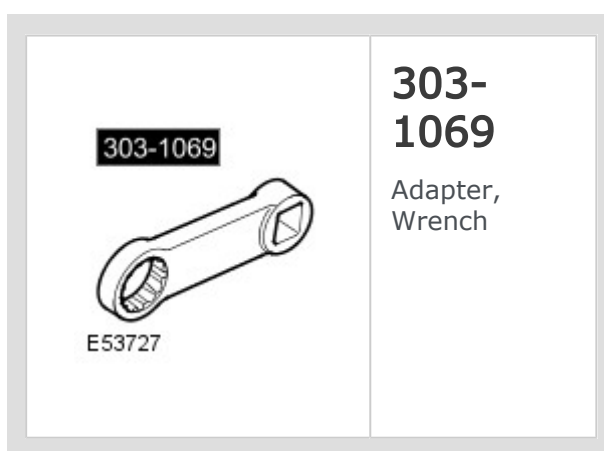

GENERAL EQUIPMENT

EQUIPMENT NAME
Powertrain Jack

Vehicle/axle stands
Wooden Block

CAUTIONS:

- New transfer cases may be supplied with untapped bolt holes, reuse the original bolts when self tapping the new threads.
- Re-manufactured transfer cases have tapped holes, bolts must be installed finger tight before applying Torque.

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Component shown removed for clarity.


1.

CAUTION:

Oil seals must be fitted dry.

NOTES:

- This step is only required if previously removed.
- Make sure that this component is installed to the noted removal position.

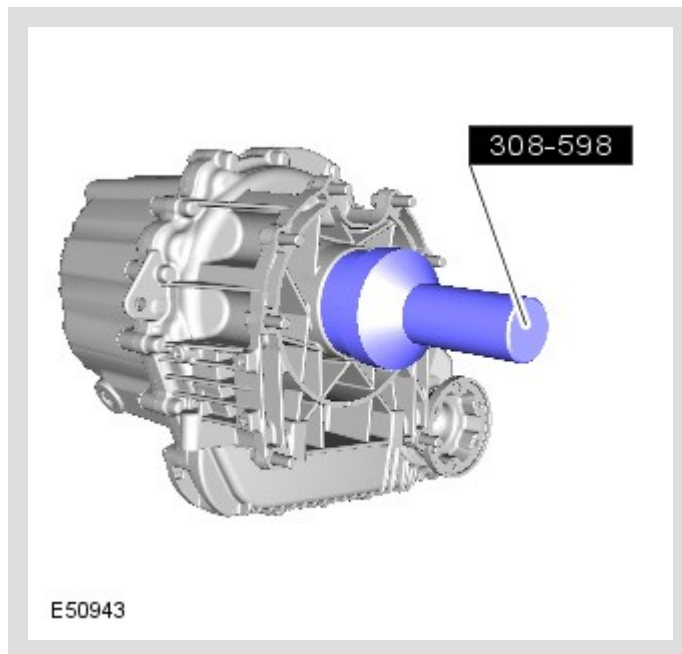


Special Tool(s): [308-598](#)

2.


 NOTE:

This step is only required if previously removed.

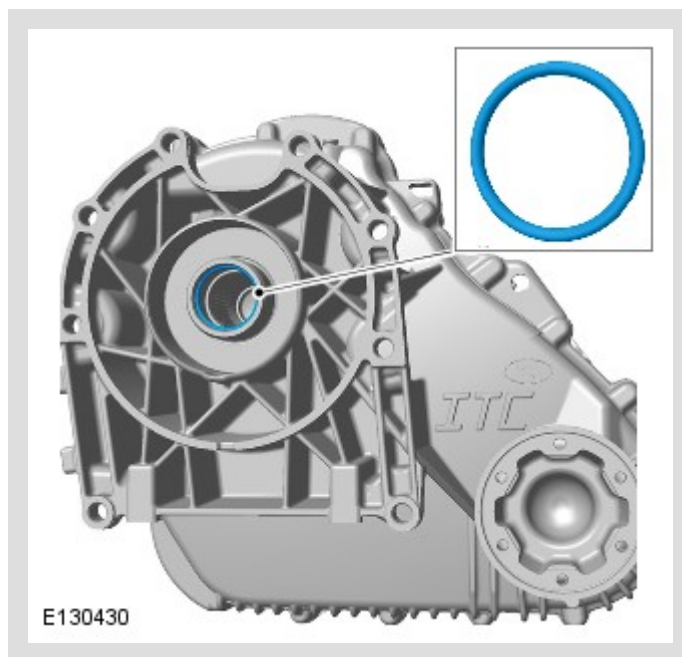


Install a new O-ring seal.

3.

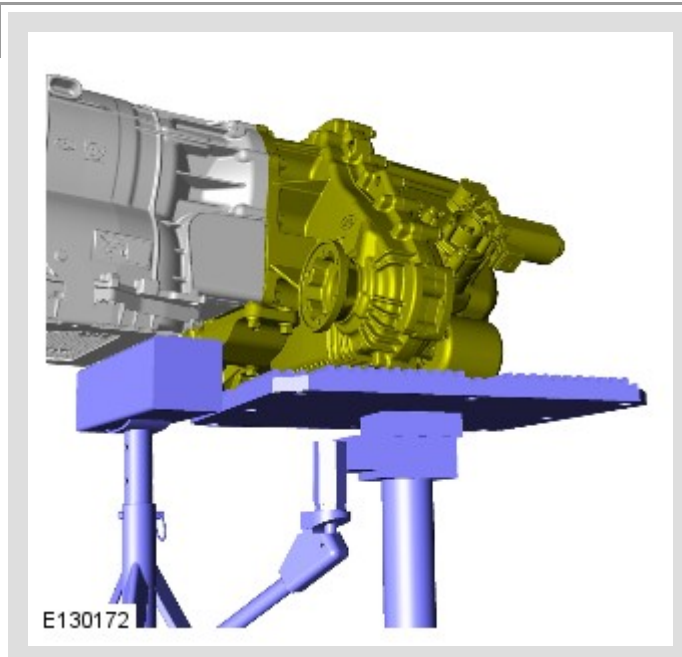

- Clean the component mating faces.
- Lubricate input shaft splines with 'Weicon TL7391' grease.
- *General Equipment:* [Powertrain Jack](#)
General Equipment: [Vehicle/axle stands](#)
General Equipment: [Wooden Block](#)

4.

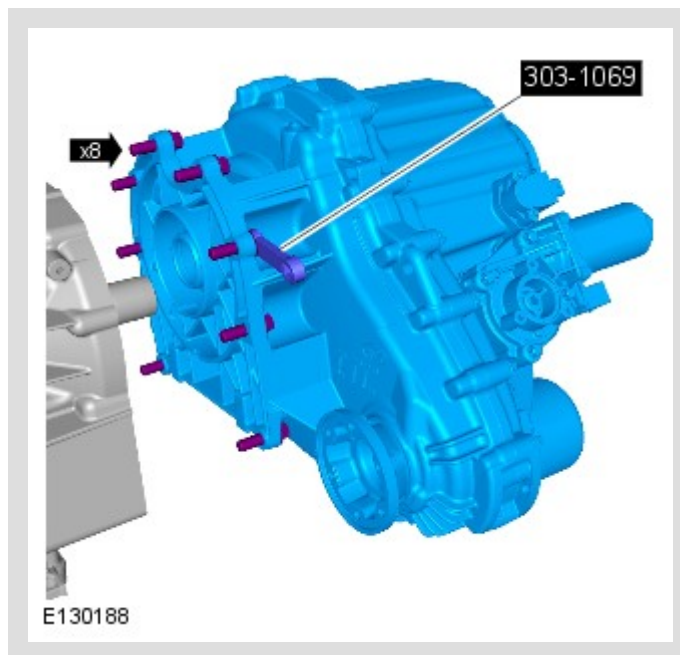


- *Special Tool(s):* [303-1069](#)
- Install the transfer case.
Torque: 45 Nm

5.

⚠ CAUTION:

Air tools must not be used.

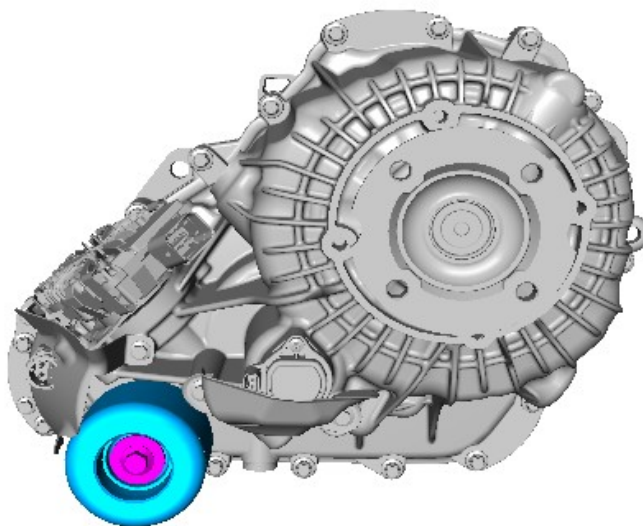


E216763

Install the transfer case damper.


Torque: **25 Nm**

6.

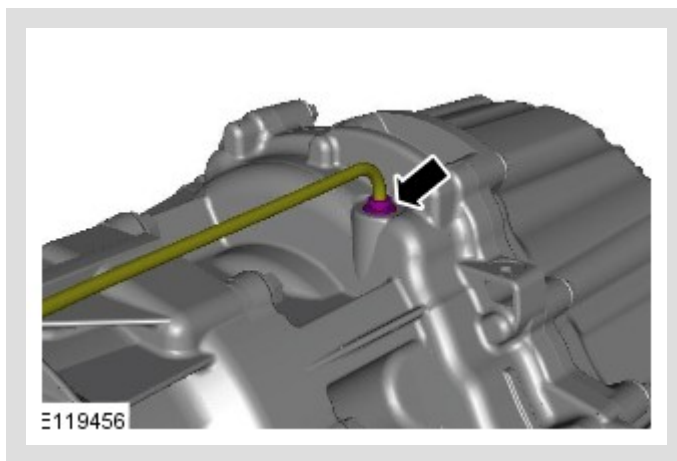

Install the breather pipe.

7.

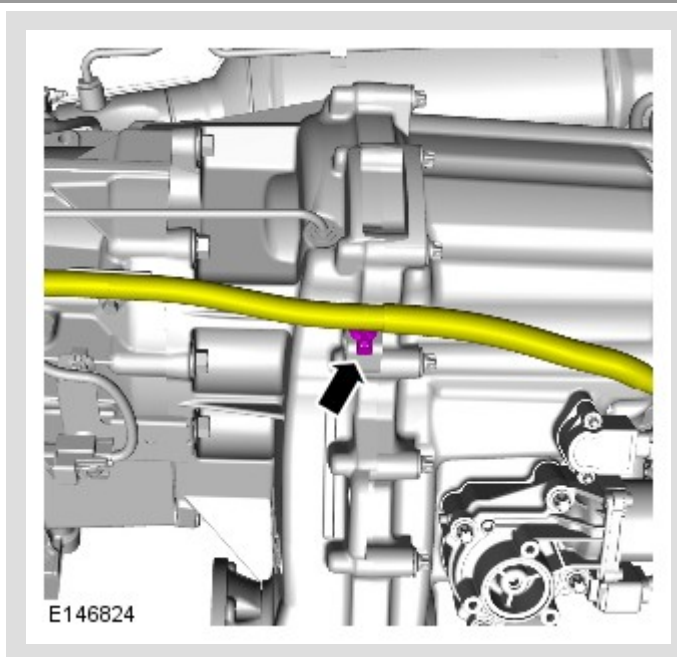


Install the wiring harness.

8.



CAUTION:

Air tools must not be used.

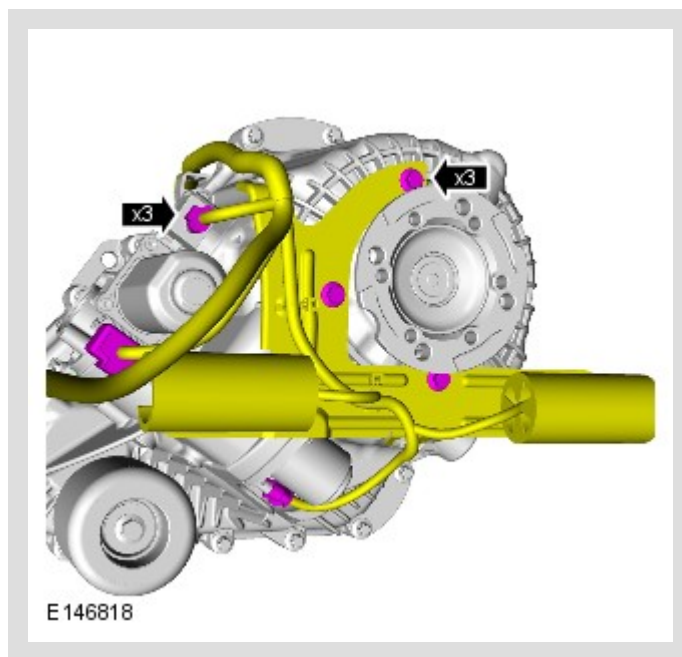


Torque: 25 Nm

9.

⚠ CAUTION:

Air tools must not be used.

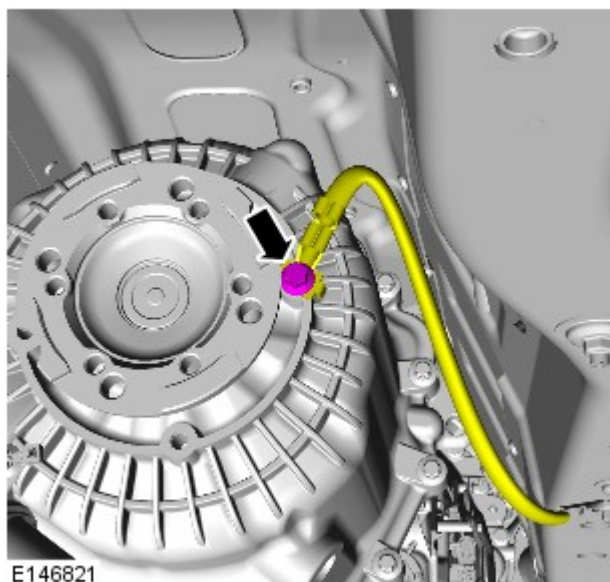

Install the ground cable.


Torque: 25 Nm

10.



CAUTION:

Make sure that new bolts are installed.

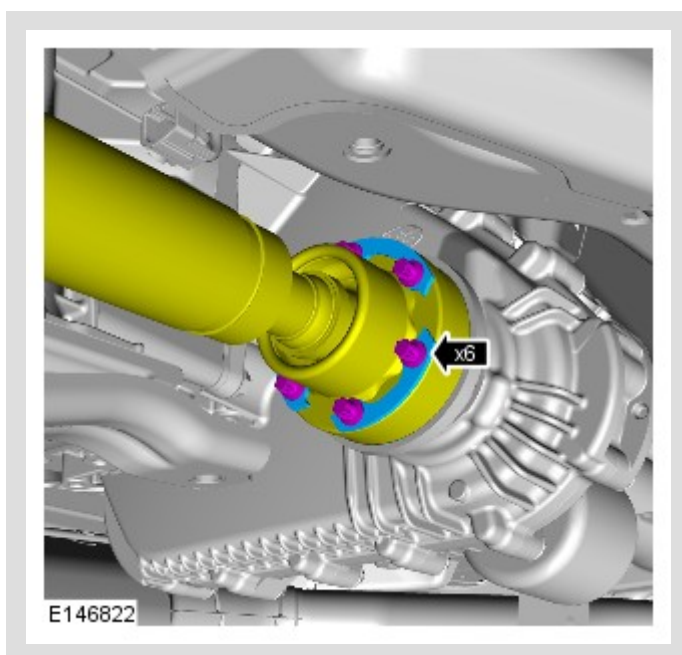

Install the driveshaft.

Torque:

Stage 1 **45 Nm**


Stage 2 **90°**

-
11. Refer to: Rear Driveshaft - V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0 L Petrol (205-01 Driveshaft, Removal and Installation).

12.

⚠ CAUTION:

Air tools must not be used.

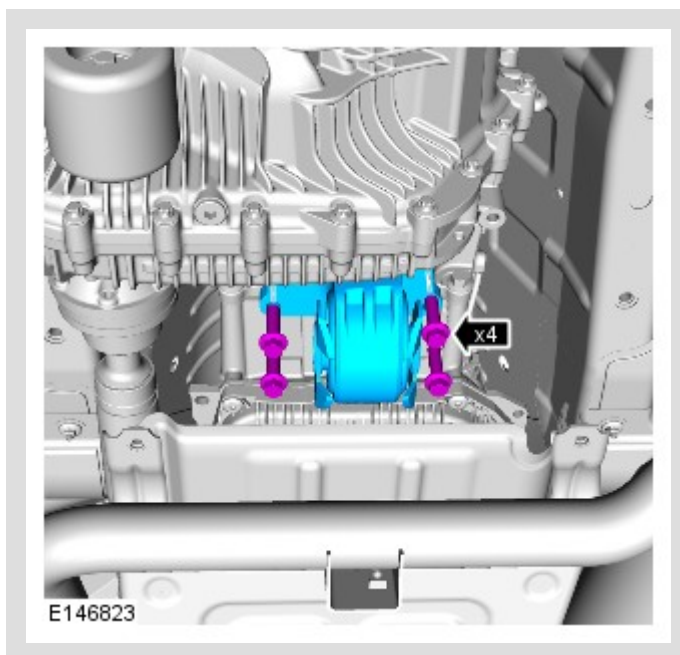

Torque: 60 Nm

-
13. Refer to: Transmission Support Crossmember - V6 S/C 3.0L Petrol /V8 N/A 5.0 L Petrol/V8 S/C 5.0L Petrol (502-02 Full Frame and Body Mounting, Removal and Installation).

-
14.  **NOTE:**

Do not carry out this step if the component removed for access only.

Refer to: Transfer Case Draining and Filling (308-07 Transfer Case - Vehicles With: Twin Speed Transfer Case, General Procedures).

-
15. Connect the battery ground cable.

Refer to: Specifications (414-00 Battery and Charging System - General Information, Specifications).

16.

 NOTE:

Do not carry out this step if the component removed for access only.

1. Connect the Land Rover approved diagnostic equipment.
1. Start the diagnostic service function **transfer case-transfer case replacement**.
1. Clear any Diagnostic Trouble Codes (DTCs) after calibration and check for correct operation.