

PUBLISHED: 19-OCT-2017
2014.0 RANGE ROVER (LG), 308-07


TRANSFER CASE - VEHICLES WITH: TWIN SPEED TRANSFER CASE



**TRANSFER CASE - V6 S/C 3.0L
PETROL /V8 N/A 5.0L PETROL/V8 S/C
5.0L PETROL** (G1509695)

REMOVAL

REMOVAL

SPECIAL TOOL(S)

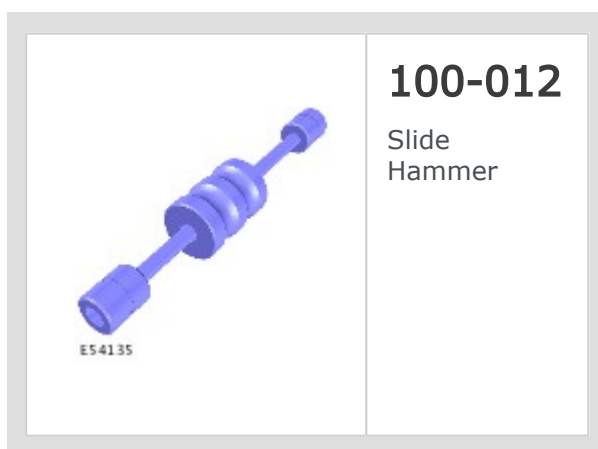

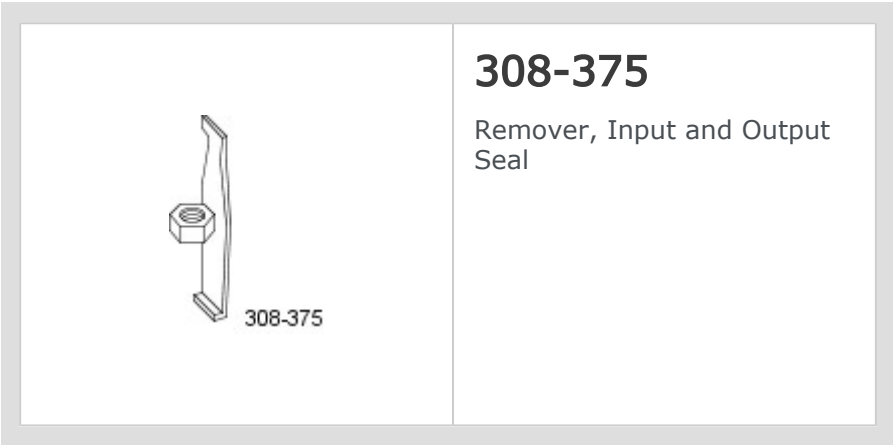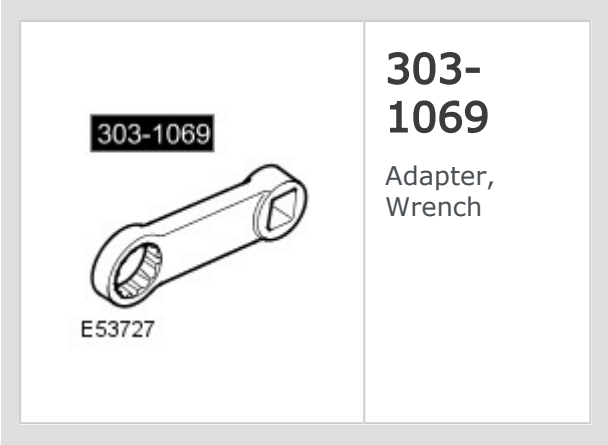

PART(S)

STEP	PART NAME	QUANTITY
Step 7	Driveshaft to front output flange bolts	1

 **CAUTIONS:**

- New transfer cases may be supplied with untapped bolt holes, reuse the original bolts when self tapping the new threads.
- Re-manufactured transfer cases have tapped holes, bolts must be installed finger tight before applying Torque.

 **NOTES:**

- Some variation in the illustrations may occur, but the essential information is always correct.
- Component shown removed for clarity.

1. Disconnect the battery ground cable.

Refer to: Specifications (414-00 Battery and Charging System - General Information, Specifications).

2.



WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3.



NOTE:

Do not carry out this step if the component removed for access only.

Refer to: Transfer Case Draining and Filling (308-07 Transfer Case - Vehicles With: Twin Speed Transfer Case, General Procedures).

4.


Refer to: Transmission Support Crossmember - V6 S/C 3.0L Petrol /V8 N/A 5.0 L Petrol/V8 S/C 5.0L Petrol (502-02 Full Frame and Body Mounting, Removal and Installation).

5.



CAUTION:

Air tools must not be used.

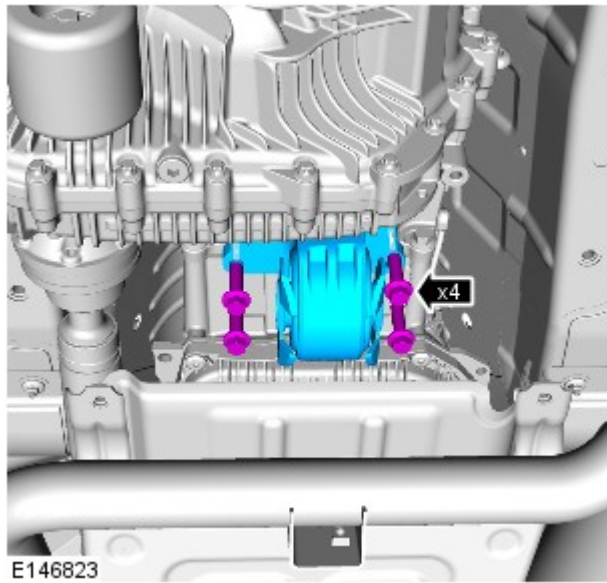


6. Refer to: Rear Driveshaft - V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0 L Petrol (205-01 Driveshaft, Removal and Installation).

7.



CAUTIONS:

- Mark the position of the driveshaft flange in relation to the drive pinion flange.
- To avoid damage to the joint or gaiter, do not allow the driveshaft to hang.
- Discard the bolts.

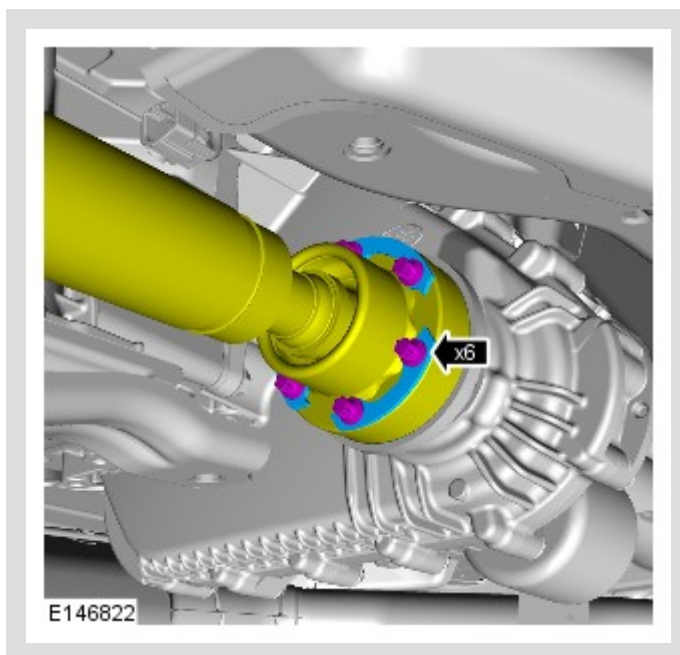


Renew Part: *Driveshaft to front output flange bolts* Quantity: *1* .

8.



CAUTION:

Air tools must not be used.

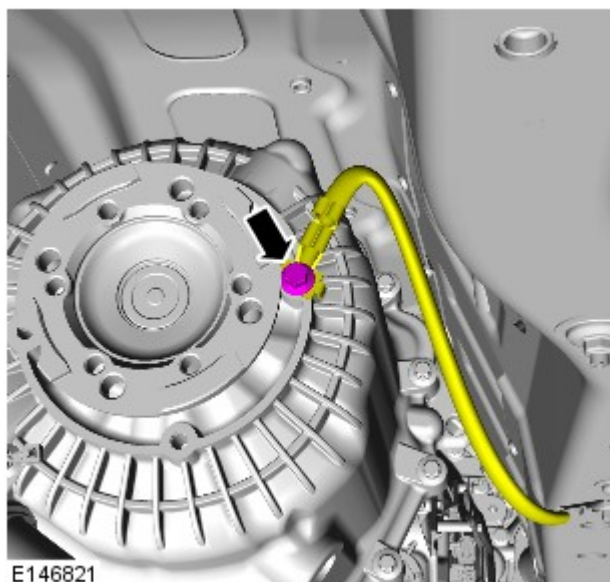


Remove the ground cable.

9.



CAUTION:

Air tools must not be used.

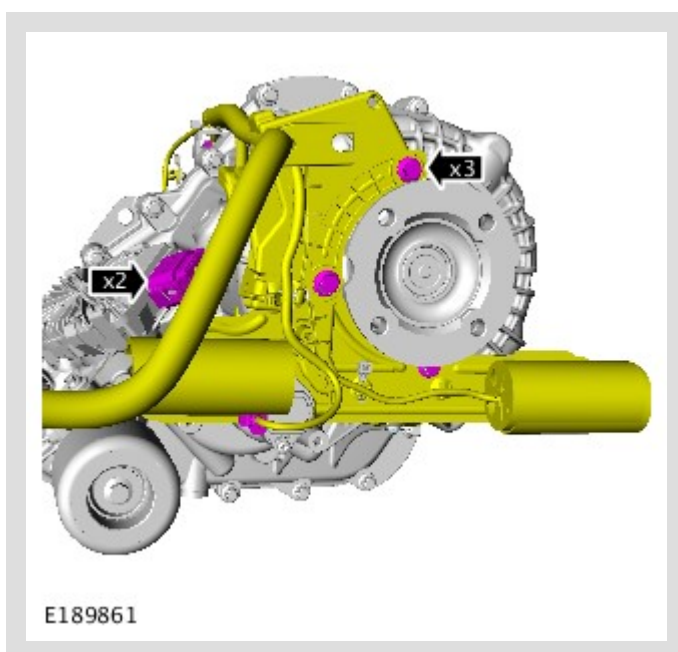


10.



CAUTION:


Air tools must not be used.

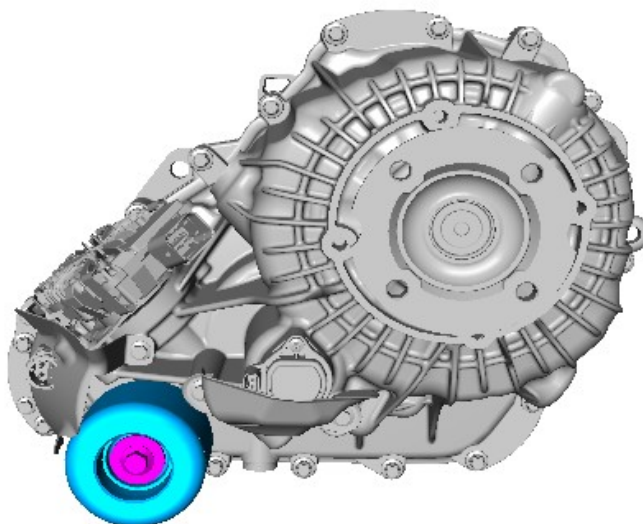

E216763

Remove the transfer case damper.

Torque: 25 Nm

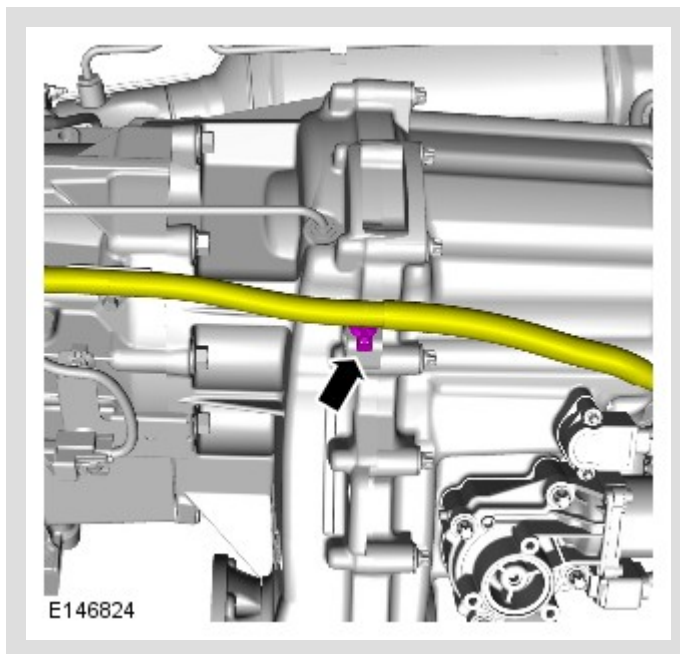


Release the wiring harness.

12.

⚠ CAUTION:

Always plug any open connections to prevent contamination.

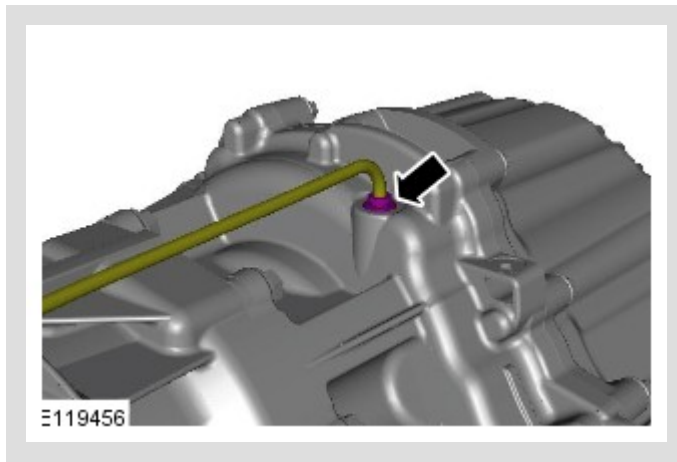


Remove the transfer case breather pipe.

13.




WARNING:

Secure the component to the transmission jack.

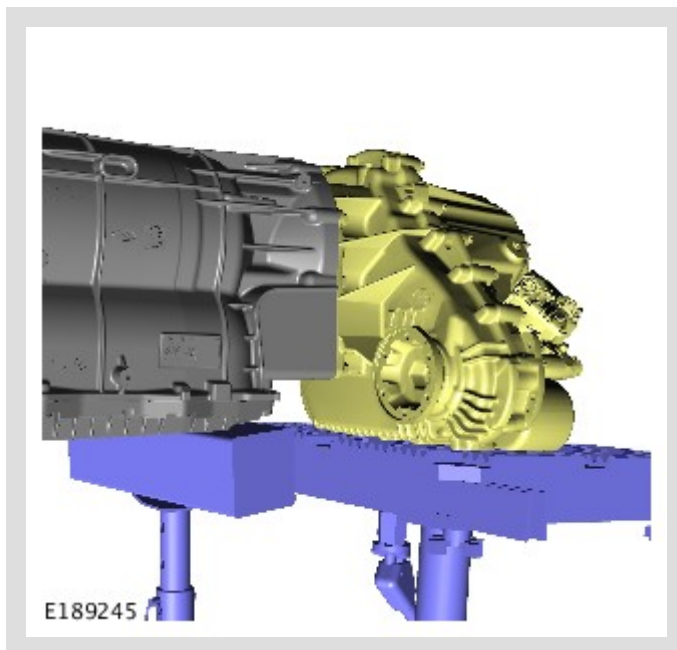

14.

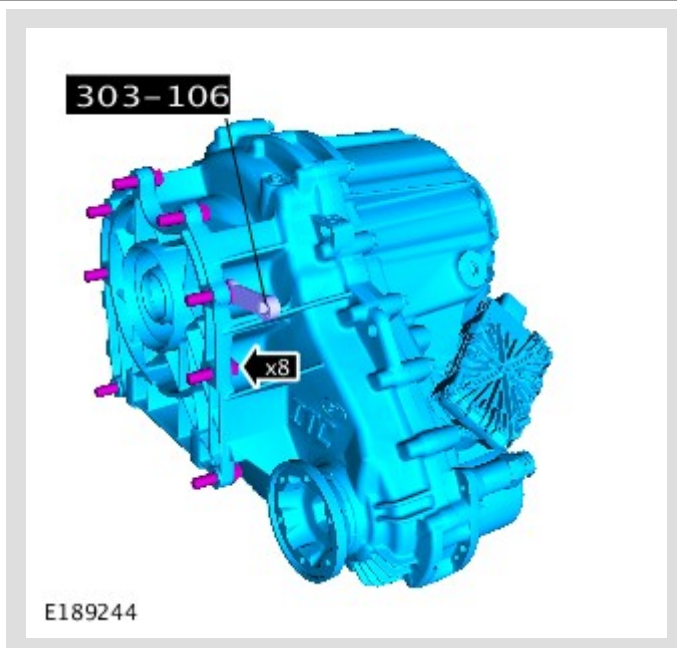


Special Tool(s): [303-1069](#)

15.

⚠ CAUTION:


Do not carry out this step if a new transfer box is to be installed.

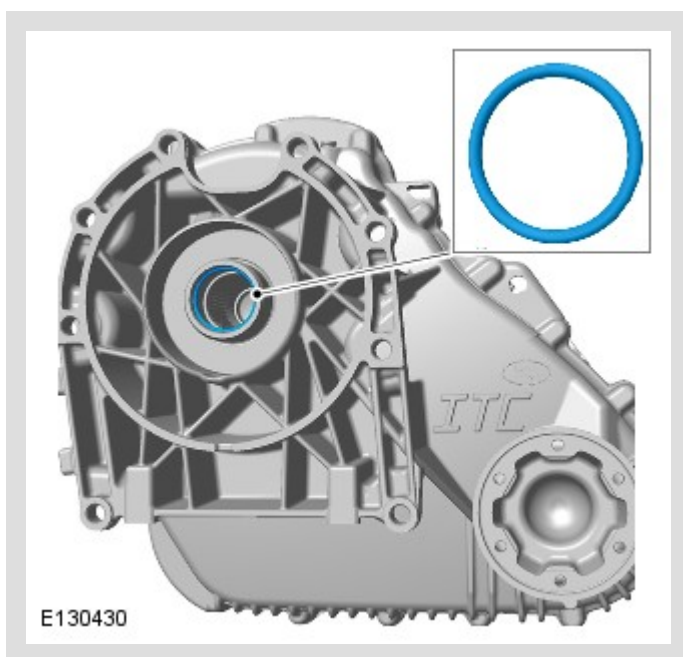

16.

⚠ CAUTIONS:

- Care must be taken to avoid damage to the seal register and running surface.
- Do not carry out this step if a new transfer box is to be installed.
- Note the fitted position of the component prior to removal.

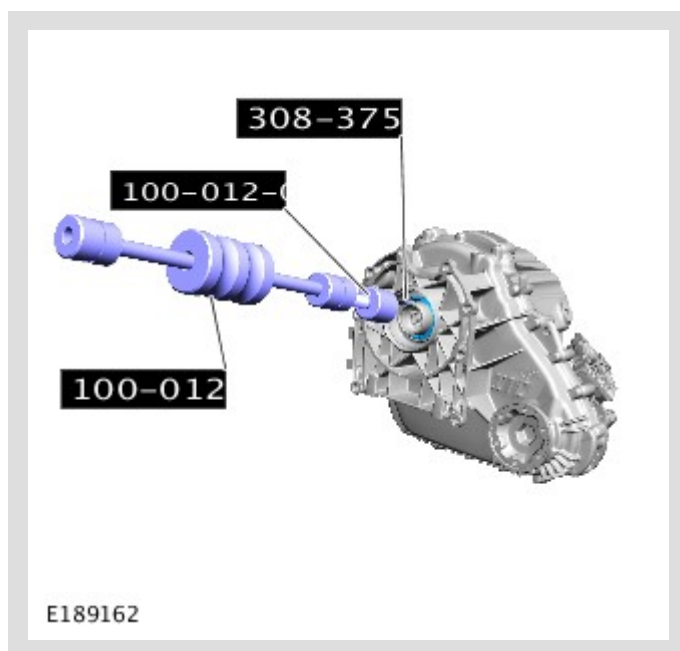

- *Special Tool(s):* [100-012](#) , [100-012-01](#) , [308-375](#)