




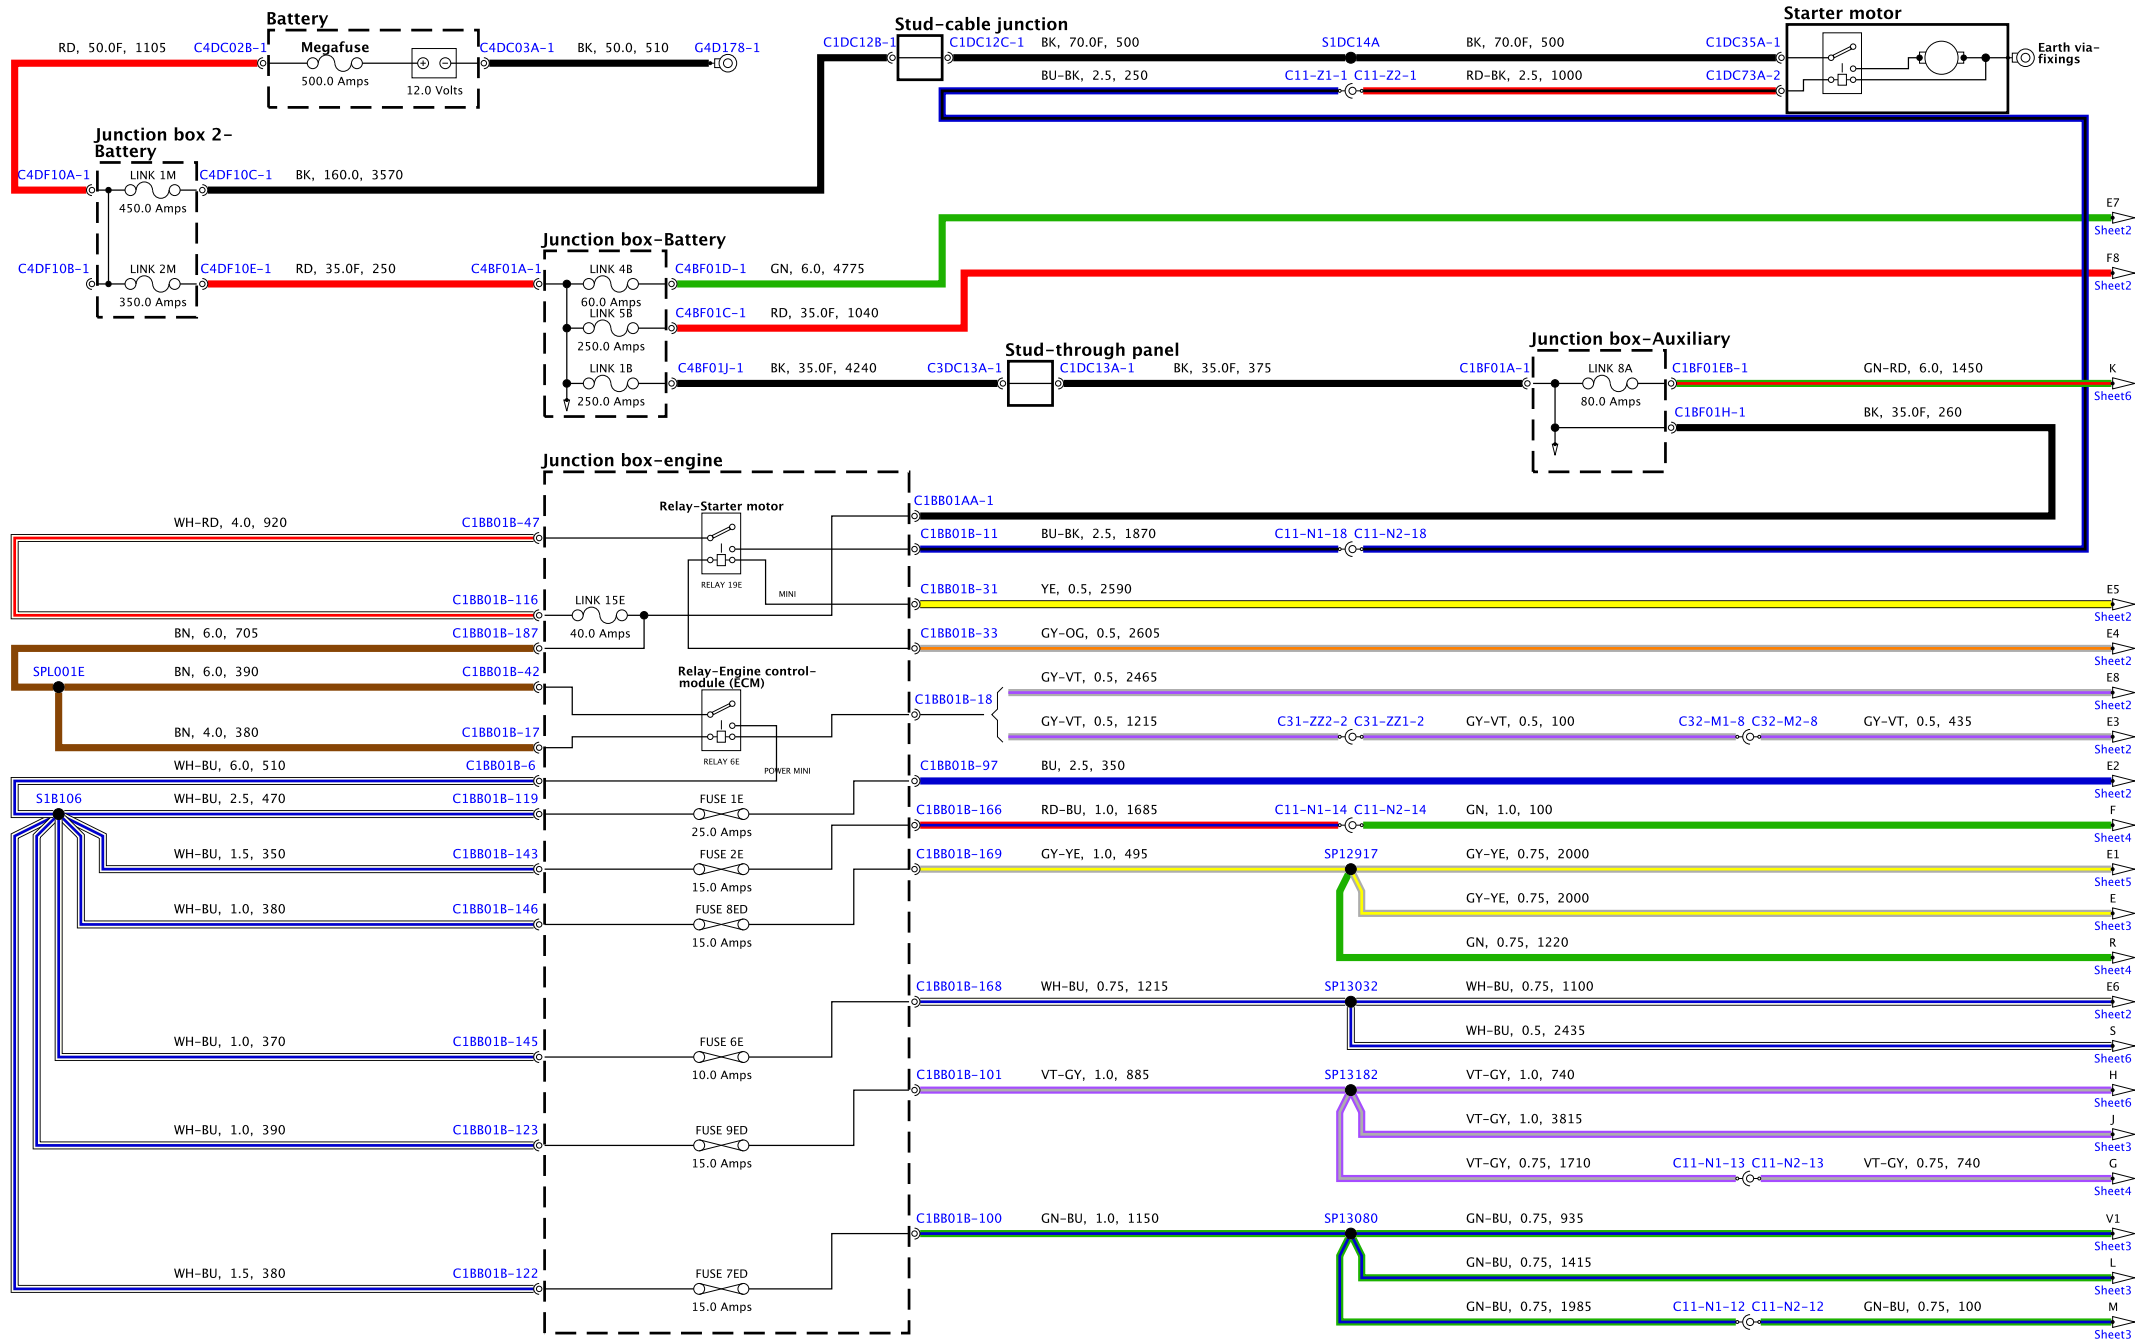

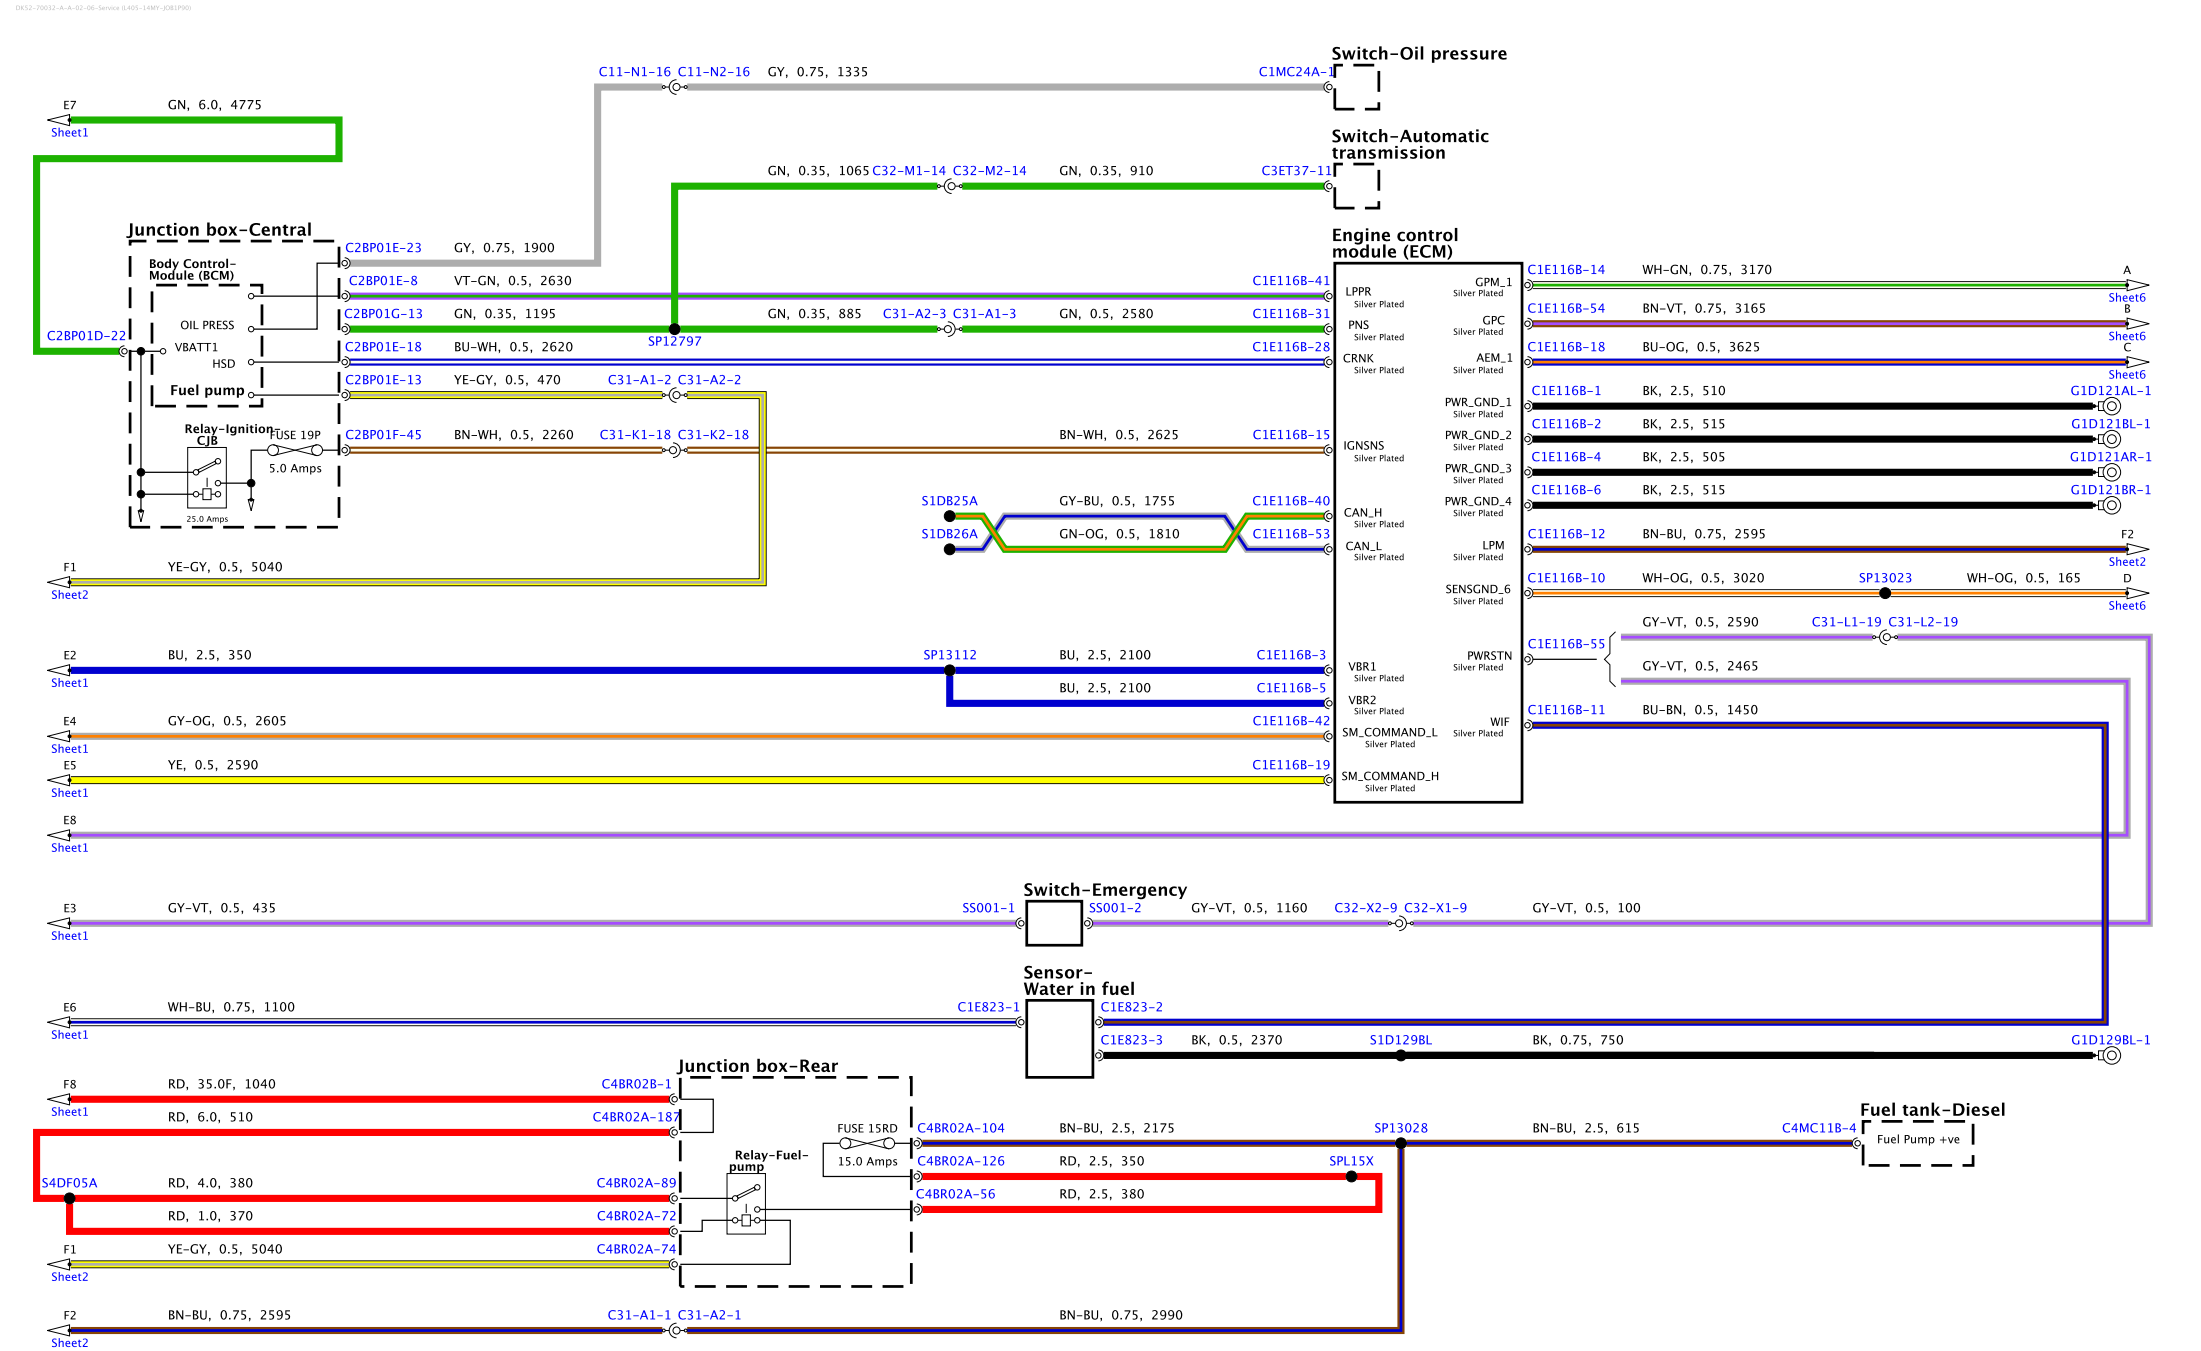


DS12-70032-A-A-03-00-Service (L405-1400) (J061P00)


Solenoid-Charge air recirculation

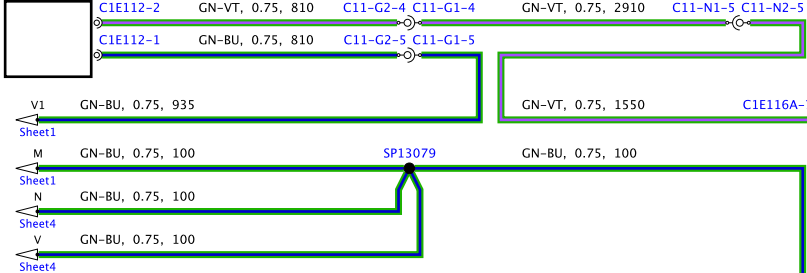

Solenoid-Charge air




Sensor-Temperature-Charge air




Sensor-Temperature-fuel



Sensor-Mass air-flow (MAF)

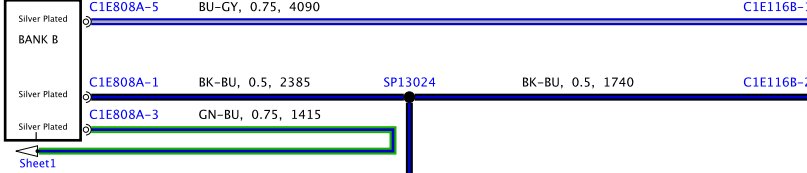


Sensor-Mass air flow and temperature-Bank 1

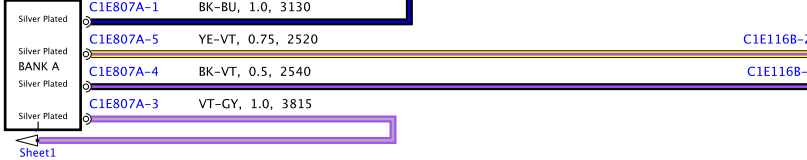


Motor-Cooling fan-Engine control module




Engine control module (ECM)

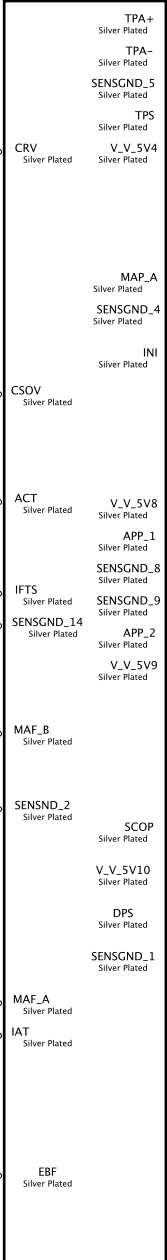

Throttle-EGR-Intake




Sensor-Manifold Absolute-Pressure (MAP)




Restrains Control Module (RCM)




Sensor-Position-Accelerator pedal



Sensor-Charge air pressure




Sensor-Differential pressure

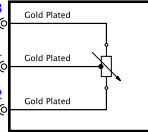


DN12-70032-A-A-04-06-Service (S-405-14007-J083950)


Sensor-Temperature-DPF-Outlet




Sensor-Temperature-Pre-catalytic converter

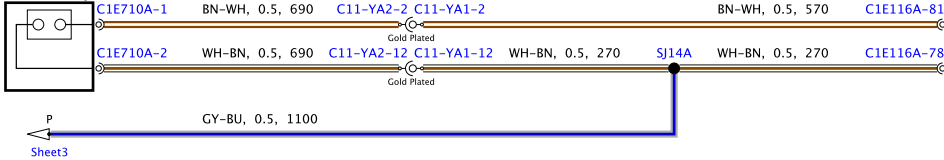


Sensor-Ambient air-temperature




Sensor-Ambient air-temperature





Sensor-Heated oxygen-Pre catalyst-Left

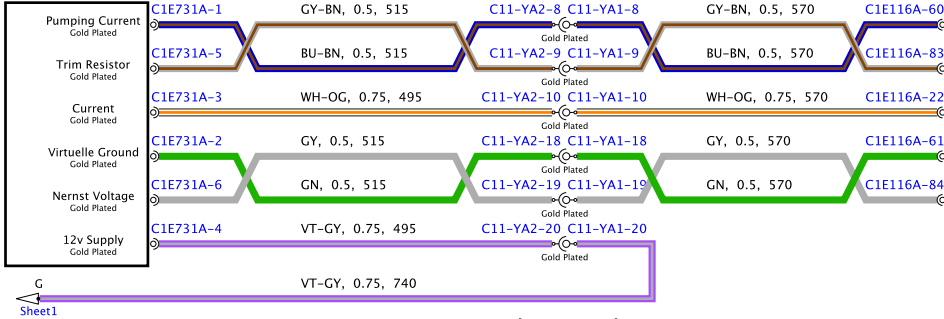


Valve-Control-Fuel pressure




Valve-Control-Fuel volume




Engine control module (ECM)

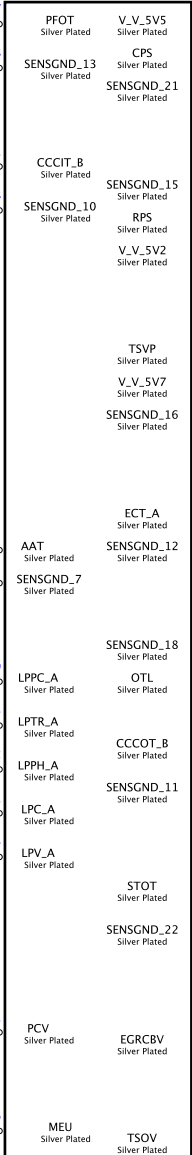


Sensor-Crankshaft-position (CKP)



Sensor-Pressure-Fuel rail




Sensor-Valve position-Turbine intake




Sensor-Engine coolant-temperature (ECT)




Sensor-Oil level and temperature



Sensor-Temperature-Catalytic converter-Downstream




Sensor-Outlet temperature-Fixed turbocharger




Actuator-Bypass valve



Solenoid-Turbine intake



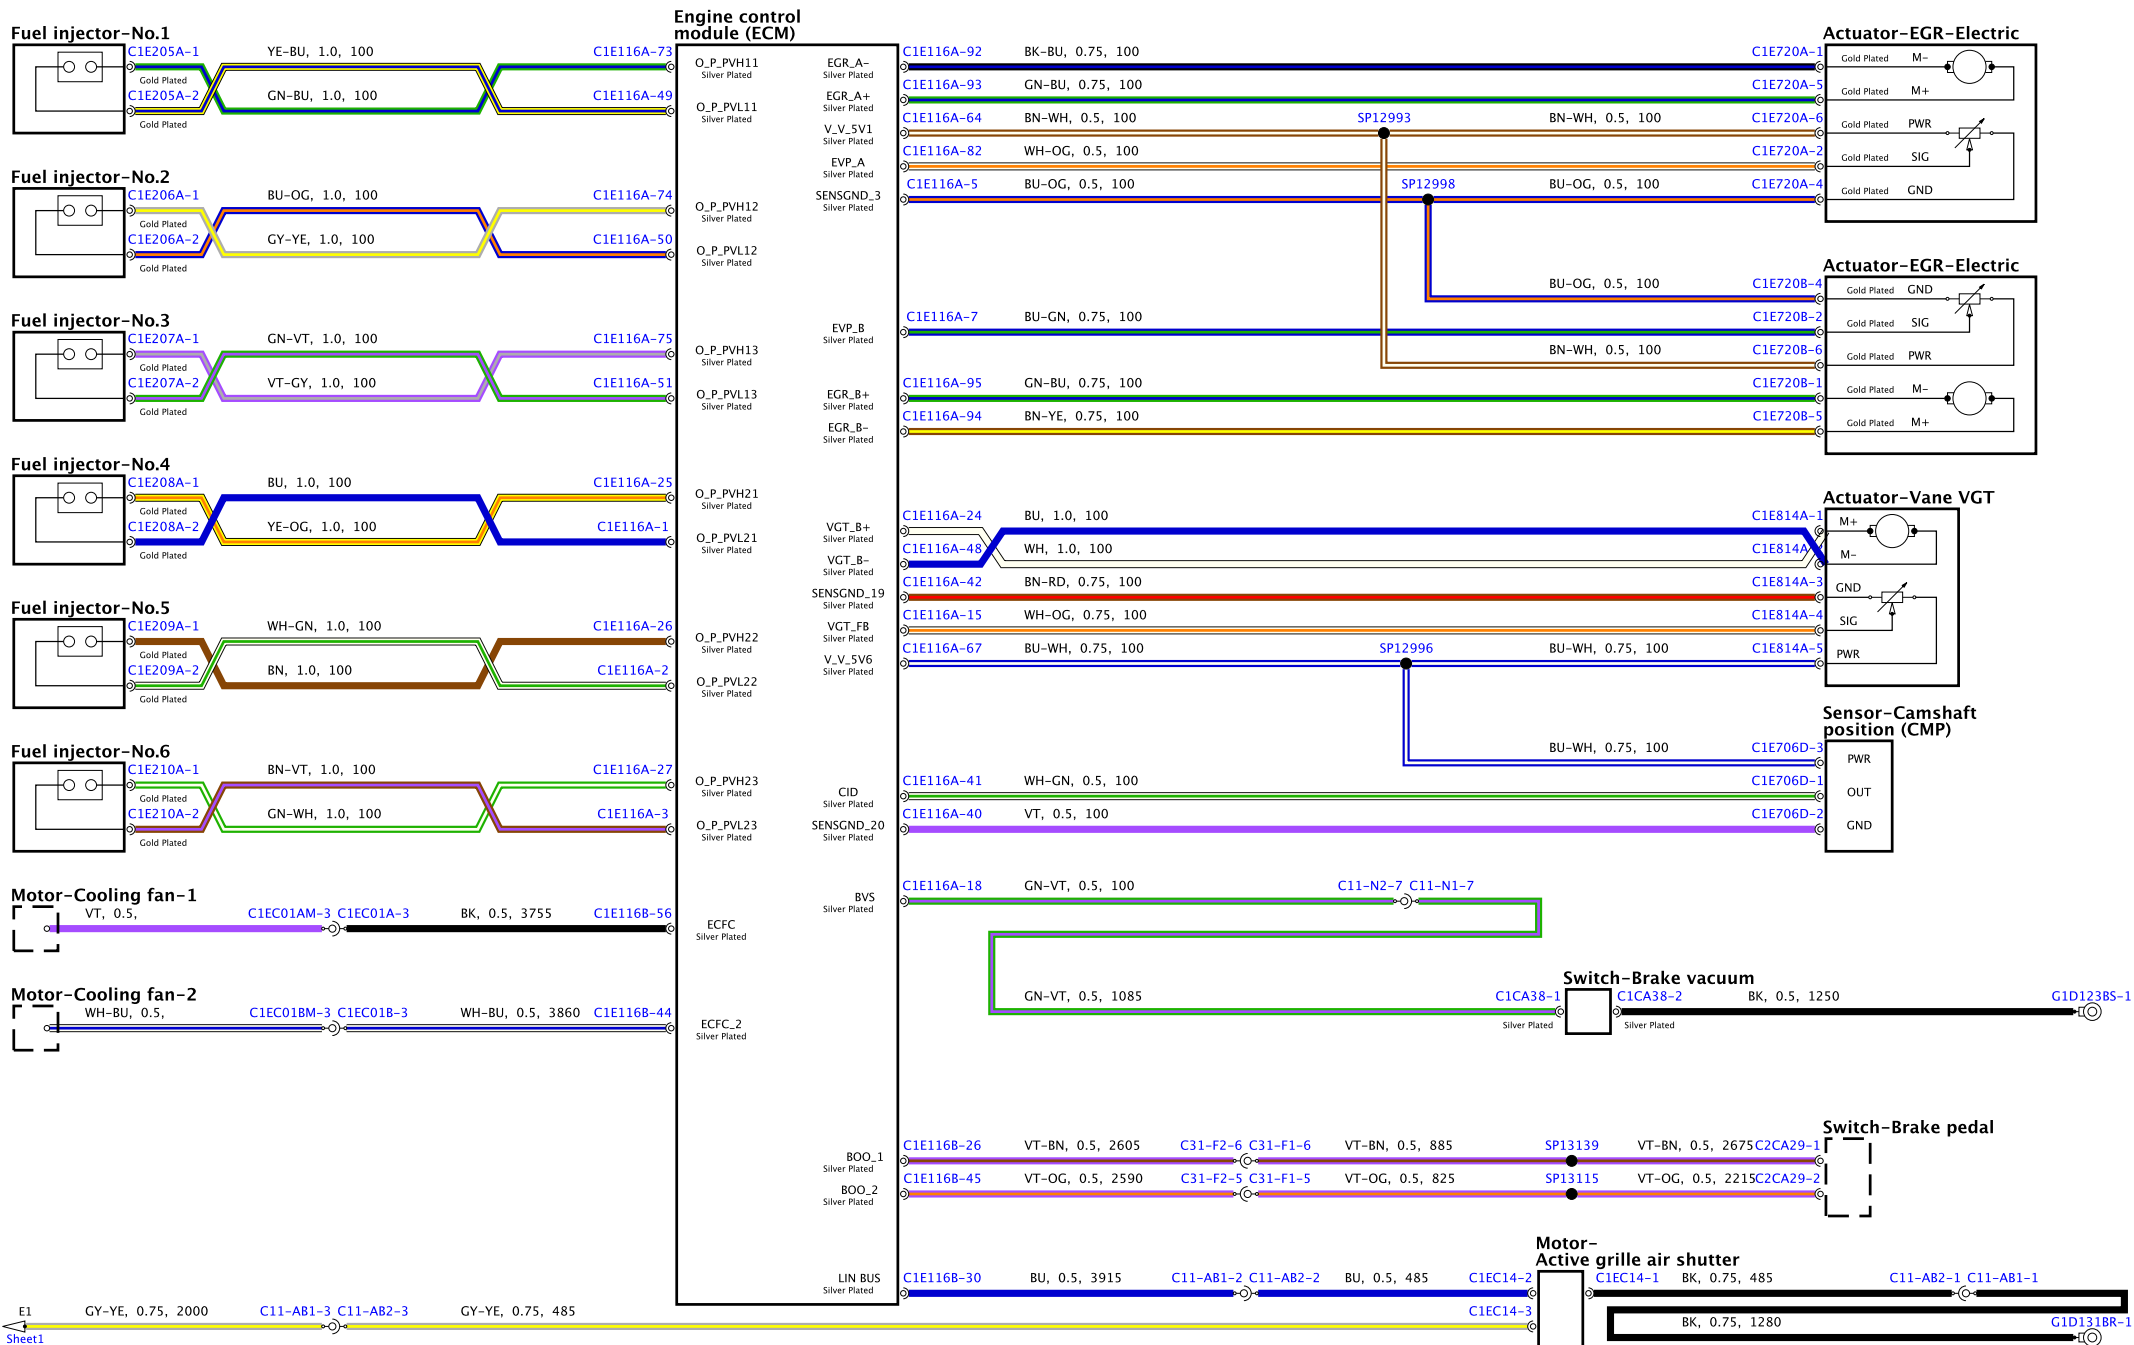

DK52-70032-A-A-06-06-Service (1405-1406Y-J081790)

