

=====
The installation of the ECU plugin for PERT
=====

Requirement:

OS: Windows 10 or 11, 64 bits version

Storage: > 30 GB

MATLAB 2014b (32-bits)

VS code

!!! ask EEE member for borrow it and use within garage area only !!!

The ECUCoder Dongle

The package of the ECU software

=====

1. Installation of the Compiler - **CoderWarrior**


=====

Find the “CW55xx_v2_9_SE.exe” in the folder and open it.

Click “Next”, until here

!! remember, the path could not include space !!

(we suggest you install to a new folder like “R:\ecu\CoderWarrior2.9”)

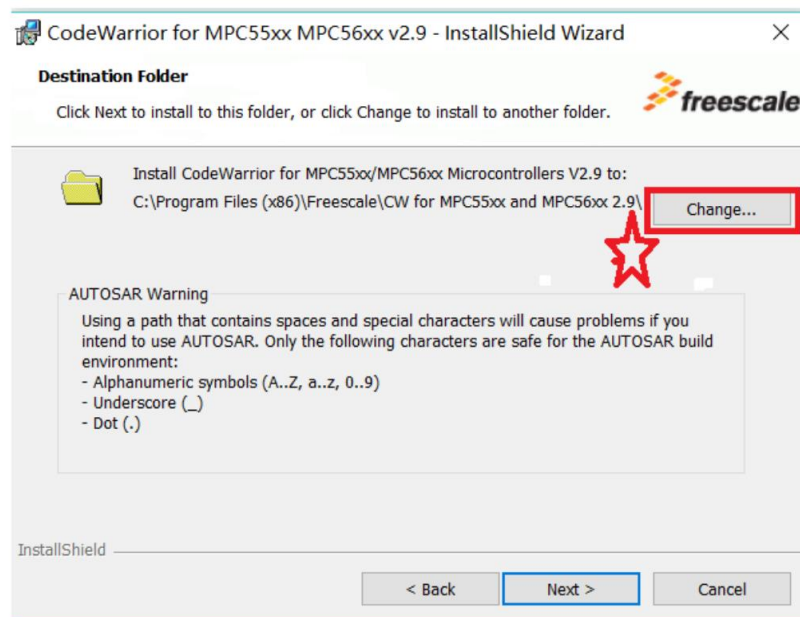


Select “Complete”, and click “Next” until finish.


2. Installation of the ECUCoder

Find the “ECUCoder for MPC5674 S1 2.23.exe” in the folder and open it.

Click “下一步”(next), until

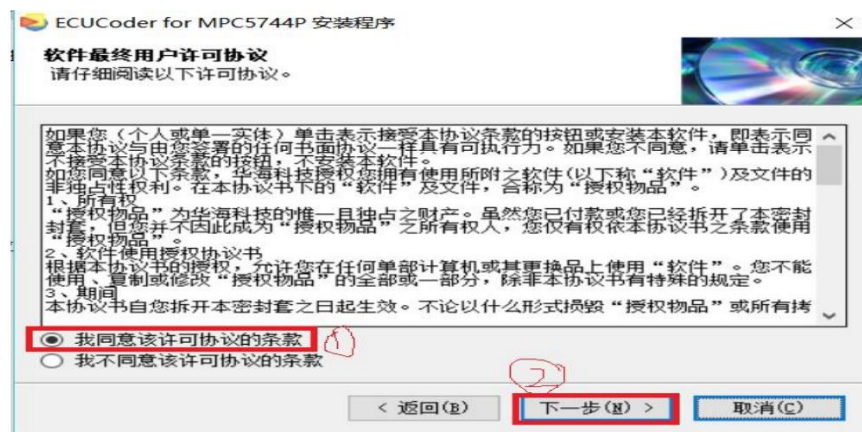


Next, type something on “名称” (name), for example we type “a” here.

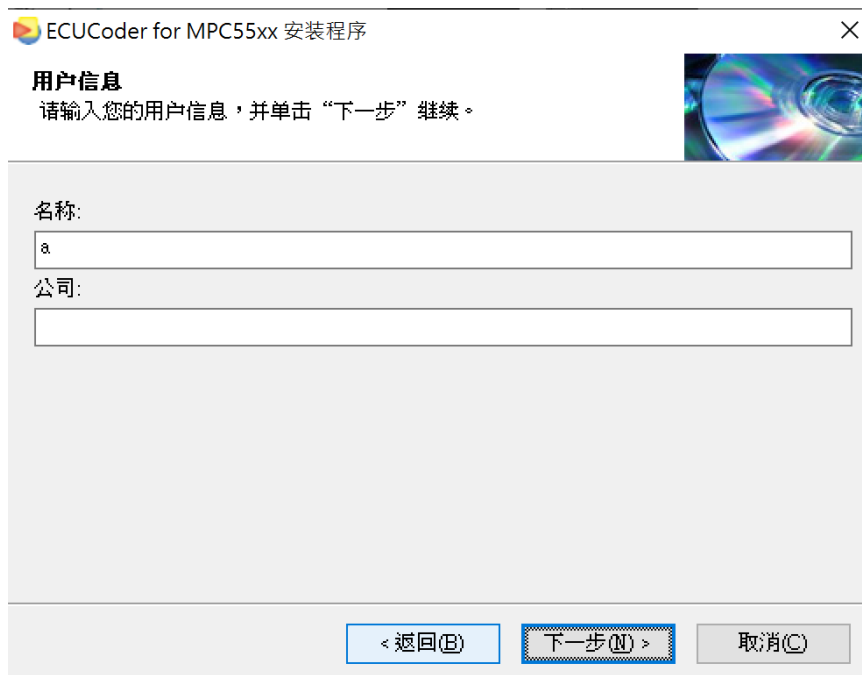

Again, select the path to install.

!! remember, the path could not include space !!


(we suggest you install to a new folder like "R:\ecu\ECUCoder_MPC55xx")

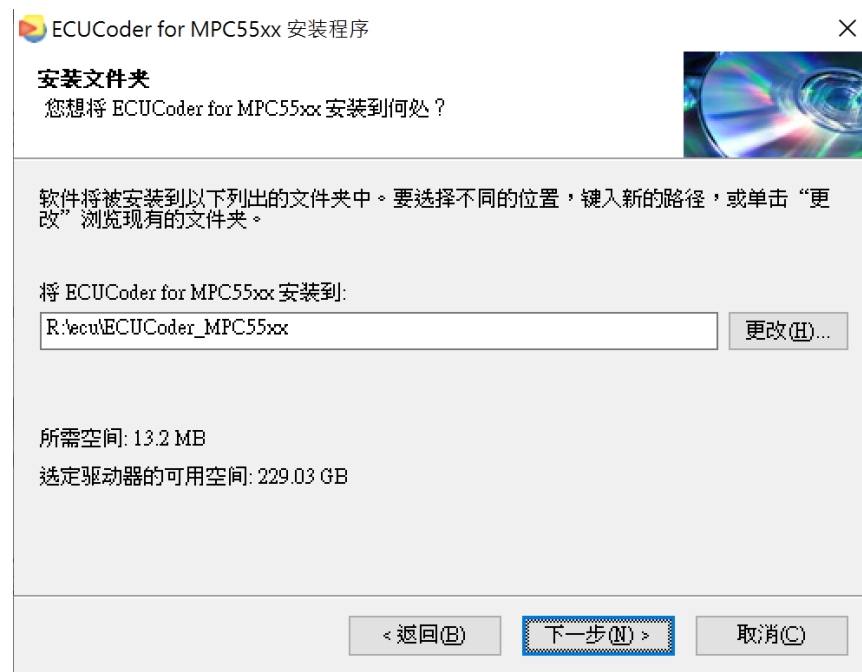

Then click “下一步”(next), until finish, you may need to restart your computer once you finish the installation of the ECUCoder.


3. Installation of the **ECUCoder** in **MATLAB**

After the restart of PC, open you MATLAB R2014b (32-bits). Find and open the path of the ECUCoder_MPC55xx. (Here are in “R:\ecu\ECUCoder_MPC55xx”)

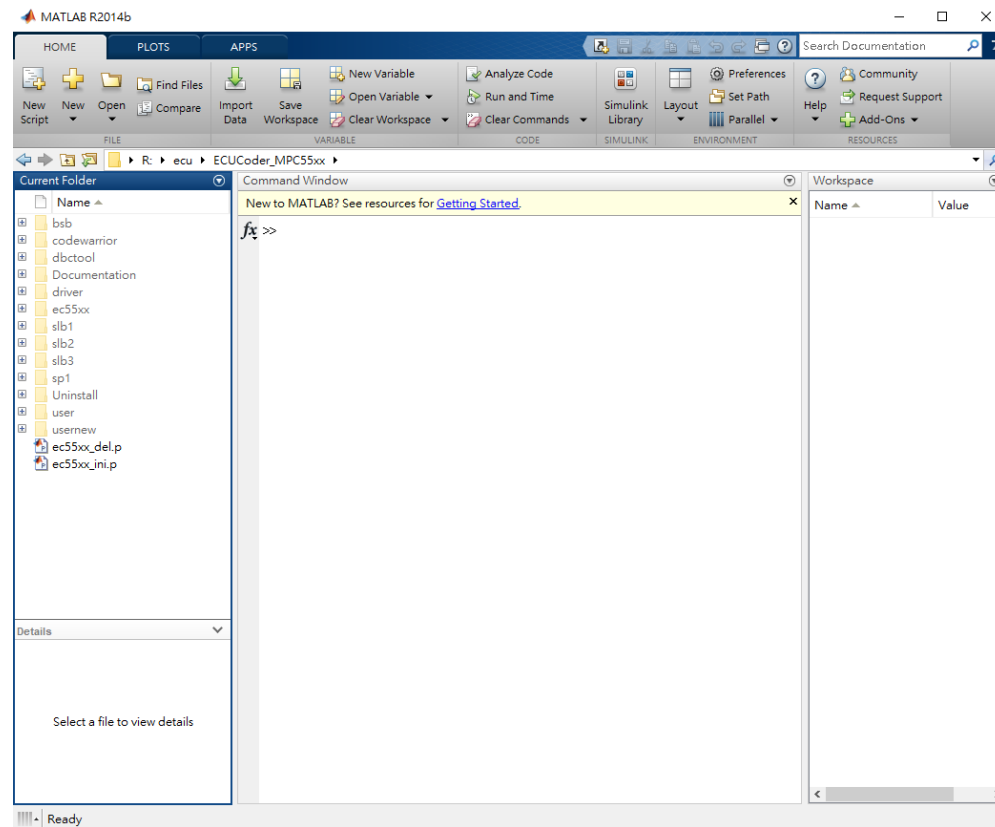

Pug the Dongle to your PC. Right click “ec55xx_ini.p” and select run.

The following parameter configuration dialog box will appear.

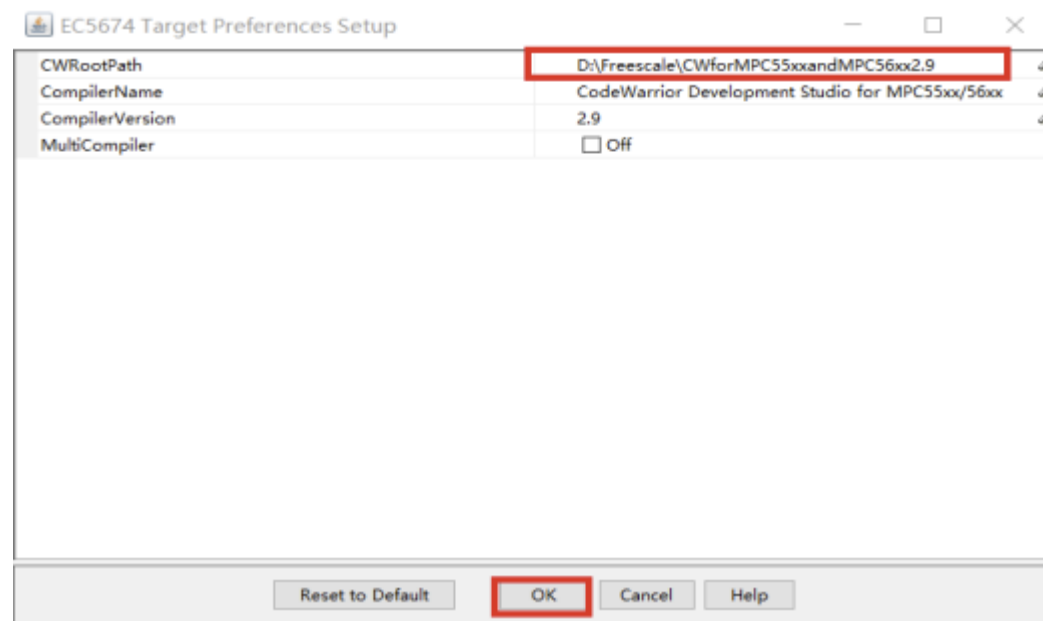

If your PC only has one version of CodeWarrior installed, click "**Reset to Default**" and then click "**OK**".

This completes the **ECUCoder** setup.

=====

4. change Problematic Source files from Huahai ECUCoder

=====

Requirement:

VS Code

1. ec55xx_canreceiveslb.tlc

2. ec55xx_canreceiveallslb.tlc

both of these files are similarly problematic

Directory:

C:\Your Directory for ECUCoder\slb1

for example:

R:\ecu\ECUCoder_MPC55xx

Go to the part where it shows the following:

```
%if WHITE_SPACE(tmpBuf)
    /* Nothing to do for system: %<ssBlock.Name> */ <----- needs to add %% in the
front to comment out
    %else
        /* Call the system: %<ssBlock.Name> */ <----- needs to add %% in the front to
comment out
        %<tmpBuf>\
    %endif
```

The MATLAB code has a syntax problem for the comments,
which used the syntax for C code,

After changed:

```
%if WHITE_SPACE(tmpBuf)
  %/* Nothing to do for system: %<ssBlock.Name> */
%else
  %/* Call the system: %<ssBlock.Name> */
  %<tmpBuf>\
%endif
```

For ec55xx_canreceiveallsb.tlc it is at line 55 and line 57

=====

5. installation of MeCa

=====

Find the “MeCa 1.8.exe” in the folder and open it.

The installation are similar to the ECUCoder.

Click “下一步”(next), until,




Next, type something on “名称” (name), for example we type “a” here.



Again, select the path to install.

!! remember, the path could not include space !!

(we suggest you install to a new folder like "R:\ecu\MeCa")

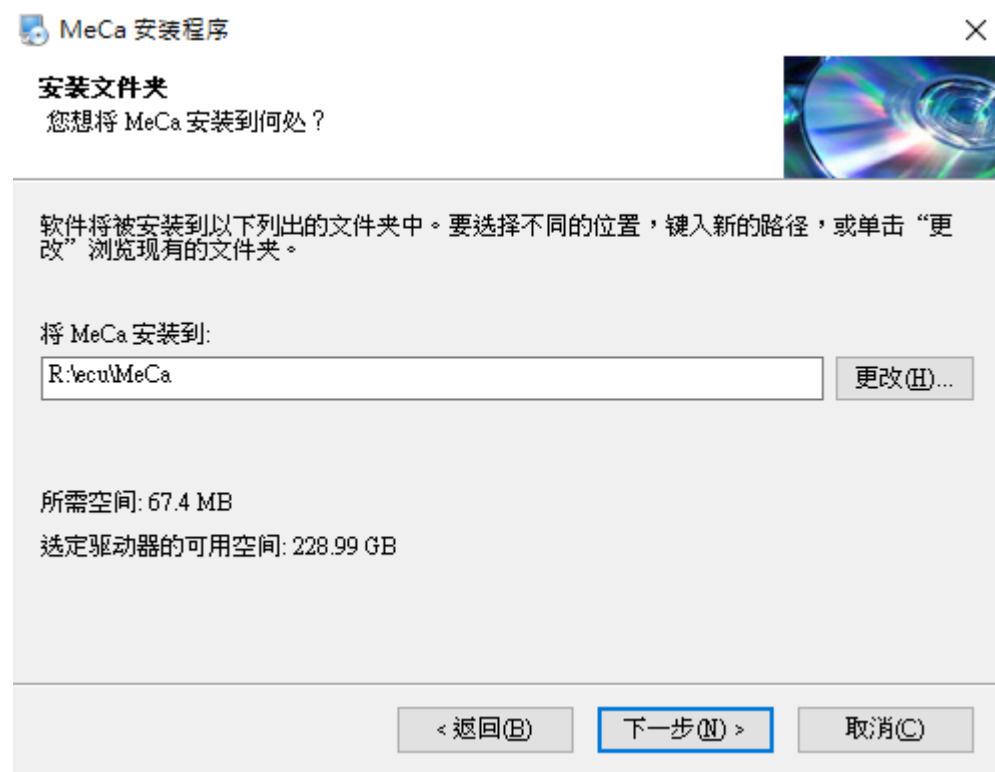

Then click “下一步”(next), until finish.

=====
Extra: Install driver for the USBCANII device that comes with the Huahai package
=====

Go to this website:

<https://www.zlg.cn/can/down/down/id/22.html>

Download and install this driver file:

【驱动库】 USBCAN-I_I+_II_II+_2A_I-MINI 驱动安装（ Windows&INITime）

https://www.zlg.cn/data/upload/software/Can/USBCAN_I_II_2A_drive.rar

If the above is not installed, MeCa will not able to start the USBCANII
thus it will not be able to flash or calibrate your program