
Jandy®

Installation and Operation Manual
Manuel d'installation et d'utilisation
Manual de instalación y operación

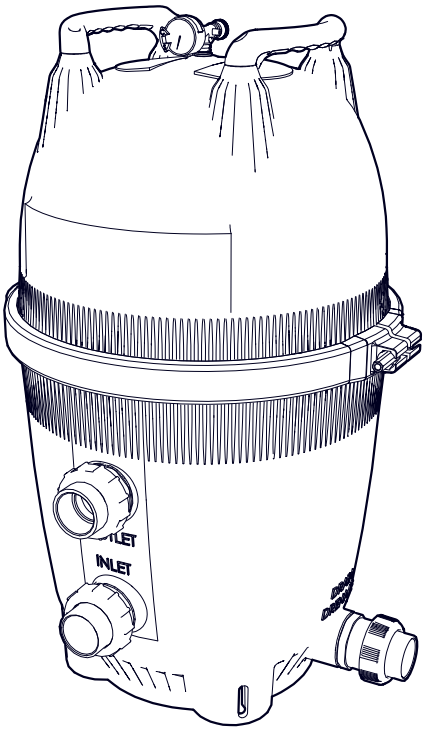

Cartridge Pool Filters

Models: CC300 CC400 CC500
(Replaces Pentair® CCP320 | CCP420 | CCP520, see *Section 1.2, Drop-In Pentair® Replacement)*

⚠ WARNING

FOR YOUR SAFETY – This product must be installed and serviced by a contractor who is licensed and qualified in pool equipment by the jurisdiction in which the product will be installed where such state or local requirements exist. The maintainer must be a professional with sufficient experience in pool equipment installation and maintenance so that all of the instructions in this manual can be followed exactly. Before installing this product, read and follow all warning notices and instructions that accompany this product. Failure to follow warning notices and instructions may result in property damage, personal injury, or death. Improper installation and/or operation may void the warranty.

Improper installation and/or operation can create unwanted electrical hazards which may cause serious injury, property damage, or death.

ATTENTION INSTALLER – This manual contains important information about the installation, operation and safe use of this product. This information should be given to the owner/operator of this equipment.

Table of Contents

Important Safety Instructions 2

Section 1. General Information 3
1.1 Introduction 3
1.2 Drop-In Pentair® Replacement 3
1.3 Description 3
1.4 General Requirements 3
1.5 Dimensions and Specifications 4

Section 2. Installation Instructions 4
2.1 Filter Location 4
2.2 Anchor Bracket Installation 4
2.3 Filter Preparation 5
2.4 Filter Plumbing 5
2.5 Clamp Installation 6

Section 3. Start-Up 6

Section 4. Operation 6

Section 5. Filter Disassembly and Assembly 7

Section 6. Maintenance 7
6.1 General Maintenance 7
6.2 Pressure Gauge 7
6.3 Cleaning the Filter Cartridge 7

Section 7. Winterizing 7

Section 8. Troubleshooting 7

Section 9. Head Loss Curves 7

IMPORTANT SAFETY INSTRUCTIONS
READ AND FOLLOW ALL INSTRUCTIONS

Important Safety Warnings

⚠ WARNING



- Do not connect system to an unregulated city water system or other external source of pressurized water producing pressures greater than 35 PSI.
- Pressurized air in system can cause product failure or also cause the filter lid to be blown off which can result in death, serious personal injury, or property damage. Be sure all air is out of system before operating or testing the equipment.

⚠ WARNING



MAXIMUM OPERATING PRESSURE OF THE FILTER IS 50 PSI. NEVER SUBJECT THE FILTER TO ANY OPERATING PRESSURE EXCEEDING 50 PSI.

This filter operates under high pressure. When any part of the circulating system, i.e., filter, pump, valve(s), clamp, etc. is serviced, air can enter the system and become pressurized when the system is restarted. Pressurized air can cause product failure or also cause the filter lid to be blown off which can result in death, serious personal injury or property damage. To avoid this potential hazard, follow all of the instructions in this manual.

⚠ WARNING



To minimize risk of severe injury or death the filter and/or pump should not be subjected to the piping system pressurization test.

Local codes may require the pool piping system to be subjected to a pressure test. These requirements are generally not intended to apply to the pool equipment such as filters or pumps.

Jandy pool equipment is pressure tested at the factory.

If however this WARNING cannot be followed and pressure testing of the piping system must include the filter and/or pump BE SURE TO COMPLY WITH THE FOLLOWING SAFETY INSTRUCTIONS:

- Check all clamps, bolts, lids, lock rings and system accessories to ensure they are properly installed and secured before testing.
- **RELEASE ALL AIR** in the system before testing.
- Water pressure for test must NOT EXCEED 35 PSI.
- Water temperature for test must NOT EXCEED 100°F (38°C).
- Limit test to 24 hours. After test, visually check system to be sure it is ready for operation.

Before servicing:

1. Turn the pump OFF
2. Shut off automatic controls
3. Open the air relief valve
4. Wait until all pressure is relieved

General Safety Instructions

- Use equipment only in a pool or spa circulation system.
- Follow clamp installation instructions exactly.
- Maintain the circulation system and replace damaged parts immediately.

SAVE THESE INSTRUCTIONS

Section 1. General Information

1.1 Introduction

This manual provides installation, operation, and maintenance instructions for Jandy CC Series cartridge pool filters. Procedures must be followed exactly to ensure safe and proper operation.

For technical assistance, contact Jandy Technical Support at 1.800.822.7933.

1.2 Drop-In Pentair® Replacement

As economical replacements for Pentair® cartridge filter models CCP320, CCP420 and CCP520 respectively, the Jandy CC300, CC400 and CC500 filters use Pentair inlet and outlet spacing, Pentair style union bulkhead, nuts and tailpieces.

NOTE Jandy filter bodies are 2" (5cm) wider than the Pentair filter bodies. Verify adequate space before installing.

1.3 Description

Jandy CC cartridge filters use replaceable filter elements to remove debris from pool water. Cartridge filtration does not require sand or diatomaceous earth.

Water enters through a bulkhead inlet, flows through the cartridges, and exits through the bulkhead outlet back to the pool.

As debris accumulates, pressure rises and flow decreases. When pressure increases beyond normal operating range, the cartridges must be cleaned.

NOTE: Filtration does not sanitize pool water. Proper chemical balance must also be maintained.


1.4 General Requirements

- Install the system as close to the pool as possible.
- Mount the filter on a level concrete pad.
- Protect the filter from weather exposure.
- Install chlorinators or other devices per manufacturer instructions.
- Barrel unions are recommended and supplied for serviceability.

⚠ WARNING

The maximum operating pressure for this filter is 50 psi. Never subject the filter to operating pressure exceeding 50 psi. Operating pressures above 50 psi can cause product failure or also cause the lid to be blown off, which can result in death, serious personal injury, or property damage.

1.5 Dimensions and Specifications

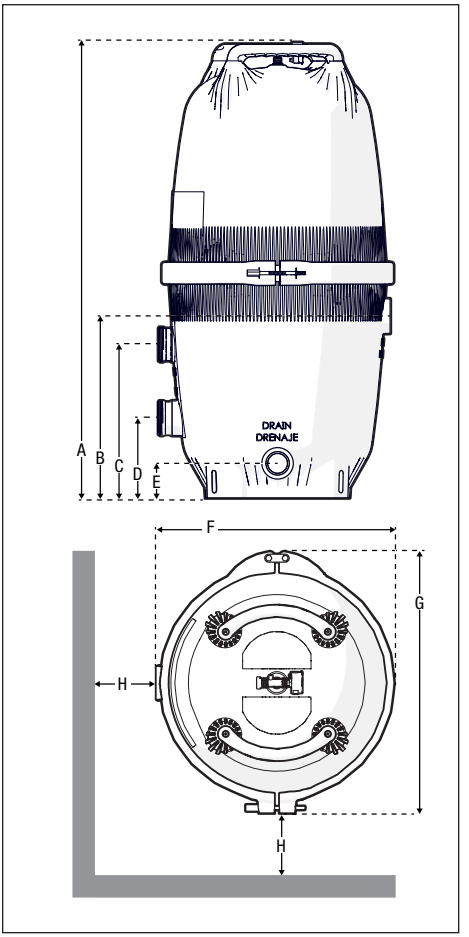

Dimensions

CC		300	400	500
A	Height	40.5" (103 cm)		46.5" (118 cm)
B	Inlet	18.5" (47 cm)		
C	Outlet	15.6" (40 cm)		
D	Inlet	8.1" (21 cm)		
E	Drain	3.5" (9 cm)		
F	Width	26.5" (67 cm)		
G	Depth	24" (61 cm)		
H	Minimum Clearance 6" (15 cm)			

Specifications

CC	300	400	500
Filter Area (ft^2) (m^2)	300 28	400 37	500 46
Residential Max. Flow (gpm) (lpm)	150 568	170 644	170 644
Max. Working Pressure (psi)	50	50	50
Normal Start-up Pressure (psi)	6-15	6-15	6-15

NOTE Maximum system flow may be limited by pipe size. Suction and return/discharge plumbing must be sized to comply with applicable water velocity limits.

Section 2. Installation Instructions

⚠ WARNING

Use equipment only in a pool or spa installation. Do not connect system to an unregulated city water system or other external source of pressurized water producing pressures greater than 35 psi (241 kPa).

2.1 Filter Location

- Select a well-drained area that will not flood.
- Avoid damp or poorly ventilated locations.
- Install electrical controls at least 5' (1.6 m) from the filter.
- Allow sufficient clearance to inspect the clamp and remove the lid.
- Direct purged air and drainage safely.
- Install with 6" (16 cm) minimum clearance.

⚠ WARNING

Water discharged from an improperly positioned filter or valve can create an electrical hazard which can cause death, serious injury or property damage.

⚠ CAUTION

Maintain your pressure gauge in good working order. The pressure gauge is the primary indicator of how the filter is operating.

- The filter can be located up to 2.5' (76 cm) above the water level of the pool without affecting the pump efficiency. A check valve is recommended on the suction line to the pump.
- If the filter is located below the water level of the pool, isolation valves should be installed on both the suction and return lines to prevent back flow during servicing.

2.2 Anchor Bracket Installation


In regions with high-wind requirements (e.g., Florida), anchoring may be required. Follow anchor bracket installation instructions and local building codes.

2.3 Filter Preparation


⚠ CAUTION

DO NOT move the filter tank without the shipping screw in place or the filter grids may be damaged while installing the filter tank.

- Inspect the carton and components.
- Remove accessory package.
- Install the pressure gauge / air relief assembly using supplied O-rings.
- Hand-tighten only.

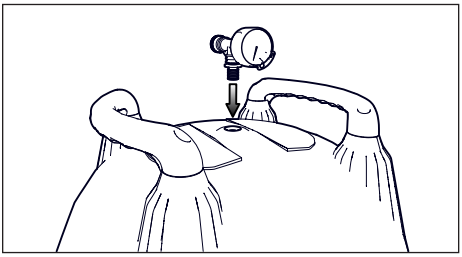

2.4 Filter Plumbing

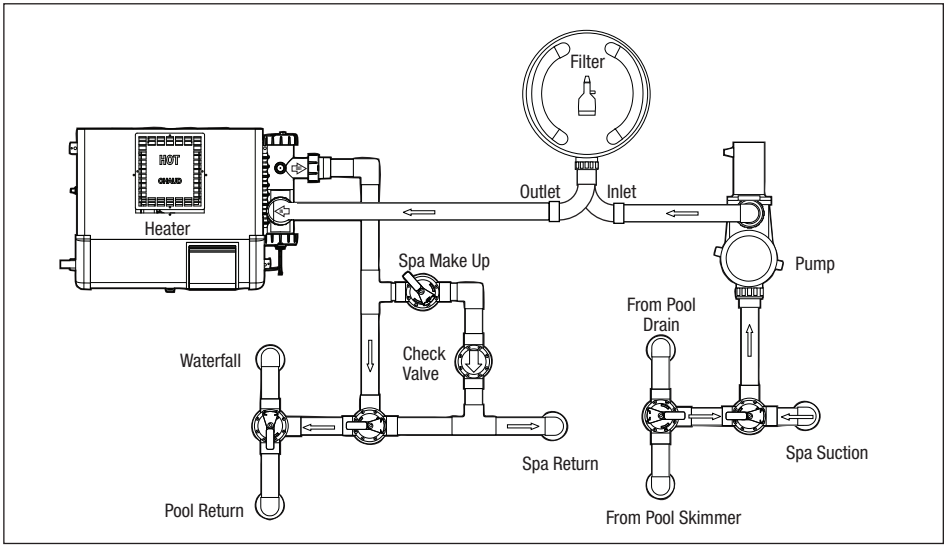

⚠ WARNING

To avoid an electrical shock hazard, which can result in serious injury or death, ensure that all electrical power to the system is turned off before approaching, inspecting or troubleshooting any leaking valves or plumbing that may have caused other electrical devices in the surrounding area to get wet.

⚠ CAUTION

Be sure that all provisions for wastewater disposal meet local, state or national codes. During any draining process, 100 gallons (380 l) or more of pool water will be discharged. Cartridge Filters are not subject to backwashing. Do not discharge water where it will cause flooding or damage.

⚠ WARNING

Follow all filter manufacturer's instructions. **NEVER** attempt to assemble, disassemble or adjust the filter when there is pressurized air in the system. Starting the pump while there is any pressurized air in the system can cause product failure or also cause the filter lid to be blown off, which can cause death, serious personal injury or property damage.

- Minimum 2" (5 cm) piping recommended.
- Use the fewest fittings possible.
- Support plumbing independently.
- Use silicone-based lubricant on O-rings only.
- Hand-tighten all unions.

2.5 Clamp Installation

⚠ WARNING




DEATH, SERIOUS PERSONAL INJURY OR PROPERTY DAMAGE CAN OCCUR FROM IMPROPER INSTALLATION WHICH CAN CAUSE THE FILTER LID TO BE BLOWN OFF. If unable to tighten as indicated, **DO NOT** operate filter and CALL SERVICE TECHNICIAN IMMEDIATELY.

⚠ WARNING




Follow these instructions carefully. Improper clamp installation can cause product failure or also cause the filter lid to be blown off, which can result in death, serious personal injury, or property damage.


1. Verify the tank O-ring is clean and oriented correctly on the flange of the lower tank.

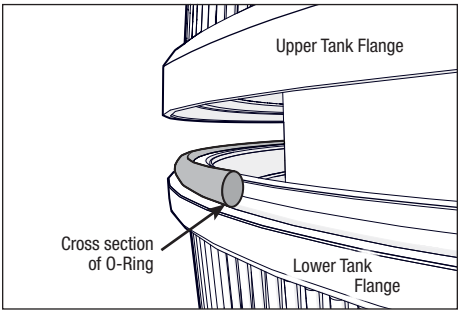


2. Install the upper tank half, aligning upper and lower flanges.
3. Position the clamp evenly around both flanges.
4. Install threaded rod and “T” nut.

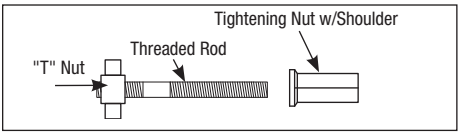

5. Tighten using a 9/16" socket.

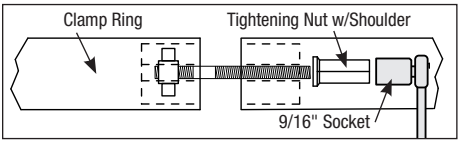

6. Clamp gap must not exceed 3/8" (1 cm).

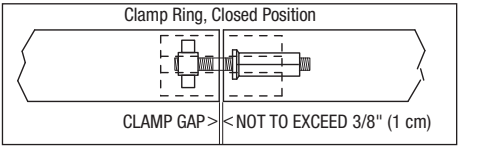

7. Do not over-tighten.
8. Inspect clamp after one week and monthly thereafter.

Section 3. Start-Up

⚠ WARNING



NEVER start pump while standing within 5' (1.5 m) of the filter. Starting the pump while there is pressurized air in the system can cause product failure or also cause the filter lid to be blown off, which can cause death, serious personal injury or property damage.

⚠ WARNING



NEVER operate the filter system at more than 50 psi (345 kPa) of pressure. Operating the filter system in excess of 50 psi (345 kPa) can cause the product failure or also cause filter lid to be blown off, which can cause death, serious personal injury or property damage.

⚠ CAUTION

DO NOT operate filter at water temperatures above 105° F (40.6° C). Water temperatures above the manufacturer’s recommendations will shorten the life span of the filter and may void the warranty.

1. Turn off pump and breaker.
2. Verify drain plug is installed.
3. Verify clamp is secure.
4. Prime pump.
5. Open air relief valve.
6. Start pump and stand clear.
7. Close air relief valve when water flows steadily.

Section 4. Operation

- Observe and record clean starting pressure.
- As debris accumulates, pressure increases.
- Clean cartridges when pressure rises 10–12 PSI (69–83 kPa) above clean pressure.
- Never allow pressure to exceed 50 PSI (345 kPa).

Section 5. Filter Disassembly and Assembly

⚠ WARNING



Never attempt to assemble, disassemble or adjust the filter when there is pressurized air in the system. Starting the pump while there is any pressurized air in the system can cause product failure or also cause the filter lid to be blown off, which can cause death, serious personal injury or property damage.

1. Shut down system.
2. Release pressure.
3. Drain tank.
4. Remove clamp and lid.
5. Remove manifold and cartridges.
6. Clean or replace cartridges.
7. Inspect O-rings.
8. Reassemble in reverse order.
9. Restart per *Section 3, Start-Up*.

Section 6. Maintenance

6.1 General Maintenance

- Wash exterior with mild detergent.
- Check pressure weekly.
- Inspect system for leaks.
- Maintain safety labels.

6.2 Pressure Gauge

⚠ CAUTION

Maintain your pressure gauge in good working order. The pressure gauge is the primary indicator of how the filter is operating.

- Inspect gauge weekly.
- Replace if damaged or inaccurate.

6.3 Cleaning the Filter Cartridge

- Hose off pleats thoroughly.
- Soak for oils or scale as needed.
- Inspect for damage, replace if necessary.


Section 7. Winterizing

1. Shut off power.
2. Open air relief valve.
3. Remove drain plug and allow to drain.
4. Cover equipment.

Section 8. Troubleshooting

Water is not clear
– Test and adjust water chemistry – Increase filter pump run time – Clean or replace filter cartridges
Low water flow
– Clean or replace strainer baskets – Check all lines for debris or partially closed valves – Clean or replace filter cartridges – Fill pool so water level is above pump inlet line
Short filter cycles
– Test and adjust water chemistry – Check pH, total alkalinity and total dissolved solids – Check pump performance – Clean or replace filter cartridges
High pressure on start-up
– Check and fully open all valves on return line – Check pump and filter for specification mismatch – Clean or replace filter cartridges
Dirt returns to pool
– Replace filter cartridges – Replace o-ring

Section 9. Head Loss Curve

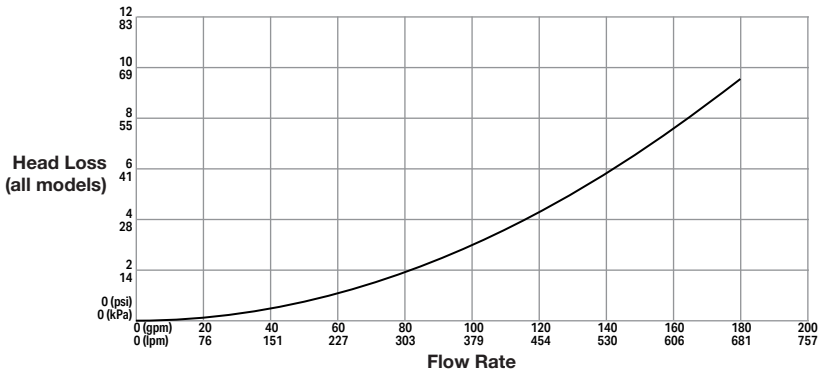

A Fluidra Brand | Jandy.com | Jandy.ca
2882 Whiptail Loop # 100, Carlsbad, CA 92010, USA | 1.800.822.7933
2-3365 Mainway, Burlington, ON L7M 1A6, Canada | 1.800.822.7933

©2026 Fluidra. All rights reserved. The trademarks and trade names used herein are the property of their respective owners.

H0921100_REVB