



P 30

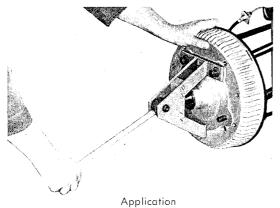

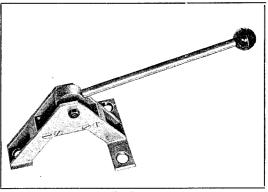


Purpose: To hold the brake drum: and to guide the wrench when tightening and loosening the rear axle nut. (In conjunction with P 42, P 44, and P 44 a, if necessary P 36 a.)

See Workshop Manual, Group T Procedures: 4 Ti, 8 Ti, 10 Ti. 11 Ti.

Subject to Modification

Brake Drum Holder and Wrench Guide

P 36

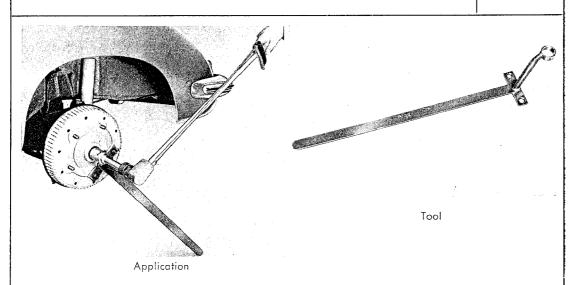

Purpose: To pull off brake drums, front and rear.

See Workshop Manual, Group T Procedures: 3 Ti, 4 Ti, 7 Ti, 8 Ti, 9 Ti, 10 Ti, 11 Ti.

Subject to Modification