

Electric Piston Heater

P1a

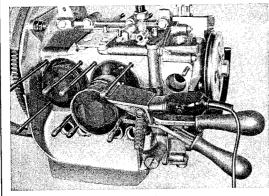

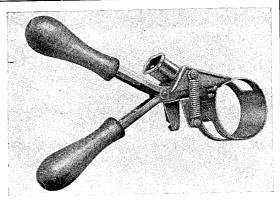

Example of use

Tool


Use: To heat pistons to remove and install piston pins


See operation 2 EN

Subject to change

Piston Pin Mandrel

P 2

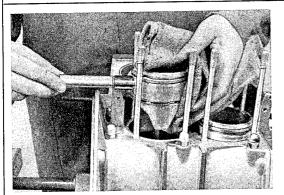

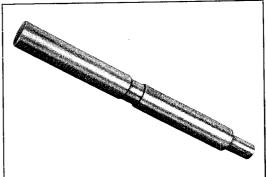

Example of use

Tool

Use: To remove and install piston pins

See operation 2 EN

Subject to change