


P 66



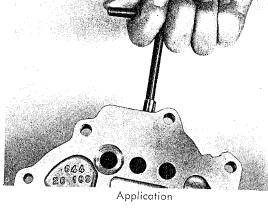


Use: To remove selector rod lock bushings from intermediate plate


See: Workshop Manual, group R, operation 9 RA

Subject to change

Press Guide

P 67

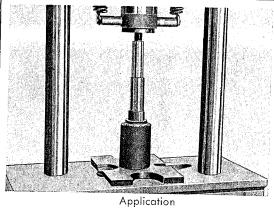

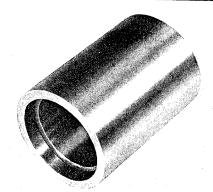

Tool

Use: To remove roller bearing from pinion shaft

See: Workshop Manual, group R, operation 6 RA

Subject to change