

WIRING DIAGRAM


356 C


SL 5

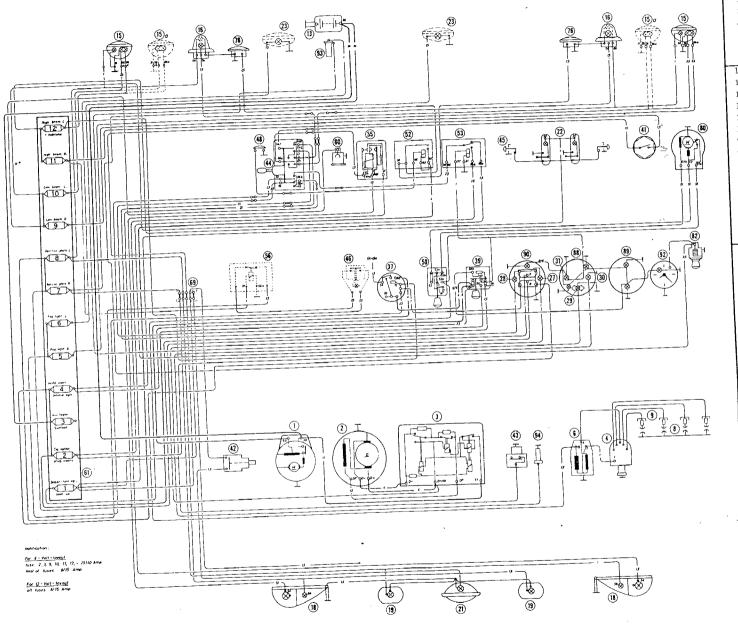

	. 1	c -	- orațor		
2			nerator		
3	- 1		gulator stributor		
4			The state of the s		
l .	3	Ų,	nition coil		
	3		ark plug		
	9		ark plug socket	_	
1:	- 1		ttery		
1			eadlight	w	ith parking light
ı	5 a		ealed Beam		. S. AExport
	6		gnal light ake tail light		
1	8		icense plate light		17
	9		ack up light		
1	21	D.	nterior light, Coupé 2 ea	l	
1 2	22		abriolet, Hardtop 1 ea.		
١.		1	abitotos,	١,	ptinal
	23	r	og lights Dil pressure warning light		combination inst.
1	27		Generator warning light		Combination inst.
ı	28	'	Turn signal indicator light	1	n tachometer
	29	,	ligh beam indicator light		on tachometer
ì	30	1 :	Parking light indicator light		on tachometer
L	31	_		+	
1	37		ignition-starter switch		
-	39		Head light switch		
1	41		Brake light switch		
1	42		Back-up light switch	1	
-	43		Oil pressure switch	1	
ļ	44	1	Signal dimmer switch	1	
١	45	1	Door contact switches	1	-sing!
- 1	46	1	Fog light switch	١	optinal
١	48	1	Horn button	1	
- 1	50	1	Windshield wiper switch		
- 1	52		Horn relay	-	
Ì	53		Light signal relay		
ĺ	55	İ	Turn signal interrupter		tinal
Ì	56		Fog light relay	_	optinal
ı	60	1	Accessory socket		
- 1	61	Ì	Fuse box		
- 1	63	- 1	Forward wire loom		
	64	1	Battery ground strap		}
ļ	65	- 1	Instrument wire loom		į
	66		Rear wire loom		1
	6.7		Ignition cables		1
	69	Ì	Plug connector		
٠.	76		Two tone horn		' .
	80		Windshield wiper		1
	82	Ì	Cigarette lighter		
	83		Tachometer		
	89	1	Speedometer		,
	90		Combination instrument		1
	92		Electric clock		1
	93		Fuel gauge sender		
	93		Oil thermometer sender		}
	1 144	•			

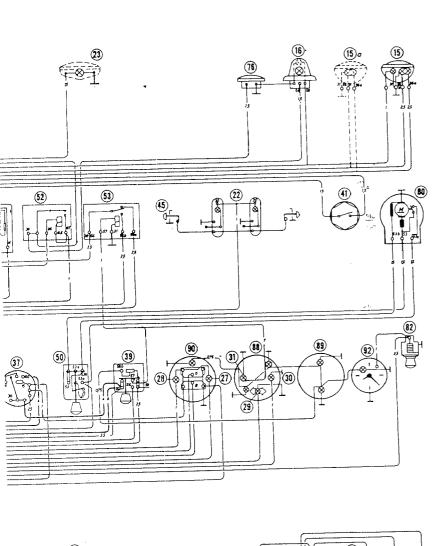

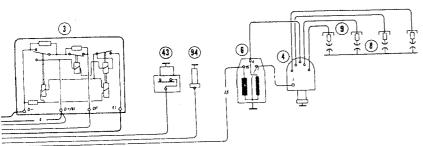



		I to m	Remark
No). 	Item	
1		Starter	
2	2	Generator	
	3	Regulator	
4		Distributor	•
6		Ignition coil	
8		Spark plug Spark plug socket	
9 13		Battery	
1		Headlight	
	5 a	Sealed Beam	with parking light
	6	Signal light	U.S.AExport
	8	Brake tail light	
, 1	9	License plate light	t e
2	1	Back up light	
2	22	Interior light, Coupé 2 ea.,	1
		Cabriolet, Hardtop 1 ea.	ontinal
1	23	Fog lights	optinal Combination inst.
i i	27	Oil pressure warning light	Combination inst.
i	28	Generator warning light Tum signal indicator light	on tachometer
1	29	High beam indicator light	on tachometer
1	30	Parking light indicator light	on tachometer
L	31	<u></u>	
1	37	Ignition-starter switch	
1	39	Head light switch	1
	41	Brake light switch	
	42	Back-up light switch Oil pressure switch	
	43	Signal dimmer switch	
	44 45	Door contact switches	
	46	Fog light switch	optinal
	48	Horn button	
1	50	Windshield wiper switch	
	52	Horn relay	
1	53	Light signal relay	
	55	Turn signal interrupter	ino1
	56	Fog light relay	optinal
ſ	60	Accessory socket	
١	61	Fuse box	
	63	Forward wire loom	
١	64	Battery ground strap	
-	65	Instrument wire loom	
	66	Rear wire loom	
1	6,7	Ignition cables	
	69	Plug connector	
Ì	76	Two tone horn	
	80	Windshield wiper	
	82	Cigarette lighter	
	83	Tachometer	
	89	Speedometer Combination instrument	
	90	Electric clock	
	92 93	Fuel gauge sender	
	93	Oil thermometer sender	
	94	On thomas	