
WIRING DIAGRAM 356B

Starting from numbers below


Coupé description dentification Nr. 117 601 Cabriolet identification Nr. 155 601 Hardtop identification Nr. 201 601

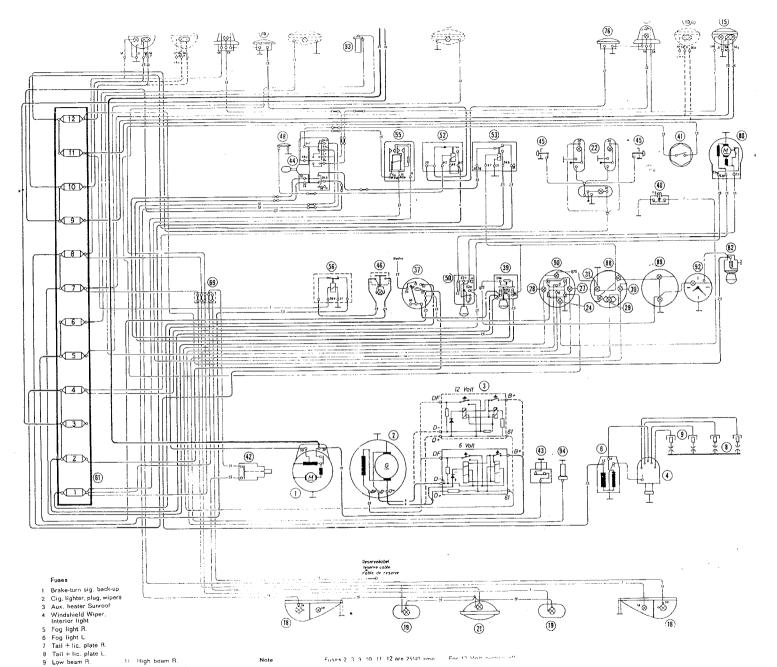


to the bear of

1	Starter	
2	Generator	
3	Regulator	
4	Distributor	
6	Ignition cail	
8	Spark plug	
9	Spark plug socket	
13	Battery	
15	Headlight with parking light	
15a	Sealed Beam	USA-Export only
16	Signal light	USA with parking lig
18	Brake tail light	
19	License plate light	
21	Back up light	
22	Interior light	Coupe 2 ea., Cabrio Hardtop 1 ea.
23	Fog lights	optional
24	Hand brake warning light {	
27	Oil pressure warning light	Combi-Instrument
28	Generator warning light	
29	Turn signal indicator light (
30	High beam indicator light	on tachometer
31	Parking light indicator light	
37	Ignition-starter switch	
39	Head light switch	
40	Hand brake indicator switch	
41	Brake light switch	
42	Back-up light switch	
43	Oil pressure switch	
44	Signal dimmer switch	
45	Door contact switches	
46	Fog light switch	optional
48	Horn button	•
50	Windshield wiper switch	
52	Horn relay	
53	Light signal relay	
55	Turn signal flasher	
56	Fog light relay	optional
61	Fuse box	·
63	Forward wire loom	
64	Battery ground strap	
65	Instrument wire loom	
66	Rear wire foom	
67	Ignition cables	
69	Plug connector	
76	Twin horns	
80	Windshield wiper	
82	Cigar lighter	not with 644.46
88	Tachometer	
89	Speedometer	
	Combination instrument	
90		
90 92		not with 644.46
	Electric clock Fuel gauge sender	not with 644.46

No. Item

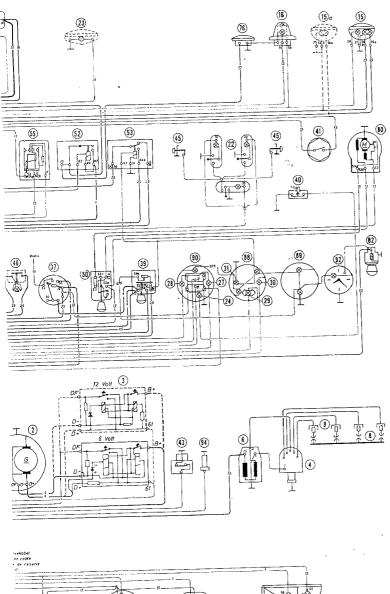

No.	Item	
1	Starter	
2	Generator	
3	Regulator -	
4	Distributor	
6	ignition coil	
8	Spark plug	
9	Spark plug socket	
13	Battery	
15	Headlight with parking light	
15a	Sealed Beam	USA-Export only
16	Signal light	USA with parking light
18	Brake tail light	
19	License plate light	
21	Back up light	
-	Interior light	Coupe 2 ea., Cabrio 1 e
22	Interior light	Coupe 2 ea., Cabrio 1 e Hardtop 1 ea.
23	Fog lights	optiona!
24	Hand brake warning light	
27	Oil pressure warning light	Combi-Instrument
28	Generator warning light	
29	Turn signal indicator light	(
30	High beam indicator light	on tachometer
31	Parking light indicator light	
-	Ignition-starter switch	
37	Head light switch	
39	Head light switch Hend brake indicator switch	
40		
41	Brake light switch	
42	Back-up light switch	•
43	Oil pressure switch	
44	Signal dimmer switch	
45	Door contact switches	optional
46	Fog light switch	Options:
48	Horn button	
50	Windshield wiper switch	
52	Horn relay	
53	Light signal relay	
55	Turn signal flasher	optional
56	Fog light relay	options.
61	Fuse box	
63	Forward wire loom	
64	Battery ground strap	
65	Instrument wire loom	
66	Rear wire loom	
67	Ignition cables	
69	Plug connector	
76	Twin horns	
80	Windshield wiper	not with 644.46
82	Cigar lighter	nut with 044.40
88	Tachometer	
89	Speedometer	
90	Combination instrument	
92	Electric clock	not with 644.46
93	Fuel gauge sender	



11, 12 are 25/40 amp. 8/15 amp.

For 12 Volt system all fuses are 8/15 amp.