

Single Sliding Door Installation Manual

Manual Closing

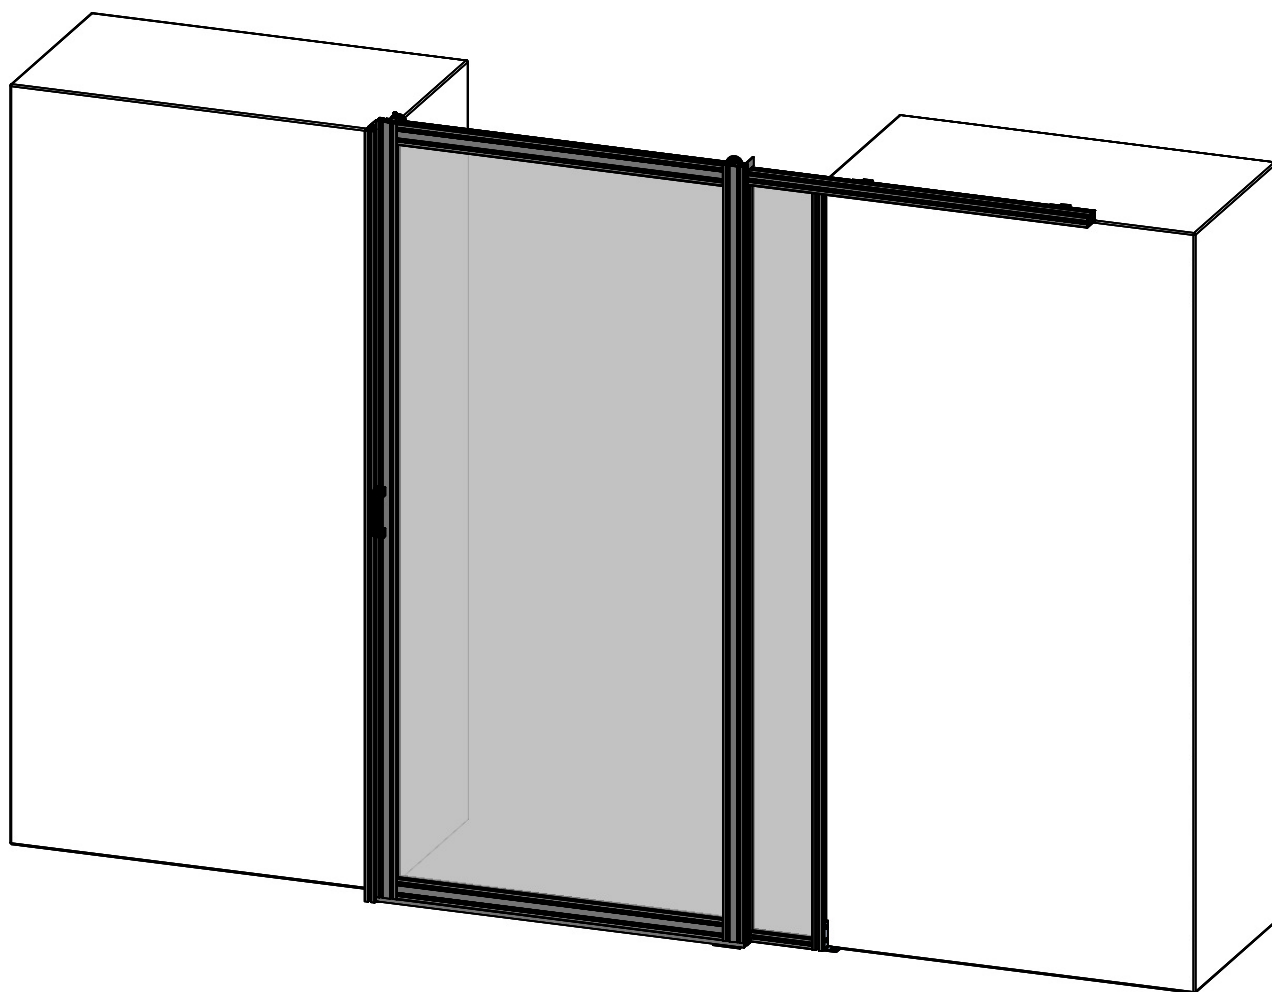


Table of Contents

	PAGE NUMBER
SAFETY & HANDLING	2
TOOLS LIST	2
PARTS LIST	3
STEP 1	5-7
STEP 2	8-9
STEP 3	10-14
APPENDIX A	15

Safety & Handling

When unpacking the Double Sliding Doors and components, be careful not to scratch the aluminum frame and the polycarbonate. They have been carefully packaged and inspected before crating. Inspect all components and be sure all required hardware is included for assembly. Reference the Packing Slip.


Use the proper tools for all assembly procedures as well as installation of the doors in and around the cabinets.










All movement and assembly requires two persons for safety and protection of the doors being installed and the equipment around them.

Tools List

Tape Measure	Step Ladder	Extension Cord	Hammer	Rubber Mallet	Level
Phillips Driver	$\frac{5}{16}$ " Hex Nut Driver	$\frac{3}{16}$ " T-Handle Hex Wrench	$\frac{5}{32}$ " T-Handle Hex Wrench	$\frac{1}{8}$ " Allen Wrench	$\frac{9}{32}$ " Drill Bit
Drill	$\frac{3}{8}$ " open end wrench	Small Crescent wrench	Pencil	Fine Point Marker	String or Straight Edge
Vacuum	Amonia free Cleaner	Rags	Scissors	Knife	
Floor Tile Installations:	$\frac{1}{4}$ " Masonry Bit	Hammer Drill			


ITEM NO.	PART NUMBER	QTY	DESCRIPTION
1	SSD-6000-SPR_IM	1	Side Panel
2	SSD-6000-SPL_IM	1	Door Stop
3	SSD-6000-DP_IM	1	Door Panel
4	SSD-6000-H_IM	1	Header Assembly
5	HDW-403008	1	Roller Door Guide
6	KIT-000001	2	Formed Mounting Bracket Kit
7	HDW-403013	1	Outside Door Retainer Assy.
8	HDW-403012	1	Inside Door Retainer Assy.
9	HDW-400499	4	Floor Mount Bracket Assy.
10	HDW-401703	2	Rectangle End Cap
11	HDW-401801	4	Door Handle
12	HDW-300306	3	Rubber T-Bulb Gasket
13	HDW-300309	2	Panel Gasket

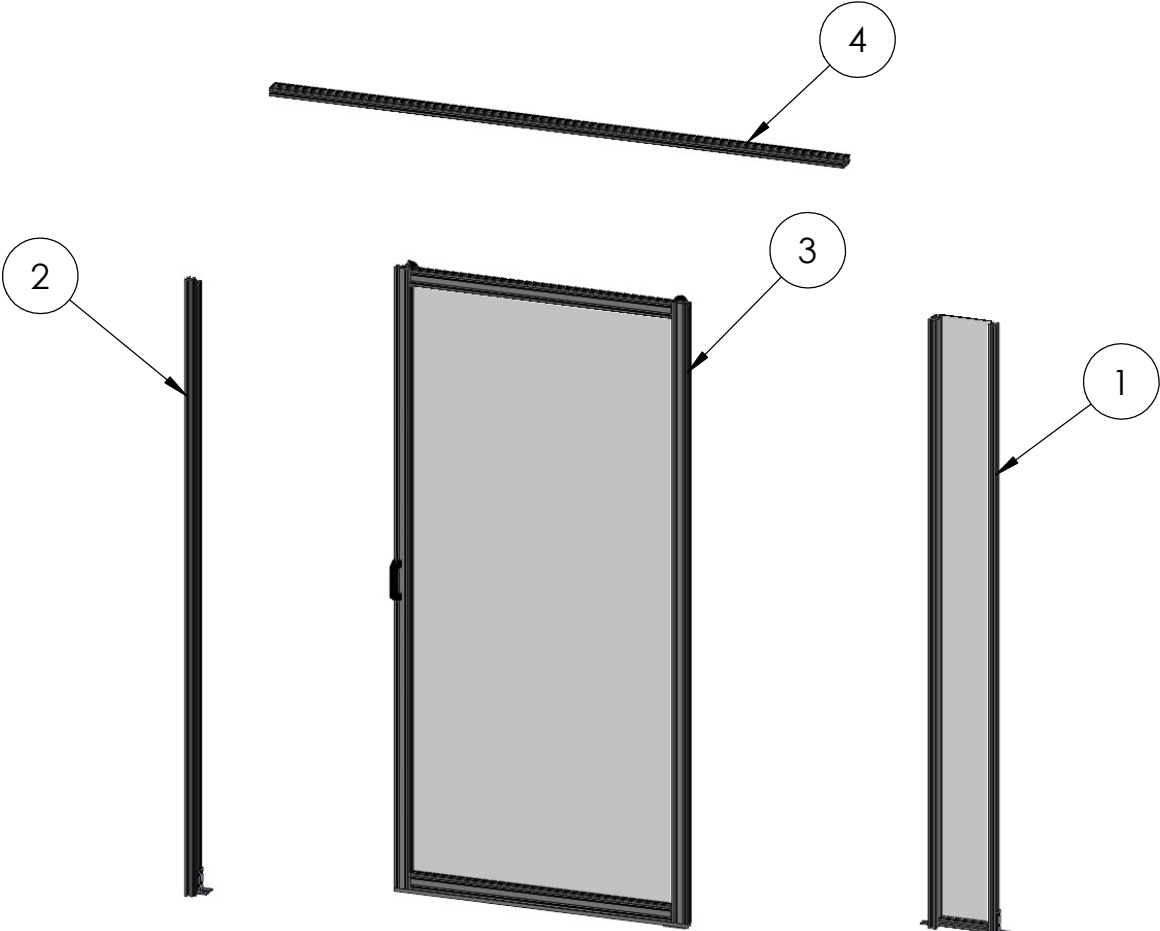

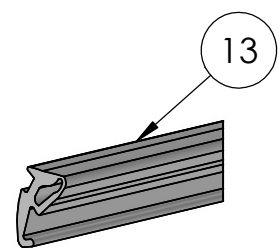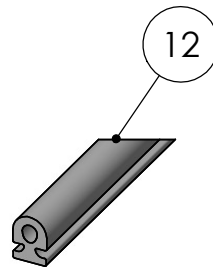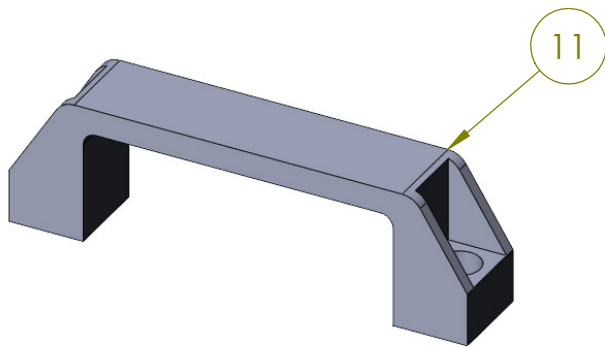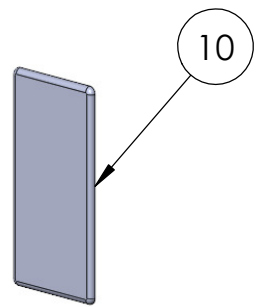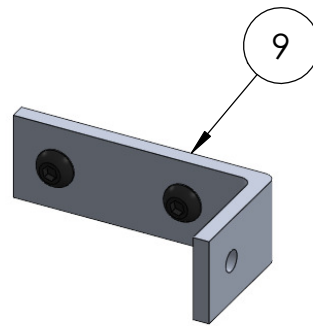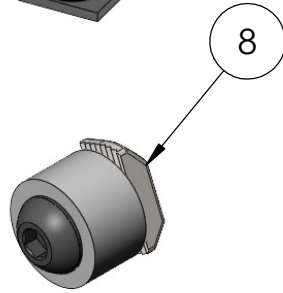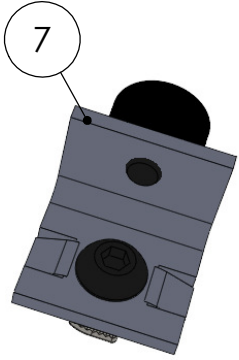
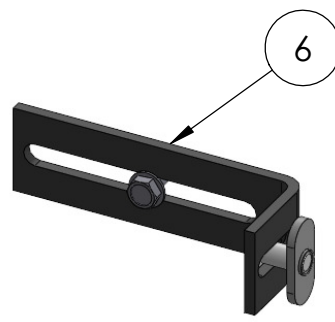
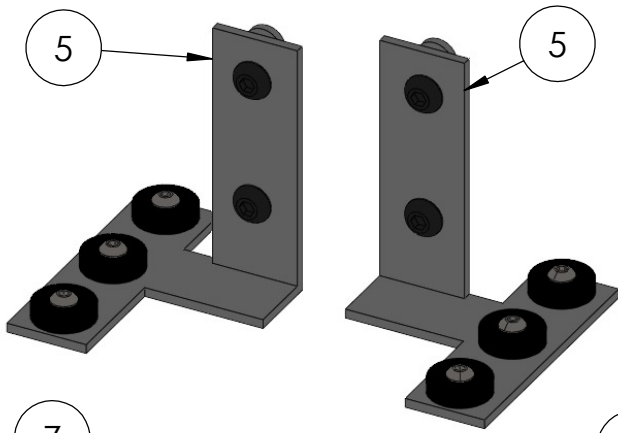


Insert Foam Bulb(12) in the back slot (Between the side panel and the cabinet).


Caution- Foam Bulb will attract dirt, keep it clean.

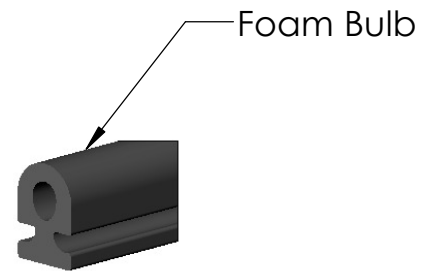


Place Foam Bulb in slot
to provide seal

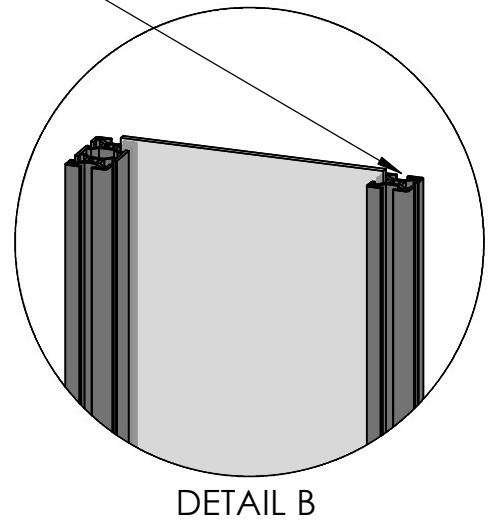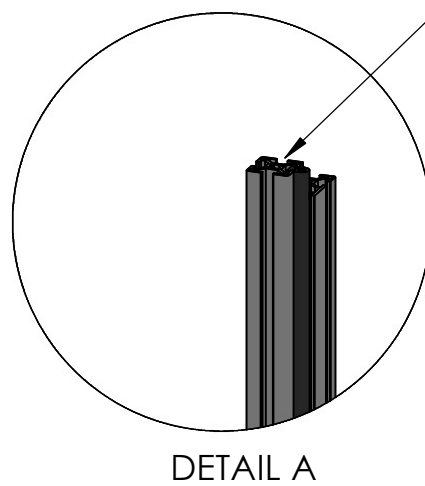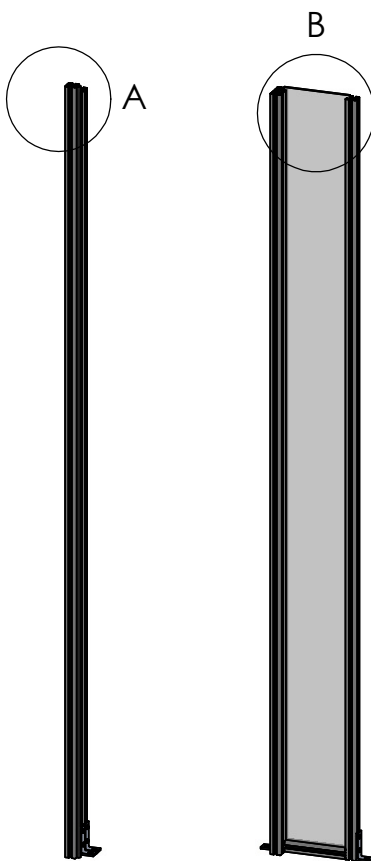


1. Slide the Header onto the Side Panel and Door Stop.
2. Make sure the front is facing up while laying on the floor.
3. Ensure the Header is even with the Side Panels.
4. Using the holes provided in the Header secure the Side Panels to the Header using a 3/16" T-Handle Hex driver.
5. For configurations with two side panels, do the same instruction for each side. (See Appendix A and continue with install instructions noting that the Door Stop is a Side Panel)

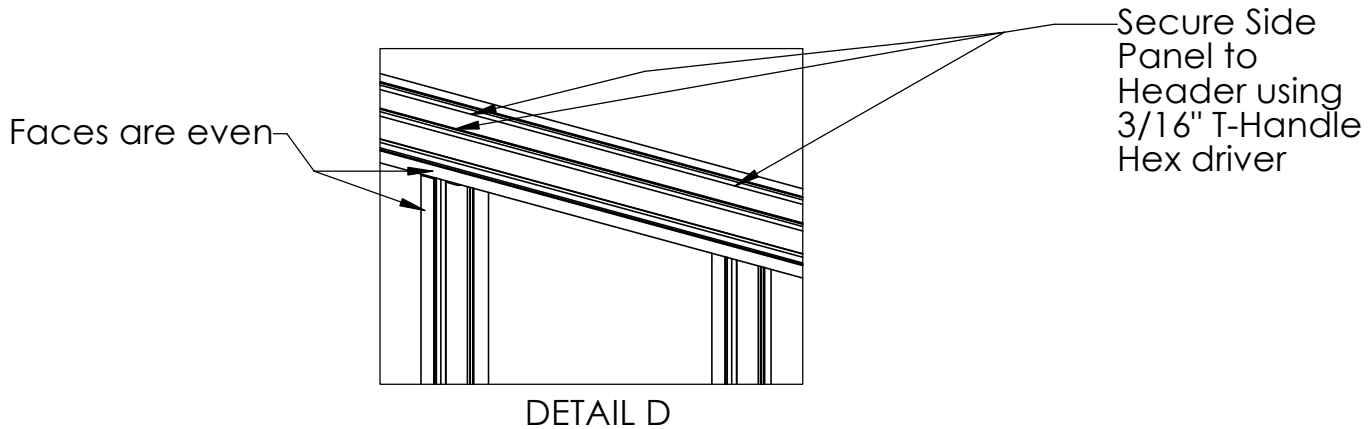



1. Insert Rubber Gasket(13) into the gap between the Header and Side Panel(s).
2. Using 2 people, stand up the Door Frame and remove protective film from the backside of the Side Panel(s).

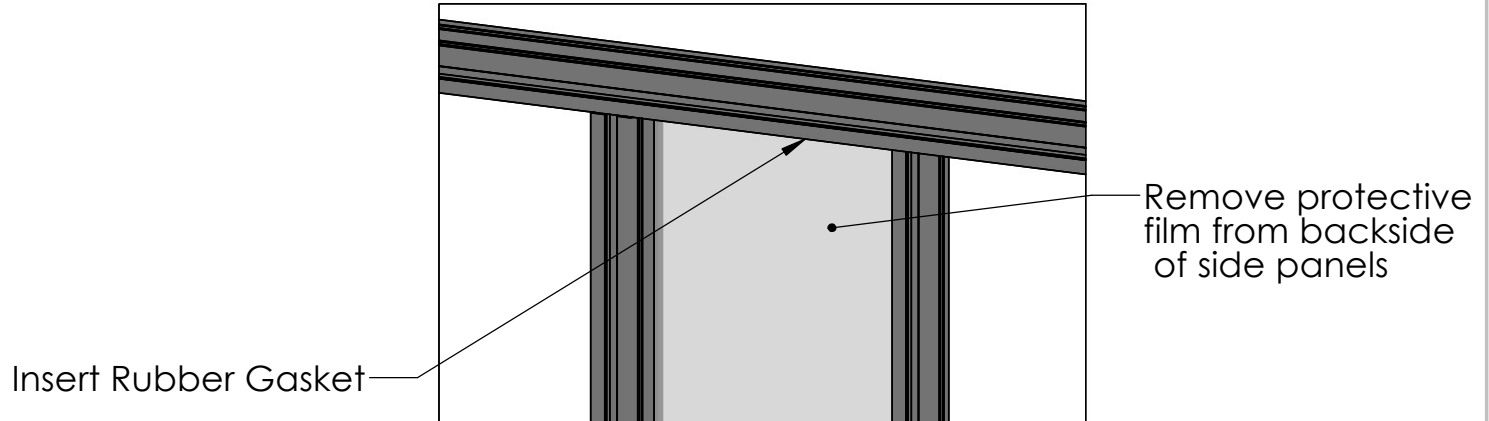



DETAIL E

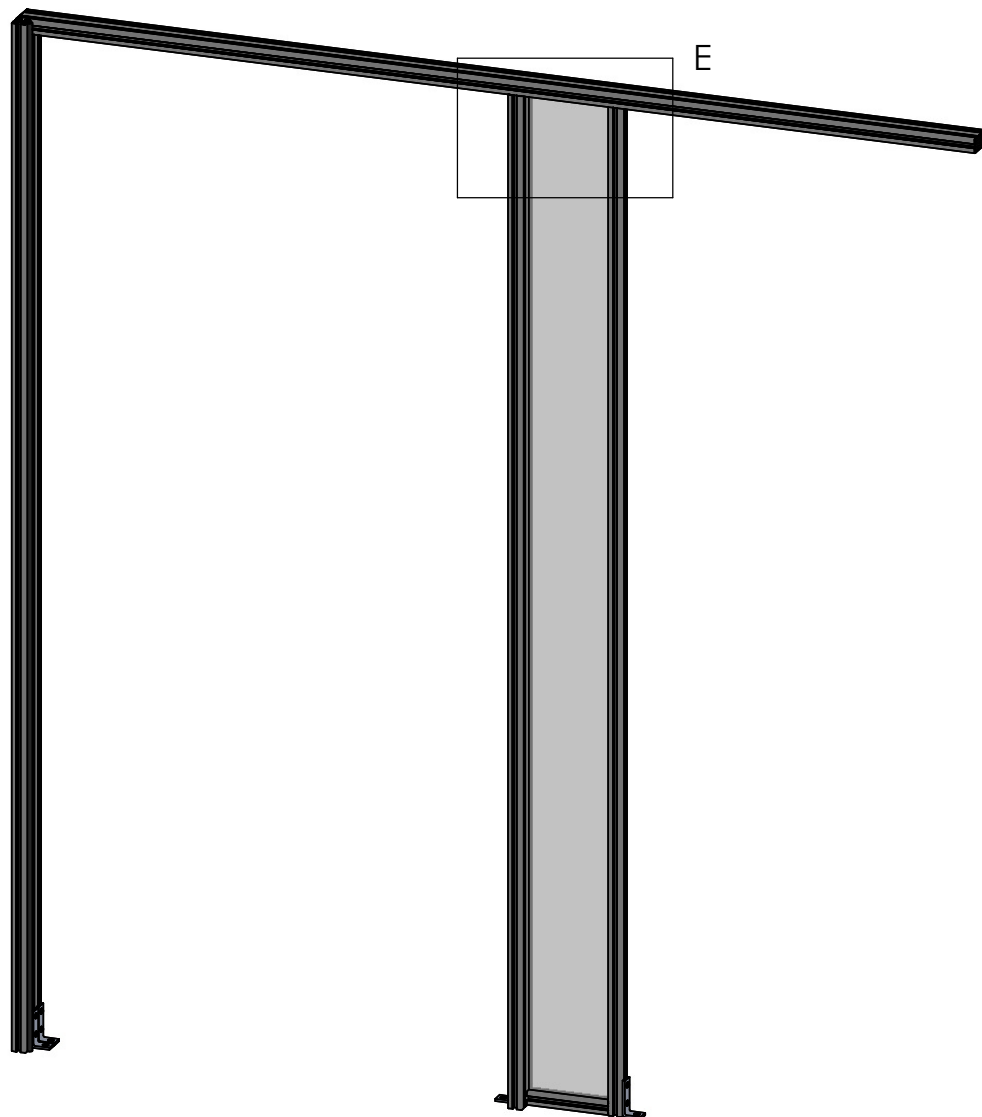

1. Align the Door to the opening.
2. Secure the Door Header to the cabinet using the Formed Mounting Bracket(6) and associated self drilling screws.
3. Plumb the Side Panels and secure the Floor Mounting Brackets(9) to the floor.
NOTE: Do not compress the Foam Bulb to tight against the cabinet.
4. Level the Header by adjusting the Floor Mount Brackets up/down. See next page for inserting Floor Mount Brackets and Roller Door Guides.
NOTE: It is critical that the Header is level for the door to operate properly

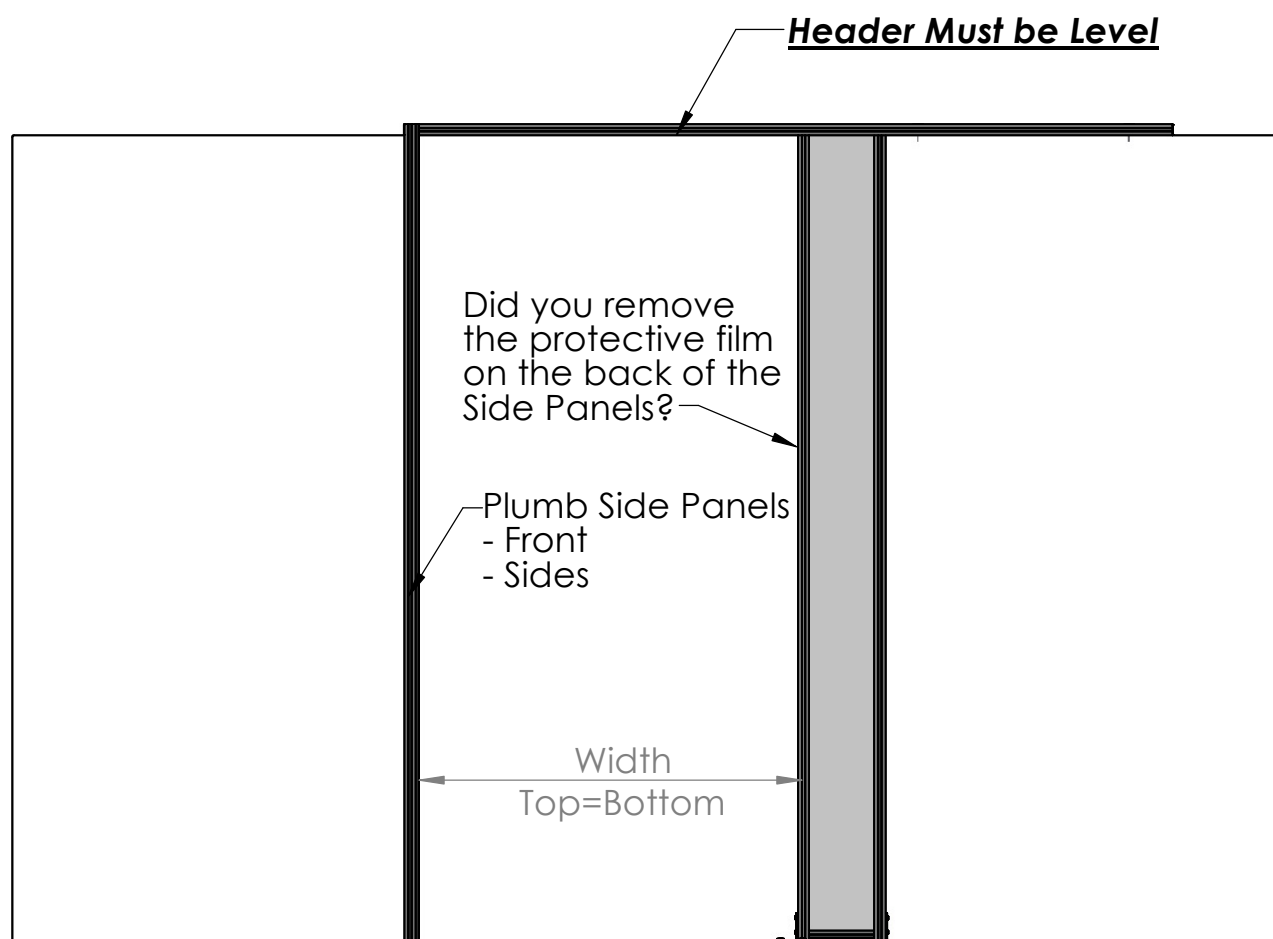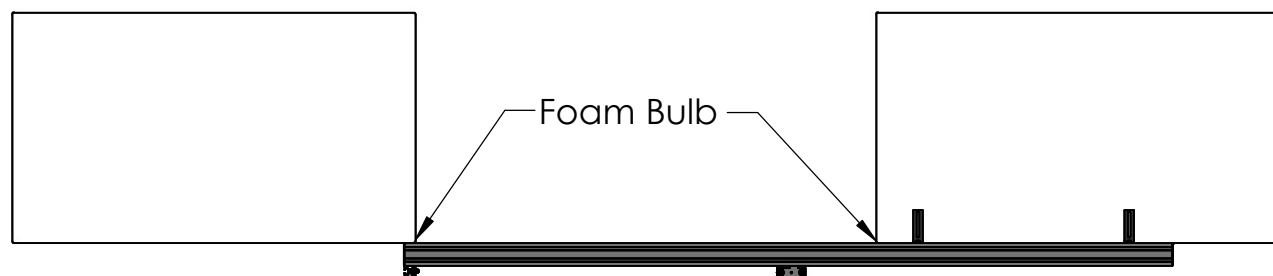

1. Attach the Rolling Door Guide(5) and Floor Mount(9) to the Side Panel and Door Stop as shown below using 5/32" T-Handle Allen wrench.
2. Ensure the Door Guide is flush with the bottom of the Side Panel and pushed towards the back of the door.
3. Place two Floor Mount Brackets on the Door Stop as shown.
4. Adjust the Floor Mount Brackets as necessary to ensure the Header is level.
5. Secure the Floor Mount Brackets to the floor.

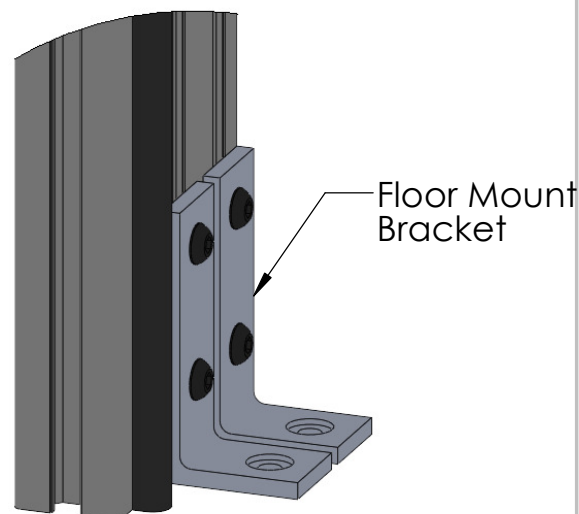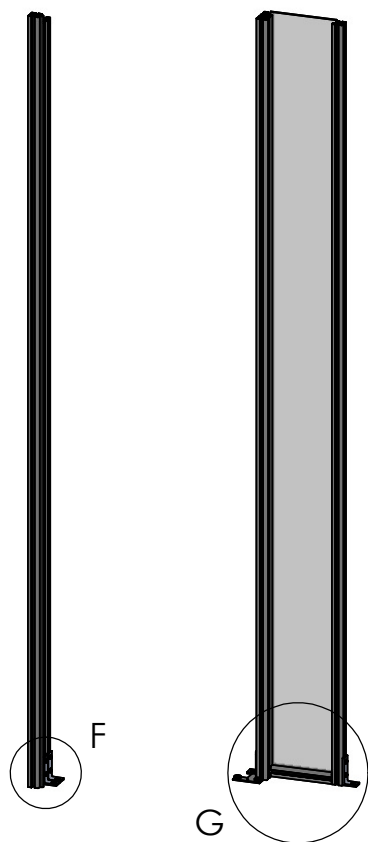

Floor Mount Bracket


DETAIL F

Door Stop View

Push Door Guide Bracket to back of the slot towards the Floor Mount Bracket

Floor Mount


Flush with bottom of Side Panel

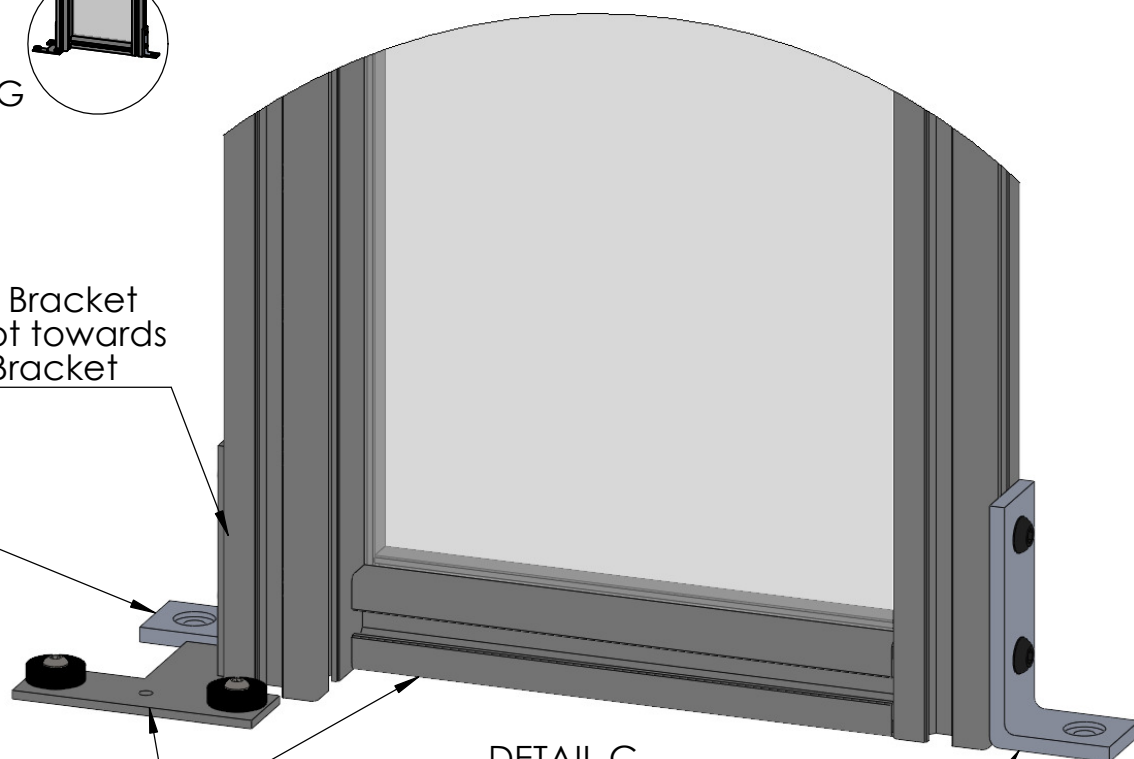


DETAIL G

Floor Mounts
2 per Side Panel

1. Loosen Inside Door Retainer(8) on the Door and slide it down and lightly secure.
2. Insert Handles(11) on the Front and Back Side of the door.
3. Place Door onto the Door Frame.

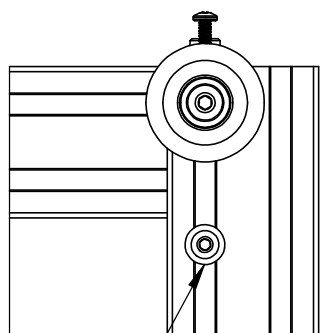


Inside Door
Retainer
(Move down and
lightly secure)

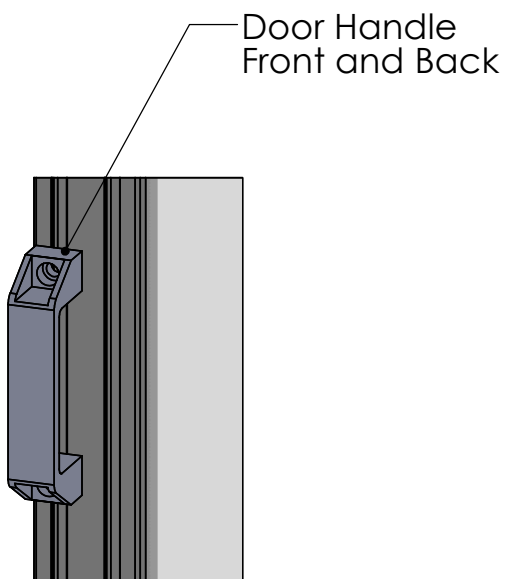

Door Handle
Front and Back


K

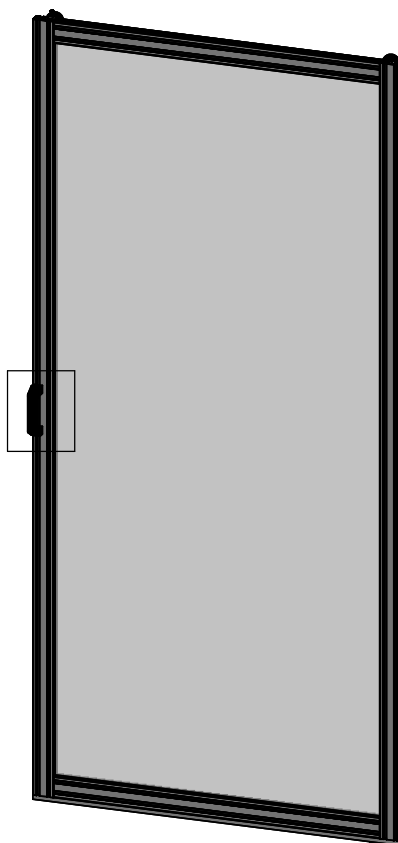


DETAIL K

1. Attach the Outside Door Retainer(9).
2. Slide the Outside Door Retainer up to 1/64" below the bottom of Header. This needs to be close to the bottom of the Header, but cannot touch or rub on the bottom of the Header.

Insert Outside Door Retainer.
See Note 2 above

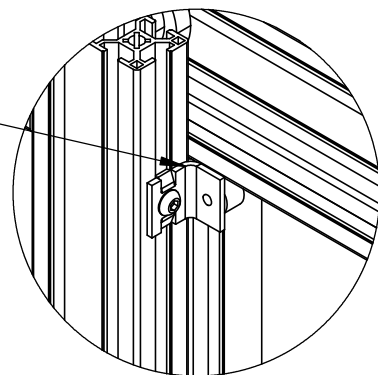


DETAIL L

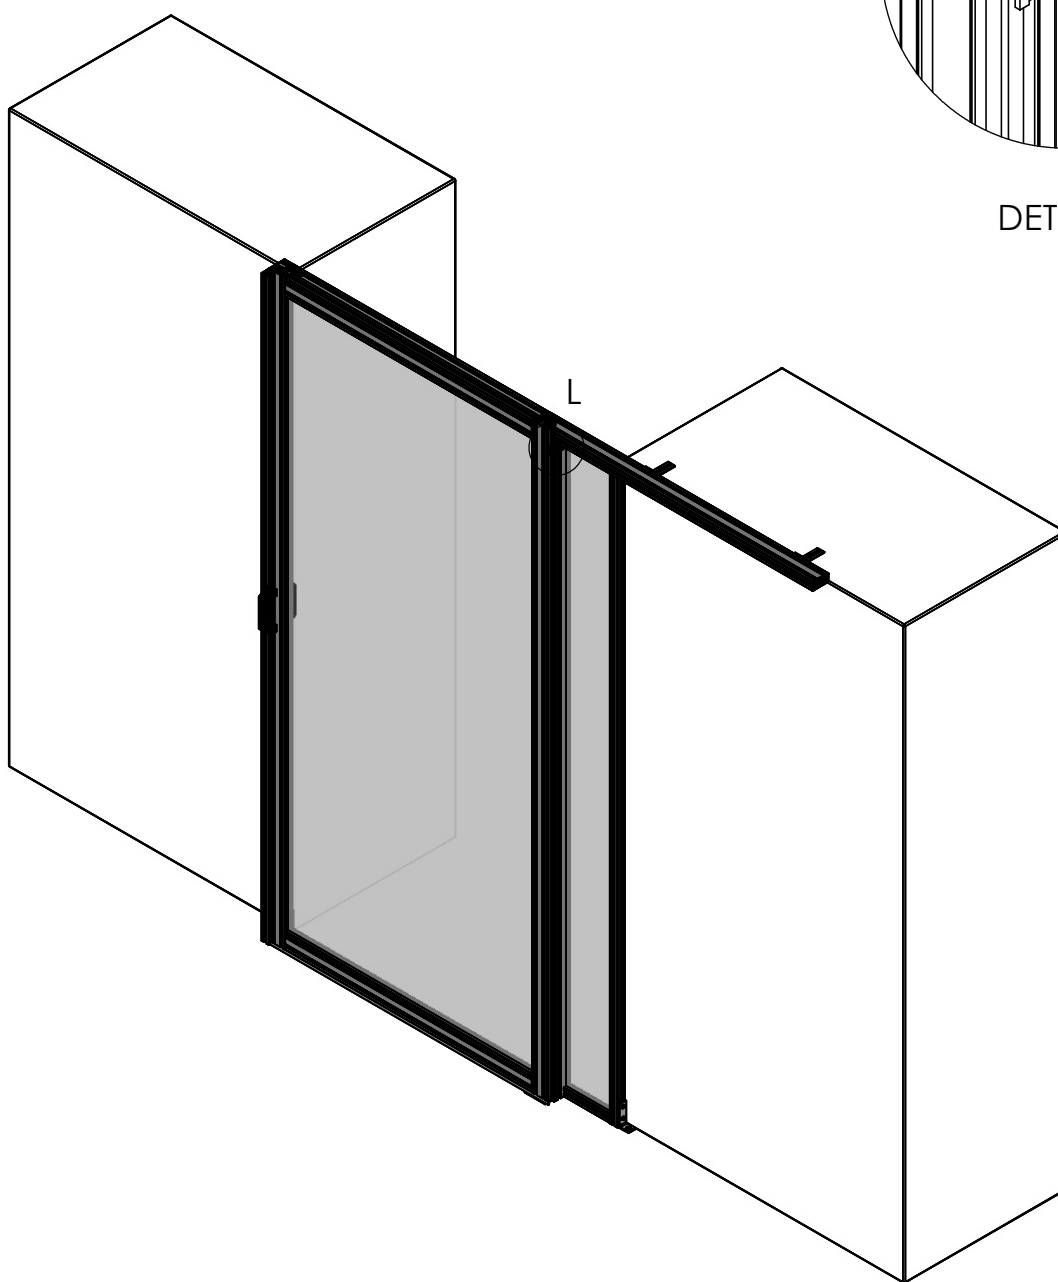


1. Slide the Inside Door Retainers up to 1/64" below the bottom of the Header. They cannot touch or rub on the bottom of the Header, but need to be as close as possible for proper door operation.



DETAIL M

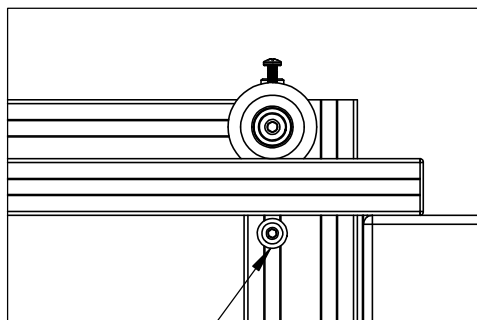


Slide Inside Door Retainer
up close to bottom of Header
See Note 1 above

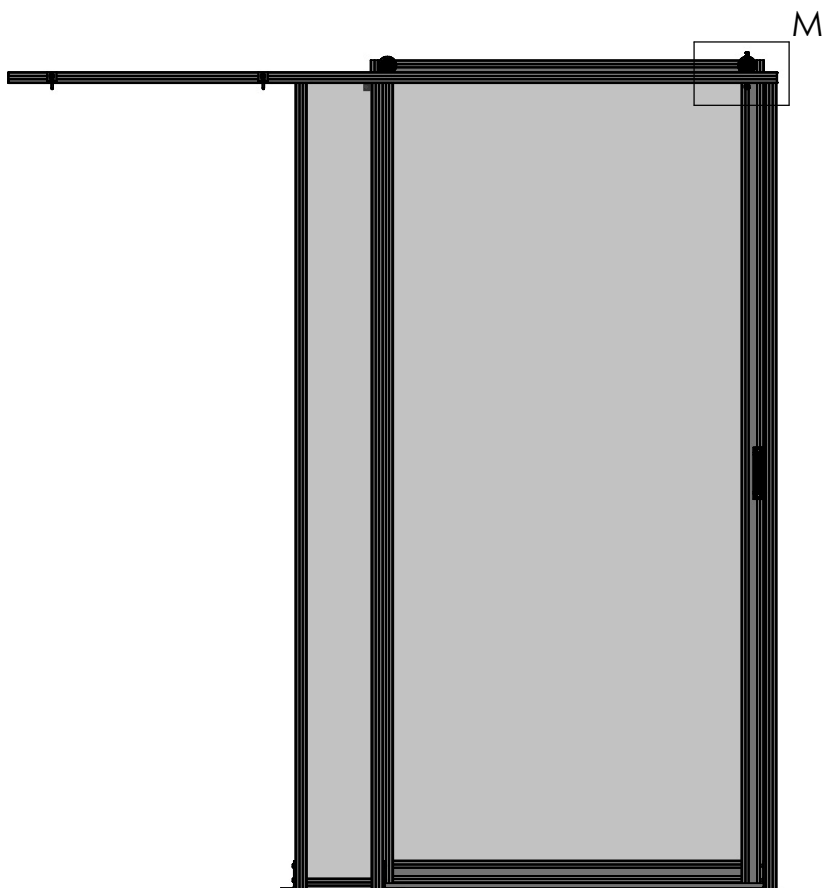

1. Adjust the gap between the Door and the Door Stop when the Door is closed by slightly loosening the Wheel Bracket and then turning the Wheel Adjusting screw.
Tighten Wheel Bracket when finished.
2. Adjust the Rolling Door Guide up to be parallel with the Door and as close to the door as possible without rubbing on the Door as it opens and closes.

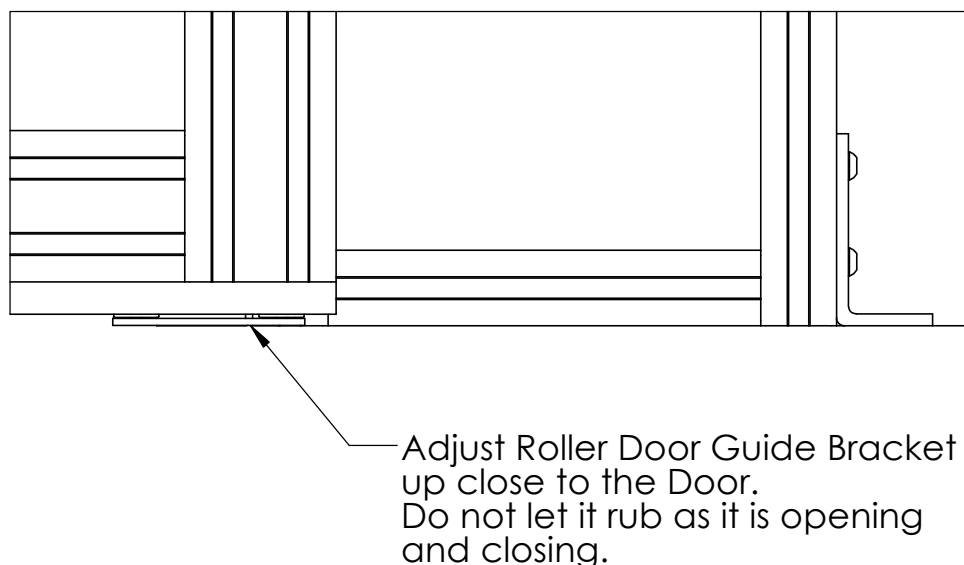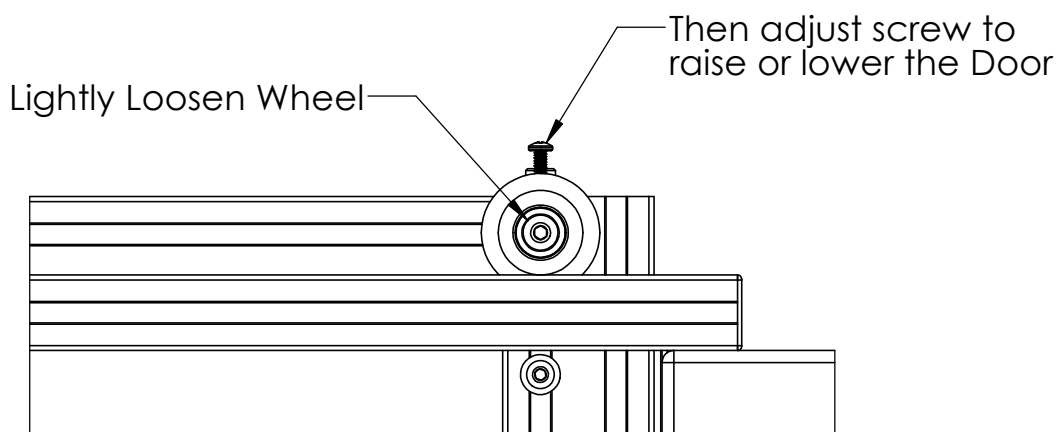

1. Verify operation of the Door and make adjustments as needed.

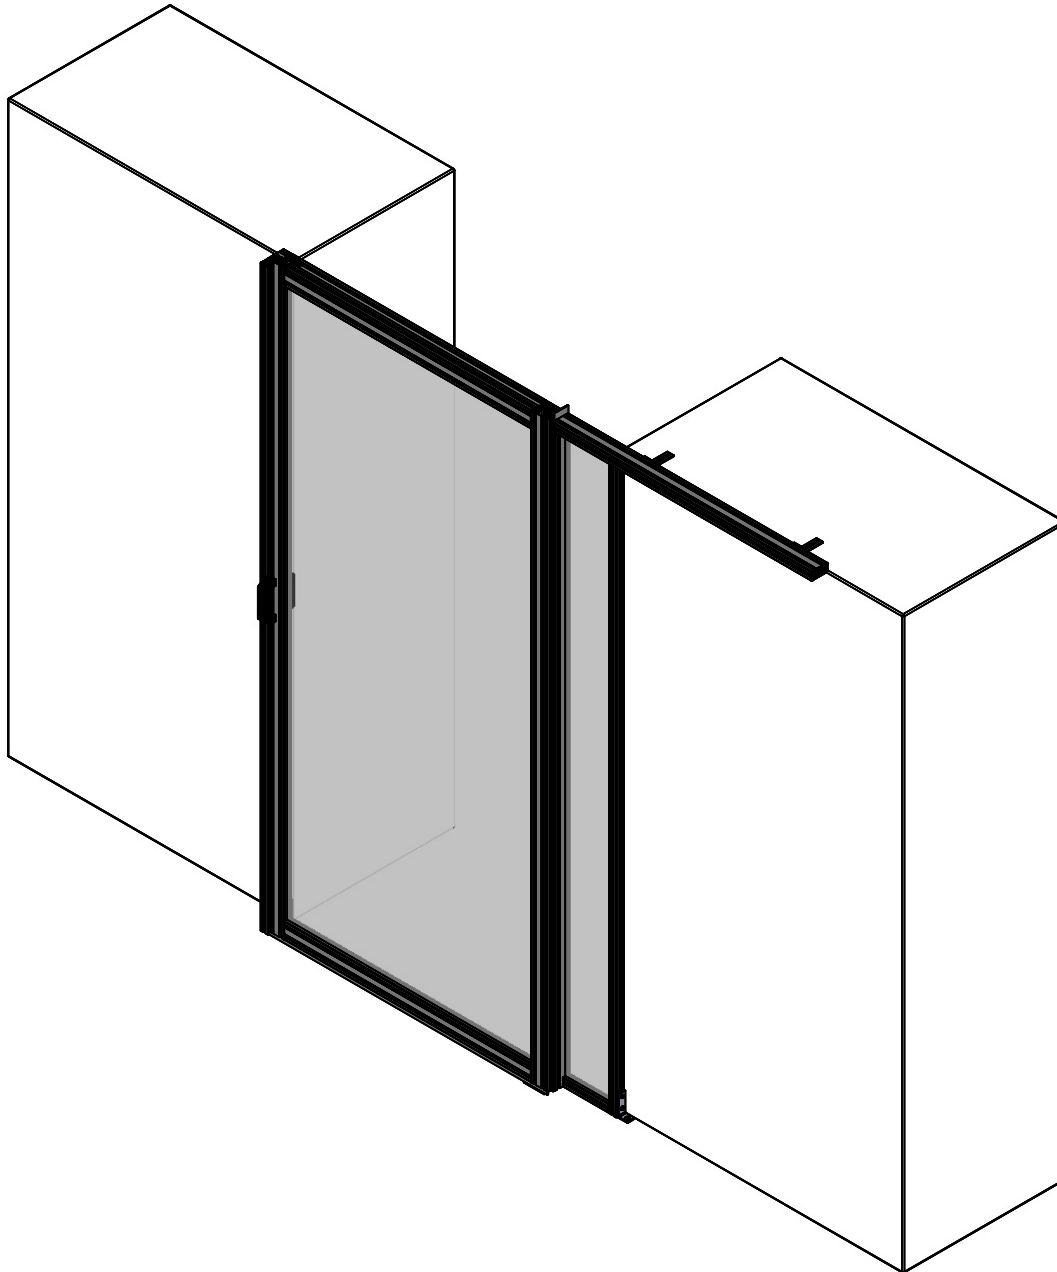

Appendix A

Configuration with Two Slide Panels

