

Single Sliding Door Installation Manual

Manual Closing



Safety and Handling

All items have been carefully packaged and inspected before crating. Please use caution when unpacking to prevent scratching or damage.

Before beginning installation, be sure to inspect all components and be sure everything is accounted for.

Door assembly requires two persons for safety and protection.


Tool List


Tape Measure	Step Ladder	Extension Cord	Hammer	Rubber Mallet	Level
Phillips Screw Driver	5/16 Hex Nut Driver	3/16 Hex Nut Driver	5/32 T-Handle Hex Wrench	1/8 Allen Wrench	9/32 Drill Bit
Drill	3/8 wrench	Pencil	Scissors	Utility Knife	Vacuum
* 1/4 Masonry Bit	* hammer Drill	Rags	Ammonia free cleaner		
* <i>for installation into concrete floors</i>					

This installation manual is for a **RIGHT** sliding single sliding door. For left sliding doors install the same, but all illustrations will be reversed.

Item

No.	Part Number	Qty	Description
1	SSD-4000-H	1	Header Assembly
2	SSD-6000-SPR	1	Door Stop Post
3	SSD-4000-DP	1	Door
4	SSD-6000-SPL	1	Side Panel
5	KIT-000023(R or L)	1	Roller Door Guide, Right or Left
6	KIT-000001	1	Formed Mounting Bracket Kit (2 per kit)
7	KIT-000029	1	Outside Door Retainer Assembly
8	KIT-000006	1	Floor Mount Bracket Kit (4 per kit)
9	HDW-401703 KIT-000076 or	2	Rectangle End Cap
10	KIT-000077 or KIT-000078 or KIT-000079	1	Door Handle Kit
11	HDW-300111	1	Expanding Foam Seal

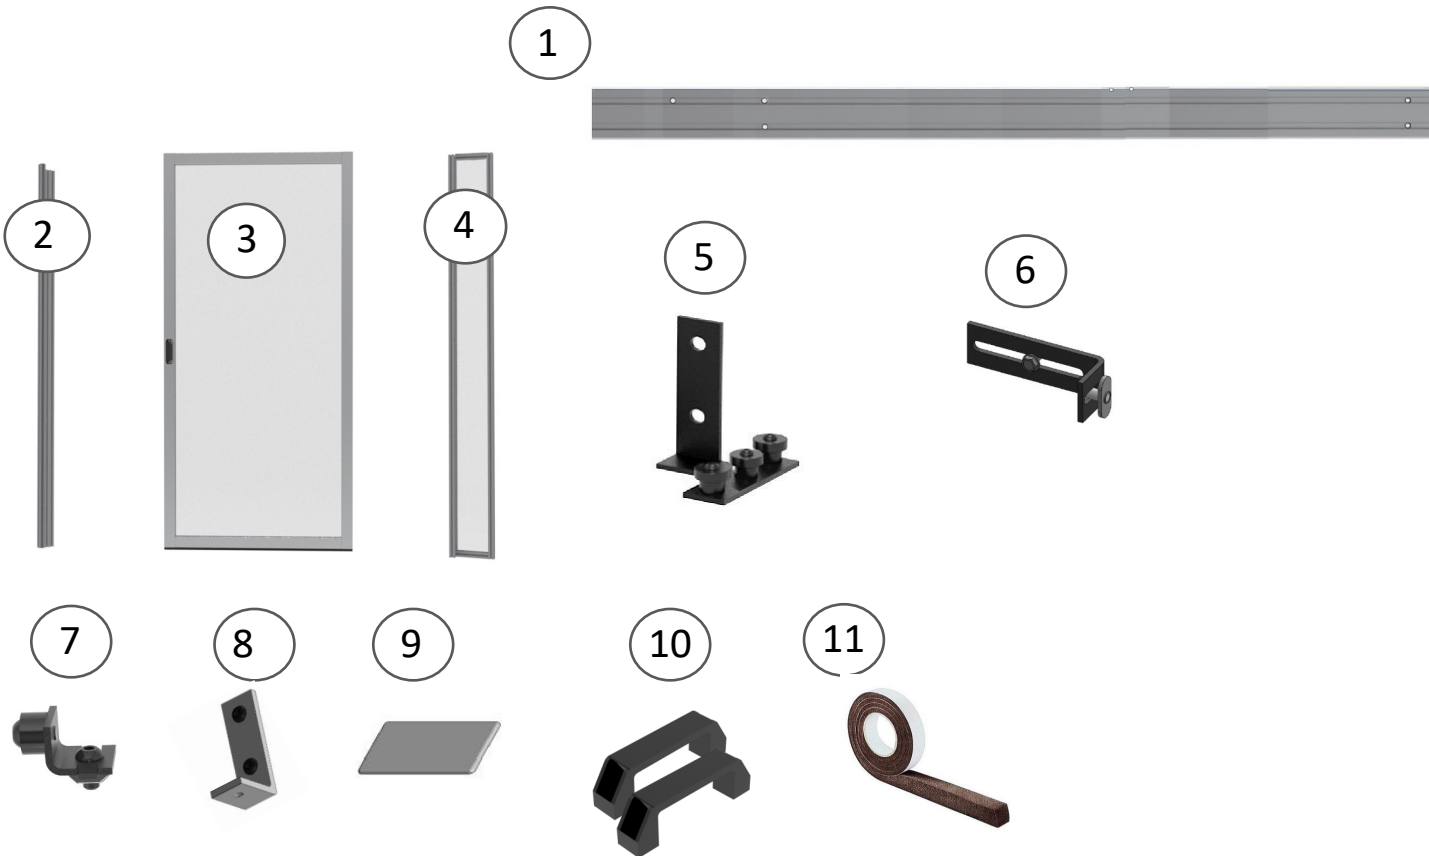


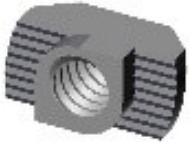


How to Install Drop-in Quarter Turn T-Nuts

1. Twist the screw a couple turns into the t-nut.
2. Insert the t-nut into the slot.

3. Turn screw clockwise to twist the t-nut into the slot.

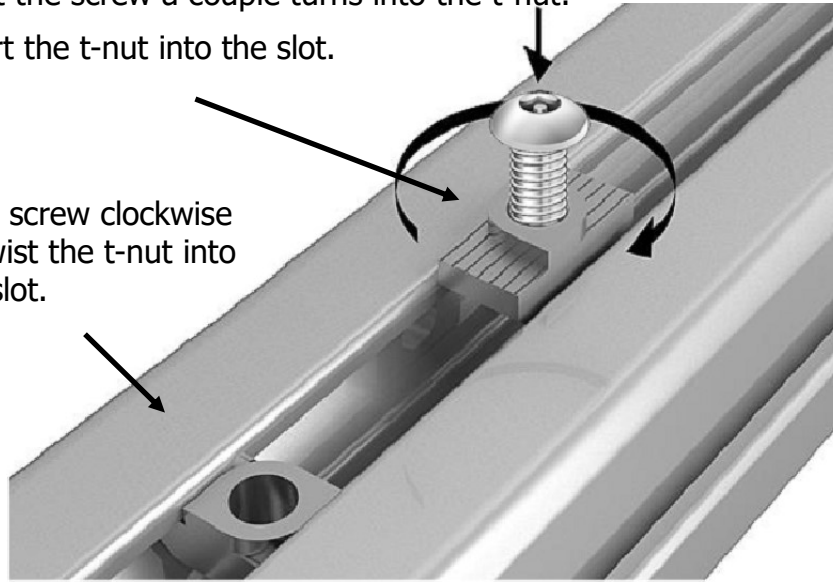

4. Make sure t-nut has fully turned 90 degrees in the slot.

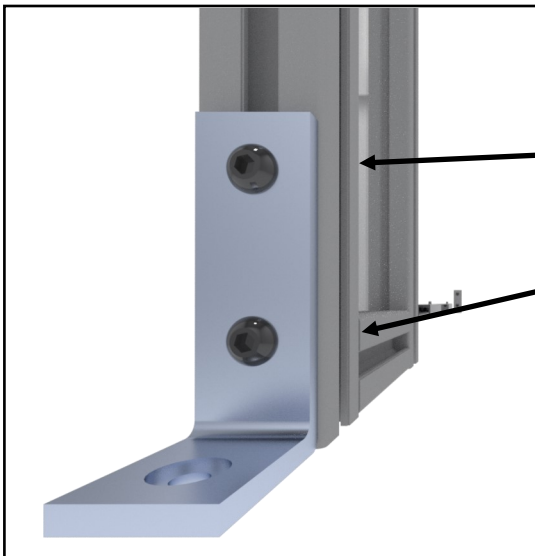

When installing brackets with more than one hole

1. Twist the screw in the first hole until the t-nut has turned, but do not to fully tighten.
2. Twist the screw in the second hole, making sure the t-nut turns, and fully tighten.
3. Return to the first screw and tighten.

NOTE: This installation manual is for a **RIGHT** sliding single sliding door. Left sliding doors installation is the same, but all illustrations will be reversed.

1


Unpackage Header



2

Remove Plastic Film from Side Panels and Attach Foam Tape

1. Remove the plastic film from the back of the side panel and the door stop. Do NOT remove the plastic film from the front until installation is complete.

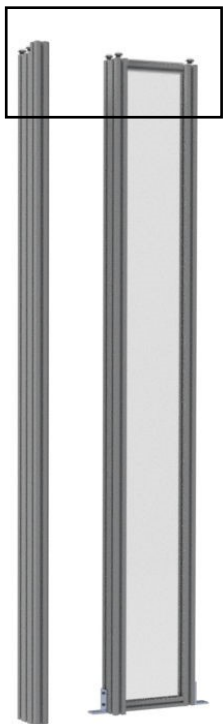


Detail A

2. Remove the paper backing from the foam tape and apply the foam tape to the back side of the side panel as shown in Detail A. The foam tape will create a seal between the side panel and the cabinet.



*Expanding
Foam Tape*

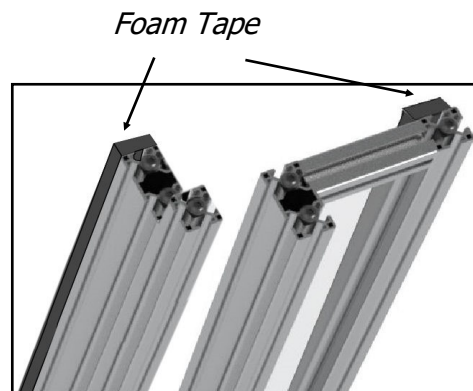


Foam Tape

Detail A

3

Slide Side Panels Into Header

1. Using two people, line the screws up with the slots under the header (Detail B) and slide the side panels into the header.

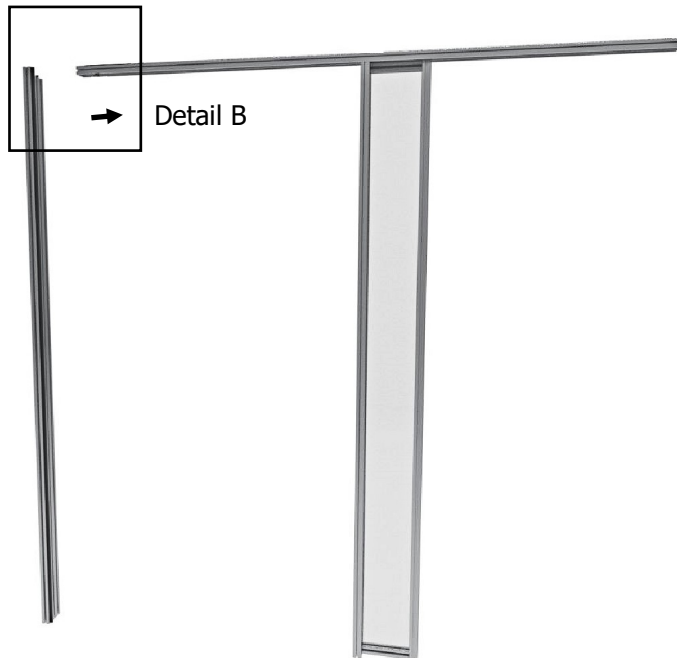

Detail B



Door post will be flush with the edge of the header

2. Slide the side panels into approximate position lined up with the access holes in the header.

4

Secure Side Panels to Header


1. Line the screws on the Stop Post up with the access holes. Tighten the screws using 3/16" T-Handle hex wrench. Repeat for the Side Panel.



5


Line Frame up to Cabinets and/or wall

With the Header attached, stand the frame up flush to the cabinet and adjust into position between the cabinets.

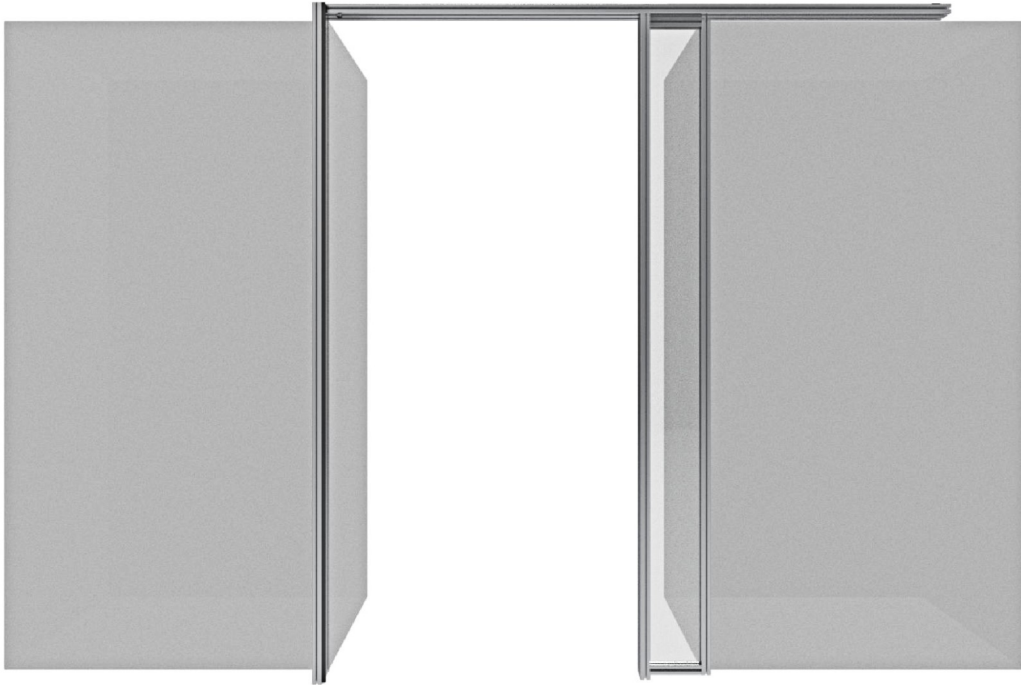

6

Attach the Header to the Cabinets Using the Formed Mounting Bracket Kit

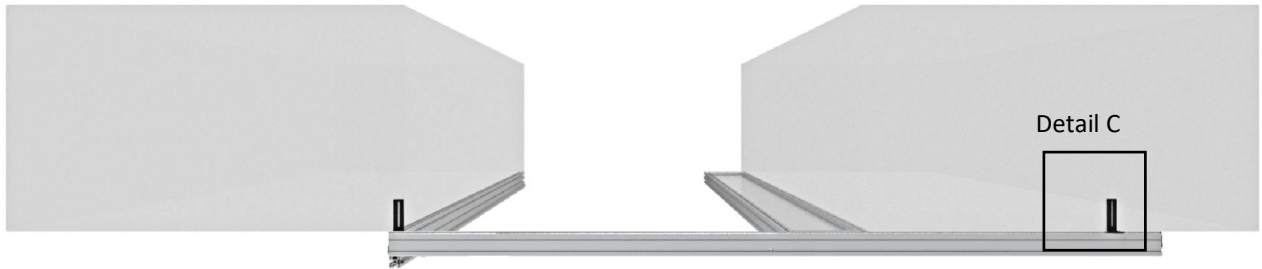

A -



B -



C -




D -



1. Attach the formed mounting bracket (A) to the header using a 1/4-20 x 3/8 screw (B) and a drop in quarter turn t-nut (C).




2. Attach the formed mounting bracket to the cabinet using the #10 x 3/4" self-tapping screw (D).

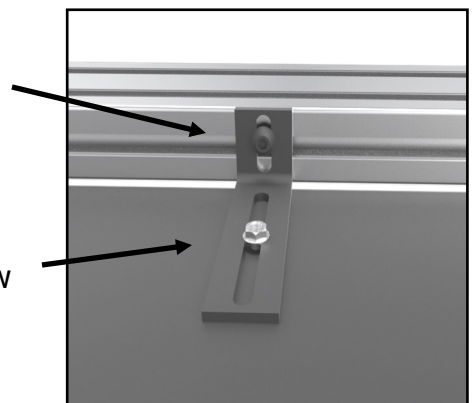

Detail C

7 Install Left Inside Floor Mount Bracket



1. Plumb the left post / side panel
2. Attach the floor mount bracket (A) to the inside of the left side panel using the 1/4-20 x 1/2 screw (B) and the t-nut (C). **The floor mount bracket should be installed in the slot closest to the cabinet** (Detail D).

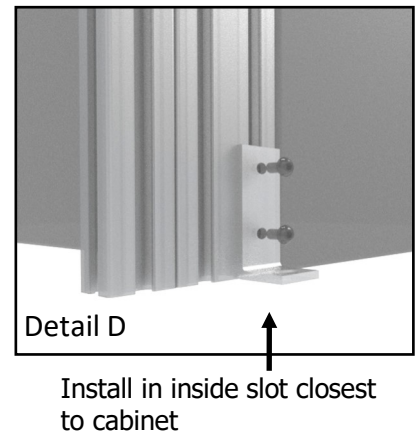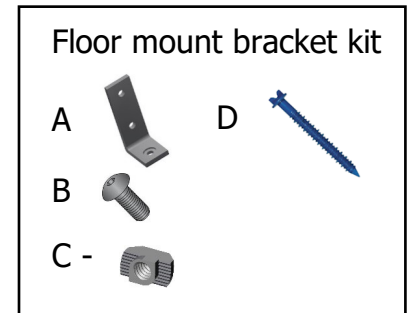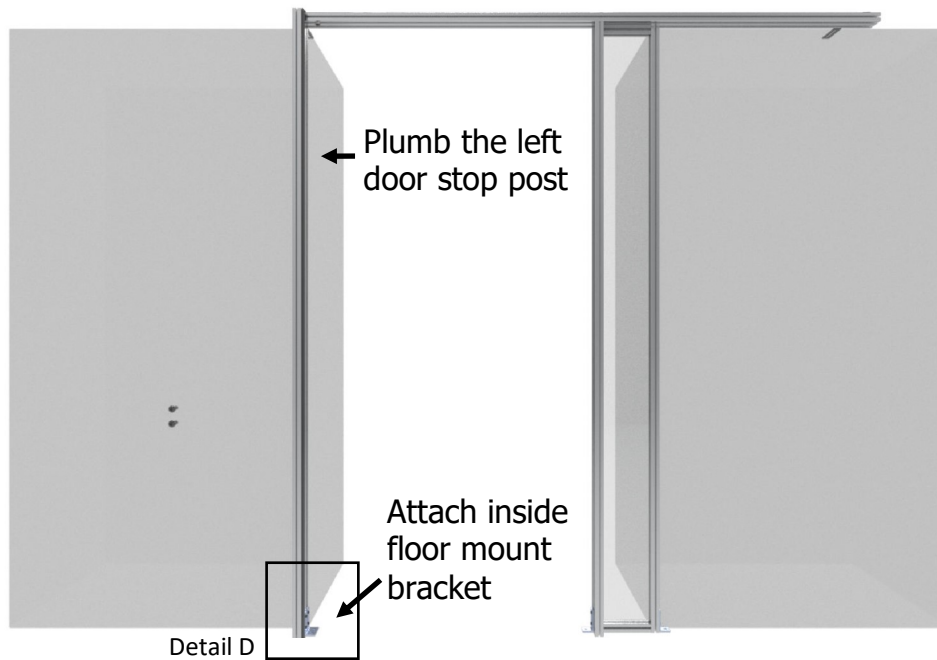


3. Attach the Floor Mount brackets to the floor.

Concrete floor installation

- a) With the side panel in the correct position, use a hammer drill with a 3/16" bit to drill through the floor mount bracket into the concrete floor
- b) Use a drill driver to screw the 1/4 x 1 1/4" Hex Tap-King Screw (D) into the floor

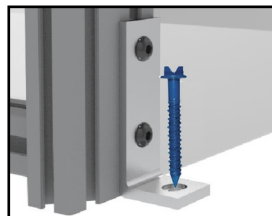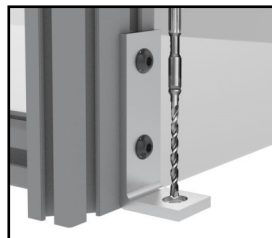

Raised floor installation

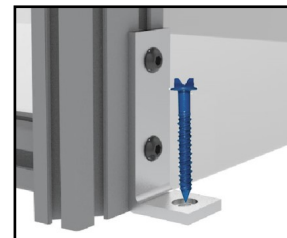


Use a drill driver to screw the 1/4 x 1 1/4" Hex Tap-King Screw (D) into the floor

8

Install Right Inside Floor Mount Bracket

1. Measure the distance between the side panels at the top and the bottom checking that they are the same.
2. Check the right side panel for plumb.
3. Install the floor mount bracket on the inside of the right side panel.

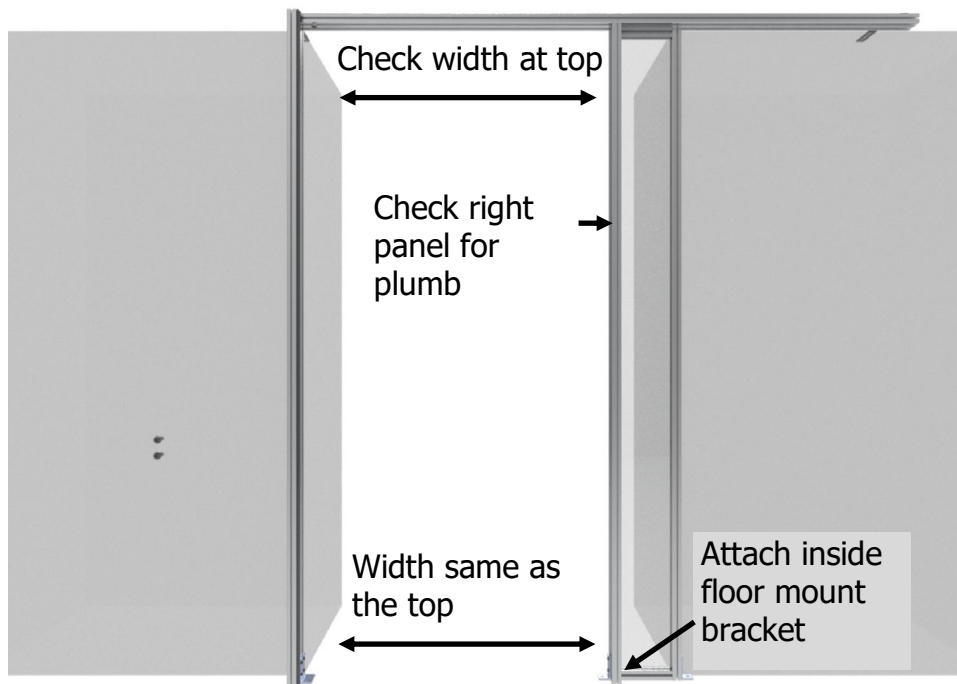

9


Level the Header

1. Check to make sure the header is level.




If header is level, move to step 10

To level the header.

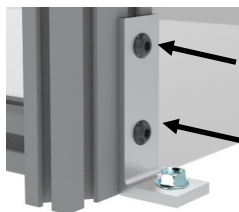

Floor Mount Bracket

2. Loosen the screws on the floor mount bracket and on the formed mounting bracket on the side that needs to be raised.

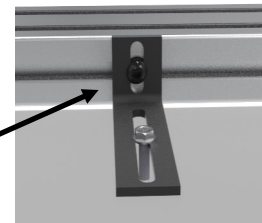


Formed Mounting Bracket

3. Level the header. While holding the header level, tighten the floor mount bracket screws, then the formed mounting bracket screw. Re-check for level.

10 Install Left and Right Outside Floor Mount Brackets


Install floor mount brackets on the outside of the left and right side panels as shown in Detail E.

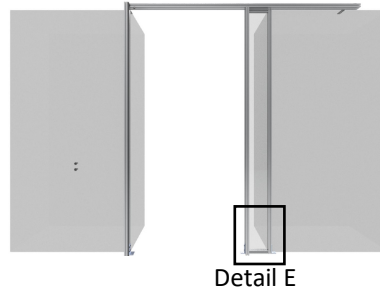

Detail E


11 Install the Roller Door Guides

1. Install the roller door guide (C) to the **right** side panel using 1/4-20 x 3/8 screws (A) and drop in quarter turn t-nuts (B).

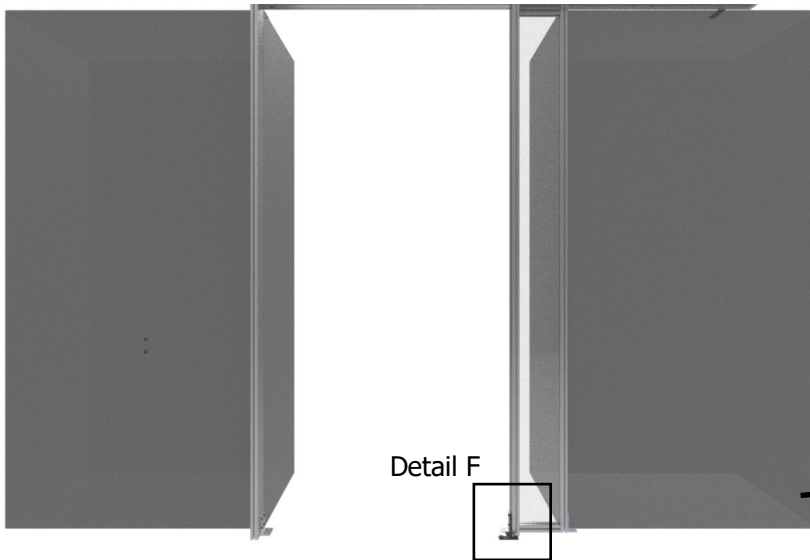

Detail F


Roller Door Guide should be flush to the floor

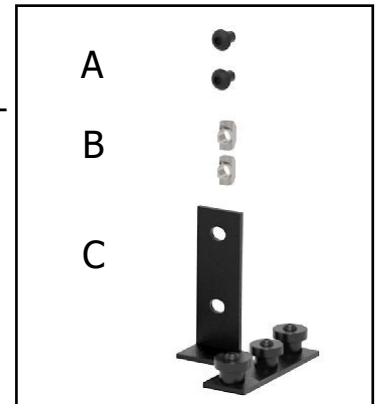

A

B


C

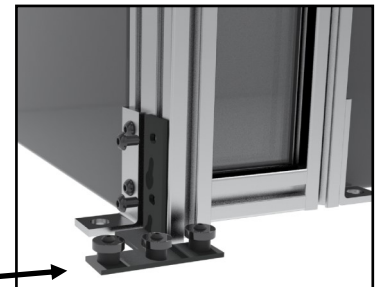

Detail F

12


3. Loosen the inside door retainer and slide down approximately three inches.

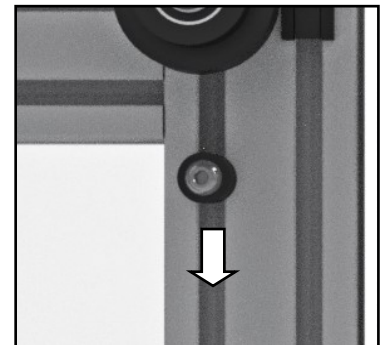

13

Door Gasket should be pre-installed in door.

Check that door gasket is installed on the handle side of the door

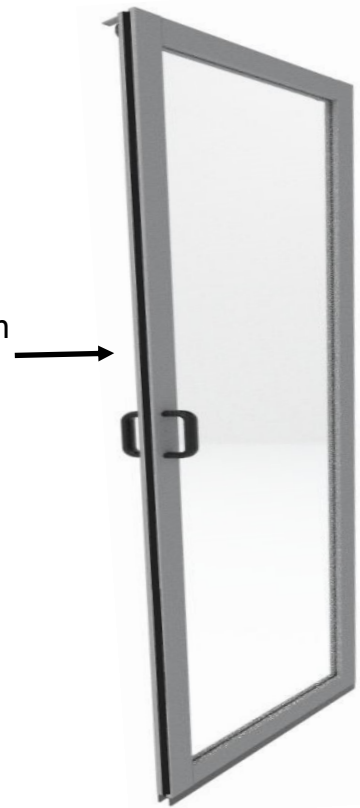


14

Install Door


1. Place the door on the header.



Set wheels into front slot on the top of the header

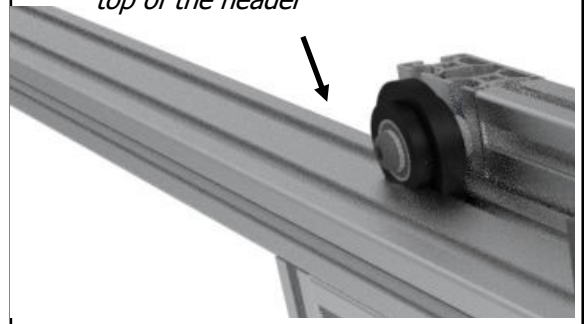

U-channel on the bottom of the door sits on top of the roller door guide.

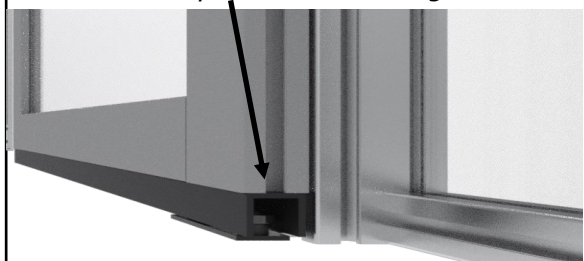

15

Level Door

A wheel adjustment bracket is located above the roller wheel on both sides of the door.




To adjust for an uneven gap between the door and the door stop post.



Gap at the bottom left of the door

1. Loosen the 5/16-18 screw securing the wheel 1/4 turn.

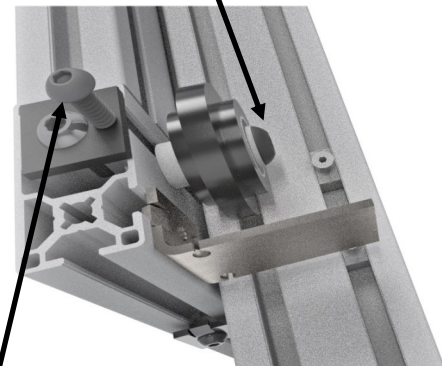


2. Turn the screw in the wheel adjust bracket to raise or lower the door.
3. Tighten the 5/16-18 wheel screw.
4. Check door gap and adjust as necessary.

16

Install Door Handles

Plastic Door Handle Kit

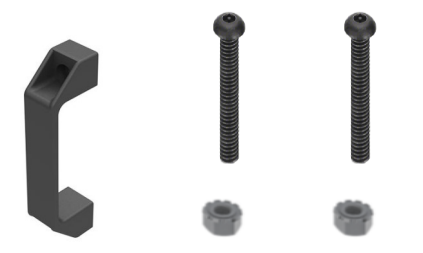


Aluminum Door Handle Kit




17 Install the Outside Door Retainers


Install the outside door retainer on the top outside corner of the door. The outside door retainer is designed to keep the door from bouncing or coming off during operation.

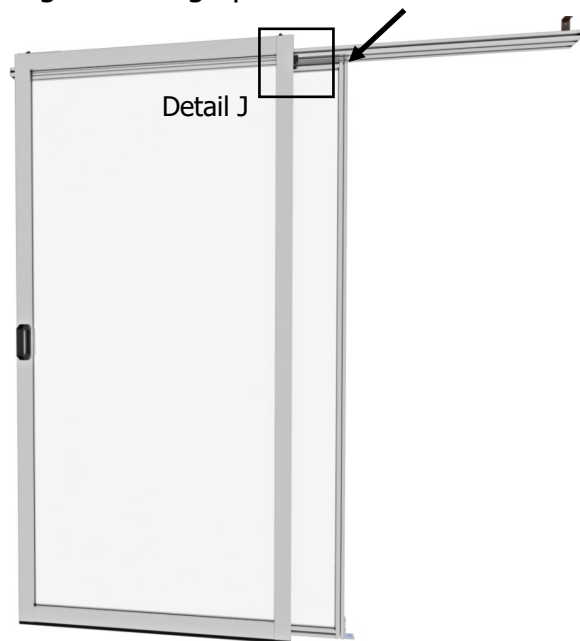

Outside Door Retainer Assembly

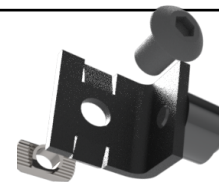


Slide a credit card between the header and the door retainer. Slide the door retainer up snug against the credit card for proper spacing.

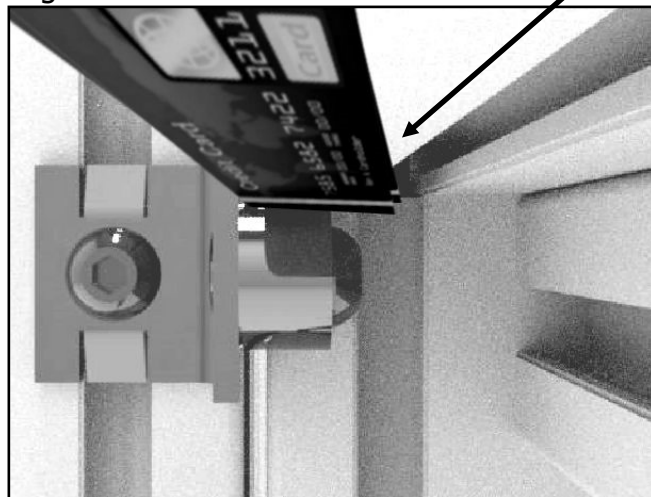


Detail J

18 Adjust Inside Door Retainers

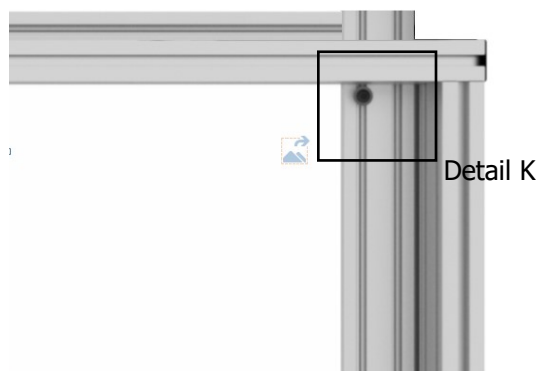

Place a credit card between the header and the door retainer. Slide the door retainer up snug against the credit card and tighten.

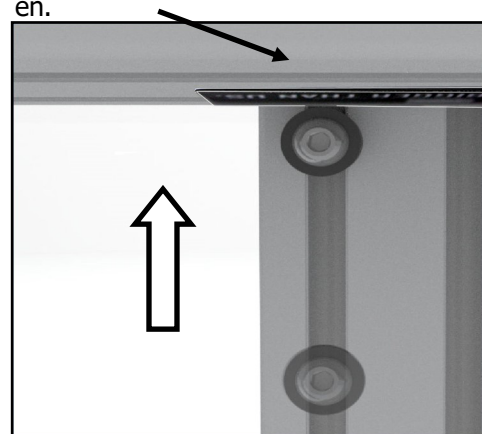



Detail K

Loosen and slide the inside door retainer up as shown in Detail K.

19

Adjust Roller Door Guide

When fully closed, the door should align evenly with the door stop post at the top and the bottom. If the door is offset when closed then adjust the roller door guide for proper alignment.

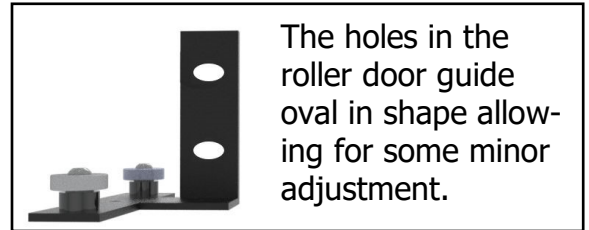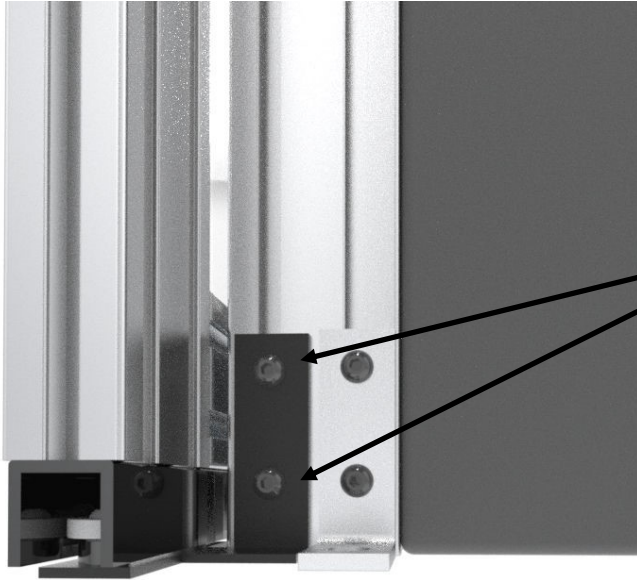

1. Loosen the two screws holding the roller door guide in place.
2. Slide the roller door guide in or out to adjust door alignment.
3. Tighten the screws, making sure the t-nuts are fully turned in the slot.
4. Check alignment and make adjustments as needed.

Basic Troubleshooting Guide

The gap between the top and bottom of the door and stop post is different when closed.

1. Adjust the doors using the Wheel Adjustment bracket. Refer to step 1.

Doors are not closing, or are closing slowly.

1. Verify the Header is level.
2. Verify the door is not rubbing on the following:
 - Floor
 - Roller Door Guide
 - Side Panel
3. Check to make sure the door retainers are rubbing against the header. Refer to steps 18 and 19.

Polycarbonate Cleaning and Maintenance Instructions

1. Use Easyfix anti-static Spray to dispel static after removing the protective film.
2. Remove dust from panels using a damp clean microfiber cloth.
3. Clean smudges or dirt from polycarbonate panels with a mild soap or detergent in warm water using a clean microfiber cloth or sponge. Rinse area with warm water after cleaning and dry with a chamois to prevent spots.

DO NOT:

- Use harsh chemicals, sprays, or creams, including ammonia, alcohol, and bleach.
- Use dirty or dusty cloths.
- Use paper towels or other paper based products for cleaning.
- Scrape sheets with squeegees, razor blades, or other instruments.
- Use scrub brushes, scouring pads, or other rough materials for cleaning.

To Remove Scratches

Use a heat gun. Move the heat gun back and forth slowly over the scratch approximately 2 inches above the polycarbonate. After several passes the scratch will no longer be visible. As soon as the scratch can no longer be seen, remove the heat from the surface.



Appendix 1

Overhead Bracket Installation Instructions

Overhead brackets are used to attach doors to containment panels hanging from the ceiling.

1. Place the overhead mounting bracket against the header and the upper panel as shown below. Attach with 1/4-20 x 1/2 socket cap screw and drop in t-nut

Overhead Mounting Bracket Kit

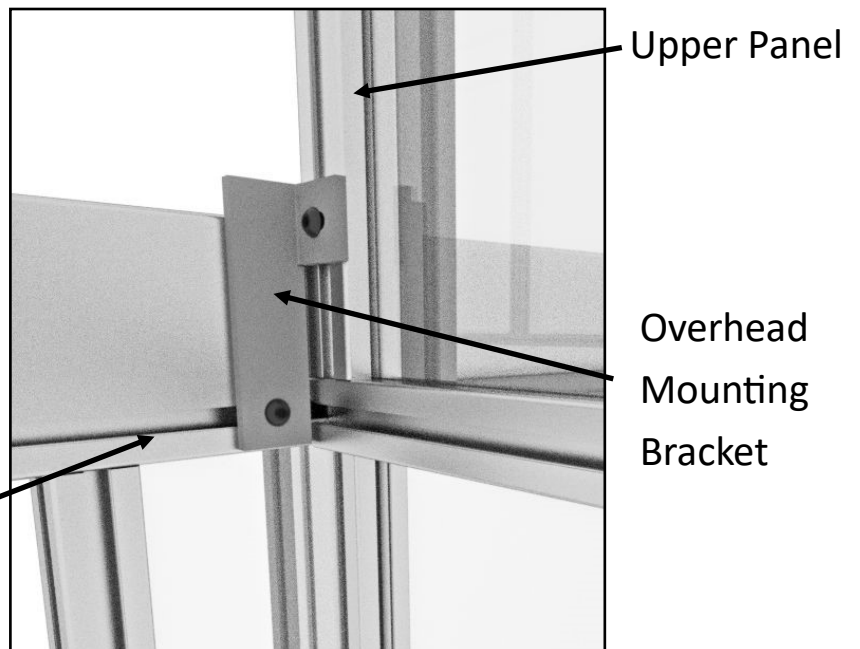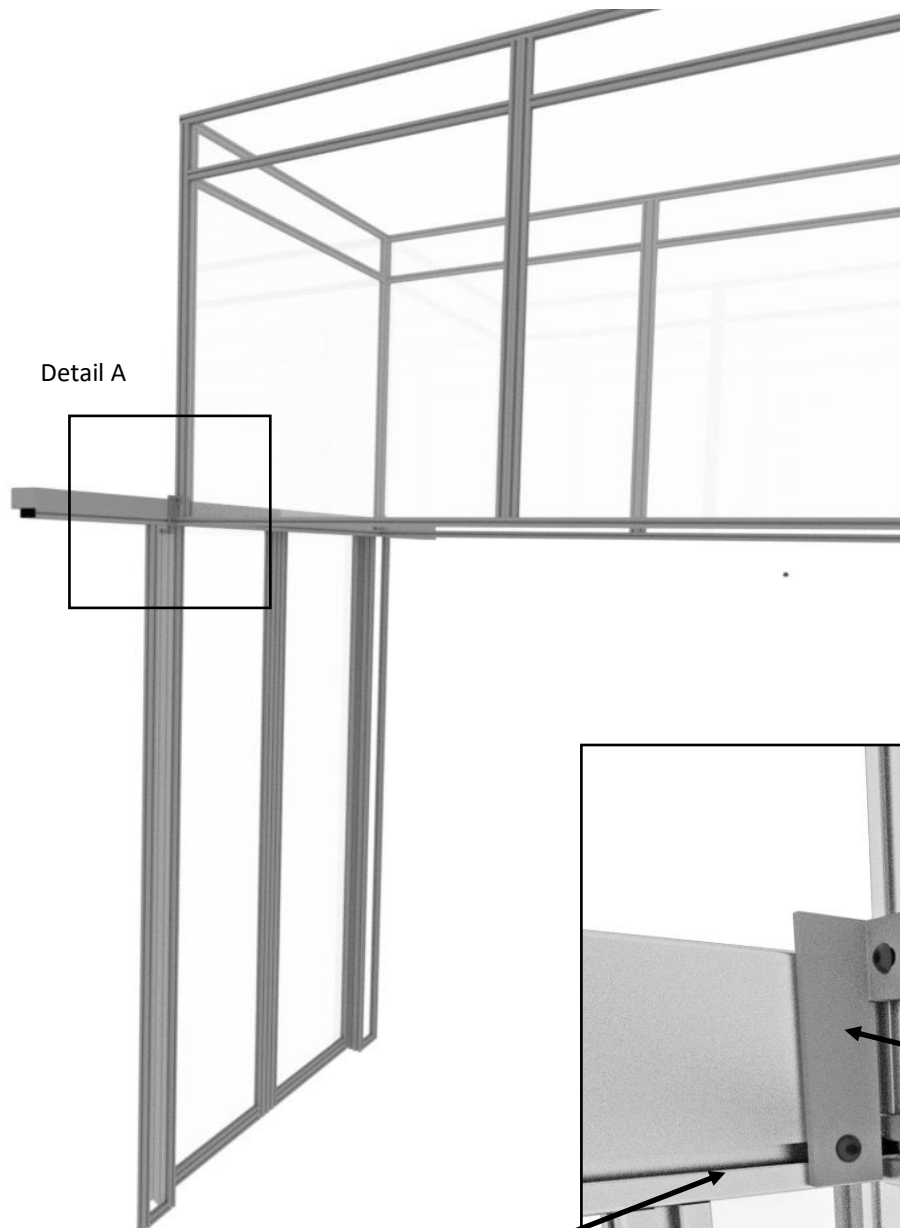

Door Header

Upper Panel

Overhead
Mounting
Bracket

Detail A