Special motor for solar car Powered by MITSUBA

First of all, we thank you very much you choose our product. We wish you would have many opportunities and the best results in the races.

Please check the enclosed items:

- 1) motor
- 2) controller
- 3) electric wire with terminal
- 4) electric wire with terminal and switches (volume switch 2pcs / switch 3pcs / LED 1pc)
- 5) application CD-ROM for set up parameters
- 6) instruction manual book
- 7) sticker of MITSUBA
- 8) tool for center hub close and release



💥 If you have any further questions, please contact to us.

The special motor development team of MITSUBA Corporation

MITSUBA Special motor for solar car instruction manual book

motor model: M2096D-Ⅲ controller model: M2096C



Please read this installation manual carefully and understand it fully without fail before you start the installation and use it.



Main Features

- ★ specially designed for purpose of solar car race
- ★ very high efficiency of direct drive motor (wheel in motor)
- ★ very small cogging torque brushless DC motors.(32-pole,36-slot)
- ★ The efficiency more than 95% !! (including motor controller efficiency)
- ★ very high efficiency with wide range
- ★ An adapter compatible with MITSUBA M1596D motor is available (option)
- ★ very light weight motor (less than 11kgs!!)
- ★ very light weight motor controller (less than 3.5kgs!!)
- ★ very low current consumption motor controller
- ★ current control mode or manual PWM mode can be selected
- ★ User can adjust many kinds of parameters by your themselves
- ★ very high efficient generating brake

Contents

further description and List of contents	1
for safe	2
System configuration	3
description of electric terminals	4
input / output circuit layout	5
Wiring circuit	6
Handling notes for this kit	7 ~ 8
motor drawing	9
controller outline dimension	10
M2096 specification	11
representative characteristics of the motor	12
Faults and Fail-safe·····	13
contact information	14
operation / instruction manual···································	n in CD)

for safe

This instruction book is showing many kind of sketch. It is shown for keep safe and no damage and no risk of bodily injury.

Make sure all the sketch and all of this instruction book.



WARNING

This indicate shows that the death or serious injuries can be expected, If this warning is disregarded.



ATTENTION

This indicate shows that the serious injuries and some damages can be expected, If this warning is disregarded.



IMPORTANT NOTE

This is showing important note for use this kit




WARNING

- ★ This kit is specially designed for solar car race, and purpose for solar car use only. If this motor is used for other purpose, seriously accident or fire and burnout damage can be expected. Above circumstance, only use for solar car, no use other purpose.
- ★ This kit is specially designed for solar car race, and this is not mass-production product. And this kit is special kit and racing competition purpose. So, we can not guarantee any of all things. That mean you must understand you use under your responsibility by yourself. Also we can not accept any claim even it is under the normal using.
- * Please not drive the car if you are using pacemaker on his heart.
- ★ Please confirm controller switch off and acceleration volume off (full unclockwise) before turn main switch on.
- ★ Please confirm forward / backward switch position before you make acceleration.
- ★ The motor controller is not waterproof. So you must need waterproofing structure In by yourself in case driving in the rainy weather. If you have flood or already flooded, immediately make main switch off, and no make main switch on before all things be dry.
- ★ The car driver must turn the controller and main switch off when he get out car.
- ★ Please turn the main switch and controller switch off before you start the car maintainance or a adjustment.



- ★ Please do not mistake the connection of positive (+) and negative (-), otherwise the control module will be damaged or broker ★ Please use the thermal safety (no fuse breaker) = (NFB)at positive line (+) for the protection from over current discharge.
- ★ Please do not open motor and motor controller, otherwise some damage or trouble can be expected.
- ★ Please do not modify motor and motor controller, otherwise some damage or trouble can be expected.

System configuration

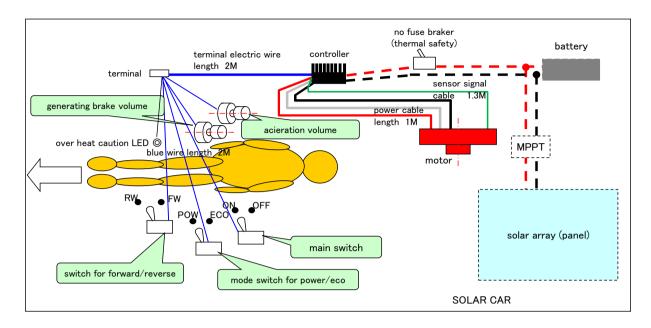

- Xdo not connect solar panel only it self.
 - must connect solar panel with battery like above sketch.
 - it make protection for solar panel open voltage (short circuit voltage)
- **must use thermal safety (no fuse braker) = (NFB) at positive line (+)
- *Mitsuba recommend electric wire for input power which size is about 14sq (14 square mm)
- Xthe contain switch are just for test purpose only. You can choose at your side if you like
- Xdescription of contain kit
- 1) motor (power cable: 1m, signal cable: 1.3m)
- 2) motor controller
- 3) electric wire with terminal (2m)
- 4) electric wire with terminal and switches (volume switch 2pcs / switch 3pcs / LED 1pc)
- 5) application CD-ROM for set up parameters
- 6) instruction manual book
- 7) sticker of MITSUBA (5pcs)
- 8) tool for center hub close and release
- 9) Conversion Cable
- **above sketch is just for outline dimension how connect electric wires. so you need adjust electric wire length by yourself if require.
- *Mitsuba recommend to use 14sq (14 square mm) electric wire for make longer length.
- Xplease contact us, if you need longer signal cable.

description of electric terminals

controller - terminal

Controller termina	parts	wire	terminal bar	
	terminal of	*****	communication	
description	number	color	terminal number	note
	and position	COIOI	terrilliai riuribei	
	center	white	01	
main switch	side	black	20	
	2	white	02	
acceleration	<u> </u>		21	
volume	3	black		
		red	03 22	
generating brake	2	white		
volume	1	black	04	
	3	red	23	
power / eco mode	center	white	05	
switch		_	24	prohibit to connect
	side	black	06	
forward / reverse	center	white	25	
switch	side	black	07	
			26	prohibit to connect
			08	prohibit to connect
			27	motor rotation pulse out put signal (0-5V)
			09	prohibit to connect
			28	GND
			10	prohibit to connect
			29	prohibit to connect
			11	Map GND
			30	prohibit to connect
		red	12	Map_Bit0
digital switch		White	31	Map_Bit1
algical oviicon		green	13	Map_Bit2
		yellow	32	Map_Bit3
LED	K (-) :3	black / (brown)	14	LED GND-OV
LLD	1() .0	black / (blown)	33	prohibit to connect
LED	A (+) :1	white	15	LED +
LLD	7((-).1	WITEG	34	prohibit to connect
			16	prohibit to connect
			35	prohibit to connect
			17	prohibit to connect
			36	prohibit to connect
			18	prohibit to connect
			37	prohibit to connect
			19	'
			ıΰ	prohibit to connect

motor sensor signal cable - controller

sensor	wire	panel connector	
circuit board	color	positions of R05–PB6	
CON01	yellow	Α	power input (+)
CON02	black	В	GND (0V)
CON03	red	С	A line
CON04	white	D	B line
CON05	green	Е	C line
_	sealed	F	sealed

motor - controller

motor	controller
red	Α
white	В
black	С

battery - controller

battery	controller
positive +	+
negative —	_



if make mistake connection which will be make damage or broken this kit.

[signals for speed]


1) pulse out put signal


- you will have 0/5V (off/on) at terminal 27 28(GND(0V))
- 16pulse/1rotation


[acceleration volume]


Mitsuba recommend volume switch $5k\Omega \sim 10k\Omega$ and at full acceleration you will have $4.7V \sim 4.8V$ at 02 - 21GND(0V)which are correct voltage.

input / output composition figure

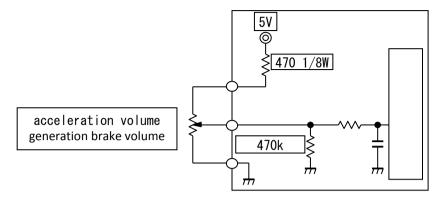

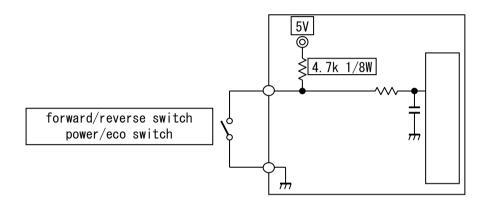

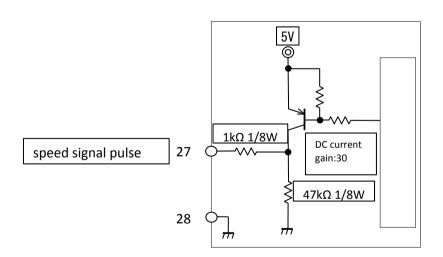

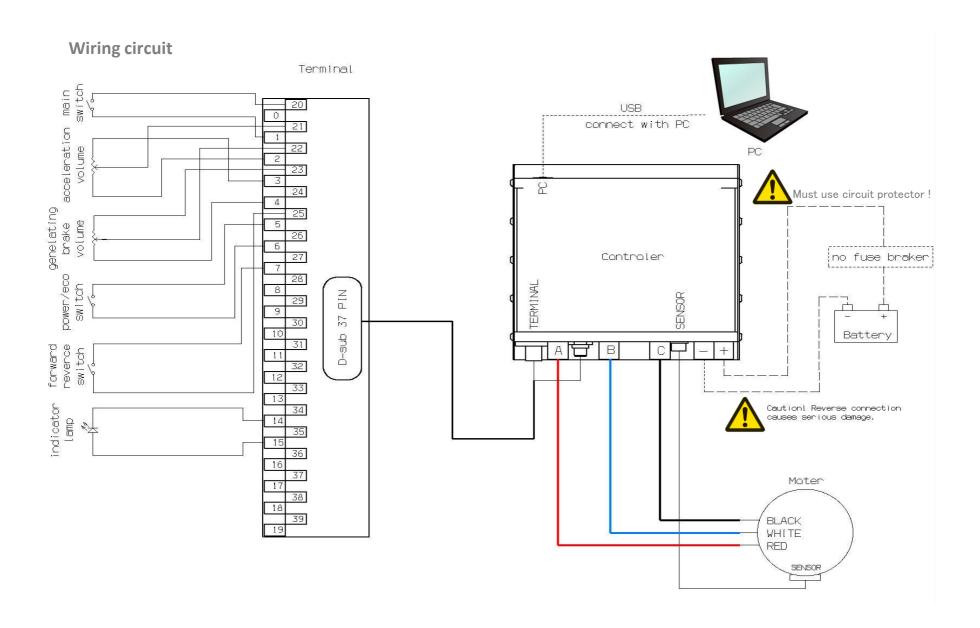

Handling notes for this kit



This is direct drive motor (wheel in motor). So, motor housing makes rotation, (NOT shaft makes rotation)
In case, you need bench test,

attention you must fix and tight motor shaft like attached photo.



1. posture for storage

In case you take out the motor from car and strage it, Please keep the face with electric wire up side and the face with wheel locking face down side. Otherwise wire harness would be damaged by the motor weight.





<good>

Xthe photo is 2003 ver

<bad>

Please do not bring the motor with holding the wire harness.

attention Since sensor cable is sensitive and not durable.compared with power cable, please handle it carefully.

2. power cable length (red / white / black)

Original length of power cable is 1M.

You can cut and adjust power cable length according fix to you car.

**we recommend to use the shorter wire length and a big diamater wire cable.

3. locking screw for wheel (rim) lock nut

wheel (rim) lock nut have screw hole for insert screw which protect the turning.(loosening) After fix and tight wheel lock nut, you put in screw.

💥 M4 screw is not included this kit, please arrange at your side.



4. how to tighten wheel (rim) lock nut please refer to below photo.




*We recommend to apply the the lubrication on motor housing screw partion.

5. motor housing fixing bolt length



Please pay attention to the screw M8 length when the motor is installed to the car. The screw length must be less than 12mm..


attention If too long screw is used, the motor housing would be damaged seriously.

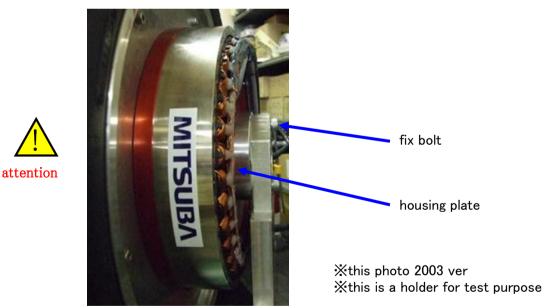

6. others note



- •Please do not loosen the screws and dis-assemble the motor.
- •normally the inside bearings are maintenance free. If you would like overhaul, please contact to Mitsuba

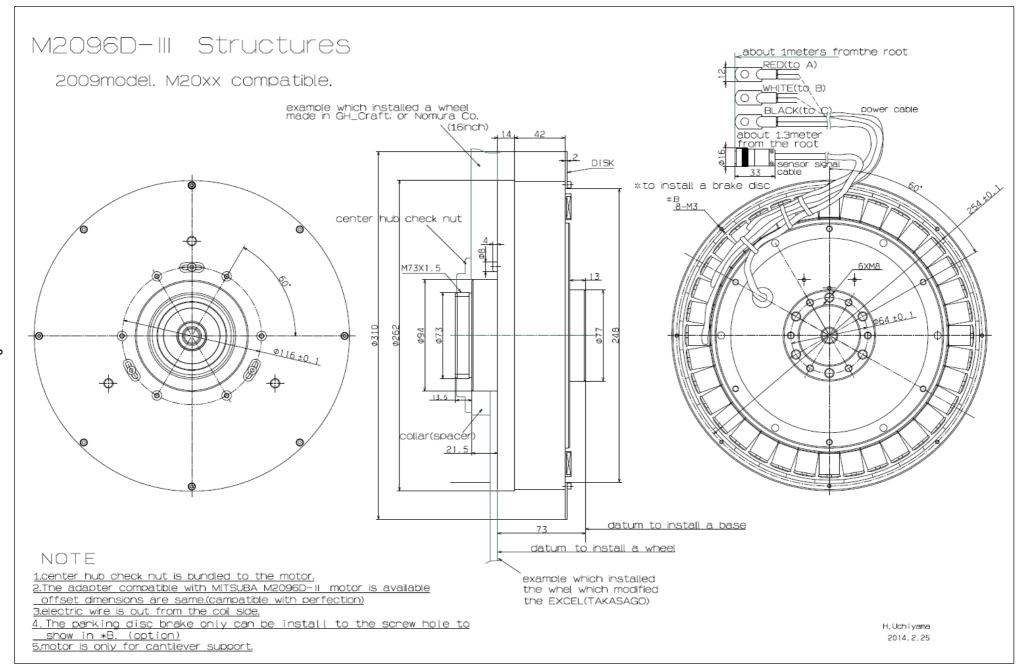


M2096C 0 outline dimensional drawing 60

M2096 specification

mizoso specification	
motor	
model number	M2096D-Ⅲ
dimension	φ 262mm × L73mm
weight	11kg
type	DC brushless motor in wheel type (direct drive type)
nominal power	2.0kW
maximum power	about 5000W (see note)
efficiency	more than 95% (including motor controller efficiency)
nominal load rotation speed	810rpm
rotating direction	forward:left turn (when see the wheel) / right turn optionally
controller	
model number	M2096C
dimension	W203mm × D213mm × H93.5mm
weight	3.5kg
cooling operation	natural air cooling
nominal voltage	96V
input voltage	45∼160V
operation	120 degrees Square-wave control
control mode	
current control	checking input current and automatic adjust PWM DUTY
manual PWM control	direct control PWM Duty
reverse switch	available (with speed limit)
generation brake system	power adjust and voltage limiter (program by use)

note: maximum power which depend on voltage and battery

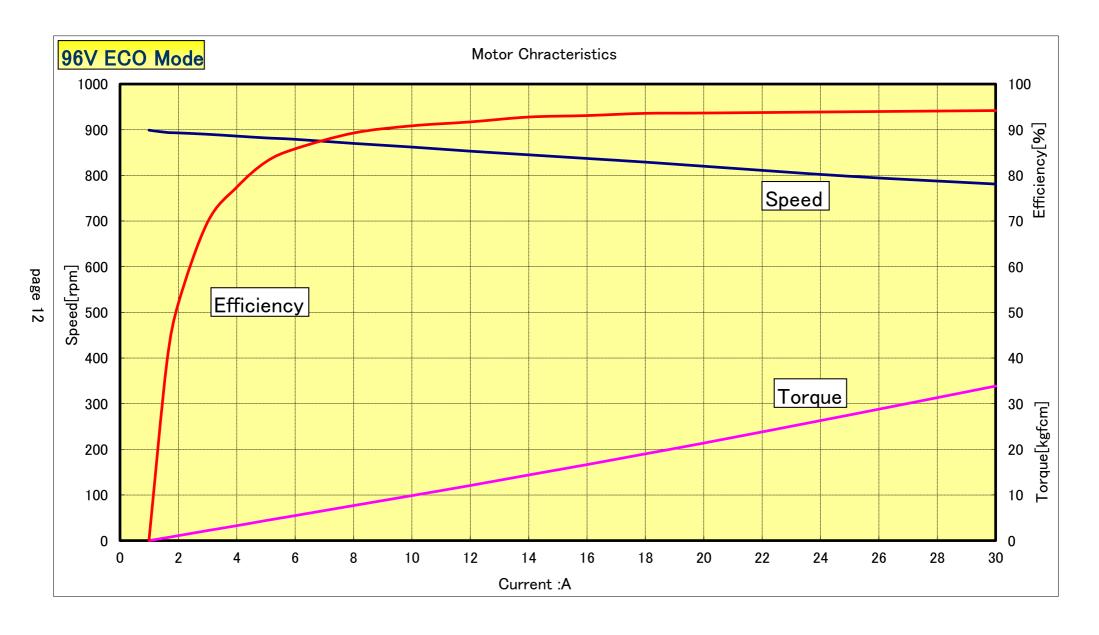

Faults and Fail-safe

■Overcurrent Protection ■

When the controller detects the overcurrent, it stops output to the motor.

■ Overvoltage Protection (Drive) ■

For the battery and controller protection, it does not drive the motor during overvoltage.

■ Overvoltage Protection (Regeneration) ■

For the battery and controller protection, the controller will limit the amount of regeneration by the battery voltage.



When the regeneration limit is applied, braking force is also reduced.

■Sensor Failure■

When the Hall sensor or circuit inside the controller fails, the controller stops output.

■Overheating Protection with LED warning ■

When the temperature of a controller becomes too high, the controller will reduce the output with LED warning.

Fault List

LED flashes	Fault	Set conditions	Controller action	Recovery conditions
1	Over current	Motor or battery current is too high	Drive stop	Reboot the controller
2	-	-	ı	_
3	Hall sensor fault	Hall sensor is open / short circuit fault	Drive stop	Reboot the controller
4	Motor locked	No pulse from the hall sensor during driving	Drive stop	Reboot the controller
5	Sensor fault1	Current sensor, thermistor or voltage senso is open / shrot circuit	Drive stop	Reboot the controller
6	Sensor fault2	Accelerator voltage is out of range	Drive stop	Reboot the controller
7	_	-	ı	_
8	High battery voltage	Battery voltage is too high	Drive stop	Voltage falls below 160V
9	Controller over heat	① 85°C or over ② 95°C or over ③ 105°C or over	Power reduce to 1/2 Power down to 1/4 Drive stop	Reduction of temperature

contact information

ZIP CODE 376-8555

1-2681, Hirosawa-Cho, Kiryu City, Gunma Pref.

MITSUBA CO.,LTD SCR PROJECT

FAX: +81-277-52-1743 TEL: +81-277-52-5036

Cellular phone for emergency: +81-90-2498-7766

project maneger Extension number 5431

Masakatu Kimura [Business mail address] mailto:m-kimura@mitsuba.co.jp

motor department Extension number 5503

Hidekazu Uchiyama [Business mail address] mailto:h-uchiya@mitsuba.co.jp

electoric circuit department Extension number 5930

Kazuaki Nakazawa [Business mail address] mailto:nakazawa-kazuaki@mitsuba.co.jp

Soft producer Extension number 5378

Junya Kitazawa [Business mail address] mailto:j-kitaza@mitsuba.co.jp

Over sea market agent of racing motor

NOMURA CO. 野村商会

ADDRESS: 1-18, Koshien-Abiki, Nishinomiya, 663-8156 Hyogo, JAPAN

E-MAIL: nomnom13@yahoo.co.jp

TEL: +81 90-1586-7484 FAX: +81 6-6453-0635