


YETI BOT

USER MANUAL

Your Cute Companion & Smart Desktop
Assistant

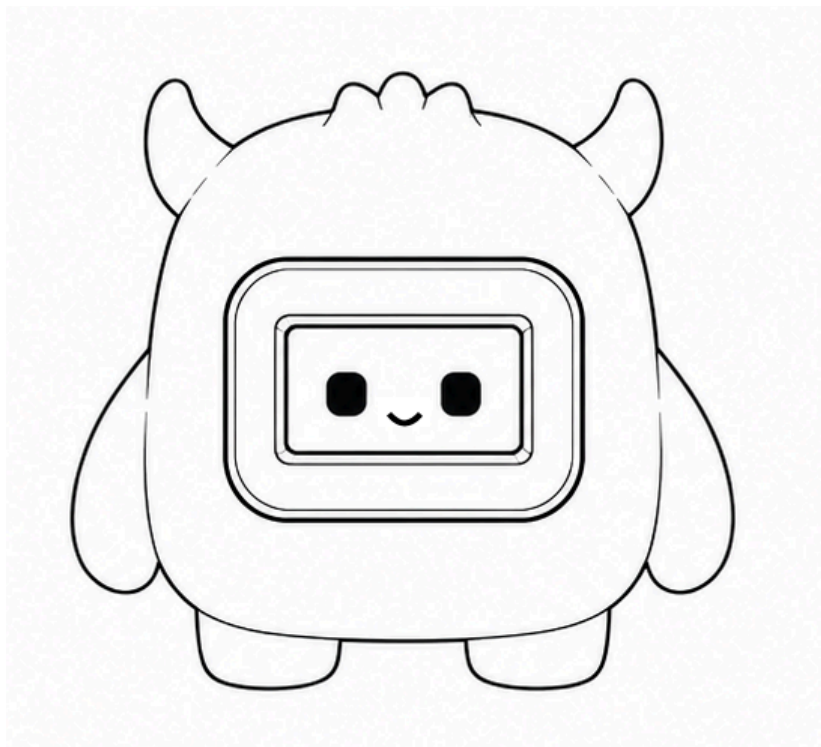

Version 1.0

1. Device Anatomy & Views


Get to know your Yeti Bot hardware interfaces, displays, and ports from different orientations.

Front & Side Profiles

- **Main Display screen:** Located on the front, this screen displays Yeti Bot's expressions, system status, and active navigation menus.
- **Compact Ergonomic Form:** Features integrated horn structures, sturdy feet, and side arms designed for a clean, minimalist look.


Rear Panel

- **Power & Connectivity Port:** The back plate includes a modern USB Type-C charging and data interface located at the lower center for easy cable management.

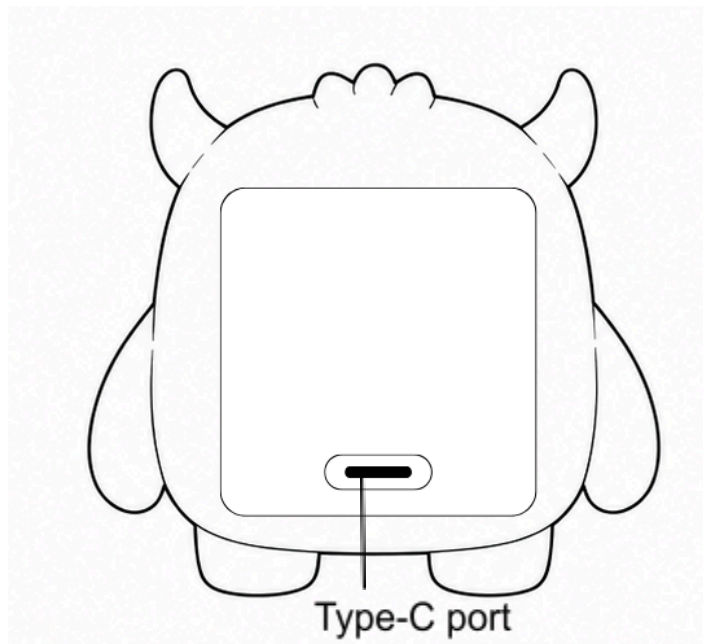

2. Touch Sensor Controls & Navigation

Yeti Bot is equipped with a capacitive touch sensor located on the center tuft of hair on top of its head, nestled between its horns. Use the following tap patterns to navigate the interface:

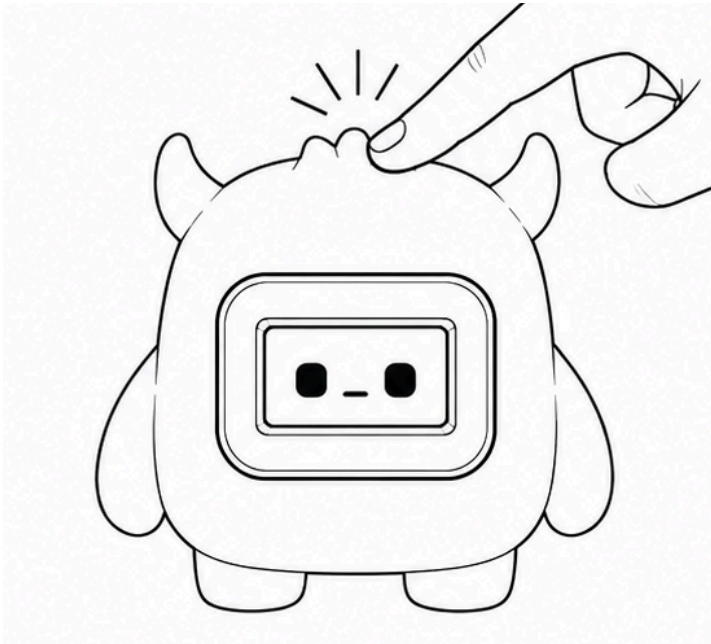

Interaction Pattern	System Action / Response
3 Quick Taps	Opens the Main Menu on the front display.
1 Single Tap	Scrolls down to the next item within the active menu.
2 Double Taps	Selects and opens the currently highlighted menu item.
Long Press & Hold	Yeti Bot feels loved! It will trigger an affectionate response and display a unique happy reaction on its screen.

3. Initial Setup & Care

To ensure optimal performance of your Yeti Bot, please follow these foundational guidelines:

1. Connect a standard USB Type-C cable to power the bot.
2. Keep the top capacitive sensor clean and free of dust to maintain accurate touch registration.
3. Avoid using harsh chemicals on the front screen interface; wipe gently with a microfiber cloth if needed.