
ETSI TS 102 812 V1.1.1 (2001-11)

Technical Specification

Digital Video Broadcasting (DVB); Multimedia Home Platform (MHP) Specification 1.1

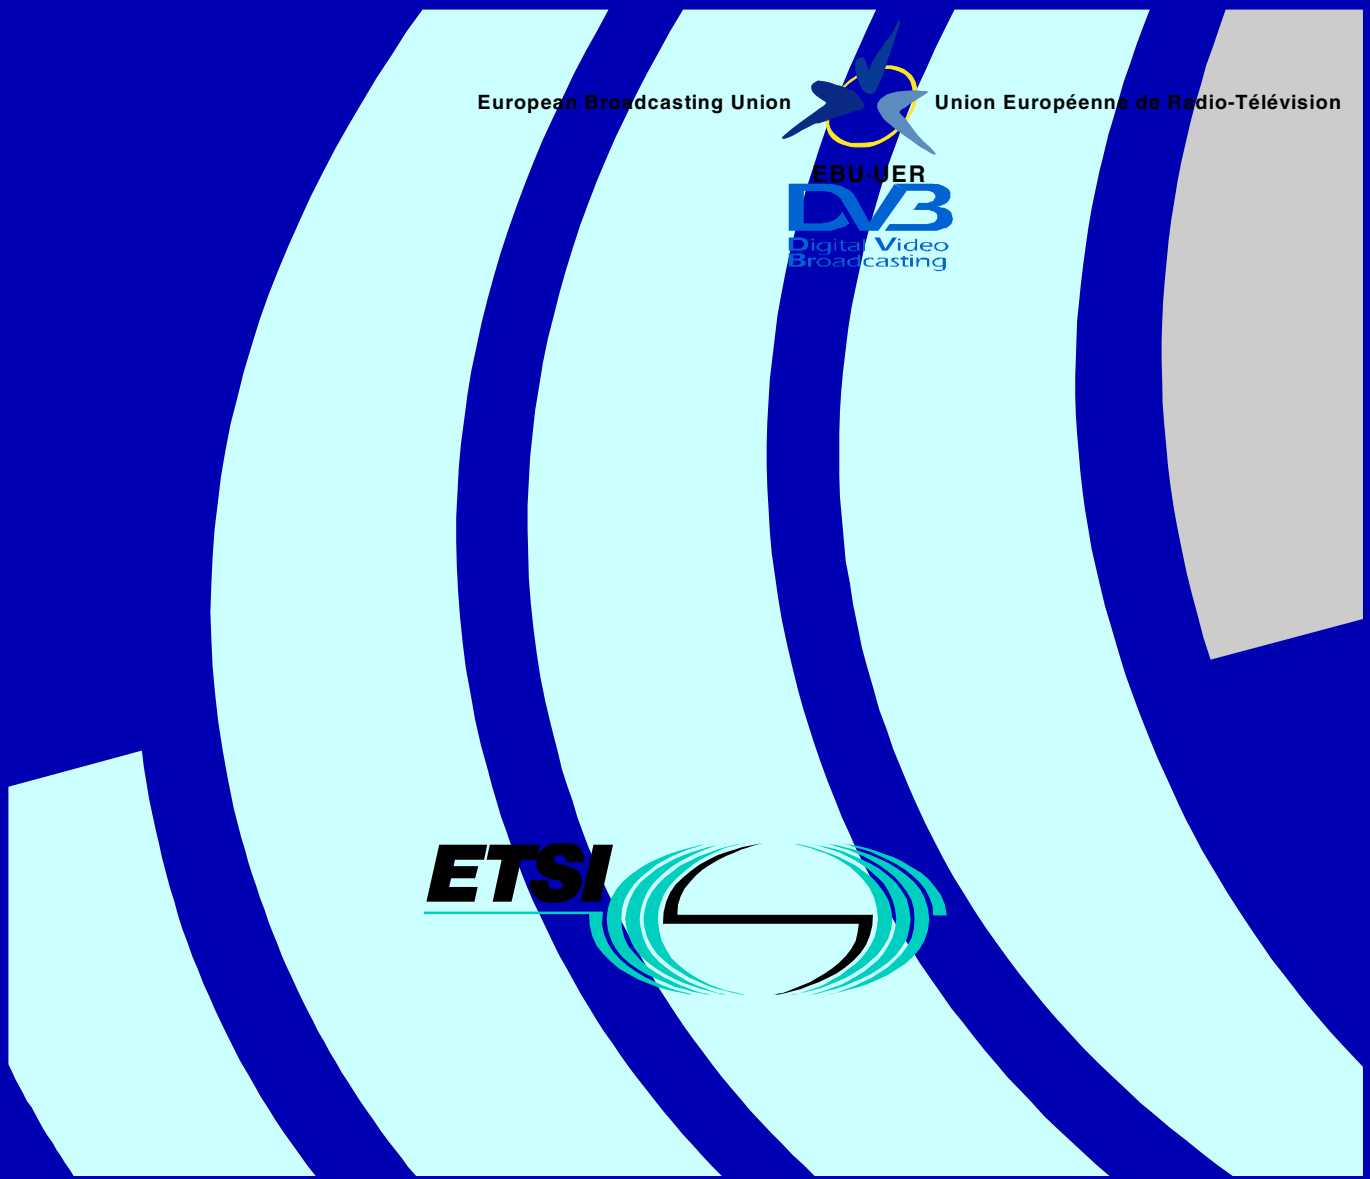

Reference
DTS/JTC-DVB-115

Keywords
broadcasting, data, digital, DVB, MPEG,
terrestrial, TV, video

ETSI

650 Route des Lucioles
F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C
Association à but non lucratif enregistrée à la
Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

Individual copies of the present document can be downloaded from:
http://www.etsi.org

The present document may be made available in more than one electronic version or in print. In any case of existing or perceived difference in contents between such versions, the reference version is the Portable Document Format (PDF). In case of dispute, the reference shall be the printing on ETSI printers of the PDF version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status.
Information on the current status of this and other ETSI documents is available at
http://portal.etsi.org/tb/status/status.asp

If you find errors in the present document, send your comment to:
editor@etsi.fr

Copyright Notification

No part may be reproduced except as authorized by written permission.
The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute, EBU 2001.
All rights reserved.

Contents

Intellectual Property Rights 34

Foreword 34

0 Introduction 34
0.1 Purpose 34
0.2 Application Areas 35
0.3 Profiles 35

1 Scope 36

2 References 36

3 Definitions and abbreviations 42
3.1 Definitions 42
3.2 Abbreviations 45

4 Conventions 47

5 Basic Architecture 48
5.1 Context 48
5.2 Architecture 49
5.2.1 Resources 49
5.2.2 System software 49
5.2.2.1 Application Manager 49
5.2.3 Application 49
5.3 Interfaces Between an MHP Application and the MHP System 51
5.4 Plug-ins 52
5.4.1 Security Model 53

6 Transport Protocols 54
6.1 Introduction 54
6.2 Broadcast Channel Protocols 54
6.2.1 MPEG-2 Transport Stream 55
6.2.2 MPEG-2 Sections 55
6.2.3 DSM-CC Private Data 55
6.2.4 DSM-CC Data Carousel 55
6.2.5 DSM-CC User-to-User Object Carousel 55
6.2.5.1 DVB-J class files 55
6.2.5.2 DVB-HTML document files 55
6.2.5.3 Loss of Carousel Behaviour 56
6.2.6 DVB Multiprotocol Encapsulation 56
6.2.7 Internet Protocol (IP) 56
6.2.8 User Datagram Protocol (UDP) 56
6.2.9 DVB Service Information 56
6.3 Interaction Channel Protocols 57
6.3.1 Network Dependent Protocols 57
6.3.2 Internet Protocol (IP) 57
6.3.3 Transmission Control Protocol (TCP) 57
6.3.4 UNO-RPC 57
6.3.5 UNO-CDR 57
6.3.6 DCM-CC User to User 57
6.3.7 Hypertext Transfer Protocol (HTTP) 58
6.3.7.1 HTTP 1.1 58
6.3.7.2 MHP profile of HTTP 1.0 58
6.3.7.2.1 HTTP 1.0 persistent connections 58
6.3.7.2.2 The Keep-Alive Header 58
6.3.7.2.3 MHP and proxies 58
6.3.7.2.4 Version compatibility 58
6.3.7.3 HTTPS 59

6.3.8 Service Specific . . . 59
6.3.9 User Datagram Protocol (UDP) . . . 59
6.4 Transport protocols for application loading over the interaction channel . . . 60
6.4.1 File system implemented only via the interaction channel . . . 60
6.4.1.1 File system logical structure . . . 60
6.4.1.2 File transfer . . . 61
6.4.1.3 Class encoding . . . 61
6.4.1.4 Directory listing in this file system . . . 61
6.4.2 Hybrid between broadcast stream and interaction channel . . . 62
6.4.2.1 File transfer . . . 62
6.4.2.1.1 Broadcast file delivery . . . 62
6.4.2.1.2 Interaction channel delivery . . . 62
6.4.2.1.3 HTTPProfileBody . . . 62
6.4.2.2 Class encoding . . . 63

7 Content formats . . . 64
7.1 Static formats . . . 64
7.1.1 Bitmap image formats . . . 64
7.1.1.1 Image encoding restrictions . . . 64
7.1.1.2 JPEG . . . 64
7.1.1.3 PNG . . . 64
7.1.1.4 GIF . . . 64
7.1.2 MPEG-2 I-Frames . . . 64
7.1.3 MPEG-2 Video "drips" . . . 64
7.1.4 Monomedia format for audio clips . . . 66
7.1.5 Monomedia format for text . . . 66
7.1.5.1 Built-in character set . . . 66
7.2 Broadcast streaming formats . . . 66
7.2.1 Audio . . . 66
7.2.2 Video . . . 66
7.2.3 Subtitles . . . 66
7.2.3.1 DVB Subtitles . . . 66
7.2.3.2 Teletext . . . 67
7.3 Resident fonts . . . 67
7.4 Downloadable Fonts . . . 67
7.5 Colour Representation . . . 67
7.5.1 Background (informative) . . . 67
7.5.2 Specification . . . 68
7.5.2.1 The sRGB Reference Viewing Environment . . . 68
7.5.2.2 Colourimetric Definitions and Encodings . . . 68
7.6 MIME Types . . . 70
7.6.1 Rationale . . . 70

8 DVB-HTML . . . 71
8.1 Introduction . . . 71
8.1.1 Application Area . . . 71
8.1.2 Profiles . . . 72
8.2 Architecture . . . 72
8.2.1 Context . . . 72
8.2.2 Integration Aspects . . . 72
8.2.2.1 Accessing DVB-J from ECMAScript . . . 72
8.2.2.2 Implementation of user agents via plug-ins . . . 72
8.3 Application Format . . . 73
8.3.1 Basic Considerations . . . 73
8.3.2 Approach to Subsetting . . . 73
8.4 XML . . . 74
8.5 DVB Mark-up Language (DVB-HTML) . . . 74
8.5.1 Conformance considerations . . . 74
8.5.1.1 Document conformance . . . 74
8.5.1.1.1 General rules . . . 74

8.5.1.1.2 Invalid but conformant documents. . . . 75
8.5.1.2 DVB-HTML user agent conformance . . . 75
8.5.1.2.1 Error handling . . . 77
8.5.1.2.2 Handling of invalid but conformant documents. . . . 77
8.5.2 Set of modules required by this specification . . . 77
8.5.3 Semantics for modules . . . 78
8.5.3.1 XHTML modules. . . . 78
8.5.3.1.1 Structure . . . 78
8.5.3.1.2 Text . . . 78
8.5.3.1.3 Hypertext . . . 78
8.5.3.1.4 Presentation . . . 78
8.5.3.1.5 Forms . . . 79
8.5.3.1.6 Client-side Image Map . . . 79
8.5.3.1.7 Image . . . 79
8.5.3.1.8 Object . . . 79
8.5.3.1.9 Frames . . . 79
8.5.3.1.10 Target . . . 79
8.5.3.1.11 Iframes . . . 79
8.5.3.1.12 Metainformation. . . . 80
8.5.3.1.13 Scripting . . . 80
8.5.3.1.14 Link . . . 80
8.5.3.1.15 Base . . . 80
8.5.3.2 XHTML attributes . . . 80
8.5.3.2.1 Longdesc, alt and cite attributes. . . . 80
8.5.3.2.2 Accesskey attribute . . . 80
8.5.3.3 DVB-HTML modules . . . 81
8.5.3.3.1 DVB Intrinsic events . . . 81
8.6 Media Types . . . 83
8.6.1 Uses of MIME media types . . . 83
8.6.2 MIME media type use restrictions . . . 84
8.6.3 Semantics of media type . . . 86
8.6.4 Frame content . . . 86
8.6.5 Application content . . . 86
8.6.5.1 When referenced via an AIT locator . . . 86
8.6.5.2 When not referenced via an AIT locator . . . 87
8.6.6 Relative linking . . . 87
8.6.7 MPEG Audio . . . 87
8.6.7.1 Resources of indefinite duration . . . 87
8.6.7.1.1 Relation to document events . . . 87
8.6.7.2 Resources of definite duration . . . 88
8.6.7.2.1 Relation to document events . . . 88
8.6.8 MPEG Video . . . 88
8.6.8.1 Video Resources of indefinite duration . . . 88
8.6.8.1.1 Relation to document events . . . 89
8.6.8.2 Resources of definite duration . . . 89
8.6.9 DVB Services . . . 89
8.6.10 Graphics content . . . 89
8.6.11 Script content. . . . 89
8.6.12 Style sheet content. . . . 89
8.6.13 HTTP(S) URLs . . . 90
8.6.14 CSS Properties. . . . 90
8.6.14.1 Sources of MIME media type use points. . . . 90
8.6.14.2 MIME media type use restrictions. . . . 90
8.6.15 Generated Content . . . 91
8.6.16 Graphics styling. . . . 91
8.6.17 Video Styling. . . . 91
8.6.18 DVB Service styling . . . 91
8.7 Synchronization. . . . 92
8.7.1 Triggers Overview. . . . 92

8.7.1.1 Transport of triggers . . . 92
8.7.1.2 Application registration and reception . . . 92
8.7.1.3 Binding to DSM-CC Stream events . . . 92
8.7.2 Trigger Events . . . 93
8.7.2.1 Converting stream events into DOM events . . . 93
8.7.2.2 Event Factory File definition . . . 94
8.7.2.2.1 Syntax . . . 94
8.7.2.2.2 Element semantics . . . 95
8.7.2.2.3 Attributes semantics . . . 95
8.7.2.3 Default Event Factory Element . . . 97
8.7.2.4 Default Event Factory File . . . 97
8.7.2.5 Worked example . . . 97
8.7.2.6 System events . . . 98
8.7.2.6.1 dvb.start event . . . 98
8.7.2.6.2 dvb.page event . . . 99
8.7.3 Binding the event factory file to the application . . . 99
8.7.3.1 Syntax of event linkage file . . . 100
8.7.3.2 Semantics of event linkage file . . . 100
8.7.3.3 Example . . . 100
8.7.3.4 Name and location of linkage file . . . 101
8.7.4 Default Trigger Mechanism . . . 101
8.8 CSS . . . 103
8.8.1 Summary of CSS profiling for MHP . . . 103
8.8.2 MHP profile of CSS data types . . . 103
8.8.3 MHP profile of CSS @ rules . . . 103
8.8.4 MHP profile of CSS media types . . . 104
8.8.4.1 "screen" media type . . . 104
8.8.4.2 'dvb-tv' media type . . . 104
8.8.4.2.1 Additional Properties of "dvb-tv" media type . . . 104
8.8.4.2.2 Policy rules . . . 105
8.8.4.3 Clarifications on support of paged properties . . . 105
8.8.5 Graphics and video integration . . . 105
8.8.5.1 General recap of the MHP graphics . . . 105
8.8.5.1.1 Input video space . . . 105
8.8.5.1.2 Device space . . . 105
8.8.5.1.3 Normalised space . . . 105
8.8.5.1.4 Colour . . . 105
8.8.5.2 Coordinate spaces . . . 106
8.8.5.2.1 Screen coordinates . . . 106
8.8.5.2.2 Pixel coordinates . . . 106
8.8.5.2.3 Video coordinates . . . 106
8.8.5.3 How to define the initial containing block . . . 107
8.8.5.3.1 Problem . . . 107
8.8.5.3.2 The @viewport rule . . . 107
8.8.5.3.3 Establishing a viewport . . . 108
8.8.5.3.4 Pseudo classes . . . 112
8.8.5.4 Cascading . . . 113
8.8.5.5 How to discover where the video is . . . 113
8.8.5.5.1 The area property . . . 113
8.8.5.6 Placing content in relation to video . . . 114
8.8.5.6.1 Definition of boxes . . . 115
8.8.5.6.2 Definition of pel areas in the video . . . 115
8.8.5.7 Placing video within the presentation . . . 115
8.8.5.8 Box Layout . . . 115
8.8.5.8.1 Video Boxes . . . 115
8.8.5.9 DOM Access to CSS . . . 116
8.8.5.10 Focus traversal and short-cuts . . . 116
8.8.6 Font selection . . . 117
8.8.6.1 Restrictions on "src" descriptor . . . 118

8.8.7 Font specification . . . 118
8.8.8 Default behaviour . . . 118
8.8.8.1 Default style sheet font rules . . . 119
8.8.8.1.1 Extending the simple rule . . . 119
8.8.8.1.2 Fallback for italic, small caps and font stretch . . . 119
8.9 Xlet integration . . . 120
8.9.1 Object element . . . 120
8.9.2 Param element . . . 121
8.9.3 Example . . . 121
8.10 Scripting . . . 122
8.10.1 DOM 2 binding . . . 122
8.10.2 Interface between ECMAScript and DVB-J . . . 122
8.10.2.1 ECMAScript APIs for accessing DVB-J . . . 122
8.10.2.2 Inter-Xlet and Xlet-ECMAscript Communication via org.dvb.ixc . . . 122
8.10.2.3 Security . . . 123
8.10.2.4 Implicit Method Selection . . . 123
8.10.2.5 Explicit Method Selection . . . 123
8.10.2.6 Static Method Invocation . . . 123
8.10.2.7 Method Signature Matching . . . 123
8.10.2.8 New ECMAScript Object Types . . . 124
8.10.2.9 Type Conversion (ECMAScript to DVB-J) . . . 124
8.10.2.10 Subclassing and Interface Instance Creation . . . 126
8.10.2.11 Type Conversion (DVB-J to ECMAScript) . . . 126
8.10.2.12 Catching DVB-J Exceptions in ECMAScript . . . 127
8.11 Document Object Model (DOM) . . . 128
8.11.1 DOM Level 2 Events . . . 128
8.11.1.1 Fundamental interfaces . . . 128
8.11.1.2 Event interfaces . . . 128
8.11.2 DVB Events DOM module . . . 129
8.11.2.1 Key events . . . 129
8.11.2.2 Lifecycle events . . . 129
8.11.2.2.1 Interface DVBLifecycleEvent . . . 129
8.11.2.2.2 Event definitions . . . 130
8.11.2.2.3 State transition summary . . . 132
8.11.2.3 Additional DVB Events . . . 132
8.11.2.3.1 Trigger events . . . 132
8.11.2.3.2 DVBDOMStable event . . . 132
8.11.2.3.3 DVB-HTML events . . . 133
8.11.3 DVB Key events DOM module . . . 133
8.11.3.1 Interface DVBKeyEvent . . . 133
8.11.3.1.1 IDL Definition . . . 134
8.11.3.1.2 Attributes . . . 135
8.11.3.1.3 Methods . . . 135
8.11.4 DVB-HTML DOM module . . . 135
8.11.4.1 Conformance . . . 135
8.11.4.2 Differences from W3C DOM Level 1 HTML interfaces . . . 136
8.11.4.3 Extensions . . . 136
8.11.4.3.1 Enumerations . . . 136
8.11.4.3.2 Initial and current values of form controls . . . 136
8.11.4.4 System aspects . . . 137
8.11.4.4.1 Access to the document . . . 137
8.11.4.4.2 DOM DVB-HTML module . . . 137
8.11.4.4.3 DOM modification . . . 137
8.11.4.5 Miscellaneous interfaces . . . 137
8.11.4.5.1 DVB-HTMLCollection Interface . . . 137
8.11.4.5.2 DVBHTMLDocument Interface . . . 138
8.11.4.6 DVB-HTML element related interfaces . . . 140
8.11.4.6.1 DVBHTMLElement Interface . . . 140
8.11.4.6.2 DVBHTMLAnchorElement Interface . . . 141

8.11.4.6.3 DVBHTMLMapElement Interface . . . 141
8.11.4.6.4 DVBHTMLAreaElement Interface . . . 142
8.11.4.6.5 DVBHTMLButtonElement Interface . . . 142
8.11.4.6.6 DVBHTMLFormElement Interface . . . 143
8.11.4.6.7 DVBHTMLFrameElement Interface . . . 144
8.11.4.6.8 DVBHTMLFrameSetElement Interface . . . 145
8.11.4.6.9 DVBHTMLIFrameElement Interface . . . 145
8.11.4.6.10 DVBHTMLImageElement Interface . . . 145
8.11.4.6.11 DVBHTMLObjectElement Interface . . . 146
8.11.4.6.12 DVBHTMLInputElement Interface . . . 147
8.11.4.6.13 DVBHTMLOptionElement Interface . . . 149
8.11.4.6.14 DVBHTMLSelectElement Interface . . . 150
8.11.4.6.15 DVBHTMLTextAreaElement Interface . . . 151
8.11.5 DVB Exceptions . . . 152
8.11.5.1 DVBException . . . 153
8.11.5.1.1 IDL Definition . . . 153
8.11.5.1.2 Defined Constants . . . 153
8.11.6 Language bindings . . . 153
8.11.6.1 ECMAScript Binding . . . 153
8.11.6.2 Java Binding . . . 153
8.11.7 DVB Environment object module . . . 153
8.11.7.1 Free variables . . . 153
8.11.7.2 Environmental host objects . . . 154
8.11.7.2.1 Navigator Object . . . 154
8.11.7.2.2 Window object . . . 154
8.11.7.2.3 Location object . . . 157
8.11.8 CSS Support . . . 157
8.11.8.1 DVB CSS DOM module . . . 157
8.11.8.1.1 DVBCSSInlineStyle . . . 157
8.11.8.1.2 DVBCSSStyle . . . 158
8.11.8.1.3 DVBCSSViewportRule . . . 158
8.11.8.1.4 DVBCSSViewportProperties . . . 158
8.12 Cookie support . . . 161
8.12.1 DOM Cookie Interface . . . 161
8.12.2 Cookie Storage and Lifetime . . . 161
8.12.2.1 Cookie Storage Limits . . . 161
8.12.2.2 Cookie Persistence . . . 161
8.12.2.3 Privacy Considerations . . . 162
8.12.3 Cookie Scoping . . . 162
8.12.3.1 General Rules . . . 162
8.12.3.2 Documents delivered via DSM-CC Object Carousel . . . 162
8.12.3.3 Documents delivered via HTTP transport . . . 162
8.12.4 HTTP Cookie Support . . . 162
8.12.4.1 Background . . . 162
8.12.4.2 Sending Cookies . . . 162
8.12.4.3 Receiving Cookies . . . 162
8.13 HTTP User Agent String Support . . . 163
8.13.1 User agent strings . . . 163
8.13.1.1 Current user agent-related strings . . . 163
8.13.1.2 User agent string BNF . . . 163
8.14 Security of DVB-HTML applications . . . 164
8.14.1 Authentication of DVB-HTML files . . . 164
8.14.2 Runtime code extension . . . 164
8.14.2.1 Security principles . . . 164
8.14.2.1.1 Uses of runtime code extension in ECMAScript . . . 164
8.14.2.2 Extensions to ECMAScript for trusted executable code . . . 165
8.14.2.2.1 Propagation of Internal (safe) vs. External (unsafe) strings . . . 165
8.14.2.2.2 Modifying ECMA-262 to support Internal and External strings . . . 165
8.14.2.3 Sources of Unsafe (external) strings . . . 171

8.14.2.3.1 Sources within ECMAScript . . . 171
8.14.2.3.2 Sources from Host Objects. . . . 171
8.14.2.4 Use of strings in RCEs. . . . 171
8.14.2.5 Mutation of Host Objects. . . . 172
8.14.3 Inter application security . . . 172
8.14.3.1 Restrictions on DOM elements introduced for security . . . 172
8.15 DVB-HTML permissions . . . 172
8.15.1 Permissions for unsigned applications . . . 173
8.15.1.1 java.awt.AWTPermission . . . 173
8.15.1.2 java.net.SocketPermission: . . . 173
8.15.1.3 java.util.PropertyPermission . . . 173
8.15.1.4 java.lang.RuntimePermission . . . 173
8.15.1.5 java.io.SerializablePermission . . . 173
8.15.1.6 java.io.FilePermission . . . 173
8.15.1.7 javax.tv.media.MediaSelectPermission . . . 174
8.15.1.8 javax.tv.service.ReadPermission . . . 174
8.15.1.9 javax.tv.service.selection.ServiceContextPermission . . . 174
8.15.1.10 java.util.Locale.setDefault . . . 175
8.15.1.11 org.dvb.security.PrivilegedRCEPermission . . . 175
8.15.2 Additional Permissions for signed applications . . . 175
8.15.2.1 java.util.PropertyPermission . . . 175
8.15.2.2 java.io.FilePermission . . . 175
8.15.2.3 org.dvb.net.ca.CAPermission . . . 176
8.15.2.4 org.dvb.application.AppsControlPermission . . . 176
8.15.2.5 org.dvb.net.rc.RCPermission . . . 177
8.15.2.6 org.dvb.net.tuning.TunerPermission . . . 177
8.15.2.7 javax.tv.service.selection.SelectPermission. . . . 178
8.15.2.8 org.dvb.user.UserPreferencePermission . . . 178
8.15.2.9 java.net.SocketPermission . . . 178
8.15.2.10 org.dvb.media.DripFeedPermission . . . 178
8.15.2.11 org.dvb.security.PrivilegedRCEPermission . . . 179
8.15.2.12 org.dvb.application.storage.ApplicationStoragePermission . . . 179
8.15.2.13 org.dvb.smartcard.SmartCardPermission . . . 179
8.16 Miscellaneous . . . 179
8.16.1 Date Values . . . 179
8.16.1.1 Syntax . . . 179
8.16.2 Clock values . . . 179
8.16.2.1 Syntax . . . 179
8.16.2.2 Offset values . . . 180
8.16.3 Unrealisable locators . . . 180
8.16.3.0.1 Presentation of Locators in DVB HTML. . . . 180
8.16.4 Relation to HTTP and HTTPS . . . 181
8.16.5 DVB-HTML specific locators . . . 181
8.16.5.1 Extended DVB locator . . . 181
8.16.5.1.1 Extended DVB locator syntax . . . 181
8.16.5.1.2 TV locators . . . 181
8.16.5.1.3 Application locator . . . 182
8.16.5.1.4 AIT locators . . . 182
8.16.5.2 Exit locator . . . 182
8.16.6 Domain . . . 182

9 Application model . . . 183
9.1 Broadcast MHP applications . . . 183
9.1.1 Basic lifecycle control . . . 183
9.1.2 Starting applications . . . 184
9.1.3 Support for execution of multiple simultaneous applications . . . 184
9.1.4 Stopping applications . . . 184
9.1.4.1 A new service being selected replacing a previously selected one . . . 184
9.1.4.2 The stopping of an application by another application . . . 184
9.1.4.3 Changes in the application signalling to request a particular application be stopped . . . 184

9.1.4.4 Stopping by the MHP terminal due to a shortage of resources . . . 185
9.1.5 Persistence of Applications Across Service Boundaries . . . 185
9.1.6 Management of autostarting . . . 185
9.1.7 When tuning is not service selection! . . . 186
9.1.8 MHP Applications and Service Selection . . . 186
9.1.9 Broadcast service related stored applications . . . 186
9.1.9.1 Version management . . . 187
9.2 DVB-J Model . . . 187
9.2.1 Starting DVB-J Applications . . . 187
9.2.2 Stopping a DVB-J Application . . . 187
9.2.3 DVB-J Application Lifecycle . . . 188
9.2.3.1 Introduction . . . 188
9.2.3.2 DVB-J Application Lifecycle State Machine . . . 188
9.2.4 Xlet API . . . 191
9.2.4.1 Xlet State Change Semantics . . . 192
9.2.4.2 Xlet state change requests . . . 192
9.2.5 Multiple application environment support . . . 192
9.2.5.1 Control of DVB-J applications by other DVB-J applications . . . 192
9.2.5.2 Input Focus management . . . 192
9.2.5.3 Other resources management . . . 193
9.2.5.4 VM implementation . . . 193
9.3 DVB-HTML Model . . . 193
9.3.1 The DVB-HTML Application . . . 193
9.3.1.1 DVB-HTML Application . . . 193
9.3.1.2 User agent . . . 193
9.3.1.3 DVB-HTML Actor . . . 193
9.3.1.4 Application boundary . . . 194
9.3.1.4.1 Regular Expression Syntax . . . 194
9.3.2 DVB-HTML Application Lifecycle . . . 195
9.3.2.1 Introduction . . . 195
9.3.2.2 Signalling . . . 195
9.3.2.3 Lifecycle control . . . 196
9.3.2.3.1 State diagram . . . 196
9.3.3 The State Model . . . 196
9.3.3.1 Loading . . . 197
9.3.3.1.1 Name . . . 197
9.3.3.1.2 Entry actions . . . 197
9.3.3.1.3 Activities . . . 197
9.3.3.1.4 Resources . . . 197
9.3.3.1.5 Transitions . . . 197
9.3.3.1.6 Comment . . . 197
9.3.3.2 Active . . . 197
9.3.3.2.1 Name . . . 197
9.3.3.2.2 Activities . . . 197
9.3.3.2.3 Entry actions . . . 197
9.3.3.2.4 Resources . . . 197
9.3.3.2.5 Transitions . . . 198
9.3.3.2.6 Comment . . . 198
9.3.3.3 Paused . . . 198
9.3.3.3.1 Name . . . 198
9.3.3.3.2 Activities . . . 198
9.3.3.3.3 Resources . . . 198
9.3.3.3.4 Transitions . . . 198
9.3.3.3.5 Comment . . . 198
9.3.3.4 Destroyed . . . 199
9.3.3.4.1 Name . . . 199
9.3.3.4.2 Activities . . . 199
9.3.3.4.3 Resources . . . 199
9.3.3.4.4 Transitions: . . . 199

9.3.3.4.5 Comment . . . 199
9.3.3.5 Killed . . . 199
9.3.3.5.1 Name . . . 199
9.3.3.5.2 Entry actions . . . 199
9.3.3.5.3 Activities . . . 199
9.3.3.5.4 Resources . . . 199
9.3.3.5.5 Transitions . . . 199
9.3.3.5.6 Comment . . . 199
9.4 Application activity events . . . 200
9.4.1 Event queue handling . . . 202
9.5 Inter application resource management . . . 202
9.6 Life cycle of Xlets embedded in DVB-HTML . . . 203
9.6.1 Starting embedded Xlets . . . 203
9.6.2 Termination . . . 203
9.6.3 General issues . . . 203
9.7 Services and applications not related to conventional DVB services . . . 204
9.7.1 Applications loaded from the interaction channel . . . 204
9.7.2 Stored services . . . 204
9.7.3 DVB-J Model . . . 206
9.7.4 Common behaviour . . . 206
9.8 Lifecycle of internet access applications . . . 206
9.8.1 General issues . . . 206
9.8.2 Starting internet access applications from MHP applications . . . 206
9.8.3 Starting MHP applications from internet access applications . . . 207
9.9 Plug-ins . . . 207

10 Application Signalling . . . 208
10.1 Introduction . . . 208
10.1.1 Summary of common signalling . . . 208
10.1.2 Summary of additional signalling for DVB-J applications . . . 208
10.1.3 Summary of additional signalling for DVB-HTML applications . . . 208
10.1.4 Summary of additional signalling for applications carried via OC . . . 208
10.1.5 Summary of additional signalling for applications carried via IP . . . 209
10.1.6 How to add a new scheme (informative) . . . 209
10.1.7 Service information . . . 209
10.2 Program Specific Information . . . 209
10.2.1 Application signalling stream . . . 209
10.2.2 Data broadcast streams . . . 209
10.3 Notation . . . 210
10.3.1 reserved . . . 210
10.3.2 reserved_future_use . . . 210
10.4 Application Information Table . . . 210
10.4.1 Data errors . . . 210
10.4.2 AIT transmission and monitoring . . . 210
10.4.3 Optimised AIT signalling . . . 211
10.4.4 Visibility of AIT . . . 211
10.4.5 Definition of sub-table for the AIT . . . 211
10.4.6 Syntax of the AIT . . . 211
10.4.7 Use of private descriptors in the AIT . . . 213
10.4.8 Text encoding in AIT . . . 213
10.4.9 AIT file . . . 213
10.4.9.1 Syntax . . . 213
10.4.9.2 Syntactic restrictions . . . 213
10.4.9.2.1 Transport protocols . . . 213
10.4.9.3 Semantics . . . 213
10.4.9.4 MIME type . . . 214
10.5 Application identification . . . 214
10.5.1 Encoding . . . 214
10.5.2 Effects on life cycle . . . 215

10.5.3 Authentication of application identification . . . 215
10.6 Control of application life cycle . . . 215
10.6.1 Entering and leaving the domain of an application . . . 215
10.6.2 Dynamic control of the application life cycle . . . 215
10.6.2.1 DVB-J . . . 216
10.6.2.2 DVB-HTML . . . 216
10.7 Generic descriptors . . . 217
10.7.1 Application Signalling Descriptor . . . 217
10.7.2 Data broadcast id descriptor . . . 217
10.7.2.1 Generic descriptor . . . 218
10.7.2.2 MHP data broadcast id descriptor . . . 218
10.7.3 Application descriptor . . . 219
10.7.4 User information descriptors . . . 220
10.7.4.1 Application name descriptor . . . 221
10.7.4.2 Application icons descriptor . . . 221
10.7.5 External application authorisation descriptor . . . 223
10.8 Transport protocol descriptors . . . 223
10.8.1 Transport protocol descriptor . . . 223
10.8.1.1 Transport via OC . . . 224
10.8.1.2 Transport via IP . . . 225
10.8.1.3 Transport via interaction channel . . . 226
10.8.2 IP Routing Descriptors . . . 226
10.8.2.1 Routing Descriptor IPv4 . . . 227
10.8.2.2 Routing Descriptor IPv6 . . . 227
10.8.3 Pre-fetch signalling . . . 228
10.8.3.1 Introduction . . . 228
10.8.3.2 Pre-fetch descriptor . . . 228
10.8.3.3 DII location descriptor . . . 229
10.9 DVB-J specific descriptors . . . 230
10.9.1 DVB-J application descriptor . . . 230
10.9.2 DVB-J application location descriptor . . . 230
10.10 DVB-HTML Specific descriptors . . . 231
10.10.1 DVB-HTML application descriptor . . . 231
10.10.2 DVB-HTML application location descriptor . . . 232
10.10.2.1 Example . . . 232
10.10.2.2 Application Entry Point . . . 232
10.10.3 DVB-HTML application boundary descriptor . . . 233
10.11 Constant values . . . 234
10.12 Service Information . . . 235
10.12.1 Service identifier descriptor . . . 235
10.13 Plug-in signalling . . . 236
10.13.1 Native signalling scenario . . . 236
10.13.2 MHP signalling scenario . . . 236
10.13.3 delegated application descriptor . . . 236
10.13.4 Plug-in descriptor . . . 237
10.14 Stored applications . . . 238
10.14.1 Use of signalling defined in MHP 1.0 . . . 238
10.14.1.1 Stored broadcast service related applications . . . 238
10.14.1.2 Stored stand-alone applications . . . 238
10.14.2 Application storage descriptor . . . 238
10.14.3 Application description file . . . 239
10.14.3.1 Description . . . 239
10.14.3.2 Application description file name and location . . . 240
10.14.3.3 Syntax . . . 240
10.14.3.4 Semantics . . . 240

11 DVB-J Platform . . . 241
11.1 The Virtual Machine . . . 241
11.2 General issues . . . 241
11.2.1 Basic Considerations . . . 241

11.2.2 Approach to Subsetting . . . 241
11.2.3 Class Loading . . . 241
11.2.4 Unloading . . . 242
11.2.5 Event listeners . . . 242
11.2.6 Event model in DAVIC APIs . . . 242
11.2.7 Event model in DAVIC & DVB APIs . . . 242
11.2.8 Tuning as a side-effect . . . 242
11.2.9 Intra application media resource management . . . 242
11.2.10 Application thread priority . . . 242
11.3 Fundamental DVB-J APIs . . . 243
11.3.1 Java platform APIs . . . 243
11.3.1.1 java.lang package . . . 243
11.3.1.2 java.lang.reflect package . . . 244
11.3.1.3 java.util . . . 244
11.3.1.4 java.util.zip . . . 244
11.3.1.5 java.io . . . 244
11.3.1.6 java.net . . . 244
11.3.1.7 java.beans . . . 245
11.3.1.8 java.math . . . 245
11.3.1.9 java.text . . . 245
11.3.2 MHP platform APIs . . . 246
11.3.2.1 org.dvb.lang . . . 246
11.3.2.2 org.dvb.event . . . 246
11.4 Presentation APIs . . . 246
11.4.1 Graphical User Interface API . . . 246
11.4.1.1 The Core GUI API . . . 246
11.4.1.2 TV user interface . . . 248
11.4.1.3 Extended graphics . . . 249
11.4.1.4 Handling of input events . . . 249
11.4.2 Streamed Media API . . . 250
11.4.2.1 Framework of solution . . . 250
11.4.2.2 Clarifications . . . 250
11.4.2.3 Default media player behaviour . . . 251
11.4.2.4 Required controls for video drips . . . 251
11.4.2.5 Extensions to the Framework . . . 251
11.4.2.5.1 DVB specified extensions . . . 251
11.4.2.5.2 Extensions in org.davic . . . 251
11.4.2.5.3 Extensions in javax.tv . . . 252
11.4.2.5.4 Required controls for broadcast profiles . . . 252
11.4.2.5.5 Clarifications . . . 252
11.4.2.6 Restrictions on the Framework for Broadcast . . . 252
11.4.2.7 Intersection Between MediaSelectControl and SubtitlingLanguageControl / AudioLanguageControl . . . 253
11.4.2.8 Intersection between Streamed Media API and TV User Interface API . . . 254
11.4.2.8.1 Basic Principles . . . 254
11.4.2.8.2 TV Behaviour Control . . . 254
11.4.2.8.3 Application Behaviour Control . . . 254
11.4.2.8.4 Dynamic Behaviour . . . 255
11.4.2.8.5 Resource Management Details . . . 255
11.5 Data Access APIs . . . 255
11.5.1 Broadcast Transport Protocol Access API . . . 255
11.5.1.1 Constraints on the java.io.File methods for broadcast carousels . . . 256
11.5.1.2 Methods dealing with write access . . . 256
11.5.1.3 Behaviour following loss of a broadcast file system . . . 257
11.5.2 Support for Multicast IP over the Broadcast Channel . . . 257
11.5.3 Support for IP over the Return Channel . . . 258
11.5.4 MPEG-2 Section Filter API . . . 258
11.5.5 Mid-Level Communications API . . . 258

11.5.6 Persistent Storage API . . . 258
11.6 Service Information and Selection APIs . . . 259
11.6.1 DVB Service Information API . . . 259
11.6.2 Service Selection API . . . 259
11.6.3 Tuning API . . . 259
11.6.4 Conditional Access API . . . 260
11.6.5 Protocol Independent SI API . . . 260
11.7 Common Infrastructure APIs . . . 261
11.7.1 APIs to support DVB-J application lifecycle . . . 261
11.7.1.1 Xlet properties . . . 261
11.7.1.2 Actions for DVB-J applications to perform in their destroy method . . . 261
11.7.2 Application discovery and launching APIs . . . 261
11.7.3 Inter-Application and Inter-Xlet communication API . . . 263
11.7.3.1 Remote Call Semantics . . . 263
11.7.3.1.1 Objects Passed by Remote Reference . . . 263
11.7.3.1.2 Objects Passed by Remote Copy . . . 264
11.7.3.1.3 Classloading Considerations . . . 265
11.7.3.1.4 Thread Usage . . . 265
11.7.3.1.5 Garbage Collection of Remote Objects . . . 265
11.7.4 Basic MPEG Concepts . . . 265
11.7.5 Resource Notification . . . 266
11.7.6 Content Referencing . . . 266
11.7.7 Common Error Reporting . . . 267
11.7.8 Plug-in APIs . . . 267
11.8 Security . . . 268
11.8.1 Basic Security . . . 268
11.8.1.1 java.security . . . 268
11.8.1.2 java.security.cert . . . 269
11.8.1.3 Other classes . . . 269
11.8.2 APIs to Support TLS / SSL Over the Return Channel . . . 269
11.8.3 Additional permissions classes . . . 269
11.8.4 General security issues . . . 269
11.9 Other APIs . . . 269
11.9.1 Timer Support . . . 269
11.9.2 User Settings and Preferences API . . . 270
11.9.3 Profile and version properties . . . 270
11.9.3.1 Information on options . . . 271
11.9.4 Non-CA smart card API . . . 271
11.9.4.1 Framework . . . 271
11.9.4.2 Clarifications . . . 271
11.9.4.3 Extensions . . . 271
11.9.4.4 Restrictions . . . 271
11.9.4.5 Modified semantics . . . 272
11.10 Java permissions . . . 272
11.10.1 Permissions for unsigned applications . . . 272
11.10.1.1 java.awt.AWTPermission . . . 272
11.10.1.2 java.net.SocketPermission: . . . 272
11.10.1.3 java.util.PropertyPermission . . . 272
11.10.1.4 java.lang.RuntimePermission . . . 272
11.10.1.5 java.io.SerializablePermission . . . 272
11.10.1.6 java.io.FilePermission . . . 273
11.10.1.7 javax.tv.media.MediaSelectPermission . . . 273
11.10.1.8 javax.tv.service.ReadPermission . . . 273
11.10.1.9 javax.tv.service.selection.ServiceContextPermission . . . 273
11.10.1.10 java.util.Locale.setDefault . . . 273
11.10.2 Additional Permissions for signed applications . . . 273
11.10.2.1 java.util.PropertyPermission . . . 273
11.10.2.2 java.io.FilePermission . . . 273

11.10.2.3 org.dvb.net.ca.CAPermission . . . 273
11.10.2.4 org.dvb.application.AppsControlPermission . . . 273
11.10.2.5 org.dvb.net.rc.RCPermission . . . 274
11.10.2.6 org.dvb.net.tuning.TunerPermission . . . 274
11.10.2.7 javax.tv.service.selection.SelectPermission . . . 274
11.10.2.8 org.dvb.user.UserPreferencePermission . . . 274
11.10.2.9 java.net.SocketPermission . . . 274
11.10.2.10 org.dvb.media.DripFeedPermission . . . 274
11.10.2.11 org.dvb.application.storage.ApplicationStoragePermission . . . 274
11.10.2.12 org.dvb.smartcard.SmartCardPermission . . . 274
11.10.2.13 ServiceContextPermission . . . 275
11.11 Content referencing . . . 275
11.11.1 Transport stream . . . 275
11.11.2 Network . . . 275
11.11.3 Bouquet . . . 276
11.11.4 Service . . . 276
11.11.4.1 MPEG/DVB specific service . . . 276
11.11.4.2 Generic Service . . . 277
11.11.5 DVB Event . . . 277
11.11.6 MPEG elementary stream . . . 278
11.11.7 File . . . 278
11.11.8 Directory . . . 279
11.11.9 Drip feed decoder . . . 279
11.11.10 Irrelevant . . . 279
11.11.11 Methods working on many Locator types . . . 279
11.11.12 Support for the HTTP protocol in DVB-J . . . 280
11.12 Stand-alone applications . . . 281
11.12.1 Common behaviour . . . 281
11.12.2 Stored services . . . 281
11.12.2.1 Stored application APIs . . . 281
11.12.2.2 Modified behaviour of MHP 1.0 APIs . . . 281
11.13 Support for DVB-HTML . . . 282
11.13.1 Document object model APIs . . . 282
11.13.1.1 Framework . . . 282
11.13.1.2 DVB defined extensions . . . 282
11.13.1.3 Read Only Access to DOM . . . 282
11.13.2 Embedded Xlets in a DVB-HTML Page . . . 282
11.14 Internet access . . . 283
11.14.1 Internet client control APIs . . . 283
11.14.2 Internet applet support . . . 283
11.14.2.1 HTML tags . . . 283
11.14.2.2 Common MHP features . . . 283
11.14.2.3 Extended or modified common MHP features . . . 283
11.14.2.4 The java.awt package . . . 284
11.14.2.5 Additional features for applet support . . . 284
11.14.2.6 Security . . . 284

12 Security . . . 286
12.1 Introduction . . . 286
12.1.1 Overview of the security framework for applications . . . 286
12.1.2 Overview of return channel security . . . 286
12.2 Authentication of applications . . . 286
12.2.1 Overview of authentication messages . . . 286
12.2.1.1 Hash codes . . . 287
12.2.1.2 Signatures . . . 287
12.2.1.3 Certificates . . . 287
12.2.1.4 Authentication of hierarchical file systems . . . 288
12.3 Message transport . . . 288
12.4 Detail of application authentication messages . . . 289
12.4.1 HashFile . . . 289

12.4.1.1 Description . . . 289
12.4.1.2 HashFile location and naming conventions . . . 290
12.4.1.3 Digest value computation rules . . . 290
12.4.1.4 Special authentication rules . . . 290
12.4.2 SignatureFile . . . 291
12.4.2.1 Description . . . 291
12.4.2.2 SignatureFile location and naming conventions . . . 291
12.4.2.3 Supported algorithms . . . 292
12.4.2.4 Signature computation rules . . . 292
12.4.2.5 Authentication rules . . . 292
12.4.3 CertificateFile . . . 292
12.4.3.1 Description . . . 292
12.4.3.2 ASN.1 encoding . . . 293
12.4.3.3 Supported algorithms . . . 293
12.4.3.4 Name matching . . . 293
12.4.3.5 CertificateFile location and naming conventions . . . 293
12.4.3.6 Authentication rules . . . 293
12.4.4 Integration . . . 293
12.5 Profile of X.509 certificates for authentication of applications . . . 294
12.5.1 signatureAlgorithm . . . 294
12.5.1.1 MD5 with RSA . . . 294
12.5.1.2 SHA-1 with RSA . . . 294
12.5.1.3 parameters . . . 294
12.5.2 signatureValue . . . 294
12.5.3 version . . . 294
12.5.4 issuer . . . 295
12.5.4.1 minimum requirement . . . 295
12.5.4.2 certificate authority responsibility . . . 295
12.5.5 validity . . . 295
12.5.6 subject . . . 295
12.5.7 SubjectPublic Key Info . . . 295
12.5.7.1 rsaEncryption . . . 295
12.5.7.2 subjectPublicKey . . . 295
12.5.8 Unique Identifiers . . . 296
12.5.9 Extensions . . . 296
12.6 Security policy for applications . . . 297
12.6.1 General principles . . . 297
12.6.2 Permission request file . . . 298
12.6.2.1 File encoding . . . 298
12.6.2.1.1 XML . . . 298
12.6.2.1.2 MHP 1.0 . . . 298
12.6.2.1.3 MHP 1.1 . . . 299
12.6.2.1.4 Number representation . . . 301
12.6.2.2 File integrity . . . 301
12.6.2.3 Example . . . 301
12.6.2.4 Permission request file name and location . . . 302
12.6.2.5 Permission request file . . . 302
12.6.2.5.1 Minimum permissions . . . 302
12.6.2.5.2 Syntax and semantics . . . 302
12.6.2.6 Credentials . . . 303
12.6.2.7 File Access . . . 305
12.6.2.7.1 Unsigned applications . . . 305
12.6.2.7.2 Default policy for signed applications . . . 305
12.6.2.7.3 Permission request syntax . . . 306
12.6.2.8 CA API . . . 306
12.6.2.8.1 Unsigned applications . . . 306
12.6.2.8.2 Signed applications . . . 306
12.6.2.8.3 Conditional Access Permission syntax . . . 307
12.6.2.9 Application lifecycle control policy . . . 307

12.6.2.9.1 Unsigned applications . . . 307
12.6.2.9.2 Default policy for Signed applications . . . 307
12.6.2.9.3 Syntax . . . 307
12.6.2.10 Return channel access policy . . . 307
12.6.2.10.1 Unsigned applications . . . 307
12.6.2.10.2 Signed applications . . . 307
12.6.2.10.3 Return channel permission syntax . . . 308
12.6.2.11 Tuning access policy . . . 308
12.6.2.11.1 Unsigned applications . . . 308
12.6.2.11.2 Signed applications . . . 308
12.6.2.11.3 Tuner Permission syntax . . . 308
12.6.2.12 Service selection policy . . . 308
12.6.2.12.1 Unsigned applications . . . 308
12.6.2.12.2 Signed applications . . . 308
12.6.2.12.3 Service Selection Permission . . . 309
12.6.2.13 Media API access policy . . . 309
12.6.2.14 Inter-application communication policy . . . 309
12.6.2.14.1 Unsigned applications . . . 309
12.6.2.14.2 Signed applications . . . 309
12.6.2.15 User Setting and Preferences access policy . . . 309
12.6.2.15.1 Unsigned applications . . . 309
12.6.2.15.2 Signed applications . . . 309
12.6.2.15.3 Permission syntax . . . 309
12.6.2.16 Network permissions . . . 310
12.6.2.16.1 Unsigned applications . . . 310
12.6.2.16.2 Signed applications . . . 310
12.6.2.16.3 Permission syntax . . . 310
12.6.2.17 Dripfeed permissions . . . 310
12.6.2.17.1 Unsigned applications . . . 310
12.6.2.17.2 Default policy for signed applications . . . 310
12.6.2.17.3 Permission request syntax . . . 310
12.6.2.18 Privileged Runtime Code Extension Permission . . . 310
12.6.2.18.1 Unsigned Applications . . . 310
12.6.2.18.2 Signed applications with no permission request file . . . 310
12.6.2.18.3 Signed applications with a permission request file . . . 311
12.6.2.18.4 Permission request syntax . . . 311
12.6.2.19 Application storage . . . 311
12.6.2.19.1 Unsigned applications . . . 311
12.6.2.19.2 Default policy for signed applications . . . 311
12.6.2.19.3 Permission request syntax . . . 311
12.6.2.20 Non-CA smart card access . . . 311
12.6.2.20.1 Unsigned applications . . . 311
12.6.2.20.2 Default policy for signed applications . . . 311
12.6.2.20.3 Permission request syntax . . . 312
12.7 Example of creating an application that can be authenticated . . . 312
12.7.1 Scenario Example . . . 312
12.7.2 Hashes and signature computations: . . . 313
12.7.2.1 Computation of the hashes of the root/Xlet1/classes/subclasses directory . . . 313
12.7.2.2 Computation of the hashes of the of root/Xlet1/classes directory . . . 313
12.7.2.3 Computation of the hashes of the of root/Xlet1 directory . . . 314
12.7.2.4 Computation of the signature . . . 314
12.8 Procedures for application certificates and signatures . . . 314
12.9 Certificate management . . . 315
12.9.1 Certificate Revocation Lists . . . 315
12.9.1.1 Introduction (informative) . . . 315
12.9.1.2 Distribution of CRLs (informative) . . . 315
12.9.1.2.1 Distribution via return channel . . . 315
12.9.1.2.2 Distribution via MPEG stream . . . 315
12.9.1.3 CRL retention . . . 315

12.9.1.3.1 Requirement . . . 315
12.9.1.3.2 Storage requirement . . . 315
12.9.1.3.3 Storage management . . . 315
12.9.1.4 CRL file location and naming convention . . . 316
12.9.1.5 Operational model . . . 316
12.9.1.6 Examples . . . 316
12.9.1.6.1 Revocation of a broadcaster's certificate . . . 316
12.9.1.6.2 Revocation of a CA's certificate . . . 316
12.9.1.7 CRL format . . . 317
12.9.1.8 Profile of CRL . . . 317
12.9.1.9 CRL Processing . . . 318
12.9.2 Root certificate management . . . 318
12.9.2.1 Introduction . . . 318
12.9.2.2 Security of RCMM . . . 318
12.9.2.3 Format of RCMM . . . 319
12.9.2.4 Distribution of RCMM . . . 319
12.9.2.5 RCMM Processing . . . 319
12.9.2.6 Example: Renewal of a root certificate . . . 320
12.10 Security on the return channel . . . 320
12.10.1 MHP functionality . . . 320
12.10.2 TLS cipher suites . . . 321
12.10.3 The EDE112 cipher . . . 321
12.10.4 Downloading of certificates for TLS . . . 321
12.10.4.1 Introduction . . . 321
12.10.4.2 Usage of certificate in TLS . . . 322
12.10.4.2.1 When certificates are delivered with the application . . . 322
12.10.4.2.2 When no certificates are provided . . . 322
12.11 The internet profile of X.509 (informative) . . . 322
12.11.1 Main part of the certificate . . . 323
12.11.1.1 Certificate . . . 323
12.11.1.2 signatureAlgorithm . . . 323
12.11.1.3 signatureValue . . . 323
12.11.1.4 tbsCertificate . . . 323
12.11.1.5 version . . . 324
12.11.1.6 serialNumber . . . 324
12.11.1.7 signature . . . 324
12.11.1.8 issuer . . . 324
12.11.1.9 validity . . . 325
12.11.1.9.1 UTCTime . . . 325
12.11.1.9.2 GeneralizedTime . . . 325
12.11.1.10 subject . . . 325
12.11.1.10.1 issuerUniqueID . . . 325
12.11.1.10.2 subjectUniqueID . . . 326
12.11.1.11 SubjectPublic Key Info . . . 326
12.11.1.12 Unique Identifiers . . . 326
12.11.1.13 Extensions . . . 327
12.11.2 Standard certificate extensions . . . 327
12.11.2.1 Authority key identifier . . . 327
12.11.2.2 Subject key identifier . . . 327
12.11.2.3 Key usage . . . 327
12.11.2.4 Private key usage period . . . 327
12.11.2.5 Certificate policies . . . 328
12.11.2.6 Policy mappings . . . 328
12.11.2.7 Subject Alternative Name . . . 328
12.11.2.8 Issuer Alternative Name . . . 329
12.11.2.9 Subject Directory attributes . . . 329
12.11.2.10 Basic Constraints . . . 329
12.11.2.11 Name Constraints . . . 329
12.11.2.12 Policy Constraints . . . 329

12.11.2.13 Extended key usage field . . . 330
12.11.2.14 CRL Distribution points . . . 330
12.12 MHP certification procedures . . . 330
12.13 Plug-ins . . . 331
12.14 Applications loaded from an interaction channel . . . 331
12.14.1 Permission for application loading from the return channel . . . 331
12.15 Stored applications . . . 331
12.16 Inner applications and content embedded within other applications . . . 332

13 Graphics reference model . . . 333
13.1 Introduction . . . 333
13.1.1 Interapplication interaction . . . 333
13.2 General Issues . . . 334
13.2.1 Coordinate Spaces . . . 334
13.2.1.1 Normalised screen space . . . 334
13.2.1.2 User space . . . 335
13.2.1.3 Pixel Aspect Ratio . . . 337
13.2.1.4 Video space . . . 338
13.3 Graphics . . . 338
13.3.1 Modelling of the MHP display stack composition . . . 338
13.3.2 AWT Reference Model in the MHP . . . 340
13.3.3 HAVi devices and AWT components . . . 341
13.3.3.1 Video and graphics pixel aligned . . . 343
13.3.3.2 Zero graphics impact . . . 343
13.3.4 Composition . . . 343
13.3.4.1 AWT paint rule . . . 343
13.3.5 Composition Rules . . . 344
13.3.5.1 Components generally . . . 344
13.3.6 Extensions to the AWT graphics capabilities . . . 345
13.3.6.1 Graphics Objects in the MHP . . . 345
13.3.6.2 Buffered Image . . . 345
13.3.6.3 DVBColor . . . 345
13.3.6.3.1 Modified packed colour representation . . . 345
13.4 Video . . . 346
13.4.1 Component-based players and background players . . . 346
13.4.2 Modelling MPEG decoding and presentation pipeline . . . 346
13.4.3 Coordinate Spaces . . . 347
13.4.4 Video components . . . 348
13.5 Subtitles . . . 349
13.5.1 Language and presentation setting . . . 349
13.5.2 Relation to graphics . . . 349
13.5.3 Coordinate Spaces . . . 349
13.6 Approximations . . . 350
13.6.1 Approximations in composition . . . 350
13.6.1.1 Implementation of modes . . . 350
13.6.1.1.1 Graphics directly over video . . . 350
13.6.1.1.2 Graphics over other graphics . . . 350
13.6.1.2 Approximation of alpha . . . 351
13.6.1.3 Approximation of colour . . . 352

14 System integration aspects . . . 353
14.1 Namespace mapping (DVB Locator) . . . 353
14.1.1 dvb_entity = dvb_service . . . 353
14.1.2 dvb_entity = dvb_service_component . . . 354
14.1.3 dvb_hier_part = dvb_abs_path . . . 354
14.1.4 dvb_abs_path . . . 354
14.2 Reserved names . . . 354
14.3 XML notation . . . 355
14.4 Network signalling . . . 357
14.5 Text encoding of application identifiers . . . 357

14.6 Reserved names for persistent storage . . . 357
14.7 Files and file names . . . 358
14.8 Locators and content referencing . . . 358
14.9 Service identification . . . 359
14.9.1 Syntax of the textual service identifier . . . 359
14.9.2 Handling of the textual service identifiers within the MHP terminal . . . 360

15 Detailed platform profile definitions . . . 361
15.1 PNG - restrictions . . . 363
15.1.1 PNG Aspect ratios . . . 363
15.2 Minimum media formats supported by DVB-J APIs . . . 364
15.3 JPEG - restrictions . . . 364
15.4 Locale support . . . 364

16 Registry of Constants . . . 365
16.1 System constants . . . 365
16.2 DVB-J constants . . . 365
16.2.1 Public and Protected final static primitive fields from DVB packages . . . 365
16.2.2 Public and Protected final static primitive fields from standard Java packages . . . 368

17 Internet access clients . . . 369
17.1 Referencing DVB services and content within WWW content . . . 369
17.2 Minimum requirements for internet clients . . . 369
17.3 Internet streamed media . . . 369

Annex A (normative): External references; errata, clarifications and exemptions . . . 370
A.1 JAE 1.1.8 API [31] . . . 370
A.1.1 java.lang.ThreadGroup.getParent() . . . 370
A.1.2 java.net.URLconnection.setFileNameMap . . . 370
A.1.3 java.util.Locale.setDefault . . . 370
A.1.4 java.lang.Class . . . 370
A.1.5 java.awt.Font . . . 370
A.2 Java Language Spec [32] . . . 370
A.2.1 java.lang.ThreadGroup.getParent() . . . 370
A.2.2 java.lang.Runtime.runFinalizersOnExit() . . . 370
A.2.3 java.lang.System.runFinalizersOnExit() . . . 370
A.3 Java Media Player Specification [33] . . . 371
A.3.1 javax.media.protocol.URLDataSource.sources . . . 371
A.4 Java VM [34] . . . 371
A.5 Java TV [51] . . . 371
A.5.1 javax.tv.service.selection . . . 371
A.5.1.1 PresentationTerminatedEvent . . . 371
A.5.1.2 ServiceContext.select(Locator []) . . . 372
A.5.2 javax.tv.util.TVTimer . . . 372
A.5.2.1 scheduleTimerSpec(TVTimerSpec) . . . 372
A.5.3 javax.tv.util.TVTimerSpec . . . 372
A.5.3.1 setAbsoluteTime(long) . . . 372
A.5.3.2 setTime(long) . . . 372
A.5.4 javax.tv.xlet.Xlet . . . 372
A.5.4.1 Xlet state descriptions . . . 372
A.5.4.2 Own service context . . . 372
A.6 DAVIC 1.4.1p9 [3] . . . 373
A.6.1 org.davic.mpeg.NotAuthorizedException . . . 373
A.6.2 org.davic.mpeg.dvb . . . 376
A.6.2.1 DvbElementaryStream . . . 376
A.6.3 org.davic.mpeg.sections . . . 376
A.6.3.1 RingSectionFilter . . . 376
A.6.3.2 Section . . . 376
A.6.3.2.1 clone() . . . 376
A.6.3.2.2 Started Section Filters . . . 376
A.6.3.2.3 getData() . . . 376

A.6.3.2.4 getFullStatus() . . . 376
A.6.3.3 SectionFilter . . . 376
A.6.3.3.1 Cross reference error . . . 376
A.6.3.3.2 startFiltering(java.lang.Object, int, int) . . . 377
A.6.3.3.3 startFiltering(java.lang.Object, int, int, int, byte[], byte[]) . . . 377
A.6.3.3.4 startFiltering (appData, pid, tableId) exceptions . . . 377
A.6.3.4 SectionFilterGroup . . . 377
A.6.3.4.1 NotAuthorizedException . . . 377
A.6.3.4.2 numberOfFilters . . . 377
A.6.3.4.3 sectionSize . . . 377
A.6.3.4.4 ringSize . . . 377
A.6.3.5 TimeOutEvent . . . 377
A.6.4 org.davic.media . . . 378
A.6.4.1 FreezeControl.resume() . . . 378
A.6.4.2 MediaTimePositionChangedEvent . . . 378
A.6.4.3 NotAuthorizedMediaException . . . 378
A.6.5 org.davic.net . . . 379
A.6.5.1 InvalidLocatorException . . . 379
A.6.5.2 Locator . . . 379
A.6.5.2.1 Locator() . . . 379
A.6.5.2.2 toExternalForm() . . . 379
A.6.5.3 tuning . . . 380
A.6.5.3.1 NetworkInterfaceController . . . 380
A.6.5.4 ca . . . 380
A.6.5.4.1 CAMessage . . . 380
A.6.5.4.2 CAModule . . . 381
A.6.5.4.3 CAModuleManager . . . 383
A.6.5.4.4 NoFreeCapacityException . . . 383
A.6.5.4.5 MMIObject . . . 384
A.6.5.4.6 DescramblerProxy . . . 384
A.6.5.4.7 StartMMIEvent(MMIObject, int, java.lang.Object) . . . 385
A.6.5.5 dvb.DvbLocator(int onid, int tsid, int serviceid, int eventid, int componenttags[], String filePath) . . . 385
A.6.5.6 dvb.DvbLocator . . . 385
A.7 CSS 2 [87] . . . 386

Annex B (normative): Object carousel . . . 388
B.1 Introduction . . . 388
B.1.1 Key to notation . . . 388
B.2 Object Carousel Profile . . . 388
B.2.1 DSM-CC Sections . . . 388
B.2.1.1 Sections per TS packet . . . 389
B.2.2 Data Carousel . . . 389
B.2.2.1 General . . . 389
B.2.2.2 DownloadInfoIndication . . . 389
B.2.2.3 DownloadServerInitiate . . . 389
B.2.2.4 ModuleInfo . . . 390
B.2.2.4.1 Label descriptor . . . 390
B.2.2.4.2 Caching priority descriptor . . . 391
B.2.2.5 ServiceGatewayInfo . . . 392
B.2.2.6 Download Cancel . . . 392
B.2.3 The Object Carousel . . . 393
B.2.3.1 BIOP Generic Object Message . . . 393
B.2.3.2 CORBA strings . . . 393
B.2.3.3 BIOP FileMessage . . . 393
B.2.3.4 Content type descriptor . . . 394
B.2.3.5 BIOP DirectoryMessage . . . 395
B.2.3.6 BIOP ServiceGateway message . . . 397
B.2.3.7 BIOP Interoperable Object References . . . 397

B.2.3.7.1 BIOPProfileBody . . . 398
B.2.3.7.2 LiteOptionsProfileBody . . . 399
B.2.3.8 BIOP StreamMessage . . . 401
B.2.3.9 BIOP StreamEventMessage . . . 403
B.2.4 Stream Events . . . 404
B.2.4.1 Stream & StreamEvent messages . . . 404
B.2.4.1.1 Association with time bases . . . 404
B.2.4.1.2 Event names and event ids . . . 405
B.2.4.1.3 Stream event life time . . . 405
B.2.4.2 Stream Descriptors . . . 405
B.2.4.2.1 NPT Reference descriptor . . . 405
B.2.4.2.2 Stream event descriptor . . . 406
B.2.4.2.3 Unused descriptors . . . 406
B.2.4.2.4 Clarification of number encoding . . . 406
B.2.4.3 DSM-CC Sections carrying Stream Descriptors . . . 407
B.2.4.3.1 Section version number . . . 407
B.2.4.3.2 Single firing of "do it now" events . . . 407
B.2.4.3.3 Section number . . . 407
B.2.4.3.4 DSM-CC sections for DSMCC_descriptor_list() . . . 407
B.2.4.3.5 Encoding of table id extension . . . 407
B.2.4.4 Timebases . . . 407
B.2.4.5 Monitoring stream events . . . 408
B.2.4.5.1 NPT reference monitoring . . . 408
B.2.4.5.2 Timebase stimulated event monitoring . . . 408
B.2.4.5.3 "do it now" events . . . 408
B.2.4.5.4 scheduled events . . . 409
B.2.4.5.5 number of NPT components . . . 409
B.2.5 Assignment and use of transactionId values . . . 409
B.2.6 Mapping of objects to data carousel modules . . . 410
B.2.7 Compression of modules . . . 410
B.2.8 Mounting an Object Carousel . . . 411
B.2.8.1 carousel_id_descriptor . . . 412
B.2.8.2 DVB-J mounting of an object carousel . . . 413
B.2.9 Unavailability of a carousel . . . 413
B.3 AssociationTag Mapping . . . 414
B.3.1 Decision algorithm for association tag mapping . . . 414
B.3.1.1 TapUse is **not** BIOP_PROGRAM_USE . . . 414
B.3.1.2 TapUse **is** BIOP_PROGRAM_USE . . . 415
B.3.2 DSM-CC association_tags to DVB component_tags . . . 415
B.3.3 deferred_association_tag_descriptor . . . 415
B.4 Example of an Object Carousel (informative) . . . 416
B.5 Caching . . . 417
B.5.1 Determining file version . . . 417
B.5.2 Transparency levels of caching . . . 417
B.5.2.1 Transparent caching . . . 417
B.5.2.1.1 Active caching . . . 418
B.5.2.1.2 Passive caching . . . 418
B.5.2.1.3 DII repetition rate . . . 418
B.5.2.2 Semi-transparent caching . . . 418
B.5.2.2.1 Implications for the terminal (informative) . . . 418
B.5.2.3 Static caching . . . 419
B.5.2.3.1 Implications for the broadcaster (informative) . . . 419
B.5.2.3.2 Implications for the terminal (informative) . . . 419

Annex C (informative): References . . . 420

Annex D (normative): Text presentation . . . 421
D.1 Scope . . . 421
D.2 Fonts . . . 421
D.2.1 Embedded fonts . . . 421

D.2.2 Downloaded fonts . . . 421
D.2.2.1 Font technology . . . 421
D.2.2.2 Font index files . . . 422
D.2.2.2.1 Format of file . . . 422
D.2.2.2.2 Element semantics . . . 422
D.2.2.2.3 Example . . . 423
D.2.2.3 Name and location of font index files . . . 423
D.2.2.3.1 General . . . 423
D.2.2.3.2 Name of file . . . 423
D.2.2.3.3 Location . . . 423
D.2.2.4 Specification of fonts at run time . . . 423
D.2.2.4.1 DVB-J . . . 423
D.3 Text rendering . . . 424
D.3.1 Philosophy . . . 424
D.3.2 Low and high level rendering . . . 424
D.3.2.1 Low level rendering . . . 424
D.3.2.2 High level rendering . . . 424
D.3.3 Font Definition . . . 424
D.3.3.1 "Physical" font data . . . 425
D.3.4 Converting font metrics to display pixels . . . 425
D.3.4.1 Vertical resolution . . . 426
D.3.4.2 Horizontal resolution . . . 426
D.3.5 Rendering within limits . . . 426
D.3.5.1 Vertical limits . . . 427
D.3.5.2 Horizontal limits . . . 428
D.3.6 "logical" text width rules . . . 428
D.3.6.1 Computing "logical" text width . . . 428
D.3.6.1.1 Font sizes . . . 429
D.3.6.1.2 Character widths . . . 429
D.3.6.1.3 Kerning . . . 429
D.3.6.1.4 Tracking . . . 429
D.3.6.2 Logical text width . . . 429
D.3.7 Line breaking . . . 430
D.3.7.1 Truncation of text . . . 430
D.3.8 Tabulation . . . 430
D.3.9 Placing runs of characters & words . . . 431
D.3.10 Control of text flow . . . 432
D.4 Text mark-up . . . 432
D.4.1 White Space Characters . . . 432
D.4.2 Marker characters . . . 432
D.4.3 Non-printing characters . . . 432
D.4.4 Format Control Mark-up . . . 433
D.4.5 Future compatibility . . . 433

Annex E (normative): Character set . . . 434
E.1 Basic Euro Latin character set . . . 434

Annex F (informative): Authoring & Implementation Guidelines . . . 439
F.1 Authoring Guidelines . . . 439
F.2 Implementation Guidelines . . . 439
F.3 Authoring guidelines for DVB-J . . . 439
F.4 Authoring guidelines for DVB HTML . . . 439
F.4.1 CSS2 Authoring guidelines . . . 439
F.4.1.1 Selectors . . . 439
F.4.1.2 Properties . . . 439
F.4.1.2.1 Generalities . . . 439
F.4.1.2.2 Visual Formatting Model . . . 439
F.4.1.2.3 Colours and Background . . . 440
F.4.1.2.4 Visual Effects . . . 440
F.4.1.2.5 Fonts . . . 440

F.4.1.2.6 Text . . . 440
F.4.1.2.7 User Interface . . . 441

Annex G (normative): Minimum Platform Capabilities . . . 442
G.1 Graphics . . . 442
G.1.1 Device capabilities . . . 442
G.1.2 Video presentation capabilities . . . 442
G.1.3 Image processing capabilities . . . 443
G.1.4 Alpha capabilities . . . 443
G.1.5 Colour capabilities . . . 443
G.1.6 MPEG I frame and Video drips . . . 444
G.2 Audio . . . 444
G.3 Video . . . 445
G.4 Resident fonts and text rendering . . . 445
G.4.1 The built-in font . . . 445
G.4.2 Presentation to DVB-J . . . 445
G.4.3 Text directions . . . 445
G.5 Input events . . . 446
G.6 Memory . . . 446
G.7 Other resources . . . 447

Annex H (normative): DVB-J fundamental classes . . . 449
DVBClassLoader . . . 451

Annex I (normative): DVB-J event API . . . 453
I.1 Overview . . . 453
I.2 The resource management . . . 454
I.3 The Event Repository . . . 454
I.3.1 Example . . . 454
EventManager . . . 457
OverallRepository . . . 460
RepositoryDescriptor . . . 461
UserEvent . . . 462
UserEventListener . . . 465
UserEventRepository . . . 466

Annex J (normative): DVB-J persistent storage API . . . 469
FileAccessPermissions . . . 471
FileAttributes . . . 473

Annex K (informative): Extensions . . . 476

Annex L (normative): User Settings and Preferences API . . . 477
Facility . . . 479
GeneralPreference . . . 480
Preference . . . 481
UnsupportedPreferenceException . . . 484
UserPreferenceChangeEvent . . . 485
UserPreferenceChangeListener . . . 486
UserPreferenceManager . . . 487
UserPreferencePermission . . . 489

Annex M (normative): SI Access API . . . 490
Descriptor . . . 494
DescriptorTag . . . 496
PMTElementaryStream . . . 500
PMTService . . . 502
PMTStreamType . . . 504
SIBouquet . . . 505
SIDatabase . . . 509

SIEvent . . . 525
SIException . . . 529
SIIllegalArgumentException . . . 530
SIInformation . . . 531
SIInvalidPeriodException . . . 535
SIIterator . . . 536
SILackOfResourcesEvent . . . 537
SIMonitoringEvent . . . 538
SIMonitoringListener . . . 541
SIMonitoringType . . . 542
SINetwork . . . 543
SINotInCacheEvent . . . 547
SIObjectNotInTableEvent . . . 548
SIRequest . . . 549
SIRequestCancelledEvent . . . 550
SIRetrievalEvent . . . 551
SIRetrievalListener . . . 553
SIRunningStatus . . . 554
SIService . . . 555
SIServiceType . . . 561
SISuccessfulRetrieveEvent . . . 563
SITableNotFoundEvent . . . 564
SITableUpdatedEvent . . . 565
SITime . . . 566
SITransportStream . . . 567
SITransportStreamBAT . . . 569
SITransportStreamDescription . . . 570
SITransportStreamNIT . . . 571
SIUtil . . . 572
TextualServiceIdentifierQuery . . . 573

Annex N (normative): Streamed Media API Extensions . . . 574
ActiveFormatDescriptionChangedEvent . . . 577
AspectRatioChangedEvent . . . 578
BackgroundVideoPresentationControl . . . 579
CAException . . . 580
CAStopEvent . . . 581
DFCChangedEvent . . . 583
DripFeedDataSource . . . 584
DripFeedPermission . . . 587
NoComponentSelectedEvent . . . 588
PresentationChangedEvent . . . 590
ServiceRemovedEvent . . . 592
StopByResourceLossEvent . . . 594
SubtitleAvailableEvent . . . 596
SubtitleListener . . . 597
SubtitleNotAvailableEvent . . . 598
SubtitleNotSelectedEvent . . . 599
SubtitleSelectedEvent . . . 600
SubtitlingEventControl . . . 601
VideoFormatControl . . . 602
VideoFormatEvent . . . 607
VideoFormatListener . . . 608
VideoPresentationControl . . . 609
VideoTransformation . . . 614

Annex O (normative): Integration of the JavaTV SI API and DVB SI . . . 617
O.1 Introduction . . . 617
O.2 Mapping of the JavaTV SI API to DVB SI . . . 617
O.2.1 javax.tv.service.Service . . . 617

O.2.1.1 getName . . . 617
O.2.1.2 getServiceType . . . 617
O.2.2 javax.tv.service.ServiceComponent . . . 617
O.2.2.1 getComponentName . . . 617
O.2.2.2 getAssociatedLanguage . . . 617
O.2.2.3 getStreamType . . . 617
O.2.3 javax.tv.service.ServiceType . . . 618
O.2.4 javax.tv.service.StreamType . . . 618
O.2.5 javax.tv.service.SIElement . . . 618
O.2.5.1 getServiceInformationType . . . 618
O.2.6 javax.tv.service.SIManager . . . 619
O.2.6.1 getSupportedDimensions . . . 619
O.2.6.2 getRatingDimension . . . 619
O.2.6.3 retrieveSIElement . . . 619
O.2.6.4 getTransports . . . 619
O.2.6.5 filterServices . . . 619
O.2.7 javax.tv.service.navigation.SIElementFilter . . . 619
O.2.8 javax.tv.service.navigation.ServiceDetails . . . 619
O.2.8.1 getLongName . . . 619
O.2.8.2 getServiceType . . . 619
O.2.8.3 retrieveServiceDescription . . . 619
O.2.8.4 retrieveComponents . . . 619
O.2.9 javax.tv.service.navigation.CAIdentification . . . 620
O.2.9.1 getCASystemIds . . . 620
O.2.9.2 isFree . . . 620
O.2.10 javax.tv.service.navigation.RatingDimension . . . 620
O.2.10.1 getDimensionName . . . 620
O.2.10.2 getNumberOfLevels . . . 620
O.2.10.3 getRatingLevelDescription . . . 620
O.2.11 javax.tv.service.navigation.ServiceProviderInformation . . . 620
O.2.11.1 getProviderName . . . 620
O.2.12 javax.tv.service.transport.Transport . . . 620
O.2.13 javax.tv.service.transport.Bouquet . . . 620
O.2.13.1 getBouquetID . . . 621
O.2.13.2 getName . . . 621
O.2.13.3 getLocator . . . 621
O.2.14 javax.tv.service.transport.Network . . . 621
O.2.14.1 getNetworkID . . . 621
O.2.14.2 getName . . . 621
O.2.14.3 getLocator . . . 621
O.2.15 javax.tv.service.transport.TransportStream . . . 621
O.2.15.1 getTransportStreamID . . . 621
O.2.15.2 getDescription . . . 621
O.2.16 javax.tv.service.guide.ProgramEvent . . . 621
O.2.16.1 getDuration . . . 621
O.2.16.2 getStartTime . . . 621
O.2.16.3 getEndTime . . . 621
O.2.16.4 getName . . . 622
O.2.16.5 retrieveDescription . . . 622
O.2.16.6 getRating . . . 622
O.2.17 javax.tv.service.guide.ContentRatingAdvisory . . . 622
O.2.17.1 getDimensionNames . . . 622
O.2.17.2 getRatingLevel . . . 622
O.2.17.3 getRatingText . . . 622
O.2.17.4 getDisplayText . . . 622
O.3 Integration of the JavaTV SI API and the DVB SI API . . . 623

Annex P (normative): Broadcast Transport Protocol Access . . . 624
AsynchronousLoadingEvent . . . 628

AsynchronousLoadingEventListener . . . 629
DSMCCException . . . 630
DSMCCObject . . . 631
DSMCCStream . . . 637
DSMCCStreamEvent . . . 641
IllegalObjectTypeException . . . 644
InsufficientResourcesException . . . 645
InvalidAddressException . . . 646
InvalidFormatEvent . . . 647
InvalidFormatException . . . 648
InvalidPathnameEvent . . . 649
InvalidPathNameException . . . 650
LoadingAbortedEvent . . . 651
MPEGDeliveryErrorEvent . . . 652
MPEGDeliveryException . . . 653
NotEntitledEvent . . . 654
NotEntitledException . . . 655
NothingToAbortException . . . 656
NotLoadedException . . . 657
NPTDiscontinuityEvent . . . 658
NPTListener . . . 660
NPTPresentEvent . . . 661
NPTRate . . . 662
NPTRateChangeEvent . . . 663
NPTRemovedEvent . . . 664
NPTStatusEvent . . . 665
ObjectChangeEvent . . . 666
ObjectChangeEventListener . . . 668
ServerDeliveryErrorEvent . . . 669
ServerDeliveryException . . . 670
ServiceDomain . . . 671
ServiceXFRErrorEvent . . . 675
ServiceXFRException . . . 676
ServiceXFRReference . . . 678
StreamEvent . . . 680
StreamEventListener . . . 682
SuccessEvent . . . 683
UnknownEventException . . . 684

Annex Q (normative): Datagram Socket Buffer Control . . . 685
DatagramSocketBufferControl . . . 687

Annex R (normative): DVB-J Return Channel Connection Management API . . . 688
ConnectionEstablishedEvent . . . 690
ConnectionFailedEvent . . . 691
ConnectionListener . . . 692
ConnectionParameters . . . 693
ConnectionRCEvent . . . 695
ConnectionRCInterface . . . 696
ConnectionTerminatedEvent . . . 700
IncompleteTargetException . . . 701
PermissionDeniedException . . . 702
RCInterface . . . 703
RCInterfaceManager . . . 705
RCInterfaceReleasedEvent . . . 707
RCInterfaceReservedEvent . . . 708
RCPermission . . . 709

Annex S (normative): Application Listing and Launching . . . 711
AppAttributes . . . 713

AppIcon . . . 718
AppID . . . 719
AppProxy . . . 721
AppsControlPermission . . . 725
AppsDatabase . . . 727
AppsDatabaseEvent . . . 731
AppsDatabaseEventListener . . . 733
AppsDatabaseFilter . . . 735
AppStateChangeEvent . . . 736
AppStateChangeEventListener . . . 738
CurrentServiceFilter . . . 739
DVBHTMLProxy . . . 740
DVBJProxy . . . 742
IllegalProfileParameterException . . . 744
LanguageNotAvailableException . . . 745

Annex T (normative): Permissions . . . 746
CAPermission . . . 748
DvbNetworkInterfaceSIUtil . . . 751
TunerPermission . . . 752

Annex U (normative): Extended graphics APIs . . . 753
DVBAlphaComposite . . . 755
DVBBufferedImage . . . 760
DVBColor . . . 767
DVBGraphics . . . 771
DVBRasterFormatException . . . 775
DVBTextLayoutManager . . . 776
FontFactory . . . 783
FontFormatException . . . 785
FontNotAvailableException . . . 786
TestOpacity . . . 787
TextOverflowListener . . . 788
UnsupportedDrawingOperationException . . . 789

Annex V (normative): HAVi Level 2 User Interface . . . 790
V.1 Register of Constants . . . 790
HActionable . . . 800
HActionInputPreferred . . . 804
HAdjustableLook . . . 805
HAdjustmentInputPreferred . . . 808
HAdjustmentValue . . . 810
HAnimateEffect . . . 814
HAnimateLook . . . 818
HAnimation . . . 823
HBackgroundConfigTemplate . . . 830
HBackgroundConfiguration . . . 833
HBackgroundDevice . . . 835
HBackgroundImage . . . 839
HChangeData . . . 842
HComponent . . . 843
HComponentOrdering . . . 846
HConfigurationException . . . 850
HContainer . . . 852
HDefaultTextLayoutManager . . . 859
HEmulatedGraphicsConfiguration . . . 861
HEmulatedGraphicsDevice . . . 863
HEventMulticaster . . . 865
HFlatEffectMatte . . . 877
HFlatMatte . . . 882

HFontCapabilities 884
HGraphicButton 895
HGraphicLook 904
HGraphicsConfigTemplate 909
HGraphicsConfiguration 913
HGraphicsDevice 918
HIcon 922
HImageEffectMatte 928
HImageHints 933
HImageMatte 935
HInvalidLookException 937
HItemValue 938
HKeyboardInputPreferred 941
HListElement 944
HListGroup 946
HListGroupLook 961
HLook 967
HMatte 973
HMatteException 974
HMatteLayer 976
HMultilineEntry 977
HMultilineEntryLook 981
HNavigable 987
HNavigationInputPreferred 992
HNoInputPreferred 994
HOrientable 995
HPermissionDeniedException 997
HRange 999
HRangeLook 1006
HRangeValue 1011
HScene 1020
HSceneFactory 1033
HSceneTemplate 1037
HScreen 1041
HScreenConfigTemplate 1046
HScreenConfiguration 1052
HScreenDevice 1054
HScreenDimension 1058
HScreenPoint 1060
HScreenRectangle 1062
HSelectionInputPreferred 1065
HSinglelineEntry 1067
HSinglelineEntryLook 1079
HSound 1084
HState 1087
HStaticAnimation 1091
HStaticIcon 1097
HStaticRange 1100
HStaticText 1106
HStillImageBackgroundConfiguration 1110
HSwitchable 1113
HText 1116
HTextButton 1123
HTextLayoutManager 1132
HTextLook 1135
HTextValue 1140
HToggleButton 1142
HToggleGroup 1153
HUIException 1157

HVersion . . . 1159
HVideoComponent . . . 1161
HVideoConfigTemplate . . . 1163
HVideoConfiguration . . . 1166
HVideoDevice . . . 1168
HVisible . . . 1173
HActionEvent . . . 1196
HActionListener . . . 1198
HAdjustmentEvent . . . 1199
HAdjustmentListener . . . 1202
HBackgroundImageEvent . . . 1203
HBackgroundImageListener . . . 1206
HEventRepresentation . . . 1207
HFocusEvent . . . 1213
HFocusListener . . . 1216
HItemEvent . . . 1217
HItemListener . . . 1220
HKeyCapabilities . . . 1221
HKeyEvent . . . 1223
HKeyListener . . . 1225
HMouseCapabilities . . . 1226
HRcCapabilities . . . 1227
HRcEvent . . . 1229
HScreenConfigurationEvent . . . 1238
HScreenConfigurationListener . . . 1239
HScreenDeviceReleasedEvent . . . 1240
HScreenDeviceReservedEvent . . . 1241
HScreenLocationModifiedEvent . . . 1242
HScreenLocationModifiedListener . . . 1244
HTextEvent . . . 1245
HTextListener . . . 1249

Annex W (normative): DVB-J examples . . . 1250
W.1 DVB-J Application lifecycle implementation example . . . 1250
W.2 Example of exporting an object for inter-application communication . . . 1251

Annex X (normative): Test support . . . 1252
DVBTest . . . 1255

Annex Y (normative): Inter-application and Inter-Xlet communication API . . . 1261
IxcRegistry . . . 1263

Annex Z (informative): Services, Service Contexts and Applications in an MHP Environment . . . 1267
Z.1 Introduction . . . 1267
Z.2 Basic concepts . . . 1267
Z.3 Presenting a service in MHP . . . 1267
Z.3.1 Presenting the media components of a service . . . 1267
Z.3.2 Presenting the application components of a service . . . 1267
Z.4 Multiple service contexts in an MHP platform . . . 1268
Z.5 How does the platform know which services are available? . . . 1269

Annex AA (normative): DVB-HTML 1.0 DTD . . . 1270
AA.1 DVB-HTML 1.0 DTD . . . 1270
AA.1.1 DVB-HTML DTD driver . . . 1270
AA.1.2 DVB-HTML DVB Intrinsic Events module . . . 1274
AA.1.3 DVB-HTML Qualified Names module . . . 1275
AA.1.4 DVB-HTML Content Model module . . . 1276

Annex AB (normative): DVB HTML StyleSheet. 1280

Annex AC (normative): ECMAScript Binding 1283
AC.1 ECMAScript language binding 1283
AC.1.1 Shortcuts to access objects 1283
AC.1.2 Grouping the objects of a form 1284
AC.2 The DVB-HTML host objects 1284
AC.2.1 Object DVBHTMLCollection 1284
AC.2.2 Object DVBHTMLDocument 1284
AC.2.3 Object DVBHTMLElement 1285
AC.2.4 Object DVBHTMLFormElement 1286
AC.2.5 Object DVBHTMLSelectElement. 1286
AC.2.6 Object DVBHTMLOptionElement 1287
AC.2.7 Object DVBHTMLInputElement 1287
AC.2.8 Object DVBHTMLTextAreaElement 1288
AC.2.9 Object DVBHTMLButtonElement 1289
AC.2.10 Object DVBHTMLAnchorElement 1289
AC.2.11 Object DVBHTMLImageElement 1290
AC.2.12 Object DVBHTMLObjectElement 1290
AC.2.13 Object DVBHTMLMapElement 1291
AC.2.14 Object DVBHTMLAreaElement. 1291
AC.2.15 Object DVBHTMLFrameSetElement 1291
AC.2.16 Object DVBHTMLFrameElement 1291
AC.2.17 Object DVBHTMLIFrameElement 1292
AC.3 DVB-HTML event host objects 1292
AC.3.1 Object DVBLifecycleEvent. 1292
AC.4 DVB-HTML environment host objects 1293
AC.4.1 Navigator Object 1293
AC.4.2 Window Object 1293
AC.4.3 Location object 1294
AC.5 DVB-HTML CSS host objects 1294
AC.5.1 DVBInlineStyle 1294
AC.5.2 DVBCSSStyle 1294
AC.5.3 DVBCSSViewportRule 1295
AC.5.4 DVBCSSViewportProperties 1295

Annex AD (normative): Support for DVB-HTML 1296
AD.1 Java bindings to DVB extensions 1296
AD.1.1 The org.dvb.dom.dvbhtml package 1296
AD.1.1.1 DVBHTMLButtonElement 1296
AD.1.1.2 DVBHTMLCollection 1296
AD.1.1.3 DVBHTMLDocument 1296
AD.1.1.4 DVBHTMLElement 1297
AD.1.1.5 DVBHTMLFormElement 1297
AD.1.1.6 DVBHTMLSelectElement. 1297
AD.1.1.7 DVBHTMLOptionElement 1298
AD.1.1.8 DVBHTMLInputElement 1298
AD.1.1.9 DVBHTMLTextAreaElement 1299
AD.1.1.10 DVBHTMLAnchorElement 1299
AD.1.1.11 DVBHTMLImageElement 1300
AD.1.1.12 DVBHTMLObjectElement 1300
AD.1.1.13 DVBHTMLMapElement 1301
AD.1.1.14 DVBHTMLAreaElement. 1301
AD.1.1.15 DVBHTMLFrameSetElement 1301
AD.1.1.16 DVBHTMLFrameElement 1301
AD.1.1.17 DVBHTMLIFrameElement 1302
AD.1.2 The org.dvb.dom.css package 1302
AD.1.2.1 DVBInlineStyle 1302
AD.1.2.2 DVBCSSStyle 1303

AD.1.2.3 DVBCSSViewportRule . . . 1303
AD.1.2.4 DVBCSSViewportProperties . . . 1303
AD.1.3 The org.dvb.dom.environment package . . . 1304
AD.1.3.1 Navigator . . . 1304
AD.1.3.2 Window . . . 1304
AD.1.3.3 Location . . . 1304
AD.1.4 The org.dvb.dom.event package . . . 1305
AD.1.4.1 DVBLifecycleEvent . . . 1305
DocumentAction . . . 1307
DocumentFactory . . . 1308
MultipleDocumentsAction . . . 1310
HTMLApplication . . . 1312
HTMLInnerApplicationContainer . . . 1313

Annex AE (normative): Inner Applications . . . 1314
DVBScene . . . 1316
InnerApplication . . . 1320
InnerApplicationContainer . . . 1321
InnerApplicationEvent . . . 1326
InnerApplicationListener . . . 1327

Annex AF (normative): Plug-in APIs . . . 1328
ApplicationSecurityContext . . . 1330
InvalidApplicationException . . . 1332
InvocationHandler . . . 1333
Plugin . . . 1334
Proxy . . . 1336
UndeclaredThrowableException . . . 1341
XletContainer . . . 1343
XletSystemCall . . . 1345

Annex AG (normative): Stored application APIs . . . 1347
ApplicationDownloadException . . . 1349
ApplicationStorage . . . 1350
ApplicationStoragePermission . . . 1353
ExtendedAppAttributes . . . 1355
InvalidApplicationException . . . 1356
InvalidDescriptionFileException . . . 1357
NotEnoughResourcesException . . . 1358
ServiceAlreadyExistsException . . . 1359
StoredApplicationService . . . 1360
StoredServiceCreator . . . 1363
UserRejectedInstallException . . . 1364

Annex AH (normative): Internet client APIs . . . 1365
BookmarkExistsException . . . 1369
CancelledByUserEvent . . . 1370
ClientNotRunningException . . . 1371
EmailClient . . . 1372
EmailClientService . . . 1373
EntryExistsException . . . 1374
HomePagePermission . . . 1375
InternetClient . . . 1376
InternetClientEvent . . . 1378
InternetClientFailureEvent . . . 1379
InternetClientListener . . . 1380
InternetClientService . . . 1381
InternetClientSuccessEvent . . . 1383
InternetServiceFilter . . . 1384
InternetServiceType . . . 1386

PermissionDeniedEvent 1387
URLUnavailableEvent 1388
UsenetClient 1389
UsenetClientService 1391
WWWBrowser 1392
WWWBrowserService 1393

Annex AI (normative): Non-CA Smartcard APIs 1396
SmartCardPermission 1398

Index 1399

History 1447

Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: *"Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards"*, which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (http://webapp.etsi.org/IPR/home.asp).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Foreword

This Technical Specification (TS) has been produced by the Joint Technical Committee (JTC) Broadcast of the European Broadcasting Union (EBU), Comité Européen de Normalisation ELECtrotechnique (CENELEC) and the European Telecommunications Standards Institute (ETSI).

NOTE: The EBU/ETSI JTC Broadcast was established in 1990 to co-ordinate the drafting of standards in the specific field of broadcasting and related fields. Since 1995 the JTC Broadcast became a tripartite body by including in the Memorandum of Understanding also CENELEC, which is responsible for the standardization of radio and television receivers. The EBU is a professional association of broadcasting organizations whose work includes the co-ordination of its members' activities in the technical, legal, programme-making and programme-exchange domains. The EBU has active members in about 60 countries in the European broadcasting area; its headquarters is in Geneva.

European Broadcasting Union
CH-1218 GRAND SACONNEX (Geneva)
Switzerland
Tel: +41 22 717 21 11
Fax: +41 22 717 24 81

Founded in September 1993, the DVB Project is a market-led consortium of public and private sector organizations in the television industry. Its aim is to establish the framework for the introduction of MPEG-2 based digital television services. Now comprising over 200 organizations from more than 25 countries around the world, DVB fosters market-led systems, which meet the real needs, and economic circumstances, of the consumer electronics and the broadcast industry.

0 Introduction

0.1 Purpose

The DVB system already provides a comprehensive toolbox to enable interoperable digital video broadcasting systems based on MPEG-2 standards for various transmission media including satellite, cable, terrestrial and microwave. This toolbox also covers interactive services using different kinds of return channels and further supporting functionalities such as service information and many others.

The Multimedia Home Platform (MHP) adds a technical solution for the user terminal that enables the reception and presentation of applications in a vendor, author and broadcaster neutral framework. Here "neutral" includes scenarios that consider legacy infrastructure. Applications from various service providers will be interoperable with different MHP implementations in an horizontal market, where applications, networks, and MHP terminals can be made available by independent providers.

0.2 Application Areas

At the beginning the following application areas are considered - Enhanced Broadcasting, Interactive Broadcasting and Internet Access. Enhanced Broadcasting combines digital broadcast of audio/video services with downloaded applications which can enable local interactivity. It does not need an interaction channel. The application area Interactive Broadcasting enables a range of interactive services associated or independent from broadcast services. This application area requires an interaction channel. The application area of Internet Access is intended for the provisioning of Internet services. It also includes links between those Internet services and broadcast services.

0.3 Profiles

As not all MHP implementations will be able to support all application areas and as there is a further evolution expected over time, different profiles of the MHP are considered. For the first release of the MHP specification, profiles are mapped to the above mentioned application areas.

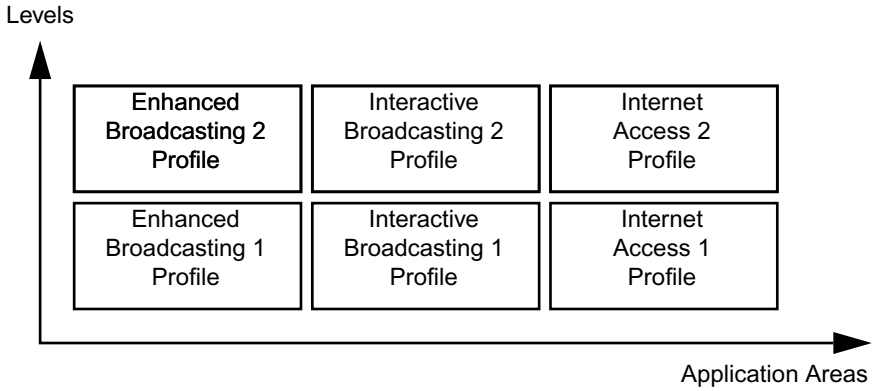


Figure 1 : Application areas and levels of profiles

Fig. 1 shows six example profiles, derived from two levels for each of the three application areas. The specific definition of the profiles and the particular backward and cross compatibility between profiles is provided in the detailed profile definition chapter of the MHP specification. The following initial definitions apply: <profile><n+1> shall be a strict superset of <profile><n>, and Interactive Broadcasting Profile 1is defined as a strict superset of Enhanced Broadcasting Profile 1. Other dependencies are left to the detailed definition of future profiles.

1 Scope

The present document defines the DVB solution for Multimedia Home Platforms (MHPs) that was developed to fulfil the related DVB commercial requirements MHP045 [A]. It relies on the use of appropriate DVB specifications for digital video broadcast and associated interactive services TR 101 200 [47]. The MHP is applicable to all DVB defined transmission media and networks such as satellite, cable, terrestrial, microwave.

The final DVB MHP solution is intended to cover the whole range of implementations including Integrated Receiver Decoders (IRDs), integrated TV sets, multimedia computers and local clusters of such devices connected via In-Home Digital Networks (IHDN). This first release focuses on single MHP terminals and does not include such local clusters. Chapters 1-14 specify the applicable technologies and technical definitions in a generic way. Chapter 15 provides detailed profile definitions for the initial profiles Enhanced Broadcasting 1, Interactive Broadcasting 1 and Internet Access 1, which can be extended with future additional profile definitions.

This specification is firstly intended for implementers of MHPs on various hardware and software platforms. Secondly it is intended for developers of applications that use the MHP functionality and APIs.

The MHP specification aims to ensure interoperability between MHP applications and different MHP implementations. Implementers should consult the publisher of this specification regarding conformance.

NOTE: This specification defines the interfaces visible to applications. Application developers should not assume that other related interfaces are available unless they are specifically listed.

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication and/or edition number or version number) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies.
- A non-specific reference to an ETS shall also be taken to refer to later versions published as an EN with the same number.

Some known errata in these references are identified in A, "(normative): External references; errata, clarifications and exemptions" on page 370. These errata take precedence over the published reference.

The following comments apply to particular sources of documents:

[1]	Where the reference is to an ISO specifications it is considered to be a "non-specific" reference additionally officially published amendments and corrigenda are considered to automatically update the referenced document.
[2]	Where an ISBN number is provided for a referenced document it is considered to be "specific reference".
[3]	References to RFCs are considered to be "specific references". An RFC being indicated obsoleted by another RFC is not considered significant.
[4]	URL references with note [4] are provided for convenience to access the document in electronic form.
[5]	URL references with note [5] are the normative method to access the reference

[6]	ETSI specifications are available from the ETSI server at: http://www.etsi.org. However, the ETSI server provides the current edition of the specification and in every case this specification makes "specific" references which in the future may not be the current reference.
[7]	The Sun Specifications for DVB are available from: http://java.sun.com/products/specformhp/ or on CD-ROM (ISBN 1-892488-25-6) published by: Sun Microsystems MS USCA14-103 Palo Alto CA 94303 USA e-mail: docs@java.sun.com Phone: +1 408 276-7426

	Reference	Edition	Description	Note
[1]	CIE 15	2nd Edition, 1986 ISBN 3 900 734 00 3	Colorimetry, CIE, Vienna	[2]
[2]	CORBA/IIOP	2.1	The Common Object Request Broker: Architecture and Specification, Object Management Group. ftp://ftp.omg.org/pub/docs/formal/97-09-01.pdf	[5]
[3]	DAVIC 1.4.1p9	June 1999	DAVIC 1.4.1 Specification Part 9, Complete DAVIC Specifications, DAVIC. http://www.davic.org	[5]
[4]	EN 300 468	1.3.1	Digital broadcasting systems for television, sound and data services; Specification for Service Information (SI) in Digital Video Broadcasting (DVB) systems	[6]
[5]	EN 301 192	1.2.1	Specification for Data Broadcast	[6]
[6]	EN 301 193	1.1.1	DVB Interaction Channel through DECT	[6]
[7]	EN 301 195	1.1.1	DVB Interaction Channel through GSM	[6]
[8]	EN 301 199	1.2.1	DVB Interaction channel for LMDS distribution systems	[6]
[9]	TR 101 154	1.4.1	DVB Implementation Guidelines for the use of MPEG-2 Systems, Video and Audio in Satellite, Cable and Terrestrial Broadcasting Applications.	[6]
[10]	ETR 162		Digital broadcasting systems for television, sound and data services; Allocation of Service Information (SI) codes for Digital Video Broadcasting (DVB) systems	[6]
[11]	ETR 211	2	Digital Video Broadcasting (DVB); Guidelines on implementation and usage of Service Information (SI)	[6]
[12]	EN 300 472	1.2.2	DVB Specification for conveying ITU-R System B Teletext in DVB bitstreams.	[6]
[13]	EN 300 743	1	Digital Video Broadcasting (DVB), DVB subtitling	[6]
[14]	ETS 300 800	1	DVB Interaction Channel for Cable TV distribution systems	[6]
[15]	ETS 300 801	1	DVB Interaction Channel through PSTN/ISDN	[6]
[16]	ETS 300 802	1	Network Independent Protocols for Interactive Services	[6]
[17]	GIF 89a		GRAPHICS INTERCHANGE FORMAT(sm) Version 89a, (c)1987, 1988, 1989, 1990 Copyright CompuServe Incorporated Columbus, Ohio http://www.w3.org/Graphics/GIF/spec-gif89a.txt	

	Reference	Edition	Description	Note
[18]	ISO 10646-1		Information technology - Universal multiple-octet coded character set (UCS), part 1: Architecture and Basic Multilingual Plane" (also known as Unicode, UTF)	[1]
[19]	ISO 639.2		Code for the representation of names of languages	[1]
[20]	ISO 8859		Information processing - 8-bit single-byte coded graphic character sets, Latin alphabets	[1]
[21]	ISO/IEC 10918-1		Digital compression encoding of continuous-tone still images (JPEG). http://www.w3.org/Graphics/JPEG/itu-t81.pdf	[1] [4]
[22]	ISO/IEC 11172-3	1993	Information technology—Coding of moving pictures and associated audio for digital storage media at up to about 1.5 Mbit/s—Part 3: Audio (Note: known as MPEG-1 Audio)	[1]
[23]	ISO/IEC 13818-1	1996	Information technology - Generic coding of moving pictures and associated audio information: Systems.	[1]
[24]	ISO/IEC 13818-2	1996	Information technology—Generic coding of moving pictures and associated audio information—Part 2: Video (MPEG-2 Video)	[1]
[25]	ISO/IEC 13818-3	2nd Ed. 1998	Information technology - Generic coding of moving pictures and associated audio - Part 3, MPEG-2 Audio.	[1]
[26]	ISO/IEC 13818-6	1998	Information technology -Generic coding of moving pictures and associated audio information: Extensions for Digital Storage Media Command and Control.	[1]
[27]	IEC 61966-2-1	1	Multimedia systems and equipment - Colour measurement and management - Part 2-1: Colour management - Default RGB colour space - sRGB	
[28]	ITU-R BT.470	6	Conventional television systems	
[29]	ITU-R BT.601	5	Studio Encoding Parameters of Digital Television for standard 4:3 and Wide-Screen 16:9 aspect ratios	
[30]	ITU-R BT.709	3	Parameter values for the HDTV standards for production and international programme exchange	
[31]	JAE 1.1.8 API	Part of ISBN:1-892488-25-6	Java Platform 1.1 API Specification	[7]
[32]	Java Language Spec	ISBN 0-201-63451-1	The Java Language Specification by James Gosling, Bill Joy and Guy Steele. ftp://ftp.javasoft.com/docs/specs/langspec-1.0.pdf including the clarifications at: http://java.sun.com/docs/books/jls/clarify.html	[2] [4]
[33]	Java Media Player Specification	Part of ISBN:1-892488-25-6	Java Media Framework API Version 1.0 specification	[7]
[34]	Java VM	ISBN: 0-201-63452-X	The Java Virtual Machine Specification, T. Lindholm and F. Yellin, Addison-Wesley.	[2]
[35]	JFIF		JPEG File Interchange Format, Eric Hamilton, C-Cube Microsystems. http://www.w3.org/Graphics/JPEG/jfif3.pdf	[5]
[36]	PersonalJAE	Part of ISBN:1-892488-25-6	The OEM PersonalJava Application Environment Version 1.2a specification	[7]
[37]	PNG	V1 01-Oct-96	Portable Network Graphics. Available at http://www.w3.org/TR/REC-png.html	[5]

	Reference	Edition	Description	Note
[38]	RFC 1321	April 1992	The MD5 Message-Digest Algorithm	[3]
[39]	RFC 1990	August 1996	(MP) "The PPP Multilink Protocol", K. Sklower, B. Lloyd, G. McGregor, D. Carr, T. Coradetti.	[3]
[40]	RFC 2616	June 1999	IETF Hypertext Transfer Protocol -- HTTP/1.1	[3]
[41]	RFC 2396	August 1998	IETF Uniform Resource Identifiers (URI): Generic Syntax	[3]
[42]	RFC 768	28.08.1980	(UDP) "User Datagram Protocol", J. Postel.	[3]
[43]	RFC 791	01.09.1981	(IP) "Internet Protocol", J. Postel.	[3]
[44]	RFC 793	01.09.1981	(TCP) "Transmission Control Protocol", J. Postel.	[3]
[45]	RFC 1112	August 1989	IETF Host extensions for IP multicasting.	[3]
[46]	TR 101 194	1.1.1	Guidelines for the use of ETS 300 802	
[47]	TR 101 200	1.1.1	"Digital Video Broadcasting (DVB); Guideline for the use of DVB specifications and standards".	
[48]	TR 101 201	1.1.1	DVB Interaction channel for SMATV systems	
[49]	TR 101 202	1.1.1	Guidelines for the use of EN 301 192	
[50]	HAVi		See annex V, "(normative): HAVi Level 2 User Interface" on page 790.	
[51]	Java TV	Part of ISBN:1-892488-25-6	Java TV API Version 1.0 specification	[7]
[52]	Hunt, R.W.G.	1987	Measuring Colour, Ellis Horwood Series in Applied Science and Industrial Technology. Ellis Harwood Limited, Chichester, England.	
[53]	ITU-T X.501	1993	ITU-T Recommendation X.501: Information Technology - Open Systems Interconnection - The Directory: Models, 1993.	
[54]	ITU-T X.509	08/97	Information technology - Open Systems Interconnection - The Directory: Authentication framework	
[55]	ITU-T X.520	11/93	Information Technology Open Systems Interconnection The Directory: Selected Attribute Types	
[56]	RFC 2313	March 98	PKCS #1: RSA Encryption Version 1.5	[3]
[57]	ASN.1	07/94	ITU-T X.680 "Information Technology Abstract Syntax Notation One (ASN.1): Specification Of Basic Notation" and ITU-T X.690 "Information Technology ASN.1 Encoding Rules: Specification Of Basic Encoding Rules (BER), Canonical Encoding Rules (CER) And Distinguished Encoding Rules (DER)"	
[58]	RFC 2459	January 1999	Internet X.509 Public Key Infrastructure. Certificate and CRL Profile.	[3]
[59]	POSIX	ISBN:1-55937-255-9	IEEE Standard for Information Technology - Portable Operating System Interface (POSIX) - Part 2: Shell and Utilities (Vol. 1); IEEE Std 1003.2-1992; The Institute of Electrical and Electronics Engineers; New York; 1993.	
[60]	JSSE	Part of ISBN:1-892488-25-6	Java Secure Sockets Extension API Specification Version 1.0.2	[7]
[61]	ETS 300 706	Edition 1 - 1997-05	Enhanced Teletext Specification	[6]

	Reference	Edition	Description	Note
[62]	FIPS-180-1	April 1995	NIST, FIPS PUB 180-1: Secure Hash Standard http://csrc.nist.gov/fips/fip180-1.txt	[4]
[63]	RFC 2246	January 1999	The TLS Protocol, Version 1.0	[3]
[64]	RFC 2045	November 1996	Multipurpose Internet Mail Extensions (MIME) Part One: Format of Internet Message Bodies	[3]
[65]	XML 1.0	Second Edition	Extensible Markup Language (XML) 1.0 http://www.w3.org/TR/2000/REC-xml-20001006	
[66]	ISO 639.2		Codes for the representation of names of languages – Part 2: Alpha-3 code.	
[67]	RFC 1738	December 1994	Uniform Resource Locators (URL)	
[68]	JVM Errata	Part of ISBN:1-892488-25-6	Errata for the Java Virtual Machine Specification	[7]
[69]	Inner Classes	Part of ISBN:1-892488-25-6	Inner Classes Specification	[7]
[70]	EN 50221		Common Interface Specification for Conditional Access and other Digital Video Broadcasting Decoder Applications	
[71]	TS 101 699	1.1.1	Digital Video Broadcasting (DVB); Extensions to the Common Interface Specification	
[72]	JAE 1.1.8 const	Part of ISBN:1-892488-25-6	JAE 1.1.8 API Constants	[7]
[73]	JAE 1.2.2 const	Part of ISBN:1-892488-25-6	JAE 1.2.2 API Constants	[7]
[74]	JMF const	Part of ISBN:1-892488-25-6	Java Media Framework API Version 1.0 Constants	[7]
[75]	RFC 1950	May 1996	ZLIB Compressed Data Format Specification version 3.3	
[76]	RFC 1951	May 1996	DEFLATE Compressed Data Format Specification version 1.3	
[77]	ZIP		PKWare description of the ZIP file format, no title, filename Appnote.txt. ftp://ftp.pkware.com/appnote.zip	
[78]	RFC 1945	May 1996	Hypertext Transfer Protocol -- HTTP/1.0	
[79]	XHTML ™ 1.0: The Extensible HyperText Markup Language		http://www.w3.org/TR/xhtml1	
[80]	Modularization of XHTML		http://www.w3.org/TR/xhtml-modularization	
[81]	ECMAScript		'Information technology - ECMAScript language specification' ISO/IEC 16262, First Edition 1998-12-15: ICS 35.060 ECMA (European Computer Manufacturers Association) ECMAScript Language Specification. http://www.ecma.ch/ecma1/STAND/ECMA-262.HTM	
[82]	Document Object Model (DOM) Level 2 Core Specification		Document Object Model DOM Level 2 Core: http://www.w3.org/TR/DOM-Level-2-Core	

	Reference	Edition	Description	Note
[83]	Document Object Model (DOM) Level 1 Specification		Document Object Model DOM Level 1: http://www.w3.org/TR/REC-DOM-Level-1	
[84]	Document Object Model (DOM) Level 2 Events Specification		Document Object Model DOM Level 2 Events: http://www.w3.org/TR/DOM-Level-2-Events	
[85]	Document Object Model (DOM) Level 2 Style Specification		Document Object Model DOM Level 2 Style: http://www.w3.org/TR/DOM-Level-2-Style	
[86]	Document Object Model (DOM) Level 2 Views Specification		Document Object Model DOM Level 2 Views: http://www.w3.org/TR/DOM-Level-2-Views	
[87]	CSS 2		Cascading Style Sheets CSS 2: http://www.w3.org/TR/REC-CSS2/ Including the errata published in REC-CSS2-19980512.	
[88]	RFC2318		The text/css Media Type	
[89]	Namespaces in XML		Namespaces in XML: http://www.w3.org/TR/REC-xml-names	
[90]	HTML 4	4.01	HTML 4.01 Specification W3C Recommendation 24 December 1999 http://www.w3.org/TR/html401	
[91]	SVG	1.0	Scalable Vector Graphics (SVG) 1.0 Specification. http://www.w3.org/TR/2000/CR-SVG-20000802/	
[92]	Embedded OCF	1.2.2	OpenCard Framework for Embedded Devices Specification http://www.opencard.org/download/docs/1.2T/ocfembeddedspec.zip	
[93]	SMTP		RFC 821, Simple Mail Transport Protocol	
[94]	NNTP		RFC 977, Network News Transport Protocol	
[95]	Namespaces in XML	19990114	REC-xml-names-19990114, Namespaces in XML, World Wide Web Consortium 14-January-1999 http://www.w3.org/TR/1999/REC-xml-names-19990114	
[96]	RFC 2109	February 1997	HTTP State Management Mechanism	
[97]	RFC 1123	October 1989	Requirements for Internet Hosts •• Application and Support	
[98]	RFC 2818		HTTP over TLS	
[99]	Associating Style Sheets with XML documents	1.0	http://www.w3.org/TR/xml-stylesheet	
[100]	RFC 2368	July 1998	The Use of URLs as Meta-Syntax for Core Mail List Commands and their Transport through Message Header Fields	

3 Definitions and abbreviations

3.1 Definitions

For the purposes of the present document, the following terms and definitions apply:

API: Application Program Interface. An interface between an application and a particular feature, function or resource of the MHP.

application: A functional implementation realised as software running in one or spread over several interplaying hardware entities.

application boundary: A concise general description of the data elements (HTML documents, code files, images etc.) used to form one application and the logical locator of the entry point, the application boundary is described by a regular expression over the URL language. Where no such boundary is drawn, the default boundary shall be the entire set of documents that the MHP platform can access.

application manager: The Application Manager is the entity in the MHP that is responsible for managing the lifecycle of the applications in the MHP. It manages both the DVB-J applications and non-DVB-J applications.

autostart applications: This terms has different definitions depending on the application format:

A DVB-J autostart application is an application that is automatically loaded and executed by the Application Manager as soon as the user selects a service on which the application is signalled as autostart.

Auto start application a DVB-HTML application in a broadcast stream can be signalled as auto start in the same way that other DVB applications can, but note that it may not actually start providing service until it receives a start trigger.

character: A specific "letter" or other identifiable symbol, e.g. "A".

character encoding: A character encoding is a mapping between an integer input value, and the textual character that is represented by this mapping, e.g. in ASCII value 65 (decimal) is character "A", or shift-JIS for Japanese characters.

character set: See character encoding.

communications network: A system of interconnected entities providing data interchange between points or from a point to multiple points.

definite: A resource is considered of indefinite duration if the exact end point is not known in advance of accessing the resource (e.g. Transport Streams in MPEG-2). A resource is considered of definite duration if in principle the exact length is known (e.g. a file resource).

delegated application: An application encoded in a representation that is not directly consumable by an MHP terminal's standard mechanisms.

domain of an application: The domain of an Xlet characterizes the "space" within which the Xlet is able to execute. This includes both the "connection" where the Xlet is delivered and other "connections" where an already executing Xlet is allowed to continue executing.

An application cannot run outside its domain. The maximum lifetime of an application extends from the moment the user navigates to its domain until the moment that the user navigates away from its domain.

In the broadcast case a "connection" corresponds to a DVB-service. Broadcast signalling indicates which services can load an application and which services allow an already active application to continue.

DVB network: A collection of MPEG-2 Transport Stream multiplexes transmitted on a single delivery system, e.g. all digital channels on a specific cable system.

DVB-HTML actor: A DVB-HTML actor is defined as the locus of activity or process involved in running the specific set of DVB-HTML documents for some DVB-HTML application, plus any instantiated context for that data. The actor runs inside a user agent (native, plug-in or downloaded). The nature of the process is not defined explicitly as it depends on the nature of the user agent itself. More than one such locus of activity may be present in any given user agent.

DVB-HTML application: A DVB-HTML application is defined as a set of documents selected from the DVB-HTML family of elements and content formats as defined in the specification. The extent of the set is described by the application boundary.

DVB-HTML application states: DVB-HTML application states are logical states that a DVB-HTML actor can be in, (as opposed to states the user agent may be in), these states may have instance data logically associated with them (e.g. the application id and entry point).

DVB-HTML document: A complete unit of one the HTML family of elements or content formats defined in this specification.

DVB-J: The Java platform defined as part of the MHP specification.

DVB-J API: One of the Java APIs standardised as part of the MHP specification.

DVB-J application: A DVB-J Application is a set of DVB-J classes that operate together and need to be signalled as a single instance to the Application Manager so that it is aware of its existence and can control its lifetime through a lifecycle interface.

events: Asynchronous communication between applications and the MHP on which they are being executed. They provide communication between solution elements.

font: A font is a mechanism that allows the specific rendering of a particular character to be specified – e.g. Tiresias, 12 point. In practice a font file format will incorporate some aspects of a character encoding.

function: A function is a process which conveys or transforms data in a predictable way. It may be effected by hardware, software of a combination of the two.

hardware entity: Is an independent piece of hardware which forms part of a (multiple) local cluster of elements which as a whole is called MHP. A hardware entity is for example: a Set top box, a digital VCR or a conditional access module. A hardware entity includes a number of resources Each resource provides a number of functions.

indefinite: See definite.

internet access application: An application which is resident on an MHP terminal and used for presenting content from the internet. Applications which are downloaded to an MHP terminal when required are also covered by this definition only if this downloading process is transparent to any MHP applications. Internet access applications do not include the applications or content obtained from the internet. They are very similar conceptually to a DVB-HTML support application.

inner application: Application content that forms part of a larger application and possibly of a different type. For example, an Xlet embedded within an DVB-HTML application.

interoperable plug-in: A plug-in that only requires standard MHP APIs.

interoperability: The reception and presentation of applications in a vendor, author and broadcaster neutral framework (From MHP45r12).

java API: Is a standard interface for use by platform independent application software. It is expressed in the Java language.

lifetime of an application: The lifetime of an application characterizes the time from which the application is Loaded to the time the application is Destroyed.

locator: This term has different definitions depending on the application format:

A DVB-HTML locator is a link, expressed in the syntax in RFC 2396 [41], which provides an unambiguous pointer to a DVB-HTML document accessible to the MHP in a specific transport stream. The scheme specified should resolve to one of the available transports signalled for the DVB-HTML application. For signed DVB-HTML applications the schemes http and https (ftp, others?) may use the return channel. This version of the specification does not include a scheme for transport independent locators, future versions are expected to do so.

This term in the DVB-HTML context should not be confused with the DVB-J class of the same name.

MHP: The Multimedia Home Platform (MHP) consists of an MHP viewer terminal, including all possible low to high functionality implementations, its associated peripherals and the in-home digital network.

MHP connected resource: A resource used as part of the MHP which, on its own, is not conformant to the specification but which is connected to an MHP Terminal in such a way that the whole is part of the MHP.

MHP service: A logical service in an MHP which can be selected through the service selection API or functional equivalents. This includes broadcast DVB services, stored services and MHP applications executed in response to an AIT file loaded over the interaction channel.

MHP solution: The MHP solution encompasses the whole set of technologies necessary to implement the MHP including protocols and APIs.

MHP terminal: A single piece of physical equipment conforming to the MHP specification, in particular in that it contains a Virtual Machine and an instance of the MHP API.

native signalling: Signalling infrastructure for a delegated application that are not part of an MHP terminal's standard mechanisms.

navigator: A resident application, typically provided by the manufacturer, which the end-user can activate at any time. The navigator can be used to select services, applications, and initiate Interoperable applications.

object carousel: A repetitively broadcast file system.

OID: X.509 Object Identifier.

persistent storage: Memory available in the MHP which can be read/written to by an application and which may outlive the application's own life.

Persistent storage may be volatile or non-volatile.

plug-in: A set of functionality which can be added to a generic platform in order to provide interpretation of DVB registered, but non-DVB-J, application formats; e.g. HTML3.2 or MHEG-5.

plug-in application: An application that conforms to an application format for which a plug-in has been registered with DVB and which is only interoperable within terminals which have the appropriate plug-in resident or connected to networks where an appropriate Plug-In is being broadcast.

profile: A description of a series of minimum configurations, defined as part of the specification, providing different capabilities of the MHP. It maps a set of functions which characterise the scope of service options. The number of profiles is small. The mapping of functions into resources and subsequently into hardware entities is out of the scope of the specification and is left to manufacturers.

regular expression: A method of capturing a large, possibly infinite set of strings in a compact representation.

resident application: An application available from non-volatile storage in an MHP device which may be expressed in DVB-J but need not be so. Its delivery route is not specified.

resource: Is a well defined capability or asset of a system entity, which can be used to contribute to the realisation of a service. Examples: MPEG decoder, Graphics system.

return channel: The communications mechanism which provides connection between the MHP and a remote server.

runtime code extension: The ability to extend, at runtime, the executable code of an application with code not originally packaged with the application. This facility is provided, for example, by org.dvb.lang.DVBClassLoader in DVB-J and by eval() in ECMAscript.

sandbox: Unsigned applications and signed applications without a permission file have access to all the APIs for which there is no permission signalling defined. This is commonly called the sandbox.

service: A sequence of programs under the control of a broadcaster which can be broadcast as part of a schedule.

service component: A part of a service. For a DVB service, service components are normally the MPEG elementary streams listed in the PMT for the service. Where multiple streams of subtitles or MPEG-2 audio representing different languages are carried in the same MPEG elementary stream these are logically service components but are not exposed through the MHP APIs as being distinct and separate.

stand-alone application: An application which is not related to a conventional DVB service. In this version of this specification, this includes applications running as part of a stored service and applications whose signalling was carried over the interaction channel.

stream: A unidirectional continuous flow of content. Example: MPEG2 video.

stored service: A set of MHP applications stored within the MHP terminal and treated as a service with regard to life cycle, service selection etc.

system software: Software implementation below the API for a specific platform entirely under control of the manufacturer.

trigger: A trigger is an event that may cause a change in the behaviour of a DVB-HTML application that registers interest in such events. Triggers may come from many sources e.g. the broadcast stream, or may be generated from other data (such as the system clock), or may be generated as a result of user interaction. The trigger may include a reference to time, which may be absolute (UTC), relative to some other event, relative to the NPT of a media stream. It also can carry some semantically significant payload in order to affect changes in an application based on information not available at the time an application was written.

tuning: the act of switching between two MPEG transport streams or multiplexes. Switching between two DVB services carried in the same transport stream is not tuning.

viewer: End-user of the MHP terminal.

xlet: Interface used for DVB-J application life cycle control.

3.2 Abbreviations

For the purposes of the present document, the following abbreviations apply:

API	Application Programming Interface
AV	Audio Video
AWT	Abstract Windowing Toolkit
CA	Conditional Access
CI	Common Interface
CLUT	Colour Lookup Table
CSS	Cascading Style Sheets
DAVIC	Digital Audio Visual Council
DCT	Discrete Cosine Transformation
DECT	Digital Enhanced Cordless Telecommunications
DOM	Document Object Model
DSM-CC	Digital Storage Media - Command and Control
DSM-CC-OC	Digital Storage Media - Command and Control Object Carousel
DSM-CC-UU	Digital Storage Media - Command and Control User to User
DVB	Digital Video Broadcasting
ECMA	European Computer Manufacturers Association
EPG	Electronic Program Guide
ETSI	European Telecommunications Standards Institute
GIF	Graphics Interchange Format
GSM	Global System for Mobile communications

GUI	Graphical User Interface
HTML	Hyper Text Mark-up Language
HTTP	Hyper Text Transport Protocol
I/O	Input / Output
IHDN	In Home Digital Network
IP	Internet Protocol
IPR	Intellectual Property Rights
IRD	Integrated Receiver Decoder
ISDN	Integrated Services Digital Network
ISO	International Standardisation Organisation
ITU	International Telecommunication Union
JDK	Java Development Kit
JFIF	JPEG File Interchange Format
JMF	Java Media Framework
JPEG	Joint Picture Expert Group
LMDS	Local Multipoint Distribution System
MHEG	Multimedia Hypermedia Expert Group
MHP	Multimedia Home Platform
MMDS	Multipoint Microwave Distribution System
MPEG	Moving Picture Expert Group
OC	Object Carousel
OS	Operating System
OSD	On Screen Display
PFR	Portable Font Resource
PMT	Program Map Table
PNG	Portable Network Graphics
PSI	Program Specific Information
PSTN	Public Switched Telephone Network
RAM	Random Access Memory
ROM	Read Only Memory
SI	Service Information
SMATV	Satellite Master-Antenna Television
TCP	Transmission Control Protocol
TS	Transport Stream
UCS	Universal Multiple-Octet Coded Character Set
UDP	User Datagram Protocol
UI	User Interface
URL	Uniform Resource Locator
UTF	UCS Transformation Coding
UU	User to User
VM	Virtual Machine
WAN	Wide Area Network

4 Conventions

Void

5 Basic Architecture

5.1 Context

At its simplest level, the MHP is set in the following context (see figure 2). The software of the MHP has access to flows of streams and data, and may write some data to storage. The platform may be able to route streams and data outwards to a sink or store.

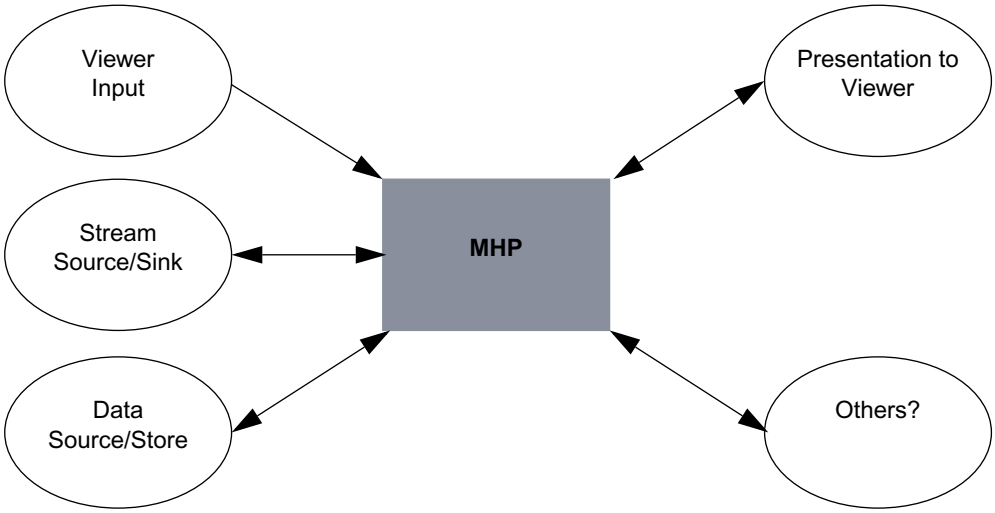


Figure 2 : MHP context

The platform will receive inputs from Viewer input devices and output communications through a screen or other outputs like loudspeakers to present to the viewer. The platform may have access to communications with remote entities.

The diagram in figure 3 shows a possible set of external interfaces between an MHP and the outside world. This is one example only but it serves to illustrate a series of principles.

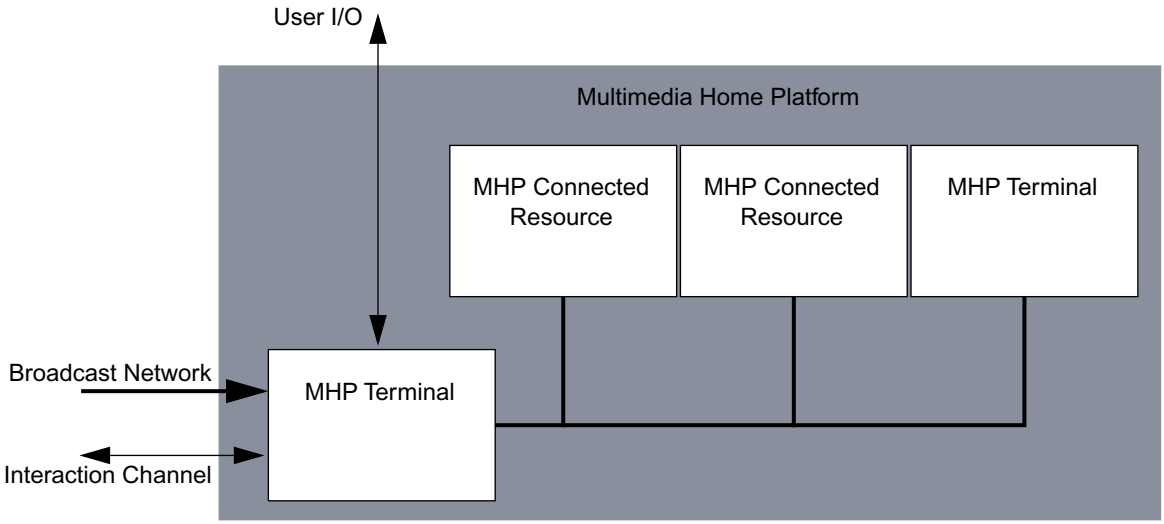


Figure 3 : External interfaces between an MHP and the outside world

The resources of the MHP, accessible by an application, may be contained in a series of different but connected physical entities.

The local cluster may connect a number of MHP terminals and resources

A cluster may also include resources which are not part of the MHP infrastructure and are not available to the application.

The local cluster is understood to be consistent with the DVB IHDN specification. The detailed description of the MHP in the local cluster is not in the first version of the specification.

5.2 Architecture

The Architecture describes how the MHP software elements are organized.

The MHP model considers 3 layers (figure 4):

- Resources
- System software
- Applications

The API lies between the Applications and the System Software seen from the perspective of an application.

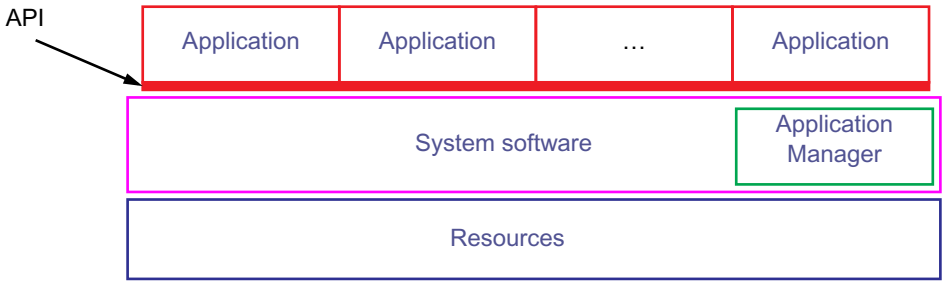


Figure 4 : Basic architecture

5.2.1 Resources

The hardware entities in the platform include a number of functions. They are represented by hardware or software resources. There is no assumption about how they are grouped. The model considers that there can be more than one hardware entity in the total Platform.

From an abstract point of view it makes no difference if the logical resources are mapped into one or several hardware entities. What is important is that resources are provided to the MHP transparently. An application should be able to access all locally connected resources as if they were elements of a single entity.

5.2.2 System software

Applications will not directly address resources. The system software brings an abstract view of such resources. This middle layer isolates the application from the hardware, enabling portability of the application.

The implementations of the Resources and System software are not specified in this document.

5.2.2.1 Application Manager

The system software includes an application management function, which is responsible for managing the lifecycle of all applications, including Interoperable ones.

5.2.3 Application

Applications implement interactive services as software running in one or more hardware entities. The interface for MHP applications is a top view from application to the system software.

Figure 4 on page 49 illustrates an idealised architecture model of the processes which will occur in an MHP. A hierarchy of control is assumed in which each layer controls the processes in adjacent layers. The top layer is responsible for the control of the operation via interactive applications. The Application Manager is part of the System Software and as such is implementation specific. It interacts with all applications.

The System Software implements the API by presenting an abstract model of:

- Streams played from different sources and pipes for conducting them.
- Commands and events
- Data records or files
- The hardware resources

The API provides the associated services to applications.

In fact there are many APIs which implement distinct services and interfaces. These are described in detail in the specification, either by reference to external documents, or by detailed specification.

The specification describes the interfaces between the network, the application and the system software of the MHP terminal. The implementation of any of these three is not specified in this document.

5.3 Interfaces Between an MHP Application and the MHP System

Application(s) use the API to access the actual resources of the receiver, including: databases, streamed media decoders, static content decoders and communications. These resources are functional entities of the receiver and may be finally mapped onto the hardware of the receiver in some manner.

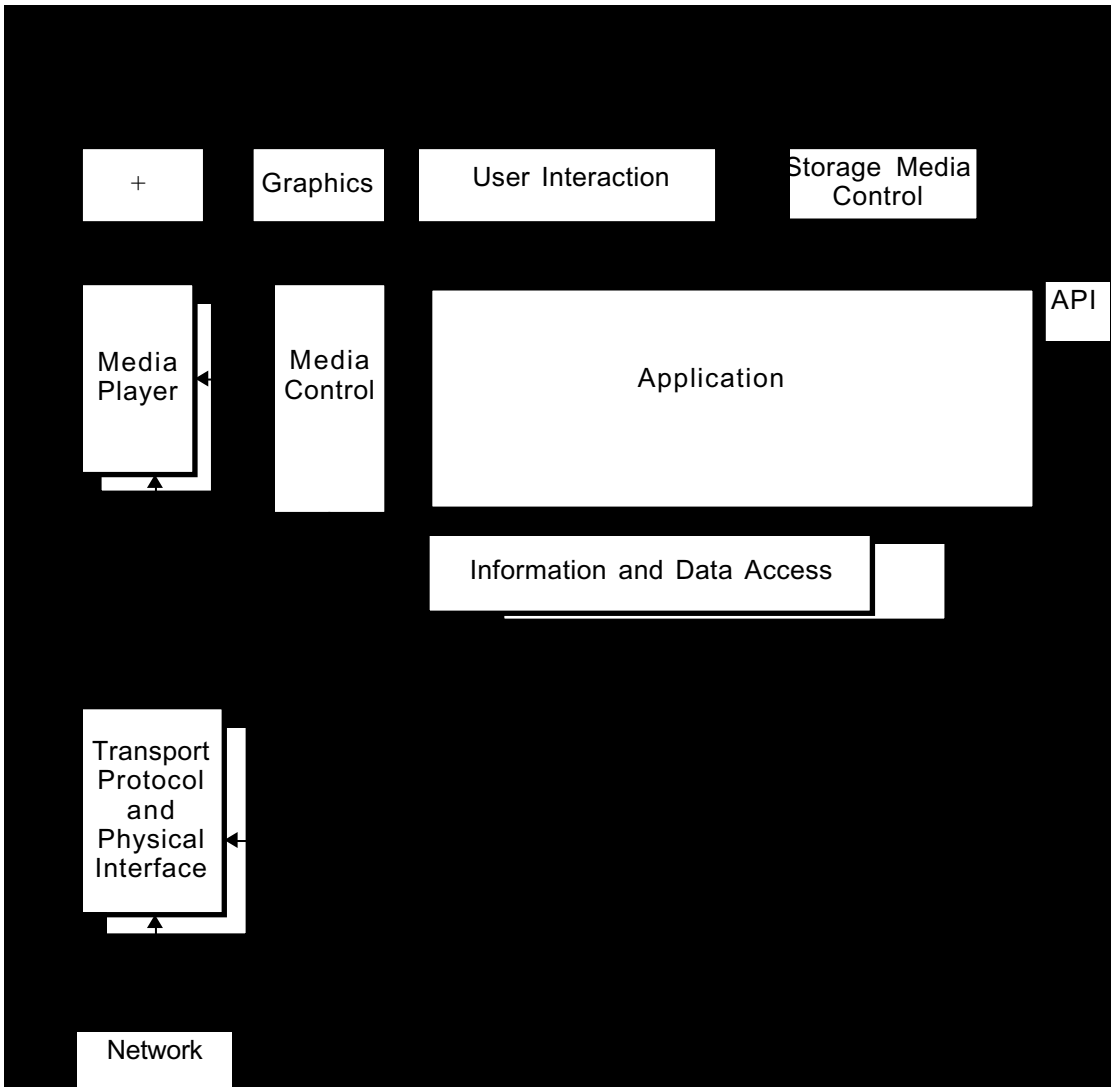


Figure 5 : Interfaces between an MHP application and the MHP system

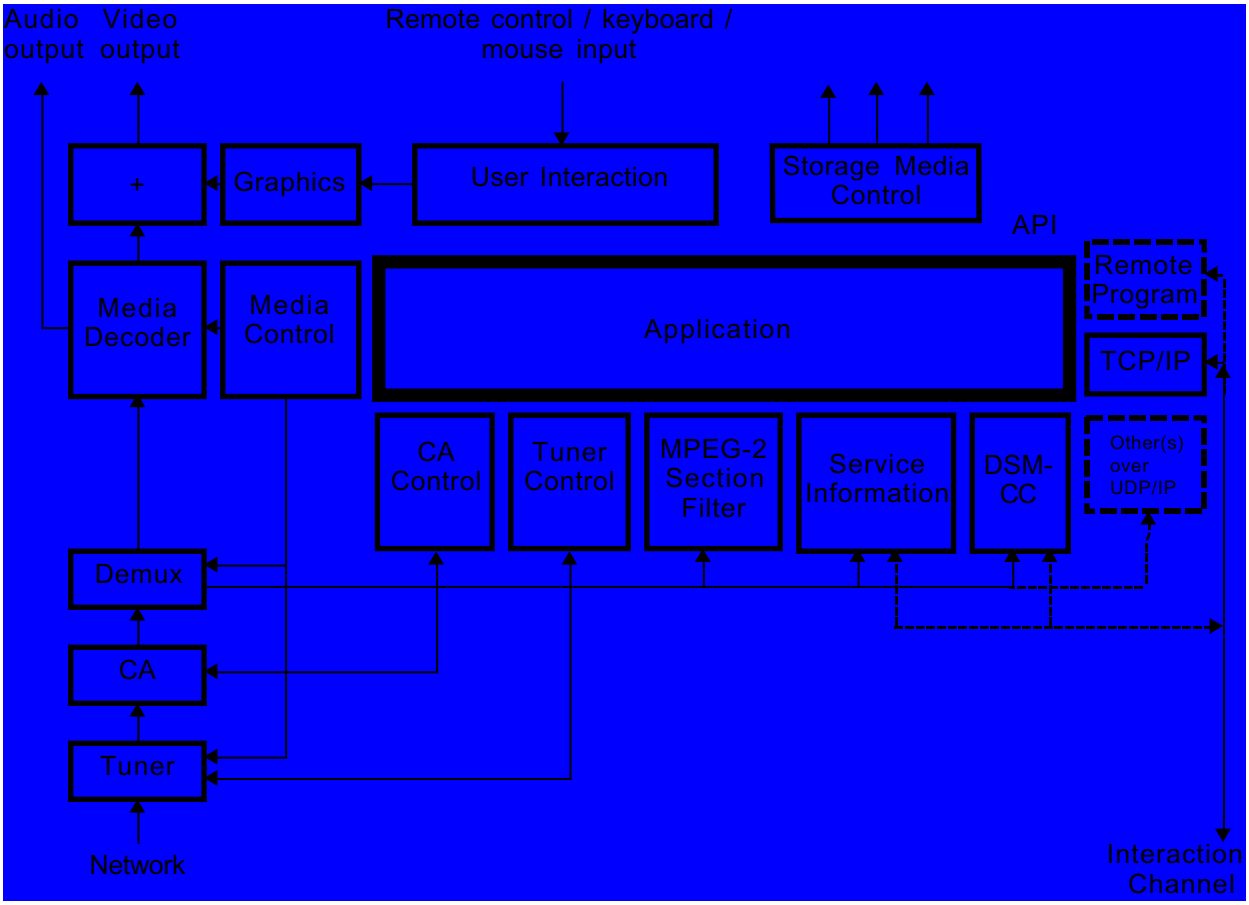


Figure 6 : Interfaces between an MHP application and the MHP system with more details

The diagrams in figure 5 and figure 6 show these interfaces and their relationships to media and information flows within an MHP system - excluding any local cluster issues. The first diagram shows a generic MHP, the second a specific instance of an enhanced broadcast or interactive TV profile system, with optional additions shown.

In figure 5 and figure 6, only the border between the application and the rest of the system is in the scope of this specification. All the rest of each diagram is implementation dependent and shown for information purposes only.

5.4 Plug-ins

A "plug-in" is a set of functionality that can be added to a generic platform in order to provide interpretation of application and content formats not specified by this specification to be included in MHP terminals.

NOTE: Those organisations concerned with interoperation between the standard MHP platform and other platforms need to specify the plug-in properly for such platforms.

The choice of which plug-ins to use must be in the hands of the end-user in order that he can have a choice of sources of service. This option can be exercised in a number of ways, including the purchase of equipment with "built-in" plug-in functionality, the positive selection of a download, or the automatic selection of a download where there is no memory resource limitation.

The plug-in application may stay resident where the design of the platform implementation allows. The MHP including the plug-in must behave, once the plug-in is loaded and operational, in the same way as a platform supporting the format of the delegated applications without the use of a plug-in.

Figure 7 illustrates the position of two types of Plug-in in the MHP.

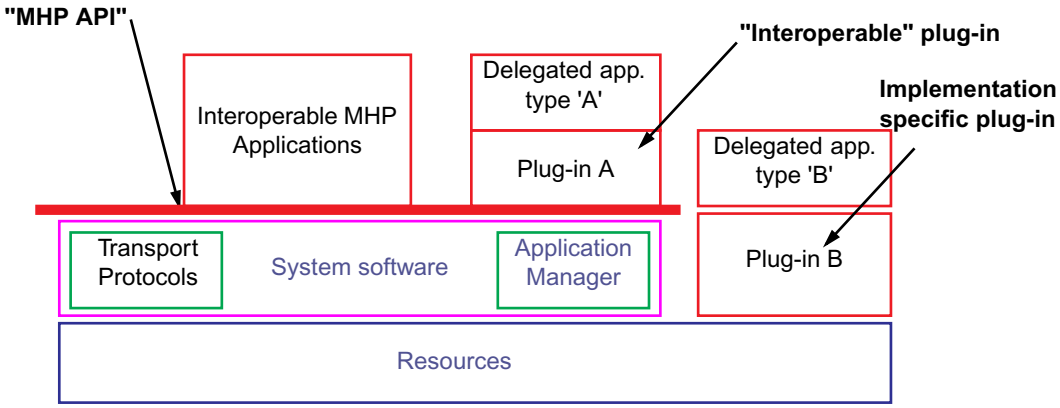


Figure 7 : Illustrative plug-in implementation options

There are two possible types of Plug-in implementation:

- Using implementation-specific code (e.g. in native code, or using implementation-specific Java APIs). This is called an implementation- specific plug-in, illustrated as plug-in "B" in the figure.
- An MHP application. This is called an interoperable plug-in, illustrated as plug-in "A" in the figure.

The internal specification of both plug-ins ("A" and "B") is outside of the scope of this specification. They are illustrated to show their relationship to the platform.

5.4.1 Security Model

Plug-ins must have sufficient access to the resources in the platform to implement the specification concerned. An implementation-specific plug-in may have access to many of the resources of the platform irrespective of the MHP security model. All plug-ins are responsible for managing the security of the applications they execute.

If a plug-ins needs privileged access to resources not available to all downloaded applications (i.e. not in the "sand box") in order to provide equivalent function to the "legacy" supported they will require the appropriate authentication.

6 Transport Protocols

6.1 Introduction

In order to be able to talk to the external world, the MHP has to be able to communicate through different network types. This part of the MHP specification deals with the Network Independent Protocols and on the networks as defined in two specifications from the DVB project, as specified in ETS 300 802 [16] and EN 301 192 [5].

The protocols defined in these standards provide a generic solution for a variety of broadcast only and interactive services, through the use of DSM-CC User-to-User, Data and Object Carousel protocols, as specified in ISO/IEC 13818-6 [26] and support for IP over the interaction channel as well as over the broadcast channel through the Multiprotocol Encapsulation EN 301 192 [5].

Broadcast only services are provided on systems consisting of a downstream channel from the Service Providers to Service consumers.

Interactive services are provided on systems consisting of a downstream channel together with interaction channels.

There are many possible network configurations covering the currently specified DVB broadcast options including satellite, terrestrial, cable, SMATV and MMDS in conjunction with PSTN, ISDN, cable and other interactive channel options.

The network dependent protocols for the interaction channels in the DVB context are specified in ETS 300 800 [14], ETS 300 801 [15], EN 301 193 [6], EN 301 195 [7], EN 301 199 [8], TR 101 201 [48] respectively for CATV, PSTN/ISDN, DECT, GSM, LMDS and SMATV networks. The network dependent protocols work together with the Network Independent Protocols.

6.2 Broadcast Channel Protocols

This section deals with the DVB defined or referenced broadcast channel protocols. This chapter does not consider other protocols and the APIs that would provide access to them.

Other protocols and their APIs are considered as extensions to the DVB MHP platform, see K, "(informative): Extensions" on page 476.

Figure 8 illustrates the set of DVB defined broadcast protocols that are accessible by MHP applications in some or all profiles (see 15, "Detailed platform profile definitions" on page 361). The full details of the APIs that provide access to these broadcast protocols are in chapter 11, "DVB-J Platform" on page 241.

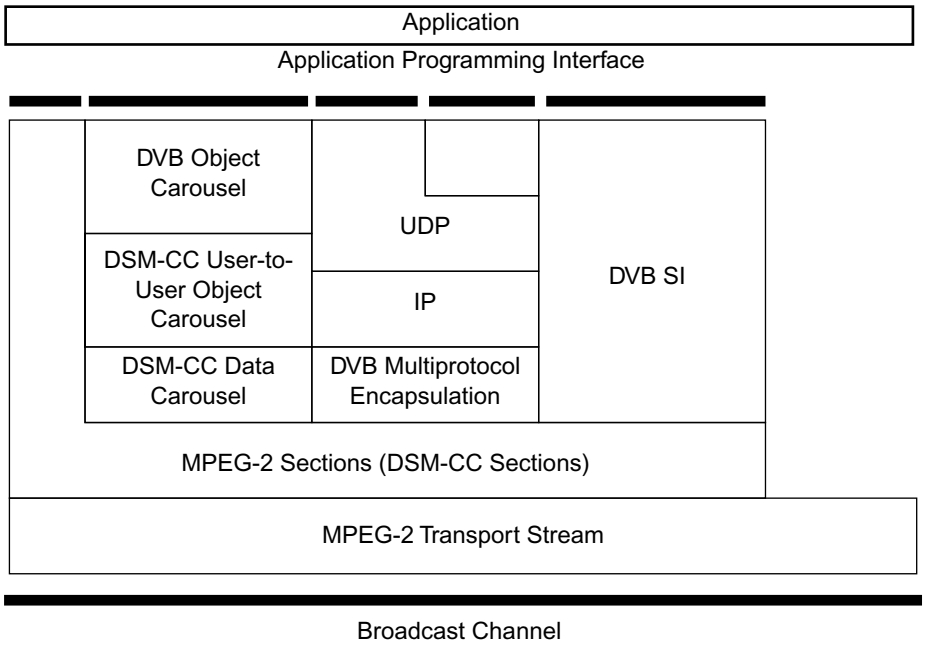


Figure 8 : Broadcast Channel Protocol Stack

6.2.1 MPEG-2 Transport Stream

MPEG-2 Transport Stream is defined in ISO/IEC 13818-1 [23].

6.2.2 MPEG-2 Sections

MPEG-2 private sections as defined in ISO/IEC 13818-1 [23] is [3] is based on the MPEG-2 Transport Stream protocol in 6.2.1.

6.2.3 DSM-CC Private Data

DSM-CC Private Data protocol as defined in ISO/IEC 13818-6 [26].

6.2.4 DSM-CC Data Carousel

DSM-CC Data Carousel as defined in ISO/IEC 13818-6 [26].

6.2.5 DSM-CC User-to-User Object Carousel

DSM-CC User-to-User Object Carousel protocols as defined in ISO/IEC 13818-6 [26] with the restrictions and extensions as defined in EN 301 192 [5], TR 101 202 [49] and annex B, "(normative): Object carousel" on page 388.

6.2.5.1 DVB-J class files

Java bytecode for each Java class is carried as the content bytes of the BIOP::FileMessage corresponding exactly to the contents of a "class" file as specified in Java VM [34].

6.2.5.2 DVB-HTML document files

The set of documents defining a DVB-HTML application is transported with the content bytes of BIOP::FileMessage messages corresponding exactly to the contents of the documents (i.e. the BIOP::FileMessage doesn't include any HTTP headers, etc.).

6.2.5.3 Loss of Carousel Behaviour

Under some conditions, carousels may be lost from the visibility of an application. These conditions are defined in:

- B.2.9, "Unavailability of a carousel" on page 413
- 9.1.5, "Persistence of Applications Across Service Boundaries" on page 185

When this happens, implementations may continue to provide data from carousels which have been lost where they have that data cached. The extent of this is clearly implementation dependent. It is also implementation dependent how this changes with time. Clearly if data from the lost file system is flushed from a cache, it cannot be replaced. Lost carousels shall never be restored automatically.

Data not in such a cache shall be unavailable to applications. When applications attempt to access data from lost carousels, this shall fail. The failure mode shall be one appropriate to the content format and the mechanism being used to access the data.

Failure modes for DVB-J applications are defined in 11.5.1.3, "Behaviour following loss of a broadcast file system" on page 257.

6.2.6 DVB Multiprotocol Encapsulation

DVB Multiprotocol Encapsulation as defined in EN 301 192 [5] provides support for IP and is based on the DSM-CC Private Data protocol.

6.2.7 Internet Protocol (IP)

Internet Protocol as defined in RFC 791 [43].

6.2.8 User Datagram Protocol (UDP)

User Datagram Protocol as defined in RFC 768 [42].

6.2.9 DVB Service Information

DVB Service Information as defined in EN 300 468 [4] and ETR 211 [11].

6.3 Interaction Channel Protocols

This section deals with the DVB defined or referenced interaction channel protocols. This chapter does not consider other protocols and the APIs that would provide access to them. Other private protocols and possibly APIs are not precluded and are outside of the scope of the MHP.

Figure 9 illustrates the set of DVB defined interaction channel protocols that are accessible by MHP applications in some or all profiles (see 15, "Detailed platform profile definitions" on page 361). The full details of the APIs that provide access to these interaction protocols are in chapter 11, "DVB-J Platform" on page 241.

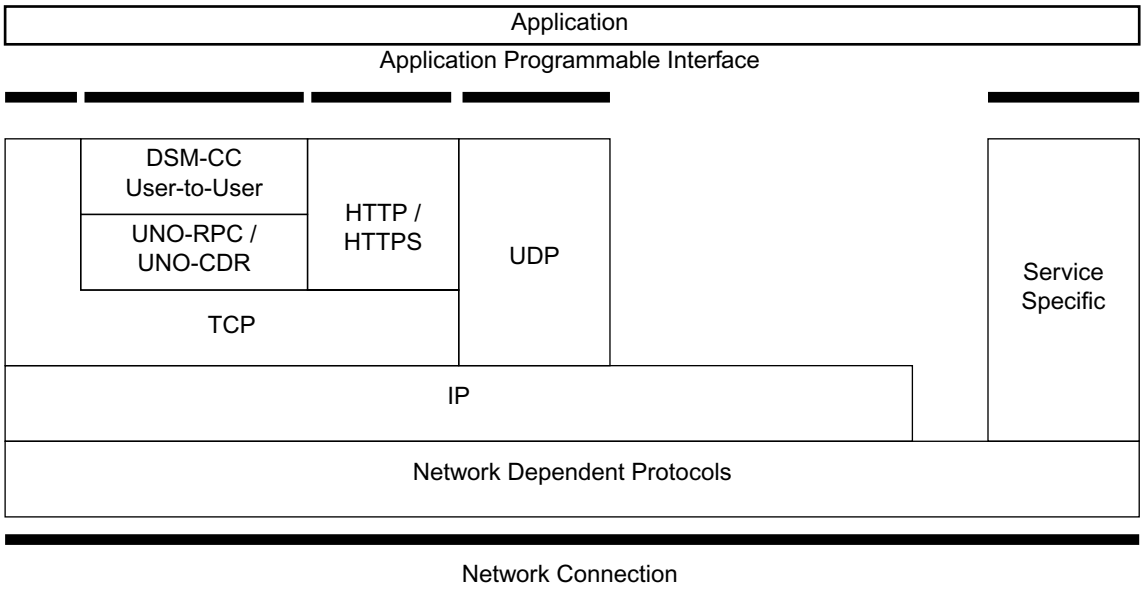


Figure 9 : Interaction Channel Protocol Stack

6.3.1 Network Dependent Protocols

As defined in ETS 300 800 [14], ETS 300 801 [15], EN 301 193 [6], EN 301 195 [7], EN 301 199 [8], TR 101 201 [48] respectively for CATV, PSTN/ISDN, DECT, GSM, LMDS and SMATV networks.

6.3.2 Internet Protocol (IP)

Internet Protocol as defined in RFC 791 [43].

6.3.3 Transmission Control Protocol (TCP)

Transmission Control Protocol as defined in RFC 793 [44].

6.3.4 UNO-RPC

The UNO-RPC consists of the Internet Inter-ORB Protocol (IIOP) as specified in CORBA/IIOP [2].

6.3.5 UNO-CDR

The UNO-CDR as defined in CORBA/IIOP [2].

6.3.6 DCM-CC User to User

DSM-CC User-to-user as defined in ISO/IEC 13818-6 [26] with the restrictions and extensions as defined in EN 301 192 [5] and TR 101 202 [49].

6.3.7 Hypertext Transfer Protocol (HTTP)

6.3.7.1 HTTP 1.1

Hypertext Transfer Protocol as defined in RFC 2616 [40].

6.3.7.2 MHP profile of HTTP 1.0

HTTP 1.0 is defined in RFC 1945 [78]. MHP terminals supporting HTTP 1.0 are required to support persistent connections as defined below. MHP terminals implementing profiles where HTTP 1.0 is required are also allowed to implement subsequent versions of the HTTP specification (e.g. HTTP 1.1, RFC 2616 [40]) as long as these are backwards compatible and persistent connections or their equivalent in the subsequent version of the specification are supported.

With no support for persistent connections, a separate TCP connection has to be established to fetch each URL, increasing the load on HTTP servers and causing congestion. The use of multiple separate image files and other associated data, for example often require a client to make multiple requests to the same server in a short amount of time. Therefore an MHP terminal implementation shall include support for persistent connections.

The following section explains how persistent connection is to be used within the MHP. The original form of HTTP 1.0 persistent connections is defined as informational text in RFC 2068 [J]. The normative specification text included here is intended to be fully compatible with this RFC.

6.3.7.2.1 HTTP 1.0 persistent connections

When connecting to a server, an MHP terminal shall send the Keep-Alive connection-token:

```
Connection: Keep-Alive
```

An HTTP server (1.0 or 1.1) would then respond with the Keep-Alive connection token and the client may proceed with an HTTP 1.0 (Keep-Alive) persistent connection.

6.3.7.2.2 The Keep-Alive Header

When the Keep-Alive connection-token has been transmitted with a request or a response, a Keep-Alive header field may also be included. The Keep-Alive header field takes the following form:

```
Keep-Alive-header = "Keep-Alive" ":" 0# keepalive-param
keepalive-param = param-name "=" value
```

where the "0#" notation means that the "keepalive-param" field may be repeated 0 or more times and they are separated by a comma character "," if the field is included more than once.

The Keep-Alive header itself is optional, and is used only if a parameter is being sent. This specification does not define any parameters.

If the Keep-Alive header is sent, the corresponding connection token must be transmitted. The Keep-Alive header must be ignored if received without the connection token.

6.3.7.2.3 MHP and proxies

An MHP terminal must not send the Keep-Alive connection token to a HTTP 1.0 proxy server, as HTTP 1.0 proxy servers do not obey the rules of HTTP 1.1 for parsing the Connection header field.

If an MHP terminal sends Keep-Alive to a proxy server that doesn't understand Connection, which would then erroneously forward it to the next inbound server, which would establish the Keep-Alive connection and result in a hung HTTP 1.0 proxy waiting for the close on the response. The result is that the MHP terminal must be prevented from using Keep-Alive when talking to proxies that doesn't understand Connection.

6.3.7.2.4 Version compatibility

An HTTP 1.1 server may also establish persistent connections with an MHP terminal upon receipt of a Keep-Alive connection token. However, a persistent connection with an MHP terminal can't make use of the chunked transfer coding, and therefore MUST use a content-length for marking the ending boundary of each message.

For servers used for MHP applications, it is recommended that if HTTP 1.1 servers are used, they should support the HTTP 1.0 persistent connections when initiated by an HTTP 1.0 client using the Keep-Alive connection token.

6.3.7.3 HTTPS

This is described in RFC 2818 [98].

6.3.8 Service Specific

Service Specific protocols are proprietary protocols used by a service as defined in the guidelines for the Data Broadcast Specification TR 101 202 [49]. The DVB provides a registry mechanism for new, proprietary broadcast protocols.

6.3.9 User Datagram Protocol (UDP)

User Datagram Protocol as defined in RFC 768 [42].

6.4 Transport protocols for application loading over the interaction channel

Three scenarios are envisaged:

- The file system is completely implemented in the broadcast channel (the classic MHP 1.0 model which is not described further here)
- File system implemented only via the interaction channel
- Hybrid between broadcast stream and interaction channel

6.4.1 File system implemented only via the interaction channel

This clause addresses the case where the interaction channel presents the only file system i.e. where the protocol ID is 0x0003.

6.4.1.1 File system logical structure

The list of items signalled in the transport protocol descriptor(s) (see 10.8.1.3, "Transport via interaction channel" on page 226) are considered to form a single name space.

The MHP terminal when trying to locate a file specified by an incomplete (relative) filename, shall attempt to fetch a file from each of the items in that list in the order in which they are found in the list until the file is found or the list is exhausted.

The items in the list shall either be references to .zip files (see ZIP [77]) or base URLs ending in /' onto which the path of the requested file shall be concatenated. Any items in the list which are not one of these two types shall be ignored. Errors in discovering whether a specific file can be reached through a specific list item shall be ignored. The list must contain at least one item.

As an example, consider the MHP platform retrieving the "dvb.fontindex" file for an application from an which AIT includes two transport protocol descriptors with the following contents;

Table 1 : Example transport descriptor selector byte payload

URL base	URL extension
"http://www.dvb.org"	"applications/application1.zip"
	"graphics/"
	"shared/utils.zip"
"http://www.ebu.ch"	"general/misc.zip"
"http://www.dvb.org"	"other_stuff/we_dont_use_this_very_often.zip"

Then the search order for "dvb.fontindex" would be the following:-

a) in the contents of http://www.dvb.org/applications/application1.zip

b) from the URL http://www.dvb.org/graphics/dvb.fontindex

c) in the contents of http://www.dvb.org/shared/utils.zip

d) in the contents of http://www.ebu.ch/general/misc.zip

e) in the contents of http://www.dvb.org/we_dont_use_this_very_often.zip

The search order for "abc/dvb.hashfile" would be the following:-

a) for "abc/dvb.hashfile" in the contents of http://www.dvb.org/applications/application1.zip

b) from the URL http://www.dvb.org/graphics/abc/dvb.hashfile

c) for "abc/dvb.hashfile" in the contents of http://www.dvb.org/shared/utils.zip

d) for "abc/dvb.hashfile" in the contents of http://www.ebu.ch/general/misc.zip

These file system semantics shall be followed for all files fetched by or on behalf of an MHP application. This includes the files whose names and locations are standardised by this specification, e.g. 'dvb.fontindex', 'dvb.hashfile', 'dvb.signature.x' and dvb.certificate.x'.

For DVB-J, with the following application location descriptor:-

a) base_directory "/app1/starting"

b) classpath_extension "/shared;/app1/later"

c) initial_class "org.dvb.demo.myXlet"

The search order for a class would be the following:-

a) for "app1/starting/org/dvb/demo/myXlet.class" in the contents of http://www.dvb.org/applications/application1.zip

b) from the URL http://www.dvb.org/graphics/app1/starting/org/dvb/demo/myXlet.class

c) for "app1/starting/org/dvb/demo/myXlet.class" in the contents of http://www.dvb.org/shared/utils.zip

d) for "app1/starting/org/dvb/demo/myXlet.class" in the contents of http://www.ebu.ch/general/misc.zip

e) other_stuff/we_dont_use_this_very_often.zip

f) for "/app1/starting/shared/org/dvb/demo/myXlet.class" in the contents of http://www.dvb.org/applications/application1.zip

g) from the URL http://www.dvb.org/graphics/app1/starting/shared/org/dvb/demo/myXlet.class

h) for "/app1/starting/shared/org/dvb/demo/myXlet.class" in the contents of http://www.dvb.org/shared/utils.zip

i) for "/app1/starting/shared/org/dvb/demo/myXlet.class" in the contents of http://www.ebu.ch/general/misc.zip

j) other_stuff/we_dont_use_this_very_often.zip

k) for "/app1/starting/app1/later/org/dvb/demo/myXlet.class" in the contents of http://www.dvb.org/applications/application1.zip

l) from the URL http://www.dvb.org/graphics/app1/starting/app1/later/org/dvb/demo/myXlet.class

m) for "/app1/starting/app1/later/org/dvb/demo/myXlet.class" in the contents of http://www.dvb.org/shared/utils.zip

n) for "/app1/starting/app1/later/org/dvb/demo/myXlet.class" in the contents of http://www.ebu.ch/general/misc.zip

o) other_stuff/we_dont_use_this_very_often.zip

6.4.1.2 File transfer

Files shall be transferred using the profile of HTTP specified under 6.3.7.2, "MHP profile of HTTP 1.0" on page 58.

6.4.1.3 Class encoding

The classes of DVB-J applications can be delivered either as discrete class files or within ZIP files (see ZIP [77]).

NOTE: This contrasts to the broadcast case where object carousel files are simply class files.

The classes of DVB-J applications shall be delivered as discrete class files at the level of the file system.

NOTE: This means that DVB-J class files are allowed to be held on an HTTP server either as discrete class files or in ZIP files (see ZIP [77]) where ZIP files form part of the overall file system.

6.4.1.4 Directory listing in this file system

This file system is considered to be one that does not support directory listing in the following contexts:

- authentication (see 12.4.1.4, "Special authentication rules" on page 290).
- listing the files in a directory (see 14.7, "Files and file names" on page 358).

6.4.2 Hybrid between broadcast stream and interaction channel

In the hybrid case all directory information is provided in the broadcast stream but some, or possibly all, of the file contents are provided via the interaction channel.

6.4.2.1 File transfer

6.4.2.1.1 Broadcast file delivery

The file contents are carried via a BIOP::File as is the normal case for an Object Carousel defined in MHP 1.0. As described in MHP 1.0 the IOR from the file binding to the file contents uses either a BIOPProfileBody or a LiteOptionsProfileBody.

6.4.2.1.2 Interaction channel delivery

In this case the IOR from the file binding to the file contents uses the HTTPProfileBody (see table 2) to identify the location of the file contents on the interaction channel.

This form of IOR shall only be used for BIOP::File objects.

See 6.3.7.2, "MHP profile of HTTP 1.0" on page 58 for the profile of HTTP that is used to retrieve the contents of the file.

6.4.2.1.3 HTTPProfileBody

The HTTP Profile body specifies host, port and path_segments. In HTTP requests these are concatenated to form a URL of the form:

```
http://host:port/path_segments
```

Table 2 : HTTP Profile Body syntax

Syntax	bits	Type	Value	Comment
HTTPProfileBody {				
profileId_tag	32	uimsbf	0x44564200	
profile_data_length	32	uimsbf	*	
profile_data_byte_order	8	uimsbf	0x00	big endian byte order
version.major	8	uimsbf	0x01	protocol major version 1
version.minor	8	uimsbf	0x00	protocol minor version 0
host_data_length	8	uimsbf	N1	
for (k=0; k<N1; k++) {				
host_data	8	uimsbf	+	
}				
port	16	uimsbf		
objectKey_length	16	uimsbf	N2	<= 4
for (k=0; k<N2; k++) {				
objectKey_data	8	uimsbf	+	
}				
}				

NOTE: The tag values 0x44564201…0x44564201 have been reserved for future use by the DVB. 0x44 is ASCII for "D", 0x56 is "V" and 0x42 is "B".

version: These 8-bit fields indicate the version of the protocol that the server will use to deliver the file specified. The version value 1.0 indicates that the transport protocol is as defined in 6.3.7.2, "MHP profile of HTTP 1.0" on page 58.

host_data: These bytes convey the identifier of the Internet host to which messages may be sent. It may be a fully qualified domain name or Internet standard "dotted decimal" form (e.g., "192.231.79.52").

port: This 16 bit unsigned integer is the TCP/IP port number at the specified host where the target agent is listening for requests.

objectKey_data: These bytes form a string which carries the path_segments portion of the URL which uniquely identifies the object on the server RFC 2396 [41].

6.4.2.2 Class encoding

Each class of the DVB-J application shall be delivered in an individual file regardless of whether the file contents are retrieved from the broadcast channel or from the interaction channel.

7 Content formats

7.1 Static formats

7.1.1 Bitmap image formats

7.1.1.1 Image encoding restrictions

Any indications in the transmitted image with respect to pixel scaling, colour space or gamma are to be ignored in the presenting of the image. One image pixel shall be mapped to one graphics pixel in the current graphics configuration, unless otherwise scaled by the application directly.

See also 7.5, "Colour Representation" on page 67.

7.1.1.2 JPEG

JPEG as defined in ISO/IEC 10918-1 [21] using the JFIF [35] file exchange format.

Only coding using sequential DCT-based mode or progressive DCT-based mode is required to be supported by implementations.

Specifically, lossless and hierarchical modes need not be supported.

7.1.1.3 PNG

PNG is defined as in PNG [37].

See also 15.1, "PNG - restrictions" on page 363.

7.1.1.4 GIF

GIF is defined as in GIF 89a [17].

7.1.2 MPEG-2 I-Frames

MPEG-2 I-Frames are defined as in ISO/IEC 13818-2 [24].

The payload of a file delivering an MPEG -2 I frame shall:

- be a valid video_sequence() including a sequence_extension()
- contain one I frame only, i.e. one picture_header(), one picture_coding_extension(), and one picture_data() encoded as an intra coded frame, with picture structure = "frame"

That is the structure is:

```
sequence_header()
sequence_extension()
extension_and_user_data(0)
optional group_of_pictures_header() and extension_and_user_data(1)
picture_header ( picture_coding_type = "I frame")
picture_coding_extension ( picture_structure = "frame picture")
extension_and_user_data(2)
picture_data()
sequence_end_code()
```

7.1.3 MPEG-2 Video "drips"

The drip feed mode consists of letting an application progressively feed the MPEG-2 video decoder with chunks of an MPEG-2 video stream. In this mode, it is only required for the decoder to handle I and P frames (i.e. not B frame). Each chunk shall contain one frame and a certain number of syntactic elements (as described in ISO/IEC 13818-2 [24]) such as `sequence_header()` or `group_of_picture_header()`.

Firstly, the content of each of the chunks of bytes fed to the decoder shall comply with the following syntax:

```
optional {
      sequence_header()
      sequence_extension()
      extension_and_user_data(0)
      optional {
            group_of_pictures_header()
            extension_and_user_data(1)
      }
}

picture_header ( picture_coding_type = "I frame" or "P frame")
picture_coding_extension ( picture_structure = "frame picture")
extension_and_user_data(2)
picture_data()
optional {
      sequence_end_code()
}
```

In addition, the overall concatenation of chunks over time shall respect the authorized combinations of syntactic elements described in ISO/IEC 13818-2 [24] to build a legal MPEG-2 video stream. The following diagram, extracted from ISO/IEC 13818-2 [24], reflect the rules defined in that standard:

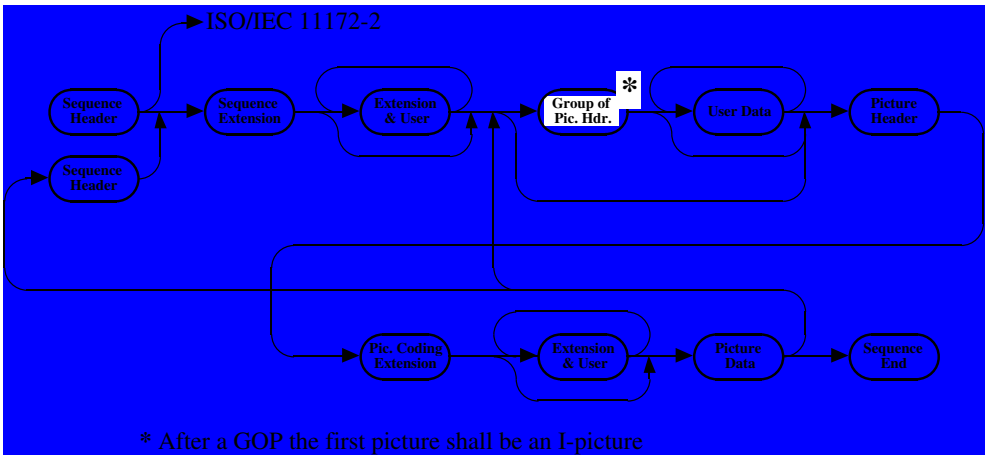


Figure 10

The following restrictions are applied to P-frames:

- The P-frame shall contain no prediction information (i.e. no motion vector shall be present in macroblock elements).
- The allowed macroblock_types for P-frames are:

  "Intra" (i.e. VLC code 0001 1)

  "Intra, Quant" (i.e. VLC code 0000 01)

  "No MC, Coded" (i.e. VLC code 01)

  "No MC, Coded, Quant" (i.e. VLC code 0000 1)

NOTE: The standard semantics for P-frames allow `macroblock_escape` and `macroblock_address_increment` to signal skipped macroblocks. This allows P-frames to be very sparse, only carrying macroblocks positioned at certain locations on the screen. This contrasts with semantics for an I-frame where macroblocks are required to fill the full screen.

If invalid content is fed to the MPEG-2 video decoder, the content is discarded and there are no guarantees when subsequent valid chunk of byte fed to the decoder will be displayed (unless the decoder is restarted).

This mode requires the decoder to be in the "low delay" mode as defined in ISO/IEC 13818-2 [24].

This mode can be used by connecting a `org.dvb.media.DripFeedDataSource` instance to a Player representing a MPEG-2 video decoder. See N, "(normative): Streamed Media API Extensions" on page 574.

7.1.4 Monomedia format for audio clips

The format for audio clips is MPEG-1 Audio (Layer 1 & 2) ES data as defined as in ISO/IEC 11172-3 [22] and constrained in TR 101 154 [9].

Each "file" of audio content is a binary data file carrying Audio elementary stream data. Each "file" delivers an integer number of audio access units and the first byte of each file is the first byte of an audio access unit. The MPEG Audio data in all other respects conforms to the specifications provided in TR 101 154 [9].

Implementations decoding audio clips can assume that they have an approximately constant number of bytes per second. If this not true then the behaviour is implementation dependent.

7.1.5 Monomedia format for text

Java modified UTF-8 as defined in Java Language Spec [32] section 22.2.14 "writeUTF" is the coding of text in MHP.

NOTE: Based on ISO 10646-1 [18] but modified with respect to the encoding of the character code zero.

7.1.5.1 Built-in character set

See **E, "(normative): Character set" on page 434**.

7.2 Broadcast streaming formats

7.2.1 Audio

MPEG Audio with the restrictions and enhancements defined in TR 101 154 [9]

7.2.2 Video

Standard Definition 25 Hz MPEG Video with the restrictions and enhancements defined in TR 101 154 [9].

7.2.3 Subtitles

The content formats supported for subtitles are:

- DVB Subtitles
- Teletext

See 13.5, "Subtitles" on page 349.

In the event that both DVB Subtitles and DVB Teletext are available then DVB Subtitles will take precedence (i.e. if a stream is flagged as having both DVB Subtitles and Teletext Subtitles then the DVB Subtitles will be displayed).

Teletext Subtitles conform to the same display model, as DVB subtitles.

Application control and detection of subtitles, whether they be DVB Subtitles or Teletext Subtitles, will be through JMF. The application will have no knowledge of the delivery/presentation protocol being used to provide subtitles.

No APIs will be provided to access Teletext data packets and no timing model is provided for the decoding of Teletext subtitle. Text subtitles will be decoded as soon as the data becomes available.

7.2.3.1 DVB Subtitles

DVB Subtitles are defined as in EN 300 743 [13].

7.2.3.2 Teletext

Transmission of the text is as defined in EN 300 472 [12]. The data format is as defined in ETS 300 706 [61] but restricted to presentation level 1.5 or lower. Signalling of the Teletext subtitle page will be via the Teletext descriptor as defined in EN 300 468 [4].

Within the MHP specification Teletext is only supported as an alternative content format for delivery of subtitles. The MHP specification does not address its possible use as a navigable content format.

NOTE: Manufactures remain free to implement full Teletext support based on regulatory requirement or market demand. Such support would be implemented outside of the MHP environment, by VBI re-insertion of the non-subtitle text or through a native Teletext Decoder. The user interface integration is then an issue for the manufacturer to resolve.

It is envisaged that broadcasters will use MHP applications to deliver navigable text services providing a greater level of interactivity and enhanced graphics.

7.3 Resident fonts

See section G.4, "Resident fonts and text rendering" on page 445.

See also annex D, "(normative): Text presentation" on page 421.

7.4 Downloadable Fonts

PFR0 (Portable Font Resource version 0) is defined as in DAVIC 1.4.1p9 [3] as the coding format for fonts. Receivers are only required to provide support for the outline version of the font.

The `charCode` value in the PFR `charRecord` shall be the ISO 10646-1 [18] code for the glyph encoded using UCS-2.

See also D.2.2, "Downloaded fonts" on page 421.

7.5 Colour Representation

7.5.1 Background (informative)

The method of colour encoding is critical to how consistently the colours in an image can be reproduced across different systems. The description must be cast in a way which is independent of the mechanisms by which it will finally be reproduced for the viewer.

The International Colour Consortium (ICC) has proposed a thorough solution to the precise communication of colour in open systems. However the ICC profile format is somewhat over-specified for the MHP. The ICC mechanism for ensuring that a colour is correctly mapped from an input to the output colour space is by attaching a profile for the input colour space to the image in question. This is appropriate for high end systems, especially those in the print media. However, a primarily CRT based home platform neither needs, nor has the processing power and available bandwidth, to handle an embedded profile mechanism. It would also require some sophistication on the part of the end consumer to set up properly.

Fortunately by adopting a single default colour space that can be processed as an **implicit** ICC profile the advantages of the ICC approach are gained, and the system is later scalable to a full colour management system with a clear relationship to existing ICC colour management systems while minimizing software and support requirements in an MHP today.

A colour space is a model for representing colour numerically in terms of three or more coordinates or tristimulus values. An RGB colour space represents colours in terms of Red, Green and Blue coordinates. The MHP format shall use the specific RGB encoding for colour imagery, sRGB as defined in IEC 61966-2-1 [27]. This is suitable for a wide range of presentation environments including TV's and has become widely adopted in the computer environment and WWW. It is, for example, compatible with CCIR Recommendation ITU-R BT.709 [30] standard for colour encoding in HDTV. This format has the advantage of device independence without a great deal of additional overhead.

For sRGB, the goal is to communicate the appearance of colours as displayed on a reference monitor in terms of 8-bit digital code values for each coordinate. sRGB colour values represent colour appearance with respect to a defined reference viewing environment.

For colour stimuli viewed in the reference viewing environment, sRGB values are defined by a series of simple mathematical operations from standard CIE colourimetric values.

The sRGB format is a good match for 24 bit colour on most CRT's. In devices where a great deal of damage is done to the colour space it may not give consistent results. For example dithering to a 4-bit per primary colour map will violate the gamma assumptions.

7.5.2 Specification

All images transmitted shall be within the gamut encompassed by the sRGB colourspace. Where possible this should be coded so that the terminal does not have to translate. Where this is impractical the sRGB image may be transcoded into a different colourspace provided the gamut assumption is not violated (i.e. to be consistent with JFIF, JPEG images shall be sent in the region of the YC_rC_b colourspace that overlaps with the sRGB gamut).

NOTE: that the presentation of images using colours outside of the sRGB gamut shall be platform dependent.

Images created in the MHP will be in the sRGB colourspace by default, although manufacturers are free to provide support for other colour spaces if they choose. All MHPs shall support transformations from sRGB to the colour spaces allowed by the MPEG-2 definition (e.g. BT 709 and BT 420) and vice versa, manufacturers may choose to support transformations to and from other colour spaces.

7.5.2.1 The sRGB Reference Viewing Environment

The reference display conditions and viewing environment for sRGB are partly described in table 3. A reference viewing environment must be provided to allow for the unambiguous definition of colour, the sRGB reference viewing environment corresponds to conditions typical of indoor viewing of CRTs – further details can be found in the IEC 61966-2-1 [27].

The sRGB reference conditions therefore provides a well defined reference compatible with ITU-R BT.709 [30].

Table 3 : sRGB reference Display conditions

Condition	sRGB
Viewing flare	1,0 %
Reference Background	20 %
Display model Offset	0,055
Display Gun/Phosphor Gamma	2,4
Display white point	x = 0,3127 y = 0,3290 (D65 Hunt, R.W.G. [52])
Ambient Lighting	64 lx
Display Luminance level	80 cd/m^2

7.5.2.2 Colourimetric Definitions and Encodings

sRGB tristimulus values can be computed as follows, firstly linear sRGB tristimulus are computed as linear combinations of the 1931 CIE XYZ (CIE 15 [1]) values using the following relationship:

$$\begin{bmatrix} R_{sRGB} \\ G_{sRGB} \\ B_{sRGB} \end{bmatrix} = \begin{bmatrix} 3,2410 & -1,5374 & -0,4986 \\ -0,9682 & 1,8760 & -0,0416 \\ 0,0556 & -0,2040 & -1,0570 \end{bmatrix} \begin{bmatrix} X_{D65} \\ Y_{D65} \\ Z_{D65} \end{bmatrix}$$

In the encoding process, negative sRGB tristimulus values, and sRGB tristimulus values greater than 1,00 are not retained. The luminance dynamic range and colour gamut of sRGB is limited to the tristimulus values between 0,0 and 1,0 by simple clipping. This gamut, however, is large enough to encompass most colours that can be displayed on CRT monitors.

For comparison, the CIE chromaticities for the red, green, and blue ITU-R BT.709 and ITU-R BT.470 reference primaries, and for CIE Standard Illuminant D65 (IEC 61966-2-1 [27]), are given in tables 4, 5. From these primaries the YC_bC_r transmitted values are computed by similar relationships.

Therefore ITU-R BT.709 YC_bC_r colourspace and similar video colour spaces can be converted to sRGB and vice versa by way of CIE XYZ. Chromaticities for other video formats allowed in MPEG streams can be found in their respective standards.

Table 4 : ITU-R BT.709 reference primaries and CIE standard illuminant

	Red	Green	Blue	D65
x	0,6400	0,3000	0,1500	0,3127
y	0,3300	0,6000	0,0600	0,3290
z	0,0300	0,1000	0,7900	0,3583

Table 5 : TU-R BT.470-2 reference primaries and CIE standard illuminant

	Red	Green	Blue	D65
x	0,6700	0,2100	0,1400	0,3100
y	0,3300	0,7100	0,0800	0,3160
z	0,0100	0,0800	0,7800	0,3740

The linear sRGB tristimulus values are next transformed to non linear sR'G'B' values. This process closely approximates the effect of a "gamma" curve of 2,2 with a slight offset. This makes sRGB consistent with legacy systems and images.

if $R_{sRGB} > 0{,}00304$ and $G_{sRGB} > 0{,}00304$ and $B_{sRGB} > 0{,}00304$

then

$R'_{sRGB} = 1{,}055 * R_{sRGB}\ ^{(1{,}0/2{,}4)} - 0{,}055$

$G'_{sRGB} = 1{,}055 * G_{sRGB}\ ^{(1{,}0/2{,}4)} - 0{,}055$

$B'_{sRGB} = 1{,}055 * B_{sRGB}\ ^{(1{,}0/2{,}4)} - 0{,}055$

else

$R'_{sRGB} = 12{,}92 * R_{sRGB}$

$G'_{sRGB} = 12{,}92 * G_{sRGB}$

$B'_{sRGB} = 12{,}92 * B_{sRGB}$

end if

Finally, the non-linear sR'G'B' values are converted to digital code values. This conversion scales the sR'G'B' values by using the equation below where WDC represents the white digital count and KDC represents the black digital count.

$R_{8bit} = ((WDC - KDC) * R'_{sRGB}) + KDC$

$G_{8bit} = ((WDC - KDC) * G'_{sRGB}) + KDC$

$B_{8bit} = ((WDC - KDC) * B'_{sRGB}) + KDC$

The current sRGB specification uses a black digital count of 0 and a white digital count of 255 for 24-bit (8-bits/channel) encoding, and the MHP shall adopt the same convention. However, note that some digital video signals may use a black digital count of 16 and a white digital count of 235 in order to provide a larger encoded colour gamut.

Details of the reverse transformation from sRGB to CIE XYZ are given in IEC 61966-2-1 [27], mappings from ITU-R BT.709 and ITU-R BT.470 to CIE XYZ are given in ISO/IEC 13818-2 [24].

7.6 MIME Types

Table 6 : File type identification

MIME type	Extension (note 1)	Definition of content
"image/jpeg"	".jpg"	As defined in 7.1.1.2, "JPEG" on page 64.
"image/png"	".png"	As defined in 7.1.1.3, "PNG" on page 64 possibly with a constrained profile as defined in 15.1, "PNG - restrictions" on page 363.
"image/gif"	".gif"	As defined in 7.1.1.4, "GIF" on page 64.
"image/mpeg"	".mpg"	As defined in 7.1.2, "MPEG-2 I-Frames" on page 64.
"video/mpeg"	".mpg"	As defined in 7.2.2, "Video" on page 66.
"video/dvb.mpeg.drip"	".drip"	As defined in 7.1.3, "MPEG-2 Video "drips"" on page 64.
"audio/mpeg"	".mp2"	As defined in 7.1.4, "Monomedia format for audio clips" on page 66 or as defined in 7.2.1, "Audio" on page 66.
"text/dvb.utf8"	".txt"	As defined in 7.1.5, "Monomedia format for text" on page 66.
"text/xml"	".xml"	As defined in 8, "DVB-HTML" on page 71.
"text/css"	".css"	As defined in 8.8, "CSS" on page 103.
"text/plain"	".txt"	As defined in 7.1.5, "Monomedia format for text" on page 66.
"text/ecmascript"	".js"	As defined in 8.6.11, "Script content" on page 89.
"image/dvb.subtitle"	".sub"	As defined in 7.2.3, "Subtitles" on page 66.
"text/dvb.subtitle"		
"text/dvb.teletext"	".tlx"	As defined in 7.2.3.2, "Teletext" on page 67.
"application/dvb.pfr"	".pfr"	As defined in 7.4, "Downloadable Fonts" on page 67.
"application/dvbj"	".class"	A DVB-J class file. See 6.2.5.1, "DVB-J class files" on page 55.
"application/xml"	".xml"	As defined in 8, "DVB-HTML" on page 71.
"multipart/dvb.service"	".svc"	An MPEG Program (DVB Service) conforming to DVB norms.
NOTE 1: Future formats may use more characters in the extension		

7.6.1 Rationale

The MIME types are defined to reserve a name space for the possible future support of downloadable JMF players.

The file name extensions shall be included in broadcasts to assist receivers identify the type of the content. For DVB-J applications, this is described in table 113, "Return types of URL.getContent()" on page 245).

Not all MIME and filename extensions defined in the above table are actually used in this specification. For DVB-J, the APIs which consume media types are described in 15.2, "Minimum media formats supported by DVB-J APIs" on page 364. With MIME types whose corresponding media is not listed for a particular profile, access to that content type from files is not defined for that profile.

8 DVB-HTML

8.1 Introduction

8.1.1 Application Area

One application area considered of commercial importance for the Multimedia Home Platform (MHP) is that of the provision of a hypertext or "super teletext" system for the presentation of information alongside broadcast. In order to promote interoperability, both between different MHP vendors and where possible with the wider internet, this document describes a specific subset of the data formats defined for use in the World Wide Web adopted by the MHP, plus DVB specific extensions.

The DVB MHP specification provides the basic definitions needed for integration of DVB HTML applications into the MHP:

- Definition of the term DVB HTML application and its lifecycle in 9.3.1, "The DVB-HTML Application" on page 193.
- How to signal a DVB HTML application in 10, "Application Signalling" on page 208.
- Extensions on how to transport a DVB HTML application in 6.2.5.2, "DVB-HTML document files" on page 55.
- The definition of content for DVB HTML in this chapter.

8.1.2 Profiles

There is only one DVB-HTML profile defined see (15, "Detailed platform profile definitions" on page 361).

8.2 Architecture

8.2.1 Context

A DVB-HTML application in the context of MHP is a set of resources selected from the DVB-HTML family of content formats as defined in this specification. The resources of a DVB-HTML application form a directed graph, rooted by the resource referenced in the Application Entry Point (see "DVB-HTML application location descriptor" on page 232). The allowed extent of the graph is described by the application boundary descriptor, the nodes of the graph are the physical representation of the resources, the arcs are naming references defined in the content formats. The interpretation of a DVB-HTML application is handled by a support application (commonly called a user agent in W3C terminology). For the purposes of exposition DVB defines an "actor" which is the runtime context associated with a DVB-HTML application maintained by the user agent, there is a one to one correspondence between actors and running applications. There may be a many to one relationship between actors and user agents. The lifecycle of a DVB-HTML application is described in 9.3, "DVB-HTML Model" on page 193.

During the lifetime of a DVB-HTML application the user agent performs three types of processing on resources to enable the behaviour of the DVB-HTML application:

- **Decoding**
- **Presentation**
- **Interaction**

Decoding is the process of reading the bit representation of the resource and constructing a runtime representation in the actor context. The nature of the runtime representation is not specified, but it shall respect the required semantics of the resource type. Most resource types have a visible or audible representation, and **Presentation** is the process of rendering the runtime representation of a resource to the relevant device. Many resources can be partially presented whilst decoding is taking place, it is an implementation option as to whether this occurs in any given user agent. Some resource types have a behavioural model, and **Interaction** is the generic term used for the processing required by the user agent to correctly exhibit the behaviour model defined by the semantics of the resource. Similarly it is possible that the interaction processing may overlap with decoding and presentation.

8.2.2 Integration Aspects

8.2.2.1 Accessing DVB-J from ECMAScript

All of the APIs available to DVB-J shall be available to ECMAScript, See 8.10.2, "Interface between ECMAScript and DVB-J" on page 122.

8.2.2.2 Implementation of user agents via plug-ins

In the case that the user agent is implemented as an interoperable plug-in, at least the following parts of the specification will be relevant:

- 5, "Basic Architecture" on page 48
- 9.9, "Plug-ins" on page 207
- 10, "Application Signalling" on page 208

  10.13, "Plug-in signalling" on page 236
- 12, "Security" on page 286

  12.13, "Plug-ins" on page 331

8.3 Application Format

8.3.1 Basic Considerations

The main parts of this specification are based on World Wide Web Consortium (W3C) recommendations. W3C provides the fundamental building block standards of the WWW, that are also used in the DVB-HTML standard as well as for HTML standards for other devices like cell phones, PDAs and Internet appliances. Authoring tools and software used for displaying content for the WWW are based on these recommendations. This specification uses W3C recommendations, as far as possible, to allow authoring of a common content basis for both the DVB-HTML applications and the content distributed on the WWW.

In particular the following technologies are used:

- XHTML (see 8.5 on page 74)
- CSS (see 8.8 on page 103)
- DOM (see 8.11 on page 128)
- ECMAScript (see 8.10 on page 122)
- XML (see 8.4 on page 74)

8.3.2 Approach to Subsetting

The W3C recommendations contain conformance clauses under which a product or code implementing the specification is considered a conformant implementation. In this specification this approach is supported to the largest extent possible. If in special cases deviation is required it is clearly marked in the text.

8.4 XML

XML is a license-free, platform-independent and well-supported method for structuring data in textual form. The DVB-HTML language as defined in section 8.5, "DVB Mark-up Language (DVB-HTML)" on page 74 conforms to XML 1.0 [65]. Since its creation XML has become the foundation of new internet mark-up languages specified by the W3C.

The grammar of the DVB-HTML language is described in the DTD (Document Type Definition) in annex AA "(normative): DVB-HTML 1.0 DTD". This DTD conforms to the XHTML Host Language Document Type conformance clauses defined in the XHTML modularization specification Modularization of XHTML [80].

8.5 DVB Mark-up Language (DVB-HTML)

DVB-HTML is an application of XML. The XML document character set for DVB-HTML shall be either the UTF-8 or UTF-16 transformation format of the Universal Multiple-Octet Coded Character Set (UCS) ISO 10646-1 [18]. The set of characters that shall be displayable is defined in annex E, "(normative): Character set" on page 434.

8.5.1 Conformance considerations

8.5.1.1 Document conformance

An XML document is a DVB-HTML conformant document if it conforms to all the general rules in section 8.5.1.1.1, "General rules." on page 74 and is either:

- a valid document against the DVB-HTML DTD.
- an invalid document made conformant by the clauses in 8.5.1.1.2, "Invalid but conformant documents" on page 75.

8.5.1.1.1 General rules.

A DVB-HTML conformant document shall be well-formed.

A DVB HTML conformant document should include an XML declaration.

A DVB-HTML conformant document shall respect the following clauses:

a) The root element shall be <html>.

b) The root element of the document shall designate the XHTML namespace using the xmlns attribute defined in Namespaces in XML [89]. The namespace designator for XHTML is "http://www.w3.org/1999/xhtml".

c) There shall be a DOCTYPE declaration in the document prior to the root element. The public identifier included in the DOCTYPE declaration shall be present and should reference the DTD found in annex AA "(normative): DVB-HTML 1.0 DTD" using its Formal Public Identifier (FPI).

   The FPIs that reference the DVB-HTML DTD shall be:

   ```
   "-//DVB//DTD XHTML DVB-HTML x.y//EN"
   ```

   Where values of x and y are found in Table 7, "Version identifiers" on page 75 for this version of the DVB-HTML 1.0 DTD

   The following system identifiers are guaranteed to locate the above DTD. Other system identifiers may be used to locate the DVB DTD if required. Implementations of this specification are required to work correctly without fetching any DTDs from this location as part of their normal operation.

   ```
   http://www.dvb.org/mhp/dtd/dvbhtml-x-y.dtd
   ```

   Where values of x and y are found in Table 7, "Version identifiers" on page 75 for this version of the DVB-HTML 1.0 DTD

Table 7 : Version identifiers

	x	y
value	1	0

The following DOCTYPE declaration example indicates recommended practice in DVB-HTML documents:

```
<?xml version="1.0"?>
<!DOCTYPE html PUBLIC "-//DVB//DTD XHTML DVB-HTML 1.0//EN"
"http://www.dvb.org/mhp/dtd/dvbhtml-1-0.dtd"
>
```

8.5.1.1.2 Invalid but conformant documents

The MHP platform is designed to support future compatibility and the possible presence of proprietary extensions; this specification defines how this is done in a way that authors can be sure of the behaviour of an MHP implementation that does not support the extension. Therefore, in addition to the support of the general rules, a DVB-HTML conformant document is also defined by one or more of the following conditions:

- An invalid document with respect to the DTD found in annex AA "(normative): DVB-HTML 1.0 DTD" and for which invalidity is only due to the presence of additional elements and attributes in a different namespace to the XHTML or DVB-HTML namespaces, and which does not define a new default namespace (see Namespaces in XML [95]).
- An invalid document with respect to the DTD found in annex AA "(normative): DVB-HTML 1.0 DTD" with an FPI in the document type declaration identifying a strictly later version of DVB-HTML than that defined in this specification and with additional elements or attributes in the XHTML or DVB-HTML namespaces, which, when removed, results in a document that would validate against the DTD found in annex AA "(normative): DVB-HTML 1.0 DTD".

A non-conformant document is one which is not valid with respect to the DTD found in annex AA "(normative): DVB-HTML 1.0 DTD", and is not made conformant by the above clauses.

Handling of non-conformant DVB-HTML documents is specified in section 8.5.1.2.1, "Error handling" on page 77

A document that is DVB-HTML conformant but not valid with respect to the DTD found in annex AA "(normative): DVB-HTML 1.0 DTD", is handled as detailed in section 8.5.1.2.2, "Handling of invalid but conformant documents" on page 77.

8.5.1.2 DVB-HTML user agent conformance

The DVB-HTML user agent shall be conformant with the XHTML Family User Agent conformance clauses defined in Modularization of XHTML [80].

Additionally, before attempting to use it as part of an application the DVB-HTML user agent shall assess the conformance of:

- any received XML document signalled in the AIT as being part of the DVB-HTML application.
- any XML document whose document type declaration contains one of the DVB-HTML FPIs (see 8.5.1.1, "Document conformance" on page 74).

For the purpose of validation, it shall:

- remove from the XML document any elements and attributes in a different namespace than the XHTML or DVB-HTML namespaces.
- if the FPI of the document indicates that the version of the DVB-HTML document strictly superior to the version of the DVB-HTML language the implementation supports: remove any elements and attributes in the DVB-HTML or default XHTML namespace not present in the supported DVB-HTML DTD.

It shall subsequently validate (see clause 5.1 in XML 1.0 [65]) the resulting XML document against the DTD found in annex AA "(normative): DVB-HTML 1.0 DTD". Validation is performed by checking that the document does not violate any validity constraints as listed in table 8 "List of applicable validity constraints". Any violation report indicates the non conformance of the received XML document. Corresponding error handling is described in section 8.5.1.2.1, "Error handling" on page 77.

The way this process is performed is implementation dependent.

The document conformance shall be assessed before the generation of the DVBDOMStable event (see 8.11.2.3.2 on page 132). This conformance status shall be re-assessed by the DVB-HTML user agent in the presence of modification of the DOM tree. The way this constraint is checked is implementation dependent, but the invariant must be that the document continues to be conformant. If a document becomes at any point non-conformant, it shall be handled as described in section 8.5.1.2.1.2, "On DOM mutation" on page 77.

The DVB-HTML user agent is not required to be a full validating processor (according to W3C terminology in XML 1.0 [65]), in the sense that it is not required to be able to read and process any arbitrary DTDs and external parsed entities referenced in the document. It is also not required to handle an internal DTD subset attached to the document type declaration. For that reason, only the following XML validity constraints (see XML 1.0 [65]) are required to be checked:

Table 8 : List of applicable validity constraints

Validity constraint	Required
Root element type	Yes
Proper Declaration/PE Nesting	
Standalone Document Declaration	(note 1)
Element Valid	Yes
Attribute Value Type	Yes
Unique Element Type Declaration	
Proper Group/PE Nesting	
No Duplicate Types	
ID	Yes
One ID per Element Type	
ID Attribute Default	
IDREF	Yes
Entity Name	
Name Token	Yes
Notation Attributes	
One Notation Per Element Type	
No Notation on Empty Element	
Enumeration	Yes
Required Attribute	Yes
Attribute Default Legal	
Fixed Attribute Default	Yes
Proper Conditional Section/PE Nesting	
Entity Declared	Yes (note 2)
Notation Declared	
Unique Notation Name	

NOTE 1: the user agent is not required to fetch and interpret any external mark-up declarations.

NOTE 2: only the requirement on entity reference matching is applicable. A DVB-HTML user agent is not required to check the XML requirements on parameter-entity or general entities declarations locations.

8.5.1.2.1 Error handling

The user agent shall not present or allow interaction with a document which is not conformant (see 8.5.1.1, "Document conformance" on page 74). The "DVBDOMStable event" on page 132shall not be generated for this document.

8.5.1.2.1.1 On receipt of a document

If the non-conformant document is the root document of a DVB-HTML application, this application shall not be started, i.e. the corresponding DVB-HTML actor shall go from the Loading state to the Killed state. If the non-conformant document is not the root document, then the DVB-HTML application shall remain in the current state and the non-conformant document is treated as an unreachable resource.

During the parsing of a document, the DOM structure will necessarily be incomplete. No DOMExceptions indicating invalid structure will be thrown during this phase, and authors should make no assumptions on which elements will be available. See 8.11.2.3.2, "DVBDOMStable event" on page 132.

If an attempt is made to alter the DOM structure using the DOM APIs prior to delivery of the DVBDOMStable event then the DOMException with the error code INVALID_STATE_ERR shall be raised.

8.5.1.2.1.2 On DOM mutation

A DVBException with the error code NON_CONFORMANT_ERR may be raised if an attempted modification of the DOM would result in a non-conformant document. The DOM shall remain unchanged on generating the exception (see 8.11.5, "DVB Exceptions" on page 152).

NOTE: The DOM allows for a `DocumentFragment` object for construction of partial intermediate structures which are not required to be valid or conformant.

Documents generated using `document.write` shall be handled as defined in 8.5.1.2.1.1, "On receipt of a document" on page 77, on closing the document.

8.5.1.2.2 Handling of invalid but conformant documents

When using only the default style sheet, the user agent shall not present or allow interaction with elements that make a conformant document invalid. Such elements are removed from presentation by the default style sheet (see annex AB, "(normative): DVB HTML StyleSheet" on page 1280), however the elements shall be retained in the DOM.

Implementations supporting such elements, or documents using them, may override the stylesheet to cause them to be presented to the user. The XHTML Family User Agent conformance clauses require that the text content of any unrecognised elements be presented to the user (unless a stylesheet changes this), so the stylesheet should not be overridden unless it is certain that the elements are supported and/or have no text content.

Attributes that make a conformant document invalid may be ignored by the user agent.

8.5.2 Set of modules required by this specification

The DVB-HTML document type definitions are made up of the following abstract modules indicated in table 9 below. The modules are defined in [p.15] of Modularization of XHTML [80]. An implementation of the DTD is defined in annex AA "(normative): DVB-HTML 1.0 DTD".

Table 9 : Required modules for DVB-HTML (Sheet 1 of 2)

Modularization	Required
Structure	Yes
Text	Yes
Hypertext	Yes
List	Yes
Applet	
Presentation	Yes
Edit	
Bi-directional Text	Yes

Table 9 : Required modules for DVB-HTML (Sheet 2 of 2)

Modularization	Required
Basic Forms	
Forms	Yes
Basic Tables	Yes
Tables	
Image	Yes
Client side Image map	Yes
Server side image map	
Object	Yes
Frames	Yes
Target	Yes
Iframe	Yes
Intrinsic events	
DVB Intrinsic events	Yes
Metainformation Module	Yes
Scripting	Yes
Style sheet	Yes
Style Attribute	Yes
Link	Yes
Base	Yes
Name Identification	
Legacy	

8.5.3 Semantics for modules

8.5.3.1 XHTML modules

For the modules defined by Modularization of XHTML [80] the semantics are as defined there except as elaborated below and in 8.6, "Media Types" on page 83.

8.5.3.1.1 Structure

Media types for which semantics have been specified when used in the profile link in the <head> element are defined in 8.6.2, "MIME media type use restrictions" on page 84.

8.5.3.1.2 Text

Media types for which semantics have been specified when used in the `cite` attribute in the <q> element are defined in 8.6.2, "MIME media type use restrictions" on page 84.

8.5.3.1.3 Hypertext

Media types for which semantics have been specified when used in the `href` attribute (hypertext links) in the <a> element are defined in 8.6.2, "MIME media type use restrictions" on page 84.

8.5.3.1.4 Presentation

NOTE: The HTML conformance clause (see HTML 4 [90]) for this module does not require text to be rendered with a different appearance when these elements are used in the absence of other styling information.

8.5.3.1.5 Forms

Media types for which semantics have been specified when used in the `action` attribute in the <form> element and the `src` attribute in the <input> element are defined in 8.6.2, "MIME media type use restrictions" on page 84

NOTE: Authors should be aware that the MHP terminal may not have a user visible file system and therefore should not make any assumptions about availability of a file selection dialogue. This concerns the use of the `file` value of the `type` attribute of the <input> element.

8.5.3.1.6 Client-side Image Map

Semantics on the way to associate an image map with an element are defined in section 13.6.1 in HTML 4 [90] with the following exception:

- the URI in the `usemap` attribute shall point to the identifier of the <map> element as set by the `id` attribute.

If no <map> element is identified through the `usemap` attribute, then no association shall be assumed. This is in line with the module DTD implementation as defined in Modularization of XHTML [80]. In HTML 4 [90] this association was performed using the `name` attribute of the <map> element.

8.5.3.1.7 Image

Media types for which semantics have been specified when used in the `longdesc` and `src` attributes in the <img> element are defined in 8.6.2, "MIME media type use restrictions" on page 84

8.5.3.1.8 Object

Media types for which semantics have been specified when used in the `archive`, `classid`, `codebase` and `data` attributes in the <object> element are defined in 8.6.2, "MIME media type use restrictions" on page 84.

When the referenced object is an MPEG stream, see 8.6.7, "MPEG Audio" on page 87 and 8.6.8, "MPEG Video" on page 88.

When the referenced object is a DVB service, see 8.6.9, "DVB Services" on page 89.

When the referenced object is an Xlet see 8.9, "Xlet integration" on page 120.

For other media types, see 8.6.10, "Graphics content" on page 89.

8.5.3.1.9 Frames

Media types for which semantics have been specified when used in the `src` attributes in the <frame> element are defined in 8.6.2, "MIME media type use restrictions" on page 84.

8.5.3.1.10 Target

The semantics of specifying target frame information is described in section 16.3 in HTML 4 [90] with the following exception:

- the value of the `target` attribute shall point to the identifier of the frame as set through the `id` attribute.

If a target attribute refers to an unknown frame, then no action shall be performed.

NOTE: In HTML 4 [90], this was performed through the `name` attribute. Appendix B.8 in HTML 4 [90] is not relevant any more.

Use of target names are also subject to security considerations, see 8.14.3.1, "Restrictions on DOM elements introduced for security" on page 172.

8.5.3.1.11 Iframes

Media types for which semantics have been specified when used in the `src` and `longdesc` attributes in the <iframe> element are defined in 8.6.2, "MIME media type use restrictions" on page 84.

8.5.3.1.12 Metainformation

See 8.10.2.1, "ECMAScript APIs for accessing DVB-J" on page 122.

8.5.3.1.13 Scripting

Media types for which semantics have been specified when used in the `src` attribute in the `<script>` element are defined in 8.6.2, "MIME media type use restrictions" on page 84.

8.5.3.1.14 Link

Only the following `LinkTypes` are required to be supported in DVB-HTML for the `rev` and `rel` attributes:

Alternate: Designates substitute versions for the document in which the link occurs. When used together with the `lang` attribute, it implies a translated version of the document. When used together with the `media` attribute, it implies a version designed for a different medium (or media). Without one of these other attributes the value may be ignored.

Stylesheet: Refers to an external style sheet.

Style Sheets can also be associated with a DVB-HTML document by using a processing instruction whose target is `xml-stylesheet` as defined in "Associating Style Sheets with XML documents". This processing instruction follows the behaviour of the `<link rel="stylesheet">` semantics.

Start: Refers to the first document in a collection of documents. Use of this information is user agent specific.

Next: Refers to the next document in a linear sequence of documents. Use of this information is user agent specific.

Previous: Refers to the previous document in an ordered series of documents. the synonym "`Prev`" may also be used. Use of this information is user agent specific.

Help: Refers to a document offering help (more information, links to other source information, etc.). Navigation to this resource is user agent specific.

8.5.3.1.15 Base

Any media type is allowed for the `href` attribute in the `<base>` element since it is the structure of the `href` itself which is relevant, and not the resource referenced (which need not be accessed, or even present).

8.5.3.2 XHTML attributes

8.5.3.2.1 Longdesc, alt and cite attributes

DVB-HTML user agents shall make available a mechanism to access the alternate text or referenced resource and present it to the user. The specific means are implementation dependent.

8.5.3.2.2 Accesskey attribute

The `accesskey` attribute of HTML 4 [90] assigns an access key to an element. An access key is a single character from the document character set, which if pressed gives focus to the element, the semantics of giving focus to an element are element specific (see HTML 4 [90] section 17.11.2).

In order to have some measure of compatibility with the JAVA AWT JAE 1.1.8 API [31] and HAVi HAVi [50] event sets, the DTD used by the user agent points to an implementation specific DVB character entities module which shall define a set of XML entities which map all of the JAVA AWT JAE 1.1.8 API [31] and HAVi HAVi [50] "VK_" events onto implementation specific characters.

The specific range of characters mapped to the "VK_" entities is implementation specific, but shall not overlap with any character range that might be generated by an end user (e.g. on an optional attached keyboard).

So, for example given the following text in DVB-HTML:

```
<A accesskey="&VK_GUIDE;" href="guide/contents.html">
Guide information
</A>
```

The user agent shall, on receipt of the device specific operation that would generate a VK_GUIDE event, give the focus to the <a> element (which in this case would cause the link to the guide content to be traversed).

It is not required for implementations to generate "VK_" events other than the minimum set specified in table G.3, "Minimum set of input events" on page 446. But the user agent shall allow documents to refer to any of them. Generation of the "VK_" events is allowed to be contextual, for example, when a text area element has the focus the "VK_0" event may not be generatable by the user, since the device specific operation may generate a "0" character instead.

NOTE: The range of Unicode values 0xFB50…0xFDFF is unlikely ever to be used for legitimate input characters as they are presentations forms that don't belong in the Unicode coding space and could be used as a coding set.

The following is a partial example DTD fragment that defines the minimum set of entities:

```
<!ENTITY % VK_0 "&#01">
<!ENTITY % VK_1 "&#02">
<!ENTITY % VK_2 "&#03">
<!ENTITY % VK_3 "&#04">
<!ENTITY % VK_4 "&#05">
<!ENTITY % VK_5 "&#06">
<!ENTITY % VK_6 "&#07">
<!ENTITY % VK_7 "&#08">
<!ENTITY % VK_8 "&#09">
<!ENTITY % VK_9 "&#0A">
<!ENTITY % VK_UP "&#0B">
<!ENTITY % VK_DOWN "&#0C">
<!ENTITY % VK_LEFT "&#0D">
<!ENTITY % VK_RIGHT "&#0E">
<!ENTITY % VK_ENTER "&#0F">
<!ENTITY % VK_TELETEXT "&#10">
<!ENTITY % VK_COLORED_KEY_0 "&#11">
<!ENTITY % VK_COLORED_KEY_1 "&#12">
<!ENTITY % VK_COLORED_KEY_2 "&#13">
<!ENTITY % VK_COLORED_KEY_3 "&#14">
```

8.5.3.3 DVB-HTML modules

8.5.3.3.1 DVB Intrinsic events

DVB Intrinsic events are attributes that are used in conjunction with elements that can have specific actions occur when certain events are performed by the user. The attributes indicated in the following table are added to the attribute set for their respective elements. Attributes defined by this module are:

Table 10 : Elements of DVB Intrinsic events

Elements	Attributes
body&	onload (Script), onunload (Script) (see 8.10, "Scripting" on page 122). ondvbdomstable (Script) (see 8.11.2.3.2, "DVBDOMStable event" on page 132).
frame&	onload (Script), onunload (Script) (see 8.10, "Scripting" on page 122). ondvbdomstable (Script) (see 8.11.2.3.2, "DVBDOMStable event" on page 132).

If these attributes are used then they must be within the scope of a namespace definition, namely "`http://www.dvb.org/mhp`". The namespace prefix shall be declared on the element of the document that uses them. And the namespace shall be "dvbhtml" (see Namespaces in XML [89]).

The following is an example of how these attributes should be used.

```
<?xml version="1.0"?>
<!DOCTYPE html
     PUBLIC "-// DVB//DTD XHTML DVB HTML 1.0//EN"
     "http://www.dvb.org/mhp/dvb/dvbhtml-1-0.dtd">
```

```
<html xmlns="http://www.w3.org/1999/xhtml" >

<head>
   <title>Namespace vs. Intrinsic Events Example></title>
   <script type="text/ecmascript" src="setupEventHandlers.js" />
</head>
<body xmlns:dvbhtml="http://www.dvb.org/mhp" dvbhtml:ondvbdomstable="setupEventListeners()">
   <!-- rest of document here -->
</body>
```

8.6 Media Types

A DVB-HTML user agent shall be able to recognize and handle (in accordance with the appropriate conformance clauses see 7, "Content formats" on page 64) the following media types:

Table 11 : Content types accessible in DVB-HTML

MIME media type	Common name
text/xml	XML
application/xml	
text/css	CSS
text/plain	Monomedia format for text
text/dvb.utf8	
audio/mpeg	Monomedia format for audio clips or Audio
image/jpeg	JPEG
image/png	PNG
image/gif	GIF
image/mpeg	MPEG-2 I-Frames
video/dvb.mpeg.drip	MPEG-2 Video drips
video/mpeg	MPEG video
multipart/dvb.service	Multipart DVB Service
application/dvb.pfr	Downloadable Fonts
application/dvbj	Initial class file of an Xlet
text/ecmascript	ECMAScript

Resources of these MIME media types can be referenced using the locators defined in 14, "System integration aspects" on page 353 and 8.16.5, "DVB-HTML specific locators" on page 181 subject to the usage conditions below.

NOTE: User agents are recommended to be prepared to handle the eventuality that the MIME media type is incorrectly indicating the media type, alternative strategies (e.g. based on the filename, and inspecting the contents) should be employed. In addition a resource labelled as a specific MIME media type may or may not be conformant with the subsetting restrictions imposed by this specification (see 15.1, "PNG - restrictions" on page 363, 15.3, "JPEG - restrictions" on page 364). How the User Agent detects and handles this is implementation specific.

8.6.1 Uses of MIME media types

%ContentType.datatype; The DVB HTML DTDs define the entity "%ContentType.datatype;", for use in attribute declarations where MIME media types may be used. The following table lists these attributes along with the XHTML Modules in which they occur.

Table 12 : Use of ContentType attribute on elements

elem.attr	XHTML Modules
a.type	Hypertext
link.type	Link
object.type	Object
object.codetype	Object
param.type	Object
form.enctype	Basic Forms, Forms
style.type	Stylesheet
script.type	Scripting

%URI.datatype; The DTDs also define "%URI.datatype;", describing where URIs shall be supported. The following table lists those attributes with the relevant XHTML Modules for reference.

Table 13 : Use of URI attribute on elements

elem.attr	XHTML Module(s)
a.href	Hypertext
area.href	Client-side Image Map
base.href	Base
blockquote.cite	Basic Text
form.action	Basic Forms, Forms
frame.longdesc	Frames
frame.src	Frames
head.profile	Structure
iframe.longdesc	Iframe
iframe.src	Iframe
img.src	Image
img.longdesc	Image
img.usemap	Client-side Image Map
input.src	Basic Forms, Forms
input.usemap	Basic Forms, Forms
link.href	Link
object.archive	Object
object.classid	Object
object.codebase	Object
object.data	Object
object.usemap	Client-side Image Map
q.cite	Basic Text
script.src	Scripting

8.6.2 MIME media type use restrictions

The behaviour of the MHP terminal is only specified where there is an "X" at the intersection of element.attribute and MIME media type in table 14 "Use of MIME media type by element".

Table 14 : Use of MIME media type by element (Sheet 1 of 2)

Element. attribute	MIME media type													
	text/xml	application/ xml	text/css	text/plain	text/dvb.utf8	audio/mpeg	image/jpeg	image/png	image/gif	image/mpeg	video/mpeg	multipart /dvb.service	application/ dvbj	video/dvb.mpeg.drip	text/ ecmascript
As root element	X														
a.type	X					X						X	X		
link.type (note 3)	X		X												
object.type	X					X	X	X	X	X	X	X		X	
object.codetype													X		
param.type	(note 3)														

Table 14 : Use of MIME media type by element (Sheet 2 of 2)

Element. attribute	MIME media type													
	text/xml	application/ xml	text/css	text/plain	text/dvb.utf8	audio/mpeg	image/jpeg	image/png	image/gif	image/mpeg	video/mpeg	multipart /dvb.service	application/ dvbj	video/dvb.mpeg.drip	text/ ecmascript
style.type			X												
script.type															X
NOTE 3: Informative, authoring guideline: MIME media type constraints only apply to this attribute when the param. valuetype attribute has value "ref". No allowed object types required to be supported by this specification make use of this "type" attribute.															

The following table shows whether the resource identified by the URI value of each element.attribute pair (vertical axis) has DVB defined semantics for each MIME media type (horizontal axis) in DVB-HTML; "X" = Yes, blank = No.

Table 15 : MIME media type usage (Sheet 1 of 2)

Element. attribute	exit:	MIME media type													
		text/xml	application/ xml	text/css	text/plain	text/dvb.utf8	audio/mpeg	image/jpeg	image/png	image/gif	image/mpeg	video/mpeg	multipart/ dvb.service	application/ dvbj	video/dvb.mpeg.drip	text/ ecmascript
a.href	X[a]	X[d]					X[b]						X[e]	X[d]		
area.href	X[a]	X[d]					X[b]						X[e]	X[d]		
base.href		X (note 1)														
blockquote.cite					X[f]											
form.action (see 8.6.13)																
frame.longdesc					X[f]											
frame.src		X[g]														
head.profile																
iframe.longdesc					X[f]											
iframe.src		X[g]														
img.src								X[h]	X[h]	X[h]	X[h]	X[c]			X	
img.longdesc					X[f]											
img.usemap		X[d]														
input.src								X[h]	X[h]	X[h]	X[h]	X[c]			X	
input.usemap		X[d]														
link.href		X[d]		X[j]												
object.archive		(note 2)														
object.classid														X[d]		

Table 15 : MIME media type usage (Sheet 2 of 2)

Element. attribute	exit:	MIME media type													
		text/xml	application/xml	text/css	text/plain	text/dvb.utf8	audio/mpeg	image/jpeg	image/png	image/gif	image/mpeg	video/mpeg	multipart/dvb.service	application/dvbj	video/dvb.mpeg.drip	text/ecmascript
object. codebase		(note 1)														
object.data		X[d]					X[b]	X[h]	X[h]	X[h]	X[h]	X[c]	X[e]		X[h]	
object.usemap		X[d]														
q.cite					X[f]											
script.src																X[i]
NOTE 1: MIME type is irrelevant here as it's just the URI that matters, not the thing it identifies. NOTE 2: Specific to the object.																

8.6.3 Semantics of media type

a) See 8.16.5.2, "Exit locator" on page 182.

b) See 8.6.7, "MPEG Audio" on page 87

c) See 8.6.8, "MPEG Video" on page 88

d) See 8.6.5, "Application content" on page 86.

e) See 8.6.9, "DVB Services" on page 89.

f) See 8.5.3.2.1, "Longdesc, alt and cite attributes" on page 80

g) See 8.6.4, "Frame content" on page 86

h) See 8.6.10, "Graphics content" on page 89

i) See 8.6.11, "Script content" on page 89

j) See 8.6.12, "Style sheet content" on page 89

8.6.4 Frame content

The contents of a frame are restricted to be conformant DVB-HTML documents.

NOTE An implementation is not required to provide a scrolling mechanism for frames.

8.6.5 Application content

8.6.5.1 When referenced via an AIT locator

An AIT locator is a locator of the form "`dvb://current.ait/...`" which is used to refer to application content via the AIT signalling. Using this form of locator, DVB-HTML applications are able to refer to currently available applications (see 11.7.2, "Application discovery and launching APIs" on page 261). For example:

```
<a type="application/dvbj" href="dvb://current.ait/Orgid.Appid?arg_0=val">
   Click here to launch application
</a>
```

The literal text of the locator, and not the translated form is stored in the DOM.

Activating such a link shall request the application manager to start the application referenced by this URL, passing to that application the specified parameters. The type attribute is used as a hint in the case that there are multiple application types with the same AppID and OrgID and should give preference to applications of the indicated type. The application shall be started depending on machine resources etc.

NOTE: Starting the new application may involve terminating the launching application.

This activation will fail as if the resource were not found if the launching application does not have the authority to start applications.

8.6.5.2 When not referenced via an AIT locator

Other references to DVB-HTML documents or fragments content can occur as a result of:

href: The semantics are as defined in HTML 4 [90].

usemap: The referenced element defines a map to overlay on the image. The semantics are as defined in HTML 4 [90].

object.data: The referenced document is rendered within the object as if it were a frame. The semantics are as defined in HTML 4 [90].

src: The referenced document is rendered within a frame or iframe. The semantics are as defined in HTML 4 [90].

8.6.6 Relative linking

The MIME media types allowed for this attribute depend on the value of the `link.rel` attribute.

For `link.rel="stylesheet"`, only the type `"text/css"` is defined and the user agent shall interpret this as specified in "14.3.2 Specifying external style sheets" of HTML 4 [90].

For all other values of `link.rel`, the resource pointed to shall be a conformant DVB-HTML document. The user agent may use this information in implementation specific ways (e.g. to prefetch the referenced document)

8.6.7 MPEG Audio

DVB HTML shall be able to reference MPEG audio as indicated in table "Use of MIME media type by element" on page 84. The referenced audio may be of either indefinite (see 7.2.1, "Audio" on page 66) or definite duration (see 7.1.4, "Monomedia format for audio clips" on page 66).

8.6.7.1 Resources of indefinite duration

Links to an MPEG elementary stream of indefinite length carried in the broadcast as specified in 7.2.1, "Audio" on page 66 shall select the service component for presentation into the current service context. If an audio service component is currently playing, it is replaced in its entirety by the specified selection

If the reference requires specific interaction to invoke (i.e: `a.href, area.href`) then the audio selection shall be after the reference is actioned. An implementation may impose a short delay before audio is audible, but this shall not be so long as to make the new audio appear unconnected to the user action.

If the reference does not require a specific reference to invoke (i.e. `object.archive, object.data`) on an object with the content type of `"audio/mpeg"`, then the audio stream shall be selected at an implementation specific time after the containing document becomes active. Any `<param>` elements included in such objects shall be ignored.

8.6.7.1.1 Relation to document events

In the case of non-actioned references, the following constraints shall be observed:

- The `DVBDOMStable` event shall be generated prior to playing the stream.
- The media should be rendered as soon as possible after the `DVBDOMStable` event.
- The `load` event shall only be generated after the stream is playing

8.6.7.2 Resources of definite duration

Referencing an audio file resource of finite length (e.g. carried in DSMCC carousel), that carries audio data as specified in 7.1.4, "Monomedia format for audio clips" on page 66: shall cause audio to be rendered according to the restrictions in G.2, "Audio" on page 444.

If the reference requires specific interaction to invoke (i.e: `a.href, area.href`) then the audio shall be rendered once in its entirety after the reference is actioned. An implementation may impose a short delay before audio is audible, but this shall not be so long as to make the audio appear unconnected to the user action.

If the reference does not require a specific reference to invoke (i.e. `object.archive, object.data`) on an object of type `"audio/mpeg"`, then by default the audio is rendered once at an implementation specific time after the containing document becomes active. The following <param> name, value pairs shall be implemented for audio of finite duration rendered in an object:

name	legal values	meaning
loop	(true | false)	When the audio data has been played in its entirety, then it should be played again from the beginning of its associated data, so as to cause a "seamless" continuous (infinite) audio playback until the document is unloaded.

8.6.7.2.1 Relation to document events

In the case of non-actioned references, the following constraints shall be observed:

- The `DVBDOMStable` event and the `load` event shall be generated prior to playing the audio.

8.6.8 MPEG Video

NOTE: MPEG video or images may only be displayable full- or quarter-screen: if authors ask an object to display it in a way the hardware doesn't support, the user agent should follow the usual fallback rules for unavailable resources in object. Authors may need to provide alternate content to cover this, probably also fixing the size to prevent layout differences. However, the `img` and `input` tags do not provide this fallback capability, so authors should be more careful in using them, to be sure that all target STBs will display the image as desired.

8.6.8.1 Video Resources of indefinite duration

Referencing an MPEG elementary stream of indefinite length carried in the broadcast as specified in 7.2.2, "Video" on page 66 shall cause the referenced video to be placed in the bounding rectangle of the element after styling is applied (see 8.8.4.2.1.3, "clip-video" on page 105). Access to the referenced video stream shall not cause tuning to occur, if this would cause the implementation to lose access to the service carrying the application.

DVB HTML defines only the case where the reference does not require user interaction to invoke (i.e. img.src, input.src, object.archive, object.data), if access to the stream requires tuning, the referenced video stream is tuned to at an implementation specific time after the containing document becomes active.

Video referenced by an <object>, <img> or <input> is considered to be referenced later than that in external style sheets, and thus takes precedence over the selected background video in the case that there are insufficient resources to display both the referenced video and the background video simultaneously (in accordance with 11.2.9, "Intra application media resource management" on page 242). In the case of multiple references within a document, it is implementation specific which is considered referenced later.

No <param> elements are defined in for objects of type `"mpeg/video"`.

8.6.8.1.1 Relation to document events

In the case of non-actioned references to video of indefinite length, the following constraints shall be observed:

- The `DVBDOMStable` event shall be generated prior to playing the video.
- The media should be rendered as soon as possible after the `DVBDOMStable` event.
- The `load` event shall only be generated after the stream is playing

8.6.8.1.1.1 Modification of the referencing attribute using the DOM

Alterations to the video source due to script (e.g changing styling or `src` attributes) are considered as later references than any declarative reference. The playing video is replaced with the newly referenced video source using the same rules as for the original value of the attribute.

8.6.8.2 Resources of definite duration

This version of the specification does not define referencing of video segments of finite duration.

8.6.9 DVB Services

Use of URLs with that reference a service in contexts that do not require user action (i.e `object.data, object.archive`) on objects of type "`multipart/dvb.service`" are defined only for the media aspects of a service (e.g. video, audio, subtitles) and shall not cause service selection, but the media components of that service shall be displayed according to ("MPEG Audio" on page 87 and "MPEG Video" on page 88).

Links to DVB services in contexts that require user action (i.e. `a.href, area.href`) shall cause service selection to the referenced service if the application is authorised (see 8.15.1.9, "javax.tv.service.selection.ServiceContextPermission" on page 174). If authorisation fails, then the link shall be treated as if referencing an unavailable resource.

Links to DVB services of the form "`dvb:`" referencing broadcast services, and other locators referencing stored services (see 9.7.2, "Stored services" on page 204) or services over the interaction channel shall be allowed (see 9.7.1, "Applications loaded from the interaction channel" on page 204).

NOTE: Selecting the new service can cause the selecting application to be terminated.

8.6.10 Graphics content

Graphics formats shall be supported as specified in 7.1, "Static formats" on page 64. Such graphics shall be displayed inline with the content in the box generated as a result of processing any CSS rules.

NOTE: Images of other types than the minimum requirements for the MHP may be referenced, but the implementation may not display them. Since the `img` and `input` tags do not provide fallback capability, authors should be careful in using them, to be sure that all target STBs will display the content as desired.

8.6.11 Script content

The referenced resource shall be in a plain text format admitted by this specification 7.1.5, "Monomedia format for text" on page 66. The content shall be ECMAScript source code as defined in ECMAScript [81], and shall be handled as if it were inline.

8.6.12 Style sheet content

The referenced resource shall be in a plain text format admitted by this specification 7.1.5, "Monomedia format for text" on page 66. The content shall be CSS source code as defined in CSS 2 [87], and shall be handled as defined by the cascading rules therein.

8.6.13 HTTP(S) URLs

For `form.action` only HTTP(S) URLs are valid (as form submission relies on GET/POST). The the user agent is only required to handle the case where the content returned is a conformant top-level document.

8.6.14 CSS Properties

8.6.14.1 Sources of MIME media type use points

<uri>: The CSS 2 specification defines the value type `<uri>`. For the places where `<uri>` is a permitted value in CSS see CSS 2 [87].

8.6.14.2 MIME media type use restrictions

Behaviour when referencing the following MIME media types is not specified for any of the `<uri>` type in CSS (but may nevertheless be the MIME media types of some parts of a DVB-HTML application):

- text/xml
- application/xml
- text/css
- audio/mpeg
- text/dvb.subtitle
- image/dvb.subtitle
- application/dvbj
- text/ecmascript

The following table shows whether the resource identified by the URI value of each CSS attribute (vertical axis) has DVB defined semantics for each MIME media type (horizontal axis) in DVB-HTML; "X" = Yes, blank = No.

Table 16 : Usage of <uri> type in CSS

CSS Attribute		MIME media Type									
		text/plain	text/dvb.utf8	image/jpeg	image/png	image/gif	image/mpeg	video/mpeg	video/dvb.mpeg.drip	multipart/dvb.service	application/dvb.pfr
background-image				x[b]	x[b]	x[b]	x[b]	x[c]	x[c]		
content (note)		x[a]									
cursor				x[b]	x[b]	x[b]	x[b]				
list-style-image				x[b]	x[b]	x[b]	x[b]				
@font-face	src										x
@viewport	"background:"			x[b]	x[b]	x[b]	x[b]		x[c]		
	"background-video-n"							x[c]		x[d]	
NOTE 1:											

a) See "Generated Content" on page 91

b) See "Graphics styling" on page 91

c) See "Video Styling" on page 91

d) See "DVB Service styling" on page 91

8.6.15 Generated Content

The referenced resource shall be in a plain text format admitted by this specification 7.1.5, "Monomedia format for text" on page 66. The content shall be handled as if it were inline as defined in CSS 2 [87].

NOTE: Informative, authoring guideline, in CSS2 you cannot:
- generate markup (only XML CDATA)
- apply further style to generated content
- access generated content via DOM

8.6.16 Graphics styling

Graphics formats shall be supported as specified in 7.1.1, "Bitmap image formats" on page 64. Such graphics shall be handled as defined in CSS 2 [87].

8.6.17 Video Styling

Video and video drips may be used as the `background-image style` property. The resource shall be handled as an image type as defined in CSS 2 [87]. Video is displayed as defined in 8.6.8.1, "Video Resources of indefinite duration" on page 88 as a reference that does not require user interaction.

NOTE: MPEG video or images may only be displayable full- or quarter-screen: if you ask an object to display it in a way the hardware doesn't support, the user agent should follow the usual fallback rules for unavailable resources in object.

Video may be used as the viewport `"background-video-n"`style property. The resource shall be used to select the referenced video stream into service context, and cause it to be displayed in the corresponding background video plane.

Video drips may be used as the viewport `"background:"` property. The resource shall be used to fill the corresponding background plane.

8.6.18 DVB Service styling

Use of URLs with that reference a service as background-video styling are defined only for the media aspects of a service (e.g. video, audio, subtitles) and shall not cause service selection, but the only the media components of that service shall be displayed see 8.8.5.3.2, "The @viewport rule" on page 107.

8.7 Synchronization

8.7.1 Triggers Overview

Triggers provide a means by which the application provider can interact with an application running on an end user terminal. Although in principal this interaction could be delivered by any communication channel available to the MHP, this specification defines only a binding to DSM-CC stream events. Triggers are received by the user agent and used to raise events in a running DVB-HTML application.

Triggers are small messages sent in a broadcast separately from the main content, which may cause a change in the behaviour of applications that choose to register for them. Triggers can carry a time at which they should be delivered, plus a small amount of payload data which an application can register for.

Application authors can think in terms of traditional media time bases (e.g. SMPTE time codes) that are a simple frames/seconds offset from the beginning of the media. Triggers can signal that a point on the time base has been reached. The author has to "name" these events so that applications can subscribe to them. This name may be meaningful to the author as is illustrated in table 17:

Table 17 :

Event name	Event time
Start	00:00:00.00
End of introduction	00:00:30.00
End of recipe	00:05:00.00
End of recipe	00:08:00.00
Start or roll out	00:11:00.00
End	00:11:30.00

The behaviour following the event is implemented in the code of the application. It is possible that data is delivered with the event to modify the behaviour.

The following issues are described in more detail below:

- How triggers are transported (see 8.7.1.1 "Transport of triggers")
- How an application registers for and receives triggers (see 8.7.1.2 "Application registration and reception")

8.7.1.1 Transport of triggers

We consider here transport of triggers in:

- DSM-CC stream events.

8.7.1.2 Application registration and reception

In order to integrate with W3C event models, triggers are delivered to DVB-HTML applications as DOM events. Registration is through:

- Explicit registration using the DOM API

Delivery is by DOM event. Trigger DOM event interfaces inherit from the interface `Event` in DOM (see Document Object Model (DOM) Level 2 Events Specification [84]).

8.7.1.3 Binding to DSM-CC Stream events

A mechanism is provided in section 8.7.3, "Binding the event factory file to the application" on page 99 that identifies the location of the DSMCC Stream Event message associated with any document entity of the DVB-HTML application that registers to a trigger event. However, it is possible to bypass this mechanism through a default location binding.

By default, a DVB-HTML application is bound to all DSMCC Stream Event messages which are located in the application root directory defined in the `physical_root` field in the `dvb_html_application_location` descriptor of the AIT. In that case, those DSMCC Stream Event messages list the events used in the context of the whole application. See section on default trigger mechanism (See 8.7.4, "Default Trigger Mechanism" on page 101).

8.7.2 Trigger Events

8.7.2.1 Converting stream events into DOM events

DVB-HTML triggering contains a mechanism by which the stream events are converted into DOM events. This has several features.

a) A mechanism to override the default association between application and stream event message which provides a degree of abstraction between the transport mechanism of the stimulus aspect of the event and the author's behavioural view

b) A mechanism which expands the media event into one or more DOM events, this includes mapping the media event name into a DOM type, and extracting any or all of the media event payload and converting it into properties of the DOM event

The application document receives the DOM events and has its behaviour modified by them using the standard mechanism of DOM event delivery (see 84 "Document Object Model (DOM) Level 2 Events Specification").

In order to describe the above, the application has associated with it an "event factory file" (See 8.7.2.2, "Event Factory File definition" on page 94). This file provides the information the user agent needs to locate stream event messages (if not the default) for the event name bindings, and determines which media event names to subscribe to. If not present, the default event factory file is assumed (See 8.7.2.4, "Default Event Factory File" on page 97). It can also determine which parts of the media event payload become properties of the resulting DOM event. Factory files are associated with resources of the DVB-HTML application using a "linkage file" (See 8.7.3, "Binding the event factory file to the application" on page 99)

On receipt of the stimulus associated with an event ID (e.g. the correct NPT time arrives) the user agent is able to "fire" the DOM event into the DVB-HTML application to be handled.

The entire process is summarised by the following data flow diagram:

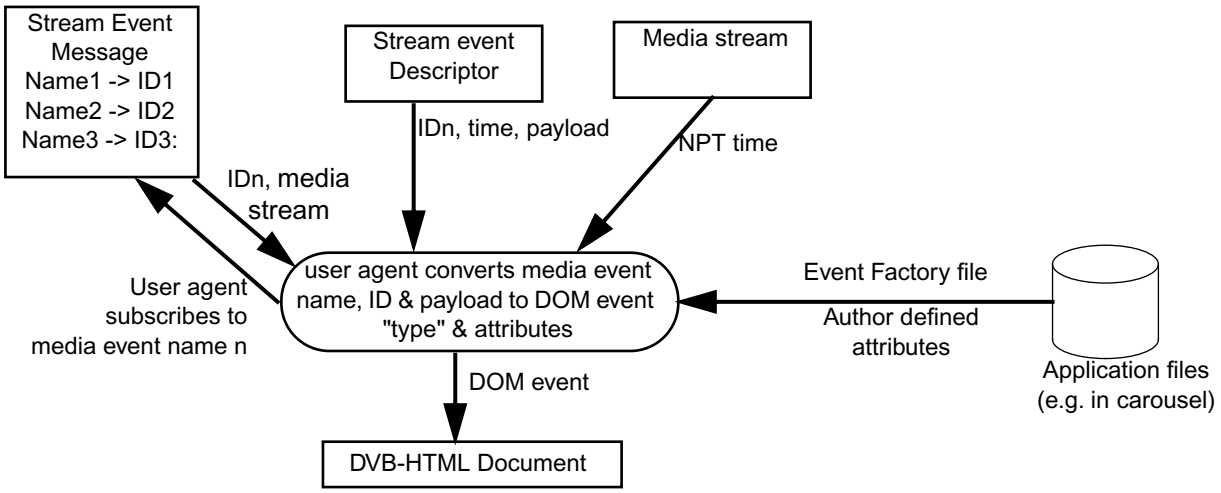


Figure 11 : Overview of the authored event mechanism

The following text provides an informative description of the different steps involved when a DVB-HTML document subscribes to a trigger event delivered by DSM-CC stream events using a linkage file and factory file, an implementation may choose to perform some steps differently, however the overall result shall be equivalent:

On starting the application the user agent locates the linkage file. If no linkage file exists, then the default processing shall apply to this application (see 8.7.4, "Default Trigger Mechanism" on page 101).

On loading a document, the user agent locates any event factory files that apply to the document. If no factory files apply to this page, the default event factory file shall be applied (see 8.7.2.4, "Default Event Factory File" on page 97), the user agent collates all of the trigger-event elements in the event factory files.

If the DVB-HTML document, through an embedded Xlet or any attached script, implements an EventListener interface and subscribes to a trigger event of a type mentioned in any trigger-event element in the collated set, through a call to the DOM addEventListener() method on the element node of the document DOM. The user agent locates the DSMCC Stream Event message by following the URI specified by the stream attribute in the event element. The DSMCC Stream Event message provides the mapping between the event name in the trigger-event element and the event id and references the source of the stream event descriptors that the user agent needs to monitor. If the collated trigger-event elements do not mention a matching type then the default element shall be assumed (see 8.7.4, "Default Trigger Mechanism" on page 101).

On receipt of the stream event descriptor that provides the mapping between the event id and both the `eventNPT` and the associated payload, the user agent begins the synthesis of the DOM event, as defined by the event factory element. When the NPT of the referenced stream is equal to the eventNPT of the stream event descriptor plus any offset, or as soon as the stream event descriptor is received in case of 'do it now' events (see B.2.4.3, "DSM-CC Sections carrying Stream Descriptors" on page 407), the DOM event is injected in the DOM implementation at the node whose id matches the target attribute of the trigger-event element.

Payload of the stream event is parsed by the expression and placed in the synthesised DOM event using appropriate attribute names.

If following the DOM event propagation rules this event reaches the handler placed by the Xlet or script, the handler is activated and receives the synthesised DOM event.

8.7.2.2 Event Factory File definition

8.7.2.2.1 Syntax

The event factory file is an XML file with syntax defined by the following DTD.

```
<!-- ..................................................................... -->
<!--           DVB HTML Event Factory File DTD -->
<!-- ..................................................................... -->
<!-- file: htmleventfactoryfile-1-0.dtd-->
<!-- ..................................................................... -->

<!--
The following formal public identifier shall be used to identify this file:

   "-//DVB//DTD DVB HTML Event Factory 1.0//EN"

The following URL may be used to reference this file:

   http://www.dvb.org/mhp/dtd/htmleventfactoryfile-1-0.dtd

-->

<!ELEMENT htmleventfactoryfile (trigger-event|system-event|time-event)*>

<!ELEMENT trigger-event (event-attribute)*>
<!ATTLIST trigger-event
   stream                    CDATA               #IMPLIED
   event                     CDATA               #REQUIRED
   type                      CDATA               #IMPLIED
   target                    CDATA               #IMPLIED
   time                      CDATA               "+0"
   bubbles                   %Boolean;           "true"
   cancelable                %Boolean;           "true"
>

<!ELEMENT system-event (event-attribute)*>
<!ATTLIST system-event
   stream                    CDATA               #IMPLIED
   event                     CDATA               #REQUIRED
```

```
   system-event-type          CDATA               #REQUIRED
>

<!ELEMENT time-event (event-attribute)*>
<!ATTLIST time-event
   type                       CDATA               #IMPLIED
   target                     CDATA               #IMPLIED
   time                       CDATA               "+12"
   bubbles                    %Boolean;           "true"
   cancelable                 %Boolean;           "true"
>

<!ELEMENT event-attribute EMPTY>
<!ATTLIST event-attribute
   attribute-name             CDATA               #REQUIRED
   attribute-pattern          CDATA               #REQUIRED
>
```

8.7.2.2.2 Element semantics

The elements of the event factory file have the following semantics:

htmleventfactoryfile: This element serves as the root element for an event factory file.

trigger-event: This element specifies a relationship between:

- a media stream event
- the DOM event interface to which it maps
- the DOM event destination.

system-event: This element specifies a relationship between a media stream event and the system event to be generated. See 8.7.2.6, "System events" on page 98.

time-event: This element specifies a relationship between an absolute time and

- the DOM event interface to which it maps
- the DOM event destination.

event-attribute: This element specifies the mapping of media event payloads into attributes of the trigger or system event.

The trigger-event and time-event element can contain zero or more event-attribute elements. These describe the construction of a derived interface from the DOM `Event` interface, which adds attributes.

The system-event element can contain zero or more event-attribute elements. These provide parameters to the system event.

8.7.2.2.2.1 Duplicate elements

Each trigger-event, time-event or system-event generates an event regardless of whether any are effectively duplicates.

8.7.2.2.3 Attributes semantics

The attributes of the event factory file have the following semantics:

stream: Names the stream event message, this shall be a "dvb:" URI and must resolve to a DSM-CC StreamEvent message. It may be relative to the application files or provide a full reference to the file system that carries the StreamEvent message. So, regardless of what file system carries the DVB-HTML application the implementation can locate the source of the events. If missing the default location is assumed.

event: The name of the media event in the stream event message which provides the stimulus for this event. Note that multiple broadcast-event records may reference the same media event, possibly with time offsets. This provides the names that the user agent must subscribe to.

type: The type of event which will be exposed to the DOM on triggering this event. If missing, the type will be the same as event.

system-event-type: The type of the system event which will be received by the user agent.

target: If this attribute is provided it specifies the ID of the target node in the HTML page. If the attribute is not provided then the target is the root of the DOM tree, also referred to as the document node. Any listeners on those event types should then be positioned on the document root node to be able to receive the event, or be positioned on the document node.

Example:

```
<?xml version="1.0"?>
<!DOCTYPE html PUBLIC "-//DVB//DTD XHTML DVB HTML 1.0//EN"
   "http://www.dvb.org/mhp/dtd/dvbhtml-1-0.dtd">
<html xmlns="http://www.w3.org/1999/xhtml"
   xmlns:dvbhtml="http://www.dvb.org/mhp">
   <head>
      <script type="text/ecmascript">
         // event listener declaration
         function handleEvent(evt) { /* Handle the event */ }

         // the listener is positioned on the document root node,
         // i.e. the html node
         function setupEventListeners () {
            var htmlNode = document.documentElement;
            htmlNode.addEventListener("myTriggerEvent", handleEvent, true);
         }
      </script>
   </head>
   <body dvbhtml:onload="setupEventListeners()">
   </body>
</html>
```

offset: An optional offset time (in ms) which can be added to the NPT time of the stimulus to delay the firing of the event, this time is used to calculate a new NPT time for the delivery of the event.

time: The value of this parameter is detailed in 8.16.2, "Clock values" on page 179. Both Absolute and Offset times are allowed. If an offset form is given (A full, partial or timecode value with an initial '+' or '-' sign) then the event time is measured as an offset with respect to the UTC of the midday of the date attribute. Otherwise the value must lie in the range 0:0:0.0 to 23:59:59.99 (a value within one clock resolution of midnight), and specifies a clock time (in 24 hour format) on the day of the date attribute.

For example:

```
02:30:03    = 2 hours, 30 minutes and 3 seconds past midnight
+30:00:10.25 = 30 hours, 10 seconds and 250 milliseconds after the current midday
```

The MHP shall support offset referencing of at least +/- 12 hours.

date: The value of this parameter is detailed in 8.16.1, "Date Values" on page 179. It gives the date which on which the midday reference for the time attribute occurs. If not specified the value will be the date on which the application began executing.

bubbles: This attribute sets the DOM event attribute "bubbles" as defined in 84 "Document Object Model (DOM) Level 2 Events Specification".

cancelable: This attribute sets the DOM event attribute "cancelable" as defined in 84 "Document Object Model (DOM) Level 2 Events Specification".

attribute-name: The name which will be used for the DOM event attribute.

attribute-pattern: A regular expression which describes how to parse the data from the trigger payload in order to initialise the DOM event attribute. The attribute-pattern is of the form:

```
/pattern/flags:replacement
```

where pattern follows the grammar in 15.10.1 of [81], and flags are at most one each of ("g", "i" or "m"). The replacement text is arbitrary text, but may contain '$' values which are substituted by elements collected by the pattern following the rules in 15.5.4.10 of [81]

For example `"/(\d+)/g:$1$2$3"` would be a legal attribute-data value. And applied to the trigger payload:

```
"box 12 in 34 by 567 for 248"
```

would deliver the data:

```
"1234567"
```

8.7.2.3 Default Event Factory Element

Media events that are not defined in any event factory files associated with a DVB-HTML document and whose name "event-name" does not start with "dvb." are treated as if associated with a default event factory element which is defined with the following piece of syntax:

```
<trigger-event event = "event-name"
   type = "event-name"
   time = "0"
   bubbles = "true"
   cancelable = "true">
   <event-attribute
      attribute-name = "payload"
      attribute-pattern = "/.*/:$1"/>
</trigger-event>
```

NOTE: The event type and the media event name are identical in this case. It is indeed assumed here that every trigger event corresponds to a stream event with name value equals to the type of this trigger event. Since, the stream attribute is not present, the default location of the DSMCC StreamEvent messages is assumed. Also, since the target attribute is not present in this default event factory file, the target is the document root element (i.e. the html node).

Any listeners on those event types should then be positioned on the document root node to be able to receive the event, or to be positioned on the document node (see target attribute definition in 8.7.2.2, "Event Factory File definition" on page 94).

If the media event name value "event-name" starts with "dvb." then the media event is considered as being a system event, the default location of the DSMCC Stream Event message is assumed and the semantics of 8.7.2.6, "System events" on page 98 apply.

8.7.2.4 Default Event Factory File

In the absence of an event factory file associated with a DVB-HTML document, a default one is assumed. The default event factory file associated with a DVB-HTML document contains the definition of all the trigger events the document registers with. The aggregation of the default event factory elements constitutes the default event factory file for a DVB-HTML document.

8.7.2.5 Worked example

An applications event factory file contains the following text:

```
<trigger-event
   stream="dvb://233a..1234/goals"
   event="goal"
   type="score"
   cancelable="false">
```

```
   <event-attribute
      attribute-name="score"
      attribute-data="/\[s(core)?:(\d+)-(\d+)/$1-$2" />
</trigger-event>
```

This defines that the stream event message for this event is in the carousel location `"dvb://233a..1234/goals"` within this file will be a loop of event names, one of which should be `"goal"` this is the event that the user agent must subscribe to. The generated DOM event will be of type `"score"` to suit the naming convention of the author, and will not be cancelable. The media event will carry some payload data, and this should be placed in a DOM attribute called `"score"` in the resulting DOM event.

This will result in DOM events being delivered to the DVB-HTML application that have the following interface:

```
interface score : trigger-event {
   readonly attribute   DOMString score;
   void                 initScoreEvent(
                        in DOMString typeArg,
                        in boolean canBubbleArg,
                        in boolean cancelableArg,
                        in DOMString scoreArg );
};
```

Assume a stream event descriptor with the following payload bytes is received:

```
<http://xxx.yyy.com/fun.html>[score:1-2]
```

Then the resultant DOM event would be constructed using the following initialisation

```
initScoreEvent(
      "score", true, false,"1-2"
)
```

The following DOM event properties will be filled in the base class as follows:

- DOMTimeStamp timeStamp - this will contain the ms count since the 1 Jan 1970.

8.7.2.6 System events

System events use the same transport and binding mechanisms as trigger-events, but instead of being converted into DOM events and being delivered to the DVB-HTML application they are entirely handled by the user agent. The mapping process from media event names to system event names is identical to that for trigger-events, that is the system-event element defines the stream (optionally) and event name to subscribe to. However, in this case the type attribute defines the kind of system event. The following values for type are defined:

- "dvb.start"
- "dvb.page"

Note: All event names that start with "dvb." are reserved for use by DVB to avoid name clashes with possible other name definers.

The attributes associated with system events are fixed, but use the same mechanism to pull the information from the payload bytes.

8.7.2.6.1 dvb.start event

- The dvb.start event causes a DVB-HTML application in the `ACTIVE` state to receive the AppStarting (see 8.11.2.2, "Lifecycle events" on page 129) event. No payload data is defined for the start event: any event-attribute elements associated with this shall be ignored.
- The dvb.start events are only defined in the context of the DVB-HTML application entry point document (identified by the application location descriptor): if the start event element is present in the event factory file of any other DVB-HTML document it shall be ignored.
- More than one dvb.start binding can be defined but only the first to fire shall cause an AppStarting event.

The resultant event time of the start event specifies the time at which the application entry point document is intended to be displayed to the user. Ideally the implementation should begin fetching data and formatting the new page off-screen, and then display it at the time specified. It is not possible in general to predict how long any page might take to render, so that no matter how long in advance of the desired display time the page message is delivered there is no fixed guarantee an MHP will have completed the rendering.

8.7.2.6.2 dvb.page event

The event-attribute element associated with the dvb.page system-event allows the broadcaster to direct the application at a specific page during execution. Referencing pages that are not reachable due to security or other restrictions (see 8.16.3, "Unrealisable locators" on page 180) shall cause the event to be ignored. After processing of the event completes the application shall have a single window containing the referenced document. Even if the referenced document is currently being displayed it shall still be reloaded and redisplayed.

In order for an application author to guarantee that page events operate globally in an application they will have to use the broadest possible regular expression ("*") in the linkage file to ensure that the event factory file that specifies the dvb.page event is bound to all DVB-HTML documents.

The following values for attribute-name are defined:

Table 18 :

attribute-name	number of occurrences
actuate	zero or one
href	one
title	zero or one

actuate: The results of the evaluation of the attribute-pattern should be one of the following:

- "onLoad"
- "onRequest"

the semantics of other values are not defined and shall be ignored. If this attribute is not present it is treated as if "onRequest".

If the result is "onLoad" then the user agent loads the page (as described above) given in the href attribute (as described below).

If the result is "onRequest", the user is informed that the document is available and chooses whether to switch to it. If the user accepts the behaviour is as if "onLoad". If the user declines the offer then the user presentation remains unchanged.

href: The results of the evaluation of the attribute-pattern yield a URI. The URI which the user agent should load.

title: The results of the evaluation of the attribute-pattern yields text that is intended to describe the target to the user in the "onRequest" interaction. The text encoding shall be compatible with 7.1.5, "Monomedia format for text" on page 66.

8.7.3 Binding the event factory file to the application

A DVB-HTML application is usually constructed of multiple DVB-HTML documents, each such file can have a different trigger event set to which it subscribes. Each file can be associated with zero or more event factory files. If no event factory file is associated with a DVB-HTML document then the default event factory file is assumed (See 8.7.2.4, "Default Event Factory File" on page 97). If no event element is associated with an event type in all the event factory files associated with a DVB-HTML document, then the default event factory element is assumed for this event (See 8.7.2.3, "Default Event Factory Element" on page 97).

If more than one event factory file is associated with a document then the behaviour is as if all of the elements were contained in a single file. The order of the files is not significant.

In order to define the mapping between DVB-HTML files and event factory files, each application is associated with zero or one "event linkage" file, this event linkage file defines the association between specific event factory files and the documents to which they relate. If there is no event linkage file then the default trigger mechanism is assumed (See 8.7.4, "Default Trigger Mechanism" on page 101).

8.7.3.1 Syntax of event linkage file

This file provides a list of zero or more event factory attribute files for each document in the application. The event linkage file is an XML file using the following DTD.

```
<!-- ..................................................................... -->
<!--           DVB HTML Event Linkage File DTD -->
<!-- ..................................................................... -->
<!-- file: htmleventlinkagefile-1-0.dtd-->
<!-- ..................................................................... -->

<!--
The following formal public identifier shall be used to identify this file:

   "-//DVB//DTD DVB HTML Event Linkage 1.0//EN"

The following URL may be used to reference this file:

   http://www.dvb.org/mhp/dtd/htmleventlinkagefile-1-0.dtd

-->

<!ELEMENT htmleventlinkagefile (linkage)*>

<!ELEMENT linkage (location)+>
<!ATTLIST linkage
   boundary          CDATA               #REQUIRED
>

<!ELEMENT location EMPTY>
<!ATTLIST location
   URI               CDATA               #REQUIRED
   language          CDATA               #IMPLIED
>
```

8.7.3.2 Semantics of event linkage file

htmleventlinkagefile: This element serves as the root element for an event linkage file.

linkage: This element specifies a set of DVB-HTML documents with which the event factory files identified by the location element are to be associated.

boundary: This is a regular expression identifying the set of documents. The encoding is identical to that used in the application boundary descriptor (see 10.10.3, "DVB-HTML application boundary descriptor" on page 233).

location: This element specifies the location of an associated event factory file using the URI.

URI: The URI.

language: This optional attribute identifies the user preference language required before the event factory file is interpretted. If this attribute is empty then event factory file applies regardless of user preference. If the user preference language does not match then the referenced event factory file does not apply. This matching is implementation defined.

The encoding of this attribute shall be ISO 639.2 [19].

8.7.3.3 Example

```
<?xml version="1.0"?>
<!DOCTYPE linkage "-//DVB//DTD DVB HTML Event Linkage 1.0//EN"
"http://www.dvb.org/mhp/dtd/htmleventlinkagefile-1-0.dtd">
```

```
<linkage boundary ="*">
   <location URI="./events/app_events.evt" />
</linkage>
<linkage boundary ="foo.htm">
   <location URI="http://www.xx.com/app/ev1.evt" />
   <location URI="http://www.xx.com/app/ev2.evt" />
</linkage>
<linkage boundary ="bar.htm">
   <location URI="http://www.xx.com/app/ev1.evt" />
   <location URI="lid://www.xx.com/app/ev3.evt" />
</linkage>
```

Where `"http://www.xx.com/app/ev1.evt"` etc. are the URIs of the behaviour files.

8.7.3.4 Name and location of linkage file

The event linkage file is located in the same directory as the application entry point document.

The file name of the linkage file is formed by replacing any file name extension with the string "lnk". So, for the application entry point document:

```
foo.html
```

the linkage file would be named:

```
foo.lnk
```

8.7.4 Default Trigger Mechanism

The default trigger mechanism is assumed when there is no linkage file associated with a DVB-HTML application. This default mode provides a simple event mechanism in the case where a DVB-HTML application is associated with system events or with trigger events with simple data payload. An overview is provided in figure 12, "Overview of the default trigger mechanism" on page 102.

In that case, any document of the DVB-HTML application that registers for trigger-events is associated with the default event factory file as defined in 8.7.2.4, "Default Event Factory File" on page 97. All stream events used in the context of the DVB-HTML application are defined in DSMCC Stream Event messages available in the default location (see 8.7.1.3, "Binding to DSM-CC Stream events" on page 92). It is assumed that the name values of the stream events are identical to the trigger event types. Stream events with name values different from trigger event types registered by a document or different from system event names shall be ignored.

In the default mode, all DSMCC Stream Event messages present in the default location will be bound to the application. An application that has registered on a given event name will thus receive several events if they are referenced in different DSMCC Stream Events with this exact value of event name. This may not reflect the original intent of the application author. It is thus recommended that application authors carefully choose the values of event type in their DVB-HTML application when they register on stream events that are originating from different media sources (e.g. by using prefixed names).

Event registration by a DVB-HTML document is performed as described in 8.7.1.2, "Application registration and reception" on page 92 except that the listeners need to positioned on the root element node of the DOM tree, since the target of the event will be this node. An example is provided in 8.7.2.3, "Default Event Factory Element" on page 97.

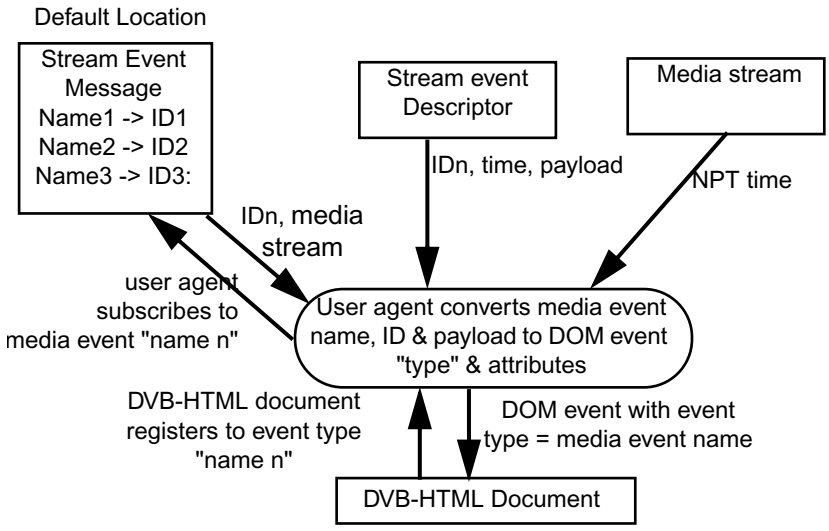


Figure 12 : Overview of the default trigger mechanism

The following text provides an informative description of the different steps involved when a DVB-HTML document subscribes to a trigger event in the default mode:

1. The DVB-HTML document, through an embedded Xlet or any attached script, implements an EventListener interface and subscribes to the trigger event through a call to the DOM addEventListener() method on the root element node of the DOM tree with an appropriate event type.

2. The user agent locates the DSMCC Stream Event message in the default location that contains an event name equal to the registered event type.

3. The DSMCC Stream Event message provides the mapping between the event name and the event id and references the source of the stream event descriptors that the user agent needs to monitor.

4. On receipt of the stream event descriptor that provides the mapping between the event id and both the eventNPT and the associated payload, the user agent begins the synthesis of the DOM event, as corresponding to the default event factory element. When the NPT of the referenced stream is equal to the eventNPT of the stream event descriptor or as soon as the stream event descriptor is received in case of 'do-it-now' events, the DOM event is injected in the DOM implementation.

5. Payload of the stream event can be fully extracted from the synthesised DOM event through the default 'payload' attribute.

8.8 CSS

Cascading Style Sheets (CSS) are a method to attach a look to HTML or XML content.

8.8.1 Summary of CSS profiling for MHP

DVB-HTML shall support CSS2 as defined in CSS 2 [87] but amended by the following profile statements:

- "MHP profile of CSS data types" on page 103
- "MHP profile of CSS @ rules" on page 103
- "MHP profile of CSS media types" on page 104
- "Graphics and video integration" on page 105
- "Font selection" on page 117
- "Font specification" on page 118

An MHP terminal must therefore observe the conformance clauses specified in CSS 2 [87].

8.8.2 MHP profile of CSS data types

The implementations shall support all of the data types defined in CSS 2 [87] except as amended by table 19 "MHP profile of CSS data types".

Table 19 : MHP profile of CSS data types

Data type	Profile
<alphavalue>	See 8.8.4.2.1.1, "opacity" on page 104 The results of opacity blending may be implementation specific, see 13.6.1, "Approximations in composition" on page 350.
<angle>	Not required (support for aural style sheets is not required).
<color>	Application authors should not make any assumption on the expected results when using system colours defined in CSS 2 [87]. In particular there is no guarantee that any two system colour names will have distinct appearances.
<frequency>	Not required (support for aural style sheets is not required).
<length>	See 8.8.5.2, "Coordinate spaces" on page 106
<shape>	In this specification the only valid <shape> value is: `rect (<top> <right> <bottom> <left>)` The parameters <top>, <bottom> <right>, and <left> specify offsets from the top and left of the box.
<time>	Not required (support for aural style sheets is not required).

8.8.3 MHP profile of CSS @ rules

The implementations shall support all of the @ rules defined in CSS 2 [87] except as amended by table 20 "MHP profile of CSS @ rules".

Table 20 : MHP profile of CSS @ rules

Rule	Profile
page	Not required.
viewport	Required, See 8.8.5.3.2, "The @viewport rule" on page 107.

8.8.4 MHP profile of CSS media types

A DVB-HTML user agent is required to support the media types in this section, support for other media types is optional.

8.8.4.1 "screen" media type

A DVB-HTML user agent shall support the `screen` media type

8.8.4.2 'dvb-tv' media type

A DVB-HTML user agent shall support the `dvb-tv` media type.

The `dvb-tv` media type is a new media type introduced to enable content authors to differentiate an MHP terminal with a predominantly TV like environment (low resolution, possible interlace, specific gamut color, limited-scrollability, small screens, sound available) from an MHP terminal with a more computer desktop like environment. The `dvb-tv` media type is a superset of properties as the `screen` media type as defined in CSS 2 [87]. `dvb-tv` is a member of the following media groups.

Table 21 : Relationship between media groups and media types

MediaTypes	Media Groups			
	continuous/paged	visual/aural/tactile	grid/bitmap	interactive/static
dvb-tv	continuous	visual	bitmap	both

8.8.4.2.1 Additional Properties of "dvb-tv" media type

8.8.4.2.1.1 opacity

opacity: Objects may be rendered in a semi-transparent fashion in DVB-HTML using the `opacity` property defined in SVG [91]. Opacity can be thought of as a postprocessing operation. Conceptually, after an object or group of objects is rendered into an RGBA off-screen image, the opacity setting specifies how to blend the off-screen image into the graphics device.

Value: <alphavalue> | inherit

Initial: 1.0

Applies to: all elements

Inherited: no

Percentages: N/A

Media: visual

> **<alphavalue>:** The uniform opacity setting to be applied across an entire object. Any values outside the range 0,0 (fully transparent) to 1,0 (fully opaque) will be clamped to this range. If the object is a container element such as a , then the effect is as if the contents of the element were blended against the current background using a mask where the value of each pixel of the mask is <alphavalue>.

See alpha compositing in 13.3.4, "Composition" on page 343.

The CSS boxes are composed following the normal CSS model, however overlapping boxes that have semi opaque colours are composed using the Porter-Duff rules (see Porter-Duff [D]). We define a new property:

8.8.4.2.1.2 compose-rule

compose-rule: The default rule used is the `src-over` rule.

CSS allows for a fully transparent background, and with the addition of the compose rule and semi opaque colours semi transparent effects can be achieved. The various approximations defined for compositing in 13.3.5, "Composition Rules" on page 344 also apply to the CSS compositing.

Value: clear | dst-in | dst-out | dst-over | src | src-in | src-out | src-over

Initial: src-over

Applies to: all elements

Inherited: no

Percentages: N/A

Media: visual

8.8.4.2.1.3 clip-video

See 8.8.5.8.1.1, "clip-video" on page 116.

8.8.4.2.1.4 focus traversal

See 8.8.5.10, "Focus traversal and short-cuts" on page 116

8.8.4.2.1.5 viewports

See 8.8.5.3.2, "The @viewport rule" on page 107

8.8.4.2.2 Policy rules

When several media types are present in a DVB-HTML document, user agents shall apply the properties settings that are included in the most appropriate `@media` rule. In this case, the user agent shall ignore properties settings that are included in the other `@media` rules targeting other media types. An MHP terminal shall ignore all properties belonging to media types that it does not support or are not selected.

8.8.4.3 Clarifications on support of paged properties

The CSS2 specification[87] appendix F lists properties associated with the paged media group as being also associated with the visual media group, which creates a possible ambiguity with the definition of the `screen` and `dvb-tv` media types which do not support the `paged` media group. For clarification, DVB-MHP does not require the support of the properties where the "media group" column contains "`visual, paged`".

8.8.5 Graphics and video integration

8.8.5.1 General recap of the MHP graphics

The MHP defines three sets of planes, background, background video, and application. The DVB applications draw into the application layer, but may be transparent or translucent to the video planes beneath. Video objects can be placed in the application layer too, and these act as components (e.g. being clipped to the viewport).

MHP defines the following coordinate spaces which can be used in these planes,

8.8.5.1.1 Input video space

This considers post upsampling MPEG pixels.

8.8.5.1.2 Device space

Logical pixels in the various display devices.There may be different device spaces for the various device types (e.g.video and graphics).

8.8.5.1.3 Normalised space

Normalised coordinates relative to the screen.

8.8.5.1.4 Colour

MHP defines a 4 dimensional colour space coordinate system, which covers the sRGB gamut with semi opaque colours.

In DVB-HTML points in the three chroma dimensions are specified using the CSS rgb() or #rgb syntax, the `opacity` property is used to specify the fourth translucency component (see 8.8.4.2.1.1, "opacity" on page 104). Any translucency information in referenced images shall also be respected.

8.8.5.2 Coordinate spaces

DVB-HTML applications do not have to fill the entire graphic space, but can specify a rectangle in the screen space, to locate the initial viewport for the application. It can also specify and use a local pixel coordinate space in that viewport for placement of elements within the application.

DVB-HTML applications can also make use of locations in the video space so that elements can be positioned relative to them (e.g. placing captions in black bars).

The definition of `em` and `ex` shall be computed using the rules in annex D.3.4.2, "Horizontal resolution" on page 426, not based on the subtended angle at the eye as in CSS 2.

8.8.5.2.1 Screen coordinates

The screen space coordinates are normalised, and can therefore be expressed in CSS % units where it is defined for MHP that this means percent of screen real estate.

i.e. full screen is top:0% left:0% width:100% height:100%.

8.8.5.2.2 Pixel coordinates

Pixel coordinates use CSS `px` units, these describe logical pixels in the viewport (which in the same way as `HGraphicsDevice`, may not actually map to physical device pixels), and define the coordinate space of the viewport.

8.8.5.2.3 Video coordinates

To address positions based on the video coordinate space the *pel* numeric type is defined.

e.g. the style

```
#captions { position: fixed; top: 23pel; left: 43pel; width: 100pel; height: 60pel }
```

establishes a fixed box in the viewport, the rectangle of which is based on (43, 23, 100, 60) in the source video (see "Definition of pel areas in the video" on page 115 for how this is computed into an actual box).

8.8.5.3 How to define the initial containing block

8.8.5.3.1 Problem

The rectangle on screen that is the logical equivalent of the `HScene` in DVB-J, is called the *viewport* in CSS. Since this does not have to fill the screen, it is required to be able to establish the coordinate space that this viewport has (if this is not specified by the application then the user agent can use the natural pixel resolution for the device). Within the viewport the user agent needs to establish the root containing block for the document to be laid out in - following the normal CSS rules, this is defined in the viewport pixel coordinate space and may not extend to the full size of the viewport.



Figure 13 : CSS Boxes

8.8.5.3.2 The @viewport rule

Viewport context: The `@viewport` rule is used to define the viewport for the application. This is roughly equivalent to the `@page` rule for printed output. The declarations that it contains are defined to be in the **viewport context**.

Only one viewport can be in effect at a time, and this is defined by the cascade referenced by the stylesheet of the root containing document (see 8.8.5.4, "Cascading" on page 113 and also 8.8.5.3.4, "Pseudo classes" on page 112) for example:

```
@viewport {
      scene: (25%, 25%, 50%, 50%);
      hres: 288px;
      vres: 360px;
      initial: (94px,130px,100px,100px)
}
```

Specifies that:

- the viewports scene is 1/4 screen and centred,
- that the desired coordinate resolution of the viewport is 288x360,
- and the initial containing block is a 100x100 square approximately centred within the viewport.

8.8.5.3.3 Establishing a viewport

8.8.5.3.3.1 Viewport properties

The following properties may be used inside a `@viewport` rule. DOM access to these properties is provided by 8.8.5.9, "DOM Access to CSS" on page 116. Implementations are not required to respect property requests in the `@viewport` rule that would require the implementation to exceed the minimum requirements defined in G.3, "Video" on page 445. By giving DOM write access to these properties the application can dynamically change the backgrounds. By giving DOM read access the actual values can be discovered to adapt to the current local conditions.

scene: The `scene` property specifies where the CSS viewport lies in terms of percentage of the `area` allocated to the application (this `area` is by default based on the video rectangle but may be changed, see 8.8.5.5.1, "The area property" on page 113).

Value: <shape>

Initial: rect(0%, 100%, 100%, 0%)

Applies to: Viewport context

Inherited: no

Percentages: area

Media: visual

<shape>: See table 19, "MHP profile of CSS data types" on page 103. In this context `<top>`, `<bottom>` `<right>`, and `<left>` specify <percentage>.

<percentage>: The offset is a percentage of the width (for `left` or `right`) or height (for `top` and `bottom`) of the `area` (see 8.8.5.5.1, "The area property" on page 113).

horizontal-resolution: Determines the number of logical pixels horizontally in the viewport and defines the grid to which `px` units in the stylesheet apply. NB the logical pixels do not have to match with the actual device pixels.

Value: <length>

Initial: 720px

Applies to: Viewport context

Inherited: no

Percentages: N/A

Media: visual

vertical-resolution: Determine the number of logical pixels vertically in the viewport and defines the grid to which `px` units in the stylesheet apply. NB the logical pixels do not have to match with the actual device pixels.

Value: <length>

Initial: 576px

Applies to: Viewport context

Inherited: no

Percentages: N/A

Media: visual

initial: This establishes the box for the root element of the layout. CSS allows that the initial containing block be larger than the viewport, and in this case it states the user agent should offer a mechanism for scrolling, since this may not be appropriate on an MHP it is advised that authors do not use initial blocks larger than the viewport. If they do then the user agent shall clip to the viewport, and may provide mechanisms to view the clipped regions.

Value: <shape>

Initial: rect(0%, 100%, 100%, 0%)

Applies to: Viewport context

Inherited: no

Percentages: Scene

Media: visual

<shape>: See table 19, "MHP profile of CSS data types" on page 103. In this context `<top>`, `<bottom>` `<right>`, and `<left>` specify `<length>` or `<percentage>`.

<length>: The offset is a fixed distance from the reference edge (`top` or `left`) in the logical pixels of the `scene`.

<percentage>: The offset is a percentage of the `width` (for `left` or `right`) or `height` (for `top` and `bottom`) of the viewport established by the `scene` property.

8.8.5.3.3.2 Other viewport properties

These properties will mostly be useful for interrogation of the video processing being performed so that a presentation can be tailored to fit, but they also allow the manipulation of the background devices.

These are used after the viewport is selected (see "Pseudo classes" on page 112), and allow the application to override the presentation of the background properties.

type: The type defines whether the viewport should attempt to preserve graphic fidelity or video fidelity. It can also require that the pixel coordinate space be aligned with the video coordinate space.

Value: video | graphics | aligned | none

Initial: none

Applies to: Viewport context

Inherited: no

Percentages: N/A

Media: visual

background-image-rectangle: This property of the viewport defines the shape of the image placed on the background device.

Value: <shape>

Initial: rect(0%, 100%, 100%, 0%)

Applies to: Viewport context

Inherited: no

Percentages: screen

Media: visual

<shape>: See table 19, "MHP profile of CSS data types" on page 103. In this context `<top>`, `<bottom>` `<right>`, and `<left>` specify `<percentage>`.

<percentage>: The offset is a percentage of the screen `width` (for `left` or `right`) or `height` (for `top` and `bottom`).

background: This property of the viewport defines the image or colour to be used in the background plane when the application has the focus.

Value: <uri> [, <colour>] | <colour>

Initial: black

Applies to: Viewport context

Inherited: no

Percentages: N/A

Media: visual

If a `<uri>` is specified it should point to an image in an MHP supported format, other formats may be supported. If the resource is not found then the optional fallback colour or the initial value will be used

background-video-rectangle-n: This property of the viewport defines the output rectangle (in percent of the screen) of the background video device (see 8.8.5.3.3.3, "n planes" on page 112 for explanation of the "-n" notation). The default is full screen. The pel aspect ratio of this rectangle is the same as that of the screen. the resolution however is a subset of the screen resolution.

Value: <shape>

Initial: rect(0%, 100%, 100%, 0%)

Applies to: Viewport context

Inherited: no

Percentages: screen

Media: visual

<shape>: See table 19, "MHP profile of CSS data types" on page 103. In this context `<top>`, `<bottom>` `<right>`, and `<left>` specify <percentage>.

<percentage>: The offset is a percentage of the screen `width` (for `left` or `right`) or `height` (for `top` and `bottom`).

background-video-clip-n:
This property of the viewport defines the input (clipping) rectangle of the background video source (see 8.8.5.3.3.3, "n planes" on page 112 for explanation of the "-n" notation). The clipping maintains the pel aspect ratio of the screen. This clipping rectangle then induces a video transform, which should not be specified. The transform in this case may not be limited to one of the given constants (see "background-video-transform-n:" on page 111), but will usually be "DFC_PROCESSING_CCO" on page 111

Value: <shape>

Initial: rect(0%, 100%, 100%, 0%)

Applies to: Viewport context

Inherited: no

Percentages: input video

Media: visual

<shape>: See table 19, "MHP profile of CSS data types" on page 103. In this context <top>, <bottom> <right>, and <left> specify <pels> or <percentage>.

<pels>: The offset is specified in the pels of the input video.

<percentage>: The offset is a percentage of the input video width (for "left" or "right") or height (for "top" and "bottom").

background-video-preserve-aspect-n: This property of the viewport defines how the input video source rectangle is transformed onto the display output rectangle (see 8.8.5.3.3.3, "n planes" on page 112 for explanation of the "-n" notation). If the value is false the video is transformed with no regard for the aspect ratio of the source or destination but simply scales the input grid to the output grid, if true (the default) the aspect ratio of the source is preserved onto the aspect ratio of the destination and scaled as much as possible (some of the output rectangle may be filled with black letterbox bars).

Value: true | false

Initial: true

Applies to: Viewport context

Inherited: no

Percentages: N/A

Media: visual

background-video-n: This property of the viewport defines the locator of the video source or service (See 8.6.18, "DVB Service styling" on page 91) to be used in the background video plane when the application has the focus (see 8.8.5.3.3.3, "n planes" on page 112 for explanation of the "-n" notation). If not specified the MHP uses the media components of the currently playing service.

Value: <uri> (, <uri>)* | <color>

Initial: dvb.current

Applies to: Viewport context

Inherited: no

Percentages: N/A

Media: visual

If a `<uri>` is specified it should point to a video component or service. If the resource is not found then the optional fallback `<uri>`s may be tried in order, if no resource is found the MHP uses the media components of the currently playing service.

background-video-transform-n: This property of the viewport defines the transform of the video to the output rectangle (see 8.8.5.3.3.3, "n planes" on page 112 for explanation of the "-n" notation). It has one of the symbolic constant values:

Value: <process>

Initial: DFC_PROCESSING_DEFAULT

Applies to: Viewport context

Inherited: no

Percentages: N/A

Media: visual

<process>: One of the following constant values:

DFC_PROCESSING_CCO: A central rectangle is cut out of the video input frame and transferred into the output video rectangle defined by the corresponding background-video-rect

DFC_PROCESSING_FULL: The full video input frame is transferred, part of the output may be black if the video input aspect is not the same as the output frame aspect.

DFC_PROCESSING_LB_14_9: The video input frame is transferred into a 14:9 letterbox in the output frame defined by the corresponding background-video-rect.

DFC_PROCESSING_LB_16_9: The video input frame is transferred into a 16:9 letterbox in the output frame defined by the corresponding background-video-rect.

DFC_PROCESSING_LB_2_21_1: The video input frame is transferred into a 2,21:1 letterbox in the output frame defined by the corresponding background-video-rect.

DFC_PROCESSING_DEFAULT: The default decoder format conversion is active.

DFC_PROCESSING_PAN_SCAN: An mxn part out of the video input frame is transferred into the output frame defined by the corresponding background-video-rect. The position of this part is determined by pan & scan vectors from the MPEG video stream.

DFC_PROCESSING_UNKNOWN: Constant representing an unknown format conversion being performed by the decoder. (e.g. if a manual transform is defined). This value cannot be set

8.8.5.3.3.3 n planes

The "n" is to be replaced by an integer number greater than or equal to zero defining the plane in the video layers, where 0 is the furthest plane from the viewer. The "-n" is optional with `background-video-rect` equivalent to `background-video-rect-0`.

8.8.5.3.4 Pseudo classes

Viewports can be labelled with pseudo-classes which allow the application to adapt to the physical structure of the MHP display or output system. For example:

```
@viewport :16x9 { ... }
@viewport :4x3 { ... }
```

The pseudo-class syntax is as follows:

```
display-pseudo-class = ":" [ aspect-ratio ] [ resolution ] [ scan ]
aspect-ratio = integer "x" integer
resolution = "R" integer "x" integer
scan = "P" | "I"
```

integer is an `<integer>` as defined in the CSS 2 specification

where the components of the pseudo-class have the following meanings:

aspect-ratio: specifies the physical display pixel aspect ratio

resolution: specifies the physical display pixel resolution

scan: specifies whether the display is progressive scan ("P") or interlaced ("I")

This allows most of the common formats to be defined.

A pseudo-class matches a display if each component of the pseudo-class either exactly matches the display or is not present.

`EXAMPLE 1: 16x9R720x576P`
Matches a progressive scan 16x9 display with 720x576 pixels.

`EXAMPLE 2: 4x3R1024x768`
Matches a 1024x768 display with 4x3 pixel aspect ratio, either interlaced or progressive scan.

If the pseudo-class for more than one `@viewport` rule matches a display, one rule is chosen by applying the CSS 2 cascade algorithm ([87] section 6.4 "The cascade"). In addition to the description of specificity there, the relative specificities of several display pseudo-classes is determined by summing the number of components which are specified; for example, "P" has a specificity of 1, "16x9R720x576P" has a specificity of 3.

8.8.5.4 Cascading

The `@viewport` properties cascade in the normal manner. However, only those viewport properties that are defined in the context of the document of the DVB-HTML application displayed in a root window shall be used to determine the application's viewport. Any `@viewport` properties defined in the context of a document that is not displayed in the root window shall be ignored.

NOTE: Therefore applications running in sub frames cannot control the viewport or background video.

8.8.5.5 How to discover where the video is

In order to have good visual synchronization with video in the background plane, a DVB-HTML application will need to be able to determine the intersection of the viewport and the background video areas, both the active video and any additiona "bar" areas caused by letterboxing.

8.8.5.5.1 The area property

DVB-HTML defines an `@viewport` property *area* which defines the rectangle of which the viewport is a sub rectangle. This has the following logical values, which can be combined together.

screen: uses the screen as reference, not the background video, this cannot be combined with other values.

total-video-area-on-screen: defines the box on screen where the video is including any bars the MHP knows about

active-video-area-on-screen: defines the box on screen where the video is excluding bars

LV-bar: limits the area to the left hand vertical letterbox bar.

RV-bar: limits the area to the right hand vertical letterbox bar.

TH-bar: limits the area to the top horizontal letterbox bar.

BH-bar: limits the area to the bottom horizontal letterbox bar.

EXAMPLE 1: `area: totalVideoAreaOnScreen`

is the default, and would limit the viewport to exactly where the video is being placed (including letterbox bars)

Combinations must add up to a single rectangle.

EXAMPLE 2: `area: activeVideoAreaOnScreen & BHBar`

would be legal and would allow the use of the area in the lower letterbox bar but not the top bar

EXAMPLE 3: `area: LVBar & THBar`

would be illegal

EXAMPLE 4: `area: THBar & BHBar`

would be illegal

EXAMPLE 5: `area: THBar & BHBar & activeVideoAreaOnScreen`

would be legal and would allow the use of the area in the upper and lower letterbox bar and the active video area

The order of property evaluation is as follows:

- first the background video rectangle is established (see "background-video-rectangle-n" on page 110, the default is full screen). The viewport is established with respect to the furthest video plane from the viewer.
- then the `area` is determined, (the default is the total active video area). and finally the viewport and initial box are determined. These would all have to be recalculated if the background video rectangle were to change (either by the terminal or by DOM control)

8.8.5.6 Placing content in relation to video

The terminal defined starting cascade style sheet implicitly defines (see "Definition of boxes" on page 115) the following regions when the viewport contains them.

```
.active-video-area-on-screen
.total-video-area-on-screen
.LV-bar
.RV-bar
.TH-bar
.BH-bar
```

so that for example the document

```
<!DOCTYPE
   html PUBLIC "-//DVB//DTD XHTML DVB HTML 1.0//EN"
   "http://www.dvb.org/mhp/dtd/dvbhtml-1-0.dtd"
>
<html>
<head>
   <title>css demo</title>
   <style type="text/css">
   <!--
   @viewport 16x9I{
      area: active-video-area-on-screen & BH-bar
   }
   -->
</style>
</head>
   </body>
      <div class="active-video-area-on-screen"> </div>
      <div class="BH-bar"> </div>
   </body>
</html>
```

Would use allow the placement of material in the lower black bar and over the video area.

8.8.5.6.1 Definition of boxes

The named regions are defined as the intersection of the viewport (shown in the illustration as the yellow rectangle) with the relevant area, therefore the regions could potentially be empty, in this case no content is displayed for that region. For example the `#TH-bar` shown in blue in the illustration below does not cover the whole of the letterbox bar, but only that which intersects the viewport. Similarly the `active-video-area-on-screen` region shown by the purple rectangle does not cover all the live video, but only that which intersects the viewport.



Figure 14 : Example of named screen regions

8.8.5.6.2 Definition of pel areas in the video

Positions defined by using the pel type are defined to be the pixel location in the viewport where the corresponding video pel is translated to. In the case that the transformed pel covers more than one pixel, the top most left most pixel is used. This allows the placement of content in relation to elements within the video.

Note: the pixel may not be within the viewport, and so may get clipped. it could also change with pan and scan.

8.8.5.7 Placing video within the presentation

8.8.5.8 Box Layout

8.8.5.8.1 Video Boxes

Video content may be placed in an `<object> or <img>` element. Using style rules the box for this can be positioned following the normal CSS rules anywhere within the viewport. This acts like a video component in DVB-J, and is entirely separate from video in the background plane.

When placing video inside an element, the video inside that element is positioned and scaled by any positioning and resizing of the element due to style, If the implementation does not support arbitrary scaling of video, then the resource shall be treated as not available and the fallback elements (if any) applied, otherwise the video shall be scaled as required. The video is always scaled to the full size of the element.

NOTE: Since the video is scaled to exactly fit the elements box, the `overflow` and `clip` attributes have no meaning for such elements.

Video element objects are treated as defined by the styling of the element. However, it is not required to support `opacity` style on such elements.

8.8.5.8.1.1 clip-video

The mapping to the source video is provided by the `clip-video` property which allows an arbitrary portion of the video to be placed within the element.

clip-video: The clip-video property defines the bounding box of the source rectangle in the source video allowing an arbitrary portion of the video to be placed within the element (as in figure 38, "Introducing video into the AWT component stack" on page 348). The coordinate space used to express the region is that of the decoded video after possible TR 101 154 [9] up-sampling. This rectangular segment of the video is then used to fill the element to which the style property is applied

For example:

<object src="dvb://current" style="clip-video:rect (10pels, 50pels, 70pels, 90pels)"/>.

Value: <shape>

Initial: full video rectangle

Applies to: object, image

Inherited: no

Percentages: N/A

Media: visual

Media: visual

<shape>: See table 19, "MHP profile of CSS data types" on page 103. In this context <top>, <bottom> <right>, and <left> specify <pels>

<pels>: The offset is specified in the pels of the input video and indicates an offsets from the left or top edge of the video as appropriate.

8.8.5.9 DOM Access to CSS

In order to gain programmatic access to the `@viewport` rule the language specific binding for the DOM interface specified in 8.11.8.1.3, "DVBCSSViewportRule" on page 158 may be used.

8.8.5.10 Focus traversal and short-cuts

In MHP it is possible to determine the order of traversal of elements using the navigation keys, and to specify certain keys as short cuts.

The `dvb-tv` media type includes the following additional style properties:

Table 22 : Navigation properties

Property	Meaning
nav-up	References the visual element to receive focus on receipt of the VK_UP event
nav-down	References the visual element to receive focus on receipt of the VK_DOWN event
nav-left	References the visual element to receive focus on receipt of the VK_LEFT event
nav-right	References the visual element to receive focus on receipt of the VK_RIGHT event
nav-index	Provides a navigation number for the element. This number must be unique on the page.
nav-first	An element with this style will be given focus on first presentation of the page.

The values of `nav-up, nav-down.nav-left`, and `nav-right` may be `<integer>`, in which case the referenced element is the element with the corresponding `nav-index` style, or they may be `<string>`. The `<string>` has the following syntax:

```
value:      '[outer]' | [frame-ref] '#' [elem-ref]
frame-ref:  frameid |
elem-ref:   '$'integer | elemid
```

where:

frameid: is the id of the frame containing the referenced item (the current frame is the default). The same rules shall apply as for the target attribute in HTML 4 [90], except that steps 3 and 4 of Annex B.8 therein shall not apply as DVB-HTML does not open new windows.

elemid: is the id of the referenced item. At least one of the `frame-ref` or `elem-ref` optional elements must be present if value is not `[outer]`.

integer: is a positive integer, and represents the element with the corresponding `nav-index` style (the default is the element with the `nav-first` style).

e.g.

```
<style type="text/css">
   #foo nav-right:"frame1#bar"
</style>
```

Would indicate the style for the element with the `id` foo, would navigate the focus to the element with the `id` "bar" in the frame "frame1".

The following string is reserved and has special meaning:

[outer]: This string refers to the external application context in the case that the DVB-HTML application is an inner application. If this name is used in the case where the application is not an inner application it shall be ignored.

If the element to receive the navigation focus cannot be determined by these rules, then the user agents default focus processing should be applied.

NOTE: The navigation hints should be used with some care, as the user agent may have applied defaults based on the current layout. If an author overrides these defaults, then the layout may produce non intuitive results for the viewer.

8.8.6 Font selection

There are four possible font selection actions defined in CSS2: name matching, intelligent matching, synthesis, and download. A user agent shall support the font matching algorithm as defined in section 15.5 in CSS 2 [87]. The user agent is not required to support intelligent font matching algorithm and font synthesis or their associated descriptors as described in "Descriptor support in MHP" on page 117. The user agent shall support the CSS2 `@font-face` rule and shall ignore any font index file co-located with a DVB-HTML application.

Table 23 : Descriptor support in MHP (Sheet 1 of 2)

Descriptor	Required
ascent	
baseline	
bbox	
cap-height	
centerline	
definition-src	
descent	
font-family	Yes

Table 23 : Descriptor support in MHP (Sheet 2 of 2)

Descriptor	Required
font-size	Yes
font-stretch	Yes
font-style	Yes
font-variant	Yes
font-weight	Yes
mathline	
panose-1	
slope	
src	Yes
stemh	
stemv	
topline	
unicode-range	Yes
units-per-em	Yes
widths	
x-height	

8.8.6.1 Restrictions on "src" descriptor

The user agent shall fully support the descriptor for Referencing: `src` with the following restrictions:

- The only format type required to be supported for the font `src` descriptor is `"truedoc-pfr"`.
- The only string required to be supported for the <font-face-name> value for access to local fonts is `"Tiresias"`, see G.4.1, "The built-in font" on page 445.

8.8.7 Font specification

The user agent is required to support the following set of properties for selecting a font:

- `font-family`
- `font-style`
- `font-variant`
- `font-weight`
- `font-stretch`
- `font-size`
- `font-size-adjust`
- `font`

Setting `font-stretch` and `font-size-adjust` is not required to have any visual effect in a constrained graphics environment.

The text rendering model used by the user agent shall respect the text rendering model defined in D.3.4, D.3.5, D.3.6.1 and D.3.6.2.

8.8.8 Default behaviour

In the absence of any other styling information for a page, the user agent shall render using the default stylesheet in Annexe AB, "(normative): DVB HTML StyleSheet" on page 1280

8.8.8.1 Default style sheet font rules

For DVB HTML user agents the style sheet referred to by CSS 2 (see UA default stylesheet in CSS 2 [87]) will consist of the stylesheet in appendix AB on page 1280. This stylesheet is not directly accessible to DVB HTML applications.

In addition to the style entries listed in the appendix, this stylesheet shall also provide `@font-face` rules for all installed fonts, which shall at least cover the minimum installed set of fonts (see G.4, "Resident fonts and text rendering" on page 445) and have rules for the CSS 2 generic families, `serif, sans-serif, cursive, fantasy` and `monospace`.

The minimum requirement of the additional font rules are:

- The implementation-specific stylesheet shall provide a font description with name "`Tiresias`".
- The implementation-specific stylesheet shall provide the normal weight.
- The implementation-specific stylesheet shall provide the normal stretch.
- The implementation-specific stylesheet shall provide at least the point sizes required (see table G.2, "Minimum set of sizes" on page 445).
- The implementation-specific stylesheet shall provide a `src`: to locate the font data.
- The implementation-specific stylesheet shall not provide `font-style` or `font-variant` declarations unless the implementation also provides font data that would visually distinguish the rendered text.

For example a minimal implementation might use the following rule:

```
@font-face {
    font-family: "Tiresias", serif, sans-serif, cursive, fantasy, monospace;
    font-weight: normal;
    font-stretch: normal;
    font-size: 36pt, 31pt, 26pt, 24pt;
  }
```

8.8.8.1.1 Extending the simple rule

An implementation may additionally include `unicode-range`: data for the installed fonts, and other "Descriptors for Matching" (CSS 2 [87] spec Section 15.3.6), which might be used, e.g. for `font-size-adjust`.

8.8.8.1.2 Fallback for italic, small caps and font stretch

The rules above imply that the available fonts cover all variations of `italic`, `small-caps` and `font-stretch`. An implementation that only had the minimum installed fonts should present the same (plain) style glyphs for any combination of the styles required by CSS 2.

NOTE: This allows an author to use `font-style: italic, font-weight: bold` etc. in stylesheets without having text so styled appear as missing character glyphs when using Tiresias, but they should be aware that no extra styling information may be displayed.

8.9 Xlet integration

DVB-HTML defines an <object> element that may be used for embedded Xlets. For <object> elements used for embedded Xlets the type should be set to "application/dvbj", the <object> element may contain <param> elements containing run time arguments for the Xlet defined by the <object> element. The sequence of these arguments is mapped to XletContext.ARGS and shall be available to the Xlet, in the form of an array of Strings, by calling:

```
javax.tv.xlet.XletContext.getXletProperty(XletContext.ARGS)
```

If no valid arguments are defined, this method shall return an array of strings with zero elements.

By default the application identifier of Xlets contained in DVB-HTML are the same as that of the enclosing application.

Using the AppID attribute the embedding HTML context can supply a different AppID for the Xlet, thus giving it a different context (e.g for persistent file locations). The value given for the AppID attribute must be one of those given in the DVB-HTML application descriptor (see 10.10.1 on page 231). An Xlet with an AppID assigned by the HTML application is still considered part of the single DVB HTML application, e.g. for inter application communication.

If an Xlet and an embedded Xlet have the same application identifier it is only possible for one to be running at any time. So, if the Xlet has already started then a DVB-HTML application shall not be able to start an embedded Xlet with the same application identifier. Conversely, if the embedded Xlet has already started the Xlet shall not start. Any lifecycle signalling associated with an Xlet with the same application identifier as an embedded Xlet shall not apply to the embedded Xlet. If DVB-HTML application attempts to start an embedded Xlet that has a an application identifier that conflicts with an already running application:

- the embedded Xlet shall not be started
- the already running application is not considered apart of the DVB-HTML application

8.9.1 Object element

When used to include an Xlet inner application the following object element attributes semantics shall apply:

declare: when present, makes the current object definition a declaration only. The object must be instantiated by a subsequent object definition referring to this declaration.

classid: specifies the location of the class that implements the interface javax.tv.xlet.Xlet. Exactly one instance of this Xlet class shall be created. The URI shall be evaluated as relative to the codebase attribute.

codebase: specifies the base URI for the Xlet. Xlet classes are loaded relative to the "directory" specified by this locator. If this attribute is not specified, then it defaults to the same base URI as for the DVB-HTML document carrying the object element. If the URI is not within the application containing the Xlet then the Xlet shall not be loaded.

codetype: specifies the content type of the data referenced by the classid and codebase attributes. In the case of Xlets it will be set to the MIME type for Xlets (application/javatv-xlet).

archive: This is ignored for embedded Xlets.

standby: specifies a message that a user agent may render while loading the objects implementation and data.

height, width: these attributes specify the size of the Xlet's visible representation. If either height or width is zero or negative, then the method javax.tv.graphics.TVContainer.getRootContainer() shall return null.

8.9.2 Param element

The param element is defined for embedding inner application Xlets as follows:

```
<!ELEMENT param EMPTY>
<!ATTLIST param
   id          ID               #IMPLIED
   name        CDATA            #REQUIRED
   value       CDATA            #IMPLIED
   valuetype   (data|ref|object) "data"
   type        CDATA            #IMPLIED
>
```

where the specified attributes are defined as follows:

id: is a unique identifier for the param element. The scope of uniqueness is the document carrying the param element.

name: should be set to either arg_n (case-insensitive), where n is a non negative integer, or, appid.

- Where the name is of the form arg_n this specifies that the value argument contains the value of run time argument number n for the Xlet. If the largest value for n among the param tags is x, then the ARGS array shall contain x+1 elements. If two param elements with the same name are given for an Xlet, the corresponding array element shall contain the value of one of them. Which one is chosen is not specified.

  These arguments are available to an Xlet through XletContex.getXletProprty(XletContext.ARGS) as defined in Java TV [51].

- The appid shall carry a 16 bit bit string (left bit first) encoded as follows:

  ```
  appid = "0x" 4*hex
  hex   = digit | "A" | "B" | "C" | "D" | "E" | "F" | "a" | "b" | "c" | "d" | "e" | "f"
  digit = "0" | "1" | "2" | "3" | "4" | "5" | "6" | "7" | "8" | "9"
  ```

  If more than one parameter tag with the name appid is provided or the value does not correspond to that of one of the application ids listed in the DVB-HTML application descriptor (see 10.10.1 on page 231) the Xlet shall not be started.

value: is the string value of this run time argument.

valuetype: ignored. Xlet arguments can only be strings, so it doesn't make sense to provide values of any other type.

type: ignored. This follows from the treatment of valuetype.

8.9.3 Example

The following is an example of using object and param elements in order to include an Xlet inner application in a DVB-HTML document:

```
<object
   type = "application/dvbj"
   id = "slideShow"
   codetype = "application/javatv-xlet"
   classid = "slideShow.class"
   codebase = "first_xlet/"
   height = "180"
   width = "320">
   <param name = "arg_0" value = "Everest"/>
   <param name = "arg_1" value = "Kilimanjaro"/>
   <param name = "appid" value = "0xbded"/>
</object>
```

8.10 Scripting

ECMAScript is a simple lightweight object-oriented scripting language for manipulating computational objects within a host environment. This specification requires ECMAScript as defined in ECMAScript [81].

8.10.1 DOM 2 binding

This specification requires the DOM 2 binding libraries for the interfaces required in "Document Object Model (DOM)" on page 128 as defined in the respective references.

8.10.2 Interface between ECMAScript and DVB-J

By allowing DVB-J to expose APIs to ECMAScript, applications may be created which are a hybrid of DVB-J and DVB-HTML/ECMAScript. For example, the core engine for a particular application could be implemented in DVB-J and the user interface and graphical content implemented in DVB-HTML/ECMAScript.

8.10.2.1 ECMAScript APIs for accessing DVB-J

Public DVB-J: packages, classes, methods and fields shall be visible in ECMAScript using a property of the global object called Packages. For example, RMI's Naming class would be accessed using Packages.java.rmi.Naming. The java.lang package is accessed using Packages.java.lang. In addition to DVB-J classes, class files located in the codebase as specified by the meta tag described below are also accessible.

Xlets may be accessed via the DOM or accessed via the inter application communication API, see 11.7.3, "Inter-Application and Inter-Xlet communication API" on page 263.

When ECMAScript uses the Packages object to reference a Java class that is not loaded, the codebase is searched for the class file. The codebase is specified using a meta element with a name "codebase" and the "content" specifying the classpath as a base URL, e.g.

```
<meta name="codebase" content="http://mytv.com/sports/">
```

If multiple codebase meta elements are present in the root document, each specified codebase is searched in its order of appearance. If the class is not found, a java.lang.ClassNotFound exception is thrown. Only meta elements on the root document of the DVB-HTML application may specify the codebase; others have no effect.

ECMAScript contexts within an application share a single classloader. This classloader is separate from that of any Xlets that are part of the DVB HTML application.

8.10.2.2 Inter-Xlet and Xlet-ECMAscript Communication via org.dvb.ixc

In MHP, Xlets are allowed to communicate with each other by exporting objects via the org.dvb.io.ixc APIs described in 11.7.3, "Inter-Application and Inter-Xlet communication API" on page 263 and annex Y, "(normative): Inter-application and Inter-Xlet communication API" on page 1261. When an Xlet wishes to export an object so that it is visible to other applications, it is exported under a name formed from a string that contains a unique application identifier, possibly with an arbitrary name appended.

With Xlets embedded in a DVB-HTML document, there is the possibility that there will be multiple active Xlets that are part of the same application. Each such Xlet will have its own classloader (see 8.10.2.1 "ECMAScript APIs for accessing DVB-J"), and will not be able to directly share instances with other Xlets. The Xlets will be able to communicate with each other, using the inter-xlet communication mechanism, accessed through the org.dvb.io.ixc APIs.

The MHP naming convention for exported objects are preserved. The APIs provide two options for exporting objects: Exporting them so that they are only visible within the same application, or exporting them so that they are visible to other applications. In either case, it is possible for two Xlets to export an object under the same name. If this happens, the last object exported shall be the one that is visible; an export from one Xlet might therefore overwrite an export from another that occurred earlier in time. Note that Xlets that are in the same DVB-HTML document (and part of the same application) are expected to be authored to work together, so it is the application author's responsibility to ensure that no harmful overwriting occurs.

8.10.2.3 Security

The DVB-J security model applies to the application as a whole, hence an Xlet embedded in an DVB-HTML document has the privileges of the overall DVB-HTML application. ECMAScript may directly invoke DVB-J with the same permissions as the overall application.

See also 8.14, "Security of DVB-HTML applications" on page 164.

NOTE: ECMAScript can pass both internal and external strings across the bridge to Java, but Java has no way to distinguish between them. Hence, Java code written for use across the bridge should treat such strings as it would any other strings from untrusted sources.

8.10.2.4 Implicit Method Selection

When more than one method signature matches the set of arguments, argument preference is compared for each argument starting with the first, until one signature has a preferred match. Preference is determined from the argument conversion tables in the following section. In those tables, type conversions are listed in decreasing order of preference.

8.10.2.5 Explicit Method Selection

Methods may be selected explicitly by referring to a method as if it were an element of an ECMAScript associative array indexed by the signature, e.g.

```
new Packages["java.lang.String"]["(char[])"](c);
```

8.10.2.6 Static Method Invocation

Static methods of a Java class shall be invocable from ECMAScript either on the JavaClass object or on an instance of the class.

8.10.2.7 Method Signature Matching

Typically, methods invoked from ECMAScript are designed for that purpose and unambiguous. In most cases, it is probably sufficient to leave method selection up to the implementation, however the tables below define both the preferred order used for selecting signatures and the type conversion invoked when an argument is passed.

Method selection is performed similarly to DVB-J. The DVB-J method must:

- be public
- be static or non-static depending on whether the ECMAScript invocation is on the class or on an object, respectively.
- have the same number of arguments
- have arguments with types to which the ECMAScript arguments can be converted according to the tables below.

If these conditions are not met, the DVBException with the error code CONVERSION_TYPE_ERR is raised.

If there is only one DVB-J method matching these criteria, that method is invoked.

If more than one DVB-J method matches, then a method is preferred over another for invocation when the conversion of at least one of its arguments is preferred and the conversion of all other arguments is equivalent or preferred. In cases where no method is preferred over all others, results may be implementation dependent.

8.10.2.8 New ECMAScript Object Types

ECMAScript is a loosely typed language with few fundamental types (mainly: Number, Boolean, String, Object, Null and Undefined). In order to access DVB-J's richer type structure, three new ECMAScript object types are introduced to support values returned from calls to DVB-J.

Table 24 : New ECMAScript Object Types

ECMAScript Object Type	Description
JavaArray	Wrapper for a DVB-J array. Behaves like an ECMAScript array including being indexed by an integer and having a length property
JavaObject	Wrapper for a DVB-J Object. Converting this wrapper to a string, calls the toString() method. Converting to a number calls the doubleValue() method. Converting to a boolean results in true, unless the object is null.
JavaClass	Wrapper for a DVB-J class

8.10.2.9 Type Conversion (ECMAScript to DVB-J)

In the following tables conversions are listed in decreasing order of preference (from top to bottom within the table and from left to right within each table row). Conversions that are not listed are not allowed.

When the ECMAScript parameter is a boolean, conversion is performed as follows:

Table 25 : Conversion from ECMAScript boolean

DVB-J Parameter Type	Conversion from ECMAScript boolean
boolean	Direct conversion.
java.lang.Boolean java.lang.Object	Object of type java.lang.Boolean.
java.lang.String	Converted to "true" or "false".
double, float, long, int, short, char, byte	1, if true. 0, if false.

When the ECMAScript parameter is a number, conversion is performed as follows:

Table 26 : Conversion from ECMAScript number

DVB-J Parameter Type	Conversion from ECMAScript Number
double	Direct conversion with full precision.
java.lang.Double	java.lang.Double created with full precision.
Float	Rounded to float precision. Values out of float range become +infinity or –infinity.
long, int, short, char, byte	Rounded to appropriate precision. Values out of range causes the DVBException with the error code CONVERSION_TYPE_ERR to be raised. Passing NaN causes the DVBException with the error code CONVERSION_TYPE_ERR to be raised.
java.lang.String	Conversion to a string using the ECMAScript toString function.
boolean	Passing NaN causes the DVBException with the error code CONVERSION_TYPE_ERR to be raised. 0 is false. Non-zero is true.
java.lang.Object	java.lang.Double created with full precision

When the ECMAScript parameter is a string, conversion is performed as follows:

Table 27 : Conversion from ECMAScript string

DVB-J Parameter Type	Conversion from ECMAScript string
java.lang.String java.lang.Object	Object of type java.lang.String.
char	If string is a single character, conversion via the ECMAScript charCodeAt() function; otherwise the DVBException with the error code CONVERSION_TYPE_ERR is raised.

When the ECMAScript parameter is undefined, conversion is performed as follows:

Table 28 : Conversion from ECMAScript undefined

DVB-J Parameter Type	Conversion from ECMAScript undefined
java.lang.String java.lang.Object	Object of type java.lang.String with a value of "undefined".
boolean	False
long, int, short, byte, char	Zero
double, float	Nan

When the ECMAScript parameter is null, conversion is performed as follows:

Table 29 : Conversion from ECMAScript null

DVB-J Parameter Type	Conversion from ECMAScript null
Any object	Null
boolean	False
double, float, long, int, short, byte, char	Zero

When the ECMAScript parameter is JavaArray, JavaObject or JavaClass, conversion is performed as follows:

Table 30 : Conversion from ECMAScript DVB-J objects

DVB-J Parameter Type	Conversion from ECMAScript DVB-J Objects
Most specific assignment compatible class.	Unwrap ECMAScript JavaObject to original DVB-J Object. ECMAScript JavaObject is of an incompatible class to the required class the DVBException with the error code CONVERSION_TYPE_ERR shall be raised
java.lang.String	Result of toString().
double, float, long, int, short, char, byte	Result of doubleValue() is taken and converted as a Number to the DVB-J type as above. If no doubleValue() method is defined, causes the DVBException with the error code CONVERSION_TYPE_ERR to be raised.

When the ECMAScript parameter is an ECMAScript Object, conversion is performed as follows:

Table 31 : Conversion from ECMAScript Object

DVB-J Parameter Type	Conversion from ECMAScript Object
java.lang.Object (including subclasses) or interface	If ECMAScript object has all public fields and methods of the DVB-J parameter type, and has been generated as specified in Subclassing and Interface Instance Creation, then the generated DVB-J class is used. Otherwise the DVBException with the error code CONVERSION_TYPE_ERR shall be raised

ECMAScript Arrays are passed as parameters only to Java methods accepting an array as its corresponding argument. An ECMAScript array containing a single element type matches a Java array parameter based on the matching preference of the array element types. An ECMAScript array containing different element types is not convertible to and does not match any Java parameter type.

8.10.2.10 Subclassing and Interface Instance Creation

Instances of an instantiable Java class can be create by using the "new" operator on the Java class, e.g.

```
new Packages.java.lang.String("astring");
```

The parameters are passed to the constructor using the type conversion rules above. This mechanism is extended to allow the creation of instances of classes that must be subclassed to produce an instantiable class. The SubType object is defined and used with a constructor function to allow ECMAScript to construct an instance of a subclass. The Subtype constructor takes a string naming the Java class to be subclassed as its argument, e.g. "java.awt.ActionListener" and an ECMAScript function which acts as a constructor to initialize any abstract elements. Invoking the Subtype constructor on a final Java class shall cause the DVBException with the error code SUBCLASS_NOT_ALLOWED_ERR to be raised. The object returned by the Subtype constructor is a function used to create instances. When this function is used as a constructor, its arguments are passed to the function specified in the Subtype constructor. The function is invoked with the current object being an ECMAScript handle to the JavaObject being instantiated.

Example:

```
function actDone(event) {
   /* My event handling method */
}

function MyListenerConstructor(arg1, arg2) {
   /* if ActionListener had a constructor it could be called here
   * e.g. this.ActionListener(arg2);
   */
   this.ActionPerformed = arg1;
}
MyListenerType = new Subtype("java.awt.ActionListener", MyListenerConstructor);
MyListener = new MyListenerType(actDone, 0);
```

NOTE: This mechanism may be used to create listeners from ECMAScript.

An example of constructing and setting a listener:

```
<script>
   function receiveEvent(x) {
      window.open("http://chat.tv.com/chatLogin?user="+x, _chatFrame);
   }
   function chatConstructor() {
      this.receiveUserPreferenceChangeEvent = receiveEvent;
   }
   chatListenerType = new Subtype("org.dvb.user.UserPreferenceChangeEvent", chatConstructor);
   chatListener = new chatListenerType();

   Packages.org.dvb.user.UserPreferences.addUserPreferenceChangeListener(chatListener);
</script>
```

8.10.2.11 Type Conversion (DVB-J to ECMAScript)

Type conversion of return values occurs as follows:

Table 32 : Conversion from DVB-J types

DVB-J Return Value Type	Conversion to ECMAScript type
double, float, long, short, int, byte, char	Direct conversion to number
boolean	Direct conversion to boolean
array	JavaArray
java.lang.Class	JavaClass
Object wrapped around ECMAScript Object	Direct conversion (unwrapping)

Table 32 : Conversion from DVB-J types

DVB-J Return Value Type	Conversion to ECMAScript type
Other objects (including java.lang.Double, java.lang.Integer and java.lang.String (note 1), java.lang.Exception)	JavaObject (an ECMAScript wrapper around the DVB-J Object providing the same methods and
NOTE 1: The explicit or implicit invocation of the ECMAScript toString() function on the ECMAScript handle to a java.lang.String shall return an external string.	

8.10.2.12 Catching DVB-J Exceptions in ECMAScript

DVB-J exceptions are thrown back into ECMAScript when the underlying DVB-J method throws an exception, or an exception is generated as part of the attempted type conversion from ECMAScript to DVB-J (see type conversions above). For example, the following ECMAScript:

```
try {
        Packages.java.lang.Class.forName("someClass");
} catch (e) {
        print("Exception: " + e);
}
```

would print out something like the following, if someClass does not exist.

Exception: java.lang.ClassNotFoundException: someClass.

8.11 Document Object Model (DOM)

DOM is a platform and language neutral interface that provides programmatic access to the content, structure and style of documents. Support for language bindings for the DOM for both Java language and ECMAScript is required.

Table 33 : Supported DOM modules

DOM Module		Where specified	Required
Package	Feature String		
Level 2 Core	Core	Document Object Model (DOM) Level 2 Core Specification [82]	Yes
	XML		No
Level 2 Views	Views	Document Object Model (DOM) Level 2 Views Specification [86]	Yes
Level 2 Stylesheets	StyleSheets	Document Object Model (DOM) Level 2 Style Specification [85].	No
Level 2 CSS stylesheets	CSS	Document Object Model (DOM) Level 2 Style Specification [85].	No
	CSS2		Yes
Level 2 Events	Events	Document Object Model (DOM) Level 2 Events Specification [84].	Yes
	UIEvents		Yes
	MutationEvents		Yes
DVB-HTML	DVBHTML	See 8.11.4, "DVB-HTML DOM module" on page 135	Yes
DVB Events	DVBEvents	See 8.11.2, "DVB Events DOM module" on page 129	Yes
DVB Key Events	DVBKeyEvents	See 8.11.3, "DVB Key events DOM module" on page 133	Yes
DVB CSS	DVBCSS	See 8.11.8.1, "DVB CSS DOM module" on page 157	Yes
DVB Environment	DVBEnvironment	See 8.11.7, "DVB Environment object module" on page 153	Yes

8.11.1 DOM Level 2 Events

8.11.1.1 Fundamental interfaces

DVB-HTML shall support the events module as defined in Document Object Model (DOM) Level 2 Events Specification [84] (which includes the following interfaces: EventTarget, EventListener, DocumentEvent, Event and EventException).

8.11.1.2 Event interfaces

The following event sets from Document Object Model (DOM) Level 2 Events Specification [84] shall be supported:

- UIEvent
- MutationEvent

It is not required to support the following event sets:

- HTML events

NOTE: Equivalents to the Load and Unload events are provided, see 9.4, "Application activity events" on page 200.

- MouseEvent

  It is recommended that implementations providing support for mouse like devices provide the MouseEvent event set.

8.11.2 DVB Events DOM module

A DOM application can use the hasFeature method of the DOM implementation interface to determine that this module is supported. The feature string for all interfaces listed in this module is "DVBEvents" and the version "2.0".

8.11.2.1 Key events

DVB-HTML will provide the W3C event bindings for keyboard and remote control events in a later release of this specification when the W3C Dom level 3 events specification is finalised. Until such time, scripting will have access to key events as specified in an additional DVB DOM module specified in 8.11.3, "DVB Key events DOM module" on page 133.

in the following DVB-HTML specific manner:

8.11.2.2 Lifecycle events

This section provides the mapping of DVB-HTML life cycle events to the DOM event model.

8.11.2.2.1 Interface DVBLifecycleEvent

The DVBLifecycleEvent interface provides specific contextual information to a DVB-HTML application associated with its lifecycle.

All lifecycle events are delivered to the root element of the document in the root frame of an application and follow the normal event delivery rules in Document Object Model (DOM) Level 2 Events Specification [84]. For clarification, sub-frames which contain the root of separate applications (as described in8.14.3, "Inter application security" on page 172) also have DVB lifecycle events delivered to the corresponding document root. The different types of such events that can occur are detailed under 8.11.2.2.2, "Event definitions" on page 130.

8.11.2.2.1.1 IDL Definition

```
// Introduced in DVB-HTML:
interface DVBLifecycleEvent : Event {
   readonly attribute long detail;
   void initDVBLifecycleEvent(in DOMString typeArg,
      in boolean canBubbleArg,
      in boolean cancelableArg,
      in long detailArg);
};
```

8.11.2.2.1.2 Attributes

detail: This attribute specifies additional information about the event the meaning of which depends on the type of the event.

8.11.2.2.1.3 Methods

Table 34 : DVB Lifecycle Event Method

Method	Name	Description		
	initDVBLifecycleEvent	This method is used to initialize the value of a lifecycle event created through the DocumentEvent interface. This method may only be called before the lifecycle event has been dispatched via the `dispatchEvent` method, though it may be called multiple times during that phase if necessary. If called multiple times, the final invocation takes precedence.		
Parameters	**Name**	**Type**	**Qualifier**	**Description**
	typeArg	DOMString		Specifies the event type. The string is identical to the name of the event (e.g. the AppStarting event is specified with the string "AppStarting").
	canBubbleArg	Boolean		Specifies whether or not the event can bubble.
	cancelableArg			Specifies whether or not the event's default action can be prevented.
	detailArg	Number		Specifies the Event's detail.
Return value	**Type**	**Description**		
No Return Value.				
Exceptions				
No Exceptions.				

8.11.2.2.2 Event definitions

8.11.2.2.2.1 AppStarting

This event is given to the DVB-HTML application whilst in the Active state if and only if it is signalled as PREFETCH. The user agent sends this event when it receives the dvb.start event. After receiving the dvb.start event and prior to sending this event the user agent begins displaying the DVB-HTML application.

- Bubbles: No
- Cancelable: No
- Context Info: None

8.11.2.2.2.2 AppActive

This event is given to the DVB-HTML application on transitioning from the Loading state to the Active state.

- Bubbles: No
- Cancelable: No
- Context Info: detail

The values of detail are those defined in table 80, "DVB-HTML application control code values" on page 216 with the following semantics:

- PREFETCH means that the DVB-HTML application will not be presented by the user agent until the user agent has sent an AppStarting event.
- All other values imply that the DVB-HTML application will not receive an AppStarting event and can assume that presentation has begun.

8.11.2.2.2.3 AppPause

This event is given to the DVB-HTML application on transitioning to the Paused state.

- Bubbles: No
- Cancelable: No
- Context Info: None

8.11.2.2.2.4 AppResume

This event is given to the DVB-HTML application on transitioning out of the Paused state to the Active state.

- Bubbles: No
- Cancelable: No
- Context Info: None

8.11.2.2.2.5 AppDestroyed

This event is given to the DVB-HTML application on transitioning to the Destroyed state.

- Bubbles: No
- Cancelable: No
- Context Info: None

8.11.2.2.2.6 AppKilled

This event is given to the DVB-HTML application on transitioning to the Killed state.

- Bubbles: No
- Cancelable: No
- Context Info: None

8.11.2.2.2.7 AppTerminating

This event is given to a DVB-HTML application when an application within a subframe terminates.

- Bubbles: No
- Cancelable: No
- Context Info: detail

The value of detail is the name of the frame where the terminating application was hosted:

8.11.2.2.3 State transition summary

The following table summarizes the allowed transitions in the lifecycle model (see 9.3.3, "The State Model" on page 196).

State transition	Loading	Active	Paused	Destroyed	Killed
Loading to	no	yes 1	no	yes 2	yes 3
Active to	no	no	yes 4	yes 5	yes 6
Paused to	no	yes 7	no	yes 8	yes 9
Destroyed to	no	no	no	no	yes 10
Killed to	no	no	no	no	no

The following table describes the events delivered to the application following these transitions.

NOTE: In 8 and 9 no AppResume event be received.

cross reference	transition	event delivered
1	Loading to Active	event AppActive on entry to Active state
2	Loading to Destroyed	event AppDestroyed on entry to Destroyed state
3	Loading to Killed	event AppKilled on entry to Killed state
4	Active to Paused	event AppPause on exit from Active state
5	Active to Destroyed	event AppDestroyed on entry to Destroyed state
6	Active to Killed	event AppKilled on entry to Killed state
7	Paused to Active	event AppResume on entry to Active state
8	Paused to Destroyed	event AppDestroyed on entry to Destroyed state
9	Paused to Killed	event AppKilled on entry to Killed state
10	Destroyed to Killed	event AppKilled on entry to Killed state

8.11.2.3 Additional DVB Events

8.11.2.3.1 Trigger events

See 8.7, "Synchronization" on page 92.

8.11.2.3.2 DVBDOMStable event

This event signals the completion of the current document DOM construction. After the receipt of this event the DOM structure of the document will be complete, however the DOM structure in sub-frames or in-line frames may not be complete and resources such as the contents of images may not have finished loading. Prior to the generating the event implementations are free to have an incomplete DOM structure referenced by the document variable.

This event uses the base Event interface to pass contextual information. The following type is allowed:

DVBDOMStable: This event occurs when the DOM implementation is fully constructed, but is not required to wait until all of the associated frames in a <frameset>, content in <image> or <object> elements loads. This event is valid for <body> and <frame> elements.

- Bubbles: No
- Cancelable: No
- Context Info: None

8.11.2.3.3 DVB-HTML events

These events use the base Event interface to pass contextual information. The following types are allowed:

load: The load event occurs when the DOM implementation finishes loading all content within a document, all frames within a <frame>, or an <object> element.

- Bubbles: No
- Cancelable: No
- Context Info: None

unload: The unload event occurs when the DOM implementation removes a document from a window or frame. This event is valid for <body> and <frame> elements.

- Bubbles: No
- Cancelable: No
- Context Info: None

8.11.3 DVB Key events DOM module

A DOM application may use the hasFeature(feature, version) method of the DOMImplementation interface with parameter values "DVBKeyEvents" and "2.0" (respectively) to determine whether or not the event module is supported by the implementation. The feature string is also used with the createEvent method. It is implementation dependent how a MHP gets the set of supported keys.

Key events generated by a real or virtual keyboard or from a remote control device shall be generated by the user agent and can be registered for by applications through the DOM. Registering for events using the type string "HKeyEvent" or "HRcEvent" can place a listener that shall receive an object that implements the DVBKeyEvent interface. All Key events are initially targeted at the element with focus, or the body element if no element has focus

e.g.

```
function myListener(evt) { ... }
node.addListener("HRcEvent", myListener)
```

8.11.3.1 Interface DVBKeyEvent

The DVBKeyEvent interface provides specific contextual information associated with Remote Control and Keyboard Events. The interface is able to describe the representation of a key event as a string, color or symbol (such as a triangle, ">", for "play"). This allows an application to describe a button on an input device correctly for a given platform.

The keyChar attribute describes the representation of a key event as a string. All available events shall have a text representation. Other representations may be available

NOTE: The DVBKeyEvent interface is designed to be compatible with the W3C level 3 DOM key events albeit with some redundancy, and in future versions of the specification it is envisaged that objects will also support the W3C defined interface.

8.11.3.1.1 IDL Definition

// Introduced in MHP 1.1:

```
interface DVBKeyEvent : UIEvent {
readonly attribute unsigned long when;
readonly attribute unsigned long modifiers;
readonly attribute unsigned long keyCode;
readonly attribute DOMString keyChar;
readonly attribute DOMString color;
readonly attribute DOMString symbol;
   void initDVBKeyEvent(in DOMString type,
      in boolean canBubbleArg,
      in boolean cancelableArg,
      in unsigned long modifiers,
      in unsigned long keycode,
);
};
```

8.11.3.1.2 Attributes

Table 35 : Key event attributes

Name	Readonly	Type	Description
when	yes	unsigned long	The timestamp for the event
modifiers	yes	unsigned long	Indication of any modification keys active for the event
keyCode	yes	unsigned long	The key code of the key associates with this event.
keyChar	yes	unsigned long	The character representation of the key associated with this event
color	yes	DOMString	The six coloured key events (VK_COLORED_KEY_0, …, VK_COLORED_KEY_5), if implemented, must also be represented by a color. For all other key events this value should be null. The format of the color is specified in CSS 2 [87] section 4.3.6 Colors.
symbol	yes	DOMString	The URL to an image provided by a MHP to describe the symbol associated with a certain key. The recommended symbols for some Key events are described in HAVi [50]. The value of this attribute can be NULL.

8.11.3.1.3 Methods

Table 36 : Key Event Method

Method	Name	Description		
	initDVBKeyEvent	This method is used to initialize the value of a keyboard event. This method may only be called before the key event has been dispatched via the `dispatchEvent` method, though it may be called multiple times during that phase if necessary. If called multiple times, the final invocation takes precedence.		
Parameters	**Name**	**Type**	**Qualifier**	**Description**
	type	DOMString	-	Either "HRcEvent" or "HKeyEvent"
	canBubbleArg	boolean		Specifies whether or not the event can bubble.
	cancelableArg	boolean		Specifies whether or not the event's default action can be prevented
	modifiers	unsigned long		The modifiers to be applied to the event
	keycode	unsigned long	-	The Keycode of the event to be generated
Return value	**Type**	**Description**		
	-	Initialises the event, all of the attributes shall be set as if this event were generated by the system.		

8.11.4 DVB-HTML DOM module

8.11.4.1 Conformance

A DVB-HTML user agent shall be considered as being an HTML-only DOM implementation as defined in the W3C Document Object Model (DOM) Level 2 Core Specification [82], so that conformance statements in DOM Level 2

applying to those kinds of implementation will apply also to a DVB-HTML user agent. E.g. a DVB-HTML DOM implementation is not required to implement the `createDocument()` method in the `DOMImplementation` interface from the DOM Level 2 Core.

8.11.4.2 Differences from W3C DOM Level 1 HTML interfaces

The W3C DOM 1 HTML interfaces were designed in order to provide convenience functions to manipulate HTML 4.0 documents and also to create documents from scratch. The DOM DVB-HTML module has been defined with the objective to manipulate DVB-HTML documents without any intention to create them. In general, the DOM DVB-HTML module follows the design of the W3C DOM1 HTML interfaces, however the following differences can be observed:

- Some attributes have been made immutable in the DOM DVB-HTML module. These modifications have been indicated in this document.
- Some attributes and interfaces have not been included in the DOM DVB-HTML module.
- For the length attribute in all interfaces, the type has been homogenised to unsigned long.
- Some semantics have been added to clarify user agent behaviour (e.g. on modification of the disabled attribute)
- Some semantics have been altered to take into account the DVB-HTML DTD (e.g.since the `name` attribute is not supported for identification purposes some attribute semantics had to be modified accordingly).

8.11.4.3 Extensions

8.11.4.3.1 Enumerations

In DVB-HTML, some element attributes can be set to a limited number of values. In order to be as much as possible in line with the IDL defined in the W3C DOM 1 HTML, this specification does not use the IDL `enum`. For attributes that take a limited set of values (i.e. an enumeration) the following semantics shall apply:

- If a mutable attribute is set with a value outside of the possible values the DOMException with the error code SYNTAX_ERR is raised and the original value shall be kept.

The bindings reflect this choice, see annex AC, "(normative): ECMAScript Binding" on page 1283 and annex AD, "(normative): Support for DVB-HTML" on page 1296.

8.11.4.3.2 Initial and current values of form controls

Form controls that accept a user input, e.g. text area, option, text, password, checkbox, radio button, have both an initial value and a current value. The names and the types of these values depend on the type of the control. When a control is created, the means by which the initial value is set depends on the control. See the corresponding interface definition 8.11.4.6.6, "DVBHTMLFormElement Interface" on page 143.

When a control is created, the current value is set to the initial value.

The initial value can only be modified by a script. The current value can be modified either by a user interaction or a scripting instruction. If the current value is modified, the display shall be updated to reflect the value changed.

When a form is reset, either by user interaction or by scripting instruction, for each of the controls accepting user input and contained in the form, the current value shall be set to the initial value. The initial value may have been modified between the creation of the control and the reset of the form. As such, the initial value used shall be the value at the time of the reset.

Form controls that do not accept user input, e.g. hidden controls, submit buttons, reset buttons, buttons, submit images, have only one value, a current value. When a control is created, the means by which the current value is set depends on the control. See 8.11.4.6.6, "DVBHTMLFormElement Interface" on page 143. The current value can only be modified by a scripting instruction. In such a case, it is not required to affect the display.

The file input control has a different behaviour from those described above. It accepts a user input but only has a current value. The semantics of the current value of form controls that do not accept user input applies.

8.11.4.4 System aspects

8.11.4.4.1 Access to the document

8.11.4.4.1.1 Java

The DVB DOM Implementation shall implement the org.dvb.dom API as defined in 11.13.1, "Document object model APIs" on page 282. This will provide applications a handle to the DVB-HTML document object model.

8.11.4.4.1.2 ECMAScript

The DVB DOM implementation shall provide to applications a `document` object that represents the current DVB-HTML document.

8.11.4.4.2 DOM DVB-HTML module

A DOM application can use the `hasFeature` method of the `DOMImplementation` interface to determine whether this module is supported or not. The feature string for all the interfaces listed in this module is "DVBHTML" and the version is "2.0".

8.11.4.4.3 DOM modification

8.11.4.4.3.1 DOM access

Any DOM call from the DOM DVB-HTML module shall be synchronous. As such, any subsequent calls can assume that they can operate on a DOM structure updated accordingly to the previous call.

8.11.4.4.3.2 Synchronisation with renderer actions.

Wherever applicable, any required impact on the visual rendering following a DOM call has been described. However, this specification is voluntarily silent on the nature of the relationships between a DOM modification and the renderer, in particular on the synchronisation aspects.

8.11.4.4.3.3 Modifications from the DOM Core

A NO_MODIFICATION_ALLOWED_ERR exception shall be raised when attempting to modify an attribute from the DOM Core which equivalent attribute in the DOM DVB-HTML module is defined to be readonly, e.g. this exception shall be raised when modifying the `type` attribute in the `button` element through the DOM Core.

8.11.4.5 Miscellaneous interfaces

This section describes various utility interfaces of the DOM DVB-HTML module.

8.11.4.5.1 DVB-HTMLCollection Interface

A `DVBHTMLCollection` is a list of DVB-HTML elements. An individual element may be accessed by either ordinal index or the element's `id` attribute.

NOTE: Collections in the DVB-HTML DOM are assumed to be dynamic meaning that they are automatically updated when the underlying document is modified.

8.11.4.5.1.1 IDL Definition

```
interface DVBHTMLCollection {
   readonly attribute unsigned long length;
   Node namedItem(in DOMString name);
   Node item(in unsigned long index);
};
```

The semantics of the attributes and methods associated with this interface are the same as the semantics associated with the `HTMLCollection` interface defined in Document Object Model (DOM) Level 1 Specification [83].

8.11.4.5.2 DVBHTMLDocument Interface

A `DVBHTMLDocument` is the root of the DVB-HTML document hierarchy and holds the entire content. Besides providing access to the hierarchy, it also provides some convenience methods for accessing certain sets of information from the document.

8.11.4.5.2.1 IDL Definition

```
interface DVBHTMLDocument : Document {
   readonly attribute DVBHTMLCollectionanchors;// DVB-HTML Type coherence
   attribute DVBHTMLElementbody;// DVB-HTML Type coherence
   attribute DOMString cookie;
   readonly attribute DOMString domain;
   readonly attribute DVBHTMLCollection forms; // DVB-HTML Type coherence
   readonly attribute DVBHTMLCollection images; // DVB-HTML Type coherence
   readonly attribute DVBHTMLCollection links; // DVB-HTML Type coherence
   readonly attribute DOMString referrer;
   attribute DOMString title;
   readonly attribute DOMString URL;

   void open();
   void close();
   void write(in DOMString text);
   void writeln(in DOMString text);
};
```

The semantics of the attributes and methods associated with this interface are the same as the semantics associated with the `HTMLDocument` interface defined in Document Object Model (DOM) Level 1 Specification [83], with the extensions, restrictions or amendments defined in the following subsections.

8.11.4.5.2.2 Attributes

Table 37 : DVBHTMLDocument attributes

Name	Readonly	Type	Description
anchors	yes	DVBHTMLCollection	As defined in Document Object Model (DOM) Level 1 Specification [83]. Only the return type differs
body	no	DVBHTMLElement	As defined in Document Object Model (DOM) Level 1 Specification [83]. Only the return type differs
domain	yes	DOMString	See domain in 8.16.6, "Domain" on page 182.
forms	yes	DVBHTMLCollection	As defined in Document Object Model (DOM) Level 1 Specification [83]. Only the return type differs
images	yes	DVBHTMLCollection	As defined in Document Object Model (DOM) Level 1 Specification [83]. Only the return type differs
links	yes	DVBHTMLCollection	As defined in Document Object Model (DOM) Level 1 Specification [83]. Only the return type differs
title	no	DOMString	As defined in Document Object Model (DOM) Level 1 Specification [83]. In addition, if the user agent makes this visible, then it shall update the rendering upon modification. This attribute is linked to the <title> element changes to one shall be reflected in the other.

8.11.4.5.2.3 Methods

Table 38 : DVBHTMLDocument open method

Method	Name	Description		
	open()	As defined in Document Object Model (DOM) Level 1 Specification [83] opens the document for writing. This creates a new empty document in the target to which subsequent writes are made. The transition and the rendering of the new document shall not be performed until a call to the close() method. The ECMAScript context which opened the new document cannot be destroyed until it calls document. close(). (note 1)		
Parameters	**Name**	**Type**	**Qualifier**	**Description**
Return value	**Type**	**Description**		
	-	This method does not return a value.		
NOTE 1: document.open() shall not change the URL of the document.				

Table 39 : DVBHTMLDocument close method

Method	Name	Description		
	close()	As defined in Document Object Model (DOM) Level 1 Specification [83]. Rendering of the document is performed as if a link had been followed with that document as a target.		
Parameters	**Name**	**Type**	**Qualifier**	**Description**
Return value	**Type**	**Description**		
	-	This method does not return a value.		

Table 40 : DVBHTMLDocument write method

Method	Name	Description		
	write()	As defined in Document Object Model (DOM) Level 1 Specification [83]. An inline non-deferred script performing document.write() feeds additional strings to the parser. The text is parsed into the document's structure model. These strings are sent to the parser sequenced immediately after the closing script tag of the inline script. See also (, "Implicit document.open()" on page 140).		
Parameters	**Name**	**Type**	**Qualifier**	**Description**
Return value	**Type**	**Description**		
	-	This method does not return a value.		

Table 41 : DVBHTMLDocument writeln method

Method	Name	Description		
	writeln()	As defined in Document Object Model (DOM) Level 1 Specification [83]. An inline non-deferred script performing document.writeln() feeds additional strings to the parser. The text is parsed into the document's structure model. These strings are sent to the parser sequenced immediately after the closing script tag of the inline script. See also (, "Implicit document.open()" on page 140).		
Parameters	**Name**	**Type**	**Qualifier**	**Description**
Return value	**Type**	**Description**		
	-	This method does not return a value.		

Implicit document.open()
If document.write() is called from a deferred script context and the document has not been explicitly opened for writing, the first write() performs an implicit open of the containing document.

Implicit document.close()
If the deferred inline script context which performed an open (explicit or implicit) exits without calling close on the document, the document is closed implicitly.

When a document is trying to access the value of the `forms`, `anchors`, `links` or `images` attributes before the parsing of the document is complete, the returned value shall be the collection of matching elements at the time of the call.

8.11.4.6 DVB-HTML element related interfaces

8.11.4.6.1 DVBHTMLElement Interface

All DVB-HTML element interfaces derive from this class.

8.11.4.6.1.1 IDL Definition

```
interface DVBHTMLElement : Element {
   attribute DOMString className;
   attribute DOMString dir;
   attribute DOMString id;
   attribute DOMString lang;
   attribute DOMString title;
};
```

8.11.4.6.1.2 Attributes

The semantics of the attributes associated with this interface are the same as the semantics associated with the `HTMLElement` interface defined in Document Object Model (DOM) Level 1 Specification [83], with the extensions, restrictions or amendments defined in the following subsection.

Table 42 :

Name	Readonly	Type	Description
dir	no	DOMString	As defined in Document Object Model (DOM) Level 1 Specification [83]. Trying to set this attribute to a value other than the values allowed in HTML 4 [90] shall cause the DOMException with the error code SYNTAX_ERR to be raised.
lang	no	DOMString	As defined in Document Object Model (DOM) Level 1 Specification [83]. Trying to set this attribute to a value other than the values allowed in HTML 4 [90] shall cause the DOMException with the error code SYNTAX_ERR to be raised.

8.11.4.6.2 DVBHTMLAnchorElement Interface

This interface models the anchor element, corresponding to the DVB-HTML `<a>` tag. It represents a source anchor, the `<A>` tag with the `href` attribute, or a destination anchor, the `<a>` tag with the `id` attribute.

8.11.4.6.2.1 IDL Definition

```
interface DVBHTMLAnchorElement : DVBHTMLElement {
   attribute DOMString accessKey;
   attribute DOMString charset;
   attribute DOMString href;
   attribute DOMString hreflang;
   attribute DOMString target; // Diverge from W3C DOM HTML
   attribute DOMString type;

   void blur();
   void focus();
};
```

The semantics of the attributes and methods associated with this interface are the same as the semantics associated with the `HTMLAnchorElement` interface defined in Document Object Model (DOM) Level 1 Specification [83], with the extensions, restrictions or amendments defined in the following subsections.

8.11.4.6.2.2 Attributes

Table 43 :

Name	Readonly	Type	Description
target	no	DOMString	The id of the frame to render the resource designated by the URI in. The semantics of the target attribute in HTML 4 [90] apply with the following modification: all references to the name attribute shall be seen as being references to the id attribute.

8.11.4.6.3 DVBHTMLMapElement Interface

This interface models a client-side image map. See the MAP element definition in HTML 4 [90].

8.11.4.6.3.1 IDL definition

```
interface DVBHTMLMapElement : DVBHTMLElement {
   readonly attribute DVBHTMLCollection areas; // DVB-HTML Type coherence
};
```

The semantics of the attributes associated with this interface are the same as the semantics associated with the `HTMLMapElement` interface defined in Document Object Model (DOM) Level 1 Specification [83], with the extensions, restrictions or amendments defined in the following subsections.

8.11.4.6.3.2 Attributes

Table 44 :

Name	Readonly	Type	Description
areas	yes	DVBHTMLCollection	As defined in Document Object Model (DOM) Level 1 Specification [83]. Its type has been changed to DVBHTMLCollection.

NOTE: The `name` attribute in the map element is deprecated in DVB-HTML. As such, the map is identified only through the `id` attribute.

When a document is trying to access the value of the `areas` attribute before the parsing of the contents of the `map` element is complete, the returned value shall be the collection of matching elements at the time of the call.

8.11.4.6.4 DVBHTMLAreaElement Interface

This interface models an image map area which can triggers an action when the user clicks on it.

8.11.4.6.4.1 IDL Definition

```
interface DVBHTMLAreaElement : DVBHTMLElement {
   attribute DOMString accessKey;
   attribute DOMString alt;
   attribute DOMString href;
   attribute boolean nohref;
   attribute DOMString target; // Diverge from W3C DOM HTML
};
```

The semantics of the attributes associated with this interface are the same as the semantics associated with the `HTMLAreaElement` interface defined in Document Object Model (DOM) Level 1 Specification [83], with the extensions, restrictions or amendments defined in the following subsections.

8.11.4.6.4.2 Attributes

Table 45 :

Name	Readonly	Type	Description
target	no	DOMString	The id of the frame to render the resource designated by the URI in. The semantics of the target attribute in HTML 4 [90] apply with the following modification : all references to the name attribute shall be seen as being references to the id attribute.

8.11.4.6.5 DVBHTMLButtonElement Interface

`DVBHTMLButtonElement` represents the DVB-HTML `<button>` tag.

8.11.4.6.5.1 IDL Definition

```
interface DVBHTMLButtonElement : DVBHTMLElement {
   attribute DOMString accessKey;
   attribute boolean disabled;
   readonly attribute DVBHTMLFormElement form; // DVB-HTML Type coherence
   attribute DOMString name;
   readonly attribute DOMString type;
   attribute DOMString value;

   void blur(); // Introduced in DVB-HTML DOM
   void focus(); // Introduced in DVB-HTML DOM
};
```

The semantics of the attributes and methods associated with this interface are the same as the semantics associated with the `HTMLButtonElement` interface defined in Document Object Model (DOM) Level 1 Specification [83], with the extensions, restrictions or amendments defined in the following subsections.

8.11.4.6.5.2 Attributes

Table 46 :

Name	Readonly	Type	Description
form	yes	DVBHTMLFormElement	As defined in Document Object Model (DOM) Level 1 Specification [83]. Only the return type differs.
value	no	DOMString	The button's current value. It corresponds to the value attribute of the DVB-HTML `<button>` tag but shall be interpreted as a current value (as defined in section 8.11.4.3.2, "Initial and current values of form controls" on page 136).

8.11.4.6.5.3 Methods

Table 47 :

Method	Name	Description		
	blur	Removes focus from this element.		
Parameters	**Name**	**Type**	**Qualifier**	**Description**
	-	-	-	-
Return value	**Type**	**Description**		
	-	-		

Table 48 :

Method	Name	Description		
	focus	Gives focus to this element.		
Parameters	**Name**	**Type**	**Qualifier**	**Description**
	-	-	-	-
Return value	**Type**	**Description**		
	-	-		

8.11.4.6.6 DVBHTMLFormElement Interface

The `DVBHTMLFORMElement` encompasses behaviour similar to a collection and an element. It provides direct access to the contained input elements as well as the attributes of the form element. See the `FORMElement` definition in HTML 4 [90].

8.11.4.6.6.1 IDL Definition

```
interface DVBHTMLFormElement : DVBHTMLElement {
   attribute DOMString action;
   attribute DOMString acceptCharset;
   attribute DOMString enctype;
   readonly attribute DVBHTMLCollection elements; // DVB-HTML Type coherence
   readonly attribute unsigned longlength; // Lengths type coherence
   attribute DOMString method;
   attribute DOMString target; // Diverge from W3C DOM HTML

   void reset();
   void submit();
}
```

The semantics of the attributes and methods associated with this interface are the same as the semantics associated with the `HTMLFormElement` interface defined in Document Object Model (DOM) Level 1 Specification [83], with the extensions, restrictions or amendments defined in the following subsections.

8.11.4.6.6.2 Attributes

Table 49

Name	Readonly	Type	Description
elements	yes	DVBHTMLCollection	As defined in Document Object Model (DOM) Level 1 Specification [83]. Only the type differs
length	yes	unsigned long	As defined in Document Object Model (DOM) Level 1 Specification [83]. Only the type differs
method	no	DOMString	As defined in Document Object Model (DOM) Level 1 Specification [83]. Trying to set this attribute to a value other than the values allowed in HTML 4 [90] shall cause the DOMException with the error code SYNTAX_ERR to be raised.
target	no	DOMString	The id of the frame to render the resource designated by the URI in. The semantics of the target attribute in HTML 4.01 apply with the following modification: all references to the name attribute shall be seen as being references to the id attribute.

When a document is trying to access the value of the `elements` attribute before the parsing of the contents of the `form` element is complete, the returned value shall be the collection of matching elements at the time of the call.

8.11.4.6.7 DVBHTMLFrameElement Interface

8.11.4.6.7.1 IDL Definition

```
interface DVBHTMLFrameElement : DVBHTMLElement {

   readonly attribute Document contentDocument;
   readonly attribute DOMString frameBorder; // Diverge from W3C DOM HTML
   attribute DOMString longDesc;
   readonly attribute DOMString marginHeight // Diverge from W3C DOM HTML
   readonly attribute DOMString marginWidth; // Diverge from W3C DOM HTML
   readonly  attribute DOMString scrolling; // Diverge from W3C DOM HTML
   attribute DOMString src;
};
```

The semantics of the attributes associated with this interface are the same as the semantics associated with the `HTMLFrameElement` interface defined in Document Object Model (DOM) Level 1 Specification [83], with the extensions, restrictions or amendments defined in the following subsections.

8.11.4.6.7.2 Attributes

Table 50

Name	Readonly	Type	Description
frameBorder	yes	DOMString	As defined in Document Object Model (DOM) Level 1 Specification [83]. This attribute has been moved to readonly.
marginHeight	yes	DOMString	As defined in Document Object Model (DOM) Level 1 Specification [83]. This attribute has been moved to readonly.
marginWidth	yes	DOMString	As defined in Document Object Model (DOM) Level 1 Specification [83]. This attribute has been moved to readonly.
scrolling	yes	DOMString	As defined in Document Object Model (DOM) Level 1 Specification [83]. This attribute has been moved to readonly.

8.11.4.6.8 DVBHTMLFrameSetElement Interface

8.11.4.6.8.1 IDL Definition

```
interface DVBHTMLFrameSetElement : DVBHTMLElement {
   readonly attribute DOMString cols; // Diverge from W3C DOM HTML
   readonly attribute DOMString rows; // Diverge from W3C DOM HTML
};
```

The semantics of the attributes associated with this interface are the same as the semantics associated with the `HTMLFrameSetElement` interface defined in Document Object Model (DOM) Level 1 Specification [83], with the extensions, restrictions or amendments defined in the following subsections.

8.11.4.6.8.2 Attributes

Table 51

Name	Readonly	Type	Description
cols	yes	DOMString	As defined in Document Object Model (DOM) Level 1 Specification [83]. This attribute has been moved to readonly.
rows	yes	DOMString	As defined in Document Object Model (DOM) Level 1 Specification [83]. This attribute has been moved to readonly.

8.11.4.6.9 DVBHTMLIFrameElement Interface

8.11.4.6.9.1 IDL Definition

```
interface DVBHTMLIFrameElement : DVBHTMLElement {
attribute DOMString frameBorder;
attribute DOMString longDesc;
attribute DOMString scrolling;
attribute DOMString src;
attribute DVBHTMLDocument contentDocument;
};
```

The semantics of the attributes associated with this interface are the same as the semantics associated with the `HTMLIFrameElement` interface defined in Document Object Model (DOM) Level 1 Specification [83]Attributes

Table 52 : IFrame element attributes

Name	Readonly	Type	Description
contentDocument	no	DVBHTMLDocument	As defined in Document Object Model (DOM) Level 1 Specification [83]. Only the type differs

.

8.11.4.6.10 DVBHTMLImageElement Interface

8.11.4.6.10.1 IDL Definition

```
interface DVBHTMLImageElement : DVBHTMLElement {
   attribute DOMString alt;
   attribute DOMString height; // Extension to W3C DOM HTML
   attribute DOMString longDesc;
   attribute DOMString lowSrc;
   attribute DOMString src;
   readonly attribute DOMString useMap; // Diverge from W3C DOM HTML
   attribute DOMString width;
};
```

The semantics of the attributes associated with this interface are the same as the semantics associated with the `HTMLImageElement` interface defined in Document Object Model (DOM) Level 1 Specification [83], with the extensions, restrictions or amendments defined in the following subsections.

8.11.4.6.10.2 Attributes

Table 53

Name	Readonly	Type	Description
longdesc	no	DOMString	As defined in Document Object Model (DOM) Level 1 Specification [83], A DVB-HTML User Agent may optionally make use of this resource in device specific ways (e.g for accessibility). The externally referenced resource will not form part of the document model.
useMap	yes	DOMString	As defined in Document Object Model (DOM) Level 1 Specification [83]. This attribute has been moved to readonly. The attribute value shall be the id value and not the name value of the associated map element (since the name attribute in the map element is not supported in DVB-HTML)

8.11.4.6.11 DVBHTMLObjectElement Interface

8.11.4.6.11.1 IDL Definition

```
interface DVBHTMLObjectElement : DVBHTMLElement {
attribute DOMString archive;
attribute DOMString code;
attribute DOMString codeBase;
attribute DOMString codeType;
readonly attribute DVBHTMLDocument contentDocument; // Introduced in DVB-HTML:
attribute DOMString data;
attribute boolean declare;
readonly attribute DVBHTMLFormElement form;
attribute DOMString height;
attribute DOMString name;
attribute DOMString standby;
attribute DOMString type;
readonly attribute DOMString useMap;
attribute DOMString width;
};
```

The semantics of the attributes associated with this interface are the same as the semantics associated with the HTMLObjectElement interface defined in Document Object Model (DOM) Level 1 Specification [83], with the addition of the contentDocument attribute defined in the following subsection.

8.11.4.6.11.2 Attributes

Table 54

Name	Readonly	Type	Description
contentDocument	yes	DOMString	The document this object contains, if there is any and it is available, or `null` otherwise.

8.11.4.6.12 DVBHTMLInputElement Interface

8.11.4.6.12.1 IDL Definition

```
interface DVBHTMLInputElement : DVBHTMLElement {

   attribute DOMString accept;
   attribute DOMString accessKey;
   attribute DOMString alt;
   attribute boolean checked; // Extension to W3C DOM HTML
   attribute DOMString defaultValue; // Extension to W3C DOM HTML
   attribute boolean defaultChecked; // Extension to W3C DOM HTML
   attribute boolean disabled; // Extension to W3C DOM HTML
   readonly attribute DVBHTMLFormElement form; // DVB-HTML Type coherence
   attribute long maxLength;
   attribute DOMString name;
   attribute boolean readOnly; // Extension to W3C DOM HTML
   attribute DOMString size;
   attribute DOMString src;
   readonly attribute DOMString type; // Diverge from W3C DOM HTML
   readonly attribute DOMString useMap; // Diverge from W3C DOM HTML
   attribute DOMString value; // Extension to W3C DOM HTML

   void blur();
   void click();
   void focus();
   void select();
};
```

The semantics of the attributes and methods associated with this interface are the same as the semantics associated with the `HTMLInputElement` interface defined in Document Object Model (DOM) Level 1 Specification [83], with the extensions, restrictions or amendments defined in the following subsections.

8.11.4.6.12.2 Attributes

Table 55 : (Sheet 1 of 2)

Name	Readonly	Type	Description
checked	no	boolean	As defined in Document Object Model (DOM) Level 1 Specification [83]; this attribute corresponds to the current value of controls (as defined in section 8.11.4.3.2, "Initial and current values of form controls" on page 136) with attribute type equals to checkbox or radio. It shall be ignored for the other types of control.
defaultChecked	no	boolean	As defined in Document Object Model (DOM) Level 1 Specification [83]; this attribute corresponds to the initial value of controls (as defined in section 8.11.4.3.2, "Initial and current values of form controls" on page 136) with attribute type equals to checkbox or radio. It is initialised by the checked attribute of the <input> tag. It shall be ignored for the other types of control.
defaultValue	no	DOMString	As defined in Document Object Model (DOM) Level 1 Specification [83]; this attribute corresponds to the initial value of controls (as defined in section 8.11.4.3.2, "Initial and current values of form controls" on page 136) with attribute type equals to text or password. It is initialised by the value attribute of the <input> element.
disabled	no	boolean	As defined in Document Object Model (DOM) Level 1 Specification [83]. If set to true, the effects are the following : Input does not receive the focus. Input is not included in the tabbing navigation. Input is not successful. Since the readOnly state is less restrictive than the disabled state, if the disabled attribute is set to true, the control evolves to the disabled state, independently of the readOnly attribute value. If the disabled attribute is set to false, the control will evolve to the readOnly state depending on the value of the readOnly attribute. By default, the attribute value is FALSE.
form	yes	DVBHTMLFormElement	As defined in Document Object Model (DOM) Level 1 Specification [83], only the return type differs.
readOnly	no	boolean	As defined in Document Object Model (DOM) Level 1 Specification [83]. When set to true and textarea is not in the disabled state, the effects are the following : Input receives the focus but cannot be modified by the user. Input is included in the tabbing navigation. Input is successful. Since the readOnly state is less restrictive than the disabled state, if the readOnly attribute is set to true when the disabled attribute is equal to true, the control remains in the disabled state. By default, the attribute value is `FALSE`.
type	yes	DOMString	As defined in Document Object Model (DOM) Level 1 Specification [83]. This attribute has been moved to readonly.

Table 55 : (Sheet 2 of 2)

Name	Readonly	Type	Description
useMap	yes	DOMString	As defined in Document Object Model (DOM) Level 1 Specification [83]. This attribute has been moved to readonly. The attribute value shall be the id value and not the name value of the associated map element (since the name attribute in the map element is not supported in DVB-HTML)
value	no	DOMString	As defined in Document Object Model (DOM) Level 1 Specification [83]. This attribute corresponds to the current value of controls (as defined in section 8.11.4.3.2, "Initial and current values of form controls" on page 136 with attribute type equals to text, password, hidden, submit, reset, button, image, or file. For all the controls, it represents the value of the name/value pair sent to the server when the form containing this control is submitted. This attribute is initialised by the value attribute of the <input> tag.

8.11.4.6.13 DVBHTMLOptionElement Interface

This interface models the `<option>` element.

8.11.4.6.13.1 IDL Definition

```
interface DVBHTMLOptionElement : DVBHTMLElement {
   attribute boolean defaultSelected; // Extension to W3C DOM HTML
   attribute boolean disabled;
   readonly attribute DVBHTMLFormElement form; // DVB-HTML Type coherence
   readonly attribute long index;
   attribute DOMString label;
   attribute boolean selected; // Extension to W3C DOM HTML
   readonly attribute DOMString text;
   attribute DOMString value;
};
```

The semantics of the attributes associated with this interface are the same as the semantics associated with the `HTMLOptionElement` interface defined in Document Object Model (DOM) Level 1 Specification [83], with the extensions, restrictions or amendments defined in the following subsections.

8.11.4.6.13.2 Attributes

Table 56

Name	Readonly	Type	Description
defaultSelected	no	boolean	As defined in Document Object Model (DOM) Level 1 Specification [83]. The initial value is as defined in section 8.11.4.3.2, "Initial and current values of form controls" on page 136. If the option is included in a single choice select, it is initialised to true if the attribute checked is present in the option tag and if this option is the latest option between those contained in the select with the attribute checked set. Its value is false otherwise. If the option is included in a multiple choice select, it is initialised to true if the attribute checked is present in the option tag, false otherwise.
form	yes	DVBHTMLFormElement	As defined in Document Object Model (DOM) Level 1 Specification [83]. Only the return type differs
selected	yes	boolean	As defined in Document Object Model (DOM) Level 1 Specification [83]. The current value is as defined in section 8.11.4.3.2, "Initial and current values of form controls" on page 136.

8.11.4.6.14 DVBHTMLSelectElement Interface

This interface represents the `<select>` control which allows the selection of one or multiple options among a list. Some graphical user agents represent single and multiple selection with different types of widgets. Options can be grouped inside an option group, for presentational reasons, or directly inserted in the selection. Option groups can't be nested.

8.11.4.6.14.1 IDL Definition

```
interface DVBHTMLSelectElement : DVBHTMLElement {
   attribute boolean disabled;
   readonly attribute DVBHTMLFormElement form; // DVB-HTML Type coherence
   readonly attribute unsigned long length; // Lengths type coherence
   readonly attribute boolean multiple; // Diverge from W3C DOM HTML
   attribute DOMString name;
   readonly attribute DVBHTMLCollection options; // DVB-HTML Type coherence
   attribute long selectedIndex;
               // Extension to W3C DOM HTML
   attribute unsigned long size; // Size type coherence
   readonly attribute DOMString type;
   attribute DOMString value;

   void add(in DVBHTMLElement element, in DVBHTMLElement before) raises(DOMException);
   void blur();
   void focus();
   void remove(in long index);
};
```

The semantics of the attributes and methods associated with this interface are the same as the semantics associated with the `HTMLSelectElement` interface defined in Document Object Model (DOM) Level 1 Specification [83], with the extensions, restrictions or amendments defined in the following subsections.

8.11.4.6.14.2 Attributes

Table 57

Name	Readonly	Type	Description
form	yes	DVBHTMLFormElement	As defined in Document Object Model (DOM) Level 1 Specification [83]. Only the return type differs
length	yes	unsigned long	As defined in Document Object Model (DOM) Level 1 Specification [83]. Only the return type differs
multiple	yes	boolean	As defined in Document Object Model (DOM) Level 1 Specification [83]. This attribute has been moved to readonly.
options	yes	DVBHTMLCollection	As defined in Document Object Model (DOM) Level 1 Specification [83]. Only the return type differs.
selectedIndex	no	long	The ordinal index of the selected option, starting from 0. The value -1 is returned if no element is selected. If multiple options are selected, the index of the first selected option is returned. Upon modification, the display shall be affected.
size	no	unsigned long	As defined in Document Object Model (DOM) Level 1 Specification [83]. Only the return type differs.

When a document is trying to access the value of the `options` attribute before the parsing of the contents of the `select` element is complete, the returned value shall be the collection of matching elements at the time of the call.

8.11.4.6.15 DVBHTMLTextAreaElement Interface

This interface represents a multiline text area. It refers to the `<textarea>` DVB-HTML tag.

8.11.4.6.15.1 IDL Definition

```
interface DVBHTMLTextArea : DVBHTMLElement {
   attribute DOMString accessKey;
   readonly attribute unsigned long cols; // Diverge from W3C DOM HTML
   attribute DOMString defaultValue;
               // Extension to W3C DOM HTML
   attribute boolean disabled; // Extension to W3C DOM HTML
   readonly attribute DVBHTMLFormElement form; // DVB-HTML Type coherence
   attribute DOMString name;
   attribute boolean readOnly // Extension to W3C DOM HTML
   readonly attribute unsigned long rows; // Diverge from W3C DOM HTML
   readonly attribute DOMString type;
   attribute DOMString value; // Extension to W3C DOM HTML

   void blur();
   void focus();
   void select();
}
```

The semantics of the attributes and methods associated with this interface are the same as the semantics associated with the `HTMLTextAreaElement` interface defined in Document Object Model (DOM) Level 1 Specification [83], with the extensions, restrictions or amendments defined in the following subsections.

8.11.4.6.15.2 Attributes

Table 58

Name	Readonly	Type	Description
cols	yes	unsigned long	As defined in Document Object Model (DOM) Level 1 Specification [83]. Only the return type differs and it has been moved to readonly.
defaultValue	no	DOMString	As defined in Document Object Model (DOM) Level 1 Specification [83]. The initial value (as defined in section 8.11.4.3.2, "Initial and current values of form controls" on page 136) is initialised by the text inserted between the start and end tags of the element.
disabled	no	boolean	As defined in Document Object Model (DOM) Level 1 Specification [83]. If set to true, the effects are the following : - Textarea does not receive the focus. - Textarea is not included in the tabbing navigation. - Textarea is not successful. Since the readOnly state is less restrictive than the disabled state, if the disabled attribute is set to true, the control evolves to the disabled state, independently of the readOnly attribute value. If the disabled attribute is set to false, the control will evolve to the readOnly state depending on the value of the readOnly attribute. By default, the attribute value is FALSE.
form	yes	DVBHTMLFormElement	As defined in Document Object Model (DOM) Level 1 Specification [83]. Only the return type differs.
readOnly	no	boolean	As defined in Document Object Model (DOM) Level 1 Specification [83]. If set to true and textarea is not in the disabled state, the effects are the following : - Textarea receives the focus but cannot be modified by the user. - Textarea is included in the tabbing navigation. - Textarea is successful. Since the readOnly state is less restrictive than the disabled state, if the readOnly attribute is set to true when the disabled attribute is equal to true, the control remains in the disabled state. By default, the attribute value is `FALSE`.
rows	yes	unsigned long	As defined in Document Object Model (DOM) Level 1 Specification [83]. Only the return type differs and it has been moved to readonly.
value	no	DOMString	As defined in Document Object Model (DOM) Level 1 Specification [83]. The current value is as defined in section 8.11.4.3.2, "Initial and current values of form controls" on page 136.

8.11.5 DVB Exceptions

DOM operations may raise exceptions in "exceptional" circumstances. In general, DVB-HTML will raise exceptions defined by Document Object Model (DOM) Level 2 Core Specification [82], however certain methods in DVB-HTML raise other exceptions under other circumstances.

In DVB-HTML the `DVBException` is defined, this is in addition to the DOMException of DOM 2 and defines additional error codes.

NOTE: The error codes defined for DVBException are defined so as not to clash with those defined for DOMException, however the W3C retains the right to define additional codes for DOMException which may conflict with DVBException in the future. To avoid conflicts the programmer may use typeof: the DVBException, as a host object, has a defined type different to that of DOMException.

8.11.5.1 DVBException

The value returned by the **typeof** operator for DVBException shall be "**dvbexception**".

8.11.5.1.1 IDL Definition

```
exception DVBException {
unsigned short code;
};


// ExceptionCode
// Introduced in DVB-HTML:
const unsigned short NON_CONFORMANT_ERR = 601;
const unsigned short SECURITY_VIOLATION_ERR = 602;
const unsigned short WINDOW_NOT_FOUND_ERR = 603;
const unsigned short SUBCLASS_NOT_ALLOWED_ERR = 604;
const unsigned short CONVERSION_TYPE_ERR = 605;
```

ExceptionCode: An integer indicating the type of error generated.

Other numeric codes are reserved by DVB for possible future use.

8.11.5.1.2 Defined Constants

NON_CONFORMANT_ERR: An operation attempted to alter the DOM in such a way as would make the document non conformant.

SECURITY_VIOLATION_ERR: An operation failed because the application did not have sufficient permission to perform it.

WINDOW_NOT_FOUND_ERR: The application attempted to open a window which was not part of the application.

SUBCLASS_NOT_ALLOWED_ERR: The application attempted to subclass a final class.

CONVERSION_TYPE_ERR: The application attempted to subclass a final class.

8.11.6 Language bindings

8.11.6.1 ECMAScript Binding

See annex AC, "(normative): ECMAScript Binding" on page 1283.

8.11.6.2 Java Binding

See annex AD, "(normative): Support for DVB-HTML" on page 1296.

8.11.7 DVB Environment object module

A DOM application can use the hasFeature method of the DOM implementation interface to determine that this module is supported. The feature string for all interfaces listed in this module is "DVBEnvironment" and the version "2.0".

8.11.7.1 Free variables

DVB-HTML shall support ECMAScript access to certain APIs is through a number of variables, which get bound in each page context:

- document
- navigator
- window

Each DVB-HTML application shall see different Navigator, Document and Window objects, Only one Navigator object is created per application lifetime (therefore properties may be set on the Navigator object which persist for the lifetime of the application). The navigator variable is bound to this object in each page context.

Windows and Document are initialized on an as needed basis, Document is valid during and after parsing of the document and is bound to the variable document.

Each window is associated with a single document, there may be more than one extant window object per DVB-HTML application, however multiple window support is included only for frames. There shall be at most one top level window per DVB-HTML application (see CSS 2 [87]).

The window variable is initialized to the immediately containing window for a document.

8.11.7.2 Environmental host objects

8.11.7.2.1 Navigator Object

Represents the browser itself, the navigator free variable is of this type. This is supported in DVB-HTML with the following attributes and methods.

8.11.7.2.1.1 IDL Definition

```
interface Navigator {
   readonly attribute String appCodeName;
   readonly attribute String appName;
   readonly attribute String appVersion;
   readonly attribute String userAgent;
};
```

8.11.7.2.1.2 Attributes

Table 59 : Navigator Object Attributes

appCodeName	Readonly	Specifies the code name of the browser with the value specified in the BNF in 8.13.1, "User agent strings" on page 163
appName	Readonly	Specifies the name of the browser, the value shall be "DVB-HTML".
appVersion	Readonly	Specifies version information for the Navigator with the value specified in the BNF in 8.13.1, "User agent strings" on page 163
userAgent	Readonly	Specifies the user agent header See 8.13.1, "User agent strings" on page 163

8.11.7.2.2 Window object

Represents a top-level browser window or a frame. There is only one top-level window per DVB-HTML application, (i.e. whose parent is NULL). Other window objects in an application represent frames in a frameset.

The top level Window object of an application is created in the CSS initial containing block for the application. The viewport and containing block of the application are controlled by the stylesheet associated with the current document held by the top level Window object. Other Window objects are shaped by the frameset rules.

Window is supported in DVB-HTML with the following attributes and methods.

8.11.7.2.2.1 IDL Definition

```
interface Window {
   readonly attribute DVBHTMLDocument document;
   readonly attribute DOMImplementation implementation;
   readonly attribute DVBHTMLCollection frames;
   readonly attribute unsigned long length;
   attribute Location location;
   readonly attribute String name;
   readonly attribute Navigator navigator;
   readonly attribute Window parent;
   readonly attribute Window window;
   readonly attribute Window self;
   attribute String status;
   attribute String defaultStatus;
   readonly attribute Window top;
   void clearTimeout(in unsigned long timerId);
   Window open(in String url, in String name, in String features);
   unsigned long setTimeout(in String statement, in unsigned long delay);
}
```

8.11.7.2.2.2 Attributes

The following attributes are supported:

Table 60 : Window Object Attributes (Sheet 1 of 2)

Attribute	Modifier	Semantics
closed	Readonly	Specifies whether a window has been closed.
document	Readonly	Contains information on the current document. Returns an object of type DVBHTMLDocument.
implementation	Readonly	Supplies the method to bootstrap into the DOM interfaces.
frames	Readonly	An array reflecting all the frames in a window containing documents from the current application. Frames that belong to another application shall not appear in the collection.
location	Readwrite	Contains information on the URL used to request the current document. Setting the value of window.location sets the href value of the window's associated location object, and causes the window to navigate to the URL. Note that the **requested** URL is stored in window.location and this may be different than the **actual** URL of the delivered document, which is stored in document.URL. If a string is used to set the location field, then it is converted to a Location. If the string is not a well formed URL, or the user agent is unable to navigate to it the location is unchanged. Setting this string to the "exit:" locator (see 8.16.5.2, "Exit locator" on page 182) shall cause termination as defined in 9.3.3.5, "Killed" on page 199.
name	Readwrite	A unique name used to refer to this window.
length	Readonly	the length of the frames collection
parent	Readonly	Returns the Window whose frameset contains the current frame or NULL if the window is the outer most window. A frame may return NULL for this attribute for security reasons (see 8.14.3, "Inter application security" on page 172)
status	Readwrite	Specifies a priority or transient message in the window's status bar. (note it is not required this actually be displayed anywhere – but calling it must cause no harm)
defaultStatus	Readwrite	The default message for the status bar (note it is not required this actually be displayed anywhere – but calling it must cause no harm).

Table 60 : Window Object Attributes (Sheet 2 of 2)

Attribute	Modifier	Semantics
top	Readonly	A synonym for the topmost browser window. The value of this attribute shall be NULL if the referenced frame is not available for security.
self	Readonly	Returns the current Window
document	Readonly	Returns the document instance the window is displaying. If the document is inaccessible due to security reasons (see 8.14.3, "Inter application security" on page 172) then shall return NULL.
navigator	Readonly	Returns the Navigator object for the application

8.11.7.2.2.3 Methods

The following methods are supported:

Table 61 : Window open method

Method	Name	Description		
	open	Sets the document of the specified window to a new resource		
Parameters	**Name**	**Type**	**Qualifier**	**Description**
	url	String	in	The location of the document to display in the new window.
	name	String	in	The target frame within the frameset or the top level window.
	features	String	in	unused
Return value	**Type**	**Description**		
	Window	This method returns the Window object in which the document has been opened.		

:

Table 62 : Window setTimeout method

Method	Name	Description		
	setTimeout	Evaluates an expression or calls a function once after a specified number of milliseconds has elapsed. When the document is replaced then all timeouts on the window are cleared.		
Parameters	**Name**	**Type**	**Qualifier**	**Description**
	statement	String	in	The piece of ECMAScript to be evaluated.
	delay	unsigned long	in	The length of time to wait before executing the statement in milliseconds.
Return value	**Type**	**Description**		
	unsigned long	This method returns a timerId that uniquely identifies the timer.		

Table 63 : Window clearTimeout method

Method	Name	Description		
	clearTimeout	Cancels a timeout that was set with the setTimeout method. When the document is replaced then all timeouts on the window are cleared		
Parameters	**Name**	**Type**	**Qualifier**	**Description**
	timerId	unsigned long	in	The id of the timer to clear as returned by setTimount.
Return value	**Type**	**Description**		
	none	This method does not return a value.		

8.11.7.2.3 Location object.

A convenience element that parses URIs. Is used in the location field of the window object.

8.11.7.2.3.1 IDL Definition

```
interface Location {
attribute DOMString hash;
attribute DOMString host;
attribute DOMString hostname;
attribute DOMString href;
attribute DOMString pathname;
attribute DOMString port;
attribute DOMString protocol;
attribute DOMString search;

};
```

8.11.7.2.3.2 Attributes

Table 64 : Location Object Attributes

Attribute	Modifier	Semantics
hash	Readwrite	The portion of the URI after and including the '#' symbol
host	Readwrite	The hostname and port of the URI
hostname	Readwrite	The hostname (without the port) of the URI.
href	Readwrite	The complete URI.
pathname	Readwrite	The pathname portion of the URI.
port	Readwrite	The port of the URI.
protocol	Readwrite	The protocol portion of the URI.
search	Readwrite	The portion of the URI after and including the '?' symbol, not including the hash portion.

8.11.8 CSS Support

8.11.8.1 DVB CSS DOM module

DVB-HTML does not require support for the DOM-2 CSS modules, however it does require support of the this simpler CSS module. A DOM application can use the hasFeature method of the DOM implementation interface to determine that this module is supported. The feature string for all interfaces listed in this module is "DVBCSS" and the version "2.0".

8.11.8.1.1 DVBCSSInlineStyle

DVBInlineStyle: This interface shall be implemented by objects that implement the Element interface (see Document Object Model (DOM) Level 2 Core Specification [82]), and which represent elements that support the style attribute.

A DVB-HTML user agent may support the DOM-2 CSS module, in which case this interface shall be replaced by ElementCSSInlineStyle, however in such a case the CSS2Properties interface shall also be implemented, and the object returned by the style attribute on ElementCSSInlineStyle shall also implement the CSS2Properties interface

8.11.8.1.1.1 IDL Definition

```
// Introduced in MHP1.1:
interface DVBCSSInlineStyle {
readonly attribute CSS2Properties style;
};
```

8.11.8.1.1.2 Attributes

Style of type CSS2Properties as defined in section 2.3 of Document Object Model (DOM) Level 2 Style Specification [85].

8.11.8.1.2 DVBCSSStyle

DVBCSSStyle: This interface shall be implemented by objects that implement the Element interface (see Document Object Model (DOM) Level 2 Core Specification [82]), that represent the root element of a document.

8.11.8.1.2.1 IDL Definition

```
// Introduced in MHP1.1:
interface DVBCSSStyle {
readonly attribute DVBCSSViewportRule viewport;
};
```

8.11.8.1.2.2 Attributes

viewport of type DVBCSSViewportRule, If the document containing the element is not in a root window this attribute shall be NULL, if it is in the root window then this attribute shall return an object that implements the DVBCSSViewportRule interface.

8.11.8.1.3 DVBCSSViewportRule

DVBCSSViewportRule: The DVBCSSviewportRule interface represents a @viewport rule within a CSS style sheet. The @viewport rule is used to specify the on screen regions and relationship to video of an DVB-HTML application.

8.11.8.1.3.1 IDL Definition

```
// Introduced in MHP 1.1:
interface DVBCSSViewportRule : CSSRule {
   readonly attribute DVBCSSViewportProperties style;
};
```

8.11.8.1.3.2 Attributes

style: of type DVBCSSViewportProperties, readonly. An object that represents all the properties of the active viewport.

8.11.8.1.4 DVBCSSViewportProperties

DVBCSSViewportProperties: The CSS2Properties interface represents a mechanism for retrieving and setting properties within a viewport. The attributes of this interface correspond to all the properties specified in 8.8.5.3.2, "The @viewport rule" on page 107.

8.11.8.1.4.1 IDL Definition

```
// Introduced in MHP1.1:
interface DVBCSSViewportRule {
readonly attribute DOMSting pseudoClass;
attribute DOMString area;
attribute DOMString[] backgroundVideoTransform;
attribute DOMString[] backgroundVideo;
attribute DOMString[] backgroundVideoPreserveAspect;
attribute DOMString[] backgroundVideoClip;
attribute DOMString[] backgroundVideoRectangle;
attribute DOMString background;
attribute DOMString backgroundImageRectangle;
attribute DOMString initial;
attribute Number verticalResolution;
attribute Number horizontalResolution;
attribute DOMString scene;
};
```

8.11.8.1.4.2 Attributes

Table 65 : Location Object Attributes

Attribute	Modifier	Semantics
pseudoClass	Readonly	See the `pseudoClass` property definition in 8.8.5.3.2, "The @viewport rule" on page 107. Exception: NO_MODIFICATION_ALLOWED_ERR: Raised on any attempt to set this property.
area	Readwrite	See the `area` property definition in 8.8.5.3.2, "The @viewport rule" on page 107. Exception: SYNTAX_ERR: Raised if the new value has a syntax error and is unparsable.
backgroundVideoTransform	Readwrite	See the `backgroundVideoTransform` property definition in 8.8.5.3.2, "The @viewport rule" on page 107. Exception: SYNTAX_ERR: Raised if the new value has a syntax error and is unparsable. (note 1)
backgroundVideo	Readwrite	See the `backgroundVideo` property definition in 8.8.5.3.2, "The @viewport rule" on page 107. Exception: SYNTAX_ERR: Raised if the new value has a syntax error and is unparsable. (note 1)
backgroundVideoPreserveAspect	Readwrite	See the `backgroundVideoPreserveAspect` property definition in 8.8.5.3.2, "The @viewport rule" on page 107. Exception: SYNTAX_ERR: Raised if the new value has a syntax error and is unparsable. (note 1)
backgroundVideoClip	Readwrite	See the `backgroundVideoClip` property definition in 8.8.5.3.2, "The @viewport rule" on page 107. Exception: SYNTAX_ERR: Raised if the new value has a syntax error and is unparsable. (note 1)
backgroundVideoRectangle	Readwrite	See the `backgroundVideoRectangle` property definition in 8.8.5.3.2, "The @viewport rule" on page 107. Exception: SYNTAX_ERR: Raised if the new value has a syntax error and is unparsable. (note 1)
background	Readwrite	See the `background` property definition in 8.8.5.3.2, "The @viewport rule" on page 107. Exception: SYNTAX_ERR: Raised if the new value has a syntax error and is unparsable. (note 1)
backgroundImageRectangle	Readwrite	See the `backgroundImageRectangle` property definition in 8.8.5.3.2, "The @viewport rule" on page 107. Exception: SYNTAX_ERR: Raised if the new value has a syntax error and is unparsable. (note 1)
initial	Readwrite	See the `initial` property definition in 8.8.5.3.2, "The @viewport rule" on page 107. Exception: SYNTAX_ERR: Raised if the new value has a syntax error and is unparsable.
verticalResolution	Readwrite	See the `verticalResolution` property definition in 8.8.5.3.2, "The @viewport rule" on page 107. Exception: SYNTAX_ERR: Raised if the new value has a syntax error and is unparsable.
horizontalResolution	Readwrite	See the `horizontalResolution` property definition in 8.8.5.3.2, "The @viewport rule" on page 107. Exception: SYNTAX_ERR: Raised if the new value has a syntax error and is unparsable.
NOTE 1: Note this attribute is an array of values, one for each defined background plane		

8.12 Cookie support

8.12.1 DOM Cookie Interface

The cookie attribute of the document (see section 8.11.4.5.2, "DVBHTMLDocument Interface" on page 138) provides an interface to the set of attribute-value pairs described in RFC 2109 [96].

The cookie attribute of document is a read/write string with the following behaviour:

a) The attribute may be assigned a string value `set-cookie` obeying the following BNF, where ALPHA and DIGIT are as specified in RFC 2616 [40]:

```
set-cookie= cookie
cookie= av-pair
        ["; expires=" [ rfc1123-date ] ]
        ["; path=" [ path ] ]
        ["; domain=" [ domain] ]
        ["; secure" ]
        ["; dvb-scope=" [ dvb-scope ]]
av-pair= attr ["=" value ]
attr  = 1*(ALPHA | DIGIT | aspecials)
aspecials= ( "!" | "#" | "$" | "&" | "'" | "*" | "+" | "-"
           | "." | "_" | "`" | "|" | "~" | "%" )

value = 1*(ALPHA | DIGIT | special | vspecials)
vspecials = "(" | ")" | "<" | ">" | "@" | "," | ":" | "\" | <"> | "/"
          | "[" | "]" | "?" | "=" | "{" | "}" | SP  | HT

path   = 1*(ALPHA | DIGIT | aspecials)
domain = 1*(ALPHA | DIGIT | aspecials)
dvb-scope = "App" | "Org" | "All"
```

rfc1123-date is the subset of the RFC 1123 [97] date format as specified in RFC 2616 [40] (HTTP 1.1).

```
rfc1123-date = wkday ", " SP date1 SP time " GMT"
wkday       = "Mon" | "Tue" | "Wed" | "Thu" | "Fri" | "Sat" | "Sun"
date1       = 2DIGIT SP month SP 4DIGIT
time        =  2DIGIT ":" 2DIGIT ":" 2DIGIT
month       =    "Jan" | "Feb" | "Mar" | "Apr"| "May" | "Jun"
               | "Jul" | "Aug" | "Sep" | "Oct"| "Nov" | "Dec"
```

b) If an expiration is not specified, the lifetime of the cookie is that of the DVB-HTML application.

c) When read the attribute returns a string `get-cookie` consisting of the av-pairs for all cookies that have not expired and are within the scope of the current document.

```
get-cookie  =  av-pair *(";" av-pair)
```

Note: If the same attribute is specified for multiple paths that apply to the current document, the attribute appears in multiple av-pairs.

Note: "%" is a legal character in values. As defined in RFC 2109 [96] characters not allowed in values may be escaped using "% HEX HEX", there is no special handling of this escaping by the ECMAScript API.

8.12.2 Cookie Storage and Lifetime

8.12.2.1 Cookie Storage Limits

An implementation should attempt to meet the minimum implementation limits of RFC 2109 [96] including (although not necessarily simultaneously) at least 20 cookies of 4096 bytes. The size is the total required for the cookies and all attributes stored as strings.

8.12.2.2 Cookie Persistence

If the application requests permission for access to persistent storage, this is granted and persistent storage is available, an implementation should attempt to store cookies until they expire. If the application does not have permission for persistent storage or the storage is not available then cookies shall persist only for the lifetime of the DVB-HTML application.

8.12.2.3 Privacy Considerations

Notwithstanding any other requirements in this section, an implementation may provide mechanisms for controlling the extent of cookie support, including which, if any, cookies are stored, temporarily or persistently.

8.12.3 Cookie Scoping

8.12.3.1 General Rules

All cookies are scoped by dvb-scope. The dvb-scope limits cookies to being accessible by pages in applications of a particular organization (dvb-scope=Org), by pages with a particular Application Identifier (dvb-scope=App) or by pages within all applications (dvb-scope=All). When not specified, the dvb-scope defaults to App. Cookies of unsigned applications are always scoped to App. Cookies with different scoping are stored separately and reported separately both through the DOM and when transmitted to a server. Setting a cookie with the same scoping as an existing one causes the replacement of the existing one.

8.12.3.2 Documents delivered via DSM-CC Object Carousel

Cookies set via the DOM on pages delivered by DSM-CC carousel transport are never sent back to a server, even when http: URLs are within the application boundary. The domain, path and secure attributes are ignored for such cookies.

8.12.3.3 Documents delivered via HTTP transport

Cookies associated with pages delivered by http: shall be scoped by domain and path in addition to scoping by their dvb-scope. If the domain is specified, the cookie is only accessible to pages delivered from hosts within that domain. The default domain is the host name of the http server which delivered the page.

If the path is specified, the associated cookie is only accessible to pages in directories under that path.

Domain and path matching are performed per RFC 2109 [96] with the exception that a host match is generated if either the domain string or the domain string with a period prepended to it would generate a match with the basic algorithm.

NOTE: the modified matching algorithm provides both domain compatibility with cookies whose domain is set from the DOM or from HTTP 1.0 or 1.1 servers that only support Netscape cookie protocol. In both cases, leading dots are frequently left off.

Setting a cookie with a domain or path for which the current page is out of scope has no effect and the cookie is discarded.

Cookies with the secure attribute specified shall only be sent over secure, HTTPS connections.

8.12.4 HTTP Cookie Support

8.12.4.1 Background

The MHP profile of HTTP 1.0 profile allows both HTTP 1.0 and HTTP 1.1 transport (see 6.3.7.2, "MHP profile of HTTP 1.0" on page 58). In order for cookie transport to work with existing HTTP 1.0 servers, support for "Netscape" cookie receipt is required. Cookie transmission can always be done with RFC 2109 [96] format since most servers will consider the $Version and $Path attributes as unknown cookies and ignore them.

8.12.4.2 Sending Cookies

The client shall send cookies per RFC 2109 [96] and for compatibility with older servers, DVB-HTML implementations should use semi-colons to separate cookies rather than commas (both are allowed by RFC 2109 [96]). Only cookies in the scope of the document, including any dvb-scope restrictions, are sent.

8.12.4.3 Receiving Cookies

The client shall accept cookies via a Set-Cookie header in the HTTP response. The format of the contents of that header may be either in RFC 2109 [96] format or in "Netscape" cookie format, where Netscape format is that specified by the set-cookie BNF from the DOM description above.

8.13 HTTP User Agent String Support

Requests from the DVB-HTML user agent shall include an HTTP header of the form:

User-Agent: <user-agent>

where <user-agent> is the DVB-HTML user agent string.

8.13.1 User agent strings

8.13.1.1 Current user agent-related strings

Current examples (from the internet) of the user agent string are shown in the following table.

Table 66 : Internet user agent string examples

Field	Netscape Navigator	Internet Explorer on Win2K
userAgent	Mozilla/4.7 [en] (WinNT; U)	Mozilla/4.0 (compatible; MSIE 5.01; Windows NT 5.0)
appCodeName	Mozilla	Mozilla
appVersion	4.7 [en] (WinNT; U)	4.0 (compatible; MSIE 5.01; Windows NT)
appName	Netscape	Internet Explorer

The last three of these appear as properties on the navigator object. The properties `appCodeName` and `appVersion` are derived from the user agent string as reflected in the BNF. The user agent string generally has the BNF format. The `appName` is independent of the user agent string and its value shall always be "DVB-HTML" (see 8.11.7.2.1, "Navigator Object" on page 154).

8.13.1.2 User agent string BNF

Adopting "Mozilla" as the appCodeName provides no interoperability benefit, and in fact would be incorrect as the DVB HTML user agent is not required to be Mozilla compliant. In general, the user agent string is best kept short, since it is sent with every HTTP request, hence it is reasonable to use abbreviations where appropriate.

The following BNF illustrates the user agent string that should be used:

```
userAgent ::= appCodeName "/" appVersion
appCodeName::= "DVB-HTML"
appVersion ::= appVersionNumber " (" identifiers ")"
appVersionNumber::= major "." minor "." micro
major::= [0-9]+
minor::= [0-9]+
micro::= [0-9]+
identifiers::= [ profileIdentifier ]+ [ "; " mhpIdentifier ]*
profileIdentifier ::= profileName " " major "." minor "." micro
profileName::= "eb" | "ib" | "ia"
mhpIdentifier::= [^;()]+
```

The syntax for the `major`, `minor` and `micro` elements are equal to the properties with the same names defined in 11.9.3, "Profile and version properties" on page 270. The values for these properties are specified in 16.1, "System constants" on page 365. mhpIdentifiers may be used to indicate optional features in the MHP implementation.

For example:

```
DVB-HTML/1.1.0 (eb 1.1.0; ipm)
```

Indicates an enhanced broadcast profile, with optional ip multicast support.

8.14 Security of DVB-HTML applications

8.14.1 Authentication of DVB-HTML files

DVB-HTML is subject to the same security model as DVB-J applications, that is a permissions file is associated with authenticated applications; unauthenticated applications operate within a sandbox environment, which means certain forms of locators will not operate, and certain APIs will not be available to ECMAScript.

Authenticated applications may be granted permission to use the restricted locators and APIs.

User Agents shall interpreting signed applications shall only make available the following file types to that application if they are signed by the same leaf certificate:

- DVB-HTML
- ECMAScript
- CSS
- Inner application files (for DVB-J class files see 11.2.3, "Class Loading" on page 241)

Locators that are disabled due to security restrictions will behave as if the resource pointed to is unavailable.

ECMAScript API calls that fail due to security restrictions will generate the DVBException with the error code SECURITY_VIOLATION_ERR.

8.14.2 Runtime code extension

8.14.2.1 Security principles

In order to address the security issues that arise with runtime code extension:

a) ECMAScript platforms shall permit the use of any of the ECMAScript runtime code extension techniques listed below for unauthenticated applications or authenticated applications running in the sandbox

b) ECMAScript platforms shall permit the restricted use of runtime code extension techniques for authenticated applications running outside of the sandbox, where by restricted use is meant that the input to runtime code extension derives only from an appropriately authenticated source (see "Extensions to ECMAScript for trusted executable code" on page 165)

c) ECMAScript platforms shall not permit the removal of pre-defined properties of host objects;

d) ECMAScript platforms shall not permit the replacement of a pre-defined function property of a host object.

8.14.2.1.1 Uses of runtime code extension in ECMAScript

The ECMAScript language supports runtime code extension by means of the following separate mechanisms:

- the `eval()` function property of the global object;
- the `Function` object.

In addition, the following mechanisms support runtime code extension through the following host object (platform) facilities:

- the `write()` function property of the DVB-HTML Document host object.
- the setTimeout(in String statement, in unsigned long delay) function property of the Window object.

The rules covering runtime code extension are detailed in 8.14.2.4, "Use of strings in RCEs" on page 171

8.14.2.2 Extensions to ECMAScript for trusted executable code

This section details DVB specific mechanisms to allow Runtime Code Extension (RCE) features specified by the ECMAScript language specification and the allowed DOM APIs to be used without compromising security. In DVB-HTML additional mechanisms that keep track of the origin of strings in the system and disallow the potentially dangerous use in RCEs by privileged applications of strings from unverified external sources.

8.14.2.2.1 Propagation of Internal (safe) vs. External (unsafe) strings

This approach to providing security for the use of ECMAScript maintains application compatibility by distinguishing between value of an internal string type, a string value coming from within the ECMAScript language or literal strings within the application, and an external string type, a string value coming from (suspect) host-based objects. Both string values appear to content as ordinary ECMAScript string values to improve compatibility with the behaviour of DVB-HTML content in standard Internet browsers. This is accomplished by modifying the ECMAScript language specification to split the string type into two internal subtypes: *internal-string* and *external-string*. The difference between these subtypes is not visible to the application programmer, except in so far as a security exception may be thrown as a result of the use of some strings in an RCE.

This approach has the advantage of maintaining content compatibility with ECMAScript content written for existing browsers and to the W3C and ECMA specifications. In particular,

a) It allows DVB-HTML to conform to the W3C specified DOM APIs by allowing them to return values of type String rather than of type String Object.

b) It minimizes any increase in the runtime data footprint of ECMAScript applications by allowing the continued use of the much more compact String type, rather than String Object.

c) It minimizes any implementation change for DOM bindings between a W3C-complaint version and a DVB-HTML compliant version, since both can return String types.

d) It eliminates compatibility problems that would otherwise require changing core ECMAScript behaviour if String Objects were used (e.g. that two different instances of an object never test true for equality).

e) It allows finer-grained propagation of unsafe typing, since every string entity in the ECMAScript runtime would be tagged as safe (internal) or unsafe (external).

8.14.2.2.2 Modifying ECMA-262 to support Internal and External strings

This section normatively specifies modifications to ECMAScript [81] to differentiate the two kinds of string values.

This document uses the editing convention that additions to ECMAScript [81]are given in *italics*. Text that is removed is presented as ~~strike-out~~. When a change is made, the old text is given as ~~strike-out~~ and the new version in *italics*. The bold and bold-italics font faces are preserved from the ECMAScript standard document.

Change the last sentence of the second paragraph of section 4.2 to read:

> A primitive value is a member of one of the following built-in types: **Undefined, Null, Boolean, Number,** ~~and String~~ *Internal-String, and External-String*; an object is a member of the remaining built-in type **Object**; and a method is a function associated with an object via a property. *The term String type is used when either of the types Internal-String or External-String is acceptable. The term String value is used when a value of either of the types Internal-String or External-String is acceptable.*

Change the first sentence of the first paragraph of section 4.3.2 to read:

> A ***primitive value*** is a member of one of the types **Undefined**, **Null**, **Boolean**, **Number**, ~~and **String**~~ *Internal-String, and External-String*.

Change sections 4.3.16 through 4.3.18 to read:

> **4.3.16 ~~String Value~~***String, Internal-String, and External-String Values*
>
> *4.3.16.1 String Value*

A ***string value*** is ~~a member of the type **String** and~~ either a member of the type Internal-String or a member of the type External-String. It is a finite ordered sequence of zero or more 16-bit unsigned integer values.

NOTE: Although each value usually represents a single 16-bit unit of UTF-16 text, the language does not place any restrictions or requirements on the values other than that they be 16-bit unsigned integers.

4.3.16.2 Internal-String Value

An internal-string value is a member of the type Internal-String. See section 4.3.16.1 for details.

4.3.16.3 External-String Value

An external-string value is a member of the type External-String. See section 4.3.16.1 for details.

4.3.17 ~~String Type~~ String, Internal-String, and External-String Types

4.3.17.1 String Type

The type **String** is the set of all string values.

4.3.17.2 Internal-String Type

The type Internal-String is the set of all internal-string values.

4.3.17.3 External-String Type

The type External-String is the set of all external-string values.

In section 4.8.4, change the second paragraph after the BNF to read:

A string literal stands for a value of the ~~String~~ *Internal-String* type. The ~~string~~ *internal-string* value (SV) of the literal is described in terms of the character values (CV) contributed by the various parts of the string literal. As part of this process, some characters within the string literal are interpreted as having a mathematical value (MV), as described below or in section 7.8.3.

Change the first line of Section 8.4 to read:

8.4 The ~~String Type~~ *Internal-String and External-String Types*

Insert the following immediately before section 8.5:

8.4.1 The Internal-String Type

The Internal-String type is used for strings that originate purely from string literals within an ECMAScript program, from conversions of non-external-string types to a string type, and from the methods of built-in objects other than String object. The methods of the String object will return either Internal-String or External-String values, depending on the type of the string used to initialize the String object.

8.4.2 The External-String Type

The External-String type is used for strings that are returned from host objects.

In section 9.1, change the table row for Input Type String into the following two table rows:

Table 1:

~~String~~*Internal-String*	The result equals the input argument (no conversion)
External-String	The result equals the input argument (no conversion)

In section 9.2, change the table row for Input Type String into the following two table rows:

Table 2:

~~String~~*Internal-String*	The result is **false** if the argument is the empty string (its length is zero); otherwise the result is **true**.
External-String	The result is false if the argument is the empty string (its length is zero); otherwise the result is true.

In section 9.3, change the table row for Input Type String into the following two table rows:

Table 3:

~~String~~*Internal-String*	See grammar and note below.
External-String	See grammar and note below.

Change the first line of section 9.3.1 to read:

9.3.1 ToNumber Applied to the ~~String Type~~ Internal-String and External-String Types

In section 9.8, change the table to read:

Table 4:

Input Type	Result
Undefined	*the Internal-String value* **"undefined"**
Null	*The Internal-String value* **"null"**
Boolean	If the argument is **true**, then the result is *the Internal-String value* **"true"**. If the argument is **false**, then the result is *the Internal-String value* **"false"**
Number	See note below
~~String~~*Internal-String*	Return the input argument (no conversion)
External-String	Return the input argument (no conversion)
Object	Apply the following steps: Call ToPrimitive(input argument, hint String). Call ToString(Result(1)). Return Result(2).

Change the first paragraph under section 9.8.1 to read:

The operator ToString converts a number m to ~~string format~~ *an internal-string value* as follows:

Immediately before section 10, insert:

9.10 ToInternalString

The operator ToInternalString converts its argument to a value of type Internal-String according to the following table:

Table 5:

Input Type	Result
Undefined	the Internal-String value "undefined"
Null	The Internal-String value "null"

Table 5:

Boolean	If the argument is true, then the result is the Internal-String value "true". If the argument is false, then the result is the Internal-String value "false"
Number	See note in section 9.8
Internal-String	Return the input argument (no conversion)
External-String	if CanConvertToInternal(argument) returns true, then the result is an internal string with the same sequence of (16-bit) character values. Otherwise, throw SecurityError.
Object	Apply the following steps: Call ToPrimitive(input argument, hint String). Call ToString(Result(1)). If CanConvertToInternal(Result(2)) returns true, return Result(2). Otherwise, throw SecurityError.

The operator CanConvertToInternal is implemented so as to return false if the ECMAScript is being executed in a trusted context and no permissions have been granted to the context to convert external strings to internal strings. In all other cases, the operator CanConvertToInternal will return true.

Change section 10.1.2 to read:

There are three types of ECMAScript executable code:

• Global code is source text that is treated as an ECMAScript Program. The global code of a particular Program does not include any source text that is parsed as part of a FunctionBody.

• Eval code is the source text supplied to the built-in **eval** function. More precisely, if the parameter to the built-in **eval** function is ~~a string~~ *an internal-string*, it is treated as an ECMAScript Program. The eval code for a particular invocation of **eval** is the global code portion of the ~~string~~ *internal-string* parameter.

• Function code is source text that is parsed as part of a FunctionBody. The function code of a particular FunctionBody does not include any source text that is parsed as part of a nested FunctionBody. Function code also denotes the source text supplied when using the built-in **Function** object as a constructor. More precisely, the last parameter provided to the **Function** constructor is converted to ~~a string~~ *an internal-string* and treated as the FunctionBody. If more than one parameter is provided to the **Function** constructor, all parameters except the last one are converted to strings and concatenated together, separated by commas. The resulting string is interpreted as the FormalParameterList for the FunctionBody defined by the last parameter. The function code for a particular instantiation of a **Function** does not include any source text that is parsed as part of a nested FunctionBody.

In section 11.4.3, change the single table row for Type String into the following two table rows:

Table 6:

~~String~~ *Internal-String*	"string"
External-String	"string"

In section 11.6.1, change steps 14 and 15 to read:

~~14. Concatenate Result(12) followed by Result(13).~~
~~15. Result Result(14)~~
14. If Result(12) is of type internal-string and Result(13) is of type external-string, use a string value with the same sequence of characters as Result(12) but of type external-string. Otherwise use Result(12).

15. If Result(12) is of type external-string and Result(13) is of type internal-string, use a string value with the same sequence of characters as Result(13) but of type external-string. Otherwise use Result(13).
16. Concatenate Result(14) followed by Result(15). The string type is the same as that of Result(14).
17. Return Result(16).

Append the following paragraph at the end of Section 12.6.4:

Property names are maintained as internal-strings or external-strings depending on the source of the property name. Property names are returned as internal-strings unless the property name was set from an external string, in which case it is returned as an external string.

Change step 1 under section 15.1.2.1 to read:

1. If x is not a string value, return x. *If x is an external-string value and CanConvertToInternal(x) returns false, throw the exception SecurityError.*

In section 15.1.3, change step 4 in the procedure for the hidden function Encode to read:

4. If k equals Result(1), return ~~R~~ *a string with the same sequences of characters as R and the same (internal-string vs external-string) type as the input string.*

In section 15.1.3, change step 4 in the procedure for the hidden function Decode to read:

4. If k equals Result(1), return ~~R~~ *a string with the same sequences of characters as R and the same (internal-string vs external-string) type as the input string.*

In section 15.2.4.2, change step 2 to read:

2. Compute ~~a string~~ *an internal-string* value by concatenating the three strings **"[object "**, Result(1), and **"]"**.

In section 15.3.2.1, change step 13 to read:

13. Call ~~ToString~~ *ToInternalString*(body)

In section 15.4.4.3, change step 14 to read:

Let R be a string value produced by concatenating S and Result(13). *The type of R is external-string if the type of either S or Result(13) is external-string. Otherwise, the type of R is internal-string.*

In section 15.4.4.5, change step 11 to read:

Let S be a string value produced by concatenating R and Result(4). *The type of S is external-string if the type of either R or Result(4) is external-string. Otherwise, the type of S is internal-string.*

In section 15.4.4.5, change step 14 to read:

Let R be a string value produced by concatenating S and Result(13). *The type of R is external-string if the type of either S or Result(13) is external-string. Otherwise, the type of R is internal-string.*

Change the first sentence of section 15.5.3.2 to read:

Return ~~a string~~ *an external-string* value containing as many characters as the number of arguments.

Add the following sentence to the end of the first paragraph in section 15.5.4.2 and to the first paragraph in section 15.5.4.3:

Return the value as an external-string if the String object was constructed with a value that converted to an external-string. Return the value as an internal-string if the String object was constructed with a value that converted to an internal-string.

Add the following sentence after the first paragraph of section 15.5.4.4 to read:

Returns an external-string, if the type of the result of ToString is external-string. Otherwise, the returned string is an internal-string.

Change step 5 in section 15.5.4.6 to read:

Let R be the string value consisting of the characters in the previous value of R followed by the characters Result(4). *If either the previous value of R or Result(4) is of type external-string, give R type external-string. Otherwise give R type internal-string.*

Insert the following paragraph just before the NOTE in section 15.5.4.1:

If either the result of converting this to a string is of type external-string or the replaceValue converted to a string is of type external-string or the function replaceValue returns a value of type external-string, then the newstring has type external-string. In all other cases, the newstring has type internal-string.

In section 15.5.4.13 to read, change step 8 to read:

8. Return a string containing Result(7) consecutive characters from Result(1) beginning with the character at position Result(5). *The type of the returned string is external-string if the type of Result(1) is external-string. The type of the returned string is internal-string if the type of Result(1) is internal-string.*

In section 15.5.4.14, change step 16 to read:

16. Let T be a string value equal to the substring of S consisting of the characters at positions p (inclusive) through q (exclusive). *Let the type of T (internal-string versus external-string) be the same as the type of S.*

In section 15.5.4.14, change step 28 to read:

28. Let T be a string value equal to the substring of S consisting of the characters at positions p (inclusive) through q (exclusive). *Let the type of T (internal-string versus external-string) be the same as the type of S.*

In section 15.5.4.15, append the following to the end of step 9:

Let the type of the returned string (internal-string versus external-string) be the same as that of Result(1).

In section 15.5.4.16, insert the following paragraph before NOTE1:

The result string's type (internal-string vs external-string) is the same as that of the string computed by converting the object to a string.

In sections 15.9.5.2 through 15.9.5.7, change the first sentence of the first paragraph in each section to read:

This function returns ~~a string~~ *an internal-string* value.

In section 15.10.6.2, append the following at the end section::

The type of the resulting string (internal-string vs external-string) is the same as that of the string argument.

In section 15.10.6.4, append the following at the end of the second paragraph:

The returned string is of type internal-string if source is an internal-string. The returned string is of type external-string if source is an external-string.

Insert the following immediately after Section 15.1.6.6:

15.1.6.7 SecurityError

Indicates that an authorized attempt was made to convert an external-string into an internal-string within the context of trusted ECMAScript.

8.14.2.3 Sources of Unsafe (external) strings

8.14.2.3.1 Sources within ECMAScript

As specified in the previous section the following sources of unsafe strings within the language itself shall be typed as external strings:

a) Strings resulting from operations on external-strings

b) String.fromCharCode, which converts a character code into a string.

8.14.2.3.2 Sources from Host Objects

All strings returned by Host Object APIs defined as part of this specification shall be typed as external strings.

All strings returned by the Bridge shall be typed as external strings.

Any Host Object APIs provided by a platform beyond those required in this specification should return external strings unless the result is known to be secure.

8.14.2.4 Use of strings in RCEs

An attempt to use an external string or a String Object containing an external string in a runtime code extension shall cause the DVBException with the error code SECURITY_VIOLATION_ERR to be raised.

An attempt to use an internal string or a String Object containing an internal string in a runtime code extension shall not cause the DVBException with the error code SECURITY_VIOLATION_ERR to be raised.

If the permission request file requests the permission to do privileged runtime code extension and this is granted for external strings then use of an external string or a String Object containing an external string in a runtime code extension shall be considered use of an internal string or a String Object containing an internal string.

If no permission to do privileged runtime code extension is granted then any attempt to use an internal or external string or a String Object containing an internal or external string in a runtime code extension shall be considered use of an external string.

If the permission request file requests the permission to do privileged runtime code extension and this is granted for internal strings only then use of external and internal strings retain their type.

The following uses of a string shall be considered runtime code extensions:

A string:

a) passed to eval()

b) passed to the constructor of a Function() object

c) passed to document.write()

d) used to set an event handler.

   The exception occurs when an external-string is associated with the event handler either by setting a handler attribute of an element in the document or by parenting

e) used as the code in a script element.

   The setting of a <script> element text or src attribute in a displayed document shall not cause the new text to e incorporated into the ECMAScript context for the document. Therefore this is not strictly runtime code exception. However modification of script nodes is disallowed in this specification. The exception occurs when the external-string is associated with the script element either by parenting to a script element a node containing an external-string (e.g. by Node::insertBefore(), Node::appendChild(), Node::replaceChild()) or by setting the nodeValue of a TextNode or a CDATASection child of a script element to an external string.

f) used in window.setTimeout()

8.14.2.5 Mutation of Host Objects

Any attempt to remove or replace the pre-defined properties of a host object shall cause the DVBException with the error code SECURITY_VIOLATION_ERR to be raised.

Any attempt to remove or replace the pre-defined function property of a host object shall cause the DVBException with the error code SECURITY_VIOLATION_ERR to be raised.

8.14.3 Inter application security

8.14.3.1 Restrictions on DOM elements introduced for security

No access is provided to documents from other applications.

The property accessor on the window and document host objects shall restrict access to properties and functions of those objects when the document context in which the access is executed is from a different DVB-HTML application or from a different domain than the document in the window:

- For such contexts, the window accessor shall only allow the assignment of a string to the location property: setting any other window property or getting any window property shall throw an exception.
- For such contexts, the document accessor shall not allow any access: setting or getting any document property shall throw an exception.

The exception that is thrown shall be the appropriate exception as if an attempt to access a resource for which the caller did not have permission were made:

- in the Java binding (see annex AD.1, "Java bindings to DVB extensions" on page 1296) a SecurityException shall be thrown
- in the ECMAScript binding (see annex AC, "(normative): ECMAScript Binding" on page 1283) when a security exception is raised, the DVBException with the error code SECURITY_VIOLATION_ERR is raised.

If a new application is started in a frame, then a new Window object is created to represent the frame. The parent of this window is the window that represents the frame from the calling applications perspective. This parent property however is not visible to the application within the frame. Therefore both applications have a window object that controls the frame, but no communication is possible between them. Access to properties, methods, and variables involving Window objects are restricted to windows that are displaying documents from the same application and from the same domain (see 8.16.6, "Domain" on page 182).

Where an application within a frame terminates prior to the application which contains the frameset that hosts the frame for that application, then the latter application shall receive the DVB lifecycle event "AppTerminating" (see "Lifecycle events" on page 129).

The user agent shall set the content of the frame that contained the terminating application to a blank document. and the URL and Location property shall be set to the null string prior to sending the "AppTerminating" event.

Where an outer application terminates with a frameset which contains one or more embedded applications in frames, then the applications in those frames shall also be terminated. This shall apply even in the case where the application within the sub frame would survive service selection but the outer application will not.

8.15 DVB-HTML permissions

This section explains how the permissions that define the sandbox and are available to unsigned applications and the permissions that can be requested in the permission request file are mapped to the DVB-HTML application model. ADVB-HTML application has the following ways of accessing beyond the sandbox.

a) Following embedded links in the page can cause the loading of new resources.

b) Script may access APIs over the Java Bridge.

c) Properties in the host objects available to script may access resources.

The location attribute of the Window object.

The open() Function attribute of the Window object.

d) <uri()> references in CSS attributes

In case c) setting of attributes via the DOM interfaces is handled only when the attribute is used, and in this case the restrictions of case a) are applied.

In some cases a permission is only relevant to APIs reached via the Java Bridge

8.15.1 Permissions for unsigned applications

The MHP security policy includes a set of resources that are always guaranteed to be granted to applications, if the application is executed. Unsigned applications have access to only these resources.

This section defines the mapping of those resources to DVB-HTML applications. DVB-HTML applications shall always be granted the necessary Permission.

8.15.1.1 java.awt.AWTPermission

This Permission is only relevant to API use over the bridge, the same rights are granted as for DVB-J applications, see 11.10.1.1, "java.awt.AWTPermission" on page 272.

8.15.1.2 java.net.SocketPermission:

This Permission is only relevant to API use over the bridge, the same rights are granted as for DVB-J applications, see 11.10.1.2, "java.net.SocketPermission:" on page 272.

8.15.1.3 java.util.PropertyPermission

This Permission is only relevant to API use over the bridge, the same rights are granted as for DVB-J applications, see 11.10.1.3, "java.util.PropertyPermission" on page 272.

8.15.1.4 java.lang.RuntimePermission

This Permission is only relevant to API use over the bridge, the same rights are granted as for DVB-J applications, see 11.10.1.4, "java.lang.RuntimePermission" on page 272.

8.15.1.5 java.io.SerializablePermission

This Permission is only relevant to API use over the bridge, the same rights are granted as for DVB-J applications, see 11.10.1.5, "java.io.SerializablePermission" on page 272.

8.15.1.6 java.io.FilePermission

Permission to read resources for the sub-tree under which the implementation mounts the object carousels shall be granted. For APIs accessed via the, the same rights are granted as for DVB-J applications, see 11.10.1.6, "java.io.FilePermission" on page 273.

The location attribute of the Window object may be set to a resource in the sub-tree under which the implementation mounts the object carousels using a URI with the "dvb:" protocol.

The open() Function attribute of the Window object may be called with reference to a resource in the sub-tree under which the implementation mounts the object carousels using a URI with the "dvb:" protocol.

DVB HTML can read resources for the sub-tree under which the implementation mounts the object carousels using the dvb: protocol in a URI in the following element attributes:

- a.href
- area.href
- base.href
- blockquote.cite
- frame.longdesc
- frame.src
- iframe.longdesc
- iframe.src
- img.src
- img.longdesc
- img.usemap
- input.src
- input.usemap
- link.href
- object.archive
- object.classid
- object.codebase
- object.data
- object.usemap
- q.cite
- script.src
- Using the CSS uri() value

Using a "dvb:" locator that references a resource in the Carousel on other element attributes is undefined.

8.15.1.7 javax.tv.media.MediaSelectPermission

This Permission is only relevant to API use over the bridge, the same rights are granted as for DVB-J applications, see 11.10.1.7, "javax.tv.media.MediaSelectPermission" on page 273.

8.15.1.8 javax.tv.service.ReadPermission

This Permission is only relevant to API use over the bridge, the same rights are granted as for DVB-J applications, see 11.10.1.8, "javax.tv.service.ReadPermission" on page 273.

8.15.1.9 javax.tv.service.selection.ServiceContextPermission

This Permission is only relevant to API use over the bridge, the same rights are granted as for DVB-J applications, see 11.10.1.9, "javax.tv.service.selection.ServiceContextPermission" on page 273.

8.15.1.10 java.util.Locale.setDefault

This Permission is only relevant to API use over the bridge, the same rights are granted as for DVB-J applications, see 11.10.1.10, "java.util.Locale.setDefault" on page 273.

8.15.1.11 org.dvb.security.PrivilegedRCEPermission

Unsigned applications are granted PrivilegedRCEPermission("external"), see "Use of strings in RCEs".

8.15.2 Additional Permissions for signed applications

Signed applications can additionally request to get more permissions. These permissions are requested using the permission request file (12.6, "Security policy for applications" on page 297). This section defines the mapping from the items in the permission request file to the permissions that may be granted by the MHP terminal in response to the request. And how this affects the DVB-HTML application

In the case of org.dvb.security.PrivilegedRCEPermission only, signed applications with a permission request file can request permission that is more restrictive than that granted to applications without a permission request file.

8.15.2.1 java.util.PropertyPermission

This Permission is only relevant to API use over the bridge, the same rights are granted as for DVB-J applications, see 11.10.2.1, "java.util.PropertyPermission" on page 273.

8.15.2.2 java.io.FilePermission

A signed application has the rights of an unsigned application, in addition when the permission request file requests the permission to access persistent storage and this is granted, read and write access to the persistent storage directory sub-tree is allowed.

This Permission is relevant to API use over the bridge, the same rights are granted as for DVB-J applications, see 11.10.2.2, "java.io.FilePermission" on page 273.

If the permission is granted, the location attribute of the Window object may be set to a resource in the persistent file store using a URI with the "file:" protocol. If the permission is not granted then attempting to set this attribute with such a locator will cause a SecurityException to be thrown.

f the permission is granted, the open() Function attribute of the Window object may be called with reference to a resource in the persistent file store using a URI with the "file:" protocol. If the permission is not granted then calling open() with such a locator will cause a SecurityException to be thrown.

DVB HTML can read the persistent file store using the file: protocol in a URI in the following element attributes:

- a.href
- area.href
- base.href
- blockquote.cite
- frame.longdesc
- frame.src
- iframe.longdesc
- iframe.src
- img.src
- img.longdesc
- img.usemap
- input.src
- input.usemap
- link.href
- object.archive
- object.classid
- object.codebase
- object.data
- object.usemap
- q.cite
- script.src
- Using the CSS uri() value

If the file permission is not granted, all "file:" references shall fail as if the referenced resource was not available.

Using a "file:" locator that references a resource in the persistent store on other element attributes is undefined.

When there is a persistent file credential in the permission request file and this is granted, other files are made available as follows:

- file path = root directory of the persistent storage + filename from the credential
- action = string containing "read" and/or "write" as indicated in the credential

8.15.2.3 org.dvb.net.ca.CAPermission

This Permission is only relevant to API use over the bridge, the same rights are granted as for DVB-J applications, see 11.10.2.3, "org.dvb.net.ca.CAPermission" on page 273.

8.15.2.4 org.dvb.application.AppsControlPermission

This Permission is relevant to API use over the bridge, the same rights are granted as for DVB-J applications, see 11.10.2.4, "org.dvb.application.AppsControlPermission" on page 273.

If the permission is granted, the location attribute of the Window object may be set to launch a DVB-HTML application in a sub-window by using a locator which references another DVB-HTML application. If the permission is not granted or the locator points to an application of a type which is not embeddable in a frame then attempting to set this attribute with such a locator will cause a SecurityException to be thrown.

If the permission is granted, the open() Function attribute of the Window object may be called with reference to a resource that launches a DVB-HTML application in a sub-window by using a locator which references another DVB-HTML application. If the permission is not granted or the locator points to an application of a type which is not embeddable in a frame then calling the open() with such a locator will cause a SecurityException to be thrown.

DVB-HTML applications can, if granted this permission, launch applications using locators that reference other applications (see 9.3.1.4, "Application boundary" on page 194 and 9.2.1, "Starting DVB-J Applications" on page 187) using the attributes on elements below:

- a.href
- area.href

If the application is not granted the permission then these links will fail as if the resource was not available.

Using a locator that references an application on other element attributes is not required to be supported.

8.15.2.5 org.dvb.net.rc.RCPermission

This Permission is relevant to API use over the bridge, the same rights are granted as for DVB-J applications, see 11.10.2.5, "org.dvb.net.rc.RCPermission" on page 274.

If the permission is granted for the default ISP, setting the location attribute of the Window object using locators that would require creating a return channel link may establish the link required to access the resource. If the permission is not granted then attempting to set this attribute with such a locator will cause a SecurityException to be thrown.

If the permission is granted for the default ISP, using the open() Function attribute of the Window object using locators that would require creating a return channel link may establish the link required to access the resource If the permission is not granted then calling open() with such a locator will cause a SecurityException to be thrown.

DVB-HTML applications can, if granted this permission for the default ISP establish the link required to reference resources in any element attribute that allows references when using locators that would require creating a return channel link.

If the permission is not granted, the link will not be established and the link will fail as if the resource did not exist.

8.15.2.6 org.dvb.net.tuning.TunerPermission

This Permission is relevant to API use over the bridge, the same rights are granted as for DVB-J applications, see 11.10.2.6, "org.dvb.net.tuning.TunerPermission" on page 274.

Setting the location attribute of the Window object using locators that reference an audio or video stream will cause a SecurityException to be thrown.

Calling the open() Function attribute of the Window object using locators that reference an audio or video stream will cause a SecurityException to be thrown.

DVB-HTML applications can, if granted this permission, reference audio and video resources that require tuning using dvb: locators on the following element attributes:

- img.src
- input.src
- object.data
- Using the CSS uri() value

If the permission is not granted, no tuning will occur and the link will fail as if the resource did not exist.

Using a "dvb:" locator that references an audio or video resources on other element attributes is not required to be supported.

8.15.2.7 javax.tv.service.selection.SelectPermission

This Permission is relevant to API use over the bridge, the same rights are granted as for DVB-J applications, see 11.10.2.7, "javax.tv.service.selection.SelectPermission" on page 274.

Setting the location attribute of the Window object using locators that references a DVB service will cause a SecurityException to be thrown.

Calling the open() Function attribute of the Window object using locators that references a DVB service will cause a SecurityException to be thrown.

Applications can, if granted this permission, select away from the current service to a new service using dvb: locators that reference a DVB service on the following element attributes:

- a.href
- area.href

If the permission is not granted, no service selection will occur and the link will fail as if the resource did not exist.

Using a "dvb:" locator that references a DVB service on other element attributes is not required to be supported.

8.15.2.8 org.dvb.user.UserPreferencePermission

This Permission is only relevant to API use over the bridge, the same rights are granted as for DVB-J applications, see 11.10.2.8, "org.dvb.user.UserPreferencePermission" on page 274.

8.15.2.9 java.net.SocketPermission

This Permission is relevant to API use over the bridge, the same rights are granted as for DVB-J applications, see 11.10.2.9, "java.net.SocketPermission" on page 274.

If the permission is granted (and if necessary the rc permission), the location attribute of the Window object may be set to a locator that references a resource on the host named in the permission file. If the permission is not granted then attempting to set this attribute with such a locator will cause a SecurityException to be thrown.

If the permission is granted (and if necessary the rc permission), the open() Function attribute of the Window object may be called with locator that references a resource on the host named in the permission file. If the permission is not granted then calling open() with such a locator will cause a SecurityException to be thrown.

DVB-HTML applications can, if granted this permission (and if necessary the rc permission), reference resources in any element attribute that allows such references using locators to resources on the host named in the permission file.

If the permission is not granted the link will fail as if the resource did not exist.

8.15.2.10 org.dvb.media.DripFeedPermission

This Permission is relevant to API use over the bridge, the same rights are granted as for DVB-J applications, see 11.10.2.10, "org.dvb.media.DripFeedPermission" on page 274.

Setting the location attribute of the Window object using locators that reference a dripfeed resource will cause a SecurityException to be thrown.

Calling the open() Function attribute of the Window object using locators that reference dripfeed resources will cause a SecurityException to be thrown.

DVB-HTML applications can, if granted this permission, reference dripfeed resources using dripfeed: locators on the following element attributes:

- img.src
- input.src
- object.data
- Using the CSS uri() value

If the permission is not granted, the link will fail as if the resource did not exist.

Using a "dripfeed:" locator on other element attributes is not required to be supported.

8.15.2.11 org.dvb.security.PrivilegedRCEPermission

When the permission request file requests the permission to do privileged runtime code extension on internal strings and this is granted, a PrivilegedRCEPermission with the name "internal" is created.

When the permission request file requests the permission to do privileged runtime code extension on external strings, but it is granted only for internal strings, a PrivilegedRCEPermission with the name "internal" is created.

When the permission request file requests the permission to do privileged runtime code extension on external strings and this is granted, a PrivilegedRCEPermission with the name "external" is created.

For behaviour, see "Use of strings in RCEs".

See 11.10.2.12, "org.dvb.smartcard.SmartCardPermission" on page 274

8.15.2.12 org.dvb.application.storage.ApplicationStoragePermission

This Permission is only relevant to API use over the bridge, the same rights are granted as for DVB-J applications, see 11.10.2.11, "org.dvb.application.storage.ApplicationStoragePermission" on page 274.

8.15.2.13 org.dvb.smartcard.SmartCardPermission

This Permission is only relevant to API use over the bridge, the same rights are granted as for DVB-J applications, see 11.10.2.12, "org.dvb.smartcard.SmartCardPermission" on page 274.

8.16 Miscellaneous

8.16.1 Date Values

8.16.1.1 Syntax

Absolute Date values have the following syntax:

8.16.2 Clock values

8.16.2.1 Syntax

Absolute Clock values have the following syntax:

```
Clock-val         ::= ( Full-clock-val | Partial-clock-val | Timecount-val )
Full-clock-val    ::= Hours ":" Minutes ":" Seconds ("." Fraction)?
Partial-clock-val ::= Minutes ":" Seconds ("." Fraction)?
Timecount-val     ::= Timecount ("." Fraction)? (Metric)?
Metric            ::= "h" | "min" | "s" | "ms"
Hours             ::= DIGIT+; any positive number
Minutes           ::= 2DIGIT; range from 00 to 59
Seconds           ::= 2DIGIT; range from 00 to 59
Fraction  ::= DIGIT+
Timecount         ::= DIGIT+
2DIGIT  ::= DIGIT DIGIT
```

```
DIGIT   ::= [0-9]
```

The default metric suffix is "s" (for seconds). No embedded white space is allowed in clock values, although leading and trailing white space characters will be ignored.

The following are examples of legal clock values:

Full clock values:

```
02:30:03    = 2 hours, 30 minutes and 3 seconds
50:00:10.25 = 50 hours, 10 seconds and 250 milliseconds
```

Partial clock value:

```
02:33   = 2 minutes and 33 seconds
00:10.5 = 10.5 seconds = 10 seconds and 500 milliseconds
```

Timecount values:

```
3.2h    = 3.2 hours = 3 hours and 12 minutes
45min   = 45 minutes
30s     = 30 seconds
5ms     = 5 milliseconds
12.467  = 12 seconds and 467 milliseconds
```

Fractional values are just (base 10) floating point definitions of seconds. The number of digits allowed is unlimited (although actual precision may vary among implementations).

For example:

```
00.5s = 500 milliseconds
00:00.005 = 5 milliseconds
```

8.16.2.2 Offset values

Offset values are used to specify when an element should begin or end relative to another time.

An offset value has the following syntax:

offset-value ::= "+" (Clock-value)

An offset value includes a sign on a clock value, and is used to indicate a positive offset. The offset is measured from the implicit start time:

8.16.3 Unrealisable locators

Locators may not be realisable for several reasons:

- The locator requires tuning for which permission or resources are not available
- The locator requires network or interaction channel access for which permission is not available
- The locator requires access to data that is denied by Conditional Access mechanisms
- The locator requires access to a authenticated file for which authentication fails
- The locator requires mounting a file system that cannot be mounted at the same time as the currently mounted file systems

8.16.3.0.1 Presentation of Locators in DVB HTML.

It is implementation specific how the user agent indicates the presence of links to resources when rendering DVB-HTML. Where the user agent can determine a priori that a given link will fail, it is implementation dependent whether the user agent renders this as a link. It is also implementation dependent if and how a user agent presents failure to locate a resource due to insufficient permission being granted.

NOTE: HTML 4 [90] section 12.2.4 recommends that the user agent alerts the user when a referenced file is not available. To avoid computer-like dialogs and accessibility issues it is recommended that authors follow the guidelines in Accessibility [L] e.g. providing text equivalents using the `alt` attribute.

8.16.4 Relation to HTTP and HTTPS

The user agent string (see 8.13.1, "User agent strings" on page 163) is sent in a header as part of all HTTP and HTTPS requests (see 6.3.7, "Hypertext Transfer Protocol (HTTP)" on page 58).

8.16.5 DVB-HTML specific locators

DVB-HTML has two specific formats of locators which have defined semantics only in the context of DVB-HTML:

- The extended form of the DVB locator (see 8.16.5.1, "Extended DVB locator" on page 181)
- The exit locator used for application self termination (see 8.16.5.2, "Exit locator" on page 182)

8.16.5.1 Extended DVB locator

8.16.5.1.1 Extended DVB locator syntax

The formal specification of the URL form expressed in BNF is given in the following extension to the dvb: locators defined in table 134, "DVB URL syntax" on page 353.

Table 67 : Extended DVB URL syntax

```
dvbhtml_url                = dvb_url | dvb_scheme ":" dvbhtml_hierpart
dvbhtml_hierpart           = dvbhtml_net_path
dvbhtml_net_path           = "//" dvbhtml_entity
dvbhtml_entity             =dvb_service_contextual|dvb_service_component_contextual|ait_specifier
dvb_service_contextual     = "current" | "original"
dvb_service_component_contextual = "current.audio" | "current.video" | "current.av"
ait_specifier              = ait_filter "." "ait" ait_abs_path
ait_filter                 = "current"
ait_abs_path               = "/" ait_entity
ait_entity                 = ait_root_directory | ait_application
ait_root_directory         = "app_root"
ait_application            = org_id_part "." app_id_part [ "?" ait_params ]
ait_params                 = "arg_" 1*digit "=" *uric ["&" ait_params ]
```

(for `digit` & `uric` see RFC 2396 [41])

(for `org_id_part` and `app_id_part` see 14.5, "Text encoding of application identifiers" on page 357)

The semantics of launching applications via such a locator are specified in 8.5.3.1.3, "Hypertext" on page 78.

8.16.5.1.2 TV locators

A locator for a DVB service or service component can be a full dvb: locator, as defined in 14.1, "Namespace mapping (DVB Locator)" on page 353, or one of the following specific forms.

Table 68 : (Sheet 1 of 2)

Locator	Meaning
`dvb://current`	The service currently selected by the application.
`dvb://current.av`	The Audio and Video being presented on the background video device (see 11.6.2)
`dvb://current.audio`	The Audio being presented in association with the background video device
`dvb://current.video`	The Video being presented on the background video device

Table 68 : (Sheet 2 of 2)

Locator	Meaning
dvb://original	Originating service for this application (place of birth)
NOTE 1: Content authors who, in other systems, use the "tv:" locator, as defined in RFC 2838 [K], may use the equivalent "dvb://current.av" locator to reference the default audio and video component within the service.	

8.16.5.1.3 Application locator

A locator for an application in the current service can be identified by the following specific forms Only applications that are visible in the application database using the current service filter can be found by this locator.

Selecting this locator will launch the application, with the associated parameters.

Table 69 :

Locator	Meaning
dvb://current.ait/Orgid.Appid?param=val&	An application in the service currently selected by the application.

8.16.5.1.4 AIT locators

Locators for the root directory or the icon representation of the current application can be identified by the following specific forms.

Table 70 :

Locator	Meaning
dvb://current.ait/app_root	The root directory path as found in the dvb html application location descriptor for the application. (note 1)
dvb://current.ait/app_icon	The Icon found in the application icons descriptor for the application. (note 1)
NOTE 1: Shall mount file systems if referenced objects are in unmounted file systems and the link is followed.	

8.16.5.2 Exit locator

In the context of a DVB-HTML application, actioning a link in the defined element, attribute context (see table 15, "MIME media type usage" on page 85) with the following form of locator shall cause an application to terminate.

```
exit:
```

The formal specification of the URL is given in the following BNF.

Table 71 : Exit URL syntax

```
exit_url                    = exit_scheme ":" *uric
exit_scheme     = "exit"
```

Activating such a link shall request that the application manager move the current application into the Killed state. Any possible characters following the ":" shall be ignored in this version of the specification (see RFC 2396 [41]).

8.16.6 Domain

One of:

- The domain name of the server that served the document if it can be identified.
- An empty string ("") for a page with a dvb: locator.

NOTE: Such pages cannot therefore be in the same domain as any page delivered via http.

- Null otherwise.

9 Application model

9.1 Broadcast MHP applications

9.1.1 Basic lifecycle control

The basic control of the lifecycle of broadcast MHP applications is through the selection of broadcast services. Selection of a broadcast service can be initiated by the user of the MHP terminal using the Navigator as well as by MHP applications offering EPG functionality.

The unit for the presentation and execution of content in the MHP specification is the service. A service in MHP represents a group of pieces of content which are intended to be presented together to the end-user. A service may consist of the contents of a broadcast DVB service, including audio/video streams, data streams and all the service information, applications and application signalling that is being broadcast. Other forms of service are possible, such as a stored service (see 9.7.2, "Stored services" on page 204).

Every service that gets presented by an MHP platform is presented within a service context. These form one of the foundations for the runtime environment and the execution model. A service context is an "environment" in which a service gets presented. It defines the boundaries of the service (letting the platform and applications identify which of the pieces of content that are being presented make up a given service). It also enables that service to be addressed and controlled as a single entity.

- In a DVB-J application, a service context is represented by an instance of the ServiceContext class. Where multiple DVB-J applications are being presented in the same service context, the number of ServiceContext objects representing a service context is implementation dependant, but each application sees only one such instance. Changes made by one application to the ServiceContext object that it has are visible to the ServiceContext objects representing the same service context in other applications. DVB-J applications may obtain a reference to the service context within which they are executing through using the method `getServiceContext(XletContext)` on the ServiceContextFactory class.
- In a DVB-HTML application, a service context is represented by a JavaObject object returned by the Bridge API, having the methods and attributes corresponding to the ServiceContext class. Where multiple DVB-HTML applications are being presented in the same service context, the number of JavaObject objects representing a service context is implementation dependant, but each application sees only one such instance. Changes made by one application to the JavaObject object that it has are visible to JavaObject objects representing the same service context in other applications. DVB-HTML applications may obtain a reference to the service context within which they are executing through the Bridge API to access the `getServiceContext(XletContext)` on the ServiceContextFactory class.

The means by which the navigator of an MHP terminal supports selection of services is implementation dependent. However, where an MHP application is using the numeric keys of the remote control, the navigator shall not respond to the user pressing these keys by causing service selection. Hence the user pressing the numeric keys to enter his pincode does not cause service selection.

A service context can present only one service at any one time. Selecting a service to be presented in a service context causes any previous service being presented in that service context to stop being presented. Any content part of the previous service which is not part of the new service shall stop being presented. MHP terminals may limit on the number of broadcast service contexts which can be presented simultaneously.

- In a DVB-J application, selecting a service corresponds to calling the `select()` method on such an instance.
- In a DVB-HTML, selecting a service either corresponds to activating a link to a dvb: locator representing a service, or by calling the select() method on a the JavaObject representing a service context.

9.1.2 Starting applications

When a broadcast service is selected, applications which are listed in the AIT of the service and identified as auto-start shall be launched as described in section 10.6, "Control of application life cycle" on page 215 without explicit intervention of the user. Applications which are started after the selection of a service will be controlled by signalling associated with that service. The MHP terminal shall monitor that signalling for changes made by the broadcaster. These changes may include the termination of particular applications as well as the addition of new auto-start applications.

Applications which are not identified as auto-start in the AIT shall not be automatically launched by the MHP terminal, but require explicit launching. This explicit launching can be done by the resident Navigator on the MHP terminal or by an MHP application. For example, the user can launch such applications after they have been offered a choice of applications through some user interface.

Where the currently selected service in a service context includes multiple MHP applications, any running applications may be able to launch other applications from that set. The launched applications shall be presented inside that same service context.

- A DVB-J application is able to achieve this using the application listing and launching API.
- A DVB-HTML application is able to achieve this either by activating a link using a locator referencing an application, or by using the Bridge APIs.

9.1.3 Support for execution of multiple simultaneous applications

The set of applications that are signalled within a service can be presented and executed concurrently.

MHP terminals shall be able to support applications from that set (using the same screen) at least as defined in the minimum platform capabilities section of this specification. MHP terminals are required to support execution of the set of such applications for each broadcast service which they permit to be presented simultaneously.

Broadcasters should ensure that simultaneous running of the set of applications for a service is comprehensible to the user and does not yield perceptible interference problems.

9.1.4 Stopping applications

MHP applications may stop themselves voluntarily using the MHP APIs or may be stopped by the MHP terminal in a number of situations. Examples of situations where this shall be allowed include:

9.1.4.1 A new service being selected replacing a previously selected one

When a new service is selected and replaces a previously selected one, applications from the former service shall only continue to execute where they are signalled in the new service. If an application is not signalled in that signalling then it will be stopped by the MHP terminal. Where an application is known to be bound to a single service, the broadcaster can identify that application as service bound using the service_bound_flag in the application descriptor. Such applications shall be stopped as soon as possible by the MHP terminal and without needing the AIT for the new service to be available. This allows the autostart application(s) of the new service to be started earlier than would otherwise be the case.

9.1.4.2 The stopping of an application by another application

Subject to the security policy of an MHP terminal, one application may request to stop another application. In such a case, the resident Application Manager, after a successful security check, kills the application otherwise that application shall continue running, without interruption.

9.1.4.3 Changes in the application signalling to request a particular application be stopped

The broadcaster may request an MHP terminal to stop an application using the control codes in the AIT. The precise semantics of these are dependent on the application format.

9.1.4.4 Stopping by the MHP terminal due to a shortage of resources

Where an MHP terminal has insufficient resources to continue the execution of one of the running applications, the MHP terminal is allowed to decide to stop an application without user intervention (e.g. memory, CPU and resources managed by the resource management API). When this happens the MHP shall first kill the applications by increasing order of the priority fields signalled in the application_priority field in the application descriptor for each application.

NOTE: The precise resources of an MHP terminal are implementation dependant.

9.1.5 Persistence of Applications Across Service Boundaries

Where a running application is signalled in both the new service and the former service, and is not signalled as service bound in the former service, it shall continue to run and shall not be restarted. In this case, the running application shall become controlled by the application signalling of the new service where it is signalled and not the signalling of the former service. Hence the MHP terminal shall monitor the AIT of the new service and shall stop responding to the AIT of the former service.

If the application is signalled as service bound in the former service then it is terminated in the normal way as the new service is selected. If it is signalled as auto-start in the new service it will restart with no volatile context from the previous instantiation.

If an application survives a service selection operation it shall run in the new service context without automatically getting any access to the broadcast file system of the new service. The broadcast file system shall be lost as defined in 6.2.5.3, "Loss of Carousel Behaviour" on page 56. Applications are responsible for implementing their own strategy for continuing to execute after this point.

9.1.6 Management of autostarting

The receiver shall launch autostart applications under the following conditions:

- the signalling indicates that the application can be supported by the receiver, as defined by the application profile & versioning information contained in the application descriptor,
- only a single application with a given Application identification is allowed to run at any time,
- the application is a newly introduced autostart application or has newly been given autostart status.

So:

- when a service is selected the receiver shall launch at most one instance of each autostart application that it can support,
- if after service selection an autostart application that the receiver can support is introduced or a previously listed supportable application gains autostart status then the application shall be launched subject to normal resource limitations, etc.

However, if an autostart application terminates it is not restarted unless it again becomes a new autostart application. An application becomes a new autostart application in the following cases:

- The receiver navigates away from the service and then selects a service where the application is autostart.
- The application is removed from the AIT and then is re-introduced.
- The autostart status of the application is reset then set again.

NOTE 1: In summary the autostart status of an application is in effect an edge trigger rather than level trigger signal.

NOTE 2: These semantics for the autostart behaviour address "de-bouncing" the case where an autostart application terminates voluntarily. They do not address the case where the receiver terminates the application.

NOTE 3: This specification does not describe in detail the timing required for the broadcast signalling to renew the autostart status of an application.

9.1.7 When tuning is not service selection!

MHP applications may cause tuning to another transport stream by mechanisms other than service selection. Usage of these mechanisms does not constitute service selection and therefore no applications from the target transport stream or service shall be started either by the MHP terminal or by MHP applications. The MHP terminal shall continue monitoring the AIT of the logically selected service where this is available on the target transport stream. Where the AIT of the selected service is not available, the application shall continue executing as described in 10.4.4, "Visibility of AIT" on page 211. The service being presented in the service context shall not be changed by an application using these mechanisms:

- DVB-J tuning API or streamed media APIs
- DVB-HTML accessing a media or service reference (e.g in an <object> or <img> element), or by accessing the tuning API through the Bridge

9.1.8 MHP Applications and Service Selection

MHP applications may select services using the service selection API. The service selection API includes a class `ServiceContext` to represent environments in which services may be presented. Calling the select method on a `ServiceContext` causes a new service to be presented in that context and any former service being presented in that context will be stopped.

Where one MHP application uses the application listing and launching API to successfully start a second MHP application, the second MHP application shall be considered as executing inside the service context of the first MHP application. The number of `ServiceContext` objects representing a service context is implementation dependant, but each application sees only one such instance. Changes made by one application to the `ServiceContext` object that it has are visible to the `ServiceContext` objects representing the same service context in other applications.

MHP applications started in response to a service selection operation are considered to be executing "inside" a service context. They may obtain a reference to the service context within which they are executing through using the method `getServiceContext(XletContext)` on `javax.tv.service.selection.ServiceContextFactory`.

MHP applications may cause tuning to another transport stream directly using the tuning API or, in the case of DVB-HTML, indirectly by reference to a media stream. Such tuning does not constitute service selection and therefore no applications from the target transport stream or service shall be started either by the MHP terminal or by MHP applications. The MHP terminal shall continue monitoring the AIT of the selected service where this is available on the target transport stream. Where the AIT of the selected service is not available, the application shall continue executing as described in 10.4.4, "Visibility of AIT" on page 211. The service being presented in the service context shall not be changed by usage of these APIs.

9.1.9 Broadcast service related stored applications

These are applications designed to operate in the context of one or more broadcast services. As a consequence even when stored at the receiver they are not able to run unless suitably signalled in the AIT of a currently selected broadcast service. This includes all applications listed in the AIT whether launchable or externally authorised. These applications include the following:

- applications which have been proactively cached by the MHP terminal implementation
- applications which have been explicitly stored as part of the current selected broadcast service
- applications which have been explicitly stored and form part of a stored service and which happen to also be present in the signalling of the currently selected broadcast service

This class of application may have technical dependencies which mean that they cannot be operate correctly unless the MHP terminal is also decoding one of the required broadcast services. For example, an EPG application might be stored to enable it to load more quickly once selected but requires access to the broadcast stream to provide it with data to present.

Stored broadcast related applications shall take the lifecycle model of broadcast applications. E.g.

- following a service change the application behaviour will depend on the AIT signalling in the newly selected broadcast service.
- the application can only be started when it is listed in the AIT of the currently selected service.

In summary, the behaviour is that of a broadcast application, except that the loading is possibly accelerated due to the file system cache provided by the storage.

When one of these applications executes, it shall see the same filesystem as if it was being run directly from broadcast. The set of files stored in response to being listed in the application description file (see 9.7.1, "Applications loaded from the interaction channel" on page 204) shall always over-ride the same files from the broadcast.

NOTE: The application provider is responsible for managing any dependencies between those files which can be stored and those files which are not required to be stored.

9.1.9.1 Version management

If the cached/stored and currently signalled version numbers do not match, the MHP terminal shall start the broadcast version. If the application has not_launchable_from_broadcast set to '1' then it shall not be launched at all.

If the version number of a broadcast application is newer than that of the corresponding stored application it is the responsibility of the newer broadcast application to manage the update. Storing the newer version will naturally overwrite the previously stored version. If not_launchable_from_broadcast is set to '1' then a launchable application must be provided to manage the update (although an MHP terminal may perform the update autonomously).

NOTE: MHP terminals may refuse to update, or keep stored, applications where the version numbers change too frequently. Broadcasters should ensure that frequently changing files are not listed in the "Application description file".

9.2 DVB-J Model

9.2.1 Starting DVB-J Applications

DVB-J applications may be started by any of the means defined for general MHP applications. The application listing and launching API defined in annex S, "(normative): Application Listing and Launching" on page 711 allows one MHP application to start another MHP application subject to security policy. The `start()` method of the `AppProxy` interface will then cause the Application Manager to start the new MHP application subject to normal resource limitations.

The Xlet interface is defined in the `javax.tv.xlet.Xlet` interface Java TV [51]. DVB-J applications provide a class implementing this interface and reference that class in the DVB-J application location descriptor. In order to start a DVB-J application, the application manager shall call the constructor of this class, the `initXlet()` and the `startXlet()` methods of this interface.

9.2.2 Stopping a DVB-J Application

DVB-J applications may stop for any of the reasons listed for general MHP applications. An application shall be able to notify that it is stopped by finishing its execution and informing the Application Manager through the `notifyDestroyed()` method on the `javax.tv.xlet.XletContext` interface. This interface also includes other methods to allow a DVB-J application to request or notify changes in its state.

The application listing and launching API allows an application to indirectly control the lifecycle of another application subject to security policy. This control is indirect because an application cannot invoke an Xlet state method directly, but goes through this API. This ensures that the resident Application Manager can always keep track of all the application that are running.

When a DVB-J application is stopped by an MHP terminal, the `destroyXlet` method of the signalled Java class implementing the Xlet interface, i.e. the start of the application shall be called by the application manager. In the case of the application being stopped due to a service selection operation, the stopping of the application shall be unconditional. This method call gives applications their last opportunity to save state before their execution stops. Applications which wish to survive the user of the MHP terminal zapping away from their service (e.g. during an advertising break) must save their state and reload that state when they are re-started if the user returns to that service later.

9.2.3 DVB-J Application Lifecycle

9.2.3.1 Introduction

This section describes the Xlet lifecycle model for the DVB-J API. This describes the capabilities of the Xlet in each state and the methods by which the application manager influences the life cycle state.This section is not directly related to other aspects of a system, such as graphics or shared resource allocation/management.

NOTE: The traditional Java platforms define a number of application models that have their own lifecycles associated with them. In general, they are designed to address specific issues on that platform. For instance, the Applet was designed to provide support for executable content in web pages. However, none of the existing application technology fully addresses the specific requirements of television receivers. The application lifecycle defined in this section is meant to be compatible with existing Java platforms and virtual machine technology.

9.2.3.2 DVB-J Application Lifecycle State Machine

The Xlet state machine ensures that the behaviour of an Xlet is close to the behaviour that television viewers expect, specifically:

- The perceived start-up latency of an Xlet can be very short.
- It is possible to put an Xlet into a state where it is not providing its service.
- It is possible to destroy an Xlet at any time.

The figure 15 shows the state machine model for Xlets. The Xlet states are defined in more detail in table 72.

The different influences that can cause an Xlet to change state include:

- The application manager uses the Xlet API to signal these changes to the Xlet.

  Various factors may stimulate the application manager to act in this way, for example:

  • Broadcast signalling (e.g. a change in the state of the application_control_code parameter carried by the AIT (see 10.4, "Application Information Table" on page 210)).

  • User selection of an application in a host provided UI

- The Xlet itself "decides" to change state

  The application uses the `XletContext` Object to communicate or request such changes to the application manager.

- Another Xlet acts via the application launching API (see 11.7.2, "Application discovery and launching APIs" on page 261).

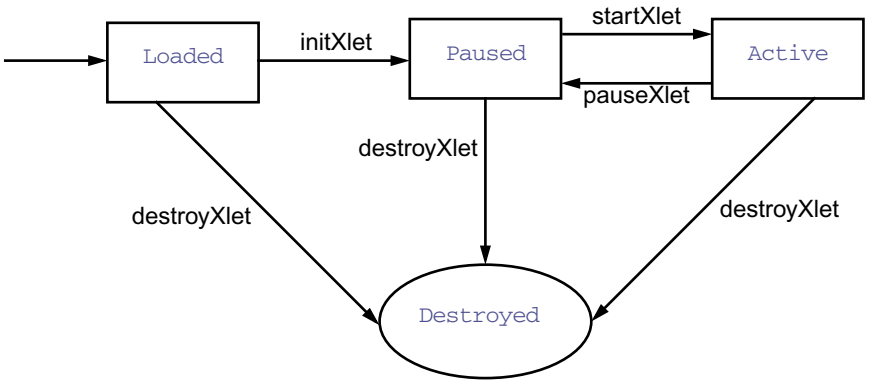


Figure 15 : Xlet lifecycle state machine diagram

Table 72 : Valid DVB-J application lifecycle states (Sheet 1 of 2)

State Name	Description
`Loaded`	The DVB-J application has been loaded and has not been initialized. The signalled Java class used to initiate a DVB-J application must implement the `javax.tv.xlet.Xlet` interface. Otherwise, the class (and hence the application) may be ignored. An instance of the signalled Java class is created by the application manager e.g. using the `Class.newInstance` method. Therefore a DVB-J application must have a public "default constructor". Otherwise, the class (and hence the application) will be ignored. If the default constructor returns without throwing an uncaught exception, then the application is considered to be "`Loaded`", otherwise the application immediately enters the `Destroyed` state and is discarded. Once the application has been successfully loaded and instantiated, the application manager can transition the application to the `Paused` state by invoking the `initXlet` method on the signalled class (implementing the Xlet interface). If the `initXlet()` method throws an `XletStateChangeException` then the application shall remain in the Loaded state. The only possible state transition for such an application is into the destroyed state. The application can request this itself or wait for the application manager to cause this transition. **Notes:** • Application initialisation is intended to occur in the `initXlet` method, rather than in the default constructor. • This state is entered only once per instance of an DVB-J application.
`Paused`	A `Paused` DVB-J application should minimize its usage of resources if it wants to maximize its probability of survival. This does not imply that it cannot be holding any resources, but in such a case, it would have a lower priority as concerns access to resources than it had when it was in the `Active` state. This state is entered: • From the `Loaded` state after the `Xlet.initXlet()` method returns successfully when invoked by the application manager (the first time). Other invocations of this method do not cause the change of state. Note that the application manager shall only call `initXlet()` once per instance of a DVB-J application. • From the `Active` state after the `Xlet.pauseXlet()` method returns successfully when invoked by the application manager. Other invocations of this method do not cause the change of state. • From the `Active` state upon entering the `XletContext.notifyPaused()` method.

Table 72 : Valid DVB-J application lifecycle states (Sheet 2 of 2)

State Name	Description
`Active`	The DVB-J application is functioning normally and providing service. This state is entered: • From the `Paused` state after the `Xlet.startXlet()` method returns successfully.
`Destroyed`	The DVB-J application has released all of its resources and terminated. This state is entered: • When the Xlet's `destroyXlet()` method returns successfully. The `destroyXlet()` method shall release all resources held and perform any necessary clean up so it may be garbage collected. • Upon entering the `XletContext.notifyDestroyed()` method. The Xlet performs its clean up actions before calling the `notifyDestroyed()` method. **Note:** This state is only entered once.

Only the DVB-J application can determine if it is able to provide the service for which it was designed. As such, in some respects an application manager cannot guarantee whether an DVB-J application can, or is, providing its service; and application manager can only indicate that the DVB-J application is able to do so. A typical sequence of DVB-J application execution is:

Table 73 : Typical DVB-J application lifetime walk through

Application Manager	DVB-J application
The application manager creates a new instance of an Xlet.	The Xlet's default (no argument) constructor is called, it is in the `Loaded` state.
The application manager creates the necessary context object for the DVB-J application to run, and initializes the Xlet.	The DVB-J application uses the context object to initialize itself. It is now in the `Paused` state.
The application manager has decided that it is an appropriate time for the DVB-J application to perform its service, so it signals it to enter the `Active` state.	The DVB-J application acquires any resources it needs and begins to perform its service.
The application manager no longer needs the DVB-J application to perform its service, so it signals the DVB-J application to stop performing its service.	The DVB-J application stops performing its service and might choose to release some resources it currently holds.
The application manager has determined that the DVB-J application is no longer needed, or perhaps needs to make room for a higher priority application in memory, so it signals the DVB-J application that it is a candidate to be destroyed.	If it has been designed to do so, the DVB-J application saves state or user preferences and performs clean up.

9.2.4 Xlet API

The Xlet API provides MHP application developers with an API that provides life cycle signalling. The Xlet API uses the callback approach to signal state changes.

This API is specified in section 11.7.1, "APIs to support DVB-J application lifecycle" on page 261.

9.2.4.1 Xlet State Change Semantics

An Xlet's state can change either by having one of the methods on its Xlet Interface called, or by making an internal state transition and notifying the application manager via the `XletContext` Object. The semantics of when that state change actually happens are important:

- Calls to `Xlet`: this interface indicates a successful state change only when the call successfully returns.
- Calls to `XletContext`: the `notifyDestroyed()` and `notifyPaused()` methods indicate a state change on entry. The `resumeRequest()` method indicates no state change, instead only a request to change state.

If a method on the Xlet interface throws an `XletStateChangeException`, the Xlet shall remain in the state it was in immediately prior to the call of the method throwing the exception unless otherwise specified. In this specification, the only exception to this rule is the `destroyXlet` method when the `unconditional` flag is `true` where throwing the `XletStateChangeException` is specified to have no effect. For the case of `initXlet` which may only be called once, the application manager may choose to transition the Xlet to the destroyed state (without calling `destroyXlet`) some implementation specific time later.

9.2.4.2 Xlet state change requests

The following table defines those states in which calls to the methods on `XletContext` relating to state management are valid;

Table 74 : States for valid state management calls

Call	State
notifyDestroyed	all states
notifyPaused	started only
resumeRequest	paused only

Calls to these methods when an Xlet is in any other state shall have no effect.

9.2.5 Multiple application environment support

The DVB-J platform allows for the simultaneous execution of several DVB-J applications.

Allowing several DVB-J applications to run simultaneously implies that some rules be defined for these DVB-J applications to share the resources of the MHP, and in particular for them to share the Input Focus and the Output Focus.

9.2.5.1 Control of DVB-J applications by other DVB-J applications

The MHP provides support for control of the lifetime of a DVB-J application by another DVB-J application. This feature enables broadcasters to write their own "Launcher applications" that take care of the presentation to the user of the availability of DVB-J applications, and that enables eventually the user to launch DVB-J applications. Note that the actual control of the lifetime of an DVB-J applications is done by the Application Manager only. The MHP only provides APIs that enable DVB-J applications to ask the Application Manager to start, stop, pause and resume DVB-J applications.

See 11.7.2, "Application discovery and launching APIs" on page 261.

9.2.5.2 Input Focus management

The input focus is defined as follows:

- the application that has input focus is in principle able to receive user-input events.
- other applications not having the input focus can request to receive a subset of user-input events via a dedicated API. See "org.dvb.event" on page 246.

9.2.5.3 Other resources management

The APIs defined in this specification provide support for resource allocation/revocation and resource revocation notification. The semantics of the APIs, however does not define under which circumstances an access to a resource is granted or revoked. While it is well understood that in most cases, it is up to the MHP implementation to define its own policy in terms of resource management, this section defines the basic rules that an MHP implementation has to follow.

The MHP specification describes a multi-application environment. Hence several applications may be competing for access to the same atomic resource. The resource notification API described in section 11.7.5 on page 266 provides a common way for applications to negotiate access to scarce atomic resources when such competition happens. This API allows for the MHP terminal to inform the application that currently holds the resource that another application wants to access this resource. It also provides a means for the owner of the resource and to the requester of the resource to communicate by private means. This private communication is reflected by the request_data object that the requester may pass to the owner. The semantics of this object is private and has to be known by both applications.

Some existing and general purposes java APIs that were developed before the MHP work was started do not use this general resource sharing mechanism. Hence access to resources addressed by these APIs are not subject to negotiation. For example, when an application holds a JMF player, if another application was to create a JMF player for the same content-type, the MHP has to decide by itself whether it withdraws the resource underlying the JMF player from the current owner and grants it to the requester.

It is also possible for applications to use the inter-application communication API to establish private communication channels enabling them to negotiate access to resources.

9.2.5.4 VM implementation

Where there are multiple DVB-J applications being executed as part of the same service, MHP terminals are allowed implement these in a single actual virtual machine instance. Regardless this shall conform to 11.2.1, "Basic Considerations" on page 241.

9.3 DVB-HTML Model

9.3.1 The DVB-HTML Application

9.3.1.1 DVB-HTML Application

A DVB-HTML application is defined as a set of documents selected from the DVB-HTML family of elements and content formats as defined in the specification. The extent of the set is described by the application boundary.

9.3.1.2 User agent

A user agent is an application that interprets a content format (in this case DVB-HTML documents).

Note This could be implemented as a plug-in.

9.3.1.3 DVB-HTML Actor

A DVB-HTML actor is defined as the locus of activity or process involved in running the specific set of DVB-HTML documents for some DVB-HTML application, plus any instantiated context for that data. The actor runs inside a user agent (native, plug-in or downloaded). The nature of the process is not defined explicitly as it depends on the nature of the user agent itself. More than one such locus of activity may be present in any given user agent.

There is a single DVB-HTML Actor for each running DVB-HTML Application, each DVB-HTML Application can consist of multiple documents several of which could be simultaneously displayed.

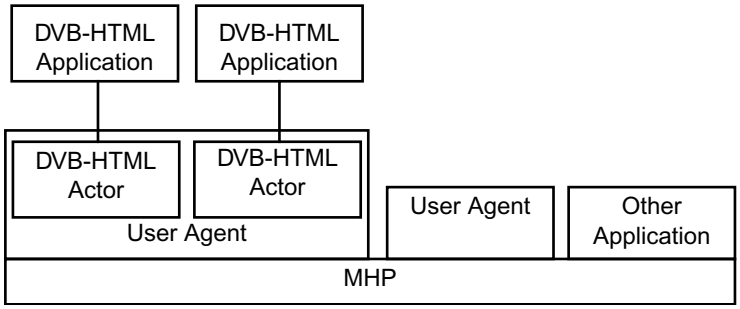


Figure 16 : Relationships between actors and applications

9.3.1.4 Application boundary

The application boundary defines the namespace of the DVB-HTML application, all content documents within this namespace are considered to be part of the DVB-HTML application, content documents outside the namespace are considered to be in other DVB-HTML applications. This namespace is used to determine: to which application each piece of cached material belongs, to assist an MHP in more efficient pre-fetching and to facilitate storing applications.

The logical extent of a DVB-HTML application could potentially be quite large, and for various reasons might not all be on the MHP terminal at one time. Part of it might be broadcast, part of it might be on local storage, part of it might be on the world wide web - some of it may even be generated on demand. For this reason the compact format of the regular expression is used to define the extent. The set of DVB-HTML documents making up a DVB-HTML application is defined by a regular expression over the locator language, broadly a locator consists of a text string in the following form from RFC 2396 [41] and acts as the glue which holds the application together.

```
scheme://host/dir1/dirn/file#subref
```

A regular expression is the definition of a set by a pattern which can test whether a given string is or is not a member of the set, for example the regular expression:

```
https?://www\.(dvb|etsi)\.org)/[a-z0-9/]+\.html?
```

Matches the logical locator of any file on both www.dvb.org or www.etsi.org, either reached by http or https, if and only if it is a DVB-HTML file (its name ends in ".htm" or ".html"), and its pathname contains only alphanumeric characters. Quite terse definitions can match a large set of files [see for example Compilers [C]].

9.3.1.4.1 Regular Expression Syntax

A regular expression (RE) specifies a set of character strings to match against. A member of this set of strings is said to be matched by the regular expression.

In order for a locator to match a boundary regular expression the whole locator must be matched by the whole regular expression; any parameters (characters including and after the first "?" or "#" in the locator) are not considered as part of the locator for purposes of boundary matching.

The form of regular expression used for defining application boundaries is defined as a POSIX Extended Regular Expression from POSIX [59] section 2.8.4.:

Relative locators in the DVB-HTML application are expanded to a full URI as defined in RFC 2396 [41], (the default base URI being that carried in the application location descriptor) before being matched.

A pattern may be broken into sub patterns in a set of application boundary descriptors (see signalling). The full pattern is formed from the OR of all the sub patterns. Each application boundary descriptor may be associated with a label (see 10.10.3, "DVB-HTML application boundary descriptor" on page 233). This label can be used for pre fetching in a transport specific manner, for example in an object carousel it defines that all modules matching the label should be preloaded.

For example: an application consists of an entry web page /phase0/index.html, and is factored into three sub sections, each of which has an associated stylesheet and image directory.

```
labelA: (/phase0/.+\.html | /phase0/images1/.+\.png | /phase0/scripts1/.+\.js)
labelB: (/phase1/.+\.html | /phase1/images/.+\.png | /phase1/scripts/.+\.js)
labelC: (/phase2/.+\.html | /phase2/images/.+\.png | /phase2/scripts/.+\.js)
```

The entry point locator signalled for this application matches the first regular expression, this allows the pre-fetch mechanism to load the modules labelled with labelA (which the broadcaster arranges to contain the contents of directory phase0), Once the user agent is running, it can use this information to detect which if any links from the current page might transition to a new phase and therefore require more pre-fetching.

9.3.2 DVB-HTML Application Lifecycle

9.3.2.1 Introduction

There are three key parts of the DVB-HTML application lifecycle model:

a) How applications are signalled as available to the MHP, and for auto start and prefetch applications how the start time is synchronized with any associated media stream.

b) How and when the application manager or other launcher application makes the presence of an non auto-start application known to the user and provides it with a trigger. This is covered by the application discovery and launching mechanisms.

c) How a broadcaster controls an actor after it has started.

9.3.2.2 Signalling

The DVB-HTML Application is signalled as described in chapter 10, "Application Signalling" on page 208.

The application manager can be requested to start a DVB-HTML application either because it is signalled as auto start, or through the application launching API.

On receiving the request that a DVB-HTML application is to be started (i.e. an AUTOSTART or PREFETCH appears in the AIT or it is user instantiated), and there is no application with the same applicationID already instantiated, the application manager should attempt to find a suitable user agent. It can also at this point begin pre-fetching material.

If the application manager is unable to instantiate a user agent either through lack of resources, or no suitable user agent being available then any pre-fetching can be aborted, and any trigger signal can be ignored.

It is platform dependant at what time a DVB-HTML autostart application starts. For a pre-fetched DVB-HTML application a trigger is required which carries the time at which the application should start providing service.

The DVB-HTML actor can be in one of 5 DVB-HTML Application states.

- Loading
- Active
- Paused
- Destroyed
- Killed

Each of these states has a precise meaning outlined in the following sections. The transitions between states are made as a result of, for example:

- A trigger, such as a request to go to a new document,
- A trigger such as the DVB-HTML application making an explicit request to change state,
- A change in the external environment i.e. the application_control_code in the AIT changes.

Since a user agent may be performing as several actors, it can be in several of these states at one time, each actor however will be labelled with a unique application ID.

A DVB-HTML application proceeds by moving between documents, while the documents remain within the DVB-HTML application boundary the DVB-HTML application continues to run normally.

Links within an DVB-HTML application normally replace the existing document, but attributes may be present on a link which cause both the new and old document to be visible at the same time.

9.3.2.3 Lifecycle control

The state model for the DVB-HTML application lifecycle control model described in this section reflects the signalling (see 10.6, "Control of application life cycle" on page 215) and is an abstract view of how a DVB-HTML application operates, and considers the kinds of resources that a user agent would need in order to function properly: resources concerned with output (rendering), input (event catching) and connection (the availability of the content).

The abstract model however is mostly illustrative and does not imply any resource management strategy nor is it intended to overly constrain the implementation of a user agent;

9.3.2.3.1 State diagram

The following transition diagram summarizes the states and the transitions between them.

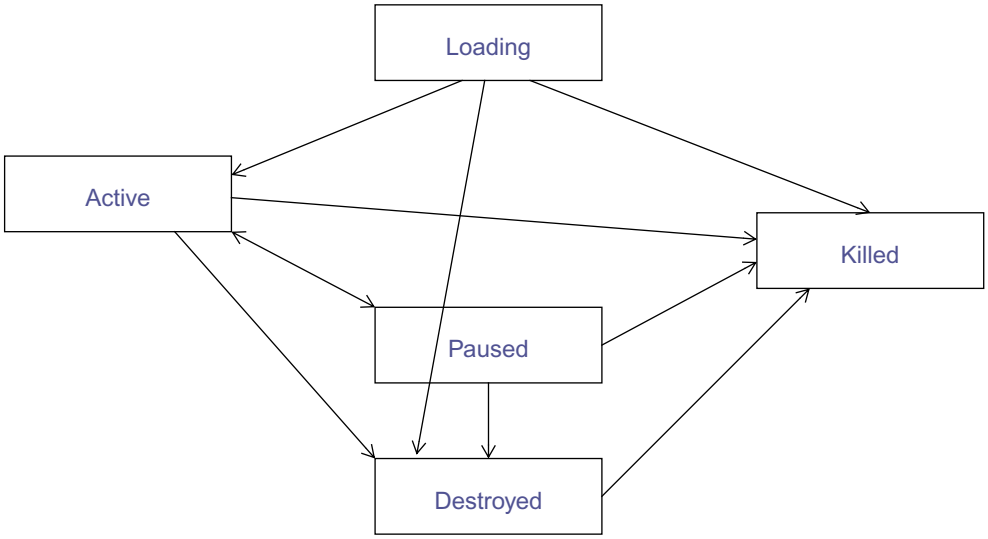


Figure 17 : DVB-HTML application life cycle state diagram

9.3.3 The State Model

The entry state of the state machine, Loading, is characterized by access to the content resources and signalling resources but does not have or require input and output resources. This implies the actor can prefetch content and receive triggering events for transition to the Active state, but will not be presented to the viewer.

On entry into the Active state the actor would be assumed to have full access to the content of the current document and all resources of the MHP, subject to resource management and security issues.

The paused state is a reduced operational state. If the application manager or the user agent needs resources for other purposes, an actor may be moved to the paused state, when in this state it may no longer have full (or even any) access to resources. When the actor is reactivated it returns to its previous state.

The destroyed state can be characterized as loss of the content resource. The actor may still be able to run the DVB-HTML application due to caching or other mechanisms but must be prepared for loading of some or all of the documents from within the DVB-HTML application to fail. It is implementation dependent how such failure is handled. This is a way for the broadcaster to signal to the MHP that it is on it's own.

The killed state is characterized by the loss of all resources, and is the signal for actions concerned with cleanup of the actor. The MHP reclaims whatever resources it deems necessary. It is implementation dependent whether cached material is disposed of.

If the AIT signal is KILL, an actor is forcibly terminated (and all resources associated with it reclaimed) regardless of state.

9.3.3.1 Loading

9.3.3.1.1 Name

Loading

9.3.3.1.2 Entry actions

Instantiation of an actor.

9.3.3.1.3 Activities

Waiting for documents to be available and loading documents without rendering them.

9.3.3.1.4 Resources

Content, signalling, Output

9.3.3.1.5 Transitions

Active. preconditions:

- enough data is available to present something sensible.

Killed. preconditions:

- If the DVB-HTML application is signalled as KILL,

Destroyed. preconditions:

- If the DVB-HTML application is signalled as DESTROY,

9.3.3.1.6 Comment

This is the entry state of the state machine This state is entered only once in the lifetime of the DVB-HTML actor. Any start-up phase of a user agent can also be considered as part of this state. When an actor is in this state it is not rendering anything. This state should not be confused with any prefetching of modules which may be carried out by the MHP prior to application launch.

9.3.3.2 Active

9.3.3.2.1 Name

Active

9.3.3.2.2 Activities

Gathering and parsing current document and related resources., rendering document, Maintaining rendered documents. receptive to events, waiting for triggering event to show loaded documents.

9.3.3.2.3 Entry actions

If application is signalled as pre-fetch wait for trigger before displaying anything.

9.3.3.2.4 Resources

Content, signalling, output, input.

9.3.3.2.5 Transitions

Pause.

- If the user agent or application manager puts the DVB-HTML application in PAUSE.

Destroyed.

- If the DVB-HTML application is signalled as DESTROY.

Killed.

- If the DVB-HTML application is signalled as KILL

9.3.3.2.6 Comment

This state is the steady state,

In this state it is user agent specific as to whether a partially loaded document is displayed, or deals with input triggers.

If a transition is made to a new document within the application, the actor remains in this state

if a related resource document of the main document changes, then the resource may be reloaded, causing the DVB-HTML actor to receive appropriate DOM events, however the DVB-HTML actor is not considered to change state. Similarly the DVB-HTML actor may gain and lose the focus while in this state, receiving the appropriate DOM events – it may receive fewer input events when it does not have the focus.

If the AIT no longer refers to the DVB-HTML application no special action is taken for DVB-HTML actors that are in the Active state.

9.3.3.3 Paused

9.3.3.3.1 Name

Paused

9.3.3.3.2 Activities

DVB-HTML actor should minimise its use of resources.

9.3.3.3.3 Resources

Application specific.

9.3.3.3.4 Transitions

Active.

- If the DVB-HTML application is resumed.

Destroyed.

- If the DVB-HTML application is signalled as DESTROY.

Killed.

- If the DVB-HTML application is signalled as KILL

9.3.3.3.5 Comment

The semantics of this state are both user agent and DVB-HTML application specific. When the DVB-HTML application returns from the "Pause" state, the environment might have changed (loss of resources or network connections) and some events may not have been reported.

9.3.3.4 Destroyed

9.3.3.4.1 Name

Destroyed

9.3.3.4.2 Activities

Loading documents. Rendering documents. Consuming events. Interact with the user.

9.3.3.4.3 Resources

input and output.

9.3.3.4.4 Transitions:

Killed.

- {If the DVB-HTML application is signalled as KILL} OR {local event forces the actor to terminate, possibly through application manager}

9.3.3.4.5 Comment

This state indicates the MHP may no longer be able to access the content resources required to run the DVB-HTML application. It is DVB-HTML application and user agent specific as to whether the actor continues to run, and if it does how the user should be informed if any link is no longer available because the content it refers to is no longer available, or a cached copy has expired. The DVB-HTML actor may continue to execute in the destroyed state until the user actively dismisses it.

9.3.3.5 Killed

9.3.3.5.1 Name

Killed

9.3.3.5.2 Entry actions

Release of resources.

9.3.3.5.3 Activities

Termination of the DVB-HTML application.

9.3.3.5.4 Resources

none.

9.3.3.5.5 Transitions

none

9.3.3.5.6 Comment

After the activities in this state are finished, the application is deemed to have terminated. This state is the exit state of the state machine.

9.4 Application activity events

Each page within an application shall receive load and unload events with the following constraints:

- The DVB lifecycle `AppActive` event precedes the first DVB-HTML `load` event.
- There is no guarantee on the relative ordering of the first DVB-HTML `load` event and the DVB lifecycle `AppStarting` event.
- When a document is unloaded because of a transition to a new page the current document will receive an `unload` event and all event handlers will be allowed to complete before the new page begins its lifecycle.
- When an application transitions to the Killed state (i.e., the DVB-HTML actor ceases to execute), there is no guarantee that the current document will receive any `unload` event.
- When an application transitions to the Destroyed state the application may continue to execute in the Destroyed state, in which case `unload` events and new `load` events may be received if assets are available
- The document `load` event is received after all parts that can receive `load` events have received them. Specify when the `load` event is fired for each media type (e.g. streamed, multipart replace)
- No non-lifecycle events are delivered to a page until after the `DVBDOMStable` event is delivered
- Events that occurred when the application is in the from the Loading state and may be delivered when in the Active state

NOTE The first two constraints will not be visible to documents in frames which share an application boundary with their parent, as they do not receive DVB lifecycle events.

The following state diagram illustrates these interactions.

- DVB-HTML lifecycle states and transitions are in This Style.
- DOM events are in **This style**.
- States and transitions which are only part of this model are in *this style*
- The *request* transition indicates a request (from user inputs, trigger events etc.) to navigate to a new page.
- The (*no event*) transition may happen immediately, with no other input.
- The *loading page* state covers loading content for a new page and may cover full or incremental rendering of the page (although the page may not be presented to the user, if the application is signalled as PREFETCH and the AppStarting event has not been received).
- The *loading content* state covers the referenced content for a new page after the initial content is parsed and may cover full or incremental rendering of the page (although the page may not be presented to the user, if the application is signalled as PREFETCH and the AppStarting event has not been received).
- In the *loaded page* state, the page has been loaded. Unless the application is signalled as PREFETCH and no AppStarting event has occurred, it will also have begun to be presented to the user.
- In the *unloading page* state, content loading for the new page may begin.
- The AppStarting, AppPause, AppResume and AppDestroyed DVB-HTML lifecycle events are not shown in this diagram, because the only constraints on them are in relation to the standard MHP lifecycle states and events, not in relation to the DOM load and unload events.

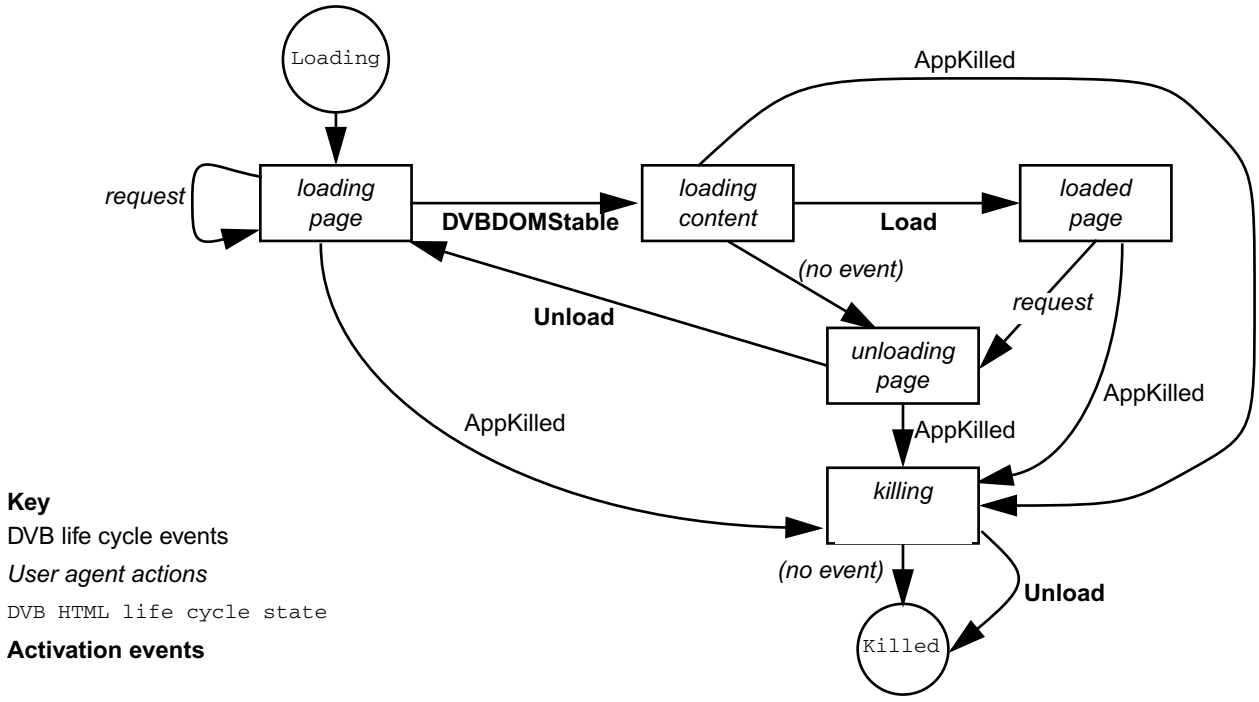


Figure 18 : Activation event state model

9.4.1 Event queue handling

The HTML and DOM standards say little about how events are inserted by the User Agent or how they are queued. DVB-HTML User Agents shall observe the following list of clarifications.

- After the `unload` event is sent, no other events shall be sent to the document, so all trigger event listeners may be discarded. (For clarification: `AppDestroyed` and `AppKilled` happen before this.)
- When navigating to a new page in a given window or frame, the user agent may load some or all of the new page and its associated files, before sending an `unload` to the current document. It shall not begin to render the new page, or deliver DOM events to it, until event handling of the `unload` event for the old page is complete.
- In loading resources for a new page, the user agent may register for, receive and queue DSM-CC events; however it shall not deliver them to the DOM until after it has delivered the `DVBDOMStable` event.
- The ECMAScript "document" variable shall be bound to the relevant document in all event handlers.

NOTE Together the above imply that trigger events (as is theoretically the case with user input events) may be lost during page transitions or even during presentation of a page. Authors should be aware of this possibility and code accordingly.

9.5 Inter application resource management

This is implementation dependent except as detailed below.

- Where there is a resource conflict between two applications signalled as part of the same service and running in the same service context, this shall be resolved using the priority signalled in the application_priority field in the application descriptor for each application.

9.6 Life cycle of Xlets embedded in DVB-HTML

The state of an Xlet is influenced by the state of the page that contains it, in addition to being influenced by the state of the containing application. The Xlet's lifecycle is bound by the lifecycle of the HTML application and page, but the Xlet may, through its own actions, be in a less active state than the containing HTML page. For example, an Xlet may destroy itself even if the page in which it is contained is active.

9.6.1 Starting embedded Xlets

For each Xlet specified with an object tag, a new classloader shall be created to load its classes. The standard MHP semantics surrounding Xlet classloaders apply. For example, classloaders shall not be shared with other Xlets.

When an HTML page is being loaded, any Xlets embedded within that page shall be requested to enter the loaded state, as defined for the `java.xlet.Xlet interface`.

Sometime before the page becomes visible, the platform shall request all embedded Xlets in that page to enter the paused state.

During the process of making a page visible, the platform shall request all paused Xlets (i.e. those that did not fail or voluntarily terminate before reaching this state) to enter the active state. The exact point during this process at which this happens is implementation dependent, but shall not be before any load event for the page.

When the containing DVB-HTML application transitions from the paused state to the active state, all paused Xlets that are on the current page shall be requested to enter the active state.

9.6.2 Termination

When a page becomes invisible due to navigation away from that page or when the containing DVB-HTML application becomes paused, all embedded Xlets that are in the active state shall be requested to enter the paused state.

It is implementation dependent when an Xlet that was paused due to navigation is transitioned from the paused state to the destroyed state, but this shall be after any unload event for the page in which it was embedded.

When the HTML application enters the killed state, all embedded Xlets must be put into the destroyed state by the platform.

When the DVB-HTML application enters the HTML destroyed state, it has no effect on the state of any embedded Xlets. Those embedded Xlets may choose to change their state as resources are withdrawn during such a transition, however they are only forced to change state when the DVB-HTML application enters the killed state.

The standard MHP rules concerning the destruction of an Xlet apply. Notably, an Xlet that fails to respond to a lifecycle notification is eligible for destruction, even if the containing page is still visible. Similarly, an Xlet can request that it be destroyed. This will cause the Xlet to be destroyed, but it will have no effect on the lifecycle of the page in which the Xlet is contained nor shall it cause the page to be reflowed. Similarly, an Xlet that puts itself in the paused state will have no effect on the state of the enclosing HTML page or application.

Of course, an Xlet might initiate an action that causes the application containing it to be terminated. For example, if the Xlet does a service selection, the application might not be signalled in the new service. Here, the existing MHP semantics concerning application lifecycle apply.

9.6.3 General issues

Multiple Xlets per XHTML document are allowed to the same extent as multiple Xlets are allowed in the same DVB service.

Instances of embedded Xlets:

- shall not be listed in the AIT
- shall not be exposed in the application listing an launching API when launched through a DVB HTML application
- inherit the transport protocols of the containing HTML application

When an embedded Xlet is in its active state, it shall have DOM access. It is implementation dependent if it will have DOM access in other states.

9.7 Services and applications not related to conventional DVB services

Section 9.1 of this specification describes MHP applications whose lifecycle is controlled through broadcast services. This specification additionally supports applications whose lifecycle is not bound to that of broadcast services. These include:

- Applications signalled through the interaction channel (see 9.7.1, "Applications loaded from the interaction channel" on page 204).
- Applications running from storage in the MHP terminal (see 9.7.2, "Stored services" on page 204).

9.7.1 Applications loaded from the interaction channel

In this scenario the application signalling comes from the interaction channel rather than the broadcast channel. In overview:

- Data equivalent to the broadcast AIT is provided from the interaction channel in the "AIT file". The connection to the server that provides the data is analogous to a connection to broadcast service.
- A locator specifying the location of the "AIT file" is analogous to the locator specifying a broadcast service.
- Navigation to this locator is analogous to selection of a broadcast service. The service selection could either be from the MHP terminal's intrinsic navigator or via an application using the service selection API.
- As with navigation between broadcast services when an interaction channel locator is selected as the current service the MHP terminal retrieves and decodes the "AIT file". Decisions about which currently running applications are allowed to remain running and which new applications are launched are based on the information in the "AIT file" just as they would be when navigating between broadcast services.
- When a locator specifying an AIT file is successfully used in a service selection operation, the applications database shall be populated with the information from that AIT file.

9.7.2 Stored services

Stored services are an encapsulation of one or more applications. The lifecycle of a stored service shall obey the same rules as defined for a broadcast service in 9.1.1, "Basic lifecycle control" on page 183. So, for example, currently running applications will be stopped if they are not listed to be runable in the stored service's AIT information.

Hence there is no requirement to execute a stored services simultaneously with a broadcast service or application.

Stored applications running as part of a stored service shall:

- Execute with the Application identification that was stored with them when they were stored.
- Be able to access a file system using MHP APIs where:
  - any file that is present shall have the same name, relative path as it did in the broadcast file system.
  - any API providing byte level access to the data of a file shall return the same data as was broadcast.
  - the set stored may be a superset of the files listed in the Application description file.

NOTE: This does not preclude the implementation also storing an optimised representation of files that would be presented to certain APIs. For example, this allows class files to be precompiled for subsequent presentation a the class loader.

The results of an application attempting to access files or directories above the directory that originally contained the Application description file are implementation dependant but shall either succeed or fail using the failure modes specified for the mechanism used.

When a stored service is started, any previously running streamed media decoders shall continue to run. It is the responsibility of applications to stop them if so required. Any resources used by such streamed media decoders shall have the lowest possible priority in any resource conflicts.

A stored service has the same lifecycle semantics as other services types (such as broadcast). So, when a stored service is selected the stored AIT information is inspected to determine which (if any) applications should auto start and which (if any) currently running applications are allowed to continue running by virtue of being included in the stored service.

NOTE: Currently, no API has been defined that would allow the addition of externally authorised applications to a stored service.

A stored service is built up by identifying applications from a broadcast service. It is not a copy of a broadcast service.

When an application is added to a stored service, the following information shall be stored:

- The storage_property and version information from the Application storage descriptor (see 10.14.2 on page 238).
- Sufficient information to be able to reconstruct the application_descriptors_loop (e.g. so that it can be returned by the `org.dvb.application.AppAttributes.getProperty()` method).
- The application type.
- The Application identification.
- At least all those files listed in the Application description file with priority of "critical".
- If the Application description file lists any MHP security file (such as a signature file or a CRL) then these files shall be stored in the normal way (with due regard to the priority etc.). However, it is not necessary to list the security files in order to retain the security information as the method of retention of this information is an implementation detail.
- Implementations may store files in addition to those listed in the Application description file.
- Sufficient information about the certificate chain that authenticated the application to be able to determine if any of those certificates have been revoked when it comes to run the application.
- Sufficient information to be able to construct the set of permissions to be granted to the application (this behaviour is equivalent to evaluating the permission request file at the time of launching the application).

Implications of the above are:

- If any non-critical files are needed for the application functionality then the application is responsible for obtaining them in the event that they are not stored.
- No information from AIT common loop descriptors is required to be stored.
- Information from the transport protocol descriptors is only relevant during the storing of the application. When the application is executing from storage it is responsible for creating the transport connections it requires.
- It is not required to store file MIME type as carried by the optional Content type descriptor. The application developer is responsible for ensuring that stored files can be correctly interpreted without relying on this information.
- It is not required to store cache priority information from the Caching priority descriptor. The application developer is responsible for ensuring that dynamic data is no listed in the Application description file.

If applications within a stored service are also listed in a currently selected broadcast service they are runable with the same constraints as other broadcast applications in the context of that broadcast service. So, as with "Broadcast service related stored applications", the consequence of storage is to allow better performance.

9.7.3 DVB-J Model

For DVB-J applications, APIs required to include some support for these applications include the following.

- "Service Selection API" (see 11.6.2 on page 259)
- "Content Referencing" (see 11.7.6 on page 266) as described in 11.11.12, "Support for the HTTP protocol in DVB-J" on page 280
- "Protocol Independent SI API" (see 11.6.5 on page 260) as described in 11.11.12, "Support for the HTTP protocol in DVB-J" on page 280

When a stored service is successfully created using the method `StoredServiceCreator.createStoredApplicationService`, this service shall appear in the list of services maintained by the `SIManager`. It shall be returned by `filterServices` both when passed an instance of `ServiceTypeFilter` constructed with the type `StoredApplicationService.STORED_APPLICATION_SERVICE` and when passed null to list all known services. The method `ServiceContext.select` shall support selecting stored services as identified by instances of `StoredApplicationService` created or returned using all these mechanisms. This is described in more detail in 11.12.2.2, "Modified behaviour of MHP 1.0 APIs" on page 281.

In profiles where application signalling over the interaction channel is supported, the method `SIManager.getService` shall accept instances of `javax.tv.locator.Locator` whose external form is valid "http" and "https" URLs and return a `Service` object. The method `ServiceContext.select` shall support selecting services identified by such service objects. This is described in more detail in 11.11.12, "Support for the HTTP protocol in DVB-J" on page 280.

9.7.4 Common behaviour

The environment in which stand-alone MHP applications are presented or executed shall be the same as for applications related to a conventional DVB service except as detailed below.

- Any existing video & audio running from before the application was started shall continue running. Applications shall not have a mechanism for attaining the identity of any such existing video or audio. Applications wishing to hide any such existing video may cover the full screen area with graphics. Applications have no ability to hide any such existing audio. MHP terminals shall assign the lowest possible resource priority to the presentation of any such existing video and audio.

9.8 Lifecycle of internet access applications

9.8.1 General issues

MHP terminals supporting the internet access profile shall support at least the execution of one internet access application at one time. There is no requirement to support the execution of more than one internet access application at one time. There is no requirement to support the execution of internet access applications and MHP applications at the same time. MHP terminals where internet access applications and MHP applications can be in memory and executing code at the same time but cannot share access to the screen are allowed. Such MHP terminals shall be considered as supporting internet access applications and MHP applications at the same time in the rest of this document. In these MHP terminals, any MHP applications in the active state may be put in the paused state when they loose access to the screen to an internet access application. This specification is intentionally silent about priorities for access to resources like memory in the event of a conflict between MHP applications and internet access applications.

9.8.2 Starting internet access applications from MHP applications

Where MHP terminals support simultaneous execution of internet access applications and MHP applications at the same time, then the internet access application shall start when requested. The internet access application shall be considered to be a peer of the MHP application and not a child of it. The lifecycle of the internet access application is not constrained by the lifecycle of the MHP application which started it.

Where MHP terminals do not support this simultaneous execution then the MHP application shall be destroyed / killed as part of the starting of the internet access application. In this case, when the end user of the MHP terminal exits the internet access application, the MHP terminal shall return to presenting the DVB service (if any) which it was presenting before the internet access application was started. Any MHP applications in this service will be re-started without any previous state using the normal mechanisms defined in version 1.0 of the MHP specification.

The APIs to enable DVB-J applications to manipulate internet access applications are defined in Annex AH, "(normative): Internet client APIs" on page 1365.

9.8.3 Starting MHP applications from internet access applications

In MHP, internet access applications shall support end user starting of DVB services (i.e. using the 'dvb:' URL) and MHP applications signalled over the interaction channel (i.e. using an AIT file referenced by an HTTP URL). This shall be handled by the normal service selection mechanism used elsewhere in the MHP specification (e.g. in the implementation of the service selection API).

On MHP terminals which support running internet access applications and MHP services at the same time, the new MHP application shall just start running. If there is already a running MHP service, that service shall be stopped as if the end user of the MHP terminal had selected the new service using the navigator. On MHP platforms which support running multiple MHP services at the same time, if no more MHP services can be started then it is implementation dependent which running service shall be stopped in order for the newly selected service to start.

On MHP terminals which do not support running internet access applications and MHP applications at the same time, the internet access application shall behave as if the end user of the MHP terminal had asked to exit that application. This may result in a platform specific dialogue with the end user, e.g. to ask about saving partly composed email messages as a draft. Depending on the nature of any such dialogue, the selection of the DVB service may fail if the end user of the MHP terminal does not wish to exit the internet access application concerned.

There is no requirement to remember the internet access application which selected a DVB service or to return to that internet access application when leaving the DVB service which it selected. This is the opposite of starting internet access applications from MHP applications.

9.9 Plug-ins

Section 5.4 of this specification defines the concept of plug-ins for use in migration situations, for the support of applications in existing content formats. Services and networks using such an approach to migration have a number of choices defined by this specification. Where a service carries one or more applications in an existing content format (referred to as delegated applications), those applications may be signalled either using the native signalling defined for that existing content format or using the AIT based signalling defined in this specification or both. Two types of plug-ins are defined: inter-operable plug-ins and implementation specific-plug-ins. This specification is intentionally silent about the operation and signalling of implementation specific plug-ins. Signalling of inter-operable plug-ins shall be done as defined in 10.13.2, "MHP signalling scenario" on page 236.

The lifecycle of inter-operable plug-ins shall obey the semantics of DVB-J applications concerning service selection operations as defined under the heading "A new service being selected replacing a previously selected one" in section 9.1.4.1 of this specification.

Where the AIT is used to signal delegated applications, the maintainer of the specification for that format shall register with the DVB project to obtain a value for the "application type" field of the AIT (see table 76, "Application types" on page 212). Having done this, the maintainer of the specification for the existing content format is responsible for defining any additional descriptors for the AIT which are required for the support of their content format.

10 Application Signalling

10.1 Introduction

This section covers the following topics:

- how the receiver identifies the applications associated with a service and finds the locations from which to retrieve them
- the signalling that enables the broadcast to manage the lifecycles of applications
- how the receiver can identify the sources of broadcast data required by the applications of a service

Much of the signalling is generic. For example, the Application descriptor is independent of the application representation. Other signalling is specific to the application representation or transport protocol (such as the DVB-J application descriptor and the IP Routing Descriptors).

10.1.1 Summary of common signalling

The minimum signalling requirements for any MHP applications are summarised as follows:

- PMT with Application Signalling Descriptor to identify the service component carrying the Application Information Table.
- Application Information Table with the following information in its common descriptor loop:

  - Transport protocol descriptor (all applications descriptions shall be within the scope of at least one Transport protocol descriptor. These can be placed in either or both of the descriptor loops)
- Application Information Table with the following information in its application information descriptor loop:

  - Application descriptor
  - Application name descriptor

10.1.2 Summary of additional signalling for DVB-J applications

The minimum additional signalling required for DVB-J applications are summarised as follows:

- Application Information Table with the following information in its application information descriptor loop:

  - DVB-J application descriptor
  - DVB-J application location descriptor

10.1.3 Summary of additional signalling for DVB-HTML applications

The minimum additional signalling required for DVB-HTML applications are summarised as follows:

- Application Information Table with the following information in its application information descriptor loop:

  - DVB-HTML application descriptor
  - DVB-HTML application location descriptor

10.1.4 Summary of additional signalling for applications carried via OC

In either the "common" (first) descriptor loop or the "application" (inner) descriptors loop:

- Transport protocol descriptor, with the selector bytes containing the OC specific information as defined in table 94

10.1.5 Summary of additional signalling for applications carried via IP

Application Information Table with the following information in its common descriptor loop:

- Routing Descriptor IPv4 or Routing Descriptor IPv6 as appropriate.

In either the "common" (first) descriptor loop or the "application" (inner) descriptors loop:

- Transport protocol descriptor, with the selector bytes containing the IP specific information as defined in table 95.

10.1.6 How to add a new scheme (informative)

The signalling scheme is intended to be extensible with regard to the application representations and transport protocols that are supported. The areas that need to be addressed when doing this are summarised below.

To add further transport protocols:

- Extend table 93, "Semantic of selector bytes" on page 224
- Possibly define further specialist descriptors such as the IP Routing Descriptors

To add further application representations:

- Define further specialist descriptors such as the 10.9, "DVB-J specific descriptors" on page 230
- Define the application type specific life cycle control codes in 10.6, "Control of application life cycle" on page 215.

Where constant values are registered by this specification extend the table 107, "Registry of constant values" on page 234.

10.1.7 Service information

See 10.12, "Service Information" on page 235.

10.2 Program Specific Information

The elementary stream (inner) loop of the PMT for a DVB service supporting one or more MHP applications must reference streams for the following:

- location of the stream transporting the Application Information Table
- location of the stream(s) transporting the application code and data

10.2.1 Application signalling stream

The elementary stream information for the PMT entry describing the elementary stream carrying the Application Information Table has the following characteristics:

- The stream_type is set to 0x05 (ITU-T Rec. H.222.0 | ISO/IEC 13818-1private sections).
- An Application Signalling Descriptor

There may be more than one elementary stream carrying application signalling information for a service.

10.2.2 Data broadcast streams

The minimum signalling in the PMT associated with data broadcast components is the value of the PMT stream_type field required by the DVB data broadcasting specification (EN 301 192 [5]) for the transport protocol. The full details of the data broadcast protocol, the location of its "principal" component etc. are provided in the AIT (see 10.4, "Application Information Table" on page 210).

Optionally the PMT may include Data broadcast id descriptors.

NOTE: Inclusion of Data broadcast id descriptors enables receivers to start mounting the file system that delivers applications concurrently with acquiring the AIT that identifies which applications are of interest. Enabling this concurrent operation may allow receivers to accelerate their activation of an interactive application. See B.2.8, "Mounting an Object Carousel" on page 411.

The Data broadcast id descriptor identifies the "principal" component of the data broadcast. The detailed semantics of this optional signalling reflects the transport protocol. For example, in the case of a DVB Object Carousel it identifies the component carrying the DSI.

There may also be certain protocol specific descriptors in the PMT. For example, the Object Carousel requires the inclusion of the carousel_id_descriptor (see B.2.8, "Mounting an Object Carousel" on page 411).

In its minimum form (with no selector information) a Data broadcast id descriptor just identifies the "principal" component. This optionally may be extended with selector information that identifies the application types of the autostart applications delivered by that data broadcast. See 10.7.2, "Data broadcast id descriptor" on page 217.

10.3 Notation

10.3.1 reserved

The term "reserved" when used in the clause defining the coded bit stream, indicates that the value may be used in the future for ISO defined extensions. Unless otherwise specified within the present chapter all "reserved" bits shall be set to "1".

10.3.2 reserved_future_use

The term "reserved_future_use", when used in the clause defining the coded bit stream, indicates that the value may be used in the future for ETSI defined extensions. Unless otherwise specified within the present chapter all "reserved_ future_use" bits shall be set to "1".

10.4 Application Information Table

The Application Information Table (AIT) provides full information on the data broadcast, the required activation state of applications carried by it etc.

Data in the AIT allows the broadcaster to request that the receiver change the activation state of an application.

10.4.1 Data errors

AITs which contain errors shall be processed as follows:-

- An error in an application loop shall result in that entry in the application loop being silently discarded. Processing of that application loop shall continue with the next entry (if any).
- An error in an application information section outside of an application loop shall result in that entire application information section being silently discarded. Processing of the AIT shall continue with the next application information section (if any).

10.4.2 AIT transmission and monitoring

The minimum repetition rate for each AIT subtable is 10 seconds.

Provided that AITs for the selected service are delivered on 3 or fewer elementary streams then the maximum time interval between the moment the AIT is updated and the moment the new version is detected by the MHP shall be no more than 30 seconds.

Note If broadcasts use more than 3 elementary streams to deliver AITs then receiver response time may degrade in an unpredictable way.

The MHP terminal is only required to monitor AIT sections for application types that it can decode. The terminal's ability to decode also comprehends the interoperable plug-ins available to the terminal.

The set of application types listed in the application database reflects the set of AIT sections being monitored. So, this may be a subset of the application types being broadcast in the case that the broadcast carries a superset of the terminal's capabilities.

10.4.3 Optimised AIT signalling

The optional AIT_version_number carried by the Application Signalling Descriptor allows a possible optimisation of receiver burden as it allows receivers to acquire the AIT only after they see changes in the AIT version advertised in the PMT.

See 10.7.1, "Application Signalling Descriptor" on page 217.

10.4.4 Visibility of AIT

If an application tunes away from a transport stream where its signalling is carried without selecting a new service, it will continue running although the AIT is not visible.

In MHP terminals with multiple network interfaces, if the AIT of the selected service is visible via any of them, then the AIT signalling is used as normal.

10.4.5 Definition of sub-table for the AIT

All sections on the same PID with the AIT table_id and the same value of application_type are members of the same sub-table.

10.4.6 Syntax of the AIT

The Application Information Section describes applications and their associated information. Each Application Information Section includes one "common" descriptor loop at the top level for descriptors that are shared between applications of that sub table and a loop of applications. Each application in the application loop has an "application" descriptor loop containing the descriptors associated with that application.

Like DVB SI tables, the scope of common loop descriptors is the sub-table. So, any descriptors present in the common descriptor loop apply to all sections of the sub-table. Typically, common descriptors would normally only be present in section 0 of a sub-table, unless there was not enough space.

Like other DVB SI tables, any strings contained in these tables shall not have null terminations.

Table 75 : Application Information Section syntax (Sheet 1 of 2)

	No.of Bits	Identifier
application_information_section() {		
table_id	8	uimsbf
section_syntax_indicator	1	bslbf
reserved_future_use	1	bslbf
reserved	2	bslbf
section_length	12	uimsbf
application_type	16	uimsbf
reserved	2	bslbf
version_number	5	uimsbf
current_next_indicator	1	bslbf
section_number	8	uimsbf
last_section_number	8	uimsbf
reserved_future_use	4	bslbf
common_descriptors_length	12	uimsbf
for(i=0;i<N;i++){		
descriptor()		
}		
reserved_future_use	4	bslbf
application_loop_length	12	uimsbf

Table 75 : Application Information Section syntax (Sheet 2 of 2)

	No.of Bits	Identifier
for(i=0;i<N;i++){		
application_identifier()		
application_control_code	8	uimsbf
reserved_future_use	4	bslbf
application_descriptors_loop_length	12	uimsbf
for(j=0;j<N;j++){		
descriptor()		
}		
}		
CRC_32	32	rpchof
}		

table_id: This 8 bit integer with value 0x74 identifies this table.

section_syntax_indicator: The section_syntax_indicator is a 1-bit field which shall be set to "1".

section_length: This is a 12-bit field, the first two bits of which shall be '00'. The remaining 10 bits specify the number of bytes of the section starting immediately following the section_length field, and including the CRC_32. The value in this field shall not exceed 1021 (0x3FD).

application_type: This is a 16-bit field which identifies the type of the applications described in this AIT sub_table. See table 76.

Table 76 : Application types

application_type	description
0x0000	reserved
0x0001	DVB-J application
0x0002	DVB-HTML application
0x0003…0xFFFF	subject to registration with DVB

version_number: This 5-bit field is the version number of the sub_table. The version_number shall be incremented by 1 when a change in the information carried within the sub_table occurs. When it reaches value "31", it wraps around to "0". When the current_next_indicator is set to "1", then the version_number shall be that of the currently applicable sub_table. When the current_next_indicator is set to "0", then the version_number shall be that of the next applicable sub_table.

current_next_indicator: This 1-bit indicator, when set to "1" indicates that the sub_table is the currently applicable sub_table. When the bit is set to "0", it indicates that the sub_table sent is not yet applicable and shall be the next sub_table to be valid.

section_number: This 8-bit field gives the number of the section. The section_number of the first section in the sub_table shall be "0x00". The section_number shall be incremented by 1 with each additional section with the same table_id, and application_type.

last_section_number: This 8-bit field specifies the number of the last section (that is, the section with the highest section_number) of the sub_table of which this section is part.

common_descriptors_length: This 12-bit field gives the total length in bytes of the following descriptors. The descriptors in this descriptor loop apply for all of the applications contained in this AIT sub_table.

application_control_code: This 8-bit field controls the state of the application. The semantics of this field is application type dependant. See 10.6, "Control of application life cycle" on page 215.

application_loop_length: This 12-bit field gives the total length in bytes of the following loop containing application information.

application_identifier(): This 48 bit field identifies the application. The structure of this field is defined in 10.5, "Application identification" on page 214.

The same application_identifier() shall appear only once within an AIT subtable.

application_descriptors_loop_length: This 12-bit field gives the total length in bytes of the following descriptors. The descriptors in this loop apply to the specific application.

CRC_32: This is a 32-bit field that contains the CRC value that gives a zero output of the registers in the decoder defined in annex B of EN 300 468 after processing the entire section.

10.4.7 Use of private descriptors in the AIT

Private descriptors may be included in the AIT provided that they are in the scope of a DVB-SI [4] private data specifier descriptor. The scope rules for the private data specifier descriptor are as follows:

- If this descriptor is located within any descriptor loop of the AIT, then any specifier identified within this descriptor loop applies to all following descriptors and user-defined values in the particular descriptor loop until the end of the descriptor loop, or until another occurrence of a private_data_specifier_descriptor.
- The use of the descriptor in the common (first) descriptor loop does not apply to descriptors or user-defined values in the application (second) descriptor loop.

10.4.8 Text encoding in AIT

Unless otherwise specified, all fields interpreted as text strings in the AIT shall be encoded as UTF8 (see 7.1.5, "Monomedia format for text" on page 66). See also 14.5, "Text encoding of application identifiers" on page 357.

10.4.9 AIT file

10.4.9.1 Syntax

The interaction channel encoding of the AIT into the AIT file is as follows:

- A single file shall contain all of the data
- The file shall contain a concatentation of Application Information Sections (specified in MHP 1.0)
- The possibly multiple sections shall be ordered as follows:

  - ascending order of `application_type`

  - within a single value of `application_type` in ascending order of `section_number`
- All sections shall have `current_next_indicator` set to '1'

10.4.9.2 Syntactic restrictions

10.4.9.2.1 Transport protocols

The only allowed transport protocol type has id value 0x0003. See table 92, "Protocol_id" on page 224.

10.4.9.3 Semantics

The AIT file shall be loaded once during service selection. There is no requirement to monitor or poll the AIT file for any subsequent changes except as part of a subsequent service selection operation referring to the same AIT file. Consequences of this are:

- Only the AUTOSTART and PRESENT application control codes (of those defined in MHP 1.0) are appropriate.
- No standard mechanism for dynamic lifecycle control is provided.

NOTE: If dynamic lifecycle control is required application private mechanisms could be used. For example, a TCP connection over the interaction channel to a controlling server.

- Changes made to the AIT file after service selection shall not be detected or reported.

10.4.9.4 MIME type

The MIME type for an AIT file shall be "application/dvb.ait". The file extension shall be ".ait".

10.5 Application identification

10.5.1 Encoding

Each application is associated with an application identifier. This is a 6 byte string with the following structure:

Table 77 : Application identifier syntax

	No.of Bits	Identifier	Value
application_identifier {			
organisation_id	32	bslbf	
application_id	16	bslbf	
}			

organisation_id: This 32 bit field is a globally unique value identifying the organisation that is responsible for the application. These values are registered in ETR 162 [10].

This field is reproduced in the organisationName field of the subject name in the "leaf" certificate of an authenticated application (see 12.5.6, "subject" on page 295).

Note The inclusion of this field in the leaf certificate provides authentication of the value.

application_id: This 16 bit field uniquely identifies the application function. This is allocated by the organisation registered with the organisation_id who decides the policy for allocation within the organisation.

The application id values are divided into two ranges: one for unsigned applications and one for signed applications. This is for security reasons (see 12.1.1, "Overview of the security framework for applications" on page 286). Applications transmitted as unsigned shall use an application id from the unsigned applications range and applications transmitted as signed shall use an application id from the signed applications range.

Table 78 : Value ranges for application_id

application_id values	Use
0x0000…0x3fff	Application_ids for unsigned applications
0x4000…0x7fff	Application_ids for signed applications
0x8000…0xfffd	Reserved for future use by DVB
0xfffe	Special wildcard value for signed applications of an organisation
0xffff	Special wildcard value for all application of an organisation

Application id values 0xffff and 0xfffe are wild cards. They shall not be used to identify an application but, for example, are allowed for use in the External application authorisation descriptor see 10.7.5 on page 223. The value 0xffff matches all applications with the same organisation_id. The value 0xfffe matches all signed applications with the same organisation_id.

The same application identifier may be used in different application types for applications performing essentially the same function.

10.5.2 Effects on life cycle

The main concepts here are:

- On service change, currently running, previously broadcast, applications whose service_bound_flag is set to "0" shall (subject to resource restrictions) continue running if their application identifier is listed in the Application Information Table of the newly selected service.
- On service change, currently running, previously broadcast, applications whose service_bound_flag is set to "0" shall (subject to resource restrictions) continue running if their application identifier is suitably listed in the External application authorisation descriptor even if they are not part of the current service.
- Only a single instance of an application with a particular application identifier is allowed to execute at any time. So, if an application is already running then another instance of the same application shall not be launched. This affects the behaviour with respect to the application launching API and autostart applications after service selection.
- If the application signalling for an application has the "service_bound_flag" is set to "1", then the application is killed upon service selection.

See also S, "(normative): Application Listing and Launching" on page 711.

10.5.3 Authentication of application identification

See 12.5.6, "subject" on page 295.

10.6 Control of application life cycle

The broadcast signalling provides a mechanism for broadcasters to control the life cycle of standard application types. See also 9.1, "Broadcast MHP applications" on page 183.

10.6.1 Entering and leaving the domain of an application

The domain of an application is defined as the set of services where the application is listed in the AIT. This can be either as applications listed in the application (inner) loop of the AIT or as applications listed in the External application authorisation descriptor. Services where the application is not listed in either of these two ways are outside of the domain of the application.

10.6.2 Dynamic control of the application life cycle

The dynamic control of the application life cycle is signalled through the application_control_code for the application in the AIT.

This control code allows the broadcaster to signal to the receiver what to do with the application with regard to its lifecycle. The set of codes have some differences between application types and so are defined on an application type specific basis.

If the receiver receives a code that it does not recognise the application shall continue in its current state.

When a change in these control codes causes a state change of a running MHP application, an `AppStateChangedEvent` shall be generated to all DVB-J applications which have registered to receive such events for the application concerned.

10.6.2.1 DVB-J

The application control codes for DVB-J applications are listed in 79.

Table 79 : DVB-J application control code values

code	identifier	semantics
0x00		reserved
0x01	AUTOSTART	The file system element(s) (e.g. an Object Carousel module) containing the class implementing the Xlet interface is loaded, The class implementing the Xlet is loaded into the VM and an Xlet object is instantiated, and the application is started subject to usual restrictions, etc.
0x02	PRESENT	Indicates that the application is present in the service, but is not autostarted.
0x03	DESTROY	When the control code changes from AUTOSTART or PRESENT to DESTROY, the destroy method of the Xlet is called (with the **`unconditional`** parameter set to **false**) by the application manager and the application is allowed to destroy itself gracefully.
0x04	KILL	When the control code changes from AUTOSTART or PRESENT to KILL, the destroy method of the Xlet is called (with the **`unconditional`** parameter set to **true**) by the application manager.
0x05	reserved	
0x06	REMOTE	This identifies a remote application that is only launchable after tuning.
0x07…0xFF		reserved for future use

See 9.2.3, "DVB-J Application Lifecycle" on page 188.

10.6.2.2 DVB-HTML

The application control codes for DVB-HTML applications are listed in 80.

Table 80 : DVB-HTML application control code values (Sheet 1 of 2)

code	identifier	semantics
0x00		reserved
0x01	AUTOSTART	The Application Entry Point of the DVB-HTML application is loaded. This is loaded into the user agent, and the DVB-HTML actor is created (in the Loading state) and the DVB-HTML application is started. When these steps are complete the DVB-HTML actor is in the Active state.
0x02	PRESENT	Indicates that the DVB-HTML application is present in the service, but is not autostarted.
0x03	DESTROY	When the control code changes from AUTOSTART or PRESENT to DESTROY, the DVB-HTML actor goes to the Killed state.
0x04	KILL	When the control code changes from AUTOSTART or PRESENT to KILL the DVB-HTML actor is terminated.
0x05	PREFETCH	As for AUTOSTART except that the DVB-HTML actor holds on entry to the Active state and waits for a trigger before completely transitioning to the Active state.

Table 80 : DVB-HTML application control code values (Sheet 2 of 2)

code	identifier	semantics
0x06	REMOTE	This identifies a remote application that is only launchable after tuning.
0x07…0xFF		reserved for future use

See 9.3.2, "DVB-HTML Application Lifecycle" on page 195.

10.7 Generic descriptors

10.7.1 Application Signalling Descriptor

The application signalling descriptor is defined for use in the elementary stream loop of the PMT where the `stream_type` of the elementary stream is 0x05. It identifies that the elementary stream carries an Application Information Table.

The application signalling descriptor optionally carries a loop of application_type and version_number pairs. These allow the descriptor to optionally reproduce the current version number state of the associated Application Information Table. This allows the receiver to be informed of the version of the AIT as a side effect of monitoring the PMT (which is expected to be monitored closely, under normal conditions). See 10.4.3, "Optimised AIT signalling" on page 211.

When the MHP detects a change of the content of the application signalling descriptor, it shall acquire the new version of the AIT and respond accordingly.

The presence of the application_type and AIT_version subfields is optional. If not present then the AIT transmission and monitoring applies, see 10.4.2, "AIT transmission and monitoring" on page 210.

Table 81 : application signalling descriptor syntax

	No.of Bits	Identifier
`application_signalling_descriptor() {`		
`  descriptor_tag`	8	uimsbf
`  descriptor_length`	8	uimsbf
`  for( i=0; i<N; i++ ){`		
`  application_type`	16	uimsbf
`  reserved_future_use`	3	bslbf
`  AIT_version_number`	5	uimsbf
`  }`		
`}`		

descriptor_tag: This 8 bit integer with value 0x6F identifies this descriptor.

descriptor_length: This 8 bit field indicates the number of bytes following the descriptor length field.

application_type: This 16 bit field identifies the application type of an Application Information Table sub-table that is on this elementary stream.

AIT_version_number: This 5 bit field provides the "current" version number of the Application Information Table sub-table identified by the application type field.

10.7.2 Data broadcast id descriptor

The data broadcast id descriptor is defined for use in the elementary stream information of the PMT. The descriptor identifies:

- the transport format of the data broadcast whose "principal component" is on this elementary stream.

  The semantics of "principal component" is transport protocol specific.

- the set of application types for any autostart applications delivered by the data broadcast.

For a single elementary stream more than one data broadcast id descriptor may be used to list additional applications types, however, each descriptor shall indicate the same data broadcast id.

More than one elementary stream may have a data broadcast id descriptor indicating that auto start applications are carried by more than one delivery mechanism (for example a single service may have more than one object carousel delivering auto start applications).

10.7.2.1 Generic descriptor

The data broadcast id descriptor is defined in a generic form by the DVB SI-DAT specification (illustrated in table 82). Where no "id specific data" is provided the descriptor just identifies the "principal" component of a data broadcast.

Table 82 : generic data broadcast id descriptor syntax

	No.of Bits	Identifier	Value
data_broadcast_id_descriptor() {			
descriptor_tag	8	uimsbf	
descriptor_length	8	uimsbf	
data_broadcast_id	16	uimsbf	
for (i=0; i<N; i++) {			
id specific data	8	bslbf	
}			
}			

10.7.2.2 MHP data broadcast id descriptor

When the data broadcast id is one of those defined by this specification (see table 107) the syntax of the data broadcast id descriptor is as shown in table 83. This allows the data broadcast id descriptor to provide information about the autostart applications that exist within the data broadcast.

Table 83 : MHP data broadcast id descriptor syntax

	No.of Bits	Identifier	Value
data_broadcast_id_descriptor() {			
descriptor_tag	8	uimsbf	
descriptor_length	8	uimsbf	
data_broadcast_id	16	uimsbf	
for (i=0; i<N; i++) {			
application_type	16	uimsbf	
}			
}			

descriptor_tag: This 8 bit integer with value 0x66 identifies this descriptor.

data_broadcast_id: This 16 bit field indicates the format of the data broadcast transport protocol. These values are registered in ETR 162.

application_type: This 16 bit field indicates the type of the application (i.e. the engine or plug-in on which the application can be executed). See table 76 on page 212.

10.7.3 Application descriptor

Exactly one instance of the application descriptor shall be contained in every "application" (inner) descriptor loop of the AIT.

Table 84 : application descriptor syntax

	No.of Bits	Identifier	Value
application_descriptor() {			
descriptor_tag	8	uimsbf	
descriptor_length	8	uimsbf	
application_profiles_length	8	uimsbf	
for(i=0; i<N; i++) {			
application_profile	16	uimsbf	
version.major	8	uimsbf	
version.minor	8	uimsbf	
version.micro	8	uimsbf	
}			
service_bound_flag	1	bslbf	
visibility	2	bslbf	
reserved_future_use	5	bslbf	
application_priority	8	uimsbf	
for(i=0; i<N; i++) {			
transport_protocol_label	8	uimsbf	
}			
}			

descriptor_tag: This 8 bit integer with value 0x00 identifies this descriptor.

application_profiles_length: This 8-bit field indicates the length of the application_profile loop in bytes.

application_profile: This 16 bit field is an integer value which represents the application type specific profile. This indicates that a receiver implementing one of the profiles listed in this loop is capable of executing the application.

version.major: This 8 bit field carries the numeric value of the major sub-field of the profile version number.

version.minor: This 8 bit field carries the numeric value of the minor sub-field of the profile version number.

version.micro: This 8 bit field carries the numeric value of the micro sub-field of the profile version number.

The four above fields indicate the minimum profile on which an application will run. Applications may test for features found in higher (backwards compatible) profiles and exploit them. The MHP terminal shall only launch applications if the following expression is true for at least one of the signalled profiles:

$$
\begin{aligned}
&(\text{application_profile} \in \text{terminal_profiles_set}) \\
&\quad \wedge \{ (\text{application_version.major} < \text{terminal_version.major}(\text{application_profile})) \\
&\qquad \vee [(\text{application_version.major} = \text{terminal_version.major}(\text{application_profile})) \\
&\qquad\quad \wedge (\{ \text{application_version.minor} < \text{terminal_version.minor}(\text{application_profile}) \} \\
&\qquad\qquad \vee \{ [\text{application_version.minor} = \text{terminal_version.minor}(\text{application_profile})] \\
&\qquad\qquad\quad \wedge [\text{application_version.micro} \leq \text{terminal_version.micro}(\text{application_profile})] \})] \}
\end{aligned}
$$

Where:
∈ represents "belongs to the set of"
∧ represents "logical AND"
∨ represents "logical OR"

See table 140, "Profile encoding" on page 365 for the encoding of these values.

service_bound_flag: If this field is set to "1", the application is only associated with the current service and so the process of killing the application shall start at the beginning of the service change regardless of the contents of the destination AIT.

visibility: This 2 bit field specifies the intended visibility of the application for possible presentation to the user for possible launching. Table 85 lists the allowed values of this field.

Table 85 : Definition of visibility states for applications

visibility	description
00	This application shall not be visible either to applications via an application listing API or to users via the navigator with the exception of any error reporting or logging facility, etc.
01	This application shall not be visible to users but shall be visible to applications via an application listing API.
10	Reserved
11	This application can be visible to users and shall be visible to applications via the application listing API.

application_priority: This field identifies a relative priority between the applications signalled in this service.

- Where there is more than one application with the same Application identification this priority shall be used to determine which application is started.
- Where there are insufficient resources to continue running a set of applications, this priority shall be used to determine which applications to stop or pause.
- A larger integer value indicates higher priority.
- If two applications have the same application identification and the same priority, the MHP may make an implementation-dependent choice on which to start.

transport_protocol_label: This 8-bit field identifies a transport protocol that delivers the application. See transport_protocol_label in Transport protocol descriptor.

If more than one protocol is signalled then each protocol is an alternative delivery mechanism. The ordering indicates the broadcaster's view of which transport connection will provide the best user experience (first is best). This may be used as a hint by MHP terminal implementations. It shall be evaluated only once during the life time of the application.

The protocol selection by the MHP terminal may depend on a variety of factors including user preferences and the performance of the transport connections to the terminal.

10.7.4 User information descriptors

The user information descriptors complement the "Application descriptor" by providing information suitable for presentation to the user (where the "Application descriptor" provides technical information for automatic use by the receiver).

These descriptors are defined for use in the application loop of the AIT.

10.7.4.1 Application name descriptor

Exactly one instance of this descriptor shall be included in the application information of an application. The application name shall distinguish the application and shall be informative to the user.

Table 86 : application name descriptor syntax

	No.of Bits	Identifier	Value
application_name_descriptor() {			
descriptor_tag	8	uimsbf	
descriptor_length	8	uimsbf	
for (i=0; i<N; i++) {			
ISO_639_language_code	24	bslbf	
application_name_length	8	uimsbf	
for (i=0; i<N; i++) {			
application_name_char	8	uimsbf	
}			
}			
}			

descriptor_tag: This 8 bit integer with value 0x01 identifies this descriptor.

ISO_639_language_code: This 24-bit field contains the ISO 639.2 [19] three character language code of the language of the following bouquet name. Both ISO 639.2/B and ISO 639.2/T may be used.

Each character is coded into 8 bits according to ISO 8859 [20] and inserted in order into the 24-bit field.

application_name_length: This 8 bit unsigned integer specifies the number of bytes in the application name.

application_name_char: This field caries a string (not null terminated) of characters encoded in accordance with annex A of ETS 300 468. The string names the application in a manner intended to be informative to the user.

10.7.4.2 Application icons descriptor

Zero or one instance of this descriptor shall be included in the application information of an application. It allows icons to be associated with the application. The content format for these possible icons shall be restricted PNG as specified in section 15.1, "PNG - restrictions" on page 363.

Table 87 : application icons descriptor syntax

	No.of Bits	Identifier	Value
application_icons_descriptor() {			
descriptor_tag	8	uimsbf	
descriptor_length	8	uimsbf	
icon_locator_length	8	uimsbf	
for (i=0; i<N; i++) {			
icon_locator_byte	8	uimsbf	
}			
icon_flags	16	bslbf	
for (i=0; i<N; i++) {			
reserved_future_use	8	bslbf	
}			
}			

descriptor_tag: This 8 bit integer with value 0x0B identifies this descriptor.

icon_locator_length: This 8 bit integer specifies the number of characters in the string that prefixes standard icon file name.

icon_locator_byte: This 8 bit value is one byte of the icon locator string.

The icon locator is the first part of the string that specifies the location of the icon files. This is application type dependant. See table 88. The `icon_locator` shall not end with a "/" slash character.

Table 88 : Icon locator semantics

application_type	description
0x0000	reserved
0x0001	For DVB-J this is a path relative to the base directory of the application as defined in 10.9.2, "DVB-J application location descriptor" on page 230.
0x0002	For DVB-HTML this is a path relative to the physical root of the application as defined in 10.10.2, "DVB-HTML application location descriptor" on page 232.
0x0003…0xFFFF	

icon_flags: This 16 bit field carries a value which is the bitwise OR of the flag bits that identify the icons that are provided for the application. The flag bits are defined in table 89.

Table 89 : Definition of different icon flags

Icon flag bits	Description of icon size and pixel aspect ratio
0000 0000 0000 0001	32 x 32 for square pixel display
0000 0000 0000 0010	32 x 32 for broadcast pixels on 4:3 display (note 1)
0000 0000 0000 0100	24 x 32 for broadcast pixels on 16:9 display
0000 0000 0000 1000	64 x 64 for square pixel display
0000 0000 0001 0000	64 x 64 for broadcast pixels on 4:3 display
0000 0000 0010 0000	48 x 64 for broadcast pixels on 16:9 display
0000 0000 0100 0000	128 x 128 for square pixel display
0000 0000 1000 0000	128 x 128 for broadcast pixels on 4:3 display
0000 0001 0000 0000	96 x 128 for broadcast pixels on 16:9 display
xxxx xxx0 0000 0000	Reserved for future standardisation
NOTE 1: approx. 15/16 pixel aspect ratio on 50 Hz system	

The file names for the icon files are encoded in a standard way:

```
filename       = icon_locator "/dvb.icon." hex_string
hex_string     = 4*4hex
hex            = digit | "A" | "B" | "C" | "D" | "E" | "F" | "a" | "b" | "c" | "d" | "e" | "f"
digit          = "0" | "1" | "2" | "3" | "4" | "5" | "6" | "7" | "8" | "9"
```

Where `hex_string` is the 4 digit hexadecimal representation of the value carried by `icon_flags`.

10.7.5 External application authorisation descriptor

The "common" (first) descriptor loop of the Application Information Table may contain zero or more external_ application_authorisation_descriptors. Each descriptor contains information about external applications that are allowed to continue to run with the applications listed in this Application Information Table sub-table but cannot be launched from this service. The external authorization applies to applications with the identified application_identifier() that are of the application_type identified by the AIT subtable where this descriptor is contained.

Table 90 : external application authorisation descriptor syntax

	No.of Bits	Identifier	Value
external_application_authorisation_descriptor() {			
descriptor_tag	8	uimsbf	
descriptor_length	8	uimsbf	
for(i=0; i<N; i++) {			
application_identifier()			
application_priority	8	uimsbf	
}			
}			

descriptor_tag: This 8-bit integer with value 0x05 identifies this descriptor.

application_identifier(): This 48-bit field identifies an application. The structure of this field is defined in 10.5, "Application identification" on page 214.

application_priority: This 8-bit integer specifies the priority that this application assumes in the context of the current service.

If the 0xffff or 0xfffe wildcard is used for the application_id within the application_identifier() and there are some applications from the same organisation_id explicitly signalled in the application loop of the AIT, the priority for those applications shall be the one signalled in the application_descriptor (see 10.7.3 on page 219).

See application_priority under 10.7.3, "Application descriptor" on page 219.

10.8 Transport protocol descriptors

10.8.1 Transport protocol descriptor

The transport protocol descriptor identifies the transport protocol associated with a service component and possibly provides protocol dependent information.

The descriptor may be used in either the "common" (first) descriptor loop or the "application" (inner) descriptors loop. When in the "common" loop it applies to all of the applications in that sub-table. Any such descriptors in the "application" loop describe additional transport protocols available to a specific application.

Each application described in this section shall be in the scope of at least one transport protocol descriptor.

Table 91 : transport protocol descriptor syntax

	No.of Bits	Identifier	Value
transport_protocol_descriptor() {			
descriptor_tag	8	uimsbf	
descriptor_length	8	uimsbf	
protocol_id	16	uimsbf	
transport_protocol_label	8	uimsbf	
for(i=0; i<N; i++) {			
selector_byte	8	uimsbf	N1
}			
}			

descriptor_tag: This 8 bit integer with value 0x02 identifies this descriptor.

protocol_id: An identifier of the protocol used for carrying the applications. The values of the protocol_id are be registered here and in ETR162.

Table 92 : Protocol_id

protocol_id	description
0x0000	reserved
0x0001	MHP Object Carousel as defined in annex B, "(normative): Object carousel" on page 388.
0x0002	IP via DVB multiprotocol encapsulation as defined in EN 301 192, TR 101 202
0x0003	Transport via HTTP over the interaction channel as described in 10.8.1.3, "Transport via interaction channel" on page 226.
0x0004…0x00FF	Reserved for use by DVB
0x0100…0xFFFF	Subject to registration in ETR162

transport_protocol_label: Thus 8 bit field uniquely identifies a transport protocol within this AIT section. The Application descriptor refers to this value to identify a transport connection that carries the application.

selector_byte: Additional protocol specific information.

Table 93 : Semantic of selector bytes

protocol_id	selector byte data
0x0000	reserved
0x0001	See 10.8.1.1 "Transport via OC".
0x0002	See 10.8.1.2 "Transport via IP".
0x0003	See 10.8.1.3 "Transport via interaction channel".
0x0004…0xFFFF	TBD

10.8.1.1 Transport via OC

When the protocol ID is 0x0001 the selector bytes in the Transport protocol descriptor shall be as shown in table 94.

Table 94 : Syntax of selector bytes for OC transport

Syntax	Bits	Mnemonic
remote_connection	1	bslbf
reserved_future_use	7	bslbf
if(remote_connection == "1") {		
original_network_id	16	uimsbf
transport_stream_id	16	uimsbf
service_id	16	uimsbf
}		
component_tag	8	uimsbf

component_tag: Identifies the "principal" service component that delivers the application. The identified component is the elementary stream that carries the DSI of the object carousel.

remote_connection: This single bit flag if set to "1" indicates that the transport connection is provided by a service that is different to the one carrying the AIT. When set the following 3 fields (original_network_id, transport_stream_id and service_id) are included in the selector bytes. This flag shall be set to "0" when the transport connection is provided by the current service.

Such applications shall not be autostarted by receivers but are visible (subject to the visibility field of the application descriptor) via an application listing API for possible launching by service selection (but not via an application launching API).

Applications with this flag set shall have their application control code set to REMOTE (see table 79 on page 216 and 80 on page 216).

See 11.7.2, "Application discovery and launching APIs" on page 261.

original_network_id: This 16 bit field identifies the DVB-SI original network id of the transport stream that provides the transport connection.

transport_stream_id: This 16 bit field identifies the MPEG transport stream id of the transport stream that provides the transport connection.

service_id: This 16 bit field identifies the DVB-SI service id of the service that provides the transport connection.

10.8.1.2 Transport via IP

When the protocol ID is 0x0002 the selector bytes in the Transport protocol descriptor shall be as shown in table 95.

This structure includes two important components of the data_broadcast_descriptor defined in EN 301 192 [5]. It provides all the information necessary for the MHP to acquire applications and application data components delivered by IP protocols. The profiles where this is an optional or mandatory feature are listed in 15, "Detailed platform profile definitions" on page 361.

Table 95 : Syntax of selector bytes for IP transport

Syntax	Bits	Mnemonic
remote_connection	1	bslbf
reserved_future_use	7	bslbf
if(remote_connection == "1") {		
original_network_id	16	uimsbf
transport_stream_id	16	uimsbf
service_id	16	uimsbf
}		
alignment_indicator	1	bslbf
reserved_future_use	7	bslbf
for(i=0; i<N; i++){		
URL_length	8	uimsbf
for(j=0; j<URL_length; j++){		
URL_byte	8	uimsbf
}		
}		

remote_connection: This and the associated 3 fields (original_network_id, transport_stream_id and service_id) have identical syntax and semantics to the fields with the same names under 10.8.1.1, "Transport via OC" on page 224.

alignment_indicator: This 1-bit field indicates the alignment that exists between the bytes of the datagram_section and the Transport Stream bytes (equivalent to the field with this name defined in the EN 301 192 [5] MPE data_broadcast_descriptor).

URL_length: This 8-bit field indicates the number of bytes in the URL.

URL_byte: These bytes form a URL conforming to RFC 2396 [41].

For URL using the "server" field including the host:port notation as defined in RFC 2396 [41], only numeric IP addresses shall be used for identifying IP transmissions carried in the broadcast channel as there is no Domain Name Service in the broadcast-only scenario to be used for resolving names.

IP to MAC mapping shall be done as described in RFC 1112 [45].

10.8.1.3 Transport via interaction channel

When the protocol ID is 0x0003 the selector bytes in the Transport protocol descriptor shall be as shown in table 95, "Syntax of selector bytes for IP transport" on page 225. This allows encoding of a number of URLs. For efficiency when encoding possibly many similar URLs the encoding divides the URL into a shared base part and a set of URL extensions. The set of URLs can identify ZIP (ZIP [77]) files, or base URLs ending in the "/" character, that encapsulate portions of the file system. See 6.4.1.1, "File system logical structure" on page 60 for a description of this file system.

Multiple transport protocol descriptors with the protocol ID value 0x0003 and the same transport protocol label may be provided to define a larger set of URLs to describe the file system.

Table 96 : Syntax of selector bytes for interaction transport

Syntax	Bits	Mnemonic
`for( i=0; i<N; i++){`		
`  URL_base_length`	8	uimsbf
`  for( j=0; j<N; j++){`		
`  URL_base_byte`	8	uimsbf
`  }`		
`  for( j=0; j<N; j++){`		
`  URL_length`	8	uimsbf
`  for(k=0; k<URL_length; k++){`		
`  URL_byte`	8	uimsbf
`  }`		
`  }`		
`}`		

URL_base_length: This 8-bit field provides the number of bytes in the base part of the URL.

URL_base_byte: These bytes form the first part of a HTTP URL conforming to HTTP 1.0 (see RFC 1945 [78]), or the first part of an HTTPS URL conforming to HTTPS (see RFC 2818 [98]). Where an HTTP URL is found, http shall be used as in 6.3.7.2, "MHP profile of HTTP 1.0" on page 58. Where an HTTPS URL is found, https shall be used as in 6.3.7.3, "HTTPS" on page 59.

URL_extension_length: This 8-bit field indicates the number of bytes in the extension part of the URL.

URL_extension_byte: These bytes form the later part of an HTTP URL conforming to HTTP 1.0 (see RFC 1945 [78]), or the later part of an HTTPS URL conforming to HTTPS 6.3.7.3, "HTTPS" on page 59.

URLs are formed by concantenating the URL extension with the preceding URL base. The URL so formed either identifies a file system directory or a specific ZIP file. See 6.4.1.1, "File system logical structure" on page 60.

10.8.2 IP Routing Descriptors

The routing descriptors are defined for use in the "common" descriptor loop of the AIT. They indicate the service component location of packets for specified multicast IP addresses. The routing descriptors shall provide a complete list of all multicast IP addresses that applications in that AIT section may require.

Routing descriptors are mandatory where multicast IP is used in a service. Multiple descriptors may be used.

Two similar descriptors are defined, one for IPv4 and one for IPv6.

10.8.2.1 Routing Descriptor IPv4

Table 97 : Syntax of the IPv4 routing descriptor

Syntax	Bits	Mnemonic
routing_descriptor_ip4 () {		
descriptor_tag	8	uimsbf
descriptor_length	8	uimsbf
for(i=0; i<N; i++) {		
component_tag	8	uimsbf
address	32	uimsbf
port_number	16	uimsbf
address_mask	32	uimsbf
}		
}		

descriptor_tag: This 8-bit field with value 0x06 identifies this descriptor.

descriptor_length: This 8-bit field identifies the number of bytes following the length field.

component_tag: This 8-bit field identifies the service component that carries multicast IP packets for the specified IP address set and port.

An IP address is carried in this service component if the result of AND-ing that address with the address_mask field is equal to the address field.

address: This 32-bit field carries an IPv4 IP address.

port_number: This 16-bit field carries a port number. The value zero is a "wild card" value and indicates any port number.

address_mask: This 32-bit field carries a mask to be applied to the address field.

10.8.2.2 Routing Descriptor IPv6

Table 98 : Syntax of the IPv6 routing descriptor

Syntax	Bits	Mnemonic
routing_descriptor_ip6 () {		
descriptor_tag	8	uimsbf
descriptor_length	8	uimsbf
for(i=0; i<N; i++) {		
component_tag	8	uimsbf
address	128	uimsbf
port_number	16	uimsbf
address_mask	128	uimsbf
}		
}		

descriptor_tag: This 8-bit field with value 0x07 identifies this descriptor.

descriptor_length: This 8-bit field identifies the number of bytes following the length field.

component_tag: This 8-bit field identifies the service component that carries multicast IP packets for the specified IP address set and port.

An IP address is carried in this service component if the result of AND-ing that address with the address_mask field is equal to the address field.

address: This 128-bit field carries an IPv6 IP address.

port_number: This 16-bit field carries a port number. The value zero is a "wild card" value and indicates any port number.

address_mask: This 128-bit field carries a mask to be applied to the address field.

10.8.3 Pre-fetch signalling

10.8.3.1 Introduction

This signalling is defined to enable implementations to start fetching files that will be required during the early part of an application's life. Later in an applications' life it can actively request file pre-fetching using API mechanisms. Descriptors in this section do not have a relation to the API-based pre-fetching for this version of this specification.

This signalling is optional to broadcast and optional for implementations to consider.

10.8.3.2 Pre-fetch descriptor

Zero or one pre-fetch descriptors can be included in the "application" (inner) descriptor loop of the AIT. It is defined for use where the protocol_id of the transport is 0x0001 (MHP Object Carousel). Each descriptor is associated with a specific Transport protocol descriptor via the transport_protocol_label.

MHP terminals may use this descriptor to improve application start-up time by pre-fetching modules that have the indicated labels (see "Label descriptor" on page 390).

Table 99 : Syntax of the pre-fetch descriptor

Syntax	Bits	Mnemonic
prefetch_descriptor () {		
descriptor_tag	8	uimsbf
descriptor_length	8	uimsbf
transport_protocol_label	8	uimsbf
for(i=0; i<N; i++) {		
label_length		
for(j=0; j<label_length; j++) {		
label_char	8	uimsbf
}		
prefetch_priority	8	uimsbf
}		
}		

descriptor_tag: This 8-bit field with value 0x0C identifies this descriptor.

descriptor_length: This 8-bit field identifies the number of bytes following the descriptor length field.

transport_protocol_label: This 8-bit field identifies the Transport protocol descriptor that specifies the transport connection that delivers the modules to which this prefetch descriptor refers. See "transport_protocol_label" on page 220.

label_length: This 8-bit field identifies the number of bytes in the module label.

label_char: These 8-bit fields carry an array of bytes that are a module label. This label matches a label on one or more module carried by Label descriptors in the userInfo fields of the moduleInfo structure of DIIs (see "Label descriptor" on page 390).

The same module label may be attached to several modules.

prefetch_priority: A value between 1 and 100 (both inclusive). It expresses a pre-fetching hint of the modules with the corresponding label using the specified priority (100 highest, 1 lowest).

10.8.3.3 DII location descriptor

For each application zero or one DII location descriptors can be provided. It can be located in either the "common" (first) or "application" (inner) descriptor loop of the AIT. It is defined for use where the protocol_id of the transport is 0x0001 (MHP Object Carousel). Each descriptor is associated with a specific Transport protocol descriptor via the transport_protocol_label.

The modules that are part of a DSM-CC object carousel are signalled in DownloadInfoIndication (DII) messages. The object carousel does not list all the existing DII messages in a single place.

In order to find all of the modules that match a particular pre-fetch label (see 10.8.3.2, "Pre-fetch descriptor" on page 228), it is necessary that all the relevant DII messages can be found. The DII location descriptor lists the locations of these DII.

If DII location descriptor is not included, then only the DII that signals the module that contains the ServiceGateway shall be taken into account when looking for modules matching a particular label.

The DII identifications in the loop should be sorted on importance. The DII that contains the label(s) with the highest pre-fetch priority should be listed first. Receivers that implement module-based pre-fetching should examine the DIIs for labels in the order in which they are listed in the DII location descriptor.

Table 100 : Syntax of the DII location descriptor

Syntax	Bits	Mnemonic
DII_location_descriptor () {		
descriptor_tag	8	uimsbf
descriptor_length	8	uimsbf
transport_protocol_label	8	uimsbf
for(i=0; i<N; i++) {		
reserved_future_use	1	bslbf
DII_identification	15	uimsbf
association_tag	16	uimsbf
}		
}		

descriptor_tag: This 8-bit field with value 0x0D identifies this descriptor.

descriptor_length: This 8-bit field identifies the number of bytes following the descriptor length field.

transport_protocol_label: This 8-bit field identifies the Transport protocol descriptor that specifies the transport connection that delivers the modules to which this prefetch descriptor refers. See "transport_protocol_label" on page 220.

DII_identification: This 15-bit field identifies the DII message. It corresponds to the identification portion of the transactionId. See B.32, "Sub-fields of the transactionId" on page 409.

association_tag: This 16-bit field identifies the connection (i.e. elementary stream) on which the DII message is broadcast.

10.9 DVB-J specific descriptors

10.9.1 DVB-J application descriptor

One instance of this descriptor shall be contained in the "application" (inner) descriptor loop of the AIT for each DVB-J application. It provides start-up parameter information.

Table 101 : DVB-J application descriptor syntax

	No.of Bits	Identifier	Value
dvb_j_application_descriptor(){			
descriptor_tag	8	uimsbf	
descriptor_length	8	uimsbf	
for(i=0; i<N; i++) {			
parameter_length	8	uimsbf	
for(j=0; j<parameter_length; j++) {			
parameter_byte	8	uimsbf	
}			
}			
}			

descriptor_tag: This 8 bit integer with value 0x03 identifies this descriptor.

parameter_length: This 8 bit integer specifies the number of bytes in the parameter_byte string.

parameter_byte: The parameter bytes contain an array of strings that are passed to the application as parameters.

10.9.2 DVB-J application location descriptor

One instance of this descriptor shall be contained in the "application" (inner) descriptor loop of the AIT for each DVB-J application. It provides various items of path information to allow the DVB-J application to be found and then operated.

Table 102 : DVB-J application location descriptor syntax

	No.of Bits	Identifier	Value
dvb_j_application_location_descriptor {			
descriptor_tag	8	uimsbf	
descriptor_length	8	uimsbf	
base_directory_length	8	uimsbf	
for(i=0; i<N; i++) {			
base_directory_byte	8	uimsbf	
}			
classpath_extension_length	8	uimsbf	
for(i=0; i<N; i++) {			
classpath_extension_byte	8	uimsbf	
}			
for(i=0; i<N; i++) {			
initial_class_byte	8	uimsbf	
}			
}			

descriptor_tag: This 8 bit integer with value 0x04 identifies this descriptor.

base_directory_length: This 8 bit integer specifies the number of bytes in the base_directory_byte string.

base_directory_byte: These bytes contain a string specifying a directory name starting from the root of the file system with directories delimited by the slash character "/" (0x2F). This directory is used as a base directory for relative path names. This base directory is automatically considered to form the first directory in the class path (after the path to the system's classes).

If the base directory is the root the string shall be "/".

classpath_extension_length: This 8 bit integer specifies the number of bytes in the classpath_extension_byte string.

classpath_extension_byte: These bytes contain a string specifying a further extension for the DVB-J class path where the classes of the application are searched in addition to the base directory.The class path extension string contains path names where the elements in the path are delimited by the semicolon character ";" (0x3B). The elements of the path may be either absolute paths starting from the root of the file system or they can be relative to the base directory. The directories are delimited by the slash character "/" (0x2F) and absolute path names begin with the slash character "/" (0x2F).

initial_class_byte: These bytes contain a string specifying the name of the object in the file system that is the class implementing the Xlet interface.

This string is a DVB-J class name that is found in the class path (e.g. "com.broadcaster.appA.MainClass").

10.10 DVB-HTML Specific descriptors

10.10.1 DVB-HTML application descriptor

One instance of this descriptor shall be contained in the "application" (inner) descriptor loop of the AIT for each DVB-HTML application. It indicates the value of the application parameters and signals the control applied by the broadcaster on the state of the application.

Table 103 : DVB-HTML application descriptor syntax

	No.of Bits	Identifier	Value
dvb_html_application_descriptor(){			
descriptor_tag	8	uimsbf	
descriptor_length	8	uimsbf	
appid_set_length	8	uimsbf	N1
for(i=0; i<N1; i++) {			
application_id	16	bslbf	
}			
for(j=0; j<N; j++) {			
parameter_bytes	8	uimsbf	
}			
}			

descriptor_tag: This 8 bit integer with value 0x08 identifies this descriptor.

appid_set_length: This 8 bit integer specifies the length of the list of application_ids.

application_id: The values of these 16 bit fields form a set of application ids (see 10.5, "Application identification" on page 214). This set is the set of application ids that are allowed to be associated with inner applications of a DVB-HTML application, see 8.9, "Xlet integration" on page 120.

parameter_bytes: The parameter bytes contain the string that is appended to the application initial path as parameters.

10.10.2 DVB-HTML application location descriptor

This descriptor is for use in the application loop of the AIT. It indicates the physical location of the application entry point in the transport media.

Table 104 : DVB-HTML application location descriptor syntax

	No.of Bits	Identifier	Value
dvb_html_application_location_descriptor () {			
descriptor_tag	8	uimsbf	
descriptor_length	8	uimsbf	
physical_root_length	8	uimsbf	N1
for(i=0; i<N1; i++) {			
physical_root_bytes		uimsbf	
}			
for(i=0; i<N; i++) {			
initial_path_bytes	8	uimsbf	
}			
}			

descriptor_tag: This 8 bit integer with value 0x09 identifies this descriptor.

physical_root_length: This 8 bit integer specifies the length of the physical_root_byte string.

physical_root_bytes: These bytes contain a string specifying the physical root of the application entry point. The semantic of this string is transport protocol specific as shown in table 105 "Transport specific semantic of physical root bytes".

Table 105 : Transport specific semantic of physical root bytes

protocol_id	semantic
0x0000	reserved
0x0001	A directory specification
0x0002	One of the base URLs defined in the Transport protocol descriptor signalled for the application (see 10.8.1.2, "Transport via IP" on page 225).
0x0003…0xFFFF	TBD

initial_path_bytes: These bytes contain a string specifying the URL path component to the entry point document. This path is relative to the root defined in the physical_root_bytes field.

10.10.2.1 Example

The following example describes the usage of the DVB-HTML application location descriptor.

An application author designs an HTML application in the following manner:

- The application data is distributed among several directories, let say an "`image`" directory and a "`main`" directory.
- The application entry point is an HTML document called "`index.htm`" and stored in the "`main`" directory.

10.10.2.2 Application Entry Point

From the application author's point of view, the application entry point is specified by the path "`main/index.htm`". This path is stored in the initial_path_bytes string of the location descriptor.

If the broadcaster inserts this application in a file system sub-directory called "`application`", the physical_root_bytes content of the location descriptor will be the string "`application/`".

If the broadcaster uses a transport via IP for this application, they shall signal the used protocol and IP address in the Transport protocol descriptor associated with this application and the physical_root_bytes field shall contain the corresponding URL string.

10.10.3 DVB-HTML application boundary descriptor

This descriptor is defined for use in the application loop of the AIT. It provides a regular expression that describes the data elements that form the application.

This descriptor is optional. When absent, the application boundary defaults to the complete set of all content coming from the transport signalled in the Transport protocol descriptor associated with the application.

Multiple boundary descriptors can be used for the same application. In this case, the equivalent global regular expression is the OR combination (union) of the individual regular expressions.

Table 106 : DVB-HTML application boundary descriptor syntax

	No.of Bits	Identifier	Value
dvb_html_application_boundary_descriptor {			
descriptor_tag	8	uimsbf	
descriptor_length	8	uimsbf	
label_length	8	uimsbf	N1
for(i=0; i<N1; i++) {			
label_bytes	8	uimsbf	
}			
for(i=0; i<N; i++) {			
regular_expression_bytes	8	uimsbf	
}			
}			

descriptor_tag: This 8 bit integer with value 0x0A identifies this descriptor.

label_length: This 8 bit integer specifies the length of the label_bytes string.

label_bytes: These bytes contain a string specifying the label that is associated with the set of data identified by the regular expression. This label can be used for pre-fetching in a transport specific manner.

regular_expression_bytes: These bytes contain a string specifying the regular expression that can generate all URLs that are in the domain of the application.

See 9.3.1.4.1, "Regular Expression Syntax" on page 194.

10.11 Constant values

Table 107 : Registry of constant values (Sheet 1 of 2)

Where used	Type	Value	Where Defined	Scope
private data specifier descriptor	descriptor tag	0x5F	PSI & SI tables	SI
Data broadcast id descriptor		0x66	PMT	
Application Signalling Descriptor		0x6F	PMT	
Service identifier descriptor		0x71	SDT	
Label descriptor	descriptor tag	0x70	DII moduleInfo userInfo	SI-DAT
Caching priority descriptor		0x71		
Content type descriptor		0x72	BIOP objectInfo (note 1)	
reserved to MHP for future OC descriptors		0x73-0x7F	OC	
reserved to MHP for future use	table ID on AIT PID	0x00-0x73		MHP
Application Information Table		0x74		
reserved to MHP for future use		0x75-0x7F		
reserved for private use		0x80-0xFF		
Application descriptor	descriptor tag	0x00	AIT	MHP
Application name descriptor		0x01		
Transport protocol descriptor		0x02		
DVB-J application descriptor		0x03		
DVB-J application location descriptor		0x04		
External application authorisation descriptor		0x05		
Routing Descriptor IPv4		0x06		
Routing Descriptor IPv6		0x07		
DVB-HTML application descriptor		0x08		
DVB-HTML application location descriptor		0x09		
DVB-HTML application boundary descriptor		0x0A		
Application icons descriptor		0x0B		
Pre-fetch descriptor		0x0C		
DII location descriptor		0x0D		
delegated application descriptor		0x0E		
Plug-in descriptor		0x0F		
Application storage descriptor		0x10		
reserved to MHP for future use		0x11-0x5E		
private data specifier descriptor (note 2)		0x5F		
reserved to MHP for future		0x60-0x7F		
User defined (note 3)		0x80-0xFE		
MHP Object Carousel	data broadcast id	0x00F0	PMT, AIT	SI
reserved for MHP Multi Protocol Encapsulation		0x00F1		
reserved to MHP use		0x00F0 - 0x00FE	PMT, AIT	SI

Table 107 : Registry of constant values (Sheet 2 of 2)

Where used	Type	Value	Where Defined	Scope
MHP Application Service	service type	0x10	SDT	SI

NOTE 1: Strictly MessageSubHeader::ObjectInfo in the file message and the bound object info in a file binding of a directory or service gateway message.

NOTE 2: The DVB SI private data specifier descriptor is defined for use in the Application Information Table to introduce private descriptors.

NOTE 3: All user defined descriptors shall be within the scope of a private data specifier descriptor (see 10.4.7, "Use of private descriptors in the AIT" on page 213).

10.12 Service Information

10.12.1 Service identifier descriptor

Zero or more service identifier descriptors may be included in the SDT description of a service. Each such descriptor defines a single textual identifier for the service. The syntax of this identifier is specified in 14.9.1, "Syntax of the textual service identifier" on page 359.

A single service identifier can be assigned to services in different physical networks even if they have different `original_network_id` and `service_id`. A given service identifier shall only be associated with services that are considered to be the same service.

NOTE: It is up to the service provider to decide which services are "same" and which are not. For example, two services in two different networks where the service have the same programme content but different regional adverts could be generally considered to be the "same" service. However, this decision is entirely up to the service provider.

More than one service identifier may be allocated to a service instance.

Table 108 : Service identifier descriptor

	No.of Bits	Identifier	Value
`service_identifier_descriptor () {`			
`  descriptor_tag`	8	uimsbf	
`  descriptor_length`	8	uimsbf	
`  for (i = 0; i < descriptor_length; i++) {`			
`    textual_service_identifier_bytes`	8	uimsbf	
`  }`			
`}`			

descriptor_tag: This 8 bit integer with value 0x71 identifies this descriptor.

textual_service_identifier_bytes: These bytes contain the unique identifier for a service encoded using the normal encoding for text strings in DVB SI.

10.13 Plug-in signalling

Two signalling scenarios are defined for delegated applications and plug-ins:

- Native signalling scenario
- MHP signalling scenario

10.13.1 Native signalling scenario

In this scenario it is sufficient for the plug-in to be signalled as a normal MHP application. Optionally it could also be signalled as a plug-in using the Plug-in descriptor (see 10.13.4 on page 237).

10.13.2 MHP signalling scenario

In this scenario MHP plug-in signalling can replace some or all of the native signalling of the delegated application. The MHP signalling allows the MHP terminal to:

- identify that one (or more) delegated applications are available
- the plug-in application that is required
- how to start the plug-in application
- how to introduce the delegated application to the plug-in application

The plug-in may use native signalling defined for the delegated application to locate, load and execute it. This is outside the scope of this specification.

Each delegated application is associated with an application descriptor (see 10.7.3, "Application descriptor" on page 219). The semantics of this descriptor are maintained with the following comments:

- the profile and version information is specific to the application format and are not registered by the MHP. However, the MHP rules for comparing profile and version values are maintained. So, the values in these fields are an encoding of the application's own profile and version numbering scheme to ensure that they are compatible with the MHP rules.
- the transport protocol label field which is allowed to be empty if the delegated application is not transported by an MHP supported transport protocol.

The additional MHP signalling provided to support plug-ins is:

- "delegated application descriptor" (see 10.13.3 on page 236)

  An optional descriptor for delegated applications.

- "Plug-in descriptor" (see 10.13.4 on page 237)

  A mandatory descriptor for plug-in application using MHP signalling.

10.13.3 delegated application descriptor

Zero or one instance of this descriptor can be placed in either the common or application loops of the AIT of the delegated application.

This optional descriptor allows one or more specific plug-in applications to be identified for this delegated application. This overrides the default identification of the plug-in application based on the application type signalled in the AIT for the delegated application. If this descriptor is absent then no specific plug-in application is identified.

Where more than one application is identified they are listed in order from most preferred to least preferred. If none of the preferred applications is available to the MHP terminal then it shall use its default mechanism to identify the plug-in application for this delegated application.

Table 109 : Plug-in reference descriptor

	No.of Bits	Identifier
delegated_application_descriptor() {		
descriptor_tag	8	uimsbf
descriptor_length	8	uimsbf
for(i=0; i<N; i++){		
application_identifier	48	uimsbf
}		
}		

descriptor_tag: This 8 bit integer with value 0x0E identifies this descriptor.

descriptor_length: This 8 bit field indicates the number of bytes following the descriptor length field.

application_identifier: This 48 bit field identifies a specific application that can consume this application.

10.13.4 Plug-in descriptor

One or more plug-in application descriptors shall be placed in the application loop of each plug-in application.

This descriptor defines for an application that implements a plug-in the set of delegated application formats that it supports. The descriptor identifies both the type of delegated application supported and the set of profiles and versions supported. The normal MHP rules for matching an application to a compatible platform apply to when matching an delegated application with a suitable plug-in.

DVB-J applications signalled with this descriptor shall implement the API defined in 11.7.8, "Plug-in APIs" on page 267.

The plug-in shall be considered suitable for running content if the application_type matches, and the version numbers are compatible according to the algorithm specified in 10.7.3, "Application descriptor" on page 219.

Table 110 : Plug-in application descriptor

	No.of Bits	Identifier
plugin_application_descriptor() {		
descriptor_tag	8	uimsbf
descriptor_length	8	uimsbf
application_type	16	uimsbf
for(i=0; i<N; i++){		
application_profile	16	uimsbf
version.major	8	uimsbf
version.minor	8	uimsbf
version.micro	8	uimsbf
}		
}		
}		

descriptor_tag: This 8 bit integer with value 0x0F identifies this descriptor.

descriptor_length: This 8 bit field indicates the number of bytes following the descriptor length field.

application_type: This 16 bit field identifies an delegated application type that this application can consume.

application_profile: This 16 bit field is an integer value which represents the application type specific profile.

version.major: This 8 bit field carries the numeric value of the major sub-field of the profile version number.

version.minor: This 8 bit field carries the numeric value of the minor sub-field of the profile version number.

version.micro: This 8 bit field carries the numeric value of the micro sub-field of the profile version number.

10.14 Stored applications

10.14.1 Use of signalling defined in MHP 1.0

Storable applications follow the standard MHP 1.0 application signalling. An MHP terminal that doesn't provide storage or doesn't recognise these extensions will perceive storable applications as viable applications that potentially can be run from the broadcast connection.

So, the signalling described here augments the signalling described in MHP 1.0.

10.14.1.1 Stored broadcast service related applications

For stored broadcast service related applications the broadcast AIT information shall be used when launching the stored application. So, little information from the AIT needs to be stored with the application.

10.14.1.2 Stored stand-alone applications

For stored stand-alone applications, the AIT information used when launching the application shall come from a stored representation of the AIT. While a stored service is being presented in a service context, the following apply:

- The applications database shall be populated with information from this stored representation of the AIT for the applications forming part of that stored service
- The implementation shall report any changes in the stored representation of the AIT in the same way as it would report changes in a broadcast AIT

10.14.2 Application storage descriptor

This application storage descriptor advertises that an application can be stored and provides some indications of its properties. The presence of this application storage descriptor indicates that an "Application description file" is provided for the application (see 10.14.3 on page 239). For a storable application a single application storage descriptor shall be placed in either the common descriptor loop or application descriptor loop of the AIT.

This descriptor, and the implied "Application description file", also supports receivers that implement speculative caching.

Table 111 : Syntax of application storage descriptor

	No.of Bits	Identifier
application_storage_descriptor() {		
descriptor_tag	8	uimsbf
descriptor_length	8	uimsbf
storage_property	8	uimsbf
not_launchable_from_broadcast	1	bslbf
reserved	7	bslbf
version	32	uimsbf
priority	8	uimsbf
}		

descriptor_tag: This 8 bit integer with value 0x10 identifies this descriptor.

descriptor_length: This 8 bit field indicates the number of bytes following the descriptor length field.

storage_property: This 8 bit field indicates the characteristics of the application w.r.t storage.

Table 112 : Semantics of storage property values

storage_property	property
0	broadcast related
1	stand alone
2 to 255	reserved

If the storage property is "broadcast related" then the application's life cycle is controlled by the broadcast service. Such applications are suitable for caching but not for running as a stand alone application.

If the storage property is "stand alone" then the application can usefully be launched by the user independently of a broadcast service. Applications with this property may also be launched as if broadcast related if the currently selected service lists them in its AIT.

not_launchable_from_broadcast: This 1 bit field is a flag. When set to "1" this indicates that the delivery characteristics of this application are such that it is not useful to launch the application unless it has been completely cached/stored. If set to '0' then caching provides some benefit but is not essential.

Applications in stored services and applications where the not_launchable_from_broadcast bit is set to "1" shall only be launched where the MHP terminal has stored the complete set of files which are listed in the "Application description file" as being critical.

version: This 32 bit field provides the version number of the application. This number starts at zero and increments by one each time any of the files listed in the "Application description file" change or the contents of the "Application description file" itself changes. Used values shall never reused, in the event that the number range is exhausted a new application id shall be used.

priority: This field indicates the priority of this application for storage relative to the other applications signalled in this service.

It is only meaningful for applications which have been proactively cached by the MHP terminal implementation and shall be ignored otherwise.

Higher values indicate more important applications to store. The behaviour when applications have the same priority is implementation dependent.

10.14.3 Application description file

10.14.3.1 Description

The "Application description file" provides the list of files that need to be installed as well as other related necessary information. The notation uses an XML-based syntax.

For those applications that can be stored, an "Application description file" file shall be placed in the same carousel as the application.

It should be noted that the application description file does not duplicate all the information needed to run the application, the MHP terminal needs to use also the information in the AIT when installing the application.

Receivers that don't have the complete set of files listed by the "Application description file" cached/stored should not attempt to launch this application.

Where a file is listed in the "Application description file" of more than one application and is stored, the MHP terminal shall ensure that each application sees the correct version of the file for that application. The version of the file visible to one application shall not be changed by any changes in the version of the file visible to any other application which may share that same file.

10.14.3.2 Application description file name and location

The application description file shall be located in the base directory of a DVB-J application (as signalled in the dvb-j application location descriptor) or the physical root of a DVB-HTML application (as signalled in the DVB-HTML application location descriptor). By convention, the name of a ADF is:

```
'dvb.storage.oooooooo.aaaa'
```

where:

oooooooo is the organisation id of the application as a 8 character hexadecimal string

aaaa is the application id as a 4 character hexadecimal string

See also 10.14.2, "Application storage descriptor" on page 238.

10.14.3.3 Syntax

The syntax of the "Application description file" is defined by the following XML DTD.

The `PublicLiteral` to be used for specifying this DTD in document type declarations of the XML files is:

```
"-//DVB//DTD Application Description File 1.0//EN"
```

and the URL for the SystemLiteral is:

```
"http://www.dvb.org/mhp/dtd/applicationdescriptionfile-1-0.dtd"
```

```
<!-- the main element for the application description -->
<!ELEMENT applicationdescription (object+)>

<!ENTITY % object "(dir|file)">

<!ELEMENT dir (%object;)*>
<!ATTLIST dir
   name CDATA #REQUIRED
   priority NMTOKEN #IMPLIED
>

<!ELEMENT file EMPTY>
<!ATTLIST file
   name CDATA #REQUIRED
   priority NMTOKEN #IMPLIED
   size NMTOKEN #REQUIRED
>
```

10.14.3.4 Semantics

name: This attribute provides the name of a file system object (directory or file) that is storable. This is the name of the object within its enclosing directory and hence does not include any directory path information.

NOTE: No elements are provided for naming object types such as Stream or StreamEvent therefore there is no mechanism to specify that Stream and StreamEvent objects are required to be stored.

priority: This attribute describes how important it is to store this object. The value zero indicates that it is critical to store the object (i.e. there is no benefit in storing any objects unless this part is stored). Higher values indicate lower storage priority.

The default value for the priority attribute is zero (i.e. critical).

The priority for an object inherits from the immediately enclosing directory.

size: This attribute defines the size in bytes of the file.

11 DVB-J Platform

11.1 The Virtual Machine

The DVB-J virtual machine is defined in Java VM [34], as amended by JVM Errata [68] plus the Inner Classes specification in Inner Classes [69].

The Java Virtual Machine shall support Java class files whose version number is in the range 45.3 through 45.65535.

11.2 General issues

11.2.1 Basic Considerations

Unless otherwise specified in this specification, MHP implementations are not required to include any classes or methods marked as deprecated in those API specifications which are either referenced by or included in this specification.

A DVB-J application is considered to logically run in its own virtual machine instance. For this reason, it cannot rely on finalizers that are defined in application classes being run when the application terminates. When the application manager terminates the entity that represents the virtual machine in which the application is run, a conformant implementation is permitted to not run application finalizers, as spelled out in section 2.17.9 of the Java Language Spec [32].

DVB-J applications shall not synchronize on system classes or other exposed system static objects else undefined behaviour may occur.

SecurityExceptions shall only be thrown either where they are declared as part of the description of the method concerned or where identified in this specification for those referenced packages which do not include any SecurityExceptions.

It is an allowable implementation choice to not override methods as long as the defined semantics are respected. The implication of this is that such differences between implementations will be visible when using the java.lang.reflection package.

The inclusion of java packages shall not imply the inclusion of other sub packages e.g. the inclusion of the `javax.tv.media` package does not automatically imply the inclusion of the `javax.tv.media.protocol` sub package. Inclusion of sub packages shall be explicitly listed in this specification.

DVB-J applications shall not use additional public or protected methods or fields in the org.dvb namespace which are not listed in this specification. Applications which scale to run on multiple revisions of this specification shall only use org.dvb methods etc. appropriate to the version of the platform on which they are running.

11.2.2 Approach to Subsetting

Where a class included in this specification has methods with signature dependencies on classes not included in the implemented profile, these methods are not required to be present in an implementation. A compliant implementation choice may require these methods and classes to be present.

Where this specification subsets a package, inclusion of the complete package is allowed but clearly not required. The behaviour of the additional features is not specified for broadcast applications.

11.2.3 Class Loading

The DVB-J application environment shall be written such that each application appears to run within its own classloader or classloader hierarchy for all classes that are not a part of the platform. As a consequence, two applications will never be able to access the same copy of any application-defined static variable.

Signed applications shall only load classes signed by the same leaf certificate.

See 12, "Security" on page 286.

Inappropriate, meaningless or illegal locators are silently skipped and searching continues.

11.2.4 Unloading

Class unloading as defined by section 12.8 of Java Language Spec [32] and section 2.16.8 of Java VM [34] will be supported.

11.2.5 Event listeners

In `org.dvb` and `org.davic` all methods to remove event listeners shall have no effect if the listener is not registered.

11.2.6 Event model in DAVIC APIs

Events defined in the DAVIC APIs DAVIC 1.4.1p9 [3] shall extend `java.util.EventObject`. Event listeners defined in DAVIC 1.4.1p9 [3] shall extend `java.util.EventListener`.

11.2.7 Event model in DAVIC & DVB APIs

Each class in `org.dvb` and `org.davic` inheriting from `java.util.EventObject` is just a container for these fields and no validity checks are done for the parameters by this constructor. Instances of these classes are intended to be constructed by the platform implementation and not by applications. The platform implementation will only construct these events with the appropriate information passed in.

In `org.dvb` and `org.davic` all methods to add event listeners add each listener only once if the add method is called with the same parameters multiple times. This means that the same event is delivered only once to each listener even if it has been added twice.

11.2.8 Tuning as a side-effect

No MHP API shall cause tuning unless explicitly specified as such. For example, if a locator that requires tuning is received by the `DVBClassLoader` it shall behave as if the specified file is not available.

11.2.9 Intra application media resource management

Where an application makes conflicting requests for limited media decoding resources, the media decoding resources that are requested most recently are presumed to be the ones that are most wanted. This applies between MPEG-2 I-Frames, MPEG-2 Video "drips" and streaming video. Similarly, this applies between streaming audio and audio from memory.

When a non broadcast media presentation (audio or video from memory or still image) is interrupted by a resource loss within the same application, the first presentation is cancelled and will not be restored.

If a broadcast media presentation is interrupted by a resource loss within the same application, the broadcast presentation is restored when the interrupting presentation ends.

11.2.10 Application thread priority

The `ThreadGroup` of application threads shall have a `MaxPriority` of 5.

NOTE: As a consequence applications will not be able to create threads at priorities greater than 5 since they don't have `java.lang.RuntimePermission( "modifyThread" )`. Applications may perform compute intensive tasks within application created threads without being considered unresponsive.

11.3 Fundamental DVB-J APIs

11.3.1 Java platform APIs

The following packages are defined in JAE 1.1.8 API [31]. See also 11.8.1.3, "Other classes" on page 269.

11.3.1.1 java.lang package

The java.lang package is supported with the following modifications.

a) The following methods shall always throw a SecurityException when called by inter-operable applications:

   Runtime.exec(),
   Runtime.load(),
   Runtime.loadLibrary(),
   System.exit(),
   System.load(),
   System.loadLibrary(),

b) MHP implementations are not required to include the following methods:

   Runtime.runFinalizersOnExit(),
   System.runFinalizersOnExit(),

   Thread.destroy(),
   Thread.stop(),
   Thread.suspend(),
   Thread.resume(),
   Thread.countStackFrames(),
   ThreadGroup.stop(),
   ThreadGroup.suspend(),
   ThreadGroup.resume(),
   ThreadGroup.allowThreadSuspension()

c) The following fields shall not be used by inter-operable applications:

   System.in

d) The following classes shall not be used by inter-operable applications:

   java.lang.Process

e) Applications shall be able to use:

   System.out,
   System.err,
   Runtime.traceInstructions(),
   Runtime.traceMethodCalls()

   for debugging without any adverse effects to the application. The output shall not be visible to normal end users and shall not conflict with any other API.

f) The `java.lang.Compiler` class and following methods shall be taken as hints from an application to the system however there is no guarantee of what happens:

   Runtime.gc(),
   System.gc()

g) Only the following properties are required to be supported for `System.getProperty()` and `System.getProperties()`:

   file.separator,
   path.separator,
   line.separator,

   dvb.persistent.root (see section 11.5.6, "Persistent Storage API" on page 258)

   With the exception of `dvb.persistent.root` all of these properties are accessible to unauthorised applications. `dvb.persistent.root` is accessible only to authorised applications.

   Property names beginning "`dvb.`" are reserved for future use.

h) The `System.setProperties()` and `System.setSecurityManager()` methods will always throw an exception when called by downloaded DVB-J applications.

i) The class `SecurityManager` shall be as specified in PersonalJAE [36].

The call `System.currentTimeMillis()` shall feature a granularity of the returned time value of not more than 10 ms. With the call `Object.wait(long timeout)`, the timeout value is specified as a maximum time to wait. The MHP further guarantees that if not notified the object will wait for at least timeout - 10 ms.

11.3.1.2 java.lang.reflect package

The `java.lang.reflect` package is supported.

11.3.1.3 java.util

The `java.util` package is supported. The constants in the Locale class do not imply support (or otherwise) for these Locales. Locales supported in the MHP are specified in profiles (see 15.4, "Locale support" on page 364).

11.3.1.4 java.util.zip

The `java.util.zip` package is supported with the exception of the following classes:

- `Deflater`
- `DeflaterOutputStream`
- `GZIPOutputStream`
- `ZipOutputStream`
- `Adler32`

11.3.1.5 java.io

The `java.io` package is supported.

11.3.1.6 java.net

From the `java.net` package, the `java.net.URL` and `java.net.InetAddress` classes and the exceptions `MalformedURLException` and `UnknownHostException` only are supported. Unless included in the platform as part of a specific profile, All the rest of this package is to be non-supported as defined in section 11.2.2, "Approach to Subsetting" on page 241. The signature dependencies from these to the rest of this package are severed as described in 11.2.2, "Approach to Subsetting" on page 241.

Support is required for at least one implementation dependant `java.n"et.URL` protocol. The `Class.getResource` method shall return instances of `java.net.URL` using such a protocol where no appropriate protocol is defined in this specification.

Support is required for the "file:" protocol. Applications shall be able to construct instances of `java.net.URL` using strings containing "file:" URLs as defined in RFC 1738 [67] where the `<host>` element is the empty string and the <path> element is an absolute filename.

The method `URL.getContent` shall work as specified in its specification even though the reference to the URL connection is not valid in all MHP profiles.

The return types of URL.getContent() are defined by the mappings from data type to java class name listed in table 113 "Return types of URL.getContent()".

Table 113 : Return types of URL.getContent()

Data type	Return type
Unknown or unsupported data types	java.io.InputStream
text/plain	java.io.InputStream
text/dvb.utf8	java.io.InputStream
text/Generic	java.io.InputStream
image/png	java.awt.image.ImageProducer
image/jpeg	java.awt.image.ImageProducer
image/mpeg	org.havi.ui.HBackgroundImage

The behaviour of URL.getContent() responds to data type using information with the following priority:

a) Content type signalling such as:

- the content type descriptor in the OC (see B.2.3.4, "Content type descriptor" on page 394).
- the HTTP header (if supported in the profile) the Content-Type header field (if present)

b) The filename extension (if known) (see table 6, "File type identification" on page 70)

c) Open the file & study

`getContentType` returns the value contained in the optional content type descriptor in the OC (see B.2.3.4, "Content type descriptor" on page 394) if present.

`getFileNameMap` returns information derived from table 6, "File type identification" on page 70.

11.3.1.7 java.beans

The `java.beans` package is supported.

11.3.1.8 java.math

From the `java.math` package `java.math.BigInteger` is supported.

11.3.1.9 java.text

The java.text package is supported with the exception of the following classes and interfaces:

- `CharacterIterator`
- `BreakIterator`
- `CollationElementIterator`
- `CollationKey`
- `Collator`
- `RuleBasedCollator`
- `StringCharacterIterator`

11.3.2 MHP platform APIs

11.3.2.1 org.dvb.lang

The `org.dvb.lang` package is supported as defined in annex H, "(normative): DVB-J fundamental classes" on page 449.

The valid types of locator for use with `DVBClassLoader` shall include the following:

- org.davic.net.dvb.DVBLocator

  That contains a valid reference to a component within a service and file path component referencing a directory within the carousel identified by the referenced component.

Where no parent is specified at creation, the delegation parent classloader of `DVBClassLoader` shall be the original classloader of the calling application.

Classloader delegation is defined in the specification for `java.lang.ClassLoader` in PersonalJAE [36].

11.3.2.2 org.dvb.event

The `org.dvb.event` package is supported as defined in annex I, "(normative): DVB-J event API" on page 453.

When sending events from a `org.dvb.event.EventManager` to listeners, the implementation shall ensure that any single listener shall only be sent one platform generated event instance at one time. If a new event is generated before the listener method has returned from processing a previous event, the MHP terminal shall not call that listener method until the call for processing the previous event returns.

The behaviour where applications have multiple such event listeners registered is implementation dependent. Implementations may use multiple threads to send the same event instance to any such multiple listeners. Implementations may ensure that at most one event listener in any one application for all these events is executing at any one time.

11.4 Presentation APIs

11.4.1 Graphical User Interface API

11.4.1.1 The Core GUI API

The following package is defined in JAE 1.1.8 API [31].

The following classes and interfaces from the `java.awt` package are included in the MHP specification:

- `Adjustable`
- `AWTError`
- `AWTEvent`
- `AWTEventMulticaster`
- `AWTException`
- `BorderLayout`
- `CardLayout`
- `Color`
- `Component`
- `Container`
- `Cursor`
- `Dimension`
- `EventQueue`
- `FlowLayout`
- `Font`
- `FontMetrics`
- `Graphics`
- `GridBagConstraints`
- `GridBagLayout`
- `GridLayout`
- `IllegalComponentStateException`
- `Image`
- `Insets`
- `ItemSelectable`
- `LayoutManager`
- `LayoutManager2`
- `MediaTracker`
- `MenuContainer`
- `Point`
- `Polygon`
- `Rectangle`
- `Shape`
- `Toolkit` (as detailed below)

The entire java.awt.event package is included.

Property names for use with the `getProperty` method on `java.awt.Image` and its sub classes beginning "dvb." are reserved for future use.

See also 11.8.1.3, "Other classes" on page 269.

The signature dependencies from `Component` to `PopUpMenu` (the add method) and `MenuComponent` (the remove method) are severed as described in 11.2.2, "Approach to Subsetting" on page 241. The same applies for all references to the java.awt.peer package.

In the Toolkit class, the following methods are required:

- `getDefaultToolkit`,
- `getFontList`,
- `getFontMetrics`,
- `sync`,
- `getColorModel`,
- and all the methods relating to images.

The following two methods are added to the Toolkit class from PersonalJAE [36]. These two methods shall not cache java.awt.Image objects.

- `public abstract Image createImage(String filename);`
- `public abstract Image createImage(URL url);`

The image caching behaviour of the following two methods is now observed as explicitly specified in PersonalJAE [36]. These two methods cache java.awt.Image objects so that two calls with the same argument return the same object.

- `public abstract Image getImage(String filename);`
- `public abstract Image getImage(URL url);`

Applications shall be able to use Toolkit.beep without any adverse effects to the application. The output is not required to be audible to normal end users and shall not conflict with any other API.

The methods `getScreenResolution` and `getScreenSize` shall be supported with the additional semantics described in HAVi [50]. The methods `getSystemEventQueue` and `getSystemEventQueueImpl` are supported however each Xlet will have a unique queue not shared with other Xlets or anything else in the system.

All of the java.awt.image package is required. The encoding of image content types for use by java.awt.image are defined in 7.1.1, "Bitmap image formats" on page 64. The set of formats supported is profile dependent.

When using the java.awt.FontMetrics class, the width of a set of characters or string returned by the charsWidth or stringWidth method shall be correct taking into account any kerning and sub-pixel positioning applied by the font renderer. Calculating the same number by adding the widths of the individual characters is not required or expected to return the same number since it will not take into account any kerning or sub-pixel positioning applied by the font renderer.

The downloading of fonts from the network (see D.2.2, "Downloaded fonts" on page 421) shall be supported using the methods concerned on `org.dvb.ui.FontFactory`. Failure to download a font shall be reported by these methods. The constructor for `java.awt.Font` shall only be aware of platform resident fonts.

11.4.1.2 TV user interface

The packages `org.havi.ui` and `org.havi.ui.event` defined in HAVi [50] shall be supported. Instances of `org.havi.ui.event.HRcEvent` are reported through the normal `java.awt` event mechanism due to the inheritance from `java.awt.event.KeyEvent`.

With the exception of the `HSound.load` method, no methods specified in HAVi [50] shall throw a security exception in the MHP context. The permissions for `HSound.load` are those defined for java.io.

The `DVBTextLayoutManager` specified in U, "(normative): Extended graphics APIs" on page 753 shall be supported.

The following semantics shall be used for the `getVideoController` method on `HVideoDevice`.

- It shall only return JMF players (see Java Media Player Specification [33]) which are in the Prefetched or Started states and which are using that `HVideoDevice` as one of their scarce resources. Otherwise null will be returned. It shall not return JMF players from other applications if those are using the video device underlying the `HVideoDevice`.
- Except as specified below, it shall only return JMF players which have been already created in response to the application calling `javax.media.Manager.createPlayer` or which have been returned by `javax.tv.service.selection.ServiceContext.getServiceContentHandlers` (see Java TV [51]).
- The only exception to the above is the situation where video is being played in the background as part of the context of an application but where `javax.tv.service.selection.ServiceContext.getServiceContentHandlers` has not yet been called. In this case, `getVideoController` shall return the same JMF player as would be returned by `getServiceContentHandlers` if it was to be called subsequently.

The signatures of the classes `HComponent` and `HContainer` shall be extended with "`implements org.dvb.ui.TestOpacity`".

The methods `HGraphicsConfiguration.getPunchThroughToBackgroundColor` shall not be used by inter-operable applications.

The methods `fontAvailable()` and `downloadFont()` in the class `org.havi.ui.HFontCapabilities` shall not be used by inter-operable applications.

The package `javax.tv.graphics` defined in Java TV [51] shall be supported.

11.4.1.3 Extended graphics

See U, "(normative): Extended graphics APIs" on page 753.

11.4.1.4 Handling of input events

The MHP includes two ways for applications to receive input events: the normal AWT method in `java.awt.Component` and the `org.dvb.event` package (see 11.3.2.2, "org.dvb.event" on page 246). Via the normal AWT method, the application normally receives all input events when the component has the focus. The minimum set of input events that are supported is defined in G.5, "Input events" on page 446.

Often the resident Navigator software of the MHP terminal uses many of the keys on the remote control for its own navigation purposes. An MHP application having the AWT focus will consume the defined input events by itself which possibly may cause them not to be delivered to the resident Navigator.

To ensure consistent user experience, the following rules are defined:

- an application creating a `Scene` and placing components into it shall not by default get the input focus for these components
- the application may request to get the input focus by calling `Component.requestFocus()`. If this is granted and the focus moved to the requested component, this component shall receive input events as defined in I.1 on page 453.
- the application may request to receive a subset of input events via the `org.dvb.event` API even when not having the AWT focus.

For applications delivered within normal television services, it is recommended that the following items are taken into account:

- when the display is primarily showing the video of the television service and the user perception is that he is not actively interacting with an application but is just watching the television service (this state is later called 'television viewing mode'), the applications should not request the AWT focus but let most of the input events go to the resident Navigator (e.g. number keys, directional arrow keys and Enter may cause the normal actions the user expects from the Navigator)
- in the 'television viewing mode' the applications should request only the minimum required input events, e.g. only input events that cause some further action to happen and that may transition the user from the 'television viewing mode' into a state where the user more actively interacts with the applications.
- if the applications require some input events for the user to be able to activate the application when in the 'television viewing mode', it is recommended that the VK_COLORED_KEY_(0…3) and VK_TELETEXT (see note below) input events are used for this purpose and the applications request them via the org.dvb.event API. In practice this means that the navigator can not map any essential function directly to the VK_COLOURED_KEY(0…3) events in television viewing mode.
- MHP applications wishing to leave "tv viewing mode" and receive events other than the VK_COLORED_KEY_(0…3) and VK_TELETEXT are obliged to display a non-transparent graphics object on the screen that covers at least 3 % of the visible area on the screen (equivalent to 9852 pixels on a 634x518 visible screen in a 720x576 graphics mode) which clearly indicates to the user the "non-navigator" mode of the receiver with respect to input event handling.

NOTE 1: In television services where DVB Teletext is transmitted within the service, a typical Navigator action in the 'television viewing mode' can be to activate a teletext decoder, if supported by the terminal. The application requesting this input event may cause the DVB Teletext decoder not to be conveniently accessible to the end user. Therefore, within services that carry DVB Teletext it is recommended that the VK_TELETEXT input event is requested in the 'television viewing mode' only by such applications that provide a a simulcast MHP application version of the teletext service, thus providing a replacement for the DVB Teletext information.

In environments where WST Teletext services are prevalent when there is no DVB Teletext service associated with the video service, the MHP application should display an information service of a similar nature to teletext. When receiving this event for the second time the information service should terminate and the user will return to normal viewing mode.

The VK_TELETEXT event should have no other purposes in MHP applications.

NOTE 2: The items above apply only to the 'television viewing mode' as explained above. In states where the user experience is that the user is clearly primarily interacting actively with an application the applications can naturally use the normal AWT input event mechanism and request the focus as well as use any of the supported input events via the org.dvb.event API.

NOTE 3: For data services, the first interaction state of an application that is automatically started after service selection should behave as television viewing mode. This is in order to allow users who are navigating with the navigator to seamlessly navigate through these services without getting confused.

11.4.2 Streamed Media API

11.4.2.1 Framework of solution

The `javax.media` and `javax.media.protocol` packages from Java Media Framework as defined in Java Media Player Specification [33] shall be implemented with the clarifications, extensions and restrictions as defined in the corresponding sections below.

11.4.2.2 Clarifications

The JMF "time base time" when playing MPEG content delivered in MPEG transport streams is used as a constantly progressing time whose rate may be synthesized from the Program Clock References / the System Time Clock in MPEG or by some other appropriate method. The value does not have any direct relation to the value of the MPEG System Time Clock in the receiver.

The media time of JMF when playing MPEG content delivered in MPEG transport streams is just a time value that progresses as the media stream is played, but whose actual value is implementation dependent.

NOTE: There is no implied or expected connection between the JMF media time and any time base(s) provided by the MPEG-2 / DSM-CC Normal Play Time.

When creating a JMF player, Locators and URLs which reference a DVB service, event or elementary stream will create a player which plays the content concerned direct from the network. Locators and URLs which reference files will create a player which will download the content concerned from the network during the Prefetching state of the player concerned. If the content cannot be downloaded then such players will never enter the Prefetched state.

Interoperable applications shall not call javax.media.MediaHandler.setSource().

In the `javax.media.PackageManager`:

a) The effect of the `set<xxx>PrefixList` methods is limited to the application calling the method.

b) The `SecurityException` is always thrown in MHP.

`SubtitlingLanguageControl.isSubtitlingOn()` returns the current state of subtitle presentation and NOT the last value set with `setSubtitling`. In particular `setSubtitling` may be set to true but if there are no subtitles in the network or no subtitle service component selected then `isSubtitlingOn` shall return false.

Any elements in `DVBLocators` after and including the `event_id` element are ignored by JMF players.

11.4.2.3 Default media player behaviour

For a JMF player which is presenting a DVB service, the following rules will be followed in the order given to decide which service components will be presented when multiple audio, video or subtitle components are present in a service:

a) For audio and subtitle streams in different languages, user preferences will be used to determine which streams are selected.

b) The streams which are first in the network signalling information (i.e. in the appropriate SI table) will be presented.

If any of the media components comprising the service change then the implementation will as far as possible replace the changed components with suitable replacements in a user preference and implementation dependant manner.

11.4.2.4 Required controls for video drips

The following controls are supported for video drips (see 7.1.3, "MPEG-2 Video "drips"" on page 64):

- `javax.tv.media.AWTVideoSizeControl`
- `org.dvb.media.BackgroundVideoPresentationControl`

11.4.2.5 Extensions to the Framework

11.4.2.5.1 DVB specified extensions

The classes and interfaces defined in annex N, "(normative): Streamed Media API Extensions" on page 574 of this specification are included.

11.4.2.5.2 Extensions in org.davic

The following classes and interfaces will be included from the `org.davic.media` package, as defined in annex L of DAVIC 1.4.1p9 [3].

- MediaPresentedEvent
- MediaLocator
- MediaTimePositionControl
- FreezeControl
- ResourceWithdrawnEvent
- ResourceReturnedEvent
- MediaTimePositionChangedEvent
- LanguageNotAvailableException
- NotAuthorizedException
- NotAuthorizedMediaException
- MediaFreezeException
- LanguageControl
- AudioLanguageControl
- SubtitlingLanguageControl

The following classes will be included from the `org.davic.media` package as defined in annex L of DAVIC 1.4.1p9 [3] with the following semantic modification:

- The completion of the action started by calling `setMediaTimePosition()` on the `MediaTimePositionControl` will be signalled by a `org.davic.media.MediaTimePositionChangedEvent`.
- The `org.davic.media.MediaPresentedEvent` shall only be thrown following changes caused using controls in the `org.davic package` and as part of the transition of a JMF player into the Started state. In this second case, it augments the JMF state transition events and does not replace them.

NOTE: Changes effected using `javax.tv.media.MediaSelectControl` do not lead to the `org.davic.media.MediaPresentedEvent` being thrown.

11.4.2.5.3 Extensions in javax.tv

The package `javax.tv.media` defined in Java TV [51] shall be implemented.

In `javax.tv.media.MediaSelectControl` the `InsufficientResourcesException` is thrown by the `select()` method if selecting any service component fails due to a lack of system resources.

In `javax.tv.media.AWTVideoSize.equals()`, the "data members" shall be considered to be the "source" and "dest" parameters used to create the object.

11.4.2.5.4 Required controls for broadcast profiles

The following controls are supported for the broadcast streaming formats specified in 7.2, "Broadcast streaming formats" on page 66:

- org.davic.media.LanguageControl
- org.davic.media.AudioLanguageControl
- org.davic.media.SubtitlingLanguageControl
- org.davic.media.FreezeControl
- javax.tv.media.MediaSelectControl
- javax.tv.media.AWTVideoSizeControl
- org.dvb.media.VideoPresentationControl
- org.dvb.media.BackgroundVideoPresentationControl
- org.dvb.media.SubtitlingEventControl
- org.dvb.media.VideoFormatControl

The following controls are supported for media decoded from 7.1, "Static formats" on page 64:

- org.davic.media.MediaTimePositionControl

11.4.2.5.5 Clarifications

In SubtitlingLanguageControl, subtitling being presented shall be defined as the subtitle decoder running. It does not require subtitles to be visible on screen at that time. See 13.5, "Subtitles" on page 349.

When a `PresentationChangedEvent` is generated, the Player in question should re-evaluate the list of controls returned by the getControls() method for that player. Similarly, Players supporting the `MediaSelectControl` should re-evaluate the list of Controls returned by `getControls()` after calls to the `MediaSelectControl.select()` method is called.

Any controls referenced by an application after a `PresentationChangedEvent` or a `MediaSelectSucceededEvent` is generated may fail silently if they are no longer valid. Controls which are valid for the new content remain unaffected. Applications should re-acquire any controls they require after either of these events has been generated.

11.4.2.6 Restrictions on the Framework for Broadcast

Controls that are supported the MHP need not have an associated GUI component. Any calls to `Control.getControlComponent()` may return null.

Developers of MHP applications should not rely on the presence of the following classes or interfaces:

`javax.media.CachingControl` (unless returned by a call to a JMF method)

`javax.media.CachingControlEvent`

`javax.media.GainControl` (unless returned by a call to a JMF method).

An MHP implementation need not return a `CachingControl` or `GainControl` from a call to `Player.getControls()` however this is not prohibited. If an MHP implementation does return a `GainControl`, then the volume that is set using this control may not be greater than the system volume level. I.e. the gain control may only change the volume between mute and the volume level at the time the application was started. This system volume level shell be represented as 1.0.

JMF Players are not required to return a `java.awt.Component` from their `getVisualComponent` method and may return null. Players which return null can only be used to present video in the background. Players which return a `java.awt.Component` must fully support the semantics for `java.awt.Component` concerning positioning and scaling.

Players start as background players. If a `getVisualComponent` returns a component then a player is also capable of performing as a component based player. Video shall continue running in the background until the first call to the paint method of the component returned `getVisualComponent`. When this transition happens the video is resized and repositioned as required by the `visualComponent`. Possible areas outside of the component are updated to follow the rules in 13.3, "Graphics" on page 338.

After this transition, applications shall re-acquire the list of JMF controls for the player. It is implementation dependent whether any previous JMF controls are re-used. Applications shall not use any previous JMF controls which are not in the new list of JMF controls. When a JMF player is performing as a component based player, the following JMF controls shall not be supported and video scaling & positioning shall be done by controlling the size & position of the component returned by the `getVisualComponent` method.

- `org.dvb.media.BackgroundVideoPresentationControl`
- `javax.tv.media.AWTVideoSizeControl`

Applications should not expect `PushDataSource` and `PullDataSource` to exist for broadcast MPEG content, and it is not required that functional implementations be provided for implementations of JMF in DVB. The `DataSource` used may be implementation-specific and non-specified apart from its inheritance from `javax.media.protocol.DataSource`.

The constructor for `URLDataSource` may always throw `IOException` for broadcast MPEG content.

For the purposes of integration with `javax.tv.media.MediaSelectControl` "resynchronization" is not considered to occur provided that the same PCR_PID is referenced between the new and existing service components.

Implementations of JMF shall not tune but shall allow selection of media components from transport streams which can be reached without tuning even where they are not part of a currently selected service.

11.4.2.7 Intersection Between MediaSelectControl and SubtitlingLanguageControl / AudioLanguageControl

The method `org.davic.media.LanguageControl.listAvailableLanguages()` shall list all available languages in the service concerned. This includes languages carried in service components which are not currently selected, either because the service component concerned has been de-selected using `MediaSelectControl` or because it was never selected initially because it was not carried in one of the components listed in the component tags of a locator which included component tags.

The method `org.davic.media.LanguageControl.selectLanguage()` shall over-ride any selection of service components made either by `javax.tv.media.MediaSelectControl` or by using a locator for a service which included component tags. If `selectLanguage()` has changed the set of service components selected, the methods on `javax.tv.media.MediaSelectControl` shall behave as if that change had been made through `MediaSelectControl` and return the correct set of service components taking into account the change made by `selectLanguage()`.

If the methods on `javax.tv.media.MediaSelectControl` are used to replace or remove the service component carrying the currently active audio or subtitles then the presentation of this service component shall stop. If the methods on `javax.media.MediaSelectControl` are used to add a service component carrying audio or subtitles when a service component of this media type is not already being presented then presentation of this service component shall be started. The language of the newly selected service component shall be returned by calls from the application to the method `getCurrentLanguage` on `AudioLanguageControl` or

SubtitlingLanguageControl respectively. Attempting to select multiple service components of the same media type to be presented at the same time using methods on MediaSelectControl shall fail unless the MHP terminal concerned has sufficient resources to present them simultaneously. The failure mode shall be that as specified in MediaSelectControl for when insufficient resources are available.

Where methods on MediaSelectControl are used to modify the set of selected service components and this causes changes in the state of subtitles, the events org.dvb.media.SubtitleSelectedEvent and SubtitleNotAvailableEvent will be generated as appropriate

Control of the availability of subtitles using MediaSelectControl or the methods selectLanguage & selectDefaultLanguage (which SubtitlingLanguageControl inherits from LanguageControl) shall not impact the value of "Application Control" as mentioned in figure 39, "Determining subtitling language and presentation setting" on page 349 and vice versa.

11.4.2.8 Intersection between Streamed Media API and TV User Interface API

11.4.2.8.1 Basic Principles

Some of the decoder format controls pre-defined as part of org.dvb.media.VideoFormatControl may require control over the pixel aspect ratio of the final video output signal after video, graphics and backgrounds have been combined as shown in figure 22 on page 334. In order to enable this, a JMF player shall attempt to reserve the HVideoDevice instance on which its output is being displayed. Failure to reserve the HVideoDevice shall not be considered fatal to the JMF player but may result in an inferior TV video presentation.

NOTE: The actual configurations of the HVideoDevice used and available are dependent on the precise configuration of the MHP terminal. Differences will exist between set-top boxes, integrated digital TVs and PCs. The precise nature of any "inferior TV video presentation" is dependent on the configuration of the MHP terminal, on the input video and the characteristics of the final output device.

11.4.2.8.2 TV Behaviour Control

The "TV Behaviour Control" in figure 36, "Format control in the presence of a JMF player" on page 347, is the default video transformation behaviour for JMF players which have none other set. Setting the VideoTransformation to DFC_PLATFORM shall set the video format control to TV behaviour control mode.

NOTE 1: In this mode, any changes in the video input signal where "television behaviour control" which require changing the pixel aspect ratio of the final output signal (i.e. after the combination of video with graphics, subtitles & backgrounds) will also change the pixel aspect ratio of any graphics, subtitles & backgrounds combined into that one final output signal.

NOTE 2: For an example of "TV behaviour control" in set-top boxes and integrated digital TVs, see E-Book [I].

11.4.2.8.3 Application Behaviour Control

When an MHP application is controlling video presentation through BackgroundVideoPresentationControl (for video in the background) or VideoPresentationControl & methods on java.awt.Component (for video in a component), the application is responsible for monitoring the incoming video format & changing the video presentation if desired.

Instances of VideoTransformation constructed using the constructor of that class do not shall not impact the configuration of the HVideoDevice. Instances of VideoTransformation returned by VideoFormatControl. getVideoTransformation shall have the same impact on the HVideoDevice as the equivalent conversion applied in "TV behaviour control mode". These may not be fully achievable if the JMF player does not have the HVideoDevice reserved.

11.4.2.8.4 Dynamic Behaviour

A JMF player shall attempt to reserve the `HVideoDevice` instance on entry to the `Prefetched` state from any state except the `Started` state. A JMF player in the prefetched or started states which does not have the `HVideoDevice` reserved shall attempt to reserve it only when the application which created the JMF player calls the `setVideoTransformation` method of the control `org.dvb.media.BackgroundVideoPresentationControl`. A JMF player leaving the `Started` or `Prefetched` state for the `Realized` state shall release the `HVideoDevice` if it has it reserved.

A JMF player which has the `HVideoDevice` reserved and then loses the right to control that device shall post an instance of the event `org.davic.media.ResourceWithdrawnEvent` to all registered listeners for `ControllerEvents` on that `Player` instance. If the right to control that device is subsequently recovered when a attempt to reserve the device (as defined above) succeeds, then an `org.davic.media.ResourceReturnedEvent` shall be posted.

11.4.2.8.5 Resource Management Details

Inter-operable applications shall not call any of the methods on the instance of `ResourceClient` returned by `HVideoDevice.getClient` when a JMF player has reserved that `HVideoDevice` instance.

Inter-operable applications are allowed to call `HVideoDevice`.release or `HVideoDevice.setConfiguration` directly. JMF implementations shall tolerate this behaviour when it happens.

11.5 Data Access APIs

11.5.1 Broadcast Transport Protocol Access API

The broadcast transport protocol access API is defined in section P, "(normative): Broadcast Transport Protocol Access" on page 624.

Relative file names used to access objects in the carousel shall be taken as being relative to the base directory indicated in 10.9.2, "DVB-J application location descriptor" on page 230. Calling `new DSMCCObject(".")` or `new java.io.File(".")` will instantiate the directory object that refers to the base directory as indicated in 10.9.2, "DVB-J application location descriptor" on page 230.

11.5.1.1 Constraints on the java.io.File methods for broadcast carousels

The application shall be able to use the standard java.io.File class for access to broadcast carousels (e.g. a carousel unaware application). In this case, the following definitions shall apply:

- the constructor of File only creates an instance of the abstract pathname and shall not cause synchronous access to the broadcast carousel that would block the thread
- after the constructor of the DVB-J File object has been run, the directory entry information relating to this object may be in an unloaded state. The information relating to this object (e.g. its length) comes from the parent directory which is not required to have been loaded at this point by the constructor. However, this information may be available if the implementation has the information in cache.
- if the directory entry information for a DVB-J File object is in the unloaded state, then this information shall be synchronously loaded when any of the following methods are called on the object: `canRead()`, `exists()`, `isDirectory()`, `isFile()`. If the loading fails, all these methods shall return false. The effect of the loading is equivalent to calling the `synchronousLoad` method on a File object corresponding to the parent directory.
- after the constructor has been run, the content of the object may be in unloaded state. However, it may also be loaded if the implementation has the information in cache.
- if the content is in unloaded state, it shall be synchronously loaded when the list() method is called for a directory. If this implicit load should result in a service transfer, it shall not be done implicitly and the list() shall return an empty list.
- the method lastModified() returns moduleVersion from the DII for the module that carries the file (treating the octet as an unsigned integer).
- any version changes in a file after the constructor for an `InputStream` is called will not be visible in the data read from that InputStream.
- list methods shall return null when called on a object that isn't a directory.
- the creation of a `FileInputStream` shall throw `FileNotFoundException` if the referenced object is not a file.
- Failure of a signed file to be authenticated shall be reported by the constructor for the `InputStream` throwing an `IOException`.
- Failure of a signed directory to be authenticated shall be reported by the list methods returning null when called on a file object representing the directory whose authentication failed.
- The value returned by `java.io.file.Length()` may not be accurate as it returns the value from the directory information rather than the actual size of the file

There are no guarantees that the most recent version of a file will be returned unless the network signalling specifies that the file concerned requires transparent access.

11.5.1.2 Methods dealing with write access

The `java.io.File` class also contains methods that assume write access to the file system. Due to its broadcast nature, the receiver naturally does not have write access to the carousel. It should be noted, however, that a broadcast carousel is not a read-only file system (which has the property of not changing). The carousel content can certainly be written and modified, but only by broadcaster - not the receiver. Therefore, the situation is equivalent to a Unix file system where the user has only read permissions, but not write permissions or ownership of the files.

The following `java.io.File` methods deal with write access to directories: `canWrite()`, `mkdir()`, `mkdirs()`, `renameTo()`.

For abstract pathname entries in the broadcast carousel, the following behaviour shall apply:

- canWrite() returns false to indicate that the file can not be written to
- mkdir(), mkdirs() and renameTo() return false to indicate that the request failed

11.5.1.3 Behaviour following loss of a broadcast file system

When a broadcast file system is lost to an application as described in 6.2.5.3, "Loss of Carousel Behaviour" on page 56, the following failure modes shall be followed for data which is unavailable.

- Attempting to load data from a file using a content format specific API shall fail as if the file itself never existed. This shall be done according to the specific API concerned.
- The classloader created by the platform when the application was first launched never attempts to automatically recover following loss of its initial broadcast file system.
- Attempting to load a class which is unavailable shall fail as if the class was never present.
- After the constructor for an InputStream has been successfully called, the data for that InputStream shall be maintained by the platform until the InputStream is closed. This is the same behaviour as specified for InputStream and file version changes in 11.5.1.1, "Constraints on the java.io.File methods for broadcast carousels" on page 256.
- Attempting to create a FileInputStream for a file whose data is unavailable shall fail with a FileNotFoundException.
- Attempting to create a RandomAccessFile for a file whose data is unavailable shall fail with an IOException.
- Attempting to use a FileDescriptor of a FileInputStream whose data is unavailable shall result in a FileInputStream or InputStreamReader where all methods shall throw an IOException.
- Attempting to call methods on a File object whose data is unavailable shall fail in the same way as if the File itself never existed.

11.5.2 Support for Multicast IP over the Broadcast Channel

Where support for IP over the broadcast channel is included, the following classes and packages shall be supported in addition to those listed above for the case where IP support is not included.

a) The javax.tv.net package as defined in Java TV [51] is included.

b) The methods listed below from java.net.MulticastSocket shall be supported for one way IP Multicast support. All other methods in the class shall either throw exceptions where possible or fail silently when called on receive only IP Multicast systems.

```
MulticastSocket()
MulticastSocket(int port)
InetAddress getInterface()
void joinGroup(InetAddress mcastaddr)
void leaveGroup(InetAddress mcastaddr)
void setInterface(InetAddress inf)
```

c) The methods listed below from `java.net.DatagramSocket` shall be supported for one way IP Multicast support. These methods are inherited by MulticastSocket. All other methods in the class shall throw exceptions where possible or fail silently when only called on receive only IP Multicast systems.

```
DatagramSocket()
DatagramSocket(int port)
DatagramSocket(int port, InetAddress local)

void close()
int getSoTimeout()
void receive(DatagramPacket p)
void setSoTimeout(int timeout)
int getLocalPort()
InetAddress getLocalAddress()
```

d) The following classes from `java.net` shall be supported:-

- DatagramPacket
- SocketException
- UnknownHostException
- ProtocolException
- BindException

e) The class `org.dvb.net.DatagramSocketBufferControl` shall be supported see Q, "(normative): Datagram Socket Buffer Control" on page 685.

f) Behaviour if unsupported:

When the application tries to joinGroup() on a Multicast address, ProtocolException shall be thrown to indicate failure on joining the group.

11.5.3 Support for IP over the Return Channel

Where support for IP over the return channel is included, all of the `java.net` package shall be included. Platforms not implementing specific optional return channel protocols shall fail as defined in the specification of this API.

On devices whose return channel can be connected or disconnected, connecting a `java.net.Socket` or a `java.net.URLConnection` to a host addressed via the return channel shall automatically setup a connection to the default connection target subject to the application having return channel permission for the default ISP. Such connections shall be automatically disconnected after a time out period defined in the Navigator.

See 11.10, "Java permissions" on page 272.

See also 11.8.1.3, "Other classes" on page 269.

11.5.4 MPEG-2 Section Filter API

The MPEG-2 section filter API is defined in annex E of DAVIC 1.4.1p9 [3].

11.5.5 Mid-Level Communications API

See Annex R, "(normative): DVB-J Return Channel Connection Management API" on page 688.

11.5.6 Persistent Storage API

The API to persistent storage shall be the `java.io` package and the extensions to it found in the `org.dvb.io.persistent` defined in annex J, "(normative): DVB-J persistent storage API" on page 469.

The "`dvb.persistent.root`" property which can be obtained from `java.lang.System.getProperty()` identifies the directory at the root of the file name space used for persistent storage. This value shall be the same for all applications. Accessing any files or directories in the parent directory of this root or directories above that shall throw a `SecurityException` as defined in the specification for the `java.io` package. Applications shall have read only access to this root directory. Applications shall have automatic read and write access to the sub-directories <organisation_id> and <organisation_id> + <file.seperator> + <application_id>. See 14.5, "Text encoding of application identifiers" on page 357. The fields <organisation_id> and <application-id> are hexadecimal text encodings (without leading zeros) of the fields in the 48 bit application identifier of the application concerned as defined in 10.5, "Application identification" on page 214. These directories must be automatically created by the platform. The owner of the organisation directory shall be the platform and it shall always have organisation read / write and world read access. The platform shall set the owner of the application directory to the application with read and write access for that application and no access for other applications.

All files in persistent storage shall store the 48 bit application identifier of their creator as the "owner" of the file. Only the owner of the file is entitled to change the file attributes and file access rights. The owner of a file cannot be changed once a file is created. Applications may only create files or directories in directories to which they have write access. The existing semantics for the `java.io` package are respected.

11.6 Service Information and Selection APIs

11.6.1 DVB Service Information API

The DVB specific SI API is defined in annex M, "(normative): SI Access API" on page 490.

11.6.2 Service Selection API

The service selection API is defined by the `javax.tv.service.selection` package from Java TV [51].

On the first occasion when the method `ServiceContext.getServiceContentHandlers` is called for a specific service, any JMF players returned shall always be in the started state and if they are presenting video, that video shall always be presenting on the background video device.

Applications shall re-acquire the list of service content handlers after a service selection completes. It is implementation dependent whether any previous handlers are re-used. JMF players which are not re-used are stopped and may be disposed by the platform. Where a JMF player is re-used, it shall be reset to a default condition as if it was not being re-used. In particular the implementation shall cancel all listeners previously defined and reset any previously defined characteristics such as video scaling or positioning.

The exception `javax.tv.services.selection.ServiceContextException` shall never be thrown by MHP terminals.

The default media player behaviour following service selection is defined under 11.4.2.3, "Default media player behaviour" on page 251.

The protected constructor of `ServiceContextFactory` is for implementation use. MHP applications shall not subclass `ServiceContextFactory`. Implementations are not required to behave correctly if they should do this.

Implementations of this API are required to perform tuning as part of implementing the `ServiceContext.select()` method where the new service to be selected is part of a transport stream known to the MHP terminal but not currently tuned to.

This API shall support the following features on those MHP terminals which support the feature concerned.

- Internet clients (see: 9.8, "Lifecycle of internet access applications" on page 206, 11.14.1, "Internet client control APIs" on page 283)
- Stored services (see: 9.7.2, "Stored services" on page 204, 11.12.2.2, "Modified behaviour of MHP 1.0 APIs" on page 281)
- Services signalled over the interaction channel (see 9.7.1, "Applications loaded from the interaction channel" on page 204, 11.11.12, "Support for the HTTP protocol in DVB-J" on page 280)

11.6.3 Tuning API

The tuning API is defined in annex H of DAVIC 1.4.1p9 [3] apart from section H.4, (the `Locator` and `DvbLocator` classes) which are found in section 11.7.6 "Content Referencing".

The following methods in this package shall throw `java.lang.SecurityException` where and only where the application does not have a `org.dvb.net.tuning.TunerPermission`:

- `NetworkInterfaceController.reserve`
- `NetworkInterfaceController.reserveFor`

The class `org.davic.net.tuning.dvb.DvbNetworkInterfaceSIUtil` is not required.

See also 11.8.3, "Additional permissions classes" on page 269.

11.6.4 Conditional Access API

The conditional access API is defined in annex I of DAVIC 1.4.1p9 [3].

The following classes are not supported as defined in section 11.2.2 "Approach to Subsetting" - CA1Module, CA0Module, CA1Message, CA0Message, CA1ModuleResponseEvent and CA0ModuleResponseEvent.

Physical CI modules or embedded systems following the CI protocol can produce MMI messages. The API implementation, subject to security model, passes those to be presented by the application if the application is interested. Otherwise CA dialogs are generated.

The following methods in this API may throw `java.lang.SecurityException`:-

- `CAModuleManager.addMMIListener`
- `CAModule.queryEntitlement`
- `CAModule.listEntitlements`
- `CAModule.buyEntitlement`
- `CAModule.openMessageSession`

The `sessionIDs` used in CI message passing are unique to a single application and access shall fail if shared between applications.

See also 11.8.3, "Additional permissions classes" on page 269.

11.6.5 Protocol Independent SI API

The protocol independent SI API is defined by the following packages from Java TV [51]:

- `javax.tv.service`
- `javax.tv.service.guide`
- `javax.tv.service.navigation`
- `javax.tv.service.transport`

The mapping of this onto the DVB-SI protocol is specified in annex O, "(normative): Integration of the JavaTV SI API and DVB SI" on page 617.

Cancellation shall fail if the request is no longer pending. It is implementation dependent if cancellation fails under any other circumstances. Implementations are not required to support cancellation of requests between when the requested SI data has arrived in the device and when execution of the `notifySuccess` method starts.

The interface `javax.tv.service.ServiceMinorNumber` is not required to be implemented by any object defined in this specification.

This API shall support the following features on those MHP terminals which support the feature concerned.

- Internet clients (see 9.8, "Lifecycle of internet access applications" on page 206, 11.14.1, "Internet client control APIs" on page 283)
- Stored services (see 9.7.2, "Stored services" on page 204, 11.12.2.2, "Modified behaviour of MHP 1.0 APIs" on page 281)

11.7 Common Infrastructure APIs

11.7.1 APIs to support DVB-J application lifecycle

This API is formed of the Java classes and interfaces found in the `javax.tv.xlet package` specified in Java TV [51].

11.7.1.1 Xlet properties

The following named Xlet properties are introduced:

- `dvb.org.id`
- `dvb.app.id`
- `dvb.caller.parameters`

They can be retrieved from an Xlet's XletContext by calling `getXletProperty` with the string name defined above.

All keys for `XletContext.getXletProperty` beginning `'dvb.'` are reserved for use in DVB project specifications.

The array of strings returned by `XletContext.getXletProperty(XletContext.ARGS)` shall be the array of strings defined in the DVB-J application descriptor (see 10.9.1 on page 230) in the same order as specified in the signalling. Each entry in the loop of that descriptor shall be presented as one string in the array returned by this method, interpreted using the encoding as specified in 10.4.8, "Text encoding in AIT" on page 213. Zero-length strings in the signalling shall be represented as the empty string.

11.7.1.2 Actions for DVB-J applications to perform in their destroy method

Xlets shall perform at least the following in their `Xlet.destroyXlet` method and before calling `XletContext.notifyDestroyed`:

- cause any threads that they have created to exit voluntarily. See "java.lang package" on page 243.
- stop, deallocate and close any JMF players that they have created.
- stop and destroy any JavaTV service selection ServiceContext objects that they created.
- release any other scarce resources that they created, e.g. `NetworkInterfaceControllers` if they do any tuning.
- flush any images using the `Image.flush()` method.
- Xlets shall not cause any unnecessary delay in their `Xlet.destroyXlet` method.
- de-register any event listeners

11.7.2 Application discovery and launching APIs

This API is formed of the `org.dvb.application` package defined in S, "(normative): Application Listing and Launching" on page 711.

The following properties are defined for use with the method `AppAttributes.getProperty`:

Table 114 : Application attribute properties (Sheet 1 of 2)

Property name (note 1)	Return
dvb.j.location.base	Returns String containing base_directory_bytes from DVB-J application location descriptor.
dvb.j.location.cpath.extension	Returns String[] derived from classpath_extension_bytes of DVB-J application location descriptor with each array entry corresponding to a pathname entry as defined for classpath_extension_bytes.

Table 114 : Application attribute properties (Sheet 2 of 2)

Property name (note 1)	Return
dvb.transport.oc.component.tag	Returns Integer containing the component_tag from the selector bytes of the transport protocol descriptor
NOTE 1: Property names beginning "dvb." are reserved for future use.	

The following table defines the source of the information which shall be used for methods returning information from entries in the application database for an application signalled in an AIT. This shall apply to both AITs delivered via MPEG-2 broadcast and ones delivered as an AIT file (see 10.4.9, "AIT file" on page 213). This shall also apply to applications running as part of a stored service using information stored at the time when the application itself was stored.

Table 115 : Information source for methods on AppAttributes

Method	Information source
getName()	One of the names that can be found in the application name descriptor.
getName(String ISO639code)	A name of the application from the application name descriptor corresponding to the specified language.
getNames()	All of the names for the application which can be found in the application name descriptor and their ISO 639 language code.
getProfiles()	The set of profiles signalled in the application profile field of the application descriptor.
getPriority()	The contents of the application_priority field of the application descriptor.
getVersions(String profile)	The values version.major, version.minor and version.micro for the specified profile from the application descriptor.
getIsServiceBound()	True if the service_bound field in the application descriptor is set to 1. Otherwise false.
isStartable()	An application shall be considered to be transmitted on a remote connection where the application control code in the signalling is REMOTE. An application shall be considered to be not available any more where the corresponding entry has been removed from the AIT and the implementation has detected this.
getIdentifier()	The contents of the application_identifier field of the application information section.
getServiceLocator()	An application shall be considered to be transmitted on a remote connection only where the application control code in the signalling is REMOTE. The locator for a remote application shall encapsulate the values found in the selector bytes of the transport protocol descriptor.

.

Table 116 : Information source for methods on AppIcon

Method	Information source
getLocator()	The bytes carried in the application_locator_byte of the application icons descriptor appended to either the base directory of the application (where the application type from the application information section is zero, from the DVB-J application location descriptor) or the physical root (where the application type from the application information section is 1, from the DVB-HTML application location descriptor).
getIconFlags()	The icon_flags field of the application_icon_descriptor.

Applications signalled in an AIT shall be considered to be externally authorised where their only signalling in that AIT is by an External application authorisation descriptor.

`CurrentServiceFilter` shall behave as defined in its specification for stored services and services signalled over the interaction channel in addition to broadcast service as defined in its specification.

11.7.3 Inter-Application and Inter-Xlet communication API

The javadoc for the `org.dvb.io.ixc` package is provided in annex Y, "(normative): Inter-application and Inter-Xlet communication API" on page 1261. An example is provided in W.2, "Example of exporting an object for inter-application communication" on page 1251.

This API is formed of the interfaces `java.rmi.Remote` and `java.rmi.RemoteException`, and the classes `java.rmi.NotBoundException` and `java.rmi.AlreadyBoundException` as specified in JAE 1.1.8 API [31], plus the package `org.dvb.io.ixc`.

Two named Xlet properties are introduced: `dvb.org.id` and `dvb.app.id`. They can be retrieved from an Xlet's XletContext by calling `getXletProperty("dvb.org.id")` and `getXletProperty("dvb.app.id")`, respectively.

11.7.3.1 Remote Call Semantics

An object may be communicated to another Xlet in two ways:

- A reference to the remote object can be passed,

  or

- a copy of the remote object can be made.

These two techniques are called "pass by remote reference", and "pass by remote copy". When an object that has been bound to the IXC Registry via a method of `org.dvb.io.ixc.IxcRegistry` is imported by another, is shall be passed by remote reference.

11.7.3.1.1 Objects Passed by Remote Reference

An object that is passed by remote reference must implement a remote interface. A remote interface is an interface that implements the marker interface `java.rmi.Remote`. The declared type of a parameter or a return value for a remote method invocation must be a remote interface, or a class whose instances are serializable. If a remote interface that is application-defined, the interface definition must be included in both the sending and receiving Xlet. If the two xlets contain an identically named remote interfaces that contain different declarations, the result of attempting to use these interfaces for inter-Xlet communication is undefined, and possibly implementation dependent.

When an object is passed by remote reference to a different Xlet, the receiving Xlet does not receive a direct reference to the exported object; rather, it receives an instance of a stub class. This stub class will not be a subclass of the remote object's runtime type; rather, it will be a platform-generated class that implements the remote interface type that is the declared type of the argument or return value. It will include implementations of all methods declared in the remote interface, and will contain no other members accessible to the application. Remote methods invoked on this stub class instance will be forwarded to the object in the original Xlet, and executed in the context of that Xlet.

The definition of the stub class shall be automatically created by the platform.

NOTE: This differs from traditional network RMI, where the stub classes are created by the developer using a tool such as rmic. If stub classes produced by rmic or any other off-line tool are present, the platform shall silently ignore them for the purposes of inter-Xlet communication.

The stub class that is generated shall include a definition for all of the remote methods defined on the class of the original object. A remote method is a method declared in a remote interface that is implemented by the given class. A remote interface is an interface that extends `java.rmi.Remote`, either directly or indirectly. Methods declared in a remote interface must be defined as follows:

- Each method must declare `java.rmi.RemoteException` in its `throws` clause, in addition to any application-specific exceptions.
- A remote object passed by remote reference as an argument or return value must be declared as an interface that extends `java.rmi.Remote`, and not as an application class that implements this remote interface.
- The type of each method argument must either be a remote interface, a class or interface that implements `java.io.Serializable`, or a primitive type.
- Each return value must either be a remote interface, a class or interface that implements `java.io.Serializable`, a primitive type, or `void`.

If any remote method does not follow these rules, the platform cannot generate a stub class. When one is required, a `RemoteException` shall instead be thrown to the caller.

11.7.3.1.1.1 Lifecycle Considerations for Remote Objects

When an Xlet is destroyed, it is possible that other Xlets may have remote references to some of the Xlet's objects. If a method is invoked on one of these remote objects, the platform may fail to execute the method, and instead throw a `RemoteException`. If a remote method call is in progress when the Xlet receiving the call is destroyed, the calling Xlet may receive a `RemoteException` on the calling thread, and the remote method invocation may be abruptly terminated. If a remote method has started executing code in the implementation of the remote object when the Xlet making the call is destroyed, the call shall run to completion, unless the Xlet receiving the call is also destroyed.

11.7.3.1.1.2 Exceptions in Remote Method Calls

If an exception is thrown from a remote method, a remote copy of that exception shall be made in the context of the calling Xlet. This copy of the exception shall be thrown to the caller.

11.7.3.1.1.3 Re-exported Objects

It is possible that an object passed from one Xlet to another might be passed back to the original Xlet. This could happen through any number of intervening Xlets. If this happens, the original Xlet will receive the instance that it originally exported. If it compares the instance it receives with the original instance using the Java == operator, the result will be true. Because of this, there is no need to provide an override of `java.lang.Object.equals()` or `java.lang.Object.hashCode()` for remote objects.

NOTE: This behaviour is different than network RMI, as implemented in traditional Java implementations. In Sun's implementation of network RMI, a remote stub object is given to the original Xlet, but stubs and remote objects are required to have a special version of the `equals()` and `hashCode()` methods.

11.7.3.1.2 Objects Passed by Remote Copy

An object is passed by remote copy when a method argument or return value is passed, where the class of that object does not implement `java.rmi.Remote`. Additionally, a remote method call exception is communicated to the receiving Xlet by remote copy, as described in 11.7.3.1.1.2, "Exceptions in Remote Method Calls" on page 264.

When an object is passed by remote copy, it is serialized into a byte stream in the context of the exporting Xlet, and deserialized in the context of the importing Xlet. Serialization is performed as defined for `java.io.Serializable`. Application-defined classes may be serialized, but the definition of the application-defined class must be present in both Xlets, and the external forms of both versions of the class must be compatible. If any error in serialization or de-serialization occurs, an instance of `java.rmi.RemoteException` shall be thrown.

11.7.3.1.2.1 Treatment of Primitive Types

Primitive types passed as method arguments or return values are copied.

11.7.3.1.3 Classloading Considerations

The presence of inter-xlet communication does not allow the loading of one Xlet's classes from another. No classloader that loads classes from a remote Xlet for remote method calls is created (unlike network RMI, which creates a special `RMIClassLoader` for remote objects). Rather, a copy of each application-defined remote interface and serializable object involved in a remote method invocation must be present in both Xlets. If this is not the case, the platform shall generate a `RemoteException` and throw it in the calling thread.

11.7.3.1.4 Thread Usage

A remote method may or may not execute in separate underlying thread. If an application makes a remote method invocation to a remote object in a different application, and that second application calls back to the first in the same "thread," then the first application might or might not observe that the original calling thread and the callback thread are the same instance of `java.lang.Thread`.

If an application makes simultaneous remote calls in separate threads, then the remote execution shall appear to be carried out in parallel.

NOTE: This is not meant to rule out thread-pooling techniques. Specifically, an implementation may choose to serialize such remote calls, as long as the first one completes within a reasonably short time, relative to the normal scheduling rules of Java threads.

11.7.3.1.5 Garbage Collection of Remote Objects

When a non-destroyed Xlet contains a reachable instance of a stub for a remote object, that remote object shall not be garbage collected, unless the remote Xlet is destroyed. When an exported object no longer has any remote stub objects that are reachable in other non-destroyed Xlets, and when that exported object is also not reachable locally within its Xlet, then that remote object shall be considered unreachable, and thus eligible for reclamation.

When an Xlet is destroyed, other Xlets may hold remote references to objects within the Xlet being destroyed. In this case, the referenced objects may be dereferenced and ultimately garbage collected. If this is done, then attempts to invoke remote methods on these objects shall result in a `RemoteException` to the caller.

11.7.4 Basic MPEG Concepts

This API is formed of the Java classes defined in annex G of DAVIC 1.4.1p9 [3]:

- `ApplicationOrigin`,
- `ElementaryStream`,
- `Service`,
- `TransportStream`,
- `DvbElementaryStream`,
- `DvbService`,
- `DvbTransportStream`.

Methods returning instances of elementary stream, service or transport stream shall return instances of the dvb specific subclass (`DvbElementaryStream` etc.).

11.7.5 Resource Notification

The resource notification API is defined in annex F of DAVIC 1.4.1p9 [3].

- The `notifyRelease()` method shall be called for all `ResourceClients` where the corresponding resource has been removed without the application releasing it. The `release()` method shall be called for specific resources where time to cleanup is of practical use considering the specific resource in question. The only one of these in this specification is connection oriented return channels.

- The `requestData` parameter of the `requestRelease` method shall implement the `java.rmi.Remote` interface. In APIs using the `ResourceProxy` interface, where the method to reserve the resource has a parameter 'requestData', this parameter shall also implement `the java.rmi.Remote` interface or be `null`. Use of other values shall result in `null` being used when `requestRelease()` is called. Implementing the Remote interface does not force java.rmi to be used when the current owner of the resource is in the same application as code requesting ownership.

- The `resourceProxy.getClient()` method shall always return the `ResourceClient` provided to the platform by the application when that instance of a `ResourceProxy` was created or reserved. The `ResourceClient` for the current owner of a resource is only returned when this method is called on the `ResourceProxy` which currently holds the resource concerned.

  This text clarifies the DAVIC javadoc with respect to multiple simultaneous applications. Interpretations of the DAVIC javadoc which are inconsistent with this are excluded.

11.7.6 Content Referencing

This API is formed of the classes found in section H.4 of annex H of DAVIC 1.4.1p9 [3] - the `Locator` and `DvbLocator` classes. It also includes the `javax.tv.locator` package as defined in Java TV [51].

The signature of the `org.davic.net.Locator` class will be extended with:

```
"implements javax.tv.locator.Locator"
```

The `createFactory()` method of `javax.tv.locator.LocatorFactory` shall always return `org.davic.net.Locator(s)` which implement the `javax.tv.locator.Locator` interface when provided with DVB URLs as input (as defined in 14.1, "Namespace mapping (DVB Locator)" on page 353).

In this specification, methods whose signature has a return type of `org.davic.net.Locator` or `javax.tv.locator.Locator` shall return an instance of `org.davic.net.dvb.DvbLocator` (or a platform defined subclass of that) where the locator returned can be represented by the DVB locator syntax described in DAVIC 1.4.1p9 [3]. In this case, the DvbLocator returned shall contain the numeric identifiers of a DVB service (see 14.9, "Service identification" on page 359).

In `javax.tv.locator.Locator.toExternalForm()`, the canonical form of a DVB locator is defined as follows:

- For instances of `org.davic.net.dvb.DvbNetworkBoundLocator`, this should be the format defined in the MHP specification, including the transport stream id.

- For instances of `org.davic.net.dvb.DvbLocator` which are not instances of the above sub-class, this should be the format defined in the MHP specification, excluding the transport stream id.

Any optional extensions (for specifying components, events etc.) are considered in a comparison and if they are not equally present in both locators then the comparison shall fail.

For the above locators "best effort" comparison shall be exact.

The protected constructor of `LocatorFactory` is for implementation use. MHP applications shall not subclass `LocatorFactory`. Implementations are not required to behave correctly if they should do this.

11.7.7 Common Error Reporting

This API is formed of the interface and exceptions defined in annex G of DAVIC 1.4.1p9 [3]:

- `NotAuthorizedInterface`,
- `NotAuthorizedException`,
- `ObjectUnavailableException`,
- `ResourceException`,
- `TuningException`.

11.7.8 Plug-in APIs

The plug-in API is defined in Annexes AF, "(normative): Plug-in APIs" on page 1328 and AE, "(normative): Inner Applications" on page 1314 of this specification.

MHP inter-operable plug-ins signalled with the delegated application descriptor (see 10.13.3 on page 236) shall implement the `org.dvb.application.plugins.Plugin` interface. Failure to implement this interface shall result in the plug-in application being ignored. Plug-in applications which only execute "delegated" applications signalled in the AIT do not need to implement the `javax.tv.xlet.Xlet` interface as part of the initial entry point from the application manager to the plug-in. Plug-in applications which can execute both AIT & natively signalled "delegated" applications shall implement both the Plug-in and the Xlet interfaces.

The semantics of the method `org.dvb.application.AppAttributes.getProperty()` are extended such that when it is called with the string "dvb.ait.descriptors", an array of bytes containing the application_descriptors_loop shall be returned. If this information is no longer available then null shall be returned.

Each running instance of a plug-in application shall execute in a single logical VM instance as defined in 11.2.1, "Basic Considerations" on page 241. Hence all delegated application Xlets returned by the initApplication method are all executed in the same logical VM instance. It is the responsibility of the plug-in application to ensure the presence or absence of shared context between instances of delegated application Xlets in the same logical VM instance.

11.8 Security

11.8.1 Basic Security

The following packages and classes as defined in PersonalJAE [36] are supported.

11.8.1.1 java.security

From the `java.security` package:

- `AccessControlContext`
- `AccessControlException`
- `AccessController`
- `AllPermission`
- `BasicPermission`
- `CodeSource`
- `GeneralSecurityException`
- `Guard`
- `InvalidKeyException`
- `Key`
- `KeyException`
- `NoSuchAlgorithmException`
- `NoSuchProviderException`
- `Permission`
- `PermissionCollection`
- `Permissions`
- `Policy`
- Principal
- `PrivilegedAction`
- `PrivilegedActionException`
- `PrivilegedExceptionAction`
- `ProtectionDomain`
- `PublicKey`
- `SignatureException`
- `SecurityPermission`
- `SecureClassLoader` (note 1)
- `UnresolvedPermission`

NOTE 1: The `java.security.SecureClassloader` class extends the JDK 1.1.8 version of `java.lang.ClassLoader`, therefore the `java.security.SecureClassLoader` class is not required to support additional APIs from later versions of `java.lang.ClassLoader`.

The MHP platform shall always install a `SecurityManager` before starting any DVB-J applications.

The following classes shall be supported:

- `java.security.KeyFactory`

  `KeyFactory.getInstance(String algorithm)` shall return a valid `KeyFactory` for algorithm `"RSA"`.

  NOTE: since `KeyFactorySpi` is not required, the protected constructor will be subset out via the subsetting rule

- `java.security.spec.KeySpec`
- `java.security.spec.EncodedKeySpec`

  The `EncodedKeySpec` constructor is guaranteed to work for X.509 key encodings.

- `java.security.spec.X509EncodedKeySpec`

11.8.1.2 java.security.cert

- `Certificate`
- `CertificateEncodingException`
- `CertificateException`
- `X509Certificate`
- `CertificateExpiredException`
- `CertificateNotYetValidException`

11.8.1.3 Other classes

The following other classes are supported.

- `java.io.FilePermission`
- `java.io.SerializablePermission`
- `java.lang.RuntimePermission`
- `java.util.PropertyPermission`
- `java.net.SocketPermission`
- `java.awt.AWTPermission`

11.8.2 APIs to Support TLS / SSL Over the Return Channel

This API is defined in the following packages from JSSE [60]:

- `javax.net`
- `javax.net.ssl`
- `javax.security.cert`

Also see 12.10, "Security on the return channel" on page 320.

11.8.3 Additional permissions classes

See T, "(normative): Permissions" on page 746.

11.8.4 General security issues

Unless otherwise specified, sub-classes of `java.security.Permission` are not required to check the input parameters to their constructors. When an MHP platform constructs these, it is responsible for creating them with legal values. The behaviour of an MHP platform if an application creates such an instance with illegal values is intentionally not specified.

11.9 Other APIs

11.9.1 Timer Support

This API is formed of the Timer API defined in Java TV [51] in the `javax.tv.util` package.

Implementations are required to meet the following specifications:

- Minimum repeat interval less than or equal to 40 ms
- Granularity less than or equal to 10ms

The only condition defined in this specification where `TVTimer.scheduleTimerSpec` may throw `TVTimerScheduleFailedException` is if the MHP terminal is unable to provide any more timers. See table G.4, "Minimum requirements for other resources" on page 447.

11.9.2 User Settings and Preferences API

This API is defined in L "(normative): User Settings and Preferences API".

The preferences listed below shall be accessible to unauthorised applications.

- User Language
- Parental Rating
- Country Code
- Default Font Size

Other preferences shall not be accessible to unauthorised applications.

11.9.3 Profile and version properties

Applications can discover the supported profile and the version of the profile (and thus, what functionality is supported) by retrieving profile and version properties. If a particular profile is not supported then the related version properties shall return null.

More specifically, the properties listed in table 117 shall be included in the property set of the `java.lang.System` class. Thus these properties can be retrieved using `java.lang.System.getProperty()`. Since this API returns a string, numeric return values shall be encoded as defined by `java.lang.Integer.toString(int)`.

Table 117 : System properties for profile and version interrogation (Sheet 1 of 2)

Property	Semantics	Possible values	Example
mhp.profile.enhanced_broadcast	Indicates whether the enhanced broadcast profile is supported	"YES", "NO"	"YES"
mhp.profile.interactive_broadcast	Indicates whether the interactive broadcast profile is supported	"YES", "NO"	"NO"
mhp.profile.internet_access	Indicates whether the internet access profile is supported	"YES", "NO"	"NO"
mhp.eb.version.major	Major version number of the supported enhanced broadcast profile	Non-negative integer value	"1"
mhp.eb.version.minor	Minor version number of the supported enhanced broadcast profile	Non-negative integer value	"0"
mhp.eb.version.micro	Micro version number of the supported enhanced broadcast profile	Non-negative integer value	"0"
mhp.ib.version.major	Major version number of the supported interactive broadcast profile	Non-negative integer value	"1"
mhp.ib.version.minor	Minor version number of the supported interactive broadcast profile	Non-negative integer value	"0"
mhp.ib.version.micro	Micro version number of the supported interactive broadcast profile	Non-negative integer value	"0"
mhp.ia.version.major	Major version number of the supported internet access profile	Non-negative integer value	"1"

Table 117 : System properties for profile and version interrogation (Sheet 2 of 2)

Property	Semantics	Possible values	Example
mhp.ia.version.minor	Minor version number of the supported internet access profile	Non-negative integer value	"0"
mhp.ia.version.micro	Micro version number of the supported internet access profile	Non-negative integer value	"0"

The properties for querying the version of a profile which is not supported by the MHP terminal shall not be supported. Hence, calling `System.getProperty()` for these properties shall return null.

11.9.3.1 Information on options

Chapter 15 defines what is mandatory and optional for each profile. In order to give an application information about which options a particular MHP implementation supports, a property string is defined for each option (with the same granularity as in chapter 15).

An MHP implementation supports an option if and only if the corresponding property is known and its value is "SUPPORTED". The properties are part of the property set of the java.lang.System class.

The general syntax of the properties that indicate whether a certain feature is supported or not is:

```
mhp.option.<the optional feature>.
```

The table 118 lists the currently defined options.

Table 118 : System properties for optional feature interrogation

Option	Property
IP Multicast over Broadcast Channel	mhp.option.ip.multicast
HTTP 1.1 over the interaction channel	mhp.option.http.1.1
DSMCC user-to-user over the interaction channel	mhp.option.dsmcc.uu
DVB-HTML	mhp.option.dvb.html

11.9.4 Non-CA smart card API

11.9.4.1 Framework

The non conditional access API for smart cards is defined in Embedded OCF [92] with the clarifications, extensions and restrictions as defined in the corresponding sections below.

11.9.4.2 Clarifications

The implementation has to make sure that there is at most one open SlotChannel per physical slot channel at any given time.

The use of opencard.opt.terminal.Lockable is not applicable in the MHP context.

11.9.4.3 Extensions

This API is extended with the classes found in Annex AI, "(normative): Non-CA Smartcard APIs" on page 1396.

11.9.4.4 Restrictions

The behaviour is changed so that an application only can obtain instances of card services that are either registered by the system or that it itself has registered.

CardServiceScheduler.getSlotChannel() shall return null, this is to prevent application developers to be tempted to by-pass the use of a CardChannel in services.

The opencard.opt.terminal package is not required in MHP.

11.9.4.5 Modified semantics

The following methods shall throw `java.lang.SecurityException` if the calling application does not have the `SmartCardPermission` class defined in 11.9.4.3, "Extensions" on page 271.

- `CardTerminal.getTerminal`
- `EventGenerator.getGenerator`
- `SmartCard.getSmartCard`
- `CardServiceRegistry.getRegistry`

If no non-CA smart card reader is available to MHP applications, the following failure behaviour shall be observed.

- `CardTerminal.getTerminal()` shall return a `CardTerminal` instance where the `getSlots` method shall return zero. The other methods shall fail according to their specification where the `slotID` is invalid.
- The methods on `EventGenerator` shall work but the MHP terminal shall never generate any events to any registered listeners.
- `SmartCard.getSmartCard` shall throw a `CardTerminalException`
- `CardServiceRegistry.getRegistry` shall return a `CardServiceRegistry` which does not initially have any `CardServiceFactories` in it. Applications are able to add factories by the `add` method but the platform is not required to use them for any purpose other than returning them in the enumeration from `getCardServiceFactories`.

11.10 Java permissions

This section explains how the permissions that are defined to be included in the sandbox that is available to unsigned applications and the permissions that can be requested in the permission request file are mapped to the Permission objects in the Java platform.

11.10.1 Permissions for unsigned applications

The MHP security policy includes a set of resources that are always guaranteed to be granted to applications, if the application is executed. Unsigned applications have access to only these resources.

This section defines the mapping of those resources to the Java Permission objects. DVB-J applications shall always be granted these Permissions.

11.10.1.1 java.awt.AWTPermission

This control access to sensitive parts of AWT which is not needed for MHP applications. This shall be denied for both unsigned and signed applications.

11.10.1.2 java.net.SocketPermission:

Because access to return channel is not within the sandbox, this is not required for unsigned applications.

11.10.1.3 java.util.PropertyPermission

For unsigned applications, a read permission shall be granted for all properties defined in this chapter except for those explicitly identified as only available for signed applications. The permission shall be denied for the action string "write".

11.10.1.4 java.lang.RuntimePermission

This permission shall be denied for both unsigned and signed applications.

11.10.1.5 java.io.SerializablePermission

This permission shall be denied for both unsigned and signed applications.

11.10.1.6 java.io.FilePermission

A read permission shall be granted for the subtree under which the implementation mounts the object carousels.

11.10.1.7 javax.tv.media.MediaSelectPermission

The Media API (i.e. JMF) is within the sandbox, so all applications shall be granted a javax.tv.media.MediaSelectPermission with a locator string "*" that indicates access to all media streams.

11.10.1.8 javax.tv.service.ReadPermission

Access to Service Information is within the sandbox, so all applications shall be granted a javax.tv.service.ReadPermission with a locator string "*"

11.10.1.9 javax.tv.service.selection.ServiceContextPermission

All applications shall be granted a `javax.tv.service.selection.ServiceContextPermission` with a name string `"getServiceContentHandlers"` and action string `"own"`. The name string `"access"` shall not be granted.

11.10.1.10 java.util.Locale.setDefault

This method shall throw a security exception.

11.10.2 Additional Permissions for signed applications

Signed applications can additionally request to get more permissions. These permissions are requested using the permission request file (12.6, "Security policy for applications" on page 297). This section defines the mapping from the items in the permission request file to the Java Permissions that may be granted by the MHP terminal in response to the request.

11.10.2.1 java.util.PropertyPermission

For signed applications, a read permission shall be granted for all properties for unsigned applications and `dvb.persistent.root`.

11.10.2.2 java.io.FilePermission

A read permission shall be granted for the subtree under which the implementation mounts the object carousels.

When the permission request file requests the permission to access persistent storage and this is granted, a `FilePermission` that permits access to the persistent storage directory subtree is created.

When there is a persistent file credential in the permission request file and this is granted, `FilePermissions` are created as follows:

- file path = value of `dvb.persistent.root` property + filename from the credential
- action = string containing "read" and/or "write" as indicated in the credential

11.10.2.3 org.dvb.net.ca.CAPermission

When the permission request file requests the permission to communicate with a CA system and this is granted, a `CAPermission` is created as follows:

The CA system ID string from the permission request file is directly used as the first part of the string used for the `CApermission` constructor, this is concatenated with a colon character and the list of the attribute strings based on the attributes listed as true in the permission request file.

11.10.2.4 org.dvb.application.AppsControlPermission

When the permission request file requests the permission to have additional permissions to control the lifecycle of applications and this is granted, an `AppsControlPermission` is created.

11.10.2.5 org.dvb.net.rc.RCPermission

When the permission request file requests the permission to communicate through the return channel and this is granted, an `RCPermission` is created as follows:

- for the default ISP item, the `RCPermission` is created with "target:default" string.
- for items with phone numbers in them, the string is "target:" + the phone number prefix in the permission request file + "*"

On `org.dvb.net.rc.ConnectionRCInterface`, the method `getCurrentTarget` shall always throw a `SecurityException`. The method `setTarget` shall throw a security exception where the application doesn't have the permission to use the target specified. The method `setTargetToDefault` shall throw a security exception where the application doesn't have either "target:default" or "target:*" permissions.

11.10.2.6 org.dvb.net.tuning.TunerPermission

When the permission request file requests the permission to access the Tuning API and this is granted, an `TunerPermission` is created.

11.10.2.7 javax.tv.service.selection.SelectPermission

When the permission request file requests the permission to perform service selection and this is granted, a `SelectPermission` is created with a locator "*" and action string "*" and a `ServiceContextPermission` is created with a name "*" and action string "*".

11.10.2.8 org.dvb.user.UserPreferencePermission

When the permission request file requests the permission to read and/or write user preferences and this is granted, a `UserPreferencePermission` is created as follows:

- when the permission request file includes "true" for the "read" attribute and this is granted, a `UserPreferencePermission` is created with the string "read"
- when the permission request file includes "true" for the "write" attribute and this is granted, a `UserPreferencePermission` is created with the string "write"

11.10.2.9 java.net.SocketPermission

When the permission request file requests the permission to communicate with remote hosts and this is granted, `SocketPermissions` are created with the host and action as indicated in the permission request file.

These permissions shall not be granted in MHP terminals where all return channels are represented by instances of `org.dvb.net.rc.ConnectionRCInterface` (i.e. where all return channels are connection oriented) unless an instance of `org.dvb.net.rc.RCPermission` is also granted.

11.10.2.10 org.dvb.media.DripFeedPermission

When the permission request file requests the permission to use the drip feed feature and this is granted, a `DripFeedPermission` shall be created.

11.10.2.11 org.dvb.application.storage.ApplicationStoragePermission

When the permission request file requests the permission to store applications and this is granted, a StoredApplicationPermission is created. This permission class is defined in Annex AG, "(normative): Stored application APIs" on page 1347.

11.10.2.12 org.dvb.smartcard.SmartCardPermission

When the permission request file requests the permission to access the smart card API and this is granted, a SmartCardPermission is created. This permission class is defined in Annex AI, "(normative): Non-CA Smartcard APIs" on page 1396 of this specification.

11.10.2.13 ServiceContextPermission

All applications which are granted a SelectPermission (see 11.10.2.7, "javax.tv.service.selection.SelectPermission" on page 274) shall be granted instances of `javax.tv.service.Selection.ServiceContextPermission` with names:

- "create"
- "destroy"
- "stop"

all of these to have the actions string "own".

11.11 Content referencing

The following mapping shall be used between the types of locator defined in table 135, "Addressable entities, locators and their text representation" on page 358 and the DVB-J methods defined in this chapter. It lists the Java methods & constructors which accept or return (as defined by their method signature) instances of `org.davic.net.Locator`, `javax.tv.locator.Locator`, `javax.media.MediaLocator` or their sub-classes. The external form of these locators shall be the text representation defined in the table 135, "Addressable entities, locators and their text representation" on page 358 for the corresponding entity being referenced. Where the same method is listed as accepting multiple forms of locator, then it is required to accept all forms listed in this section.

Where a method listed below is defined (in its specification) to check its input then it shall only accept the forms of locator listed below as being valid for that method from among those defined in this specification. Other forms of locator from among those defined in this specification shall be rejected as specified for the method concerned. If a method does not specify a means of rejecting inappropriate locators then it shall fail silently apart from Exceptions and Events which do not check their input and where it is the responsibility of the platform to use correct locators when constructing them. This specification does not prevent methods accepting other forms of locator which are not defined in this specification.

11.11.1 Transport stream

The following methods used in this specification shall accept or return instances of Objects which describe an MPEG transport stream. Methods which accept a locator for a transport stream as an input parameter shall also accept all other DVB locators which include the information to identify a transport stream. Any excess information shall be silently discarded by such methods.

- `javax.tv.service.transport.TransportStream.getLocator()`
- `javax.tv.service.transport.TransportStreamCollection.retrieveTransportStream()`
- `org.davic.net.tuning.StreamTable.getTransportStreams()`
- `org.davic.net.tuning.NetworkInterfaceController.tune()`
- `org.davic.net.tuning.NetworkInterface.getLocator()`
- `org.davic.net.tuning.NetworkInterfaceController.reserveFor()`
- `org.davic.net.tuning.StreamTable.listTransportStreams()`
- `org.dvb.si.SITransportStream.getDvbLocator()`

11.11.2 Network

The following methods used in this specification shall accept or return instances of Objects which describe a DVB network.

- `javax.tv.service.transport.NetworkCollection.retrieveNetwork()`
- `javax.tv.service.transport.Network.getLocator()`

11.11.3 Bouquet

The following methods used in this specification shall accept or return instances of Objects which describe a DVB bouquet.

- `javax.tv.service.transport.BouquetCollection.retrieveBouquet()`
- `javax.tv.service.transport.Bouquet.getLocator()`

11.11.4 Service

11.11.4.1 MPEG/DVB specific service

The following methods used in this specification shall accept or return instances of Objects which describe a DVB service. Methods which accept a locator for a MPEG/DVB service as an input parameter shall also accept all other DVB locators which include the information to identify a service. Any excess information shall be silently discarded by such methods.

- `org.davic.net.ca.CAModule.buyEntitlement()`
- `org.davic.net.ca.CAModule.queryEntitlement()`
- `org.dvb.si.SIDatabase.retrieveSIService()`
- `org.dvb.si.SIDatabase.retrievePMTService()`
- `org.dvb.dsmcc.DSMCCStream.getStreamLocator` where the method `isMPEGProgram` returns true
- `org.dvb.dsmcc.ServiceDomain.attach()`
- `org.dvb.dsmcc.ServiceDomain.getLocator()`
- `org.dvb.si.PMTService.getDvbLocator()`
- `org.dvb.si.SIBouquet.getSIServiceLocators()`
- `org.dvb.si.SIService.getDvbLocator()`
- `org.davic.net.ca.TuneRequestEvent` - constructor
- `org.davic.net.ca.TuneRequestEvent.getLocator()`
- `org.dvb.application.AppAttributes.getServiceLocator()` where the service is a MPEG / DVB service
- `org.dvb.dsmcc.ServiceXFRReference` - constructor where the service is a MPEG / DVB service
- `org.dvb.dsmcc.ServiceXFRReference.getLocator()` - where the service is a MPEG / DVB service

11.11.4.2 Generic Service

The following methods used in this specification shall accept or return instances of Objects which reference generic services. These methods are also required to accept or return the same locators as in the previous section.

- `javax.tv.service.navigation.LocatorFilter` - constructor
- `javax.tv.service.navigation.LocatorFilter.getFilterValue()`
- `javax.tv.service.SIManager.getService()`
- `javax.tv.service.navigation.ServiceDetails.getLocator()`
- `javax.tv.service.Service.getLocator()`
- `javax.tv.service.SIManager.retrieveServiceDetails()`
- `javax.tv.service.navigation.ServiceList.findService()`
- `org.dvb.application.AppAttributes.getServiceLocator()` - where the service is not a MPEG / DVB specific one
- `org.dvb.dsmcc.ServiceXFRReference` - constructor where the service is not a MPEG / DVB specific one
- `org.dvb.dsmcc.ServiceXFRReference.getLocator()` where the service is not a MPEG / DVB specific one
- `org.dvb.dsmcc.ServiceXFRException` - constructor
- `org.davic.media.MediaLocator` -constructor
- `javax.media.MediaLocator` - constructor
- `javax.media.Manager.createPlayer(MediaLocator)`
- `javax.media.Manager.createDataSource(MediaLocator)`
- Constructor of various JMF events consumes JMF `MediaLocators`:

  `org.dvb.media.CAStopEvent, org.dvb.media.PresentationChangedEvent, org.dvb.media.ServiceRemovedEvent, org.dvb.media.NoComponentSelectedEvent`
- Various JMF events return JMF `MediaLocators` which were passed into their constructors:

  `org.dvb.media.CAStopEvent, org.dvb.media.PresentationChangedEvent, org.dvb.media.ServiceRemovedEvent,org.dvb.media.NoComponentSelectedEvent`
- `StoredApplicationService.getLocator` - return value
- `InternetClient.getServiceContentLocators` - return value

11.11.5 DVB Event

The following methods used in this specification shall accept or return instances of Objects which describe a DVB event.

- `javax.tv.service.guide.ProgramEvent.getLocator()`
- `javax.tv.service.SIManager.retrieveProgramEvent()`
- `org.davic.net.ca.CAModule.buyEntitlement()`
- `org.davic.net.ca.CAModule.queryEntitlement()`
- `javax.tv.service.guide.ProgramSchedule.retrieveProgramEvent()`
- `org.dvb.si.SIEvent.getDvbLocator()`

11.11.6 MPEG elementary stream

The following methods used in this specification shall accept or return instances of Objects which describe a MPEG elementary stream. Methods below which accept as an input parameter an array of locators shall also accept DVB locators including multiple component tags.

- `javax.tv.net.InterfaceMap.getLocalAddress()`
- `javax.tv.service.selection.InvalidServiceComponentException` - constructor
- `javax.tv.media.MediaSelectControl` - all methods accepting or returning instances of javax.tv. locator.Locator
- `javax.tv.media.MediaSelectEvent` & subclasses - constructor
- `javax.tv.media.MediaSelectPermission` - constructor
- `javax.tv.service.selection.ServiceContext.select()`
- `org.dvb.si.SIDatabase.retrievePMTElementaryStreams()`
- `org.dvb.si.PMTElementaryStream.getDvbLocator()`
- `org.dvb.dsmcc.ServiceDomain.attach()`
- `org.dvb.dsmcc.ServiceDomain.getLocator()`
- `javax.tv.media.MediaSelectControl.getCurrentSelection()`
- `javax.tv.service.navigation.ServiceComponent.getLocator()`
- `javax.tv.media.MediaSelectEvent.getSelection()` (also subclasses)
- `org.davic.net.ca.DescramblingStoppedEvent.getServiceLocator()`
- `org.davic.net.ca.DescramblingStartedEvent.getServiceLocator()`
- `org.davic.media.MediaLocator` - constructor - shall also accept multiple component tag "dvb:" locator
- `javax.media.MediaLocator` - constructor - shall also accept multiple component tag "dvb:" locator
- `javax.media.manager.createPlayer( MediaLocator )` - shall also accept multiple component tag "dvb:" locator
- `javax.tv.service.selection.InvalidServiceComponentException. getInvalidServiceComponent()`
- `javax.tv.service.selection.ServiceContentHandler. getServiceContentLocators()`

11.11.7 File

The following methods used in this specification shall accept or return locators which reference files.

- `org.davic.media.MediaLocator` -constructor - for audio files intended to be played from memory
- `javax.media.MediaLocator` - constructor - for audio files intended to be played from memory
- `javax.media.Manager.createPlayer(MediaLocator)` - for audio files intended to be played from memory
- `javax.media.Manager.createDataSource(MediaLocator)` - for audio files intended to be played from memory
- `org.dvb.dsmcc.ServiceDomain.getURL(Locator)` - instances of "dvb:" locator including dvb_ abs_path

Apart from the above, all file references shall be encapsulated in instances of java.net.URL.

11.11.8 Directory

The following method shall return an instance of the "dvb:" locator referencing a directory.

- `org.dvb.application.AppIcon.getLocator()`

11.11.9 Drip feed decoder

The following methods used in this specification shall accept or return locators which reference the "drip feed" decoder.

- `javax.media.MediaLocator` - constructor
- `javax.media.Manager.createDataSource(MediaLocator)`

11.11.10 Irrelevant

The following methods used in this specification which accept Locators according to their signature have no requirement to have locator types specified for them in this specification:

- javax.tv.service.ReadPermission, all applications shall have this permission with "*", see 11.10.1.8, "javax.tv.service.ReadPermission" on page 273.
- javax.tv.service.selection.SelectPermission, applications shall either have this permission with "*" or not to have it at all, see 11.10.2.7, "javax.tv.service.selection.SelectPermission" on page 274.

11.11.11 Methods working on many Locator types

The following methods used in this specification work on many locator types. The locator types which each method is required to support are listed for each of the methods concerned.

- javax.tv.locator.LocatorFactory.transformLocator - transforms a transport independent locator into a transport independent one

  required to accept instances of org.davic.net.dvb.DvbLocator

  required to return instances of org.davic.net.dvb.DvbNetworkBoundLocator

- javax.tv.locator.LocatorFactory.createLocator - creates a locator from a string

  required to accept valid 'dvb' URLs (see 14.1, "Namespace mapping (DVB Locator)" on page 353) and return corresponding instances of org.davic.net.dvb.DVBLocator

- javax.tv.service.SIManager.registerInterest - accepts a locator referencing one or more SIElements as input
- javax.tv.service.SIManager.retrieveSIElement - accepts a locator referencing one or more SIElements as input

  Both these methods are required to accept locators referencing:-Bouquet, Network, Event, ElementaryStream, Service, TransportStream

- javax.tv.service.SIElement.getLocator

  returns a locator for "this SIElement" as specified by the JavaTV specified sub-interfaces, no other SIElements exist

11.11.12 Support for the HTTP protocol in DVB-J

In MHP terminals where an HTTP protocol (6.3.7.1, "HTTP 1.1" on page 58 or 6.3.7.2, "MHP profile of HTTP 1.0" on page 58) is supported, the following classes and methods shall support the HTTP protocol concerned. In MHP terminals where the HTTPS protocol (6.3.7.3, "HTTPS" on page 59) is supported, the following class and methods shall support that protocol.

- The constructor for javax.media.MediaLocator - for referencing audio files intended to be played from memory
- methods on javax.media.Manager accepting javax.media.MediaLocator as input parameters - for constructing JMF players for audio files intended to be played from memory
- The classes & methods in the "java.net" package
- Methods in this specification which accept instances of java.net.URL are required to accept instances which encapsulate an "http" URL and behave according to their specification. - e.g. Toolkit.getImage(java.net.URL)
- On MHP terminals supporting applications downloaded over the interaction channel as defined in 9.7, "Services and applications not related to conventional DVB services" on page 204, the method `LocatorFactory.createLocator(String)` shall additionally accept Strings containing URLs using the "http" and "https" protocols as being valid and return a corresponding Locator. This method shall only validate the string to the extent that this is possible without network access.
- On MHP terminals supporting applications downloaded over the interaction channel as defined in 9.7, "Services and applications not related to conventional DVB services" on page 204, the method `SIManager.getService(Locator)` shall accept such Locators as being valid and return a corresponding `javax.tv.service.Service`. This method shall only validate the locator to the extent that this is possible without network access.

When HTTP URLs are used with instances of DVBClassLoader to load DVB-J classes over the interaction channel in a signed application, the requirements of the MHP security model shall be complied with before a class is allowed to be successfully loaded from such a URL.

11.12 Stand-alone applications

11.12.1 Common behaviour

The extended MHP application model allows several forms of applications to execute in a stand-alone mode independent of any broadcast services. The environment of these stand-alone applications shall be as follows:

- Instances of `org.dvb.si.SIDatabase` may not return any SI objects if the corresponding network interface isn't tuned to anything. It is implementation dependent whether some network interfaces are left tuned to some previously used transport stream.

For DVB-J applications, the behaviour defined in 9.7.4, "Common behaviour" on page 206 shall mean the following:

- The method `ServiceContext.getServiceContentHandlers` shall not return a `ServiceContentHandler` for any such existing video or audio for a stand-alone stored application.
- A stand-alone application creating and starting a JMF player shall receive a higher priority for resources than the presentation of any previously existing video and audio.

11.12.2 Stored services

The MHP specification supports two forms of stored applications as defined in 9.1.9, "Broadcast service related stored applications" on page 186 and 9.7.2, "Stored services" on page 204.

11.12.2.1 Stored application APIs

This is defined in Annex AG, "(normative): Stored application APIs" on page 1347 of this specification.

11.12.2.2 Modified behaviour of MHP 1.0 APIs

The following APIs defined in MHP 1.0 shall have extended semantics to support listing and launching of stored services as defined in 9.7.2, "Stored services" on page 204. The modifications to these APIs are as follows:-

- The class javax.tv.service.navigation.ServiceTypeFilter when used with a ServiceType "`org.dvb.application.StoredApplicationService.STORED_APPLICATION_SERVICE`' shall return a `ServiceList` containing all currently installed stored services when passed to SIManager. `filterServices`.

NOTE: Implementations may choose to expose other installed services (e.g. manufacturer resident ones) through this API.

- Instances of `javax.tv.service.Service` returned from such a `ServiceList` shall be instances of `org.dvb.application.StoredApplicationService` with the modified semantics as defined for that interface.
- The method `ServiceContext.select(Service selection)` shall accept instances of `org.dvb.application.StoredApplicationService` and attempt to start the stored application service concerned subject to the MHP security model.
- The file system APIs shall see a file system comprised of the files defined in the application description file as needing to be stored for this application. Calling new `DSMCCObject(".")` or new `java.io. File(".")` shall instantiate the directory object that refers to the outermost (top level) directory listed in the application description file (see 10.14.3, "Application description file" on page 239) when the application was stored. Other file system behaviour shall be as defined in 9.7.2, "Stored services" on page 204.
- The `org.dvb.dsmcc` API shall work for access to stored files. Asynchronous loading can be expected to complete immediately. `ObjectChangeEvents` shall not be generated. Pre-fetching shall be always supported for stored files. The `unload()` method shall not be considered as removing stored files from where they are stored.

11.13 Support for DVB-HTML

11.13.1 Document object model APIs

11.13.1.1 Framework

The required document object model APIs are defined in the following:

- From Document Object Model (DOM) Level 2 Core Specification [82], that part of Annex D, "Java Language Binding" corresponding to the "Fundamental Interfaces" as specified in section 1.2 of that specification.
- From Document Object Model (DOM) Level 2 Events Specification [84], Annex B, "Java Language Binding", only those parts corresponding to the interfaces listed as required in 8.11.1.1, "Fundamental interfaces" on page 128 and 8.11.1.2, "Event interfaces" on page 128.
- From Document Object Model (DOM) Level 2 Views Specification [86], Annex B, "Java Language Binding".

11.13.1.2 DVB defined extensions

The DVB defined DOM extensions are defined in Annex AD, "(normative): Support for DVB-HTML" on page 1296 of this specification see also AD.1, "Java bindings to DVB extensions" on page 1296.

11.13.1.3 Read Only Access to DOM

Where a DVB-J application only has or requests read-only access to the DOM, calling methods in the DOM APIs whose result would be to modify the DOM shall result in an `org.w3c.dom.DOMException` with exception code `NO_MODIFICATION_ALLOWED_ERR` being thrown.

11.13.2 Embedded Xlets in a DVB-HTML Page

Below is a list of the semantic differences in MHP APIs between DVB-J applications and xlets embedded in a DVB-HTML page of a DVB-HTML application.

- Xlets shall not use the HAVi HScene APIs to get the "primary" Container that is managed by the enclosing DVB-HTML document. The method `javax.tv.graphics.TVContainer.getRootContainer(javax.tv.xlet.XletContext)` shall be used for this purpose. The object returned shall be a subclass of `java.awt.Container` implementing the following interfaces.

  - `org.havi.ui.HComponentOrdering`

  - `org.dvb.application.inner.DVBScene`

  It may be an instance of org.havi.ui.HScene or a subclass of that but is not required to be either of these.

- Embedded Xlets are only guaranteed to be able to perform actions using the Document Object Model APIs when they are in the active state. The results of calling methods on `org.dvb.dom.bootstrap.DocumentFactory` when the embedded xlet is in any other state are implementation dependent. They may include a RuntimeException being thrown or the Document passed to `DocumentAction.run()` being null. If the state of an application changes from the active state to another state between when a method on `DocumentFactory` is called and when the `run()` method of the specified `DocumentAction` is called then the results of this are also implementation dependent.

- If the Xlet is in the active state or if the `startXlet` method is executing, and the width and height are > 0, then `getRootContainer()` shall return a valid `Container` instance. If the width or height are <= 0, `getRootContainer` shall return `null`. In all other cases, situations and xlet states, the value returned is implementation dependent.

Any "param" elements of the <object> used to define an embedded xlet shall be accessible to the embedded xlet. The sequence of these arguments is mapped to `XletContext.ARGS` and shall be available to the Xlet, in the form of an array of Strings, by calling:

```
javax.tv.xlet.XletContext.getXletProperty(XletContext.ARGS)
```

11.14 Internet access

11.14.1 Internet client control APIs

These are defined in the `org.dvb.internet` package (see AH, "(normative): Internet client APIs" on page 1365).

Internet clients accessible to MHP applications shall appear in the list of services maintained by the `SIManager` which is returned by calls to the method `SIManager.filterServices`. For each accessible internet client, the corresponding sub-class of `InternetClientService` shall be returned from calls to that method both when passed an instance of `ServiceTypeFilter` constructed with the type `InternetServiceType.INTERNET_CLIENT` and when passed null.

The method `ServiceContext.select(Service selection)` shall accept instances of `InternetClientService` and its sub-classes returned by the mechanism described above as being valid input.

11.14.2 Internet applet support

Internet applet support is defined as follows.

11.14.2.1 HTML tags

Internet applets shall be supported using the "<applet>" and "<object>" tag with the semantics defined in HTML 4 [90].

11.14.2.2 Common MHP features

The following features of the DVB-J platform shall be supported for internet applets in the same way as they are supported for DVB-J applications.

- The Virtual Machine see 11.1 on page 241
- Approach to Subsetting (see 11.2.2 on page 241)
- Unloading (see 11.2.4 on page 242)
- java.lang.reflect package (see 11.3.1.2 on page 244)
- java.util (see 11.3.1.3 on page 244)
- java.util.zip (see 11.3.1.4 on page 244)
- java.io (see 11.3.1.5 on page 244)
- java.net (see 11.3.1.6 on page 244 and 11.5.3, "Support for IP over the Return Channel" on page 258, 11.11.12, "Support for the HTTP protocol in DVB-J" on page 280)
- java.beans (see 11.3.1.7 on page 245)
- java.math (see 11.3.1.8 on page 245)
- java.awt.event (see 11.4.1.1, "The Core GUI API" on page 246)
- java.awt.image (see 11.4.1.1, "The Core GUI API" on page 246)
- java.security (see 11.8.1.1 on page 268 and 11.8.2, "APIs to Support TLS / SSL Over the Return Channel" on page 269).
- java.security.cert (see 11.8.1.2 on page 269)

11.14.2.3 Extended or modified common MHP features

The following features of the DVB-J platform shall be supported for internet applets in the same way as they are supported for DVB-J applications except as modified below.

- Basic Considerations (see 11.2.1 on page 241)

The requirements on DVB-J applications do not apply to internet applets.

- java.lang package (see 11.3.1.1 on page 243)

  The full set of system properties required to be supported for `System.getProperty()` and `System.getProperties` by JAE 1.1.8 API [31] are required to be supported.

- java.text (see 11.3.1.9 on page 245)

  The complete java.text package as defined in JAE 1.1.8 API [31] shall be supported.

11.14.2.4 The java.awt package

The java.awt package shall be supported as defined in section 5.2 of PersonalJAE [36] as modified below.

- Support for deprecated methods is required in this package and its sub-packages.
- The following class of the java.awt package is not required:

  FileDialog
- The following method of the java.awt.Component class is not required:

  isDoubleBuffered()
- The following methods of the java.awt.Toolkit class are not required:

  getMenuShortcutKeyMask(), getPrintJob(), getSystemEventQueueImpl(), loadSystemColors(int[])
- Where PersonalJAE [36] has optional behaviour or defines multiple levels of support, the following minimums shall be supported.

  Dialog: Minimal support

  Frame: Minimal support

  Window: Minimal support

  Component.setCursor(): The specified cursor may be ignored

  Dialog.setResizable(): Unsupported

  PopupMenu.add(MenuItem): Nested PopupMenus supported ·

  Graphics.setXORMode(): Supported

  Scrolling controls: As defined in section 5.2.1 of PersonalJAE [36]

  Menu option: Supported (see table 2 of 5.2 of PersonalJAE [36])

  Scrollbars: Supported (see table 2 of 5.2 of PersonalJAE [36])
- Where the PJAE specification indicates that com.sun.lang.UnsupportedOperationException shall be thrown to indicate the absence of an optional operation, a subclass of java.lang.RuntimeException shall be permitted instead.

11.14.2.5 Additional features for applet support.

The following additional features shall be supported for internet applets.

- The java.applet package as defined in JAE 1.1.8 API [31].

  This specification does not require support for any specific audio formats for use with the java.applet.AudioClip feature. Attempting to play Audio Clips where audio is not supported shall fail silently.
- The java.awt.datatransfer package as defined in JAE 1.1.8 API [31]

11.14.2.6 Security

This specification does not require support for signed applets or for the code signing mechanism and APIs as defined in PersonalJAE [36].

Applets shall have at least the following permissions.

- `java.util.PropertyPermission` to `"read"` all properties defined for the `java.lang.system.getProperties()` method.
- `java.net.SocketPermission` to `"connect"` to all ports on the server from which the applet was originally downloaded.

12 Security

12.1 Introduction

This section covers the following areas of security:

- Authentication of applications
- Security policies for applications
- Authentication and privacy of the return channel communications
- Certificate management

12.1.1 Overview of the security framework for applications

The security framework enables a receiver to authenticate the source of application code or other files. In the case of application code files, the authentication advises the receiver what access rights should be granted to an application for sensitive resources, see 12.6, "Security policy for applications" on page 297 for more detail.

The system uses 3 different security messages:

- Cryptographic hash codes

  This provides a summary of a quantity of data - typically a subset of the total set of data under consideration.

- Signatures

  These deliver a master hash code (computed over all of the appropriate data) that has been "signed" by an authorising organisation. The signing process securely associates the master hash code with the signatory. The hash code process shows that the data has not been tampered with since it was signed by the signatory.

- Certificates

  These provide a "chain of trust" from the authorising organisation up to some trusted third party (the root certificate authority) that is well known to the receiver.

The messages are delivered within files of the file system so this authentication scheme is applicable to any hierarchical file system whether operating over the broadcast or return channels.

Applications that are signed shall be identified with an application_id from the signed applications range (see table 78, "Value ranges for application_id" on page 214). Applications that are unsigned shall be identified with an application_id from the unsigned applications range. An application with an application_id from the signed applications range but that is not signed is considered to have failed authentication. An application with an application_id from the unsigned applications range is treated as unsigned even if the files might be transmitted with signatures.

12.1.2 Overview of return channel security

In this version of the specification general purpose protocols and a standard cryptographic suite derived from internet standards are used.

12.2 Authentication of applications

12.2.1 Overview of authentication messages

Three different message types are used: "Hash codes", "Signatures" & "Certificates". Each message is placed in a file. The placement of the files depends on their function and is specified under the appropriate headings under 12.4, "Detail of application authentication messages" on page 289.

12.2.1.1 Hash codes

This specification describes application of hash codes to the following types of information:

- Files
- Directories

The hash computation considers the content and attributes of the objects rather than transport specific information. As a result, the authentication is independent of the underlying transport protocol.

In the case of a directory the hash value depends on the hash values of the objects bound to it, and so provides a hash of all of the objects to be authenticated in the "tree" below it.

12.2.1.2 Signatures

The data authenticated is a hierarchical file system (for example DSM-CC OC). The root of an authenticated "tree" carries one or more signatures. This allows one or more organisations to sign a set of information.

The root of the authenticated "tree" can be the root directory of the file system or the "top" directory of a "subtree".

The signature:

- references a certificate containing the public key required to decode the signature
- identifies the hash algorithm used
- and the value of the signature

12.2.1.3 Certificates

The certificate provides a public key that can be used to decode a hash code contained in a signature and so enable a tree/subtree to be verified. The certificate itself is signed by a higher certification authority.

To correctly authenticate a subtree there must be a valid "chain" of certificates from the signature to a root certificate as is illustrated in figure 19.

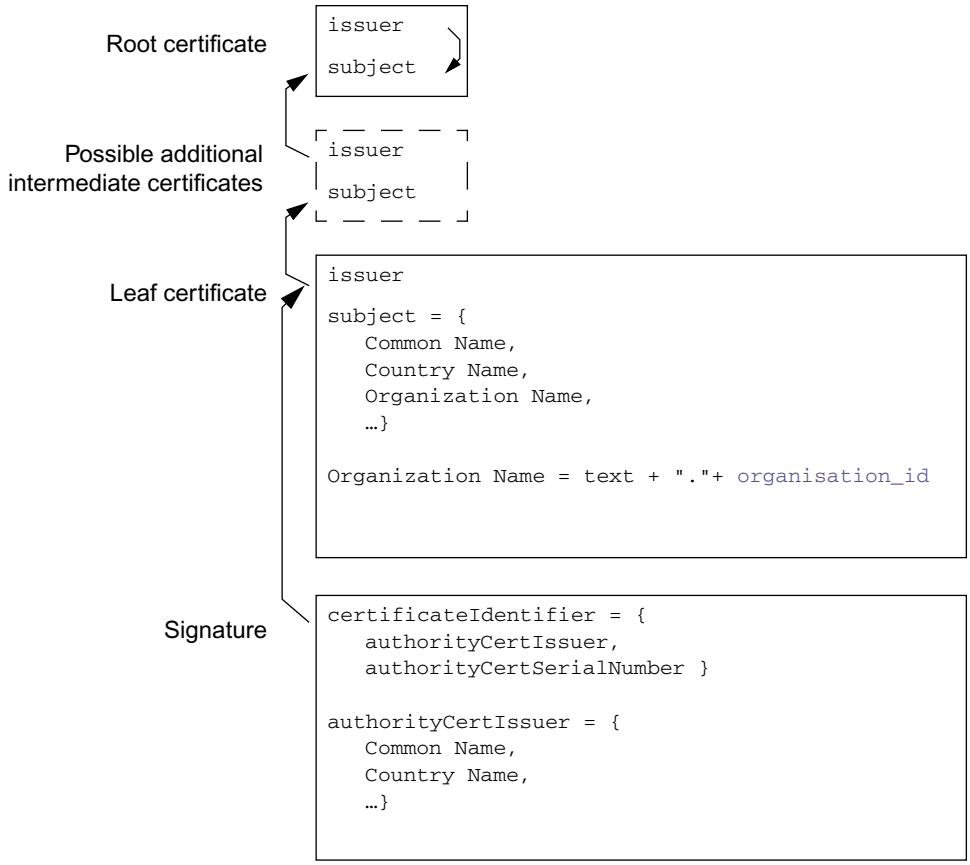


Figure 19 : Certificate chain illustrated

12.2.1.4 Authentication of hierarchical file systems

The solution here is based on authentication of a hierarchical structure of objects. Hashcodes are computed systematically and accumulatively across some or all of the objects in the hierarchy. A signature at the top of the hierarchy identifies the source of the objects.

The framework provides a flexible and non-time consuming method enabling the authentication of subtrees of a file system with a single signature. Since checking signature is far more time-consuming than checking hashcode values, this mechanism is more efficient than signing each object of a subtree.

Further, only the objects that are loaded need real-time hashcode checking.

This mechanism does NOT mandate that the whole subtree is authenticated.

NOTE: The broadcaster can choose which files in the file system are authenticated. For example code files might be authenticated and asset files might be left without authentication.

Finally, this framework embraces key distribution by specifying a certificate mechanism, the aim of this is to certify that the key used to compute the signature is valid and used by a certified service provider. See 12.8, "Procedures for application certificates and signatures" on page 314.

12.3 Message transport

The security messages are transported in files.

In no cases shall a service transfer be required to access the file content. In the case that the file system is an object carousel this means that the IOR for the security files shall always use a BIOP profile body and never a Lite options profile body.

12.4 Detail of application authentication messages

Three data structures are defined for communicating authentication information:

- "HashFile" on page 289
- "SignatureFile" on page 291
- "CertificateFile" on page 292

These are placed in files in the file system. The location of the file depends on its function.

12.4.1 HashFile

12.4.1.1 Description

The HashFile lists all of the elements of the current directory except itself and the possible signature files. Those elements to be authenticated are associated with hashcodes. The syntax of the HashFile is shown in table 119.

Table 119 : Syntax of the Hashfile

Syntax	Num. Bits	Format
Hashfile () {		
digest_count	16	uimsbf
for(i=0; i<digest_count; i++) {		uimsbf
digest_type	8	uimsbf
name_count	16	uimsbf
for(j=0; j<name_count; j++) {		
name_length	8	uimsbf
for(k=0; k<name_length; k++)		
name_byte	8	bslbf
}		
}		
for(j=0; j<digest_length; j++) {		
digest_byte	8	bslbf
}		
}		
}		
Other data may follow but can be ignored by implementations conforming to this profile.		

digest_count: This 16 bit value identifies the number of digest values in this hash file.

digest_type: This 8 bit value identifies the digest algorithm, if any, used for the associated objects. Table 120 lists the allowed values for this field.

Table 120 : Values of digest_type

value	digest len.	algorithm
0	0	Non authenticated
1	16	MD-5 as defined in RFC 1321 [38]
2	20	SHA-1 as defined in FIPS-180-1 [62]
Other values		Reserved

name_count: This 16 bit value identifies the number of object names associated with the digest value. The value of this field shall be greater than zero.

name_length: This 8 bit value identifies the number of bytes in the object name.

name_byte: This 8 bit value holds one byte of the object name.

Each name shall be the name of an object in the directory that contains the HashFile. So, file names are the names of files in the directory and directory names are the names of direct sub-directories of the directory. No path information shall be included in the name.

The names carried by this field are binary identical to the payload part of names in the file system. So, any name matching process can be binary and ignorant of character encoding, letter case etc. Also, terminating null characters are not considered to be part of the file name.

digest_length: This integer value gives the number of bytes in each digest value. It depends upon the digest type as tabulated in table 120.

NOTE: Non-authenticated objects have a zero length digest.

digest_byte: This 8 bit value holds one byte of the digest value. See 12.4.1.3, "Digest value computation rules" on page 290.

12.4.1.2 HashFile location and naming conventions

An application comprises files containing data that can be spread across various directories and is contained within a subtree of the file hierarchy. A HashFile will be put in each directory containing objects that need to be authenticated.

The name of the HashFile shall be:

```
"dvb.hashfile"
```

There shall only be one instance of HashFile per directory that contains authenticated resources.

See 12.7, "Example of creating an application that can be authenticated" on page 312.

12.4.1.3 Digest value computation rules

The digest value is computed over the objects named in the HashFile in the order listed in the HashFile. The length of the list of objects associated with each digest value may be one or more.

Each list of objects may contain an arbitrary mix of different object types (e.g. a mixture of file and directory names). The digest value is computed by first initialising the digest algorithm in an algorithm specific way and then applying the relevant data for each object to the algorithm in order. The relevant data for each object depends on its type and is specified in table 121.

Table 121 : Data required for digest value computation

Object type	Relevant data
File	The entire content of the file
Directory	The content of the HashFile of the named directory

12.4.1.4 Special authentication rules

a) For objects which are directories, if the digest_type is non-zero there shall be a HashFile in the sub-directory listed. If the HashFile is absent then the authentication fails.

b) Each HashFile shall provide a complete list of all the objects named in the directory except itself and any possible signature files mentioning each name exactly one time. The behaviour varies depending on the ability of the transport protocol to support directory listing.

   - On transport protocols supporting the listing of files in a directory (e.g. Object Carousel), the authentication shall fail if the set of objects listed in the HashFile is different to the set of objects in the directory.

   - On transport protocols that don't support the listing of files in a directory (e.g. HTTP), the set of names in the HashFile acts as a filter for the set of objects that can be accessed. Attempts to access a file not named in the HashFile shall fail (that is behave as if the file is not available). The file system for loading applications from the interaction channel via HTTP is a case of such a file system, see 6.4.1.4 on page 61.

   These rules apply regardless of the value of digest_type associated with the object.

c) If the digest_count is equal to 0, the file hashfile shall be ignored. Every entry in the directory will be non authenticated.

d) If a name_length is equal to zero (or if a name is not found in the directory containing the HashFile), all the names associated with the current digest value shall be considered as incorrectly authenticated. It means the authentication checking will fail for these entries.

e) If the object is a Stream or StreamEvent then the digest_type shall be zero.

f) Objects associated with a digest_type that the receiver does not support shall be treated by that receiver as if the value of digest_type was zero (not authenticated).

g) There is no requirement for certificates files to have a digest_type other than zero (not authenticated). However, if they do have a non-zero digest_type they don't receive exceptional treatment.

12.4.2 SignatureFile

12.4.2.1 Description

The SignatureFile is a File containing one digital signature. It contains the following ASN.1 DER structure:

```
Signature  ::=  SEQUENCE  {
   certificateIdentifier                    AuthorityKeyIdentifier,
   hashSignatureAlgorithm                   HashAlgorithmIdentifier,
   signatureValue                           BIT STRING  }
```

certificateIdentifier : As defined in the ITU-T X.509 [54] extension for the AuthorityKeyIdentifier field. It identifies the certificate that carries the certified public key that is used to check the signature.

```
AuthorityKeyIdentifier ::= SEQUENCE {
   keyIdentifier                                [0] KeyIdentifier OPTIONAL,
   authorityCertIssuer                          [1] GeneralNames OPTIONAL,
   authorityCertSerialNumber                    [2] CertificateSerialNumber OPTIONAL  }
```

Implementations are not required to use the possibly present `keyIdentifier` element of the `AuthorityKeyIdentifier`. The `AuthorityKeyIdentifier` structure shall contain both the `authorityCertIssuer` and `authorityCertSerialNumber` elements.

The `authorityCertIssuer` shall contain the field "`directoryName`", this field shall be equal to the `issuerName` of the certificate that carries the public key used to check the signature.

hashSignatureAlgorithm: this field identifies the hash algorithm that is used. Note that the encryption algorithm used to compute the signature is already described in the SubjectKeyInfo field of the certificate that certifies this key, and thus that only the identification of the hash algorithm is needed. The supported algorithms are MD5 and SHA-1.

```
md5 OBJECT IDENTIFIER ::=
   { iso(1) member-body(2) US(840) rsadsi(113549)
   digestAlgorithm(2) 5 }

sha-1 OBJECT IDENTIFIER ::=
   { iso(1) identified-organization(3) oiw(14) secsig(3)
   algorithm(2) 26 }
```

signatureValue: See "signatureValue" on page 323.

12.4.2.2 SignatureFile location and naming conventions

The SignatureFile is located in the root directory of the subtree that it signs. There can be several SignatureFiles, as there can be several entities that sign the structure. See 12.4.4, "Integration" on page 293.

By convention, the name of a SignatureFile is:

```
"dvb.signaturefile."<x>
```

where the <x> is a textual representation of an integer decimal number without leading zeroes. The range of values represented in any single directory shall start with 1 and increment in steps of 1. The first unused integer value in the ascending sequence indicates the end of the range.

The purpose of this x is to allow the hash file of an authenticated subtree to be signed by more than one entity. It is equal to the x value in the file name of the corresponding certificate file. See 12.4.3.5, "CertificateFile location and naming conventions" on page 293 and 12.4.4, "Integration" on page 293.

12.4.2.3 Supported algorithms

Signing data is a two-step process:

- first a hash is computed over the data.
- the resulting hashvalue is then encrypted using an encryption algorithm.

As indicated in 12.4.1 "HashFile" this specification defines two possible hash algorithms: MD5 and SHA-1.

The encryption algorithm used to compute the signature is indicated in the certificate that carries this key.

12.4.2.4 Signature computation rules.

The hash is computed over the content of the HashFile contained in this root directory.

NOTE: This is the same principle as for the classical hash computation described in "Digest value computation rules" on page 290.

12.4.2.5 Authentication rules

See signatureValue on page 291.

12.4.3 CertificateFile

12.4.3.1 Description

The CertificateFile contains all of the certificates in the certificate chain up to, and including, the root certificate. The leaf certificate is placed first in the file. The last certificate in the file is the root certificate. The root certificate is included in this file only for consistency. How the MHP terminal determines its policy related to this root CA is implementation dependent. The encoding of the certificate is defined in ITU-T X.509 [54]. Below is defined the profile of ITU-T X.509 [54] for use in authenticating MHP applications. This profile is based on RFC 2459 [58].

The syntax of the CertificateFile is shown in table 122.

Table 122 : Syntax of the CertificateFile

Syntax	Num. Bits	Format
`Certificatefile () {`		
`  certificate_count`	16	uimsbf
`  for( i=0; i<certificate_count; i++ ) {`		
`    certificate_length`	24	uimsbf
`    certificate()`		
`  }`		
`}`		

certificate_count: This 16-bit integer carries the number of certificates in the certificate file.

certificate_length: This 24-bit integer specifies the number of bytes in the certificate.

certificate(): This field carries a single "Certificate" data structure as defined by ITU-T X.509 [54]. See 12.11.1, "Main part of the certificate" on page 323.

12.4.3.2 ASN.1 encoding

The basic specification of the ASN.1 DER encoding used in RFC 2459 [58] is given in ASN.1 [57]. However, RFC 2459 [58] defines some extensions which are required to implement this specification.

12.4.3.3 Supported algorithms

There are various algorithm identifiers in the certificate structure. The OID of the algorithm used in the SubjectPublicKeyInfo structure shall be RSA.

The values for AlgorithmIdentifier used both in the certificate structure and in the TBSCertificate structure that are supported in this specification are listed under "signatureAlgorithm" on page 294.

12.4.3.4 Name matching

The only allowed encoding of attributes of distinguished names shall be UTF8String.

NOTE: The use of this encoding allows name matching to be a binary comparison.

12.4.3.5 CertificateFile location and naming conventions

As described in 12.2.1.3, "Certificates" on page 287, a key can be authenticated through a "certificate chain".

A certificate chain is a hierarchy of certificates that enable the implementation to verify the validity of the key used to check a signature. In the MHP environment, the root certificate is embedded in the MHP. Hence, the file structure shall carry all of the certificate chain apart from the root certificate.

The certificate file that leads to the public key of a signature shall be placed in the same directory as that signature file.

The name of a CertificateFile is:

```
"dvb.certificates.x"
```

where the <x> corresponds to the x value in the file name of the signature file verified by this certificate. Hence in the root directory of an authenticated subtree there shall be one certificate file for each signature file. See 12.4.2.2, "SignatureFile location and naming conventions" on page 291 and 12.4.4 "Integration".

12.4.3.6 Authentication rules

Certificates are considered to be the same if they have bitwise identical contents.

12.4.4 Integration

Logically a file is authenticated as follows:

a) Confirm that the file is listed in the hash file located in the same directory as the file to be authenticated.

b) Verify that the file contents and the corresponding digest value are consistent.

c) Recursively ascend the directory hierarchy checking that each directory is authenticated by its parent directory until a directory is found that contains one or more signature files.

   Such a directory is termed the root directory of an authenticated subtree.

NOTE 1: This means that there is no requirement to progress above the root of the authenticated subtree to examine further hash files. If a such a directory has a digest type other than "Non authenticated" in its parent directory, this is only significant when verifying the hash file of the parent directory.

NOTE 2: Presence of more than one signature file enables more than one set of organisations to authenticate a subtree. The application of this is outside the scope of this specification.

d) For a signature file locate the corresponding certificate file (where the x portion of the signature file's file name identifies the certificate file to be used).

e) Follow the certificate chain contained within the certificate file verifying each link in the chain until the link to the root certificate is found.

f) If the identified root certificate and all the intermediate certificates leading to it are "satisfactory", accept the files as being authenticated.

"satisfactory" depends on the policies implemented in the receiver and other constraints expressed in this specification. In particular the requirements in 11.2.3, "Class Loading" on page 241 for using the "same" leaf certificate to authenticate DVB-J class files shall be observed.For HTML applications the definition of "satisfactory" is given in 8.14, "Security of DVB-HTML applications" on page 164.

g) Dependant on receiver policy return to step (c) and repeat for other signature files.

NOTE: The above is a logical description of the process and does not constrain implementations to perform these steps in this exact order. E.g. hash files may be verified when descending an directory hierarchy rather than ascending one.

A file system may contain several independent authenticated subtrees, each tree with its own subtree root directory.

12.5 Profile of X.509 certificates for authentication of applications

This section identifies how ITU-T X.509 [54] is profiled when used for authentication of broadcast MHP applications. This profile is a variation (in general a sub-set) of the internet profile defined in RFC 2459 [58]. This section identifies the differences from the profile in RFC 2459 [58]. Section 12.11, "The internet profile of X.509 (informative)" on page 322 summarises the profile in RFC 2459 [58].

12.5.1 signatureAlgorithm

This specification supports 2 signature algorithms: MD5 with RSA and SHA-1 with RSA.

12.5.1.1 MD5 with RSA

The signature algorithm with MD5 and the RSA encryption algorithm is defined in RFC 2313 [56]. As defined in RFC 2313 [56], the ASN.1 OID used to identify this signature algorithm is:

```
md5WithRSAEncryption OBJECT IDENTIFIER  ::=  {
   iso(1) member-body(2) us(840) rsadsi(113549) pkcs(1) pkcs-1(1) 4 }
```

12.5.1.2 SHA-1 with RSA

The signature algorithm with SHA-1 and the RSA encryption algorithm is implemented using the padding and encoding conventions described in RFC 2313 [56]. The message digest is computed using the SHA-1 hash algorithm. The ASN.1 object identifier used to identify this signature algorithm is:

```
sha-1WithRSAEncryption OBJECT IDENTIFIER  ::=  {
   iso(1) member-body(2) us(840) rsadsi(113549) pkcs(1) pkcs-1(1) 5 }
```

12.5.1.3 parameters

For both of the 2 supported algorithms the parameters component shall be the ASN.1 type NULL.

12.5.2 signatureValue

The RSA signature generation process and the encoding of the result is described in detail in RFC 2313 [56].

12.5.3 version

The version field of the certificate shall signal v3. All implementations shall support the v3 extensions as required by 12.5.9, "Extensions" on page 296.

12.5.4 issuer

12.5.4.1 minimum requirement

For this specification at least a Common Name attribute shall be provided. The text value of the attribute shall be non-empty. It shall be suitable for direct presentation to the user.

12.5.4.2 certificate authority responsibility

The senior certificate authority who signs a certificate shall oversee the attribute information to ensure that the information is suitable.

12.5.5 validity

The only allowed format for encoding time in the validity field is GeneralizedTime.

12.5.6 subject

The subject field is a "distinguished name". The following requirements are specified by this specification:

- The only allowed encoding attributes of the subject is `UTF8String` (see 12.4.3.4, "Name matching" on page 293)
- The minimum set of attributes that shall be present in the subject are:

  - `commonName`

  - `countryName`
- If the certificate is a "leaf certificate" (see figure 19, "Certificate chain illustrated" on page 288) then the subject shall also contain an `organizationName`.
- When encoded the `organizationName` carries organisation specific text post fixed by the organisation_id of the authenticated files. This integer value is represented as a fixed length 8 character hexadecimal string (with leading zeros where required). So the `organizationName` takes the form:

  ```
  text + "." + organisation_id
  ```

  See 14.5, "Text encoding of application identifiers" on page 357.

  This field reproduces the organisation_id value from the application's application identifier see 10.5.1, "Encoding" on page 214. If the values of the organisation_ids don't match then the application is considered to have failed authentication. Applications which fail authentication at this point shall not be started on MHP terminals.

12.5.7 SubjectPublic Key Info

This specification supports a single public key algorithm (RSA) for the subject public key.

The key lengths that implementation are required to support are addressed in G, "(normative): Minimum Platform Capabilities" on page 442.

12.5.7.1 rsaEncryption

The OID rsaEncryption identifies RSA public keys:

```
rsaEncryption OBJECT IDENTIFIER ::=  { pkcs-1 1}

pkcs-1 OBJECT IDENTIFIER  ::=  { iso(1) member-body(2) us(840)
                                                    rsadsi(113549) pkcs(1) 1 }
```

The parameters field shall have ASN.1 type NULL.

12.5.7.2 subjectPublicKey

The RS subjectPublicKey BIT STRING shall be encoded using the ASN.1 type RSAPublicKey:

```
RSAPublicKey ::= SEQUENCE {
   modulus                    INTEGER, -- n
   publicExponent             INTEGER  -- e -- }
```

The semantics of the modulus (n) and the public exponent (e) are defined in RFC 2313 [56].

12.5.8 Unique Identifiers

X.509 defines the `issuerUniqueID` and `subjectUniqueID` extensions.

CAs conforming to this profile shall not generate certificates with unique identifiers.

MHP terminals conforming to this profile are not required to be capable of parsing unique identifiers and making comparisons.

12.5.9 Extensions

The following restrictions and semantics are placed on the use of certificate extensions when used to authenticate applications.

Table 123 : Profile for standard certificate extensions

Extension	In broadcasts	In implementations	Semantic
Authority key identifier	Opt.	Opt.	Shall not be marked critical
Subject key identifier	Opt.	Opt.	Shall not be marked critical
Key usage	Mand.	Mand.	If the keyUsage extension is marked critical, for the leaf certificate the bit digitalSignature shall be set, for other certificates the bit keyCertSign shall be set. If these bits are not set then the certificate shall be ignored by the implementation.
Private key usage period	Opt.	Opt.	Shall not be marked critical
Certificate policies	Opt.	Opt.	Shall not be marked critical
Policy mappings	Opt.	Opt.	Shall not be marked critical
Subject Alternative Name	Mand.	Opt.	Shall not be marked critical The subject name unambiguously identifies the subject. It is recommended that DVB MHP implementations can read rfc822Name (email address)
Issuer Alternative Name	Mand.	Opt.	Shall not be marked critical The issuer name unambiguously identifies the issuer. It is recommended that DVB MHP implementations can read rfc822Name (email address).
Subject Directory attributes	Opt.	Opt.	Shall not be marked critical
Basic Constraints	Opt.	Mand.	May be marked critical
Name Constraints	Opt.	Mand.	May be marked critical. DVB MHP decoders shall be able to recognise name constraints when GeneralName are either directoryName or rfc822 names.
Policy Constraints	Opt.	Opt.	Shall not be marked critical
Extended key usage field	Opt.	Opt.	Shall not be marked critical
CRL Distribution points	Opt.	Opt.	Shall not be marked critical

Table 124 : Key for table 123

Keyword	When applied to …	
	broadcasts	receivers
Mandatory	Certificates shall include these extensions.	Receivers shall observe the semantic for this information when provided.
Optional	Certificates may or may be not include these extensions. The MHP specification does not define the use of these extensions and hence broadcasters should not use them.	Receivers can ignore these extensions if present.
Critical / not-critical	Broadcasters should not mark the receiver optional extensions as critical.	Certificates containing unrecognised critical extensions shall be considered as invalid. Receivers should recognise all the extensions that can be critical.

12.6 Security policy for applications

12.6.1 General principles

This section specifies the resource access policy for the downloaded applications. The resource access policy depends on two factors

- The access rights requested by the broadcaster through the signalling
- The access rights granted by the user.

The ultimate access rights that are granted to the applications are the intersection of the access rights requested by the broadcaster and the access rights granted by the user.

Unsigned applications have limited access to platform resources.

Unless specified elsewhere in this specification, signed applications have the same access rights as unsigned applications. An application broadcaster can request additional permissions to access specific resources by providing a signed "Permission Request File" along with the application. The syntax and semantics of the Permission Request File are defined in the following sections. The permission request file may also contain a credential that indicates that a persistent file owned by another organisation may be accessed. If the "Permission Request File" is not correctly authenticated the application is not granted any additional permissions but is not prevented from starting for this reason.

The way the user grants rights to the downloaded applications is implementation dependant and is not addressed by this specification.

For DVB-J applications, accessing a resource consists of method calls. Each method call that results in accessing the resource shall throw a security exception as defined in 11.10, "Java permissions" on page 272 and the specifications of the java APIs concerned. For each resource subject to access restriction, the application can test whether it has been granted permissions to access it by using the corresponding java Permission class (See 11.8, "Security" on page 268).

For a DVB-J application to be correctly authenticated, all the class files that the application consists of need to be signed. If, during the execution of the application the MHP detects an unsigned File containing a class or a class file that failed to pass the authentication process (i.e. because its actual hash value does not match the expected hash value), then the class shall be considered as not available.

When an application first requests to retrieve data from a file that is signalled as being signed, but for which the MHP failed to match the computed hash value and the expected hash value, then the API concerned shall fail in a manner consistent with the defined behaviour of that API when the file exists but has no content in it.

NOTE: In order to be efficient, if a directory D contains objects that are likely to frequently change, it is advised to put a signature file in this directory D and to mark the directory D as non authenticated in the hashfile located in the parent directory of D. By doing so, it will limit the propagation of modifications to just one directory.

The authentication of a file is evaluated each time that the file is loaded from a transport connection. File version information in the transport system cannot be assumed to be secure.

Applications authors should be aware that deciding whether to grant a permission or not may, depending on the implementation, involve prompting and asking the end user. The latest point in time when the implementation must decide if an application has a permission or not is when the application either queries the presence of this permission for the first time or when it invokes an action that requires the permission for the first time. Application authors should be aware that in these situations, an implementation may prompt and ask the user. Depending on the implementation, this prompting (if necessary) can also happen at any point in time prior to this (e.g. at the application start up time).

An MHP terminal is required to be able to operate in a mode where it grants permission to provide access to all of the functionality required by the profiles and options that it supports when appropriately requested (e.g. via the permission request file). The mechanism for causing the terminal to operate in this mode is implementation-dependent. The granting of permissions for accessing functionality outside of the claimed MHP profile and options is not required.

NOTE: In the case of permissions represented by a Java class in DVB-J, this means that it will be possible to have such a permission granted if the corresponding class is required in the given profile, and it can be requested in the permission request file.

NOTE: This means that, for example, it must be possible to grant the permission associated with dialling a phone number on a terminal that supports the interactive broadcast profile, even if the terminal implements the interaction channel using a cable modem. In this case, the dialling APIs will fail in a manner consistent with this specification.

12.6.2 Permission request file

12.6.2.1 File encoding

12.6.2.1.1 XML

The Permission Request File is an XML File. Its syntax is defined by the following DTD. The `Name` used in the document type declaration shall be "permissionrequestfile".

12.6.2.1.2 MHP 1.0

The `PublicLiteral` to be used for specifying this DTD in document type declarations of the XML files is:

```
"-//DVB//DTD Permission Request File 1.0//EN"
```

and the URL for the SystemLiteral is:

```
"http://www.dvb.org/mhp/dtd/permissionrequestfile-1-0.dtd".
```

The DTD is:

```
<!ELEMENT permissionrequestfile
   (file?,capermission?,applifecyclecontrol?,returnchannel?,tuning?,
   servicesel?,userpreferences?,network?, dripfeed?, persistentfilecredential?)>
<!ATTLIST permissionrequestfile
 orgid CDATA #REQUIRED
 appid CDATA #REQUIRED
>

<!ELEMENT file EMPTY>
<!ATTLIST file
   value                (true|false) "true"
>
<!ELEMENT capermission (casystemid)+>
<!ELEMENT casystemid EMPTY>
```

```
<!ATTLIST casystemid
   entitlementquery     true|false) "false"
   id                   CDATA #REQUIRED
   mmi                  (true|false) "false"
   messagepassing       (true|false) "false"
   buy                  (true|false) "false"
>

<!ELEMENT applifecyclecontrol EMPTY>
<!ATTLIST applifecyclecontrol
   value                (true|false) "true"
>

<!ELEMENT returnchannel (defaultisp?,phonenumber*)>
<!ELEMENT defaultisp EMPTY>
<!ELEMENT phonenumber (#PCDATA)>

<!ELEMENT tuning EMPTY>
<!ATTLIST tuning
   value                (true|false) "true"
>

<!ELEMENT servicesel EMPTY>
<!ATTLIST servicesel
   value                (true|false) "true"
>

<!ELEMENT userpreferences EMPTY>
<!ATTLIST userpreferences
   write                (true|false) "false"
   read                 (true|false) "true"
>

<!ELEMENT network (host)+>
<!ELEMENT host (#PCDATA)>
<!ATTLIST host
   action               CDATA #REQUIRED
>

<!ELEMENT dripfeed EMPTY>
<!ATTLIST dripfeed
   value                (true|false) "true"
>

<!ELEMENT persistentfilecredential (grantoridentifier,expirationdate,filename+,signature,
certchainfileid)>
<!ELEMENT grantoridentifier EMPTY>
<!ATTLIST grantoridentifier
   id                   CDATA #REQUIRED
>
<!ELEMENT expirationdate EMPTY>
<!ATTLIST expirationdate
   date                 CDATA #REQUIRED
>
<!ELEMENT filename (#PCDATA)>
<!ATTLIST filename
   write                (true|false) "true"
   read                 (true|false) "true"
>
<!ELEMENT signature (#PCDATA)>
<!ELEMENT certchainfileid (#PCDATA)>
```

12.6.2.1.3 MHP 1.1

The `PublicLiteral` to be used for specifying this DTD in document type declarations of the XML files is:

```
"-//DVB//DTD Permission Request File 1.1//EN"
```

and the URL for the SystemLiteral is:

"http://www.dvb.org/mhp/dtd/permissionrequestfile-1-1.dtd".

The DTD is:

```
<!ELEMENT permissionrequestfile
   (file?,capermission?,applifecyclecontrol?,returnchannel?,tuning?,
   servicesel?,userpreferences?,network?, dripfeed?, persistentfilecredential?,
   applicationstorage?,smartcardaccess?)>

<!ATTLIST permissionrequestfile
 orgid CDATA #REQUIRED
 appid CDATA #REQUIRED
>

<!ELEMENT file EMPTY>
<!ATTLIST file
   value               (true|false) "true"
>

<!ELEMENT capermission (casystemid)+>
<!ELEMENT casystemid EMPTY>
<!ATTLIST casystemid
   entitlementquery    true|false) "false"
   id                  CDATA #REQUIRED
   mmi                 (true|false) "false"
   messagepassing      (true|false) "false"
   buy                 (true|false) "false"
>

<!ELEMENT applifecyclecontrol EMPTY>
<!ATTLIST applifecyclecontrol
   value               (true|false) "true"
>

<!ELEMENT returnchannel (defaultisp?,phonenumber*)>
<!ELEMENT defaultisp EMPTY>
<!ELEMENT phonenumber (#PCDATA)>

<!ELEMENT tuning EMPTY>
<!ATTLIST tuning
   value               (true|false) "true"
>

<!ELEMENT servicesel EMPTY>
<!ATTLIST servicesel
   value               (true|false) "true"
>

<!ELEMENT userpreferences EMPTY>
<!ATTLIST userpreferences
   write               (true|false) "false"
   read                (true|false) "true"
>

<!ELEMENT network (host)+>
<!ELEMENT host (#PCDATA)>
<!ATTLIST host
   action              CDATA #REQUIRED
>

<!ELEMENT dripfeed EMPTY>
<!ATTLIST dripfeed
   value               (true|false) "true"
>

<!ELEMENT persistentfilecredential (grantoridentifier,expirationdate,filename+,signature,
certchainfileid)>
<!ELEMENT grantoridentifier EMPTY>
<!ATTLIST grantoridentifier
   id                  CDATA #REQUIRED
>
```

```
<!ELEMENT expirationdate EMPTY>
<!ATTLIST expirationdate
   date                CDATA #REQUIRED
>
<!ELEMENT filename (#PCDATA)>
<!ATTLIST filename
   write               (true|false) "true"
   read                (true|false) "true"
>
<!ELEMENT signature (#PCDATA)>
<!ELEMENT certchainfileid (#PCDATA)>


<!-- ..................... new elements in MHP 1.1 ................ -->
<!ELEMENT applicationstorage EMPTY>
<!ATTLIST applicationstorage
   orgid CDATA #REQUIRED
   store (true|false) "false"
   remove (true|false) "false"
   create (true|false) "false"
   removeservice (true|false) "false"
>

<!ELEMENT smartcardaccess EMPTY>

<!ELEMENT priviligedrce EMPTY>
<!ATTLIST privilegedrce
   value (internal|external) "internal"
>
```

12.6.2.1.4 Number representation

12.6.2.1.4.1 Hex

Unless stated otherwise each hexadecimal value has the following form "0x" N*hex where "N" specifies the fixed number of significant digits in the value and hex is specified by the following BNF:

```
hex = digit | "A" | "B" | "C" | "D" | "E" | "F" | "a" | "b" | "c" | "d" | "e" | "f"
digit = "0" | "1" | "2" | "3" | "4" | "5" | "6" | "7" | "8" | "9"
```

12.6.2.2 File integrity

If the permission file is not parsable as defined by the XML parsing rules (see 14.3, "XML notation" on page 355) it shall be ignored and hence no additional permissions are granted.

12.6.2.3 Example

```
<?xml version="1.0"?>
<!DOCTYPE permissionrequestfile PUBLIC "-//DVB//DTD Permission Request File 1.0//EN"
"http://www.dvb.org/mhp/dtd/permissionrequestfile-1-0.dtd">
<permissionrequestfile orgid="0x000023d2" appid="0x0020">

   <file value="true"></file>

   <capermission>
      <casystemid
         id="0x1111" messagepassing="true"
         entitlementquery="true" mmi="false">
      </casystemid>
   </capermission>

   <applifecyclecontrol value="true"></applifecyclecontrol>

   <returnchannel>
      <defaultisp></defaultisp>
      <phonenumber>+3583111111</phonenumber>
      <phonenumber>+3583111112</phonenumber>
      <phonenumber></phonenumber>
```

```
   </returnchannel>

   <tuning value="false"></tuning>

   <servicesel value="true"></servicesel>

   <userpreferences read="true" write="false"></userpreferences>

   <network>
      <host action="connect">hostname</host>
   </network>

   <persistentfilecredential>
      <grantoridentifier id="0x0202030"></grantoridentifier>
      <expirationdate date="24/12/2032"></expirationdate>
      <filename read="true" write="false">5/15/dir1/scores</filename>
      <filename read="true" write="false">5/15/dir1/names</filename>
      <signature>02320329329293293292149314392942394329423943294239432
      </signature>
      <certchainfileid>3</certchainfileid>
   </persistentfilecredential>

</permissionrequestfile>
```

12.6.2.4 Permission request file name and location

The format for the permission request file name is:

```
   "dvb.<application name>.perm"
```

The prefix "dvb" identifies this as a well known file specified by this specification. The portion "application name" carries the file name of the initial file of the application. The initial file depends on the application type as is shown in table 125 for the types defined in this specification.

Table 125 : Application name for different application types

Application type		File identified for application name
Value	Meaning	
0x0001	DVB-J	The name initial_class_byte, see table 102 on page 230
0x0002	DVB-HTML	The name initial_path_bytes, see table 104 on page 232

This file shall be located in the same directory as the initial file.

12.6.2.5 Permission request file

12.6.2.5.1 Minimum permissions

If the permission file does not contain a valid permissionrequestfile element it shall be ignored and hence no additional permissions are granted.

12.6.2.5.2 Syntax and semantics

```
<!ATTLIST permissionrequestfile
   orgid CDATA #REQUIRED
   appid CDATA #REQUIRED
>
```

orgid: This attribute is a hexadecimal string (hex_string) that conveys the organisation id of the associated application. The encoding of this value is specified in 12.6.2.1.4.1, "Hex" on page 301.

appid: This attribute is a hexadecimal string (hex_string) that conveys the application id of the associated application. The encoding of this value is specified in 12.6.2.1.4.1, "Hex" on page 301.

12.6.2.6 Credentials

A credential contains a resource description and is used to allow the owner of this resource (the grantor) to grant to the permission request file's application to access it. In this specification, the only resource that can be contained in a credential is a file (or a set of files of a directory). This type of credential is named `persistentfilecredential` in the XML DTD. The credential contains an expiration date that allow the grantor to grant access to its resource for a limited duration. The credential is signed by the grantor. The signature checking is done by the implementation by getting the certificate of the grantor. The certificate can be found thanks to the information contained in the `certchainfileid` element.

The certificate that leads to the public key of the signature shall be placed either in the same directory as the permission request file containing the credential or in one of its parent directories.

The grantoridentifier in the persistentfilecredential shall match the organization_id contained in the Subject organizationName field of the leaf certificate. Likewise, the grantoridentifier shall match the owner of the file to which access is granted by this persistentfilecredential. If either of these matches is not successful then the file access shall not be granted.

The persistent file credential is transmitted using the following XML DTD syntax:

```
<!ELEMENT persistentfilecredential (grantoridentifier,expirationdate,filename+,signature,
certchainfileid)>
<!ELEMENT grantoridentifier EMPTY>
<!ATTLIST grantoridentifier
   id CDATA #REQUIRED
>
<!ELEMENT expirationdate EMPTY>
<!ATTLIST expirationdate
   date CDATA #REQUIRED
>
<!ELEMENT filename (#PCDATA)>
<!ATTLIST filename
   write (true|false) "true"
   read (true|false) "true"
>
<!ELEMENT signature (#PCDATA)>
<!ELEMENT certchainfileid (#PCDATA)>
```

The following table provide more information about the different elements:

Table 126 :

Elements	Comments
`grantoridentifier`	This element contains the 32 bit organization id identifying the grantor organization. The `CDATA` attribute `id` of this element shall have the following BNF syntax: `"0x" 0*8hex ; e.g. 0x34243` See 12.6.2.1.4.1, "Hex" on page 301.
`expirationdate`	This element contains the expiration date of this credential.The implementation should ignore the certificate if the date has expired. The `CDATA` attribute `date` shall follow the following BNF syntax: `2dec "/" 2dec "/" 4dec ; e.g. "01/12/2001"` Where the first 2 digits are the day number in the month, the second two digits are the month number in the year and the last 4 digits are the year. All values are in accordance with the Gregorian calendar.

Table 126 :

Elements	Comments
`filename`	This element contains the filename path and the read/write access rights that are granted on the file. The element consists of a `CDATA` string following the following BNF syntax: `1*(alphanum | "/" | "*" | "." | "-" | "_" | "?")` **"*"** can be used as a wildcard to replace any number of character in a file or directory name. "?" can be used to represent one wildcarded character "/" is the file separator "-" used at the end of a pathname indicates (recursively) all files and subdirectories contained in that directory The file path shall not start with a "/". It is relative to the path obtained from the `dvb.persistent.root` property. The element has two attributes read and write that can take the value "true" or "false".
`signature`	This element contains a signature from the grantor. Signature structure is as defined section 12.4.2, "SignatureFile" on page 291. The signature follows the following BNF syntax: `1*dec`
`certchainfileid`	This element contains the identifier of the leaf certificate, i.e. the "x" in the file name "dvb.certificate.x".

The signature is computed on the binary concatenation of the following fields in the following order with identically the same encoding as in the permission request file:

Table 127 :

Fields	Binary content
grantee_identifier.organization_id	32 bits
grantee_identifier.application_id	16 bits
grantor_identifier (organization_id)	32 bits
expiration_date	10 characters (e.g. "10/12/2001") in ASCII

filenames & actions (in the order they appear in the XML document) i.e.:
 	
for (i=0;i<filenumber;i++) {
read
write
filepath
 	
}
	
	4 or 5 char ("true" or "false")
	4 or 5 char ("true" or "false")
	string in ASCII (without any string termination character)

The implementation will check the validity of the credential by checking the signature with the grantor's public key that can be found in the grantor's certificate. Certificates are carried by the grantee in the file format defined section 12.4.3, "CertificateFile" on page 292. Certification chain authenticates grantor's certificate. This chain shall derive from one of the root authorities embedded in the MHP.

12.6.2.7 File Access

12.6.2.7.1 Unsigned applications

Have no access to the persistent storage

12.6.2.7.2 Default policy for signed applications

No access to the persistent storage, unless otherwise indicated in the Permission File.

When an application is granted access to the File system, the file access policy is derived from the policy used in the Unix world:

An application owns the files it has created. The root directory of the persistent file namespace is defined by the 'dvb.persistent.root' property as described in 11.5.6, "Persistent Storage API" on page 258. The files owned by an application shall be located in sub-directories below this directory, specifically one of the following two choices:

a) the sub-directory whose name is the organisation_id of the application concerned.

b) a sub-directory of the immediately previously defined directory whose name is the application_id of the application concerned.

The encodings of the organisation identifier and application identifier are as defined in 14.5, "Text encoding of application identifiers" on page 357. By default, applications cannot access any file outside the second of the two directories defined immediately above.

An Application can modify the access rights to a file it owns as follows:

- it can grant a read-only access, a write-only access or a read-write access to all applications having the same organisationId value.
- it can grant a read-only access, a write-only access or a read-write access to all applications.
- write access to a directory is required to add or remove an entry in a directory.
- read access to a directory is required to list the contents of a directory or access any of the files contained within in it.
- to read the contents of a file permission to read that file and all directories on the path to the root of the persistent file system is required

An application shall be granted access to a file if it qualifies for such access by application, organisation or world access permissions.

An application's right to access a file is the union of the rights granted by the credential mechanism and the right granted by the file permission mechanism.

See org.dvb.io.persistent see J, "(normative): DVB-J persistent storage API" on page 469.

12.6.2.7.3 Permission request syntax

```
<!ELEMENT file EMPTY>
<!ATTLIST file
 value (true|false) "true"
>
```

12.6.2.8 CA API

12.6.2.8.1 Unsigned applications

An unsigned application cannot access the following methods:

- `CAModule.buyEntitlements`
- `CAModule.openMessageSession`
- `CAModuleManager.addMMIListener`
- `CAModule.queryEntitltements`
- `CAModule.listEntitlements`.

12.6.2.8.2 Signed applications

By default, an application has limited access to the CA API functions (same default rights as an unsigned application)

In particular, the following method calls are not accessible to an unsigned application:

- `CAModule.buyEntitlements`
- `CAModule.openMessageSession`
- `CAModuleManager.addMMIListener`
- `CAModule.queryEntitltements`
- `CAModule.listEntitlements`.

The permission request file requests the MHP to grant additional rights to the application with the ConditionalAccess Permission described below.

12.6.2.8.3 Conditional Access Permission syntax

The ConditionalAccess Permission is optional. When not present, the application has the default access rights. When present, the permission request file overrides the default rights for this application.

```
<!ELEMENT capermission (casystemid)+>
<!ELEMENT casystemid EMPTY>
<!ATTLIST casystemid
   entitlementquery     true|false) "false"
   id                   CDATA #REQUIRED
   mmi                  (true|false) "false"
   messagepassing       (true|false) "false"
   buy                  (true|false) "false"
>
```

The string specifying the CA system IDs has the following syntax:

```
CAIds          =  1*CASystemId | "[" CASystemId "-" CASystemId "]" | "*"
CASystemId     = "0x" 4*hex
```

See 12.6.2.1.4.1, "Hex" on page 301.

12.6.2.9 Application lifecycle control policy

Applications shall not launch broadcast applications that are not signalled in the AIT of the same service.

12.6.2.9.1 Unsigned applications

An unsigned broadcast application can launch any application visible in the listing API that is signalled in the same service.

An unsigned application can control (pause, stop, resume) the lifecycle of an application it has launched.

An unsigned application cannot control the lifecycle of an application it has not launched.

12.6.2.9.2 Default policy for Signed applications

By default, a signed application has the same rights as an unsigned application as concerns the application lifecycle control policy.

These default rights can be overridden by the permission request file as described below.

12.6.2.9.3 Syntax

```
<!ELEMENT applifecyclecontrol EMPTY>
<!ATTLIST applifecyclecontrol
 value (true|false) "true"
>
```

value: When the boolean value is set to `true`, this means that the application can control the lifecycle of all the applications signalled in the same service. When set to `false` the policy is as in 12.6.2.9.2, "Default policy for Signed applications" on page 307.

12.6.2.10 Return channel access policy

12.6.2.10.1 Unsigned applications

An unsigned application may not use the return channel.

12.6.2.10.2 Signed applications

By default, a signed application may not access the return channel, unless otherwise specified by the permission request file. The syntax of the return channel permission is so that it describes the phone numbers that the application may try to dial.

12.6.2.10.3 Return channel permission syntax

```
<!ELEMENT returnchannel (defaultisp?,phonenumber*)>
<!ELEMENT phonenumber (#PCDATA)>
<!ELEMENT defaultisp EMPTY>
```

The syntax of the phone number string is as defined below.

```
phonenumber    = "+" digit digits | digits
digits         = "" | digit digits
digit          = "0" | "1" | "2" | "3" | "4" | "5" | "6" | "7" | "8" | "9"
```

If default ISP is not present, then the net API shall not use the default ISPnumber.

The presence of the `defaultisp` tag indicates that the application is allowed to use the default ISP connection. If this tag is not present, the application is not allowed to use the default ISP connection.

When a phone number is given, this number defines a prefix of the allowed phone numbers and applications are allowed to call to all numbers that start with one of the prefixes defined in the permission request file, subject to the MHP terminal granting this right.

NOTE: By defining an empty phone number tag (i.e. empty string as the prefix), the application could try to call to any phone number.

12.6.2.11 Tuning access policy

12.6.2.11.1 Unsigned applications

An unsigned application may not tune using the Tuning API.

12.6.2.11.2 Signed applications

By default, a signed application may not tune using the Tuning API. However, the right to tune can be requested with the Tuning permission that can be put in the permission request file.

12.6.2.11.3 Tuner Permission syntax

The syntax of this permission is as follows:

```
<!ELEMENT tuning EMPTY><

<!ATTLIST tuning
 value (true|false) "true"
>
```

The value true requests the permission to tune using the Tuning API.

12.6.2.12 Service selection policy

12.6.2.12.1 Unsigned applications

Unsigned applications may not select a new service.

12.6.2.12.2 Signed applications

By default, signed applications can select any new service, unless otherwise specified in the permission request file.

Service selection might require return channel access. If an application attempts to do a service selection using a locator that refers to an AIT file delivered over the return channel, and a return channel has not already been established or the application does not have permission to establish a connection via the default isp (see 12.6.2.10, "Return channel access policy" on page 307), then the service selection shall fail in a manner consistent with the defined failure mode for service selection when a security violation is encountered (e.g. a DVB-J application using the service selection API shall be thrown a SecurityException).

Note: See also 12.14.1, "Permission for application loading from the return channel" on page 331

12.6.2.12.3 Service Selection Permission

The syntax of the service selection permission is as follows:

```
<!ELEMENT servicesel EMPTY>

<!ATTLIST servicesel
 value (true|false) "true"
>
```

If no service selection permission is present in the permission request file, the application has the default right, i.e. it can select any service.

The value "false" in this item in the permission request file, denies the right to select a new service.

12.6.2.13 Media API access policy

The media API is inside the sandbox.

12.6.2.14 Inter-application communication policy

12.6.2.14.1 Unsigned applications

Unsigned applications are allowed to communicate with each other through the inter-application communication API. However, an unsigned application is not allowed to communicate with a signed application through the inter-application communication API.

12.6.2.14.2 Signed applications

Signed applications signalled in the same service are allowed to communicate with each other through the inter-application communication API.

No special Permission need be defined.

12.6.2.15 User Setting and Preferences access policy

12.6.2.15.1 Unsigned applications

Read access to:

- User Language
- Parental Rating
- DefaultFontSize
- Country Code

An unsigned application cannot access (neither read nor write) to other preferences

12.6.2.15.2 Signed applications

By default, same as unsigned applications. The permission request file may include items that request read access to all user preferences and/or write access to all user preferences.

12.6.2.15.3 Permission syntax

```
<!ELEMENT userpreferences EMPTY>

<!ATTLIST userpreferences
 write (true|false) "false"
 read (true|false) "true"
>
```

True value in the write and read attribute means that the permission for writing and reading, respectively, is requested.

12.6.2.16 Network permissions

12.6.2.16.1 Unsigned applications

Unsigned applications can not have access to the return channel and therefore do can not access remote network hosts,

12.6.2.16.2 Signed applications

For signed applications, the permission request file can contain a set of permissions that specify the hosts and actions for which permissions are requested.

12.6.2.16.3 Permission syntax

```
<!ELEMENT network (host)+>
<!ELEMENT host (#PCDATA)>
<!ATTLIST host
 action CDATA #REQUIRED
>
```

The two strings that specific the host and the action shall be formatted as specified in the `java.net.SocketPermission` class as defined in 11.8, "Security" on page 268.

12.6.2.17 Dripfeed permissions

12.6.2.17.1 Unsigned applications

Has no access to drip feed mode.

12.6.2.17.2 Default policy for signed applications

No access to drip feed mode unless otherwise indicated in the Permission file. When an application is granted access to the drip feed mode, it is able to instantiate a `DripFeedDataSource`.

12.6.2.17.3 Permission request syntax

```
<!ELEMENT dripfeed EMPTY>
<!ATTLIST dripfeed
   value (true|false) "true"
>
```

12.6.2.18 Privileged Runtime Code Extension Permission

Note: DVB-J prohibits runtime code extension from data sources less secure than the original program code by virtue of the fact that interoperable DVB-J applications cannot directly create a ClassLoader, so this permission does not apply to DVB-J. See 11.10.1.4, "java.lang.RuntimePermission" on page 272 and DVBClassLoader in annex H, "(normative): DVB-J fundamental classes" on page 449.

Note: In ECMAscript, code executed via runtime code extension has the same permission level as the enclosing application. Thus, granting an unsigned application the ability to do runtime code extension with string data does not give the application the ability to execute a string as privileged code.

12.6.2.18.1 Unsigned Applications

Unsigned applications shall be permitted to do runtime code extension with string data from any source.

12.6.2.18.2 Signed applications with no permission request file

Signed applications with no permission request file shall be permitted to do runtime code extension with string data from any source.

12.6.2.18.3 Signed applications with a permission request file

By default, a signed application with a permission request file is prohibited from doing any runtime code extension from a string. The permission request file may include items that request the ability to do runtime code extension with internal strings only, or with both internal an external strings.

12.6.2.18.4 Permission request syntax

```
<!ELEMENT priviligedrce EMPTY>
<!ATTLIST privilegedrce
   value (internal|external) "internal"
>
```

12.6.2.19 Application storage

12.6.2.19.1 Unsigned applications

Have no permission to store applications

12.6.2.19.2 Default policy for signed applications

By default signed applications do not have permission to store any applications.

Permission to store applications can be requested using the permission request file.

12.6.2.19.3 Permission request syntax

```
<!ELEMENT applicationstorage EMPTY>
<!ATTLIST applicationstorage
   orgid CDATA #REQUIRED
   store (true|false) "false"
   remove (true|false) "false"
   create (true|false) "false"
   removeservice (true|false) "false"
>
```

orgid: The organization_id of the organization whose application and stored services this permission request concerns. This field is encoded in hexadecimal form as specified in 14.5, "Text encoding of application identifiers" on page 357.

store: When set to "true", requests a permission to store applications of the organization identified by the organization_id. If set to false, this permission is not requested.

remove: When set to "true", requests a permission to remove applications of the organization identified by the organization_id. If set to false, this permission is not requested.

create: When set to "true", requests a permission to create a stored application service with the organization identified by the organization_id. If set to false, this permission is not requested.

removeservice: When set to "true", requests a permission to remove a stored application service with the organization identified by the organization_id. If set to false, this permission is not requested.

12.6.2.20 Non-CA smart card access

12.6.2.20.1 Unsigned applications

Have no permission to access smart cards

12.6.2.20.2 Default policy for signed applications

By default signed applications do not have permission to access smart cards.

Permission to access smart cards can be requested using the permission request file.

12.6.2.20.3 Permission request syntax

```
<!ELEMENT smartcardaccess EMPTY>
```

When the smartcardaccess element is included in the permission request file, the permission to access smart cards is requested. If the element is not included in the permission request file, this permission is not requested.

12.7 Example of creating an application that can be authenticated

12.7.1 Scenario Example

This section is informative and gives an example of how a file system carrying two applications can be organised.

In this example, the file system carries single signed application Xlet1.

The main class of the application is the file `root/Xlet1/classes/Xlet1.class`, other files comprising the application are the following classes:

- `root/Xlet1/classes/foo1.class`
- `root/Xlet1/classes/subclasses/sub1.class`
- `root/Xlet1/classes/subclasses/sub2.class`

Xlet1 consumes data located in the file `root/Xlet1/data/Xlet1.dat`. This file is not authenticated.

Each subdirectory that contains signed files contains a hashfile.

Assumptions in this example:

- All the *.class files are signed
- The file `root/Xlet1/data/Xlet1.dat` is not signed
- The only digest algorithm used is MD5

The file structure is shown below:

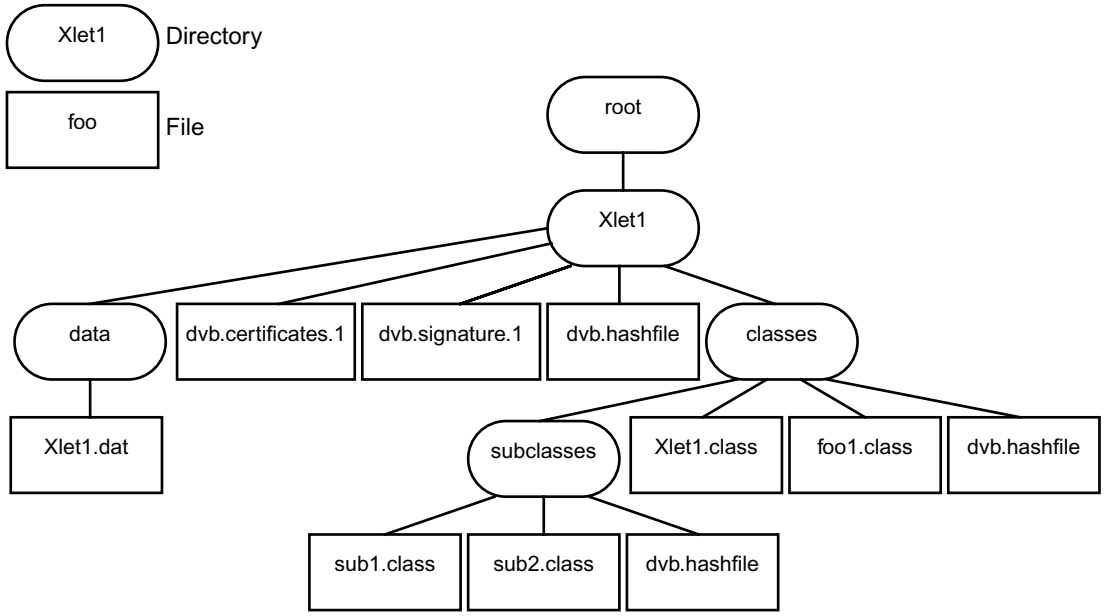


Figure 20 : Example of an authenticated file tree

12.7.2 Hashes and signature computations:

12.7.2.1 Computation of the hashes of the root/Xlet1/classes/subclasses directory

a) initialise the MD5 algorithm

b) apply the contents of the file `root/Xlet1/classes/subclasses/sub1.class` to the MD5 algorithm then apply the contents of the file `root/Xlet1/classes/subclasses/sub2.class` to the MD5 algorithm. The cumulative result from these two files is the result H0

c) construct the contents of the hash file for the directory `root/Xlet1/classes/subclasses/` as follows:

Table 128 : root/Xlet1/classes/subclasses/dvb.hashfile

Field	Comment
1	One digest
1	Type of digest algorithm = MD5
2	Number of entries over which a MD5 hash has been computed
`sub1.class`	List of names of entries
`sub2.class`	
H0	MD5 hash of files `sub1.class` and `sub2.class`

NOTE: In this example we have chosen that the digests for this directory result from processing the concatenation of the contents of the files in the directory.

d) create the hash file `root/Xlet1/classes/subclasses/dvb.hashfile` with the above contents

12.7.2.2 Computation of the hashes of the of root/Xlet1/classes directory

e) initialise the MD5 algorithm, compute the MD5 hash H2 using the contents of the file `root/Xlet1/classes/subclasses/dvb.hashfile`

f) initialise the MD5 algorithm, compute the MD5 hash H3 using the contents of the file `root/Xlet1/classes/Xlet1.class`

g) initialise the MD5 algorithm, compute the MD5 hash H4 using the contents of the file `root/Xlet1/classes/foo1.class`

h) construct the contents of the hash file for the directory `root/Xlet1/classes/` as follows:

Table 129 : root/Xlet1/classes/dvb.hashfile

Field	Comment
3	Three digests
1	Type of digest algorithm = MD5
1	Number of entries over which a MD5 hash has been computed
`subclasses`	List of names of entries
H2	MD5 hash of `subclasses` directory
1	Type of digest algorithm = MD5
1	Number of entries over which a MD5 hash has been computed
`Xlet1.class`	List of names of entries
H3	MD5 hash of file `Xlet1.class`
1	Type of digest algorithm = MD5
1	Number of entries over which a MD5 hash has been computed
`foo1.class`	List of names of entries
H4	MD5 hash of file `foo1.class`

NOTE: In this example we have chosen to individually hash each object in this directory.

i) create the hash file `root/Xlet1/classes/dvb.hashfile` with the above contents

12.7.2.3 Computation of the hashes of the of root/Xlet1 directory

j) initialise the MD5 algorithm, compute the MD5 hash H5 using the contents of the file `root/Xlet1/classes/dvb.hashfile`

k) construct the contents of the hash file for the directory `root/Xlet1/classes/` as follows:

Table 130 : root/Xlet1/dvb.hashfile

Field	Comment
2	Two digests
1	Type of digest algorithm = MD5
1	Number of entries over which a MD5 hash has been computed
`classes`	List of names of entries
H5	MD5 hash of the `classes` directory
0	Type of digest algorithm = non authenticated data
1	Number of entries over which a MD5 hash has been computed
`data`	List of names of entries
<no digest in this case>	

NOTE: the `root/Xlet1/classes` entry is the only authenticated entry of the `root/Xlet1` directory

l) create the hash file `root/Xlet1/dvb.hashfile` with the above contents

12.7.2.4 Computation of the signature

m) initialise the MD5 algorithm, compute the MD5 hash H6 using the contents of the file `root/Xlet1/dvb.hashfile`

n) RSA-encrypt H6 with the private key corresponding to the public key that can be found in the leaf certificate in the file `root/Xlet1/dvb.certificates.1`. In this example this has serial number 0123456.

o) ASN.1 encode the following structure:

- AuthorityCertIssuerName: Name of the CA
- AuthorityCertSerialNumber: 0123456
- HashSignatureAlgorithm: MD5
- SignatureValue: result of step (n).

p) put this structure into the signature file `root/Xlet1/dvb.signature.1`

NOTE: The file system could contain other Xlets in their own authenticated sub-trees. If these use the same certificate chain as Xlet1 (above) then logically the certificates file is replicated at the root of each of the authenticated sub-trees. Some file systems support symbolic links. These may in some cases improve the efficiency of the broadcast.

12.8 Procedures for application certificates and signatures

See 12.12, "MHP certification procedures" on page 330.

12.9 Certificate management

12.9.1 Certificate Revocation Lists

12.9.1.1 Introduction (informative)

Certificates may be revoked prior to their expiration time, e.g. if the broadcaster's private key is assumed to be compromised, or the broadcaster is no longer to be certified by the CA. Each CA publishes a list of revoked certificates, called a CRL (Certificate Revocation List). This contains the list of the serial number of revoked certificates.

During the validation process of a certificate chain, the CRL of each certification authority on the certification path is checked.

12.9.1.2 Distribution of CRLs (informative)

Two routes from the broadcaster to the MHP terminal can be envisaged:

- via the return channel
- in the broadcast MPEG stream

12.9.1.2.1 Distribution via return channel

In the certificate extension fields, there is an optional field called "CRL Distribution points". This field can hold a URL pointing to a crlFile which can be downloaded.

This approach is suitable for obtaining CRLs relating to TLS authentication of return channel exchanges. It is not suitable for delivering CRLs for broadcast application authentication as:

- not all MHP profiles require return channel support
- MHP terminals may be able to receive broadcast applications when not connected to a return channel
- it would not be acceptable to require a return channel session to authenticate each broadcast application

12.9.1.2.2 Distribution via MPEG stream

For an MHP terminal without a working return channel, the only way to deliver CRLs is via the broadcast MPEG Transport Stream.

12.9.1.3 CRL retention

12.9.1.3.1 Requirement

MHP terminals shall retain CRLs in persistent storage because:

- this enhances security as it defends against attacks with signals that filter out the CRL and use a revoked certificate
- it is more efficient to cache CRLs rather than downloading the CRLs for authentication of each application

12.9.1.3.2 Storage requirement

The minimum amount of persistent memory required to store CRLs is addressed in 12.12, "MHP certification procedures" on page 330.

12.9.1.3.3 Storage management

The broadcast CRL and RCMM signalling (see 12.9.2, "Root certificate management" on page 318) manages the use of the persistent storage.

If the CRL of a non-root certificate CA become's too large the CA's certificate itself can be revoked by its parent CA who adds it to their CRL. For root certificates, the RCMM mechanism can be used.

The broadcaster policy in this area is addressed in 12.12, "MHP certification procedures" on page 330.

12.9.1.4 CRL file location and naming convention

For CRLs that are authenticated by a broadcast certificate the format of the name of files carrying CRLs shall be:

```
"dvb.crl.x"
```

In this case the "x" portion of the filename corresponds to the "x" portion of a certificate filename for the certificate file that authenticates the CRL.

For CRLs that are authenticated by a root certificate the format of the name of files carrying CRLs shall be:

```
"dvb.crl.root.x"
```

In this case the "x" portion of the filename is just a discriminator to ensure non-collision of CRL file names in the event that there is more than one in this directory.

The CRL filename may not be constant through time or across broadcasts. So, implementations shall not rely on this filename when caching the CRL.

All CRL files shall be located in a subdirectory of the root of the file system called "dvb.crl". The location of certificate files authenticating the CRL files shall follow the same rules as for the location of certificates relative to a signature file. That is the certificate files shall either be in the dvb.crl directory or in the root directory. See12.4.3.5, "CertificateFile location and naming conventions" on page 293.

12.9.1.5 Operational model

Receivers are expected to inspect the set of CRL files periodically and cache the revocation information for future use. This inspection process can assume that a file system will not normally carry certificates revoked by CRL files carried in the same file system. So, inspection of the CRL set in a file system is not a precondition to authenticating other files in that file system.

This specification does not address the reliability with which implementations are required to consider certificate revocations when authenticating files.

12.9.1.6 Examples

12.9.1.6.1 Revocation of a broadcaster's certificate

If the broadcaster B's certificate is compromised:

a) the certification authority CA01 adds the serial number of broadcaster B's certificate to its CRL

b) CA01 then sends the new CRL file to the broadcasters that use CA01

c) these broadcasters (broadcaster A for instance) broadcast the new CRL file

As soon as an MHP terminal has downloaded the new CRL file (after selecting one of broadcaster A's channel), the MHP terminal's CRL cache in persistent storage is updated. The MHP terminal is then protected against any malicious usage of the compromised certificate.

To continue authenticating applications broadcast "B" will require a new certificate.

12.9.1.6.2 Revocation of a CA's certificate.

If the CRL of CA01 becomes too big, CA01's certificate could be revoked:

a) the root certification authority RCA0 adds the serial number of CA01's certificate to its CRL

b) RCA0 sends the new CRL file to the broadcasters that use RCA0

c) these broadcasters broadcast the new CRL file

As soon as an MHP terminal has downloaded the new CRL file, its CRL cache in persistent storage for RCA0 is updated and CA01's CRL is removed from the cache (as CA01 has been revoked).

12.9.1.7 CRL format

Each CRL file contains the CRL of one certification authority.

The encoding of the CRL is defined in the ITU-T X.509 [54] is reproduced below for information. The fields Version, Time, CertificateSerialNumber correspond to fields with the same names in the certificate see 12.11, "The internet profile of X.509 (informative)" on page 322:

```
CertificateList  ::=  SEQUENCE  {
      tbsCertList                              TBSCertList,
      signatureAlgorithm                       AlgorithmIdentifier,
      signatureValue BIT STRING  }

TBSCertList  ::=  SEQUENCE  {
      version                                  Version OPTIONAL,
                                               -- if present, shall be v2
      signature                                AlgorithmIdentifier,
      issuer                                   Name,
      thisUpdate                               Time,
      nextUpdate                               Time OPTIONAL,
      revokedCertificates                      SEQUENCE OF SEQUENCE  {
      userCertificate                          CertificateSerialNumber,
      revocationDate                           Time,
      crlEntryExtensions                       Extensions OPTIONAL
                                               -- if present, shall be v2
      } OPTIONAL,
      crlExtensions                                [0]  EXPLICIT Extensions OPTIONAL
                                             -- if present, shall be v2
 }
```

12.9.1.8 Profile of CRL

The profile of fields that correspond to fields in the certificate follow the profile in 12.5, "Profile of X.509 certificates for authentication of applications" on page 294. This applies to the following fields:

signatureAlgorithm : follows "signatureAlgorithm" on page 294.

signatureValue: follows "signatureValue" on page 294.

version: follows "version" on page 294.

signature: follows "signatureAlgorithm" on page 294.

issuer: follows "issuer" on page 295.

thisUpdate: Publication date of this CRL. Follows the encoding of Time used for validity. See "validity" on page 295.

nextUpdate: Publication date of the next version of the CRL. Follows the encoding of Time used for validity. See "validity" on page 295.

userCertificate: SerialNumber of the revoked certificate. It is used to identify the revoked certificate.

The serial number shall be unique for a given CA. So, the pair [issuerName, serialNumber] shall be unique.

revocationDate: Date of revocation for a given certificate. Follows the encoding of Time used for validity. See "validity" on page 295.

crlExtensions: The syntax of the Extensions element is reproduced on "Extensions" on page 327. This element allows multiple extension elements to be carried. The set of extensions defined for certificates and CRLs is reproduced at 12.11.2, "Standard certificate extensions" on page 327.

The following crlExtension shall be supported:

- AuthorityKeyIdentifier as defined in section 12.4.2.1 on page 291.

This extension identifies the certificate that is needed to check the signature of the CRL.

Other crlExtensions are optional.

12.9.1.9 CRL Processing

List of revoked serial numbers shall be kept in persistent storage in set top box.

When an MHP terminal finds a file with the file name format given in 12.4.3.5, "CertificateFile location and naming conventions" on page 293, it shall do the following sequence:

a) Get the field thisUpdate and compare it with the last update for the CRL. If thisUpdate is not after the last update, ignore the CRL.

b) Check the signature of the CRL. If it is invalid, ignore the message.

c) Process the content of the CRL message:
- store the list of serial numbers of revoked certificates in persistent storage.
- update the stored value of thisUpdate with the value from the CRL.

d) If a CA's certificate has been revoked, remove its CRL if it was stored in the MHP terminal.

During the validation process of a certificate chain, the CRL of each certification authority on the certification path is checked.

12.9.2 Root certificate management

12.9.2.1 Introduction

Every compliant MHP terminal will have to maintain a set of X.509 root certificates in persistent storage. These root certificates will be placed in the MHP terminal by its manufacturer during the manufacturing process.

It could be necessary to update the set of root certificates for MHP terminals that are already deployed. Possible reasons that could require such an update include:

- a root certificate becoming compromised
- technical developments (such as the emergence of factorisation algorithms) that require the use of greater key lengths in root certificates to provide adequate security
- retirement of a certificate due to its age

So, It is necessary to have a standard mechanism to update this set.

NOTE: A manufacturer specific mechanism could require a different message for each manufacturer and so would be more expensive in terms of broadcast bandwidth.

The mechanism specified here uses messages called RCMM (Root Certificate Management Messages). These messages contain a set of new root certificates to add and a reference to the root certificates to remove.

12.9.2.2 Security of RCMM

RCMM are authenticated by multiple signatures. An RCMM message will be accepted by an MHP terminal if and only if it has at least N signatures.

The initial value of N and the maximum value of N that MHP terminals will ever be asked to support are specified in 12.12, "MHP certification procedures" on page 330.

NOTE: The initial value of N is expected to be 2

The use of multiple signatures guarantees that the set of root certificates can be updated securely even if one of the root certificates has been compromised.

RCMM can update the number of signatures required for future RCMM using the nextNbOfSignature field.

The RCMM message shall be signed with the key of the certificates to be removed.

12.9.2.3 Format of RCMM

The encoding of RCMM is ASN.1 DER (see ASN.1 [57]):

```
URCMM ::= SEQUENCE {
      issuer                                Name,
      thisUpdate                            Time,
      nextNbOfSignatures                    INTEGER OPTIONAL,
      addedCertificates                     SET OF Certificate
      removedCertificates                   SET OF CertificatesReference }

CertificatesReference::= SEQUENCE {
      issuerName                            Name,
      serialNumber                          CertificateSerialNumber }
```

issuer: Identification of the certification authority which has issued the message.

thisUpdate: Date of the issue of the message.

nextNbOfSignatures: This field could be used to change the minimum number of valid signatures required for an RCMM message. This value will be applied to the next RCMMs not to itself!

addedCertificates: List of root certificates to be added in persistent storage

removedCertificates: Reference of the root certificates to be removed from persistent storage

```
RCMM   ::= SEQUENCE {
      uRcmm                                 URCMM,
      signatures                            SET OF SignatureInfo }

SignatureInfo ::= SEQUENCE {
      signerName                            Name,
      signatureAlgorithm                    AlgorithmIdentifier,
      signatureValue                        BIT STRING }
```

NB: The signatures are computed on the whole content of uRCMM.

issuerName: Name of the issuer of the root certificate to remove (for a self signed root certificate this field is equal to the subject name).

serialNumber: Serial number of the root certificate to remove.

12.9.2.4 Distribution of RCMM

RCMM are distributed to the MHP terminals in the broadcast MPEG Transport Stream. The RCMM from a particular CA are supplied to at least the broadcasters that use that CA.

The RCMM shall be placed in a file named:

```
"dvb.rcmm"
```

The RCMM files are inserted on a sample basis specified by the CA. This file shall be located in root directories of the object carousels broadcast.

12.9.2.5 RCMM Processing

When an MHP terminal finds RCMM in a root directory, it shall perform the following sequence of operations:

a) Get the field thisUpdate and compare it with the last update. If thisUpdate is not after the last update, ignore the message.

b) If there is a nextNbOfSignatures in the RCMM, and if nextNbOfSignatures will be greater than the number of remaining root CAs (i.e. the number of root CA that would remain if the RCMM was processed), ignore the RCMM.

c) Get the number signatures from the RCMM, if this number is lower than the minimum required, ignore the message.

d) If the RCMM contains references to root certificates to remove, check this RCMM is signed with the keys belonging to the certificates to be removed. If at least one of these signatures is missing, ignore the RCMM message.

e) Check all the signatures of the RCMM. If any of the signatures is invalid, ignore the message.

f) Process the content of the RCMM message, add and remove root certificates according to the RCMM message.

g) Store in persistent storage the date of thisUpdate as the date of the last update.

h) If a root certificate is removed, the CRLs associated are also removed.

i) If there is a nextNbOfSignatures in the RCMM, replace the minimum number of signature required by the nextNbOfSignatures.

j) Since this process will permanently modify the terminal behaviour and is highly sensitive for security, this is allowed to have an implementation dependent enabling / confirmation step prior to performing the action (e.g. it may prompt the end user for verification). Such an enabling / confirmation step is allowed to reject this RCMM action.

The implementation shall ensure the following:

- The integrity of the persistent storage shall be kept if the power supply fails for any reason during the processing of the RCMM message.

  i.e. If the power is switched off during the processing of the RCMM message, the set of root certificates shall remain as if processing of the RCMM message had not started.

- The minimum amount of memory reserved to store the list of root certificate is specified in 12.12, "MHP certification procedures" on page 330. If there is not enough persistent storage available to process an RCMM message, it shall be ignored (to prevent inconsistencies).

12.9.2.6 Example: Renewal of a root certificate

Let's assume the root certification authority RCA has two certificates in each MHP termninal:RC0 and RC1. If RC0 is compromised, RCA may wish to renew this certificate using the following steps:

a) RCA generates a new key pair and a new self signed certificate RC2.

b) RCA provides new certificates signed by RC1 to all the entities authenticated by RCA.

c) Wait until all entities authenticated by RCA have switched to the new certificates and have stopped using RC0.

d) RCA generates an RCMM message to add RC2 and to remove RC0. This RCMM will be double signed by RC0 and RC1 keys.

e) RCA will delivers this RCMM message to the broadcasters to update the MHP terminals.

   (The broadcasting period should be long enough to update almost all of the MHP terminals in the field).

f) RCA will provide RC1 and RC2 to set top box manufacturers as the new list of root certificates to put in set top boxes.

12.10 Security on the return channel

General purpose security for the return channel is provided by the TLS (Transport Layer Security) protocol as described in RFC 2246 [63].

12.10.1 MHP functionality

When implementing return channel security the MHP shall:

- implement the cipher suites identified in section 12.10.2

The MHP is not required to implement the following:

- the server part of the TLS protocol
- compliance with SSL 3.0
- TLS client authentication

12.10.2 TLS cipher suites

The minimum set of cypher tools that implementations of the MHP profile of TLS shall implement are:

- RSA ()
- MD5
- SHA-1
- DES

More detail of this requirement is given in table 131 (see RFC 2246 [63] for definition of the terms) which identifies which methods are required in an MHP.

Table 131 : Profile of cipher suites that implementations are required to support

CipherSuite	Key Exchange	Cipher	Hash	Value (hex)	MHP status
TLS_NULL_WITH_NULL_NULL	NULL	NULL	NULL	00, 00	Required
TLS_RSA_WITH_NULL_MD5	RSA	NULL	MD5	00, 01	Required
TLS_RSA_WITH_NULL_SHA	RSA	NULL	SHA-1	00, 02	Required
TLS_RSA_EXPORT_WITH_DES40_CBC_SHA	RSA_ EXPORT	DES40_CBC	SHA-1	00, 08	Required
TLS_RSA_WITH_DES_CBC_SHA	RSA	DES_CBC	SHA-1	00, 09	Required
TLS_RSA_WITH_3DES_EDE_CBC_SHA	RSA	3DES_EDE_CBC	SHA-1	00, 0A	Required
DVB_RSA_WITH_3DES_EDE112_SHA	RSA	3DES_EDE112_CBC	SHA-1	FF, 01	Required

12.10.3 The EDE112 cipher

The DVB_RSA_WITH_3DES_EDE112_SHA cipher suite is introduced by this specification. It is the following triple encryption using 2 different DES keys:

$C = E_{K1}(D_{K2}(E_{K1}(P)))$

$P = D_{K1}(E_{K2}(D_{K1}(C)))$

This algorithm is a variant of TLS_RSA_WITH_3DES_EDE_CBC_SHA where the keys that are used in first and third stage of the encryption process are identical (i.e. k1 = k3).

12.10.4 Downloading of certificates for TLS

12.10.4.1 Introduction

Before the TLS connection can be established, the MHP has to ensure that the certificate list sent by a server contains at least one trusted certificate. In computer environment, this is simply done by checking the list of certificates against one certificate that is resident in the computer.

In the MHP environment, a downloadable application can establish a TLS session. This can be used for e.g. sensitive transactions. In such a scenario, the application knows which server to connect to, and also knows one certificate against which it can check that a given certificate chain contains the expected certificate that it knows and trusts.

The API that is used by a downloadable application is described in section 11.8.2, "APIs to Support TLS / SSL Over the Return Channel" on page 269. The process of server authentication involves the checking of the certificate chain sent by the TLS server. As described above, the application may trust a certificate that the MHP does not know about. This certificate needs then to be downloaded by the MHP before the TLS session can be established.

This section specifies how the MHP terminal identifies and manages the TLS certificates that are downloaded along with the application and how verification (or otherwise) is presented to the application).

12.10.4.2 Usage of certificate in TLS

12.10.4.2.1 When certificates are delivered with the application

One or several TLS root certificates can be optionally broadcast along with the application.

When the certificate chain sent by the TLS server is not compatible with any of the TLS root certificates sent with the application an `IOException` will be thrown.

12.10.4.2.1.1 Certificate file naming and location

To facilitate certificate chain checking the name of the certificate file shall be:

```
dvb.tls.organisation_id.application_id.x
```

where:

- "x" is an optional string discriminating certificates where necessary.
- the encoding of `organisation_id` and `application_id` are specified in 14.5, "Text encoding of application identifiers" on page 357.

Location of the TLS certificates is application type dependant. See table 132.

Table 132 : TLS certificate locator semantics

application_type	description
0x0000	reserved
0x0001	For DVB-J the TLS certificate(s) are placed in the base directory of the application as defined in 10.9.2, "DVB-J application location descriptor" on page 230.
0x0002	For DVB-HTML the TLS certificate(s) are placed at the physical root of the application as defined in 10.10.2, "DVB-HTML application location descriptor" on page 232.
0x0003…0xFFFF	

12.10.4.2.1.2 Certificate authentication

To be considered valid TLS certificates the certificate files shall be authenticated members of the same authenticated sub-tree as the application.

12.10.4.2.2 When no certificates are provided

When there are no TLS certificates sent with the application then the implementation will allow connection to be established to any server. The application can then use the JSSE API (see 11.8.2 on page 269) to retrieve the certificate chain and check that it contains what the application requires. In such a case both name and public keys need to be checked by the application if the application wants to be sure of the remote server.

12.11 The internet profile of X.509 (informative)

The text that follows summarises the technical features of RFC 2459 [58] and references the different profile decisions made for the different MHP application areas.

12.11.1 Main part of the certificate

12.11.1.1 Certificate

```
Certificate  ::=  SEQUENCE  {
        tbsCertificate       TBSCertificate,
        signatureAlgorithm   AlgorithmIdentifier,
        signatureValue       BIT STRING }
```

12.11.1.2 signatureAlgorithm

The signatureAlgorithm field contains the identifier for the cryptographic algorithm used by the CA to sign this certificate.

An algorithm identifier is defined by the following ASN.1 structure:

```
AlgorithmIdentifier  ::=  SEQUENCE {
              algorithm                OBJECT IDENTIFIER,
              parameters               ANY DEFINED BY algorithm OPTIONAL }
```

The algorithm identifier is used to identify a cryptographic algorithm. The OBJECT IDENTIFIER component identifies the algorithm. The contents of the optional parameters field will vary according to the algorithm identified.

This field MUST contain the same algorithm identifier as the signature field in the sequence TBSCertificate.

See 12.5.1, "signatureAlgorithm" on page 294.

NOTE: RFC 2459 [58] section 7.2 lists the signature algorithms supported by that profile.

For all of the currently specified algorithms possible non-NULL parameters shall be ignored.

12.11.1.3 signatureValue

The signatureValue field contains a digital signature computed upon the ASN.1 DER encoded tbsCertificate. The ASN.1 DER encoded tbsCertificate is used as the input to the signature function. This signature value is then ASN.1 encoded as a BIT STRING and included in the Certificate's signature field.

NOTE: RFC 2459 [58] section 7.2 describes in detail this process for the algorithms supported by that profile.

By generating this signature, a CA certifies the validity of the information in the tbsCertificate field. In particular, the CA certifies the binding between the public key material and the subject of the certificate.

See 12.5.2, "signatureValue" on page 294.

12.11.1.4 tbsCertificate

The field contains the names of the subject and issuer, a public key associated with the subject, a validity period, and other associated information. The tbscertificate may also include extensions.

The pair issuer / serialNumber uniquely identifies the certificate.

```
TBSCertificate  ::=  SEQUENCE  {
        version         [0]  EXPLICIT Version DEFAULT v1,
        serialNumber         CertificateSerialNumber,
        signature            AlgorithmIdentifier,
        issuer               Name,
        validity             Validity,
        subject              Name,
        subjectPublicKeyInfo SubjectPublicKeyInfo,
        issuerUniqueID  [1]  IMPLICIT UniqueIdentifier OPTIONAL,
                             -- If present, version shall be v2 or v3
        subjectUniqueID [2]  IMPLICIT UniqueIdentifier OPTIONAL,
                             -- If present, version shall be v2 or v3
        extensions      [3]  EXPLICIT Extensions OPTIONAL
                             -- If present, version shall be v3 }
```

12.11.1.5 version

This field describes the version of the encoded certificate. When extensions are used, as expected in this profile, use X.509 version 3 (value is 2). If no extensions are present, but a UniqueIdentifier is present, use version 2 (value is 1). If only basic fields are present, use version 1 (the value is omitted from the certificate as the default value).

Implementations SHOULD be prepared to accept any version certificate. At a minimum, conforming implementations MUST recognize version 3 certificates.

```
Version  ::=  INTEGER  {  v1(0), v2(1), v3(2)  }
```

Generation of version 2 certificates is not expected by implementations based on this profile.

See 12.5.3, "version" on page 294.

12.11.1.6 serialNumber

The serial number is an integer assigned by the CA to each certificate. It MUST be unique for each certificate issued by a given CA (i.e., the issuer name and serial number identify a unique certificate).

```
CertificateSerialNumber  ::=  INTEGER
```

12.11.1.7 signature

This field contains the algorithm identifier for the algorithm used by the CA to sign the certificate.

This field MUST contain the same algorithm identifier as the signatureAlgorithm field in the sequence Certificate. The contents of the optional parameters field will vary according to the algorithm identified.

If the signatureAlgorithm is different from the algorithm identifier in the signature field, the signature shall be rejected as being inconsistent.

See 12.5.1, "signatureAlgorithm" on page 294.

NOTE: RFC 2459 [58] section 7.2 lists the supported signature algorithms for that profile.

12.11.1.8 issuer

The issuer field identifies the entity who has signed and issued the certificate. The issuer field MUST contain a non-empty distinguished name (DN). The issuer field is defined as the X.501 type Name. ITU-T X.501 [53] Name is defined by the following ASN.1 structures:

```
Name::= CHOICE {
        RDNSequence }

RDNSequence::= SEQUENCE OF RelativeDistinguishedName

RelativeDistinguishedName::=
        SET OF AttributeTypeAndValue

AttributeTypeAndValue::= SEQUENCE {
        type          AttributeType,
        value         AttributeValue }

AttributeType::= OBJECT IDENTIFIER

AttributeValue::= ANY DEFINED BY AttributeType

DirectoryString::= CHOICE {
            teletexString                   TeletexString (SIZE (1..MAX)),
            printableString                 PrintableString (SIZE (1..MAX)),
            universalString                 UniversalString (SIZE (1..MAX)),
            utf8String                      UTF8String (SIZE (1.. MAX)),
            bmpString                       BMPString (SIZE (1..MAX)) }
```

The Name describes a hierarchical name composed of attributes, such as country name, and corresponding values, such as US. The type of the component AttributeValue is determined by the AttributeType; in general it will be a DirectoryString.

See 12.5.4, "issuer" on page 295.

12.11.1.9 validity

The certificate validity period is the time interval during which the CA warrants that it will maintain information about the status of the certificate. The field is represented as a SEQUENCE of two dates: the date on which the certificate validity period begins notBefore) and the date on which the certificate validity period ends (notAfter). Both notBefore and notAfter may be encoded as UTCTime or GeneralizedTime.

CAs conforming to this profile MUST always encode certificate validity dates through the year 2049 as UTCTime; certificate validity dates in 2050 or later MUST be encoded as GeneralizedTime.

```
Validity::= SEQUENCE {
        notBefore       Time,
        notAfter        Time }

Time::= CHOICE {
        utcTime         UTCTime,
        generalTime     GeneralizedTime }
```

12.11.1.9.1 UTCTime

The universal time type, UTCTime, is a standard ASN.1 type intended for representation of dates and time. UTCTime specifies the year through the two low order digits and time is specified to the precision of one minute or one second. UTCTime includes either Z (for Zulu, or Greenwich Mean Time) or a time differential.

For the purposes of this profile, UTCTime values MUST be expressed Greenwich Mean Time (Zulu) and MUST include seconds (i.e., times are YYMMDDHHMMSSZ), even where the number of seconds is zero. Conforming systems MUST interpret the year field (YY) as follows:

- Where YY is greater than or equal to 50, the year shall be interpreted as 19YY; and
- Where YY is less than 50, the year shall be interpreted as 20YY.

12.11.1.9.2 GeneralizedTime

The generalized time type, GeneralizedTime, is a standard ASN.1 type for variable precision representation of time. Optionally, the GeneralizedTime field can include a representation of the time differential between local and Greenwich Mean Time.

For the purposes of this profile, GeneralizedTime values MUST be expressed Greenwich Mean Time (Zulu) and MUST include seconds (i.e., times are YYYYMMDDHHMMSSZ), even where the number of seconds is zero. GeneralizedTime values MUST NOT include fractional seconds.

See 12.5.5, "validity" on page 295.

12.11.1.10 subject

The subject field identifies the entity associated with the public key stored in the SubjectPublicKeyInfo field. It thus represents the entity whose public key is certified. It is encoded as a Distinguished Name (see "issuer" on page 324). This name must be unique for each subject entity certified by one CA as defined by the issuer field.

12.11.1.10.1 issuerUniqueID

This field is optional and appears in X.509 v2 or v3 only. It enables to reuse the IssuerName over time. It is redundant with the issuer Name, and it is proposed here that this field be not parsed by the client.

12.11.1.10.2 subjectUniqueID

This field is optional and appears in X.509 v2 or v3 only. It enables to reuse the subjectName over time. It is redundant with the subject Name, and it is proposed here not to use this field.

The subject name may be carried in the subject field and/or the subjectAltName extension. If the subject is a CA (e.g., the basic constraints extension, as discussed in RFC 2459 [58] section 4.2.1.10, is present and the value of cA is TRUE,) then the subject field MUST be populated with a non-empty distinguished name matching the contents of the issuer field (see RFC 2459 [58] section 4.1.2.4) in all certificates issued by the subject CA. If subject naming information is present only in the subjectAltName extension (e.g., a key bound only to an email address or URI), then the subject name MUST be an empty sequence and the subjectAltName extension MUST be critical.

Where it is non-empty, the subject field MUST contain an X.500 distinguished name (DN). The DN MUST be unique for each subject entity certified by the one CA as defined by the issuer name field. A CA may issue more than one certificate with the same DN to the same subject entity.

The subject name field is defined as the X.501 type Name. Implementation requirements for this field are those defined for the issuer field (see RFC 2459 [58] section 4.1.2.4). When encoding attribute values of type DirectoryString, the encoding rules for the issuer field MUST be implemented. Implementations of this specification MUST be prepared to receive subject names containing the attribute types required for the issuer field. Implementations of this specification SHOULD be prepared to receive subject names containing the recommended attribute types for the issuer field. The syntax and associated object identifiers (OIDs) for these attribute types are provided in the ASN.1 modules in RFC 2459 [58] Appendices A and B. Implementations of this specification MAY use these comparison rules to process unfamiliar attribute types (i.e., for name chaining). This allows implementations to process certificates with unfamiliar attributes in the subject name.

In addition, legacy implementations exist where an RFC 822 name is embedded in the subject distinguished name as an EmailAddress attribute. The attribute value for EmailAddress is of type IA5String to permit inclusion of the character '@', which is not part of the PrintableString character set. EmailAddress attribute values are not case sensitive (e.g., "fanfeedback@redsox.com" is the same as "FANFEEDBACK@REDSOX.COM").

Conforming implementations generating new certificates with electronic mail addresses MUST use the rfc822Name in the subject alternative name field (see RFC 2459 [58] section 4.2.1.7) to describe such identities. Simultaneous inclusion of the EmailAddress attribute in the subject distinguished name to support legacy implementations is deprecated but permitted.

12.11.1.11 SubjectPublic Key Info

This field is used to carry the public key which is certified and identifies the algorithm with which the key is used. The algorithm is identified using the AlgorithmIdentifier structure (see "signatureAlgorithm" on page 323) and the public key is represented as a bitstring.

```
SubjectPublicKeyInfo  ::=  SEQUENCE  {
        algorithm            AlgorithmIdentifier,
        subjectPublicKey     BIT STRING  }
```

See 12.5.7, "SubjectPublic Key Info" on page 295.

NOTE: RFC 2459 [58] section 7.3 lists the supported algorithms for that profile.

12.11.1.12 Unique Identifiers

These fields may only appear if the version is 2 or 3. The subject and issuer unique identifiers are present in the certificate to handle the possibility of reuse of subject and/or issuer names over time. This profile recommends that names not be reused for different entities and that Internet certificates not make use of unique identifiers. CAs conforming to this profile SHOULD NOT generate certificates with unique identifiers. Applications conforming to this profile SHOULD be capable of parsing unique identifiers and making comparisons.

```
UniqueIdentifier  ::=  BIT STRING
```

See 12.5.8, "Unique Identifiers" on page 296.

12.11.1.13 Extensions

This field may only appear if the version is 3 and is optional. If present, this field is a SEQUENCE of one or more certificate extensions.

```
Extensions  ::=  SEQUENCE SIZE (1..MAX) OF Extension

Extension  ::=  SEQUENCE  {
        extnID      OBJECT IDENTIFIER,
        critical    BOOLEAN DEFAULT FALSE,
        extnValue   OCTET STRING  }
```

The extensions are defined in ITU-T X.509 [54].

See 12.5.9, "Extensions" on page 296.

12.11.2 Standard certificate extensions

See table 123, "Profile for standard certificate extensions" on page 296.

12.11.2.1 Authority key identifier

This extension is used where an issuer has multiple signing keys. It provides a means of finding the public key that can be used to check the signature of the certificate.

The identification can be based on either the keyIdentifier or the on the pair (authorityCertIssuer, AuthorityCertSerialNumber). It is recommended to use the pair (authorityCertIssuer, AuthorityCertSerialNumber) instead of the keyIdentifier because there is no common agreement on the way to compute a unique KeyIdentifier.

```
AuthorityKeyIdentifier ::= SEQUENCE {
  keyIdentifier             [0] KeyIdentifier           OPTIONAL,
  authorityCertIssuer       [1] GeneralNames            OPTIONAL,
  authorityCertSerialNumber [2] CertificateSerialNumber OPTIONAL }
```

12.11.2.2 Subject key identifier

This extension provides of identifying certificates that contain a particular public key.

```
SubjectKeyIdentifier ::= KeyIdentifier
```

12.11.2.3 Key usage

The key usage extension defines the purpose of the key contained in the certificate.

```
keyUsage ::= BIT STRING {
  digitalSignature      (0),
  nonRepudiation        (1),
  keyEncipherment       (2),
  dataEncipherment      (3),
  keyAgreement          (4),
  keyCertSign           (5),
  cRLSign               (6),
  encipherOnly          (7),
  decipherOnly          (8)
}
```

12.11.2.4 Private key usage period

This field is used to defined a period of validity for the private key which is different from the period of validity of the certificate. This is only meaningful for digital signature keys.

```
privateKeyUsagePeriod EXTENSION ::= {
  SYNTAX        PrivateKeyUsagePeriod
  IDENTIFIED BY id-ce-privateKeyUsagePeriod }

PrivateKeyUsagePeriod ::= SEQUENCE {
  notBefore        [0]  GeneralizedTime OPTIONAL,
```

```
  notAfter         [1]  GeneralizedTime OPTIONAL }
  ( WITH COMPONENTS {..., notBefore PRESENT} |
    WITH COMPONENTS   {..., notAfter PRESENT} )
```

12.11.2.5 Certificate policies

This field is used to define a policy defining the purpose for which the certificate may be used.

Applications may have a list of specific policies they will accept, the certificate validation software must be able to compare the policy OIDs found in the certificate to that list.

```
certificatePolicies EXTENSION ::= {
  SYNTAX      CertificatePoliciesSyntax
  IDENTIFIED BY id-ce-certificatePolicies }

CertificatePoliciesSyntax ::= SEQUENCE SIZE (1..MAX) OF PolicyInformation

PolicyInformation ::= SEQUENCE {
  policyIdentifier   CertPolicyId,
  policyQualifiers   SEQUENCE SIZE (1..MAX) OF
                     PolicyQualifierInfo OPTIONAL }

CertPolicyId ::= OBJECT IDENTIFIER

PolicyQualifierInfo ::= SEQUENCE {
  policyQualifierId          CERT-POLICY-QUALIFIER.&id
                             ({SupportedPolicyQualifiers}),
  qualifier                  CERT-POLICY-QUALIFIER.&Qualifier
          ({SupportedPolicyQualifiers}{@policyQualifierId})
          OPTIONAL }

SupportedPolicyQualifiers CERT-POLICY-QUALIFIER ::= { ... }
```

12.11.2.6 Policy mappings

This field is used to define equivalence between policies from different CA's policy Domain.

```
policyMappings EXTENSION ::= {
  SYNTAX      PolicyMappingsSyntax
  IDENTIFIED BY id-ce-policyMappings }

PolicyMappingsSyntax ::= SEQUENCE SIZE (1..MAX) OF SEQUENCE {
  issuerDomainPolicy    CertPolicyId,
  subjectDomainPolicy   CertPolicyId }
```

12.11.2.7 Subject Alternative Name

This field is used to define additional identities for the subject name of the certificate (such as an internet email address).

```
subjectAltName EXTENSION ::= {
  SYNTAX    GeneralNames
  IDENTIFIED BY id-ce-subjectAltName }

GeneralNames ::= SEQUENCE SIZE (1..MAX) OF GeneralName

GeneralName ::= CHOICE {
  otherName                 [0]  INSTANCE OF OTHER-NAME,
  rfc822Name                [1]  IA5String,
  dNSName                   [2]  IA5String,
  x400Address               [3]  ORAddress,
  directoryName             [4]  Name,
  ediPartyName              [5]  EDIPartyName,
  uniformResourceIdentifier [6]  IA5String,
  iPAddress                 [7]  OCTET STRING,
  registeredID              [8]  OBJECT IDENTIFIER }
```

12.11.2.8 Issuer Alternative Name

This field is similar to the previous one for the issuer identity.

```
issuerAltName EXTENSION ::= {
  SYNTAX      GeneralNames
  IDENTIFIED BY id-ce-issuerAltName }
```

12.11.2.9 Subject Directory attributes

This field is used to carry optional directory attributes associated with the subject.

```
subjectDirectoryAttributes EXTENSION ::= {
  SYNTAX      AttributesSyntax
  IDENTIFIED BY id-ce-subjectDirectoryAttributes }

AttributesSyntax ::= SEQUENCE SIZE (1..MAX) OF Attribute
```

12.11.2.10 Basic Constraints

This field indicates if the subject of the certificate is a certification authority and how deep a certification path may exist through that path.

This extension shall appear in every CA Certificates. It will be used to prevent unauthorised entities to act as a CA.

```
basicConstraints EXTENSION ::= {
  SYNTAX      BasicConstraintsSyntax
  IDENTIFIED BY id-ce-basicConstraints }

BasicConstraintsSyntax ::= SEQUENCE {
  cA                    BOOLEAN DEFAULT FALSE,
  pathLenConstraint     INTEGER (0..MAX) OPTIONAL }
```

12.11.2.11 Name Constraints

This field indicates a namespace within which all subject names in subsequent certificates in a certification path shall be located.

```
nameConstraints EXTENSION ::= {
  SYNTAX      NameConstraintsSyntax
  IDENTIFIED BY id-ce-nameConstraints }

NameConstraintsSyntax ::= SEQUENCE {
  permittedSubtrees          [0]  GeneralSubtrees OPTIONAL,
  excludedSubtrees           [1]  GeneralSubtrees OPTIONAL }

GeneralSubtrees ::= SEQUENCE SIZE (1..MAX) OF GeneralSubtree

GeneralSubtree ::= SEQUENCE {
  base                GeneralName,
  minimum        [0]  BaseDistance DEFAULT 0,
  maximum        [1]  BaseDistance OPTIONAL }

BaseDistance ::= INTEGER (0..MAX)
```

12.11.2.12 Policy Constraints

This field is only used in CA's certificate (i.e. not in end entity certificate). It is used to prohibit policy mapping or to require that each certificate in a path contain an acceptable policy identifier.

```
policyConstraints EXTENSION ::= {
  SYNTAX      PolicyConstraintsSyntax
  IDENTIFIED BY id-ce-policyConstraints }

PolicyConstraintsSyntax ::= SEQUENCE {
  requireExplicitPolicy   [0] SkipCerts OPTIONAL,
  inhibitPolicyMapping    [1] SkipCerts OPTIONAL }

SkipCerts ::= INTEGER (0..MAX)
```

12.11.2.13 Extended key usage field

This field is an extensions of the previous field keyUsage. It is used to define more purposes for which the certified public key may be used.

```
extKeyUsage EXTENSION ::= {
  SYNTAX      SEQUENCE SIZE (1..MAX) OF KeyPurposeId
  IDENTIFIED BY id-ce-extKeyUsage }

KeyPurposeId ::= OBJECT IDENTIFIER
```

12.11.2.14 CRL Distribution points

This field defines how CRL (Certificate revocation list) information can be obtained.

```
cRLDistributionPoints EXTENSION ::= {
  SYNTAX         CRLDistPointsSyntax
  IDENTIFIED BY  id-ce-cRLDistributionPoints }

CRLDistPointsSyntax ::= SEQUENCE SIZE (1..MAX) OF DistributionPoint

DistributionPoint ::= SEQUENCE {
  distributionPoint  [0]  DistributionPointName OPTIONAL,
  reasons            [1]  ReasonFlags OPTIONAL,
  cRLIssuer          [2]  GeneralNames OPTIONAL }

DistributionPointName ::= CHOICE {
  fullName                  [0]  GeneralNames,
  nameRelativeToCRLIssuer   [1]  RelativeDistinguishedName }

ReasonFlags ::= BIT STRING {
  unused                (0),
  keyCompromise         (1),
  cACompromise          (2),
  affiliationChanged    (3),
  superseded            (4),
  cessationOfOperation  (5),
  certificateHold       (6) }
```

12.12 MHP certification procedures

This MHP certification procedures reference is a place holder for a document that will have to be written and agreed with the root CA that describe the administration of certificates.

As defined in section 12.5.6 on page 295, each leaf certificate shall contain the organisationId in the organisation name attribute. In case there are several root certificate entities, the certificate procedure shall ensure that the leaf certificate contain the organisationId defined in ETR 162 [10] which is owned by this organisation.

12.13 Plug-ins

The security aspects for the plug-in application are the same as for any other DVB-J application. The security aspects of the delegated application cannot exceed the permissions available to the plug-in.

So, the plug-in application will normally request the set of permissions required to support a delegated application. For a delegated application that follows the security model defined in this specification (e.g. a DVB-HTML application), the plug-in shall implement a security system to grant a sub-set of these permissions to the delegated application (see annex AF, "(normative): Plug-in APIs" on page 1328). For a delegated application whose security model does not follow this specification, the plug-in can optionally implement a private security system to manage a sub-set of these permissions to the delegated application.

12.14 Applications loaded from an interaction channel

Same as for applications delivered over the broadcast channel except where specified otherwise below.

12.14.1 Permission for application loading from the return channel

The following policy covers loading of applications over the interaction channel. It includes both initial loading to start and application and dynamic loading during the lifetime of an application. It covers both the code of an application and supporting data however loaded.

- The user enters a locator specifying the location of the AIT file into the navigator:

  In this case the user implicitly gives permission for the connection to retrieve the AIT when they supply the locator.

  Applications launched by this mechanism inherit limited rights to use the return channel. Where the protocol ID is "3" the application gets rights to access the files specified by the transport protocol descriptor.

  Additional permissions can be granted by the normal permissions mechanism.

- A service has a broadcast AIT and the transport protocol for the application is type "3" so ALL files are provided by the interaction channel.

  If the application launch is initiated by another application using the listing and launching API and it is necessary to open the interaction channel before the permissions of the launched application are evident then the permissions of the launching application are considered.

  If the application launch is initiated from service selection (autostart application on a service) then the behaviour depends on policy in the MHP terminal.

NOTE: This behaviour may, for example, be controlled by a terminal user preference.

- A service has a broadcast AIT but a proportion of the files forming the application are provided via the interaction channel.

  If the permission request file and the authentication infrastructure are available without opening the interaction channel then these can be used to determine if opening the interaction channel is suitably authorised.

- An application selects a service using a locator pointing to an AIT file delivered over the return channel to perform service selection

  In this case the service selection succeeds only if the application has permission to do a service selection and the appropriate return channel access permission, as described in section 12.6.2.12.2, "Signed applications" on page 308.

If the permission request file is not available then, as above, the behaviour depends on policy in the MHP terminal.

12.15 Stored applications

Applications can be authenticated as describe in MHP 1.0.

Application authentication is modelled in two phases:

a) At time of application storage all of the certificates authenticating the application must be valid (unexpired and unrevoked) for the application to be considered authenticated.

b) At the time of application retrieval from storage if any certificate authenticating the application has been revoked then the application will be treated as failing authentication.

12.16 Inner applications and content embedded within other applications

Inner applications shall inherit the set of permissions granted to the application in which they are embedded.

13 Graphics reference model

13.1 Introduction

The MHP provides tools to control the positioning of: video on an output device, interface components such as buttons and lists, as well as raw graphical primitives.

Each screen connected to an MHP has three planes which are, from back to front, a background plane, a video plane and a graphics plane.

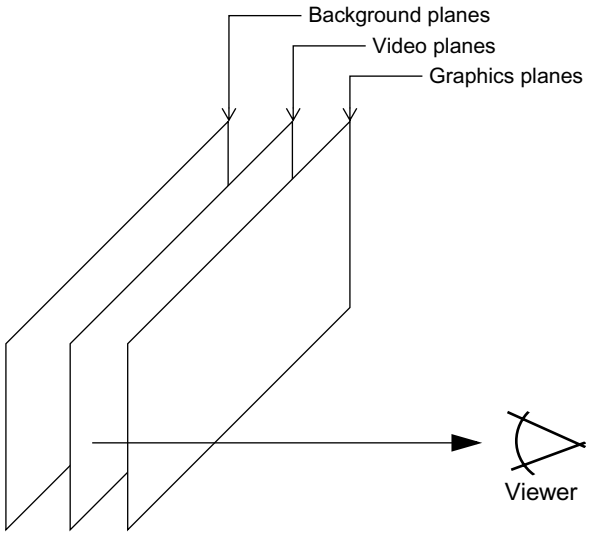


Figure 21 : Illustration of the different types of display planes

The behaviour of the subtitle plane varies between implementations. API facilities are provided to allow applications to make the behaviour predictable. See 13.5, "Subtitles" on page 349.

An application is provided with a contiguous rectangular region of the graphics plane in which it can draw (see 13.3.3, "HAVi devices and AWT components" on page 341). An application can place video, interface elements and graphics inside its rectangle on the graphic plane.

An application can also control video outside of the AWT hierarchy on the video plane, and place still images or solid colour in the background plane.

The MHP specification enables terminals to support multiple applications at any one time, each of which can have a sub area of the screen to which it can draw. The specification enables the areas to overlap. However, the minimum required support for these features is profile specific. See annex G, "(normative): Minimum Platform Capabilities" on page 442.

13.1.1 Interapplication interaction

If the presentations of different applications overlap, the areas obscured by other applications are clipped. Therefore where an application is translucent it will be blended with the video or background image behind it rather than being blended with another application.

13.2 General Issues

13.2.1 Coordinate Spaces

The MHP includes a number of coordinate systems for different purposes and includes the means to transform between these as needed:

- Input video space

  This considers post upsampling MPEG pixels.

- Device space

  Logical pixels in the various display devices. There may be different device spaces for the various device types (e. g. video and graphics).

- Normalised screen space

  Normalised coordinates relative to the output (`HScreen`).

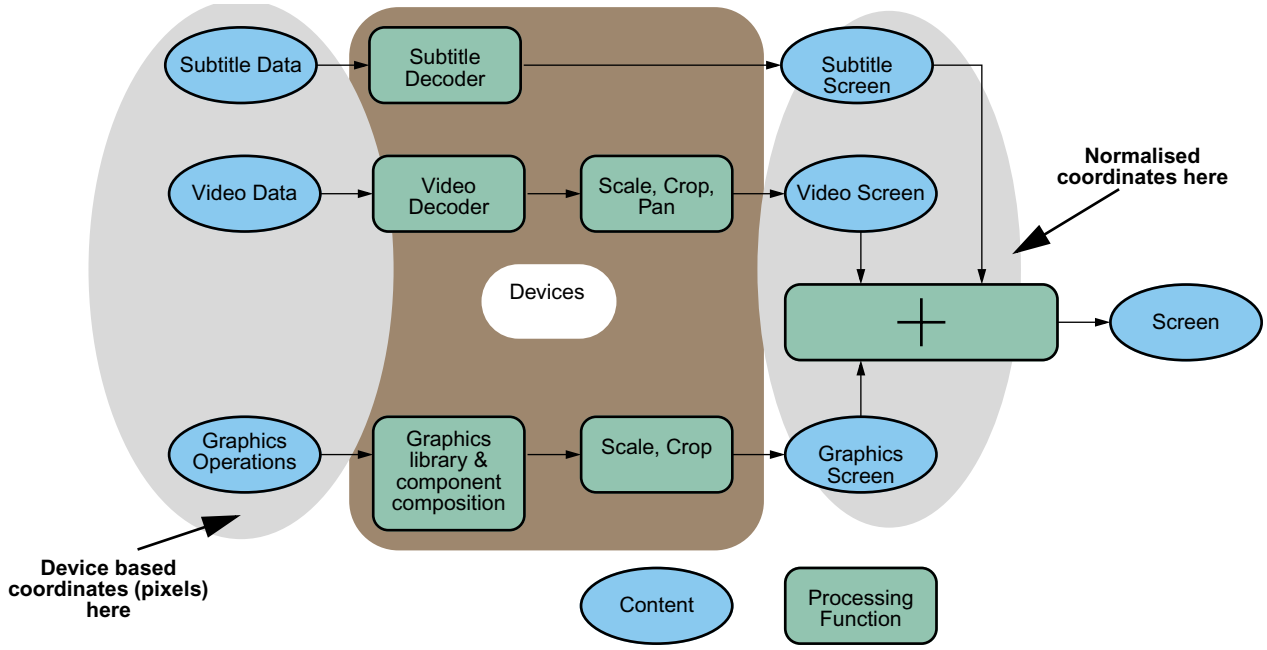


Figure 22 :

Various different interfaces provide access to different parts of the graphics and video systems using these coordinate spaces.

13.2.1.1 Normalised screen space

A normalised screen coordinate system supports references to positions and sizes in the video output from an MHP device without reference to any form of pixels.

This coordinate system describes the top left corner of the screen as {0, 0} and the bottom right corner of the screen as {1, 1}. This coordinate system is used in the positioning of graphics and video on the screen through the a number of classes in the `org.havi.ui` package and the JMF control `org.dvb.media.VideoPresentationControl`.

The normalized coordinate system is given through the `HScreen`.

13.2.1.2 User space

The coordinate space for graphics used in java.awt is defined by applications through the creation of an `HGraphicsDevice`. The root container, an instance of the class `org.havi.ui.HScene` can be placed within the normalised coordinate system. The `HSceneTemplate` class allows applications to express requirements for their top level container. Instances of this class are used by `HSceneFactory` to return instances of an `HScene`.

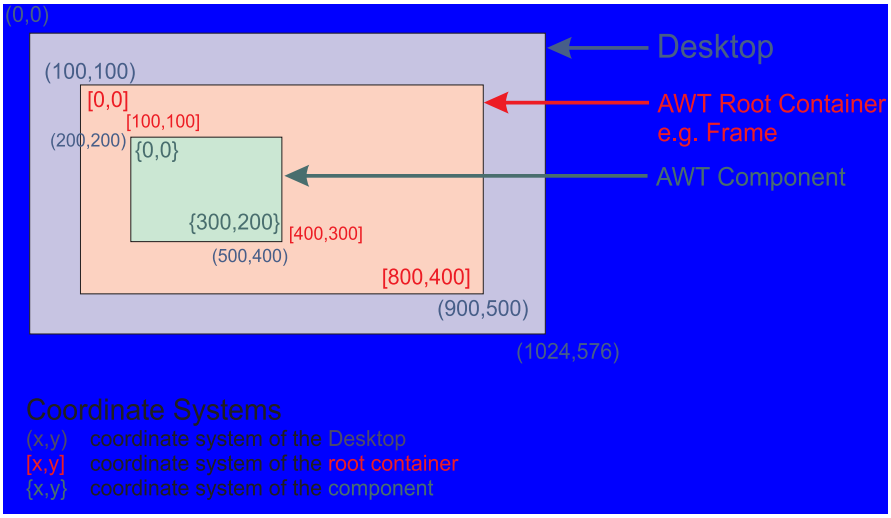


Figure 23 : AWT Coordinate system in a computer environment

Figure 23 shows the AWT coordinate system in a normal computer environment. In an MHP device the `HGraphicsDevice` can be thought of being the desktop and the `HScene` as being the AWT RootContainer. Thus an `HScene` is placed within the coordinate system of the `HGraphicsDevice`. An `HScene` itself defines a new coordinate system which pixels are aligned to those of the `HGraphicsDevice` but the origin is translated (see figure 23).

The mapping between the user space and the normalised coordinate system is done given the size and location of the `HGraphicsDevice` in the normalised coordinate system and the resolution of the `HGraphicsDevice` in pixel.

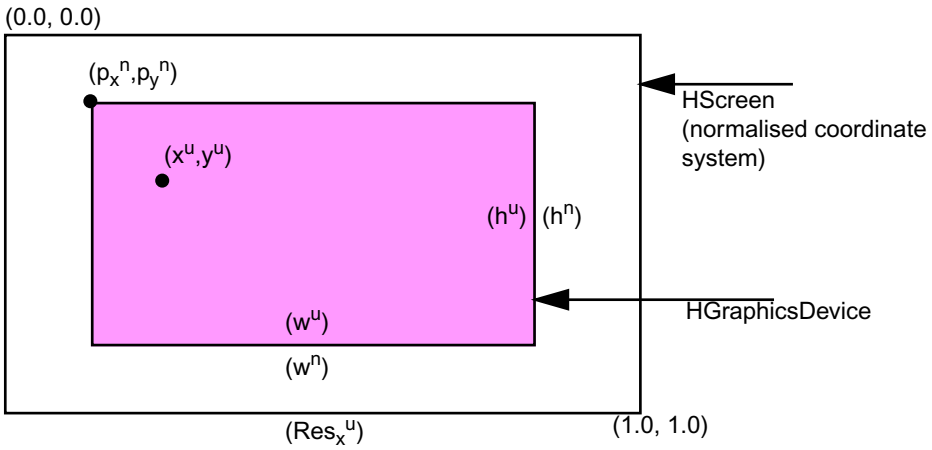


Figure 24 : Conversion between normalised and user coordinate systems

(x^n, y^n) = normalised coordinate system of `HScreen`

(x^u, y^u) = coordinate system of the `HGraphicsDevice` in pixels

x^{vu} = "virtual" user coordinate system in pixels relative to the `HScreen`

Assume the `HGraphicsDevice` has the origin of (p_x^n, p_y^n) with a dimension of (w^n, h^n) and has a pixel resolution of w^u x h^u than the point (x^u, y^u) in normalised coordinates is given by

$$x^n = \frac{x^{vu}}{Res_x{}^{vu}} \qquad y^n = \frac{y^{vu}}{Res_y{}^{vu}}$$

where

$$Res_x{}^{vu} = \frac{w^u}{w^n} \qquad Res_y{}^{vu} = \frac{h^u}{h^n}$$

is the virtual resolution of the `HScreen` in (sub)pixel and

$$x^{vu} = p_x{}^{vu} + x^u \qquad y^{vu} = p_y{}^{vu} + y^u$$

is the point (x,y) in the virtual coordinate space with

$$p_x{}^{vu} = p_x{}^n \cdot Res_x{}^{vu} \qquad p_x{}^{vu} = p_x{}^n \cdot Res_x{}^{vu}$$

being the location of the `HGraphicsDevice` in the virtual coordinate system.

Given the Point (x^n,y^n) the point (x^u,y^u) is given by

$$x^u = floor[(x^n - p_x{}^n) \cdot Res_x{}^{vu} + 0.5]$$

and

$$y^u = floor[(x^n - p_x{}^n) \cdot Res_x{}^{vu} + 0.5]$$

Given a `HGraphicsDevice` which is full screen this simplifies to

$Res_x{}^{vu}=w^u$ and $Res_y{}^{vu}=h^u$, $x^{vu} = x^u$ and $y^{vu}=y^u$ thus

$$x^n = \frac{x^u}{w^u} \qquad y^n = \frac{y^u}{h^u}$$

and

$$x^u = x^n \cdot w^u \qquad y^n = y^n \cdot h^u$$

Within the above calculations precision equivalent to a float shall be used. Conversion to integer shall only be used when the result is a point in a pixel oriented co-ordinate space (e.g. user space).

The resolution of an `HGraphicsDevice` is specified using the constant `HScreenConfigTemplate.PIXEL_RESOLUTION` with a Dimension on the `setPreference(int,Object,int)` method.

The constant `HSceneTemplate.SCENE_PIXEL_RESOLUTION` allows applications to define the dimension of an `HScene` in pixel of the `HGraphicsDevice`. The constant `SCENE_SCREEN_RECTANGLE` allows applications to define the position and size which the `HScene` should occupy on the screen in normalised coordinates.

The combination of these defines the transformation between graphics pixels and the video output from the MHP device concerned. Only a limited set of transformations are required to be supported. The `HGraphicsConfiguration` class contains methods to transform in both directions between graphics pixels and normalised coordinates.

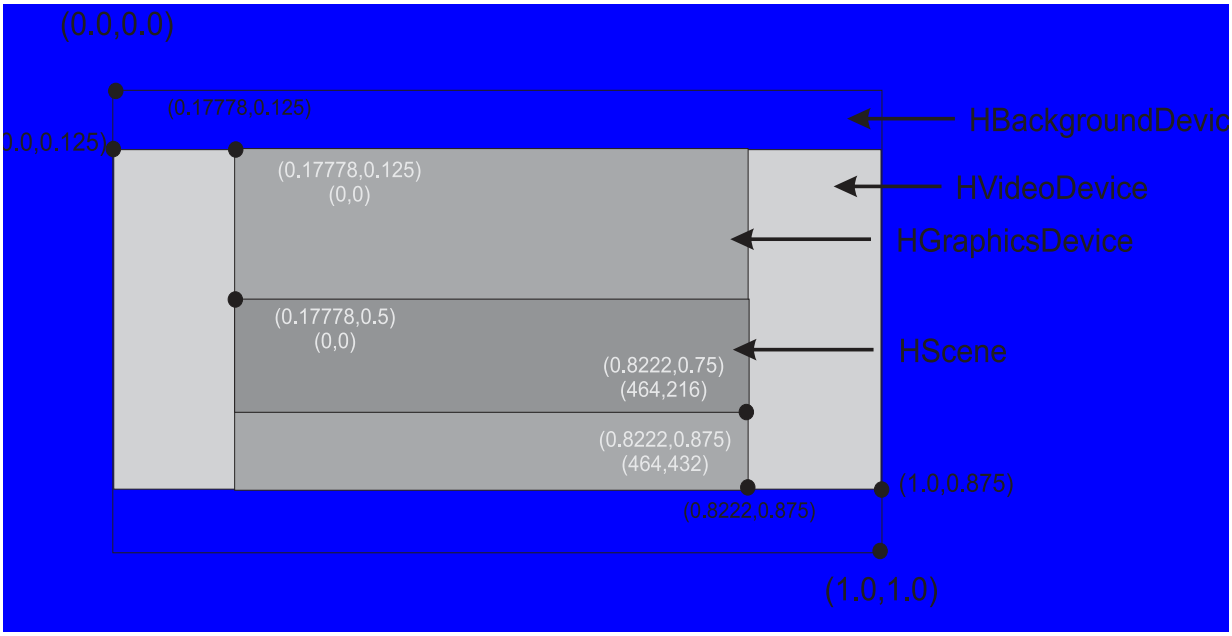


Figure 25 : Possible configuration of HAVi Devices

Figure 25 shows a possible configuration of HAVi Devices. The `HBackgroundDevice` is configured to be full screen, the `HVideoDevice` to cover the area of (0.0, 0.125) to (1.0, 0.875).

When positioning video implementations may snap the video position to an adjacent line vertically (for example, to accommodate video and display field order) or an adjacent pixel horizontally (for example, to accommodate display chroma structure). The direction of "snapping" shall always be to minimise the error relative to the requested coordinate.

In figure 25 the `HGraphicsDevice` is configured to cover the area ($0.1\overline{7}$, 0.125) to ($0.8\overline{2}$, 0.875) with a pixel resolution of 464x432.

The `HScene` can be configured by setting the preference `HSceneTemplete.SCENE_PIXEL_RECTANGLE` with a Rectangle of (0, 216, 464, 261) or by setting the preference `HSceneTemplete.SCENE_SCREEN_RECTANGLE` with a `HScreenRectangle` of ($0.1\overline{7}$, 0.5, $0.6\overline{4}$, 0.75).

In some implementations and/or configurations pixels in the `HGraphicsDevice` may not correspond to discrete physical pixels in the actual display device. For example, this may be the case when the `HGraphicsDevice` is emulated.

13.2.1.3 Pixel Aspect Ratio

A pixel orientated coordinate system does not say anything about the pixel aspect ratio. The pixel aspect ratio (AR_x^{pixel} / AR_y^{pixel}) is defined by the aspect ratio of the display ($AR_x^{display}$ / $AR_y^{display}$, 4:3 or 16:9), the area that is covered by the `HGraphicsDevice` (w^n, h^n) and the pixel resolution of the `HGraphicsDevice` (w^u, h^u). See figure 26

$$AR^{pixel} = \frac{AR_x^{pixel}}{AR_y^{pixel}} = \frac{AR_x^{display} \bullet w^n}{AR_y^{display} \bullet h^n} \bullet \frac{h^u}{w^u}$$

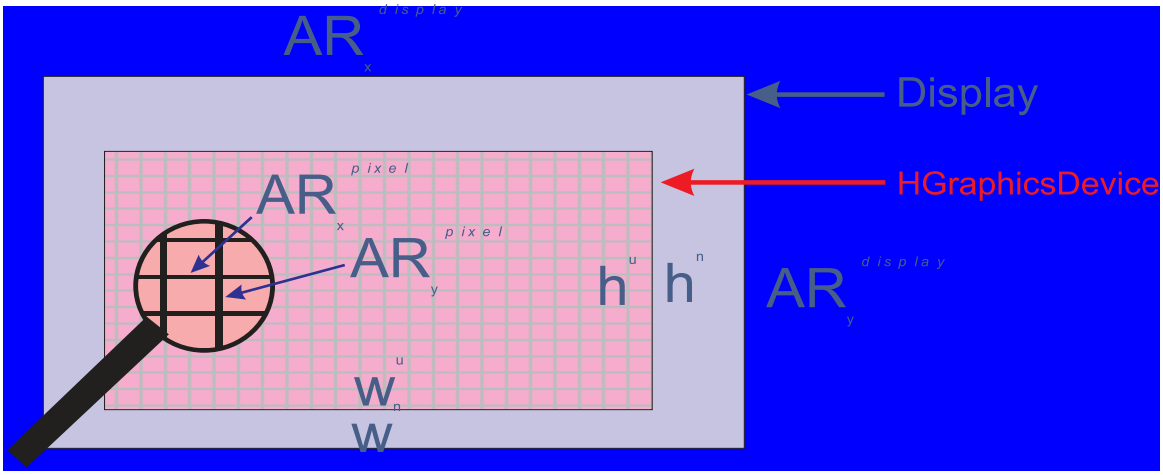


Figure 26 : Calculating the Pixel Aspect Ratio

Table 133 shows typical resolutions of a full screen `HGraphicsDevice` and the corresponding pixel aspect ratios for different display aspect ratios. The supported resolutions are defined in G, "(normative): Minimum Platform Capabilities" on page 442.

Table 133 : Typical Resolutions and their pixel aspect ratio

	4:3 Display	16:9 Display
Resolution for full screen HGraphicsDevice	Pixel Aspect Ratio	Pixel Aspect Ratio
720x576	16:15	64:45
768x576	1:1	48:36
1024x576	36:48	1:1

13.2.1.4 Video space

The coordinate space for video is that defined by the input video signal after any scaling required by the platform (e.g. that required by ETR154). Scaling and clipping of video can be achieved using the JMF control `org.dvb.media.VideoPresentationControl`. The JMF control `VideoFormatControl` allows applications to query the various transformations being performed on video as part of its decoding and presentation.

13.3 Graphics

13.3.1 Modelling of the MHP display stack composition

The following sections describes the theoretical model of the MHP display stack. Unfortunately, certain real world constraints may apply see section 13.6, "Approximations" on page 350. The "Graphics, Video and Subtitle pipeline" is illustrated in figure 27.

Figure 27 shows the conceptual model of the "graphical content" pipelines from an applications point of view. There are four sources of graphical content: subtitles, background, video and application graphics, and these four sources are mapped in a controllable way onto single screen. The figure shows the conceptual processing functions, the content stages, and application control points inside the content pipelines.

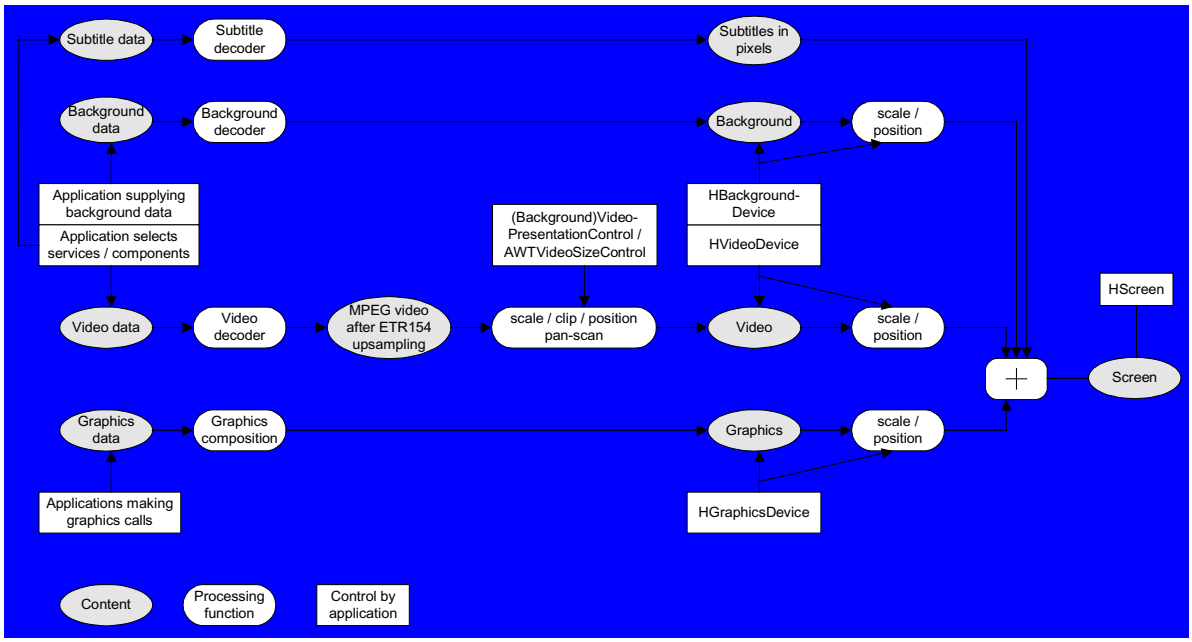


Figure 27 : Graphics, Video and Subtitle pipeline

The figure shows that applications have full control over the source of the content that enters the different pipelines. Furthermore the application may control clipping, scaling and positioning of the content at different stages in the different pipelines. Of course an application can only apply operations that are supported by the underlying system.

The clipping and positioning of subtitles follows the video. Behaviour of subtitles when video is scaled is platform dependent.

From the application author's point of view the behaviour of the graphics composition process has 3 elements:

- The AWT elements are composed following the traditional graphics model using Porter-Duff rules (see Porter-Duff [D]). The default rule used is the SRC rule.
- The background and video planes are composed using the Porter-Duff rule SRC_OVER (Note that only alpha of 0 and 1 is used in the Video planes).
- The results are composed together using the SRC_OVER rule (with the AWT results as the source and the HAVi results as the destination).

This is illustrated in figure 28.

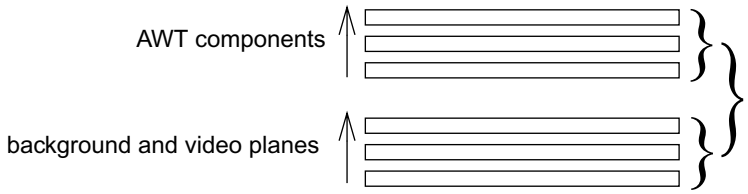


Figure 28 : Overview of AWT / HAVi plane composition

The HAVi stack has a single full screen `HBackgroundDevice` at the back. In front of this are an ordered set of zero or more `HVideoDevices`. Each of the video devices can occupy the full screen area or part of it. Any area that is not occupied behaves as transparent. The occupied areas (video pixels) are considered to be opaque and will be obscured by any video devices in front of them. Non active video devices are invisible.

Systems that support only a single video device that can display full screen (and possibly other partial screen video devices) should report the full screen capable device as the first (back most) of the video devices.

The composition rules in each group follow the traditional "painter's" algorithm i.e. composing the layers from back to front.

The Xlet AWT Root Component is transparent (as shown in figure 29) so by default the result of the HAVi video and background device composition is the background to any application graphics.

Video already running in the HVideoDevice will keep on playing when an application starts.

The stack is illustrated in figure 29.

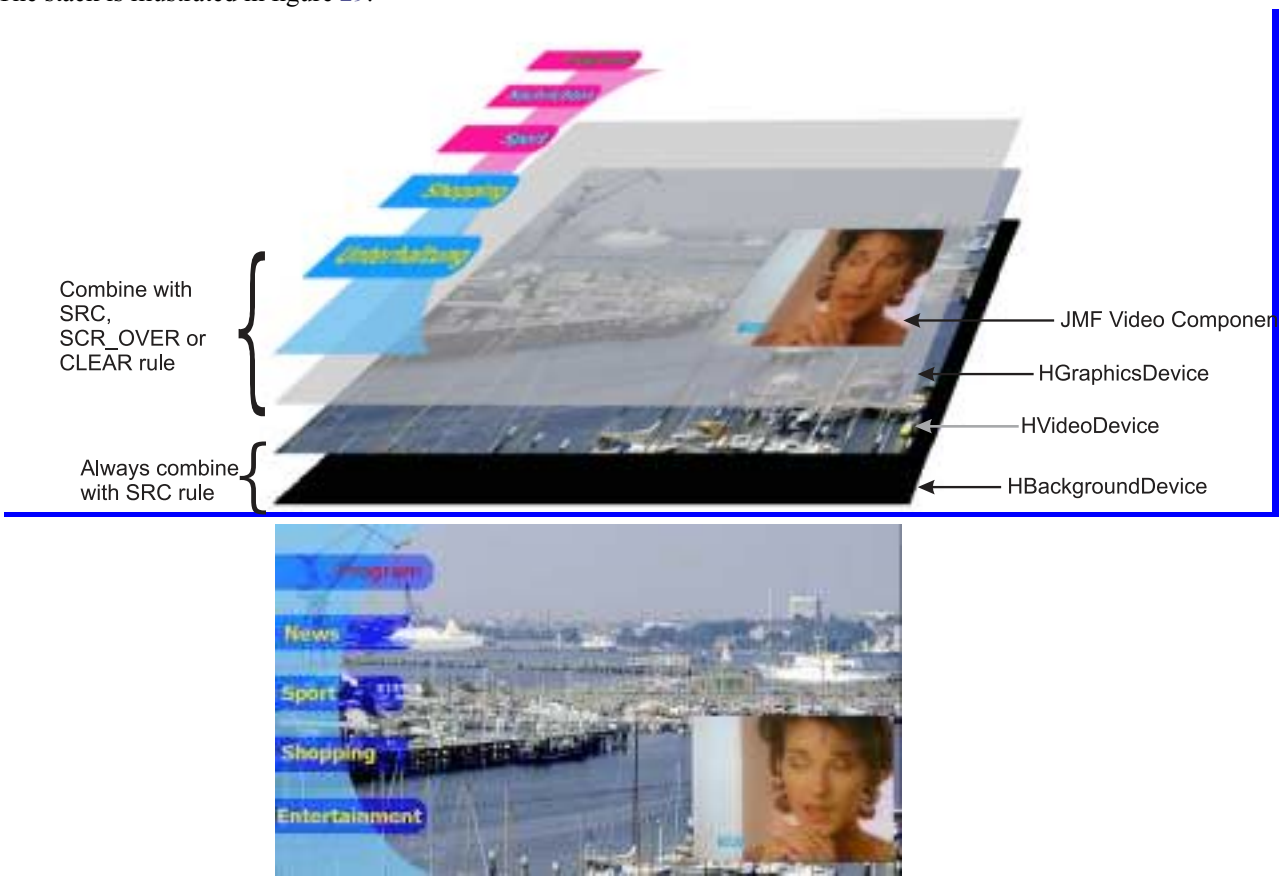


Figure 29 : The MHP display stack illustrated

13.3.2 AWT Reference Model in the MHP

In the AWT all graphics rendering of the lightweight components is done via the `java.awt.Graphics` class. When a component needs to be redrawn it issues a repaint command which gets passed from component to component from top to bottom until a heavyweight component is reached. Although there are no heavyweight components in the MHP the `HScene` can be thought of being similar to a heavyweight component. Thus in MHP devices the repaint command gets passed until it reaches the root container - the `HScene`. The repaint method of the `HScene` gets a `org.dvb.ui.`

DVBGrapahics object cast to java.awt.Graphics from the underlying implementation and calls its paint method. The paint method of the HScene does no drawing, it only calls the paint methods of its children. Before calling the paint method of a child the origin gets translated to the coordinate system of the child and the graphics object passed is clipped to the size of the child (see figure30)

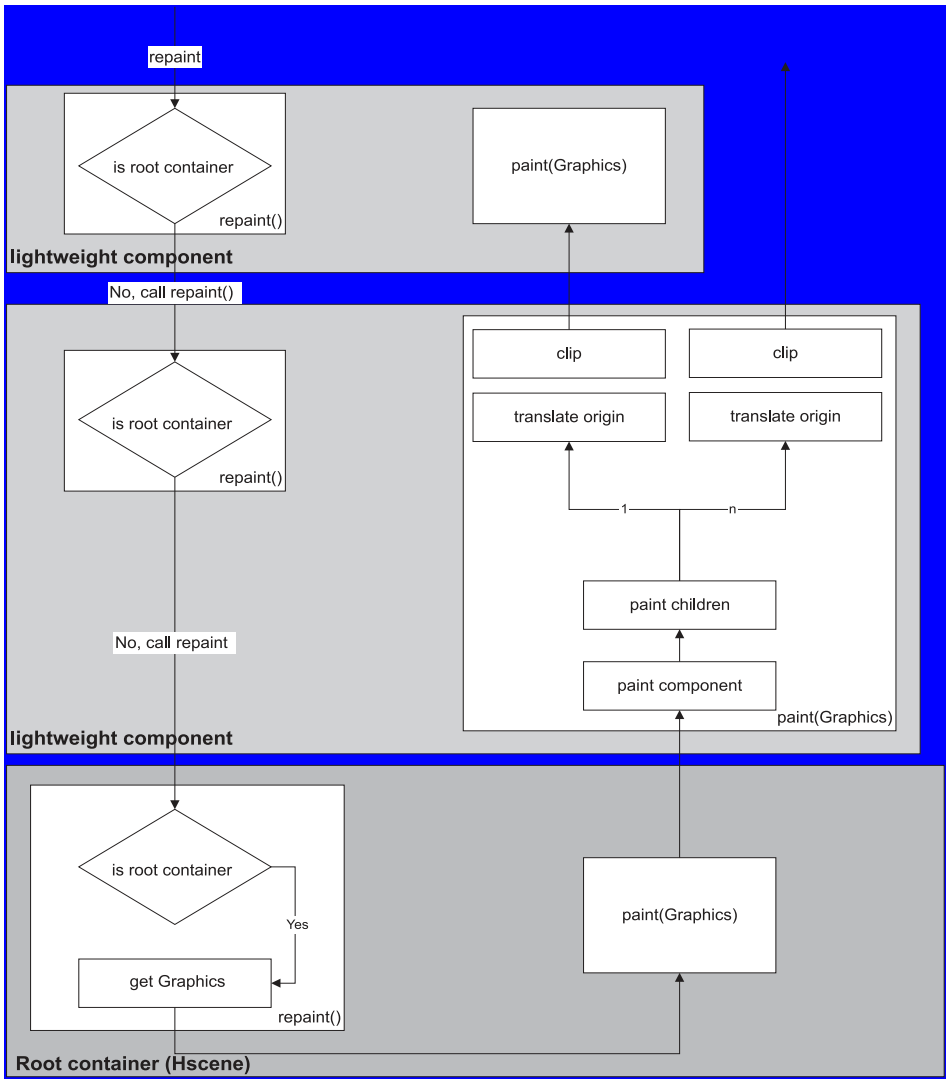


Figure 30 : Repaint model in the MHP

13.3.3 HAVi devices and AWT components

The top level user interface container for DVB-J applications is represented by the org.havi.ui.HScene class. DVB-J applications may obtain an instance of this class from an instance of org.havi.ui.HSceneFactory. The HSceneFactory class provides a number of methods which may be used to obtain an HScene depending on the specific requirements of the DVB-J application. HScene is conceptually equivalent to java.awt.Window or java.awt.Frame however it models the differing graphical environment found in many digital TV receivers. In this environment, there are typically significant constraints on what sizes and positions of top level containers may be possible.

One means for obtaining an HScene from an HSceneFactory is to populate an HSceneTemplate with a set of constraints and then request an HScene from the getBestScene() method which meets these constraints. Applications wishing to obtain a full screen sized HScene may use the getFullScreenScene() method specifying a particular graphics device on which the full screen scene should be presented. Applications wishing to ensure their graphics can cover a particular area of the screen may use the getSelectedScene() method to create an HScene meeting this requirement.

MHP terminals are allowed to support only non overlapping `HScenes`. In implementations not supporting overlapping `HScenes` following behaviour shall be implemented:

- Overlapping at creation or size change through `HSceneFactory`:

  returns a null reference if "`REQUIRED`" is used. Returns best effort if "`PREFERRED`" is used.

- Overlapping later when sizes change by awt:

  Size does not change. Fails silently.

The MHP specification provides a general model for video output devices using the model found in the HAVi specification. A final output video signal is expressed through the `org.havi.ui.HScreen` class and is the result of adding a number of different video components.

- The output of one or more graphics decoders
- The output of one or more video decoders
- The output of any special decoders, e.g. a background

An abstraction of each of these decoders is represented by an instance of a class inheriting from `HScreenDevice` - `HGraphicsDevice`, `HVideoDevice` and `HBackgroundDevice` respectively. Each of these can potentially exist in a range of configurations which are exposed by instances of classes inheriting from `HScreenConfiguration` - `HGraphicsConfiguration`, `HVideoConfiguration` and `HBackgroundConfiguration` respectively. Where devices support multiple configurations, applications may construct and populate templates to define criteria to select between configurations. These templates are classes inheriting from `HScreenConfigTemplate`.

As well as the general features, some of these sub-classes provide support for specific features of the devices concerned. `HGraphicsConfiguration` supports loading of images and listing of fonts specific to that configuration. It also support conversion between various coordinate systems. `HVideoDevice` provides access to the source of the video currently being decoded (a Locator) and provides access to the decoder object for the video currently being decoded (a `javax.media.Player`). The `HBackgroundClass` provides a means to support MPEG I-frames through the `HStillImageBackgroundConfiguration` class.

The method `HScreen.getCoherentScreenConfigurations ( HScreenConfigTemplate[] configs )` allows applications to express a common set of constraints for video, graphics and backgrounds and get back a coherent answer. In `HGraphicsConfigTemplate`, the constant `VIDEO_MIXING` allows applications to request configurations where graphics is super-imposed above video but without any requirement for pixels to be aligned. In `HScreenConfigTemplate`, there are constants to allow applications to ask for configurations as follows:-

- `VIDEO_GRAPHICS_PIXEL_ALIGNED` - video & graphics pixels are the same size and aligned
- `ZERO_VIDEO_IMPACT` - a graphics configuration must not change the existing video configuration
- `ZERO_GRAPHICS_IMPACT` - a video configuration must not change the existing graphics configuration

13.3.3.1 Video and graphics pixel aligned

The VIDEO_GRAPHICS_PIXEL_ALIGNED relationship between the pixels in the HGraphicsDevice and the pixels in the HVideoDevice is shown in figure 31. Note that the relationship applies to the pixels in HVideoDevice after "Decoder Format Conversion" processing, and the pixels in HGraphicsDevice. As a result of this relationship the following constraint holds for the configurations of HGraphicsDevice and HVideoDevice that have aligned video and graphics pixels:

- the pixel aspect ratio of the pixels in both devices is equal.

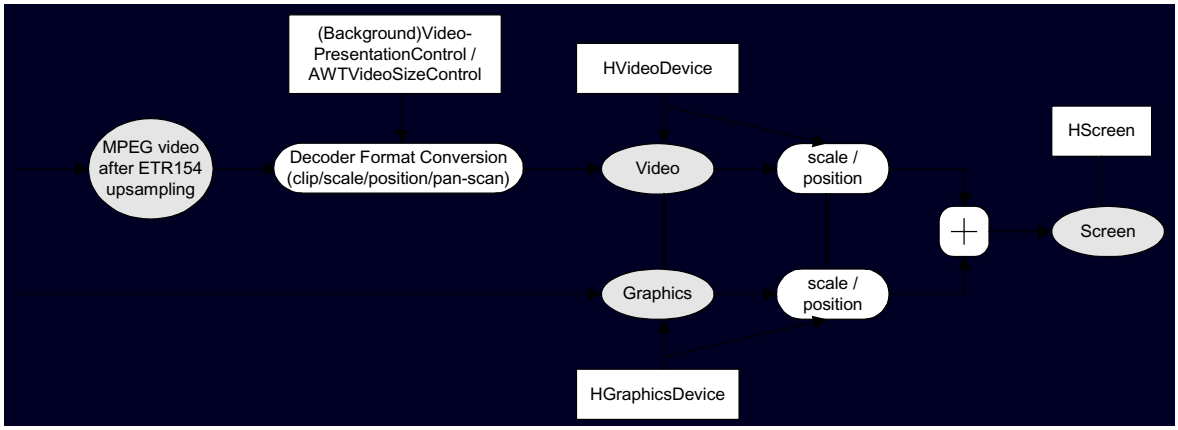


Figure 31 : Video and graphics pixel impact

13.3.3.2 Zero graphics impact

Constants ZERO_GRAPHICS_IMPACT and ZERO_VIDEO_IMPACT can be used by applications to prevent changes to the HGraphicsDevice or the HVideoDevice respectively, in the case that changes are not intended. In general a change of the configuration of the HGraphicsDevice may lead to an automatic change of the configuration of, for example, the HVideoDevice (if the application is authorised to make this change), because restricted systems may not be able to deal with the two different configurations simultaneously. Therefore an application must specify ZERO_GRAPHICS_IMPACT or ZERO_VIDEO_IMPACT in the configuration template if it does not want to change the configuration of another device.

13.3.4 Composition

13.3.4.1 AWT paint rule

The normal AWT paint rules shall be followed. That is the root container (the HScene) is painted and then its components are painted recursively.

The observed *behaviour* shall be such that of each component drawing directly into the root component. Any use of temporary storage or double buffering shall not affect the final result of the AWT composition or its subsequent composition with the result of the video composition.

The process is shown in Figure 32. The numbers in the arrows indicate the chronological order of the painting (note the root container is painted first). If a container has multiple components they get painted in the order N, N-1,…,0 where N indicates the order components are added to the parent container. (See Documentation on `java.awt.Container` in JAE 1.1.8 API [31]).

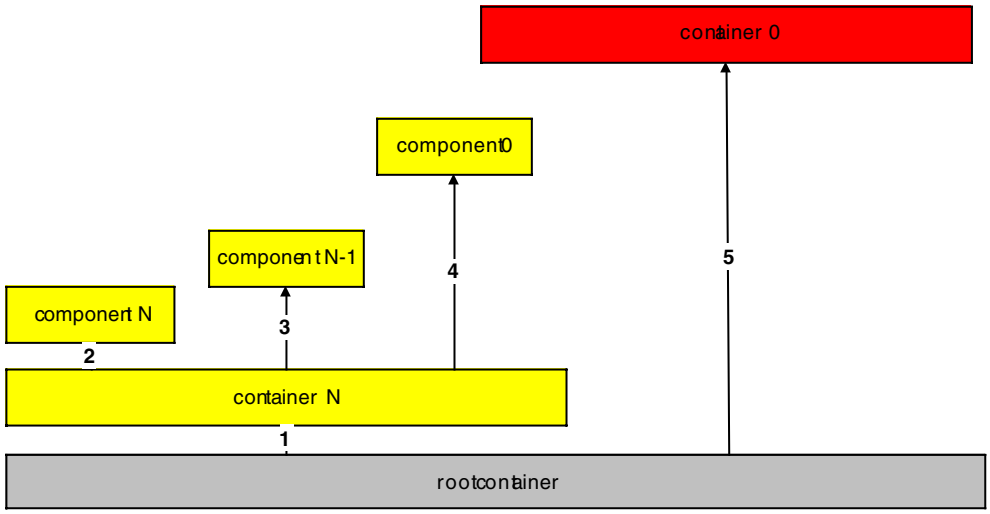


Figure 32 : Chronological order of painting

13.3.5 Composition Rules

13.3.5.1 Components generally

By setting an appropriate `DVBAlphaComposite` rule on a `DVBGraphics` and using translucent colours blending may be achieved. By repeated placement of components complex scenes can be described. In figure 33 the background picture (of the harbour) is representative of the video plane. The translucent grey rectangle is drawn into a transparent off-screen buffer using the SRC rule. The red circle is then drawn into this off-screen buffer using one of the 8 most common Porter-Duff operations. When the AWT rendering in the off-screen buffer is complete it is composited with the video using the SRC_OVER rule.



Figure 33 : Summary of the Porter-Duff rules

13.3.6 Extensions to the AWT graphics capabilities

For graphics the MHP specification mainly uses AWT facilities defined in Java 1.1.x. However, certain extensions are made.

In order to allow compositing in the MHP the graphics capabilities of the JDK1.1 have been extended by providing the `org.dvb.ui` package.

The package consist of the classes `DVBGraphics`, `DVBAlphaComposite`, `DVBBufferedImage`, `DVBColor` and one Exception. See U, "(normative): Extended graphics APIs" on page 753.

13.3.6.1 Graphics Objects in the MHP

The class `org.dvb.ui.DVBGraphics` extends the normal `java.awt.Graphics` class by adding support for alpha compositing.

In the MHP each platform-created graphics object shall be an instance of org.dvb.ui.DVBGraphics.

`DVBGraphics` and `DVBAlphaComposite` has a principle support of 8 different Porter-Duff compositing rules but not all rules have to be supported for all `DVBGraphics` Objects.

Different `DVBGraphics` Object could support different compositing rules. E.g. a `DVBGraphics` Object created using a `DVBBufferedImage` with an image type of DVBBufferedImage.TYPE_ADVANCED supports all 8 specified Porter-Duff rules, TYPE_BASIC supports only SRC, CLEAR, SRC_OVER. Application can query the available compositing rules using `DVBGraphics.getAvailableCompositingRules()`. When setting an unsupported compositing rule a `org.dvb.ui.UnsupportedDrawingOperationException` will be thrown.

The supported compositing rules are defined in G, "(normative): Minimum Platform Capabilities" on page 442.

The default compositing rule used by all graphics objects is SRC.

13.3.6.2 Buffered Image

The class `DVBBufferedImage` in the package org.dvb.ui adds the support for an accessible, transparent Image which can be used e.g. for off screen buffers. Two different platform dependent sample models are supported by `DVBBufferedImage`. When doing compositing in the `TYPE_BASE` sample model approximations may be applied (using SRC instead of SRC_OVER, see figure 41 or by approximating the alpha, see G, "(normative): Minimum Platform Capabilities" on page 442) while in the `TYPE_ADVANCED` sample model the compositing rules set by the program will be used.

`TYPE_ADVANCED` is always a direct colour model while `TYPE_BASE` can be a CLUT based colour model.

13.3.6.3 DVBColor

Note The general philosophy of this class has been to imitate the features of JDK 1.2 dealing with colour.

Unless explicitly specified otherwise, the internal implementation of the platform (e.g. `java.awt`) shall use the `org.dvb.ui.DVBColor` class instead of the `java.awt.Color` where technically possible (e.g. not the constructor for `java.awt.Color`). The class signatures shall not change. For example, where a method is specified to return `java.awt.Color` it shall return an instance of `org.dvb.ui.DVBColor`.

13.3.6.3.1 Modified packed colour representation

The most significant byte of the integer representation of an RGB colour is defined to hold an alpha value as is illustrated in figure 34. This data type is used in various of the constructors and methods described in the API documentation. It is referred to in the API documentation as TYPE_INT_ARGB.

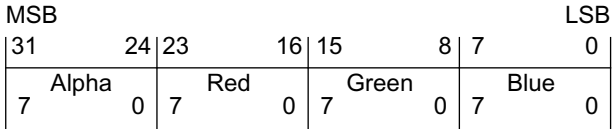


Figure 34 : MHP colour format (TYPE_INT_ARGB)

13.4 Video

13.4.1 Component-based players and background players

Video is received by the MHP as an MPEG sequence of compressed frames, each of which contains a large number of picture elements (pels) arranged in rows and columns. The MHP decodes the MPEG stream to a presented stream which may be placed either in the video plane, or in a component in the graphics plane.

These two different ways of presenting video result in having two different kinds of JMF players, a background JMF player and a component-based JMF player.

A component-based JMF player plays video inside an AWT component, and the video inside that component is positioned and scaled by positioning and resizing the component. The video is always scaled to the full size of the component. Support for component-based players is not mandatory in all profiles.

Support for background players is mandatory for broadcast streaming formats (see 7.2, "Broadcast streaming formats" on page 66).

Background JMF players play video in the video plane, outside and independent of any AWT component hierarchy.

13.4.2 Modelling MPEG decoding and presentation pipeline

Figure 35 illustrates the underlying format conversion control process in a TR 101 154 [9] compliant SD digital receiver. In this model the video decoder produces "full-screen" video from the MPEG data (i.e. the decoder resolves any sub-sampling in the MPEG broadcast). Subsequent "Decoder Format Conversion" adapts this for the display device taking account of:

- broadcast meta data (aspect ratio, pan/scan and active format description)
- display knowledge (4:3 or 16:9, and resolution)
- user preferences (e.g. display wide screen in a letterbox)

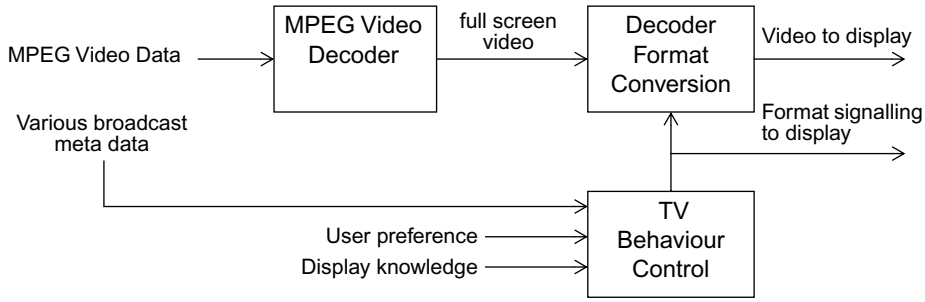


Figure 35 : Format control in TV mode

If appropriate, the video that is sent to the display is accompanied by the proper WSS or SCART signalling to indicate the format of the video that is being sent.

Note that the display device may do its own Decoder Format Conversion on top of the Decoder Format Conversion that the MHP device does. This is beyond the control of the MHP device.

The JMF players in this version of the MHP specification are "DVB ETR 154 Standard Definition" players and so act as if they are taking the full screen output of the MPEG Video Decoder as their logical input video source, as is illustrated in figure 36. In addition, there are two alternative sources of control for the "Decoder Format Conversion" process:

- Conventional TV format control behaviour (as in figure 35)
- Application format control behaviour

The selection between these behaviours is under the control of the application. Before and after the existence of an application the behaviour is that for a conventional TV. During application execution the default behaviour of the JMF player's decoder format conversion shall be the conventional TV behaviour.

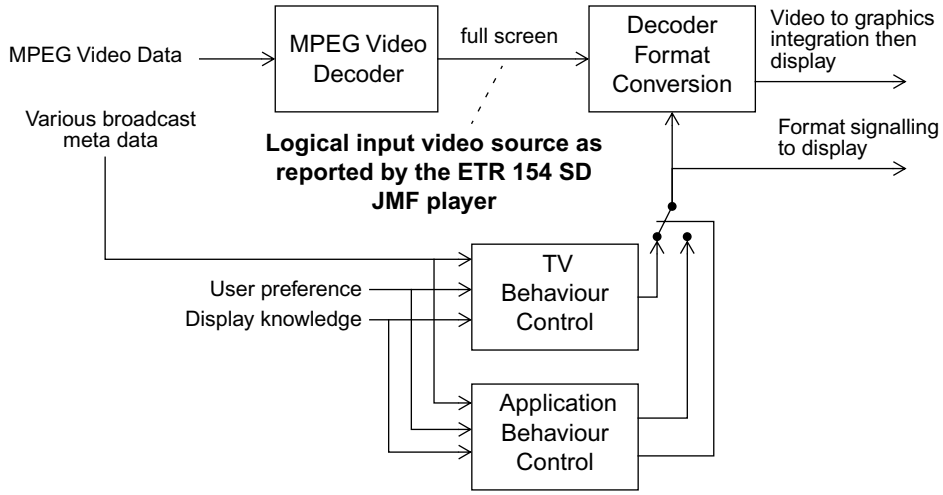


Figure 36 : Format control in the presence of a JMF player

The Decoder Format Conversion consists of three steps that are performed on the full screen input video, which may have been up-sampled by the MPEG video decoder to become full screen. As illustrated in Figure 37, these steps are clipping, scaling and positioning.

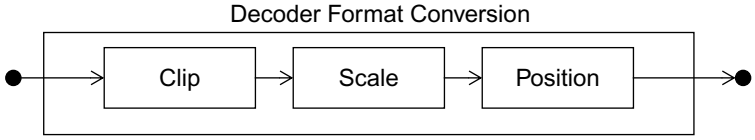


Figure 37 : Reference model for Decoder Format Conversion

An application can query the implemented capabilities of each step of the Decoder Format Conversion using the org.dvb.media.VideoPresentationControl ("VideoPresentationControl" on page 609). For instance, it can query the supported scaling factors.

An application can also set up the Decoder Format Conversion steps atomically by using an org.dvb.media.VideoTransformation object ("VideoTransformation" on page 614) that encapsulates the clipping, scaling, and positioning parameters. An application can get a number of pre-defined video transformations that correspond with standard Decoder Format Conversions like 16:9 letterboxing in a 4:3 display. It can either use these video transformations directly to set the Decoder Format Conversion, or it can change one or more parameters of the transformation before setting it. The API also offers support for querying the current video transformation.

13.4.3 Coordinate Spaces

The input to the Decoder Format Conversion block is always full screen video. If necessary, the MPEG video decoder block performs up-sampling as required by ETR154 to get full screen video.

An application expresses the video clipping in terms of the pixel-based coordinate space of the full screen video. For 50Hz SD video this is always a 720x576 raster.

Positioning of the video is expressed in the normalised coordinate space for background JMF players. For component-based JMF players, the position of the video component is expressed in the pixel-based device coordinate space (i.e., a video component is positioned like any other AWT component).

13.4.4 Video components

A scaled portion of a video can be presented as a component within the AWT hierarchy. The controls that influence this presentation are parts of AWT and JMF.

Video components are treated just like any other component. However, it shall be noted that pixels within the video have opaque colours. The mapping to the source video is provided by the video presentation control (see N, "(normative): Streamed Media API Extensions" on page 574) which allows an arbitrary portion of the video to be placed within the AWT hierarchy.

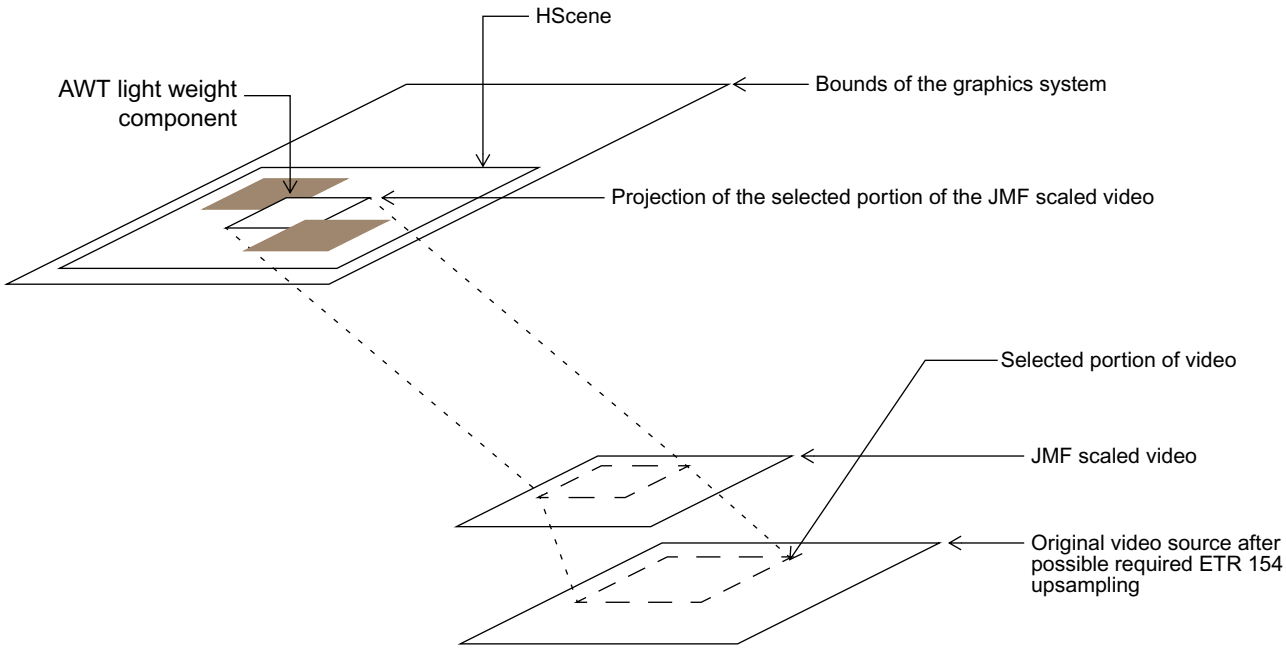


Figure 38 : Introducing video into the AWT component stack

13.5 Subtitles

13.5.1 Language and presentation setting

The following reference model shows the how the presentation of subtitles is controlled. The selection of the subtitles language depends by default on the user's preferences, the audio language and can be overridden by the application. The end user can set the subtitles on or off where the default depends on the preferences. The application can override all this and switch the subtitles off even if the user has set them on.

The figure below illustrates the decision procedure:

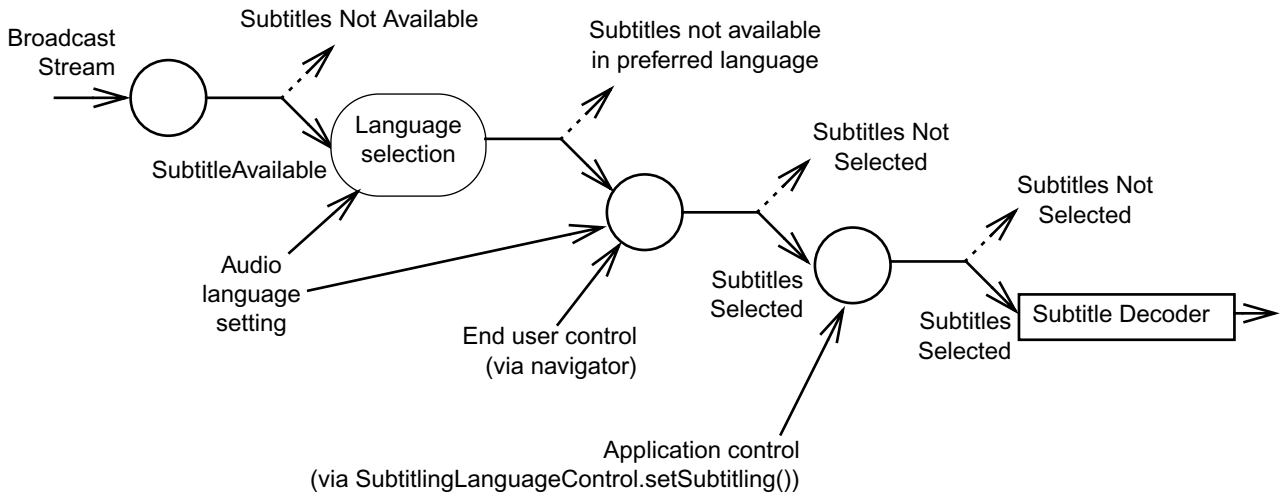


Figure 39 : Determining subtitling language and presentation setting

The DVB-J API includes a control (see "SubtitlingEventControl" on page 601) that the application can use to get notified of the state changes in the availability and presentation status of the subtitles. This corresponds to the status of the left hand side input and the right hand side output in the diagram.

The org.davic.media.SubtitlingLanguageControl allows the application to query the currently set subtitling language, override the default language setting and switch the subtitles off or let them be end user controlled. This corresponds to the language selection phase and the application controlled switch in the diagram

13.5.2 Relation to graphics

Ideally subtitles should be presented on top of the video plane but below the graphics plane(s). However, MHP terminals conforming to this specification are only required to support subtitles in areas where they are not overlapped by application graphics (i.e. by an `HScene` for a DVB-J application). The behaviour if the subtitles overlap with application graphics is non deterministic. Therefore, when presenting application graphics on screen, the application should either turn subtitles off or the broadcaster shall coordinate the use of screen area between subtitling and application graphics so that they will not overlap.

The subtitling plane is full screen and allows the subtitles to be positioned anywhere on screen. The positioning of the subtitling texts is part of the subtitling stream content and is fully controlled by the broadcaster.

13.5.3 Coordinate Spaces

Subtitles are decoded into a plane with the same coordinate system and position as the `HVideoDevice`.

13.6 Approximations

13.6.1 Approximations in composition

The MHP specification references the Porter-Duff rules for composition (see Porter-Duff [D]). The set of operations required is profile specific in addition the implementation of the compositions may be approximated in some profiles.

13.6.1.1 Implementation of modes

Typical implementations have a hardware blending process that blends the graphics plane over the video using SRC_OVER (see figure 40). This places certain practical limitations on the purity of the display model.

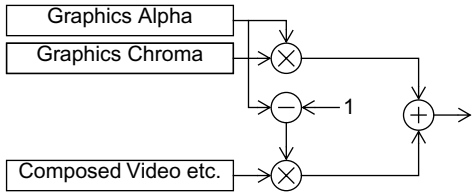


Figure 40 : Typical current technology implementation

The SRC rule simply requires that the colour and alpha characteristics of the new pixels replace those previously present.

`HVideoComponents` are treated as having an alpha of 1 so whether SRC or SRC_OVER is used when placing the video component the effect is that the video completely replaces anything previously drawn.

13.6.1.1.1 Graphics directly over video

When drawing graphics directly over a video component:

- The effect of SRC_OVER mode is as expected as the alpha value of the drawn graphics is used to control blending of the graphics with the video.

13.6.1.1.2 Graphics over other graphics

13.6.1.1.2.1 SRC

If (non-MPEG) graphics are painted over other (non-MPEG) graphics using SRC mode the result is as expected.

13.6.1.1.2.2 SRC_OVER

If (non-MPEG) graphics are painted over other (non-MPEG) graphics using SRC_OVER mode the result will be implementation dependant. Figure 41 on page 351 illustrates a variety of implementations of SRC_OVER graphics to graphics blending.

13.6.1.1.2.3 CLEAR

If (non-MPEG) graphics are painted over other (non-MPEG) graphics using the CLEAR mode the result is as expected. This operation is the same as using a source with alpha=0 and the SRC rule.

[a] Shows the logically correct result where the green and red areas mix to produce intermediate colours.

This implies a graphics to graphics blending process, it also implies a large gamut in both the chroma and alpha channels. This may not be practical in many early implementations.


The following cases illustrate simplifications of the blending scheme. These should not be considered equally good approximations:

[b] Here the graphics alpha is preserved only when it is drawn directly over a video component. When drawn over another (non-MPEG) graphic the alpha facets of the colours are considered to be 1.

[c] Here the source graphics alpha is preserved when it is drawn over a video component even if there is an intermediate semi-transparent graphic. Where the source is over opaque graphics then a graphic to graphic blend is implemented.


[d] Here the source graphics alpha becomes the hardware mixing alpha regardless of what has been drawn previously over the MPEG image.

[e] Here the source graphics alpha becomes the hardware mixing alpha in areas where the alpha is already less than 1. Where the alpha is currently 1 (i.e. over opaque graphics) the alpha remains 1.

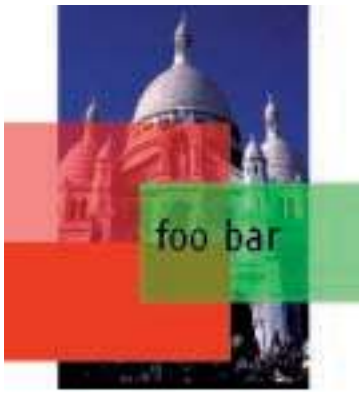

a) Perfect.


b) All graphics-graphics overlays are solid. Transparency is only preserved over video.

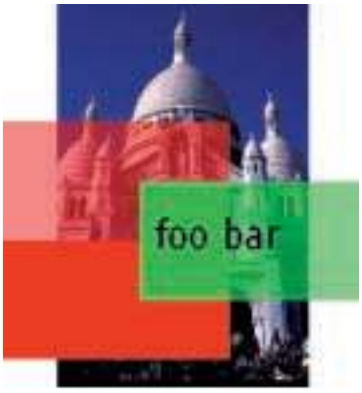




c) Transparency punches through transparent layers and blends with opaque layers.

d) Transparency is always to video and so punches through other graphics.

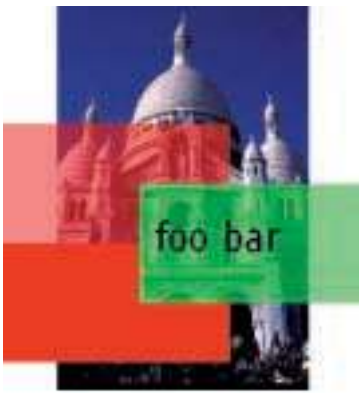

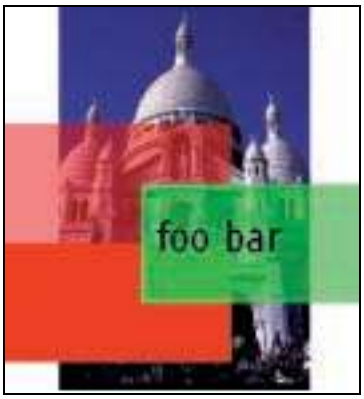

e) Transparency punches through transparent layers and graphics over solid graphics are not blended.

Figure 41 : Implementations of blending

13.6.1.2 Approximation of alpha

The precision of implementation of alpha depends on the `DVBGraphics` object concerned. The minimum requirements are specified in G, "(normative): Minimum Platform Capabilities" on page 442. The actual colour used for a given colour can be queried using `org.dvb.ui.DVBGraphics.getBestColorMatch()`.

13.6.1.3 Approximation of colour

Logically the colour model is a "true colour" one. However, colour approximation is allowed as described in G.1.5, "Colour capabilities" on page 443.

14 System integration aspects

14.1 Namespace mapping (DVB Locator)

An extended format of the DAVIC DVB URL (DAVIC 1.4.1p9 [3]) shall be used for addressing DVB-SI entities as well as files within object carousels. This extension of the DAVIC locator is backwards compatible with both the original DAVIC locator as well as the UK DTG extension (UK MHEG Profile [B]). The main extensions are support for multiple component tags for specifying a subset of the components of a service, and a specified way of referencing files in an object carousel within a service.

Using the same informal notation as used above, the following locator formats shall be used:

dvb://<original_network_id>.[<transport_stream_id>][.<service_id>[.<component_tag>{&<component_tag>}][;<event_id>]]{/<path_segments>}

or

dvb://'<textual_service_identifier>'[.<component_tag>{&<component_tag>}][;<event_id>]]{/<path_segments>}

A more formal specification of the DVB URL expressed in BNF (as used in RFC 2396 [41]) is presented below:

Table 134 : DVB URL syntax

```
dvb_url                    = dvb_scheme ":" dvb_hier_part
dvb_scheme                 = "dvb"
dvb_hier_part              = dvb_net_path | dvb_abs_path
dvb_net_path               = "//" dvb_entity [ dvb_abs_path ]
dvb_entity                 = dvb_transport_stream | dvb_service | dvb_service_component
dvb_transport_stream       = original_network_id "." transport_stream_id
dvb_service                = dvb_service_without_event [ dvb_event_constraint ]
dvb_service_component      = dvb_service_without_event "." component_tag_set [ dvb_event_constraint ]
dvb_service_without_event  = original_network_id "." [ transport_stream_id ] "." service_id |
                               "'" textual_service_identifier "'"
component_tag_set          = component_tag *( "&" component_tag )
dvb_event_constraint       = ";" event_id
original_network_id        = hex_string
transport_stream_id        = hex_string
service_id                 = hex_string
component_tag              = hex_string
event_id                   = hex_string
hex_string                 = 1*hex
hex                        = digit | "A" | "B" | "C" | "D" | "E" | "F" | "a" | "b" | "c" |
                             "d" | "e" | "f"
digit                      = "0" | "1" | "2" | "3" | "4" | "5" | "6" | "7" | "8" | "9"
dvb_abs_path               = "/" path_segments

(path_segments as defined in RFC 2396 [41])
```

It should be noted that this syntax is fully compliant with the generic syntax of URIs as specified in RFC 2396 [41] and uses the registry-based naming authority version of that. Furthermore, all generic definitions specified in RFC 2396 [41] shall be valid for the DVB URL as well (e.g. escaping of special characters within file names, etc.).

RFC 2396 [41] defines methods for path segments to include parameters (introduce with a semicolon character ";"). This specification currently makes no use of such parameters. Implementations conforming to this specification shall ignore any such parameters to ensure compatibility with future specifications.

14.1.1 dvb_entity = dvb_service

When a path is present in a URL where the dvb_entity part identifies a DVB service, the path references an object in an object carousel within the service. If the dvb_service_component element is not present there shall only be one Object Carousel in the DVB service.

14.1.2 dvb_entity = dvb_service_component

When a path is present in a URL where the dvb_entity part identifies one component of a DVB service and that component carries an object carousel stream, the path references an object in an object carousel whose "root" (i.e. DSI message) is sent within that component. In this case the component tag set shall only contain one element.

The semantics when the path is present in URL where the dvb_entity part identifies something else than the two cases described above are not specified in this specification.

14.1.3 dvb_hier_part = dvb_abs_path

When the dvb_net_path part is missing and only the dvb_abs_path is present, the URL refers to a file in a default object carousel within the current service. The "current" service is dependent on the usage context.

14.1.4 dvb_abs_path

The following restrictions apply to the dvb_abs_path part of a name:

- The total length of pathnames, separators and filename shall be less than or equal to 254 bytes long.
- The following characters are not allowed in filenames and pathnames: character null (0xC080), byte zero.
- The encoding of the filename is in UTF-8 (see 7.1.5 on page 66).
- The directory separator character (i.e. Java's path.separator property) shall be a slash character (0x2F).
- An absolute filename starts with a slash character (as indicated in the BNF above).

14.2 Reserved names

File names starting with the characters "dvb." are reserved for use as "well known" files defined in this or future specifications.

Authors shall not use file names with this form to avoid possible collision with standards defined files.

14.3 XML notation

These rules shall apply to the processing and encoding of all the files where XML is used as an encoding format in the MHP.

Rules for encoding of the XML formatted files:

- the file shall be a well-formed XML document (but not necessarily valid against the DTD specified in this version of this specification). Here 'well-formed' and 'valid' are used as defined in the XML 1.0 (see XML 1.0 [65]) specification.

NOTE: The remark on validity is included, because it is possible to be valid only relative to one DTD. Valid documents relative to a DTD specified in a later version of this specification would not be valid relative to the DTD specified in this specification - however, the rules defined here intend to provide this future-proofness and allow terminal implementations compliant with this specification to be able to process files that may be encoded according to a later version of this specification.

- the XML files may contain the XMLDecl item ("<?xml … ?>" tag) in the prologue in the beginning of the file
- all the XML files shall be formatted using the UTF-8 character encoding which is the default used in XML
- the possible XMLDecl item in the beginning of the file shall not contain an 'encoding' attribute specifying another encoding than UTF-8
- if the XMLDecl item is included in files conforming to this specification, it shall indicate XML version 1.0
- the XML file shall contain a document type declaration ("<!DOCTYPE …>" tag) where the Name is the same as the name of the root element
- the document type declaration shall contain an `ExternalID` item with the "PUBLIC" identifier and both a `PublicLiteral` and a `SystemLiteral`. This specification specifies the `PublicLiteral` that shall be used to identify the document types defined in this specification. This specification specifies a `SystemLiteral` that can be used for identifying a location where the DTD can be retrieved. The `SystemLiteral` included in the document type declaration shall point to a location where the DTD can be obtained via the Internet using the HTTP protocol as specified in this specification.
- the `PublicLiteral` is used for identifying the type of the file. For document types specified in this specification, the `PublicLiteral` shall have the following syntax:

```
"-//DVB//DTD " <document type> " " <version_number> "//EN"
```

where:

<document type> has the following syntax:

```
<document_type> = letter letters
letters = "" | letter letters
letter = uppercase_letter | lowercase_letter | space
uppercase_letter =   "A" | "B" | "C" | "D" | "E" | "F" | "G" | "H"
                       | "I" | "J" | "K" | "L" | "M" | "N" | "O"
                       | "P" | "Q" | "R" | "S" | "T" | "U" | "V"
                       | "W" | "X" | "Y" | "Z"
lowercase_letter = "a" | "b" | "c" | "d" | "e" | "f" | "g" | "h"
                       | "i" | "j" | "k" | "l" | "m" | "n" | "o"
                       | "p" | "q" | "r" | "s" | "t" | "u" | "v"
                       | "w" | "x" | "y" | "z"
space = " "
```

<version_number> has the following syntax:

```
<version_number> = major_version "." minor_version
major_version = digit digits
minor_version = digit digits
digit = "0" | "1" | "2" | "3" | "4" | "5" | "6" | "7" | "8" | "9"
digits = "" | digit digits
```

The <document_type> part of the PublicLiteral is used as an identifier of the document type. When future versions of this specification specify newer, backwards compatible versions of the document type, the <document_type> part shall not be changed and the <version_number> part shall be changed to a new version number unused in a previous version of this specification for that document type.

- the XML file shall be valid relative to the DTD identified in the ExternalId document type declaration. Here 'valid' is used as defined in the XML 1.0 specification.
- the document type declaration shall not contain a declaration part in square brackets ('[' and ']')
- where the XML type PCDATA is used in XML elements and it is specified that this contains a string (for example a file name), these strings shall not contain '<', '&' or '>' characters that might be mistaken as XML tags or references of the markup.

NOTE: Strings where these characters must be allowed should be specified to be encoded as CDATA, leading to a more complex notation but allowing those symbols to be used.

- the file shall include only tags and attributes that are defined in this specification or a later version of this specification
- the file shall not include XML entity declarations ("<!ENTITY ….>" tags)
- the file shall not include XML character or entity references (references starting with '&' character)
- the file shall not include XML processing instructions, except optionally the "<?xml …?>" XMLDecl item
- the file may include XML comments ("<!-- … -->" strings), but not within elements that are specified as PCDATA containing strings to be encoded as defined in this specification

Rules for processing of the XML formatted files in the MHP terminal:

- the parser shall use the PublicLiteral in the document type declaration in the XML file ("<!DOCTYPE …>" tag) for identifying the type of the file.
- The PublicLiteral in the document type declaration identifies the version of the DTD that is used for this file. There is no requirement for the parser to try to fetch that DTD file using the URL defined by the SystemLiteral. It is an implementation option for the parser to retrieve the DTD from that URL. If the DTD is unavailable from that URL, then the behaviour shall be platform dependent.
- The parser shall accept files that have a different version number in the PublicLiteral than the one specified in this specification for the given file type. These are probably files encoded according to a later version of this specification. From those files, the parser shall parse, recognize and handle all those elements and attributes that are part of the DTD included in this specification.
- the parser shall ignore all XML elements (start tag, end tag, and possible string between them) that are not specified in the DTD included in this specification.

NOTE: This allows extending the DTDs in the future in a future proof manner where existing terminals ignore all the elements introduced in later versions of this specification

- the parser shall ignore such attributes of XML tags that are not specified in the DTD included in this specification
- the parser shall ignore XML comments encoded as defined in the XML 1.0 specification
- the parser must accept empty XML elements specified in this specification both in their start-tag and end-tag form as well as in the empty element tag form (e.g. '<tuning value="true"></tuning>' may be used as well as '<tuning value="true"/>')
- rules for evolving the specification must ensure that the encoding of the file will always be maintained backwards compatible when these rules are followed (i.e. later versions of this specification may add new XML tags and new attributes to existing XML tags, but may not change the semantics of the existing elements)
- if the encoding of the file violates the rules defined for the encoding above, the behaviour of the parser can be platform dependent, including the possibility that the parser may completely discard such files and the system may behave as if the file is not present at all.

14.4 Network signalling

The behaviour of MHP terminals when receiving incorrect transmissions is not specified. MHP terminals may implement whatever strategy they like for this situation. It is an allowed implementation choice to pass values from the network straight through to applications without checking them for correctness. Hence API calls which are specified as returning a specific piece of information may not return a valid piece of information if the original information in the network is wrong.

14.5 Text encoding of application identifiers

Where an organisation_id or application_id is encoded in textual form it shall be encoded as follows:

- a hexadecimal representation of the value
- lower case letters
- no extra leading zeros (as would be produced by Integer.toHexString)

Where both an organisation_id and application_id are combined into an application identifier, they will be represented as a single hexadecimal number using the previously described encoding with the organisation_id as the most significant bits and the application_id as the least significant bits.

14.6 Reserved names for persistent storage

File names are restricted to `persistentstoragename` as specified in the following BNF:

```
lowalpha =  "a" | "b" | "c" | "d" | "e" | "f" | "g" | "h" | "i" |
            "j" | "k" | "l" | "m" | "n" | "o" | "p" | "q" | "r" |
            "s" | "t" | "u" | "v" | "w" | "x" | "y" | "z"

upalpha  =  "A" | "B" | "C" | "D" | "E" | "F" | "G" | "H" | "I" |
            "J" | "K" | "L" | "M" | "N" | "O" | "P" | "Q" | "R" |
            "S" | "T" | "U" | "V" | "W" | "X" | "Y" | "Z"

alpha    =  lowalpha | upalpha

digit    =  "0" | "1" | "2" | "3" | "4" | "5" | "6" | "7" |
            "8" | "9"

punct    =  "_"

persistentstoragename = alpha | digit | punct
```

14.7 Files and file names

The MHP specification defines how applications can use the names of files in order to access content held in files. It is intentionally silent about the file systems and file system namespaces of MHP terminals except as defined below.

- When an MHP application starts, the filesystem where that application is carried will be mounted into the file system namespace of the MHP terminal concerned. For a DVB-J application 11.5.1, "Broadcast Transport Protocol Access API" on page 255 defines that creating a new instance of `java.io.File(".")` will result in a reference to the base directory of the application. This base directory may be a sub-directory within this filesystem.
- MHP applications which have requested the right to access persistent storage, and had this right granted, are allowed to access the persistent file namespace. For DVB-J applications, the top level directory of this namespace is obtainable from the system property, `"dvb.persistent.root"`.
- MHP applications may have the ability to mount additional filesystems into the file system namespace of the MHP terminal concerned. DVB-J applications are allowed to use the `attach()` method on the `org.dvb.dsmcc.ServiceDomain` class in order to attach an object carousel as an additional file system. In all other methods, using a DVB locator including the `dvb_abs_path` part of the name part of the syntax shall not mount the specified object carousel file system.
- Conformant MHP applications shall not attempt to access files or file systems outside what is allowed by this specification. The consequences should they attempt to do this are undefined and implementation dependent. Platforms are allowed to choose to limit the access rights of DVB-J applications through use of platform security mechanisms, e.g. `java.io.FilePermission`.
- References to content carried in files shall either be done using names of files encoded in text or using "file:" URLs as defined in RFC 1738 [67]. File names encoded in "dvb:" URLs shall be transformed to "file:" URLs before use. For DVB-J applications, file names shall be encoded in Java String objects and "file:" URLs shall be encoded in instances of `java.net.URL`.
- Stand-alone interaction channel applications shall see a file system where the current directory is derived from the contents of the "AIT file" (see 10.4.9 on page 213). Unless the MHP terminal is certain of the complete contents of a directory in this file system, all attempts to list such contents shall fail as if an I/O error had occurred in the underlying system.

14.8 Locators and content referencing

The table below lists the types of entity which may be addressed by locators in this specification and defines the text representation for each entity. This specification does not require support for addressing any other type of entity in an MHP system by locator or URL.

Table 135 : Addressable entities, locators and their text representation (Sheet 1 of 2)

Entity	Text Representation
Transport stream	DVB locator including "dvb_transport_stream" element
Network	No standardised text representation
Bouquet	No standardised text representation
DVB Service	DVB locator including "dvb_service" element
Generic Service	No standardised text representation unless also a DVB service
DVB Event	DVB locator including "dvb_service" element and "dvb_event_constraint" element
MPEG Elementary Stream	DVB locator including "dvb_service_component" element
File	"file:" URL as defined in RFC 1738 [67] (note 1) DVB locator including "dvb_abs_path" element (note 2) "http:" URL as defined in RFC 2616 [40]. "https:" URL as defined in RFC 2818 [98].

Table 135 : Addressable entities, locators and their text representation (Sheet 2 of 2)

Entity	Text Representation
Directory	"file:" URL as defined in RFC 1738 [67] (note 1) DVB locator including "dvb_abs_path" element (note 2) "http:" URL as defined in RFC 2616 [40]. "https:" URL as defined in RFC 2818 [98].
Drip feed decoder	"dripfeed://"
NOTE 1: The hostname part of a "file:" URL shall always be the empty string. These URLs are always in the namespace of the receiver. Transmitting them across a network as part of an application is meaningless. NOTE 2: DVB locators including the "dvb_abs_path" element may be returned by MHP APIs as a mechanism to provide references to files in carousels which may not currently be mounted. These locators can only be used to mount new carousels or be translated into a "file:" URL once a new carousel has been mounted.	

The DVB specifications define two places where multiple logical service components can be carried in a single MPEG elementary stream - DVB subtitles and MPEG-2 multichannel audio. This specification does not provide locators to distinguish between multiple languages of subtitles or audio carried in a single MPEG elementary stream in this way. Hence methods returning locators for service components / elementary streams shall return the same locator regardless of any selection between such logical service components. Methods accepting locators for service components / elementary streams shall select between any such logical service components based on the rules for elementary stream selection in section 11.4.2.2, "Clarifications" on page 250.

14.9 Service identification

In the MHP, there are two mechanisms for uniquely identifying a service:

- the triplet of numeric SI identifiers:

  `original_network_id`, `transport_stream_id` and `service_id` (corresponding to identifiers with the same name defined by EN 300 468 [4] carried in the SI of the broadcast)

- a textual service identifier:

  textual_service_identifier_bytes carried in the optional Service identifier descriptor in the SDT (see 10.12.1 on page 235).

Both enable global, unique identification of a service.

The textual identifier has additional properties:

- They can identify two (or more) service instances as being the same service even if they for technical reasons have different numeric identifiers.

  It is up to the service provider to decide whether different service instances are identified as being the same service.

- They can give alternative identifications for a single service.

14.9.1 Syntax of the textual service identifier

The syntax of the textual service identifier is:

```
<service_name> "." <service_provider_domain_name>
```

where:

<service_name>: is a unique name for the service within the service provider's domain

<service_provider_domain_name>: is an Internet DNS domain name that the service provider has rights to control. The organization's administrating the Internet DNS domain names are used as a globally unique registration mechanism that allows these textual service identifiers to be globally unique names.

The <service_name> field shall follow the rules defined for Internet DNS names so that the whole textual service identifier is a valid host name to be used in the Internet DNS as defined in RFC 1035 [75].

An example of a textual service identifier is:

```
movie_channel_1.broadcaster_b.com
```

where "broadcaster_b.com" is an Internet DNS domain owned by the broadcaster and "movie_channel_1" is a unique name for the service assigned by the service provider

NOTE: The textual service identifier has the same syntax as an Internet host name and it must be assigned in a domain that the service provider has the rights to control. However, the textual service name for a service is not required to resolve to any IP address using the Internet DNS service and if it does, this version of this specification does not specify any specific services that this host should provide if contacted using the IP protocols.

14.9.2 Handling of the textual service identifiers within the MHP terminal

The MHP terminal discovers the textual service identifiers for a given service from the SDT table similarly as it discovers the existence of the service in the first place. The MHP terminal shall know the textual service identifiers for the available services in the same way that it knows the numeric identifiers: original_network_id, transport_stream_id and service_id.

When the application uses a URI referring to a DVB service, the resolution of this URI to the necessary information needed to locate the service happens in the same way regardless of if this URI contains a textual identifier or the numeric identifiers.

The URI string provided by the application shall be considered to match the one included in the SDT when the strings are the same.

15 Detailed platform profile definitions

This chapter defines the capabilities of platforms as presented to applications. Products that claim to conform to a profile shall provide at least the minimum capabilities identified for the profile. In some cases this implies that specific hardware resources are present in the platform.

Table 136 : Detailed platform profile definitions (Sheet 1 of 3)

Area	Specification	Enhanced Broadcast Profile 2	Interactive Broadcast Profile 2	Internet Access Profile 2
Static formats				
Bitmap pictures	7.1.1.3, "PNG" on page 64 + 15.1, "PNG - restrictions" on page 363	M	M	M
	7.1.1.3, "PNG" on page 64 without restrictions	n/r	n/r	n/r (note 3)
	7.1.1.4, "GIF" on page 64	n/r	n/r	n/r (note 3)
	7.1.2, "MPEG-2 I-Frames" on page 64	M	M	M
	7.1.1.2, "JPEG" on page 64 + 15.3, "JPEG - restrictions" on page 364	M	M	M
	7.1.1.2, "JPEG" on page 64	-	M	M
Audio clips	7.1.4, "Monomedia format for audio clips" on page 66	M	M	M
Video drips	7.1.3, "MPEG-2 Video "drips"" on page 64	M	M	M
Text encoding	7.1.5, "Monomedia format for text" on page 66	M	M	M
Broadcast streaming formats				
Video	7.2.2, "Video" on page 66	M	M	M
Audio	7.2.1, "Audio" on page 66	M	M	M
Subtitles	7.2.3, "Subtitles" on page 66	M	M	M
Fonts				
Built in	Character set see annex E, "(normative): Character set" on page 434, Metrics see annex D, "(normative): Text presentation" on page 421 Face: UK RNIB "Tiresias"	M	M	M
Downloadable	7.4, "Downloadable Fonts" on page 67	M	M	M
Broadcast channel protocols				
	6.2.2, "MPEG-2 Sections" on page 55	M	M	M
	6.2.5, "DSM-CC User-to-User Object Carousel" on page 55	M	M	M
	IP Multicast stack based on: 6.2.6, "DVB Multiprotocol Encapsulation" on page 56, 6.2.7, "Internet Protocol (IP)" on page 56 6.2.8, "User Datagram Protocol (UDP)" on page 56	O	Ro	M
Interaction channel protocols				
TCP/IP	6.3.3, "Transmission Control Protocol (TCP)" on page 57 6.3.2, "Internet Protocol (IP)" on page 57	-	M	M
UDP/IP	6.2.8, "User Datagram Protocol (UDP)" on page 56 6.3.2, "Internet Protocol (IP)" on page 57	-	M	M
DSM-CC U-U RPC	6.2.5, "DSM-CC User-to-User Object Carousel" on page 55 6.3.4, "UNO-RPC" on page 57 6.3.5, "UNO-CDR" on page 57	-	O	O
HTTP	6.3.7.1, "HTTP 1.1" on page 58	-	O	O
HTTP	6.3.7.2, "MHP profile of HTTP 1.0" on page 58	-	M	M
HTTPS	6.3.7.3, "HTTPS" on page 59	-	M	M

Table 136 : Detailed platform profile definitions (Sheet 2 of 3)

Area	Specification	Enhanced Broadcast Profile 2	Interactive Broadcast Profile 2	Internet Access Profile 2
Interaction Channel File System	6.4.1, "File system implemented only via the interaction channel" on page 60	-	M	M
DSMCC / HTTP hybrid	6.4.2, "Hybrid between broadcast stream and interaction channel" on page 62	-	M	M
DVB-HTML				
DVB-HTML	8, "DVB-HTML" on page 71	n/r	O (note 2)	O (note 2)
DVB-J				
Core	11.3, "Fundamental DVB-J APIs" on page 243	M	M	M
Presentation	11.4.1, "Graphical User Interface API" on page 246	M (note 1)	M (note 1)	M (note 1)
	11.4.2, "Streamed Media API" on page 250	M	M	M
Data Access	11.5.1, "Broadcast Transport Protocol Access API" on page 255	M	M	M
	11.5.2, "Support for Multicast IP over the Broadcast Channel" on page 257	O	Ro	M
	11.5.3, "Support for IP over the Return Channel" on page 258	-	M	M
	11.5.4, "MPEG-2 Section Filter API" on page 258	M	M	M
	11.5.5, "Mid-Level Communications API" on page 258	-	M	M
	11.5.6, "Persistent Storage API" on page 258	M	M	M
Service Information & Selection	11.6.1, "DVB Service Information API" on page 259	M	M	M
	11.6.2, "Service Selection API" on page 259	M	M	M
	11.6.3, "Tuning API" on page 259	M	M	M
	11.6.4, "Conditional Access API" on page 260	M	M	M
	11.6.5, "Protocol Independent SI API" on page 260	M	M	M
Common Infrastructure	11.7.1, "APIs to support DVB-J application lifecycle" on page 261	M	M	M
	11.7.2, "Application discovery and launching APIs" on page 261	M	M	M
	11.7.3, "Inter-Application and Inter-Xlet communication API" on page 263	M	M	M
	11.7.4, "Basic MPEG Concepts" on page 265	M	M	M
	11.7.5, "Resource Notification" on page 266	M	M	M
	11.7.6, "Content Referencing" on page 266	M	M	M
	11.7.7, "Common Error Reporting" on page 267	M	M	M
	11.7.8, "Plug-in APIs" on page 267	M	M	M
Security	11.8.1, "Basic Security" on page 268	M	M	M
	11.8.2, "APIs to Support TLS / SSL Over the Return Channel" on page 269	-	M	M
	11.8.3, "Additional permissions classes" on page 269	M	M	M
Others	11.9.1, "Timer Support" on page 269	M	M	M
	11.9.2, "User Settings and Preferences API" on page 270	M	M	M
	11.9.3, "Profile and version properties" on page 270	M	M	M
	11.9.4, "Non-CA smart card API" on page 271	M	M	M
Stand-alone applications	11.12.2, "Stored services" on page 281	M	M	M
Support for DVB-HTML	11.13, "Support for DVB-HTML" on page 282	O (note 2)	O (note 2)	O (note 2)

Table 136 : Detailed platform profile definitions (Sheet 3 of 3)

Area	Specification	Enhanced Broadcast Profile 2	Interactive Broadcast Profile 2	Internet Access Profile 2
Internet access	11.14, "Internet access" on page 283	-	-	M
	17, "Internet access clients" on page 369	-	-	M

NOTE 1: The javax.tv.graphics.TVContainer.getRootContainer method shall return an instance of org.havi.ui.HScene or null except when called by an embedded Xlet where the behaviour is defined in 11.13.2, "Embedded Xlets in a DVB-HTML Page" on page 282.

NOTE 2: DVB-HTML is a single option which shall only be considered included if all parts of it are included.

NOTE 3: Recommended to be implemented as part of WWW browser but outside the scope of the MHP conformance regime

Where an MHP product claims to support a feature defined as optional, recommended optional or not required in the above table, it shall be supported according to this specification, shall be subject to the MHP conformance regime and shall report that the feature is supported using the mechanisms defined in table 118, "System properties for optional feature interrogation" on page 271.

Key	
-	Not applicable
n/r	Not required
O	Optional feature in the receiver
Ro	Recommended optional feature in the receiver
M	Mandatory feature in the receiver

15.1 PNG - restrictions

Engines are required to support ALL of the PNG colour types defines in PNG Specification Version 1.0 (see table 137). Engines are responsible for mapping these colours to those used by the engine's OSD.

Any combination of PNGs with different colour types may be active at any one time. Similarly, engines are responsible for mapping RGB16 direct colour specifications to colours that the OSD can support.

Table 137 : PNG Formats

Colour Type	Allowed Bit Depths	Interpretation
0	1, 2, 4, 8, 16	Each pixel is a grayscale sample.
2	8, 16	Each pixel is an R,G,B triple.
3	1, 2, 4, 8	Each pixel is a palette index; PLTE chunk must appear.
4	8, 16	Each pixel is a grayscale sample, followed by an alpha sample.
6	8, 16	Each pixel is an R,G,B triple, followed by an alpha sample.

Where PNG graphics use colours defined in the currently active application palette these colours shall be reproduced correctly. Other colours shall be reproduced in an implementation dependent way.

Receivers should ignore gAMA (gamma) and cHRM (chromaticity) chunks in PNG files.

In this profile, all PNG graphics should be gamma corrected.

15.1.1 PNG Aspect ratios

PNG bitmaps shall carry a pHYs chunk indicating the pixel aspect ratio of the bitmap. This aspect ratio should be the same as that of the scene containing the bitmap.

The PNG specification indicates that if the aspect ratio is absent square pixels should be assumed. To avoid overriding this specification the aspect ratio should be signalled explicitly.

15.2 Minimum media formats supported by DVB-J APIs

The following table specifies the minimum set of media types that implementations of the "Enhanced Broadcast Profile 1" and "Interactive Broadcast Profile 1" shall support. It also identifies the APIs that shall provide this support:

Table 138 : Media type support required in Enhanced and Interactive Broadcast profile 1

Media type	Section Reference	API(s)
Downloadable fonts	7.4	java.awt.Font
Audio from file	7.1.4	org.havi.ui.HSound JMF
MPEG I frame images	7.1.1	org.havi.ui.HBackgroundImage
PNG images	7.1.1.3	java.awt.Image
JPEG images	7.1.1.2	java.awt.Image
DVB service	7.2	JMF
Video "drips"	7.1.3	org.dvb.media.DripFeedDataSource

15.3 JPEG - restrictions

The restricted JPEG specification is as specified in 7.1.1.2, "JPEG" on page 64 except that the "progressive DCT-based" mode is excluded.

15.4 Locale support

Support of resources for the following locales is required:

- one guaranteed one (EN.UK)
- zero (or more) implementation dependant ones

Further it is guaranteed that the default Locale shall have resources. The default Locale is implementation dependant.

16 Registry of Constants

16.1 System constants

Table 139 : Registry of constants

Entity	Value	Description
PTimerMinRepeatInterval	40 ms	This (or optionally a smaller) value shall be returned by javax.tv.util.TVTimer.getMinRepeatInterval(). See 11.9.1, "Timer Support" on page 269.
PTimerGranularity	10ms	This (or optionally a smaller) value shall be returned by javax.tv.util.TVTimer.getGranularity(). See 11.9.1, "Timer Support" on page 269.

Table 140 : Profile encoding

application profile	version			Definition
	major	minor	micro	
1	1	1	0	Enhanced Broadcast Profile 2 as defined in this specification
2	1	1	0	Interactive Broadcast Profile 2 as defined in this specification
3	1	1	0	Internet Access Profile 2 as defined in this specification

16.2 DVB-J constants

This section to be populated with the values of public final static symbols from the various Java APIs.

16.2.1 Public and Protected final static primitive fields from DVB packages

The following is a list of the values assigned for public and protected final static primitive fields defined in the DVB defined DVB-J packages:

```
public final static int org.dvb.application.AppAttributes.DVB_J_application = 1;
public final static int org.dvb.application.AppAttributes.DVB_HTML_application = 2;
public final static int org.dvb.application.AppProxy.STARTED = 0;
public final static int org.dvb.application.AppProxy.DESTROYED = 1;
public final static int org.dvb.application.AppProxy.NOT_LOADED = 2;
public final static int org.dvb.application.AppProxy.PAUSED = 3;
public final static int org.dvb.application.AppsDatabaseEvent.NEW_DATABASE = 0;
public final static int org.dvb.application.AppsDatabaseEvent.APP_CHANGED = 1;
public final static int org.dvb.application.AppsDatabaseEvent.APP_ADDED = 2;
public final static int org.dvb.application.AppsDatabaseEvent.APP_DELETED = 3;
public final static int org.dvb.application.DVBJProxy.LOADED = 5;

public final static int org.dvb.dsmcc.DSMCCObject.FROM_CACHE = 1;
public final static int org.dvb.dsmcc.DSMCCObject.FROM_CACHE_OR_STREAM = 2;
public final static int org.dvb.dsmcc.DSMCCObject.FROM_STREAM_ONLY = 3;

public final static int org.dvb.event.UserEvent.UEF_KEY_EVENT = 1;

public final static int org.dvb.io.persistent.FileAttributes.PRIORITY_LOW = 1;
public final static int org.dvb.io.persistent.FileAttributes.PRIORITY_MEDIUM = 2;
public final static int org.dvb.io.persistent.FileAttributes.PRIORITY_HIGH = 3;

public final static int org.dvb.media.PresentationChangedEvent.STREAM_UNAVAILABLE = 0;
public final static int org.dvb.media.PresentationChangedEvent.CA_FAILURE = 1;
public final static int org.dvb.media.PresentationChangedEvent.CA_RETURNED = 2;
public final static int org.dvb.media.VideoFormatControl.ASPECT_RATIO_UNKNOWN = -1;
public final static int org.dvb.media.VideoFormatControl.AFD_NOT_PRESENT = -1;
```

```
public final static int org.dvb.media.VideoFormatControl.DFC_PROCESSING_UNKNOWN = -1;
public final static int org.dvb.media.VideoFormatControl.DFC_PROCESSING_NONE = 0;
public final static int org.dvb.media.VideoFormatControl.DFC_PROCESSING_FULL = 1;
public final static int org.dvb.media.VideoFormatControl.DAR_4_3 = 1;
public final static int org.dvb.media.VideoFormatControl.ASPECT_RATIO_4_3 = 2;
public final static int org.dvb.media.VideoFormatControl.AFD_16_9_TOP = 2;
public final static int org.dvb.media.VideoFormatControl.DFC_PROCESSING_LB_16_9 = 2;
public final static int org.dvb.media.VideoFormatControl.DAR_16_9 = 2;
public final static int org.dvb.media.VideoFormatControl.ASPECT_RATIO_16_9 = 3;
public final static int org.dvb.media.VideoFormatControl.AFD_14_9_TOP = 3;
public final static int org.dvb.media.VideoFormatControl.DFC_PROCESSING_LB_14_9 = 3;
public final static int org.dvb.media.VideoFormatControl.ASPECT_RATIO_2_21_1 = 4;
public final static int org.dvb.media.VideoFormatControl.AFD_GT_16_9 = 4;
public final static int org.dvb.media.VideoFormatControl.DFC_PROCESSING_CCO = 4;
public final static int org.dvb.media.VideoFormatControl.DFC_PROCESSING_PAN_SCAN = 5;
public final static int org.dvb.media.VideoFormatControl.DFC_PROCESSING_LB_2_21_1_ON_4_3 = 6;
public final static int org.dvb.media.VideoFormatControl.DFC_PROCESSING_LB_2_21_1_ON_16_9 = 7;
public final static int org.dvb.media.VideoFormatControl.AFD_SAME = 8;
public final static int org.dvb.media.VideoFormatControl.DFC_PLATFORM = 8;
public final static int org.dvb.media.VideoFormatControl.AFD_4_3 = 9;
public final static int org.dvb.media.VideoFormatControl.AFD_16_9 = 10;
public final static int org.dvb.media.VideoFormatControl.AFD_14_9 = 11;
public final static int org.dvb.media.VideoFormatControl.AFD_4_3_SP_14_9 = 13;
public final static int org.dvb.media.VideoFormatControl.AFD_16_9_SP_14_9 = 14;
public final static int org.dvb.media.VideoFormatControl.AFD_16_9_SP_4_3 = 15;
public final static byte org.dvb.media.VideoPresentationControl.POS_CAP_OTHER = -1;
public final static byte org.dvb.media.VideoPresentationControl.POS_CAP_FULL = 0;
publicfinalstaticbyteorg.dvb.media.VideoPresentationControl.POS_CAP_FULL_IF_ENTIRE_VIDEO_ON_SCREEN=1;
public final static byte org.dvb.media.VideoPresentationControl.POS_CAP_FULL_EVEN_LINES = 3;
publicfinalstaticbyteorg.dvb.media.VideoPresentationControl.POS_CAP_FULL_EVEN_LINES_IF_ENTIRE_VIDEO_ON_
SCREEN = 4;

public final static int org.dvb.net.rc.RCInterface.TYPE_PSTN = 1;
public final static int org.dvb.net.rc.RCInterface.TYPE_ISDN = 2;
public final static int org.dvb.net.rc.RCInterface.TYPE_DECT = 3;
public final static int org.dvb.net.rc.RCInterface.TYPE_CATV = 4;
public final static int org.dvb.net.rc.RCInterface.TYPE_LMDS = 5;
public final static int org.dvb.net.rc.RCInterface.TYPE_MATV = 6;

public final static short org.dvb.si.DescriptorTag.NETWORK_NAME = 64;
public final static short org.dvb.si.DescriptorTag.SERVICE_LIST = 65;
public final static short org.dvb.si.DescriptorTag.STUFFING = 66;
public final static short org.dvb.si.DescriptorTag.SATELLITE_DELIVERY_SYSTEM = 67;
public final static short org.dvb.si.DescriptorTag.CABLE_DELIVERY_SYSTEM = 68;
public final static short org.dvb.si.DescriptorTag.BOUQUET_NAME = 71;
public final static short org.dvb.si.DescriptorTag.SERVICE = 72;
public final static short org.dvb.si.DescriptorTag.COUNTRY_AVAILABILITY = 73;
public final static short org.dvb.si.DescriptorTag.LINKAGE = 74;
public final static short org.dvb.si.DescriptorTag.NVOD_REFERENCE = 75;
public final static short org.dvb.si.DescriptorTag.TIME_SHIFTED_SERVICE = 76;
public final static short org.dvb.si.DescriptorTag.SHORT_EVENT = 77;
public final static short org.dvb.si.DescriptorTag.EXTENDED_EVENT = 78;
public final static short org.dvb.si.DescriptorTag.TIME_SHIFTED_EVENT = 79;
public final static short org.dvb.si.DescriptorTag.COMPONENT = 80;
public final static short org.dvb.si.DescriptorTag.MOSAIC = 81;
public final static short org.dvb.si.DescriptorTag.STREAM_IDENTIFIER = 82;
public final static short org.dvb.si.DescriptorTag.CA_IDENTIFIER = 83;
public final static short org.dvb.si.DescriptorTag.CONTENT = 84;
public final static short org.dvb.si.DescriptorTag.PARENTAL_RATING = 85;
public final static short org.dvb.si.DescriptorTag.TELETEXT = 86;
public final static short org.dvb.si.DescriptorTag.TELEPHONE = 87;
public final static short org.dvb.si.DescriptorTag.LOCAL_TIME_OFFSET = 88;
public final static short org.dvb.si.DescriptorTag.SUBTITLING = 89;
public final static short org.dvb.si.DescriptorTag.TERRESTRIAL_DELIVERY_SYSTEM = 90;
public final static short org.dvb.si.DescriptorTag.MULTILINGUAL_NETWORK_NAME = 91;
public final static short org.dvb.si.DescriptorTag.MULTILINGUAL_BOUQUET_NAME = 92;
public final static short org.dvb.si.DescriptorTag.MULTILINGUAL_SERVICE_NAME = 93;
public final static short org.dvb.si.DescriptorTag.MULTILINGUAL_COMPONENT = 94;
public final static short org.dvb.si.DescriptorTag.PRIVATE_DATA_SPECIFIER = 95;
public final static short org.dvb.si.DescriptorTag.SERVICE_MOVE = 96;
public final static short org.dvb.si.DescriptorTag.SHORT_SMOOTHING_BUFFER = 97;
```

```
public final static short org.dvb.si.DescriptorTag.FREQUENCY_LIST = 98;
public final static short org.dvb.si.DescriptorTag.PARTIAL_TRANSPORT_STREAM = 99;
public final static short org.dvb.si.DescriptorTag.DATA_BROADCAST = 100;
public final static byte org.dvb.si.PMTStreamType.MPEG1_VIDEO = 1;
public final static byte org.dvb.si.PMTStreamType.MPEG2_VIDEO = 2;
public final static byte org.dvb.si.PMTStreamType.MPEG1_AUDIO = 3;
public final static byte org.dvb.si.PMTStreamType.MPEG2_AUDIO = 4;
public final static short org.dvb.si.SIInformation.FROM_CACHE_ONLY = 0;
public final static short org.dvb.si.SIInformation.FROM_CACHE_OR_STREAM = 1;
public final static short org.dvb.si.SIInformation.FROM_STREAM_ONLY = 2;
public final static byte org.dvb.si.SIMonitoringType.NETWORK = 1;
public final static byte org.dvb.si.SIMonitoringType.BOUQUET = 2;
public final static byte org.dvb.si.SIMonitoringType.SERVICE = 3;
public final static byte org.dvb.si.SIMonitoringType.PMT_SERVICE = 4;
public final static byte org.dvb.si.SIMonitoringType.PRESENT_FOLLOWING_EVENT = 5;
public final static byte org.dvb.si.SIMonitoringType.SCHEDULED_EVENT = 6;
public final static byte org.dvb.si.SIRunningStatus.UNDEFINED = 0;
public final static byte org.dvb.si.SIRunningStatus.NOT_RUNNING = 1;
public final static byte org.dvb.si.SIRunningStatus.STARTS_IN_A_FEW_SECONDS = 2;
public final static byte org.dvb.si.SIRunningStatus.PAUSING = 3;
public final static byte org.dvb.si.SIRunningStatus.RUNNING = 4;
public final static short org.dvb.si.SIServiceType.UNKNOWN = -1;
public final static short org.dvb.si.SIServiceType.DIGITAL_TELEVISION = 1;
public final static short org.dvb.si.SIServiceType.DIGITAL_RADIO_SOUND = 2;
public final static short org.dvb.si.SIServiceType.TELETEXT = 3;
public final static short org.dvb.si.SIServiceType.NVOD_REFERENCE = 4;
public final static short org.dvb.si.SIServiceType.NVOD_TIME_SHIFTED = 5;
public final static short org.dvb.si.SIServiceType.MOSAIC = 6;
public final static short org.dvb.si.SIServiceType.PAL = 7;
public final static short org.dvb.si.SIServiceType.SECAM = 8;
public final static short org.dvb.si.SIServiceType.D_D2_MAC = 9;
public final static short org.dvb.si.SIServiceType.FM_RADIO = 10;
public final static short org.dvb.si.SIServiceType.NTSC = 11;
public final static short org.dvb.si.SIServiceType.DATA_BROADCAST = 12;
public final static short org.dvb.si.SIServiceType.MHP_APPLICATION = 16;

public final static int org.dvb.test.DVBTest.UNTESTED = -5;
public final static int org.dvb.test.DVBTest.UNRESOLVED = -4;
public final static int org.dvb.test.DVBTest.HUMAN_INTERVENTION = -3;
public final static int org.dvb.test.DVBTest.OPTION_UNSUPPORTED = -2;
public final static int org.dvb.test.DVBTest.FAIL = -1;
public final static int org.dvb.test.DVBTest.PASS = 0;

public final static int org.dvb.ui.DVBAlphaComposite.CLEAR = 1;
public final static int org.dvb.ui.DVBAlphaComposite.SRC = 2;
public final static int org.dvb.ui.DVBAlphaComposite.SRC_OVER = 3;
public final static int org.dvb.ui.DVBAlphaComposite.DST_OVER = 4;
public final static int org.dvb.ui.DVBAlphaComposite.SRC_IN = 5;
public final static int org.dvb.ui.DVBAlphaComposite.DST_IN = 6;
public final static int org.dvb.ui.DVBAlphaComposite.SRC_OUT = 7;
public final static int org.dvb.ui.DVBAlphaComposite.DST_OUT = 8;
public final static int org.dvb.ui.DVBBufferedImage.TYPE_ADVANCED = 20;
public final static int org.dvb.ui.DVBBufferedImage.TYPE_BASE = 21;
public final static int org.dvb.ui.DVBTextLayoutManager.HORIZONTAL_START_ALIGN = 1;
public final static int org.dvb.ui.DVBTextLayoutManager.HORIZONTAL_END_ALIGN = 2;
public final static int org.dvb.ui.DVBTextLayoutManager.HORIZONTAL_CENTER = 3;
public final static int org.dvb.ui.DVBTextLayoutManager.VERTICAL_START_ALIGN = 4;
public final static int org.dvb.ui.DVBTextLayoutManager.VERTICAL_END_ALIGN = 5;
public final static int org.dvb.ui.DVBTextLayoutManager.VERTICAL_CENTER = 6;
public final static int org.dvb.ui.DVBTextLayoutManager.LINE_ORIENTATION_HORIZONTAL = 10;
public final static int org.dvb.ui.DVBTextLayoutManager.LINE_ORIENTATION_VERTICAL = 11;
public final static int org.dvb.ui.DVBTextLayoutManager.START_CORNER_UPPER_LEFT = 20;
public final static int org.dvb.ui.DVBTextLayoutManager.START_CORNER_UPPER_RIGHT = 21;
public final static int org.dvb.ui.DVBTextLayoutManager.START_CORNER_LOWER_LEFT = 22;
public final static int org.dvb.ui.DVBTextLayoutManager.START_CORNER_LOWER_RIGHT = 23;
```

16.2.2 Public and Protected final static primitive fields from standard Java packages

These constants are recorded in the following documents:

- JAE 1.1.8 const [72]
- JAE 1.2.2 const [73]
- JMF const [74]

NOTE: The constants for Java TV [51] are within that specification. JSSE [60] introduces no constants.

17 Internet access clients

17.1 Referencing DVB services and content within WWW content

MHP internet access clients shall support the following mechanisms of referencing DVB services & content from within WWW content.

- Use of a reference to a DVB service in an HTML "href" shall launch that DVB service in the same way as is done by MHP applications using the MHP service selection API or the end user of the MHP terminal using the navigator to select DVB services.

MHP internet access clients which support a particular element.attribute from tables 12, "Use of ContentType attribute on elements" on page 83 and 14, "Use of MIME media type by element" on page 84 to a specific MIME type listed in the table shall support the DVB-HTML behaviour defined for that type of reference. This applies to the following MIME types only:

audio/mpeg, video/mpeg

multipart/dvb.service

NOTE: MHP applications shall only be started in response to selection of a reference to a DVB service. All MHP applications run in the scope of a DVB service and cannot run on their own outside of a service of some type.

17.2 Minimum requirements for internet clients

The following table defines some minimum network protocols which shall be supported by those internet client applications which form part of the MHP internet access profile.

Table 141 :

Internet Client Application	Minimum required protocols
WWW browser	HTTP (see 6.3.7.2, "MHP profile of HTTP 1.0" on page 58) HTTPS (see 6.3.7.3, "HTTPS" on page 59)
Email client	SMTP for sending email (see SMTP [93]) or HTTP to a WebMail server. Protocols for receiving email are implementation dependent.
Usenet news	NNTP (NNTP [94]) or HTTP to a WebNews server.

WWW browser internet clients shall support use of the "mailto" URL as defined in RFC 2368 [100].

Email internet clients shall support use of the "http" URL as defined in section 3.2.2 of RFC 2616 [40].

17.3 Internet streamed media

There is no requirement for MHP terminals to support internet streaming media content however where these are both supported and visible to DVB-J applications, it shall be done using the Java Media Framework (Java Media Player Specification [33]).

Annex A (normative): External references; errata, clarifications and exemptions

This section lists known errata in normative external references, as well as clarifications to those references and/or exemptions from requirements in those specifications.

A.1 JAE 1.1.8 API [31]

A.1.1 java.lang.ThreadGroup.getParent()

This specification is considered to include:

> This method may throw a security exception.

A.1.2 java.net.URLconnection.setFileNameMap

The method `java.net.URLconnection.setFileNameMap` is considered to specify:

> If there is a security manager, its `checkSetFactory` method is called with no arguments. This may result in a security exception.

A.1.3 java.util.Locale.setDefault

This specification is considered to include:

> This method may throw a security exception.

A.1.4 java.lang.Class

The following clarifications are considered to be part of this specification:

> Reflective operations, such as Class.forName(String) shall cause class initialization of the given class, if the call succeeds and the class had not previously been initialized.

A.1.5 java.awt.Font

Where an MHP terminal does not have available a font matching the specification of the parameters passed to the constructor of the `java.awt.Font class`, the implementation shall silently approximate to a font which is available. No runtime error or exception shall be thrown by the constructor. The approximation shall not be visible to implementations through any of the methods on the returned instance of `java.awt.Font`.

A.2 Java Language Spec [32]

A.2.1 java.lang.ThreadGroup.getParent()

This method may throw a security exception.

A.2.2 java.lang.Runtime.runFinalizersOnExit()

This method may throw a SecurityException

A.2.3 java.lang.System.runFinalizersOnExit()

This method may throw a SecurityException

A.3 Java Media Player Specification [33]

A.3.1 javax.media.protocol.URLDataSource.sources

The `javax.media.protocol.URLDataSource.sources` field shall be considered not to be present. So, any reference to it will fail.

A.4 Java VM [34]

The following clarifications are considered to be part of this specification:

- As described in sections 12.1.2 and 12.3.1 of Java Language Spec [32], class file verification is mandatory for all implementations that conform to Java VM [34].
- Resolving a class causes its superinterfaces to be resolved.
- As specified in section 13.1 of Java Language Spec [32], the target of the invokeinterface instruction's method invocation must support the referenced interface. If it does not, an IncompatibleClassChangeError shall be raised when the invokeinterface instruction is executed.

NOTE: This is described on page 282 of Java VM2 [F].

Additionally for MHP terminals:

- MHP terminals are exempt from implementing class finalization, as required by section 2.16.8 of Java VM [34].

NOTE: As noted in the appendix of Java VM2 [F], class finalization has not been implemented, and it is not required in the 2nd edition of the VM specification.

A.5 Java TV [51]

The following is considered to be present:

All methods in JavaTV whose name is of the form removeXXXXListener, shall have no effect if the listener concerned is not registered.

A.5.1 javax.tv.service.selection

A.5.1.1 PresentationTerminatedEvent

The following specification additions are considered to be present:

When a call to `ServiceContext.select()` fails for a service context in the not presenting state, the following table defines how the reason code for the `PresentationTerminatedEvent` shall be derived from the reason code of the `SelectionFailedEvent` which first notified applications of the failure of the method call.

Table A.1 : Reason code mapping

SelectionFailedEvent reason code	PresentationTerminatedEvent reason code
CA_REFUSAL	ACCESS_WITHDRAWN
CONTENT_NOT_FOUND	SERVICE_VANISHED
INSUFFICIENT_RESOURCES	RESOURCES_REMOVED
MISSING_HANDLER	RESOURCES_REMOVED
TUNING_FAILURE	TUNED_AWAY

No equivalent of the reason code `SelectionFailedEvent.INTERRUPTED` shall be generated for service contexts formerly in the `not_presenting` state since by definition, another selection is in process on the service context concerned.

In the definition of the `USER_STOP` code, replace "The user" with "An application or the end user.

A.5.1.2 ServiceContext.select(Locator [])

a) The following text shall be considered as being added to the end of the description of this method.

   If the content corresponding to any of the locators specified can be successfully presented then the selection operation shall be considered to have succeeded even if attempts to present content corresponding to other locators failed. If different locators failed for different reasons then the reason code is implementation dependent.

b) Replace the following text:

   Successful completion of a select operation using this method provides `ServiceContentHandler` instances for all components that are indicated in the components parameter.

   with

   Successful completion of a selection operation using this method provides `ServiceContentHandlers` for those components indicated in the components parameter which were successfully presented.

A.5.2 javax.tv.util.TVTimer

A.5.2.1 scheduleTimerSpec(TVTimerSpec)

The following specification changes are considered to be present:

Replace:

> If you schedule an absolute specification that should have gone off already, it will go off immediately.

With:

> If you schedule an absolute specification that should have gone off already, it will go off immediately, and the return value of this method will be an absolute specification reflecting the current absolute time.

A.5.3 javax.tv.util.TVTimerSpec

A.5.3.1 setAbsoluteTime(long)

The following specification additions are considered to be present:

> If the time parameter passed is negative, this method shall throw an `IllegalArgumentException`.

A.5.3.2 setTime(long)

The following specification additions are considered to be present:

> If the time parameter passed is negative, this method shall throw an `IllegalArgumentException`.

A.5.4 javax.tv.xlet.Xlet

A.5.4.1 Xlet state descriptions

In the table of xlet state descriptions in the package description of the `javax.tv.xlet` package, the description of the loaded state is considered to be modified as follows.

Replace "created using new" with "created using Class.newInstance".

A.5.4.2 Own service context

The specification is considered to include

> An Xlet's "own" ServiceContext instance is one where the execution of that Xlet is part of a currently selected service which can be controlled by that ServiceContext instance.

A.6 DAVIC 1.4.1p9 [3]

A.6.1 org.davic.mpeg.NotAuthorizedException

The specification is considered to include `org.davic.mpeg.NotAuthorizedException` as specified below:

org.davic.mpeg
NotAuthorizedException

Syntax

```
public class NotAuthorizedException extends java.lang.Exception implements org.davic.mpeg.
    NotAuthorizedInterface

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--org.davic.mpeg.NotAuthorizedException
```

All Implemented Interfaces:

`NotAuthorizedInterface`, java.io.Serializable

Description

This class is thrown by MPEG related APIs when access is requested to information which is scrambled and to which access is not permitted by the security system.

Constructors

NotAuthorizedException()

```
public NotAuthorizedException()
```

Constructs a NotAuthorizedException with no detail message

NotAuthorizedException(String)

```
public NotAuthorizedException(java.lang.String s)
```

Constructs a NotAuthorizedException with the specified detail message

Parameters:

`s` - the detail message

Methods

getElementaryStreams()

```
public ElementaryStream[] getElementaryStreams()
```

If getType() returns ELEMENTARY_STREAM, then this method returns the set of ElementaryStreams that could not be descrambled. Otherwise it returns null.

Specified By:

`NotAuthorizedInterface.getElementaryStreams()` in interface `NotAuthorizedInterface`

Returns:

either the set of ElementaryStreams that could not be descrambled or null

getReason(int)

```
public int[] getReason(int index)
```

Returns the reason(s) why descrambling was not possible.

Specified By:

`NotAuthorizedInterface.getReason(int)` in interface `NotAuthorizedInterface`

Parameters:

`index` - If the component to which access failed is a Service, index shall be 0. Otherwise index shall refer to one stream in the set returnedby getElementaryStreams().

Returns:

an array of length 2 where the first element of the array is the major reason and the second element of the array is the minor reason.

Throws:

`IndexOutOfBoundsException` - If the component to which access failed is a Service, this exception will be thrown if index is non zero. If the component(s) to which access failed was a (set of) elementary streams then this exception will be thrown where index is beyond the size of the array returned by getElementaryStreams.

See Also:

`NotAuthorizedInterface.getElementaryStreams()`

getService()

```
public Service getService()
```

If getType() returns SERVICE, then this method returns the Service that could not be descrambled. Otherwise it returns null.

Specified By:

`NotAuthorizedInterface.getService()` in interface `NotAuthorizedInterface`

Returns:

either the Service that could not be descrambled or null

getType()

```
public int getType()
```

Specified By:

`NotAuthorizedInterface.getType()` in interface `NotAuthorizedInterface`

Returns:

SERVICE or ELEMENTARY_STREAM to indicate that either a service (MPEG program) or one or more elementary streams could not be descrambled.

A.6.2 org.davic.mpeg.dvb

A.6.2.1 DvbElementaryStream

The following classes are considered to have a no argument protected constructor:

- `DvbService`
- `DvbElementaryStream`
- `DvbTransportStream`
- `ElementaryStream`
- `Service`
- `TransportStream`

A.6.3 org.davic.mpeg.sections

A.6.3.1 RingSectionFilter

Is considered to have the following text appended to its description:

> All sections in a ring section filter are initialised to empty when the ring section filter is first created. Clearing them to empty any time after this is the responsibility of the application. Starting a ring section filter shall not clear any of the sections to empty.

A.6.3.2 Section

A.6.3.2.1 clone()

Section is considered to have the method clone() with the following behaviour.

> A cloned Section object is a new and separate object. It is unaffected by changes in the state of the original Section object or restarting of the SectionFilter the source Section object originated from. The clone method must be implemented without declaring exceptions.

A.6.3.2.2 Started Section Filters

The class description is considered to have the following text added at its end.

> When a SectionFilterGroup is detached, either by the client or through resource withdrawal, started SectionFilters shall remain started. Hence if the SectionFilterGroup is re-attached, those filters shall re-activate.

A.6.3.2.3 getData()

Remove the following text from the methods of `org.davic.mpeg.sections.Section`:

> (everything after the length field, not including a CRC check)

A.6.3.2.4 getFullStatus()

Is considered to have the following text appended to its description:

> Returns true when the `Section` object contains valid data.

A.6.3.3 SectionFilter

A.6.3.3.1 Cross reference error

In the description of this class there are 12 instances of a cross reference to H7. In each case this shall be considered as a reference to E.8.1.

A.6.3.3.2 startFiltering(java.lang.Object, int, int)

Is considered to have the following text appended to its description:

Note that this applied whether the parent section filter group is connected to a TS or not.

A.6.3.3.3 startFiltering(java.lang.Object, int, int, int, byte[], byte[])

Is considered to have the following text appended to its description:

`IllegalFilterDefinitionException` is thrown if offset is too small.

A.6.3.3.4 startFiltering (appData, pid, tableId) exceptions

Like other `startFiltering` methods `org.davic.mpeg.sections.SectionFilter.startFiltering (appData, pid, tableId)` shall throw an `IllegalFilterDefinitionException` where:

- the Java integer is negative
- the Java integer is larger than what is allowed for PID or table_id according to the relevant MPEG specification

A.6.3.4 SectionFilterGroup

A.6.3.4.1 NotAuthorizedException

A `NotAuthorizedException` is added to the definition of this class.

A.6.3.4.2 numberOfFilters

Is considered to have the following text appended to its description:

Throws illegal argument exception if `numberOfFilters` <1.

A.6.3.4.3 sectionSize

Is considered to have the following text appended to its description:

Throws illegal argument exception if `sectionSize` <1.

A.6.3.4.4 ringSize

Is considered to have the following text appended to its description:

Throws illegal argument exception if `ringSize` <1.

A.6.3.5 TimeOutEvent

The specification is considered to include `org.davic.mpeg.sections.TimeOutEvent` as specified below:

org.davic.mpeg.sections.Time-OutEvent

Methods

getSource()

```
public java.lang.Object getSource()
```

This returns the SectionFilter object which timed out

Overrides:
EndOfFilteringEvent.getSource() in class EndOfFilteringEvent

A.6.4 org.davic.media

A.6.4.1 FreezeControl.resume()

Add the following to the description of the semantics for this method:

If the player is started and if decoding of the media stream is not frozen then calls to this method shall have no effect otherwise an exception is thrown.

A.6.4.2 MediaTimePositionChangedEvent

Add the following constructor:

```
MediaTimePositionChangedEvent (
   Controller from,
   int previous,
   int current,
   int target,
   Time mediaTime)
```

A.6.4.3 NotAuthorizedMediaException

The following constructors are considered to be removed from the specification:

```
NotAuthorizedMediaException()
NotAuthorizedMediaException(java.lang.String reason)
```

The following constructors are considered to be a normative part of the specification:

```
NotAuthorizedMediaException( org.davic.mpeg.Service, int reason )
NotAuthorizedMediaException( org.davic.mpeg.ElementaryStream[], int reason[] )
```

NotAuthorizedMediaException(ElementaryStream[], int[])

```
public NotAuthorizedMediaException(org.davic.mpeg.ElementaryStream[] e, int[] reason)
```

Constructor for exception due to failure accessing one or more MPEG elementary streams The caller of this constructor is responsible for ensuring the two arrays provided as parameters are the same size. The implementation is not expected to check this.

Parameters:
`e` - the elementary streams which could not be accessed

`reason` - the reason why the exception was thrown for each elementary stream

NotAuthorizedMediaException(Service, int)

```
public NotAuthorizedMediaException(org.davic.mpeg.Service s, int reason)
```

Constructor for exception due to failure accessing an MPEG service

Parameters:
`s` - the service which could not be accessed

`reason` - the reason why the service could not be accessed

A.6.5 org.davic.net

A.6.5.1 InvalidLocatorException

The following class definition is considered to be a normative part of the specification:

org.davic.net
InvalidLocatorException

Syntax

```
public class InvalidLocatorException extends java.lang.Exception

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--org.davic.net.InvalidLocatorException
```

All Implemented Interfaces:

java.io.Serializable

Description

This exception is thrown when one or more parameters to construct a Locator are invalid.

Constructors

InvalidLocatorException()

```
public InvalidLocatorException()
```

InvalidLocatorException(String)

```
public InvalidLocatorException(java.lang.String reason)
```

Constructor for the exception with a specified reason

Parameters:

`reason` - the reason why the exception was raised

A.6.5.2 Locator

A.6.5.2.1 Locator()

The no-argument constructor for `org.davic.net.Locator` is considered to not be present. The absence of any description on the method indicates that this was an editing error in the DAVIC specification.

A.6.5.2.2 toExternalForm()

Is considered to have the following text appended to its description:

> If the instance of `Locator` has been created using `Locator(java.lang.String url)` and the URL is a non-null invalid URL the behaviour is implementation dependent.

A.6.5.3 tuning

A.6.5.3.1 NetworkInterfaceController

A.6.5.3.1.1 reserve()

The semantic of the following throws clause is corrected as follows:

```
Throws:  NoFreeInterfaceException
         raised if the requested network interface can not be reserved
```

The following from the semantic of this method:

> If this NetworkInterfaceController has already reserved another NetworkInterface, then it will either release that NetworkInterface and reserve the specified one, or throw an exception. If the specified NetworkInterface has already been reserved by this NetworkInterfaceController, then this method does nothing.

is replaced with the following:

> If this NetworkInterfaceController has currently reserved another NetworkInterface, then it will either release that NetworkInterface and reserve an appropriate one, or throw an exception. If a NetworkInterface that is able to tune to the specified transport stream is currently reserved by this NetworkInterfaceController, then this method does nothing.

A.6.5.3.1.2 reserveFor()

The following from the semantic of this method:

> If this NetworkInterfaceController has already reserved another NetworkInterface, then it will either release that NetworkInterface and reserve an appropriate one, or throw an exception. If NetworkInterfaceController has already reserved a NetworkInterface that is able to tune to the specified transport stream, then this method does nothing.

is replaced with the following:

> If this NetworkInterfaceController has currently reserved another NetworkInterface, then it will either release that NetworkInterface and reserve an appropriate one, or throw an exception. If a NetworkInterface that is able to tune to the specified transport stream is currently reserved by this NetworkInterfaceController, then this method does nothing.

A.6.5.3.1.3 tune()

Replace "this NetworkInterface" with "the NetworkInterface reserved by this NetworkInterfaceController" in section H. 5.4.3 of DAVIC specification.

A.6.5.4 ca

A.6.5.4.1 CAMessage

The following class definition is considered to be a normative part of the specification:

This class represents messages to ca modules.

public class CAMessage(byte[] data)

Constructor for the message

Parameters:

data - message data

Method Detail

getData

public byte[] getData()

Returns:

the data of the message

A.6.5.4.2 CAModule

A.6.5.4.2.1 buyEntitlement(org.davic.net.Locator)

This method is considered to have the amendment.

Replace:

Initiates a purchase dialogue for specified service or future event (specified by a Locator).

With:

Request to buy a specified service or future event (specified by a Locator) from a conditional access system.

In the comments of `org.davic.net.ca.CAModule.buyEntitlement()` the sentence:

In case of CA0 this maps onto event_query with event_cmd_id = mmi (Common Interface specification, section B.4.1.1)."

is replaced with

In case of DVB Common Interface, this maps onto CI messages as follows:

• when the Locator points to a service and the terminal is currently receiving the transport stream that this service is carried in and this transport stream is available to this CA module, then this method is mapped to a ca_pmt message with ca_pmt_cmd_id set to "ok_mmi". The value returned in the ca_pmt_reply is mapped as defined in the documentation of the constants in the class. If the module is currently descrambling the service and the terminal is aware of this, ENTITLEMENT_AVAILABLE shall be returned immediately without communicating with the module.

• when the Locator points to a service that is not carried in a currently received transport stream, NotTunedException is thrown

• when the Locator points to an event, this maps onto event_query message with event_cmd_id set to "mmi" (Common Interface specification, section B.4.1.1). The value returned in the event_reply message is mapped as defined in the documentation of the constants in this class.

In the CA API, the constants defined in the `org.davic.net.ca.CAModule` class are mapped to the `CA_enable` values of the `ca_pmt_response` message and the `event_status` values of the `event_reply` message in the Common Interface protocol as follows:

ENTITLEMENT_AVAILABLE:

CA_enable value "Descrambling possible" (0x01)

event_status value "entitlement_available" (0x01)

event_status value "mmi_complete_available" (0x05)

ENTITLEMENT_NOT_AVAILABLE:

CA_enable value "Descrambling not possible (because no entitlement)" (0x04)

event_status value "entitlement_not_available" (0x02)

event_status value "mmi_complete_not_available" (0x06)

ENTITLEMENT_UNKNOWN:

CA_enable value "Descrambling not possible (for technical reasons)" (0x05)

all other CA_enable values not having an explicit mapping in this section

event_status value "entitlement_unknown" (0x00)

event_status value "mmi_complete_unknown" (0x04)

all other event_status values not having an explicit mapping in this section

MMI_DIALOGUE_REQUIRED:

CA_enable value "Descrambling possible under conditions (purchase dialogue)" (0x02)

CA_enable value "Descrambling possible under conditions (technical dialogue)" (0x03)

event_status value "mmi_dialogue_required" (0x03)

A.6.5.4.2.2 isDescramblable(ElementaryStream streams[])

Is considered to have the following text appended to its description:

If an empty array is passed in, returns true.

A.6.5.4.2.3 openMessageSession(MessageListener)

This method is considered to have the amendment:

Modify:

Throws: ModuleBusyException

raised if the module is busy and is not able to handle a message session at the moment

To say:

Throws: ModuleBusyException

raised if the module is busy and is not able to handle a message session at the moment. This is CA system dependant.

A.6.5.4.2.4 queryEntitlement(org.davic.net.Locator)

This method is considered to include the following:

Throws: org.davic.net.InvalidLocatorException

if the locator does not point to a valid service or event

In the comments of `org.davic.net.ca.CAModule.queryEntitlement()` the sentence:

In case of CA0 this maps onto event_query with event_cmd_id = query (Common Interface specification, sectionB.4.1.1)."

is replaced with

In case of DVB Common Interface, this maps onto CI messages as follows:

• when the Locator points to a service and the terminal is currently receiving the transport stream that this service is carried in and this transport stream is available to this CA module, then this method is mapped to a ca_pmt message with ca_pmt_cmd_id set to "query". The value returned in the ca_pmt_reply is mapped as defined in the documentation of the constants in the class. If the module is currently descrambling the service and the terminal is aware of this, ENTITLEMENT_AVAILABLE shall be returned immediately without communicating with the module.

• when the Locator points to a service that is not carried in a currently received transport stream, ENTITLEMENT_UNKNOWN shall be returned.

• when the Locator points to an event, this maps onto event_query with event_cmd_id = query (Common Interface specification, section B.4.1.1). The return values is mapped as defined in the documentation of the constants in this class.

A.6.5.4.2.5 sendToModule

The description of this method is considered to have the following text added to it.

In systems based on the DVB common interface, messages sent using this method shall be mapped onto the CAPipelineRequest as defined in section 6.8.3 of the common interface extensions specification. Responses from the CA system reported through the CAPipelineResponse and CAPipelineNotification messages shall be mapped onto instances of ModuleResponseEvent.

A.6.5.4.3 CAModuleManager

A.6.5.4.3.1 addMMIListener()

Is considered to have the following text appended to its description:

> If an application has registered (and not removed) a listener to handle the MMI dialogues and if an MMI dialogue is required, this causes the platform to ask the MMI listener to handle the MMI dialogues. If there is no application registered to handle the MMI dialogues, these will be handled by the platform.

A.6.5.4.3.2 getModules(Service s)

Is considered to have the following text appended to its description:

> If the service passed as a parameter is not scrambled, returns an empty array whose length is 0.

A.6.5.4.4 NoFreeCapacityException

The following class definition is considered to be a normative part of the specification:

org.davic.net.ca
NoFreeCapacityException

Syntax

```
public class NoFreeCapacityException extends org.davic.net.ca.CAException

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--org.davic.net.ca.CAException
                    |
                    +--org.davic.net.ca.NoFreeCapacityException
```

All Implemented Interfaces:

java.io.Serializable

Description

This exception is thrown when a method is called and the CA module does not have the required capacity to perform the action

Constructors

NoFreeCapacityException()

```
public NoFreeCapacityException()
```

Default constructor for the exception

NoFreeCapacityException(String)

```
public NoFreeCapacityException(java.lang.String reason)
```

Constructor for the exception with a specified reason

Parameters:
`reason` - the reason why the exception was raised

A.6.5.4.5 MMIObject

The following class definition is considered to be a normative part of the specification:

org.davic.net.ca
MMIObject

Syntax
```
public class MMIObject

java.lang.Object
  |
  +--org.davic.net.ca.MMIObject
```

Direct Known Subclasses:

List, Text

Description
The base class of all MMI classes.

Methods

close()

```
public void close()
```

Closes the MMI object and informs the CA API implementation that the application intends to close or has closed the corresponding MMI screen.

A.6.5.4.6 DescramblerProxy

A.6.5.4.6.1 startDescrambling()

In the comments of `org.davic.net.ca.DescramblerProxy.startDescrambling()` (all signature versions) the sentence:

> This method may start an MMI dialog.

is replaced with

> This method may result in the CA system requesting an MMI dialog.

A.6.5.4.6.2 startDescrambling(org.davic.mpeg.Service, java.lang.Object)

Is considered to have the following text appended to its description:

DescramblerProxy applies from the point of view of one application. Methods such as `startDescrambling()` and `stopDescrambling` apply on a per-application basis and do not impact descrambling on behalf of other applications, except subject to platform resource limitations.

A.6.5.4.6.3 startDescrambling(org.davic.mpeg.ElementaryStream[], java.lang.Object)

Is considered to have the following text appended to its description:

If `org.davic.mpeg.ElementaryStream[]` is a zero length array the method has no effect.

A.6.5.4.6.4 startDescrambling(org.davic.mpeg.ElementaryStream[], CAModule, java.lang.Object)

Is considered to have the following text appended to its description:

If `org.davic.mpeg.ElementaryStream[]` is a zero length array the method has no effect.

A.6.5.4.6.5 startDescramblingDialog(org.davic.mpeg.ElementaryStream[])

Is considered to have the following text appended to its description:

If `org.davic.mpeg.ElementaryStream[]` is a zero length array the method has no effect.

A.6.5.4.6.6 stopDescrambling()

Is considered to have the following text appended to its description:

If no descrambling is being done then this method has no effect

A.6.5.4.6.7 stopDescrambling(org.davic.mpeg.ElementaryStream[] streams)

Is considered to have the following text appended to its description:

The method `stopDescrambling( ElementaryStream[])` only stops the descrambling of streams which have been started through this `DescramblerProxy` instance, and not started through any other instance.

Is considered to include the following parameter specification:

streams: array of ElementaryStreams whose descrambling is to be stopped.

Is considered to have the following text appended to its description:

The `stopDescrambling` method only effects members of the array of streams that are being descrambled. There is no effect on any streams listed in the array that are not being descrambled.

A.6.5.4.7 StartMMIEvent(MMIObject, int, java.lang.Object)

Is considered to include the following parameter specification:

caModule: the CAModule object that is the source of the event, which shall be returned by the getSource() method.

A.6.5.5 dvb.DvbLocator(int onid, int tsid, int serviceid, int eventid, int componenttags[], String filePath).

The following parameter specification:

the: file path string including the slash character in the beginning

is considered to read:

filePath: string including the slash character in the beginning

[2332] . . Add

A.6.5.6 dvb.DvbLocator

The following method is considered to be present:

```
/** Returns the textual service identifier, if present.
 * @return the textual service identifier, null if not present
 * @since MHP1.0.1
 */
public String getTextualServiceIdentifier() ;
```

The returns clause of the `getOriginalNetworkId()` method is considered to include "-1 if not present" similarly as the other methods returning the numeric identifiers.

A.7 CSS 2 [87]

This specification is considered to include:

11.1.2 Clipping: the "clip" property

A clipping region defines what portion of an element's rendered content is visible. By default, the clipping region has the same size and shape as the element's box(es). However, the clipping region may be modified by the "clip" property.

"clip"

Value: <shape> | auto | inherit

Initial: auto

Applies to: block-level and replaced elements

Inherited: no

Percentages: N/A

Media: visual

The "clip" property applies to elements that have a "overflow" property with a value other than "visible". Values have the following meanings:

auto

The clipping region has the same size and location as the element's box(es).

<shape>

In CSS2, the only valid <shape> value is: rect (<top> <right> <bottom> <left>) where <top>, <bottom> <right>, and <left> specify offsets from the respective sides of the box.

<top>, <right>, <bottom>, and <left> may either have a <length> value or "auto". Negative lengths are permitted. The value "auto" means that a given edge of the clipping region will be the same as the edge of the element's generated box (i. e., "auto" means the same as "0".)

When coordinates are rounded to pixel coordinates, care should be taken that no pixels remain visible when <left> + <right> is equal to the element's width (or <top> + <bottom> equals the element's height), and conversely that no pixels remain hidden when these values are 0.

The element's ancestors may also have clipping regions (in case their "overflow" property is not "visible"); what is rendered is the intersection of the various clipping regions.

If the clipping region exceeds the bounds of the UA's document window, content may be clipped to that window by the native operating environment.

Example(s):

The following two rules:

P { clip: rect(5px, 10px, 10px, 5px); }

P { clip: rect(5px, -5px, 10px, 5px); }

will create the rectangular clipping regions delimited by the dashed lines in the following illustrations:

[D]

Note. In CSS2, all clipping regions are rectangular. We anticipate future extensions to permit non-rectangular clipping.

While CSS2 specifies that values of "rect()" specify offsets from the respective sides of the box, current implementations interpret values with respect to the top and left edges for all four values (top, right, bottom, and left). The Working Group proposes to revise CSS2 to conform to current practice.

Annex B (normative): Object carousel

B.1 Introduction

The broadcast applications are transmitted using the DSM-CC User-to-User Object Carousels.

This specification is based on the following specifications:

- ISO/IEC 13818-1 [23] - MPEG 2 systems
- ISO/IEC 13818-6 [26] - DSM-CC
- EN 301 192 [5] - DVB specification for data broadcasting
- TR 101 202 [49] - Implementation Guidelines for Databroadcasting

With the constraints and extensions described here.

B.1.1 Key to notation

Certain notations are used in the "value" columns of the syntax tables:

Table B.1 : Key to notation

Symbol	
+	A value that is "allocated" e.g. configuration parameter of the object carousel server.
*	A value that is "calculated" e.g. a field whose value is calculated by the carousel server as a consequence of the number of bytes in other fields

B.2 Object Carousel Profile

In the following chapter, the message structures of the Object carousels are introduced with associated additional restrictions. Each section contains a table specifying the restrictions on the usage of the fields. The table also indicates the source for these restrictions: the DSM-CC standard, DVB guidelines or a specific restriction for this specification.

For the object carousel messages, also the message syntax is included. **In the syntax tables grey shading indicates parts that the broadcaster may put in, but an MHP terminal compliant with this specification may ignore.**

B.2.1 DSM-CC Sections

All object carousels messages are transmitted using DSM-CC section format. The DSM-CC Section format is defined in chapter 9.2 of the DSM-CC specification.

The DSM-CC standard provides an option to use either a CRC32 or a checksum for detecting bit errors. For this specification, we make the following restriction:

Table B.2 : Restrictions on DSM-CC Section format

Field	Restrictions	Source
section_syntax_indicator	1 (indicating the use of the CRC32)	This spec.
last_section_number	For sections transporting DownloadDataBlock fragments: - all modules intended to be retrieved shall have the last section number <= 0xFE - if last section number = 0xFF implementations conforming to this spec are allowed to abort the retrieval and report error condition	This spec.

The maximum section length is 4096 bytes for all types of sections used in Object Carousels. The section overhead is 12 bytes, leaving a maximum of 4084 bytes of payload per section.

B.2.1.1 Sections per TS packet

Any single TS packet is allowed to contain no more than the payload of two sections (i.e. the end of one section and the beginning of another).

B.2.2 Data Carousel

This section defines the content of the data carousel messages when used in the object carousel.

B.2.2.1 General

The definitions in Table B.3 apply to both the dsmccDownloadDataHeader and the similar dsmccMessageHeader.

Table B.3 : Restrictions on DSM-CC DownloadData and Message headers

Field	Restrictions	Source
TransactionId	See “Assignment and use of transactionId values” on page 409	This spec.
AdaptationLength	The MHP terminal may ignore the possible contents of the dsmccAdaptationHeader field.	This spec.

B.2.2.2 DownloadInfoIndication

The DownloadInfoIndication is a message that describes a set of modules and gives the necessary parameters to locate the module and retrieve it.

Table B.4 : Restrictions on the DII

Field	Restrictions	Source
blockSize	maximum size 4066 (max. section payload - DDB-header size (18)) The recommended blockSize is 4066.	DSM-CC (This spec. rec.)
windowSize	0 (not used for Object Carousels)	DSM-CC
ackPeriod	0 (not used for Object Carousels)	DSM-CC
tCDownloadWindow	0 (not used for Object Carousels)	DSM-CC
tCDownloadScenario	0 (not used for Object Carousels)	DSM-CC
compatibilityDescriptor(): compatibilityDescriptorLength	0 (no compatibility descriptor for Object Carousels)	DSM-CC
PrivateDataLength	The MHP terminal may ignore the possible contents of the privateData field	DVB

B.2.2.3 DownloadServerInitiate

The DownloadServerInitiate is used in the case of object carousels to provide the object reference to the ServiceGateway (i.e. root directory) of the object carousel.

Table B.5 : Restrictions on DSI

Field	Restrictions	Source
compatibilityDescriptor(): compatibilityDescriptorLength	0 (no compatibility descriptor for Object Carousels)	DSM-CC
privateData	Contains the ServiceGatewayInfo structure	DSM-CC
serverId	Shall be set to 20 bytes each with the value of 0xFF	DVB / This spec.

B.2.2.4 ModuleInfo

The moduleInfo structure is placed in the moduleInfo field of the DownloadInfoIndication of the data carousel. It contains the information needed to locate the module.

Table B.6 : Restrictions on the DII moduleInfo field

Field	Restrictions	Source
BIOP::ModuleInfo::Taps	The first tap shall have the "use" value 0x0017 (BIOP_OBJECT_USE). The id and selector fields are not used and the MHP terminal may ignore them. The MHP terminal may ignore possible other taps in the list.	DVB
BIOP::ModuleInfo:: UserInfo	The userInfo field contains a loop of descriptors. These are specified in the DVB Data Broadcasting standard and/or this specification. The MHP terminal shall support the compressed_module_descriptor (tag 0x09) used to signal that the module is transmitted in compressed form. The userInfo field may also contain a caching_priority_descriptor and one or more label_ descriptors.	DVB / This spec.

Table B.7 : BIOP::ModuleInfo syntax

Syntax	bits	Type	Value	Comment
BIOP::ModuleInfo() {				
moduleTimeOut	32	uimsbf	+	
blockTimeOut	32	uimsbf	+	
minBlockTime	32	uimsbf	+	
taps_count	8	uimsbf	N1	≥ 1
{				
id	16	uimsbf	0x0000	user private
use	16	uimsbf	0x0017	BIOP_OBJECT_USE
assocTag	16	uimsbf	+	
selector_length	8	uimsbf	0x00	
}				
for (j=1; j<N1; j++) {				
id	16	uimsbf	+	
use	16	uimsbf	+	
assocTag	16	uimsbf	+	Possible additional taps that may be ignored by MHP terminals.
selector_length	8	uimsbf	N2	
for (j=0; j<N2; j++) {				
selector_data	8	uimsbf	+	
}				
}				
userInfoLength	8	uimsbf	N3	
for (k=0; k<N3; j++) {				
userInfo_data	8	uimsbf	+	
}				
}				

B.2.2.4.1 Label descriptor

The label_descriptor may be placed in the userInfo field of the moduleInfo structure. It attaches a label to the corresponding module. Multiple labels can be attached to a module by including multiple label descriptors in the same userInfo field. Labels can be used for pre-fetching modules (see 10.8.3.2, "Pre-fetch descriptor" on page 228).

Within one object carousel, the same label may not be used in multiple DII messages. This implies that all modules that share a label are signalled in the same DII message.

Table B.8 : Label descriptor syntax

Syntax	bits	Type	Value	Comment
label_descriptor() {				
descriptor_tag	8	uimsbf	0x70	
descriptor_length	8	uimsbf	N1	
for (n=0; n<N1; n++) {				
text_char	8	uimsbf		The label
}				
}				

descriptor_tag: This 8 bit integer value with 0x70 identifies this descriptor.

text_char: The label that is attached to the module

B.2.2.4.2 Caching priority descriptor

To indicate priorities for the objects, a caching_priority_descriptor may be included in the userInfo field of the moduleInfo in the DownloadInfoIndication message.

This descriptor provides a priority value for the caching. The same priority applies for each object in the module. The priority indicated in the descriptor is only a hint to the MHP terminal and implementations may use that in combination with other caching strategies.

The descriptor includes also the transparency level (see section B.5.2, "Transparency levels of caching" on page 417) that shall be used by the terminal implementation if it caches objects in this module.

Table B.9 : Caching priority descriptor syntax

Syntax	bits	Type	Value	Comment
caching_priority_descriptor() {				
descriptor_tag	8	uimsbf	0x71	
descriptor_length	8	uimsbf		
priority_value	8	uimsbf		
transparency_level	8	uimsbf		
}				

descriptor_tag: This 8 bit integer value with 0x71 identifies this descriptor.

priority_value: indicates the caching priority for the objects within this module. A higher value indicates more importance for caching.

transparency_level: Transparency level that shall be used by the MHP terminal if it caches objects contained in this module. The possible values are listed in table B.10. The semantics of the policies are defined in section B.5.2, "Transparency levels of caching" on page 417.

Table B.10 : Transparency level values

Value	Description
0	reserved
1	Transparent caching
2	Semi-transparent caching
3	Static caching.
4…255	reserved for future use

When this descriptor is not included in the userInfo field of the moduleInfo for a module, the default values that shall be assumed are:

- priority_value: 128
- transparency_level: 1 (transparent caching)

B.2.2.5 ServiceGatewayInfo

The ServiceGatewayInfo structure is carried in the DownloadServerInitiate message and provides the object reference to the ServiceGateway object.

Table B.11 : Restrictions on the ServiceGatewayInfo

Field	Restrictions	Source
BIOP:: ServiceGatewayInfo:: downloadTaps	The MHP terminal may ignore the downloadTap list.	This spec.
BIOP:: ServiceGatewayInfo:: serviceContextList	The MHP terminal may ignore the service context list.	This spec.
BIOP:: ServiceGatewayInfo:: UserInfo	The MHP terminal may ignore the user info.	This spec.

Table B.12 : ServiceGatewayInfo() syntax

Syntax	bits	Type	Value	Comment
`ServiceGatewayInfo(){`				
`IOP::IOR()`			+	See Table B.21 on page 397
`downloadTaps_count`	8	uimsbf	N1	software download Taps
`for (i=0; i<N1; i++) {`				
`DSM::Tap()`				
`}`				
`serviceContextList_count`	8	uimsbf	N2	serviceContextList
`for (i=0; i<N2; i++) {`				
`context_id`	32	uimsbf		
`context_data_length`	16	uimsbf	N3	
`for (j=0; j<N3; j++) {`				
`context_data_byte`	8	uimsbf	+	
`}`				
`}`				
`userInfoLength`	16	uimsbf	N5	user info
`for (i=0; i<N5; i++) {`				
`userInfo_data`	8	uimsbf	+	
`}`				
`}`				

B.2.2.6 Download Cancel

There is no semantic for this message in this profile. Receivers may ignore them.

B.2.3 The Object Carousel

B.2.3.1 BIOP Generic Object Message

The BIOP Generic Object Message is a common structure used by all the BIOP (Broadcast Inter-ORB Protocol) messages.

Table B.13 : Restrictions on the BIOP Generic Object Message

Field	Restrictions	Source
MessageHeader::byte_order	0 (indicating big-endian byte order)	DVB
MessageSubHeader::objectKey	Maximum length of the key shall be four bytes.	DVB
MessageSubHeader::objectKind	The short three-letter aliases shall be used, plus the null-terminator.	DVB
Access attributes	Access attributes are not transmitted in object carousels	DSM-CC

B.2.3.2 CORBA strings

In a number of places Object Carousel messages include text strings. These are formatted in accordance with 12.3.2 of CORBA/IIOP [2] and using CDR-Lite encoding as specified by DSM-CC. I.e. the text is preceded by an integer specifying the length of the string and followed by a null terminator. The size of this integer depends on the string concerned and can be seen clearly in the syntax tables that follow. However, for clarity CORBA format strings and the size of their length fields are summarised in table B.14:

Table B.14 : Location of CORBA format strings

string	length field size (bits)	location
objectKind_data	8	Table B.16, “BIOP::FileMessage syntax,” on page 394
objectKind_data id_data kind_data	32 8 8	Table B.19, “BIOP::DirectoryMessage syntax,” on page 395
objectKind_data	8	Table B.28, “BIOP::StreamMessage syntax,” on page 401
objectKind_data eventName_ data	32 8	Table B.30, “BIOP::StreamEventMessage syntax,” on page 403
type_id_byte	32	Table B.21, “IOP::IOR syntax,” on page 397
id_data kind_data	32 32	Table B.25, “Syntax of Lite Options Profile Body with ServiceLocation component.,” on page 400

B.2.3.3 BIOP FileMessage

The BIOP FileMessage is used for carrying file objects.

Table B.15 : Restrictions on the BIOP File Message

Field	Restrictions	Source
MessageSubHeader:: ObjectInfo	The first 8 bytes of the ObjectInfo contain the ContentSize attribute. This is optionally followed by a loop of descriptors. The descriptors defined for possible use in this location are: Content type descriptor	This spec.
MessageSubHeader:: ServiceContextList	The MHP terminal may skip the possible serviceContextList structures.	This spec.

Table B.16 : BIOP::FileMessage syntax

Syntax	bits	Type	Value	Comment
BIOP::FileMessage() {				
magic	4x8	uimsbf	0x42494F50	"BIOP"
biop_version.major	8	uimsbf	0x01	BIOP major version 1
biop_version.minor	8	uimsbf	0x00	BIOP minor version 0
byte_order	8	uimsbf	0x00	Big endian byte ordering
message_type	8	uimsbf	0x00	
message_size	32	uimsbf	*	
objectKey_length	8	uimsbf	N1	<= 4
for (i=0; i<N1; i++) {				
objectKey_data	8	uimsbf	+	
}				
objectKind_length	32	uimsbf	0x00000004	
objectKind_data	4x8	uimsbf	0x66696C00	"fil" type_id alias
objectInfo_length	16	uimsbf	N2	
DSM::File::ContentSize	64	uimsbf	+	objectInfo
for (i=0; i<N2-8; i++) {				
descriptor()	8	uimsbf	+	
}				
serviceContextList_count	8	uimsbf	N3	serviceContextList
for (i=0; i<N3; i++) {				
context_id	32	uimsbf		
context_data_length	16	uimsbf	N4	
for (j=0; j<N4; j++) {				
context_data_byte	8	uimsbf	+	
}				
}				
messageBody_length	32	uimsbf	*	
content_length	32	uimsbf	N5	
for (i=0; i<N5; i++) {				
content_byte	8	uimsbf	+	actual file content
}				
}				

B.2.3.4 Content type descriptor

Zero or one content type descriptors can be carried in the file `MessageSubHeader::ObjectInfo` or the `BIOP::Binding::ObjectInfo`. Where more than one content type descriptor is used they shall express the same content format. Also, the content type (if any) signalled in the directory binding shall be identical to that signalled in the bound file's header. This optional descriptor identifies the media type of the file.

This content type signalling only applies to objects of type file and is not appropriate for other object types.

If this descriptor is absent or not sufficient to categorise the content type then the extension portion of the file name should be used be used to provide the media type mapping via table 6, "File type identification" on page 70.

The format of the content type descriptor is shown in table B.17.

Table B.17 : Content type descriptor syntax

Syntax	bits	Type	Value	Comment
content_type_descriptor() {				
descriptor_tag	8	uimsbf	0x72	
descriptor_length	8	uimsbf		
for (i=0; i<descriptor_length; i++) {				
content_type_data_byte	8	uimsbf		A MIME type
}				
}				

descriptor_tag: This 8-bit integer with value 0x72 identifies this descriptor.

descriptor_length: This 8-bit integer identifies the number of bytes following it.

content_type_data_byte: These bytes form a string that indicates the MIME content type of the object. The string is specified as follows:

```
content_type_data = type "/" subtype *(";" parameter)
```

Where `type`, `subtype` and `parameter` are as defined in section 5 of RFC 2045 [64] and hence `content_type_data` carries the payload of the Content-Type header defined in [64].

B.2.3.5 BIOP DirectoryMessage

The BIOP DirectoryMessage is used for carrying the directory objects.

Table B.18 : Restrictions on the BIOP Directory Message

Field	Restrictions	Source
MessageSubHeader:: ObjectInfo	The MHP terminal may skip the N2 possible bytes in the objectInfo field.	This spec.
MessageSubHeader:: ServiceContextList	The MHP terminal may skip the N3 possible serviceContextList structures.	This spec.
BIOP::Name	The name shall contain exactly one NameComponent.	This spec.
BIOP::Binding:: BindingType	Either "ncontext" (in the case of a Directory object) or "nobject" (in the case of a File or a Stream object). Binding type "composite" shall not be used.	DVB
BIOP::Binding:: ObjectInfo	After any DSM-CC defined elements the ObjectInfo for bound objects can carry an optional descriptor loop. Where the bound object is a file, DSM-CC requires the first element to be DSM::File::ContentSize after which the descriptors can be placed. The descriptors defined for possible use in this location are: Content type descriptor	This spec.

Table B.19 : BIOP::DirectoryMessage syntax (Sheet 1 of 3)

Syntax	bits	Type	Value	Comment
BIOP::DirectoryMessage() {				
magic	4x8	uimsbf	0x42494F50	"BIOP"
biop_version.major	8	uimsbf	0x01	BIOP major version 1
biop_version.minor	8	uimsbf	0x00	BIOP minor version 0
byte_order	8	uimsbf	0x00	big endian byte ordering
message_type	8	uimsbf	0x00	
message_size	32	uimsbf	*	
objectKey_length	8	uimsbf	N1	<= 4
for (i=0; i<N1; i++) {				

Table B.19 : BIOP::DirectoryMessage syntax (Sheet 2 of 3)

Syntax	bits	Type	Value	Comment
objectKey_data	8	uimsbf	+	
}				
objectKind_length	32	uimsbf	0x00000004	
objectKind_data	4x8	uimsbf	0x64697200	"dir" type_id alias
objectInfo_length	16	uimsbf	N2 = 0 (note 1)	objectInfo
for (i=0; i<N2; i++) {				
objectInfo_data	8	uimsbf	+	
}				
serviceContextList_count	8	uimsbf	N3	serviceContextList
for (i=0; i<N3; i++) {				
context_id	32	uimsbf		
context_data_length	16	uimsbf	N4	
for (j=0; j<N4; j++) {				
context_data_byte	8	uimsbf	+	
}				
}				
messageBody_length	32	uimsbf	*	
bindings_count	16	uimsbf	N5	
for (i=0; i<N5; i++) {				Binding
BIOP::Name() {				
nameComponents_count	8	uimsbf	N6 = 1	See Table B.15.
for (i=0; i<N6; i++) {				
id_length	8	uimsbf	N7	NameComponent id
for (j=0; j<N7; j++) {				
id_data	8	uimsbf	+	
}				
kind_length	8	uimsbf	N8	NameComponent kind
for (j=0; j<N8; j++) {				
kind_data	8	uimsbf	+	as type_id (see Table 4-4 in TR 101 202)
}				
}				
}				
BindingType	8	uimsbf	+	0x01 for nobject 0x02 for ncontext
IOP::IOR()			+	objectRef see Table B.21 on page 397
objectInfo_length	16	uimsbf	N9	
if(kind_data == "fil"){				
DSM::File::ContentSize	64	uimsbf	+	0 means that file size is not signalled
for (j=0; j<N9-8; j++) {				
descriptor()			+	
}				
}				
else {				
for (j=0; j<N9; j++) {				
descriptor()			+	
}				
}				
}				

Table B.19 : BIOP::DirectoryMessage syntax (Sheet 3 of 3)

Syntax	bits	Type	Value	Comment
}				
NOTE 1: See item 2 under 11.3.2.2 "Directory Message Format" in DSM-CC "the objectInfo field shall be empty".				

B.2.3.6 BIOP ServiceGateway message

The syntax of the BIOP ServiceGateway message is identical to that of the BIOP DirectoryMessage (described above) with the following exceptions:

- the object kind is "srg" rather than "dir".

B.2.3.7 BIOP Interoperable Object References

The Interoperable Object References (IOR) are references to objects and contain the necessary information to locate the object. The IOR structure may contain different options to be able to point to objects that can be reached via different types of connections. For this specification, the use of IORs is limited to references to objects carried in broadcast object carousels. For object carousels, there are two types of object references: one to be used to reference objects carried in the same object carousel and one to be used to reference objects in other object carousels.

Table B.20 : Restrictions on the BIOP IOR

Field	Restrictions	Source
IOP::IOR::type_id	Contains the objectKind of the referenced object. A short three-letter aliases shall be used, plus a null-terminator.	This spec.
IOP::IOR:: taggedProfileList	There shall be at least 1 taggedProfile included in an IOR. For objects carried in a broadcast object carousel, the first taggedProfile shall be either a TAG_BIOP profile or a TAG_LITE_OPTIONS. If the first tagged profile is some other profile, the object is not carried in a broadcast object carousel and the MHP terminal may ignore the object subject to its own capabilities.	This spec.

Table B.21 : IOP::IOR syntax

Syntax	bits	Type	Value	Comment
IOP::IOR {				
type_id_length	32	uimsbf	N1	
for (i=0; i<N1; i++) {				
type_id_byte	8	uimsbf	+	Short alias type_id (e.g. "dir")
}				
taggedProfiles_count	32	uimsbf	N2	Profile bodies
IOP::taggedProfile()				For objects in broadcast carousels: either BIOPProfileBody or LiteOptionsProfileBody.
for (n=0; n<N2-1;n++) {				MHP terminal may ignore other profiles (2...N1) if present
IOP::taggedProfile()				
}				
}				

B.2.3.7.1 BIOPProfileBody

The BiopProfileBody is used for references to objects within the same object carousel.

Table B.22 : Restrictions on the BIOP Profile Body

Field	Restrictions	Source
BiopProfileBody::byte_ order	0 (indicating big-endian byte order)	DVB
BiopProfileBody:: LiteComponent	The list shall contain exactly 1 BiopObjectLocation and exactly 1 DSM:: ConnBinder as the first two components in that order. The MHP terminal may ignore possible other components in the list.	This spec.
DSM::ConnBinder	For objects carried in the broadcast object carousel, the first Tap shall be of type BIOP_DELIVERY_PARA_USE. If there is another type of tap in the first position, the MHP terminal may ignore this object reference, as it is a reference for object accessed using another type of protocol (e.g. for return channel use). The MHP terminal may ignore possible other taps in the list.	This spec.
DSM::Tap	In the BIOP_DELIVER_PARA_USE tap, the id field is not used and may be ignored by the MHP terminal.	This spec.

Table B.23 : BIOP Profile Body syntax (Sheet 1 of 2)

Syntax	bits	Type	Value	Comment
BIOPProfileBody {				
profileId_tag	32	uimsbf	0x49534F06	TAG_BIOP (BIOP Profile Body)
profile_data_length	32	uimsbf	*	
profile_data_byte_order	8	uimsbf	0x00	big endian byte order
lite_component_count	8	uimsbf	N1	
BIOP::ObjectLocation {				
componentId_tag	32	uimsbf	0x49534F50	TAG_ObjectLocation
component_data_length	8	uimsbf	*	
carouselId	32	uimsbf	+	
moduleId	16	uimsbf	+	
version.major	8	uimsbf	0x01	BIOP protocol major version 1
version.minor	8	uimsbf	0x00	BIOP protocol minor version 0
objectKey_length	8	uimsbf	N2	<= 4
for (k=0; k<N2; k++) {				
objectKey_data	8	uimsbf	+	
}				
}				
DSM::ConnBinder {				
componentId_tag	32	uimsbf	0x49534F40	TAG_ConnBinder
component_data_length	8	uimsbf	N4	
taps_count	8	uimsbf	N3	
DSM::Tap {				
id	16	uimsbf	0x0000	user private

Table B.23 : BIOP Profile Body syntax (Sheet 2 of 2)

Syntax	bits	Type	Value	Comment
use	16	uimsbf	0x0016	If BIOP_DELIVERY_PARA_USE is provided it shall be the first tap. If there is another type of tap in the first position, the MHP terminal may ignore this object reference, as it is a reference for an object accessed using another type of protocol (e.g. for return channel use).
assocTag	16	uimsbf	+	
selector_length	8	uimsbf	0x0A	
selector_type	16	uimsbf	0x0001	
transactionId	32	uimsbf	*	
timeout	32	uimsbf	*	
}				
for (n=0; n<N4-18; n++) {				The MHP terminal may skip over the possible additional taps
additional_tap_byte	8	uimsbf		
}				
}				
for (n=0;n<N6;n++) {				N6=N1-2
BIOP::LiteComponent{				
componentId_tag	32	uimsbf	+	
component_data_length	8	uimsbf	N7	
for (i=0; i<N7; i++) {				
component_data_byte	8	uimsbf		
}				
}				
}				
}				

B.2.3.7.2 LiteOptionsProfileBody

The LiteOptionsProfileBody is used for making links to objects carried in other object carousels. The LiteOptionsProfileBody can be used to make references to objects carried in other carousels within the same transport or in other transport streams. In the API, when the LiteOptionsProfileBody is encountered, the application will get a ServiceXFRErrorEvent or a ServiceXFRException. The other carousel is never mounted automatically by the implementation, but the application may do so using the API.

Table B.24 : Restrictions on the Lite Options Profile Body

Field	Restrictions	Source
LiteOptionsProfileBody:: profile_data_byte_order	0 (indicating big-endian byte order)	DVB
LiteOptionsProfileBody:: LiteOptionComponents	The list shall contain a ServiceLocation component as the first component. The MHP terminal may ignore possible other components in the list.	This spec.
DSM::ServiceLocation	For objects carried in the broadcast object carousel, the service domain NSAP address shall follow the Carousel NSAP address format.	This spec.
DSM::ServiceLocation:: InitialContext	The MHP terminal may ignore the initial context	This spec.

Table B.25 : Syntax of Lite Options Profile Body with ServiceLocation component.

Syntax	bits	Type	Value	Comment
LiteOptionsProfileBody {				
profileId_tag	32	uimsbf	0x49534F05	TAG_LITE_OPTIONS (Lite Options Profile Body)
profile_data_length	32	uimsbf	*	
profile_data_byte_order	8	uimsbf	0x00	big endian byte order
lite_component_count	8	uimsbf	N1	
DSM::ServiceLocation {				
componentId_tag	32	uimsbf	0x49534F46	TAG_ServiceLocation
component_data_length	8	uimsbf	*	
serviceDomain_length	8	uimsbf	0x14	Length of carousel NSAP address
serviceDomain_data()	160	uimsbf	+	Table B.26 "DVB Carousel NSAP Address"
CosNaming::Name() {				pathName
nameComponents_count	32	uimsbf	N2	
for (i=0; i<N2; i++) {				
id_length	32	uimsbf	N3	NameComponent id
for (j=0; j<N3 j++) {				
id_data	8	uimsbf	+	
}				
kind_length	32	uimsbf	N4	NameComponent kind
for (j=0; j<N4 j++) {				
kind_data	8	uimsbf	+	as type_id (see Table 4-4 in TR 101 202)
}				
}				
}				
initialContext_length	32	uimsbf	N5	
for (n=0; n<N5 n++) {				
InitialContext_data_byte	8	uimsbf		
}				
}				
for (n=0;n<N6;n++) {				N6=N1-1
BIOP::LiteComponent{				
componentId_tag	32	uimsbf	+	
component_data_length	8	uimsbf	N7	
for (i=0; i<N7; i++) {				
component_data_byte	8	uimsbf		
}				
}				
}				
}				

Table B.26 : DVB Carousel NSAP Address (Sheet 1 of 2)

Syntax	bits	Type	Value	Comment
DVBcarouselNSAPaddress {				
AFI	8	uimsbf	0x00	NSAP for private use
Type	8	uimsbf	0x00	Object carousel NSAP Address.

Table B.26 : DVB Carousel NSAP Address (Sheet 2 of 2)

Syntax	bits	Type	Value	Comment
carouselId	32	uimsbf	+	To resolve this reference a carousel_id_descriptor with the same carousel_id as indicated in this field must be present in the PMT signalling for the service identified below.
specifierType	8	uimsbf	0x01	IEEE OUI
specifierData { IEEE OUI }	24	uimsbf	0x00015A	Constant for DVB OUI
dvb_service_location () {				
transport_stream_id	16	uimsbf	+	This may be set to 0x0000 which indicates that the MHP terminal shall not use the transport_stream_id when locating the service. For any other value then this field shall be used.
original_network_id	16	uimsbf	+	
service_id	16	uimsbf	+	(= MPEG-2 program_number)
reserved	32	bslbf	0xFFFFFFFF	
}				
}				

B.2.3.8 BIOP StreamMessage

Table B.27 : Restrictions on the BIOP Stream Message

Field	Restrictions	Source
MessageSubHeader:: ObjectInfo	The ObjectInfo field contains the DSM::Stream::Info_T structure and optionally other data after the Stream Info structure. MHP terminals may ignore the DSM::Stream::Info_T structure and the possible other object info data following it. Broadcasts may set the duration field to zero to indicate undefined duration.	This spec.
MessageSubHeader:: ServiceContextList	The MHP terminal may skip the possible serviceContextList structures.	This spec.
MessageSubHeader:: MessageBody	The MessageBody carries a sequence of taps. There shall be at most one tap of use BIOP_PROGRAM_USE. This tap identifies the service that provides the media stream associated with the Stream object (via a deferred_association_tags_descriptor in the PMT). The tap may only reference programs that are broadcast on the same multiplex (i.e. MHP terminals shall not need to tune to a different multiplex in order to receive the referenced media stream). There shall also be at most one tap with use STR_NPT_USE, which MHP terminals shall interpret as described in ISO/IEC 13818-6 [26]. MHP terminals may ignore possible other Taps (such as BIOP_ES_USE).	This spec.

Table B.28 : BIOP::StreamMessage syntax (Sheet 1 of 2)

Syntax	bits	Type	Value	Comment
BIOP::StreamMessage() {				
magic	4x8	uimsbf	0x42494F50	"BIOP"
biop_version.major	8	uimsbf	0x01	BIOP major version 1
biop_version.minor	8	uimsbf	0x00	BIOP minor version 0
byte_order	8	uimsbf	0x00	big endian byte ordering
message_type	8	uimsbf	0x00	
message_size	32	uimsbf	*	
objectKey_length	8	uimsbf	N1	<= 4
for (i=0; i<N1; i++) {				
objectKey_data	8	uimsbf	+	

Table B.28 : BIOP::StreamMessage syntax (Sheet 2 of 2)

Syntax	bits	Type	Value	Comment
}				
objectKind_length	32	uimsbf	0x00000004	
objectKind_data	8	uimsbf	0x73747200	"str" type_id alias
objectInfo_length	16	uimsbf	N2	
DSM::Stream::Info_T {		uimsbf		objectInfo
aDescription_length	8	uimsbf	N3	aDescription
for (i=0; i<N3; i++) {				
aDescription_bytes	8	uimsbf	+	
}				
duration.aSeconds	32	simsbf	+	may be set to 0 to indicate undefined
duration.aMicroSeconds	32	uimsbf	+	may be set to 0 to indicate undefined
audio	8	uimsbf	+	
video	8	uimsbf	+	
data	8	uimsbf	+	
}				
for (i=0; i<N2-(N3+10); i++) {				
objectInfo_byte	8	uimsbf	+	
}				
serviceContextList_count	8	uimsbf	N4	serviceContextList
for (i=0; i<N4; i++) {				
context_id	32	uimsbf		
context_data_length	16	uimsbf	N5	
for (j=0; j<N5; j++) {				
context_data_byte	8	uimsbf	+	
}				
}				
messageBody_length	32	uimsbf	*	
taps_count	8	uimsbf	N6	
for (i=0; i<N6; i++) {				
id	16	uimsbf	(note 1)	see B.2.4.4 "Timebases"
use	16	uimsbf	+	see Table 4-12 in DVB Guidelines for Data Broadcasting
assocTag	16	uimsbf	+	
selector_length	8	uimsbf	0x00	no selector
}				
}				

NOTE 1: If the tap use is STR_NPT_USE then the value of this 16 bit integer corresponds to the value of the contentId field of the NPTReferenceDescriptor that defines the time base for this stream. For other values of tap use the value of this field is undefined.

B.2.3.9 BIOP StreamEventMessage

Table B.29 : Restrictions on the BIOP StreamEvent Message

Field	Restrictions	Source
MessageSubHeader:: ObjectInfo	The ObjectInfo field contains the DSM::Stream::Info_T and DSM::Stream:: EventList_T structures followed optionally by other object info data (which may be ignored by MHP terminals). See Table B.27 on page 401 regarding the DSM::Stream::Info_T. MHP terminals may ignore the possible other data following the DSM::Stream:: EventList_T. The EventList_T defines a sequence of event names that correlates to the sequence of event ids in the MessageBody. eventNames_count shall equal eventIds_count.	This spec.
MessageSubHeader:: ServiceContextList	The MHP terminal may skip the possible serviceContextList structures.	This spec.
MessageSubHeader:: MessageBody	The MessageBody carries a sequence of taps followed by a sequence of event ids. The sequence of taps follows the following rules: • There shall be at most one tap of use BIOP_PROGRAM_USE. This tap identifies the service that provides the media stream associated with the Stream object (via a deferred_association_tags_descriptor in the PMT). The tap may only reference programs that are broadcast on the same multiplex (i.e. MHP terminals shall not need to tune to a different multiplex in order to receive the referenced media stream). • There shall be at most one tap with use STR_NPT_USE, which MHP terminals shall interpret as described in ISO/IEC 13818-6 [26]. • There shall be at most one tap with use STR_EVENT_USE or STR_ STATUS_AND_EVENT_USE. This tap indicates the PID where all StreamEvent descriptors related to the StreamEvent object are broadcast. MHP terminals may ignore possible other Taps (such as BIOP_ES_USE).	This spec.

Table B.30 : BIOP::StreamEventMessage syntax (Sheet 1 of 2)

Syntax	bits	Type	Value	Comment
BIOP::StreamEventMessage() {				
magic	4x8	uimsbf	0x42494F50	"BIOP"
biop_version.major	8	uimsbf	0x01	BIOP major version 1
biop_version.minor	8	uimsbf	0x00	BIOP minor version 0
byte_order	8	uimsbf	0x00	big endian byte ordering
message_type	8	uimsbf	0x00	
message_size	32	uimsbf	*	
objectKey_length	8	uimsbf	N1	
for (i=0; i<N1; i++) {				
objectKey_data	8	uimsbf	+	
}				
objectKind_length	32	uimsbf	0x00000004	
objectKind_data	4x8	uimsbf	0x73746500	"ste" type_id alias
objectInfo_length	16	uimsbf	N2	
DSM::Stream::Info_T {		uimsbf		
aDescription_length	8	uimsbf	N3	aDescription
for (i=0; i<N3; i++) {				
aDescription_bytes	8	uimsbf	+	see BIOP StreamMessage
}				
duration.aSeconds	32	simsbf	+	see BIOP StreamMessage
duration.aMicroSeconds	32	uimsbf	+	see BIOP StreamMessage
audio	8	uimsbf	+	see BIOP StreamMessage
video	8	uimsbf	+	see BIOP StreamMessage

Table B.30 : BIOP::StreamEventMessage syntax (Sheet 2 of 2)

Syntax	bits	Type	Value	Comment
data	8	uimsbf	+	see BIOP StreamMessage
}				
DSM::Event::EventList_T {				
eventNames_count	16	uimsbf	N4	
for (i=0; i<N4; i++) {				
eventName_length	8	uimsbf	N5	
for (j=0; j<N5; j++) {				
eventName_data	8	uimsbf	+	(including zero terminator)
}				
}				
}				
for (i=0; i<N2-(N3+10); i++) {				
objectInfo_byte	8	uimsbf	+	
}				
serviceContextList_count	8	uimsbf	N6	
for (i=0; i<N6; i++) {				
context_id	32	uimsbf		
context_data_length	16	uimsbf	N7	
for (j=0; j<N7; j++) {				
context_data_byte	8	uimsbf	+	
}				
}				
messageBody_length	32	uimsbf	*	
taps_count	8	uimsbf	N8	
for (i=0; i<N8; i++) {				
id	16	uimsbf	(note 1)	see B.2.4.4 "Timebases"
use	16	uimsbf	+	see Table 4-12 in DVB Guidelines for Data Broadcasting
assocTag	16	uimsbf	+	
selector_length	8	uimsbf	0x00	no selector
}				
eventIds_count	8	uimsbf	N4	(= eventNames_count)
for (i=0; i<N4; i++) {				
eventId	16	uimsbf	+	
}				
}				

NOTE 1: If the tap use is STR_NPT_USE then the value of this 16 bit integer corresponds to the value of the contentId field of the NPTReferenceDescriptor that defines the time base for this stream. For other values of tap use the value of this field is undefined.

B.2.4 Stream Events

There are two versions of stream messages. The BIOP StreamMessage is used for carrying the stream objects that don't use DSM-CC Stream events. The BIOP StreamEventMessage is used for carrying stream objects that include a stream carrying the DSM-CC Stream events. This section addresses the later.

B.2.4.1 Stream & StreamEvent messages

B.2.4.1.1 Association with time bases

The id field of the STR_NPT_USE tap of a StreamMessage or StreamEventMessage identifies the timebase associated with that Stream/StreamEvent object. Multiple StreamMessage or StreamEventMessage may be used at the same time to allow subscriptions to multiple timebases of the same service. See B.2.4.4, "Timebases" on page 407.

B.2.4.1.2 Event names and event ids

In StreamEventMessages the EventList_T defines a sequence of event names that correlates 1:1 to the sequence of event ids in the MessageBody. Within each BIOP::StreamEventMessage the event names uniquely associate to event id values.

- The eventNames_count shall equal eventIds_count.
- The names in the EventList_T are zero-terminated strings.
- The eventID values in the StreamEventMessage correspond to the eventID values carried in StreamEventDescriptors.

B.2.4.1.3 Stream event life time

In StreamEventMessages the set of events described in the BIOP::StreamEvent message is possibly a subset of the events that may be used by the application during the course of a programme. Therefore, applications may need to accommodate the dynamic change of such messages. Cache transparency (see section B.5.2.1, "Transparent caching" on page 417) and version listener mechanisms (see DSMCCObject methods in annex P, "(normative): Broadcast Transport Protocol Access" on page 624) provide applications with the means to do this.

Similarly the set of stream event descriptors being transmitted at any time may not correspond to the set of events described in the BIOP::StreamEventMessage.

The event id for an event name shall not change while the name exists. If a name is removed it shall not be reintroduced with within 60 seconds.

B.2.4.2 Stream Descriptors

B.2.4.2.1 NPT Reference descriptor

B.2.4.2.1.1 Usage scenarios

The following 3 usage scenarios are envisaged for NPT:

- No NPT for associated with a service

  Enables use of "do it now" events but not scheduled events

- A single continuous timebase (i.e. a single progressing value of NPT)

  In this case all types of stream event can be used. However, the broadcast is logically a single continuing interactive production and the broadcaster is responsible for preprocessing the applications etc. before broadcast to be suitable

- The signal received by the MHP terminal includes a unique timebase for each programme needing one. This timebase to be suspended during any insertion into that programme and this timebase to be discontinued at the end of the programme.

i.e. the timebase for each programme is preserved through the distribution network.

B.2.4.2.1.2 Syntax

MHP terminals shall interpret this descriptor as it is described in ISO/IEC 13818-6 [26] with the following clarifications and additions.

With regard to contentId:

- This 7 bit field identifies the "timebase" see B.2.4.4, "Timebases" on page 407.

With regard to scaleNumerator and scaleDenominator:

- 1/1 - means normal play.

  i.e. NPT and STC advance at the same rate.

- 0/m (m > 0) - means the NPT value does not advance.

As a consequence no scheduled stream events will be raised. However, the "do it now" events continue to be effective.

- 0/0 - means that the scaleNumerator and scaleDenominator fields are not defined in the NPT Reference descriptor and should be derived as described in ISO/IEC 13818-6 [26] "8.1.2 Reconstruction of NPT"

  MHP terminals are not required to support this mode of operation.

- m/0 (m > 0) - this is not allowed by ISO/IEC 13818-6 [26].

With regard to broadcast repetition rate:

- NPT Reference descriptors shall be transmitted at least once per second.

B.2.4.2.2 Stream event descriptor

B.2.4.2.2.1 Association of event ids to event time

The eventNPT field conveys the NPT value at which the event will occur (or has occurred).

Each StreamEventDescriptor provides a single association between an eventID and a value of eventNPT. If the MHP terminal detects a change in the value of eventNPT associated with a value of eventID this redefines the time at which the event should fire.

MHP terminals shall ignore scheduled events where the eventNPT has passed.

See also "number range for NPT" on page 406 and "Signalling of "do it now events"" on page 406.

B.2.4.2.2.2 Re-use of event ids

Event ID values may be re-used any number of times. For example, after an event has fired then stream event descriptors with the same eventID but different eventNPT may be broadcast.

B.2.4.2.2.3 Signalling of "do it now events"

ISO/IEC 13818-6 [26] is silent on the broadcast signalling of "do it now" events.

These events shall be identified by the value of eventID and hence table id extension (see "Encoding of table id extension" on page 407).

Where the value of eventID identifies a "do it now" event then the value of eventNPT shall be ignored by the MHP terminal.

B.2.4.2.2.4 Private data

The `privateDataByte` field does not need to be interpreted by the MHP terminal.

NOTE: that an application can access the privateDataByte field via 11.4.2.5, "Extensions to the Framework" on page 251 and 11.5.1, "Broadcast Transport Protocol Access API" on page 255

B.2.4.2.3 Unused descriptors

MHP terminals may ignore the following descriptors if present:

- NPT Endpoint descriptor
- Stream Mode descriptor

B.2.4.2.4 Clarification of number encoding

B.2.4.2.4.1 number range for NPT

There is some ambiguity in ISO/IEC 13818-6 [26] regarding the data type used to carry NPT values in the signalling (tcimsbf or uimsbf). The following requirements insulate this profile from this ambiguity:

- The range of values used shall be in the range 0 to 0x0FFFFFFFF (which is unambiguous for both tcimsbf or uimsbf).

B.2.4.2.4.2 number range for scaleDenominator

There is some ambiguity in ISO/IEC 13818-6 [26] regarding the data type used to carry `scaleDenominator` values in the signalling (tcimsbf or uimsbf). The following requirements insulate this profile from this ambiguity:

- The range of values used shall be in the range 0 to 0x7FFF (which is unambiguous for both tcimsbf or uimsbf).

B.2.4.3 DSM-CC Sections carrying Stream Descriptors

B.2.4.3.1 Section version number

The section version number field increments to reflect changes in stream descriptor(s) carried by sections with the same value of table_id (0x3D) and table_id_extension.

The version number shall increment for reasons including the change in value of eventNPT for a given eventId.

B.2.4.3.2 Single firing of "do it now" events

MHP terminals shall respond at most one time to a "do it now" events delivered under a single table version.

B.2.4.3.3 Section number

For this specification MHP terminals shall only consider section number zero.

B.2.4.3.4 DSM-CC sections for DSMCC_descriptor_list()

If the `table_id` field equals 0x3D the `current_next_indicator` bit shall be set to "1".

B.2.4.3.5 Encoding of table id extension

The section's table id extension field provides information on the stream descriptor(s) carried by the section:

Table B.31 : Encoding of table id extension for DSMCC_descriptor_lists

table_id_extension bits			Payload of DSM-CC section with table ID 0x3D
[15]	[14]	[13…0]	
0	0	eventID[13…0]	Section carries a single "do it now" event
0	1	xx xxxx xxxx	Section carries a single NPT reference descriptor
1	0	xx xxxx xxxx	Section carries one or more other stream descriptors. I.e - Stream event descriptor(s) with a future eventNPTs - Stream mode descriptor (can be ignored in this profile) - NPT endpoint descriptor (can be ignored in this specification)
1	1	reserved for future use	

The value of eventID for "do it now" events shall be in the range 0x0001…0x3FFF. The value of eventID for scheduled events shall be in the range 0x8000…0xBFFF. The value 0 is not allowed (see 5.5.2.2.1 in ISO/IEC 13818-6 [26]).

B.2.4.4 Timebases

Multiple concurrent timebases may be defined for a single MPEG program but only a single time base is allowed to progress at any instant (the other timebases shall be paused). The relationship between each timebase and the MPEG timebase (STC) is defined by an NPTReferenceDescriptor. The contentId field of the NPTReferenceDescriptor (a 7 bit unsigned integer) identifies the timebase.

The value of the id field of the STR_NPT_USE tap (a 16 bit unsigned integer) of a StreamMessage or StreamEventMessage identifies the timebase associated with that Stream/StreamEvent object. Multiple StreamMessage or StreamEventMessage may be used at the same time to allow subscriptions to multiple timebases of the same service.

In this profile NPTReferenceDescriptors can indicate two states:

- non-paused

The scaleNumerator and scaleDenominator are both non-zero

- paused

  The scaleNumerator is zero and the scaleDenominator is non-zero

When a timebase is signalled as paused then the NPT value for that timebase is frozen at NPT_Reference (as specified by equation 8-4 in DSM-CC).

All of the NPTReferenceDescriptors for all of the timebases shall be carried in a single DSMCC_descriptor_list section and shall be transmitted at least once every second. In any such set of NPTReferenceDescriptors at most one shall be non-paused and there shall be at most one instance of each value of contentId.

Timebases can be added or subtracted from the current set. The set of current timebases can be empty.

A stream (i.e. a StreamMessage or StreamEventMessage) may have no associated timebase (i.e. it may have no tap with use STR_NPT_USE). This is valid in the following cases:

- only "do it now" events are used
- no stream events are used

A value of contentId shall not be reused for a new timebase within 60 seconds of the removal of the timebase.

In normal use the NPT of a non-paused timebase progresses at a constant rate. Discontinuities should either be the results of errors in the broadcast or transient conditions (for example, while an NPT reference generator catches up with an MPEG PCR discontinuity). Transient discontinuities should be tolerated by the MHP Terminal. The behaviour of the MHP terminal when subject to a permanent discontinuity is not specified.

The broadcaster shall start generating corrected NPTReferenceDescriptors within at most 1 second of a PCR discontinuity (ideally the descriptors should be generated before the PCR discontinuity). If the receiver is sampling the NPTReferenceDescriptor at the lowest allowed rate (once every 5 seconds) then the receiver may not receive a correct NPTReferenceDescriptor for 5 seconds. During this period the receiver should linearly extrapolate the NPT from previous NPT values in the expectation that a corrected NPTReferenceDescriptor will be delivered shortly.

There is a window of uncertainty around a segment of paused timebase due to the time taken for all receivers to acquire the new NPTReferenceDescriptor. During this window scheduled events cannot be used reliably.

NOTE: It is suggested that broadcasters use "do it now" events near junctions between different timebases.

B.2.4.5 Monitoring stream events

B.2.4.5.1 NPT reference monitoring

When supporting timebase stimulated events the MHP terminal shall allocate resources sufficient to ensure that updates to the set of timebases is detected within 5 seconds for conformant broadcasts.

B.2.4.5.2 Timebase stimulated event monitoring

When supporting timebase stimulated events the MHP terminal shall allocate resources sufficient to ensure that updates to the set of timebase stimulated events is detected within 5 seconds for conformant broadcasts. So, if an event is introduced or the NPT time at which it is specified to fire is changed then the MHP terminal will respect this change within 5 seconds. If the fire time for an event changes less than 5 seconds before it was previously scheduled to fires then there is no guarantee that all receivers will detect the change in time.

If a timebase is deleted (reference to it is removed from the set of NPTReferenceDescriptors) then the receiver shall deactivate any event listeners dependant on that timebase and may free resources associated with those listeners.

B.2.4.5.3 "do it now" events

"do it now" events are single shot events, accordingly MHP terminals need to make special efforts to ensure a high probability that they can be reliably received.

Broadcasters are responsible for placing all "do it now" stream descriptors that may be of interest to an application on a single PID. This may be the same PID as is used for other DSM-CC sections.

MHP terminals shall dedicate a section filter to monitoring the possible transmission of "do it now" events while there are any applications subscribed to these events.

B.2.4.5.4 scheduled events

The stream descriptors for scheduled events are transmitted several times in the period before the time that they should fire. This allows a high probability that they will be effective even if they are not monitored continuously by the MHP terminal.

Any scheduled stream event descriptors shall be transmitted at least once each second.

MHP terminals shall raise an event in response to a scheduled stream event provided that the stream event descriptors are broadcast for at least 5 seconds before the scheduled time.

B.2.4.5.5 number of NPT components

The MHP terminal is only required to monitor a single NPT component. So, if events from more than one DSM-CC StreamEventMessages are subscribed to no more than one stream component shall be specified as the source of NPTReferenceDescriptors (i.e. the taps with use STR_NPT_USE shall be the same).

B.2.5 Assignment and use of transactionId values

The use of the transactionId in the object carousel is inherited from its use as defined by the DSM-CC specification, and as such it can appear somewhat complex. The transactionId has a dual role, providing both identification and versioning mechanisms for control messages, i.e. DownloadInfoIndication and DownloadServerInitiate messages. The transactionId should uniquely identify a download control message within a data carousel, however it should be "incremented" whenever any field of the message is modified.

Note: The term "incremented" is used in the DSM-CC specification. Within the scope of this specification this should be interpreted as "changed".

The object carousel is carried on top of one or more data carousels. By a data carousel used below the object carousel, we mean in this specification a set of DownloadInfoIndication message transmitted on a single PID and the DownloadDataBlock messages carrying the modules described in the DownloadInfoIndication messages. The DownloadDataBlock messages may be spread on other elementary streams than the DownloadInfoIndication messages. The DownloadServerInitiate message in the context of object carousels is considered to be part of the top level of the object carousel and not associated with any data carousel.

When a module is changed, the version number of the module needs to be changed. This implies that the DownloadInfoIndication message that references the module needs to be also updated. Since the DownloadInfoIndication is updated, the transactionId needs to be also changed. However, the transactionId of the DownloadInfoIndication message is used in other messages also, but the need to change the other messages should specifically be avoided and the implications of updating a module should be limited to the module itself and the DownloadInfoIndication that references the module. Therefore, additional rules on the usage of the transactionId have been specified as follows.

The transactionId has been split up into a number of sub-fields defined in Table B.32. This reflects the dual role of the transactionId (outlined above) and constraints imposed to reduce the effects of updating a module. However, to increase interoperability the assignment of the transactionId has been designed to be independent of the expected filtering in target MHP terminals.

Table B.32 : Sub-fields of the transactionId (Sheet 1 of 2)

Bits	Value	Sub-field	Description
0	User-defined	Updated flag	This must be toggled every time the control message is updated
1-15	User-defined	Identification	This must and can only be all zeros for the DownloadServerInitiate message. All other control messages must have one or more non-zero bit(s).

Table B.32 : Sub-fields of the transactionId (Sheet 2 of 2)

Bits	Value	Sub-field	Description
16-29	User-defined	Version	This must be incremented/changed every time the control message is updated.
30-31	Bit 30 - zero Bit 31 - non-zero	Originator	This is defined in the DSM-CC specification [26] as 0x02 if the transactionId has been assigned by the network - in a broadcast scenario this is implicit.

Due to the role of the transactionId as a versioning mechanism, any change to a control message will cause the transactionId of that control message to be incremented. Any change to a Module will necessitate incrementing its moduleVersion field. This change must be reflected in the corresponding field in the description of the Module in the DownloadInfoIndication message(s) that describes it. Since a field in the DownloadInfoIndication message is changed its transactionId must be incremented to indicate a new version of the message. Also, any change in the DownloadServerInitiate message implies that its transactionId must also be incremented. However, when the transactionId is divided into subfields as specified above, updating a message will change only the Version part of the transactionId while the Identification part remains the same.

Since the transactionId is used also for identifying the messages when referencing the messages in other structures, it is very desirable that these referenced would not need to be updated every time the control message is update. Therefore the following rule shall be applied when locating the messages based on the references:

When locating a message based on the transactionId value used for referencing the message, only the Identification part (bits 1…15) shall be matched.

Using this rule, the implications of updating a module can be limited to the module itself and the DownloadInfoIndication message describing the module. Also, this implies that if an MHP terminal wants to find out if a particular module that it has retrieved earlier has changed, it needs to filter the DownloadInfoIndication message that described that module and check if it has been changed.

B.2.6 Mapping of objects to data carousel modules

The DSM-CC Object Carousels allow one or more objects to be carried in one module of the data carousel. In order to optimize the performance and memory requirements three additional requirements are specified:

- When mapping objects to modules of a data carousel, only closely related objects should be put into one module. Objects that are not closely related should not be put into the same module. If in the process of retrieving an object from the carousel an MHP terminal acquires a module containing multiple objects, it should attempt to cache these since the expectation should be that the other objects are related to the object requested and probably will be needed soon.

- The size of a module that contains multiple objects should not exceed 65536 bytes when decompressed[1]. MHP terminals complying to this specification are only required to handle modules containing multiple objects where the module size when decompressed is 65536 bytes or less. Modules containing a single file message can exceed 65536 bytes with upper size only limited by the memory resources in the MHP terminal.

- In addition to the limitations imposed by the 65536 byte limit, directory and service gateway messages are limited to 512 object bindings per message.

B.2.7 Compression of modules

The modules may be transmitted either in uncompressed or compressed form. If the module is transmitted in compressed form, this is signalled by including the compressed_module_descriptor in the userInfo field of the moduleInfo in the DownloadInfoIndication message.

1. I.e. when the file has been decompressed from the file transport but before the content decoding has started.

Presence of the compressed_module_descriptor indicates that the data in the module has the "zlib" structure as defined in RFC 1950 [75].

Table B.33 shows the syntax of the compressed_module_descriptor:

Table B.33 : compressed_module_descriptor

	No. of bytes	Mnemonic	Value
compressed_module_descriptor(){			
descriptor_tag	1	uimsbf	0x09
descriptor_length	1	uimsbf	
compression_method	1	uimsbf	
original_size	4	uimsbf	
}			

Presence of the compressed_module_descriptor indicates that the data in the module has the "zlib" structure as defined in RFC 1950 [75]. Table B.34 shows the syntax of the ZLIB structure.

Table B.34 : zlib structure

	No. of bytes	Value	
zlib structure(){			
compression_method	1		
flags_check	1		
compressed_data	n		
check value	4		
}			

The MHP terminal shall support the Deflate compression algorithm as specified in RFC 1951 [76]. This is signalled setting the least significant nibble of the compression_method to 0x8 (i.e. compression_method is xxxx1000). The MHP terminal is not required to support other compression algorithms.

B.2.8 Mounting an Object Carousel

The ServiceGateway object is the root directory of the file system delivered by an Object Carousel and must be acquired before any other object can be downloaded. This may be achieved by two compatible mechanisms. The signalling of which mechanisms are being supported by a broadcast is provided by the carousel_id_descriptor. This descriptor may be included in the second descriptor loop of a PMT corresponding to a PID on which the DSI message for an Object Carousel is broadcast, i.e. the boot-PID.

In this specification the use of the carousel_id_descriptor for signalling is mandatory. The consequence is that if a PMT second descriptor loop contains a data_broadcast_id_descriptor that provides signalling for this specification, it shall also contain a carousel_id_descriptor.

Note: A single PID shall only contain messages from a single Object Carousel and so only one carousel_id_descriptor shall be present in any second descriptor loop. However, a single service may contain more than one Object Carousel. Consequently, the carousel_id_descriptor may appear more than once in any single PMT.

The acquisition of the ServiceGateway object may be via the standard DSI-DII mechanism. This shall be supported by all broadcasts regardless of signalling in the carousel_id_descriptor and shall be sufficient for all MHP terminals.

See also 10.2, "Program Specific Information" on page 209.

A broadcast may also contain additional information in the carousel_id_descriptor to support the "enhanced" boot mechanism. This is signalled by setting the formatId field for this descriptor to 0x01. This additional information is an aggregation of all the fields necessary to locate the ServiceGateway, also found in the DSI and DII messages. However, in such a case the module containing the ServiceGateway object shall be broadcast on the PID identified by the data_broadcast_id_descriptor. It is optional for both broadcasts and MHP terminals to support this mechanism.

B.2.8.1 carousel_id_descriptor

This descriptor is MPEG defined and in this specification may be included in the second descriptor loop of a PMT.

Table B.35 : Carousel identifier descriptor syntax

Syntax	bits	Type	Value
carousel_identifier_descriptor {			
descriptor_tag	8	uimsbf	0x13
descriptor_length	8	uimsbf	N1
carousel_id	32	uimsbf	
FormatID	8	uimsbf	
if(FormatID == 0x00) {			
for(i=0; i<N1-5; i++){			
private_data_byte	8		
}			
}			
if(FormatID == 0x01) {			
ModuleVersion	8	uimsbf	
ModuleId	16	uimsbf	
BlockSize	16	uimsbf	
ModuleSize	32	uimsbf	
CompressionMethod	8	uimsbf	
OriginalSize	32	uimsbf	
TimeOut	8	uimsbf	
ObjectKeyLength	8	uimsbf	N2 ≤ 4
for(i=0; i<N2; i++){			
ObjectKeyData	8	bslbf	
}			
for(i=0; i<N1-N2-21; i++){			
private_data_byte	8		
}			
}			
}			

carousel_id: The 32 bit field it identifies the object carousel with the corresponding carouselId.

FormatID: This 8 bit integer identifies whether the carousel supports the "enhanced boot" mechanism or not. The value 0x00 indicates "standard boot", 0x01 indicates that "enhanced boot" is possible.

ModuleVersion: This 8 bit integer is the version number of the module containing the service gateway. This is equivalent to moduleVersion in the DII.

ModuleId: This 16 bit integer is the identifier of the module in the carousel. This is equivalent to moduleId in the DII.

BlockSize: This 16 bit integer is the size in bytes of every block in the module (except for the last block which may be the same or smaller). This is equivalent to blockSize in the DII.

ModuleSize: This 32 bit integer is the size of the module in bytes. This is equivalent to moduleSize in the DII.

CompressionMethod: This 8 bit field identifies the compression algorithm defined in RFC 1950 [75] used to compress the module. It is equivalent to compression_method carried in the compressed_module_descriptor in the DII.

OriginalSize: This 32 bit integer is the size of the data (in bytes) carried by the module before it was compressed. It is equivalent to original_size carried in the compressed_module_descriptor in the DII.

If the module has not been compressed the values of OriginalSize and ModuleSize shall be equal and the value of CompressionMethod is not defined.

TimeOut: This 8 bit integer specifies the timeout in seconds for acquisition of all blocks of the module.

ObjectKeyLength: This 8 bit integer specifies the number of bytes of ObjectKeyData.

ObjectKeyData: These 8 bit values form an octet string that identifies the BIOP message that is the ServiceGateway message.

B.2.8.2 DVB-J mounting of an object carousel

DVB-J causes an object carousel to be mounted using `ServiceDomain.attach()`. It can be unmounted using `ServiceDomain.detach()`.

An application manager is also allowed to call these methods implicitly when launching or killing an application in order to access the signalled base directory of the application.

B.2.9 Unavailability of a carousel

Carousels become unavailable from the broadcast due to changes in the signalling including the following:

- The component signalled as carrying the DSI is removed from the PMT.
- Any value in the DSI changes.
- The value of carousel ID associated with the carousel changes.
- The program disappears from the PAT
- After an implementation dependent time general failure of the signalling (e.g. non-transmission of the PMT).

B.3 AssociationTag Mapping

B.3.1 Decision algorithm for association tag mapping

B.3.1.1 TapUse is **not** BIOP_PROGRAM_USE

The following figure illustrates the decision tree for identifying the elementary stream(s) by which the object carousel is distributed:

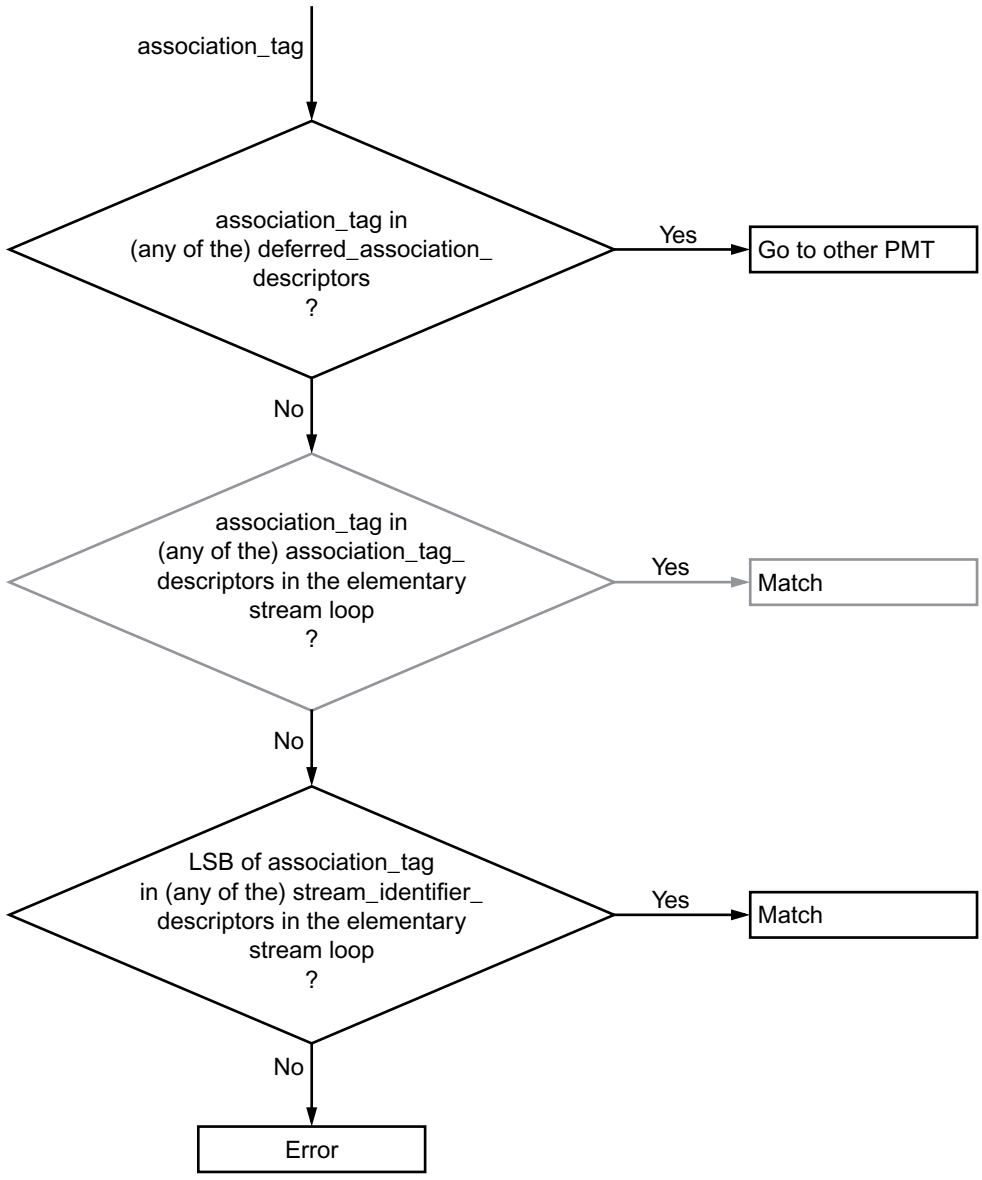


Figure B.1 : Object Carousel ES identification decision tree

In this specification, the stream_identifier_descriptor shall always be used for assigning a component_tag for the elementary streams. Use of association_tag_descriptors is not required. If the association_tag_descriptor is optionally used, a stream_identifier_descriptor shall still be present and the tag values shall be set consistently in each descriptor. This restriction simplifies the decision tree above so that the second decision can be skipped.

B.3.1.2 TapUse **is** BIOP_PROGRAM_USE

The decision tree in B.1 is not followed when resolving a `BIOP_PROGRAM_USE` tap as the only valid broadcast encoding is for a tap of use `BIOP_PROGRAM_USE` to resolve to `deferred_association_tags_descriptor` in the PMT even if the `deferred_association_tags_descriptor` identify the current service (i.e `stream` or `streamEvent` reference itself). If this resolution fails then there is an error in the broadcast.

B.3.2 DSM-CC association_tags to DVB component_tags

The component_tag in a PMT's stream_identifier_descriptor is used to relate SI service component information with an elementary stream without directly referring to a PID value. Likewise, assocation_tags are used by DSM-CC in order to refer to an elementary stream without directly referencing a PID value. An assocation_tag value is mapped to an elementary stream by matching the LSB of the assocation_tag with a component_tag. The stream_identifier_descriptor is mandatory for all components referenced by an application and/or object carousel.

Broadcasters may choose to use assocation_tag_descriptors (as defined by ISO/IEC 13818-6 [26]) which should (theoretically) be tested for a match before trying component_tags. However, the LSB of the assocation_tag value in an assocation_tag_descriptor has to be equal to the component_tag for that PID. Since the component_tag is unique within a PMT this removes the need to match against assocation_tag_descriptors.

The deferrered_assocation_tag_descriptor, as defined by ISO/IEC 13818-6 [26] section 11.4.3, is used to refer an association_tag to a different PMT (i.e. a different service). When attempting to map an assocation_tag to an elementary stream the assocation_tag must first be checked against any deferred_association_tag_descriptors in the current PMT (current in this context means the PMT of the service within which the assocation_tag is being mapped). If the association_tag matches any of the association_tags present in a deferred_assocation_tag_descriptor then the matching process restarts in the service indicated in that descriptor. If the transport_stream_id field in the deferred_association_tag_descriptor is set to 0x0000 then it shall be ignored and the MHP terminal is free to choose which transport stream ID it selects when obtaining a service.

B.3.3 deferred_association_tag_descriptor

The transport_stream_id field may take value 0x0000 in which case it shall be ignored in resolving this reference.

B.4 Example of an Object Carousel (informative)

The figure below illustrates an object carousel that is distributed over three elementary streams belonging to the same service.

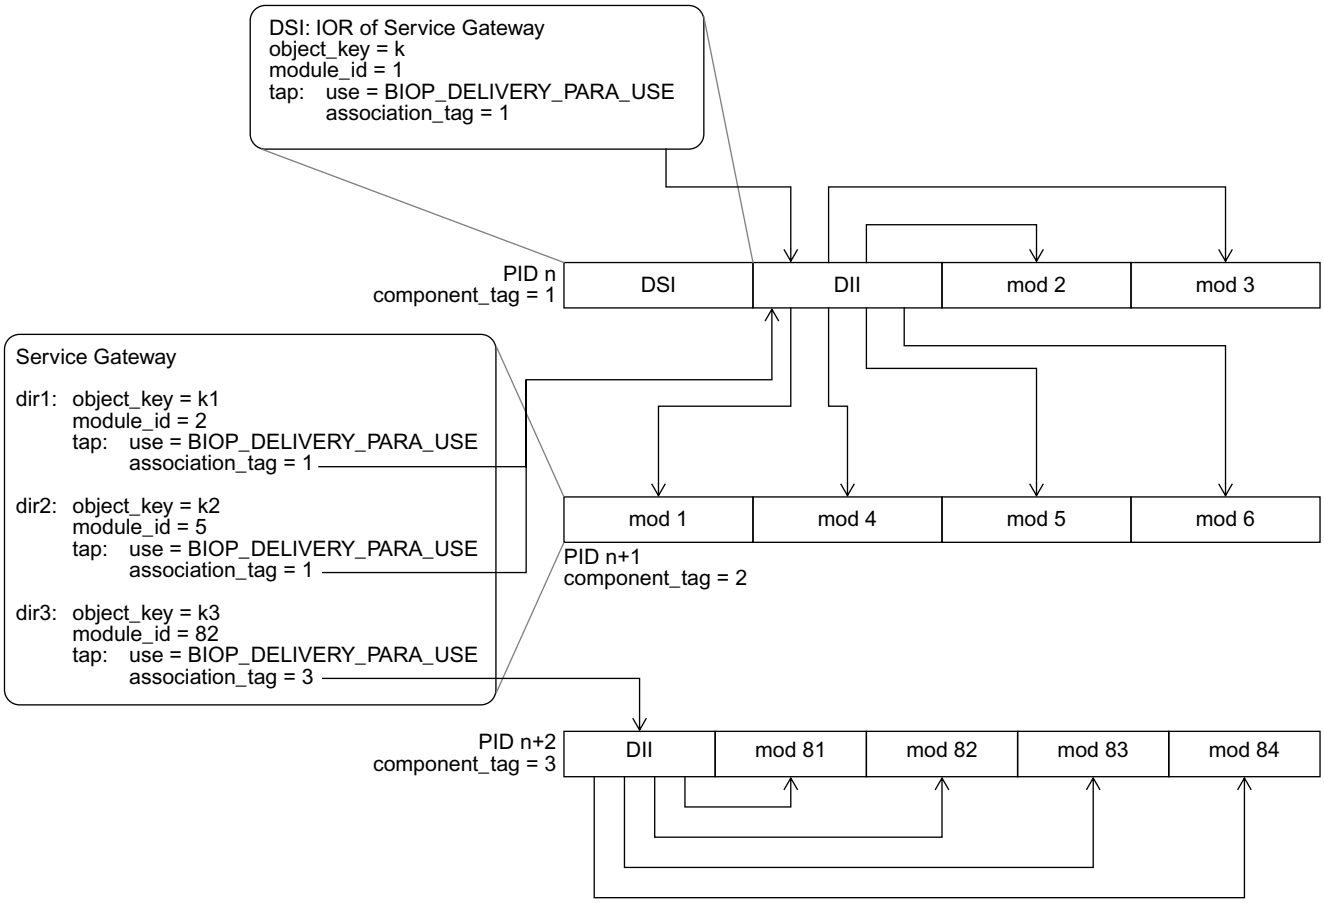


Figure B.2 : Example carousel

The DownloadServerInitiate (DSI) message is carried on the first elementary stream. It contains the object reference that points to the ServiceGateway. The tap with the BIOP_DELIVERY_PARA_USE points to a DownloadInfoIndication (DII) message that provides the information about the module and the location where the module is being broadcasted. In the example, the ServiceGateway object is in the module number 1 that is carried on the second elementary stream (indicated by a BIOP_OBJECT_USE tap structure in the DII message).

The ServiceGateway object is a root directory that, in this example, references three subdirectories. Taps with BIOP_DELIVERY_PARA_USE are used in the object references of the subdirectories to provide links to the modules via the DownloadInfoIndication (DII) message. The two first subdirectories "dir1" and "dir2" are referenced in the DII message that is carried in the first elementary stream. The third subdirectory is referenced in the DII message carried in the third elementary stream.

In this example, the two first elementary streams carry the messages of one logical data carousel while the third elementary stream carries the messages of another logical data carousel. All these belong to the same object carousel. In the example, the third elementary stream contains the objects in the "dir3" subdirectory and the objects in the "dir1" and "dir2" subdirectories are distributed over the first and second elementary stream.

It is important to note that the third elementary stream may originate from a completely separate source than the first two elementary streams. The directory hierarchy and objects contained in the third elementary stream are "mounted" in the root directory by providing the "dir3" directory entry with the appropriate location information.

This type of structure could be used, for example, in a national information service that contains some regional parts. The common national parts could be carried in this example case on the two first elementary streams that are distributed unmodified in the whole country. The regional parts are carried in the third elementary stream that is locally inserted at each region. From the application's point of view, the common national parts are in the "dir1" and "dir2" subdirectories while the regional parts are in the "dir3" subdirectory.

Another example where this type of structure could be used is if the service contains multiple independent applications. In this case, each application could be placed in its own subdirectory and these subdirectories might be carried as separate data carousels on different elementary streams.

B.5 Caching

This section describes the constraints that an MHP terminal compliant with this specification shall implement when caching any content from the object carousel in the memory of the MHP terminal. Caching is optional for the MHP terminal, but if implemented shall conform to the constraints set in this section.

B.5.1 Determining file version

There is no version number directly related to files (or other BIOP messages), the closest association is the moduleVersion in the DII that references the module that contains the BIOP message.Therefore,to ensure that a file is up to date the MHP terminal must determine that the moduleVersion for the appropriate module is current and reacquire if necessary.

When this checking is required is defined by the transparency level as specified in the following section.

B.5.2 Transparency levels of caching

The definition of transparency levels describes the behaviour that the MHP terminal shall implement when the content in the object carousel is changing. The transparency level determines how certain the MHP terminal is required to be about the validity of the content when returning the content to the application. The object carousel provides a mechanism for determining version changes of the content by monitoring the DII messages.

Validity of content is specified here in terms of the version number of the module that is broadcast in the DII message. The contents of an object as cached in the memory of the MHP terminal are defined to be valid at a certain point in time when the version number of the module in the cache matches the version number of the module as signalled in the DII message describing that module as it was last broadcast. Note that the definition is based on the DII message that was last broadcast and it may be that the MHP terminal was not filtering for this message at that time and did not receive it.

From the MHP terminal point of view, the transparency level indicates the constraints that the terminal needs to implement for monitoring the DII messages.

The broadcaster can indicate the appropriate transparency level that shall be applied for a given piece of content by using a descriptor associated with a module in the DII message (see "Caching priority descriptor" on page 391). In the absence of this descriptor from a module, the transparent caching is the default level.

B.5.2.1 Transparent caching

The transparent caching is a caching level that ensures that the application can not practically notice a difference in the validity of the returned content between an implementation that caches content and an implementation that does not cache any content. Naturally, an implementation that caches the content will return it to the application faster.

When returning content from the cache to the application, the MHP terminal shall ensure that the version number of the cached content matches the version number indicated in the current DII message describing that module. Once a DII has been received it can be assumed that it is current at least for 500 ms and after that period until receiving the next instance of the relevant DII. If filtering for that DII has not resumed by the end of this period, the state of that DII is to be considered unknown until it is received again.

Therefore, terminals must not return transparently cached data if it has waited more than half a second between receiving the relevant DII and *starting to filter* for that DII again. If the terminal does not resume filtering within the 500ms grace period, it must download the relevant DII again when it wishes to use that DII to check cache validity.

The choice of 500 ms is based on the normal timing uncertainty in data delivery through the broadcast chain and is independent of the repetition rate of the DII messages.

B.5.2.1.1 Active caching

There are several ways the MHP terminal can organise its caching strategy. One possible strategy is so-called active caching. This means that the terminal has a dedicated section filter for eachDII message it needs to monitor. Keeping that filter continuously filtering for the DII guarantees that the terminal will notice the update of a module as soon as it happens and can thus be aware of the validity of all the content it has cached.

However, in some cases the DII messages might be sent with a very high repetition rate that may cause a high processing load because the terminal needs to do some processing every DII message that it receives. The 500 ms grace period is designed to help this, as it allows the terminal to stop the section filter for 500 ms after receiving the DII message. This lessens the processing burden on the terminal as it only needs to process each DII message twice a second, even if it may be repeated on the transmission much more frequently.

B.5.2.1.2 Passive caching

With active caching, the terminal may need to have a dedicated section filter reserved for each DII message that it needs to monitor. This would effectively limit the amount of content that can be cached, possibly to a very small number. Therefore, the terminal may choose a so-called passive caching strategy. This means that the terminal does not even try to monitor for the DII messages continuously, but each time an application wants to retrieve an object, it at that time retrieves the current DII and checks if the cached content is still valid. Although, this strategy imposes a delay before returning the content to the application, this delay is usually significantly smaller than having to retrieve the content from the broadcast stream.

B.5.2.1.3 DII repetition rate

It should be noted that the description of active and passive caching are only informative here and terminal implementations can use any strategy fulfilling the normative constraints set above. However, broadcasters should set the repetition rate of the DIIs so that a terminal implementing the passive caching strategy will provide the expected benefits of caching over a terminal implementing no caching.

B.5.2.2 Semi-transparent caching

The semi-transparent caching level allows the MHP terminal to cache the data and also return slightly out-dated data to the application. The benefit of this caching level is that it allows terminals to cache larger quantities of content with a reasonable resource usage while allowing the data to be returned usually immediately to the application. The semi-transparent caching level provides less guarantees about validity of the content, but does not cause the delay implied by the passive caching strategy with the transparent caching level.

When returning content from the cache to the application, the terminal shall ensure that the version number of the cached content matches the version number indicated in a valid DII message describing that module. Once a DII has been received it can be assumed to be valid at least for 30 s and after that period until receiving the next instance of the relevant DII. If filtering for that DII has not resumed by the end of this period, the state of that DII is to be considered unknown until it is received again.

Therefore, terminals must not return semi-transparently cached data if it has waited more than 30 seconds between receiving the relevant DII and starting to filter for that DII again. If the terminal does not resume filtering within the 30 s grace period, it must download the relevant DII again when it wishes to use that DII to check cache validity.

B.5.2.2.1 Implications for the terminal (informative)

Reasons for selecting the 30 s value for the grace period in the semi-transparent caching level are different from the reasons for the 500 ms grace period in the transparent level. The 30 s grace period in this level is intended e.g. to allow terminals to keep typically a valid copy of each DII by retrieving each DII in a round robin fashion using a single section filter. Naturally, whether this goal can be achieved, depends on the repetition rate of the DIIs and the amount of content that is cached. If this is not possible, the terminal might use the passive caching strategy with this transparency level as well. These strategies are only examples and the terminal may implement any strategy as long the normative constraints defined above are fulfilled (this includes implementing no caching as it is optional, as well as treating the semi-transparent level the same as the transparent level).

B.5.2.3 Static caching

When using the static caching transparency level, the MHP terminal shall check the validity of the cached content from the version number in the DII message when it is used for the first time during the lifetime of an application instance. After the first usage time, the MHP terminal does not need to check the validity of the content during the lifetime of that application instance.

B.5.2.3.1 Implications for the broadcaster (informative)

This has the implication, that content with this transparency level is appropriate for very static content that is updated only rarely and where the possible update of the content does not need to be noticed by the application during the lifetime of one application instance.

B.5.2.3.2 Implications for the terminal (informative)

The MHP terminal, however, is allowed to update the contents of the statically cached files if it notices that they have been updated in the carousel as well as use any caching strategy as long as the normative constraint defined above are fulfilled (this includes implementing no caching as it is optional, as well as treating the static level the same as the semi-transparent and/or the transparent level).

Annex C (informative): References

	Reference	Edition	Description	Note
[A]	MHP045	Rev.11	Digital Video Broadcasting (DVB); Commercial requirements	
[B]	UK MHEG Profile	1.05	Digital Terrestrial Television MHEG-5 Specification, U. K. DTG	
[C]	Compilers	ISBN: 0201100886	Compilers: Principles, Techniques, and Tools by Alfred V. Aho, Ravi Sethi, Jeffrey D. Ullman (Contributor); Addison-Wesley Pub Co	
[D]	Porter-Duff		T. Porter and T. Duff, "Compositing Digital Images", SIGGRAPH 84, 253-259.	
[E]	Java Media Player guide	1.03, Nov 6, 1997	Sun Microsystems Java Media Player guide, Java Media Players. Version. http://java.sun.com/products/java-media/jmf/forDevelopers/playerguide/index.html.	
[F]	Java VM2	ISBN: 0-201-43294-3	The Java Virtual Machine Specification (2nd edition), T. Lindholm and F. Yellin, Addison-Wesley.	
[G]	Java Class Libraries Vol. 1	ISBN 0-201-31002-3	The Java Class Libraries, Second Edition, Volume 1 by Patrick Chan, Rosanna Lee and Douglas Kramer.	
[H]	Java Class Libraries Vol. 2	ISBN 0-201-31003-1	The Java Class Libraries, Second Edition, Volume 2 by Patrick Chan and Rosanna Lee.	
[I]	E-Book	1.1	EACEM Technical Report Number TR-030, Baseline Digital Terrestrial TV Receiver Specification.	
[J]	RFC 2068	January 1997	Hypertext Transfer Protocol version 1.1	
[K]	RFC 2838	May 2000	Uniform Resource Identifiers for Television Broadcasts	
[L]	Accessibility	5 May 1999	W3C Recommendation: "Web Content Accessibility Guidelines 1.0" http://www.w3.org/TR/WAI-WEBCONTENT	

Annex D (normative): Text presentation

D.1 Scope

This section addresses the following topics:

- How downloaded fonts are associated with applications and accessed by them
- The DVB-J APIs that are used for presenting text and their behaviour

Two levels of interface are addressed:

- Simple string rendering as supported by `java.awt.Graphics.drawString`
- More complex text object rendering as supported by DVB Text Layout Manager as described in U, "(normative): Extended graphics APIs" on page 753.

Other parts of this specification that are related to this topic are:

- For character sets supported by implementations see E, "(normative): Character set" on page 434.
- For the font families, sizes, styles and weights supported by implementations see and the presentation of this to the API G.4, "Resident fonts and text rendering" on page 445.
- For the content formats used to deliver fonts see 7.4, "Downloadable Fonts" on page 67.

D.2 Fonts

D.2.1 Embedded fonts

See G.4, "Resident fonts and text rendering" on page 445.

D.2.2 Downloaded fonts

D.2.2.1 Font technology

See 7.4, "Downloadable Fonts" on page 67.

D.2.2.2 Font index files

D.2.2.2.1 Format of file

The font index file provides a mapping between a font face name and a file containing the font data. The file syntax is defined by the XML DTD shown in table D.1.

Table D.1 : Font index file syntax definition

```
<!ELEMENT fontdirectory (font+)>
   <!-- a font definition -->

<!ELEMENT font (name,fontformat,filename,style*,size?)>
   <!-- filename of the font file.
   Because the font directory is per directory, this should
   not contain any directories, but just be a file in that
   directory -->

<!ELEMENT filename (#PCDATA)>
   <!-- font format, e.g. "PFR" -->

<!ELEMENT fontformat (#PCDATA)>
   <!-- symbolic name of the font -->

<!ELEMENT style (#PCDATA)>
   <!-- font style -->

<!ELEMENT name (#PCDATA)>

<!ELEMENT size EMPTY>
<!ATTLIST size
   min CDATA "0"
   max CDATA "maxint"
>
```

The `PublicLiteral` to be used for specifying this DTD in document type declarations of the XML files is:

```
"-//DVB//DTD Font Directory 1.0//EN"
```

and the URL for the `SystemLiteral` is:

```
"http://www.dvb.org/mhp/dtd/fontdirectory-1-0.dtd"
```

The `Name` used in the document type declaration shall be "fontdirectory".

D.2.2.2.2 Element semantics

font: There shall be one font element per font file included in the font directory.

name : Contains the font face name of the font (e.g. "Helvetica")

fontformat : The file format of the font. For the PFR format used in this specification, this shall be "PFR".

filename: Relative path to the font file. This is relative to the directory containing the font index file. The separator character for directories is "/". As this is a relative path, it shall not begin with a "/" character.

style : The style elements contain the names of the styles of the font that are contained in this font file. The possible values for this specification are "PLAIN", "BOLD", "ITALIC" and "BOLD_ITALIC". There is one style element included per style contained in the indicated font file, except when all the usable styles of the font are in the same file in which case the style elements can be left out. When different styles of the font are contained in separate files, these are included in the directory as separate font entities with the same name but different style and filename.

size: Indicates the size range for which this font file can be used. The min. attribute contains the minimum size in points (default is "0"). The max attribute contains the maximum size in points or "maxint" if the maximum size is not limited (default is "maxint").

If all the usable sizes of the font are generated using the same font file, the size element can be left out. If there are separate files for different sizes, these are included in the directory as separate font entities with the same name and style but different size definition and filename.

D.2.2.2.3 Example

Table D.2 : Example index file

```
<?xml version="1.0"?>

   <!DOCTYPE fontdirectory PUBLIC "-//DVB//DTD Font Directory 1.0//EN"
   "http://www.dvb.org/mhp/dtd/fontdirectory-1-0.dtd">
   <fontdirectory>
      <font>
         <name>Tiresias</name>
         <fontformat>PFR</fontformat>
         <filename>tiresias.pfr</filename>
         <style>BOLD</style>
      </font>
      <font>
         <name>Broadcaster X Screen Font</name>
         <fontformat>PFR</fontformat>
         <filename>brxsf.pfr</filename>
      </font>
   </fontdirectory>
```

D.2.2.3 Name and location of font index files

D.2.2.3.1 General

The specification of font paths and fonts by an application are private to that application, they are not available to other applications.

If the application creates a Font object with a *font face name* that is the same as one of the receiver's resident fonts then the specified font is used instead of the resident font with the same name. So, a downloaded font with *font face name* of "Tiresias" or "SansSerif" overrides any resident font with that name (see G.4, "Resident fonts and text rendering" on page 445).

D.2.2.3.2 Name of file

The file name shall be:

```
"dvb.fontindex"
```

D.2.2.3.3 Location

The font index file shall be placed in the base directory of the application.

The referenced font files can be on other file systems. However, the other file system must have already been mounted for the file loading to be successful. Font loading problems caused by referencing an unmounted file system are handled with the behaviour specified in java.AWT for an unavailable font.

D.2.2.4 Specification of fonts at run time

D.2.2.4.1 DVB-J

The implementation locates the font file using the parameters passed to the `java.awt.Font` constructor.

```
public Font(String name,
                        int style,
                        int size)
```

The font file is located by searching the directory for a file where the name element matches the name parameter of the `Font` constructor, a `style` element matches the style parameter and the `size` parameter is within the limitations in the size element.

It is font format specific how the font information for a given style and size is encoded in the font file.

D.3 Text rendering

D.3.1 Philosophy

This section describes "logical" rules that ensure text flows predictably on all receivers and defines some rendering requirements to ensure that a minimum acceptable level of text legibility is achieved.

No restriction is placed on the rendering technology used in a receiver provided that it achieves the deterministic text flow characteristics and the minimum rendering requirements described in this section.

D.3.2 Low and high level rendering

Two levels of interface are addressed:

D.3.2.1 Low level rendering

Simple string rendering as supported by:

- `java.awt.Graphics.drawString`
- `java.awt.Graphics.drawChars`
- `java.awt.Graphics.drawBytes`

This is referred to as "low level" rendering implying that the application author has significant responsibilities for ensuring that the text is visible. This rendering obeys the normal AWT rules. For example, the author is responsible for placing individual words or lines of text on to a component.

D.3.2.2 High level rendering

More complex text object rendering as supported by:

- `org.dvb.DVBTextLayoutManager`

This is referred to as "high level" rendering implying that the application author may need less effort to ensure that the text is visible. For example, the author could use the text layout manager to handle flowing paragraphs of text into an `org.havi.ui.HText` object

D.3.3 Font Definition

The nomenclature used in this section is derived from the resident font format(s). The nomenclature and the numerics provided here are directly applicable to downloaded fonts.

Font bounds

The font definition induces a set of parameters `xMin`, `xMax`, `yMin` and `yMax` that are **properties of the font**. These define the maximum extent of the outline representation of characters within the physical font, and as such are defined in terms of outline resolution units (outlineResolution).

(xMin, yMin) and (xMax, yMax) are the bottom-left and top-right corners of an imaginary bounding rectangle within which all characters in the font can be completely enclosed.

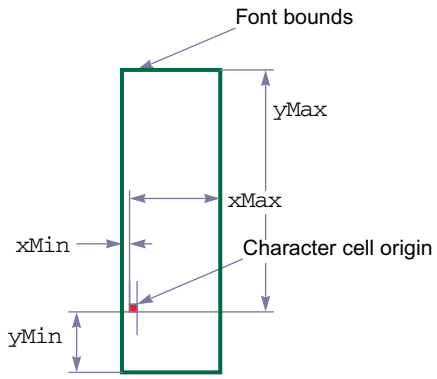


Figure D.1 : Font bounds

In "Low level rendering" the author is responsible for using knowledge of these values to correctly position text. The following Java methods provide access to these parameters:

- `java.awt.FontMetrics.getMaxAscent` derives from `yMax`
- `java.awt.FontMetrics.getMaxDescent` derives from `yMin`
- `java.awt.FontMetrics.getMaxAdvance` derives from `xMax`

In each case the value returned is that in the font definition converted into the AWT device pixels. Typically there is a loss of precision in this process as the font is typically defined at higher resolution than the display device. In addition, precision may be lost if the aspect ratio of the font coordinate system is different from that of pixels in the display.

`java.awt.FontMetrics.stringWidth` contains the summated string widths of all of the characters in the string taking into account `xMin` & `xMax` plus any adjustments in the font such as kerning.

All approximations shall round up (see D.3.5, "Rendering within limits" on page 426).

In "High level rendering" the text layout manager uses this information this information when managing text flow to guarantee that the extremities of all characters are completely within the object. See D.3.5, "Rendering within limits" on page 426.

D.3.3.1 "Physical" font data

"Physical" font data such as horizontal escapement and kerning is defined in terms of metrics resolution units (metricsResolution). This is a high resolution representation, abstracted from any actual rendering system.

NOTE: The outlineResolution and metricsResolution are not necessarily the same.

D.3.4 Converting font metrics to display pixels

Many of the calculations in this section are in a high resolution physical coordinate system, either metrics or outline resolutions. These values need to be converted into the pixel resolution of the HGraphicsDevice to allow characters to be rendered.

Values in terms of these high level resolutions can be simply converted to values in terms of points by multiplying by the font size (in points) and dividing by the resolution, i.e. metricsResolution or outlineResolution as appropriate. However, this value in points still needs to be converted into a value in pixels.

Computer display systems typically assume a 72 pixel per inch display. So, as each point is 1/72 inch, the horizontal and vertical size of each pixel is 1 point.

D.3.4.1 Vertical resolution

Each pixel in the graphics device containing the component is equivalent to a single point.

D.3.4.2 Horizontal resolution

The horizontal relationship depends on the characteristics of the graphics device. For a square pixel graphics device the 1 pixel = 1 point convention can be preserved.

However, for a graphics device whose pixel aspect ratio is given by `org.havi.ui.HScreenConfiguration.getPixelAspectRatio` the horizontal resolution is the pixel aspect ratio * 1 point.

Table D.3 : Pixel width for non-square pixel graphics devices

Graphics device resolution	Graphics device aspect ratio	Typographic pixel size width in points
720 x 576	4:3	128/117
	14:9	56/45
	16:9	512/351

An emulated graphics could be constructed with 14:9 aspect ratio. This could be used where text is required to be acceptable when viewed on either a 4:3 or 16:9 display. A possible example of this is illustrated in figure D.2.

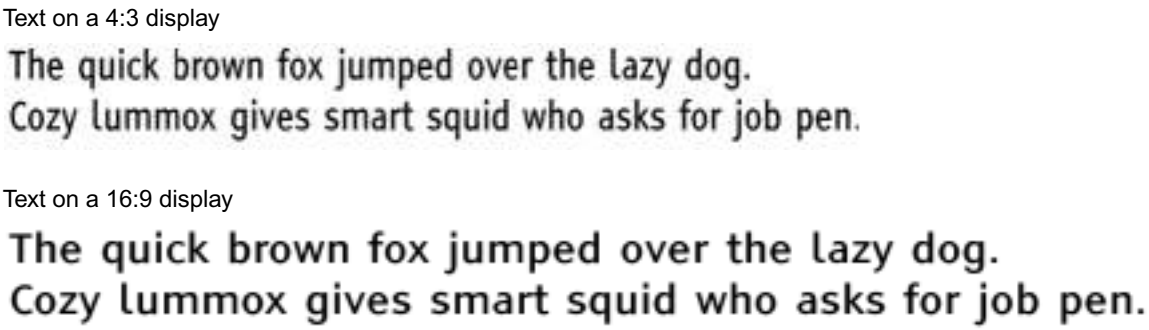


Figure D.2 : Example of 14:9 text on either 4:3 or 16:9 display

D.3.5 Rendering within limits

When typesetting for print, character extremities may extend beyond the nominal text flow area. However, print has margins so the edge of the text flow is not the technical limit to the area that can be printed. Component Insets can be used for the same purpose.

In "Low level rendering" the author is responsible for placing the text so that is not clipped.

In "High level rendering" the layout manager places the text within the inset rectangle, so that clipping does not occur if the object is sufficiently large. So, the "virtual margin" shall be defined as the greater of the inset value and the value computed using properties of the font (`xMin`, `yMin`, `xMax` and `yMax`) to ensure that all presented characters are completely rendered within the bounds of the object.

As stated previously, these parameters are defined in outline resolution units and so need to be converted to device pixels. Based on the principles described previously (see "Converting font metrics to display pixels") this can be achieved by using the following:

For `yMin and yMax`

Y_{points} = (fontsize x $Y_{outlineResolution}$) / outlineResolution

Y_{pixels} = roundupmag(Y_{points})

and for `xMin and xMax`

X_{points} = (fontsize x $X_{outlineResolution}$) / outlineResolution

X_{pixels} = roundupmag(X_{points} / pixel_aspect_ratio)

outlineResolution is extracted from the font. The function roundupmag(A) rounds the magnitude of A to the first integral number greater than or equal to A, whilst preserving the sign, e.g. roundupmag(-4,32) = -5.

D.3.5.1 Vertical limits

The origin of any character shall be at least `yMax` inside the top edge of the object and at least `yMin` inside its bottom edge. The distance from the edge of the component may be further increased by any margin. Assuming that all characters in a line of text share a common baseline then, **regardless of vAlign** the number of lines of text that may be presented within a text object is:

num_lines = floor((object_height - (`yMin + yMax`)) / linespace) + 1

Where object_height is the height of the component less any margin.

All values are in pixels. The variable linespace is an attribute of the object that defines the space between the baselines of consecutive lines of text. The function floor(A) rounds A to the first integral number less than or equal to A.

Note: Linespace is defined in units of points but as described previously (see "Converting font metrics to display pixels").

- When `vAlign` = `TOP_ALIGN` the baseline of the top most line shall be `yMax` inside the "virtual margin" and each following line shall be spaced according to the value of linespace.

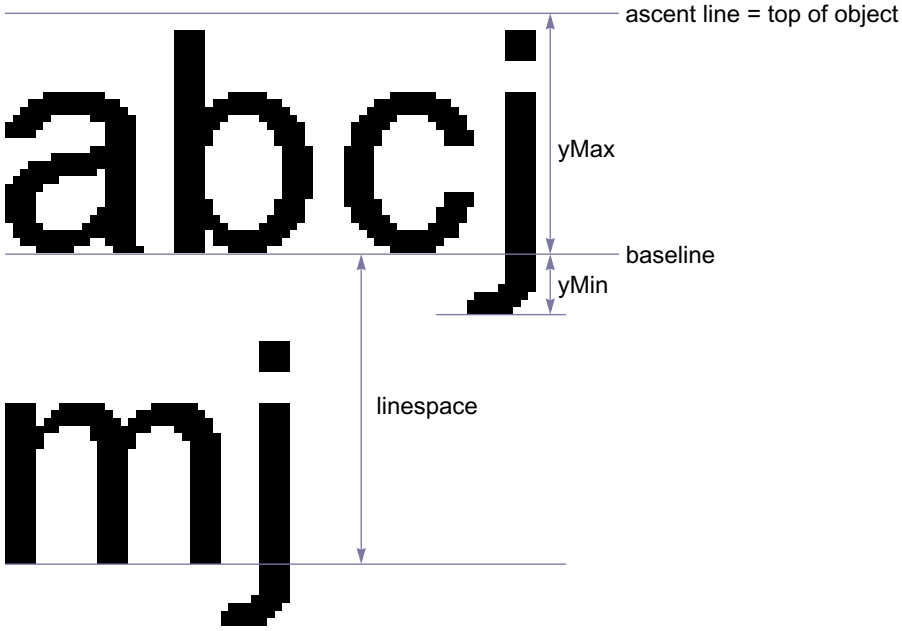


Figure D.3 : Vertical measures

- When `vAlign` = `BOTTOM_ALIGN` the origin of the bottom most line shall be `yMin` inside the "virtual margin" of the object and each previous line shall be spaced according to the value of linespace.
- For centring the midpoint of each line shall be the midpoint of the distance between the relevant "virtual margins"

D.3.5.2 Horizontal limits

The number of characters that may be rendered on a line is not simply dependent upon the width of the object and the horizontal escapement for each character, but also needs to consider that the rendering of the first character in a line may extend to the left of its origin. Thus, **regardless of** `hAlign` the space available for rendering a line of text within an object is

available_width = object_width - `xMin`

All values are in pixels. available_width may then be used with the "logical" text width rules to determine text flow.

- When `hAlign` = LEFT_ALIGN the origin of the left most character shall be `xMin` inside the left edge of the "virtual margin".
- When `hAlign` = RIGHT_ALIGN the origin of the right most character shall be as necessary to ensure that it is completely visible when rendered.

D.3.6 "logical" text width rules

This clause applies to both "Low level rendering" and "High level rendering". Its purpose is to ensure that text will flow predictably on different receivers and authoring stations, regardless of the quality of the character rendering, a set of "logical" text width rules are defined here.

NOTE: I.e. lines and words will break at the same character position.

These rules are a simplification of the rules that might be applied in a typographic rendering system. The objective of these simplifications is to reduce the receiver complexity required to ensure exact correlation of text flow behaviour.

The calculation of "logical" text width is based on "physical" font data. This data provides a description of the font at a very high resolution, abstracted from any actual rendering system. Consequently, the calculation of the "logical" width of a string of characters involves, computing their width at this high resolution and then converting to units appropriate to the rendering system, e.g. device pixels, before making decisions about text flow (see "Converting font metrics to display pixels").

In the case of "Low level rendering" it defines the internal computation performed by the AWT routines that measure the width of text:

- `java.awt.FontMetrics.charWidth`
- `java.awt.FontMetrics.stringWidth`
- `java.awt.FontMetrics.bytesWidth`

Due to the rounding processes within the calculations invoking these methods on subsets of a string may not yield the same total result as invoking the methods on the complete string. In particular the total of the values returned by `java.awt.FontMetrics.getWidths` may be different from the value returned by `java.awt.FontMetrics.stringWidth` for the same string.

In the case of "High level rendering" it defines the computations that the layout manager uses in the following cases:

- to determine when to wrap lines of text within an object
- to determine which tab stops text has passed when implementing tab characters

D.3.6.1 Computing "logical" text width

The key parameters when calculating the width of a string of N characters are:

- text font size
- charSetWidth
- The metricsResolution
- Any kerning adjustment

D.3.6.1.1 Font sizes

Font sizes are expressed as the size of an "Em" in units of "points".

NOTE 1: Broadly speaking an Em is the minimum distance between the baselines of consecutive lines of text in the given font. If text is 48 point then the Em at that size is 48 points.

NOTE 2: The point is an archaic typographical unit. Traditionally there were 72,27 points to an inch. Computerised systems now use 72 points per inch for simplicity.

D.3.6.1.2 Character widths

The font definition gives the width of each character relative to the size of an Em in metricsResolution units.

NOTE: If metrics are specified in 1/1000ths of an Em a character with a width of 0,6 Em will have a set width of 600.

D.3.6.1.3 Kerning

For certain character combinations (a "kerning pair") a kerning adjustment may also be provided. Typically kerning reduces character spacing for pairs such as AV instead of A V, these provide a signed adjustment to the nominal charSetWidth of the first character.

Like charSetWidth kerning adjustments are in terms of metricsResolution units.

Kerning adjustments only apply between non whitespace characters, not between the start of a line of text and the edge of the text object. If justification is being used, only whitespace between words may be adjusted.

D.3.6.1.4 Tracking

Tracking allows for an expansion/condensation of the character spacing for all of the characters in a text object including whitespace.

D.3.6.2 Logical text width

The equation below shows how the width of a string of N characters is computed.

$$\text{logical width of N characters}_{\text{points}} =$$

$$\text{div}((N-1)\times \text{track},256) + \text{div}\left(\text{fontsize}\times\left(\sum_{1}^{N}\text{charSetWidth[i]} + \sum_{1}^{N-1}\text{kern[i,i+1]}\right),\text{metricsResolution}\right)$$

$$\text{logical width of N characters}_{\text{pixels}} = \text{div}(\text{logical width of N characters}_{\text{points}}\times H,W)$$

Where in div(A, B):

- B is unsigned and A is signed

  and

- div(A, B) = ceil(A / B)

Where '/' is a rational divide and ceil(A) is the first integral number greater than or equal to A. So, the calculations round up when reducing precision and tend to over estimate the width of text.

Where H and W are respectively the height and width returned by `org.havi.ui.HScreenConfiguration.getPixelAspectRatio()`.

D.3.7 Line breaking

The text layout manager shall wrap text within the text object. The behaviour is equivalent to identifying (based on the "logical" length) the first word that won't fit completely within the text object and replacing the space character that precedes the word with a Carriage Return character. I.e. line breaks are only inserted where there are space characters, this implies the receiver does not have to apply word hyphenation rules.

If a single word is bigger than the text object the text layout manager shall truncate text just before the last character that won't fit completely within the text box.

D.3.7.1 Truncation of text

High Level Text rendering shall not result in the presentation of partial characters.

If an object is too small to display all of the text that it contains the text shall be truncated so that only complete characters are displayed, the notifyTextOverflow method will be called so that the application can alert the viewer or take other remedial action.

If the object is not tall enough to be able to display all of the lines of text loaded to it then the rendering shall only display lines whose height can be completely displayed.

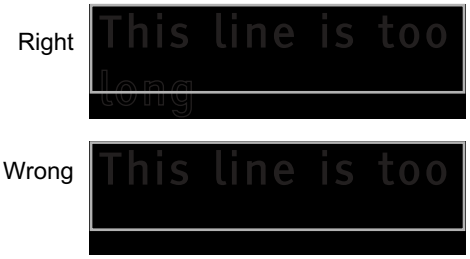


Figure D.4 : Truncation at vertical "end" edge

The examples illustrate the behaviour where `hAlign` is LEFT_ALIGN and vAlign is TOP_ALIGN. For other values the handling should be based on the same principles.

D.3.8 Tabulation

In left aligned text tab stops are defined by default horizontally every 56 points from the left edge of the text box.

"Horizontal Tabulation" advances the origin of the next character to be rendered to the next tab stop in the direction that the text is currently flowing (the character repertoire in Table E.1 only requires left to right text).

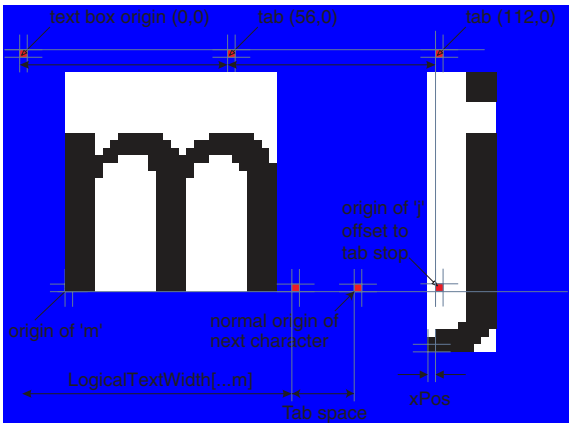


Figure D.5 : Effect of horizontal tabulation

- Tab characters only have meaning in left aligned text. If the text is right aligned, centred or justified then tab character shall be treated as a space character.
- A tab logically advances the rendering of the text by at least the width of a space character. If the normal origin of the next character to be rendered after the tab character is after a tab stop, a tab character will advance the rendering to the subsequent tab stop.
- The tab stops are at regular intervals from the left edge of the object and are not affected by the `xMin` offset to the origin of the first character.

D.3.9 Placing runs of characters & words

A run of characters starts from a well defined point:

- The start edge of the text object (see D.3.5 on page 426)
- A tab stop

After this origin the fine positioning of character cells and the gaps between words is not fully specified.

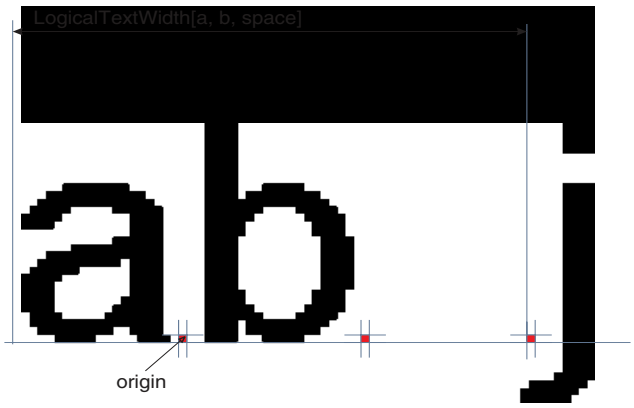


Figure D.6 : Calculation of character placement

However, the following rendering requirements shall be observed to ensure that a minimum acceptable level of text legibility is achieved:

- The spacing between any pair of non whitespace characters should be consistent wherever that pair of characters is displayed.
- At the default character spacing no two non-whitespace characters should "appear" to touch, except for special cases such as where ligatures dipthongs etc. are being used. The definition of the underlying font may make this requirement impossible.
- The physical rendering of a run of text as determined by the "logical" rules shall be achieved completely within the space used for the "logical" calculation.
- No partially rendered characters shall be presented.

D.3.10 Control of text flow

See the definition of the DVB text layout manager.

D.4 Text mark-up

This clause on text mark-up applies to "High level rendering".

D.4.1 White Space Characters

Certain non-printing characters have special meaning. These are identified in Table D.4.

Table D.4 : Special characters

UTF8 Value(s)	Name	Meaning
0x09	Tab	See “Tabulation” on page 430
0x0D	Carriage Return	Causes the text flow to break. The origin for the next character to be rendered moves to a new baseline "linespace" below that just rendered. The horizontal position of the next line will depend on the `hAlign`.
0x20	Space	Spaces text by the width defined for the space character. When a text object has the TextWrapping attribute set to "true" lines may be broken at a space. See D.3.7, "Line breaking" on page 430.
0xC2 0xA0	Non-breaking space	Identical spacing characteristics to 0x20 but is not seen as word boundary for deciding a position to break a line of text. (0xC2A0 is the UTF-8 representation of 0x00A0)

D.4.2 Marker characters

The codes 0x1C to 0x1F are zero width, non-spacing, non-printing characters available for use by authors as markers in text objects, i.e. when using string operations.

D.4.3 Non-printing characters

Certain characters (or character sequences) have no immediate visual representation.

These include:

- 0x1C to 0x1F marker characters (see D.4.2 on page 432)
- Format control mark-up (see D.4.4 on page 433)
- other characters not recognised by the receiver

When presenting text that includes these characters the character placement shall be as if the non-printing characters were eliminated from the text before rendering. In particular, the character spacing and inter character kerning shall be computed as if the non-printing characters were not present.

D.4.4 Format Control Mark-up

Within text objects mark-up codes can be used to control the presentation of text. The sequence in table D.5 marks the start of some marked-up text. For each "start of mark-up" a corresponding "end of mark-up" is defined. The byte sequence for the "end of mark-up" is illustrated in Table D.6. The minimum number of supported mark-up instances, where each instance is a start and end mark-up pair, is 256.

Table D.5 : General format for start of text mark-up

	bits	value	note
`start_of_markup`	8	0x1B	Escape
`markup_start_identifier`	8	0x40-0x5E	"@" to "^"
`parameters_length`	8	N	
`for( i=0; i<N; i++ ) {`			
`  parameter_byte`	8	0x00…0xFF	
`}`			

Table D.6 : General format for end of text mark-up

	bits	value	note
`end_of_markup`	8	0x1B	Escape
`markup_end_identifier`	8	0x60-0x7E	"`" to "~"

Table D.7 : Text object mark-up codes

Min. Nesting	start mark-up	end mark-up	description
	0x1B 0x42 0x00	0x1B 0x62	Applies "bold" style to the text enclosed (note 1)
16	0x1B 0x43 0x04 0xrr 0xgg 0xbb 0xtt	0x1B 0x63	Applies colour to the text enclosed. 0xrr specifies the red intensity, 0xgg the green, 0xbb the blue and 0xtt the transparency.
NOTE 1: Not supported in this profile			

D.4.5 Future compatibility

Compatible extensions to the set of mark-up codes may be defined in future profiles. For each the `markup_end_identifier` will be 32 (0x20) greater than the `markup_start_identifier`. Engines shall ignore unrecognised mark-up and shall display any text enclosed within an unrecognised mark-up.

Annex E (normative): Character set

E.1 Basic Euro Latin character set

The MHP shall be able to *display* and *accept as input* at least the set of characters shown in table E.1 "Extended Latin set".

The range of characters accepted as input may be limited by the capabilities of the available input devices. This paragraph does not imply that keyboards (real and virtual) for MHP terminals are required to support input of this full character set.

Table E.1 : Extended Latin set (Sheet 1 of 9)

Code	Unicode 2.0 Character name
0x0020	SPACE
0x0021	EXCLAMATION MARK
0x0022	QUOTATION MARK
0x0023	NUMBER SIGN
0x0024	DOLLAR SIGN
0x0025	PERCENT SIGN
0x0026	AMPERSAND
0x0027	APOSTROPHE
0x0028	LEFT PARENTHESIS
0x0029	RIGHT PARENTHESIS
0x002A	ASTERISK
0x002B	PLUS SIGN
0x002C	COMMA
0x002D	HYPHEN-MINUS
0x002E	FULL STOP
0x002F	SOLIDUS
0x0030	DIGIT ZERO
0x0031	DIGIT ONE
0x0032	DIGIT TWO
0x0033	DIGIT THREE
0x0034	DIGIT FOUR
0x0035	DIGIT FIVE
0x0036	DIGIT SIX
0x0037	DIGIT SEVEN
0x0038	DIGIT EIGHT
0x0039	DIGIT NINE
0x003A	COLON
0x003B	SEMICOLON
0x003C	LESS-THAN SIGN
0x003D	EQUALS SIGN

Table E.1 : Extended Latin set (Sheet 2 of 9)

Code	Unicode 2.0 Character name
0x003E	GREATER-THAN SIGN
0x003F	QUESTION MARK
0x0040	COMMERCIAL AT
0x0041	LATIN CAPITAL LETTER A
0x0042	LATIN CAPITAL LETTER B
0x0043	LATIN CAPITAL LETTER C
0x0044	LATIN CAPITAL LETTER D
0x0045	LATIN CAPITAL LETTER E
0x0046	LATIN CAPITAL LETTER F
0x0047	LATIN CAPITAL LETTER G
0x0048	LATIN CAPITAL LETTER H
0x0049	LATIN CAPITAL LETTER I
0x004A	LATIN CAPITAL LETTER J
0x004B	LATIN CAPITAL LETTER K
0x004C	LATIN CAPITAL LETTER L
0x004D	LATIN CAPITAL LETTER M
0x004E	LATIN CAPITAL LETTER N
0x004F	LATIN CAPITAL LETTER O
0x0050	LATIN CAPITAL LETTER P
0x0051	LATIN CAPITAL LETTER Q
0x0052	LATIN CAPITAL LETTER R
0x0053	LATIN CAPITAL LETTER S
0x0054	LATIN CAPITAL LETTER T
0x0055	LATIN CAPITAL LETTER U
0x0056	LATIN CAPITAL LETTER V
0x0057	LATIN CAPITAL LETTER W
0x0058	LATIN CAPITAL LETTER X
0x0059	LATIN CAPITAL LETTER Y
0x005A	LATIN CAPITAL LETTER Z
0x005B	LEFT SQUARE BRACKET
0x005C	REVERSE SOLIDUS
0x005D	RIGHT SQUARE BRACKET
0x005F	LOW LINE
0x0061	LATIN SMALL LETTER A
0x0062	LATIN SMALL LETTER B
0x0063	LATIN SMALL LETTER C
0x0064	LATIN SMALL LETTER D
0x0065	LATIN SMALL LETTER E
0x0066	LATIN SMALL LETTER F
0x0067	LATIN SMALL LETTER G
0x0068	LATIN SMALL LETTER H
0x0069	LATIN SMALL LETTER I
0x006A	LATIN SMALL LETTER J
0x006B	LATIN SMALL LETTER K
0x006C	LATIN SMALL LETTER L

Table E.1 : Extended Latin set (Sheet 3 of 9)

Code	Unicode 2.0 Character name
0x006D	LATIN SMALL LETTER M
0x006E	LATIN SMALL LETTER N
0x006F	LATIN SMALL LETTER O
0x0070	LATIN SMALL LETTER P
0x0071	LATIN SMALL LETTER Q
0x0072	LATIN SMALL LETTER R
0x0073	LATIN SMALL LETTER S
0x0074	LATIN SMALL LETTER T
0x0075	LATIN SMALL LETTER U
0x0076	LATIN SMALL LETTER V
0x0077	LATIN SMALL LETTER W
0x0078	LATIN SMALL LETTER X
0x0079	LATIN SMALL LETTER Y
0x007A	LATIN SMALL LETTER Z
0x007B	LEFT CURLY BRACKET
0x007C	VERTICAL LINE
0x007D	RIGHT CURLY BRACKET
0x007E	TILDE
0x00A0	NO-BREAK SPACE
0x00A1	INVERTED EXCLAMATION MARK
0x00A3	POUND SIGN
0x00A5	YEN SIGN
0x00A9	COPYRIGHT SIGN
0x00AA	FEMININE ORDINAL INDICATOR
0x00AE	REGISTERED SIGN
0x00B0	DEGREE SIGN
0x00B7	MIDDLE DOT
0x00BA	MASCULINE ORDINAL INDICATOR
0x00BC	VULGAR FRACTION ONE QUARTER
0x00BD	VULGAR FRACTION ONE HALF
0x00BE	VULGAR FRACTION THREE QUARTERS
0x00BF	INVERTED QUESTION MARK
0x00C0	LATIN CAPITAL LETTER A WITH GRAVE
0x00C1	LATIN CAPITAL LETTER A WITH ACUTE
0x00C2	LATIN CAPITAL LETTER A WITH CIRCUMFLEX
0x00C3	LATIN CAPITAL LETTER A WITH TILDE
0x00C4	LATIN CAPITAL LETTER A WITH DIAERESIS
0x00C5	LATIN CAPITAL LETTER A WITH RING ABOVE
0x00C6	LATIN CAPITAL LETTER AE
0x00C7	LATIN CAPITAL LETTER C WITH CEDILLA
0x00C8	LATIN CAPITAL LETTER E WITH GRAVE
0x00C9	LATIN CAPITAL LETTER E WITH ACUTE

Table E.1 : Extended Latin set (Sheet 4 of 9)

Code	Unicode 2.0 Character name
0x00CA	LATIN CAPITAL LETTER E WITH CIRCUMFLEX
0x00CB	LATIN CAPITAL LETTER E WITH DIAERESIS
0x00CC	LATIN CAPITAL LETTER I WITH GRAVE
0x00CD	LATIN CAPITAL LETTER I WITH ACUTE
0x00CE	LATIN CAPITAL LETTER I WITH CIRCUMFLEX
0x00CF	LATIN CAPITAL LETTER I WITH DIAERESIS
0x00D0	LATIN CAPITAL LETTER ETH
0x00D1	LATIN CAPITAL LETTER N WITH TILDE
0x00D2	LATIN CAPITAL LETTER O WITH GRAVE
0x00D3	LATIN CAPITAL LETTER O WITH ACUTE
0x00D4	LATIN CAPITAL LETTER O WITH CIRCUMFLEX
0x00D5	LATIN CAPITAL LETTER O WITH TILDE
0x00D6	LATIN CAPITAL LETTER O WITH DIAERESIS
0x00D7	MULTIPLICATION SIGN
0x00D8	LATIN CAPITAL LETTER O WITH STROKE
0x00D9	LATIN CAPITAL LETTER U WITH GRAVE
0x00DA	LATIN CAPITAL LETTER U WITH ACUTE
0x00DB	LATIN CAPITAL LETTER U WITH CIRCUMFLEX
0x00DC	LATIN CAPITAL LETTER U WITH DIAERESIS
0x00DD	LATIN CAPITAL LETTER Y WITH ACUTE
0x00DE	LATIN CAPITAL LETTER THORN
0x00DF	LATIN SMALL LETTER SHARP S
0x00E0	LATIN SMALL LETTER A WITH GRAVE
0x00E1	LATIN SMALL LETTER A WITH ACUTE
0x00E2	LATIN SMALL LETTER A WITH CIRCUMFLEX
0x00E3	LATIN SMALL LETTER A WITH TILDE
0x00E4	LATIN SMALL LETTER A WITH DIAERESIS
0x00E5	LATIN SMALL LETTER A WITH RING ABOVE
0x00E6	LATIN SMALL LETTER AE
0x00E7	LATIN SMALL LETTER C WITH CEDILLA
0x00E8	LATIN SMALL LETTER E WITH GRAVE
0x00E9	LATIN SMALL LETTER E WITH ACUTE
0x00EA	LATIN SMALL LETTER E WITH CIRCUMFLEX
0x00EB	LATIN SMALL LETTER E WITH DIAERESIS
0x00EC	LATIN SMALL LETTER I WITH GRAVE

Table E.1 : Extended Latin set (Sheet 5 of 9)

Code	Unicode 2.0 Character name
0x00ED	LATIN SMALL LETTER I WITH ACUTE
0x00EE	LATIN SMALL LETTER I WITH CIRCUMFLEX
0x00EF	LATIN SMALL LETTER I WITH DIAERESIS
0x00F0	LATIN SMALL LETTER ETH
0x00F1	LATIN SMALL LETTER N WITH TILDE
0x00F2	LATIN SMALL LETTER O WITH GRAVE
0x00F3	LATIN SMALL LETTER O WITH ACUTE
0x00F4	LATIN SMALL LETTER O WITH CIRCUMFLEX
0x00F5	LATIN SMALL LETTER O WITH TILDE
0x00F6	LATIN SMALL LETTER O WITH DIAERESIS
0x00F7	DIVISION SIGN
0x00F8	LATIN SMALL LETTER O WITH STROKE
0x00F9	LATIN SMALL LETTER U WITH GRAVE
0x00FA	LATIN SMALL LETTER U WITH ACUTE
0x00FB	LATIN SMALL LETTER U WITH CIRCUMFLEX
0x00FC	LATIN SMALL LETTER U WITH DIAERESIS
0x00FD	LATIN SMALL LETTER Y WITH ACUTE
0x00FE	LATIN SMALL LETTER THORN
0x00FF	LATIN SMALL LETTER Y WITH DIAERESIS
0x0100	LATIN CAPITAL LETTER A WITH MACRON
0x0101	LATIN SMALL LETTER A WITH MACRON
0x0102	LATIN CAPITAL LETTER A WITH BREVE
0x0103	LATIN SMALL LETTER A WITH BREVE
0x0104	LATIN CAPITAL LETTER A WITH OGONEK
0x0105	LATIN SMALL LETTER A WITH OGONEK
0x0106	LATIN CAPITAL LETTER C WITH ACUTE
0x0107	LATIN SMALL LETTER C WITH ACUTE
0x0108	LATIN CAPITAL LETTER C WITH CIRCUMFLEX
0x0109	LATIN SMALL LETTER C WITH CIRCUMFLEX
0x010A	LATIN CAPITAL LETTER C WITH DOT ABOVE
0x010B	LATIN SMALL LETTER C WITH DOT ABOVE
0x010C	LATIN CAPITAL LETTER C WITH CARON
0x010D	LATIN SMALL LETTER C WITH CARON
0x010E	LATIN CAPITAL LETTER D WITH CARON
0x010F	LATIN SMALL LETTER D WITH CARON

Table E.1 : Extended Latin set (Sheet 6 of 9)

Code	Unicode 2.0 Character name
0x0110	LATIN CAPITAL LETTER D WITH STROKE
0x0111	LATIN SMALL LETTER D WITH STROKE
0x0112	LATIN CAPITAL LETTER E WITH MACRON
0x0113	LATIN SMALL LETTER E WITH MACRON
0x0116	LATIN CAPITAL LETTER E WITH DOT ABOVE
0x0117	LATIN SMALL LETTER E WITH DOT ABOVE
0x0118	LATIN CAPITAL LETTER E WITH OGONEK
0x0119	LATIN SMALL LETTER E WITH OGONEK
0x011A	LATIN CAPITAL LETTER E WITH CARON
0x011B	LATIN SMALL LETTER E WITH CARON
0x011C	LATIN CAPITAL LETTER G WITH CIRCUMFLEX
0x011D	LATIN SMALL LETTER G WITH CIRCUMFLEX
0x011E	LATIN CAPITAL LETTER G WITH BREVE
0x011F	LATIN SMALL LETTER G WITH BREVE
0x0120	LATIN CAPITAL LETTER G WITH DOT ABOVE
0x0121	LATIN SMALL LETTER G WITH DOT ABOVE
0x0122	LATIN CAPITAL LETTER G WITH CEDILLA
0x0123	LATIN SMALL LETTER G WITH CEDILLA
0x0124	LATIN CAPITAL LETTER H WITH CIRCUMFLEX
0x0125	LATIN SMALL LETTER H WITH CIRCUMFLEX
0x0126	LATIN CAPITAL LETTER H WITH STROKE
0x0127	LATIN SMALL LETTER H WITH STROKE
0x0128	LATIN CAPITAL LETTER I WITH TILDE
0x0129	LATIN SMALL LETTER I WITH TILDE
0x012A	LATIN CAPITAL LETTER I WITH MACRON
0x012B	LATIN SMALL LETTER I WITH MACRON
0x012E	LATIN CAPITAL LETTER I WITH OGONEK
0x012F	LATIN SMALL LETTER I WITH OGONEK
0x0130	LATIN CAPITAL LETTER I WITH DOT ABOVE
0x0131	LATIN SMALL LETTER DOTLESS I
0x0132	LATIN CAPITAL LIGATURE IJ
0x0133	LATIN SMALL LIGATURE IJ
0x0134	LATIN CAPITAL LETTER J WITH CIRCUMFLEX

Table E.1 : Extended Latin set (Sheet 7 of 9)

Code	Unicode 2.0 Character name
0x0135	LATIN SMALL LETTER J WITH CIRCUMFLEX
0x0136	LATIN CAPITAL LETTER K WITH CEDILLA
0x0137	LATIN SMALL LETTER K WITH CEDILLA
0x0138	LATIN SMALL LETTER KRA
0x0139	LATIN CAPITAL LETTER L WITH ACUTE
0x013A	LATIN SMALL LETTER L WITH ACUTE
0x013B	LATIN CAPITAL LETTER L WITH CEDILLA
0x013C	LATIN SMALL LETTER L WITH CEDILLA
0x013D	LATIN CAPITAL LETTER L WITH CARON
0x013E	LATIN SMALL LETTER L WITH CARON
0x013F	LATIN CAPITAL LETTER L WITH MIDDLE DOT
0x0140	LATIN SMALL LETTER L WITH MIDDLE DOT
0x0141	LATIN CAPITAL LETTER L WITH STROKE
0x0142	LATIN SMALL LETTER L WITH STROKE
0x0143	LATIN CAPITAL LETTER N WITH ACUTE
0x0144	LATIN SMALL LETTER N WITH ACUTE
0x0145	LATIN CAPITAL LETTER N WITH CEDILLA
0x0146	LATIN SMALL LETTER N WITH CEDILLA
0x0147	LATIN CAPITAL LETTER N WITH CARON
0x0148	LATIN SMALL LETTER N WITH CARON
0x014A	LATIN CAPITAL LETTER ENG
0x014B	LATIN SMALL LETTER ENG
0x014C	LATIN CAPITAL LETTER O WITH MACRON
0x014D	LATIN SMALL LETTER O WITH MACRON
0x0152	LATIN CAPITAL LIGATURE OE
0x0153	LATIN SMALL LIGATURE OE
0x0154	LATIN CAPITAL LETTER R WITH ACUTE
0x0155	LATIN SMALL LETTER R WITH ACUTE
0x0156	LATIN CAPITAL LETTER R WITH CEDILLA
0x0157	LATIN SMALL LETTER R WITH CEDILLA
0x0158	LATIN CAPITAL LETTER R WITH CARON
0x0159	LATIN SMALL LETTER R WITH CARON
0x015A	LATIN CAPITAL LETTER S WITH ACUTE
0x015B	LATIN SMALL LETTER S WITH ACUTE
0x015C	LATIN CAPITAL LETTER S WITH CIRCUMFLEX
0x015D	LATIN SMALL LETTER S WITH CIRCUMFLEX
0x015E	LATIN CAPITAL LETTER S WITH CEDILLA

Table E.1 : Extended Latin set (Sheet 8 of 9)

Code	Unicode 2.0 Character name
0x015F	LATIN SMALL LETTER S WITH CEDILLA
0x0160	LATIN CAPITAL LETTER S WITH CARON
0x0161	LATIN SMALL LETTER S WITH CARON
0x0162	LATIN CAPITAL LETTER T WITH CEDILLA
0x0163	LATIN SMALL LETTER T WITH CEDILLA
0x0164	LATIN CAPITAL LETTER T WITH CARON
0x0165	LATIN SMALL LETTER T WITH CARON
0x0166	LATIN CAPITAL LETTER T WITH STROKE
0x0167	LATIN SMALL LETTER T WITH STROKE
0x0168	LATIN CAPITAL LETTER U WITH TILDE
0x0169	LATIN SMALL LETTER U WITH TILDE
0x016A	LATIN CAPITAL LETTER U WITH MACRON
0x016B	LATIN SMALL LETTER U WITH MACRON
0x016C	LATIN CAPITAL LETTER U WITH BREVE
0x016D	LATIN SMALL LETTER U WITH BREVE
0x016E	LATIN CAPITAL LETTER U WITH RING ABOVE
0x016F	LATIN SMALL LETTER U WITH RING ABOVE
0x0172	LATIN CAPITAL LETTER U WITH OGONEK
0x0173	LATIN SMALL LETTER U WITH OGONEK
0x0174	LATIN CAPITAL LETTER W WITH CIRCUMFLEX
0x0175	LATIN SMALL LETTER W WITH CIRCUMFLEX
0x0176	LATIN CAPITAL LETTER Y WITH CIRCUMFLEX
0x0177	LATIN SMALL LETTER Y WITH CIRCUMFLEX
0x0178	LATIN CAPITAL LETTER Y WITH DIAERESIS
0x0179	LATIN CAPITAL LETTER Z WITH ACUTE
0x017A	LATIN SMALL LETTER Z WITH ACUTE
0x017B	LATIN CAPITAL LETTER Z WITH DOT ABOVE
0x017C	LATIN SMALL LETTER Z WITH DOT ABOVE
0x017D	LATIN CAPITAL LETTER Z WITH CARON
0x017E	LATIN SMALL LETTER Z WITH CARON
0x01CD	LATIN CAPITAL LETTER A WITH CARON
0x01CE	LATIN SMALL LETTER A WITH CARON
0x1E80	LATIN CAPITAL LETTER W WITH GRAVE
0x1E81	LATIN SMALL LETTER W WITH GRAVE
0x1E82	LATIN CAPITAL LETTER W WITH ACUTE
0x1E83	LATIN SMALL LETTER W WITH ACUTE

Table E.1 : Extended Latin set (Sheet 9 of 9)

Code	Unicode 2.0 Character name
0x1E84	LATIN CAPITAL LETTER W WITH DIAERESIS
0x1E85	LATIN SMALL LETTER W WITH DIAERESIS
0x1EF2	LATIN CAPITAL LETTER Y WITH GRAVE
0x1EF3	LATIN SMALL LETTER Y WITH GRAVE
0x2018	LEFT SINGLE QUOTATION MARK
0x2019	RIGHT SINGLE QUOTATION MARK
0x201C	LEFT DOUBLE QUOTATION MARK
0x201D	RIGHT DOUBLE QUOTATION MARK
0x2022	BULLET
0x2044	FRACTION SLASH
0x20AC	EURO SIGN
0x2190	LEFTWARDS ARROW
0x2191	UPWARDS ARROW
0x2192	RIGHTWARDS ARROW
0x2193	DOWNWARDS ARROW
0x221E	INFINITY
0x266B	BEAMED EIGHTH NOTES
0x2713	CHECK MARK
0x2717	BALLOT X

Annex F (informative): Authoring & Implementation Guidelines

F.1 Authoring Guidelines

- Authoring guidelines are needed to specify those methods, classes and interfaces which are intended for use by implementations of JMF players. These methods, classes and interfaces are not intended for use by applications except for this purpose and that should be made clear.
- Authoring guidelines are needed to make it clear that it is optional for JMF controls to have an associated java.awt component. This is in the JMF documentation but the phrasing implies this an exceptional case. In many MHP receivers, the presence of such a component would be the exceptional case.To be completed.

F.2 Implementation Guidelines

To be completed.

F.3 Authoring guidelines for DVB-J

< java stuff to go here>

F.4 Authoring guidelines for DVB HTML

F.4.1 CSS2 Authoring guidelines

The selection of the CSS2 subset in this specification has been influenced by the requirements of the conformance clauses as defined by the W3C. As such, some style properties and selectors have been selected in order to respect this requirement, although they might not be fully adapted to the TV environment and its constraints. The objective of this section is to provide content authors with some guidelines on the potential impacts the use of some selectors or properties might have. Some of those guidelines are due to CPU or other limitations that may with generations of receivers at the time of the writing. This might evolve with the arrival of new generations, however content authors should be aware of the potential existence of different generations of receivers in the field.

F.4.1.1 Selectors

Content authors are advised that the use of contextual selectors - descendent, child, adjacent sibling, :first-child - as well as the attribute and the attribute value selector might cause the pattern matching process to be slow when used through the DOM APIs. For better matching efficiency, the type, id and class selectors should be favoured

Content authors are advised that the use of the :first-letter and :first-line pseudo-elements might cause the rendering to be slow. See also guidelines for content generation and the :before and :after selectors.

F.4.1.2 Properties

F.4.1.2.1 Generalities

On a general basis, use of the "auto" value for properties should be avoided and explicit values should be preferred wherever possible.

F.4.1.2.2 Visual Formatting Model

F.4.1.2.2.1 "display" :

Use of the "table-header-group", "table-row-group", "table-footer-group", "table-column" and "table-column-group" values of this property might cause the rendering to be slow. These values are meant to make elements behave like the table elements. Their functionality should be well understood before using them.

F.4.1.2.2.2 "float", "clear" :

Use of those properties might slow down the positioning operation. Also, for better content predictability and interoperability, absolute positioning should be favoured (see below).

F.4.1.2.2.3 "position" :

Use of the "fixed" value of this property might cause the associated rendering to be slow, especially in the case where boxes with different stack levels and with some level of translucency are used through the "z-index" property. On a general basis, for better content predictability and interoperability, absolute positioning should be favoured. Also, Content authors should not make any assumptions on the way the fixed positioning functionality interacts with scrolling.

F.4.1.2.2.4 Generated Content, automatic numbering, and lists

On a general level, content generation provides convenient functionality to the content author. However, this is at the cost of increased complexity in the receiver implementation. Content authors are then advised that the use of the associated selectors (:before and :after) and properties ("content", "counter-increment", "counter-reset", "quotes") might slow down the overall rendering.

F.4.1.2.2.5 "marker-offset", "display" (value "marker") :

Use of the list properties such as "list-style-type", "list-style-image", "list-style-position", and "list-style" should be favoured to markers because of the induced complexity of the latter, its relationships with content generation and consequently its potential slowness in the rendering.

F.4.1.2.3 Colours and Background

F.4.1.2.3.1 "background-attachment" :

Use of the "fixed" value of this property might cause the associated rendering to be slow. Content authors should not make any assumptions on the way the fixed positioning functionality interacts with scrolling.

Moreover, content authors should not make assumption on the presence of this functionality in a receiver since it is optional in CSS2.

F.4.1.2.4 Visual Effects

F.4.1.2.4.1 "overflow" :

Use of the "scroll" or "auto" values of this property might not cause the presence of scrolling mechanisms as used in the desktop environment. Due to ergonomic reasons, implementations might choose other mechanisms.

F.4.1.2.5 Fonts

F.4.1.2.5.1 "font" :

Content authors should not make any assumption on the expected results when using the "caption", "icon", "menu", "message-box", "small-caption", "status-bar" values of the "font" property, which have no associated semantics in a DVB-MHP environment.

F.4.1.2.6 Text

F.4.1.2.6.1 "text-align" :

Use of the "justify" value of this property might slow down the rendering because of the induced complexity. Depending on the algorithm used by the receiver, use of this value might also affect interoperability. Content authors should be aware that conformant receivers might interpret this value as being "left" or "right" depending on the directionality of the language.

Use of a string value for this property in a table cell might also slow down the rendering and in general might be unpredictable, for example when the content flows on more than one line.

F.4.1.2.6.2 "text-shadow" :

Use of the optional blur radius after the shadow offset might slow down the rendering because of the induced complexity and may not be visible on a low resolution screen. Content authors should be advised that interoperability might be affected since the algorithm for computing the blur effect has not been specified.

F.4.1.2.7 User Interface

F.4.1.2.7.1 User preferences for colours :

Content authors should not make any assumption on the expected results when using the system colours which have no associated semantics in a DVB-MHP environment. Those colours are: ActiveBorder, ActiveCaption, AppWorkspace, Background, ButtonFace, ButtonHighlight, ButtonShadow, ButtonText, CaptionText, GrayText, Highlight, HighlightText, InactiveBorder, InactiveCaption, InactiveCaptionText, InfoBackground, InfoText, Menu, MenuText, Scrollbar, ThreeDDarkShadow, ThreeDFace, ThreeDHighlight, ThreeDLightShadow, ThreeDShadow, Window, WindowFrame, WindowText.

Annex G (normative): Minimum Platform Capabilities

G.1 Graphics

In the area of graphics capability the following requirements are made on MHP terminals:

G.1.1 Device capabilities

- The number of applications concurrently using the display is not limited. However, the MHP terminal is not required to support overlapping HScenes.
- The MHP terminal shall implement at least one HGraphicsDevice which shall be full screen.
- The MHP terminal shall implement at least one HBackgroundDevice. These are always full screen.
- The MHP terminal shall implement at least one HVideoDevice which is always capable of being configured to be full screen.
- The minimum set of required device resolutions that MHP terminals shall support is illustrated in figure G.1. Specifically these are:
  - HBackgroundDevice resolution of 720x576
  - HVideoDevice resolution of 720x576
  - HGraphicsDevice resolution of 720x576

  These shall be supported for display aspect ratios of 4:3 and 16:9.

  Optionally MHP terminals may also support square pixel HGraphicsDevice resolutions of 768x576 and 1024x576 for 4:3 and 16:9 displays respectively.

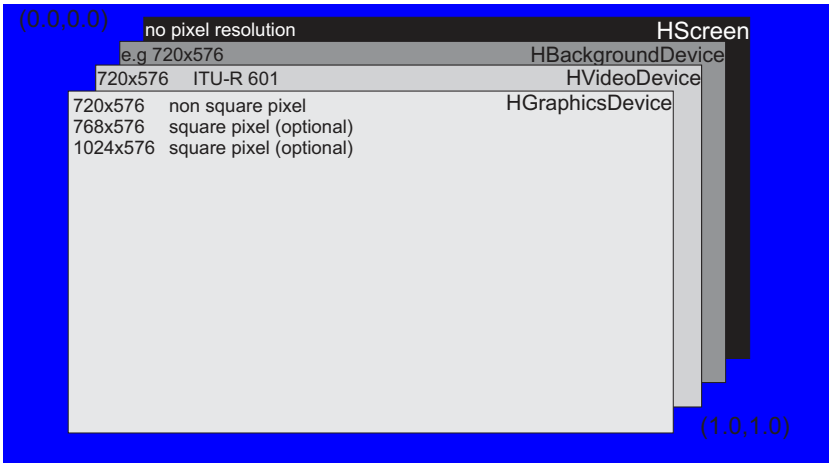


Figure G.1 : Required device resolutions

G.1.2 Video presentation capabilities

- The following set of standard decoder format conversions shall be supported by all MHP terminals:

  DFC_PROCESSING_CCO

  DFC_PROCESSING_FULL

  DFC_PROCESSING_LB_16_9

  DFC_PROCESSING_PAN_SCAN

  The following modes are optional:

  DFC_PROCESSING_LB_14_9

  DFC_PROCESSING_LB_2_21_1_ON_16_9

DFC_PROCESSING_LB_2_21_1_ON_4_3

- MHP terminals are required to support both displaying MPEG video without any scaling and with 1/2 scaling both vertically and horizontally provided that in this latter case the entire resulting video area is fully on the screen
- Support for component based JMF players is not required for any profile in this specification.

G.1.3 Image processing capabilities

- All DVBGraphics objects shall support SRC and CLEAR and SRC_OVER.
  When SRC_OVER is used with DVBGraphics objects with a sample model of the type TYPE_BASE a perfect result is only guaranteed to be produced with alpha values of 0 and 1. Alpha values other than 0 and 1 can be approximated. DVBGraphics object with a type of TYPE_ADVANCED will produce a result as expected but those SRC_OVER operations are likely to be slow.
- DVBGraphics object created from a DVBBufferedImage with the type TYPE_ADVANCED shall perform SRC_ OVER operations without approximations of the compositing rule.

G.1.4 Alpha capabilities

For any draw operations directly into the HGraphicsDevice the following rules shall be applied for the precision of implementation of alpha:

- MHP terminals are required to implement at least 3 levels of transparency: 0 % (opaque), 100 % (completely transparent) and an intermediate value of approximately 30 %. Implementation of additional intermediate levels of transparency is optional.
- Where the MHP terminal cannot implement a particular value of semi-transparency it shall replace it with the nearest value of transparency it can implement.

  However, if the encoded value of transparency is in the range 10 %-90 % it shall not be approximated as either less than 10 % or greater than 90 % transparency.

  So, 9 % may be approximated as 0 % but 10 % shall be represented with a value in the range 10 % to 90 % such as 30 %. Similarly, 91 % may be approximated as 100 %.

G.1.5 Colour capabilities

Logically the colour model is a "true colour" one. However, other implementations are possible.

Two styles of indexed colour implementations are considered:

- Dithering
- Nearest colour match

Where an indexed colour implementation can accurately reproduce colours using dithering it is considered to be a true colour implementation. In this case no restrictions are placed on the CLUT used.

Where an indexed colour receiver implements a simpler colour matching, or has other limitations on the number of colours it represents (for example requiring a reservation to accommodate subtitles). It shall use the 188 colour CLUT specified in table G.1. The reservation of 64 CLUT locations for use by the subtitling decoder is not appropriate to all implementations and assumes a corresponding broadcaster rule of operations restricting subtitle transmissions to use only 64 different colours.

Table G.1 : Palette construction rules

Transparency	Alpha	Additional Grey Levels (R=G=B)	Red	Green	Blue	Number of colours
0 %	255	42, 85, 170, 212	0, 63, 127, 191, 255	0, 31, 63, 95, 127, 159, 191, 223, 255	0, 127, 255	139
30 %	179 (note 1)	--	0, 85, 170, 255	0, 51, 102, 153, 204, 255	0, 255	48
100 %	0	--	--	--	--	1
					Total	188
NOTE 1: Where the receiver cannot implement this "ideal" value of semi-transparency it shall replace it with the nearest value of semi-transparency it can implement. Note: semi-transparency shall not be approximated as either 0 % or 100 % transparency.						

The opaque portion CLUT specified in table G.1 is illustrated in figure G.2.

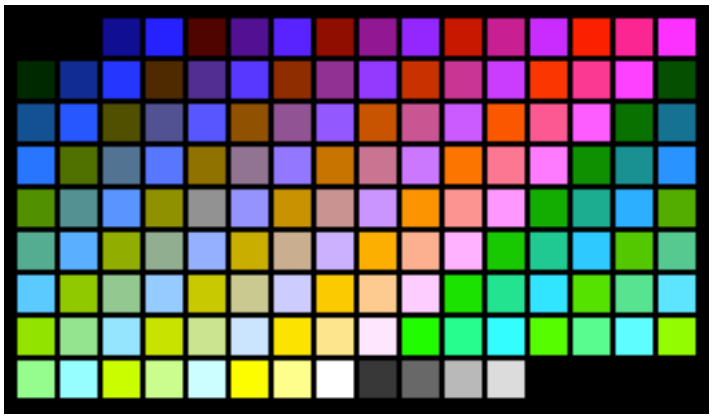


Figure G.2 : Opaque CLUT

G.1.6 MPEG I frame and Video drips

The minimum positioning and scaling capabilities defined above for MPEG video shall also apply to MPEG I frame and Video drips.

G.2 Audio

No audio mixing is required.

Audio played from memory may pre-empt any audio from the transport stream. This may disturb decoding of any broadcast video stream.

Audio from memory shall be output in preference to audio from stream if overall audio output has not been disabled by the user. On platforms capable of mixing audio from memory with audio from the stream it shall do this if there is a stream playing. Where audio from the stream is interrupted, decoding of it shall automatically resume when audio from memory ceases if the stream concerned is still playing. This only applies where the audio from memory and the stream are both under the control of the same MHP application. Where multiple applications are involved see 9.5, "Inter application resource management" on page 202.

G.3 Video

The MHP terminal is only required to support decoding of a single video stream at a given time. The number of implemented video decoders will affect the functionality of the video and background devices.

G.4 Resident fonts and text rendering

G.4.1 The built-in font

At least the RNIB/DTG font "Tiresias" shall be provided.

The font shall be able to present at least the sizes listed in G.2 and the weight ("PLAIN").

Table G.2 : Minimum set of sizes

Size (points)	TV lines (note 1) over "Cap-V"	Informative Name
36	24	Heading / Large subtitle
31	21	Subtitle
26	18	Body (note 2)
24	16	Footnote
NOTE 1: The primary definition of the character size is the font size in points, the height of a capital letter "V" in TV lines is provided for information only.		
NOTE 2: The default size and style.		

G.4.2 Presentation to DVB-J

The embedded font "Tiresias" shall have:

- the logical name "SansSerif" (for example returned by `java.awt.Toolkit.getFontList`)
- the family name "Tiresias" (for example returned by `java.awt.Font.getFamily`)
- the font face name "Tiresias PLAIN"

G.4.3 Text directions

The `DVBTextLayoutManager` is only required to support the following configuration of text direction:

- LINE_ORIENTATION_HORIZONTAL and START_CORNER_UPPER_LEFT

G.5 Input events

Table G.3 : Minimum set of input events

Input event
VK_0 to VK_9
VK_UP
VK_DOWN
VK_LEFT
VK_RIGHT
VK_ENTER
VK_TELETEXT
VK_COLORED_KEY_0
VK_COLORED_KEY_1
VK_COLORED_KEY_2
VK_COLORED_KEY_3

G.6 Memory

In order to be able to execute MHP conformance tests, the following minimum memory requirements are defined for MHP terminals. All of these are to be measured during normal usage and operational conditions of an MHP terminal. All are to be measured in the `initXlet` method of a DVB-J application which is both the only auto-start application signalled in a service and the only application running at that time.

- Enough memory to successfully load any arbitrary 262 144 (or less) Bytes of Java class files into the memory space of the Java virtual machine. Execution of code called as part of initializing fields in classes is excluded from consideration as part of "load"ing here. RAM usage by the bytecode verifier is included in consideration as part of "load"ing here.

Enough memory to do the above and individually each of the following:

- Enough memory to successfully create a Java byte array of lengths from 1 entry to 262 144 entries.
- Enough memory to successfully load & display any 720x576 8bit PNG image (conforming to 15.1, "PNG - restrictions" on page 363) from a file which contains just the mandatory information and excludes any optional extension fields or chunks.
- Enough memory to successfully load from file & play from memory 5 seconds of audio at 128 kbit/s (where kbit/s is as used in TR 101 154 [9]). In a similar was to as is required for PNG images above, it shall be measured using files that do not include any optional extension fields.
- Enough memory to successfully allocate an array of `java.lang.Object` of length 16 384 and fill each element of this array with a distinct instance of `java.lang.Object`.

The memory requirements detailed in this section are not exhaustive. For example, the specific requirement concerning an array of type byte in no way implies that MHP terminals are exempt from requirements found elsewhere in the MHP specification (including normatively referenced specifications) for supporting arrays of other types.

NOTE: Additional detail may be added to these requirements in order to properly enable the MHP conformance tests.

G.7 Other resources

Table G.4 : Minimum requirements for other resources

Feature	Specification
gamma correction in the receiver	none
HAVi mattes	Platforms are not required to implement the functionality of mattes in HAVi. Non-implementation should be implemented as specified by HAVi.
Overlapping applications	MHP terminals are not required to support overlapping top level UI containers (e.g. HScenes where DVB-J applications are concerned).
AIT section filtering	The implementation is not required to dedicate more than one section filter to monitoring the AIT.
Key lengths	Receivers shall support certificate key length up to 4096 bits.
Internet clients	WWW and email clients required, usenet news client optional.
Non-CA Smart Card Reader	MHP terminals are not required to include this
Stored services	No requirement for persistent storage for stored services even if other forms of persistent storage are supported.

NOTE: The values in the table below are set for the purposes of conformance testing and should not be used by application or MHP terminal developers as being indicative of the capabilities of commercial products.

Table G.5 : Minimum requirements for other resources for conformance purposes (Sheet 1 of 2)

Feature	Specification
Application accessible timers (note 2)	At least 4 timers for each ServiceContext which can be presenting MHP applications at the same time. (i.e. shared between the applications signalled as part of the same service). (note 1)
MPEG-2 transport stream network interface	Shall support at least one network interface enabling reception of an MPEG-2 transport stream and selection of that transport stream from among those available to be received. This shall support those broadcast channel protocols supported by the MHP terminal (see 6.2, "Broadcast Channel Protocols" on page 54) and the MHP APIs defined to interface to these protocols and to control these interfaces.
Bidirectional IP network interface	MHP terminals supporting the interactive broadcast profile shall support at least one network interface for bidirectional IP traffic. This shall support those interaction channel protocols supported by the MHP terminal (see 6.3, "Interaction Channel Protocols" on page 57) and the MHP APIs defined to interface to these protocols and to control these interfaces.
Conditional access	None required. The absence or optional presence of one shall be correctly reported through the Conditional access API. Local regulation may require more support than this minimum
Persistent storage	No requirement for storage which persists across interruption of power to an MHP.
Application accessible MPEG-2 section filters (note 2)	At least 2 shared among all applications signalled as part of the same service. (note 1).
Application accessible DVB-J threads (note 2)	At least 4 shared among all applications signalled as part of the same service. Threads created by the platform and used to call methods of the application are excluded from this number. (note 1).

Table G.5 : Minimum requirements for other resources for conformance purposes (Sheet 2 of 2)

Feature	Specification
NOTE 1:	These requirements apply to one set of MHP applications signalled as part of the same service. If an MHP terminal supports simultaneous execution of more than one set of signalled applications then it shall make available at least these minimum resources for each set of signalled applications which can be executed simultaneously.
NOTE 2:	"Application accessible" means guaranteed to be accessible to MHP applications through the API defined in this specification for the feature concerned. This must be regardless of the extent of any usage of that feature or function as part of the MHP terminal implementation.

Annex H (normative): DVB-J fundamental classes

Package
org.dvb.lang

Description
Provides those core platform related features not found in the java.lang package.

Class Summary	
Classes	
DVBClassLoader	This class loader is used to load classes and resources from a search path of URLs referring to locations where Java class files may be stored.

org.dvb.lang
DVBClassLoader

Syntax

```
public class DVBClassLoader extends java.security.SecureClassLoader

java.lang.Object
  |
  +--java.lang.ClassLoader
        |
        +--java.security.SecureClassLoader
              |
              +--org.dvb.lang.DVBClassLoader
```

Description

This class loader is used to load classes and resources from a search path of URLs referring to locations where Java class files may be stored.

The classes that are loaded are by default only allowed to load code through the parent classloader, or from the URLs specified when the DVBClassLoader was created.

Constructors

DVBClassLoader(URL[])

```
public DVBClassLoader(java.net.URL[] URLs)
```

Constructs a new DVBClassLoader for the given URLs. The URLs will be searched in the order specified for classes and resources.

If there is a security manager, this method first calls the security manager's `checkCreateClassLoader` method to ensure creation of a class loader is allowed.

Parameters:

`URLs` - the URLs from which to load classes and resources

Throws:

`SecurityException` - if a security manager exists and its `checkCreateClassLoader` method doesn't allow creation of a class loader.

See Also:

`SecurityManager`

DVBClassLoader(URL[], ClassLoader)

```
public DVBClassLoader(java.net.URL[] URLs, java.lang.ClassLoader parent)
```

Constructs a new DVBClassLoader for the given URLs. The URLs will be searched in the order specified for classes and resources.

If there is a security manager, this method first calls the security manager's `checkCreateClassLoader` method to ensure creation of a class loader is allowed.

Parameters:

`URLs` - the URLs from which to load classes and resources

`parent` - the parent classloader for delegation

Throws:
`SecurityException` - if a security manager exists and its `checkCreateClassLoader` method doesn't allow creation of a class loader.

See Also:
`SecurityManager`

Methods

---

findClass(String)

```
public java.lang.Class findClass(java.lang.String name)
```

Finds and loads the class with the specified name from the URL search path. Any URLs are searched until the class is found.

Parameters:
`name` - the name of the class.

Returns:
the resulting class.

Throws:
`ClassNotFoundException` - if the named class could not be found.

---

newInstance(URL[])

```
public static DVBClassLoader newInstance(java.net.URL[] URLs)
```

Creates a new instance of DVBClassLoader for the specified URLs. If a security manager is installed, the `loadClass` method of the DVBClassLoader returned by this method will invoke the `SecurityManager.checkPackageAccess` method before loading the class.

Parameters:
`URLs` - the URLs to search for classes and resources.

Returns:
the resulting class loader

---

newInstance(URL[], ClassLoader)

```
public static DVBClassLoader newInstance(java.net.URL[] URLs, java.lang.ClassLoader parent)
```

Creates a new instance of DVBClassLoader for the specified URLs. If a security manager is installed, the `loadClass` method of the DVBClassLoader returned by this method will invoke the `SecurityManager.checkPackageAccess` method before loading the class.

Parameters:
`URLs` - the URLs to search for classes and resources.

`parent` - the parent class loader for delegation.

Returns:
the resulting class loader

Annex I (normative): DVB-J event API

Applications can use the `org.dvb.event` API, to receive events without being focused and/or to have exclusive access to events.

I.1 Overview

This API provides a mechanism allowing MHP applications to influence the routing of events to either MHP applications or the navigator. This typically would be used in a mode where the recveiver is primairily used for TV viewing, allowing some events to be received by the application, and allowing the navigator to receive those events that are not requested by any MHP application. This API enables MHP applications to choose between the following mechanisms for receiving events:

- through the standard `java.awt` mechanism,
- through the standard `java.awt` mechanism, but for some events to be exclusively accessed by the application,
- through a mechanism defined by this API,
- through the mechanism defined by this API, but for some events to be exclusively accessed by the application.

The last two solutions could be used by non-graphical applications in order to receive events that are coming from the user. It could also be used by an invisible application if it wants to be presented when a specific key is pressed.

If an application wants to have exclusive access to some events and to manage them through the java.awt then it must use this API so that it can be aware of the fact that it has lost or gained access to these events. One must notice that an application based on awt event mechanism will receive events only if it is focused.

The diagram below shows how an event is dispatched depending on how it was requested:

```
 User Event
     |
     |
     . Is it in a repository used by the Event Manager
     | or is there an application with AWT focus
     |    |
    yes   no
     |    |
     |    --> send the event to the navigator
     |
     . Is it in a repository used by the Event Manager?
     |    |
     yes  no
     |    |
     |    --> send the event to the awt application which is focused.
     |
     . Is it an exclusive event?
     |    |
     yes  no
     |    |
     |    --> send the event to the applications which do not use the awt
     |        event mechanism and have asked for this event.
     |
     . Was it acquired by an awt application?
     |    |
     yes  no
```

```
|    |
|    .-> send the event to the application which does not use the
|        awt event mechanism and has asked for an exclusive access
|        to this event.
|
. -----> send the event to the application if it is focused.
```

I.2 The resource management

An application asking for exclusive access to some events will use the resource framework defined in DAVIC 1.4.1p9 [3] so that it can be aware of the fact that it has lost access to the user events it asked for (see the example below).

I.3 The Event Repository

The UserEventRepository is the class that is used by the application to define the user events it intends to use. For the moment user events are just key events but it is a place-holder for new families of events (voice command for example). If an application asks for an exclusive access to events by means of a repository, this exclusive access will be lost at the time when one of the event is grabbed by another application. User events that can be accessed by an application are defined in the UserEvent class.

I.3.1 Example

exclusive access to events for a non-focused application

```
import org.davic.resources.ResourceClient.* ;
  import org.dvb.event.* ;
  class Example implements UserEventListener, ResourceStatusListener, ResourceClient {
     private int myStatus ;
     public Example () {
        EventManager em ;
        UserEventRepository repository ;
        em = EventManager.getInstance () ;
        repository = new UserEventRepository ("R1") ;
        repository.addKey (UserEvent.VK_ENTER) ;
        em.addUserListener ((UserEventListener)this, (ResourceClient)this, repository) ;
        em.addResourceStatusEventListener (this) ;
     }
     /**
     * methods defined by the UserEventListener interface.
     */
     public void UserEventReceived (UserEvent e) {
     }
     /**
     * Methods defined by the ResourceClient interface.
     */
     /**
     * In the case a cooperative application asks for an user event
     * exclusively used by me.
     */
     public boolean requestRelease(ResourceProxy proxy, Object requestData) {
        String name ;
        // let's retrieve the name of the repository, that I have created, and
```

```
      // which contains the user event that the other application asks for.
      name = (RepositoryDescriptor)proxy.getName () ;
      if ((name.compareTo ("R1") == 0) & (myStatus == …)) {
         // Ok I release this event.
         return true ;
      } else {
         // No I need this event, sorry !
         return false ;
      }
   }
   public void release (ResourceProxy proxy) {
      …
   }
   public void notifyRelease (ResourceProxy proxy) {
      …
   }
   public void statusChanged (ResourceStatusEvent event) {
      …
   }
}
```

Package
org.dvb.event

Description
Provides access to user input events before they are processed through the event mechanism of the java.awt package.

Class Summary	
Interfaces	
UserEventListener	The listener interface for receiving user inputs.
Classes	
EventManager	The event manager allows an application to receive events coming from the user.
OverallRepository	This class defines a repository which contains all the user events defined in the UserEvent class.
RepositoryDescriptor	An instance of this class will be sent to clients of the DVB event API to notify them (through the interface org.davic.resources.ResourceClient) when they are about to lose, or have lost, access to an event source.
UserEvent	Represents a user event.
UserEventRepository	The application will use this class to define the events that it wants to receive.

org.dvb.event
EventManager

Syntax
```
public final class EventManager implements org.davic.resources.ResourceServer

java.lang.Object
  |
  +--org.dvb.event.EventManager
```

All Implemented Interfaces:
org.davic.resources.ResourceServer

Description
The event manager allows an application to receive events coming from the user. These events can be sent exclusively to an application or can be shared between applications. The Event Manager allows also the application to ask for exclusive access to some events, these events being received either from the standard java.awt event mechanism or by the mechanism defined in this package. The EventManager is a singleton.

The right to receive events is considered as the same resource regardless of whether it is being handled exclusively or shared. An application successfully obtaining exclusive access to an event results in all other applications loosing access to that event, whether the access of those applications was shared or exclusive.

Methods

---

addExclusiveAccessToAWTEvent(ResourceClient, UserEventRepository)

```
public boolean addExclusiveAccessToAWTEvent(org.davic.resources.ResourceClient client,
            UserEventRepository userEvents)
```

An application should use this method to express its intend to have exclusive access to some events, but for these events to be received through the java.awt mechanism. The events the application wishes to receive are defined by the means of the UserEventRepository class. This repository is resolved at the time when this method call is made and adding or removing events from the repository after this method call doesn't affect the subscription to those events. An exclusive event will be sent to the application if this latest is focused.

Parameters:
`client` - resource client.

`userEvents` - the user events the application wants to be inform of.

Returns:
true if the events defined in the repository have been acquired, false otherwise.

Throws:
`IllegalArgumentException` - if the client argument is set to null.

---

addResourceStatusEventListener(ResourceStatusListener)

```
public void addResourceStatusEventListener(org.davic.resources.ResourceStatusListener
            listener)
```

Adds the specified resource status listener so that an application can be aware of any changes regarding exclusive access to some events.

Specified By:
org.davic.resources.ResourceServer.addResourceStatusEventListener(org.davic.resources.ResourceStatusListener) in interface org.davic.resources.ResourceServer

Parameters:
`listener` - the resource status listener.

---

addUserEventListener(UserEventListener, ResourceClient, UserEventRepository)

```
public boolean addUserEventListener(UserEventListener listener,
            org.davic.resources.ResourceClient client, UserEventRepository userEvents)
```

Adds the specified listener to receive events coming from the user in an exclusive manner. The events the application wishes to receive are defined by the means of the UserEventRepository class. This repository is resolved at the time when this method call is made and adding or removing events from the repository after this method call doesn't affect the subscription to those events. The ResourceClient parameter indicates that the application wants to have an exclusive access to the user event defined in the repository.

Parameters:
`listener` - the listener to receive the user events.

`client` - resource client.

`userEvents` - a class which contains the user events it wants to be informed of.

Returns:
true if the events defined in the repository have been acquired, false otherwise.

Throws:
`IllegalArgumentException` - if the client argument is set to null.

---

addUserEventListener(UserEventListener, UserEventRepository)

```
public void addUserEventListener(UserEventListener listener,
            UserEventRepository userEvents)
```

Adds the specified listener to receive events coming from the user. The events the application wishes to receive are defined by the means of the UserEventRepository class. This repository is resolved at the time when this method call is made and adding or removing events from the repository after this method call doesn't affect the subscription to those events.

Parameters:
`listener` - the listener to receive the user events.

`userEvents` - a class which contains the user events it wants to be informed of.

---

getInstance()

```
public static EventManager getInstance()
```

This method returns the sole instance of the EventManager class. The EventManager class is a singleton.

Returns:
the instance of the EventManager.

---

removeExclusiveAccessToAWTEvent(ResourceClient)

```
public void removeExclusiveAccessToAWTEvent(org.davic.resources.ResourceClient client)
```

The application should use this method to release its exclusive access to user events defined by the means of the addExclusiveAccessToAWTEvent method.

Parameters:

`client` - the client that is no longer interested in events previously registered.

---

removeResourceStatusEventListener(ResourceStatusListener)

```
public void removeResourceStatusEventListener(org.davic.resources.ResourceStatusListener
            listener)
```

Removes the specified resource status listener.

Specified By:

org.davic.resources.ResourceServer.removeResourceStatusEventListener(org.davic.resources.ResourceStatusListener) in interface org.davic.resources.ResourceServer

Parameters:

`listener` - the listener to remove.

---

removeUserEventListener(UserEventListener)

```
public void removeUserEventListener(UserEventListener listener)
```

Removes the specified listener so that it will no longer receives user events. If it is appropriate (i.e the application has asked for an exclusive access), the exclusive access is lost.

Parameters:

`listener` - the user event listener.

org.dvb.event
OverallRepository

Syntax
```
public class OverallRepository extends UserEventRepository
```

```
java.lang.Object
  |
  +--UserEventRepository
        |
        +--org.dvb.event.OverallRepository
```

Description
This class defines a repository which contains all the user events defined in the UserEvent class. For example, this pre-defined repository could be used by an application, which requires a pin code from the user, in order to prevent another applications from receiving events.

See Also:
UserEvent

Constructors

OverallRepository()

```
public OverallRepository()
```

The constructor for the repository.

org.dvb.event
RepositoryDescriptor

Syntax
```
public class RepositoryDescriptor implements org.davic.resources.ResourceProxy

java.lang.Object
  |
  +--org.dvb.event.RepositoryDescriptor
```

All Implemented Interfaces:
org.davic.resources.ResourceProxy

Description
An instance of this class will be sent to clients of the DVB event API to notify them (through the interface org.davic.resources.ResourceClient) when they are about to lose, or have lost, access to an event source. This object can be used by the application to get the name of the repository from which it will no longer be able to receive events.

Methods

---

getClient()

```
public org.davic.resources.ResourceClient getClient()
```

Return the object which asked to be notified about withdrawl of the event source. This is the object passed as the `ResoourceClient` to whichever of the various 'add' methods on ResourceManager was used by the application to express interest in this repository.

Specified By:
org.davic.resources.ResourceProxy.getClient() in interface org.davic.resources.ResourceProxy

Returns:
the object which asked to be notified about withdrawl of the event source

---

getName()

```
public java.lang.String getName()
```

Returns the name of the repository to which the lost user event belongs.

Returns:
String the name of the repository.

org.dvb.event
UserEvent

Syntax
```
public class UserEvent extends java.util.EventObject

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--org.dvb.event.UserEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
Represents a user event. A user event is defined by a family, a type and either a code or a character. Unless stated otherwise, all constants used in this class are defined in `java.awt.event.KeyEvent` and its parent classes.

Fields

UEF_KEY_EVENT

```
public static final int UEF_KEY_EVENT
```

the family for events that are coming from the remote control or from the keyboard.

Constructors

UserEvent(Object, int, char)

```
public UserEvent(java.lang.Object source, int family, char keyChar)
```

Constructor for a new UserEvent object representing a key being typed. This is the combination of a key being pressed and then being released. The type of UserEvents created with this constructor shall be KEY_TYPED. Key combinations which do not result in characters, such as action keys like F1, shall not generate KEY_TYPED events.

Parameters:

`source` - the `EventManager` which is the source of the event

`family` - the event family.

`keyChar` - the character typed

Since:
MHP 1.0.1

UserEvent(Object, int, int, int, int)

```
public UserEvent(java.lang.Object source, int family, int type, int code, int modifiers)
```

Constructor for a new UserEvent object representing a key being pressed.

Parameters:

`source` - the `EventManager` which is the source of the event

`family` - the event family.

`type` - the event type. Either one of KEY_PRESSED or KEY_RELEASED.

`code` - the event code. One of the constants whose name begins in "VK_" defined in java.ui.event.KeyEvent or org.havi.ui.event.

`modifiers` - the modifiers active when the key was pressed. These have the same semantics as modifiers in `java.awt.event.KeyEvent`.

Methods

getCode()

```
public int getCode()
```

Returns the event code. For KEY_TYPED events, the code is VK_UNDEFINED.

Returns:

an int representing the event code.

getFamily()

```
public int getFamily()
```

Returns the event family. Could be UEF_KEY_EVENT.

Returns:

an int representing the event family.

getKeyChar()

```
public char getKeyChar()
```

Returns the character associated with the key in this event. If no valid Unicode character exists for this key event, keyChar is CHAR_UNDEFINED.

Returns:

a character

Since:

MHP 1.0.1

getModifiers()

```
public int getModifiers()
```

Returns the modifiers flag for this event.

Returns:

the modifiers flag for this event

Since:
MHP 1.0.1

---

getType()

```
public int getType()
```

Returns the event type. Could be KEY_PRESSED, KEY_RELEASED or KEY_TYPED.

Returns:
an int representing the event type.

---

isAltDown()

```
public boolean isAltDown()
```

Returns whether or not the Alt modifier is down on this event.

Returns:
whether the Alt modifier is down on this event

Since:
MHP 1.0.1

---

isControlDown()

```
public boolean isControlDown()
```

Returns whether or not the Control modifier is down on this event.

Returns:
whether the Control modifier is down on this event

Since:
MHP 1.0.1

---

isMetaDown()

```
public boolean isMetaDown()
```

Returns whether or not the Meta modifier is down on this event.

Returns:
whether the Meta modifier is down on this event

Since:
MHP 1.0.1

---

isShiftDown()

```
public boolean isShiftDown()
```

Returns whether or not the Shift modifier is down on this event.

Returns:
whether the Shift modifier is down on this event

Since:
MHP 1.0.1

org.dvb.event
UserEventListener

Syntax
```
public interface UserEventListener extends java.util.EventListener
```

All Superinterfaces:
java.util.EventListener

Description
The listener interface for receiving user inputs.

Methods

---

userEventReceived(UserEvent)

```
public void userEventReceived(UserEvent e)
```

Called by the platform when a user input is received.

Parameters:
`e` - the user input event which was received

org.dvb.event
UserEventRepository

Syntax
```
public class UserEventRepository

java.lang.Object
  |
  +--org.dvb.event.UserEventRepository
```

Direct Known Subclasses:
OverallRepository

Description
The application will use this class to define the events that it wants to receive. Events that are able to be put in the repository are defined in the UserEvent class.

Where a repository includes a KeyPressed type event without the KeyReleased type event for the same key code or vice versa then exclusive reservations shall be made for both event types but only the one requested shall be received by the listener. Where a repository includes a KEY_TYPED event without the corresponding KEY_PRESSED and KEY_RELEASED events (excluding KEY_PRESSED or KEY_RELEASED events for modifiers), when an exclusive reservations is requested, it shall also be made for those corresponding KEY_PRESSED and KEY_RELEASED events but only the requested event shall be received by the listener.

Repositories do not keep a count of the number of times a particular user event is added or removed. Repeatedly adding an event to a repository has no effect. Removing an event removes it regardless of the number of times it has been added. For example, org.dvb.event.UserEventRepository.addUserEvent(UserEvent event) does nothing in case that the event is already in the repository. Events are considered to be already in the repository if an event with the same triplet of family, type and code is already in the repository.

Repositories are resolved when they are passed into the methods of EventManager. Adding or removing events from the repository after those method calls does not affect the subscription to those events.

See Also:
UserEvent

Constructors

UserEventRepository(String)

```
public UserEventRepository(java.lang.String name)
```

The method to construct a new UserEventRepository.

Parameters:

name - the name of the repository.

Methods

---

addAllArrowKeys()

```
public void addAllArrowKeys()
```

Adds the key codes for the arrow keys (VK_LEFT, VK_RIGHT, VK_UP, VK_DOWN). Any key codes already in the repository will not be added again.

---

addAllColourKeys()

```
public void addAllColourKeys()
```

Adds the key codes for the colour keys (VK_COLORED_KEY_0, VK_COLORED_KEY_1, VK_COLORED_KEY_2, VK_COLORED_KEY_3). Any key codes already in the repository will not be added again.

---

addAllNumericKeys()

```
public void addAllNumericKeys()
```

Adds the key codes for the numeric keys (VK_0, VK_1, VK_2, VK_3, VK_4, VK_5, VK_6, VK_7, VK_8, VK_9). Any key codes already in the repository will not be added again.

---

addKey(int)

```
public void addKey(int keycode)
```

A shortcut to create a new key event type entry in the repository. If a key is already in the repository, this method has no effect.

Parameters:

`keycode` - the key code.

---

addUserEvent(UserEvent)

```
public void addUserEvent(UserEvent event)
```

Adds the given user event to the repository.

Parameters:

`event` - the user event to be added in the repository.

---

getUserEvent()

```
public UserEvent[] getUserEvent()
```

Returns the list of the user events that are in the repository.

Returns:

an array which contains the user events that are in the repository.

---

removeAllArrowKeys()

```
public void removeAllArrowKeys()
```

Removes the key codes for the arrow keys (VK_LEFT, VK_RIGHT, VK_UP, VK_DOWN). Key codes from this set which are not present in the repository will be ignored.

---

removeAllColourKeys()

```
public void removeAllColourKeys()
```

Removes the key codes for the colour keys (VK_COLORED_KEY_0, VK_COLORED_KEY_1, VK_COLORED_KEY_2, VK_COLORED_KEY_3). Key codes from this set which are not present in the repository will be ignored.

---

removeAllNumericKeys()

```
public void removeAllNumericKeys()
```

Remove the key codes for the numeric keys (VK_0, VK_1, VK_2, VK_3, VK_4, VK_5, VK_6, VK_7, VK_8, VK_9). Key codes from this set which are not present in the repository will be ignored.

---

removeKey(int)

```
public void removeKey(int keycode)
```

The method to remove a key from the repository. Removing a key which is not in the repository has no effect.

Parameters:

`keycode` - the key code.

---

removeUserEvent(UserEvent)

```
public void removeUserEvent(UserEvent event)
```

Remove a user event from the repository. Removing a user event which is not in the repository shall have no effect.

Parameters:

`event` - the event to be removed from the repository.

Annex J (normative): DVB-J persistent storage API

Package
org.dvb.io.persistent

Description
Provides extensions to the java.io package for access to files held in persistent storage.

Class Summary	
Classes	
FileAccessPermissions	This class encapsulates file access permissions, world, Organisation and owner.
FileAttributes	This class encapsulates the attributes of a file stored in persistent storage.

org.dvb.io.persistent
FileAccessPermissions

Syntax

```
public class FileAccessPermissions

java.lang.Object
  |
  +--org.dvb.io.persistent.FileAccessPermissions
```

Description

This class encapsulates file access permissions, world, Organisation and owner. World means all applications authorised to access persistent storage. Owner means the application which created the file. Organisation is defined as applications with the same organisation id as defined elsewhere in this specification.

Constructors

FileAccessPermissions(boolean, boolean, boolean, boolean, boolean, boolean)

```
public FileAccessPermissions(boolean readWorldAccessRight, boolean writeWorldAccessRight,
            boolean readOrganisationAccessRight, boolean writeOrganisationAccessRight,
            boolean readApplicationAccessRight, boolean writeApplicationAccessRight)
```

This contructor encodes all the file access permissions as a set of booleans.

Parameters:

`readWorldAccessRight` - read access for all applications

`writeWorldAccessRight` - write access for all applications

`readOrganisationAccessRight` - read access for organisation

`writeOrganisationAccessRight` - write access for organisation

`readApplicationAccessRight` - read access for the owner

`writeApplicationAccessRight` - write access for the owner

Methods

---

hasReadApplicationAccessRight()

```
public boolean hasReadApplicationAccessRight()
```

Query whether this permission includes read access for the owning application

Returns:

true if the owning application can have read access, otherwise false.

---

hasReadOrganisationAccessRight()

```
public boolean hasReadOrganisationAccessRight()
```

Query whether this permission includes read access for the organisation

Returns:
true if applications in this organisation can have read access, otherwise false.

---

hasReadWorldAccessRight()

```
public boolean hasReadWorldAccessRight()
```

Query whether this permission includes read access for the world.

Returns:
true if all applications can have read access, otherwise false.

---

hasWriteApplicationAccessRight()

```
public boolean hasWriteApplicationAccessRight()
```

Query whether this permission includes write access for the owning application

Returns:
true if the owning application can have write access, otherwise false.

---

hasWriteOrganisationAccessRight()

```
public boolean hasWriteOrganisationAccessRight()
```

Query whether this permission includes write access for the organisation

Returns:
true if applications in this organisation can have read access, otherwise false.

---

hasWriteWorldAccessRight()

```
public boolean hasWriteWorldAccessRight()
```

Query whether this permission includes write access for the world.

Returns:
true if all applications can have write access, otherwise false.

---

setPermissions(boolean, boolean, boolean, boolean, boolean, boolean)

```
public void setPermissions(boolean ReadWorldAccessRight, boolean WriteWorldAccessRight,
            boolean ReadOrganisationAccessRight, boolean WriteOrganisationAccessRight,
            boolean ReadApplicationAccessRight, boolean WriteApplicationAccessRight)
```

This method allows to modify the permissions on this instance of the FileAccessPermission class.

Parameters:
`ReadWorldAccessRight` - read access for all applications

`WriteWorldAccessRight` - write access for all applications

`ReadOrganisationAccessRight` - read access for organisation

`WriteOrganisationAccessRight` - write access for organisation

`ReadApplicationAccessRight` - read access for the owner

`WriteApplicationAccessRight` - write access for the owner

org.dvb.io.persistent
FileAttributes

Syntax

```
public class FileAttributes

java.lang.Object
  |
  +--org.dvb.io.persistent.FileAttributes
```

Description

This class encapsulates the attributes of a file stored in persistent storage. The default attributes for a file are low priority, owner read / write only permissions and null expiration date.

Fields

PRIORITY_HIGH

```
public static final int PRIORITY_HIGH
```

Value for use as a file priority.

PRIORITY_LOW

```
public static final int PRIORITY_LOW
```

Value for use as a file priority.

PRIORITY_MEDIUM

```
public static final int PRIORITY_MEDIUM
```

Value for use as a file priority.

Methods

---

getExpirationDate()

```
public java.util.Date getExpirationDate()
```

Returns the expiration date. It will return the value used by the platform, which need not be the same as the value set.

Returns:
the expiration date

---

getFileAttributes(File)

```
public static FileAttributes getFileAttributes(java.io.File f)
```

Get the attributes of a file.

Parameters:
`f` - the file to use

Returns:
a copy of the attributes of a file

Throws:
`SecurityException` - if the application is denied access to the file or to directories needed to reach the file by security policy

`IOException` - if access to the file fails due to an IO error or if the file reference is not to a valid location in persistent storage

---

getPermissions()

```
public FileAccessPermissions getPermissions()
```

Returns the file access permissions

Returns:
the file access permissions

---

getPriority()

```
public int getPriority()
```

Returns the priority to use in persistent storage

Returns:
the priority

---

setExpirationDate(Date)

```
public void setExpirationDate(java.util.Date d)
```

Sets the expiration date. This field is a hint to the platform to identify the date after which a file is no longer useful as percieved by the application. The platform may choose to use a different date than the one given as a parameter.

Parameters:
`d` - the expiration date

---

setFileAttributes(FileAttributes, File)

```
public static void setFileAttributes(FileAttributes p, java.io.File f)
```

Associate a set of file attributes with a file.

Parameters:
`p` - the file attributes to use

`f` - the file to use

Throws:
`SecurityException` - if the application is either denied access to the file or directories needed to reach the file by security policy or is not authorised to modify the attributes of the file.

`IOException` - if access to the file fails due to an IO error or if the file reference is not to a valid location in persistent storage

---

setPermissions(FileAccessPermissions)

```
public void setPermissions(FileAccessPermissions p)
```

Sets the file access permissions.

Parameters:

`p` - the file access permissions

---

setPriority(int)

```
public void setPriority(int priority)
```

Sets the priority to use in persistent storage

Parameters:

`priority` - the priority to set

Annex K (informative): Extensions

Private protocols and possibly APIs are not precluded and are outside of the scope of the MHP specification.

The addition of public or protected methods or fields to classes and interfaces in the `org.dvb` namespace is **not** allowed.

Annex L (normative): User Settings and Preferences API

Package
org.dvb.user

Description
Provides access to settings and preferences configured by the end-user.

Class Summary	
Interfaces	
UserPreferenceChange-Listener	An application wishing to be informed of any change to a user preference implements this interface.
Classes	
Facility	A facility maps a preference's name to a single value or to an array of values.
GeneralPreference	This class defines a set of general preferences.
Preference	This abstract class defines the Preference object.
UserPreferenceChan-geEvent	This class defines the event sent to appropriate listeners when a user preference has been changed.
UserPreferenceManager	The UserPreferenceManager class gives access to the user preference settings.
UserPreferencePermis-sion	This class is for user preference and setting permissions.
Exceptions	
UnsupportedPreferen-ceException	Thrown when a non-supported preference is used.

org.dvb.user
Facility

Syntax
```
public class Facility

java.lang.Object
  |
  +--org.dvb.user.Facility
```

Description
A facility maps a preference's name to a single value or to an array of values. A facility enables an application to define the list of values supported for a specified preference. For example, if an application is available in English or French then it can create a Facility ("User Language", {"English", "French"}). When the application will retrieve the "User Language" from the general preference it will specify the associated facility in order to get a Preference which will contain a set a values compatible with those supported by the application.

Constructors

Facility(String, String)

```
public Facility(java.lang.String preference, java.lang.String value)
```

Creates a Facility with a single value. This facility can be used by an application to retrieve a preference compatible with its capabilities.

Parameters:

`preference` - a String representing the name of the preference.

`value` - a String representing the value of the preference.

Facility(String, String[])

```
public Facility(java.lang.String preference, java.lang.String[] values)
```

Creates a Facility with a set of values. This facility can be used by an application to retrieve a preference compatible with its capabilities.

Parameters:

`preference` - a String representing the name of the preference.

`values` - an array of String representing the set of values.

org.dvb.user
GeneralPreference

Syntax
```
public final class GeneralPreference extends Preference

java.lang.Object
  |
  +--Preference
        |
        +--org.dvb.user.GeneralPreference
```

Description
This class defines a set of general preferences. These preferences are read from the receiver and each application (downloaded or not) can access them through the `UserPreferenceManager.read` method. The standardized preferences are "User Language", "Parental Rating", "User Name", "User Address", "User @", "Country Code", "Default Font Size".

When constructed, objects of this class are empty and have no values defined. Values may be added using the add methods inherited from the Preference class or by calling `UserPreferenceManager.read`.

The encodings of these standardized preferences are as follows.

- User Language: 3 letter ISO 639 language codes;
- Parental rating: string using the same encoding as returned by `javax.tv.service.guide.ContentRatingAdvisory.getDisplayText`;
- User name: name of the user, first name(s) first and last name last;
- User Address: postal address of the user, may contain multiple lines separated by carriage return characters (as defined in table D-4).
- User @: e-mail address of the user in the SMTP form as defined in RFC821;
- Country Code: two letter ISO 3166-1 country code;
- Default font size: preferred font size for normal body text expressed in points, decimal integer value encoded as a string (26 is the default; differing size indicates a preference of different font size than usual)

Constructors

GeneralPreference(String)

```
public GeneralPreference(java.lang.String name)
```

Constructs a GeneralPreference object. A general preference maps a preference name to a list of strings.

Parameters:
`name` - the general preference name.

Throws:
`IllegalArgumentException` - if the preference's name is not supported.

org.dvb.user
Preference

Syntax
```
public abstract class Preference

java.lang.Object
  |
  +--org.dvb.user.Preference
```

Direct Known Subclasses:
GeneralPreference

Description
This abstract class defines the Preference object. A Preference maps a name to a list of favourite values. The first element in the list is the favourite value for this preference.

Constructors

Preference()

```
protected Preference()
```

This protected constructor is only present to enable sub-classes of this one to be defined by the platform. It is not intended to be used by inter-operable applications.

Preference(String, String)

```
public Preference(java.lang.String name, java.lang.String value)
```

Creates a new preference with the specified name and the specified value. This single value will be the favourite one for this preference.

Parameters:

`name` - a String object representing the name of the preference.

`value` - a String object representing the value of the preference.

Preference(String, String[])

```
public Preference(java.lang.String name, java.lang.String[] value)
```

Creates a new preference with the specified name and the specified value set.

Parameters:

`name` - a String object representing the name of the preference.

`value` - an array of String objects representing the set of values for this preference ordered from the most favourite to the least favourite.

Methods

---

add(int, String)

```
public void add(int position, java.lang.String value)
```

Adds a new value for this preference. The value is inserted at the specified position. If the value is already in the list then it is moved to the position specified. If the position is greater than the length of the list, then the value is added to the end of this list. If the position is negative, then the value is added to the beginning of this list.

Parameters:

`position` - an int representing the position in the list.

`value` - a String representing the new value to insert.

---

add(String)

```
public void add(java.lang.String value)
```

Adds a new value for this preference. The value is added to the end of the list. If the value is already in the list then it is moved to the end of the list.

Parameters:

`value` - a String object representing the new value.

---

add(String[])

```
public void add(java.lang.String[] values)
```

Adds several new values for this preferences. The values are added to the end of the list in the same order as they are found in the array passed to this method. Any values already in the list are moved to the position in the list which they would have if they were not already present.

Parameters:

`values` - an array of strings representing the values to add

Since:

MHP 1.0.1

---

getFavourites()

```
public java.lang.String[] getFavourites()
```

Returns the list of favourite values for this preference. Returns an empty array if no value sets are defined for this preference.

Returns:

an array of String representing the favourite values for this preference.

---

getMostFavourite()

```
public java.lang.String getMostFavourite()
```

Returns the most favourite value for this preference, that is, the first element of the list.

Returns:

a String representing the favourite values Returns null if no value is defined for this preference.

---

getName()

```
public java.lang.String getName()
```

Returns the name of the preference.

Returns:

a String object representing the name of the preference.

---

getPosition(String)

```
public int getPosition(java.lang.String value)
```

Returns the position in the list of the specified value.

Parameters:
`value` - a String representing the value to look for.

Returns:
an integer representing the position of the value in the list counting from zero. If the value is not found then it returns -1.

---

hasValue()

```
public boolean hasValue()
```

Tests if this preference has at least one value set.

Returns:
true if this preference has at least one value set, false otherwise.

---

remove(String)

```
public void remove(java.lang.String value)
```

Removes the specified value from the list of favourites. If the value is not in the list then the method call has no effect.

Parameters:
`value` - a String representing the value to remove.

---

removeAll()

```
public void removeAll()
```

Removes all the values of a preference

Since:
MHP 1.0.1

---

setMostFavourite(String)

```
public void setMostFavourite(java.lang.String value)
```

Sets the most favourite value for this preference. If the value is already in the list, then it is moved to the head. If the value is not already in the list then it is added at the head.

Parameters:
`value` - the most favourite value

---

toString()

```
public java.lang.String toString()
```

Convert name and favourites to a String.

Overrides:
java.lang.Object.toString() in class java.lang.Object

Returns:
the preference name and favourites

org.dvb.user
UnsupportedPreferenceException

Syntax
```
public class UnsupportedPreferenceException extends java.lang.Exception

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--org.dvb.user.UnsupportedPreferenceException
```

All Implemented Interfaces:
java.io.Serializable

Description
Thrown when a non-supported preference is used.

Constructors

UnsupportedPreferenceException()

```
public UnsupportedPreferenceException()
```

Constructs a `UnsupportedPreferenceException` with no detail message.

UnsupportedPreferenceException(String)

```
public UnsupportedPreferenceException(java.lang.String a)
```

Constructs a `UnsupportedPreferenceException` with a detail message.

Parameters:
`a` - the detail message

org.dvb.user
UserPreferenceChangeEvent

Syntax
```
public class UserPreferenceChangeEvent extends java.util.EventObject

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--org.dvb.user.UserPreferenceChangeEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
This class defines the event sent to appropriate listeners when a user preference has been changed.

Constructors

UserPreferenceChangeEvent(String)

```
public UserPreferenceChangeEvent(java.lang.String preferenceName)
```

Constructs a new event.

Parameters:
`preferenceName` - the name of the modified preference.

Methods

---

getName()

```
public java.lang.String getName()
```

Returns the name of the modified Preference

Returns:
the Preference name.

org.dvb.user
UserPreferenceChangeListener

Syntax
```
public interface UserPreferenceChangeListener
```

Description
An application wishing to be informed of any change to a user preference implements this interface.

Methods

---

receiveUserPreferenceChangeEvent(UserPreferenceChangeEvent)

```
public void receiveUserPreferenceChangeEvent(UserPreferenceChangeEvent e)
```

This method is called when a user preference changes.

Parameters:

`e` - the event notifying this event.

org.dvb.user
UserPreferenceManager

Syntax
```
public class UserPreferenceManager

java.lang.Object
  |
  +--org.dvb.user.UserPreferenceManager
```

Description
The UserPreferenceManager class gives access to the user preference settings. This class provides a set of methods that allow an application to read or save user settings. It also provides a mechanism to notify applications when a preference has been modified. The value of a user setting,retrieved with the read method, is a copy of the value that is stored in the receiver. The write method, if authorized, overwrites the stored value.

Methods

---

addUserPreferenceChangeListener(UserPreferenceChangeListener)

```
public void addUserPreferenceChangeListener(UserPreferenceChangeListener l)
```

Adds a listener for changes in user preferences.

Parameters:
`l` - the listener to add.

---

getInstance()

```
public static UserPreferenceManager getInstance()
```

Return an instance of the `UserPreferenceManager` for this application. Repeated calls to this method by the same application shall return the same instance.

Returns:
an instance of `UserPreferenceManager`

---

read(Preference)

```
public void read(Preference p)
```

Allows an application to read a specified user preference.

Parameters:
`p` - an object representing the preference to read.

Throws:
`SecurityException` - if the calling application is denied access to this preference

---

read(Preference, Facility)

```
public void read(Preference p, Facility facility)
```

Allows an application to read a specified user preference taking into account the facility defined by the application. If the intersection between the two sets of values is empty then the preference will have no value. If there is a mis-match between the name of the preference used when constructing the facility and the name of the preference used in this method then the preference will have no value.

Parameters:

`p` - an object representing the preference to read.

`facility` - the preferred values the application for the preference

Throws:

`SecurityException` - if the calling application is denied access to this preference

---

removeUserPreferenceChangeListener(UserPreferenceChangeListener)

```
public void removeUserPreferenceChangeListener(UserPreferenceChangeListener l)
```

Removes a listener for changes in user preferences.

Parameters:

`l` - the listener to remove.

---

write(Preference)

```
public void write(Preference p)
```

Saves the specified user preference. If this method succeeds then it will change the value of this preference for all future MHP applications.

Parameters:

`p` - the preference to save.

Throws:

`UnsupportedPreferenceException` - if the preference provided is not a standardized preference as defined for use with `GeneralPreference`.

`java.lang.SecurityException` - if the application does not have permission to call this method

`IOException` - if saving the preference fails for other reasons

org.dvb.user
UserPreferencePermission

Syntax

```
public class UserPreferencePermission extends java.security.BasicPermission

java.lang.Object
  |
  +--java.security.Permission
        |
        +--java.security.BasicPermission
              |
              +--org.dvb.user.UserPreferencePermission
```

All Implemented Interfaces:

java.security.Guard, java.io.Serializable

Description

This class is for user preference and setting permissions. A UserPreferencePermission contains a name, but no actions list.

The permission name can either be "read" or "write". The "read" permission allows an application to read the user preferences and settings (using `UserPreferenceManager.read`) for which read access is not always granted. Access to the following settings/preferences is always granted: "User Language", "Parental Rating", "Default Font Size" and "Country Code"

The "write" permission allows an application to modify user preferences and settings (using `UserPreferenceManager.write`).

Constructors

UserPreferencePermission(String)

```
public UserPreferencePermission(java.lang.String name)
```

Creates a new UserPreferencePermission with the specified name. The name is the symbolic name of the UserPreferencePermission.

Parameters:

`name` - the name of the UserPreferencePermission

UserPreferencePermission(String, String)

```
public UserPreferencePermission(java.lang.String name, java.lang.String actions)
```

Creates a new UserPreferencePermission object with the specified name. The name is the symbolic name of the UserPreferencePermission, and the actions String is unused and should be null. This constructor exists for use by the Policy object to instantiate new Permission objects.

Parameters:

`name` - the name of the UserPreferencePermission

`actions` - should be null.

Annex M (normative): SI Access API

Package org.dvb.si

Description

Provides access to DVB service information.

General Design

Many of the methods in this package use a common design template. Asynchronous method calls to retrieve data from the network all return an instance of the `SIRequest` class. Applications may use this to inquire about or terminate the retrieval operation. When the retrieval operation completes, an instance of a subclass of `SIRetrievalEvent` will be sent to the `SIRetrievalListener` which the application passed in as a parameter to the original method call to retrieve data from the network. When constructing these events, the platform shall provide as the request parameter to the event constructor, the same instance of the `SIRequest` class as was returned by the original method call which started the retrieval operation. This `SIRequest` instance shall be returned by the `getSource` method on such events.

Class Summary

Interfaces

DescriptorTag	This interface defines constants corresponding to the most common descriptor tags.
PMTElementaryStream	This interface represents an elementary stream of a service.
PMTService	This interface represents a particular service carried by a transport stream.
PMTStreamType	This interface defines the constants corresponding to the different stream types
SIBouquet	This interface (together with the SITransportStreamBAT interface) represents a sub-table of the Bouquet Association Table (BAT) describing a particular bouquet.
SIEvent	This interface represents a particular event within a service.
SIInformation	This interface groups the common features of SIBouquet, SINetwork, SITransportStream, SIService, PMTService, SIEvent, SITime and PMTElementaryStream.
SIIterator	Objects implementing SIIterator interface allow to browse through a set of SI objects.
SIMonitoringListener	This interface shall be implemented by using application classes in order to listen to changes in monitored SI objects.
SIMonitoringType	This interface defines the constants corresponding to the SI information type values in SIMonitoringEvent.
SINetwork	This interface (together with the SITransportStreamNIT interface) represents a sub-table of the Network Information Table (NIT) describing a particular network.
SIRetrievalListener	This interface shall be implemented by application classes in order to receive events about completion of SI requests.
SIRunningStatus	This interface defines the constants corresponding to the running status values for services and events.
SIService	This interface represents a particular service carried by a transport stream.

Class Summary	
SIServiceType	This interface defines constants corresponding to the different service types.
SITime	This interface represents the Time and Date Table (TDT) and the (optional) Time Offset Table (TOT).
SITransportStream	This interface is the base interface for representing information about transport streams.
SITransportStreamBAT	This interface represents information about transport streams that has been retrieved from a BAT table.
SITransportStreamDescription	This interface represents the Transport Stream Description Table (TSDT).
SITransportStreamNIT	This interface represents information about transport streams that has been retrieved from a NIT table.
TextualServiceIdentifierQuery	An interface that can be implemented by objects representing DVB services.
Classes	
Descriptor	This class represents a descriptor within a sub-table.
SIDatabase	This class represents the root of the SI information hierarchy.
SILackOfResourcesEvent	This event is sent in response to a SI retrieval request when the resources needed for retrieving the data are not available, e.g.
SIMonitoringEvent	Objects of this class are sent to listener objects of the using application to notify that a change in the monitored information has happened.
SINotInCacheEvent	This event is sent in response to a SI retrieval request when the request was made with the FROM_CACHE_ONLY mode and the requested data is not present in the cache.
SIObjectNotInTableEvent	This event is sent in response to a SI retrieval request when the SI table where the information about the requested object should be located has been retrieved but the requested object is not present in it.
SIRequest	Object instances of this class represent SI retrieval requests made by the application.
SIRequestCancelledEvent	This event is sent in response to a SI retrieval request when the request is cancelled with the SIRequest.cancelRequest method call.
SIRetrievalEvent	This class is the base class for events about completion of a SI retrieval request.
SISuccessfulRetrieveEvent	This event is sent in response to a SI retrieval request when the retrieve request was successfully completed.
SITableNotFoundEvent	This event is sent in response to a SI retrieval request when the SI table that should contain the requested information could not be retrieved.
SITableUpdatedEvent	This event is sent in response to a SI descriptor retrieval request when the table carrying the information about the object has been updated and the set of descriptors consistent with the old object can not be retrieved.
SIUtil	This class contains SI related utility functions.
Exceptions	
SIException	This class is the root of the SI exceptions hierarchy.
SIIllegalArgumentException	This exception is thrown when one or more of the arguments passed to a method are invalid (e.g.

Class Summary	
SIInvalidPeriodException	This exception is thrown when a specified period is invalid (for example, start time is after the end time)

org.dvb.si
Descriptor

Syntax
```
public class Descriptor

java.lang.Object
  |
  +--org.dvb.si.Descriptor
```

Description
This class represents a descriptor within a sub-table.

A descriptor consist of three fields: a tag, a contentLength and the content.

The tag uniquely identifies the descriptor type. The content length indicates the number of bytes in the content. The content consists of an array of bytes of length content length. The data represented by the content is descriptor type dependent.

See Also:
`DescriptorTag`

Methods

---

getByteAt(int)

```
public byte getByteAt(int index)
```

Get a particular byte within the descriptor content

Parameters:
`index` - index to the descriptor content. Value 0 corresponds to the first byte after the length field.

Returns:
The required byte

Throws:
`IndexOutOfBoundsException` - if index < 0 or index >= ContentLength

---

getContent()

```
public byte[] getContent()
```

Get a copy of the content of this descriptor (everything after the length field).

Returns:
a copy of the content of the descriptor

---

getContentLength()

```
public short getContentLength()
```

This method returns the length of the descriptor content as coded in the length field of this descriptor.

Returns:
The length of the descriptor content.

---

getTag()

```
public short getTag()
```

Get the descriptor tag

Returns:
The descriptor tag (the most common values are defined in the DescriptorTag interface)

See Also:
DescriptorTag

org.dvb.si
DescriptorTag

Syntax
```
public interface DescriptorTag
```

Description
This interface defines constants corresponding to the most common descriptor tags.

See Also:
Descriptor

Fields

BOUQUET_NAME

```
public static final short BOUQUET_NAME
```

Constant value for the descriptor tag as specified in EN 300 468

CA_IDENTIFIER

```
public static final short CA_IDENTIFIER
```

Constant value for the descriptor tag as specified in EN 300 468

CABLE_DELIVERY_SYSTEM

```
public static final short CABLE_DELIVERY_SYSTEM
```

Constant value for the descriptor tag as specified in EN 300 468

COMPONENT

```
public static final short COMPONENT
```

Constant value for the descriptor tag as specified in EN 300 468

CONTENT

```
public static final short CONTENT
```

Constant value for the descriptor tag as specified in EN 300 468

COUNTRY_AVAILABILITY

```
public static final short COUNTRY_AVAILABILITY
```

Constant value for the descriptor tag as specified in EN 300 468

DATA_BROADCAST

```
public static final short DATA_BROADCAST
```

Constant value for the descriptor tag as specified in EN 300 468

EXTENDED_EVENT

```
public static final short EXTENDED_EVENT
```

Constant value for the descriptor tag as specified in EN 300 468

FREQUENCY_LIST

```
public static final short FREQUENCY_LIST
```

Constant value for the descriptor tag as specified in EN 300 468

LINKAGE

```
public static final short LINKAGE
```

Constant value for the descriptor tag as specified in EN 300 468

LOCAL_TIME_OFFSET

```
public static final short LOCAL_TIME_OFFSET
```

Constant value for the descriptor tag as specified in EN 300 468

MOSAIC

```
public static final short MOSAIC
```

Constant value for the descriptor tag as specified in EN 300 468

MULTILINGUAL_BOUQUET_NAME

```
public static final short MULTILINGUAL_BOUQUET_NAME
```

Constant value for the descriptor tag as specified in EN 300 468

MULTILINGUAL_COMPONENT

```
public static final short MULTILINGUAL_COMPONENT
```

Constant value for the descriptor tag as specified in EN 300 468

MULTILINGUAL_NETWORK_NAME

```
public static final short MULTILINGUAL_NETWORK_NAME
```

Constant value for the descriptor tag as specified in EN 300 468

MULTILINGUAL_SERVICE_NAME

```
public static final short MULTILINGUAL_SERVICE_NAME
```

Constant value for the descriptor tag as specified in EN 300 468

NETWORK_NAME

```
public static final short NETWORK_NAME
```

Constant value for the descriptor tag as specified in EN 300 468

NVOD_REFERENCE

```
public static final short NVOD_REFERENCE
```

Constant value for the descriptor tag as specified in EN 300 468

PARENTAL_RATING

```
public static final short PARENTAL_RATING
```

Constant value for the descriptor tag as specified in EN 300 468

PARTIAL_TRANSPORT_STREAM

```
public static final short PARTIAL_TRANSPORT_STREAM
```

Constant value for the descriptor tag as specified in EN 300 468

PRIVATE_DATA_SPECIFIER

```
public static final short PRIVATE_DATA_SPECIFIER
```

Constant value for the descriptor tag as specified in EN 300 468

SATELLITE_DELIVERY_SYSTEM

```
public static final short SATELLITE_DELIVERY_SYSTEM
```

Constant value for the descriptor tag as specified in EN 300 468

SERVICE

```
public static final short SERVICE
```

Constant value for the descriptor tag as specified in EN 300 468

SERVICE_LIST

```
public static final short SERVICE_LIST
```

Constant value for the descriptor tag as specified in EN 300 468

SERVICE_MOVE

```
public static final short SERVICE_MOVE
```

Constant value for the descriptor tag as specified in EN 300 468

SHORT_EVENT

```
public static final short SHORT_EVENT
```

Constant value for the descriptor tag as specified in EN 300 468

SHORT_SMOOTHING_BUFFER

```
public static final short SHORT_SMOOTHING_BUFFER
```

Constant value for the descriptor tag as specified in EN 300 468

STREAM_IDENTIFIER

```
public static final short STREAM_IDENTIFIER
```

Constant value for the descriptor tag as specified in EN 300 468

STUFFING

```
public static final short STUFFING
```

Constant value for the descriptor tag as specified in EN 300 468

SUBTITLING

```
public static final short SUBTITLING
```

Constant value for the descriptor tag as specified in EN 300 468

TELEPHONE

```
public static final short TELEPHONE
```

Constant value for the descriptor tag as specified in EN 300 468

TELETEXT

```
public static final short TELETEXT
```

Constant value for the descriptor tag as specified in EN 300 468

TERRESTRIAL_DELIVERY_SYSTEM

```
public static final short TERRESTRIAL_DELIVERY_SYSTEM
```

Constant value for the descriptor tag as specified in EN 300 468

TIME_SHIFTED_EVENT

```
public static final short TIME_SHIFTED_EVENT
```

Constant value for the descriptor tag as specified in EN 300 468

TIME_SHIFTED_SERVICE

```
public static final short TIME_SHIFTED_SERVICE
```

Constant value for the descriptor tag as specified in EN 300 468

org.dvb.si
PMTElementaryStream

Syntax
```
public interface PMTElementaryStream extends SIInformation
```

All Superinterfaces:
SIInformation

Description
This interface represents an elementary stream of a service.

For each running service there is a PMT describing the elementary streams of the service. An object that implements this interface represents one such elementary stream. Each object that implements the PMTElementaryStream interface is identified by the combination of the identifiers original_network_id, transport_stream_id, service_id, component_tag (or elementary_PID).

See Also:
PMTService, PMTStreamType

Methods

---

getComponentTag()

```
public int getComponentTag()
```

Get the component tag identifier.

Returns:
The component tag. If the elementary stream does not have an associated component tag, this method returns -2.

---

getDvbLocator()

```
public org.davic.net.dvb.DvbLocator getDvbLocator()
```

Gets a DvbLocator that identifies this elementary stream

Returns:
The DvbLocator of this elementary stream

---

getElementaryPID()

```
public short getElementaryPID()
```

Get the elementary PID.

Returns:
The PID the data of elementary stream is sent on in the transport stream.

---

getOriginalNetworkID()

```
public int getOriginalNetworkID()
```

Get the original network identification identifier.

Returns:
The original network identification.

---

getServiceID()

```
public int getServiceID()
```

Get the service identification identifier.

Returns:
The service identification.

---

getStreamType()

```
public byte getStreamType()
```

Get the stream type of this elemetary stream.

Returns:
The stream type (some of the possible values are defined in the PMTStreamType interface).

See Also:
PMTStreamType

---

getTransportStreamID()

```
public int getTransportStreamID()
```

Get the transport stream identification identifier.

Returns:
The transport stream identification.

org.dvb.si
PMTService

Syntax
```
public interface PMTService extends SIInformation
```

All Superinterfaces:
SIInformation

Description
This interface represents a particular service carried by a transport stream. The information is retrieved from the PMT table.

Each object that implements the PMTService interface is identified by the combination of the following identifiers: original_network_id, transport_stream_id, service_id.

Methods

---

getDvbLocator()

```
public org.davic.net.dvb.DvbLocator getDvbLocator()
```

Gets a DvbLocator that identifies this service

Returns:
The DvbLocator of this service

---

getOriginalNetworkID()

```
public int getOriginalNetworkID()
```

Get the original network identification.

Returns:
The original network identification identifier.

---

getPcrPid()

```
public int getPcrPid()
```

Get the PCR pid.

Returns:
The PCR pid.

---

getServiceID()

```
public int getServiceID()
```

Get the service identification.

Returns:
The service identification identifier.

getTransportStreamID()

```
public int getTransportStreamID()
```

Get the transport stream identification.

Returns:
The transport stream identification identifier.

retrievePMTElementaryStreams(short, Object, SIRetrievalListener, short[])

```
public SIRequest retrievePMTElementaryStreams(short retrieveMode, java.lang.Object appData,
            SIRetrievalListener listener, short[] somePMTDescriptorTags)
```

Retrieve information associated with the elementary streams which compose this service from the Program Map Table (PMT).

The SIIterator that is returned with the event when the request completes successfully will contain one or more objects that implement the PMTElementaryStream interface. If no matching object was found,the appropriate one of the following events is sent: ObjectNotInCacheEvent ObjectNotInTableEvent or TableNotFoundEvent.

Parameters:

`retrieveMode` - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

`appData` - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

`listener` - SIRetrievalListener that will receive the event informing about the completion of the request.

`somePMTDescriptorTags` - A list of hints for descriptors (identified by their tags) the application is interested in. If the array contains -1 as its one and only element, the application is interested in all descriptors. If somePMTDescriptorTags is null, the application is not interested in descriptors. All non applicable tag values are ignored.

Returns:
An SIRequest object

Throws:
`SIIllegalArgumentException` - thrown if the retrieveMode is invalid

See Also:
`SIRequest`, `SIRetrievalListener`, `PMTElementaryStream`

org.dvb.si
PMTStreamType

Syntax
```
public interface PMTStreamType
```

Description
This interface defines the constants corresponding to the different stream types

See Also:
PMTElementaryStream, getStreamType()

Fields

MPEG1_AUDIO

```
public static final byte MPEG1_AUDIO
```

Constant value for the stream type as specified in ISO/IEC 13818-1

MPEG1_VIDEO

```
public static final byte MPEG1_VIDEO
```

Constant value for the stream type as specified in ISO/IEC 13818-1

MPEG2_AUDIO

```
public static final byte MPEG2_AUDIO
```

Constant value for the stream type as specified in ISO/IEC 13818-1

MPEG2_VIDEO

```
public static final byte MPEG2_VIDEO
```

Constant value for the stream type as specified in ISO/IEC 13818-1

org.dvb.si
SIBouquet

Syntax
```
public interface SIBouquet extends SIInformation
```

All Superinterfaces:
SIInformation

Description
This interface (together with the SITransportStreamBAT interface) represents a sub-table of the Bouquet Association Table (BAT) describing a particular bouquet.

Each object that implements the SIBouquet interface is identified by the identifier bouquet_id.

See Also:
SITransportStreamBAT

Methods

---

getBouquetID()

```
public int getBouquetID()
```

Get the identification.

Returns:
The bouquet identification of this bouquet.

---

getDescriptorTags()

```
public short[] getDescriptorTags()
```

This method defines extra semantics for the SIInformation.getDescriptorTags method. If the BAT sub-table on which this SIBouquet object is based consists of multiple sections, then this method returns the descriptor tags in the order they appear when concatenating the descriptor loops of the different sections.

Overrides:
getDescriptorTags() in interface SIInformation

Returns:
The tags of the descriptors actually broadcast for the object (identified by their tags).

See Also:
SIInformation, getDescriptorTags()

---

getName()

```
public java.lang.String getName()
```

This method returns the name of this bouquet. The name is extracted from the bouquet_name_descriptor or optionally from the multilingual_bouquet_name_descriptor. When this

information is not available "" is returned. All control characters as defined in ETR 211 are ignored. For each character the DVB-SI 8 bit character code is mapped to the appropriate Unicode representation

Returns:
The bouquet name of this bouquet.

---

getShortBouquetName()

```
public java.lang.String getShortBouquetName()
```

This method returns the short name (ETR 211) of this bouquet without emphasis marks. The name is extracted from the bouquet_name_descriptor or optionally from the multilingual_bouquet_name_descriptor. When this information is not available "" is returned. For each character the DVB-SI 8 bit character code is mapped to the appropriate Unicode representation.

Returns:
The short bouquet name of this bouquet.

---

getSIServiceLocators()

```
public org.davic.net.dvb.DvbLocator[] getSIServiceLocators()
```

Get a list of DvbLocators identifying the services that belong to the bouquet.

Returns:
An array of DvbLocators identifying the services

See Also:
`org.davic.net.dvb.DvbLocator`, `SIService`

---

retrieveDescriptors(short, Object, SIRetrievalListener)

```
public SIRequest retrieveDescriptors(short retrieveMode, java.lang.Object appData,
            SIRetrievalListener listener)
```

This method defines extra semantics for the SIInformation.retrieveDescriptors method (first prototype). If the BAT sub-table on which this SIBouquet object is based consists of multiple sections, then this method returns the requested descriptors in the order they appear when concatenating the descriptor loops of the different sections.

Overrides:
`retrieveDescriptors(short, Object, SIRetrievalListener)` in interface `SIInformation`

Parameters:
`retrieveMode` - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

`appData` - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

`listener` - SIRetrievalListener that will receive the event informing about the completion of the request.

Returns:
An SIRequest object

Throws:

SIIllegalArgumentException - thrown if the retrieveMode is invalid

See Also:
SIInformation, retrieveDescriptors(short, Object, SIRetrievalListener)

---

retrieveDescriptors(short, Object, SIRetrievalListener, short[])

```
public SIRequest retrieveDescriptors(short retrieveMode, java.lang.Object appData,
            SIRetrievalListener listener, short[] someDescriptorTags)
```

This method defines extra semantics for the SIInformation.retrieveDescriptors method (second prototype). If the BAT sub-table on which this SIBouquet object is based consists of multiple sections, then this method returns the requested descriptors in the order they appear when concatenating the descriptor loops of the different sections.

Overrides:
retrieveDescriptors(short, Object, SIRetrievalListener, short[]) in interface SIInformation

Parameters:
retrieveMode - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

appData - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

listener - SIRetrievalListener that will receive the event informing about the completion of the request.

someDescriptorTags - A list of tags for descriptors (identified by their tags) the application is interested in. If the array contains -1 as its one and only element, the application is interested in all descriptors. If someDescriptorTags is null, the application is not interested in descriptors. All values that are out of the valid range for descriptor tags (i.e. 0...255) are ignored, except for the special meaning of -1 as the only element in the array.

Returns:
An SIRequest object

Throws:
SIIllegalArgumentException - thrown if the retrieveMode is invalid

See Also:
SIInformation, retrieveDescriptors(short, Object, SIRetrievalListener, short[])

---

retrieveSIBouquetTransportStreams(short, Object, SIRetrievalListener, short[])

```
public SIRequest retrieveSIBouquetTransportStreams(short retrieveMode,
            java.lang.Object appData, SIRetrievalListener listener,
            short[] someDescriptorTags)
```

Retrieve information associated with transport streams belonging to the bouquet.

The SIIterator that is returned with the event when the request completes successfully will contain one or more objects that implement the SITransportStreamBAT interface.

Parameters:
retrieveMode - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

`appData` - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

`listener` - SIRetrievalListener that will receive the event informing about the completion of the request.

`someDescriptorTags` - A list of hints for descriptors (identified by their tags) the application is interested in. If the array contains -1 as its one and only element, the application is interested in all descriptors. If someDescriptorTags is null, the application is not interested in descriptors. All values that are out of the valid range for descriptor tags (i.e. 0...255) are ignored, except for the special meaning of -1 as the only element in the array.

Returns:

An SIRequest object

Throws:

`SIIllegalArgumentException` - thrown if the retrieveMode is invalid

See Also:

`SIRequest`, `SIRetrievalListener`, `SITransportStreamBAT`, `DescriptorTag`

org.dvb.si
SIDatabase

Syntax
```
public class SIDatabase

java.lang.Object
  |
  +--org.dvb.si.SIDatabase
```

Description
This class represents the root of the SI information hierarchy. There is one SIDatabase per network interface. In a system with a single network interface there is only one SIDatabase object.

Methods

---

addBouquetMonitoringListener(SIMonitoringListener, int)

```
public void addBouquetMonitoringListener(SIMonitoringListener listener, int bouquetId)
```

Initiate monitoring of the bouquet information. When the bouquet information changes, an event will be delivered to the registered listener object.

How the monitoring is performed is implementation dependent and especially does not necessarily need to be continuous. The event will be delivered as soon as the implementation notices the change which might have some delay relative to when the change was actually made in the stream due to resources for the monitoring being scheduled between the monitoring activities of different tables. This specification does not set any minimum requirements for monitoring of the SI tables. This is to be done at a best effort basis by the implementation and is entirely implementation dependent. The only requirement is that when an implementation detects a change, e.g. because a resident Navigator or an MHP application has retrieved some SI information from the stream, then these listeners are notified of the change.

The monitoring stops silently and permanently when the network interface with which this SIDatabase object is associated starts tuning to another transport stream.

Parameters:

`listener` - listener object that will receive events when a change in the information is detected.

`bouquetId` - bouquet identifier of the bouquet whose information will be monitored.

Throws:

`SIIllegalArgumentException` - thrown if the identifiers are invalid (e.g. out of range)

See Also:

`SIMonitoringListener`, `SIMonitoringEvent`

---

addEventPresentFollowingMonitoringListener(SIMonitoringListener, int, int, int)

```
public void addEventPresentFollowingMonitoringListener(SIMonitoringListener listener,
            int originalNetworkId, int transportStreamId, int serviceId)
```

Initiate monitoring of information in the EIT related to present and following events. When the information related to those events changes, an event will be delivered to the registered listener object.

The scope of the monitoring is determined by the original network identifier, transport stream identifier and service identifier. The listener will be notified about the change of the information in any present and following event within that scope.

How the monitoring is performed is implementation dependent and especially does not necessarily need to be continuous. The event will be delivered as soon as the implementation notices the change which might have some delay relative to when the change was actually made in the stream due to resources for the monitoring being scheduled between the monitoring activities of different tables. This specification does not set any minimum requirements for monitoring of the SI tables. This is to be done at a best effort basis by the implementation and is entirely implementation dependent. The only requirement is that when an implementation detects a change, e.g. because a resident Navigator or an MHP application has retrieved some SI information from the stream, then these listeners are notified of the change.

The monitoring stops silently and permanently when the network interface with which this SIDatabase object is associated starts tuning to another transport stream.

Parameters:

`listener` - listener object that will receive events when a change in the information is detected.

`originalNetworkId` - original network identifier specifying the scope of the monitoring.

`transportStreamId` - transport stream identifier specifying the scope of the monitoring.

`serviceId` - service identifier specifying the scope of the monitoring

Throws:

`SIIllegalArgumentException` - thrown if the identifiers are invalid (e.g. out of range)

See Also:

`SIMonitoringListener`, `SIMonitoringEvent`

---

addEventScheduleMonitoringListener(SIMonitoringListener, int, int, int, Date, Date)

```
public void addEventScheduleMonitoringListener(SIMonitoringListener listener,
            int originalNetworkId, int transportStreamId, int serviceId,
            java.util.Date startTime, java.util.Date endTime)
```

Initiate monitoring of information in the EIT related to scheduled events. When the information related to those events changes, an event will be delivered to the registered listener object.

The scope of the monitoring is determined by the original network identifier, transport stream identifier, service identifier, start time and end time of the schedule period. The listener will be notified about the change of the information in any scheduled event within that scope.

How the monitoring is performed is implementation dependent and especially does not necessarily need to be continuous. The event will be delivered as soon as the implementation notices the change which might have some delay relative to when the change was actually made in the stream due to resources for the monitoring being scheduled between the monitoring activities of different tables. This specification does not set any minimum requirements for monitoring of the SI tables. This is to be done at a best effort basis by the implementation and is entirely implementation dependent. The only requirement is that when an implementation detects a change, e.g. because a resident Navigator or an MHP application has retrieved some SI information from the stream, then these listeners are notified of the change.

The monitoring stops silently and permanently when the network interface with which this SIDatabase object is associated starts tuning to another transport stream.

Parameters:

`listener` - listener object that will receive events when a change in the information is detected.

`originalNetworkId` - original network identifier specifying the scope of the monitoring.

`transportStreamId` - transport stream identifier specifying the scope of the monitoring.

serviceId - service identifier specifying the scope of the monitoring

startTime - start time of the schedule period

endTime - end time of the schedule period

Throws:

SIIllegalArgumentException - thrown if the identifiers are invalid (e.g. out of range)

SIInvalidPeriodException - thrown if end time is before start time

See Also:

SIMonitoringListener, SIMonitoringEvent

---

addNetworkMonitoringListener(SIMonitoringListener, int)

```
public void addNetworkMonitoringListener(SIMonitoringListener listener, int networkId)
```

Initiate monitoring of the network information. When the network information changes, an event will be delivered to the registered listener object.

How the monitoring is performed is implementation dependent and especially does not necessarily need to be continuous. The event will be delivered as soon as the implementation notices the change which might have some delay relative to when the change was actually made in the stream due to resources for the monitoring being scheduled between the monitoring activities of different tables. This specification does not set any minimum requirements for monitoring of the SI tables. This is to be done at a best effort basis by the implementation and is entirely implementation dependent. The only requirement is that when an implementation detects a change, e.g. because a resident Navigator or an MHP application has retrieved some SI information from the stream, then these listeners are notified of the change.

The monitoring stops silently and permanently when the network interface with which this SIDatabase object is associated starts tuning to another transport stream.

Parameters:

listener - listener object that will receive events when a change in the information is detected.

networkId - network identifier of the network whose information will be monitored.

Throws:

SIIllegalArgumentException - thrown if the identifiers are invalid (e.g. out of range)

See Also:

SIMonitoringListener, SIMonitoringEvent

---

addPMTServiceMonitoringListener(SIMonitoringListener, int, int, int)

```
public void addPMTServiceMonitoringListener(SIMonitoringListener listener,
            int originalNetworkId, int transportStreamId, int serviceId)
```

Initiate monitoring of information in the PMT related to a service. When the information related to a service changes, an event will be delivered to the registered listener object.

How the monitoring is performed is implementation dependent and especially does not necessarily need to be continuous. The event will be delivered as soon as the implementation notices the change which might have some delay relative to when the change was actually made in the stream due to resources for the monitoring being scheduled between the monitoring activities of different tables. This specification does not set any minimum requirements for monitoring of the SI tables. This is to be done at a best effort basis by the implementation and is entirely implementation dependent. The only requirement is that when an implementation detects a change, e.g. because a resident Navigator or an MHP application has retrieved some SI information from the stream, then these listeners are notified of the change.

The monitoring stops silently and permanently when the network interface with which this SIDatabase object is associated starts tuning to another transport stream.

Parameters:

`listener` - listener object that will receive events when a change in the information is detected.

`originalNetworkId` - original network identifier of the service

`transportStreamId` - transport stream identifier of the service

`serviceId` - service identifier specifying the service whose information will be monitored

Throws:

`SIIllegalArgumentException` - thrown if the identifiers are invalid (e.g. out of range)

See Also:

`SIMonitoringListener`, `SIMonitoringEvent`

---

addServiceMonitoringListener(SIMonitoringListener, int, int)

```
public void addServiceMonitoringListener(SIMonitoringListener listener,
            int originalNetworkId, int transportStreamId)
```

Initiate monitoring of information in the SDT related to services. When the information related to services changes, an event will be delivered to the registered listener object.

The scope of the monitoring is determined by the original network identifier and transport stream identifier. The listener will be notified about the change of the information in any service within that scope.

How the monitoring is performed is implementation dependent and especially does not necessarily need to be continuous. The event will be delivered as soon as the implementation notices the change which might have some delay relative to when the change was actually made in the stream due to resources for the monitoring being scheduled between the monitoring activities of different tables. This specification does not set any minimum requirements for monitoring of the SI tables. This is to be done at a best effort basis by the implementation and is entirely implementation dependent. The only requirement is that when an implementation detects a change, e.g. because a resident Navigator or an MHP application has retrieved some SI information from the stream, then these listeners are notified of the change.

The monitoring stops silently and permanently when the network interface with which this SIDatabase object is associated starts tuning to another transport stream.

Parameters:

`listener` - listener object that will receive events when a change in the information is detected.

`originalNetworkId` - original network identifier specifying the scope of the monitoring.

`transportStreamId` - transport stream identifier specifying the scope of the monitoring.

Throws:

`SIIllegalArgumentException` - thrown if the identifiers are invalid (e.g. out of range)

See Also:

`SIMonitoringListener`, `SIMonitoringEvent`

---

getSIDatabase()

```
public static SIDatabase[] getSIDatabase()
```

Return an array of SIDatabase objects (one object per network interface). In a system with one network interface, the length of this array will be one. The network interface of each SIDatabase is used as data source for all new data accessed by this SIDatabase or SIInformation instances obtained from it.

This is the first method to be called to access the DVB-SI API. The returned SIDatabase objects provide the access point to the DVB-SI information.

Returns:
An array of SIDatabase objects, one per network interface.

---

removeBouquetMonitoringListener(SIMonitoringListener, int)

```
public void removeBouquetMonitoringListener(SIMonitoringListener listener, int bouquetId)
```

Removes the registration of an event listener for bouquet information monitoring. If this method is called with a listener that is registered but not with the same identifiers of the SI objects as given in the parameters, the method shall fail silently and the listeners stays registered with those identifiers that it has been added.

Parameters:
`listener` - listener object that has previously been registered

`bouquetId` - bouquet identifier of the bouquet whose information has been requested to be monitored

Throws:
`SIIllegalArgumentException` - thrown if the identifiers are invalid (e.g. out of range)

See Also:
`SIMonitoringListener`, `SIMonitoringEvent`

---

removeEventPresentFollowingMonitoringListener(SIMonitoringListener, int, int, int)

```
public void removeEventPresentFollowingMonitoringListener(SIMonitoringListener listener,
            int originalNetworkId, int transportStreamId, int serviceId)
```

Removes the registration of an event listener for monitoring information related to present and following events If this method is called with a listener that is registered but not with the same identifiers of the SI objects as given in the parameters, the method shall fail silently and the listeners stays registered with those identifiers that it has been added.

Parameters:
`listener` - listener object that has previously been registered

`originalNetworkId` - original network identifier specifying the scope of the monitoring.

`transportStreamId` - transport stream identifier specifying the scope of the monitoring.

`serviceId` - service identifier specifying the scope of the monitoring

Throws:
`SIIllegalArgumentException` - thrown if the identifiers are invalid (e.g. out of range)

See Also:
`SIMonitoringListener`, `SIMonitoringEvent`

---

removeEventScheduleMonitoringListener(SIMonitoringListener, int, int, int)

```
public void removeEventScheduleMonitoringListener(SIMonitoringListener listener,
            int originalNetworkId, int transportStreamId, int serviceId)
```

Removes the registration of an event listener for monitoring information related to scheduled events for all periods If this method is called with a listener that is registered but not with the same identifiers of the SI objects as given in the parameters, the method shall fail silently and the listeners stays registered with those identifiers that it has been added.

Parameters:
`listener` - listener object that has previously been registered

originalNetworkId - original network identifier specifying the scope of the monitoring.

transportStreamId - transport stream identifier specifying the scope of the monitoring.

serviceId - service identifier specifying the scope of the monitoring

Throws:

SIIllegalArgumentException - thrown if the identifiers are invalid (e.g. out of range)

See Also:

SIMonitoringListener, SIMonitoringEvent

---

removeNetworkMonitoringListener(SIMonitoringListener, int)

```
public void removeNetworkMonitoringListener(SIMonitoringListener listener, int networkId)
```

Removes the registration of an event listener for network information monitoring. If this method is called with a listener that is registered but not with the same identifiers of the SI objects as given in the parameter, the method shall fail silently and the listeners stays registered with those identifiers that it has been added.

Parameters:

listener - listener object that has previously been registered

networkId - network identifier of the network which is no longer to be monitored by the listener

Throws:

SIIllegalArgumentException - thrown if the identifiers are invalid (e.g. out of range)

See Also:

SIMonitoringListener, SIMonitoringEvent

---

removePMTServiceMonitoringListener(SIMonitoringListener, int, int, int)

```
public void removePMTServiceMonitoringListener(SIMonitoringListener listener,
            int originalNetworkId, int transportStreamId, int serviceId)
```

Removes the registration of an event listener for monitoring information in the PMT related to a service. If this method is called with a listener that is registered but not with the same identifiers of the SI objects as given in the parameters, the method shall fail silently and the listeners stays registered with those identifiers that it has been added.

Parameters:

listener - listener object that has previously been registered

originalNetworkId - original network identifier of the service

transportStreamId - transport stream identifier of the service

serviceId - service identifier specifying the service whose information has been requested to be monitored

Throws:

SIIllegalArgumentException - thrown if the identifiers are invalid (e.g. out of range)

See Also:

SIMonitoringListener, SIMonitoringEvent

---

removeServiceMonitoringListener(SIMonitoringListener, int, int)

```
public void removeServiceMonitoringListener(SIMonitoringListener listener,
            int originalNetworkId, int transportStreamId)
```

Removes the registration of an event listener for monitoring information related to services. If this method is called with a listener that is registered but not with the same identifiers of the SI objects as

given in the parameters, the method shall fail silently and the listeners stays registered with those identifiers that it has been added.

Parameters:

`listener` - listener object that has previously been registered

`originalNetworkId` - original network identifier specifying the scope of the monitoring.

`transportStreamId` - transport stream identifier specifying the scope of the monitoring.

Throws:

`SIIllegalArgumentException` - thrown if the identifiers are invalid (e.g. out of range)

See Also:

`SIMonitoringListener`, `SIMonitoringEvent`

---

retrieveActualSINetwork(short, Object, SIRetrievalListener, short[])

```
public SIRequest retrieveActualSINetwork(short retrieveMode, java.lang.Object appData,
            SIRetrievalListener listener, short[] someDescriptorTags)
```

Retrieve information associated with the actual network. The actual network is the network carrying the transport stream currently selected by the network interface connected to this SIDatabase.

The SIIterator that is returned with the event when the request completes successfully will contain an object that implements the SINetwork interface. If no matching object was found, the appropriate one of the following events is sent:ObjectNotInCacheEvent ObjectNotInTableEvent or TableNotFoundEvent

Parameters:

`retrieveMode` - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

`appData` - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

`listener` - SIRetrievalListener that will receive the event informing about the completion of the request.

`someDescriptorTags` - A list of hints for descriptors (identified by their tags) the application is interested in. If the array contains -1 as its one and only element, the application is interested in all descriptors. If someDescriptorTags is null, the application is not interested in descriptors. All values that are out of the valid range for descriptor tags (i.e. 0...255) are ignored, except for the special meaning of -1 as the only element in the array.

Returns:

An SIRequest object

Throws:

`SIIllegalArgumentException` - thrown if the retrieveMode is invalid

See Also:

`SIRequest`, `SIRetrievalListener`, `SINetwork`, `DescriptorTag`

---

retrieveActualSIServices(short, Object, SIRetrievalListener, short[])

```
public SIRequest retrieveActualSIServices(short retrieveMode, java.lang.Object appData,
            SIRetrievalListener listener, short[] someDescriptorTags)
```

Retrieve information associated with the actual services. The actual services are the services in the transport stream currently selected by the network interface connected to this SIDatabase.

The SIIterator that is returned with the event when the request completes successfully will contain one or more objects that implement the SIService interface. If no matching object was found, the appropriate one of the following events is sent: `ObjectNotInCacheEvent`, `ObjectNotInTableEvent` or `TableNotFoundEvent`.

Parameters:

`retrieveMode` - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

`appData` - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

`listener` - SIRetrievalListener that will receive the event informing about the completion of the request.

`someDescriptorTags` - A list of hints for descriptors (identified by their tags) the application is interested in. If the array contains -1 as its one and only element, the application is interested in all descriptors. If someDescriptorTags is null, the application is not interested in descriptors. All values that are out of the valid range for descriptor tags (i.e. 0...255) are ignored, except for the special meaning of -1 as the only element in the array.

Returns:

An SIRequest object

Throws:

`SIIllegalArgumentException` - thrown if the retrieveMode is invalid

See Also:

`SIRequest`, `SIRetrievalListener`, `SIService`, `DescriptorTag`

---

retrieveActualSITransportStream(short, Object, SIRetrievalListener, short[])

```
public SIRequest retrieveActualSITransportStream(short retrieveMode,
            java.lang.Object appData, SIRetrievalListener listener,
            short[] someDescriptorTags)
```

Retrieve information associated with the actual transport stream. The actual transport stream is the transport stream currently selected by the network interface connected to this SIDatabase.

The SIIterator that is returned with the event when the request completes successfully will contain an object that implements the SITransportStreamNIT interface. If no matching object was found,the appropriate one of the following events is sent: ObjectNotInCacheEvent ObjectNotInTableEvent or TableNotFoundEvent.

Parameters:

`retrieveMode` - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

`appData` - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

`listener` - SIRetrievalListener that will receive the event informing about the completion of the request.

`someDescriptorTags` - A list of hints for descriptors (identified by their tags) the application is interested in. If the array contains -1 as its one and only element, the application is interested in all descriptors. If someDescriptorTags is null, the application is not interested in descriptors. All values that are out of the valid range for descriptor tags (i.e. 0...255) are ignored, except for the special meaning of -1 as the only element in the array.

Returns:
An SIRequest object

Throws:
SIIllegalArgumentException - thrown if the retrieveMode is invalid

See Also:
SIRequest, SIRetrievalListener, SITransportStream, DescriptorTag

---

retrievePMTElementaryStreams(short, Object, SIRetrievalListener, DvbLocator, short[])

```
public SIRequest retrievePMTElementaryStreams(short retrieveMode, java.lang.Object appData,
            SIRetrievalListener listener, org.davic.net.dvb.DvbLocator dvbLocator,
            short[] someDescriptorTags)
```

Retrieve PMT elementary stream information associated with components of a service. The required component(s) can be specified by its DVB locator.

The SIIterator that is returned with the event when the request completes successfully will contain one or more objects that implement the PMTElementaryStream interface. If no matching object was found, the appropriate one of the following events is sent: ObjectNotInCacheEvent, ObjectNotInTableEvent or TableNotFoundEvent.

Parameters:
retrieveMode - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

appData - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

listener - SIRetrievalListener that will receive the event informing about the completion of the request.

dvbLocator - DVB Locator identifying the component(s) of a service. The locator may be more specific than identifying one or more service components, but this method will only use the parts starting from the beginning up to the component tags.

someDescriptorTags - A list of hints for descriptors (identified by their tags) the application is interested in. If the array contains -1 as its one and only element, the application is interested in all descriptors. If someDescriptorTags is null, the application is not interested in descriptors. All values that are out of the valid range for descriptor tags (i.e. 0...255) are ignored, except for the special meaning of -1 as the only element in the array.

Returns:
An SIRequest object

Throws:
SIIllegalArgumentException - thrown if the retrieveMode is invalid or if the locator is invalid and does not identify one or more service components

See Also:
SIRequest, SIRetrievalListener, SIService, DescriptorTag

---

retrievePMTElementaryStreams(short, Object, SIRetrievalListener, int, int, short[])

```
public SIRequest retrievePMTElementaryStreams(short retrieveMode, java.lang.Object appData,
            SIRetrievalListener listener, int serviceId, int componentTag,
            short[] someDescriptorTags)
```

Retrieve PMT elementary stream information associated with components of a service from the actual transport stream of this SIDatabase object. The elementary streams can be specified by their

identification. When -1 is specified for componentTag then elementary streams shall be retrieved regardless of their component tag.

The SIIterator that is returned with the event when the request completes successfully will contain one or more objects that implement the PMTElementaryStream interface. If no matching object was found, the appropriate one of the following events is sent: ObjectNotInCacheEvent, ObjectNotInTableEvent or TableNotFoundEvent.

Parameters:

retrieveMode - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

appData - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

listener - SIRetrievalListener that will receive the event informing about the completion of the request.

serviceId - Identification of the elementary streams to be retrieved: service identifier

componentTag - Identification of the elementary streams to be retrieved: component tag (-1 means return elementary streams regardless of their component tag)

someDescriptorTags - A list of hints for descriptors (identified by their tags) the application is interested in. If the array contains -1 as its one and only element, the application is interested in all descriptors. If someDescriptorTags is null, the application is not interested in descriptors. All values that are out of the valid range for descriptor tags (i.e. 0...255) are ignored, except for the special meaning of -1 as the only element in the array.

Returns:

An SIRequest object

Throws:

SIIllegalArgumentException - thrown if the retrieveMode is invalid or the numeric identifiers are out of range

See Also:

SIRequest, SIRetrievalListener, SIService, DescriptorTag

---

retrievePMTService(short, Object, SIRetrievalListener, DvbLocator, short[])

```
public SIRequest retrievePMTService(short retrieveMode, java.lang.Object appData,
            SIRetrievalListener listener, org.davic.net.dvb.DvbLocator dvbLocator,
            short[] someDescriptorTags)
```

Retrieve PMT information associated with a service. The required service can be specified by its DVB locator.

The SIIterator that is returned with the event when the request completes successfully will contain an object that implements the PMTService interface. If no matching object was found,the appropriate one of the following events is sent: ObjectNotInCacheEvent ObjectNotInTableEvent or TableNotFoundEvent.

Parameters:

retrieveMode - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

appData - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

listener - SIRetrievalListener that will receive the event informing about the completion of the request.

dvbLocator - DVB Locator identifying the service. The locator may be more specific than identifying a service, but this method will only use the parts starting from the beginning up to the service id.

someDescriptorTags - A list of hints for descriptors (identified by their tags) the application is interested in. If the array contains -1 as its one and only element, the application is interested in all descriptors. If someDescriptorTags is null, the application is not interested in descriptors. All values that are out of the valid range for descriptor tags (i.e. 0...255) are ignored, except for the special meaning of -1 as the only element in the array.

Returns:
An SIRequest object

Throws:
SIIllegalArgumentException - thrown if the retrieveMode is invalid or the locator is invalid and does not identify a service

See Also:
SIRequest, SIRetrievalListener, SIService, DescriptorTag

---

retrievePMTServices(short, Object, SIRetrievalListener, int, short[])

```
public SIRequest retrievePMTServices(short retrieveMode, java.lang.Object appData,
            SIRetrievalListener listener, int serviceId, short[] someDescriptorTags)
```

Retrieve PMT information associated with services from the actual transport stream of this SIDatabase object. The required services can be specified by their identification. When -1 is specified as serviceId then services shall be retrieved regardless of their service id.

The SIIterator that is returned with the event when the request completes successfully will contain one or more objects that implement the PMTService interface. If no matching object was found, the appropriate one of the following events is sent: ObjectNotInCacheEvent, ObjectNotInTableEvent or TableNotFoundEvent.

Parameters:
retrieveMode - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

appData - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

listener - SIRetrievalListener that will receive the event informing about the completion of the request.

serviceId - Identification of the services to be retrieved: service identifier (-1 means return services regardless of their service id)

someDescriptorTags - A list of hints for descriptors (identified by their tags) the application is interested in. If the array contains -1 as its one and only element, the application is interested in all descriptors. If someDescriptorTags is null, the application is not interested in descriptors. All values that are out of the valid range for descriptor tags (i.e. 0...255) are ignored, except for the special meaning of -1 as the only element in the array.

Returns:
An SIRequest object

Throws:

SIIllegalArgumentException - thrown if the retrieveMode is invalid or the numeric identifiers are out of range

See Also:

SIRequest, SIRetrievalListener, SIService, DescriptorTag

---

retrieveSIBouquets(short, Object, SIRetrievalListener, int, short[])

```
public SIRequest retrieveSIBouquets(short retrieveMode, java.lang.Object appData,
            SIRetrievalListener listener, int bouquetId, short[] someDescriptorTags)
```

Retrieve information associated with bouquets. A bouquet can be specified by its identification. When bouquetId is set to -1, all bouquets signalled in the BAT of the currently received transport stream on that network interface are retrieved.

The SIIterator that is returned with the event when the request completes successfully will contain one or more objects that implement the SIBouquet interface. If no matching object was found, the appropriate one of the following events is sent: ObjectNotInCacheEvent, ObjectNotInTableEvent or TableNotFoundEvent.

Parameters:

retrieveMode - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

appData - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

listener - SIRetrievalListener that will receive the event informing about the completion of the request.

bouquetId - Identifier of the bouquet to be retrieved or -1 for all bouquets signalled on the currently received transport stream.

someDescriptorTags - A list of hints for descriptors (identified by their tags) the application is interested in. If the array contains -1 as its one and only element, the application is interested in all descriptors. If someDescriptorTags is null, the application is not interested in descriptors. All values that are out of the valid range for descriptor tags (i.e. 0...255) are ignored, except for the special meaning of -1 as the only element in the array.

Returns:

An SIRequest object

Throws:

SIIllegalArgumentException - thrown if the retrieveMode is invalid or the numeric identifiers are out of range

See Also:

SIRequest, SIRetrievalListener, SIBouquet, DescriptorTag

---

retrieveSINetworks(short, Object, SIRetrievalListener, int, short[])

```
public SIRequest retrieveSINetworks(short retrieveMode, java.lang.Object appData,
            SIRetrievalListener listener, int networkId, short[] someDescriptorTags)
```

Retrieve information associated with networks. A network can be specified by its identification. When networkId is set to -1, all networks signalled in NIT Actual and Other of the currently received TransportStream on that network interface shall be retrieved.

The SIIterator that is returned with the event when the request completes successfully will contain one or more objects that implement the SINetwork interface. If no matching object was found, the

appropriate one of the following events is sent: `ObjectNotInCacheEvent`, `ObjectNotInTableEvent` or `TableNotFoundEvent`.

Parameters:

`retrieveMode` - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

`appData` - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

`listener` - SIRetrievalListener that will receive the event informing about the completion of the request.

`networkId` - Identification of the network to be retrieved or -1 for all networks currently signalled.

`someDescriptorTags` - A list of hints for descriptors (identified by their tags) the application is interested in. If the array contains -1 as its one and only element, the application is interested in all descriptors. If someDescriptorTags is null, the application is not interested in descriptors. All values that are out of the valid range for descriptor tags (i.e. 0...255) are ignored, except for the special meaning of -1 as the only element in the array.

Returns:

An SIRequest object

Throws:

`SIIllegalArgumentException` - thrown if the retrieveMode is invalid or the numeric identifiers are out of range

See Also:

`SIRequest`, `SIRetrievalListener`, `SINetwork`, `DescriptorTag`

---

retrieveSIService(short, Object, SIRetrievalListener, DvbLocator, short[])

```
public SIRequest retrieveSIService(short retrieveMode, java.lang.Object appData,
            SIRetrievalListener listener, org.davic.net.dvb.DvbLocator dvbLocator,
            short[] someDescriptorTags)
```

Retrieve information associated with a service. The required service can be specified by its DVB locator.

The SIIterator that is returned with the event when the request completes successfully will contain an object that implements the SIService interface. If no matching object was found,the appropriate one of the following events is sent:ObjectNotInCacheEvent ObjectNotInTableEvent or TableNotFoundEvent"

Parameters:

`retrieveMode` - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

`appData` - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

`listener` - SIRetrievalListener that will receive the event informing about the completion of the request.

`dvbLocator` - DVB locator identifying the service.The locator may be more specific than identifying a service, but this method will only use the parts starting from the beginning up to the service id.

someDescriptorTags - A list of hints for descriptors (identified by their tags) the application is interested in. If the array contains -1 as its one and only element, the application is interested in all descriptors. If someDescriptorTags is null, the application is not interested in descriptors. All values that are out of the valid range for descriptor tags (i.e. 0...255) are ignored, except for the special meaning of -1 as the only element in the array.

Returns:
An SIRequest object

Throws:
SIIllegalArgumentException - thrown if the retrieveMode is invalid or the locator is invalid and does not identify a service

See Also:
SIRequest, SIRetrievalListener, SIService, DescriptorTag

---

retrieveSIServices(short, Object, SIRetrievalListener, int, int, int, short[])

```
public SIRequest retrieveSIServices(short retrieveMode, java.lang.Object appData,
            SIRetrievalListener listener, int originalNetworkId, int transportStreamId,
            int serviceId, short[] someDescriptorTags)
```

Retrieve information associated with services. The required services can be specified by their identification. When -1 is specified for transportStreamId then services shall be retrieved regardless of their transport stream id. When -1 is specified for serviceId then services shall be retrieved regardless of their service id.

The SIIterator that is returned with the event when the request completes successfully will contain one or more objects that implement the SIService interface. If no matching object was found, the appropriate one of the following events is sent: ObjectNotInCacheEvent, ObjectNotInTableEvent or TableNotFoundEvent.

Parameters:
retrieveMode - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

appData - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

listener - SIRetrievalListener that will receive the event informing about the completion of the request.

originalNetworkId - Identification of the services to be retrieved: original network identifier

transportStreamId - Identification of the services to be retrieved: transport stream identifier (-1 means return services regardless of their transport stream id)

serviceId - Identification of the services to be retrieved: service identifier (-1 means return services regardless of their service id)

someDescriptorTags - A list of hints for descriptors (identified by their tags) the application is interested in. If the array contains -1 as its one and only element, the application is interested in all descriptors. If someDescriptorTags is null, the application is not interested in descriptors. All values that are out of the valid range for descriptor tags (i.e. 0...255) are ignored, except for the special meaning of -1 as the only element in the array.

Returns:
An SIRequest object

Throws:

SIIllegalArgumentException - thrown if the retrieveMode is invalid or the numeric identifiers are out of range

See Also:
SIRequest, SIRetrievalListener, SIService, DescriptorTag

---

retrieveSITimeFromTDT(short, Object, SIRetrievalListener)

```
public SIRequest retrieveSITimeFromTDT(short retrieveMode, java.lang.Object appData,
            SIRetrievalListener listener)
```

Retrieve information associated with time from the Time and Date Table (TDT) from the actual transport stream.

The SIIterator that is returned with the event when the request completes successfully will contain an object that implements the SITime interface. If no matching object was found,the appropriate one of the following events is sent:ObjectNotInCacheEvent ObjectNotInTableEvent or TableNotFoundEvent.

Parameters:
retrieveMode - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

appData - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

listener - SIRetrievalListener that will receive the event informing about the completion of the request.

Returns:
An SIRequest object

Throws:
SIIllegalArgumentException - thrown if the retrieveMode is invalid

See Also:
SIRequest, SIRetrievalListener, SITime

---

retrieveSITimeFromTOT(short, Object, SIRetrievalListener, short[])

```
public SIRequest retrieveSITimeFromTOT(short retrieveMode, java.lang.Object appData,
            SIRetrievalListener listener, short[] someDescriptorTags)
```

Retrieve information associated with time from the Time Offset Table (TOT) from the actual transport stream. The time information will be accompanied with offset information

The SIIterator that is returned with the event when the request completes successfully will contain an object that implements the SITime interface. If no matching object was found,the appropriate one of the following events is sent:ObjectNotInCacheEvent ObjectNotInTableEvent or TableNotFoundEvent.

Parameters:
retrieveMode - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

appData - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

listener - SIRetrievalListener that will receive the event informing about the completion of the request.

someDescriptorTags - A list of hints for descriptors (identified by their tags) the application is interested in. If the array contains -1 as its one and only element, the application is interested in all descriptors. If someDescriptorTags is null, the application is not interested in descriptors. All values that are out of the valid range for descriptor tags (i.e. 0...255) are ignored, except for the special meaning of -1 as the only element in the array.

Returns:
An SIRequest object

Throws:
SIIllegalArgumentException - thrown if the retrieveMode is invalid

See Also:
SIRequest, SIRetrievalListener, SITime

---

retrieveSITransportStreamDescription(short, Object, SIRetrievalListener, short[])

```
public SIRequest retrieveSITransportStreamDescription(short retrieveMode,
            java.lang.Object appData, SIRetrievalListener listener,
            short[] someDescriptorTags)
```

Retrieve the SITransportStreamDescription object representing the information of the TSDT table in the actual transport stream of this SIDatabase object.

The SIIterator that is returned with the event when the request completes successfully will contain an object that implements the SITransportStreamDescription interface. If no matching object was found,the appropriate one of the following events is sent:ObjectNotInCacheEvent ObjectNotInTableEvent or TableNotFoundEvent.

Parameters:
retrieveMode - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

appData - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

listener - SIRetrievalListener that will receive the event informing about the completion of the request.

someDescriptorTags - A list of hints for descriptors (identified by their tags) the application is interested in. If the array contains -1 as its one and only element, the application is interested in all descriptors. If someDescriptorTags is null, the application is not interested in descriptors. All values that are out of the valid range for descriptor tags (i.e. 0...255) are ignored, except for the special meaning of -1 as the only element in the array.

Returns:
An SIRequest object

Throws:
SIIllegalArgumentException - thrown if the retrieveMode is invalid

See Also:
SIRequest, SIRetrievalListener, SITransportStreamDescription, DescriptorTag

org.dvb.si
SIEvent

Syntax
```
public interface SIEvent extends SIInformation
```

All Superinterfaces:
SIInformation

Description
This interface represents a particular event within a service.

Each object that implements the SIEvent interface is defined by the combination of the identifiers original_network_id, transport_stream_id, service_id, event_id.

See Also:
SIService

Methods

---

getContentNibbles()

```
public byte[] getContentNibbles()
```

This method returns the content nibbles related to the event. This information is extracted from the content_descriptor. If this descriptor is not present an empty array is returned (array with length 0). The return value is an array, each array element describes one content nibble. In each nibble the level 1 content nibbles occupy the four most significant bits of the returned bytes, level 2 content nibbles the four least significant bits.

Returns:
The content nibbles related to the event; level 1 content nibbles occupy the four most significant bits of the returned bytes, level 2 content nibbles the four least significant bits.

---

getDuration()

```
public long getDuration()
```

Get the duration of this event.

Returns:
The duration in milliseconds.

---

getDvbLocator()

```
public org.davic.net.dvb.DvbLocator getDvbLocator()
```

Gets a DvbLocator that identifies this event.

Returns:
The DvbLocator of this event

---

getEventID()

```
public int getEventID()
```

Get the event identification.

Returns:
The event identification.

---

getFreeCAMode()

```
public boolean getFreeCAMode()
```

Get the free_CA_mode value for this event, false indicates none of the component streams of this event are scrambled.

Returns:
The free_CA_mode value.

---

getLevel1ContentNibbles()

```
public byte[] getLevel1ContentNibbles()
```

This method returns the level 1 content nibbles of this event. This information is extracted from the content_descriptor. If this descriptor is not present an empty array is returned (array with length 0). The return value is an array, each array element describes one content nibble. In each nibble the data occupies the four least significant bits of the returned bytes with the four most significant bits set to 0.

Returns:
All level 1 content nibbles related to the event.

---

getName()

```
public java.lang.String getName()
```

This method returns the name of this event. The name is extracted from a short_event_descriptor. When this information is not available "" is returned. All control characters as defined in ETR 211 are ignored. For each character the DVB-SI 8 bit character code is mapped to the appropriate Unicode representation.

Returns:
The event name of this event.

---

getOriginalNetworkID()

```
public int getOriginalNetworkID()
```

Get the original network identification identifier.

Returns:
The original network identification.

---

getRunningStatus()

```
public byte getRunningStatus()
```

Get the running status of this event.

Returns:
The running status (the possible values are defined in the SIRunningStatus interface).

See Also:
SIRunningStatus

---

getServiceID()

```
public int getServiceID()
```

Get the service identification identifier.

Returns:
The service identification.

---

getShortDescription()

```
public java.lang.String getShortDescription()
```

This method returns the description of this event. The description is extracted from a short_event_descriptor. When this information is not available, "" is returned. For each character the DVB-SI 8 bit character code is mapped to the appropriate Unicode representation

Returns:
The short description of this event.

---

getShortEventName()

```
public java.lang.String getShortEventName()
```

This method returns the short event name (ETR 211) of this event without emphasis marks. The name is extracted from a short_event_descriptor. When this information is not available "" is returned. For each character the DVB-SI 8 bit character code is mapped to the appropriate Unicode representation.

Returns:
The short event name of this event.

---

getStartTime()

```
public java.util.Date getStartTime()
```

Get the start time of this event in UTC time.

Returns:
The start time of this event.

---

getTransportStreamID()

```
public int getTransportStreamID()
```

Get the transport stream identification identifier.

Returns:
The transport stream identification.

---

retrieveSIService(short, Object, SIRetrievalListener, short[])

```
public SIRequest retrieveSIService(short retrieveMode, java.lang.Object appData,
            SIRetrievalListener listener, short[] someDescriptorTags)
```

This method retrieves the SIService object representing the service the event, represented by this SIEvent, is part of.

The SIIterator that is returned with the event when the request completes successfully will contain an object that implements the SIService interface. If no matching object was found,the appropriate one of the following events is sent: ObjectNotInCacheEvent ObjectNotInTableEvent or TableNotFoundEvent.

Parameters:

`retrieveMode` - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

`appData` - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

`listener` - SIRetrievalListener that will receive the event informing about the completion of the request.

`someDescriptorTags` - A list of hints for descriptors (identified by their tags) the application is interested in. If the array contains -1 as its one and only element, the application is interested in all descriptors. If someDescriptorTags is null, the application is not interested in descriptors. All values that are out of the valid range for descriptor tags (i.e. 0...255) are ignored, except for the special meaning of -1 as the only element in the array.

Returns:

An SIRequest object

Throws:

`SIIllegalArgumentException` - thrown if the retrieveMode is invalid

See Also:

`SIRequest`, `SIRetrievalListener`, `SIService`, `DescriptorTag`

org.dvb.si
SIException

Syntax
```
public abstract class SIException extends java.lang.Exception

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--org.dvb.si.SIException
```

Direct Known Subclasses:
SIIllegalArgumentException, SIInvalidPeriodException

All Implemented Interfaces:
java.io.Serializable

Description
This class is the root of the SI exceptions hierarchy.

Constructors

SIException()

```
public SIException()
```

Default constructor for the exception

SIException(String)

```
public SIException(java.lang.String reason)
```

Constructor for the SI exception with a specified reason

Parameters:
`reason` - the reason why the exception was raised

org.dvb.si
SIIllegalArgumentException

Syntax
```
public class SIIllegalArgumentException extends SIException

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--SIException
                    |
                    +--org.dvb.si.SIIllegalArgumentException
```

All Implemented Interfaces:
java.io.Serializable

Description
This exception is thrown when one or more of the arguments passed to a method are invalid (e.g. numeric identifiers out of range, etc.)

Constructors

SIIllegalArgumentException()

```
public SIIllegalArgumentException()
```

Default constructor for the exception

SIIllegalArgumentException(String)

```
public SIIllegalArgumentException(java.lang.String reason)
```

Constructor for the exception with a specified reason

Parameters:
`reason` - the reason why the exception was raised

org.dvb.si
SIInformation

Syntax
```
public interface SIInformation
```

All Known Subinterfaces:
PMTElementaryStream, PMTService, SIBouquet, SIEvent, SINetwork, SIService, SITime, SITransportStream, SITransportStreamBAT, SITransportStreamDescription, SITransportStreamNIT

Description
This interface groups the common features of SIBouquet, SINetwork, SITransportStream, SIService, PMTService, SIEvent, SITime and PMTElementaryStream.

Each SIInformation instance represents a sub-table (part). Any method accessing descriptors will retrieve descriptors from the same sub-table version as the SIInformation instance. When this version is no longer available, an SITableUpdatedEvent is returned.

See Also:
SIBouquet, SINetwork, SITransportStream, SIService, PMTService, SIEvent, SITime, PMTElementaryStream

Fields

FROM_CACHE_ONLY

```
public static final short FROM_CACHE_ONLY
```

Constant for retrieve mode parameter of the retrieve methods. When FROM_CACHE_ONLY mode is specified, the data will be retrieved only if it is in the cache. Otherwise, SINotInCacheEvent will be delivered to the listener. No stream access is done in this case.

FROM_CACHE_OR_STREAM

```
public static final short FROM_CACHE_OR_STREAM
```

Constant for retrieve mode parameter of the retrieve methods. When FROM_CACHE_OR_STREAM mode is specified, the data will be retrieved from cache if it is present in the cache, otherwise it will be retrieved from the stream.

FROM_STREAM_ONLY

```
public static final short FROM_STREAM_ONLY
```

Constant for retrieve mode parameter of the retrieve methods. When FROM_STREAM_ONLY mode is specified, the data will be retrieved directly from the stream and no cache access is tried first. This mode is meaningful only if the application knows that the information is not in the cache or that the information in the cache is no longer valid, but the implementation of the SI database may not be aware of the invalidity of the cached data. If the application has got the notification of the existence of

an updated version through the listener mechanism in this API, the implementation of the SI database is aware of the version change and the application should specify the FROM_CACHE_OR_STREAM mode to be able to retrieve the data faster if the updated version has already been loaded to the cache by the SI database implementation.

Methods

---

fromActual()

```
public boolean fromActual()
```

Return true when the information contained in the object that implements this interface was filtered from an 'actual' table or from a table with no 'actual/other' distinction.

Returns:

`true` if the information comes from an 'actual' table or from a table with no 'actual/other' distiction, otherwise returns `false`

---

getDataSource()

```
public org.davic.mpeg.TransportStream getDataSource()
```

Return the org.davic.mpeg.TransportStream object the information contained in the object that implements that interface was filtered from.

Returns:

The `org.davic.mpeg.TransportStream` object the information was filtered from.

See Also:

`org.davic.mpeg.TransportStream`

---

getDescriptorTags()

```
public short[] getDescriptorTags()
```

Get the tags of all descriptors that are part of this version of this object. The tags are returned in the same order as the descriptors are broadcast. This method returns also the tags of descriptors that were not hinted at and that are not necessarily present in the cache. If there are no descriptors associated with this SIInformation object, this method returns an empty array whose length is 0.

Returns:

The tags of the descriptors actually broadcast for the object (identified by their tags).

See Also:

`DescriptorTag`

---

getSIDatabase()

```
public SIDatabase getSIDatabase()
```

Return the root of the hierarchy the object that implements this interface belongs to.

Returns:

The root of the hierarchy.

---

getUpdateTime()

```
public java.util.Date getUpdateTime()
```

Return the time when the information contained in the object that implements this interface was last updated.

Returns:
The date of the last update.

---

retrieveDescriptors(short, Object, SIRetrievalListener)

```
public SIRequest retrieveDescriptors(short retrieveMode, java.lang.Object appData,
            SIRetrievalListener listener)
```

This method retrieves all descriptors in the order the descriptors are broadcast.

This method is asynchronous and the completion of the method will be signalled by an `SISuccessfulRetrieveEvent` being sent to listener. Any retrieved descriptors are found in the SIIterator returned by the `getResult` method of that event. If descriptors are found then this iterator will contain Descriptor objects. If there are no matching descriptors, this iterator will contain no objects.

Parameters:
`retrieveMode` - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

`appData` - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

`listener` - SIRetrievalListener that will receive the event informing about the completion of the request.

Returns:
An SIRequest object

Throws:
`SIIllegalArgumentException` - thrown if the retrieveMode is invalid

See Also:
`SIRequest`, `SIRetrievalListener`, `Descriptor`, `SIIterator`

---

retrieveDescriptors(short, Object, SIRetrievalListener, short[])

```
public SIRequest retrieveDescriptors(short retrieveMode, java.lang.Object appData,
            SIRetrievalListener listener, short[] someDescriptorTags)
```

Retrieve a set of descriptors. This method retrieves all or a set of descriptors in the order the descriptors are broadcast.

The tag values included in the `someDescriptorParameters` parameter are used for filtering the descriptors that are returned. Only those descriptors whose tag value is included in the `someDescriptorParameters` array are retrieved, unless the `someDescriptorParameters` array contains -1 as its one and only item in which case all descriptors related to this object are retrieved.

If the list of tags is a subset of the one hinted to the underlying implementation (in the request which created the object on which the method is called), this is likely to increase the efficiency of the (optional) caching mechanism

This method is asynchronous and the completion of the method will be signalled by an `SISuccessfulRetrieveEvent` being sent to listener. Any retrieved descriptors are found in the SIIterator returned by the `getResult` method of that event. If descriptors are found then this iterator will contain Descriptor objects. If there are no matching descriptors, this iterator will contain no objects.

Parameters:

`retrieveMode` - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

`appData` - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

`listener` - SIRetrievalListener that will receive the event informing about the completion of the request.

`someDescriptorTags` - - Descriptor tag values of descriptors that are used for filtering descriptors from the descriptors included in the SI table item corresponding to this SIInformation object. If the array contains -1 as its one and only element, all descriptors related to this object are retrieved.

Returns:

An SIRequest object

Throws:

`SIIllegalArgumentException` - thrown if the retrieveMode is invalid

See Also:

`SIRequest`, `SIRetrievalListener`, `Descriptor`, `SIIterator`, `DescriptorTag`

org.dvb.si
SIInvalidPeriodException

Syntax
```
public class SIInvalidPeriodException extends SIException
```

```
java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--SIException
                    |
                    +--org.dvb.si.SIInvalidPeriodException
```

All Implemented Interfaces:
java.io.Serializable

Description
This exception is thrown when a specified period is invalid (for example, start time is after the end time)

Constructors

SIInvalidPeriodException()

```
public SIInvalidPeriodException()
```

Default constructor for the exception

SIInvalidPeriodException(String)

```
public SIInvalidPeriodException(java.lang.String reason)
```

Constructor for the exception with a specified reason

Parameters:

`reason` - the reason why the exception was raised

org.dvb.si
SIIterator

Syntax
```
public interface SIIterator extends java.util.Enumeration
```

All Superinterfaces:
java.util.Enumeration

Description
Objects implementing SIIterator interface allow to browse through a set of SI objects. In order to maintain consistency within the set of SI objects, this browsing does NOT initiate an actual access to the stream.

Methods

---

numberOfRemainingObjects()

```
public int numberOfRemainingObjects()
```

Get the number of remaining objects in the iterator.

Returns:
The number of remaining objects.

org.dvb.si
SILackOfResourcesEvent

Syntax

```
public class SILackOfResourcesEvent extends SIRetrievalEvent
```

```
java.lang.Object
  |
  +--java.util.EventObject
        |
        +--SIRetrievalEvent
              |
              +--org.dvb.si.SILackOfResourcesEvent
```

All Implemented Interfaces:

java.io.Serializable

Description

This event is sent in response to a SI retrieval request when the resources needed for retrieving the data are not available, e.g. due to the necessary resources being all taken up by the calling application or other applications.

See Also:

SIRetrievalListener

Constructors

SILackOfResourcesEvent(Object, SIRequest)

```
public SILackOfResourcesEvent(java.lang.Object appData, SIRequest request)
```

The constructor for the event

Parameters:

`appData` - the application data passed in the request method call

`request` - the SIRequest instance which is the source of the event

org.dvb.si
SIMonitoringEvent

Syntax
```
public class SIMonitoringEvent extends java.util.EventObject

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--org.dvb.si.SIMonitoringEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
Objects of this class are sent to listener objects of the using application to notify that a change in the monitored information has happened.

See Also:
SIMonitoringType, SIMonitoringListener

Constructors

SIMonitoringEvent(SIDatabase, byte, int, int, int, int, int, Date, Date)

```
public SIMonitoringEvent(SIDatabase source, byte objectType, int networkId, int bouquetId,
            int originalNetworkId, int transportStreamId, int serviceId,
            java.util.Date startTime, java.util.Date endTime)
```

Constructor for the event object

Parameters:

`source` - the SIDatabase object which is the source of the event

`objectType` - type of the SIInformation object (constants in SIMonitoringType)

`networkId` - networkId

`bouquetId` - bouquetId

`originalNetworkId` - originalNetworkId

`transportStreamId` - transportStreamId

`serviceId` - serviceId

`startTime` - start time of event schedule period

`endTime` - end time of event schedule period

Methods

---

getBouquetID()

```
public int getBouquetID()
```

Returns the bouquetId of the bouquet. This method is only applicable if the SIInformation type returned with the getSIInformationType method is BOUQUET.

Returns:
the bouquetId or -2 if not applicable for this event

---

getEndTime()

```
public java.util.Date getEndTime()
```

Returns the end time of the schedule period whose event information has changed. This method is only applicable if the SIInformation type returned with the getSIInformationType method is SCHEDULED_EVENT.

Returns:
the end time or null if not applicable for this event

---

getNetworkID()

```
public int getNetworkID()
```

Returns the networkId of the network. This method is only applicable if the SIInformation type returned with the getSIInformationType method is NETWORK.

Returns:
the networkId or -2 if not applicable for this event

---

getOriginalNetworkID()

```
public int getOriginalNetworkID()
```

Returns the originalNetworkId of the SIInformation objects This method is only applicable if the SIInformation type returned with the getSIInformationType method is SERVICE, PMT_SERVICE, PRESENT_FOLLOWING_EVENT or SCHEDULED_EVENT.

Returns:
the originalNetworkId or -2 if not applicable for this event

---

getServiceID()

```
public int getServiceID()
```

Returns the serviceId of the SIInformation objects This method is only applicable if the SIInformation type returned with the getSIInformationType method is PMT_SERVICE, PRESENT_FOLLOWING_EVENT or SCHEDULED_EVENT.

Returns:
the serviceId or -2 if not applicable for this event

---

getSIInformationType()

```
public byte getSIInformationType()
```

Get the SIInformation type of the information that has changed

Returns:
The SIInformation type (the possible values are defined in the SIMonitoringType interface).

See Also:
SIMonitoringType

---

getSource()

```
public java.lang.Object getSource()
```

Gets the SIDatabase instance that is sending the event.

Overrides:
java.util.EventObject.getSource() in class java.util.EventObject

Returns:
the SIDatabase instance that is the source of this event.

---

getStartTime()

```
public java.util.Date getStartTime()
```

Returns the start time of the schedule period whose event information has changed. This method is only applicable if the SIInformation type returned with the getSIInformationType method is SCHEDULED_EVENT.

Returns:
the start time or null if not applicable for this event

---

getTransportStreamID()

```
public int getTransportStreamID()
```

Returns the transportStreamId of the SIInformation objects This method is only applicable if the SIInformation type returned with the getSIInformationType method is SERVICE, PMT_SERVICE, PRESENT_FOLLOWING_EVENT or SCHEDULED_EVENT.

Returns:
the transportStreamId or -2 if not applicable for this event

org.dvb.si
SIMonitoringListener

Syntax
```
public interface SIMonitoringListener extends java.util.EventListener
```

All Superinterfaces:
java.util.EventListener

Description
This interface shall be implemented by using application classes in order to listen to changes in monitored SI objects.

See Also:
SIMonitoringEvent

Methods

---

postMonitoringEvent(SIMonitoringEvent)

```
public void postMonitoringEvent(SIMonitoringEvent anEvent)
```

This method is called back by the SI API implementation to notify the listener about an event.

Parameters:
anEvent - The notified event.

See Also:
SIMonitoringEvent

org.dvb.si
SIMonitoringType

Syntax
```
public interface SIMonitoringType
```

Description
This interface defines the constants corresponding to the SI information type values in SIMonitoringEvent.

See Also:
SIMonitoringListener, SIMonitoringEvent

Fields

BOUQUET

```
public static final byte BOUQUET
```

Constant for the type of SIInformation object: Bouquet

NETWORK

```
public static final byte NETWORK
```

Constant for the type of SIInformation object: Network

PMT_SERVICE

```
public static final byte PMT_SERVICE
```

Constant for the type of SIInformation object: PMTService

PRESENT_FOLLOWING_EVENT

```
public static final byte PRESENT_FOLLOWING_EVENT
```

Constant for the type of SIInformation object: Present or following event

---

SCHEDULED_EVENT

```
public static final byte SCHEDULED_EVENT
```

Constant for the type of SIInformation object: Scheduled event

---

SERVICE

```
public static final byte SERVICE
```

Constant for the type of SIInformation object: Service

org.dvb.si
SINetwork

Syntax
```
public interface SINetwork extends SIInformation
```

All Superinterfaces:
SIInformation

Description
This interface (together with the SITransportStreamNIT interface) represents a sub-table of the Network Information Table (NIT) describing a particular network.

Each object that implements the SINetwork interface is identified by the identifier network_id.

See Also:
SITransportStream, SITransportStreamNIT

Methods

---

getDescriptorTags()

```
public short[] getDescriptorTags()
```

This method defines extra semantics for the SIInformation.getDescriptorTags method. If the NIT sub-table on which this SINetwork object is based consists of multiple sections, then this method returns the descriptor tags in the order they appear when concatenating the descriptor loops of the different sections.

Overrides:
getDescriptorTags() in interface SIInformation

Returns:
The tags of the descriptors actually broadcast for the object (identified by their tags).

See Also:
SIInformation, getDescriptorTags()

---

getName()

```
public java.lang.String getName()
```

This method returns the name of this network. The name is extracted from the network_name_descriptor or optionally from the multilingual_network_name_descriptor. When this information is not available "" is returned. All control characters as defined in ETR 211 are ignored. For each character the DVB-SI 8 bit character code is mapped to the appropriate Unicode representation.

Returns:
The network name of this network.

getNetworkID()

```
public int getNetworkID()
```

Get the identification of this network.

Returns:
The network identification identifier.

getShortNetworkName()

```
public java.lang.String getShortNetworkName()
```

This method returns the short name (ETR 211) of this network without emphasis marks. The name is extracted from the network_name_descriptor or optionally from the multilingual_network_name_descriptor. When this information is not available "" is returned. For each character the DVB-SI 8 bit character code is mapped to the appropriate Unicode representation.

Returns:
The short network name of this network.

retrieveDescriptors(short, Object, SIRetrievalListener)

```
public SIRequest retrieveDescriptors(short retrieveMode, java.lang.Object appData,
            SIRetrievalListener listener)
```

This method defines extra semantics for the SIInformation.retrieveDescriptors method (first prototype). If the NIT sub-table on which this SINetwork object is based consists of multiple sections, then this method returns the requested descriptors in the order they appear when concatenating the descriptor loops of the different sections.

Overrides:
`retrieveDescriptors(short, Object, SIRetrievalListener)` in interface `SIInformation`

Parameters:
`retrieveMode` - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

`appData` - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

`listener` - SIRetrievalListener that will receive the event informing about the completion of the request.

Returns:
An SIRequest object

Throws:
`SIIllegalArgumentException` - thrown if the retrieveMode is invalid

See Also:
`SIInformation`, `retrieveDescriptors(short, Object, SIRetrievalListener)`

retrieveDescriptors(short, Object, SIRetrievalListener, short[])

```
public SIRequest retrieveDescriptors(short retrieveMode, java.lang.Object appData,
            SIRetrievalListener listener, short[] someDescriptorTags)
```

This method defines extra semantics for the SIInformation.retrieveDescriptors method (second prototype). If the NIT sub-table on which this SINetwork object is based consists of multiple sections, then this method returns the requested descriptors in the order they appear when concatenating the descriptor loops of the different sections.

Overrides:

`retrieveDescriptors(short, Object, SIRetrievalListener, short[])` in interface `SIInformation`

Parameters:

`retrieveMode` - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

`appData` - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

`listener` - SIRetrievalListener that will receive the event informing about the completion of the request.

`someDescriptorTags` - A list of tags for descriptors (identified by their tags) the application is interested in. If the array contains -1 as its one and only element, the application is interested in all descriptors. If someDescriptorTags is null, the application is not interested in descriptors. All values that are out of the valid range for descriptor tags (i.e. 0...255) are ignored, except for the special meaning of -1 as the only element in the array.

Returns:

An SIRequest object

Throws:

`SIIllegalArgumentException` - thrown if the retrieveMode is invalid

See Also:

`SIInformation`, `retrieveDescriptors(short, Object, SIRetrievalListener, short[])`

---

retrieveSITransportStreams(short, Object, SIRetrievalListener, short[])

```
public SIRequest retrieveSITransportStreams(short retrieveMode, java.lang.Object appData,
            SIRetrievalListener listener, short[] someDescriptorTags)
```

Retrieve information associated with transport streams carried via the network.

The SIIterator that is returned with the event when the request completes successfully will contain one or more objects that implement the SITransportStreamNIT interface.

Parameters:

`retrieveMode` - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

`appData` - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

`listener` - SIRetrievalListener that will receive the event informing about the completion of the request.

`someDescriptorTags` - A list of hints for descriptors (identified by their tags) the application is interested in. If the array contains -1 as its one and only element, the application is interested in all descriptors. If someDescriptorTags is null, the application is not interested in descriptors. All

values that are out of the valid range for descriptor tags (i.e. 0...255) are ignored, except for the special meaning of -1 as the only element in the array.

Returns:
An SIRequest object

Throws:
`SIIllegalArgumentException` - thrown if the retrieveMode is invalid

See Also:
`SIRequest`, `SIRetrievalListener`, `SITransportStreamNIT`, `DescriptorTag`

org.dvb.si
SINotInCacheEvent

Syntax
```
public class SINotInCacheEvent extends SIRetrievalEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--SIRetrievalEvent
              |
              +--org.dvb.si.SINotInCacheEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
This event is sent in response to a SI retrieval request when the request was made with the FROM_CACHE_ONLY mode and the requested data is not present in the cache.

See Also:
SIRetrievalListener

Constructors

SINotInCacheEvent(Object, SIRequest)

```
public SINotInCacheEvent(java.lang.Object appData, SIRequest request)
```

The constructor for the event

Parameters:

`appData` - the application data passed in the request method call

`request` - the SIRequest instance which is the source of the event

org.dvb.si
SIObjectNotInTableEvent

Syntax
```
public class SIObjectNotInTableEvent extends SIRetrievalEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--SIRetrievalEvent
              |
              +--org.dvb.si.SIObjectNotInTableEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
This event is sent in response to a SI retrieval request when the SI table where the information about the requested object should be located has been retrieved but the requested object is not present in it. The reason may be that the object corresponding to the requested identifiers does not exist.

See Also:
SIRetrievalListener

Constructors

SIObjectNotInTableEvent(Object, SIRequest)

```
public SIObjectNotInTableEvent(java.lang.Object appData, SIRequest request)
```

The constructor for the event

Parameters:

appData - the application data passed in the request method call

request - the SIRequest instance which is the source of the event

org.dvb.si
SIRequest

Syntax

```
public class SIRequest

java.lang.Object
  |
  +--org.dvb.si.SIRequest
```

Description

Object instances of this class represent SI retrieval requests made by the application. The application may cancel the request using this object.

Methods

---

cancelRequest()

```
public boolean cancelRequest()
```

Cancels the retrieval request.

Returns:

true if the request was cancelled and an SIRequestCancelledEvent will be delivered to the listener, false if the request has already completed (either successfully, with an error or due to a prior cancel method call)

---

isAvailableInCache()

```
public boolean isAvailableInCache()
```

Returns whether the information will be returned from cache or from the stream

Returns:

true if the information will be returned from cache, false if the information will be retrieved from the stream

org.dvb.si
SIRequestCancelledEvent

Syntax
```
public class SIRequestCancelledEvent extends SIRetrievalEvent
```

```
java.lang.Object
  |
  +--java.util.EventObject
        |
        +--SIRetrievalEvent
              |
              +--org.dvb.si.SIRequestCancelledEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
This event is sent in response to a SI retrieval request when the request is cancelled with the SIRequest.cancelRequest method call.

See Also:
SIRequest, SIRetrievalListener

Constructors

SIRequestCancelledEvent(Object, SIRequest)

```
public SIRequestCancelledEvent(java.lang.Object appData, SIRequest request)
```

The constructor for the event

Parameters:

`appData` - the application data passed in the request method call

`request` - the SIRequest instance which is the source of the event

org.dvb.si
SIRetrievalEvent

Syntax
```
public abstract class SIRetrievalEvent extends java.util.EventObject

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--org.dvb.si.SIRetrievalEvent
```

Direct Known Subclasses:
SILackOfResourcesEvent, SINotInCacheEvent, SIObjectNotInTableEvent, SIRequestCancelledEvent, SISuccessfulRetrieveEvent, SITableNotFoundEvent, SITableUpdatedEvent

All Implemented Interfaces:
java.io.Serializable

Description
This class is the base class for events about completion of a SI retrieval request. Exactly one event will be returned in response to an SI retrieval request.

See Also:
SIRetrievalListener

Constructors

SIRetrievalEvent(Object, SIRequest)

```
public SIRetrievalEvent(java.lang.Object appData, SIRequest request)
```

The constructor for the event

Parameters:

`appData` - the application data passed in the request method call

`request` - the SIRequest instance which is the source of the event

Methods

---

getAppData()

```
public java.lang.Object getAppData()
```

Returns the application data that was passed to the retrieve method

Returns:

the application data

getSource()

```
public java.lang.Object getSource()
```

Returns the SIRequest object that is the source of this event

Overrides:
java.util.EventObject.getSource() in class java.util.EventObject

Returns:
the SIRequest object

org.dvb.si
SIRetrievalListener

Syntax
```
public interface SIRetrievalListener extends java.util.EventListener
```

All Superinterfaces:
java.util.EventListener

Description
This interface shall be implemented by application classes in order to receive events about completion of SI requests.

See Also:
SIRetrievalEvent

Methods

---

postRetrievalEvent(SIRetrievalEvent)

```
public void postRetrievalEvent(SIRetrievalEvent event)
```

This method is called by the SI API implementation to notify the listener about completion of an SI request.

Parameters:
`event` - The event object.

See Also:
SIRetrievalEvent

org.dvb.si
SIRunningStatus

Syntax
```
public interface SIRunningStatus
```

Description
This interface defines the constants corresponding to the running status values for services and events.

Fields

NOT_RUNNING

```
public static final byte NOT_RUNNING
```

Constant value for the running status as specified in EN 300 468

PAUSING

```
public static final byte PAUSING
```

Constant value for the running status as specified in EN 300 468

RUNNING

```
public static final byte RUNNING
```

Constant value for the running status as specified in EN 300 468

STARTS_IN_A_FEW_SECONDS

```
public static final byte STARTS_IN_A_FEW_SECONDS
```

Constant value for the running status as specified in EN 300 468

UNDEFINED

```
public static final byte UNDEFINED
```

Constant value for the running status as specified in EN 300 468

org.dvb.si
SIService

Syntax
```
public interface SIService extends SIInformation, TextualServiceIdentifierQuery
```

All Superinterfaces:
SIInformation, TextualServiceIdentifierQuery

Description
This interface represents a particular service carried by a transport stream. Information that can be obtained through the methods of this interface is retrieved from the SDT table.

Each object that implements the SIService interface is identified by the combination of the following identifiers: original_network_id, transport_stream_id, service_id.

Methods

---

getDvbLocator()

```
public org.davic.net.dvb.DvbLocator getDvbLocator()
```

Gets a DvbLocator that identifies this service.

Returns:
The DvbLocator of this service

---

getEITPresentFollowingFlag()

```
public boolean getEITPresentFollowingFlag()
```

Get the EIT_present_following_flag value, true indicates this service has present and/or following event information.

Returns:
The EIT_present_following_flag value.

---

getEITScheduleFlag()

```
public boolean getEITScheduleFlag()
```

Get the EIT_schedule_flag value, true indicates this services has scheduled event information.

Returns:
The EIT_schedule_flag value.

---

getFreeCAMode()

```
public boolean getFreeCAMode()
```

Retrieve the free_CA_mode value of this service, false indicates none of the components of this service are scrambled.

Returns:

The free_CA_mode value of this service.

---

getName()

```
public java.lang.String getName()
```

This method returns the name of the service represented by this service. The name is extracted from the service_descriptor or optionally from the multilingual_service_name_descriptor. If this descriptor is not present "" is returned. All control characters as defined in ETR 211 are ignored. For each character the DVB-SI 8 bit character code is mapped to the appropriate Unicode representation.

Returns:
The name of this service.

---

getOriginalNetworkID()

```
public int getOriginalNetworkID()
```

Get the original network identification.

Returns:
The original network identification identifier.

---

getProviderName()

```
public java.lang.String getProviderName()
```

This method returns the service provider name of this service The service provider name is extracted from the service_descriptor or optionally from the multilingual_service_name_descriptor. If this descriptor is not present "" is returned. All control characters as defined in ETR 211 are ignored. For each character the DVB-SI 8 bit character code is mapped to the appropriate Unicode representation.

Returns:
The service provider name of this service.

---

getRunningStatus()

```
public byte getRunningStatus()
```

Retrieve the running status of this service.

Returns:
The running status (the possible values are defined in the SIRunningStatus interface)

See Also:
SIRunningStatus

---

getServiceID()

```
public int getServiceID()
```

Get the service identification.

Returns:
The service identification identifier.

---

getShortProviderName()

```
public java.lang.String getShortProviderName()
```

This method returns the short name (ETR 211) of the service provider of this service without emphasis marks. The name is extracted from the service_descriptor or optionally from the multilingual_service_name_descriptor. When this information is not available "" is returned. For each character the DVB-SI 8 bit character code is mapped to the appropriate Unicode representation.

Returns:
The short service provider name of this service.

---

getShortServiceName()

```
public java.lang.String getShortServiceName()
```

This method returns the short name (ETR 211) of this service without emphasis marks. The name is extracted from the service_descriptor or optionally from the multilingual_service_name_descriptor. When this information is not available "" is returned. For each character the DVB-SI 8 bit character code is mapped to the appropriate Unicode representation.

Returns:
The short name of this service.

---

getSIServiceType()

```
public short getSIServiceType()
```

Get the service type. The service type is extracted from the service_descriptor.

Returns:
The service type. (Some of the possible values are defined in the SIServiceType interface.)

See Also:
SIServiceType

---

getTextualServiceIdentifiers()

```
public java.lang.String[] getTextualServiceIdentifiers()
```

Returns the textual service identifiers related to this object.

Overrides:
getTextualServiceIdentifiers() in interface TextualServiceIdentifierQuery

Returns:
an array of String objects containing the textual service identifiers or null if none are present.

Since:
MHP1.0.1

---

getTransportStreamID()

```
public int getTransportStreamID()
```

Get the transport stream identification.

Returns:
The transport stream identification identifier.

---

retrieveFollowingSIEvent(short, Object, SIRetrievalListener, short[])

```
public SIRequest retrieveFollowingSIEvent(short retrieveMode, java.lang.Object appData,
            SIRetrievalListener listener, short[] someDescriptorTags)
```

Retrieve information associated with the following event from the EIT-present/following.

The SIIterator that is returned with the event when the request completes successfully will contain an object that implements the SIEvent interface. If no matching object was found,the appropriate one of the following events is sent: ObjectNotInCacheEvent ObjectNotInTableEvent or TableNotFoundEvent.

Parameters:

`retrieveMode` - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

`appData` - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

`listener` - SIRetrievalListener that will receive the event informing about the completion of the request.

`someDescriptorTags` - A list of hints for descriptors (identified by their tags) the application is interested in. If the array contains -1 as its one and only element, the application is interested in all descriptors. If someDescriptorTags is null, the application is not interested in descriptors. All values that are out of the valid range for descriptor tags (i.e. 0...255) are ignored, except for the special meaning of -1 as the only element in the array.

Returns:

An SIRequest object

Throws:

`SIIllegalArgumentException` - thrown if the retrieveMode is invalid

See Also:

`SIRequest`, `SIRetrievalListener`, `SIEvent`, `DescriptorTag`

---

retrievePMTService(short, Object, SIRetrievalListener, short[])

```
public SIRequest retrievePMTService(short retrieveMode, java.lang.Object appData,
            SIRetrievalListener listener, short[] someDescriptorTags)
```

Retrieve the PMTService information associated with this service.

The SIIterator that is returned with the event when the request completes successfully will contain an object that implements the PMTService interface. If no matching object was found,the appropriate one of the following events is sent:ObjectNotInCacheEvent ObjectNotInTableEvent or TableNotFoundEvent.

Parameters:

`retrieveMode` - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

`appData` - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

`listener` - SIRetrievalListener that will receive the event informing about the completion of the request.

`someDescriptorTags` - A list of hints for descriptors (identified by their tags) the application is interested in. If the array contains -1 as its one and only element, the application is interested in all descriptors. If someDescriptorTags is null, the application is not interested in descriptors. All values that are out of the valid range for descriptor tags (i.e. 0...255) are ignored, except for the special meaning of -1 as the only element in the array.

Returns:

An SIRequest object

Throws:
SIIllegalArgumentException - thrown if the retrieveMode is invalid

See Also:
SIRequest, SIRetrievalListener, PMTService, DescriptorTag

---

retrievePresentSIEvent(short, Object, SIRetrievalListener, short[])

```
public SIRequest retrievePresentSIEvent(short retrieveMode, java.lang.Object appData,
            SIRetrievalListener listener, short[] someDescriptorTags)
```

Retrieve information associated with the present event from the EIT-present/following.

The SIIterator that is returned with the event when the request completes successfully will contain an object that implements the SIEvent interface. If no matching object was found,the appropriate one of the following events is sent:ObjectNotInCacheEvent ObjectNotInTableEvent or TableNotFoundEvent.

Parameters:
retrieveMode - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

appData - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

listener - SIRetrievalListener that will receive the event informing about the completion of the request.

someDescriptorTags - A list of hints for descriptors (identified by their tags) the application is interested in. If the array contains -1 as its one and only element, the application is interested in all descriptors. If someDescriptorTags is null, the application is not interested in descriptors. All values that are out of the valid range for descriptor tags (i.e. 0...255) are ignored, except for the special meaning of -1 as the only element in the array.

Returns:
An SIRequest object

Throws:
SIIllegalArgumentException - thrown if the retrieveMode is invalid

See Also:
SIRequest, SIRetrievalListener, SIEvent, DescriptorTag

---

retrieveScheduledSIEvents(short, Object, SIRetrievalListener, short[], Date, Date)

```
public SIRequest retrieveScheduledSIEvents(short retrieveMode, java.lang.Object appData,
            SIRetrievalListener listener, short[] someDescriptorTags,
            java.util.Date startTime, java.util.Date endTime)
```

Retrieve information associated with the scheduled events within the service for a requested period from the EIT-schedule. The events are presented in the order they are present in the EIT-schedule.

The SIIterator that is returned with the event when the request completes successfully will contain one or more objects that implement the SIEvent interface.

Parameters:
retrieveMode - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

`appData` - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

`listener` - SIRetrievalListener that will receive the event informing about the completion of the request.

`someDescriptorTags` - A list of hints for descriptors (identified by their tags) the application is interested in. If the array contains -1 as its one and only element, the application is interested in all descriptors. If someDescriptorTags is null, the application is not interested in descriptors. All values that are out of the valid range for descriptor tags (i.e. 0...255) are ignored, except for the special meaning of -1 as the only element in the array.

`startTime` - The beginning of the required period in UTC time.

`endTime` - The end of the required period in UTC time.

Returns:

An SIRequest object

Throws:

`SIIllegalArgumentException` - thrown if the retrieveMode is invalid

`SIInvalidPeriodException` - When no valid period is indicated.

See Also:

`SIRequest`, `SIRetrievalListener`, `SIEvent`, `DescriptorTag`

org.dvb.si
SIServiceType

Syntax
```
public interface SIServiceType
```

Description
This interface defines constants corresponding to the different service types.

See Also:
`getSIServiceType()`

Fields

D_D2_MAC

```
public static final short D_D2_MAC
```

Constant value for the service type as specified in EN 300 468

DATA_BROADCAST

```
public static final short DATA_BROADCAST
```

Constant value for the service type as specified in EN 300 468

DIGITAL_RADIO_SOUND

```
public static final short DIGITAL_RADIO_SOUND
```

Constant value for the service type as specified in EN 300 468

DIGITAL_TELEVISION

```
public static final short DIGITAL_TELEVISION
```

Constant value for the service type as specified in EN 300 468

FM_RADIO

```
public static final short FM_RADIO
```

Constant value for the service type as specified in EN 300 468

MHP_APPLICATION

```
public static final short MHP_APPLICATION
```

Constant value for the service type as specified in EN 300 468

MOSAIC

```
public static final short MOSAIC
```

Constant value for the service type as specified in EN 300 468

NTSC

```
public static final short NTSC
```

Constant value for the service type as specified in EN 300 468

NVOD_REFERENCE

```
public static final short NVOD_REFERENCE
```

Constant value for the service type as specified in EN 300 468

NVOD_TIME_SHIFTED

```
public static final short NVOD_TIME_SHIFTED
```

Constant value for the service type as specified in EN 300 468

PAL

```
public static final short PAL
```

Constant value for the service type as specified in EN 300 468

SECAM

```
public static final short SECAM
```

Constant value for the service type as specified in EN 300 468

TELETEXT

```
public static final short TELETEXT
```

Constant value for the service type as specified in EN 300 468

UNKNOWN

```
public static final short UNKNOWN
```

Constant value for the service type as specified in EN 300 468

org.dvb.si
SISuccessfulRetrieveEvent

Syntax
```
public class SISuccessfulRetrieveEvent extends SIRetrievalEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--SIRetrievalEvent
              |
              +--org.dvb.si.SISuccessfulRetrieveEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
This event is sent in response to a SI retrieval request when the retrieve request was successfully completed. The result of the request can be obtained from the getResult method.

See Also:
SIRetrievalListener

Constructors

SISuccessfulRetrieveEvent(Object, SIRequest, SIIterator)

```
public SISuccessfulRetrieveEvent(java.lang.Object appData, SIRequest request,
            SIIterator result)
```

The constructor for the event

Parameters:

`appData` - the application data passed in the request method call

`request` - the SIRequest instance which is the source of the event

`result` - an SIIterator containing the retrieved objects

Methods

---

getResult()

```
public SIIterator getResult()
```

Returns the requested data in an SIIterator object.

Returns:

An SIIterator containing the requested objects

See Also:

SIObjectNotInTableEvent

org.dvb.si
SITableNotFoundEvent

Syntax
```
public class SITableNotFoundEvent extends SIRetrievalEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--SIRetrievalEvent
              |
              +--org.dvb.si.SITableNotFoundEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
This event is sent in response to a SI retrieval request when the SI table that should contain the requested information could not be retrieved. The reason may be that the requested table is not broadcast in the transport stream currently associated with the SI database.

See Also:
SIRetrievalListener

Constructors

SITableNotFoundEvent(Object, SIRequest)

```
public SITableNotFoundEvent(java.lang.Object appData, SIRequest request)
```

The constructor for the event

Parameters:

appData - the application data passed in the request method call

request - the SIRequest instance which is the source of the event

org.dvb.si
SITableUpdatedEvent

Syntax
```
public class SITableUpdatedEvent extends SIRetrievalEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--SIRetrievalEvent
              |
              +--org.dvb.si.SITableUpdatedEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
This event is sent in response to a SI descriptor retrieval request when the table carrying the information about the object has been updated and the set of descriptors consistent with the old object can not be retrieved. The application should in this case first update the SIInformation object and then request the descriptors again.

See Also:
SIRetrievalListener

Constructors

SITableUpdatedEvent(Object, SIRequest)

```
public SITableUpdatedEvent(java.lang.Object appData, SIRequest request)
```

The constructor for the event

Parameters:

appData - the application data passed in the request method call

request - the SIRequest instance which is the source of the event

org.dvb.si
SITime

Syntax
```
public interface SITime extends SIInformation
```

All Superinterfaces:
SIInformation

Description
This interface represents the Time and Date Table (TDT) and the (optional) Time Offset Table (TOT). When it represents a TDT table, the `retrieveDescriptors` and `getDescriptorTags` methods behave as documented in the case when there are no descriptors, because the TDT does not contain any descriptors.

See Also:
SIDatabase

Methods

---

getUTCTime()

```
public java.util.Date getUTCTime()
```

Get the UTC time as coded in the TDT or TOT table.

Returns:
The UTC as coded in the TDT or TOT table.

org.dvb.si
SITransportStream

Syntax
```
public interface SITransportStream extends SIInformation
```

All Known Subinterfaces:
SITransportStreamBAT, SITransportStreamNIT

All Superinterfaces:
SIInformation

Description
This interface is the base interface for representing information about transport streams.

Transport stream retrieval methods in the SIDatabase class and the SINetwork interface use the NIT table and will return objects that implement the SITransportStreamNIT interface.

Transport stream retrieval methods in the SIBouquet interface use the BAT table and will return objects that implement the SITransportStreamBAT interface.

Methods

---

getDvbLocator()

```
public org.davic.net.dvb.DvbLocator getDvbLocator()
```

Gets a DvbLocator that identifies this transport stream.

Returns:
The DvbLocator of this transport stream.

---

getOriginalNetworkID()

```
public int getOriginalNetworkID()
```

Get the original network identification.

Returns:
The original network identification identifier.

---

getTransportStreamID()

```
public int getTransportStreamID()
```

Get the transport stream identification.

Returns:
The transport stream identification identifier.

retrieveSIServices(short, Object, SIRetrievalListener, short[])

```
public SIRequest retrieveSIServices(short retrieveMode, java.lang.Object appData,
            SIRetrievalListener listener, short[] someDescriptorTags)
```

Retrieve information associated with services carried via the transport stream. This method works in the same way for objects that implement the SITransportStreamNIT and SITransportStreamBAT interfaces.

The SIIterator that is returned with the event when the request completes successfully will contain objects that implement the SIService interface.

Parameters:

`retrieveMode` - Mode of retrieval indicating whether the data should be retrieved only from the cache (FROM_CACHE_ONLY), from the cache if available and if not from the stream (FROM_CACHE_OR_STREAM), or always from the stream (FROM_STREAM_ONLY).

`appData` - An object supplied by the application. This object will be delivered to the listener when the request completes. The application can use this objects for internal communication purposes. If the application does not need any application data, the parameter can be null.

`listener` - SIRetrievalListener that will receive the event informing about the completion of the request.

`someDescriptorTags` - A list of hints for descriptors (identified by their tags) the application is interested in. If the array contains -1 as its one and only element, the application is interested in all descriptors. If someDescriptorTags is null, the application is not interested in descriptors. All values that are out of the valid range for descriptor tags (i.e. 0...255) are ignored, except for the special meaning of -1 as the only element in the array.

Returns:

An SIRequest object

Throws:

`SIIllegalArgumentException` - thrown if the retrieveMode is invalid

See Also:

`SIRequest`, `SIRetrievalListener`, `SIService`, `DescriptorTag`

org.dvb.si
SITransportStreamBAT

Syntax
```
public interface SITransportStreamBAT extends SITransportStream
```

All Superinterfaces:
SIInformation, SITransportStream

Description
This interface represents information about transport streams that has been retrieved from a BAT table. All descriptor accessing methods return descriptors retrieved from a BAT table. Methods in SIBouquet for retrieving transport streams return objects that implement this interface.

Methods

---

getBouquetID()

```
public int getBouquetID()
```

Get the identification of the bouquet this transport stream is part of.

Returns:
The bouquet identification identifier.

org.dvb.si
SITransportStreamDescription

Syntax
```
public interface SITransportStreamDescription extends SIInformation
```

All Superinterfaces:
SIInformation

Description
This interface represents the Transport Stream Description Table (TSDT).

It defines no methods of its own other than those inherited from SIInformation.

See Also:
SIDatabase, SITransportStream

org.dvb.si
SITransportStreamNIT

Syntax
```
public interface SITransportStreamNIT extends SITransportStream
```

All Superinterfaces:
SIInformation, SITransportStream

Description
This interface represents information about transport streams that has been retrieved from a NIT table. All descriptor accessing methods return descriptors retrieved from a NIT table. Methods in SIDatabase and SINetwork for retrieving transport streams return objects that implement this interface.

Methods

---

getNetworkID()

```
public int getNetworkID()
```

Get the identification of the network this transport stream is part of.

Returns:
The network identification identifier.

org.dvb.si
SIUtil

Syntax

```
public class SIUtil

java.lang.Object
  |
  +--org.dvb.si.SIUtil
```

Description

This class contains SI related utility functions.

Methods

---

convertSIStringToJavaString(byte[], int, int, boolean)

```
public static java.lang.String convertSIStringToJavaString(byte[] dvbSIText, int offset,
            int length, boolean emphasizedPartOnly)
```

This method converts a text string that is coded according to annex A of the DVB-SI specification (EN 300 468) to a Java String object.

The text that must be converted is contained in 'dvbSIText' from index 'offset' to index 'offset+length-1' (inclusive).

If the text that must be converted is not validly coded according to annex A of the DVB-SI specification, then the result is undefined.

Parameters:

`dvbSIText` - The byte array that contains the string that must be converted.

`offset` - The offset indicates the start of the DVB-SI text in dvbSIText.

`length` - Length of the DVB-SI text in bytes.

`emphasizedPartOnly` - If emphasizedPartOnly is true, then only the text that is marked as emphasized (using the character emphasis on [0x86] and character emphasis off [0x87] control codes) will be returned. Otherwise, the character emphasis codes will be ignored, and all of the converted text will be returned.

Returns:

The converted text.

Throws:

`SIIllegalArgumentException` - thrown if offset and/or offset+length-1 is not a valid index in dvbSIText.

org.dvb.si
TextualServiceIdentifierQuery

Syntax
```
public interface TextualServiceIdentifierQuery
```

All Known Subinterfaces:
SIService

Description
An interface that can be implemented by objects representing DVB services. Allows applications to obtain the textual service identifiers related to a service.

Since:
MHP1.0.1

Methods

---

getTextualServiceIdentifiers()

```
public java.lang.String[] getTextualServiceIdentifiers()
```

Returns the textual service identifiers related to this object.

Returns:
an array of String objects containing the textual service identifiers or null if none are present.

Since:
MHP1.0.1

Annex N (normative): Streamed Media API Extensions

Package
org.dvb.media

Description
Provides DVB specific extensions to the Java Media Framework.

Class Summary	
Interfaces	
BackgroundVideoPresentationControl	A control to support the setting and querying of the video presentation for background players.
SubtitleListener	Report that a subtitle event has happened.
SubtitlingEventControl	Allow applications to register and unregister their interest in events related to the availability and presentation of subtitles.
VideoFormatControl	This provides a means for applications to get information associated with the format and aspect ratio of the video being presented to the user.
VideoFormatListener	The listener used to receive video format events
VideoPresentationControl	A control to support setting and querying the video presentation.
Classes	
ActiveFormatDescriptionChangedEvent	Event signalling that the transmitted active format definition has changed
AspectRatioChangedEvent	Event signalling that the aspect ratio of the transmitted video has changed
CAStopEvent	This event is generated whenever access to a service is withdrawn by the CA system, e.g.
DFCChangedEvent	Event signalling that the decoder format conversion being used has changed
DripFeedDataSource	This class allows to create a source for a JMF player to be able to feed the decoder progressively with parts of a clip (e.g.
DripFeedPermission	This class represents a permission to access the drip feed mode.
NoComponentSelectedEvent	This event is generated whenever presentation of a stream stops because there are no selected components to present.
PresentationChangedEvent	This event is generated whenever the content being presented by a player changes for reasons outside the control of the application.
ServiceRemovedEvent	This event is generated whenever access to a service stops because the service concerned has been removed from the network.
StopByResourceLossEvent	This event is generated whenever presentation of a stream stops because the player has lost so many resources that it cannot continue.
SubtitleAvailableEvent	Report that subtitles are available to be presented having been unavailable.
SubtitleNotAvailableEvent	Inform an application that a subtitle stream has vanished from the network.
SubtitleNotSelectedEvent	Report that subtitles are not now selected.
SubtitleSelectedEvent	Report that subtitles are now selected.

Class Summary	
VideoFormatEvent	The base class for all other events relating to changes in video format
VideoTransformation	VideoTransformation objects express video transformations, i.e.
Exceptions	
CAException	This exception is thrown when access to a media stream is denied by the CA system.

org.dvb.media
ActiveFormatDescriptionChangedEvent

Syntax
```
public class ActiveFormatDescriptionChangedEvent extends VideoFormatEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--VideoFormatEvent
              |
              +--org.dvb.media.ActiveFormatDescriptionChangedEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
Event signalling that the transmitted active format definition has changed

Constructors

ActiveFormatDescriptionChangedEvent(Object, int)

```
public ActiveFormatDescriptionChangedEvent(java.lang.Object source, int newFormat)
```

Construct the event

Parameters:

`source` - the source of the event

`newFormat` - the new active format description

Methods

---

getNewFormat()

```
public int getNewFormat()
```

Get the new active format description

Returns:

the new active format description. The value of this is represented by one of the constants from the VideoFormatControl class

org.dvb.media
AspectRatioChangedEvent

Syntax
```
public class AspectRatioChangedEvent extends VideoFormatEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--VideoFormatEvent
              |
              +--org.dvb.media.AspectRatioChangedEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
Event signalling that the aspect ratio of the transmitted video has changed

Constructors

AspectRatioChangedEvent(Object, int)

```
public AspectRatioChangedEvent(java.lang.Object source, int newRatio)
```

Construct the event

Parameters:

`source` - the source of the event

`newRatio` - the new aspect ratio of the transmitted video

Methods

---

getNewRatio()

```
public int getNewRatio()
```

Get the new aspect ratio of the transmitted video

Returns:

the new aspect ratio of the video. The value of this is represented by one of the constants from the VideoFormatControl class

org.dvb.media

BackgroundVideoPresentationControl

Syntax

```
public interface BackgroundVideoPresentationControl extends VideoPresentationControl
```

All Superinterfaces:

javax.media.Control, VideoPresentationControl

Description

A control to support the setting and querying of the video presentation for background players.

Methods

---

getClosestMatch(VideoTransformation)

```
public VideoTransformation getClosestMatch(VideoTransformation t)
```

This method takes a video transformation and returns the closest match of that video transformation that can be supported for the currently selected video. If the input video transformation can be supported, then the output video transformation will have the same parameters as the input video transformation. The definition of 'closest match' is implementation dependent.

Parameters:

t - the input video transformation

Returns:

the closest match to the input video transformation. If the input video transformation is supported, then the input video transformation will be returned (the same instance), otherwise a newly created instance will be returned.

---

getVideoTransformation()

```
public VideoTransformation getVideoTransformation()
```

Return the current video transformation

Returns:

the video transformation (clipping/scaling/positioning) that is currently used for displaying the video.

---

setVideoTransformation(VideoTransformation)

```
public boolean setVideoTransformation(VideoTransformation t)
```

Sets a new video transformation (clipping/scaling/positioning). If the new video transformation is not supported, then the video transformation will not be changed at all (no best effort attempt is made).

Parameters:

t - the new video transformation

Returns:

true if the video transformation is supported and has been set, false otherwise.

org.dvb.media
CAException

Syntax
```
public class CAException extends java.io.IOException

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--java.io.IOException
                    |
                    +--org.dvb.media.CAException
```

All Implemented Interfaces:
java.io.Serializable

Description
This exception is thrown when access to a media stream is denied by the CA system. It will typically be thrown by calls to DataSource.start() when access to the stream accessed by the DataSource is denied.

Constructors

CAException()

```
public CAException()
```

Constructor without a reason

CAException(String)

```
public CAException(java.lang.String reason)
```

Constructor with a reason

Parameters:
`reason` - the reason why access to the stream failed

org.dvb.media
CAStopEvent

Syntax

```
public class CAStopEvent extends javax.media.StopEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--javax.media.ControllerEvent
              |
              +--javax.media.TransitionEvent
                    |
                    +--javax.media.StopEvent
                          |
                          +--org.dvb.media.CAStopEvent
```

All Implemented Interfaces:

javax.media.MediaEvent, java.io.Serializable

Description

This event is generated whenever access to a service is withdrawn by the CA system, e.g. at the end of a free preview period. It is not generated when an attempt to construct a Player or DataSource fails due to CA restrictions, or when only some of the presented content is not available or alternate content is presented. Generation of this event informs the application that the Player is no longer presenting any content.

Constructors

CAStopEvent(Controller)

```
public CAStopEvent(javax.media.Controller source)
```

Construct an event.

Parameters:

`source` - the controller which was presenting the service

CAStopEvent(Controller, MediaLocator)

```
public CAStopEvent(javax.media.Controller source, javax.media.MediaLocator stream)
```

Construct an event.

Parameters:

`source` - the controller which was presenting the service

`stream` - the URL of the stream from which access has been withdrawn.

Methods

---

getStream()

```
public javax.media.MediaLocator getStream()
```

This method returns the stream from which access has been withdrawn.

Returns:
the stream concerned

org.dvb.media
DFCChangedEvent

Syntax
```
public class DFCChangedEvent extends VideoFormatEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--VideoFormatEvent
              |
              +--org.dvb.media.DFCChangedEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
Event signalling that the decoder format conversion being used has changed

Constructors

DFCChangedEvent(Object, int)

```
public DFCChangedEvent(java.lang.Object source, int newDFC)
```

Construct the event

Parameters:

`source` - the source of the event

`newDFC` - the new decoder format conversion being used

Methods

---

getNewDFC()

```
public int getNewDFC()
```

Get the new decoder format conversion

Returns:

the new decoder format conversion. The value of this is represented by one of the constants from the VideoFormatControl class

org.dvb.media
DripFeedDataSource

Syntax

```
public class DripFeedDataSource extends javax.media.protocol.DataSource

java.lang.Object
  |
  +--javax.media.protocol.DataSource
        |
        +--org.dvb.media.DripFeedDataSource
```

All Implemented Interfaces:

javax.media.protocol.Controls, javax.media.Duration

Description

This class allows to create a source for a JMF player to be able to feed the decoder progressively with parts of a clip (e.g. I or P MPEG-2 frame) according to the drip-fed mode format defined in the MHP content format chapter.

To start using the drip-feed mode, the application needs to instantiate a player representing a MPEG-2 video decoder and have its source be a DripFeedDataSource instance.

A DripFeedDataSource instance can be obtained by calling the default constructor of the class.

A player that will be bound to a MPEG-2 video decoder (when realized) can be created with the following special URL (locator): "dripfeed://". It is also possible to use a decoder that was instantiated to play a broadcast MPEG-2 stream.

After having the DripFeedDataSource connected to a Player representing a MPEG-2 video decoder, the following rules applies:

- If the feed method is called when the player is in the "prefetched" state the image will be stored so that when the player goes in the "started" state it will be automatically displayed.

- If the feed method is called when the player is in the "started" mode, the frame shall be displayed immediately. In particular it is not required to feed a second frame to the decoder to display the first frame.

- If the feed method is called when the player is in any other state (or if the DripFeedDataSource is not connected to a player), it will be ignored by the platform implementation.

Constructors

DripFeedDataSource()

```
public DripFeedDataSource()
```

Constructor. A call to the constructor will throw a security exception if the application is not granted the right to use this mode.

Methods

---

connect()

```
public void connect()
```

This method shall not be used and has no effect. This source is considered as always connected.

Overrides:
javax.media.protocol.DataSource.connect() in class javax.media.protocol.DataSource

Throws:
`IOException` - never thrown in this sub-class

---

disconnect()

```
public void disconnect()
```

This method shall not be used and has no effect. This source is considered as always connected.

Overrides:
javax.media.protocol.DataSource.disconnect() in class javax.media.protocol.DataSource

---

feed(byte[])

```
public void feed(byte[] clip_part)
```

This method allows an application to feed the decoder progressively with parts of a clip (e.g. I or P MPEG-2 frame) according to the drip-fed mode format defined in the MHP content format chapter.

The feed method shall not be called more often than every 500ms. If this rule is not respected, display is not guaranteed.

While in the prefetch state the drip feed data source is only required to corrrectly process a single invocation of this method where the data consists only of a single I frame. Possible additional invocations while in the prefetch state shall have implementation specific results.

Parameters:
`clip_part` - Chunk of bytes compliant with the drip-fed mode format defined in the MHP content format chapter (i.e. one MPEG-2 frame with optional synctactic MPEG-2 elements).

---

getContentType()

```
public java.lang.String getContentType()
```

This method shall return the content type for mpeg-2 video "drips"

Overrides:
javax.media.protocol.DataSource.getContentType() in class javax.media.protocol.DataSource

Returns:
the content type for MPEG-2 video drips

---

getControl(String)

```
public java.lang.Object getControl(java.lang.String controlType)
```

Obtain the object that implements the specified Class or Interface. The full class or interface name must be used. If the control is not supported then null is returned.

Overrides:
javax.media.protocol.DataSource.getControl(java.lang.String) in class javax.media.protocol.DataSource

Parameters:
`controlType` - the full class or interface name of the requested control

Returns:
the object that implements the control, or null.

---

getControls()

```
public java.lang.Object[] getControls()
```

Obtain the collection of objects that control this object. If no controls are supported, a zero length array is returned.

Overrides:
javax.media.protocol.DataSource.getControls() in class javax.media.protocol.DataSource

Returns:
the collection of object controls

---

getDuration()

```
public javax.media.Time getDuration()
```

This method shall not be used and has no effect.

Overrides:
javax.media.protocol.DataSource.getDuration() in class javax.media.protocol.DataSource

Returns:
DURATION_UNKNOWN.

---

getStreams()

```
public javax.media.protocol.PullSourceStream[] getStreams()
```

This method is not used and shall return null.

Returns:
always returns null in this sub-class

---

start()

```
public void start()
```

This method shall not be used and has no effect. This source is considered as always started.

Overrides:
javax.media.protocol.DataSource.start() in class javax.media.protocol.DataSource

Throws:
`IOException` - never thrown in this sub-class

---

stop()

```
public void stop()
```

This method shall not be used and has no effect. This source is considered as always started.

Overrides:
javax.media.protocol.DataSource.stop() in class javax.media.protocol.DataSource

Throws:
`IOException` - never thrown in this sub-class

org.dvb.media
DripFeedPermission

Syntax
```
public class DripFeedPermission extends java.security.BasicPermission

java.lang.Object
  |
  +--java.security.Permission
        |
        +--java.security.BasicPermission
              |
              +--org.dvb.media.DripFeedPermission
```

All Implemented Interfaces:
java.security.Guard, java.io.Serializable

Description
This class represents a permission to access the drip feed mode.

Constructors

DripFeedPermission(String)

```
public DripFeedPermission(java.lang.String name)
```

Create a new DripFeedPermission.

Parameters:

`name` - the name string is currently unused and should be empty

---

DripFeedPermission(String, String)

```
public DripFeedPermission(java.lang.String name, java.lang.String actions)
```

Create a new DripFeedPermission. This constructor is used by the policy class to instantiate new permission objects.

Parameters:

`name` - The name string is currently unused and should be empty

`actions` - The actions string is currently unused and should be null.

org.dvb.media
NoComponentSelectedEvent

Syntax

```
public class NoComponentSelectedEvent extends javax.media.StopEvent
```

```
java.lang.Object
  |
  +--java.util.EventObject
        |
        +--javax.media.ControllerEvent
              |
              +--javax.media.TransitionEvent
                    |
                    +--javax.media.StopEvent
                          |
                          +--org.dvb.media.NoComponentSelectedEvent
```

All Implemented Interfaces:

javax.media.MediaEvent, java.io.Serializable

Description

This event is generated whenever presentation of a stream stops because there are no selected components to present. One example of this would be use of the `javax.tv.media.MediaSelectControl.remove` method to remove all components of a service. Generation of this event informs the application that the Player is no longer presenting any content.

Since:

MHP 1.0.1

Constructors

NoComponentSelectedEvent(Controller)

```
public NoComponentSelectedEvent(javax.media.Controller source)
```

Construct an event.

Parameters:

`source` - the controller which was presenting the service

NoComponentSelectedEvent(Controller, MediaLocator)

```
public NoComponentSelectedEvent(javax.media.Controller source,
            javax.media.MediaLocator stream)
```

Construct an event.

Parameters:

`source` - the controller which was presenting the service

`stream` - the locator of the stream whose presentation has stopped

Methods

---

getStream()

```
public javax.media.MediaLocator getStream()
```

This method returns the stream whose presentation has stopped

Returns:
the stream concerned

org.dvb.media
PresentationChangedEvent

Syntax
```
public class PresentationChangedEvent extends javax.media.ControllerEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--javax.media.ControllerEvent
              |
              +--org.dvb.media.PresentationChangedEvent
```

All Implemented Interfaces:
javax.media.MediaEvent, java.io.Serializable

Description
This event is generated whenever the content being presented by a player changes for reasons outside the control of the application. The state of the player does not change - only the content being presented.

Fields

CA_FAILURE

```
public static final int CA_FAILURE
```

Presentation changed due an action by the CA subsystem. Alternate content is being played, not the content selected by the user (e.g. adverts in place of a scrambled service)

See Also:
getReason()

CA_RETURNED

```
public static final int CA_RETURNED
```

Presentation changed due to an action by the CA subsystem. Normal content is now being presented as requested by the user. This reason code is used when the CA subsystem commands the MHP terminal to switch back to the normal presentation after having previously selected an alternate content.

See Also:
getReason()

STREAM_UNAVAILABLE

```
public static final int STREAM_UNAVAILABLE
```

The stream being presented is no longer available in the transport stream.

See Also:
getReason()

Constructors

PresentationChangedEvent(Controller, MediaLocator, int)

```
public PresentationChangedEvent(javax.media.Controller source,
            javax.media.MediaLocator stream, int reason)
```

Constructor for the event

Parameters:

`source` - the controller whose presentation changed

`stream` - the stream now being presented.

`reason` - the reason for the change encoded as one of the constants in this class

Methods

---

getReason()

```
public int getReason()
```

This method returns the reason why access has been withdrawn.

Returns:

the reason for the change specified when the event was constructed

---

getStream()

```
public javax.media.MediaLocator getStream()
```

This method returns the locator for the stream now being presented.

Returns:

the stream now being presented

org.dvb.media
ServiceRemovedEvent

Syntax

```
public class ServiceRemovedEvent extends javax.media.StopEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--javax.media.ControllerEvent
              |
              +--javax.media.TransitionEvent
                    |
                    +--javax.media.StopEvent
                          |
                          +--org.dvb.media.ServiceRemovedEvent
```

All Implemented Interfaces:

javax.media.MediaEvent, java.io.Serializable

Description

This event is generated whenever access to a service stops because the service concerned has been removed from the network. Generation of this event informs the application that the Player is no longer presenting any content.

Since:

MHP 1.0.1

Constructors

ServiceRemovedEvent(Controller)

```
public ServiceRemovedEvent(javax.media.Controller source)
```

Construct an event.

Parameters:

`source` - the controller which was presenting the service

ServiceRemovedEvent(Controller, MediaLocator)

```
public ServiceRemovedEvent(javax.media.Controller source, javax.media.MediaLocator stream)
```

Construct an event.

Parameters:

`source` - the controller which was presenting the service

`stream` - the locator of the stream which was removed from the network

Methods

getStream()

```
public javax.media.MediaLocator getStream()
```

This method returns the stream which was removed from the network

Returns:
the stream concerned

org.dvb.media
StopByResourceLossEvent

Syntax
```
public class StopByResourceLossEvent extends javax.media.StopEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--javax.media.ControllerEvent
              |
              +--javax.media.TransitionEvent
                    |
                    +--javax.media.StopEvent
                          |
                          +--org.dvb.media.StopByResourceLossEvent
```

All Implemented Interfaces:
javax.media.MediaEvent, java.io.Serializable

Description
This event is generated whenever presentation of a stream stops because the player has lost so many resources that it cannot continue. Generation of this event informs the application that the Player is no longer presenting any content.

Since:
MHP 1.0.1

Constructors

StopByResourceLossEvent(Controller)

```
public StopByResourceLossEvent(javax.media.Controller source)
```

Construct an event.

Parameters:

`source` - the controller which was presenting the service

StopByResourceLossEvent(Controller, MediaLocator)

```
public StopByResourceLossEvent(javax.media.Controller source,
            javax.media.MediaLocator stream)
```

Construct an event.

Parameters:

`source` - the controller which was presenting the service

`stream` - the locator of the stream which was being presented

Methods

---

getStream()

```
public javax.media.MediaLocator getStream()
```

This method returns the stream which was being presented

Returns:
the stream concerned

org.dvb.media
SubtitleAvailableEvent

Syntax
```
public class SubtitleAvailableEvent extends java.util.EventObject

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--org.dvb.media.SubtitleAvailableEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
Report that subtitles are available to be presented having been unavailable. This event is not generated on service selection or other forms of 'zapping'. Its generation is restricted to changes in the composition of the subtitle aspects of the same broadcast stream.

Constructors

SubtitleAvailableEvent(SubtitlingLanguageControl)

```
public SubtitleAvailableEvent(org.davic.media.SubtitlingLanguageControl source)
```

Constructor.

Parameters:
`source` - the source of the event

Methods

---

getSource()

```
public java.lang.Object getSource()
```

Return the control which was the source of the event.

Overrides:
java.util.EventObject.getSource() in class java.util.EventObject

Returns:
the source of the event

org.dvb.media
SubtitleListener

Syntax
```
public interface SubtitleListener extends java.util.EventListener
```

All Superinterfaces:
java.util.EventListener

Description
Report that a subtitle event has happened.

Methods

---

subtitleStatusChanged(EventObject)

```
public void subtitleStatusChanged(java.util.EventObject event)
```

Report a subtitle event has happened.

Parameters:
`event` - the event which happened

org.dvb.media
SubtitleNotAvailableEvent

Syntax
```
public class SubtitleNotAvailableEvent extends java.util.EventObject

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--org.dvb.media.SubtitleNotAvailableEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
Inform an application that a subtitle stream has vanished from the network. This event is not generated on service selection or other forms of 'zapping'. Its generation is restricted to changes in the composition of the subtitle aspects of the same broadcast stream.

Constructors

SubtitleNotAvailableEvent(SubtitlingLanguageControl)

```
public SubtitleNotAvailableEvent(org.davic.media.SubtitlingLanguageControl source)
```

Constructor.

Parameters:
`source` - the source of the event

Methods

---

getSource()

```
public java.lang.Object getSource()
```

Return the source of the event.

Overrides:
java.util.EventObject.getSource() in class java.util.EventObject

Returns:
the source of the event

org.dvb.media
SubtitleNotSelectedEvent

Syntax
```
public class SubtitleNotSelectedEvent extends java.util.EventObject

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--org.dvb.media.SubtitleNotSelectedEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
Report that subtitles are not now selected. Even if subtitles are available in the network, they will not be presented. This event is generated when the combination of end user control of subtiles through the navigator and application control of subtiles through `SubtitlingLanguageControl.setSubtitling` changes whether subtitles are to be presented if they are available. It is not generated for changes in the underlying availability of subtitles even if those cause changes in whether subtiles are presented or not.

Constructors

SubtitleNotSelectedEvent(SubtitlingLanguageControl)

```
public SubtitleNotSelectedEvent(org.davic.media.SubtitlingLanguageControl source)
```

Constructor

Parameters:
`source` - the source of the event

Methods

---

getSource()

```
public java.lang.Object getSource()
```

Return the source of the event

Overrides:
java.util.EventObject.getSource() in class java.util.EventObject

Returns:
the source of the event

org.dvb.media
SubtitleSelectedEvent

Syntax

```
public class SubtitleSelectedEvent extends java.util.EventObject

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--org.dvb.media.SubtitleSelectedEvent
```

All Implemented Interfaces:

java.io.Serializable

Description

Report that subtitles are now selected. If subtitles are also available then they will be presented. This event is generated when the combination of end user control of subtiles through the navigator and application control of subtiles through `SubtitlingLanguageControl.setSubtitling` changes whether subtitles are to be presented if they are available. It is not generated for changes in the underlying availability of subtitles even if those cause changes in whether subtiles are presented or not.

Constructors

SubtitleSelectedEvent(SubtitlingLanguageControl)

```
public SubtitleSelectedEvent(org.davic.media.SubtitlingLanguageControl source)
```

Constructor

Parameters:

`source` - the source of the event

Methods

---

getSource()

```
public java.lang.Object getSource()
```

Return the source of the event

Overrides:

java.util.EventObject.getSource() in class java.util.EventObject

Returns:

the source of the event

org.dvb.media
SubtitlingEventControl

Syntax
```
public interface SubtitlingEventControl extends org.davic.media.SubtitlingLanguageControl
```

All Superinterfaces:
javax.media.Control, org.davic.media.LanguageControl, org.davic.media.SubtitlingLanguageControl

Description
Allow applications to register and unregister their interest in events related to the availability and presentation of subtitles.

Methods

---

addSubtitleListener(SubtitleListener)

```
public void addSubtitleListener(SubtitleListener l)
```

Add a listener for subtitle events

Parameters:
`l` - the listener to report the events to

---

removeSubtitleListener(SubtitleListener)

```
public void removeSubtitleListener(SubtitleListener l)
```

Remove a listener for subtitle events

Parameters:
`l` - the listener to remove

org.dvb.media
VideoFormatControl

Syntax
```
public interface VideoFormatControl extends javax.media.Control
```

All Superinterfaces:
javax.media.Control

Description
This provides a means for applications to get information associated with the format and aspect ratio of the video being presented to the user. This control will only be available for Players presenting MPEG-2 video streams.

It is important to note that due to different video and display formats (and user preferences), not all of the full video frame may be displayed. Similarly, it may not always be possible to map video and graphics with perfect accuracy.

Fields

AFD_14_9

```
public static final int AFD_14_9
```

Constant representing an MPEG active format description of 14:9 (centre)

AFD_14_9_TOP

```
public static final int AFD_14_9_TOP
```

Constant representing an MPEG active format description of 14:9 (top)

AFD_16_9

```
public static final int AFD_16_9
```

Constant representing an MPEG active format description of 16:9 (centre)

AFD_16_9_SP_14_9

```
public static final int AFD_16_9_SP_14_9
```

Constant representing an MPEG active format description of 16:9 (with shoot & protect 14:9 centre)

AFD_16_9_SP_4_3

```
public static final int AFD_16_9_SP_4_3
```

Constant representing an MPEG active format description of 16:9 (with shoot & protect 4:3 centre)

AFD_16_9_TOP

```
public static final int AFD_16_9_TOP
```

Constant representing an MPEG active format description of 16:9 (top)

AFD_4_3

```
public static final int AFD_4_3
```

Constant representing an MPEG active format description of 4:3 (centre)

AFD_4_3_SP_14_9

```
public static final int AFD_4_3_SP_14_9
```

Constant representing an MPEG active format description of 4:3 (with shoot & protect 14:9 centre)

AFD_GT_16_9

```
public static final int AFD_GT_16_9
```

Constant representing an MPEG active format description of greater than 16:9 (centre)

AFD_NOT_PRESENT

```
public static final int AFD_NOT_PRESENT
```

Constant showing an MPEG active format description is not present

AFD_SAME

```
public static final int AFD_SAME
```

Constant representing an MPEG active format description that is the same as the coded frame

ASPECT_RATIO_16_9

```
public static final int ASPECT_RATIO_16_9
```

Constant representing an aspect ratio of 16:9

ASPECT_RATIO_2_21_1

```
public static final int ASPECT_RATIO_2_21_1
```

Constant representing an aspect ratio of 2.21:1

ASPECT_RATIO_4_3

```
public static final int ASPECT_RATIO_4_3
```

Constant representing an aspect ratio of 4:3

ASPECT_RATIO_UNKNOWN

```
public static final int ASPECT_RATIO_UNKNOWN
```

Constant representing an unknown aspect ratio

DAR_16_9

```
public static final int DAR_16_9
```

Constant representing a display aspect ratio of 16:9

DAR_4_3

```
public static final int DAR_4_3
```

Constant representing a display aspect ratio of 4:3

DFC_PLATFORM

```
public static final int DFC_PLATFORM
```

Control over the decoder format conversions is returned to being managed by the platform. This is the same as the value used if no MHP application has set a video transformation. It is not required to correspond to a single decoder format conversion and may change over time as the video input format & signalling change. This constant can only be used to set the decoder format conversion. Reading the decoder format conversion shall always return the DFC used at the time concerned.

DFC_PROCESSING_CCO

```
public static final int DFC_PROCESSING_CCO
```

A 4:3 central part out of the 720x576 input 16:9 frame is transferred into a 720x576 4:3 output frame

---

DFC_PROCESSING_FULL

```
public static final int DFC_PROCESSING_FULL
```

The full 720x576 frame is transferred (this may be either 4:3 or 16:9; part of this may be black, e.g. in the "pillar box" cases)

DFC_PROCESSING_LB_14_9

```
public static final int DFC_PROCESSING_LB_14_9
```

The 720x576 input grid is transferred into a 14:9 LB in a 4:3 frame

---

DFC_PROCESSING_LB_16_9

```
public static final int DFC_PROCESSING_LB_16_9
```

The 720x576 input grid is transferred into a 16:9 letterbox in a 4:3 frame

---

DFC_PROCESSING_LB_2_21_1_ON_16_9

```
public static final int DFC_PROCESSING_LB_2_21_1_ON_16_9
```

The 720x576 input grid is transferred into a 2.21:1 letterbox in a 16:9 frame.

DFC_PROCESSING_LB_2_21_1_ON_4_3

```
public static final int DFC_PROCESSING_LB_2_21_1_ON_4_3
```

The 720x576 input grid is transferred into a 2.21:1 letterbox in a 4:3 frame.

DFC_PROCESSING_NONE

```
public static final int DFC_PROCESSING_NONE
```

Decoder format conversion is inactive

DFC_PROCESSING_PAN_SCAN

```
public static final int DFC_PROCESSING_PAN_SCAN
```

A 4:3 part out of the 720x576 input 16:9 or 2.21:1 frame is transferred into a 720x576 4:3 output frame. The horizontal position of this part is determined by pan&scan vectors from the MPEG video stream.

DFC_PROCESSING_UNKNOWN

```
public static final int DFC_PROCESSING_UNKNOWN
```

Constant representing an unknown format conversion being performed by the decoder

Methods

addVideoFormatListener(VideoFormatListener)

```
public void addVideoFormatListener(VideoFormatListener l)
```

Add a listener for VideoFormatChangedEvents

Parameters:

`l` - the listener to add

getActiveFormatDefinition()

```
public int getActiveFormatDefinition()
```

Return the value of the active_format field of the MPEG Active Format Description of the video if it is transmitted (one of the constants AFD_* above). If this field is not available then AFD_NOT_PRESENT is returned. The constant values for the constants representing the Active Format Description should be identical to the values specified in ETR154, annex B.

Returns:

the value of the active_format field of the MPEG Active Format Description of the video if it is transmitted. If this field is not available, or the video is not MPEG, then AFD_NOT_PRESENT is returned.

getAspectRatio()

```
public int getAspectRatio()
```

Return the aspect ratio of the video as it is transmitted. If the aspect ratio is not known, ASPECT_RATIO_UNKNOWN is returned

Returns:
the aspect ratio of the video

---

getDecoderFormatConversion()

```
public int getDecoderFormatConversion()
```

Return a value representing what format conversion is being done by the decoder in the platform (one of the constants DFC_* above). A receiver may implement only a subset of the available options. This decoder format conversion may be active or not depending upon the mode of operation.

Returns:
the decoder format conversion being performed or DFC_PROCESSING_UNKNOWN if this is not known

---

getDisplayAspectRatio()

```
public int getDisplayAspectRatio()
```

Return the aspect ratio of the display device connected to this MHP decoder (one of the constants DAR_* above)

Returns:
the aspect ratio of the display device connected to the decoder

---

getVideoTransformation(int)

```
public VideoTransformation getVideoTransformation(int dfc)
```

This method returns a VideoTransformation object that corresponds with the specified Decoder Format Conversion when applied to the currently selected video. If the specified Decoder Format Conversion is not supported for the currently selected video, then this method returns null.

Parameters:
`dfc` - the Decoder Format Conversion (one of the DFC_* constants specified in this interface)

Returns:
the video transformation, or null if the specified Decoder Format Conversion is not supported for the currently selected video.

---

removeVideoFormatListener(VideoFormatListener)

```
public void removeVideoFormatListener(VideoFormatListener l)
```

Remove a listener for VideoFormatChangedEvents

Parameters:
`l` - the listener to remove

org.dvb.media
VideoFormatEvent

Syntax
```
public abstract class VideoFormatEvent extends java.util.EventObject

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--org.dvb.media.VideoFormatEvent
```

Direct Known Subclasses:
ActiveFormatDescriptionChangedEvent, AspectRatioChangedEvent, DFCChangedEvent

All Implemented Interfaces:
java.io.Serializable

Description
The base class for all other events relating to changes in video format

Constructors

VideoFormatEvent(Object)

```
public VideoFormatEvent(java.lang.Object source)
```

Constructor

Parameters:

`source` - the source of the event

org.dvb.media
VideoFormatListener

Syntax
```
public interface VideoFormatListener
```

Description
The listener used to receive video format events

Methods

---

receiveVideoFormatEvent(VideoFormatEvent)

```
public void receiveVideoFormatEvent(VideoFormatEvent anEvent)
```

receive a VideoFormatEvent

Parameters:

`anEvent` - the VideoFormatEvent that has been received

org.dvb.media
VideoPresentationControl

Syntax
```
public interface VideoPresentationControl extends javax.media.Control
```

All Known Subinterfaces:
BackgroundVideoPresentationControl

All Superinterfaces:
javax.media.Control

Description
A control to support setting and querying the video presentation.

Note: For a component-based player the scaling and positioning of the video is done by manipulating the corresponding AWT component. The VideoPresentationControl only allows for the setting of the clipping region.

Note: If the hardware supports the positioning of interlaced video on even lines only (when counting from 0), then a component-based player is allowed to position the top of the video one line below where it should be.

For a background player there is the BackgroundVideoPresentationControl that allows for the setting of the clipping region, the position and the scaling of the video in one atomic action.

Fields

POS_CAP_FULL

```
public static final byte POS_CAP_FULL
```

Constant representing that the video can be positioned anywhere on the screen, even if a part of the video is off screen as a result of that.

POS_CAP_FULL_EVEN_LINES

```
public static final byte POS_CAP_FULL_EVEN_LINES
```

n Constant representing that the video can be positioned anywhere on the screen, even if a part of the video is off screen as a result of that, with the restriction that the field order is respected. This implies that interlaced video can be positioned on even lines only (when counting from 0).

POS_CAP_FULL_EVEN_LINES_IF_ENTIRE_VIDEO_ON_SCREEN

```
public static final byte POS_CAP_FULL_EVEN_LINES_IF_ENTIRE_VIDEO_ON_SCREEN
```

Constant representing that the video can be positioned anywhere on screen as long as all the video is on screen, with the restriction that the field order is respected. This implies that interlaced video can be positioned on even lines only (when counting from 0).

POS_CAP_FULL_IF_ENTIRE_VIDEO_ON_SCREEN

```
public static final byte POS_CAP_FULL_IF_ENTIRE_VIDEO_ON_SCREEN
```

Constant representing that the video can be positioned anywhere on screen as long as all the video is on screen.

POS_CAP_OTHER

```
public static final byte POS_CAP_OTHER
```

Constant representing that the video positioning capability cannot be expressed by another POS_CAP_* constant.

Methods

getActiveVideoArea()

```
public org.havi.ui.HScreenRectangle getActiveVideoArea()
```

This method returns the size and location of the active video area. The active video area excludes any "bars" used for letterboxing or pillarboxing that the receiver knows about. Bars that are included in the broadcast stream and not signalled by active format descriptors are included in the active video area. The active video area may be larger/smaller than the screen, and may possibly be offset. The offsets will be negative if the origin of the active video area is above/left of the top, left corner of the screen. In case of pan&scan, the value returned may vary over time. This method only describes the relationship between the active video and the screen. It does not describe which portion of the screen is displaying the video.

Note: This method includes any video scaling.

Returns:

an HScreenRectangle representing the active video area in the normalised coordinate space.

getActiveVideoAreaOnScreen()

```
public org.havi.ui.HScreenRectangle getActiveVideoAreaOnScreen()
```

This method returns the size and location of the active video area on-screen. The active video area excludes any "bars" used for letterboxing or pillarboxing that the receiver knows about. Bars that are included in the broadcast stream and not signalled by active format descriptors are included in the active video area. The active video area on-screen may be smaller than the area of the screen, and may possibly be offset a positive amount. This method only describes the area on-screen where active video is being presented. It does not really describe which part of the video is being shown on-screen. This is especially true for pan&scan.

Note: This method includes any video scaling.

Returns:

an HScreenRectangle representing the active video area on-screen in the normalised coordinate space.

getClipRegion()

```
public java.awt.Rectangle getClipRegion()
```

This method returns the area of the decoded video that will be displayed. If clipping is not supported, the dimensions of the bounding box will be the same as the displayed video.

Returns:

area of the decoded video that will be displayed. The coordinate space used to express the region is that of the decoded video after possible ETR154 up-sampling.

---

getHorizontalScalingFactors()

```
public float[] getHorizontalScalingFactors()
```

This method gives information about the supported discrete horizontal scaling factors in case arbitrary horizontal scaling is not supported.

Returns:

an array with the supported discrete horizontal scaling factors (including the scaling factor 1), sorted in ascending order. null is returned when arbitrary horizontal scaling is supported.

---

getInputVideoSize()

```
public java.awt.Dimension getInputVideoSize()
```

This method returns the dimensions of the video before any scaling has taken place (but after ETR154 up-sampling). On 50Hz standard definition systems this method always returns 720x576.

Returns:

the size of the decoded video before any scaling has taken place (but after ETR154 up-sampling)

---

getPositioningCapability()

```
public byte getPositioningCapability()
```

This method gives information about how the video can be positioned on screen.

Returns:

the positioning capability for the currently selected video as one of the POS_CAP_* constants.

---

getTotalVideoArea()

```
public org.havi.ui.HScreenRectangle getTotalVideoArea()
```

This method returns a relative size and location of the total video area, including any "bars" used for letterboxing or pillarboxing that are included in the broadcast stream, but excluding any "bars" introduced as a result of video filtering. This may be larger or smaller than the size of the physical display device. This method only describes the relationship between the total video and the screen. It does not describe which portion of the screen is displaying the video.

Note: This method includes any video scaling.

Returns:

an HScreenRectangle representing the total video area in the normalised coordinate space.

---

getTotalVideoAreaOnScreen()

```
public org.havi.ui.HScreenRectangle getTotalVideoAreaOnScreen()
```

This method returns a relative size and location of the total video area on-screen, including any "bars" used for letterboxing or pillarboxing that are included in the broadcast stream, but excluding any "bars" introduced as a result of video filtering. This method only describes the area on-screen

where total video is being presented. This does not really describe which part of the video is being shown on-screen. This is especially true for pan&scan.

Note: This method includes any video scaling.

Returns:
an HScreenRectangle representing the total video area on-screen in the normalised coordinate space.

---

getVerticalScalingFactors()

```
public float[] getVerticalScalingFactors()
```

This method gives information about the supported discrete vertical scaling factors in case arbitrary vertical scaling is not supported.

Returns:
an array with the supported discrete vertical scaling factors (including the scaling factor 1), sorted in ascending order. null is returned when arbitrary vertical scaling is supported.

---

getVideoSize()

```
public java.awt.Dimension getVideoSize()
```

This method returns the size of the decoded video as it is being presented to the user. It takes scaling and clipping into account.

Returns:
the size of the decoded video as it is being presented to the user

---

setClipRegion(Rectangle)

```
public java.awt.Rectangle setClipRegion(java.awt.Rectangle clipRect)
```

Set the region of the decoded video that will be displayed. If clipping is not supported, this method has no effect. If the bounding box extends beyond the decoded video, the area not containing video will be filled with the background. By default, the clipping region is set to the dimensions of the decoded video. This method returns the bounding box of the clipping region that was actually set. Implementations may approximate the requested rectangle if they have restrictions on video clipping.

If the player is a component-based player (as opposed to a background player), then the top left corner of the clip region will be aligned with the top left corner of the java.awt.Component returned by the method javax.media.Player.getVisualComponent(). Hence changing the position of the clip region within the video moves the video with respect to the coordinate space used by java.awt.

Parameters:
`clipRect` - the bounding box of the clipping region. The coordinate space used to express the region is that of the decoded video after possible ETR154 up-sampling.

Returns:
the set clipping region. If the requested clipping region is supported exactly, then the input parameter clipRect is returned, otherwise a newly created object will be returned.

---

supportsArbitraryHorizontalScaling()

```
public float[] supportsArbitraryHorizontalScaling()
```

This method gives information about whether arbitrary horizontal scaling is supported for the currently playing video. If arbitrary horizontal scaling is supported, then an array with two elements in returned. The first element returns the smallest allowed scaling factor (e.g. 0.5) and the second element returns the largest allowed scaling factor (e.g. 4). If arbitrary horizontal scaling is not

supported, null is returned. In that case the method getHorizontalScalingFactors can be used to query which discrete scaling factors are supported.

Returns:

an array with the minimum and maximum allowed horizontal scaling factor, or null if arbitrary horizontal scaling is not supported.

---

supportsArbitraryVerticalScaling()

```
public float[] supportsArbitraryVerticalScaling()
```

This method gives information about whether arbitrary vertical scaling is supported for the currently playing video. If arbitrary vertical scaling is supported, then an array with two elements in returned. The first element returns the smallest allowed scaling factor (e.g. 0.5) and the second element returns the largest allowed scaling factor (e.g. 2). If arbitrary vertical scaling is not supported, null is returned. In that case the method getVerticalScalingFactors can be used to query which discrete scaling factors are supported.

Returns:

an array with the minimum and maximum allowed vertical scaling factor, or null if arbitrary vertical scaling is not supported.

---

supportsClipping()

```
public boolean supportsClipping()
```

Test if the decoder supports clipping

Returns:

true if and only if the decoder supports displaying only a section of the decoded video.

org.dvb.media
VideoTransformation

Syntax

```
public class VideoTransformation

java.lang.Object
  |
  +--org.dvb.media.VideoTransformation
```

Description

VideoTransformation objects express video transformations, i.e. the clipping, the horizontal and vertical scaling and the position of the video. All transformations are to be applied after possible ETR154 up-sampling.

Note: Instances of VideoTransformation can represent pan and scan, but an application cannot create such instances itself. An application can get a VideoTransformation representing pan and scan, by calling the VideoFormatControl.getVideoTransformation() method with the pan and scan Decoder Format Conversion constant.

Constructors

VideoTransformation()

```
public VideoTransformation()
```

Creates a VideoTransformation object with default parameters. Clipping is disabled, both the horizontal and the vertical scaling factors are 1, and the video position is (0, 0) in the normalised coordinate space.

VideoTransformation(Rectangle, float, float, HScreenPoint)

```
public VideoTransformation(java.awt.Rectangle clipRect, float horizontalScalingFactor,
            float verticalScalingFactor, org.havi.ui.HScreenPoint location)
```

Creates a VideoTransformation object with the supplied parameters.

Parameters:

`clipRect` - the bounding box of the clipping region. The coordinate space used to express the region is that of the decoded video after possible ETR154 up-sampling.

`horizontalScalingFactor` - the horizontal scaling factor.

`verticalScalingFactor` - the vertical scaling factor.

`location` - the location of the video on the screen in the normalised coordinate space.

Methods

---

getClipRegion()

```
public java.awt.Rectangle getClipRegion()
```

Gets the clipping region.

Returns:
the bounding box of the clipping region. The coordinate space used to express the region is that of the decoded video after possible ETR154 up-sampling. null is returned if this video transformation represents pan and scan.

---

getScalingFactors()

```
public float[] getScalingFactors()
```

Gets the horizontal and vertical scaling factors.

Returns:
an array with two elements. The first element contains the horizontal scaling factor, the second element the vertical scaling factor.

---

getVideoPosition()

```
public org.havi.ui.HScreenPoint getVideoPosition()
```

Returns the video position.

Returns:
the location of the video on the screen in the normalised coordinate space.

---

isPanAndScan()

```
public boolean isPanAndScan()
```

Returns whether this video transformation represents pan and scan.

Returns:
true is this video transformation represents pan and scan, false otherwise.

---

setClipRegion(Rectangle)

```
public void setClipRegion(java.awt.Rectangle clipRect)
```

Sets the clipping region.

If this video transformation represents pan and scan, then it will no longer represent pan and scan when this method is called.

Parameters:
`clipRect` - the bounding box of the clipping region. The coordinate space used to express the region is that of the decoded video after possible ETR154 up-sampling.

---

setScalingFactors(float, float)

```
public void setScalingFactors(float horizontalScalingFactor, float verticalScalingFactor)
```

Sets the horizontal and vertical scaling factors.

Parameters:
`horizontalScalingFactor` - the horizontal scaling factor.

`verticalScalingFactor` - the vertical scaling factor.

setVideoPosition(HScreenPoint)

```
public void setVideoPosition(org.havi.ui.HScreenPoint location)
```

Sets the video position.

Parameters:

`location` - the location of the video on the screen in the normalised coordinate space.

Annex O (normative): Integration of the JavaTV SI API and DVB SI

O.1 Introduction

This section describes how the JavaTV Service Information API as described in [51] can be mapped to the data structures of DVB Service Information as defined in EN 300 468 [4]. Secondly this document describes how the JavaTV API and the DVB SI API (as described in annex M, "(normative): SI Access API" on page 490) can be integrated.

O.2 Mapping of the JavaTV SI API to DVB SI

This section describes for every relevant Java interface and method in the JavaTV SI API how it is mapped to the DVB Service Information.

O.2.1 javax.tv.service.Service

The Service interface represents a DVB Service as stored in the MHP terminal as "installed services".

Depending on the MHP terminal implementation, the objects implementing this interface may or may not implement the ServiceNumber interface as well. Furthermore, it is allowed that even within the same MHP terminal implementation, some objects implementing the Service interface implement the ServiceNumber while other objects implement only the Service interface.

Objects implementing this interfaces and representing DVB services shall also implement the `org.dvb.si.TextualServiceIdentifiersQuery` interface.

The methods are mapped as follows:

O.2.1.1 getName

Returns the name of the service as stored in the MHP terminal. Depending on the MHP terminal implementation, the end user may have the possibility to edit these names according to his preferences. If the contents of this field are retrieved by the MHP terminal by default from DVB SI, it is recommended that the MHP terminal uses the abbreviated form of the service name from the Service descriptor.

O.2.1.2 getServiceType

Returns the ServiceType according to the mapping defined in section O.2.3, "javax.tv.service.ServiceType" on page 618.

O.2.2 javax.tv.service.ServiceComponent

The ServiceComponent interface provides the information contained in the Component descriptors, Multilingual component descriptors or Data broadcast descriptors in the EIT.

O.2.2.1 getComponentName

Returns the component description from the Component descriptor or from the Multilingual component descriptor using the language preference, or from the Data broadcast descriptor.

O.2.2.2 getAssociatedLanguage

Returns the ISO 639.2 [66] language code indicating the language of the component (i.e. not necessarily the selected language for the name returned by `getName()`) from the Component descriptor or from the Data broadcast descriptor.

O.2.2.3 getStreamType

Returns the stream type according to the mapping from the stream_content field and the component_type field of the Component descriptor or the Data broadcast descriptor to the JavaTV stream types according to O.2.4, "javax.tv.service.StreamType" on page 618.

O.2.3 javax.tv.service.ServiceType

The DVB SI service types are defined in Table 61 of EN 300 468 [4]. These should be mapped to the JavaTV service types as follows.

Table O.1 : Mapping DVB to JavaTV service types

DVB Service type code	DVB Service Type Description	JavaTV Service Type
0x01	Digital television service	DIGITAL_TV
0x02	Digital radio sound service	DIGITAL_RADIO
0x03	Teletext service	DATA_BROADCAST
0x04	NVOD Reference service	NVOD_REFERENCE
0x05	NVOD time-shifted service	NVOD_TIME_SHIFTED
0x06	Mosaic service	DIGITAL_TV
0x07	PAL coded signal	ANALOG_TV
0x08	SECAM coded signal	ANALOG_TV
0x09	D/D2-MAC	ANALOG_TV
0x0A	FM Radio	ANALOG_RADIO
0x0B	NTSC coded signal	ANALOG_TV
0x0C	Data broadcast service	DATA_BROADCAST
0x10	MHP application service	DATA_APPLICATION
0x00, 0x0D…0x0F, 0x11…0xFF		UNKNOWN

O.2.4 javax.tv.service.StreamType

The DVB SI stream_content and component_type values are defined in Table 15 of EN 300 468 [4]. These should be mapped to the JavaTV Stream types as follows. If the component does not have an associated Component descriptor, but a Data broadcast descriptor, the stream type DATA shall be used.

Table O.2 : Mapping DVB stream & component types to JavaTV

DVB stream_content	DVB component_type	JavaTV Stream type
0x01	0x00…0xff	VIDEO
0x02	0x00…0xff	AUDIO
0x03	0x01, 0x10…0x13, 0x20…0x23	SUBTITLES
0x03	0x02	DATA
0x03	0x00, 0x14…0x1F, 0x23…0xFF	UNKNOWN
0x04…0x0F	0x00…0xFF	UNKNOWN

O.2.5 javax.tv.service.SIElement

This interface is implemented by objects implementing the Network, Bouquet, TransportStream, ServiceDetails, ServiceComponent and ProgramEvent interfaces.

O.2.5.1 getServiceInformationType

This method shall return the DVB_SI ServiceInformationType.

O.2.6 javax.tv.service.SIManager

O.2.6.1 getSupportedDimensions

The parental rating descriptor defined in DVB SI standardizes one rating scheme that is based on age. To describe this DVB defined rating scheme, the getSupportedDimensions shall return an array that contains the string "DVB Age based rating".

O.2.6.2 getRatingDimension

When given the string "DVB Age based rating", this method shall return an object implementing the RatingDimension interface as described in section O.2.10, "javax.tv.service.navigation.RatingDimension" on page 620.

O.2.6.3 retrieveSIElement

When passed a locator that points to a service, an object implementing the ServiceDetails interface shall be returned. Other types of locators are not supported.

O.2.6.4 getTransports

The object returned by this method shall implement the Transport interface as described in O.2.12, "javax.tv.service.transport.Transport" on page 620.

O.2.6.5 filterServices

Filtering of Services shall be supported with ServiceFilters. The SIElementFilter is required to be supported as defined in O.2.7, "javax.tv.service.navigation.SIElementFilter" on page 619

O.2.7 javax.tv.service.navigation.SIElementFilter

The SIElementFilter allows filtering of Services based on another SIElement. This filter type shall be supported for the Network and TransportStream objects. For other SIElement objects, the constructor may throw FilterNotSupportedException.

O.2.8 javax.tv.service.navigation.ServiceDetails

The ServiceDetails interface represents the information regarding the service as retrieved from the broadcast DVB SI. The object implementing this interface for DVB SI implements the CAIdentification interface according to the mapping defined in section O.2.9, "javax.tv.service.navigation.CAIdentification" on page 620. These objects shall not implement the ServiceNumber interface.

O.2.8.1 getLongName

Returns the full name of the service from the Service descriptor or from the Multilingual service name descriptor using the language preference.

O.2.8.2 getServiceType

Returns the ServiceType according to the mapping defined in section O.2.3, "javax.tv.service.ServiceType" on page 618.

O.2.8.3 retrieveServiceDescription

Shall always result in a notifyFailure of the SIRequestor object being called with the DATA_UNAVAILABLE SIRequestFailureType, as DVB SI does not include a service description.

O.2.8.4 retrieveComponents

The information for the ServiceComponents shall be retrieved from Component descriptors (or their multilingual variants or the Data broadcast descriptor for data components) of the present event in the EIT present/following table.

O.2.9 javax.tv.service.navigation.CAIdentification

This interface shall be implemented by objects implementing the ServiceDetails, ProgramEvent or Bouquet interface.

O.2.9.1 getCASystemIds

Returns the array of integer values containing the CA_system_ids from the CA identifier descriptor. If the CA identifier descriptor is not present, returns an empty array.

O.2.9.2 isFree

When implemented in an object implementing the ServiceDetails or ProgramEvent interface, this method shall return true if and only if the free_CA_mode bit is set to "0" in the SDT or EIT entry, respectively.

When implemented in an object implementing the Bouquet interface, this method shall return true if and only if there is no CA identifier descriptor present in the BAT.

O.2.10 javax.tv.service.navigation.RatingDimension

The Parental rating descriptor defined in DVB SI standardizes one rating scheme that is based on age. This rating scheme contains 15 distinct age rating levels from 4 to 18 years.

An object that describes this DVB defined rating scheme shall implement the methods as follows.

O.2.10.1 getDimensionName

Returns the string "DVB Age based rating".

O.2.10.2 getNumberOfLevels

Returns 15.

O.2.10.3 getRatingLevelDescription

Returns an array of 2 strings of the form:

{"Over *n*", "Recommended minimum age: *n* years"}

where n is the input parameter + 4.

O.2.11 javax.tv.service.navigation.ServiceProviderInformation

This interface shall be implemented by objects implementing the ServiceDetails interface.

O.2.11.1 getProviderName

Returns the service provider name from the Service descriptor or from the Multilingual service name descriptor using the language preference.

O.2.12 javax.tv.service.transport.Transport

The object implementing the Transport interface shall also implement the interfaces NetworkCollection and BouquetCollection.

O.2.13 javax.tv.service.transport.Bouquet

The Bouquet interface is implemented by an object that represents a DVB SI Bouquet.

Objects implementing this interface shall also implement the CAIdentification interface. See O.2.9, "javax.tv.service.navigation.CAIdentification" on page 620.

O.2.13.1 getBouquetID

Returns the integer DVB SI Bouquet ID value.

O.2.13.2 getName

Returns the name of the bouquet from the Bouquet name descriptor or from the Multilingual bouquet name descriptor using the language preference.

O.2.13.3 getLocator

Returns an implementation dependent javax.tv.locator.Locator object that does not have a standardized external representation and might not be a org.davic.net.dvb.DvbLocator.

O.2.14 javax.tv.service.transport.Network

The Network interface is implemented by an object that represents a DVB SI Network.

O.2.14.1 getNetworkID

Returns the integer DVB SI Network ID value.

O.2.14.2 getName

Returns the name of the network from the Network name descriptor or from the Multilingual network name descriptor using the language preference.

O.2.14.3 getLocator

Returns an implementation dependent javax.tv.locator.Locator object that does not have a standardized external representation and might not be a org.davic.net.dvb.DvbLocator.

O.2.15 javax.tv.service.transport.TransportStream

The TransportStream interface is implemented by an object that represents a transport stream.

O.2.15.1 getTransportStreamID

Returns the integer DVB SI transport stream ID value.

O.2.15.2 getDescription

Transport streams do not have descriptions in DVB SI, so this method shall return an empty string.

O.2.16 javax.tv.service.guide.ProgramEvent

This interface is implemented by objects representing DVB SI Events.

Objects implementing this interface shall also implement the CAIdentification interface. See O.2.9, "javax.tv.service.navigation.CAIdentification" on page 620.

O.2.16.1 getDuration

Returns the duration value from the event entry in the body of the EIT.

O.2.16.2 getStartTime

Returns the start time value from the event entry in the body of the EIT.

O.2.16.3 getEndTime

Returns the end time value calculated from the start time and duration in the body of the EIT.

O.2.16.4 getName

Returns the event name from one of the Short event descriptors in the event using the language preference.

O.2.16.5 retrieveDescription

Returns the event description from one of the Short event descriptors in the event using the language preference.

The description text in the `ProgramEventDescription` object is just passed through as a String containing the description as it was transmitted in the EIT table with just a character set mapping performed.

Codes 0x8a and 0xe08a defined in tables A.1 and A.2 of EN 300 468 [4] shall be mapped to the Java newline character, '\n'.

O.2.16.6 getRating

Returns the rating from the Parental rating descriptor according to the mapping defined in section O.2.17, "javax.tv.service.guide.ContentRatingAdvisory" on page 622.

O.2.17 javax.tv.service.guide.ContentRatingAdvisory

O.2.17.1 getDimensionNames

Returns an array containing the string "DVB Age based rating" as one of the elements in the array.

O.2.17.2 getRatingLevel

When the parameter is "DVB Age based rating" and the parental rating descriptor contains a rating value between 0x01 and 0x0F for the current region, returns the integer rating value contained in the parental rating descriptor decremented by one (i.e. the value in the descriptor - 1). In other cases when the parameter is "DVB Age based rating" returns -1.

O.2.17.3 getRatingText

When the parameter is "DVB Age based rating" and the parental rating descriptor contains a rating value between 0x01 and 0x0F for the current region, returns a string of the form "Recommended minimum age: n years" where n is the rating value in the descriptor incremented by 4 (i.e. the value in the descriptor + 4). In other cases when the parameter is "DVB Age based rating" returns an empty string.

O.2.17.4 getDisplayText

When the parental rating descriptor contains a rating value between 0x01 and 0x0F for the current region, returns a string that contains the string "Over n", where n is the rating value in the descriptor incremented by 4 (i.e. the value in the descriptor + 4), as its substring.

O.3 Integration of the JavaTV SI API and the DVB SI API

In order for the protocol independent service information API to be useful, there needs to be an easy and convenient way for applications to use the DVB specific parts when they are needed. The information provided in the protocol independent API is quite minimal and does not cover all the aspects of the standardized DVB Service Information nor access to the private extensions carried in the standard protocol. If there is no integration between these APIs and the application programmer needs to use a completely different API to retrieve additional information on the object retrieved from the protocol independent API, the usefulness of the protocol independent API is very questionable. In this case, the application programmer will start using only the protocol dependent API, as it provides the complete information and is as easy to use as the other API.

To overcome these problems and make the protocol independent API somehow useful, it needs to be well integrated with the protocol dependent API, so that if an application uses first the protocol independent API for browsing the information, it can easily get additional, protocol dependent information on the objects of interest.

The Java language provides an easy way to achieve this integration: the same objects can implement both the protocol independent interface as well as the protocol dependent interface. This way the application programmer only needs to cast the object to the protocol dependent interface and can directly call methods from the protocol specific API.

Objects implementing the following interfaces of the DVB SI API should implement also the corresponding JavaTV SI API interfaces. When retrieving SI objects through the JavaTV APIs, they shall also implement the corresponding DVB SI API interfaces.

The interfaces of both APIs shall be implemented on the objects as follows:

Table O.3 :

org.dvb.si.SINetwork	objects implement also	javax.tv.service.transport.Network
org.dvb.si.SIBouquet	objects implement also	javax.tv.service.transport.Bouquet
org.dvb.si.SITransportStreamNIT	objects implement also	javax.tv.service.transport.TransportStream
org.dvb.si.SIService	objects implement also	javax.tv.service.navigation.ServiceDetails
org.dvb.si.SIEvent	objects implement also	javax.tv.service.guide.ProgramEvent

Annex P (normative): Broadcast Transport Protocol Access

The Object Carousel represents the best suited protocol to carry a structure of objects. Thus, the Object Carousel "mimics" a remote server.

The structure of the objects carried in an Object Carousel is identical to the structure of UU-Objects located on a remote DSMCC-UU Server.

The aim of this API is to enable an application to access files encapsulated in an object carousel or accessible through a DSMCC interactive network. Note that the protocol is abstracted from the application viewpoint, so, objects accessible through this API are either objects encapsulated in an Object Carousel, or Objects located in an interactive DSMCC network on a remote server.

To benefit from the fact that most of the functionalities are already covered by the java.io package, this API inherits from java.io and only defines the extra-functionalities pertaining to:

a) the nature of the network (broadcast or DSMCC remote server) and its latency (e.g. possibility to asynchronously load the objects)

b) the type of the objects that can be encapsulated in a carousel and that do not exist in a classical File structure. These are: ServiceGateway, Directory, File, Stream and StreamEvent.

c) Definition of ServiceGateway, which defines a new namespace corresponding to the new Domain, and enables the mounting of a new volume.

An application can optionally use only the classes of java.io. Alternatively/additionally applications can use additional classes and methods adapted to the specific nature and latency of the network (such as for example, the asynchronous loading of objects).

The following, briefly explains the functionalities offered by this API

The ServiceDomain class enables attaching to a ServiceDomain. Attachment to a serviceDomain corresponds to the mounting of a volume in the file hierarchy system and the loading of the Service Gateway.

When attached to a Service Domain the DSM-CC UU-File, UU-Stream, UU-Directory and UU-StreamEvent objects are accessible through this API.

The class DSMCCObject represents a UU-object. Due to the close relationship between resident files and downloaded files, this class inherits from the java.io.File class. The DSMCCObject class just defines the additional methods specific to DSMCC-UU that basically deal with asynchronous or synchronous loading of Objects.

For the UU-Files or UU-Directory Objects, their content is accessible as it would be for a classical file system, that means through the classical JDK java.io package (e.g., for listing the objects pointed to by a Directory object, you invoke the list() method of the java.io.File class, or to access the content of a UU-File, you can instantiate a FileInputStream to read the File, etc…).

Additionally, the DSMCCStream and DSMCCStreamEvent classes define functionalities specific to the respective types of Objects (Stream and StreamEvent), which basically consists in accessing the attributes of these Objects.

The DSMCCStream class provides access to the following attributes Duration, current NPT. In addition, an application can retrieve the list of Taps (modelized by the 'Locator' class), in order for a Player to be able to control and play that Stream.

The DSMCCStreamEvent class inherits from the DSMCCStream class, and provides access to the event list attributes of a StreamEvent Object. In addition, the application has the possibility to subscribe the events which are present in the eventList.

The AsynchronousLoadingEvent class and its subclasses represent events that are sent to a listener to notify it of the loading of an Object that had been activated by the application (asynchronous loading mode).

The StreamEvent class represents an abstraction of the real event that is generated, i.e. the streameventdescriptor, which enables the broadcaster to synchronize the application with the stream. This class enables the access to the content of an event, the content of the event being described by the StreamEventDescriptor, which is inserted in the stream in DSMCC sections at the transport level.

Finally, the StreamEventListener and AsynchronousLoadingEventListener are interfaces that must be implemented by the application, in order for it to receive the respective StreamEvents and AsynchronousLoadingEvents.

Package
org.dvb.dsmcc

Description

Provides extended access to files carried in the broadcast stream. It includes some extensions to java.io which are generic to (possibly) long-latency file systems and some concepts which are specific to the DSMCC object carousel.

Class Summary

Interfaces

AsynchronousLoadingEventListener	Listener for applications which perform asynchronous loading, in order to be informed if the loading is done or if an error has occurred.
NPTListener	Objects that implement the `NPTListener` interface can receive `NPTEvent` events.
ObjectChangeEventListener	The objects that implements the ObjectChangeEventListener interface can receive ObjectChangeEvent event.
StreamEventListener	Objects that implement the StreamEventListener interface can receive StreamEvent event.

Classes

AsynchronousLoadingEvent	This class described an Object event which is used to notify the loading of a DSMCC object.
DSMCCObject	A DSMCCObject is an object which belongs to a DSMCC ServiceDomain.
DSMCCStream	The Stream class is used to manage DSMCC Stream Objects.
DSMCCStreamEvent	The DSMCCStreamEvent class is used to manage DSMCC StreamEvent Objects.
InvalidFormatEvent	This event is generated if the format of the data received is inconsistent.
InvalidPathnameEvent	The pathname does not exist or the ServiceDomain has been detached.
LoadingAbortedEvent	This event will be sent to the AsynchronousEventListener when an asynchronous loading operation is aborted.
MPEGDeliveryErrorEvent	An MPEGDeliveryErrorEvent indicates that an error (for instance, a time out or accessing the data would require tuning) has occurred while loading data from an MPEG Stream.
NotEntitledEvent	This event is sent when an attempt to asynchronously load an object has failed because the elementary stream carrying the object is scrambled and the user is not entitled to access the content of the object.
NPTDiscontinuityEvent	Sent when an MHP terminal detects a permanent discontinuity in NPT as defined in the main body of this specification.
NPTPresentEvent	Sent when NPT newly appears in a stream where it was not previously present.
NPTRate	Represents the rate at which an NPT time-base progresses.
NPTRateChangeEvent	Sent only when the rate of an NPT time-base changes value.
NPTRemovedEvent	Sent when NPT which was present is removed from a stream.

Class Summary	
NPTStatusEvent	Sent when an MHP terminal detects a change of status in the NPT of a stream.
ObjectChangeEvent	This class describes an object change event that is used to monitor the arrival of a new version of a DSMCCObject.
ServerDeliveryError-Event	The local machine can not communicate with the server.
ServiceDomain	A ServiceDomain represents a group of DSMCC objects.
ServiceXFRErrorEvent	The object requested is available in an alternate ServiceDomain.
ServiceXFRReference	A ServiceXFRReference object is used when a DSMCC Object can not be loaded in the current ServiceDomain but is available in an alternate Service-Domain.
StreamEvent	This class describes a Stream event which is used to synchronize an application with an MPEG Stream.
SuccessEvent	This event indicates that the asynchronous loading was successful.
Exceptions	
DSMCCException	The DSMCCException is the root class of all DSMCC related exceptions
IllegalObjectTypeEx-ception	This Exception is thrown when the application attempted to create a DSM-CCStream or DSMCCStreamEvent object with an object or a path that did not correspond to a DSMCC Stream or DSMCC StreamEvent respectively
InsufficientResource-sException	This exception gets thrown when a request to subscribe to a stream event cannot be completed due to resource limitations.
InvalidAddressExcep-tion	An InvalidAddressException is thrown when the format of an NSAP address is not recognized.
InvalidFormatExcep-tion	An InvalidFormatException is thrown when an inconsistent DSMCC message is received.
InvalidPathNameExcep-tion	The InvalidPathNameException is thrown when the path name to a DSMC-CObject does not exist or if the ServiceDomain has been detached.
MPEGDeliveryException	An MPEGDEliveryException is thrown when an error (for instance, a time out or accessing the data would require tuning) occurs while loading data from an MPEG Stream.
NotEntitledException	This Exception is thrown when the user is not entitled to access the content of the object (the Elementary Stream is scrambled and the user is not entitled).
NothingToAbortExcep-tion	A NothingToAbortException is thrown when the abort method is called and there is no loading in progress.
NotLoadedException	A NotLoadedException is thrown when the Stream object constructor is called with a DSMCC Object which is not loaded.
ServerDeliveryExcep-tion	A ServerDeliveryException is thrown when the local machine can not communicate with the server.
ServiceXFRException	A ServiceXFRException is thrown when a DSMCC Object can not be loaded in the current ServiceDomain but is available in an alternate ServiceDomain (i.e.
UnknownEventException	The UnknownEventException is thrown when a method tries to access to an unknown event.

org.dvb.dsmcc
AsynchronousLoadingEvent

Syntax
```
public abstract class AsynchronousLoadingEvent extends java.util.EventObject

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--org.dvb.dsmcc.AsynchronousLoadingEvent
```

Direct Known Subclasses:
InvalidFormatEvent, InvalidPathnameEvent, LoadingAbortedEvent, MPEGDeliveryErrorEvent, NotEntitledEvent, ServerDeliveryErrorEvent, ServiceXFRErrorEvent, SuccessEvent

All Implemented Interfaces:
java.io.Serializable

Description
This class described an Object event which is used to notify the loading of a DSMCC object.

Constructors

AsynchronousLoadingEvent(DSMCCObject)

```
public AsynchronousLoadingEvent(DSMCCObject o)
```

Creates an AsynchronousLoadingEvent.

Parameters:
o - the DSMCCObject that generated the event.

Methods

---

getSource()

```
public java.lang.Object getSource()
```

Returns the DSMCCObject that generated the event.

Overrides:
java.util.EventObject.getSource() in class java.util.EventObject

Returns:
the DSMCCObject that generated the event.

org.dvb.dsmcc
AsynchronousLoadingEventListener

Syntax

```
public interface AsynchronousLoadingEventListener extends java.util.EventListener
```

All Superinterfaces:

java.util.EventListener

Description

Listener for applications which perform asynchronous loading, in order to be informed if the loading is done or if an error has occurred.

Methods

---

receiveEvent(AsynchronousLoadingEvent)

```
public void receiveEvent(AsynchronousLoadingEvent e)
```

Method called when an event is sent to the application.

Parameters:

`e` - an AsynchronousLoadingEvent event.

org.dvb.dsmcc
DSMCCException

Syntax
```
public class DSMCCException extends java.io.IOException

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--java.io.IOException
                    |
                    +--org.dvb.dsmcc.DSMCCException
```

Direct Known Subclasses:
IllegalObjectTypeException, InsufficientResourcesException, InvalidAddressException, InvalidFormatException, InvalidPathNameException, MPEGDeliveryException, NotEntitledException, NothingToAbortException, NotLoadedException, ServerDeliveryException, ServiceXFRException, UnknownEventException

All Implemented Interfaces:
java.io.Serializable

Description
The DSMCCException is the root class of all DSMCC related exceptions

Constructors

DSMCCException()

```
public DSMCCException()
```

Construct a DSMCCException with no detail message

DSMCCException(String)

```
public DSMCCException(java.lang.String s)
```

Construct a DSMCCException with the specified detail message

Parameters:
s - the detail message

org.dvb.dsmcc
DSMCCObject

Syntax
```
public class DSMCCObject extends java.io.File

java.lang.Object
  |
  +--java.io.File
        |
        +--org.dvb.dsmcc.DSMCCObject
```

All Implemented Interfaces:
java.io.Serializable

Description
A DSMCCObject is an object which belongs to a DSMCC ServiceDomain. As soon as a ServiceDomain has been attached to the file system hierarchy, DSMCCObject objects can be created to access the ServiceDomain objects. Paths used to create a DSMCCObject can be either absolute or relative as defined in detail in the main body of this specification. To access the content of the object:

- For a Directory, the method list of the java.io.File class has to be used to get the entries of the directory.
- For a Stream object, the class DSMCCStream has to be used.
- For a File, the java.io.FileInputStream class or the java.io.RandomAccessFile has to be used.

NB:

- Obviously, for the Object Carousel, the write mode of java.io.RandomAccessFile is not allowed.

See Also:
ServiceDomain

Fields

FROM_CACHE

```
public static final int FROM_CACHE
```

Constant to indicate that the data for an object shall only be retrieved where it is already in cache and meets the requirements of cache priority signaling. Where data is not in the cache, or the contents don't meet the requirements of the of cache priority signaling, attempts to load a `DSMCCObject` shall fail.

Since:
MHP 1.0.1

FROM_CACHE_OR_STREAM

```
public static final int FROM_CACHE_OR_STREAM
```

Constant to indicate that the data for an object shall be automatically be retrieved from the network where the data is not already cached. Note that this method does not modify the caching policy controlled by the signaling in the OC. So, if the data is signalled as requiring transparent caching then data will be retrieved from the network if required.

Since:
MHP 1.0.1

FROM_STREAM_ONLY

```
public static final int FROM_STREAM_ONLY
```

Constant to indicate that the data for an object shall always be retrieved from the network even if the data has already been cached.

Since:
MHP 1.0.1

Constructors

DSMCCObject(DSMCCObject, String)

```
public DSMCCObject(DSMCCObject dir, java.lang.String name)
```

Create a DSMCCObject object.

Parameters:
`dir` - the directory object.

`name` - the filename.

DSMCCObject(String)

```
public DSMCCObject(java.lang.String path)
```

Create a DSMCCObject object.

Parameters:
`path` - the path to the file.

DSMCCObject(String, String)

```
public DSMCCObject(java.lang.String path, java.lang.String name)
```

Create a DSMCCObject object.

Parameters:
`path` - the directory Path.

`name` - the filename.

Methods

---

abort()

```
public void abort()
```

This method is used to abort a load in progress. It can be used to abort either a synchronousLoad or an asynchronousLoad.

Throws:

NothingToAbortException - There is no loading in progress.

---

addObjectChangeEventListener(ObjectChangeEventListener)

```
public void addObjectChangeEventListener(ObjectChangeEventListener listener)
```

Subscribes an ObjectChangeEventListener to receive notifications of version changes of DSMCCObject.

This listener shall never be fired until after the object has successfully entered the loaded state for the first time. Hence objects which never successfully enter the loaded state (e.g. because the object cannot be found) shall never have this listener fire. Once an object has successfully entered the loaded state once, this event shall continue to be fired when changes are detected by the MHP regardless of further transitions in or out of the loaded state.

Parameters:

listener - the ObjectChangeEventListener to be notified .

---

asynchronousLoad(AsynchronousLoadingEventListener)

```
public void asynchronousLoad(AsynchronousLoadingEventListener l)
```

This method is used to asynchronously load a carousel object. For each call to this method which returns without throwing an exception, one of the following events will be sent to the application (by a listener mechanism) as soon as the loading is done or if an error has occurred: SuccessEvent, InvalidFormatEvent, InvalidPathNameEvent, MPEGDeliveryErrorEvent, ServerDeliveryErrorEvent, ServiceXFRErrorEvent, NotEntitledEvent

Parameters:

l - an AsynchronousLoadingEventListener to receive events related to asynchronous loading.

Throws:

InvalidPathNameException - the object can not be found.

---

getSigners()

```
public java.security.cert.X509Certificate[][] getSigners()
```

This method will return the lists of certificate chains that can authenticate the DSMCCObject. If the DSMCCObject is not loaded, this method will return null. If the DSMCCObject is loaded but not authenticated this method will return an outer array of size zero.

Returns:

a two-dimensional array of X.509 certificates, where the first index of the array determines a certificate chain and the second index identifies the certificate within the chain. Within one certificate chain the leaf certificate is first followed by any intermediate certificate authorities in the order of the chain with the root CA certificate as the last item.

Since:

MHP 1.0.1

---

getURL()

```
public java.net.URL getURL()
```

Returns a URL identifying this carousel object. If the directory entry for the object has not been loaded then null shall be returned.

Returns:

a URL identifying the carousel object or null

Since:
MHP 1.0.1

---

isLoaded()

```
public boolean isLoaded()
```

Returns a boolean indicating whether or not the DSMCCObject has been loaded.

Returns:
true if the file is already loaded, false otherwise.

---

isObjectKindKnown()

```
public boolean isObjectKindKnown()
```

Returns a boolean indicating if the kind of the object is known. (The kind of an object is known if the directory containing it is loaded).

Returns:
true if the type of the object is known, false otherwise.

---

isStream()

```
public boolean isStream()
```

Returns a boolean indicating whether or not the DSMCCObject is a DSMCC Stream object.

Returns:
true if the file is a stream, false if the object is not a stream or if the object kind is unknown.

---

isStreamEvent()

```
public boolean isStreamEvent()
```

Returns a boolean indicating whether or not the DSMCCObject is a DSMCC StreamEvent object. NB: If isStreamEvent is true then isStream is true also.

Returns:
true if the file is a stream event, false if the object is not a stream event or if the object kind is unknown.

---

loadDirectoryEntry(AsynchronousLoadingEventListener)

```
public void loadDirectoryEntry(AsynchronousLoadingEventListener l)
```

Asynchronous loading of the directory entry information. Calling this is equivalent of calling the method `asynchronousLoad` on the parent directory of a `DSMCCObject`.

Parameters:
`l` - a listener which will be called when the loading is done.

Throws:
`InvalidPathNameException` - if the object cannot be found.

---

prefetch(DSMCCObject, String, byte)

```
public static boolean prefetch(DSMCCObject dir, java.lang.String path, byte priority)
```

Calling this method will issue a hint to the MHP for pre-fetching the object data for that DSMCC object into cache.

Parameters:

`dir` - the directory object in which to pre-fetch the data.

`path` - the relative path name of object to pre-fetch, starting from the directory object passes as parameter.

`priority` - the relative priority of this pre-fetch request (higher = more important)

Returns:

true if the MHP supports pre-fetching (i.e. will try to process the request) and false otherwise. Note that a return value of 'true' is only an indication that the MHP receiver supports pre-fetching. It is not a guarantee that the requested data will actually be loaded into cache as the receiver may decide to drop the request in order to make resources available for regular load requests.

---

prefetch(String, byte)

```
public static boolean prefetch(java.lang.String path, byte priority)
```

Calling this method will issue a hint to the MHP for pre-fetching the object data for that DSMCC object into cache.

Parameters:

`path` - the absolute pathname of the object to pre-fetch.

`priority` - the relative priority of this pre-fetch request (higher = more important)

Returns:

true if the MHP supports pre-fetching (i.e. will try to process the request) and false otherwise. Note that a return value of 'true' is only an indication that the MHP receiver supports pre-fetching. It is not a guarantee that the requested data will actually be loaded into cache as the receiver may decide to drop the request in order to make resources available for regular load requests.

---

removeObjectChangeEventListener(ObjectChangeEventListener)

```
public void removeObjectChangeEventListener(ObjectChangeEventListener listener)
```

Unsubscribes an ObjectChangeEventListener to receive notifications of version changes of DSMCCObject.

Parameters:

`listener` - a previously registered ObjectChangeEventListener.

---

setRetrievalMode(int)

```
public void setRetrievalMode(int retrieval_mode)
```

Set the retrieval mode for a `DSMCCObject`. The default retrieval mode is FROM_CACHE_OR_STREAM. The retrieval mode state is sampled when the object is loaded (whether explicitly or as described in "Constraints on the java.io.File methods for broadcast carousels"). Changing the retrieval mode for a loaded object has no effect until the object is unloaded and loaded again.

Parameters:

`retrieval_mode` - the retrieval mode to be used for the object specified as one of the public static final constants in this class.

Throws:

`IllegalArgumentException` - if the retrieval_mode specified is not one listed defined for use with this method.

Since:

MHP 1.0.1

---

synchronousLoad()

```
public void synchronousLoad()
```

This method is used to load a DSMCCObject. This method blocks until the file is loaded. It can be aborted from another thread with the abort method. In this case the InterruptedIOException is thrown. If the IOR of the object itself or one of its parent directories is a Lite Option Profile Body, the MHP implementation will not attempt to resolve it: a ServiceXFRException is thrown to indicate to the application where the DSMCCObject is actually located.

Throws:

`InterruptedIOException` - the loading has been aborted.

`InvalidPathNameException` - the Object can not be found.

`NotEntitledException` - the stream carrying the object is scrambled and the user has no entitlements to descramble the stream.

`ServiceXFRException` - the IOR of the object or one of its parent directories is a Lite Option Profile Body.

`InvalidFormatException` - an inconsistent DSMCC message has been received.

`MPEGDeliveryException` - an error has occurred while loading data from MPEG stream such as a timeout

`ServerDeliveryException` - when an MHP terminal cannot communicate with the server for files delivered over a bi-directional IP connection.

---

unload()

```
public void unload()
```

When calling this method, the applications gives a hint to the MHP that if this object is not consumed by another application/thread, the system can free all the resources allocated to this object. It is worth noting that if other clients use this object (e.g. a file input stream is opened on this object or if the corresponding stream or stream event is being consumed) the system resources allocated to this object will not be freed.

Throws:

`NotLoadedException` - the carousel object is not loaded.

org.dvb.dsmcc
DSMCCStream

Syntax
```
public class DSMCCStream

java.lang.Object
  |
  +--org.dvb.dsmcc.DSMCCStream
```

Direct Known Subclasses:
DSMCCStreamEvent

Description
The Stream class is used to manage DSMCC Stream Objects.

See Also:
DSMCCObject

Constructors

DSMCCStream(DSMCCObject)

```
public DSMCCStream(DSMCCObject aDSMCCObject)
```

Creates a Stream Object from a DSMCC Object. The BIOP message referenced by the DSMCCObject has to be a Stream or StreamEvent BIOP message.

Parameters:
aDSMCCObject - the DSMCC object which describes the stream

Throws:
NotLoadedException - the DSMCCObject is not loaded.

IllegalObjectTypeException - the DSMCCObject is neither a DSMCC Stream nor a DSMCCStreamEvent

---

DSMCCStream(String)

```
public DSMCCStream(java.lang.String path)
```

Create a Stream Object from its pathname. For an object Carousel, this method will block until the module which contains the object is loaded. The BIOP message referenced by the DSMCCObject pointed to by the parameter path has to be a Stream or StreamEvent BIOP message. The path has to lead to a DSMCCStream (or a DSMCCStreamEvent)

Parameters:
path - the pathname of the DSMCCStream Object.

Throws:
IOException - If an IO error occurred.

IllegalObjectTypeException - the DSMCCObject is neither a DSMCC Stream nor a DSMCCStreamEvent

DSMCCStream(String, String)

```
public DSMCCStream(java.lang.String path, java.lang.String name)
```

Create a DSMCCStream from its pathname. For an object Carousel, this method will block until the module which contains the object is loaded. The BIOP message referenced by the DSMCCObject pointed to be the parameters path and name has to be a Stream or StreamEvent BIOP message. The path has to lead to a DSMCCStream (or a DSMCCStreamEvent)

Parameters:

`path` - the directory path.

`name` - the name of the DSMCCStream Object.

Throws:

`IOException` - If an IO error occurred.

`IllegalObjectTypeException` - the DSMCCObject is neither a DSMCC Stream nor a DSMCCStreamEvent

Methods

addNPTListener(NPTListener)

```
public void addNPTListener(NPTListener l)
```

Add a listener to NPT events on the `DSMCCStream` object. Adding the same listener a second time has no effect.

Parameters:

`l` - the listener

Since:

MHP 1.0.1

getDuration()

```
public long getDuration()
```

This function returns the duration in milliseconds of the DSMCC Stream. If the DSMCCStream BIOP message doesn't specify duration, zero will be returned.

Returns:

The duration in milliseconds of the DSMCC Stream.

getNPT()

```
public long getNPT()
```

This function is used to get the current NPT in milliseconds.

Returns:

the current NPT in milliseconds or zero if DSMCC Stream object BIOP message doesn't contain any taps pointing to NPT reference descriptors.

Throws:

`MPEGDeliveryException` - if there's an error in retrieving NPT reference descriptors

---

getNPTRate()

```
public NPTRate getNPTRate()
```

Get the NPT rate for the `DSMCCStream` object. Returns null if the DSMCC stream has no associated NPT rate (i.e. no STR_NPT_USE tap in the list of taps).

Returns:
the NPT rate or null

Since:
MHP 1.0.1

---

getStreamLocator()

```
public org.davic.net.Locator getStreamLocator()
```

This function returned a Locator referencing the streams of this collection. The interpretation of the return value is determined by the `isMPEGProgram` method.

Returns:
a locator.

---

isAudio()

```
public boolean isAudio()
```

This function returns a boolean indicating if the Stream Object refers to an audio stream. This is the case if the audio field in the Stream(Event) BIOP message has a value different from zero.

Returns:
true only if the Stream object refers to an audio stream

---

isData()

```
public boolean isData()
```

This function returns a boolean indicating if the Stream Object refers to a data stream. This is the case if the data field in the Stream(Event) BIOP message has a value different from zero.

Returns:
true only if the Stream object refers to a data stream

---

isMPEGProgram()

```
public boolean isMPEGProgram()
```

This method will return true if the Stream(Event) BIOP message contains a tap with use field BIOP_PROGRAM_USE, otherwise it will return false.

Returns:
true only if the Stream(Event) BIOP message is as described above

---

isVideo()

```
public boolean isVideo()
```

This function returns a boolean indicating if the Stream Object refers to an video stream. This is the case if the `video' field in the Stream(Event) BIOP message has a value different from zero otherwise false is returned.

Returns:
true only if the Stream object refers to an video stream

---

removeNPTListener(NPTListener)

```
public void removeNPTListener(NPTListener l)
```

Remove a listener to NPT events on the `DSMCCStream` object. Removing a non-subscribed listener has no effect.

Parameters:
`l` - the listener to remove

Since:
MHP 1.0.1

org.dvb.dsmcc
DSMCCStreamEvent

Syntax

```
public class DSMCCStreamEvent extends DSMCCStream

java.lang.Object
  |
  +--DSMCCStream
        |
        +--org.dvb.dsmcc.DSMCCStreamEvent
```

Description

The DSMCCStreamEvent class is used to manage DSMCC StreamEvent Objects. Applications wishing to monitor changes in the list of events which are part of this stream event should use `DSMCCObject.addObjectChangeEventListener` on the `DSMCCObject` representing which describes this set of stream events.

Constructors

DSMCCStreamEvent(DSMCCObject)

```
public DSMCCStreamEvent(DSMCCObject aDSMCCObject)
```

Create a `DSMCCStreamEvent` from a `DSMCCObject`. The Object has to be a DSMCC StreamEvent.

Parameters:

`aDSMCCObject` - the DSMCC object which describes the stream.

Throws:

`NotLoadedException` - the DSMCCObject is not loaded.

`IllegalObjectTypeException` - the DSMCCObject does not lead to a DSMCC StreamEvent.

DSMCCStreamEvent(String)

```
public DSMCCStreamEvent(java.lang.String path)
```

Create a DSMCCStreamEvent Object from its pathname. The path has to lead to a DSMCCStreamEvent.

Parameters:

`path` - the pathname of the DSMCCStreamEvent object

Throws:

`IOException` - An IO error has occurred.

`IllegalObjectTypeException` - the path does not lead to a DSMCC StreamEvent.

DSMCCStreamEvent(String, String)

```
public DSMCCStreamEvent(java.lang.String path, java.lang.String name)
```

Create a DSMCCStreamEvent from its pathname. For an object Carousel, this method will block until the module which contains the object is loaded. The path has to lead to a DSMCC Stream Event

Parameters:

`path` - the directory path.

`name` - the name of the DSMCCStreamEvent Object.

Throws:

`IOException` - If an IO error occurred.

`IllegalObjectTypeException` - the path does not lead to a DSMCC StreamEvent.

Methods

---

getEventList()

```
public java.lang.String[] getEventList()
```

This function is used to get the list of the events of the DSMCCStreamEvent object.

Returns:

The list of the eventName.

---

subscribe(String, StreamEventListener)

```
public synchronized int subscribe(java.lang.String eventName, StreamEventListener l)
```

This function is used to subscribe to an event of a DSMCC StreamEvent object.

Parameters:

`eventName` - the name of the event.

`l` - an object that implements the StreamEventListener Interface.

Returns:

The event Identifier.

Throws:

`UnknownEventException` - the event cannot be found at this time

`InsufficientResourcesException` - if resources needed to perform the subscription are not available

---

unsubscribe(int, StreamEventListener)

```
public synchronized void unsubscribe(int eventId, StreamEventListener l)
```

This function is used to cancel the subscription to an event of a DSMCCEvent object.

Parameters:

`eventId` - Identifier of the event.

`l` - an object that implements the StreamEventListener Interface.

Throws:

`UnknownEventException` - The event can not be found.

unsubscribe(String, StreamEventListener)

```
public synchronized void unsubscribe(java.lang.String eventName, StreamEventListener l)
```

This function is used to cancel the subscription to an event of a DSMCCEvent object.

Parameters:

`eventName` - the name of the event.

`l` - an object that implements the StreamEventListener Interface.

Throws:

`UnknownEventException` - The event can not be found.

org.dvb.dsmcc
IllegalObjectTypeException

Syntax

```
public class IllegalObjectTypeException extends DSMCCException
```

```
java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--java.io.IOException
                    |
                    +--DSMCCException
                          |
                          +--org.dvb.dsmcc.IllegalObjectTypeException
```

All Implemented Interfaces:

java.io.Serializable

Description

This Exception is thrown when the application attempted to create a DSMCCStream or DSMCCStreamEvent object with an object or a path that did not correspond to a DSMCC Stream or DSMCC StreamEvent respectively

Constructors

IllegalObjectTypeException()

```
public IllegalObjectTypeException()
```

constructor of the exception with no detail message

IllegalObjectTypeException(String)

```
public IllegalObjectTypeException(java.lang.String s)
```

constructor of the exception

Parameters:

`s` - detail message

org.dvb.dsmcc
InsufficientResourcesException

Syntax

```
public class InsufficientResourcesException extends DSMCCException

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--java.io.IOException
                    |
                    +--DSMCCException
                          |
                          +--org.dvb.dsmcc.InsufficientResourcesException
```

All Implemented Interfaces:

java.io.Serializable

Description

This exception gets thrown when a request to subscribe to a stream event cannot be completed due to resource limitations. For example, no section filters or system timers may be available. This exception will not get thrown when there is not enough memory available to complete the request - this will get signalled by a `java.lang.OutOfMemoryError`

Since:

MHP 1.0.1

Constructors

InsufficientResourcesException()

```
public InsufficientResourcesException()
```

Construct an InsufficientResourcesException with no detail message

---

InsufficientResourcesException(String)

```
public InsufficientResourcesException(java.lang.String message)
```

Construct an InsufficientResourcesException with the specified detail message

Parameters:

`message` - the message for the exception

org.dvb.dsmcc
InvalidAddressException

Syntax
```
public class InvalidAddressException extends DSMCCException
```

```
java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--java.io.IOException
                    |
                    +--DSMCCException
                          |
                          +--org.dvb.dsmcc.InvalidAddressException
```

All Implemented Interfaces:
java.io.Serializable

Description
An InvalidAddressException is thrown when the format of an NSAP address is not recognized.

Constructors

InvalidAddressException()

```
public InvalidAddressException()
```

Construct a InvalidAddressException with no detail message

InvalidAddressException(String)

```
public InvalidAddressException(java.lang.String s)
```

Construct a InvalidAddressException with the specified detail message

Parameters:
`s` - the detail message

org.dvb.dsmcc
InvalidFormatEvent

Syntax
```
public class InvalidFormatEvent extends AsynchronousLoadingEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--AsynchronousLoadingEvent
              |
              +--org.dvb.dsmcc.InvalidFormatEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
This event is generated if the format of the data received is inconsistent.

Constructors

InvalidFormatEvent(DSMCCObject)

```
public InvalidFormatEvent(DSMCCObject o)
```

Create an InvalidFormatException object.

Parameters:
o - the DSMCCObject that generated the event.

Methods

---

getSource()

```
public java.lang.Object getSource()
```

Returns the DSMCCObject that generated the event

Overrides:
`getSource()` in class `AsynchronousLoadingEvent`

Returns:
the DSMCCObject that generated the event

org.dvb.dsmcc
InvalidFormatException

Syntax
```
public class InvalidFormatException extends DSMCCException
```

```
java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--java.io.IOException
                    |
                    +--DSMCCException
                          |
                          +--org.dvb.dsmcc.InvalidFormatException
```

All Implemented Interfaces:
java.io.Serializable

Description
An InvalidFormatException is thrown when an inconsistent DSMCC message is received.

Constructors

InvalidFormatException()

```
public InvalidFormatException()
```

Construct an InvalidFormatException with no detail message

InvalidFormatException(String)

```
public InvalidFormatException(java.lang.String s)
```

Construct an InvalidFormatException with the specified detail message

Parameters:
`s` - the detail message

org.dvb.dsmcc
InvalidPathnameEvent

Syntax
```
public class InvalidPathnameEvent extends AsynchronousLoadingEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--AsynchronousLoadingEvent
              |
              +--org.dvb.dsmcc.InvalidPathnameEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
The pathname does not exist or the ServiceDomain has been detached.

Constructors

InvalidPathnameEvent(DSMCCObject)

```
public InvalidPathnameEvent(DSMCCObject o)
```

Create an InvalidPathnameEvent.

Parameters:
o - the DSCMCCObject that generated this event.

Methods

---

getSource()

```
public java.lang.Object getSource()
```

Returns the DSMCCObject that generated the event.

Overrides:
getSource() in class AsynchronousLoadingEvent

Returns:
the DSMCCObject that generated the event.

org.dvb.dsmcc
InvalidPathNameException

Syntax
```
public class InvalidPathNameException extends DSMCCException
```

```
java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--java.io.IOException
                    |
                    +--DSMCCException
                          |
                          +--org.dvb.dsmcc.InvalidPathNameException
```

All Implemented Interfaces:
java.io.Serializable

Description
The InvalidPathNameException is thrown when the path name to a DSMCCObject does not exist or if the ServiceDomain has been detached.

Constructors

InvalidPathNameException()

```
public InvalidPathNameException()
```

Construct an InvalidPathNameException with no detail message

InvalidPathNameException(String)

```
public InvalidPathNameException(java.lang.String s)
```

Construct an InvalidPathNameException with the specified detail message

Parameters:
`s` - the detail message

org.dvb.dsmcc
LoadingAbortedEvent

Syntax

```
public class LoadingAbortedEvent extends AsynchronousLoadingEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--AsynchronousLoadingEvent
              |
              +--org.dvb.dsmcc.LoadingAbortedEvent
```

All Implemented Interfaces:

java.io.Serializable

Description

This event will be sent to the AsynchronousEventListener when an asynchronous loading operation is aborted.

Since:

MHP 1.0.1

Constructors

LoadingAbortedEvent(DSMCCObject)

```
public LoadingAbortedEvent(DSMCCObject aDSMCCObject)
```

Creates a LoadingAbortedEvent object.

Parameters:

`aDSMCCObject` - the `DSMCCObject` that generated the event.

Methods

---

getSource()

```
public java.lang.Object getSource()
```

Returns the DSMCCObject that generated the event.

Overrides:

`getSource()` in class `AsynchronousLoadingEvent`

Returns:

the DSMCCObject whose loading was aborted

org.dvb.dsmcc
MPEGDeliveryErrorEvent

Syntax
```
public class MPEGDeliveryErrorEvent extends AsynchronousLoadingEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--AsynchronousLoadingEvent
              |
              +--org.dvb.dsmcc.MPEGDeliveryErrorEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
An MPEGDeliveryErrorEvent indicates that an error (for instance, a time out or accessing the data would require tuning) has occurred while loading data from an MPEG Stream.

Constructors

MPEGDeliveryErrorEvent(DSMCCObject)

```
public MPEGDeliveryErrorEvent(DSMCCObject o)
```

Creates an MPEGDeliveryEvent.

Parameters:
o - the DSMCCObject that generated the event.

Methods

---

getSource()

```
public java.lang.Object getSource()
```

Returns the DSMCCObject that generated the event.

Overrides:
getSource() in class AsynchronousLoadingEvent

Returns:
the DSMCCObject that generated the event.

org.dvb.dsmcc
MPEGDeliveryException

Syntax

```
public class MPEGDeliveryException extends DSMCCException
```

```
java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--java.io.IOException
                    |
                    +--DSMCCException
                          |
                          +--org.dvb.dsmcc.MPEGDeliveryException
```

All Implemented Interfaces:

java.io.Serializable

Description

An MPEGDEliveryException is thrown when an error (for instance, a time out or accessing the data would require tuning) occurs while loading data from an MPEG Stream.

Constructors

MPEGDeliveryException()

```
public MPEGDeliveryException()
```

Construct an MPEGDeliveryException with no detail message

MPEGDeliveryException(String)

```
public MPEGDeliveryException(java.lang.String s)
```

Construct an MPEGDeliveryException with the specified detail message

Parameters:

`s` - the detail message

org.dvb.dsmcc
NotEntitledEvent

Syntax
```
public class NotEntitledEvent extends AsynchronousLoadingEvent
```

```
java.lang.Object
  |
  +--java.util.EventObject
        |
        +--AsynchronousLoadingEvent
              |
              +--org.dvb.dsmcc.NotEntitledEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
This event is sent when an attempt to asynchronously load an object has failed because the elementary stream carrying the object is scrambled and the user is not entitled to access the content of the object.

Constructors

NotEntitledEvent(DSMCCObject)

```
public NotEntitledEvent(DSMCCObject o)
```

Creates a NotEntitledEvent object.

Parameters:
o - the DSMCCObject that generated the event.

Methods

---

getSource()

```
public java.lang.Object getSource()
```

Returns the DSMCCObject that generated the event.

Overrides:
`getSource()` in class `AsynchronousLoadingEvent`

Returns:
the DSMCCObject that generated the event.

org.dvb.dsmcc
NotEntitledException

Syntax
```
public class NotEntitledException extends DSMCCException
```

```
java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--java.io.IOException
                    |
                    +--DSMCCException
                          |
                          +--org.dvb.dsmcc.NotEntitledException
```

All Implemented Interfaces:
java.io.Serializable

Description
This Exception is thrown when the user is not entitled to access the content of the object (the Elementary Stream is scrambled and the user is not entitled).

Constructors

NotEntitledException()

```
public NotEntitledException()
```

construct a NotEntitledException with no detail message

NotEntitledException(String)

```
public NotEntitledException(java.lang.String s)
```

construct a NotEntitledException with a detail message

Parameters:
`s` - detail message

org.dvb.dsmcc
NothingToAbortException

Syntax

```
public class NothingToAbortException extends DSMCCException
```

```
java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--java.io.IOException
                    |
                    +--DSMCCException
                          |
                          +--org.dvb.dsmcc.NothingToAbortException
```

All Implemented Interfaces:

java.io.Serializable

Description

A NothingToAbortException is thrown when the abort method is called and there is no loading in progress.

Constructors

NothingToAbortException()

```
public NothingToAbortException()
```

Construct a NothingToAbortException with no detail message

NothingToAbortException(String)

```
public NothingToAbortException(java.lang.String s)
```

Construct a NothingToAbortException with the specified detail message

Parameters:

`s` - the detail message

org.dvb.dsmcc
NotLoadedException

Syntax
```
public class NotLoadedException extends DSMCCException
```

```
java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--java.io.IOException
                    |
                    +--DSMCCException
                          |
                          +--org.dvb.dsmcc.NotLoadedException
```

All Implemented Interfaces:
java.io.Serializable

Description
A NotLoadedException is thrown when the Stream object constructor is called with a DSMCC Object which is not loaded.

Constructors

NotLoadedException()

```
public NotLoadedException()
```

Construct a NotLoadedException with no detail message

NotLoadedException(String)

```
public NotLoadedException(java.lang.String s)
```

Construct a NotLoadedException with the specified detail message

Parameters:
`s` - the detail message

org.dvb.dsmcc
NPTDiscontinuityEvent

Syntax
```
public class NPTDiscontinuityEvent extends NPTStatusEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--NPTStatusEvent
              |
              +--org.dvb.dsmcc.NPTDiscontinuityEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
Sent when an MHP terminal detects a permanent discontinuity in NPT as defined in the main body of this specification. This represents an error condition in the incoming broadcast.

This event shall be sent following a PCR discontinuity when the MHP terminal has enough information to determine that there will be an NPT discontinuity. If this is because of invalid data in a new NPTReferenceDescriptor then the event will be generated when that new NPTReferenceDescriptor is detected by the MHP terminal. If this is because no new NPTReferenceDescriptor is detected within the time allowed by the main body of this specification then it will be generated when that time interval has elapsed.

Since:
MHP 1.0.1

Constructors

NPTDiscontinuityEvent(DSMCCStream, long, long)

```
public NPTDiscontinuityEvent(DSMCCStream source, long before, long after)
```

Construct an event. The `before` and `after` values used shall be the values at the time when the receiver determined that a NPT discontinuity has happened. If this is because of invalid data in a new NPTReferenceDescriptor then this is the time when that new descriptor was known to be invalid. If this is because of the absence of a new NPTReferenceDescriptor then this will be when the MHP terminal detects that the time interval allowed by this specification for such new descriptors has elapsed

Parameters:

`source` - the stream whose NPT suffered a discontinuity

`before` - the last NPT value detected before the discontinuity

`after` - the first NPT value detected after the discontinuity

Methods

---

getFirstNPT()

```
public long getFirstNPT()
```

Return the first known stable value of NPT after the discontinuity

Returns:
an NPT value

---

getLastNPT()

```
public long getLastNPT()
```

Return the last known stable value of NPT before the discontinuity

Returns:
an NPT value

org.dvb.dsmcc
NPTListener

Syntax
```
public interface NPTListener extends java.util.EventListener
```

All Superinterfaces:
java.util.EventListener

Description
Objects that implement the `NPTListener` interface can receive `NPTEvent` events.

Since:
MHP 1.0.1

Methods

---

receiveNPTStatusEvent(NPTStatusEvent)

```
public void receiveNPTStatusEvent(NPTStatusEvent e)
```

Send a `NPTStatusEvent` to a registered listener.

Parameters:
`e` - a `NPTStatusEvent` describing the status change

---

receiveRateChangedEvent(NPTRateChangeEvent)

```
public void receiveRateChangedEvent(NPTRateChangeEvent e)
```

Send a `NPTRateChangeEvent` to a registered listener.

Parameters:
`e` - the `NPTRateChangeEvent` event.

org.dvb.dsmcc
NPTPresentEvent

Syntax
```
public class NPTPresentEvent extends NPTStatusEvent
```

```
java.lang.Object
  |
  +--java.util.EventObject
        |
        +--NPTStatusEvent
              |
              +--org.dvb.dsmcc.NPTPresentEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
Sent when NPT newly appears in a stream where it was not previously present.

Since:
MHP 1.0.1

Constructors

NPTPresentEvent(DSMCCStream)

```
public NPTPresentEvent(DSMCCStream source)
```

Construct an event.

Parameters:
`source` - the stream where NPT appeared

org.dvb.dsmcc
NPTRate

Syntax
```
public class NPTRate

java.lang.Object
  |
  +--org.dvb.dsmcc.NPTRate
```

Description
Represents the rate at which an NPT time-base progresses. Rates are expressed as the combination of a numerator and a denominator. Instances of this class are constructed by the platform and returned to applications.

Since:
MHP 1.0.1

Methods

---

getDenominator()

```
public int getDenominator()
```

Get the NPT rate's denominator.

Returns:
the denominator

---

getNumerator()

```
public int getNumerator()
```

Get the NPT rate's numerator. A value of zero indicates that the NPT is not progressing.

Returns:
the numerator

org.dvb.dsmcc
NPTRateChangeEvent

Syntax

```
public class NPTRateChangeEvent extends java.util.EventObject

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--org.dvb.dsmcc.NPTRateChangeEvent
```

All Implemented Interfaces:

java.io.Serializable

Description

Sent only when the rate of an NPT time-base changes value.

Since:

MHP 1.0.1

Constructors

NPTRateChangeEvent(DSMCCStream, NPTRate)

```
public NPTRateChangeEvent(DSMCCStream source, NPTRate rate)
```

Construct an event.

Parameters:

`source` - the stream whose rate changed

`rate` - the new rate of that stream immediately following the change

Methods

---

getRate()

```
public NPTRate getRate()
```

Return the new rate of the stream immediately after the change.

Returns:

a `NPTRate` object encapsulating the new rate

---

getSource()

```
public java.lang.Object getSource()
```

Return the stream whose rate changed.

Overrides:

java.util.EventObject.getSource() in class java.util.EventObject

Returns:

the `DSMCCStream` object on which the rate change has occurred.

org.dvb.dsmcc
NPTRemovedEvent

Syntax
```
public class NPTRemovedEvent extends NPTStatusEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--NPTStatusEvent
              |
              +--org.dvb.dsmcc.NPTRemovedEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
Sent when NPT which was present is removed from a stream.

Since:
MHP 1.0.1

Constructors

NPTRemovedEvent(DSMCCStream)

```
public NPTRemovedEvent(DSMCCStream source)
```

Construct an event.

Parameters:
`source` - the stream which NPT was removed from

org.dvb.dsmcc
NPTStatusEvent

Syntax
```
public abstract class NPTStatusEvent extends java.util.EventObject

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--org.dvb.dsmcc.NPTStatusEvent
```

Direct Known Subclasses:
NPTDiscontinuityEvent, NPTPresentEvent, NPTRemovedEvent

All Implemented Interfaces:
java.io.Serializable

Description
Sent when an MHP terminal detects a change of status in the NPT of a stream.

Since:
MHP 1.0.1

Constructors

NPTStatusEvent(DSMCCStream)

```
public NPTStatusEvent(DSMCCStream source)
```

Construct an event.

Parameters:
`source` - the stream whose NPT status changed

Methods

---

getSource()

```
public java.lang.Object getSource()
```

Return the stream whose NPT status changed.

Overrides:
java.util.EventObject.getSource() in class java.util.EventObject

Returns:
the `DSMCCStream` whose status changed

org.dvb.dsmcc
ObjectChangeEvent

Syntax
```
public class ObjectChangeEvent extends java.util.EventObject

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--org.dvb.dsmcc.ObjectChangeEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
This class describes an object change event that is used to monitor the arrival of a new version of a `DSMCCObject`. For files carried in a DSMCC object carousel, when a change in a module is detected, this event shall be sent to all registered listeners for all objects carried in that module.

Constructors

ObjectChangeEvent(DSMCCObject, int)

```
public ObjectChangeEvent(DSMCCObject source, int aVersionNumber)
```

Creates an ObjectChangeEvent indicating that a new version of the monitored DSMCC Object has been detected. It is up to the application to reload the new version of the object.

Parameters:

`source` - the DSMCCObject whose version has changed

`aVersionNumber` - the new version number.

Methods

---

getNewVersionNumber()

```
public int getNewVersionNumber()
```

This method is used to get the new version number of the monitored `DSMCCObject`. For files carried in a DSMCC object carousel, this method shall return the version number of the module carrying the file.

Returns:

the new version number.

---

getSource()

```
public java.lang.Object getSource()
```

Returns the DSMCCObject that has changed

Overrides:
java.util.EventObject.getSource() in class java.util.EventObject

Returns:
the DSMCCObject that has changed

org.dvb.dsmcc
ObjectChangeEventListener

Syntax
```
public interface ObjectChangeEventListener extends java.util.EventListener
```

All Superinterfaces:
java.util.EventListener

Description
The objects that implements the ObjectChangeEventListener interface can receive ObjectChangeEvent event.

Methods

---

receiveObjectChangeEvent(ObjectChangeEvent)

```
public void receiveObjectChangeEvent(ObjectChangeEvent e)
```

Send a ObjectChangeEvent to the ObjectChangeEventListener.

Parameters:
`e` - the ObjectChangeEvent event.

org.dvb.dsmcc
ServerDeliveryErrorEvent

Syntax
```
public class ServerDeliveryErrorEvent extends AsynchronousLoadingEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--AsynchronousLoadingEvent
              |
              +--org.dvb.dsmcc.ServerDeliveryErrorEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
The local machine can not communicate with the server. This event is only used with files implemented by delivery over bi-directional IP connections. For the object carousel the `MPEGDeliveryErrorEvent` is used instead.

Constructors

ServerDeliveryErrorEvent(DSMCCObject)

```
public ServerDeliveryErrorEvent(DSMCCObject o)
```

Creates a ServerDeliveryEvent object.

Parameters:
o - the DSMCCObject that generated the event.

Methods

---

getSource()

```
public java.lang.Object getSource()
```

Returns the DSMCCObject that generated the event.

Overrides:
`getSource()` in class `AsynchronousLoadingEvent`

Returns:
the DSMCCObject that generated the event.

org.dvb.dsmcc
ServerDeliveryException

Syntax

```
public class ServerDeliveryException extends DSMCCException
```

```
java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--java.io.IOException
                    |
                    +--DSMCCException
                          |
                          +--org.dvb.dsmcc.ServerDeliveryException
```

All Implemented Interfaces:

java.io.Serializable

Description

A ServerDeliveryException is thrown when the local machine can not communicate with the server. This exception is only used with files implemented by delivery over a bi-directional IP connection. For the object carousel the `MPEGDeliveryException` is used instead.

Constructors

ServerDeliveryException()

```
public ServerDeliveryException()
```

Construct a ServerDeliveryException with no detail message

ServerDeliveryException(String)

```
public ServerDeliveryException(java.lang.String s)
```

Construct a ServerDeliveryException with the specified detail message

Parameters:

`s` - the detail message

org.dvb.dsmcc
ServiceDomain

Syntax

```
public class ServiceDomain

java.lang.Object
  |
  +--org.dvb.dsmcc.ServiceDomain
```

Description

A `ServiceDomain` represents a group of DSMCC objects. The objects are sent either using the object carousel for a broadcast network or with the DSM-CC User-to-User protocol for an interactive network.

To access the objects of a `ServiceDomain`, it has to be attached to the file system name space of the MHP terminal. To access the content of an object, the application has four ways:

- It can instantiate the class that is used to read the object (java.io.FileInputStream or java.io.RandomAccessFile for a File or DSMCCStream for a stream) from its pathname. The loading of the object is implicit but the application has no way to abort it. NB: Obviously, for the Object Carousel, the write mode of java.io.RandomAccessFile is not allowed.
- It can instantiate a DSMCCObject and carry out a Synchronous loading. The loading can be aborted by the abort method of the DSMCCObject class. When the object is loaded, the application will instantiate the class used to read the object.
- It can instantiate a DSMCCObject and carry out an Asynchronous loading. So several loading can be started in parallel from the same thread.
- It is also possible to create directly a java.io.File for a DSMCC object.

Instances of `ServiceDomain` exist in two states, attached and detached. Newly created instances are always in the detached state. They become attached when a call to the `attach` method succeeds. They become detached following a call to the `detach` method.

When service domains in the attached state temporarily loose their network connection, (e.g. if the MHP terminal tunes away from the transport stream where they are carried), the behaviour of DSMCC objects which are part of the service domain is specified in the main body of this specification. If such a network connection becomes available again then the service domain shall resume normal behaviour.

A service domain which is temporarily lost its network connection may be forced into the detached state by the implementation if the loss of the network connection becomes irrecoverable. The precise details of when this happens are implementation dependent. This is the only situation when shall be forced into the detached state. Once a ServiceDomain is detached, it will never be automatically attached.

Constructors

ServiceDomain()

```
public ServiceDomain()
```

Creates a ServiceDomain object.

Methods

---

attach(byte[])

```
public void attach(byte[] NSAPAddress)
```

This function is used to attach a `ServiceDomain` from either an object carousel or from an interactive network. This call will block until the attachment is done.

Parameters:

`NSAPAddress` - The NSAP Address of a ServiceDomain as defined in in ISO/IEC 13818-6

Throws:

`InterruptedIOException` - The attachment has been aborted.

`InvalidAddressException` - The NSAP Address is invalid.

`DSMCCException` - An error has occurred during the attachment.

`MPEGDeliveryException` - attaching to this domain would require tuning.

---

attach(Locator)

```
public void attach(org.davic.net.Locator l)
```

This function is used to get a `ServiceDomain` from an object carousel. It loads the module which contains the service gateway object and mounts the `ServiceDomain` volume in the file system hierarchy. This call will block until the service gateway is loaded. It can be aborted by another thread with the method detach. In this case an `InterruptedIOException` is thrown.

Parameters:

`l` - The locator pointing to the elementary stream carrying the DSI of the object carousel, or to a DVB service that carries one and only one object carousel.

Throws:

`DSMCCException` - An error has occurred during the attachment. For example, the locator does not point to a component carrying a DSI of an Object Carousel or to a service containing a single carousel)

`InterruptedIOException` - The attachment has been aborted.

`MPEGDeliveryException` - attaching to this domain would require tuning.

---

attach(Locator, int)

```
public void attach(org.davic.net.Locator aDVBService, int aCarouselId)
```

This function is used to get a ServiceDomain from an object carousel. It loads the module which contains the service gateway object and mounts the `ServiceDomain` volume in the file system hierarchy. This call will block until the service gateway is loaded. It can be aborted by another thread with the method detach. In this case an `InterruptedIOException` is thrown.

Parameters:

`aDVBService` - The coordinates of the DVB service which contains the object carousel. This locator has to point to a DVB service.

`aCarouselId` - The identifier of the carousel.

Throws:

`InterruptedIOException` - The attachment has been aborted.

`MPEGDeliveryException` - An MPEG error occurred (such as time-out).

`ServiceXFRException` - The service gateway cannot be loaded in the current service domain

---

detach()

```
public void detach()
```

A call to this method is a hint that the applications gives to the MHP to unmount the volume and delete the objects of the service domain. When another application is using objects of the same service domain the method has no effects. When there are no other application using objects of the service domain, a call to this method is a hint that the MHP can free all the resources allocated to this service domain.

After this, the `ServiceDomain` will be in a non-attached state and will behave as if it had just been constructed. Subsequent calls to `detach` shall throw `NotLoadedException`.

Throws:

`NotLoadedException` - is thrown if the ServiceDomain is not attached or if there is no call to `attach` in progress.

---

getLocator()

```
public org.davic.net.Locator getLocator()
```

Return the locator for this service domain. If this ServiceDomain instance was last attached by specifying a locator then that exact same locator shall be returned. If this ServiceDomain instance was last attached by specifying an NSAP address then the locator shall be generated from that address. If this ServiceDomain has never been attached then null shall be returned.

Returns:

a locator for this service domain

Since:

MHP 1.0.1

---

getMountPoint()

```
public DSMCCObject getMountPoint()
```

Returns a `DSMCCObject` object describing the top level directory of this `ServiceDomain`. If the ServiceDomain object is not attached then null is returned.

Returns:

an instance of org.dvb.dsmcc.DSMCCObject if mounted or null otherwise

Since:

MHP 1.0.1

---

getNSAPAddress()

```
public byte[] getNSAPAddress()
```

This method returns the NSAP address of the `ServiceDomain`.

Returns:

the NSAP address of the `ServiceDomain`.

Throws:

`NotLoadedException` - is thrown if the `ServiceDomain` is not attached.

---

getURL(Locator)

```
public static java.net.URL getURL(org.davic.net.Locator l)
```

Obtain a java.net.URL corresponding to a 'dvb:' locator. If the service domain corresponding to the locator is attached and the file referenced in the locator exists then an instance of `java.net.URL` is returned which can be used to reference this file.

Parameters:

`l` - a locator object encapsulating a 'dvb:' locator which includes a 'dvb_abs_path' element.

Returns:

a `java.net.URL` which can be used to access the file referenced by the 'dvb:' locator

Throws:

`InvalidLocatorException` - if the locator is not a valid 'dvb:' locator or does not includes all elements including 'dvb_abs_path' element

`NotLoadedException` - is thrown if the locator is valid and includes enough information but it references a service domain which is not attached.

`FileNotFoundException` - if the service domain is attached but the file referenced by the locator does not exist

---

isAttached()

```
public boolean isAttached()
```

Return whether this service domain is in the attached or detached state.

Returns:

true if this service domain is in the attached state, otherwise false

Since:

MHP 1.0.1

---

isNetworkConnectionAvailable()

```
public boolean isNetworkConnectionAvailable()
```

Return whether the network connection for this service domain is available. This return value is independent of whether the service domain is attached or not. If a service domain is distributed across multiple network connections (e.g. using the optional support for DSMCC over IIOP) then this will reflect the availability of the network connection carrying the object mounted to the mount point.

Returns:

true if the network connection for this service domain is available otherwise false

Since:

MHP 1.0.1

org.dvb.dsmcc
ServiceXFRErrorEvent

Syntax

```
public class ServiceXFRErrorEvent extends AsynchronousLoadingEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--AsynchronousLoadingEvent
              |
              +--org.dvb.dsmcc.ServiceXFRErrorEvent
```

All Implemented Interfaces:

java.io.Serializable

Description

The object requested is available in an alternate ServiceDomain. When an application attempts to asynchronously load an object that has itself a LiteOptionProfileBody IOR or that has a parent directory that has a LiteOptionProfileBody IOR, this event shall be sent to the application. There is no implicit mounting by the implementation of the carousel that actually contains the object. This event is also sent even if the Service Domain that actually contains the DSMCCObject is already mounted.

Constructors

ServiceXFRErrorEvent(DSMCCObject, ServiceXFRReference)

```
public ServiceXFRErrorEvent(DSMCCObject o, ServiceXFRReference ref)
```

Creates a ServiceXFRErrorEvent object.

Parameters:

`o` - the DSMCCObject that generated the event.

`ref` - the address of an alternate ServiceDomain where the object can be found.

Methods

---

getServiceXFR()

```
public ServiceXFRReference getServiceXFR()
```

This method is used to get a reference to the service domain that contains the requested object.

Returns:

The address of an alternate ServiceDomain where the object can be found.

---

getSource()

```
public java.lang.Object getSource()
```

Returns the DSMCCObject that generated the event.

Overrides:

`getSource()` in class `AsynchronousLoadingEvent`

Returns:

the DSMCCObject that generated the event.

org.dvb.dsmcc
ServiceXFRException

Syntax

```
public class ServiceXFRException extends DSMCCException

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--java.io.IOException
                    |
                    +--DSMCCException
                          |
                          +--org.dvb.dsmcc.ServiceXFRException
```

All Implemented Interfaces:

java.io.Serializable

Description

A ServiceXFRException is thrown when a DSMCC Object can not be loaded in the current ServiceDomain but is available in an alternate ServiceDomain (i.e. for an object Carousel, the IOR of the object or one of its parent directories contains a Lite Option Profile Body). There is no implicit mounting by the implementation of the carousel that actually contain the object. This exception is also thrown even if the Service Domain that actually contains the DSMCCObject is already mounted.

Constructors

ServiceXFRException(byte[], String)

```
public ServiceXFRException(byte[] NSAPAddress, java.lang.String pathName)
```

Creates a ServiceXFRException object.

Parameters:

`NSAPAddress` - The NSAP Address of a ServiceDomain as defined in ISO/IEC 13818-6

`pathName` - pathName of the object in the alternate ServiceDomain

ServiceXFRException(Locator, int, String)

```
public ServiceXFRException(org.davic.net.Locator aService, int carouselId,
            java.lang.String pathName)
```

Creates a ServiceXFRException object.

Parameters:

`aService` - Locator of the Service

`carouselId` - Carousel Identifier

`pathName` - pathName of the object in the alternate ServiceDomain

Methods

---

getServiceXFR()

```
public ServiceXFRReference getServiceXFR()
```

This method is used to get the alternate ServiceDomain which contains the object requested.

Returns:
the address of an alternate ServiceDomain where the object can be found.

org.dvb.dsmcc
ServiceXFRReference

Syntax
```
public class ServiceXFRReference

java.lang.Object
  |
  +--org.dvb.dsmcc.ServiceXFRReference
```

Description
A ServiceXFRReference object is used when a DSMCC Object can not be loaded in the current ServiceDomain but is available in an alternate ServiceDomain. Instances of this class are just containers. The parameters passed are merely stored and returned by the access methods. It is the responsibility of the platform when generating instances to use correct values.

Constructors

ServiceXFRReference(byte[], String)

```
public ServiceXFRReference(byte[] nsapAddress, java.lang.String pathName)
```

Creates a ServiceXFRReference object.

Parameters:

`nsapAddress` - The NSAP Address of a ServiceDomain as defined in ISO/IEC 13818-6

`pathName` - pathName of the object in the alternate ServiceDomain

ServiceXFRReference(Locator, int, String)

```
public ServiceXFRReference(org.davic.net.Locator serviceLocator, int carouselId,
            java.lang.String pathName)
```

Creates a ServiceXFRReference object.

Parameters:

`serviceLocator` - Locator of the Service

`carouselId` - Carousel Identifier

`pathName` - pathName of the object in the alternate ServiceDomain

Methods

---

getCarouselId()

```
public int getCarouselId()
```

This method returns the carousel identifier. If the object was constructed using the constructor which includes a carousel ID or if it was constructed using the constructor which includes an NSAP

address and that NSAP address contains a carouselID then this method shall return that carousel ID otherwise this method shall return -1.

Returns:
the carousel identifier or -1.

---

getLocator()

```
public org.davic.net.Locator getLocator()
```

This method returns the Locator of the Service for an Object Carousel.

Returns:
the Locator of the Service for an Object Carousel. This method returns null, if the ServiceDomain is not associated with an Object Carousel. In this case the NSAP address must be used instead.

---

getNSAPAddress()

```
public byte[] getNSAPAddress()
```

This method returns the NSAP Address of a ServiceDomain as defined in ISO/IEC 13818-6. If the object was constructed using an NSAP address then this method shall return the NSAP address passed into the constructor. If the object was constructed with a locator and a carouselID then this method shall return an NSAP address derived from this information when locator is an instance of org.davic.net.dvb.DVBLocator. Otherwise this method shall return null

Returns:
the NSAP Address of a ServiceDomain as defined in ISO/IEC 13818-6 or null

---

getPathName()

```
public java.lang.String getPathName()
```

This method returns the pathname of the object in the alternate ServiceDomain.

Returns:
the pathname of the object in the alternate ServiceDomain.

org.dvb.dsmcc
StreamEvent

Syntax

```
public class StreamEvent extends java.util.EventObject

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--org.dvb.dsmcc.StreamEvent
```

All Implemented Interfaces:

java.io.Serializable

Description

This class describes a Stream event which is used to synchronize an application with an MPEG Stream.

Constructors

StreamEvent(DSMCCStreamEvent, long, String, int, byte[])

```
public StreamEvent(DSMCCStreamEvent source, long npt, java.lang.String name, int eventId,
            byte[] eventData)
```

Creates a StreamEvent object.

Parameters:

`source` - The `DSMCCStreamEvent` that has generated the event.

`npt` - The value of the NPT (Normal Play Time) when the event is triggered. This value is equal to the field eventNPT in the DSMCC StreamEventDescriptor except where the event is a "do it now" event in which case the value -1 is returned (as the value of NPT may not be meaningful).

`name` - The name of this event. The list of event names is located in the DSMCC StreamEvent object. This list is returned by the method `DSMCCStreamEvent.getEventList`.

`eventId` - The eventId of this event. The list of event IDs is located in the DSMCC StreamEvent object.

`eventData` - The application specific data found in the DSMCC StreamEventDescriptor.

Methods

---

getEventData()

```
public byte[] getEventData()
```

This method is used to retrieve the private data associated with the event.

Returns:

The private data associated with the event.

---

getEventId()

```
public int getEventId()
```

This method is used to get the identifier of the StreamEvent.

Returns:
The identifier of the StreamEvent.

---

getEventName()

```
public java.lang.String getEventName()
```

This method is used to get the name of the StreamEvent

Returns:
the name of the StreamEvent

---

getEventNPT()

```
public long getEventNPT()
```

This method is used to get the NPT of the Event in milliseconds.

Returns:
The NPT of the Event in milliseconds.

---

getSource()

```
public java.lang.Object getSource()
```

This method returns the DSMCCStreamEvent that generated the event.

Overrides:
java.util.EventObject.getSource() in class java.util.EventObject

Returns:
the DSMCCStreamEvent that generated the event.

org.dvb.dsmcc
StreamEventListener

Syntax
```
public interface StreamEventListener extends java.util.EventListener
```

All Superinterfaces:
java.util.EventListener

Description
Objects that implement the StreamEventListener interface can receive StreamEvent event.

Methods

---

receiveStreamEvent(StreamEvent)

```
public void receiveStreamEvent(StreamEvent e)
```

Send a StreamEvent to the StreamEventListener.

Parameters:
`e` - the StreamEvent event.

org.dvb.dsmcc
SuccessEvent

Syntax
```
public class SuccessEvent extends AsynchronousLoadingEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--AsynchronousLoadingEvent
              |
              +--org.dvb.dsmcc.SuccessEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
This event indicates that the asynchronous loading was successful.

Constructors

SuccessEvent(DSMCCObject)

```
public SuccessEvent(DSMCCObject o)
```

Creates a `SuccessEvent` object.

Parameters:
`o` - the `DSMCCObject` which was successfully loaded.

Methods

---

getSource()

```
public java.lang.Object getSource()
```

Returns the `DSMCCObject` which was successfully loaded.

Overrides:
`getSource()` in class `AsynchronousLoadingEvent`

Returns:
the loaded `DSMCCObject`

org.dvb.dsmcc
UnknownEventException

Syntax

```
public class UnknownEventException extends DSMCCException
```

```
java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--java.io.IOException
                    |
                    +--DSMCCException
                          |
                          +--org.dvb.dsmcc.UnknownEventException
```

All Implemented Interfaces:

java.io.Serializable

Description

The `UnknownEventException` is thrown when a method tries to access to an unknown event. This exception may get thrown because the event in question is not being signalled yet. It does not indicate that the event is permanently unavailable. Applications may choose to attempt to subscribe to the event again at a later point in time in the expectation that the event has become available since the previous attempt.

Constructors

UnknownEventException()

```
public UnknownEventException()
```

Construct an UnknownEventException with no detail message

UnknownEventException(String)

```
public UnknownEventException(java.lang.String s)
```

Construct an UnknownEventException with the specified detail message

Parameters:

`s` - the detail message

Annex Q (normative): Datagram Socket Buffer Control

Package
org.dvb.net

Description
Provides general networking features not found elsewhere.

Class Summary	
Classes	
DatagramSocketBuffer-Control	This class provides additional control over buffering for DatagramSockets.

org.dvb.net
DatagramSocketBufferControl

Syntax
```
public class DatagramSocketBufferControl

java.lang.Object
  |
  +--org.dvb.net.DatagramSocketBufferControl
```

Description
This class provides additional control over buffering for `DatagramSocket`s.

Methods

---

getReceiveBufferSize(DatagramSocket)

`public static int getReceiveBufferSize(java.net.DatagramSocket d)`

Get value of the SO_RCVBUF option for this socket, that is the buffer size used by the platform for input on the this Socket.

Parameters:
`d` - The DatagramSocket for which to query the receive buffer size.

Returns:
The size of the receive buffer, in bytes.

Throws:
`SocketException` - - If there is an error when querying the SO_RCVBUF option.

---

setReceiveBufferSize(DatagramSocket, int)

`public static void setReceiveBufferSize(java.net.DatagramSocket d, int size)`

Sets the SO_RCVBUF option to the specified value for this DatagramSocket. The SO_RCVBUF option is used by the platform's networking code as a hint for the size to use when allocating the underlying network I/O buffers.

Increasing buffer size can increase the performance of network I/O for high-volume connection, while decreasing it can help reduce the backlog of incoming data. For UDP, this sets the buffer size for received packets.

Because SO_RCVBUF is a hint, applications that want to verify what size the buffers were set to should call getReceiveBufferSize. This method shall throw IllegalArgumentException - if size is 0 or is negative.

Parameters:
`d` - The DatagramSocket for which to change the receive buffer size.

`size` - The requested size of the receive buffer, in bytes.

Throws:
`SocketException` - - If there is an error when setting the SO_RCVBUF option.

Annex R (normative): DVB-J Return Channel Connection Management API

Package
org.dvb.net.rc

Description
Provides session management for bi-directional IP connections which are session based from the point of view of an application. The best example of this is a conventional modem.

Class Summary	
Interfaces	
ConnectionListener	This interface should be implemented by objects wishing to be notified about the connection status of a ConnectionRCInterface.
Classes	
ConnectionEstablishedEvent	ConnectionEstablishedEvent - An event generated after a connection is established for a ConnectionRCInterface.
ConnectionFailedEvent	ConnectionFailedEvent - An event generated after an attempt to setup a connection for a ConnectionRCInterface fails.
ConnectionParameters	This class encapsulates the parameters needed to specify the target of a connection.
ConnectionRCEvent	ConnectionRCEvent - the base class for events related to connection oriented return channels.
ConnectionRCInterface	This class models a connection based return channel network interface for use in receiving and transmitting IP packets over a return channel.
ConnectionTerminatedEvent	ConnectionTerminatedEvent - An event generated after a connected ConnectionRCInterface is disconnected.
RCInterface	This class models a return channel network interface for use in receiving and transmitting IP packets over a logical return channel.
RCInterfaceManager	This class is the factory and manager for all return channel interfaces in the system.
RCInterfaceReleasedEvent	This event informs an application that a RCInterface has been released by an application or other entity in the system.
RCInterfaceReservedEvent	This event informs an application that a RCInterface has been reserved by an application or other entity in the system.
RCPermission	This class is for return channel set-up permissions.
Exceptions	
IncompleteTargetException	Thrown when the target for a connection is incompletely specified.
PermissionDeniedException	Thrown when an application calls a method which it does not have permission to call at that time.

org.dvb.net.rc
ConnectionEstablishedEvent

Syntax

```
public class ConnectionEstablishedEvent extends ConnectionRCEvent
```

```
java.lang.Object
  |
  +--java.util.EventObject
        |
        +--ConnectionRCEvent
              |
              +--org.dvb.net.rc.ConnectionEstablishedEvent
```

All Implemented Interfaces:

java.io.Serializable

Description

ConnectionEstablishedEvent - An event generated after a connection is established for a `ConnectionRCInterface`.

Constructors

ConnectionEstablishedEvent(Object)

```
public ConnectionEstablishedEvent(java.lang.Object source)
```

Construct an event.

Parameters:

`source` - the `ConnectionRCInterface` whose connection was established

org.dvb.net.rc
ConnectionFailedEvent

Syntax

```
public class ConnectionFailedEvent extends ConnectionRCEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--ConnectionRCEvent
              |
              +--org.dvb.net.rc.ConnectionFailedEvent
```

All Implemented Interfaces:

java.io.Serializable

Description

ConnectionFailedEvent - An event generated after an attempt to setup a connection for a `ConnectionRCInterface` fails.

Constructors

ConnectionFailedEvent(Object)

```
public ConnectionFailedEvent(java.lang.Object source)
```

Construct an event.

Parameters:

`source` - the `ConnectionRCInterface` whose connection attempt failed

org.dvb.net.rc
ConnectionListener

Syntax
```
public interface ConnectionListener
```

Description
This interface should be implemented by objects wishing to be notified about the connection status of a `ConnectionRCInterface`.

Methods

---

connectionChanged(ConnectionRCEvent)

```
public void connectionChanged(ConnectionRCEvent e)
```

This method is called to report events related to the setup and termination of return channel interface connections.

Parameters:
`e` - the event which happened

org.dvb.net.rc
ConnectionParameters

Syntax

```
public class ConnectionParameters

java.lang.Object
  |
  +--org.dvb.net.rc.ConnectionParameters
```

Description

This class encapsulates the parameters needed to specify the target of a connection.

Constructors

ConnectionParameters(String, String, String)

```
public ConnectionParameters(java.lang.String number, java.lang.String username,
            java.lang.String password)
```

Construct a set of connection parameters. Details of the DNS server to use are supplied by the server.

Parameters:

`number` - the target of the connection, e.g. a phone number

`username` - the username to use in connection setup

`password` - the password to use in connection setup

ConnectionParameters(String, String, String, InetAddress[])

```
public ConnectionParameters(java.lang.String number, java.lang.String username,
            java.lang.String password, java.net.InetAddress[] dns)
```

Construct a set of connection parameters.

Parameters:

`number` - the target of the connection, e.g. a phone number

`username` - the username to use in connection setup

`password` - the password to use in connection setup

`dns` - the list of DNS servers to try before reporting failure. The order in which they are interrogated is not specified. Once one result has been obtained, there is no requirement to try others.

Methods

---

getDNSServer()

```
public java.net.InetAddress[] getDNSServer()
```

Return the addresses of the DNS servers to use for the connection

Returns:
return the addresses of the DNS servers to use for the connection or null where the DNS address is server supplied.

---

getPassword()

```
public java.lang.String getPassword()
```

Return the password used in establishing this connection

Returns:
the password used in establishing this connection

---

getTarget()

```
public java.lang.String getTarget()
```

Return the target of this connection for example a phone number

Returns:
the target of the connection

---

getUsername()

```
public java.lang.String getUsername()
```

Return the username used in establishing this connection

Returns:
the username used in establishing the connection

org.dvb.net.rc
ConnectionRCEvent

Syntax
```
public class ConnectionRCEvent extends java.util.EventObject

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--org.dvb.net.rc.ConnectionRCEvent
```

Direct Known Subclasses:
ConnectionEstablishedEvent, ConnectionFailedEvent, ConnectionTerminatedEvent

All Implemented Interfaces:
java.io.Serializable

Description
ConnectionRCEvent - the base class for events related to connection oriented return channels.

Constructors

ConnectionRCEvent(Object)

```
public ConnectionRCEvent(java.lang.Object source)
```

Construct an event

Parameters:
`source` - the `ConnectionRCInterface` for which the event was generated.

org.dvb.net.rc
ConnectionRCInterface

Syntax

```
public class ConnectionRCInterface extends RCInterface implements
    org.davic.resources.ResourceProxy

java.lang.Object
  |
  +--RCInterface
        |
        +--org.dvb.net.rc.ConnectionRCInterface
```

All Implemented Interfaces:

org.davic.resources.ResourceProxy

Description

This class models a connection based return channel network interface for use in receiving and transmitting IP packets over a return channel. Targets for connections are specified as strings including the number to dial. These strings can only include numbers and are passed direct to the underlying device.

Methods

---

addConnectionListener(ConnectionListener)

```
public void addConnectionListener(ConnectionListener l)
```

Add a listener for events related to connections of this interface.

Parameters:

`l` - the listener for the connection related events

---

connect()

```
public void connect()
```

Connect this return channel to the current target. If this ResourceProxy does not have the underlying resource reserved then a PermissionDeniedException will be thrown. Where the underlying resource is reserved but at the time the method is called, it is known that connection is impossible then an IOException will be thrown. Apart from this, this method is asynchronous and completion or failure is reported through the event listener on this class. If a connection is already established when this method is called then the method call shall have no effect.

Throws:

`PermissionDeniedException` - if this application does not own the resource

`IOException` - if connection is known to be impossible at the time when the method is called

---

disconnect()

```
public void disconnect()
```

Disconnect this return channel from the current target. This method is asynchronous and completion is reported through the event listener on this class. This method does not release the underlying resource from the ResourceProxy. If no connection is established then this method shall have no effect.

Throws:

`PermissionDeniedException` - if this application does not own the resource

---

getClient()

```
public org.davic.resources.ResourceClient getClient()
```

Return the object which asked to be notified about withdrawl of the underlying resource. This is the object provided as the first parameter to the last call to the reserve method on this object. If this object does not have the underlying resource reserved then null is returned.

Specified By:

org.davic.resources.ResourceProxy.getClient() in interface org.davic.resources.ResourceProxy

Returns:

the object which asked to be notified about withdrawal of the underlying physical resource from this resource proxy or null

---

getConnectedTime()

```
public int getConnectedTime()
```

Return the time an interface has been connected

Returns:

the time in seconds for which this interface has been connected or -1 if the device is not connected

---

getCurrentTarget()

```
public ConnectionParameters getCurrentTarget()
```

Get the current target for connections.

Returns:

the current set of connection target parameters

Throws:

`IncompleteTargetException` - if the current target is not completely configured

`SecurityException` - if the application is not allowed to read the current target as defined by the security policy of the platform

---

getSetupTimeEstimate()

```
public float getSetupTimeEstimate()
```

Obtain an estimate of the setup time for a successful connection for this interface in seconds.

Returns:

an estimate of the setup time for a successful connection for this interface in seconds.

---

isConnected()

```
public boolean isConnected()
```

Check if this interface is connected. Connected means able to receive and transmit packets.

Returns:
true if the interface is connected, otherwise false

---

release()

```
public void release()
```

Release the right to control this return channel interface. If this object does not have the right to control this return channel interface then this method shall have no effect.

---

removeConnectionListener(ConnectionListener)

```
public void removeConnectionListener(ConnectionListener l)
```

Remove a listener for events related to connections of this interface. If the listener specified is not currently receiving these events then this method has no effect.

Parameters:
`l` - the listener for the connection related events

---

reserve(ResourceClient, Object)

```
public void reserve(org.davic.resources.ResourceClient c, java.lang.Object requestData)
```

Request the right to control this return channel interface. If the right to control the return channel interface has already been reserved then this method shall have no effect.

Parameters:
`c` - the object to be notified when resources are removed

`requestData` - Used by the Resource Notification API in the requestRelease method of the ResourceClient interface. The usage of this parameter is optional and a null reference may be supplied.

Throws:
`PermissionDeniedException` - if this interface cannot be reserved

`SecurityException` - if the application is denied access to the resource by security policy.

---

setTarget(ConnectionParameters)

```
public void setTarget(ConnectionParameters target)
```

Set a non-default target for connections.

Parameters:
`target` - the new set of connection target parameters

Throws:
`IncompleteTargetException` - if the application owns the resource but the target is not completely specified

`PermissionDeniedException` - if this application does not own the resource

`SecurityException` - if the application is not allowed to modify the target as defined by the security policy of the platform

---

setTargetToDefault()

```
public void setTargetToDefault()
```

Set the target for connections to the default.

Throws:

`IncompleteTargetException` - if the application owns the resource but the target is not completely specified

`PermissionDeniedException` - if this application does not own the resource

`SecurityException` - if the application is not allowed to connect to the default target

org.dvb.net.rc
ConnectionTerminatedEvent

Syntax

```
public class ConnectionTerminatedEvent extends ConnectionRCEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--ConnectionRCEvent
              |
              +--org.dvb.net.rc.ConnectionTerminatedEvent
```

All Implemented Interfaces:

java.io.Serializable

Description

ConnectionTerminatedEvent - An event generated after a connected `ConnectionRCInterface` is disconnected.

Constructors

ConnectionTerminatedEvent(Object)

```
public ConnectionTerminatedEvent(java.lang.Object source)
```

Construct an event.

Parameters:

`source` - the `ConnectionRCInterface` whose status changed

org.dvb.net.rc
IncompleteTargetException

Syntax

```
public class IncompleteTargetException extends java.lang.Exception

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--org.dvb.net.rc.IncompleteTargetException
```

All Implemented Interfaces:

java.io.Serializable

Description

Thrown when the target for a connection is incompletely specified. This is thrown either when the default connection target is incompletely defined in the device or when an application provides an incompletely defined connection target to the device or when the connection target is badly formed, e.g. includes illegal characters in a number parameter.

Constructors

IncompleteTargetException()

```
public IncompleteTargetException()
```

Default constructor for the exception

IncompleteTargetException(String)

```
public IncompleteTargetException(java.lang.String reason)
```

Constructor for the exception with a specified reason

Parameters:

`reason` - the reason why the exception was raised

org.dvb.net.rc
PermissionDeniedException

Syntax
```
public class PermissionDeniedException extends java.lang.Exception

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--org.dvb.net.rc.PermissionDeniedException
```

All Implemented Interfaces:
java.io.Serializable

Description
Thrown when an application calls a method which it does not have permission to call at that time.

Constructors

PermissionDeniedException()

```
public PermissionDeniedException()
```

Default constructor for the exception

PermissionDeniedException(String)

```
public PermissionDeniedException(java.lang.String reason)
```

Constructor for the exception with a specified reason

Parameters:
`reason` - the reason why the exception was raised

org.dvb.net.rc
RCInterface

Syntax
```
public class RCInterface

java.lang.Object
  |
  +--org.dvb.net.rc.RCInterface
```

Direct Known Subclasses:
ConnectionRCInterface

Description
This class models a return channel network interface for use in receiving and transmitting IP packets over a logical return channel. This can include real analog modems, cable return channel and all the other options allowed by the relevant DVB specification. This class does not model any concept of connection. Hence interfaces represented by this class and not by a sub-class of it are permanently connected.

Fields

TYPE_CATV

```
public static final int TYPE_CATV
```

Constant to indicate a CATV return channel.

TYPE_DECT

```
public static final int TYPE_DECT
```

Constant to indicate a DECT return channel.

TYPE_ISDN

```
public static final int TYPE_ISDN
```

Constant to indicate an ISDN return channel.

TYPE_LMDS

```
public static final int TYPE_LMDS
```

Constant to indicate a LMDS return channel.

TYPE_MATV

```
public static final int TYPE_MATV
```

Constant to indicate a MATV return channel.

TYPE_PSTN

```
public static final int TYPE_PSTN
```

Constant to indicate a PSTN return channel.

Methods

getDataRate()

```
public int getDataRate()
```

Return the maximum data rate of the connection over the immediate access network to which this network interface is connected. For asymetric connections, the data rate coming into the MHP terminal shall be returned. For connection oriented interfaces which are not currently connected, the value returned shall be that of the last connection established where that information is available. Where that information is not available, (e.g. where no connection has been established since an MHP terminal was power cycled), -1 shall be returned.

Returns:
a data rate in KBaud or -1 where this is not available

Since:
MHP 1.0.1

getType()

```
public int getType()
```

Return the type of return channel represented by this object.

Returns:
the type of return channel represented by this object encoded as one of the constants defined in this class

org.dvb.net.rc
RCInterfaceManager

Syntax
```
public class RCInterfaceManager implements org.davic.resources.ResourceServer

java.lang.Object
  |
  +--org.dvb.net.rc.RCInterfaceManager
```

All Implemented Interfaces:
org.davic.resources.ResourceServer

Description
This class is the factory and manager for all return channel interfaces in the system. The methods on this class which return instances of the `RCInterface` will only return new instances of that class under the following conditions:-

- on the first occasion an instance needs to be returned to a particular application for a particular interface.
- when new return channel interfaces are added to the system

Methods

---

addResourceStatusEventListener(ResourceStatusListener)

```
public void addResourceStatusEventListener(org.davic.resources.ResourceStatusListener
            listener)
```

This method informs a resource server that a particular object should be informed of changes in the state of the resources managed by that server.

Specified By:
org.davic.resources.ResourceServer.addResourceStatusEventListener(org.davic.resources.ResourceStatusListener) in interface org.davic.resources.ResourceServer

Parameters:
`listener` - the object to be informed of state changes

---

getInstance()

```
public static RCInterfaceManager getInstance()
```

Factory method to obtain a manager. From the point of view of any individual application, this is a singleton.

Returns:
an instance of an RCInterfaceManager

---

getInterface(InetAddress)

```
public RCInterface getInterface(java.net.InetAddress addr)
```

Return the interface which will be used when connecting to a particular host. Null is returned if this is not known when the method is called.

Parameters:
`addr` - the IP address of the host to connect to

Returns:
the interface which will be used or null if this is not known

---

getInterface(Socket)

```
public RCInterface getInterface(java.net.Socket s)
```

Return the interface which is used for a particular socket.

Parameters:
`s` - the socket to use

Returns:
the interface which is used or null if the socket isn't connected

---

getInterface(URLConnection)

```
public RCInterface getInterface(java.net.URLConnection u)
```

Return the interface which is used for a particular URLConnection

Parameters:
`u` - the URLConnection to use

Returns:
the interface which is used or null if the URLConnection isn't connected

---

getInterfaces()

```
public RCInterface[] getInterfaces()
```

Factory method to return a list of all return channel interfaces visible to this application. The number of entries in the array will exactly match the number of return channel interfaces visible to the application. Null is returned if no interfaces are visible to this application.

Returns:
an array of available return channel interfaces

---

removeResourceStatusEventListener(ResourceStatusListener)

```
public void removeResourceStatusEventListener(org.davic.resources.ResourceStatusListener
            listener)
```

This method informs a resource server that a particular object is no longer interested in being informed about changes in state of resources managed by that server. If the object had not registered its interest initially then this method has no effect.

Specified By:
org.davic.resources.ResourceServer.removeResourceStatusEventListener(org.davic.resources.ResourceStatusListener) in interface org.davic.resources.ResourceServer

Parameters:
`listener` - the object which is no longer interested

org.dvb.net.rc
RCInterfaceReleasedEvent

Syntax

```
public class RCInterfaceReleasedEvent extends org.davic.resources.ResourceStatusEvent

java.lang.Object
  |
  +--org.davic.resources.ResourceStatusEvent
        |
        +--org.dvb.net.rc.RCInterfaceReleasedEvent
```

Description

This event informs an application that a `RCInterface` has been released by an application or other entity in the system. It is generated when an application which had successfully reserved a `RCInterface` calls the `ConnectionRCInterface.release` method. It will also be generated if any other entities in the system own such an interface and then release that interface in such a way that it could then become available to applications using this API.

Constructors

RCInterfaceReleasedEvent(Object)

```
public RCInterfaceReleasedEvent(java.lang.Object bg)
```

Constructor for the event

Parameters:

`bg` - the `RCInterface` which has been released

Methods

---

getSource()

```
public java.lang.Object getSource()
```

Returns the device that has been released

Overrides:

org.davic.resources.ResourceStatusEvent.getSource() in class org.davic.resources.ResourceStatusEvent

Returns:

the `RCInterface` object representing the interface that has been released

org.dvb.net.rc
RCInterfaceReservedEvent

Syntax

```
public class RCInterfaceReservedEvent extends org.davic.resources.ResourceStatusEvent

java.lang.Object
  |
  +--org.davic.resources.ResourceStatusEvent
        |
        +--org.dvb.net.rc.RCInterfaceReservedEvent
```

Description

This event informs an application that a `RCInterface` has been reserved by an application or other entity in the system. It is generated when an application successfully reserves a `RCInterface`. It will also be generated if any other entities in the system reserve such an interface with the effect of something which was visible to applications using this API becoming unavailable.

Constructors

RCInterfaceReservedEvent(Object)

```
public RCInterfaceReservedEvent(java.lang.Object bg)
```

Constructor for the event

Parameters:

`bg` - the `RCInterface` representing the device which has been reserved

Methods

---

getSource()

```
public java.lang.Object getSource()
```

Returns the device that has been reserved

Overrides:

org.davic.resources.ResourceStatusEvent.getSource() in class org.davic.resources.ResourceStatusEvent

Returns:

an `RCInterface` representing the device that has been reserved

org.dvb.net.rc
RCPermission

Syntax

```
public class RCPermission extends java.security.BasicPermission

java.lang.Object
  |
  +--java.security.Permission
        |
        +--java.security.BasicPermission
              |
              +--org.dvb.net.rc.RCPermission
```

All Implemented Interfaces:

java.security.Guard, java.io.Serializable

Description

This class is for return channel set-up permissions. An RCPermission contains a name, but no actions list.

The permission name can be "target:default", which indicates the permission to use the default connection parameters.

The permission name can also be "target:<phone number>", which indicates the permission to use the specified phone number in the connection set-up (ConnectionRCInterface.setTarget(ConnectionParameters) method).

A wildcard may be used at the end of the permission name. In that case, all phone numbers starting with the number before the wildcard are included in the permission.

Examples:

- target:0206234342 (Permission to dial the specified phone number)
- target:020* (Permission to dial phone numbers starting with 020)
- target:* (Permission to dial all phone numbers, including the default)

Note: ConnectionRCInterface.reserve(ResourceClient, Object) will throw a SecurityException if the application is not allowed to set-up a connection over the return channel at all (i.e., there is no valid target allowed).

Constructors

RCPermission(String)

```
public RCPermission(java.lang.String name)
```

Creates a new RCPermission with the specified name. The name is the symbolic name of the RCPermission.

Parameters:

`name` - the name of the RCPermission

RCPermission(String, String)

```
public RCPermission(java.lang.String name, java.lang.String actions)
```

Creates a new RCPermission object with the specified name. The name is the symbolic name of the RCPermission, and the actions String is unused and should be null. This constructor exists for use by the Policy object to instantiate new Permission objects.

Parameters:

`name` - the name of the RCPermission

`actions` - should be null.

Annex S (normative): Application Listing and Launching

Package org.dvb.application

Description

Provides access to lists of applications which are available in this context and the ability to launch those applications.

Class Summary

Interfaces

AppAttributes	The AppAttributes class is a mapping of various information about a registered application.
AppProxy	An AppProxy Object is a proxy to an application.
AppsDatabaseEventListener	The AppsDatabaseListener class allows an application to monitor the application database so that it can keep an up to date interface without polling the state.
AppStateChangeEventListener	The AppStateChangeEventListener class allows a launcher application to keep track of applications it launches or other applications running as part of the same service.
DVBHTMLProxy	A DVBHTMLProxy Object is a proxy to a DVBHTML application.
DVBJProxy	A DVBJProxy Object is a proxy to a DVBJ application.

Classes

AppIcon	The AppIcon encapsulates the information concerning the icon attached to the application
AppID	The AppID is a representation of the unique identifier for applications.
AppsControlPermission	This class represents a Permission to control the lifecycle of another application.
AppsDatabase	The AppsDatabase is an abstract view of the currently available applications.
AppsDatabaseEvent	The AppsDatabaseEvent class indicates either the an entry in the application database has changed, or so many changes have occurred.
AppsDatabaseFilter	Abstract class for the filters.
AppStateChangeEvent	The AppStateChangeEvent class indicates a state transition of the application.
CurrentServiceFilter	Instances of CurrentServiceFilter are used to set a filter on the list of applications that are retrieved from the AppsDatabase (See methods getAppsAttributes and getAppsIDs)

Exceptions

IllegalProfileParameterException	The IllegalProfileParameter exception is thrown if the application attempts to ask for a version number for a profile not specified for the application.
LanguageNotAvailableException	The LanguageNotAvailableException exception is thrown if the application asks for the name of an application in a language not signalled in the AIT.

org.dvb.application
AppAttributes

Syntax
```
public interface AppAttributes
```

Description
The `AppAttributes` class is a mapping of various information about a registered application. For applications which are signalled in an AIT, the mapping between the values returned by methods in this class and the fields and descriptors of the AIT shall be as specified in the main body of this specification.

Instances of objects implementing this interface are immutable and populated before the instance is first returned to an application.

Since:
MHP1.0

Fields

DVB_HTML_application

```
public static final int DVB_HTML_application
```

The DVB registered value for all DVB-HTML applications.

DVB_J_application

```
public static final int DVB_J_application
```

The DVB registered value for all DVB-J applications.

Methods

---

getAppIcon()

```
public AppIcon getAppIcon()
```

This method returns an object encapsulating the information about the icon(s) for the application.

Returns:
the information related to the icons that are attached to the application or null if no icon information is available

Since:
MHP1.0

---

getIdentifier()

```
public AppID getIdentifier()
```

This method returns the application identifier. depending on the

Returns:
the application identifier

Since:
MHP1.0

---

getIsServiceBound()

```
public boolean getIsServiceBound()
```

This method determines whether the application is bound to a single service.

Returns:
true if the application is bound to a single service, false otherwise.

Since:
MHP1.0

---

getName()

```
public java.lang.String getName()
```

This method returns the name of the application. If the default language (as specified in user preferences) is in the set of available language / name pairs then the name in that language shall be returned. Otherwise this method will return a name which appears in that set on a "best-effort basis".

Returns:
the name of the application

Since:
MHP1.0

---

getName(String)

```
public java.lang.String getName(java.lang.String iso639code)
```

This method returns the name of the application in the language which is specified by the parameter passed as an argument. If the language specified is not in the set of available language /name pairs then an exception shall be thrown.

Parameters:
`iso639code` - the specified language, encoded as per ISO 639.

Returns:
returns the name of the application in the specified language

Throws:
`LanguageNotAvailableException` - if the name is not available in the language specified

Since:
MHP1.0

---

getNames()

```
public java.lang.String[][] getNames()
```

This method returns all the available names for the application together with their ISO 639 language code.

Returns:

the possible names of the application, along with their ISO 639 language code. The first string in each sub-array is the ISO 639 language code. The second string in each sub-array is the corresponding application name.

Since:
MHP1.0

---

getPriority()

```
public int getPriority()
```

This method returns the priority of the application.

Returns:
the priority of the application.

Since:
MHP1.0

---

getProfiles()

```
public java.lang.String[] getProfiles()
```

This method returns those minimum profiles required for the application may execute. Profile names shall be encoded using the same encoding specified elsewhere in this specification as input for use with the `java.lang.System.getProperty` method to query if a profile is supported by this platform.

For example, for implementations conforming to the first version of the specification, the translation from AIT signaling values to strings shall be as follows:

- '1' in the signaling will be translated into 'mhp.profile.enhanced_broadcast'
- '2' in the signaling will be translated into 'mhp.profile.interactive_broadcast'

Only profiles known to this particular MHP terminal shall be returned. Hence the method can return an array of size zero where all the profiles on which an application can execute an application are unknown.

Returns:
an array of Strings, each String describing a profile.

Since:
MHP1.0

---

getProperty(String)

```
public java.lang.Object getProperty(java.lang.String index)
```

The following method is included for properties that do not have explicit property accessors. The naming of properties and their return values are described in the main body of this specification.

Parameters:
`index` - a property name

Returns:
either the return value corresponding to the property name or null if the property name is unknown

Since:
MHP1.0

---

getServiceLocator()

```
public org.davic.net.Locator getServiceLocator()
```

This method returns the locator of the Service describing the application. For an application transmitted on a remote connection, the returned locator shall be the service for that remote connection. For applications not transmitted on a remote connection, the service returned shall be the currently selected service of the service context within which the application calling the method is running.

Returns:
the locator of the Service describing the application.

Since:
MHP1.0

---

getType()

```
public int getType()
```

This method returns the type of the application (as registered by DVB).

Returns:
the type of the application (as registered by DVB).

Since:
MHP1.0

---

getVersions(String)

```
public int[] getVersions(java.lang.String profile)
```

This method returns an array of integers containing the version number of the specification required to run this application at the specified profile.

Parameters:
`profile` - a profile encoded as described in the main body of this specification for use with `java.lang.System.getProperty`.

Returns:
an array of integers, containing the major, minor and micro values (in that order) required for the specified profile.

Throws:
`IllegalProfileParameterException` - thrown if the profile specified is not one of the minimum profiles required for the application to execute.

Since:
MHP1.0

---

isStartable()

```
public boolean isStartable()
```

This method determines whether the application is startable or not. An Application is not startable if any of the following apply.

- The application is transmitted on a remote connection.
- The caller of the method does not have the Permissions to start it.
- At the moment when the method is called, the implementation has detected that this application is not available any more.

The value returned by this method does not depend on whether the application is actually running or not.

Returns:
true if an application is startable, false otherwise.

Since:
MHP1.0

org.dvb.application
AppIcon

Syntax
```
public class AppIcon

java.lang.Object
  |
  +--org.dvb.application.AppIcon
```

Description
The `AppIcon` encapsulates the information concerning the icon attached to the application

Constructors

AppIcon()

```
protected AppIcon()
```

The constructor for the class. This constructor is intended for implementation convenience and evolution of the specification and not for use by MHP applications. Applications should obtain instances of this class from `AppAttributes.getAppIcon`.

See Also:
`getAppIcon()`

Methods

---

getIconFlags()

```
public java.util.BitSet getIconFlags()
```

This method returns the flags identifying which icons are provided for the application.

Returns:
the icon flags encoded as a BitSet

Since:
MHP1.0

---

getLocator()

```
public org.davic.net.Locator getLocator()
```

This method returns the location of the directory containing the application icons.

Returns:
the location of the directory containing the application icons.

Since:
MHP1.0

org.dvb.application
AppID

Syntax

```
public class AppID

java.lang.Object
  |
  +--org.dvb.application.AppID
```

Description

The `AppID` is a representation of the unique identifier for applications.

Its string form is the Hex representation of the 48 bit number.

Constructors

AppID(int, int)

```
public AppID(int oid, int aid)
```

Create a new AppID based on the given integers. There is no range checking on these numbers.

Parameters:

`oid` - the globally unique organization number.

`aid` - the unique count within the organization.

Since:

MHP1.0

Methods

---

getAID()

```
public int getAID()
```

This method returns the integer value of the application count supplied in the constructor

Returns:

the integer value of the application count supplied in the constructor

Since:

MHP1.0

---

getOID()

```
public int getOID()
```

This method returns the integer value of the organization number supplied in the constructor.

Returns:

the integer value of the organization number supplied in the constructor.

Since:
MHP1.0

---

toString()

```
public java.lang.String toString()
```

This method returns a string containing the Hex representation of the 48 bit number.

Overrides:
java.lang.Object.toString() in class java.lang.Object

Returns:
a string containing the Hex representation of the 48 bit number.

Since:
MHP1.0

org.dvb.application
AppProxy

Syntax
```
public interface AppProxy
```

All Known Subinterfaces:
DVBHTMLProxy, DVBJProxy

Description
An AppProxy Object is a proxy to an application. A call to the start, stop or pause will cause the resident Application Manager to respectively start, stop or pause the application bound to this AppProxy object. Each of these three method calls can throw a Security Exception if the calling application is not entitled to do so.

Each of these method call is asynchronous and will result in exactly one AppStateChangedEvent to be generated whether the method call was successful or not. If the method call was not successful, any call to the hasFailed method of the corresponding AppStateChangeEvent will return true.

Some of the methods here allow the AppProxy to transition through several states before the final state is reached. If this compound state transition is unsuccessful at any point, the resulting AppStateChangedEvent shall have a fromstate and a tostate which are both the last state in this transition which the AppProxy successfully entered. For instance, if an application were to call start on an AppProxy for a DVB-J application in the NOT_LOADED state and that DVB-J application was to throw a XletStateChangeException from its startXlet method, both the getFromState and getToState will return PAUSED.

Calling the start method for an application which is already running shall fail and generate an AppStateChangeEvent with hasFailed returning true and both fromstate and tostate being STARTED.

See the definition of AppStateChangeEvent for more information.

See Also:
AppStateChangeEvent

Fields

DESTROYED

```
public static final int DESTROYED
```

The application is in the destroyed state.

NOT_LOADED

```
public static final int NOT_LOADED
```

The application has not yet been loaded from the network at all.

PAUSED

```
public static final int PAUSED
```

The application is in the paused state.

STARTED

```
public static final int STARTED
```

The application is in the active state.

Methods

addAppStateChangeEventListener(AppStateChangeEventListener)

```
public void addAppStateChangeEventListener(AppStateChangeEventListener listener)
```

Add a listener to the application proxy so that an application can be informed if the application changes state.

Parameters:
`listener` - the listener to be added.

Since:
MHP1.0

getState()

```
public int getState()
```

Return the current state of the application.

Returns:
the state of the application.

pause()

```
public void pause()
```

Request that the application manager pause the application bound to this information structure.

The `application` will be paused. Calls to this method shall fail if the application is not in the active state. If the application represented by this AppProxy is a DVB-J application, calling this method will, if successful, result in the `pauseXlet` method being called on the Xlet making up the DVB-J application.

Throws:
`SecurityException` - if the application is not entitled to pause this application. Note that if an application is entitled to stop an application, it is also entitled to pause it: having the right to stop an application is logically equivalent to having the right to pause it.

Since:
MHP1.0

removeAppStateChangeEventListener(AppStateChangeEventListener)

```
public void removeAppStateChangeEventListener(AppStateChangeEventListener listener)
```

Remove a listener on the database.

Parameters:
`listener` - the listener to be removed.

Since:
MHP1.0

---

resume()

```
public void resume()
```

Request that the application manager resume the execution of the application. The `application` will be started. This method will throw a security exception if the application does not have the authority to resume the application. Calls to this method shall fail if the application is not in the paused state.

This method is asynchronous and its completion will be notified by an AppStateChangedEvent. In case of failure, the hasFailed method of the `AppStateChangedEvent` will return true. If the application represented by this AppProxy is a DVB-J application, calling this method will, if successful, result in the `startXlet` method being called on the Xlet making up the DVB-J application.

Throws:
`SecurityException` - if the application is not entitled to resume this application.

Since:
MHP1.0

---

start()

```
public void start()
```

Request that the application manager start the application bound to this information structure.

The `application` will be started. This method will throw a security exception if the application does not have the authority to start applications. Calls to this method shall only succeed if the application is in the not loaded or paused states. If the application was not loaded at the moment of this call, then the application will be started. In the case of a DVB-J application, it will be initialized and then started by the Application Manager, hence causing the Xlet to go from NotLoaded to Paused and then from Paused to Active. If the application was in the Paused state at the moment of the call and had never been in the Active state, then the application will be started. If the application represented by this AppProxy is a DVB-J application, calling this method will, if successful, result in the `startXlet` method being called on the Xlet making up the DVB-J application.

This method is asynchronous and its completion will be notified by an AppStateChangedEvent. In case of failure, the hasFailed method of the `AppStateChangedEvent` will return true.

Throws:
`SecurityException` - if the application is not entitled to start this application.

Since:
MHP1.0

---

start(String[])

```
public void start(java.lang.String[] args)
```

Request that the application manager start the application bound to this information structure passing to that application the specified parameters.

The `application` will be started. This method will throw a security exception if the application does not have the authority to start applications. Calls to this method shall only succeed if the application is in the not loaded or paused states. If the application was not loaded at the moment of this call, then the application will be started. In the case of a DVB-J application, it will be initialized and then started by the Application Manager, hence causing the Xlet to go from NotLoaded to Paused and then from Paused to Active. If the application was in the Paused state at the moment of the call and had never been in the Active state, then the application will be started. If the application represented by this AppProxy is a DVB-J application, calling this method will, if successful, result in the `startXlet` method being called on the Xlet making up the DVB-J application.

This method is asynchronous and its completion will be notified by an AppStateChangedEvent. In case of failure, the hasFailed method of the `AppStateChangedEvent` will return true.

Parameters:

`args` - the parameters to be passed into the application being started

Throws:

`SecurityException` - if the application is not entitled to start this application.

Since:

MHP1.0.1

---

stop(boolean)

```
public void stop(boolean forced)
```

Request that the application manager stop the application bound to this information structure.

The `application` will be stopped. A call to this method shall fail if the application was already in the destroyed state. This method call will stop the application if it was in any other state before the call. If the application is in the NOT_LOADED state then it shall move directly to the DESTROYED state with no other action being taken. If the application represented by this AppProxy is a DVB-J application and is not in the DESTROYED state then calling this method will, if successful, result in the `destroyXlet` method being called on the Xlet making up the DVB-J application with the same value for the parameter as passed to this method.

This method is asynchronous and its completion will be notified by an AppStateChangedEvent. In case of failure, the hasFailed method of the `AppStateChangedEvent` will return true.

Parameters:

`forced` - if true then do not ask the application but forcibly terminate it, if false give the application an opportunity to refuse.

Throws:

`SecurityException` - if the application is not entitled to stop this application.

Since:

MHP1.0

org.dvb.application
AppsControlPermission

Syntax
```
public final class AppsControlPermission extends java.security.BasicPermission

java.lang.Object
  |
  +--java.security.Permission
        |
        +--java.security.BasicPermission
              |
              +--org.dvb.application.AppsControlPermission
```

All Implemented Interfaces:
java.security.Guard, java.io.Serializable

Description
This class represents a Permission to control the lifecycle of another application.

Constructors

AppsControlPermission()

```
public AppsControlPermission()
```

Creates a new AppsControlPermission. There is a simple mapping between the Application control Permission requests and the way the AppsControlPermission are granted. This mapping is defined in the main body of this specification.

AppsControlPermission(String, String)

```
public AppsControlPermission(java.lang.String name, java.lang.String actions)
```

Creates a new AppsControlPermission. There is a simple mapping between the Application control Permission requests and the way the AppsControlPermission are granted. This mapping is defined in the main body of this specification. The actions string is currently unused and should be null. The name string is currently unused and should be empty. This constructor exists for use by the java.security.Policy object to instantiate new permission objects.

Parameters:

`name` - the name of the permission

`actions` - the actions string

Methods

---

equals(Object)

```
public boolean equals(java.lang.Object obj)
```

Checks for equality against this AppsControlPermission object.

Overrides:
java.security.BasicPermission.equals(java.lang.Object) in class java.security.BasicPermission

Parameters:
`obj` - the object to test for equality with this AppsControlPermission object.

Returns:
true if obj is an AppsControlPermission

---

getActions()

```
public java.lang.String getActions()
```

Returns the list of actions that had been passed to the constructor - it shall return null.

Overrides:
java.security.BasicPermission.getActions() in class java.security.BasicPermission

Returns:
a null String.

---

hashCode()

```
public int hashCode()
```

Returns the hash code value for this object.

Overrides:
java.security.BasicPermission.hashCode() in class java.security.BasicPermission

Returns:
the hash code value for this object.

---

implies(Permission)

```
public boolean implies(java.security.Permission permission)
```

Checks if this AppsControlPermission object "implies" the specified permission.

Overrides:
java.security.BasicPermission.implies(java.security.Permission) in class java.security.BasicPermission

Parameters:
`permission` - the specified permission to check.

Returns:
true if and only if the specified permission is an instanceof AppsControlPermission, false otherwise.

org.dvb.application
AppsDatabase

Syntax

```
public class AppsDatabase

java.lang.Object
  |
  +--org.dvb.application.AppsDatabase
```

Description

The `AppsDatabase` is an abstract view of the currently available applications. The entries will be provided by the application manager, and gleaned from the AIT signaling. When the service context in which an application is running undergoes service selection, instances of `AppsDatabase` used by that application shall be updated from the new service before an `AppsDatabaseEvent` is sent to the `newDatabase` method of any registered `AppsDatabaseEventListeners`.

Externally authorized applications shall not appear unless an instance of that application is actually running.

A generic launcher may be written which uses the database to display information in AppAttributes and uses an AppProxy to launch it

Methods on classes in this package do not block, they return the information the system currently has. Therefore applications should be aware that data may be stale, to within one refresh period of the AIT.

eg:

```
AppsDatabase theDatabase = AppsDatabase.getDatabase();
if (theDatabase != null ) {
    Enumeration attributes = theDatabase.getAppAttributes();
    if(attributes != null) {
       while(attributes.hasMoreElements()) {
           AppAttributes info ;
           AppProxy proxy ;

           info = (AppAttributes)attributes.nextElement();
           proxy = (AppProxy)theDatabase.getAppProxy(info.getIdentifier());
           URL icon = info.getIcon();
           // blah blah..
           // lets start it.
           proxy.start(false, null);
       }
    }
}
```

Where methods on this class as specified as working on "available" applications or "currently available" applications the following definition shall apply. An application is "currently available" if and only if one of the following applies in the service context within which the application calling the method is executing.

- it is signalled as being present or autostart in the currently selected service of that service context and could be started.
- it is currently running in that service context.

In addition to the methods listed below, all calls made using an AppsDatabaseFilter shall only use that filter to test "currently available" applications as defined here.

Applications whose information (e.g. signaling) is invalid (e.g. one or more mandatory descriptors are missing or incorrect) may not be listed in the AppsDatabase. Where applications are signalled in a broadcast AIT and the MHP terminal tunes away from the service on which the AIT is carried, but without selecting a new service, the `AppsDatabase` shall retain the entries as signalled in that AIT until a new service is selected.

Methods

---

addListener(AppsDatabaseEventListener)

```
public void addListener(AppsDatabaseEventListener listener)
```

Add a listener to the database so that an application can be informed if the database changes.

Parameters:
`listener` - the listener to be added.

Since:
MHP1.0

---

getAppAttributes(AppID)

```
public AppAttributes getAppAttributes(AppID key)
```

Returns the properties associated with the given ID. Returns null if no such application is available, or if the application is externally authorized.

Only one AppAttributes object shall be returned in the case where there are several applications having the same (organisationId, applicationId) pair. In such a case, the same algorithm as would be used to autostart such applications shall be used to decide between the available choices by the implementation.

This method shall return instances which reflect the contents of the database at the time the method is called. After an AppsDatabaseEvent has been generated, new instances may be returned. After a service selection has taken place, applications which survived the service selection may call this method in order to discover the attributes of the applications signalled on the new service.

Parameters:
`key` - an application ID.

Returns:
the value to which the key is mapped in this dictionary or `null` if the key is not an application ID, or not mapped to any application currently available.

Since:
MHP1.0

---

getAppAttributes(AppsDatabaseFilter)

```
public java.util.Enumeration getAppAttributes(AppsDatabaseFilter filter)
```

Returns an enumeration of AppAttributes of the applications available. The Enumeration will contain the set of AppAttributes that satisfy the filtering criteria. For implementations conforming to this version of the specification, only `CurrentServiceFilter` filters may return a non empty Enumeration. If the filter object is not an instance of `CurrentServiceFilter` or a subclasses then, the method shall return an empty Enumeration.

This method shall return instances which reflect the contents of the database at the time the method is called. After an AppsDatabaseEvent has been generated, new instances may be returned. After a service selection has taken place, applications which survived the service selection may call this method in order to discover the attributes of the applications signalled on the new service.

No `AppAttribute` shall be returned for externally authorized applications, even ones which are executing. This method will return an empty Enumeration if there are no attributes.

Parameters:
`filter` - the filter to apply

Returns:
an enumeration of the applications attributes.

Since:
MHP1.0

---

getAppIDs(AppsDatabaseFilter)

```
public java.util.Enumeration getAppIDs(AppsDatabaseFilter filter)
```

Returns an enumeration of the application ID's available. The Enumeration will contain the set of AppID that match the filtering criteria. For implementations conforming to this version of the specification, only `CurrentServiceFilter` filters may return a non empty Enumeration. If the filter object is not an instance of `CurrentServiceFilter` or one of its subclasses then, the method shall return an empty Enumeration. No IDs shall be returned for externally authorized applications, even ones which are executing. This method will return an empty Enumeration if there are no matching applications.

Parameters:
`filter` - the filter to apply

Returns:
the applications available matching the filtering criteria

Since:
MHP1.0

---

getAppProxy(AppID)

```
public AppProxy getAppProxy(AppID key)
```

Returns the ApplicationProxy associated with the given ID. Returns null if no such application available.

Only one AppProxy object shall be returned in the case where there are several applications having the same (organisationId, applicationId) pair. In such a case, the same algorithm as would be used to autostart such applications shall be used to decide between the available choices by the implementation.

Parameters:
`key` - an application ID. `null` if the key is not an application ID, or not mapped to any application available.

Returns:
the value to which the key is mapped in this dictionary;

Throws:
`SecurityException` - if the calling application does not have the right to control the application associated with the given ID as defined by the security policy of the platform

Since:
MHP1.0

---

getAppsDatabase()

```
public static AppsDatabase getAppsDatabase()
```

Returns the singleton system-wide AppsDatabase object.

Returns:
the singleton AppsDatabase object.

Since:

MHP1.0

---

removeListener(AppsDatabaseEventListener)

```
public void removeListener(AppsDatabaseEventListener listener)
```

remove a listener on the database.

Parameters:
`listener` - the listener to be removed.

Since:
MHP1.0

---

size()

```
public int size()
```

Returns the number of applications currently available.

Returns:
the number of applications currently available.

Since:
MHP1.0

org.dvb.application
AppsDatabaseEvent

Syntax
```
public class AppsDatabaseEvent extends java.util.EventObject

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--org.dvb.application.AppsDatabaseEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
The `AppsDatabaseEvent` class indicates either the an entry in the application database has changed, or so many changes have occurred. that the database should be considered totally new This event shall always be sent after switching to a new service. It is platform dependant if and when a new database event is thrown while tuned to the same service.

Since:
MHP1.0

Fields

APP_ADDED

```
public static final int APP_ADDED
```

The addition event id. The APP_ADDED event is generated whenever an entry is added to the AppsDatabase. It is NOT generated when the entry already in the AppsDatabase changes.

APP_CHANGED

```
public static final int APP_CHANGED
```

The changed event id. The APP_CHANGED event is generated whenever any of the information about an application changes. It is NOT generated when the entry is added to or removed from the AppsDatabase. In such cases, the APP_ADDED or APP_DELETED events will be generated instead.

APP_DELETED

```
public static final int APP_DELETED
```

The deletion event id. The APP_DELETED event is generated whenever an entry is removed from the AppsDatabase.

NEW_DATABASE

```
public static final int NEW_DATABASE
```

The new database event id.

Constructors

AppsDatabaseEvent(int, AppID, Object)

```
public AppsDatabaseEvent(int id, AppID appid, java.lang.Object source)
```

Create a new AppsDatabaseEvent object for the entry in the database that changed, or for a new database.

Parameters:

`id` - the cause of the event

`appid` - the AppId of the entry that changed

`source` - the AppaDatabase object.

Since:

MHP1.0

Methods

getAppID()

```
public AppID getAppID()
```

gets the application ID object for the entry in the database that changed.

When the event type is NEW_DATABASE, AppID will be null.

Returns:

application ID representing the application

Since:

MHP1.0

getEventId()

```
public int getEventId()
```

gets the type of the event.

Returns:

an integer that matches one of the static fields describing events.

Since:

MHP1.0

org.dvb.application
AppsDatabaseEventListener

Syntax
```
public interface AppsDatabaseEventListener extends java.util.EventListener
```

All Superinterfaces:
java.util.EventListener

Description
The `AppsDatabaseListener` class allows an application to monitor the application database so that it can keep an up to date interface without polling the state. The application shall receive these events in a timely fashion after the AIT changes, however it is system dependant how often the AIT table is checked.

Since:
MHP1.0

Methods

---

entryAdded(AppsDatabaseEvent)

```
public void entryAdded(AppsDatabaseEvent evt)
```

The AppsDataBase has had an application entry added.

Parameters:
`evt` - the AppsDatabaseEvent.

Since:
MHP1.0

---

entryChanged(AppsDatabaseEvent)

```
public void entryChanged(AppsDatabaseEvent evt)
```

The AppsDataBase has had an application entry changed.

Parameters:
`evt` - the AppsDatabaseEvent.

Since:
MHP1.0

---

entryRemoved(AppsDatabaseEvent)

```
public void entryRemoved(AppsDatabaseEvent evt)
```

The AppsDataBase has had an application entry removed.

Parameters:
`evt` - the AppsDatabaseEvent.

Since:
MHP1.0

---

newDatabase(AppsDatabaseEvent)

```
public void newDatabase(AppsDatabaseEvent evt)
```

The AppsDataBase has radically changed.

Parameters:

`evt` - the AppsDatabaseEvent.

Since:

MHP1.0

org.dvb.application
AppsDatabaseFilter

Syntax
```
public abstract class AppsDatabaseFilter

java.lang.Object
  |
  +--org.dvb.application.AppsDatabaseFilter
```

Direct Known Subclasses:
CurrentServiceFilter

Description
Abstract class for the filters. Instances of concrete classes that extend `AppsDatabaseFilter` are passed to the AppsDatabase.getAppAttributes and AppsDatabase.getAppIDs methods to allow an applications to set a filter on the list of applications (respectively AppAttributes and AppIDs) that it wants to retrieve from the AppDatabase.

For this version of the specification, only one subclass is defined: CurrentServiceFilter

Since:
MHP 1.0

Constructors

AppsDatabaseFilter()

```
public AppsDatabaseFilter()
```

Construct an AppsDatabaseFilter object.

Methods

---

accept(AppID)

```
public abstract boolean accept(AppID appid)
```

Test if a specified appid should be included in the Enumeration.

Parameters:
`appid` - the specified appid to test.

Returns:
true if the application with identifier appid should be listed, false otherwise.

Since:
MHP1.0

org.dvb.application
AppStateChangeEvent

Syntax
```
public class AppStateChangeEvent extends java.util.EventObject

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--org.dvb.application.AppStateChangeEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
The `AppStateChangeEvent` class indicates a state transition of the application. If the state transition was requested by an application through this API, the method `hasFailed` indicates whether the state change failed or not. Where a state change succeeds, `fromState` and `toState` shall indicate the original and destination state of the transition. If it failed, `fromState` shall return the state the application was in before the state transition was requested and the `toState` method shall return the state the application would have been in if the state transition had succeeded.

Attempting to start an application which is already running shall fail and generate an `AppStateChangeEvent` with `hasFailed` returning true and both fromstate and tostate being `STARTED`.

Since:
MHP1.0

Constructors

AppStateChangeEvent(AppID, int, int, Object, boolean)

```
public AppStateChangeEvent(AppID appid, int fromstate, int tostate,
            java.lang.Object source, boolean hasFailed)
```

Create an AppStateChangeEvent object.

Parameters:

`appid` - a registry entry representing the tracked application

`fromstate` - the state the application was in before the state transition was requested, where the value of fromState is one of the state values defined in the AppProxy interface or in the interfaces inheriting from it

`tostate` - state the application would be in if the state transition succeeds, where the value of toState is one of the state values defined in the AppProxy interface or in the interfaces inheriting from it

`hasFailed` - an indication of whether the transition failed (true) or succeeded (false)

`source` - the `AppProxy` where the state transition happened

Methods

---

getAppID()

```
public AppID getAppID()
```

The application the listener was tracking has made a state transition from `fromState` to `toState`.

Returns:
a registry entry representing the tracked application

Since:
MHP1.0

---

getFromState()

```
public int getFromState()
```

The application the listener is tracking was in`fromState`, where the value of fromState is one of the state values defined in the AppProxy interface or in the interfaces inheriting from it.

Returns:
the old state

Since:
MHP1.0

---

getToState()

```
public int getToState()
```

The application the listener is tracking is now in `toState`, where the value of toState is one of the state values defined in the AppProxy interface or in the interfaces inheriting from it.

Returns:
the intended new state

Since:
MHP1.0

---

hasFailed()

```
public boolean hasFailed()
```

This method determines whether an attempt to change the state of an application has failed.

Returns:
true if the attempt to change the state of the application failed, false otherwise

Since:
MHP1.0

org.dvb.application
AppStateChangeEventListener

Syntax
```
public interface AppStateChangeEventListener extends java.util.EventListener
```

All Superinterfaces:
java.util.EventListener

Description
The `AppStateChangeEventListener` class allows a launcher application to keep track of applications it launches or other applications running as part of the same service.

Since:
MHP1.0

Methods

---

stateChange(AppStateChangeEvent)

```
public void stateChange(AppStateChangeEvent evt)
```

The application the listener was tracking has made a state transition from `fromState` to `toState` and this method will be given the state event.

Parameters:
`evt` - the AppStateChangeEvent.

Since:
MHP1.0

org.dvb.application
CurrentServiceFilter

Syntax
```
public class CurrentServiceFilter extends AppsDatabaseFilter

java.lang.Object
  |
  +--AppsDatabaseFilter
        |
        +--org.dvb.application.CurrentServiceFilter
```

Description
Instances of `CurrentServiceFilter` are used to set a filter on the list of applications that are retrieved from the AppsDatabase (See methods getAppsAttributes and getAppsIDs)

For this version of the specification, only the `CurrentServiceFilter` class is defined A `CurrentServiceFilter` is used to indicate that only broadcast applications that are signalled in one of the AITs of the current service shall be returned by the getAppsAttributes and getAppIDs methods of AppsDatabase. Subclasses of CurrentServiceFilter can override the accept method so as to implement their own filter criteria on the AppID's values.

Since:
MHP 1.0

Constructors

CurrentServiceFilter()

```
public CurrentServiceFilter()
```

public Constructor of the CurrentServiceFilter

Methods

---

accept(AppID)

```
public boolean accept(AppID appid)
```

Test if a specified appid should be included in the Enumeration.

Overrides:
`accept(AppID)` in class `AppsDatabaseFilter`

Parameters:
`appid` - the specified appid to test.

Returns:
true if the application with identifier appid should be listed, false otherwise.

Since:
MHP1.0

org.dvb.application
DVBHTMLProxy

Syntax
```
public interface DVBHTMLProxy extends AppProxy
```

All Superinterfaces:
AppProxy

Description
A DVBHTMLProxy Object is a proxy to a DVBHTML application.

Methods

---

prefetch()

```
public void prefetch()
```

Loads the initial entry page of the application and waits for a signal. This method mimics the PREFETCH control code and is intended to be called instead of and not as well as start. Calling prefetch on a started application will have no effect.

Throws:
SecurityException - if the calling application does not have permission to start applications

Since:
MHP1.0

---

startTrigger(Date)

```
public void startTrigger(java.util.Date starttime)
```

Sends the application a start trigger at the specified time.

Parameters:
starttime - the specified time to send a start trigger to the application. If the time has already passed the application manager shall send the trigger immediately. Dates pre-epoch shall always cause the application manager to send the trigger immediately.

Throws:
SecurityException - if the calling application does not have permission to start applications

Since:
MHP1.0

---

trigger(Date, Object)

```
public void trigger(java.util.Date time, java.lang.Object triggerPayload)
```

Sends the application a trigger with the given payload at the specified time.

Parameters:

`time` - the specified time to send a start trigger to the application. If the time has already passed the application manager should send the trigger immediately. Dates pre-epoch shall always cause the application manager to send a 'now' trigger.

`triggerPayload` - the specified payload to deliver with the trigger. The payload is specified as object, but this will be refined once DVB-HTML Triggers are properly defined.

Throws:

`SecurityException` - if the calling application does not have permission to start applications

Since:

MHP1.0

org.dvb.application
DVBJProxy

Syntax
```
public interface DVBJProxy extends AppProxy
```

All Superinterfaces:
AppProxy

Description
A DVBJProxy Object is a proxy to a DVBJ application.

Fields

LOADED

```
public static final int LOADED
```

The application is in the loaded state.

Methods

---

init()

```
public void init()
```

Requests the application manager calls the initXlet method on the application.

This method is asynchronous and its completion will be notified by an AppStateChangedEvent. In case of failure, the hasFailed method of the AppStateChangedEvent will return true. Calls to this method shall only succeed if the application is in the NOT_LOADED or LOADED states. If the application is in the NOT_LOADED state, the application will move through the LOADED state into the PAUSED state before calls to this method complete.

In all cases, an AppStateChangeEvent will be sent, whether the call was successful or not.

Throws:
SecurityException - if the application is not entitled to load this application. being able to load an application requires to be entitled to start it.

Since:
MHP1.0

---

load()

```
public void load()
```

Provides a hint to preload at least the initial class of the application into local storage, resources permitting. This does not require loading of classes into the virtual machine or creation of a new logical virtual machine which are implications of the init method.

This method is asynchronous and its completion will be notified by an `AppStateChangedEvent`. In case of failure, the `hasFailed` method of the `AppStateChangedEvent` will return true. Calls to this method shall only succeed if the application is in the NOT_LOADED state. In all cases, an AppStateChangeEvent will be sent, whether the call was successful or not.

Throws:

`SecurityException` - if the application is not entitled to load this application. being able to load an application requires to be entitled to start it.

Since:

MHP1.0

org.dvb.application
IllegalProfileParameterException

Syntax
```
public class IllegalProfileParameterException extends java.lang.Exception

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--org.dvb.application.IllegalProfileParameterException
```

All Implemented Interfaces:
java.io.Serializable

Description
The `IllegalProfileParameter` exception is thrown if the application attempts to ask for a version number for a profile not specified for the application.

Since:
MHP1.0

Constructors

IllegalProfileParameterException()

```
public IllegalProfileParameterException()
```

Construct a IllegalProfileParameterException with no detail message

---

IllegalProfileParameterException(String)

```
public IllegalProfileParameterException(java.lang.String s)
```

Construct a IllegalProfileParameterException with a detail message

Parameters:
`s` - detail message

org.dvb.application
LanguageNotAvailableException

Syntax

```
public class LanguageNotAvailableException extends java.lang.Exception
```

```
java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--org.dvb.application.LanguageNotAvailableException
```

All Implemented Interfaces:

java.io.Serializable

Description

The `LanguageNotAvailableException` exception is thrown if the application asks for the name of an application in a language not signalled in the AIT.

Since:

MHP1.0

Constructors

LanguageNotAvailableException()

```
public LanguageNotAvailableException()
```

Construct a LanguageNotAvailableException with no detail message

---

LanguageNotAvailableException(String)

```
public LanguageNotAvailableException(java.lang.String s)
```

Construct a LanguageNotAvailableException with a detail message

Parameters:

`s` - detail message

Annex T (normative): Permissions

Package
org.dvb.net.ca

Description
Provides extensions to the conditional access API from DAVIC.

Class Summary	
Classes	
CAPermission	This class is for CA permissions.

org.dvb.net.ca
CAPermission

Syntax

```
public class CAPermission extends java.security.BasicPermission

java.lang.Object
  |
  +--java.security.Permission
        |
        +--java.security.BasicPermission
              |
              +--org.dvb.net.ca.CAPermission
```

All Implemented Interfaces:

java.security.Guard, java.io.Serializable

Description

This class is for CA permissions. A CAPermission contains a name, but no actions list.

A CAPermission contains a range of CA system ids and a specific permission for that range of CA system ids. Instead of a range of CA system ids, the CAPermission can also refer to a single CA system id.

The name has the following syntax:

CASystemIdRange ":" Permission

where CASystemIdRange = CASystemId ["-" CASystemId] | "*"

and Permission = "MMI" | "buy" | "entitlementInfo" | "messagePassing" | "*"

Examples:

- 0x1200-0x120A:buy (The permission to buy entitlement for all the CA systems with ids between 0x1200 and 0x120A inclusive.)
- 0x1201:entitlementInfo (The permission to get entitlement information for the CA system with id 0x1201)
- 0x120d:* (This wildcard expresses all the permissions for the CA system with id 0x120d).

Note: The CASystemId is expressed as a hexadecimal value.

The permission "MMI" corresponds with the SecurityException on CAModuleManager.addMMIListener(). The permission "buy" corresponds with the SecurityException on CAModule.buyEntitlement(). The permission "entitlementInfo" corresponds with the SecurityException on CAModule.queryEntitlement() and CAModule.listEntitlements(). The permission "messagePassing" corresponds with CAModule.openMessageSession(MessageListener)

Constructors

CAPermission(String)

```
public CAPermission(java.lang.String name)
```

Creates a new CAPermission with the specified name. The name is the symbolic name of the CAPermission.

Parameters:

`name` - the name of the CAPermission

CAPermission(String, String)

```
public CAPermission(java.lang.String name, java.lang.String actions)
```

Creates a new CAPermission object with the specified name. The name is the symbolic name of the CAPermission, and the actions String is unused and should be null. This constructor exists for use by the Policy object to instantiate new Permission objects.

Parameters:

`name` - the name of the CAPermission

`actions` - should be null.

Package
org.dvb.net.tuning

Description
Provides extensions to the tuning API from DAVIC.

Class Summary	
Classes	
DvbNetworkInterface-SIUtil	Each SI database is associated with a network interface and vice versa.
TunerPermission	This class is for tuner permissions.

org.dvb.net.tuning
DvbNetworkInterfaceSIUtil

Syntax
```
public class DvbNetworkInterfaceSIUtil

java.lang.Object
  |
  +--org.dvb.net.tuning.DvbNetworkInterfaceSIUtil
```

Description
Each SI database is associated with a network interface and vice versa. This class allows the application to query this association.

Since:
MHP 1.0.1

Methods

---

getNetworkInterface(SIDatabase)

```
public static org.davic.net.tuning.NetworkInterface getNetworkInterface(SIDatabase sd)
```

Gets the network interface for a particular SI database.

Parameters:
`sd` - the SI database for which the associated network interface will be returned.

Returns:
the associated network interface

---

getSIDatabase(NetworkInterface)

```
public static SIDatabase getSIDatabase(org.davic.net.tuning.NetworkInterface ni)
```

Gets the SI database for a particular network interface.

Parameters:
`ni` - the network interface for which the associated SI database will be returned.

Returns:
the associated SI database

org.dvb.net.tuning
TunerPermission

Syntax

```
public class TunerPermission extends java.security.BasicPermission
```

```
java.lang.Object
  |
  +--java.security.Permission
        |
        +--java.security.BasicPermission
              |
              +--org.dvb.net.tuning.TunerPermission
```

All Implemented Interfaces:

java.security.Guard, java.io.Serializable

Description

This class is for tuner permissions. A TunerPermission contains no name and no actions list. If an application has the tuner permission, then it shall not receive a `SecurityException` from those methods in that API defined to throw one. Without such a permission, it shall receive such an exception.

Constructors

TunerPermission(String)

```
public TunerPermission(java.lang.String name)
```

Creates a new TunerPermission. The name string is currently unused and should be empty.

Parameters:

`name` - the name of the TunerPermission.

TunerPermission(String, String)

```
public TunerPermission(java.lang.String name, java.lang.String actions)
```

Creates a new TunerPermission. The name string is currently unused and should be empty. The actions string is currently unused and should be null. This constructor exists for use by the Policy object to instantiate new Permission objects.

Parameters:

`name` - the name of the TunerPermission.

`actions` - the actions list

Annex U (normative): Extended graphics APIs

Package org.dvb.ui

Description

Provides extended graphics functionality.

Class Summary

Interfaces

TestOpacity	Interface implemented by Components or Containers in order to allow the platform to query whether their paint method is fully opaque.
TextOverflowListener	The TextOverflowListener is an interface that an application may implement and register in the DVBTextLayoutManager.

Classes

DVBAlphaComposite	This DVBAlphaComposite class implements the basic alpha compositing rules for combining source and destination pixels to achieve blending and transparency effects with graphics, images and video.
DVBBufferedImage	The DVBBufferedImage subclass describes an java.awt.Image with an accessible buffer of image data.
DVBColor	A Color class which adds the notion of alpha.
DVBGraphics	The DVBGraphics class is a adapter class to support alpha compositing in an MHP device.
DVBTextLayoutManager	The DVBTextLayoutManager provides a text rendering layout mechanism for the org.havi.ui.HStaticText org.havi.ui.HText and org.havi.ui.HTextButton classes.
FontFactory	Provides a mechanism for applications to instantiate fonts that are not built into the system.

Exceptions

DVBRasterFormatException	This exception is thrown for some invalid operations on instances of DVBBufferedImage.
FontFormatException	Thrown when attempt is made to read a file describing a font when the contents of that file are not valid.
FontNotAvailableException	Thrown when attempt is made to instantiate a font that cannot be located.
UnsupportedDrawingOperationException	The UnsupportedDrawingOperationException class represents an exception that is thrown if an drawing operation is not supported on this platform.

org.dvb.ui
DVBAlphaComposite

Syntax

```
public final class DVBAlphaComposite

java.lang.Object
  |
  +--org.dvb.ui.DVBAlphaComposite
```

Description

This `DVBAlphaComposite` class implements the basic alpha compositing rules for combining source and destination pixels to achieve blending and transparency effects with graphics, images and video. The rules implemented by this class are a subset of the Porter-Duff rules described in T. Porter and T. Duff, "Compositing Digital Images", SIGGRAPH 84, 253-259.

If any input does not have an alpha channel, an alpha value of 1.0, which is completely opaque, is assumed for all pixels. A constant alpha value can also be specified to be multiplied with the alpha value of the source pixels.

The following abbreviations are used in the description of the rules:

- Cs = one of the color components of the source pixel without alpha.
- cs = color component of a source pixel premultimlied with alpha (cs = As*Ar*Cs)
- Cd = one of the color components of the destination pixel without alpha.
- cd = color component of a destination pixel premultimlied with alpha
- Cn = the new constructed color without alpha.
- cn = the new constructed color premultiplied with alpha
- As = alpha component of the source pixel.
- Ad = alpha component of the destination pixel.
- An = the new alpha after compositing
- Ar = alpha, specified by getInstance(int Rule, float Ar). Unless otherwise specified Ar = 1.0f
- Fs = fraction of the source pixel that contributes to the output.
- Fd = fraction of the input destination pixel that contributes to the output.

The color and alpha components produced by the compositing operation are calculated as follows:

```
cn = (As*Ar)*Cs*Fs + Ad*Cd*Fd
An = (As*Ar)*Fs + Ad*Fd
 Cn = cn/An
```

where Fs and Fd are specified by each rule.

The alpha resulting from the compositing operation is stored in the destination if the destination has an alpha channel. Otherwise, the resulting color is divided by the resulting alpha before being stored in the destination and the alpha is discarded. If the alpha value is 0.0, the color values are set to 0.0.

See Also:

`java.awt.AlphaComposite`

Fields

Clear

```
public static final DVBAlphaComposite Clear
```

DVBAlphaComposite object that implements the opaque CLEAR rule with an alpha (Ar) of 1.0f.

See Also:
CLEAR

CLEAR

```
public static final int CLEAR
```

Porter-Duff Clear rule. Both the color and the alpha of the destination are cleared. Neither the source nor the destination is used as input.

Fs = 0 and Fd = 0, thus:

```
cn = 0
An = 0
 Cn = 0
```

Note that this operation is a fast drawing operation This operation is the same as using a source with alpha= 0 and the SRC rule

---

DST_IN

```
public static final int DST_IN
```

Porter-Duff Destination In Source rule. The part of the destination lying inside of the source replaces the destination.

Fs = 0 and Fd = (As*Ar), thus:

```
cn = Ad*Cd*(As*Ar)
An = Ad*(As*Ar)
 Cn = Cd
```

Note that this operation is faster than e.g. SRC_OVER but slower as SRC

DST_OUT

```
public static final int DST_OUT
```

Porter-Duff Destination Held Out By Source rule. The part of the destination lying outside of the source replaces the destination.

Fs = 0 and Fd = (1-(As*Ar)), thus:

```
cn = Ad*Cd*(1-(As*Ar))
An = Ad*(1-(As*Ar))
 Cn = Cd
```

Note that this operation is faster than e.g. SRC_OVER but slower as SRC

DST_OVER

```
public static final int DST_OVER
```

Porter-Duff Destination Over Source rule. The destination is composited over the source and the result replaces the destination.

Fs = (1-Ad) and Fd = 1, thus:

```
cn = (As*Ar)*Cs*(1-Ad) + Ad*Cd
An = (As*Ar)*(1-Ad) + Ad
```

Note that this can be a very slow drawing operation

DstIn

```
public static final DVBAlphaComposite DstIn
```

DVBAlphaComposite object that implements the opaque DST_IN rule with an alpha (Ar) of 1.0f.

See Also:
DST_IN

DstOut

public static final DVBAlphaComposite DstOut

DVBAlphaComposite object that implements the opaque DST_OUT rule with an alpha (Ar) of 1.0f.

See Also:
DST_OUT

DstOver

public static final DVBAlphaComposite DstOver

DVBAlphaComposite object that implements the opaque DST_OVER rule with an alpha (Ar) of 1.0f.

See Also:
DST_OVER

Src

public static final DVBAlphaComposite Src

DVBAlphaComposite object that implements the opaque SRC rule with an alpha (Ar) of 1.0f.

See Also:
SRC

SRC

public static final int SRC

Porter-Duff Source rule. The source is copied to the destination. The destination is not used as input.

Fs = 1 and Fd = 0, thus:

```
cn = (As*Ar)*Cs
An = As*Ar
 Cn = Cs
```

Note that this is a fast drawing routine

SRC_IN

public static final int SRC_IN

Porter-Duff Source In Destination rule. The part of the source lying inside of the destination replaces the destination.

Fs = Ad and Fd = 0, thus:

```
cn = (As*Ar)*Cs*Ad
An = (As*Ar)*Ad
 Cn = Cs
```

Note that this operation is faster than e.g. SRC_OVER but slower as SRC

SRC_OUT

public static final int SRC_OUT

Porter-Duff Source Held Out By Destination rule. The part of the source lying outside of the destination replaces the destination.

Fs = (1-Ad) and Fd = 0, thus:

```
cn = (As*Ar)*Cs*(1-Ad)
An = (As*Ar)*(1-Ad)
 Cn = Cs
```

Note that this operation is faster than e.g. SRC_OVER but slower as SRC

SRC_OVER

```
public static final int SRC_OVER
```

Porter-Duff Source Over Destination rule. The source is composited over the destination.

Fs = 1 and Fd = (1-(As*Ar)), thus:

```
cn = (As*Ar)*Cs + Ad*Cd*(1-(As*Ar))
An = (As*Ar) + Ad*(1-(As*Ar))
```

Note that this can be a very slow drawing operation

SrcIn

```
public static final DVBAlphaComposite SrcIn
```

`DVBAlphaComposite` object that implements the opaque SRC_IN rule with an alpha (Ar) of 1.0f.

See Also:

SRC_IN

SrcOut

```
public static final DVBAlphaComposite SrcOut
```

`DVBAlphaComposite` object that implements the opaque SRC_OUT rule with an alpha (Ar) of 1.0f.

See Also:

SRC_OUT

SrcOver

```
public static final DVBAlphaComposite SrcOver
```

`DVBAlphaComposite` object that implements the opaque SRC_OVER rule with an alpha (Ar) of 1.0f.

See Also:

SRC_OVER

Methods

---

equals(Object)

```
public boolean equals(java.lang.Object obj)
```

Tests if the specified `java.lang.Object` is equal to this `DVBAlphaComposite` object.

Overrides:

java.lang.Object.equals(java.lang.Object) in class java.lang.Object

Parameters:
`obj` - the `Object` to test for equality

Returns:
`true` if `obj` is a DVBAlphaComposite and has the same values for rule and alpha as this object. Otherwise `false` shall be returned.

---

getAlpha()

```
public float getAlpha()
```

Returns the alpha value of this`DVBAlphaComposite`. If this `DVBAlphaComposite` does not have an alpha value, 1.0 is returned.

Returns:
the alpha value of this `DVBAlphaComposite`.

---

getInstance(int)

```
public static DVBAlphaComposite getInstance(int rule)
```

Creates an `DVBAlphaComposite` object with the specified rule. The value for alpha shall be 1.0f.

Parameters:
`rule` - the compositing rule

Returns:
an `DVBAlphaComposite` object with the specified rule.

---

getInstance(int, float)

```
public static DVBAlphaComposite getInstance(int rule, float alpha)
```

Creates an `DVBAlphaComposite` object with the specified rule and the constant alpha (Ar) to multiply with the alpha of the source (As). The source is multiplied with the specified alpha before being composited with the destination.

Parameters:
`rule` - the compositing rule

`alpha` - the constant alpha (Ar) to be multiplied with the alpha of the source (As). `alpha` must be a floating point number in the inclusive range [0.0, 1.0].

Returns:
an `DVBAlphaComposite` object with the specified rule and the constant alpha to multiply with the alpha of the source.

---

getRule()

```
public int getRule()
```

Returns the compositing rule of this `DVBAlphaComposite`.

Returns:
the compositing rule of this `DVBAlphaComposite`.

org.dvb.ui
DVBBufferedImage

Syntax

```
public class DVBBufferedImage extends java.awt.Image

java.lang.Object
  |
  +--java.awt.Image
        |
        +--org.dvb.ui.DVBBufferedImage
```

Description

The `DVBBufferedImage` subclass describes an `java.awt.Image` with an accessible buffer of image data. The DVBBufferedImage is an adapter class for java.awt.image.BufferedImage. It supports two different platform dependent sample models TYPE_BASE and TYPE_ADVANCED. Buffered images with the TYPE_BASE have the same sample model as the on screen graphics buffer, thus TYPE_BASE could be CLUT based. TYPE_ADVANCED has a direct color model but it is not specified how many bits are used to store the different color components. By default, a new DVBBufferedImage is transparent. All alpha values are set to 0;

Since:
MHP 1.0

Fields

TYPE_ADVANCED

```
public static final int TYPE_ADVANCED
```

Represents an image stored in a best possible SampleModel (platform dependent) The image has a DirectColorModel with alpha. The color data in this image is considered not to be premultiplied with alpha. The data returned by getRGB() will be in the TYPE_INT_ARGB color model that is alpha component in bits 24-31, the red component in bits 16-23, the green component in bits 8-15, and the blue component in bits 0-7. The data for setRGB() shall be in the TYPE_INT_ARGB color model as well.

Since:
MHP 1.0

TYPE_BASE

```
public static final int TYPE_BASE
```

Represents an image stored in a platform dependent Sample Model. This color model is not visible to applications. The data returned by getRGB() will be in the TYPE_INT_ARGB color model that is alpha component in bits 24-31, the red component in bits 16-23, the green component in bits 8-15, and the blue component in bits 0-7. The data for setRGB() shall be in the TYPE_INT_ARGB color model as well.

Since:
MHP 1.0

Constructors

DVBBufferedImage(int, int)

```
public DVBBufferedImage(int width, int height)
```

Constructs a DVBBufferedImage with the specified width and height. The Sample Model used the image is the native Sample Model (TYPE_BASE) of the implementation. Note that a request can lead to an java.lang.OutOfMemoryError. Applications should be aware of this.

Parameters:

`width` - the width of the created image

`height` - the height of the created image

Since:

MHP 1.0

DVBBufferedImage(int, int, int)

```
public DVBBufferedImage(int width, int height, int type)
```

Constructs a new DVBBufferedImage with the specified width and height in the Sample Model specified by type. Note that a request can lead to an java.lang.OutOfMemoryError. Applications should be aware of this.

Parameters:

`width` - the width of the DVBBufferedImage

`height` - the height of the DVBBufferedImage

`type` - the ColorSpace of the DVBBufferedImage

Since:

MHP 1.0

Methods

---

createGraphics()

```
public DVBGraphics createGraphics()
```

Creates a `DVBGraphics`, which can be used to draw into this `DVBBufferedImage`.

Returns:

a `DVBGraphics`, used for drawing into this image.

Since:

MHP 1.0

---

dispose()

```
public void dispose()
```

Disposes of this buffered image. This method releases the resources (e.g. pixel memory) underlying this buffered image. After calling this method ;

- the image concerned may not be used again
- the image shall be considered to have a width and height of -1, -1 as specified for instances of java.awt.Image where the width and height are not yet known.

- the `getGraphics` method may return null

Since:
MHP 1.0.1

---

flush()

```
public void flush()
```

Flushes all resources being used to cache optimization information. The underlying pixel data is unaffected.

Overrides:
java.awt.Image.flush() in class java.awt.Image

---

getGraphics()

```
public java.awt.Graphics getGraphics()
```

This method returns a `java.awt.Graphics`, it is here for backwards compatibility. `createGraphics()` is more convenient, since it is declared to return a `DVBGraphics`.

Overrides:
java.awt.Image.getGraphics() in class java.awt.Image

Returns:
a `Graphics`, which can be used to draw into this image.

---

getHeight()

```
public int getHeight()
```

Returns the height of the `DVBBufferedImage`.

Returns:
the height of this `DVBBufferedImage`.

Since:
MHP 1.0

---

getHeight(ImageObserver)

```
public int getHeight(java.awt.image.ImageObserver observer)
```

Returns the actual height of the image. If the height is not known yet then the `ImageObserver` is notified later and `-1` is returned.

Overrides:
java.awt.Image.getHeight(java.awt.image.ImageObserver) in class java.awt.Image

Parameters:
`observer` - the `ImageObserver` that receives information about the image

Returns:
the height of the image or `-1` if the height is not yet known.

See Also:
`java.awt.Image.getWidth(ImageObserver)`, `java.awt.image.ImageObserver`

---

getImage()

```
public java.awt.Image getImage()
```

Returns a java.awt.Image representing this buffered image. In implementations using the JDK1.2 API this returns a java.awt.image.BufferedImage cast to a java.awt.Image. Otherwise it is implementation dependent whether it returns this image or whether it returns an instance of an underlying platform specific sub-class of java.awt.Image.

Returns:
a java.awt.image representing this buffered image

Since:
MHP 1.0

---

getProperty(String, ImageObserver)

```
public java.lang.Object getProperty(java.lang.String name,
            java.awt.image.ImageObserver observer)
```

Returns a property of the image by name. Individual property names are defined by the various image formats. If a property is not defined for a particular image, this method returns the `UndefinedProperty` field. If the properties for this image are not yet known, then this method returns `null` and the `ImageObserver` object is notified later. The property name "comment" should be used to store an optional comment that can be presented to the user as a description of the image, its source, or its author.

Overrides:
java.awt.Image.getProperty(java.lang.String, java.awt.image.ImageObserver) in class java.awt.Image

Parameters:
`name` - the property name

`observer` - the `ImageObserver` that receives notification regarding image information

Returns:
an `java.lang.Object` that is the property referred to by the specified `name` or `null` if the properties of this image are not yet known.

See Also:
`java.awt.image.ImageObserver`, `java.awt.Image.UndefinedProperty`

---

getRGB(int, int)

```
public int getRGB(int x, int y)
```

Returns the specified integer pixel in the default RGB color model (TYPE_INT_ARGB) and default sRGB colorspace. Color conversion takes place if the used Sample Model is not 8-bit for each color component There are only 8-bits of precision for each color component in the returned data when using this method. Note that when a lower precision is used in this buffered image getRGB may return different values than those used in setRGB()

Parameters:
`x` - the x-coordinate of the pixel

`y` - the y-coordinate of the pixel

Returns:
an integer pixel in the default RGB color model (TYPE_INT_ARGB) and default sRGB colorspace.

Throws:
`ArrayIndexOutOfBoundsException` - if x or y is out of bounds

Since:
MHP 1.0

---

getRGB(int, int, int, int, int[], int, int)

```
public int[] getRGB(int startX, int startY, int w, int h, int[] rgbArray, int offset,
            int scansize)
```

Returns an array of integer pixels in the default RGB color model (TYPE_INT_ARGB) and default sRGB color space, from a rectangular region of the image data. There are only 8-bits of precision for each color component in the returned data when using this method. With a specified coordinate (x, y) in the image, the ARGB pixel can be accessed in this way:

```
pixel   = rgbArray[offset + (y-startY)*scansize + (x-startX)];
```

Parameters:

`startX` - the x-coordinate of the upper-left corner of the specified rectangular region

`startY` - the y-coordinate of the upper-left corner of the specified rectangular region

`w` - the width of the specified rectangular region

`h` - the height of the specified rectangular region

`rgbArray` - if not `null`, the rgb pixels are written here

`offset` - offset into the `rgbArray`

`scansize` - scanline stride for the `rgbArray`

Returns:

array of ARGB pixels.

Throws:

`ArrayIndexOutOfBoundsException` - if the specified portion of the image data is out of bounds.

`IllegalArgumentException`

Since:

MHP 1.0

---

getSource()

```
public java.awt.image.ImageProducer getSource()
```

Returns the object that produces the pixels for the image.

Overrides:

java.awt.Image.getSource() in class java.awt.Image

Returns:

the `java.awt.image.ImageProducer` that is used to produce the pixels for this image.

See Also:

`java.awt.image.ImageProducer`

---

getSubimage(int, int, int, int)

```
public DVBBufferedImage getSubimage(int x, int y, int w, int h)
```

Returns a subimage defined by a specified rectangular region. The returned `DVBBufferedImage` shares the same data array as the original image.

Parameters:

`x` - the x-coordinate of the upper-left corner of the specified rectangular region

`y` - the y-coordinate of the upper-left corner of the specified rectangular region

`w` - the width of the specified rectangular region

`h` - the height of the specified rectangular region

Returns:
a `DVBBufferedImage` that is the subimage of this `DVBBufferedImage`.

Throws:
`DVBRasterFormatException` - if the specified area is not contained within this `DVBBufferedImage`.

Since:
MHP 1.0

---

getWidth()

```
public int getWidth()
```

Returns the width of the `DVBBufferedImage`.

Returns:
the width of this `DVBBufferedImage`.

Since:
MHP 1.0

---

getWidth(ImageObserver)

```
public int getWidth(java.awt.image.ImageObserver observer)
```

Returns the actual width of the image. If the width is not known yet then the `java.awt.image.ImageObserver` is notified later and `-1` is returned.

Overrides:
java.awt.Image.getWidth(java.awt.image.ImageObserver) in class java.awt.Image

Parameters:
`observer` - the `ImageObserver` that receives information about the image

Returns:
the width of the image or `-1` if the width is not yet known.

See Also:
`java.awt.Image.getHeight(ImageObserver)`, `java.awt.image.ImageObserver`

---

setRGB(int, int, int)

```
public synchronized void setRGB(int x, int y, int rgb)
```

Sets a pixel in this `DVBBufferedImage` to the specified ARGB value. The pixel is assumed to be in the default RGB color model, TYPE_INT_ARGB, and default sRGB color space.

Parameters:
`x` - the x-coordinate of the pixel to set

`y` - the y-coordinate of the pixel to set

`rgb` - the ARGB value

Since:
MHP 1.0

---

setRGB(int, int, int, int, int[], int, int)

```
public void setRGB(int startX, int startY, int w, int h, int[] rgbArray, int offset,
            int scansize)
```

Sets an array of integer pixels in the default RGB color model (TYPE_INT_ARGB) and default sRGB color space, into a rectangular portion of the image data. There are only 8-bits of precision for each color component in the returned data when using this method. With a specified coordinate (x, y) in the this image, the ARGB pixel can be accessed in this way:

```
pixel   = rgbArray[offset + (y-startY)*scansize + (x-startX)];
```

WARNING: No dithering takes place.

Parameters:

`startX` - the x-coordinate of the upper-left corner of the specified rectangular region

`startY` - the y-coordinate of the upper-left corner of the specified rectangular region

`w` - the width of the specified rectangular region

`h` - the height of the specified rectangular region

`rgbArray` - the ARGB pixels

`offset` - offset into the `rgbArray`

`scansize` - scanline stride for the `rgbArray`

Since:

MHP 1.0

---

toString()

```
public java.lang.String toString()
```

Returns a `String` representation of this `DVBBufferedImage` object and its values.

Overrides:

java.lang.Object.toString() in class java.lang.Object

Returns:

a `String` representing this `DVBBufferedImage`.

org.dvb.ui
DVBColor

Syntax

```
public class DVBColor extends javax.tv.graphics.AlphaColor

java.lang.Object
  |
  +--java.awt.Color
        |
        +--javax.tv.graphics.AlphaColor
              |
              +--org.dvb.ui.DVBColor
```

All Implemented Interfaces:

java.io.Serializable

Description

A Color class which adds the notion of alpha. It is compatible with the JDK1.2 java.awt.Color class DVBColor extends org.davic.awt.Color which extends java.awt.Color. In implementations using the JDK1.1 this class adds support for alpha In implementations using the JDK1.2 the additional methods would just call super. Because DVBColor extends Color the signatures in the existing classes do not change. Classes like Component should work with DVBColor internally. Instances of this class are a container for the values which are passed in to the constructor. Any approximations made by the platform are made when the colors are used.

Since:

MHP 1.0

Constructors

DVBColor(Color)

```
public DVBColor(java.awt.Color c)
```

Constructs a new DVBColor using the specified color. If c supports alpha, e.g. if it is an instance of javax.tv.graphics.AlphaColor or JDK 1.2's java.awt.Color, then the alpha value of c shall be used.

Parameters:

`c` - the java.awt.Color used to create a new DVBColor

DVBColor(float, float, float, float)

```
public DVBColor(float r, float g, float b, float a)
```

Creates an sRGB color with the specified red, green, blue, and alpha values in the range (0.0 - 1.0). The actual color used in rendering will depend on finding the best match given the color space available for a given output device.

Parameters:

`r` - the red component

`g` - the green component

b - the blue component

a - the alpha component

See Also:

java.awt.Color.getRed(), java.awt.Color.getGreen(), java.awt.Color.getBlue(), getAlpha(), getRGB()

DVBColor(int, boolean)

```
public DVBColor(int rgba, boolean hasalpha)
```

Creates an sRGB color with the specified combined RGBA value consisting of the alpha component in bits 24-31, the red component in bits 16-23, the green component in bits 8-15, and the blue component in bits 0-7. If the hasalpha argument is False, alpha is defaulted to 255.

Parameters:

rgba - the combined RGBA components

hasalpha - true if the alpha bits are valid, false otherwise

See Also:

java.awt.Color.getRed(), java.awt.Color.getGreen(), java.awt.Color.getBlue(), getAlpha(), getRGB()

DVBColor(int, int, int, int)

```
public DVBColor(int r, int g, int b, int a)
```

Creates an sRGB color with the specified red, green, blue, and alpha values in the range (0 - 255).

Parameters:

r - the red component

g - the green component

b - the blue component

a - the alpha component

See Also:

java.awt.Color.getRed(), java.awt.Color.getGreen(), java.awt.Color.getBlue(), getAlpha(), getRGB()

Methods

---

brighter()

```
public java.awt.Color brighter()
```

Creates a brighter version of this color. This method applies an arbitrary scale factor to each of the three RGB components of the color to create a brighter version of the same color. Although brighter and darker are inverse operations, the results of a series of invocations of these two methods may be inconsistent because of rounding errors.

Overrides:

javax.tv.graphics.AlphaColor.brighter() in class javax.tv.graphics.AlphaColor

Returns:

a new DVBColor object (cast to a java.awt.Color object) representing a brighter version of this color. Applications can recast it to a org.dvb.ui.DVBColor object

See Also:
`java.awt.Color.brighter()`

---

darker()

```
public java.awt.Color darker()
```

Creates a darker version of this color. This method applies an arbitrary scale factor to each of the three RGB components of the color to create a darker version of the same color. Although brighter and darker are inverse operations, the results of a series of invocations of these two methods may be inconsistent because of rounding errors.

Overrides:
javax.tv.graphics.AlphaColor.darker() in class javax.tv.graphics.AlphaColor

Returns:
a new DVBColor object (cast to a java.awt.Color object), representing a darker version of thsi color. Applications can recast it to a org.dvb.ui.DVBColor object

See Also:
`java.awt.Color.darker()`

---

equals(Object)

```
public boolean equals(java.lang.Object obj)
```

Determines whether another object is equal to this color. The result is true if and only if the argument is not null and is a DVBColor object that has the same red, green, blue and alpha values as this object.

Overrides:
javax.tv.graphics.AlphaColor.equals(java.lang.Object) in class javax.tv.graphics.AlphaColor

Parameters:
`obj` - - the object to compare with.

Returns:
true if the objects are the same; false otherwise.

Since:
JDK1.0

---

getAlpha()

```
public int getAlpha()
```

Returns the alpha component. In the range 0-255.

Overrides:
javax.tv.graphics.AlphaColor.getAlpha() in class javax.tv.graphics.AlphaColor

Returns:
the alpha component

See Also:
`getRGB()`

---

getRGB()

```
public int getRGB()
```

Returns the RGB value representing the color in the default sRGB ColorModel. (Bits 24-31 are alpha, 16-23 are red, 8-15 are green, 0-7 are blue).

Overrides:
javax.tv.graphics.AlphaColor.getRGB() in class javax.tv.graphics.AlphaColor

Returns:
the RGB value representing the color in the default sRGB ColorModel.

Since:
JDK1.0

See Also:
`java.awt.Color.getRed()`, `java.awt.Color.getGreen()`, `java.awt.Color.getBlue()`, `getAlpha()`

---

toString()

```
public java.lang.String toString()
```

Creates a string that represents this color and indicates the values of its ARGB components.

Overrides:
javax.tv.graphics.AlphaColor.toString() in class javax.tv.graphics.AlphaColor

Returns:
a representation of this color as a String object.

Since:
JDK1.0

org.dvb.ui
DVBGraphics

Syntax

```
public abstract class DVBGraphics extends java.awt.Graphics

java.lang.Object
  |
  +--java.awt.Graphics
        |
        +--org.dvb.ui.DVBGraphics
```

Description

The `DVBGraphics` class is a adapter class to support alpha compositing in an MHP device. Most methods directly delegate to java.awt.Graphics other methods could delegate to the appropriate methods in java.awt.Graphics2D where available or could be implemented in native code This class inherits from java.awt.Graphics in implementations using the JDK1.1. In implementations using the JDK1.2 DVBGraphics inherits from java.awt.Graphics2D. **In MHP devices all Graphics Objects are DVBGraphics objects.** Thus one can get a DVBGraphics by casting a given Graphics object. The normal compositing rule used is **DVBAlphaComposite.SRC**. This is the fastest rule because there is no computation. Note this is not the default behaviour of other graphics libraries. When drawing pictures with an alpha channel the transparent part will be transparent to the video in the background. Programmers should set the rule to DVBAlphaComposite.SRC_OVER when drawing images or other shapes which shall be transparent to the graphics in the background The intersection between setDVBCompsite in this class and the `setPaintMode` and `setXORMode` methods inherited from java.awt.Graphics shall be as follows.

- Calling `setPaintMode` on an instance of this class shall be equivalent to calling `setDVBComposite(DVBAlphaComposite.Src)`.
- Calling `setXORMode` on an instance of this class shall be equivalent to calling `setDVBComposite` with a special and implementation dependent DVBAlphaComposite object with implements the semantics specified for this method in the parent class.
- Calling `getDVBComposite` when `setXORMode` is the last DVBComposite set shall return this implementation dependent object. Conformant MHP applications shall not do anything with or to this object including calling any methods on it.
- This specification does not tighten, refine or detail the definition of the `setXORMode` beyond what is specified for the parent class.

Note: Implementations of XOR mode may change colours with alpha to without and vice versa (reversibly).

Since:

MHP1.0

See Also:

`java.awt.Graphics`

Constructors

DVBGraphics()

```
protected DVBGraphics()
```

Constructs a new `DVBGraphics` object. This constructor is the default contructor for a graphics context.

Since `DVBGraphics` is an abstract class, applications cannot call this constructor directly. DVBGraphics contexts are obtained from other DVBGraphics contexts or are created by casting java.awt.Graphics to DVBGraphics.

Since:
MHP 1.0

See Also:
`java.awt.Graphics.create()`, `java.awt.Component.getGraphics()`

Methods

---

getAvailableCompositeRules()

```
public abstract int[] getAvailableCompositeRules()
```

Returns all available Porter-Duff Rules for this specific Graphics context. E.g. a devices could support the SRC_OVER rule when using a destination which does not has Alpha or where the alpha is null, while this rule is not available when drawing on a graphic context where the destination has alpha. Which rules are supported for the different graphics objects is defined in the Minimum Platform Capabilities of the MHP spec.

Returns:
all available Porter-Duff Rules for this specific Graphics context.

Since:
MHP 1.0

---

getBestColorMatch(Color)

```
public DVBColor getBestColorMatch(java.awt.Color c)
```

Returns the best match for the specified Color as a DVBColor, in a device-dependent manner, as constrained by the MHP graphics reference model.

Parameters:
`c` - the specified Color.

Returns:
the best DVBColor match for the specified Color.

Since:
MHP 1.0

---

getColor()

```
public abstract java.awt.Color getColor()
```

Gets this graphics context's current color. This will return a DVBColor cast to java.awt.Color.

Overrides:
java.awt.Graphics.getColor() in class java.awt.Graphics

Returns:
this graphics context's current color.

Since:

MHP 1.0

See Also:
DVBColor, java.awt.Color, setColor(Color)

---

getDVBComposite()

```
public abstract DVBAlphaComposite getDVBComposite()
```

Returns the current DVBAlphaComposite in the DVBGraphics context. This method could delegate to a java.awt.Graphics2D object where available

Returns:
the current DVBGraphics DVBAlphaComposite, which defines a compositing style.

Since:
MHP 1.0

See Also:
setDVBComposite(DVBAlphaComposite)

---

getType()

```
public int getType()
```

Returns the Sample Model (DVBBufferedImage.TYPE_BASE, DVBBufferedImage.TYPE_ADVANCED) which is used in the on/off screen buffer this graphics object draws into.

Returns:
the type of the Sample Model

Since:
MHP 1.0

See Also:
DVBBufferedImage

---

setColor(Color)

```
public abstract void setColor(java.awt.Color c)
```

Sets this graphics context's current color to the specified color. All subsequent graphics operations using this graphics context use this specified color. Note that color c can be a DVBColor

Overrides:
java.awt.Graphics.setColor(java.awt.Color) in class java.awt.Graphics

Parameters:
c - the new rendering color.

Since:
MHP 1.0

See Also:
java.awt.Color, DVBColor, getColor()

---

setDVBComposite(DVBAlphaComposite)

```
public abstract void setDVBComposite(DVBAlphaComposite comp)
```

Sets the DVBAlphaComposite for the DVBGraphics context. The DVBAlphaComposite is used in all drawing methods such as drawImage, drawString, draw, and fill. It specifies how new

pixels are to be combined with the existing pixels on the graphics device during the rendering process.

This method could delegate to a Graphics2D object or to an native implementation

Parameters:

`comp` - the `DVBAlphaComposite` object to be used for rendering

Throws:

`UnsupportedDrawingOperationException` - when the requested Porter-Duff rule is not supported by this graphics context

Since:

MHP 1.0

See Also:

`java.awt.Graphics.setXORMode(Color)`, `java.awt.Graphics.setPaintMode()`, `DVBAlphaComposite`

---

toString()

```
public java.lang.String toString()
```

Returns a `String` object representing this `DVBGraphics` object's value.

Overrides:

java.awt.Graphics.toString() in class java.awt.Graphics

Returns:

a string representation of this graphics context.

Since:

MHP 1.0

org.dvb.ui
DVBRasterFormatException

Syntax
```
public class DVBRasterFormatException extends java.lang.Exception

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--org.dvb.ui.DVBRasterFormatException
```

All Implemented Interfaces:
java.io.Serializable

Description
This exception is thrown for some invalid operations on instances of `DVBBufferedImage`. The precise conditions are defined in the places where this exception is throw.

Since:
MHP 1.0.1

See Also:
`DVBBufferedImage`

Constructors

DVBRasterFormatException(String)

```
public DVBRasterFormatException(java.lang.String s)
```

Constructs an instance of `DVBRasterFormatException` with the specified detail message.

Parameters:
`s` - the detail message

Since:
MHP1.0

org.dvb.ui
DVBTextLayoutManager

Syntax

```
public class DVBTextLayoutManager implements HTextLayoutManager

java.lang.Object
  |
  +--org.dvb.ui.DVBTextLayoutManager
```

All Implemented Interfaces:

HTextLayoutManager

Description

The DVBTextLayoutManager provides a text rendering layout mechanism for the org.havi.ui.HStaticText org.havi.ui.HText and org.havi.ui.HTextButton classes.

The semantics of the rendering behaviour and the settings are specified in the "Text presentation" annex of this specification. The DVBTextLayoutManager renders the text according to the semantics described in that annex.

Fields

HORIZONTAL_CENTER

```
public static final int HORIZONTAL_CENTER
```

The text should be centered horizontally.

HORIZONTAL_END_ALIGN

```
public static final int HORIZONTAL_END_ALIGN
```

The text should be horizontally to the horizontal end side (e.g. when start corner is upper left and line orientation horizontal, meaning text that is read left to right from top to bottom, this implies alignment to right).

HORIZONTAL_START_ALIGN

```
public static final int HORIZONTAL_START_ALIGN
```

The text should be aligned horizontally to the horizontal start side (e.g. when start corner is upper left and line orientation horizontal, meaning text that is read left to right from top to bottom, this implies alignment to left).

LINE_ORIENTATION_HORIZONTAL

```
public static final int LINE_ORIENTATION_HORIZONTAL
```

Horizontal line orientation.

LINE_ORIENTATION_VERTICAL

```
public static final int LINE_ORIENTATION_VERTICAL
```

Vertical line orientation.

START_CORNER_LOWER_LEFT

```
public static final int START_CORNER_LOWER_LEFT
```

Lower left text start corner.

START_CORNER_LOWER_RIGHT

```
public static final int START_CORNER_LOWER_RIGHT
```

Lower right text start corner.

START_CORNER_UPPER_LEFT

```
public static final int START_CORNER_UPPER_LEFT
```

Upper left text start corner.

START_CORNER_UPPER_RIGHT

```
public static final int START_CORNER_UPPER_RIGHT
```

Upper right text start corner.

VERTICAL_CENTER

```
public static final int VERTICAL_CENTER
```

The text should be centered vertically.

VERTICAL_END_ALIGN

```
public static final int VERTICAL_END_ALIGN
```

The text should be aligned vertically to the vertical end side (e.g. when start corner is upper left and line orientation horizontal, meaning text that is read left to right from top to bottom, this implies alignment to bottom).

This is is defined by the section "Vertical limits" in the "Text presentation" annex of this specification.

VERTICAL_START_ALIGN

```
public static final int VERTICAL_START_ALIGN
```

The text should be aligned vertically to the vertical start side (e.g. when start corner is upper left and line orientation horizontal, meaning text that is read left to right from top to bottom, this implies alignment to top).

This is is defined by the section "Vertical limits" in the "Text presentation" annex of this specification.

Constructors

DVBTextLayoutManager()

```
public DVBTextLayoutManager()
```

Constructs a DVBTextLayoutManager object with default parameters (HORIZONTAL_START_ALIGN, VERTICAL_START_ALIGN, LINE_ORIENTATION_HORIZONTAL, START_CORNER_UPPER_LEFT, wrap = true, linespace = (point size of the default font for HVisible) + 7, letterspace = 0, horizontalTabSpace = 56)

DVBTextLayoutManager(int, int, int, int, boolean, int, int, int)

```
public DVBTextLayoutManager(int horizontalAlign, int verticalAlign, int lineOrientation,
            int startCorner, boolean wrap, int linespace, int letterspace,
            int horizontalTabSpace)
```

Constructs a DVBTextLayoutManager object.

Parameters:

`horizontalAlign` - Horizontal alignment setting

`verticalAlign` - Vertical alignment setting

`lineOrientation` - Line orientation setting

`startCorner` - Starting corner setting

`wrap` - Text wrapping setting

`linespace` - Line spacing setting expressed in points

`letterspace` - Letterspacing adjustment relative to the default letterspacing. Expressed in units of 1/256th point as the required increase in the spacing between consecutive characters. May be either positive or negative.

`horizontalTabSpace` - Horizontal tabulation setting in points

Methods

addTextOverflowListener(TextOverflowListener)

```
public void addTextOverflowListener(TextOverflowListener l)
```

Register a TextOverflowListener that will be notified if the text string does not fit in the component when rendering.

Parameters:

`l` - a listener object

getHorizontalAlign()

```
public int getHorizontalAlign()
```

Get the horizontal alignment.

Returns:

Horizontal alignment setting

getHorizontalTabSpacing()

```
public int getHorizontalTabSpacing()
```

Get the horizontal tabulation spacing.

Returns:
the horizontal tabulation spacing

---

getInsets()

```
public java.awt.Insets getInsets()
```

Returns the insets that this text layout manager uses. When rendering text, it leaves empty margins of the size defined by the insets. The actual area used for the text is the area of the component decreased by the mount of insets at each edge. The deafult insets, if not set explicitly useing setInsets, are 0 at each edge, i.e. no margins.

Returns:
Insets used by this text layout manager.

---

getLetterSpace()

```
public int getLetterSpace()
```

Get the letter space setting.

Returns:
letter space setting

---

getLineOrientation()

```
public int getLineOrientation()
```

Get the line orientation.

Returns:
Line orientation setting

---

getLineSpace()

```
public int getLineSpace()
```

Get the line space setting.

Returns:
line space setting or -1, if the default line spacing is determined from the size of the default font is used.

---

getStartCorner()

```
public int getStartCorner()
```

Get the starting corner.

Returns:
Starting corner setting

---

getTextWrapping()

```
public boolean getTextWrapping()
```

Get the text wrapping setting.

Returns:

text wrapping setting

---

getVerticalAlign()

```
public int getVerticalAlign()
```

Get the vertical alignment.

Returns:
Vertical alignment setting

---

removeTextOverflowListener(TextOverflowListener)

```
public void removeTextOverflowListener(TextOverflowListener l)
```

Removes a TextOverflowListener that has been registered previously.

Parameters:
`l` - a listener object

---

render(String, Graphics, HVisible, Insets)

```
public void render(java.lang.String markedUpString, java.awt.Graphics g, HVisible v,
            java.awt.Insets insets)
```

Render the string. The `HTextLayoutManager` should use the passed `HVisible` object to determine any additional information required to render the string, e.g. `Font`, `Color` etc.

The text should be laid out in the layout area, which is defined by the bounds of the specified `HVisible` , after subtracting the insets. If the insets are `null` the full bounding rectangle is used as the area to render text into.

The `HTextLayoutManager` should not modify the clipping rectangle of the `Graphics` object.

Specified By:
`render(String, Graphics, HVisible, Insets)` in interface `HTextLayoutManager`

Parameters:
`markedUpString` - the string to render.

`g` - the graphics context, including a clipping rectangle which encapsulates the area within which rendering is permitted. If a valid insets value is passed to this method then text must only be rendered into the bounds of the widget after the insets are subtracted. If the insets value is `null` then text is rendered into the entire bounding area of the `HVisible` . It is implementation specific whether or not the renderer takes into account the intersection of the clipping rectangle in each case for optimization purposes.

`v` - the `HVisible` into which to render.

`insets` - the insets to determine the area in which to layout the text, or `null`.

---

setHorizontalAlign(int)

```
public void setHorizontalAlign(int horizontalAlign)
```

Set the horizontal alignment.

Parameters:
`horizontalAlign` - Horizontal alignment setting

---

setHorizontalTabSpacing(int)

```
public void setHorizontalTabSpacing(int horizontalTabSpace)
```

Set the horizontal tabulation spacing.

Parameters:

`horizontalTabSpace` - tab spacing in points

---

setInsets(Insets)

```
public void setInsets(java.awt.Insets insets)
```

Sets the insets that should be used by this text layout manager. The text is rendered to the area defined by the area of the component decreased by the amount of insets at each edge. If this method is not called, the default insets are 0 at each edge.

Parameters:

`insets` - Insets that should be used

---

setLetterSpace(int)

```
public void setLetterSpace(int letterSpace)
```

Set the letter space setting.

Parameters:

`letterSpace` - letter space setting

---

setLineOrientation(int)

```
public void setLineOrientation(int lineOrientation)
```

Set the line orientation.

Parameters:

`lineOrientation` - Line orientation setting

---

setLineSpace(int)

```
public void setLineSpace(int lineSpace)
```

Set the line space setting. Using -1 as the line space setting shall cause the line spacing to be determined from the size of the default font.

Parameters:

`lineSpace` - line space setting

---

setStartCorner(int)

```
public void setStartCorner(int startCorner)
```

Set the starting corner.

Parameters:

`startCorner` - Starting corner setting

---

setTextWrapping(boolean)

```
public void setTextWrapping(boolean wrap)
```

Set the text wrapping setting

Parameters:

`wrap` - Text wrapping setting

---

setVerticalAlign(int)

```
public void setVerticalAlign(int verticalAlign)
```

Set the vertical alignment.

Parameters:

`verticalAlign` - Vertical alignment setting

org.dvb.ui
FontFactory

Syntax
```
public class FontFactory

java.lang.Object
  |
  +--org.dvb.ui.FontFactory
```

Description
Provides a mechanism for applications to instantiate fonts that are not built into the system.

Constructors

FontFactory()

```
public FontFactory()
```

Constructs a FontFactory for the font index file bound to this application in the application signaling. The call to the constructor is synchronous and shall block until the font index file has been retrieved or an an exception is thrown.

Throws:

`FontFormatException` - if there is an error in the font index file bound with the application.

`java.io.IOException` - if there is no font index file bound with the application, or if there is an error attempting to access the data in that file.

FontFactory(URL)

```
public FontFactory(java.net.URL u)
```

Constructs a FontFactory for the specification of fonts found at the given location. The call to the constructor is synchronous and shall block until the font file has been retrieved or an exception is thrown.

Parameters:

`u` - The source of the font description

Throws:

`java.io.IOException` - if there is an error attempting to access the data referenced by the URL

`IllegalArgumentException` - if the URL is not both valid and supported

`SecurityException` - if access to the specified URL is denied by security policy

`FontFormatException` - if the file at that URL is not a valid font file as specified in the main body of this specification

Methods

createFont(String, int, int)

```
public java.awt.Font createFont(java.lang.String name, int style, int size)
```

Creates a font object from the font source associated with this FontFactory. This font will remain valid even if the FontFactory is no longer reachable from application code. The name returned by Font.getName() might not be the same as the name supplied, for example, it might have a string prepended to it that identifies the source FontFactory in a platform-dependant manner. For FontFactory instances bound to the font index file of an application, the call to the method is synchronous and shall block until either an exception is thrown or any required network access has completed.

The value of the style argument must be as defined in java.awt.Font. Valid values are the following:

- `java.awt.Font.PLAIN`
- `java.awt.Font.BOLD`
- `java.awt.Font.ITALIC`
- `java.awt.Font.BOLD + java.awt.Font.ITALIC`

Parameters:

`name` - the font name

`style` - the constant style used, such as java.awt.Font.PLAIN.

`size` - the point size of the font

Throws:

`FontNotAvailableException` - if a font with given parameters cannot be located or created.

`java.io.IOException` - if there is an error retrieving a font from the network. Thrown only for font factory instances bound to the font index file of an application.

`IllegalArgumentException` - if the style parameter is not in the set of valid values, or if the size parameter is zero or negative.

`FontFormatException` - if the font file is not a valid font file as specified in the main body of this specification. Thrown only for font factory instances bound to the font index file of an application.

org.dvb.ui
FontFormatException

Syntax
```
public class FontFormatException extends java.lang.Exception
```

```
java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--org.dvb.ui.FontFormatException
```

All Implemented Interfaces:
java.io.Serializable

Description
Thrown when attempt is made to read a file describing a font when the contents of that file are not valid.

Constructors

FontFormatException()

```
public FontFormatException()
```

Constructs a `FontNotAvailableException` with `null` as its error detail message.

FontFormatException(String)

```
public FontFormatException(java.lang.String s)
```

Constructs a `FontFormatException` with the specified detail message. The error message string `s` can later be retrieved by the `java.lang.Throwable.getMessage()` method of class `java.lang.Throwable`.

Parameters:
`s` - the detail message.

org.dvb.ui
FontNotAvailableException

Syntax
```
public class FontNotAvailableException extends java.lang.Exception

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--org.dvb.ui.FontNotAvailableException
```

All Implemented Interfaces:
java.io.Serializable

Description
Thrown when attempt is made to instantiate a font that cannot be located.

Constructors

FontNotAvailableException()

```
public FontNotAvailableException()
```

Constructs a `FontNotAvailableException` with `null` as its error detail message.

FontNotAvailableException(String)

```
public FontNotAvailableException(java.lang.String s)
```

Constructs a `FontNotAvailableException` with the specified detail message. The error message string `s` can later be retrieved by the `java.lang.Throwable.getMessage()` method of class `java.lang.Throwable`.

Parameters:
`s` - the detail message.

org.dvb.ui
TestOpacity

Syntax
```
public interface TestOpacity
```

All Known Implementing Classes:
HContainer, HComponent

Description
Interface implemented by Components or Containers in order to allow the platform to query whether their paint method is fully opaque.

Methods

---

isOpaque()

```
public boolean isOpaque()
```

Returns true if the entire area of the component as given by the getBounds method, is fully opaque. Hence its paint method (or surrogate methods) guarantees that all pixels are painted in an opaque Color.

Classes implementing this interface shall return true from their implementation of this method if and only if their implementation can guarantee full opacity. The consequences of an invalid overridden value are implementation specific.

Returns:

true if all the pixels with the java.awt.Component#getBounds method are fully opaque, otherwise false.

org.dvb.ui
TextOverflowListener

Syntax
```
public interface TextOverflowListener
```

Description
The TextOverflowListener is an interface that an application may implement and register in the DVBTextLayoutManager. This listener will be notified if the text string does not fit within the component when rendering it.

Methods

---

notifyTextOverflow(String, HVisible, boolean, boolean)

```
public void notifyTextOverflow(java.lang.String markedUpString, HVisible v,
            boolean overflowedHorizontally, boolean overflowedVertically)
```

This method is called by the DVBTextLayoutManager if the text does not fit within the component

Parameters:

`markedUpString` - the string that was rendered

`v` - the HVisible object that was being rendered

`overflowedHorizontally` - true if the text overflew the bounds of the component in the horizontal direction; otherwise false

`overflowedVertically` - true if the text overflew the bounds of the component in the vertical direction; otherwise false

org.dvb.ui

UnsupportedDrawingOperationException

Syntax

```
public class UnsupportedDrawingOperationException extends java.lang.Exception

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--org.dvb.ui.UnsupportedDrawingOperationException
```

All Implemented Interfaces:

java.io.Serializable

Description

The `UnsupportedDrawingOperationException` class represents an exception that is thrown if an drawing operation is not supported on this platform. E.g. DVBGraphics.setComposite could throw an Exception when setting the SRC_OVER rule on some devices while the SRC rule will always work.

Since:

MHP 1.0

Constructors

UnsupportedDrawingOperationException(String)

```
public UnsupportedDrawingOperationException(java.lang.String s)
```

Constructs an instance of `UnsupportedDrawingOperationException` with the specified detail message.

Parameters:

`s` - the detail message

Since:

MHP1.0

Annex V (normative): HAVi Level 2 User Interface

V.1 Register of Constants

```
public final static int org.havi.ui.HAdjustableLook.ADJUST_NONE = 0;
public final static int org.havi.ui.HAdjustableLook.ADJUST_BUTTON_LESS = 1;
public final static int org.havi.ui.HAdjustableLook.ADJUST_BUTTON_MORE = 2;
public final static int org.havi.ui.HAdjustableLook.ADJUST_PAGE_LESS = 2;
public final static int org.havi.ui.HAdjustableLook.ADJUST_PAGE_MORE = 3;
public final static int org.havi.ui.HAdjustableLook.ADJUST_THUMB = 4;

public final static int org.havi.ui.HAnimateEffect.PLAY_REPEATING = 1;
public final static int org.havi.ui.HAnimateEffect.PLAY_ALTERNATING = 2;
public final static int org.havi.ui.HAnimateEffect.REPEAT_INFINITE = -1;

public final static int org.havi.ui.HbackgroundConfigTemplate.CHANGEABLE_SINGLE_COLOR = 0x0A;
public final static int org.havi.ui.HbackgroundConfigTemplate.STILL_IMAGE = 0x0B;

public final static int org.havi.ui.HFontCapabilities.BASIC_LATIN = 1;
public final static int org.havi.ui.HFontCapabilities.LATIN_1_SUPPLEMENT = 2;
public final static int org.havi.ui.HFontCapabilities.LATIN_EXTENDED_A = 3;
public final static int org.havi.ui.HFontCapabilities.LATIN_EXTENDED_B = 4;
public final static int org.havi.ui.HFontCapabilities.IPA_EXTENSIONS = 5;
public final static int org.havi.ui.HFontCapabilities.SPACING_MODIFIER_LETTERS = 6;
public final static int org.havi.ui.HFontCapabilities.COMBINING_DIACRITICAL_MARKS = 7;
public final static int org.havi.ui.HFontCapabilities.BASIC_GREEK = 8;
public final static int org.havi.ui.HFontCapabilities.GREEK_SYMBOLS_AND_COPTIC = 9;
public final static int org.havi.ui.HFontCapabilities.CYRILLIC = 10;
public final static int org.havi.ui.HFontCapabilities.ARMENIAN = 11;
public final static int org.havi.ui.HFontCapabilities.BASIC_HEBREW = 12;
public final static int org.havi.ui.HFontCapabilities.HEBREW_EXTENDED = 13;
public final static int org.havi.ui.HFontCapabilities.BASIC_ARABIC = 14;
public final static int org.havi.ui.HFontCapabilities.ARABIC_EXTENDED = 15;
public final static int org.havi.ui.HFontCapabilities.DEVANAGARI = 16;
public final static int org.havi.ui.HFontCapabilities.BENGALI = 17;
public final static int org.havi.ui.HFontCapabilities.GURMUKHI = 18;
public final static int org.havi.ui.HFontCapabilities.GUJARATI = 19;
public final static int org.havi.ui.HFontCapabilities.ORIYA = 20;
public final static int org.havi.ui.HFontCapabilities.TAMIL = 21;
public final static int org.havi.ui.HFontCapabilities.TELUGU = 22;
public final static int org.havi.ui.HFontCapabilities.KANNADA = 23;
public final static int org.havi.ui.HFontCapabilities.MALAYALAM = 24;
public final static int org.havi.ui.HFontCapabilities.THAI = 25;
public final static int org.havi.ui.HFontCapabilities.LAO = 26;
public final static int org.havi.ui.HFontCapabilities.BASIC_GEORGIAN = 27;
public final static int org.havi.ui.HFontCapabilities.GEORGIAN_EXTENDED = 28;
public final static int org.havi.ui.HFontCapabilities.HANGUL_JAMO = 29;
public final static int org.havi.ui.HFontCapabilities.LATIN_EXTENDED_ADDITIONAL = 30;
public final static int org.havi.ui.HFontCapabilities.GREEK_EXTENDED = 31;
public final static int org.havi.ui.HFontCapabilities.GENERAL_PUNCTUATION = 32;
public final static int org.havi.ui.HFontCapabilities.SUPERSCRIPTS_AND_SUBSCRIPTS = 33;
public final static int org.havi.ui.HFontCapabilities.CURRENCY_SYMBOLS = 34;
public final static int org.havi.ui.HFontCapabilities.COMBINING_DIACTRICAL_MARKS_FOR_SYMBOLS = 35;
public final static int org.havi.ui.HFontCapabilities.LETTERLIKE_SYMBOLS = 36;
public final static int org.havi.ui.HFontCapabilities.NUMBER_FORMS = 37;
public final static int org.havi.ui.HFontCapabilities.ARROWS = 38;
public final static int org.havi.ui.HFontCapabilities.MATHEMATICAL_OPERATORS = 39;
public final static int org.havi.ui.HFontCapabilities.MISCELLANEOUS_TECHNICAL = 40;
public final static int org.havi.ui.HFontCapabilities.CONTROL_PICTURES = 41;
public final static int org.havi.ui.HFontCapabilities.OPTICAL_CHARACTER_RECOGNITION = 42;
public final static int org.havi.ui.HFontCapabilities.ENCLOSED_ALPHANUMERICS = 43;
public final static int org.havi.ui.HFontCapabilities.BOX_DRAWING = 44;
public final static int org.havi.ui.HFontCapabilities.BLOCK_ELEMENTS = 45;
public final static int org.havi.ui.HFontCapabilities.GEOMETRICAL_SHAPES = 46;
public final static int org.havi.ui.HFontCapabilities.MISCELLANEOUS_SYMBOLS = 47;
public final static int org.havi.ui.HFontCapabilities.DINGBATS = 48;
public final static int org.havi.ui.HFontCapabilities.CJK_SYMBOLS_AND_PUNCTUATION = 49;
public final static int org.havi.ui.HFontCapabilities.HIRAGANA = 50;
public final static int org.havi.ui.HFontCapabilities.KATAKANA = 51;
```

```
public final static int org.havi.ui.HFontCapabilities.BOPOMOFO = 52;
public final static int org.havi.ui.HFontCapabilities.HANGUL_COMPATIBILITY_JAMO = 53;
public final static int org.havi.ui.HFontCapabilities.CJK_MISCELLANEOUS = 54;
public final static int org.havi.ui.HFontCapabilities.ENCLOSED_CJK_LETTERS_AND_MONTHS = 55;
public final static int org.havi.ui.HFontCapabilities.CJK_COMPATIBILITY = 56;
public final static int org.havi.ui.HFontCapabilities.HANGUL = 57;
public final static int org.havi.ui.HFontCapabilities.HANGUL_SUPPLEMENTARY_A = 58;
public final static int org.havi.ui.HFontCapabilities.HANGUL_SUPPLEMENTARY_B = 59;
public final static int org.havi.ui.HFontCapabilities.CJK_UNIFIED_IDEOGRAPHS = 60;
public final static int org.havi.ui.HFontCapabilities.PRIVATE_USE_AREA = 61;
public final static int org.havi.ui.HFontCapabilities.CJK_COMPATIBILITY_IDEOGRAPHS = 62;
public final static int org.havi.ui.HFontCapabilities.ALPHABETIC_PRESENTATION_FORMS_A = 63;
public final static int org.havi.ui.HFontCapabilities.ARABIC_PRESENTATION_FORMS_A = 64;
public final static int org.havi.ui.HFontCapabilities.COMBINING_HALF_MARKS = 65;
public final static int org.havi.ui.HFontCapabilities.CJK_COMPATIBILITY_FORMS = 66;
public final static int org.havi.ui.HFontCapabilities.SMALL_FORM_VARIANTS = 67;
public final static int org.havi.ui.HFontCapabilities.ARABIC_PRESENTATION_FORMS_B = 68;
public final static int org.havi.ui.HFontCapabilities.HALFWIDTH_AND_FULLWIDTH_FORMS = 69;
public final static int org.havi.ui.HFontCapabilities.SPECIALS = 70;

public final static int org.havi.ui.HGraphicsConfigTemplate.VIDEO_MIXING = 0x0C;
public final static int org.havi.ui.HGraphicsConfigTemplate.MATTE_SUPPORT = 0x0D;
public final static int org.havi.ui.HGraphicsConfigTemplate.IMAGE_SCALING_SUPPORT = 0x0E;

public final static int org.havi.ui.HImageHints.NATURAL_IMAGE = 0x01;
public final static int org.havi.ui.HImageHints.CARTOON = 0x02;
public final static int org.havi.ui.HImageHints.BUSINESS_GRAPHICS = 0x03;
public final static int org.havi.ui.HImageHints.LINE_ART = 0x04;

public final static int org.havi.ui.HKeyboardInputPreferred.INPUT_ALPHANUMERIC = 0;
public final static int org.havi.ui.HKeyboardInputPreferred.INPUT_NUMERIC = 1;
public final static int org.havi.ui.HKeyboardInputPreferred.INPUT_ALPHA = 2;
public final static int org.havi.ui.HKeyboardInputPreferred.INPUT_CUSTOMIZED = 3;
public final static int org.havi.ui.HKeyboardInputPreferred.INPUT_ANY = 4;

public final static int org.havi.ui.HListGroup.ITEM_NOT_FOUND = -1;
public final static int org.havi.ui.HListGroup.ADD_INDEX_END = -1;
public final static int org.havi.ui.HListGroup.DEFAULT_LABEL_WIDTH = -1;
public final static int org.havi.ui.HListGroup.DEFAULT_LABEL_HEIGHT = -2;
public final static int org.havi.ui.HListGroup.DEFAULT_ICON_WIDTH = -3;
public final static int org.havi.ui.HListGroup.DEFAULT_ICON_HEIGHT = -4;

public final static int org.havi.ui.HOrientable.ORIENT_LEFT_TO_RIGHT = 0;
public final static int org.havi.ui.HOrientable.ORIENT_RIGHT_TO_LEFT = 1;
public final static int org.havi.ui.HOrientable.ORIENT_TOP_TO_BOTTOM = 2;
public final static int org.havi.ui.HOrientable.ORIENT_BOTTOM_TO_TOP = 3;

public final static int org.havi.ui.HScene.IMAGE_NONE = 0;
public final static int org.havi.ui.HScene.IMAGE_STRETCH = 1;
public final static int org.havi.ui.HScene.IMAGE_CENTER = 2;
public final static int org.havi.ui.HScene.IMAGE_TILE = 3;
public final static int org.havi.ui.HScene.NO_BACKGROUND_FILL = 0;
public final static int org.havi.ui.HScene.BACKGROUND_FILL = 1;

public final static int org.havi.ui.HSceneTemplate.REQUIRED = 0x01;
public final static int org.havi.ui.HSceneTemplate.PREFERRED = 0x02;
public final static int org.havi.ui.HSceneTemplate.UNNECESSARY = 0x03;
public final static int org.havi.ui.HSceneTemplate.GRAPHICS_CONFIGURATION = 0x00;
public final static int org.havi.ui.HSceneTemplate.SCENE_PIXEL_DIMENSION = 0x01;
public final static int org.havi.ui.HSceneTemplate.SCENE_PIXEL_LOCATION = 0x02;
public final static int org.havi.ui.HSceneTemplate.SCENE_SCREEN_DIMENSION = 0x04;
public final static int org.havi.ui.HSceneTemplate.SCENE_SCREEN_LOCATION = 0x08;

public final static int org.havi.ui.HScreenConfigTemplate.REQUIRED = 0x01;
public final static int org.havi.ui.HScreenConfigTemplate.PREFERRED = 0x02;
public final static int org.havi.ui.HScreenConfigTemplate.DONT_CARE = 0x03;
public final static int org.havi.ui.HScreenConfigTemplate.PREFERRED_NOT = 0x04;
public final static int org.havi.ui.HScreenConfigTemplate.REQUIRED_NOT = 0x05;
public final static int org.havi.ui.HScreenConfigTemplate.ZERO_BACKGROUND_IMPACT = 0x01;
public final static int org.havi.ui.HScreenConfigTemplate.ZERO_GRAPHICS_IMPACT = 0x02;
public final static int org.havi.ui.HScreenConfigTemplate.ZERO_VIDEO_IMPACT = 0x03;
```

```
public final static int org.havi.ui.HScreenConfigTemplate.INTERLACED_DISPLAY = 0x04;
public final static int org.havi.ui.HScreenConfigTemplate.FLICKER_FILTERING = 0x05;
public final static int org.havi.ui.HScreenConfigTemplate.VIDEO_GRAPHICS_PIXEL_ALIGNED = 0x06;
public final static int org.havi.ui.HScreenConfigTemplate.PIXEL_ASPECT_RATIO = 0x07;
public final static int org.havi.ui.HScreenConfigTemplate.PIXEL_RESOLUTION = 0x08;
public final static int org.havi.ui.HScreenConfigTemplate.SCREEN_RECTANGLE = 0x09;

public final static int org.havi.ui.HState.FOCUSED_STATE_BIT = 0x01;
public final static int org.havi.ui.HState.ACTIONED_STATE_BIT = 0x02;
public final static int org.havi.ui.HState.DISABLED_STATE_BIT = 0x04;
public final static int org.havi.ui.HState.FIRST_STATE = 0x80;
public final static int org.havi.ui.HState.NORMAL_STATE = 0x80;
public final static int org.havi.ui.HState.FOCUSED_STATE = 0x81;
public final static int org.havi.ui.HState.ACTIONED_STATE = 0x82;
public final static int org.havi.ui.HState.ACTIONED_FOCUSED_STATE = 0x83;
public final static int org.havi.ui.HState.DISABLED_STATE = 0x84;
public final static int org.havi.ui.HState.DISABLED_FOCUSED_STATE = 0x85;
public final static int org.havi.ui.HState.DISABLED_ACTIONED_STATE = 0x86;
public final static int org.havi.ui.HState.DISABLED_ACTIONED_FOCUSED_STATE = 0x87;
public final static int org.havi.ui.HState.ALL_STATES = 0x07;
public final static int org.havi.ui.HState.LAST_STATE = 0x07;

public final static int org.havi.ui.HStaticRange.SLIDER_BEHAVIOR = 0;
public final static int org.havi.ui.HStaticRange.SCROLLBAR_BEHAVIOR = 1;

public final static int org.havi.ui.HVideoConfigTemplate.GRAPHICS_MIXING = 0x0F;

public final static int org.havi.ui.HVisible.HALIGN_LEFT = 0;
public final static int org.havi.ui.HVisible.HALIGN_CENTER = 1;
public final static int org.havi.ui.HVisible.HALIGN_RIGHT = 2;
public final static int org.havi.ui.HVisible.HALIGN_JUSTIFY = 3;
public final static int org.havi.ui.HVisible.VALIGN_TOP = 0;
public final static int org.havi.ui.HVisible.VALIGN_CENTER = 4;
public final static int org.havi.ui.HVisible.VALIGN_BOTTOM = 8;
public final static int org.havi.ui.HVisible.VALIGN_JUSTIFY = 12;
public final static int org.havi.ui.HVisible.RESIZE_NONE = 0;
public final static int org.havi.ui.HVisible.RESIZE_PRESERVE_ASPECT = 1;
public final static int org.havi.ui.HVisible.RESIZE_ARBITRARY = 2;
public final static int org.havi.ui.HVisible.NO_BACKGROUND_FILL = 0;
public final static int org.havi.ui.HVisible.BACKGROUND_FILL = 1;
public final static int org.havi.ui.HVisible.FIRST_CHANGE = 0;
public final static int org.havi.ui.HVisible.TEXT_CONTENT_CHANGE = 0;
public final static int org.havi.ui.HVisible.GRAPHIC_CONTENT_CHANGE = 1;
public final static int org.havi.ui.HVisible.ANIMATE_CONTENT_CHANGE = 2;
public final static int org.havi.ui.HVisible.CONTENT_CHANGE = 3;
public final static int org.havi.ui.HVisible.STATE_CHANGE = 4;
public final static int org.havi.ui.HVisible.CARET_POSITION_CHANGE = 5;
public final static int org.havi.ui.HVisible.ECHO_CHAR_CHANGE = 6;
public final static int org.havi.ui.HVisible.EDIT_MODE_CHANGE = 7;
public final static int org.havi.ui.HVisible.MIN_MAX_CHANGE = 8;
public final static int org.havi.ui.HVisible.THUMB_OFFSETS_CHANGE = 9;
public final static int org.havi.ui.HVisible.ADJUSTMENT_VALUE_CHANGE = 13;
public final static int org.havi.ui.HVisible.ORIENTATION_CHANGE = 10;
public final static int org.havi.ui.HVisible.TEXT_VALUE_CHANGE = 11;
public final static int org.havi.ui.HVisible.ITEM_VALUE_CHANGE = 12;
public final static int org.havi.ui.HVisible.LIST_CONTENT_CHANGE = 14;
public final static int org.havi.ui.HVisible.LIST_ICONSIZE_CHANGE = 15;
public final static int org.havi.ui.HVisible.LIST_LABELSIZE_CHANGE = 16;
public final static int org.havi.ui.HVisible.LIST_MULTISELECTION_CHANGE = 17;
public final static int org.havi.ui.HVisible.LIST_SCROLLPOSITION_CHANGE = 18;
public final static int org.havi.ui.HVisible.UNKNOWN_CHANGE = 19;
public final static int org.havi.ui.HVisible.LAST_CHANGE = 19;
public final static int org.havi.ui.HVisible.NO_DEFAULT_WIDTH = -1;
public final static int org.havi.ui.HVisible.NO_DEFAULT_HEIGHT = -1;

public final static int org.havi.ui.event.HAdjustmentEvent.ADJUST_FIRST = 2000;
public final static int org.havi.ui.event.HAdjustmentEvent.ADJUST_LAST = 2005;
public final static int org.havi.ui.event.HAdjustmentEvent.ADJUST_START_CHANGE = 2000;
public final static int org.havi.ui.event.HAdjustmentEvent.ADJUST_LESS = 2001;
public final static int org.havi.ui.event.HAdjustmentEvent.ADJUST_MORE = 2002;
public final static int org.havi.ui.event.HAdjustmentEvent.ADJUST_PAGE_LESS = 2003;
```

```
public final static int org.havi.ui.event.HAdjustmentEvent.ADJUST_PAGE_MORE = 2004;
public final static int org.havi.ui.event.HAdjustmentEvent.ADJUST_END_CHANGE = 2005;

public final static int org.havi.ui.event.HBackgroundImageEvent.BACKGROUNDIMAGE_FIRST = 1;
public final static int org.havi.ui.event.HBackgroundImageEvent.BACKGROUNDIMAGE_LOADED = 1;
public final static int org.havi.ui.event.HBackgroundImageEvent.BACKGROUNDIMAGE_FILE_NOT_FOUND = 2;
public final static int org.havi.ui.event.HBackgroundImageEvent.BACKGROUNDIMAGE_IOERROR = 3;
public final static int org.havi.ui.event.HBackgroundImageEvent.BACKGROUNDIMAGE_INVALID = 4;
public final static int org.havi.ui.event.HBackgroundImageEvent.BACKGROUNDIMAGE_LAST = 4;

public final static int org.havi.ui.event.HEventRepresentation.ER_TYPE_NOT_SUPPORTED = 0;
public final static int org.havi.ui.event.HEventRepresentation.ER_TYPE_STRING = 1;
public final static int org.havi.ui.event.HEventRepresentation.ER_TYPE_COLOR = 2;
public final static int org.havi.ui.event.HEventRepresentation.ER_TYPE_SYMBOL = 4;

public final static int org.havi.ui.event.HFocusEvent.HFOCUS_FIRST = 2025;
public final static int org.havi.ui.event.HFocusEvent.FOCUS_TRANSFER = 2025;
public final static int org.havi.ui.event.HFocusEvent.HFOCUS_LAST = 2025;
public final static int org.havi.ui.event.HFocusEvent.NO_TRANSFER_ID = -1;

public final static int org.havi.ui.event.HItemEvent.ITEM_FIRST = 2006;
public final static int org.havi.ui.event.HItemEvent.ITEM_START_CHANGE = 2006;
public final static int org.havi.ui.event.HItemEvent.ITEM_TOGGLE_SELECTED = 2007;
public final static int org.havi.ui.event.HItemEvent.ITEM_SELECTED = 2008;
public final static int org.havi.ui.event.HItemEvent.ITEM_CLEARED = 2009;
public final static int org.havi.ui.event.HItemEvent.ITEM_SELECTION_CLEARED = 2010;
public final static int org.havi.ui.event.HItemEvent.ITEM_SET_CURRENT = 2011;
public final static int org.havi.ui.event.HItemEvent.ITEM_SET_PREVIOUS = 2012;
public final static int org.havi.ui.event.HItemEvent.ITEM_SET_NEXT = 2013;
public final static int org.havi.ui.event.HItemEvent.ITEM_END_CHANGE = 2014;
public final static int org.havi.ui.event.HItemEvent.ITEM_LAST = 2014;

public final static int org.havi.ui.event.HRcEvent.RC_FIRST = 400;
public final static int org.havi.ui.event.HRcEvent.VK_COLORED_KEY_0 = 403;
public final static int org.havi.ui.event.HRcEvent.VK_COLORED_KEY_1 = 404;
public final static int org.havi.ui.event.HRcEvent.VK_COLORED_KEY_2 = 405;
public final static int org.havi.ui.event.HRcEvent.VK_COLORED_KEY_3 = 406;
public final static int org.havi.ui.event.HRcEvent.VK_COLORED_KEY_4 = 407;
public final static int org.havi.ui.event.HRcEvent.VK_COLORED_KEY_5 = 408;
public final static int org.havi.ui.event.HRcEvent.VK_POWER = 409;
public final static int org.havi.ui.event.HRcEvent.VK_DIMMER = 410;
public final static int org.havi.ui.event.HRcEvent.VK_WINK = 411;
public final static int org.havi.ui.event.HRcEvent.VK_REWIND = 412;
public final static int org.havi.ui.event.HRcEvent.VK_STOP = 413;
public final static int org.havi.ui.event.HRcEvent.VK_EJECT_TOGGLE = 414;
public final static int org.havi.ui.event.HRcEvent.VK_PLAY = 415;
public final static int org.havi.ui.event.HRcEvent.VK_RECORD = 416;
public final static int org.havi.ui.event.HRcEvent.VK_FAST_FWD = 417;
public final static int org.havi.ui.event.HRcEvent.VK_PLAY_SPEED_UP = 418;
public final static int org.havi.ui.event.HRcEvent.VK_PLAY_SPEED_DOWN = 419;
public final static int org.havi.ui.event.HRcEvent.VK_PLAY_SPEED_RESET = 420;
public final static int org.havi.ui.event.HRcEvent.VK_RECORD_SPEED_NEXT = 421;
public final static int org.havi.ui.event.HRcEvent.VK_GO_TO_START = 422;
public final static int org.havi.ui.event.HRcEvent.VK_GO_TO_END = 423;
public final static int org.havi.ui.event.HRcEvent.VK_TRACK_PREV = 424;
public final static int org.havi.ui.event.HRcEvent.VK_TRACK_NEXT = 425;
public final static int org.havi.ui.event.HRcEvent.VK_RANDOM_TOGGLE = 426;
public final static int org.havi.ui.event.HRcEvent.VK_CHANNEL_UP = 427;
public final static int org.havi.ui.event.HRcEvent.VK_CHANNEL_DOWN = 428;
public final static int org.havi.ui.event.HRcEvent.VK_STORE_FAVORITE_0 = 429;
public final static int org.havi.ui.event.HRcEvent.VK_STORE_FAVORITE_1 = 430;
public final static int org.havi.ui.event.HRcEvent.VK_STORE_FAVORITE_2 = 431;
public final static int org.havi.ui.event.HRcEvent.VK_STORE_FAVORITE_3 = 432;
public final static int org.havi.ui.event.HRcEvent.VK_RECALL_FAVORITE_0 = 433;
public final static int org.havi.ui.event.HRcEvent.VK_RECALL_FAVORITE_1 = 434;
public final static int org.havi.ui.event.HRcEvent.VK_RECALL_FAVORITE_2 = 435;
public final static int org.havi.ui.event.HRcEvent.VK_RECALL_FAVORITE_3 = 436;
public final static int org.havi.ui.event.HRcEvent.VK_CLEAR_FAVORITE_0 = 437;
public final static int org.havi.ui.event.HRcEvent.VK_CLEAR_FAVORITE_1 = 438;
public final static int org.havi.ui.event.HRcEvent.VK_CLEAR_FAVORITE_2 = 439;
public final static int org.havi.ui.event.HRcEvent.VK_CLEAR_FAVORITE_3 = 440;
```

```
public final static int org.havi.ui.event.HRcEvent.VK_SCAN_CHANNELS_TOGGLE = 441;
public final static int org.havi.ui.event.HRcEvent.VK_PINP_TOGGLE = 442;
public final static int org.havi.ui.event.HRcEvent.VK_SPLIT_SCREEN_TOGGLE = 443;
public final static int org.havi.ui.event.HRcEvent.VK_DISPLAY_SWAP = 444;
public final static int org.havi.ui.event.HRcEvent.VK_SCREEN_MODE_NEXT = 445;
public final static int org.havi.ui.event.HRcEvent.VK_VIDEO_MODE_NEXT = 446;
public final static int org.havi.ui.event.HRcEvent.VK_VOLUME_UP = 447;
public final static int org.havi.ui.event.HRcEvent.VK_VOLUME_DOWN = 448;
public final static int org.havi.ui.event.HRcEvent.VK_MUTE = 449;
public final static int org.havi.ui.event.HRcEvent.VK_SURROUND_MODE_NEXT = 450;
public final static int org.havi.ui.event.HRcEvent.VK_BALANCE_RIGHT = 451;
public final static int org.havi.ui.event.HRcEvent.VK_BALANCE_LEFT = 452;
public final static int org.havi.ui.event.HRcEvent.VK_FADER_FRONT = 453;
public final static int org.havi.ui.event.HRcEvent.VK_FADER_REAR = 454;
public final static int org.havi.ui.event.HRcEvent.VK_BASS_BOOST_UP = 455;
public final static int org.havi.ui.event.HRcEvent.VK_BASS_BOOST_DOWN = 456;
public final static int org.havi.ui.event.HRcEvent.VK_INFO = 457;
public final static int org.havi.ui.event.HRcEvent.VK_GUIDE = 458;
public final static int org.havi.ui.event.HRcEvent.VK_TELETEXT = 459;
public final static int org.havi.ui.event.HRcEvent.VK_SUBTITLE = 460;
public final static int org.havi.ui.event.HRcEvent.RC_LAST = 460;
public final static int org.havi.ui.event.HTextEvent.TEXT_FIRST = 2015;
public final static int org.havi.ui.event.HTextEvent.TEXT_LAST = 2024;
public final static int org.havi.ui.event.HTextEvent.TEXT_START_CHANGE = 2015;
public final static int org.havi.ui.event.HTextEvent.TEXT_CHANGE = 2016;
public final static int org.havi.ui.event.HTextEvent.TEXT_CARET_CHANGE = 2017;
public final static int org.havi.ui.event.HTextEvent.TEXT_END_CHANGE = 2018;
public final static int org.havi.ui.event.HTextEvent.CARET_NEXT_CHAR = 2019;
public final static int org.havi.ui.event.HTextEvent.CARET_NEXT_LINE = 2020;
public final static int org.havi.ui.event.HTextEvent.CARET_PREV_CHAR = 2021;
public final static int org.havi.ui.event.HTextEvent.CARET_PREV_LINE = 2022;
public final static int org.havi.ui.event.HTextEvent.CARET_NEXT_PAGE = 2023;
public final static int org.havi.ui.event.HTextEvent.CARET_PREV_PAGE = 2024;
```

Package org.havi.ui

Class Summary	
Interfaces	
HActionable	This interface is implemented by all HAVi UI components that can be actioned by the user.
HActionInputPreferred	A component which implements HActionInputPreferred indicates that this component expects to receive HActionEvent input events.
HAdjustableLook	The HAdjustableLook interface is implemented by all platform looks which support adjustable components (i.e.
HAdjustmentInputPreferred	A component which implements HAdjustmentInputPreferred indicates that this component expects to receive HAdjustmentEvent input events.
HAdjustmentValue	This interface is implemented by all HAVi UI components which have some form of adjustable numerical value (e.g.
HAnimateEffect	The HAnimateEffect interface defines effect constants and controls for time-varying animations.
HComponentOrdering	This interface is implemented for all HAVi component containers that support the manipulation of the z-ordering of their children.
HItemValue	This interface is implemented by all HAVi UI components which have some form of selectable content (e.g.
HKeyboardInputPreferred	A component which implements HKeyboardInputPreferred indicates that this component expects to receive both HKeyEvent and HTextEvent input events.
HLook	The HLook interface defines the "look" of a component and may be regarded as a mechanism to allow a "pluggable" paint method to be attached to the component.
HMatte	HMatte is the base interface for all matte classes.
HMatteLayer	This HMatteLayer interface enables the presentation of components, together with an associated HMatte , for matte compositing.
HNavigable	This interface is implemented by all HAVi UI components that can be navigated to by the user (i.e.
HNavigationInputPreferred	A component which implements HNavigationInputPreferred indicates that this component expects to receive HFocusEvent events.
HNoInputPreferred	A component which implements HNoInputPreferred indicates that the user cannot navigate to this component.
HOrientable	The HOrientable interface provides support for components which have an orientation.
HSelectionInputPreferred	A component which implements HSelectionInputPreferred indicates that this component expects to receive HItemEvent input events.
HState	The HState interface encapsulates constants for component states which are used in the various HVisible setContent and getContent methods, to indicate which state the specified content is to be set.
HSwitchable	This interface is implemented for all user interface components that can be actioned such that they "toggle" on and off and maintain the chosen state.

Class Summary	
HTextLayoutManager	The HTextLayoutManager class manages the layout and rendering on-screen of a "marked-up" string.
HTextValue	This interface is implemented by all HAVi UI components which have have editable text content (e.g.
HVersion	The HVersion interface defines some versioning constants that are accessible by using the java.lang.System method getProperty, with the appropriate property name.
Classes	
HAnimateLook	The HAnimateLook class is used by any HVisible component to display animated graphical content.
HAnimation	The HAnimation class is a user interface component used to display animated graphical content (as HStaticAnimation) which additionally enables a user to navigate to it, i.e.
HBackgroundConfigTemplate	The HBackgroundConfigTemplate class is used to obtain a valid HBackgroundConfiguration .
HBackgroundConfiguration	The HBackgroundConfiguration class describes the characteristics (settings) of an HBackgroundDevice .
HBackgroundDevice	This class represents the ultimate background of a screen.
HBackgroundImage	This class represents a background image.
HChangeData	A class used as argument for widgetChanged(HVisible, HChangeData[ ]) .
HComponent	The HComponent class extends the java.awt.Component class by implementing the HMatteLayer interface.
HContainer	The HContainer class extends the java.awt.Container class by implementing the HMatteLayer interface and providing additional Z-ordering capabilities, which are required since components in the HAVi user-interface are explicitly allowed to overlap each other.
HDefaultTextLayoutManager	The HDefaultTextLayoutManager provides the default text rendering mechanism for the HStaticText HText and HTextButton classes.
HEmulatedGraphicsConfiguration	An HEmulatedGraphicsConfiguration is a configuration for a "virtual" graphics device that may perform one or more emulations, e.g.
HEmulatedGraphicsDevice	An HEmulatedGraphicsDevice is a "virtual" graphics device that has the capability to be configured to perform one (of many) possible emulations.
HEventMulticaster	The HEventMulticaster class is intended to handle event dispatching for the following HAVi events: HBackgroundImageEvent HScreenConfigurationEvent HScreenLocationModifiedEvent HActionEvent HFocusEvent HItemEvent HTextEvent HKeyEvent HAdjustmentEvent java.awt.event.WindowEvent org.davic.resources.ResourceStatusEvent
HFlatEffectMatte	The HFlatEffectMatte class represents a matte that is constant over space but varies over time.

Class Summary	
HFlatMatte	The HFlatMatte class represents a matte that is constant over space and time.
HFontCapabilities	The HFontCapabilities class allows applications to query the rendering support for various character ranges and individual characters within specified fonts.
HGraphicButton	The HGraphicButton is a user interface component representing a push-button with static read-only graphical content.
HGraphicLook	The HGraphicLook class is used by any HVisible component to display static graphical content.
HGraphicsConfigTemplate	The HGraphicsConfigTemplate class is used to obtain a valid HGraphicsConfiguration .
HGraphicsConfiguration	The HGraphicsConfiguration class describes the characteristics (settings) of an HGraphicsDevice .
HGraphicsDevice	The HGraphicsDevice class describes the raster graphics devices that are available for a particular HScreen .
HIcon	The HIcon is a user interface component used to display static graphical content (as HStaticIcon) which also enables a user to navigate to it, i.e.
HImageEffectMatte	The HImageEffectMatte class represents a matte that varies over both space and time, it is specified as a sequence of image masks.
HImageHints	The HImageHints object allows an application to pass hints to the system how best to tailor an image to match a (possibly) restricted HGraphicsConfiguration .
HImageMatte	The HImageMatte class represents a matte that varies over space but is constant over time, it can be specified by an "image mask" (a single channel image) where the pixels indicate matte transparency.
HListElement	HListElement is a holder for content used with the HListGroup component.
HListGroup	The HListGroup is a user interface component representing a list of selectable items (HListElement) which contain static read-only graphical and / or textual content.
HListGroupLook	The HListGroupLook class is used by the HListGroup component to display both the HListGroup itself (potentially including a scrollbar component) and graphical or textual list content held on the HListGroup .
HMultilineEntry	The HMultilineEntry is a user interface component used to receive multiple lines of alphanumeric entry from the user.
HMultilineEntryLook	The HMultilineEntryLook class is used by the HMultilineEntry component to display the entering of text.
HRange	The HRange is a user interface component used to display a value within a fixed range (as org.havi.ui.HStaticRange HStaticRange}) which also enables a user to navigate to it, i.e.
HRangeLook	The HRangeLook class is used to display a slider or scrollbar type range control on screen.
HRangeValue	The HRangeValue is a user interface component used to display a value within a fixed range (as org.havi.ui.HStaticRange HStaticRange}) which enables a user to navigate to and alter the value of it, i.e.
HScene	An HScene is a container representing the displayable area on-screen within which the application can display itself and thus interact with the user.
HSceneFactory	The HSceneFactory class provides a generic mechanism for an application to request HScene resources from a (conceptual) window management system.

Class Summary	
HSceneTemplate	The HSceneTemplate class is used to obtain an HScene subject to a variety of constraints.
HScreen	This class describes the final output composition of a device.
HScreenConfigTemplate	This class describes a configuration of a screen device in terms of various properties and their importance to the application.
HScreenConfiguration	The HScreenConfiguration class describes the characteristics (settings) of an HScreenDevice .
HScreenDevice	An instance of the HScreen class represents a single independent video output signal from a device.
HScreenDimension	HScreenDimension denotes a screen dimension expressed as a relative value of the screen dimensions.
HScreenPoint	HScreenPoint denotes a screen location expressed as a relative value of the screen dimensions.
HScreenRectangle	HScreenRectangle denotes a screen area expressed as a relative value of the screen dimensions.
HSinglelineEntry	The HSinglelineEntry is a user interface component used to receive a single line of alphanumeric entry from the user and can also be used for password input.
HSinglelineEntryLook	The HSinglelineEntryLook class is used by the HSinglelineEntry component to display the entering of text.
HSound	The HSound class is used to represent an audio clip.
HStaticAnimation	The HStaticAnimation is a user interface component used to display animated graphical content but which does *not* permit the user to navigate (focus) upon it.
HStaticIcon	The HStaticIcon is a user interface component used to display static graphical content which does *not* permit the user to navigate (focus) upon it.
HStaticRange	The HStaticRange is a user interface component used to display a static value which is within a fixed range, but does *not* permit the user to navigate (focus) upon it.
HStaticText	The HStaticText is a user interface component used to display static read-only textual content which does *not* permit the user to navigate (focus) upon it.
HStillImageBackground-Configuration	This class represents a background configuration which supports the installation of still images.
HText	The HText is a user interface component used to display static read-only textual content (as HStaticText) which additionally enables a user to navigate to it, i.e.
HTextButton	The HTextButton is a user interface component representing a push-button with static read-only textual content.
HTextLook	The HTextLook class is used by any HVisible component to display static text content.
HToggleButton	The HToggleButton is a user interface component representing a "check box", or with the support of the HToggleGroup class, "radio buttons".
HToggleGroup	HToggleButton within the same HToggleGroup will behave so that a maximum of one HToggleButton has switchable state true, as returned by getSwitchableState() , so as to achieve a "radio button" effect.
HVideoComponent	HVideoComponent is an opaque class encapsulating the presentation of a video source *within* an application, i.e.

Class Summary	
HVideoConfigTemplate	The HVideoConfigTemplate class is used to obtain a valid HVideoConfiguration .
HVideoConfiguration	The HVideoConfiguration class describes the characteristics (settings) of an HVideoDevice .
HVideoDevice	The HVideoDevice class describes the logical video devices which can contribute to the appearance of a particular screen.
HVisible	The HVisible class is the base class for all non-interactive components.
Exceptions	
HConfigurationException	Thrown when an application requests an HScreenConfiguration that cannot be satisfied -- either because the HScreenConfiguration does not have the functionality, or because the requested HScreenConfiguration is otherwise invalid, e.g.
HInvalidLookException	An HInvalidLookException is an exception that is thrown when a particular HLook is not compatible with the HVisible component it has been associated with.
HMatteException	An HMatteException is an exception that is thrown when a Component is unable to support the desired HMatte effect.
HPermissionDeniedException	Thrown when an application attempts to control a device or feature it does not have the right to do at the time of making the call.
HUIException	HUIException is a generic exception that indicates that the desired user-interface mechanism cannot be performed for some reason.

org.havi.ui
HActionable

Syntax
```
public interface HActionable extends HNavigable, HActionInputPreferred
```

All Known Subinterfaces:
HSwitchable

All Superinterfaces:
HActionInputPreferred, HNavigable, HNavigationInputPreferred

All Known Implementing Classes:
HTextButton, HGraphicButton

Description
This interface is implemented by all HAVi UI components that can be actioned by the user.

Event Behaviour

Subclasses of HComponent which implement HActionable must respond to HFocusEvent and HActionEvent events.

Applications should assume that classes which implement HActionable can generate events of the types HFocusEvent and HActionEvent in response to other types of input event.

An application may add one or more HActionListener listeners to the component. The actionPerformed method of the HActionListener is invoked whenever the HActionable is actioned.


HAVi action events are discussed in detail in the HActionInputPreferred interface description.

Interaction States

The following interaction states are valid for this HActionable component:

- NORMAL_STATE
- FOCUSED_STATE
- ACTIONED_STATE
- ACTIONED_FOCUSED_STATE
- DISABLED_STATE
- DISABLED_FOCUSED_STATE

The state machine diagram below shows the valid state transitions for an HActionable component.

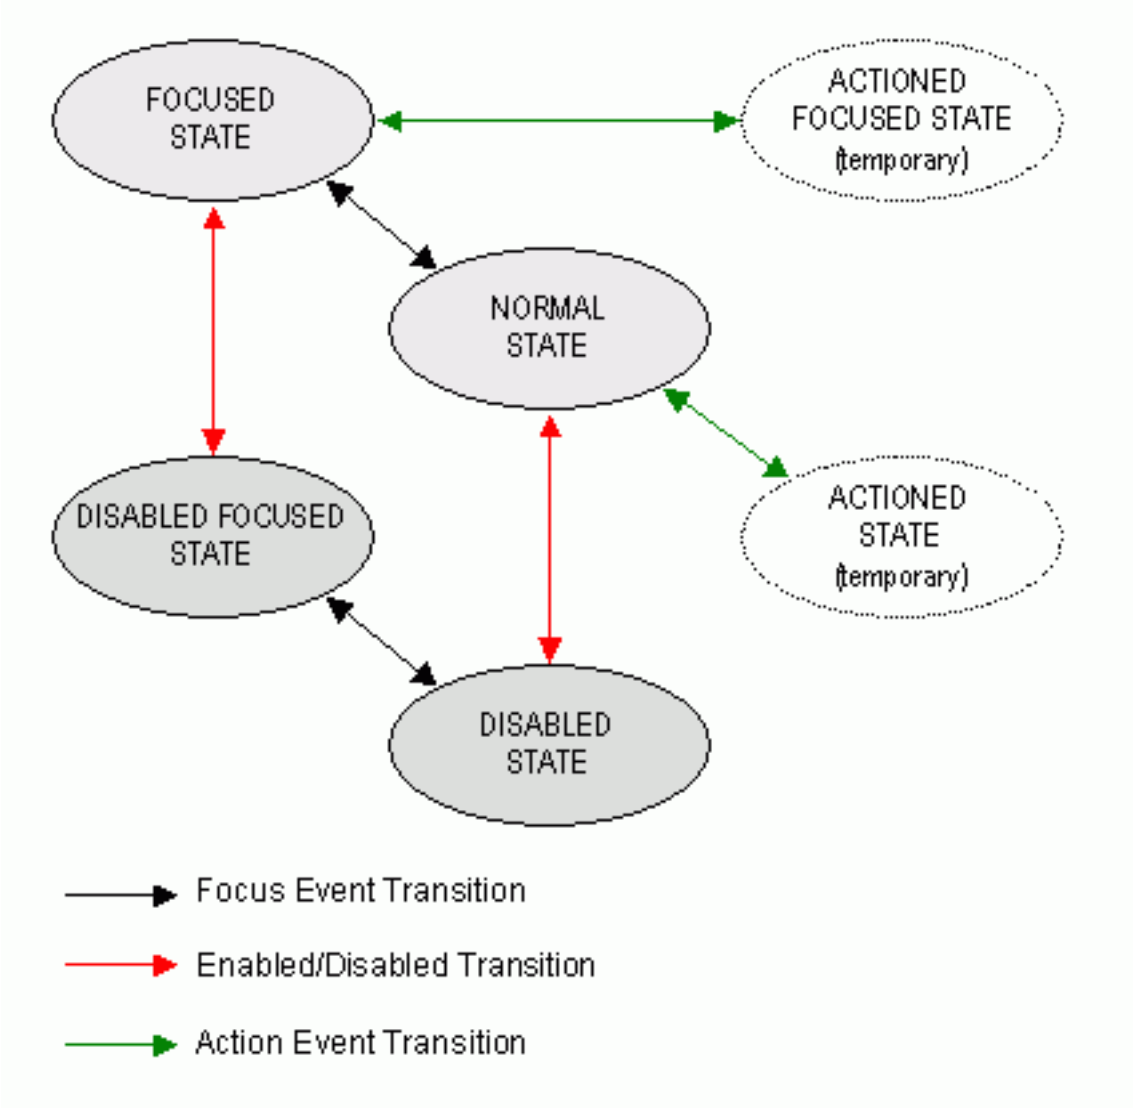

Unlike `HSwitchable` components the transition back from an actioned state (i.e. one with the `ACTIONED_STATE_BIT` bit set is automatically fired once all registered `HActionListener` listeners have been called.

A direct consequence of is that `HActionable` components can only achieve the `ACTIONED_STATE` and `ACTIONED_FOCUSED_STATE` states on a temporary basis.

`HActionable` components may not be disabled while actioned.

Platform Classes

The following HAVi platform classes implement or inherit the `HActionable` interface. These classes shall all generate both `HFocusEvent` and `HActionEvent` events in addition to any other events specified in the respective class descriptions.

- `HGraphicButton`
- `HTextButton`
- `HToggleButton`
- `HListGroup`

See Also:
HNavigable, HActionInputPreferred, HActionEvent, HActionListener

Methods

---

addHActionListener(HActionListener)

```
public void addHActionListener(HActionListener l)
```

Adds the specified HActionListener to receive HActionEvent events sent from this HActionable. If the listener has already been added further calls will add further references to the listener, which will then receive multiple copies of a single event.

Parameters:
l - the HActionListener.

---

getActionCommand()

```
public java.lang.String getActionCommand()
```

Gets the command name for the HActionEvent event fired by this HActionable.

Returns:
A String representing the command name of the HActionEvent fired by this HActionable.

See Also:
getActionCommand()

---

getActionSound()

```
public HSound getActionSound()
```

Associate a sound to be played when the interaction state of the HActionable makes the following transitions:

- NORMAL_STATE to ACTIONED_STATE
- FOCUSED_STATE to ACTIONED_FOCUSED_STATE

Returns:
The sound played when the component is actioned.

---

removeHActionListener(HActionListener)

```
public void removeHActionListener(HActionListener l)
```

Removes the specified HActionListener so that it no longer receives HActionEvent events from this HActionable. If the specified listener is not registered, the method has no effect. If multiple references to a single listener have been registered it should be noted that this method will only remove one reference per call.

Parameters:
l - the HActionListener.

---

setActionCommand(String)

```
public void setActionCommand(java.lang.String command)
```

Sets the command name for the HActionEvent event fired by this HActionable .

Parameters:

command - a String used to set the action command.

See Also:

getActionCommand()

---

setActionSound(HSound)

```
public void setActionSound(HSound sound)
```

Associate a sound to be played when the interaction state of the HActionable makes the following transitions:

- NORMAL_STATE to ACTIONED_STATE
- FOCUSED_STATE to ACTIONED_FOCUSED_STATE

Parameters:

sound - the sound to be played, when the component is actioned. If sound content is already set, the original content is replaced. To remove the sound specify a null HSound .

org.havi.ui
HActionInputPreferred

Syntax
```
public interface HActionInputPreferred
```

All Known Subinterfaces:
HActionable, HSwitchable

Description
A component which implements HActionInputPreferred indicates that this component expects to receive HActionEvent input events.

All interoperable implementations of the HActionInputPreferred interface must extend HComponent.

Note that the java.awt.Component method isFocusTraversable should always return true for a java.awt.Component implementing this interface.

Methods

---

processHActionEvent(HActionEvent)

```
public void processHActionEvent(HActionEvent evt)
```

Process an HActionEvent sent to this HActionInputPreferred.

Parameters:
evt - the HActionEvent to process.

org.havi.ui
HAdjustableLook

Syntax
```
public interface HAdjustableLook extends HLook
```

All Superinterfaces:
java.lang.Cloneable, HLook


All Known Implementing Classes:
HRangeLook, HListGroupLook

Description
The HAdjustableLook interface is implemented by all platform looks which support adjustable components (i.e. those components which implement the HAdjustmentValue interface. The following platform looks shall implement this interface:

- HRangeLook
- HListGroupLook

The HAdjustableLook interface supports pointer based systems by providing a mechanism of "hit-testing" which allows the HAdjustmentValue component to determine which part of the on-screen representation has been clicked in, and to adjust its internal value accordingly.

The diagram below shows one possible on-screen representation of an HAdjustmentValue component, with ORIENT_LEFT_TO_RIGHT orientation.

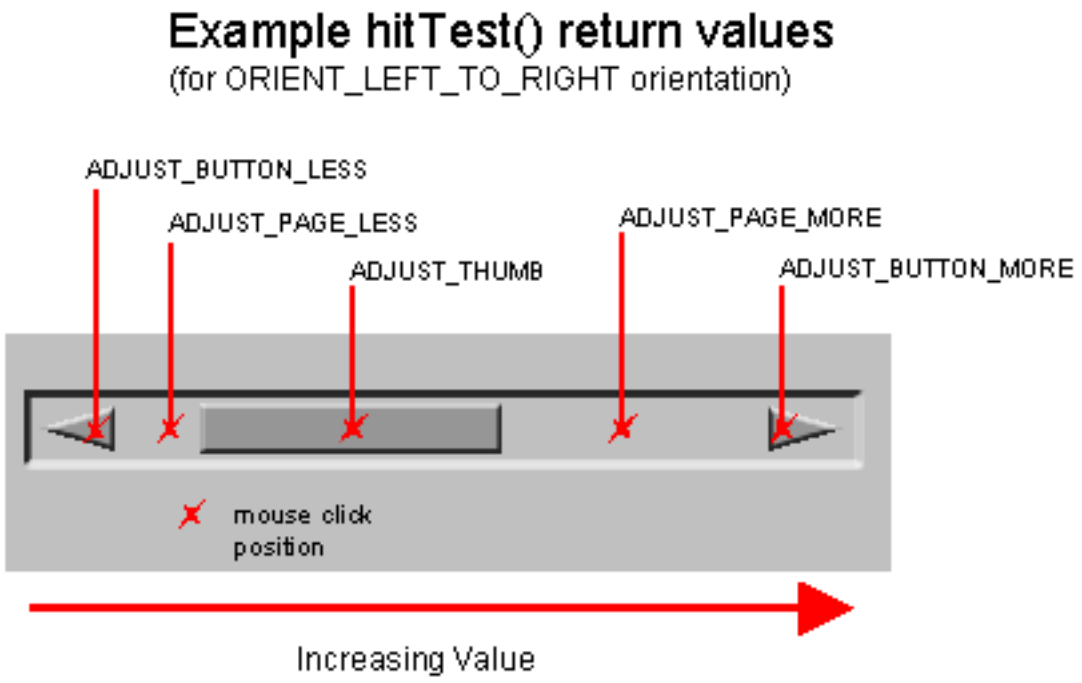

HLook implementations which implement HAdjustableLook may use the getOrientation() method to determine the appropriate constant to return from hitTest(HAdjustmentValue, Point) since the correct constant is dependent on the orientation of the component.

It is a valid implementation option to return ADJUST_NONE from the hitTest(HAdjustmentValue, Point) method in all cases.

It is a valid implementation option to never return ADJUST_BUTTON_LESS and ADJUST_BUTTON_MORE in the case where such active areas are not presented on screen by the HLook .

Fields

ADJUST_BUTTON_LESS

```
public static final int ADJUST_BUTTON_LESS
```

A constant which may be returned from the hitTest(HAdjustmentValue, Point) method to indicate that the pointer was clicked in an adjustment area which indicates that the adjustable value should be decremented by one unit.

Such an area should be drawn with an arrow pointing towards the minimum end of the range, according to the orientation as retrieved with getOrientation() .

Use of this constant is implementation-specific.

ADJUST_BUTTON_MORE

```
public static final int ADJUST_BUTTON_MORE
```

A constant which may be returned from the hitTest(HAdjustmentValue, Point) method to indicate that the pointer was clicked in an adjustment area which indicates that the adjustable value should be incremented by one unit.

Such an area should be drawn with an arrow pointing towards the maximum end of the range, according to the orientation as retrieved with getOrientation() .

Use of this constant is implementation-specific.

ADJUST_NONE

```
public static final int ADJUST_NONE
```

A constant which may be returned from the hitTest(HAdjustmentValue, Point) method to indicate that the pointer was not clicked over an active adjustment area.

ADJUST_PAGE_LESS

```
public static final int ADJUST_PAGE_LESS
```

A constant which may be returned from the hitTest(HAdjustmentValue, Point) method to indicate that the pointer was clicked in an adjustment area which indicates that the adjustable value should be decremented by one block.

ADJUST_PAGE_MORE

```
public static final int ADJUST_PAGE_MORE
```

A constant which may be returned from the hitTest(HAdjustmentValue, Point) method to indicate that the pointer was clicked in an adjustment area which indicates that the adjustable value should be incremented by one block.

ADJUST_THUMB

```
public static final int ADJUST_THUMB
```

A constant which may be returned from the `hitTest(HAdjustmentValue, Point)` method to indicate that the pointer was clicked in an adjustment area which indicates that the adjustable value should change according to pointer motion events received by the component, until the pointer button is released.

Methods

hitTest(HAdjustmentValue, Point)

```
public int hitTest(HAdjustmentValue component, java.awt.Point pt)
```

Returns a value which indicates the pointer click position in the on-screen representation of the adjustable component. Note that it is a valid implementation option to always return `ADJUST_NONE`.

Parameters:

`component` - the `HAdjustmentValue` component for which the hit position should be calculated.

`pt` - the pointer click point.

Returns:

one of `ADJUST_NONE`, `ADJUST_BUTTON_LESS`, `ADJUST_PAGE_LESS`, `ADJUST_THUMB`, `ADJUST_PAGE_MORE` or `ADJUST_BUTTON_MORE`.

org.havi.ui
HAdjustmentInputPreferred

Syntax
```
public interface HAdjustmentInputPreferred extends HOrientable
```

All Known Subinterfaces:
HAdjustmentValue

All Superinterfaces:
HOrientable

All Known Implementing Classes:
HRangeValue

Description
A component which implements HAdjustmentInputPreferred indicates that this component expects to receive HAdjustmentEvent input events.

The system must provide a means of generating HAdjustmentEvent events as necessary. For platforms with a restricted number of physical keys this may involve a "virtual keyboard&quot or similar mechanism.

All interoperable implementations of the HAdjustmentInputPreferred interface must extend HComponent .

Note that the java.awt.Component method isFocusTraversable should always return true for a java.awt.Component implementing this interface.

Methods

---

getAdjustMode()

```
public boolean getAdjustMode()
```

Get the adjustment mode for this HAdjustmentInputPreferred . If the returned value is true the component is in adjustment mode, and its value may be changed on receipt of ADJUST_LESS and ADJUST_MORE events.

The component is switched into and out of adjustment mode on receiving ADJUST_START_CHANGE and ADJUST_END_CHANGE events.

Returns:
true if this component is in adjustment mode, false otherwise.

---

processHAdjustmentEvent(HAdjustmentEvent)

```
public void processHAdjustmentEvent(HAdjustmentEvent evt)
```

Process an HAdjustmentEvent sent to this HAdjustmentInputPreferred .

Parameters:
evt - the HAdjustmentEvent to process.

---

setAdjustMode(boolean)

```
public void setAdjustMode(boolean adjust)
```

Set the adjustment mode for this `HAdjustmentInputPreferred` .

This method is provided for the convenience of component implementors. Interoperable applications shall not call this method. It cannot be made protected because interfaces cannot have protected methods.

Parameters:

`edit` - true to switch this component into adjustment mode, false otherwise.

See Also:

`getAdjustMode()`

org.havi.ui
HAdjustmentValue

Syntax
```
public interface HAdjustmentValue extends HNavigable, HAdjustmentInputPreferred
```

All Superinterfaces:
HAdjustmentInputPreferred, HNavigable, HNavigationInputPreferred, HOrientable

All Known Implementing Classes:
HRangeValue

Description
This interface is implemented by all HAVi UI components which have some form of adjustable numerical value (e.g. a range control)

Event Behavior

Subclasses of HComponent which implement HAdjustmentValue must respond to HFocusEvent and HAdjustmentEvent events.

Applications should assume that classes which implement HAdjustmentValue can generate events of the types HFocusEvent and HAdjustmentEvent in response to other types of input event.

An application may add one or more HAdjustmentListener listeners to the component. The valueChanged(HAdjustmentEvent) method of the HAdjustmentListener is invoked whenever the value of the HAdjustmentValue is modified.


HAVi adjustment events are discussed in detail in the HAdjustmentInputPreferred interface description.

Interaction States

The following interaction states are valid for this HAdjustmentValue component:

- NORMAL_STATE
- FOCUSED_STATE
- DISABLED_STATE
- DISABLED_FOCUSED_STATE

The state machine diagram below shows the valid state transitions for an HAdjustmentValue component.

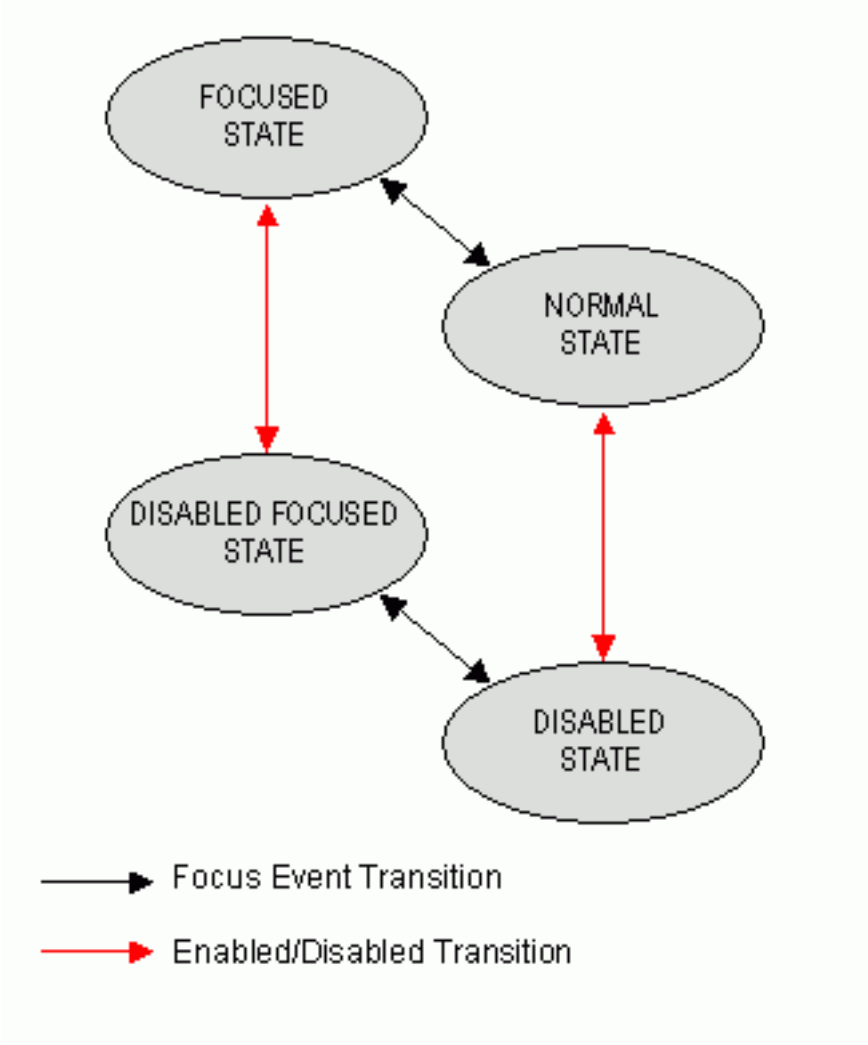

Platform Classes

The following HAVi platform classes implement or inherit the `HAdjustmentValue` interface. These classes shall all generate both `HFocusEvent` and `HAdjustmentEvent` events in addition to any other events specified in the respective class descriptions.

- `HRangeValue`
- `HListGroup`

See Also:

`HNavigable`, `HOrientable`, `HAdjustmentInputPreferred`, `HAdjustmentEvent`, `HAdjustmentListener`

Methods

---

addAdjustmentListener(HAdjustmentListener)

```
public void addAdjustmentListener(HAdjustmentListener l)
```

Adds the specified HAdjustmentListener to receive HAdjustmentEvent sent from this object. If the listener has already been added further calls will add further references to the listener, which will then receive multiple copies of a single event.

Parameters:
l - the HAdjustmentListener to be notified.

---

getAdjustmentSound()

```
public HSound getAdjustmentSound()
```

Get the sound to be played when the value changes.

Returns:
The sound played when the value changes

---

getBlockIncrement()

```
public int getBlockIncrement()
```

Get the block increment for this HAdjustmentValue .

Returns:
the block increment value for this HAdjustmentValue .

---

getUnitIncrement()

```
public int getUnitIncrement()
```

Get the unit increment for this HAdjustmentValue .

Returns:
the increment value for this HAdjustmentValue .

---

removeAdjustmentListener(HAdjustmentListener)

```
public void removeAdjustmentListener(HAdjustmentListener l)
```

Removes the specified HAdjustmentListener so that it no longer receives HAdjustmentEvent from this object. If the specified listener is not registered, the method has no effect. If multiple references to a single listener have been registered it should be noted that this method will only remove one reference per call.

Parameters:
l - the HAdjustmentListener to be removed from notification.

---

setAdjustmentSound(HSound)

```
public void setAdjustmentSound(HSound sound)
```

Associate a sound to be played when the value is modified. The sound is played irrespective of whether an HAdjustmentEvent is sent to one or more listeners.

Parameters:
sound - the sound to be played, when the value is modified. If sound content is already set, the original content is replaced. To remove the sound specify a null HSound .

---

setBlockIncrement(int)

```
public void setBlockIncrement(int increment)
```

Set the block increment for this HAdjustmentValue .

Parameters:

increment - the amount by which the value of the HAdjustmentValue should change when an ADJUST_PAGE_LESS or ADJUST_PAGE_MORE event is received. Values of increment less than one shall be treated as a value of one.

---

setUnitIncrement(int)

```
public void setUnitIncrement(int increment)
```

Set the unit increment for this HAdjustmentValue .

Parameters:

increment - the amount by which the value of the HAdjustmentValue should change when an ADJUST_LESS or ADJUST_MORE event is received. Values of increment less than one shall be treated as a value of one.

org.havi.ui
HAnimateEffect

Syntax
```
public interface HAnimateEffect
```

All Known Implementing Classes:
HStaticAnimation, HFlatEffectMatte, HImageEffectMatte

Description
The HAnimateEffect interface defines effect constants and controls for time-varying animations.

Implementations of HAnimateEffect should have the following default behaviors:

- By default the HAnimateEffect should be stopped. Hence, to start an HAnimateEffect the start() method must be explicitly invoked. This mechanism allows for animations that are programmatically controlled, e.g. via the setPosition(int) method.
- By default the position for rendering should be the first image in the sequence, i.e. 0.
- By default the play mode should be PLAY_REPEATING .
- By default the repeat count should be REPEAT_INFINITE .
- The default rendering should simply display the single image at the current position of the animation within the sequence.

Fields

PLAY_ALTERNATING
```
public static final int PLAY_ALTERNATING
```
Indicates that the animation should be played in a repeating loop, alternating between the forward and reverse direction.

The images are rendered in the same order that they are present in the sequence (array):

0, 1, 2, 3, ... length-2, length-1

If the animation has not repeated sufficiently, then the rendering of the sequence is reversed - i.e. the images are rendered in the order

length-2, length-3, ... 1, 0

If the animation has not repeated sufficiently, then the rendering of the sequence is reversed (again) back to a forwards direction. I.e. the images are rendered in the order

1, 2, 3, ... length-2, length-1

Each rendering of the sequence of images forwards or backwards, should be considered as a single "repeat".

Note that when the sequence repeats, the last image (first image) is not rendered consecutively, i.e. twice.

PLAY_REPEATING
```
public static final int PLAY_REPEATING
```

Indicates that the animation should be played forwards (in a repeating loop).

The images are rendered in the same order that they are present in the sequence (array):

0, 1, 2, 3, ... length-1

If the animation has not repeated sufficiently, then the rendering of the sequence is restarted from the first image, i.e. the images will continue to be rendered in the order:

0, 1, 2, 3, ... length-1

Each rendering of the sequence of images 0 to (length-1), should be considered as a single "repeat".

REPEAT_INFINITE

```
public static final int REPEAT_INFINITE
```

This value, when passed to `setRepeatCount`, indicates that the animation shall repeat until the `stop()` method is invoked.

Methods

---

getDelay()

```
public int getDelay()
```

Gets the presentation delay for this `HAnimateEffect` .

Returns:
the presentation delay in units of 0.1 seconds.

---

getPlayMode()

```
public int getPlayMode()
```

Gets the playing mode for this `HAnimateEffect` .

Returns:
the play mode for this `HAnimateEffect` .

---

getPosition()

```
public int getPosition()
```

Get the current index into the content array which this `HAnimateEffect` is using to display content.

Returns:
the index of the content currently being displayed, in the range `0 <= index < length`

---

getRepeatCount()

```
public int getRepeatCount()
```

Gets the number of times that this `HAnimateEffect` is to be played. Note that this method does *not* return the number of repeats that are remaining to be played.

Returns:
the total number of times that an `HAnimateEffect` is to be played. The returned value shall be greater than zero, or `REPEAT_INFINITE` .

---

isAnimated()

```
public boolean isAnimated()
```

This method indicates the animation (running) state of the `HAnimateEffect` .

Returns:

`true` if this `HAnimateEffect` is running, i.e. the `start` method has been invoked - `false` otherwise.

---

setDelay(int)

```
public void setDelay(int count)
```

Sets the delay between the presentation of successive pieces of content (frames).

After calling `setDelay(int)` on a currently playing `HAnimateEffect` , there is no guarantee that one or more frames will not be displayed using the previous delay until the new delay value takes effect.

Parameters:

`count` - the content presentation delay in units of 0.1 seconds duration. If count is less than one "unit", then it shall be treated as if it were a delay of one "unit", i.e. 0.1 seconds.

---

setPlayMode(int)

```
public void setPlayMode(int mode)
```

Sets the playing mode for this `HAnimateEffect` . If the animation is already running a call to `setPlayMode` will change the current value and affect the animation immediately. The position of the animation is unchanged.

Parameters:

`mode` - the play mode for this `HAnimateEffect` , which must be either `PLAY_ALTERNATING` or `PLAY_REPEATING` .

---

setPosition(int)

```
public void setPosition(int position)
```

Set this `HAnimateEffect` to display the content at the specified position. If the animation is already running a call to `setPosition` will change the current value and affect the animation immediately.

Parameters:

`position` - an index into the content array which specifies the next piece of content to be displayed. If `position` is less than 0, then the array element at index 0 is displayed, if `position` is greater than or equal to the length of the content array, then the array element at index [`length`-1] will be used.

---

setRepeatCount(int)

```
public void setRepeatCount(int count)
```

Sets the number of times that this `HAnimateEffect` should be played. If the animation is already running a call to `setRepeatCount` will change the current value and reset the current number of repeats to 0, affecting the animation immediately.

Parameters:

`count` - the number of times that an `HAnimateEffect` should be played. Valid values of the repeat count are one or more, and `REPEAT_INFINITE` .

---

start()

```
public void start()
```

This method starts this `HAnimateEffect` playing. If `start` is called when the animation is already running it resets the animation according to the current play mode, as returned by `getPlayMode()` .

---

stop()

```
public void stop()
```

This method indicates that the running `HAnimateEffect` should be stopped. After calling this method, there is no guarantee that one or more frames will not be displayed before the animation actually stops playing. If the animation is already stopped further calls to `stop` have no effect.

org.havi.ui
HAnimateLook

Syntax

```
public class HAnimateLook implements HLook

java.lang.Object
  |
  +--org.havi.ui.HAnimateLook
```

All Implemented Interfaces:

java.lang.Cloneable, HLook

Description

The HAnimateLook class is used by any HVisible component to display animated graphical content. This look will be provided by the platform and the exact way in which it is rendered will be platform dependant.

The HAnimateLook class draws the content set on an HVisible. It uses the getAnimateContent(int)getAnimateContent(int

- If the sequence is empty then the animation shall be treated as a completely transparent area of specific width and height within its enclosing Container --- simply for the purposes of layout management (if applicable).
- If there is only one image referenced in the sequence then that image is rendered statically in a similar manner to HGraphicLook.
- If there is more than one image referenced in the sequence then these are rendered in sequence, giving the effect of an animation.

If a referenced image is inaccessible, then it shall be skipped. If no images are accessible, then the animation shall be treated as a completely transparent area of specific width and height within its enclosing Container --- for the purposes of layout management (if applicable).

The HAnimateLook is not required to present consecutive images in the animation with the delay specified in its associated HStaticAnimation. For example, if the time taken to retrieve or render an image is longer than the delay, then then it shall be rendered as soon as possible.

Implementations of HAnimateLook should use the appropriate methods on HVisible to determine which scaling and alignment modes to use when rendering content. See the class description for HLook for more details. HAnimateLook may support scalable animated graphical content. As a minimum, all implementations must support the RESIZE_NONE scaling mode, and all alignment modes.

Note that the results of applying the VALIGN_JUSTIFY and HALIGN_JUSTIFY alignment modes for animated graphical content are defined to identical to VALIGN_CENTER and HALIGN_CENTER modes respectively, as justification is meaningless in this context.

This is the default look that is used by HStaticAnimation and its subclasses. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

See Also:

HStaticAnimation, HVisible, HLook

Constructors

HAnimateLook()

```
public HAnimateLook()
```

Creates a HAnimateLook object. See the class description for details of constructor parameters and default values.

Methods

getInsets(HVisible)

```
public java.awt.Insets getInsets(HVisible visible)
```

Determines the insets of this HLook , which indicate the size of the border. This area is reserved for the HLook to use for drawing borders around the associated HVisible .

Specified By:
getInsets(HVisible) in interface HLook

Parameters:
hvisible - HVisible to which this HLook is attached.

Returns:
the insets of this HLook .

getMaximumSize(HVisible)

```
public java.awt.Dimension getMaximumSize(HVisible hvisible)
```

Gets the maximum size of the HVisible component when drawn with this HLook .

This size may be determined in several ways depending on the information available to the look. These steps are performed in order and the first available result is returned. For the purposes of this algorithm HLook classes that do not use content (e.g. HRangeLook) are treated as if no content was present.

The extra space required for border decoration can be determined from the getInsets(HVisible) method.

1. If the HLook supports the scaling of its content (e.g. an HGraphicLook) then the return value is the current size of the HVisible (as returned by HVisible#getSize).
2. If the HLook does not support scaling of content or no scaling is requested, and content is set then the

return value is the size of the largest piece of content plus any additional dimensions that the HLook requires for border decoration etc.

3. If there is no content set then a maximum size of `[ Short.MAX_VALUE, Short.MAX_VALUE]` is returned as a Dimension.

Specified By:
`getMaximumSize(HVisible)` in interface `HLook`

Parameters:
`hvisible` - `HVisible` to which this `HLook` is attached.

Returns:
A dimension object indicating this `HLook` maximum size.

See Also:
`getMaximumSize()`

---

getMinimumSize(HVisible)

```
public java.awt.Dimension getMinimumSize(HVisible hvisible)
```

Gets the minimum size of the `HVisible` component when drawn with this `HLook`.

This size may be determined in several ways depending on the information available to the look. These steps are performed in order and the first available result is returned. For the purposes of this algorithm `HLook` classes that do not use content (e.g. `HRangeLook`) are treated as if no content was present.

The extra space required for border decoration can be determined from the `getInsets(HVisible)` method.

1. If the `HLook` supports the scaling of its content (e.g. an `HGraphicLook`) and content is set then the return value is the size of the smallest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
2. If the `HLook` does not support scaling of content or no scaling is requested, *and* content is set then the return value is the size of the largest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
3. If no content is available but a default preferred size has been set using `setDefaultSize(Dimension)` has been called to set then the return value is this value (as obtained with `getDefaultSize()`) plus any additional dimensions that the HLook requires for border decoration etc.
4. If there is no content or default size set then the return value is an implementation-specific minimum size plus any additional dimensions that the HLook requires for border decoration etc.

Specified By:
`getMinimumSize(HVisible)` in interface `HLook`

Parameters:
`hvisible` - `HVisible` to which this `HLook` is attached.

Returns:
A dimension object indicating this `HLook` minimum size.

See Also:
`getMinimumSize()`

---

getPreferredSize(HVisible)

```
public java.awt.Dimension getPreferredSize(HVisible hvisible)
```

Gets the preferred size of the `HVisible` component when drawn with this `HLook`.

This size may be determined in several ways depending on the information available to the look. These steps are performed in order and the first available result is returned. For the purposes of this algorithm `HLook` classes that do not use content (e.g. `HRangeLook`) are treated as if no content was present.

The extra space required for border decoration can be determined from the `getInsets(HVisible)` method.

1. If a default preferred size has been set for this `HVisible` (using `setDefaultSize(Dimension)`) then the return value is this size (obtained with `getDefaultSize()`) plus any additional dimensions that the HLook requires for border decoration etc.
2. If this `HLook` does not support scaling of content or no scaling is requested, and content is present then the return value is the size of the largest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
3. If this `HLook` supports the scaling of its content (e.g. an `HGraphicLook`) and content is set then the return value is the current size of the `HVisible` as returned by `getSize`).
4. If there is no content and no default size set then the return value is the current size of the `HVisible` as returned by `getSize`).

Specified By:
`getPreferredSize(HVisible)` in interface `HLook`

Parameters:
`hvisible` - `HVisible` to which this `HLook` is attached.

Returns:
A dimension object indicating the preferred size of the `HVisible` when drawn with this `HLook`.

See Also:
`getPreferredSize()`, `setDefaultSize(Dimension)`

---

isOpaque(HVisible)

```
public boolean isOpaque(HVisible visible)
```

Returns true if the entire painted area of the `HVisible` when using this look is fully opaque, i.e. the `showLook(Graphics, HVisible, int)` method guarantees that all pixels are painted in an opaque Color.

The default value is implementation specific and depends on the background painting mode of the given `HVisible`. The consequences of an invalid overridden value are implementation specific.

Specified By:
`isOpaque(HVisible)` in interface `HLook`

Parameters:
`visible` - the visible to test

Returns:
true if all the pixels with the java.awt.Component#getBounds method of an `HVisible` using this look are fully opaque, i.e. the `showLook(Graphics, HVisible, int)` method guarantees that all pixels are painted in an opaque Color, otherwise false.

---

showLook(Graphics, HVisible, int)

```
public void showLook(java.awt.Graphics g, HVisible visible, int state)
```

The `showLook(Graphics, HVisible, int)` method is responsible for repainting the entire `HVisible` component, (including any content set on the component, and the component background), subject to the clipRect of the Graphics object passed to it.

The showLook(Graphics, HVisible, int) method should not modify the clipRect of the Graphics object that is passed to it.

For looks which draw content (e.g. HTextLook, HGraphicLook and HAnimateLook), if no content is associated with the component, the showLook(Graphics, HVisible, int) method paints the component with its current background Color according to the setBackgroundMode(int) method of HVisible and draws any (implementation-specific) borders. Note that by default the background mode is set so as to **not** paint a background. Furthermore on platforms which support transparent colors the background Color may be partially or completely transparent.

Any resources **explicitly** associated with an HLook should be loaded by the HLook during its creation, etc., or via its setXXX() methods. Note that the "standard" looks don't load content by default.

This method is called from the paint(Graphics) method of HVisible and must never be called from elsewhere. Components wishing to redraw themselves should call their repaint method in the usual way.

Specified By:
showLook(Graphics, HVisible, int) in interface HLook

Parameters:
g - the graphics context.

visible - the visible.

state - the state parameter indicates the state of the visible, allowing the look to render the appropriate content for that state. Note that some components (e.g. HStaticRange, HRange, HRangeValue) do not use state-based content).

---

widgetChanged(HVisible, HChangeData[])

```
public void widgetChanged(HVisible visible, HChangeData[] changes)
```

Called by the HVisible whenever its content, state, or any other data changes. See the class description of HVisible for more information about the changes parameter.

The implementation of this method should work out which graphical areas of the HVisible have changed and make any relevant calls to trigger the repainting of those areas.

A minimum implementation of this method could simply call

```
visible.repaint()
```

Specified By:
widgetChanged(HVisible, HChangeData[]) in interface HLook

Parameters:
visible - the HVisible which has changed

changes - an array containing hint data and associated hint objects. If this argument is null a full repaint will be triggered.

org.havi.ui
HAnimation

Syntax

```
public class HAnimation extends HStaticAnimation implements HNavigable
```

```
java.lang.Object
  |
  +--java.awt.Component
        |
        +--HComponent
              |
              +--HVisible
                    |
                    +--HStaticAnimation
                          |
                          +--org.havi.ui.HAnimation
```

All Implemented Interfaces:

HAnimateEffect, HMatteLayer, HNavigable, HNavigationInputPreferred, HNoInputPreferred, HState, java.awt.image.ImageObserver, java.awt.MenuContainer, java.io.Serializable, TestOpacity

Description

The HAnimation class is a user interface component used to display animated graphical content (as HStaticAnimation) which additionally enables a user to navigate to it, i.e. it can have the input focus. By default it uses the HAnimateLook to render itself. The HAnimation class supports animating images in exactly the same way as the HStaticAnimation class, with the following exception:

- If the HAnimation has different content set for the supported states a change in interaction state may cause an implementation-specific change to the animation position to deal with animation content of different length.

The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
x	x-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
y	y-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
width	width of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
height	height of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds

images	The array of images to be used as the content for every state of this component.	null	setAnimateContent(Image[], int)	getAnimateContent(int)
imagesNormal	The array of images to be used as the content for the NORMAL_STATE state of this component.	null	setAnimateContent(Image[], int)	getAnimateContent(int)
imagesFocused	The array of images to be used as the content for the focused states of this component.	null	setAnimateContent(Image[], int)	getAnimateContent(int)
delay	The delay between the presentation of successive content in the animation, in units of 0.1 second	1 (i.e. 0.1 seconds)	setDelay(int)	getDelay()
repeatCount	The number of times that the animation is to be played.	REPEAT_INFINITE	setRepeatCount(int)	getRepeatCount()
playMode	The playing mode for the animation.	PLAY_REPEATING	setPlayMode(int)	getPlayMode()

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
Associated matte (HMatte).	none (i.e. getMatte() returns null)	setMatte(HMatte)	getMatte()
The text layout manager responsible for text formatting.	An HDefaultTextLayoutManager object.	setTextLayoutManager(HTextLayoutManager)	getTextLayoutManager()
The background painting mode	NO_BACKGROUND_FILL	setBackgroundMode(int)	getBackgroundMode()
The default preferred size	not set (i.e. null) unless specified by width and height parameters	setDefaultSize(Dimension)	getDefaultSize()
The horizontal content alignment	HALIGN_CENTER	setHorizontalAlignment(int)	getHorizontalAlignment()
The vertical content alignment	VALIGN_CENTER	setVerticalAlignment(int)	getVerticalAlignment()
The content scaling mode	RESIZE_NONE	setResizeMode(int)	getResizeMode()
The initial piece of content to be presented, i.e. its position in the content array.	0	setPosition(int)	getPosition()

By default the animation should be stopped. Hence, to start the animation its start method must be explicitly invoked. This mechanism allows for animations that are programmatically controlled, e.g. via the setPosition method.	"stopped"	start() / stop()	isAnimated()
The default "look" for this class.	A platform specific HAnimateLook	setDefaultLook(HAnimateLook)	getDefaultLook()
The "look" for this object.	The HAnimateLook returned from HAnimation.getDefaultLook when this object was created.	setLook(HLook)	getLook()
The gain focus sound.	null	setGainFocusSound(HSound)	getGainFocusSound()
The lose focus sound.	null	setLoseFocusSound(HSound)	getLoseFocusSound()

See Also:

HStaticAnimation, HNavigable

Constructors

HAnimation()

```
public HAnimation()
```

Creates an HAnimation object. See the class description for details of constructor parameters and default values.

HAnimation(Image[], Image[], int, int, int)

```
public HAnimation(java.awt.Image[] imagesNormal, java.awt.Image[] imagesFocused, int delay,
            int playMode, int repeatCount)
```

Creates an HAnimation object. See the class description for details of constructor parameters and default values.

HAnimation(Image[], Image[], int, int, int, int, int, int, int)

```
public HAnimation(java.awt.Image[] imagesNormal, java.awt.Image[] imagesFocused, int delay,
            int playMode, int repeatCount, int x, int y, int width, int height)
```

Creates an HAnimation object. See the class description for details of constructor parameters and default values.

HAnimation(Image[], int, int, int)

```
public HAnimation(java.awt.Image[] images, int delay, int playMode, int repeatCount)
```

Creates an HAnimation object. See the class description for details of constructor parameters and default values.

HAnimation(Image[], int, int, int, int, int, int, int)

```
public HAnimation(java.awt.Image[] images, int delay, int playMode, int repeatCount, int x,
            int y, int width, int height)
```

Creates an HAnimation object. See the class description for details of constructor parameters and default values.

Methods

getDefaultLook()

```
public static HAnimateLook getDefaultLook()
```

Returns the currently set default look for HAnimation components.

Returns:
The `HLook` that is used by default when creating a new HAnimation component.

getGainFocusSound()

```
public HSound getGainFocusSound()
```

Get the sound associated with the gain focus event.

Specified By:
`getGainFocusSound()` in interface `HNavigable`

Returns:
The sound played when the component gains focus. If no sound is associated with gaining focus, then null shall be returned.

getLoseFocusSound()

```
public HSound getLoseFocusSound()
```

Get the sound associated with the lost focus event.

Specified By:
`getLoseFocusSound()` in interface `HNavigable`

Returns:
The sound played when the component loses focus. If no sound is associated with losing focus, then null shall be returned.

getMove(int)

```
public HNavigable getMove(int keyCode)
```

Provides the `HNavigable` object that is navigated to when a particular key is pressed.

Specified By:

getMove(int) in interface HNavigable

Parameters:
keyCode - The key code of the pressed key.

Returns:
Returns the HNavigable object, or if no HNavigable is associated with the keyCode then returns null.

---

getNavigationKeys()

```
public int[] getNavigationKeys()
```

Retrieve the set of key codes which this component maps to navigation targets.

Specified By:
getNavigationKeys() in interface HNavigationInputPreferred

Returns:
an array of key codes, or null if no navigation targets are set on this component.

---

isSelected()

```
public boolean isSelected()
```

Indicates if this component has focus.

Specified By:
isSelected() in interface HNavigable

Returns:
true if the component has focus, otherwise returns false.

---

processHFocusEvent(HFocusEvent)

```
public void processHFocusEvent(HFocusEvent evt)
```

Process an HFocusEvent sent to this HAnimation .

Specified By:
processHFocusEvent(HFocusEvent) in interface HNavigationInputPreferred

Parameters:
evt - the HFocusEvent to process.

---

setDefaultLook(HAnimateLook)

```
public static void setDefaultLook(HAnimateLook hlook)
```

Sets the default HLook for further HAnimation Components.

Parameters:
hlook - The HLook that will be used by default when creating a new HAnimation component. Note that this parameter may be null, in which case newly created components shall not draw themselves until a non-null look is set using the setLook(HLook) method.

---

setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)

```
public void setFocusTraversal(HNavigable up, HNavigable down, HNavigable left,
            HNavigable right)
```

Set the focus control for an HNavigable component. Note setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) is a convenience function for application programmers where a standard up, down, left and right focus traversal between components is required.

Note setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) is equivalent to multiple calls to setMove(int, HNavigable), where the key codes VK_UP, VK_DOWN, VK_LEFT, VK_RIGHT are used.

Note that this API does not prevent the creation of "isolated" HNavigable components --- authors should endeavor to avoid confusing the user.

Specified By:
setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) in interface HNavigable

Parameters:
up - The HNavigable component to move to, when the user generates a VK_UP KeyEvent. If there is no HNavigable component to move "up" to, then null should be specified.

down - The HNavigable component to move to, when the user generates a VK_DOWN KeyEvent. If there is no HNavigable component to move "down" to, then null should be specified.

left - The HNavigable component to move to, when the user generates a VK_LEFT KeyEvent. If there is no HNavigable component to move "left" to, then null should be specified.

right - The HNavigable component to move to, when the user generates a VK_RIGHT KeyEvent. If there is no HNavigable component to move "right" to, then null should be specified.

---

setGainFocusSound(HSound)

```
public void setGainFocusSound(HSound sound)
```

Associate a sound with gaining focus, i.e. when the HNavigable receives a java.awt.event.FocusEvent event of type FOCUS_GAINED. This sound will start to be played when an object implementing this interface gains focus. It is not guaranteed to be played to completion. If the object implementing this interface loses focus before the audio completes playing, the audio will be truncated. Applications wishing to ensure the audio is always played to completion must implement special logic to slow down the focus transitions.

By default, an HNavigable object does not have any gain focus sound associated with it.

Note that the ordering of playing sounds is dependent on the order of the focus lost, gained events.

Specified By:
setGainFocusSound(HSound) in interface HNavigable

Parameters:
sound - the sound to be played, when the component gains focus. If sound content is already set, the original content is replaced. To remove the sound specify a null HSound.

---

setLoseFocusSound(HSound)

```
public void setLoseFocusSound(HSound sound)
```

Associate a sound with losing focus, i.e. when the HNavigable receives a java.awt.event.FocusEvent event of type FOCUS_LOST. This sound will start to be played when an object implementing this interface loses focus. It is not guaranteed to be played to completion. It is implementation dependent whether and when this sound will be truncated by any gain focus sound played by the next object to gain focus.

By default, an HNavigable object does not have any lose focus sound associated with it.

Note that the ordering of playing sounds is dependent on the order of the focus lost, gained events.

Specified By:
setLoseFocusSound(HSound) in interface HNavigable

Parameters:
sound - the sound to be played, when the component loses focus. If sound content is already set, the original content is replaced. To remove the sound specify a null HSound .

---

setMove(int, HNavigable)

```
public void setMove(int keyCode, HNavigable target)
```

Defines the navigation path from the current HNavigable to another HNavigable when a particular key is pressed.

Note that setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) is equivalent to multiple calls to setMove(int, HNavigable) , where the key codes VK_UP, VK_DOWN, VK_LEFT, VK_RIGHT are used.

Specified By:
setMove(int, HNavigable) in interface HNavigable

Parameters:
keyCode - The key code of the pressed key. Any numerical keycode is allowed, but the platform may not be able to generate all keycodes. Application authors should only use keys for which HRcCapabilities.isSupported() or HKeyCapabilities.isSupported() returns true.

target - The target HNavigable object that should be navigated to. If a target is to be removed from a particular navigation path, then null should be specified.

org.havi.ui
HBackgroundConfigTemplate

Syntax
```
public class HBackgroundConfigTemplate extends HScreenConfigTemplate

java.lang.Object
  |
  +--HScreenConfigTemplate
        |
        +--org.havi.ui.HBackgroundConfigTemplate
```

Description
The HBackgroundConfigTemplate class is used to obtain a valid HBackgroundConfiguration. An application instantiates one of these objects and then sets all non-default attributes as desired. The getBestConfiguration(HBackgroundConfigTemplate) method found in the HBackgroundDevice class is then called with this HBackgroundConfigTemplate. A valid HBackgroundConfiguration is returned that meets or exceeds what was requested in the HBackgroundConfigTemplate.

This class may be subclassed to support additional properties of background configurations which may be requested by applications.

The ZERO_VIDEO_IMPACT property may be used in instances of this class to discover whether displaying background stills will have any impact on already running video. Implementations supporting the STILL_IMAGE preference shall return an HStillImageBackgroundConfiguration when requested except as described below.

- If displaying an STILL_IMAGE interrupts video transiently while the image is decoded then a configuration shall not be returned if the ZERO_VIDEO_IMPACT property is present with the priority REQUIRED.
- If displaying an STILL_IMAGE interrupts video while the image is decoded and for the entire period while the image is displayed then a configuration shall not be returned if the ZERO_VIDEO_IMPACT property is present with either the priorities REQUIRED or PREFERRED.

The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

See Also:
HScreenConfigTemplate, HGraphicsConfigTemplate, HVideoConfigTemplate

Fields

CHANGEABLE_SINGLE_COLOR

```
public static final int CHANGEABLE_SINGLE_COLOR
```

A value for use in the preference field of the setPreference(int, int) and getPreferencePriority(int) methods in the HBackgroundConfigTemplate that indicates that a single color background is requested where that single color can be changed by applications.

STILL_IMAGE

```
public static final int STILL_IMAGE
```

A value for use in the preference field of the setPreference(int, int) and getPreferencePriority(int) methods in the HBackgroundConfigTemplate that indicates that a background which can support still images is requested. Where backgrounds supporting this feature are returned, they are returned as objects of the HStillImageBackgroundConfiguration class.

Constructors

HBackgroundConfigTemplate()

```
public HBackgroundConfigTemplate()
```

Creates an HBackgroundConfigTemplate object. See the class description for details of constructor parameters and default values.

Methods

getPreferencePriority(int)

```
public int getPreferencePriority(int preference)
```

Return the priority for the specified preference.

By default the preferences in a template returned from the system will have an DONT_CARE priority unless specified otherwise. Any configuration always satisfies these attributes.

Overrides:
getPreferencePriority(int) in class HScreenConfigTemplate

Parameters:
preference - the preference to be indicated. Valid values for an HBackgroundConfigTemplate are: ZERO_BACKGROUND_IMPACT, ZERO_GRAPHICS_IMPACT, ZERO_VIDEO_IMPACT, INTERLACED_DISPLAY, FLICKER_FILTERING, VIDEO_GRAPHICS_PIXEL_ALIGNED. PIXEL_ASPECT_RATIO, PIXEL_RESOLUTION, SCREEN_RECTANGLE, CHANGEABLE_SINGLE_COLOR and STILL_IMAGE.

Subclasses may add further valid values. An IllegalArgumentException shall be thrown if the preference is not a valid value for this instance of HBackgroundConfigTemplate

Returns:
the priority for the specified preference.

---

isConfigSupported(HBackgroundConfiguration)

```
public boolean isConfigSupported(HBackgroundConfiguration hbc)
```

Returns a boolean indicating whether or not the specified `HBackgroundConfiguration` can be used to create a background plane that supports the features set in this template.

Parameters:

`hbc` - - the `HBackgroundConfiguration` object to test against this template.

Returns:

true if this `HBackgroundConfiguration` object can be used to create a background plane that supports the features set in this template, false otherwise.

---

setPreference(int, int)

```
public void setPreference(int preference, int priority)
```

Set the indicated preference to have the specified priority. If the preference has been previously set, then the previous priority for the preference shall be overwritten.

Attributes that are not filled in in a template (through `setPreference(int, int)`), shall have the priority `DONT_CARE` . Any configuration always satisfies these attributes.

Overrides:

`setPreference(int, int)` in class `HScreenConfigTemplate`

Parameters:

`preference` - the preference to be indicated. Valid values for an `HBackgroundConfigTemplate` are: `ZERO_BACKGROUND_IMPACT` , `ZERO_GRAPHICS_IMPACT` , `ZERO_VIDEO_IMPACT` , `INTERLACED_DISPLAY` , `FLICKER_FILTERING` , `VIDEO_GRAPHICS_PIXEL_ALIGNED` , `CHANGEABLE_SINGLE_COLOR` and `STILL_IMAGE` .

Subclasses may add further valid values. An IllegalArgumentException shall be thrown if the preference is not a valid value for this instance of `HBackgroundConfigTemplate`

`priority` - the priority of the preference. Valid values are: `REQUIRED` , `PREFERRED` , `DONT_CARE` , `PREFERRED_NOT` and `REQUIRED_NOT` .

If `priority` is not a valid priority as defined here a java.lang.IllegalArgumentException will be thrown.

org.havi.ui
HBackgroundConfiguration

Syntax
```
public class HBackgroundConfiguration extends HScreenConfiguration

java.lang.Object
  |
  +--HScreenConfiguration
        |
        +--org.havi.ui.HBackgroundConfiguration
```

Direct Known Subclasses:
HStillImageBackgroundConfiguration

Description
The HBackgroundConfiguration class describes the characteristics (settings) of an HBackgroundDevice . There can be many HBackgroundConfiguration objects associated with a single HBackgroundDevice .

The basic background configuration supports backgrounds of a single color. More sophisticated backgrounds can be supported by defining new classes inheriting from this class. Where a device has a single non- changeable background color, this class will provide applications the ability to read that color however all attempts to reserve control of the background will fail. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

See Also:
HBackgroundDevice

Constructors

HBackgroundConfiguration()
```
protected HBackgroundConfiguration()
```
It is not intended that applications should directly construct HBackgroundConfiguration objects.

Creates an HBackgroundConfiguration object. See the class description for details of constructor parameters and default values.

Methods

---

getColor()

```
public java.awt.Color getColor()
```

Obtain the current color of this background. This method may be called without ownership of the resource. The value returned is not guaranteed to be the value set in the last call to setColor(Color) since platforms may offer a reduced color space for backgrounds and the actual value used will be returned.

Returns:
the current Color

---

getConfigTemplate()

```
public HBackgroundConfigTemplate getConfigTemplate()
```

Returns an HBackgroundConfigTemplate object that describes and uniquely identifies this HBackgroundConfiguration . Hence, the following sequence should return the original HBackgroundConfiguration

```
HBackgroundDevice.getBestMatch(HBackgroundConfiguration.getConfigTemplate())
```

Features that are implemented in the HBackgroundConfiguration will return REQUIRED priority. Features that are not implemented in the HBackgroundConfiguration will return REQUIRED_NOT priority.

Returns:
an HBackgroundConfigTemplate object which both describes and uniquely identifies this HBackgroundConfiguration .

---

getDevice()

```
public HBackgroundDevice getDevice()
```

Returns the HBackgroundDevice associated with this HBackgroundConfiguration .

Returns:
the HBackgroundDevice object that is associated with this HBackgroundConfiguration .

---

setColor(Color)

```
public void setColor(java.awt.Color color)
```

Set the current color of this background. On platforms where there is a sub-class of java.awt.Color supporting transparency of any kind, passing an object representing a non-opaque color is illegal. Platforms with a limited color resolution for backgrounds may approximate this value to the nearest available. The getColor() method will return the actual value used.

Parameters:
color - the color to be used for the background

Throws:
HPermissionDeniedException - if this HBackgroundDevice does not have the right to control the background

HConfigurationException - if the color specified is illegal for this platform.

org.havi.ui
HBackgroundDevice

Syntax
```
public class HBackgroundDevice extends HScreenDevice

java.lang.Object
  |
  +--HScreenDevice
        |
        +--org.havi.ui.HBackgroundDevice
```

All Implemented Interfaces:
org.davic.resources.ResourceProxy, org.davic.resources.ResourceServer

Description
This class represents the ultimate background of a screen. The background is the very back of the video / graphics composition stack. It can potentially cover the entire area of a screen. Where a device supports multiple applications on screen at the same time (or even a window manager), the background is not constrained by any particular application or window. The right to control the background of a screen is a scarce resource and managed as such. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

Constructors

HBackgroundDevice()
```
protected HBackgroundDevice()
```
It is not intended that applications should directly construct `HBackgroundDevice` objects.

Creates an `HBackgroundDevice` object. See the class description for details of constructor parameters and default values.

Methods

---

getBestConfiguration(HBackgroundConfigTemplate)

```
public HBackgroundConfiguration getBestConfiguration(HBackgroundConfigTemplate hbc)
```

Returns the "best" configuration possible that passes the criteria defined in this HBackgroundConfigTemplate or null.

Equally best in this sense means that the configurations satisfy an equal number of preferences with priorities PREFERRED and PREFERRED_NOT and all preferences with priorities REQUIRED and REQUIRED_NOT.

Configurations are chosen according to the following algorithm, based on the priority as supplied to setPreference(int, int). Configurations must:

1. satisfy ALL the preferences whose priority was REQUIRED
2. satisfy NONE of the preferences whose priority was REQUIRED_NOT
3. satisfy as many as possible of the preferences whose priority was PREFERRED.
4. satisfy as few as possible of the preferences whose priority was PREFERRED_NOT.

Preferences whose priority was DONT_CARE are ignored.

This method returns null if no configuration exists that satisfies all REQUIRED and REQUIRED_NOT priorities.

Parameters:

hbc - - an HBackgroundConfigTemplate object used to obtain a valid HBackgroundConfiguration. If this parameter is null the default configuration for the platform shall be returned.

Returns:

an HBackgroundConfiguration object that passes the criteria defined in the specified HGraphicsConfigTemplate or null if no HBackgroundConfiguration passes the criteria.

---

getBestConfiguration(HBackgroundConfigTemplate[])

```
public HBackgroundConfiguration getBestConfiguration(HBackgroundConfigTemplate[] hbcta)
```

Returns the "best" configuration possible that passes the criteria defined in one of the HBackgroundConfigTemplate objects within the specified array or null. The HBackgroundTemplate objects should be considered for matching in priority order from 0 to (hbcta.length - 1).

Equally best in this sense means that the configurations satisfy an equal number of preferences with priorities PREFERRED and PREFERRED_NOT and all preferences with priorities REQUIRED and REQUIRED_NOT.

Configurations are chosen according to the following algorithm, based on the priority as supplied to setPreference(int, int). Configurations must:

1. satisfy ALL the preferences whose priority was REQUIRED
2. satisfy NONE of the preferences whose priority was REQUIRED_NOT
3. satisfy as many as possible of the preferences whose priority was PREFERRED.
4. satisfy as few as possible of the preferences whose priority was PREFERRED_NOT.

Preferences whose priority was DONT_CARE are ignored.

This method returns null if no configuration exists that satisfies all REQUIRED and REQUIRED_NOT priorities.

Parameters:
hbcta - the HBackgroundConfigTemplate array used to obtain a valid HBackgroundConfiguration .

Returns:
an HBackgroundConfiguration that passes the criteria defined in one of the HBackgroundConfigTemplate objects within the specified array

---

getConfigurations()

```
public HBackgroundConfiguration[] getConfigurations()
```

Returns all of the HBackgroundConfiguration objects associated with this HBackgroundDevice .

Returns:
an array of HBackgroundConfiguration objects

See Also:
HBackgroundConfiguration

---

getCurrentConfiguration()

```
public HBackgroundConfiguration getCurrentConfiguration()
```

Returns the current HBackgroundConfiguration for this HBackgroundDevice .

Returns:
the current HBackgroundConfiguration for this HBackgroundDevice .

See Also:
HBackgroundConfiguration

---

getDefaultConfiguration()

```
public HBackgroundConfiguration getDefaultConfiguration()
```

Returns the default HBackgroundConfiguration associated with this HBackgroundDevice . This (single) default configuration should correspond to some well-behaved settings for the device, such as, a minimal configuration or factory preset settings.

Returns:
the default HBackgroundConfiguration of this HBackgroundDevice

See Also:
HBackgroundConfiguration

---

setBackgroundConfiguration(HBackgroundConfiguration)

```
public boolean setBackgroundConfiguration(HBackgroundConfiguration hbc)
```

Set the background configuration for the device.

An application is only allowed to call this method after it reserved the device explicitly and subject to the security policy of the platform. Subject to this, the following rules determine whether this method can succeed.

- If the application selects a configuration that is not conflicting with the configurations of all the other devices on the same HScreen then that configuration is selected.
- If an application tries to select a configuration that conflicts with a configuration of another device on this HScreen which this application cannot control due to platform security policy then this method shall fail with a SecurityException.

- If an application tries to select a configuration that conflicts with a configuration of another device on this HScreen which this application cannot control due to another application owning the right to control that device and the platform not giving that right to this application then this method shall fail with an HPermissionDeniedException .
- If an application tries to select a configuration that conflicts with a configuration of another device which this application can control due to either this or no application having reserved the device, then the configuration of the other device is automatically changed. There is no change in the resource ownership of the other device.

Any modifications made to the configurations of other devices shall be reflected by the API for the devices concerned. The getCurrentConfiguration() method for those devices shall return the new configuration.

On successful change to the specified configuration, the device shall fire one or more HScreenConfigurationEvent for all listeners that are currently registered (if the criteria for receiving such an event has been satisfied). If the new configuration differs by more than one characteristic from the previous configuration then the device may fire one or more HScreenConfigurationEvent . This behavior is implementation specific.

If an attempt is made to set the identical configuration to that which is current, then no such event(s) shall be fired.

Parameters:

hbc - the HBackgroundConfiguration to which this device should be set.

Returns:

A boolean indicating whether the configuration could be applied successfully. If the configuration could not be applied successfully, the configuration after this method may not match the configuration of the device prior to this method being called --- applications should take steps to determine whether a partial change of settings has been made.

Throws:

SecurityException - if the application does not have sufficient rights to set the configuration for this device.

HPermissionDeniedException - if the application does not currently have the right to set the configuration for this device.

HConfigurationException - if the specified configuration is not valid for this device, or if it conflicts with other devices whose configuration(s) cannot be changed by this application.

org.havi.ui
HBackgroundImage

Syntax
```
public class HBackgroundImage

java.lang.Object
  |
  +--org.havi.ui.HBackgroundImage
```

Description
This class represents a background image. Images of this class can be used as full screen backgrounds outside the java.awt framework. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

Constructors

HBackgroundImage(byte[])

```
public HBackgroundImage(byte[] pixels)
```

Create an `HBackgroundImage` object from an array of bytes encoded in the same encoding format as when reading this type of image data from a file.

If this constructor succeeds then the object will automatically be in the loaded state and calling the `load(HBackgroundImageListener)` method shall immediately generate an `HBackgroundImageEvent` reporting success.

If the byte array does not contain a valid image then this constructor shall throw a `java.lang.IllegalArgumentException`.

Calling the `flush()` method on an object built with this constructor shall have no effect.

Parameters:

`pixels` - the data for the `HBackgroundImage` object encoded in the specified format for image files of this type.

HBackgroundImage(String)

```
public HBackgroundImage(java.lang.String filename)
```

Create an HBackgroundImage object. Loading of the data for the object is not required at this time.

Parameters:
`filename` - the name of the file to use as the source of data in a platform-specific URL format.

HBackgroundImage(URL)

```
public HBackgroundImage(java.net.URL contents)
```

Create an HBackgroundImage object. Loading of the data for the object is not required at this time.

Parameters:
`contents` - a URL referring to the data to load.

Methods

---

flush()

```
public void flush()
```

Flush all the resources used by this image. This includes any pixel data being cached as well as all underlying system resources used to store data or pixels for the image. After calling this method the image is in a state similar to when it was first created without any load method having been called. When this method is called, the image shall not be in use by an application. Resources related to any HBackgroundDevice are not released.

---

getHeight()

```
public int getHeight()
```

Determines the height of the image. This is returned in pixels as defined by the format of the image concerned. If this information is not known when this method is called then -1 is returned.

The image must have been successfully loaded to completion before this information is guaranteed to be available. It is implementation specific whether this information is available before the image is successfully loaded to completion. An image whose loading failed for any reason shall be considered as having this information unavailable.

Returns:
the height of the image

---

getWidth()

```
public int getWidth()
```

Determines the width of the image. This is returned in pixels as defined by the format of the image concerned. If this information is not known when this method is called then -1 is returned.

The image must have been successfully loaded to completion before this information is guaranteed to be available. It is implementation specific whether this information is available before the image is successfully loaded to completion. An image whose loading failed for any reason shall be considered as having this information unavailable.

Returns:
the width of the image

---

load(HBackgroundImageListener)

```
public void load(HBackgroundImageListener l)
```

Load the data for this object. This method is asynchronous. The completion of data loading is reported through the listener provided.

Parameters:

`l` - the listener to call when loading of data is completed.

org.havi.ui
HChangeData

Syntax
```
public class HChangeData

java.lang.Object
  |
  +--org.havi.ui.HChangeData
```

Description
A class used as argument for `widgetChanged(HVisible, HChangeData[])` . The hint constants are defined on `HVisible` .

Fields

---

data

```
public java.lang.Object data
```

The data object for this HChangeData. The types of this object for the different hints are defined on `HVisible` .

---

hint

```
public int hint
```

The hint for this HChangeData. The hint constants are defined on `HVisible` .

Constructors

HChangeData(int, Object)

```
public HChangeData(int hint, java.lang.Object data)
```

Creates an HChangeData object.

Parameters:

`hint` - the hint constant for this HChangeData.

`data` - the data object for this HChangeData.

org.havi.ui
HComponent

Syntax

```
public abstract class HComponent extends java.awt.Component implements HMatteLayer, TestOpacity
```

```
java.lang.Object
  |
  +--java.awt.Component
        |
        +--org.havi.ui.HComponent
```

Direct Known Subclasses:

HVideoComponent, HVisible

All Implemented Interfaces:

HMatteLayer, java.awt.image.ImageObserver, java.awt.MenuContainer, java.io.Serializable, TestOpacity

Description

The HComponent class extends the java.awt.Component class by implementing the HMatteLayer interface. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
x	x-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
y	y-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
width	width of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
height	height of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
Associated matte (HMatte).	none (i.e. getMatte() returns null)	setMatte(HMatte)	getMatte()

Constructors

HComponent()

```
public HComponent()
```

Creates an HComponent object. See the class description for details of constructor parameters and default values.

HComponent(int, int, int, int)

```
public HComponent(int x, int y, int width, int height)
```

Creates an HComponent object. See the class description for details of constructor parameters and default values.

Methods

getMatte()

```
public HMatte getMatte()
```

Get any `HMatte` currently associated with this component.

Specified By:
`getMatte()` in interface `HMatteLayer`

Returns:
the `HMatte` currently associated with this component or null if there is no associated matte.

isDoubleBuffered()

```
public boolean isDoubleBuffered()
```

Returns true if all the drawing done during the update and paint methods for this specific `HComponent` object is automatically double buffered.

Overrides:
java.awt.Component.isDoubleBuffered() in class java.awt.Component

Returns:
true if all the drawing done during the update and paint methods for this specific `HComponent` object is automatically double buffered, or false if drawing is not double buffered. The default value for the double buffering setting is platform-specific.

isOpaque()

```
public boolean isOpaque()
```

Returns true if the entire `HComponent` area, as given by the `java.awt.Component#getBounds` method, is fully opaque, i.e. its paint method (or surrogate methods) guarantee that all pixels are painted in an opaque `Color`.

By default, the return value is `false`. The return value should be overridden by subclasses that can guarantee full opacity. The consequences of an invalid overridden value are implementation specific.

Specified By:

isOpaque() in interface TestOpacity

Returns:

true if all the pixels within the area given by the java.awt.Component#getBounds method are fully opaque, i.e. its paint method (or surrogate methods) guarantee that all pixels are painted in an opaque Color, otherwise false.

---

processEvent(AWTEvent)

```
protected void processEvent(java.awt.AWTEvent evt)
```

This method may be overridden to facilitate the generation of events in the org.havi.ui.event package from java.awt.AWTEvents. Events used in this way (e.g. java.awt.event.KeyEvents) are NOT consumed and should be propagated to the superclass.

Subclasses of HComponent must always call the superclass if they override this function.

Overrides:

java.awt.Component.processEvent(java.awt.AWTEvent) in class java.awt.Component

Parameters:

evt - the java.awt.AWTEvent to handle.

---

setMatte(HMatte)

```
public void setMatte(HMatte m)
```

Applies an HMatte to this component, for matte compositing. Any existing animated matte must be stopped before this method is called or an HMatteException will be thrown.

Specified By:

setMatte(HMatte) in interface HMatteLayer

Parameters:

m - The HMatte to be applied to this component -- note that only one matte may be associated with the component, thus any previous matte will be replaced. If m is null, then any matte associated with the component is removed and further calls to getMatte() shall return null. The component shall behave as if it had a fully opaque HFlatMatte associated with it (i.e an HFlatMatte with the default value of 1.0.)

Throws:

HMatteException - if the HMatte cannot be associated with the component. This can occur:

- if the specific matte type is not supported
- if the platform does not support any matte type
- if the component is associated with an already running HFlatEffectMatte or HImageEffectMatte . The exception is thrown even if m is null.

See Also:

HMatte

org.havi.ui
HComponentOrdering

Syntax
```
public interface HComponentOrdering
```

All Known Implementing Classes:
HContainer, HScene

Description
This interface is implemented for all HAVi component containers that support the manipulation of the z-ordering of their children.

See Also:
HScene, HContainer

Methods

---

addAfter(Component, Component)

```
public java.awt.Component addAfter(java.awt.Component component, java.awt.Component front)
```

Adds a java.awt.Component to this HComponentOrdering directly behind a previously added java.awt.Component.

If component has already been added to this container, then addAfter moves component behind front. If front and component are the same component which was already added to this container, addAfter does not change the ordering of the components and returns component.

This method affects the Z-order of the java.awt.Component children within the HComponentOrdering , and may also implicitly change the numeric ordering of those children.

Parameters:

component - is the java.awt.Component to be added to the HComponentOrdering

front - is the java.awt.Component, which component will be placed behind, i.e. front will be directly in front of the added java.awt.Component

Returns:

If the java.awt.Component is successfully added, then it will be returned from this call. If the java.awt.Component is not successfully added, e.g. front is not a java.awt.Component currently added to the HComponentOrdering , then null will be returned.

This method must be implemented in a thread safe manner.

---

addBefore(Component, Component)

```
public java.awt.Component addBefore(java.awt.Component component,
            java.awt.Component behind)
```

Adds a java.awt.Component to this HComponentOrdering directly in front of a previously added java.awt.Component.

If component has already been added to this container, then addBefore moves component in front of behind. If behind and component are the same component which was already added to this container, addBefore does not change the ordering of the components and returns component.

This method affects the Z-order of the java.awt.Component children within the HComponentOrdering , and may also implicitly change the numeric ordering of those children.

Parameters:

component - is the java.awt.Component to be added to the HComponentOrdering

behind - is the java.awt.Component, which component will be placed in front of, i.e. behind will be directly behind the added java.awt.Component

Returns:

If the java.awt.Component is successfully added, then it will be returned from this call. If the java.awt.Component is not successfully added, e.g. behind is not a java.awt.Component currently added to the HComponentOrdering , then null will be returned.

This method must be implemented in a thread safe manner.

---

pop(Component)

```
public boolean pop(java.awt.Component component)
```

Moves the specified java.awt.Component one component nearer in the Z-order, i.e. swapping it with the java.awt.Component that was directly in front of it.

If component is already at the front of the Z-order, the order is unchanged and pop returns true.

Parameters:

component - The java.awt.Component to be moved.

Returns:

returns true on success, false on failure, for example if the java.awt.Component has yet to be added to the HComponentOrdering .

---

popInFrontOf(Component, Component)

```
public boolean popInFrontOf(java.awt.Component move, java.awt.Component behind)
```

Puts the specified java.awt.Component in front of another java.awt.Component in the Z-order of this HComponentOrdering .

If move and behind are the same component which has been added to the container popInFront does not change the Z-order and returns true.

Parameters:

move - The java.awt.Component to be moved directly in front of the "behind" Component in the Z-order of this HComponentOrdering .

behind - The java.awt.Component which the "move" Component should be placed directly in front of.

Returns:

returns true on success, false on failure, for example when either java.awt.Component has yet to be added to the HComponentOrdering . If this method fails, the Z-order is unchanged.

---

popToFront(Component)

```
public boolean popToFront(java.awt.Component component)
```

Brings the specified `java.awt.Component` to the "front" of the Z-order in this `HComponentOrdering`.

If `component` is already at the front of the Z-order, the order is unchanged and `popToFront` returns `true`.

Parameters:

`component` - The `java.awt.Component` to bring to the "front" of the Z-order of this `HComponentOrdering`.

Returns:

returns `true` on success, `false` on failure, for example when the `java.awt.Component` has yet to be added to the `HComponentOrdering`. If this method fails, the Z-order is unchanged.

---

push(Component)

```
public boolean push(java.awt.Component component)
```

Moves the specified `java.awt.Component` one component further away in the Z-order, i.e. swapping it with the `java.awt.Component` that was directly behind it.

If `component` is already at the back of the Z-order, the order is unchanged and `push` returns `true`.

Parameters:

`component` - The `java.awt.Component` to be moved.

Returns:

returns `true` on success, `false` on failure, for example if the `java.awt.Component` has yet to be added to the `HComponentOrdering`.

---

pushBehind(Component, Component)

```
public boolean pushBehind(java.awt.Component move, java.awt.Component front)
```

Puts the specified `java.awt.Component` behind another `java.awt.Component` in the Z-order of this `HComponentOrdering`.

If `move` and `front` are the same component which has been added to the container `pushBehind` does not change the Z-order and returns `true`.

Parameters:

`move` - The `java.awt.Component` to be moved directly behind the "front" Component in the Z-order of this `HComponentOrdering`.

`front` - The `java.awt.Component` which the "move" Component should be placed directly behind.

Returns:

returns `true` on success, `false` on failure, for example when either `java.awt.Component` has yet to be added to the `HComponentOrdering`.

---

pushToBack(Component)

```
public boolean pushToBack(java.awt.Component component)
```

Place the specified `java.awt.Component` at the "back" of the Z-order in this `HComponentOrdering`.

If `component` is already at the back the Z-order is unchanged and `pushToBack` returns `true`.

Parameters:

`component` - The `java.awt.Component` to place at the "back" of the Z-order of this `HComponentOrdering`.

Returns:

returns `true` on success, `false` on failure, for example when the `java.awt.Component` has yet to be added to the `HComponentOrdering` . If the component was not added to the container `pushToBack` does not change the Z-order.

org.havi.ui
HConfigurationException

Syntax
```
public class HConfigurationException extends java.lang.Exception

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--org.havi.ui.HConfigurationException
```

All Implemented Interfaces:
java.io.Serializable

Description
Thrown when an application requests an `HScreenConfiguration` that cannot be satisfied -- either because the `HScreenConfiguration` does not have the functionality, or because the requested `HScreenConfiguration` is otherwise invalid, e.g. it is an `HScreenConfiguration` due to a different `HScreenDevice` than the one it is being applied to. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
message	Message explaining why the exception was thrown	null	-	java.lang.Throwable#getMessage

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

Constructors

HConfigurationException()
```
public HConfigurationException()
```
Creates an HConfigurationException object. See the class description for details of constructor parameters and default values.

HConfigurationException(String)
```
public HConfigurationException(java.lang.String message)
```

Creates an HConfigurationException object with a specified reason string.

Parameters:

`message` - the reason why the exception was raised

org.havi.ui
HContainer

Syntax

```
public class HContainer extends java.awt.Container implements HMatteLayer, HComponentOrdering,
    TestOpacity

java.lang.Object
   |
   +--java.awt.Component
         |
         +--java.awt.Container
               |
               +--org.havi.ui.HContainer
```

All Implemented Interfaces:

HComponentOrdering, HMatteLayer, java.awt.image.ImageObserver, java.awt.MenuContainer, java.io.Serializable, TestOpacity

Description

The HContainer class extends the java.awt.Container class by implementing the HMatteLayer interface and providing additional Z-ordering capabilities, which are required since components in the HAVi user-interface are explicitly allowed to overlap each other.

Note that these Z-ordering capabilities (addBefore, addAfter, pop, popInFrontOf, popToFront, push, pushBehind and pushToBack) must be implemented by (implicitly) reordering the child Components within the HContainer , so that the standard AWT convention that the Z-order is defined as the order in which Components are added to a given Container is maintained. For example, one implementation of popToFront might be to make the specified Component become the first Component added to the parent Container by removing all Components from that Container, adding the specified Container first, and then adding the remaining Components in their current relative order to that Container. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
x	x-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
y	y-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
width	width of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
height	height of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
Associated matte (HMatte).	none (i.e. getMatte() returns null)	setMatte(HMatte)	getMatte()
LayoutManager	null (in contrast to java.awt.Container)	java.awt.Container#setLayout	java.awt.Container#getLayout

Constructors

HContainer()

```
public HContainer()
```

Creates an HContainer object. See the class description for details of constructor parameters and default values.

HContainer(int, int, int, int)

```
public HContainer(int x, int y, int width, int height)
```

Creates an HContainer object. See the class description for details of constructor parameters and default values.

Methods

addAfter(Component, Component)

```
public java.awt.Component addAfter(java.awt.Component component, java.awt.Component front)
```

Adds a java.awt.Component to this HContainer directly behind a previously added java.awt.Component.

If component has already been added to this container, then addAfter moves component behind front. If front and component are the same component which was already added to this container, addAfter does not change the ordering of the components and returns component.

This method affects the Z-order of the java.awt.Component children within the HContainer , and may also implicitly change the numeric ordering of those children.

Specified By:
addAfter(Component, Component) in interface HComponentOrdering

Parameters:
component - is the java.awt.Component to be added to the HContainer

front - is the java.awt.Component, which component will be placed behind, i.e. front will be directly in front of the added java.awt.Component

Returns:

If the java.awt.Component is successfully added, then it will be returned from this call. If the java.awt.Component is not successfully added, e.g. front is not a java.awt.Component currently added to the HContainer , then null will be returned.

This method must be implemented in a thread safe manner.

---

addBefore(Component, Component)

```
public java.awt.Component addBefore(java.awt.Component component,
            java.awt.Component behind)
```

Adds a java.awt.Component to this HContainer directly in front of a previously added java.awt.Component.

If component has already been added to this container, then addBefore moves component in front of behind. If behind and component are the same component which was already added to this container, addBefore does not change the ordering of the components and returns component.

This method affects the Z-order of the java.awt.Component children within the HContainer , and may also implicitly change the numeric ordering of those children.

Specified By:

addBefore(Component, Component) in interface HComponentOrdering

Parameters:

component - is the java.awt.Component to be added to the HContainer

behind - is the java.awt.Component, which component will be placed in front of, i.e. behind will be directly behind the added java.awt.Component

Returns:

If the java.awt.Component is successfully added, then it will be returned from this call. If the java.awt.Component is not successfully added, e.g. behind is not a java.awt.Component currently added to the HContainer , then null will be returned.

This method must be implemented in a thread safe manner.

---

getMatte()

```
public HMatte getMatte()
```

Get any HMatte currently associated with this component.

Specified By:

getMatte() in interface HMatteLayer

Returns:

the HMatte currently associated with this component or null if there is no associated matte.

---

group()

```
public void group()
```

Groups the HContainer and its components. If the container is already grouped this method has no effect

See Also:

ungroup(), isGrouped()

---

isDoubleBuffered()

```
public boolean isDoubleBuffered()
```

Returns `true` if all the drawing done during the update and paint methods for this specific `HContainer` object is automatically double buffered.

Overrides:
java.awt.Component.isDoubleBuffered() in class java.awt.Component

Returns:
`true` if all the drawing done during the update and paint methods for this specific `HComponent` object is automatically double buffered, or `false` if drawing is not double buffered. The default value for the double buffering setting is platform-specific.

---

isGrouped()

```
public boolean isGrouped()
```

Tests whether the HContainer and its components are grouped. By default the container is not grouped with its components.

Returns:
returns `true` if the HContainer and its components are grouped, `false` otherwise.

See Also:
`group()`, `ungroup()`

---

isOpaque()

```
public boolean isOpaque()
```

Returns true if the entire `HContainer` area, as given by the `java.awt.Component#getBounds` method, is fully opaque, i.e. its paint method (or surrogate methods) guarantee that all pixels are painted in an opaque `Color`.

By default, the return value is `false`. The return value should be overridden by subclasses that can guarantee full opacity. The consequences of an invalid overridden value are implementation specific.

Specified By:
`isOpaque()` in interface `TestOpacity`

Returns:
`true` if all the pixels within the area given by the `java.awt.Component#getBounds` method are fully opaque, i.e. its paint method (or surrogate methods) guarantee that all pixels are painted in an opaque Color, otherwise `false`.

---

pop(Component)

```
public boolean pop(java.awt.Component component)
```

Moves the specified `java.awt.Component` one component nearer in the Z-order, i.e. swapping it with the `java.awt.Component` that was directly in front of it.

If `component` is already at the front of the Z-order, the order is unchanged and `pop` returns `true`.

Specified By:
`pop(Component)` in interface `HComponentOrdering`

Parameters:
`component` - The `java.awt.Component` to be moved.

Returns:
returns `true` on success, `false` on failure, for example if the `java.awt.Component` has yet to be added to the `HContainer` .

---

popInFrontOf(Component, Component)

```
public boolean popInFrontOf(java.awt.Component move, java.awt.Component behind)
```

Puts the specified `java.awt.Component` in front of another `java.awt.Component` in the Z-order of this `HContainer` .

If `move` and `behind` are the same component which has been added to the container `popInFront` does not change the Z-order and returns `true`.

Specified By:
`popInFrontOf(Component, Component)` in interface `HComponentOrdering`

Parameters:
`move` - The `java.awt.Component` to be moved directly in front of the "behind" Component in the Z-order of this `HContainer` .

`behind` - The `java.awt.Component` which the "move" Component should be placed directly in front of.

Returns:
returns `true` on success, `false` on failure, for example when either `java.awt.Component` has yet to be added to the `HContainer` . If this method fails, the Z-order is unchanged.

---

popToFront(Component)

```
public boolean popToFront(java.awt.Component component)
```

Brings the specified `java.awt.Component` to the "front" of the Z-order in this `HContainer` .

If `component` is already at the front of the Z-order, the order is unchanged and `popToFront` returns `true`.

Specified By:
`popToFront(Component)` in interface `HComponentOrdering`

Parameters:
`component` - The `java.awt.Component` to bring to the "front" of the Z-order of this `HContainer` .

Returns:
returns `true` on success, `false` on failure, for example when the `java.awt.Component` has yet to be added to the `HContainer` . If this method fails, the Z-order is unchanged.

---

push(Component)

```
public boolean push(java.awt.Component component)
```

Moves the specified `java.awt.Component` one component further away in the Z-order, i.e. swapping it with the `java.awt.Component` that was directly behind it.

If `component` is already at the back of the Z-order, the order is unchanged and `push` returns `true`.

Specified By:
`push(Component)` in interface `HComponentOrdering`

Parameters:
`component` - The `java.awt.Component` to be moved.

Returns:
returns `true` on success, `false` on failure, for example if the `java.awt.Component` has yet to be added to the `HContainer` .

---

pushBehind(Component, Component)

```
public boolean pushBehind(java.awt.Component move, java.awt.Component front)
```

Puts the specified `java.awt.Component` behind another `java.awt.Component` in the Z-order of this `HContainer` .

If `move` and `front` are the same component which has been added to the container `pushBehind` does not change the Z-order and returns `true`.

Specified By:
`pushBehind(Component, Component)` in interface `HComponentOrdering`

Parameters:
`move` - The `java.awt.Component` to be moved directly behind the "front" Component in the Z-order of this `HContainer` .

`front` - The `java.awt.Component` which the "move" Component should be placed directly behind.

Returns:
returns `true` on success, `false` on failure, for example when either `java.awt.Component` has yet to be added to the `HContainer` .

---

pushToBack(Component)

```
public boolean pushToBack(java.awt.Component component)
```

Place the specified `java.awt.Component` at the "back" of the Z-order in this `HContainer` .

If `component` is already at the back the Z-order is unchanged and `pushToBack` returns `true`.

Specified By:
`pushToBack(Component)` in interface `HComponentOrdering`

Parameters:
`component` - The `java.awt.Component` to place at the "back" of the Z-order of this `HContainer` .

Returns:
returns `true` on success, `false` on failure, for example when the `java.awt.Component` has yet to be added to the `HContainer` . If the component was not added to the container `pushToBack` does not change the Z-order.

---

setMatte(HMatte)

```
public void setMatte(HMatte m)
```

Applies an `HMatte` to this component, for matte compositing. Any existing animated matte must be stopped before this method is called or an HMatteException will be thrown.

Specified By:
`setMatte(HMatte)` in interface `HMatteLayer`

Parameters:
`m` - The `HMatte` to be applied to this component -- note that only one matte may be associated with the component, thus any previous matte will be replaced. If m is null, then any matte associated with the component is removed and further calls to getMatte() shall return null. The component shall behave as if it had a fully opaque `HFlatMatte` associated with it (i.e an HFlatMatte with the default value of 1.0.)

Throws:
`HMatteException` - if the `HMatte` cannot be associated with the component. This can occur:

- if the specific matte type is not supported
- if the platform does not support any matte type
- if the component is associated with an already running `HFlatEffectMatte` or `HImageEffectMatte` . The exception is thrown even if m is null.

See Also:
`HMatte`

---

ungroup()

```
public void ungroup()
```

Ungroups the HContainer and its components. If the container is already ungrouped, this method has no effect.

See Also:
`group()`, `isGrouped()`

org.havi.ui
HDefaultTextLayoutManager

Syntax
```
public class HDefaultTextLayoutManager implements HTextLayoutManager

java.lang.Object
  |
  +--org.havi.ui.HDefaultTextLayoutManager
```

All Implemented Interfaces:
HTextLayoutManager

Description
The HDefaultTextLayoutManager provides the default text rendering mechanism for the HStaticText HText and HTextButton classes.

The HDefaultTextLayoutManager handles alignment and justification of text in both horizontal and vertical directions as specified by the current alignment modes set on HVisible . It does not support scaling of text content, and the scaling mode of an associated HVisible is ignored.

The string passed to the render(String, Graphics, HVisible, Insets) method may be multi-line, where each line is separated by a "\n" (0x0A). If the string does not fit in the space available, the string shall be truncated and an ellipsis ("...") appended to indicate the truncation.

The HDefaultTextLayoutManager should query the HVisible passed to its render(String, Graphics, HVisible, Insets) method to determine the basic font to render text in. If the specified font cannot be accessed the default behavior is to replace it with the nearest builtin font. Each missing character is replaced with an "!" character.

The antialiasing behavior of HDefaultTextLayoutManager is platform dependent. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method

See Also:
HTextLayoutManager, HStaticText, HText, HTextButton, HTextLook, HVisible

Constructors

HDefaultTextLayoutManager()

```
public HDefaultTextLayoutManager()
```

Creates an `HDefaultTextLayoutManager` object. See the class description for details of constructor parameters and default values.

Methods

render(String, Graphics, HVisible, Insets)

```
public void render(java.lang.String markedUpString, java.awt.Graphics g, HVisible v,
            java.awt.Insets insets)
```

Render the string. The `HTextLayoutManager` should use the passed `HVisible` object to determine any additional information required to render the string, e.g. `Font`, `Color` etc.

The text should be laid out in the layout area, which is defined by the bounds of the specified `HVisible`, after subtracting the insets. If the insets are `null` the full bounding rectangle is used as the area to render text into.

The `HTextLayoutManager` should not modify the clipping rectangle of the `Graphics` object.

Specified By:

`render(String, Graphics, HVisible, Insets)` in interface `HTextLayoutManager`

Parameters:

`markedUpString` - the string to render.

`g` - the graphics context, including a clipping rectangle which encapsulates the area within which rendering is permitted. If a valid insets value is passed to this method then text must only be rendered into the bounds of the widget after the insets are subtracted. If the insets value is `null` then text is rendered into the entire bounding area of the `HVisible`. It is implementation specific whether or not the renderer takes into account the intersection of the clipping rectangle in each case for optimization purposes.

`v` - the `HVisible` into which to render.

`insets` - the insets to determine the area in which to layout the text, or `null`.

org.havi.ui
HEmulatedGraphicsConfiguration

Syntax
```
public class HEmulatedGraphicsConfiguration extends HGraphicsConfiguration

java.lang.Object
  |
  +--HScreenConfiguration
        |
        +--HGraphicsConfiguration
              |
              +--org.havi.ui.HEmulatedGraphicsConfiguration
```

Description
An HEmulatedGraphicsConfiguration is a configuration for a "virtual" graphics device that may perform one or more emulations, e.g. in the ATSC context an HEmulatedGraphicsDevice might implement multiple HEmulatedGraphicsConfiguration, corresponding to each of the possible relationships to the high-definition display modes. The HEmulatedGraphicsConfiguration would be used to configure a device appropriately for rendering into, whilst mapping the emulated device onto the "true" physical display, e.g. by down-sampling to standard-definition display.

In essence the HEmulatedGraphicsConfiguration may be considered as a pair of HGraphicsConfiguration objects: one describing the configuration of the emulation and the second describing the corresponding configuration of the implementation.

Hence, an HGraphicsConfiguration may be considered as a special case of the HEmulatedGraphicsConfiguration class, where the emulation and implementation are equivalent. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

See Also:
HEmulatedGraphicsDevice, HGraphicsConfiguration

Constructors

HEmulatedGraphicsConfiguration()
```
protected HEmulatedGraphicsConfiguration()
```

It is not intended that applications should directly construct HEmulatedGraphicsConfiguration objects.

Creates an HEmulatedGraphicsConfiguration object. See the class description for details of constructor parameters and default values.

Methods

---

getConfigTemplate()

```
public HGraphicsConfigTemplate getConfigTemplate()
```

Returns an HGraphicsConfigTemplate describing the virtual (emulation) characteristics of the HEmulatedGraphicsDevice .

Overridden method from HGraphicsConfiguration -- for an HEmulatedGraphicsConfiguration this returns a description of the emulation characteristics.

Overrides:
getConfigTemplate() in class HGraphicsConfiguration

Returns:
an HGraphicsConfigTemplate describing the virtual (emulation) characteristics of the HEmulatedGraphicsDevice .

See Also:
HGraphicsConfigTemplate, HGraphicsConfiguration, HEmulatedGraphicsDevice

---

getEmulation()

```
public HGraphicsConfigTemplate getEmulation()
```

Returns an HGraphicsConfigTemplate describing the virtual (emulation) characteristics of the HEmulatedGraphicsDevice .

Returns:
an HGraphicsConfigTemplate describing the virtual (emulation) characteristics of the HEmulatedGraphicsDevice .

See Also:
HGraphicsConfigTemplate, HEmulatedGraphicsDevice

---

getImplementation()

```
public HGraphicsConfigTemplate getImplementation()
```

Returns an HGraphicsConfigTemplate describing the physical (implementation) characteristics of the HEmulatedGraphicsDevice .

Returns:
an HGraphicsConfigTemplate describing the physical (implementation) characteristics of the HEmulatedGraphicsDevice .

See Also:
HGraphicsConfigTemplate, HEmulatedGraphicsDevice

org.havi.ui
HEmulatedGraphicsDevice

Syntax
```
public abstract class HEmulatedGraphicsDevice extends HGraphicsDevice
```

```
java.lang.Object
  |
  +--HScreenDevice
        |
        +--HGraphicsDevice
              |
              +--org.havi.ui.HEmulatedGraphicsDevice
```

All Implemented Interfaces:
org.davic.resources.ResourceProxy, org.davic.resources.ResourceServer

Description
An `HEmulatedGraphicsDevice` is a "virtual" graphics device that has the capability to be configured to perform one (of many) possible emulations. For example, in the DVB context a 4:3 television might have an `HEmulatedGraphicsDevice` that had an `HEmulatedGraphicsConfiguration` that emulated a virtual 14:9 display. The 14:9 `HEmulatedGraphicsConfiguration` would be used for rendering into from AWT, whilst being displayed on the "true" 4:3 physical display. The relationship between the emulation and implementation is encapsulated within the `HEmulatedGraphicsConfiguration`.

An `HEmulatedGraphicsDevice` transforms both AWT pixel-oriented drawing operations and AWT user-input event coordinates, this is performed outside of the Java application (typically in hardware).

An `HEmulatedGraphicsDevice` may (of necessity) modify coordinates for Components and/or events to the nearest physical / virtual pixel --- authors should not depend on single pixel accuracy.

There is no difference to a Java application between an `HGraphicsDevice` and an `HEmulatedGraphicsDevice`, except for the implication of possible rounding errors in integer pixel positions, e.g. Component placement and/or resolution of events.

Java2D mechanisms should behave as per their normal semantics, with respect to display on-screen.

Constructors

HEmulatedGraphicsDevice()

```
protected HEmulatedGraphicsDevice()
```

It is not intended that applications should directly construct `HEmulatedGraphicsDevice` objects.

Creates an `HEmulatedGraphicsDevice` object. See the class description for details of constructor parameters and default values.

Methods

setGraphicsConfiguration(HEmulatedGraphicsConfiguration)

```
public boolean setGraphicsConfiguration(HEmulatedGraphicsConfiguration hegc)
```

Set the graphics configuration for the device.

Parameters:

`hegc` - the `HEmulatedGraphicsConfiguration` to which this device should be set.

Returns:

A boolean indicating whether the configuration could be applied successfully. If the configuration could not be applied successfully, the configuration after this method may not match the configuration of the device prior to this method being called --- applications should take steps to determine whether a partial change of settings has been made.

Throws:

`SecurityException` - if the application does not have sufficient rights to set the configuration for this device.

`HPermissionDeniedException` - (`HPermissionDeniedException`) if the application does not currently have the right to set the configuration for this device.

`HConfigurationException` - (`HConfigurationException`) if the specified configuration is not valid for this device.

org.havi.ui
HEventMulticaster

Syntax

```
public class HEventMulticaster implements HBackgroundImageListener,
    HScreenConfigurationListener, HScreenLocationModifiedListener,
    java.awt.event.WindowListener, HActionListener, HAdjustmentListener, HFocusListener,
    HItemListener, HTextListener, HKeyListener, org.davic.resources.ResourceStatusListener

java.lang.Object
  |
  +--org.havi.ui.HEventMulticaster
```

All Implemented Interfaces:

java.awt.event.ActionListener, java.util.EventListener, java.awt.event.FocusListener, HActionListener, HAdjustmentListener, HBackgroundImageListener, HFocusListener, HItemListener, HKeyListener, HScreenConfigurationListener, HScreenLocationModifiedListener, HTextListener, java.awt.event.KeyListener, org.davic.resources.ResourceStatusListener, java.awt.event.WindowListener

Description

The HEventMulticaster class is intended to handle event dispatching for the following HAVi events:

- HBackgroundImageEvent
- HScreenConfigurationEvent
- HScreenLocationModifiedEvent
- HActionEvent
- HFocusEvent
- HItemEvent
- HTextEvent
- HKeyEvent
- HAdjustmentEvent
- java.awt.event.WindowEvent
- org.davic.resources.ResourceStatusEvent

It is an implementation option for this class to insert other classes in the inheritance tree (for example java.awt.AWTEventMulticaster). It is allowed that this may result in HEventMulticaster inheriting additional methods beyond those specified here.

Note: the org.davic.resources.ResourceStatusListener specification does not require EventListener to be present. In a HAVi UI implementation, ResourceStatusListener shall extend EventListener.

The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method

None.

See Also:

HBackgroundImageListener, HScreenConfigurationListener, HScreenLocationModifiedListener, HActionListener, HAdjustmentListener, HFocusListener, HItemListener, HTextListener, HKeyListener, java.awt.event.WindowListener, org.davic.resources.ResourceStatusListener

Fields

---

a

```
protected final java.util.EventListener a
```

---

b

```
protected final java.util.EventListener b
```

Constructors

HEventMulticaster(EventListener, EventListener)

```
protected HEventMulticaster(java.util.EventListener a, java.util.EventListener b)
```

Creates an event multicaster instance which chains listener-a with listener-b.

Parameters:

a - listener-a

b - listener-b

Methods

---

actionPerformed(ActionEvent)

```
public void actionPerformed(java.awt.event.ActionEvent e)
```

Handles the ActionEvent by invoking the actionPerformed methods on listener-a and listener-b.

Specified By:

java.awt.event.ActionListener.actionPerformed(java.awt.event.ActionEvent) in interface java.awt.event.ActionListener

Parameters:

e - the ActionEvent event

---

add(HActionListener, HActionListener)

```
public static HActionListener add(HActionListener a, HActionListener b)
```

Adds `HActionListener` -a with `HActionListener` -b and returns the resulting multicast listener.

Parameters:

`a` - HActionListener-a

`b` - HActionListener-b

---

add(HAdjustmentListener, HAdjustmentListener)

```
public static HAdjustmentListener add(HAdjustmentListener a, HAdjustmentListener b)
```

Adds `HAdjustmentListener` -a with `HAdjustmentListener` -b and returns the resulting multicast listener.

Parameters:

`a` - HAdjustmentListener-a

`b` - HAdjustmentListener-b

---

add(HBackgroundImageListener, HBackgroundImageListener)

```
public static HBackgroundImageListener add(HBackgroundImageListener a,
            HBackgroundImageListener b)
```

Adds `HBackgroundImageListener` -a with `HBackgroundImageListener` -b and returns the resulting multicast listener.

Parameters:

`a` - HBackgroundImageListener-a

`b` - HBackgroundImageListener-b

---

add(HFocusListener, HFocusListener)

```
public static HFocusListener add(HFocusListener a, HFocusListener b)
```

Adds `HFocusListener` -a with `HFocusListener` -b and returns the resulting multicast listener.

Parameters:

`a` - HFocusListener-a

`b` - HFocusListener-b

---

add(HItemListener, HItemListener)

```
public static HItemListener add(HItemListener a, HItemListener b)
```

Adds `HItemListener` -a with `HItemListener` -b and returns the resulting multicast listener.

Parameters:

`a` - HItemListener-a

`b` - HItemListener-b

---

add(HKeyListener, HKeyListener)

```
public static HKeyListener add(HKeyListener a, HKeyListener b)
```

Adds `HKeyListener` -a with `HKeyListener` -b and returns the resulting multicast listener.

Parameters:

a - HKeyListener-a

b - HKeyListener-b

---

add(HScreenConfigurationListener, HScreenConfigurationListener)

```
public static HScreenConfigurationListener add(HScreenConfigurationListener a,
            HScreenConfigurationListener b)
```

Adds HScreenConfigurationListener -a with HScreenConfigurationListener -b and returns the resulting multicast listener.

Parameters:

a - HScreenConfigurationListener-a

b - HScreenConfigurationListener-b

---

add(HScreenConfigurationListener, HScreenConfigurationListener, HScreenConfigTemplate)

```
public static HScreenConfigurationListener add(HScreenConfigurationListener a,
            HScreenConfigurationListener b, HScreenConfigTemplate tb)
```

Adds HScreenConfigurationListener -a with HScreenConfigurationListener -b, which is notified when the HScreenDevice configuration is modified so that it is no longer compatible with the HScreenConfigTemplate tb. It returns the resulting multicast listener.

Parameters:

a - HScreenConfigurationListener-a

b - HScreenConfigurationListener-b

tb - HScreenConfigTemplate associated with HScreenConfigurationListener-b

---

add(HScreenLocationModifiedListener, HScreenLocationModifiedListener)

```
public static HScreenLocationModifiedListener add(HScreenLocationModifiedListener a,
            HScreenLocationModifiedListener b)
```

Adds HScreenLocationModifiedListener -a with HScreenLocationModifiedListener -b and returns the resulting multicast listener.

Parameters:

a - HScreenLocationModifiedListener-a

b - HScreenLocationModifiedListener-b

---

add(HTextListener, HTextListener)

```
public static HTextListener add(HTextListener a, HTextListener b)
```

Adds HTextListener -a with HTextListener -b and returns the resulting multicast listener.

Parameters:

a - HTextListener-a

b - HTextListener-b

---

add(ResourceStatusListener, ResourceStatusListener)

```
public static org.davic.resources.ResourceStatusListener
            add(org.davic.resources.ResourceStatusListener a,
            org.davic.resources.ResourceStatusListener b)
```

Adds ResourceStatusListener-a with listener-b and returns the resulting multicast listener. In a HAVi UI implementation, ResourceStatusListener shall extend EventListener.

Parameters:

`a` - listener-a

`b` - listener-b

---

add(WindowListener, WindowListener)

```
public static java.awt.event.WindowListener add(java.awt.event.WindowListener a,
            java.awt.event.WindowListener b)
```

Adds WindowListener-a with WindowListener-b and returns the resulting multicast listener.

Parameters:

`a` - WindowListener-a

`b` - WindowListener-b

---

addInternal(EventListener, EventListener)

```
protected static java.util.EventListener addInternal(java.util.EventListener a,
            java.util.EventListener b)
```

Returns the resulting multicast listener from adding listener-a and listener-b together. If listener-a is null, it returns listener-b; If listener-b is null, it returns listener-a If neither are null, then it creates and returns a new HEventMulticaster instance which chains a with b.

Parameters:

`a` - event listener-a

`b` - event listener-b

---

caretMoved(HTextEvent)

```
public void caretMoved(HTextEvent e)
```

Handles the `HTextEvent` by invoking the `caretMoved(HTextEvent)` methods on listener-a and listener-b.

Specified By:

`caretMoved(HTextEvent)` in interface `HTextListener`

Parameters:

`e` - the HTextEvent event

---

currentItemChanged(HItemEvent)

```
public void currentItemChanged(HItemEvent e)
```

Handles the `HItemEvent` by invoking the `currentItemChanged(HItemEvent)` methods on listener-a and listener-b.

Specified By:

`currentItemChanged(HItemEvent)` in interface `HItemListener`

Parameters:

`e` - the HItemEvent event

---

focusGained(FocusEvent)

```
public void focusGained(java.awt.event.FocusEvent e)
```

Handles the FocusEvent by invoking the focusGained methods on listener-a and listener-b.

Specified By:
java.awt.event.FocusListener.focusGained(java.awt.event.FocusEvent) in interface java.awt.event.FocusListener

Parameters:
`e` - the FocusEvent event

---

focusLost(FocusEvent)

```
public void focusLost(java.awt.event.FocusEvent e)
```

Handles the FocusEvent by invoking the focusLost methods on listener-a and listener-b.

Specified By:
java.awt.event.FocusListener.focusLost(java.awt.event.FocusEvent) in interface java.awt.event.FocusListener

Parameters:
`e` - the FocusEvent event

---

imageLoaded(HBackgroundImageEvent)

```
public void imageLoaded(HBackgroundImageEvent e)
```

Handles the `HBackgroundImageEvent` by invoking the `imageLoaded(HBackgroundImageEvent)` methods on listener-a and listener-b.

Specified By:
`imageLoaded(HBackgroundImageEvent)` in interface `HBackgroundImageListener`

Parameters:
`e` - the HBackgroundImageEvent event

---

imageLoadFailed(HBackgroundImageEvent)

```
public void imageLoadFailed(HBackgroundImageEvent e)
```

Handles the `HBackgroundImageEvent` by invoking the `imageLoadFailed(HBackgroundImageEvent)` methods on listener-a and listener-b.

Specified By:
`imageLoadFailed(HBackgroundImageEvent)` in interface `HBackgroundImageListener`

Parameters:
`e` - the HBackgroundImageEvent event

---

keyPressed(KeyEvent)

```
public void keyPressed(java.awt.event.KeyEvent e)
```

Handles the `HKeyEvent` by invoking the `keyPressed` methods on listener-a and listener-b.

Specified By:
java.awt.event.KeyListener.keyPressed(java.awt.event.KeyEvent) in interface java.awt.event.KeyListener

Parameters:
e - the HKeyEvent event

---

keyReleased(KeyEvent)

```
public void keyReleased(java.awt.event.KeyEvent e)
```

Handles the HKeyEvent by invoking the keyReleased methods on listener-a and listener-b.

Specified By:
java.awt.event.KeyListener.keyReleased(java.awt.event.KeyEvent) in interface java.awt.event.KeyListener

Parameters:
e - the HKeyEvent event

---

keyTyped(KeyEvent)

```
public void keyTyped(java.awt.event.KeyEvent e)
```

Handles the HKeyEvent by invoking the keyTyped methods on listener-a and listener-b.

Specified By:
java.awt.event.KeyListener.keyTyped(java.awt.event.KeyEvent) in interface java.awt.event.KeyListener

Parameters:
e - the HKeyEvent event

---

remove(EventListener)

```
protected java.util.EventListener remove(java.util.EventListener oldl)
```

Removes a listener from this multicaster and returns the resulting multicast listener.

Parameters:
oldl - the listener to be removed

---

remove(HActionListener, HActionListener)

```
public static HActionListener remove(HActionListener l, HActionListener oldl)
```

Removes the old HActionListener from HActionListener-l and returns the resulting multicast listener.

Parameters:
l - HActionListener-l

oldl - the HActionListener being removed

---

remove(HAdjustmentListener, HAdjustmentListener)

```
public static HAdjustmentListener remove(HAdjustmentListener l, HAdjustmentListener oldl)
```

Removes the old HAdjustmentListener from HAdjustmentListener-l and returns the resulting multicast listener.

Parameters:
l - HAdjustmentListener-l

oldl - the HAdjustmentListener being removed

---

remove(HBackgroundImageListener, HBackgroundImageListener)

```
public static HBackgroundImageListener remove(HBackgroundImageListener l,
            HBackgroundImageListener oldl)
```

Removes the old `HBackgroundImageListener` from `HBackgroundImageListener` -l and returns the resulting multicast listener.

Parameters:

`l` - HBackgroundImageListener-l

`oldl` - the HBackgroundImageListener being removed

---

remove(HFocusListener, HFocusListener)

```
public static HFocusListener remove(HFocusListener l, HFocusListener oldl)
```

Removes the old `HFocusListener` from `HFocusListener` -l and returns the resulting multicast listener.

Parameters:

`l` - HFocusListener-l

`oldl` - the HFocusListener being removed

---

remove(HItemListener, HItemListener)

```
public static HItemListener remove(HItemListener l, HItemListener oldl)
```

Removes the old `HItemListener` from `HItemListener` -l and returns the resulting multicast listener.

Parameters:

`l` - HItemListener-l

`oldl` - the HItemListener being removed

---

remove(HKeyListener, HKeyListener)

```
public static HKeyListener remove(HKeyListener l, HKeyListener oldl)
```

Removes the old `HKeyListener` from `HKeyListener` -l and returns the resulting multicast listener.

Parameters:

`l` - HKeyListener-l

`oldl` - the HKeyListener being removed

---

remove(HScreenConfigurationListener, HScreenConfigurationListener)

```
public static HScreenConfigurationListener remove(HScreenConfigurationListener l,
            HScreenConfigurationListener oldl)
```

Removes the old `HScreenConfigurationListener` from `HScreenConfigurationListener` -l and returns the resulting multicast listener.

Parameters:

`l` - HScreenConfigurationListener-l

`oldl` - the HScreenConfigurationListener being removed

remove(HScreenLocationModifiedListener, HScreenLocationModifiedListener)

```
public static HScreenLocationModifiedListener remove(HScreenLocationModifiedListener l,
            HScreenLocationModifiedListener oldl)
```

Removes the old HScreenLocationModifiedListener from HScreenLocationModifiedListener -l and returns the resulting multicast listener.

Parameters:

l - HScreenLocationModifiedListener-l

oldl - the HScreenLocationModifiedListener being removed

remove(HTextListener, HTextListener)

```
public static HTextListener remove(HTextListener l, HTextListener oldl)
```

Removes the old HTextListener from HTextListener -l and returns the resulting multicast listener.

Parameters:

l - HTextListener-l

oldl - the HTextListener being removed

remove(ResourceStatusListener, ResourceStatusListener)

```
public static org.davic.resources.ResourceStatusListener
            remove(org.davic.resources.ResourceStatusListener l,
            org.davic.resources.ResourceStatusListener oldl)
```

Removes the old ResourceStatusListener from ResourceStatusListener-l and returns the resulting multicast listener. In a HAVi UI implementation, ResourceStatusListener shall extend EventListener.

Parameters:

l - ResourceStatusListener-l

oldl - the ResourceStatusListener being removed

remove(WindowListener, WindowListener)

```
public static java.awt.event.WindowListener remove(java.awt.event.WindowListener l,
            java.awt.event.WindowListener oldl)
```

Removes the old WindowListener from WindowListener-l and returns the resulting multicast listener.

Parameters:

l - WindowListener-l

oldl - the WindowListener being removed

removeInternal(EventListener, EventListener)

```
protected static java.util.EventListener removeInternal(java.util.EventListener l,
            java.util.EventListener oldl)
```

Returns the resulting multicast listener after removing the old listener from listener-l. If listener-l equals the old listener OR listener-l is null, returns null. Else if listener-l is an instance of HEventMulticaster, then it removes the old listener from it. Else, returns listener l.

Parameters:

l - the listener being removed from

oldl - the listener being removed

---

report(HScreenConfigurationEvent)

```
public void report(HScreenConfigurationEvent e)
```

Handles the `HScreenConfigurationEvent` by invoking the `report(HScreenConfigurationEvent)` methods on listener-a and listener-b.

Specified By:
`report(HScreenConfigurationEvent)` in interface `HScreenConfigurationListener`

Parameters:
`e` - the HScreenConfigurationEvent event

---

report(HScreenLocationModifiedEvent)

```
public void report(HScreenLocationModifiedEvent e)
```

Handles the `HScreenLocationModifiedEvent` by invoking the `report(HScreenLocationModifiedEvent)` methods on listener-a and listener-b.

Specified By:
`report(HScreenLocationModifiedEvent)` in interface `HScreenLocationModifiedListener`

Parameters:
`e` - the HScreenLocationModifiedEvent event

---

selectionChanged(HItemEvent)

```
public void selectionChanged(HItemEvent e)
```

Handles the `HItemEvent` by invoking the `selectionChanged(HItemEvent)` methods on listener-a and listener-b.

Specified By:
`selectionChanged(HItemEvent)` in interface `HItemListener`

Parameters:
`e` - the HItemEvent event

---

statusChanged(ResourceStatusEvent)

```
public void statusChanged(org.davic.resources.ResourceStatusEvent e)
```

Handles the ResourceStatusEvent by invoking the statusChanged methods on listener-a and listener-b.

Specified By:
org.davic.resources.ResourceStatusListener.statusChanged(org.davic.resources.ResourceStatusEvent) in interface org.davic.resources.ResourceStatusListener

Parameters:
`e` - the ResourceStatusEvent event

---

textChanged(HTextEvent)

```
public void textChanged(HTextEvent e)
```

Handles the `HTextEvent` by invoking the `textChanged(HTextEvent)` methods on listener-a and listener-b.

Specified By:

textChanged(HTextEvent) in interface HTextListener

Parameters:
e - the HTextEvent event

---

valueChanged(HAdjustmentEvent)

```
public void valueChanged(HAdjustmentEvent e)
```

Handles the HAdjustmentEvent by invoking the valueChanged(HAdjustmentEvent) methods on listener-a and listener-b.

Specified By:
valueChanged(HAdjustmentEvent) in interface HAdjustmentListener

Parameters:
e - the HAdjustmentEvent event

---

windowActivated(WindowEvent)

```
public void windowActivated(java.awt.event.WindowEvent e)
```

Handles the windowActivated event by invoking the windowActivated methods on listener-a and listener-b.

Specified By:
java.awt.event.WindowListener.windowActivated(java.awt.event.WindowEvent) in interface java.awt.event.WindowListener

Parameters:
e - the window event

---

windowClosed(WindowEvent)

```
public void windowClosed(java.awt.event.WindowEvent e)
```

Handles the windowClosed event by invoking the windowClosed methods on listener-a and listener-b.

Specified By:
java.awt.event.WindowListener.windowClosed(java.awt.event.WindowEvent) in interface java.awt.event.WindowListener

Parameters:
e - the window event

---

windowClosing(WindowEvent)

```
public void windowClosing(java.awt.event.WindowEvent e)
```

Handles the windowClosing event by invoking the windowClosing methods on listener-a and listener-b.

Specified By:
java.awt.event.WindowListener.windowClosing(java.awt.event.WindowEvent) in interface java.awt.event.WindowListener

Parameters:
e - the window event

---

windowDeactivated(WindowEvent)

```
public void windowDeactivated(java.awt.event.WindowEvent e)
```

Handles the windowDeactivated event by invoking the windowDeactivated methods on listener-a and listener-b.

Specified By:

java.awt.event.WindowListener.windowDeactivated(java.awt.event.WindowEvent) in interface java.awt.event.WindowListener

Parameters:

`e` - the window event

---

windowDeiconified(WindowEvent)

```
public void windowDeiconified(java.awt.event.WindowEvent e)
```

Handles the windowDeiconified event by invoking the windowDeiconified methods on listener-a and listener-b.

Specified By:

java.awt.event.WindowListener.windowDeiconified(java.awt.event.WindowEvent) in interface java.awt.event.WindowListener

Parameters:

`e` - the window event

---

windowIconified(WindowEvent)

```
public void windowIconified(java.awt.event.WindowEvent e)
```

Handles the windowIconified event by invoking the windowIconified methods on listener-a and listener-b.

Specified By:

java.awt.event.WindowListener.windowIconified(java.awt.event.WindowEvent) in interface java.awt.event.WindowListener

Parameters:

`e` - the window event

---

windowOpened(WindowEvent)

```
public void windowOpened(java.awt.event.WindowEvent e)
```

Handles the windowOpened event by invoking the windowOpened methods on listener-a and listener-b.

Specified By:

java.awt.event.WindowListener.windowOpened(java.awt.event.WindowEvent) in interface java.awt.event.WindowListener

Parameters:

`e` - the window event

org.havi.ui
HFlatEffectMatte

Syntax

```
public class HFlatEffectMatte implements HMatte, HAnimateEffect

java.lang.Object
  |
  +--org.havi.ui.HFlatEffectMatte
```

All Implemented Interfaces:

HAnimateEffect, HMatte

Description

The HFlatEffectMatte class represents a matte that is constant over space but varies over time. It is specified as a sequence of floating point values in the range 0.0 to 1.0 where:

- 0.0 is fully transparent
- values between 0.0 and 1.0 are partially transparent to the nearest supported transparency value.
- 1.0 is fully opaque

The data for any HFlatEffectMatte may be changed "on the fly" using the setMatteData(float[]) method. However, some implementations may be asynchronously referencing their content (i.e. through a separate implementation-specific animation thread). Therefore the following restrictions apply to the setMatteData(float[]) method:

- The method must be synchronized with any implementation-specific animation thread such that content cannot be changed while a different thread is using it.
- If the animation was running the method should stop the animation in a synchronized manner before changing content.
- The method should reset the animation to a starting position defined by the current play mode. The repeat count of the animation should be reset to 0.
- If the animation was running the method should start the animation.

The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
data	The transparency value for this flat effect matte.	null (the matte should be treated as being temporally unvarying and opaque)	setMatteData(float[])	getMatteData()

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
The initial piece of content to be presented, i.e. its position in the content array.	0	setPosition(int)	getPosition()

By default the animation should be stopped. Hence, to start the animation its start method must be explicitly invoked. This mechanism allows for animations that are programmatically controlled, e.g. via the setPosition method.	"stopped"	`start()` / `stop()`	`isAnimated()`

Constructors

HFlatEffectMatte()

```
public HFlatEffectMatte()
```

Creates an `HFlatEffectMatte` object. See the class description for details of constructor parameters and default values.

HFlatEffectMatte(float[])

```
public HFlatEffectMatte(float[] data)
```

Creates an `HFlatEffectMatte` object. See the class description for details of constructor parameters and default values.

Methods

getDelay()

```
public int getDelay()
```

Gets the presentation delay for this `HFlatEffectMatte`.

Specified By:
`getDelay()` in interface `HAnimateEffect`

Returns:
the presentation delay in units of 0.1 seconds.

getMatteData()

```
public float[] getMatteData()
```

Returns the matte data used for this matte.

Returns:
the data used for this matte (an array of numbers), or null if no matte data has been set.

getPlayMode()

```
public int getPlayMode()
```

Gets the playing mode for this `HFlatEffectMatte`.

Specified By:
`getPlayMode()` in interface `HAnimateEffect`

Returns:

the play mode for this HFlatEffectMatte .

---

getPosition()

```
public int getPosition()
```

Get the current index into the content array which this HFlatEffectMatte is using to display content.

Specified By:
getPosition() in interface HAnimateEffect

Returns:
the index of the content currently being displayed, in the range 0 <= index < length

---

getRepeatCount()

```
public int getRepeatCount()
```

Gets the number of times that this HFlatEffectMatte is to be played. Note that this method does *not* return the number of repeats that are remaining to be played.

Specified By:
getRepeatCount() in interface HAnimateEffect

Returns:
the total number of times that an HFlatEffectMatte is to be played. The returned value shall be greater than zero, or REPEAT_INFINITE .

---

isAnimated()

```
public boolean isAnimated()
```

This method indicates the animation (running) state of the HFlatEffectMatte .

Specified By:
isAnimated() in interface HAnimateEffect

Returns:
true if this HFlatEffectMatte is running, i.e. the start method has been invoked - false otherwise.

---

setDelay(int)

```
public void setDelay(int count)
```

Sets the delay between the presentation of successive pieces of content (frames).

After calling setDelay(int) on a currently playing HFlatEffectMatte , there is no guarantee that one or more frames will not be displayed using the previous delay until the new delay value takes effect.

Specified By:
setDelay(int) in interface HAnimateEffect

Parameters:
count - the content presentation delay in units of 0.1 seconds duration. If count is less than one "unit", then it shall be treated as if it were a delay of one "unit", i.e. 0.1 seconds.

---

setMatteData(float[])

```
public void setMatteData(float[] data)
```

Sets the data for this matte. Any previously set data is replaced. If this method is called when the animation is running the data is changed immediately and the current animation position is reset according to the active play mode. The changes affect the animation immediately.

Parameters:

`data` - the data for this matte. Specify a null object to remove the associated data for this matte. If the length of the data array is zero, an IllegalArgumentException is thrown.

---

setPlayMode(int)

```
public void setPlayMode(int mode)
```

Sets the playing mode for this `HFlatEffectMatte` . If the animation is already running a call to `setPlayMode` will change the current value and affect the animation immediately. The position of the animation is unchanged.

Specified By:

`setPlayMode(int)` in interface `HAnimateEffect`

Parameters:

`mode` - the play mode for this `HFlatEffectMatte` , which must be either `PLAY_ALTERNATING` or `PLAY_REPEATING` .

---

setPosition(int)

```
public void setPosition(int position)
```

Set this `HFlatEffectMatte` to display the content at the specified position. If the animation is already running a call to `setPosition` will change the current value and affect the animation immediately.

Specified By:

`setPosition(int)` in interface `HAnimateEffect`

Parameters:

`position` - an index into the content array which specifies the next piece of content to be displayed. If `position` is less than 0, then the array element at index 0 is displayed, if `position` is greater than or equal to the length of the content array, then the array element at index [`length`-1] will be used.

---

setRepeatCount(int)

```
public void setRepeatCount(int count)
```

Sets the number of times that this `HFlatEffectMatte` should be played. If the animation is already running a call to `setRepeatCount` will change the current value and reset the current number of repeats to 0, affecting the animation immediately.

Specified By:

`setRepeatCount(int)` in interface `HAnimateEffect`

Parameters:

`count` - the number of times that an `HFlatEffectMatte` should be played. Valid values of the repeat count are one or more, and `REPEAT_INFINITE` .

---

start()

```
public void start()
```

This method starts this `HFlatEffectMatte` playing. If `start` is called when the animation is already running it resets the animation according to the current play mode, as returned by `getPlayMode()` .

Specified By:
`start()` in interface `HAnimateEffect`

---

stop()

```
public void stop()
```

This method indicates that the running `HFlatEffectMatte` should be stopped. After calling this method, there is no guarantee that one or more frames will not be displayed before the animation actually stops playing. If the animation is already stopped further calls to `stop` have no effect.

Specified By:
`stop()` in interface `HAnimateEffect`

org.havi.ui
HFlatMatte

Syntax
```
public class HFlatMatte implements HMatte
```

```
java.lang.Object
  |
  +--org.havi.ui.HFlatMatte
```

All Implemented Interfaces:
HMatte

Description
The `HFlatMatte` class represents a matte that is constant over space and time. It is specified as a floating point value in the range 0.0 to 1.0 where:

- 0.0 is fully transparent
- values between 0.0 and 1.0 are partially transparent to the nearest supported transparency value.
- 1.0 is fully opaque

The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
data	The transparency value for this flat effect matte.	1.0	`setMatteData(float)`	`getMatteData()`

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

Constructors

HFlatMatte()
```
public HFlatMatte()
```
Creates an `HFlatMatte` object. See the class description for details of constructor parameters and default values.

HFlatMatte(float)
```
public HFlatMatte(float data)
```
Creates an `HFlatMatte` object. See the class description for details of constructor parameters and default values.

Methods

---

getMatteData()

```
public float getMatteData()
```

Returns the data used for this matte.

Returns:
the data used for this matte (a single number).

---

setMatteData(float)

```
public void setMatteData(float data)
```

Sets the data for this matte. Any previously set data is replaced.

Parameters:
`data` - the data for this matte.

org.havi.ui
HFontCapabilities

Syntax
```
public class HFontCapabilities

java.lang.Object
  |
  +--org.havi.ui.HFontCapabilities
```

Description
The `HFontCapabilities` class allows applications to query the rendering support for various character ranges and individual characters within specified fonts.

Fields

ALPHABETIC_PRESENTATION_FORMS_A

```
public static final int ALPHABETIC_PRESENTATION_FORMS_A
```

This corresponds to the character range (U+FB00..U+FB4F) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

ARABIC_EXTENDED

```
public static final int ARABIC_EXTENDED
```

This corresponds to the character range (U+653..U+6FF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

ARABIC_PRESENTATION_FORMS_A

```
public static final int ARABIC_PRESENTATION_FORMS_A
```

This corresponds to the character range (U+FB50..U+FDFF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

ARABIC_PRESENTATION_FORMS_B

```
public static final int ARABIC_PRESENTATION_FORMS_B
```

This corresponds to the character range (U+FE70..U+FEFE) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

ARMENIAN

```
public static final int ARMENIAN
```

This corresponds to the character range (U+530..U+58F) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

ARROWS

```
public static final int ARROWS
```

This corresponds to the character range (U+2190..U+21FF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

BASIC_ARABIC

```
public static final int BASIC_ARABIC
```

This corresponds to the character range (U+600..U+652) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

BASIC_GEORGIAN

```
public static final int BASIC_GEORGIAN
```

This corresponds to the character range (U+10D0..U+10FF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

BASIC_GREEK

```
public static final int BASIC_GREEK
```

This corresponds to the character range (U+0370..U+03CF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

BASIC_HEBREW

```
public static final int BASIC_HEBREW
```

This corresponds to the character range (U+5D0..U+5EA) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

BASIC_LATIN

```
public static final int BASIC_LATIN
```

This corresponds to the character range (U+0020..U+007E) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

BENGALI

```
public static final int BENGALI
```

This corresponds to the character ranges (U+980..U+9FF) and (U+200C..U+200D) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

BLOCK_ELEMENTS

```
public static final int BLOCK_ELEMENTS
```

This corresponds to the character range (U+2580..U+259F) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

BOPOMOFO

```
public static final int BOPOMOFO
```

This corresponds to the character range (U+3100..U+312F) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

BOX_DRAWING

```
public static final int BOX_DRAWING
```

This corresponds to the character range (U+2500..U+257F) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

CJK_COMPATIBILITY

```
public static final int CJK_COMPATIBILITY
```

This corresponds to the character range (U+3300..U+33FF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

CJK_COMPATIBILITY_FORMS

```
public static final int CJK_COMPATIBILITY_FORMS
```

This corresponds to the character range (U+FE30..U+FE4F) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

CJK_COMPATIBILITY_IDEOGRAPHS

```
public static final int CJK_COMPATIBILITY_IDEOGRAPHS
```

This corresponds to the character range (U+F900..U+FAFF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

CJK_MISCELLANEOUS

```
public static final int CJK_MISCELLANEOUS
```

This corresponds to the character range (U+3190..U+319F) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

CJK_SYMBOLS_AND_PUNCTUATION

```
public static final int CJK_SYMBOLS_AND_PUNCTUATION
```

This corresponds to the character range (U+3000..U+303F) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

CJK_UNIFIED_IDEOGRAPHS

```
public static final int CJK_UNIFIED_IDEOGRAPHS
```

This corresponds to the character range (U+4E00..U+9FFF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

COMBINING_DIACRITICAL_MARKS

```
public static final int COMBINING_DIACRITICAL_MARKS
```

This corresponds to the character range (U+0300..U+036F) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

COMBINING_DIACTRICAL_MARKS_FOR_SYMBOLS

```
public static final int COMBINING_DIACTRICAL_MARKS_FOR_SYMBOLS
```

This corresponds to the character range (U+20D0..U+20FF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

COMBINING_HALF_MARKS

```
public static final int COMBINING_HALF_MARKS
```

This corresponds to the character range (U+FE20..U+FE2F) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

CONTROL_PICTURES

```
public static final int CONTROL_PICTURES
```

This corresponds to the character range (U+2400..U+243F) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

CURRENCY_SYMBOLS

```
public static final int CURRENCY_SYMBOLS
```

This corresponds to the character range (U+20A0..U+20CF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

CYRILLIC

```
public static final int CYRILLIC
```

This corresponds to the character range (U+400..U+4FF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

DEVANAGARI

```
public static final int DEVANAGARI
```

This corresponds to the character ranges (U+0900..U+097F) and (U+200C..U+200D) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

DINGBATS

```
public static final int DINGBATS
```

This corresponds to the character range (U+2700..U+27BF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

ENCLOSED_ALPHANUMERICS

```
public static final int ENCLOSED_ALPHANUMERICS
```

This corresponds to the character range (U+2460..U+24FF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

ENCLOSED_CJK_LETTERS_AND_MONTHS

```
public static final int ENCLOSED_CJK_LETTERS_AND_MONTHS
```

This corresponds to the character range (U+3200..U+32FF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

GENERAL_PUNCTUATION

```
public static final int GENERAL_PUNCTUATION
```

This corresponds to the character range (U+2000..U+206F) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

GEOMETRICAL_SHAPES

```
public static final int GEOMETRICAL_SHAPES
```

This corresponds to the character range (U+25A0..U+25FF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

GEORGIAN_EXTENDED

```
public static final int GEORGIAN_EXTENDED
```

This corresponds to the character range (U+10A0..U+10CF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

GREEK_EXTENDED

```
public static final int GREEK_EXTENDED
```

This corresponds to the character range (U+1F00..U+1FFF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

GREEK_SYMBOLS_AND_COPTIC

```
public static final int GREEK_SYMBOLS_AND_COPTIC
```

This corresponds to the character range (U+3D0..U+3FF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

GUJARATI

```
public static final int GUJARATI
```

This corresponds to the character ranges (U+0A80..U+0AFF) and (U+200C..U+200D) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

GURMUKHI

```
public static final int GURMUKHI
```

This corresponds to the character ranges (U+0A00..U+0A7F) and (U+200C..U+200D) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

HALFWIDTH_AND_FULLWIDTH_FORMS

```
public static final int HALFWIDTH_AND_FULLWIDTH_FORMS
```

This corresponds to the character range (U+FF00..U+FFEF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

HANGUL

```
public static final int HANGUL
```

This corresponds to the character range (U+3400..U+3D2D) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

HANGUL_COMPATIBILITY_JAMO

```
public static final int HANGUL_COMPATIBILITY_JAMO
```

This corresponds to the character range (U+3130..U+318F) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

HANGUL_JAMO

```
public static final int HANGUL_JAMO
```

This corresponds to the character range (U+1100..U+11FF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

HANGUL_SUPPLEMENTARY_A

```
public static final int HANGUL_SUPPLEMENTARY_A
```

This corresponds to the character range (U+3D2E..U+44B7) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

HANGUL_SUPPLEMENTARY_B

```
public static final int HANGUL_SUPPLEMENTARY_B
```

This corresponds to the character range (U+44B8..U+4DFF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

HEBREW_EXTENDED

```
public static final int HEBREW_EXTENDED
```

This corresponds to the character ranges (U+590..U+5CF) and (U+5EB..U+5FF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

HIRAGANA

```
public static final int HIRAGANA
```

This corresponds to the character range (U+3040..U+309F) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

IPA_EXTENSIONS

```
public static final int IPA_EXTENSIONS
```

This corresponds to the character range (U+0250..U+02AF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

KANNADA

```
public static final int KANNADA
```

This corresponds to the character ranges (U+0C80..U+0CFF) and (U+200C..U+200D) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

KATAKANA

```
public static final int KATAKANA
```

This corresponds to the character range (U+30A0..U+30FF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

LAO

```
public static final int LAO
```

This corresponds to the character range (U+0E80..U+0EFF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

LATIN_1_SUPPLEMENT

```
public static final int LATIN_1_SUPPLEMENT
```

This corresponds to the character range (U+00A0..U+00FF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

LATIN_EXTENDED_A

```
public static final int LATIN_EXTENDED_A
```

This corresponds to the character range (U+0100..U+017F) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

LATIN_EXTENDED_ADDITIONAL

```
public static final int LATIN_EXTENDED_ADDITIONAL
```

This corresponds to the character range (U+1E00..U+1EFF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

LATIN_EXTENDED_B

```
public static final int LATIN_EXTENDED_B
```

This corresponds to the character range (U+0180..U+024F) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

LETTERLIKE_SYMBOLS

```
public static final int LETTERLIKE_SYMBOLS
```

This corresponds to the character range (U+2100..U+214F) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

MALAYALAM

```
public static final int MALAYALAM
```

This corresponds to the character ranges (U+0D00..U+0D7F) and (U+200C..U+200D) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

MATHEMATICAL_OPERATORS

```
public static final int MATHEMATICAL_OPERATORS
```

This corresponds to the character range (U+2200..U+22FF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

MISCELLANEOUS_SYMBOLS

```
public static final int MISCELLANEOUS_SYMBOLS
```

This corresponds to the character range (U+2600..U+26FF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

MISCELLANEOUS_TECHNICAL

```
public static final int MISCELLANEOUS_TECHNICAL
```

This corresponds to the character range (U+2300..U+23FF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

NUMBER_FORMS

```
public static final int NUMBER_FORMS
```

This corresponds to the character range (U+2150..U+218F) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

OPTICAL_CHARACTER_RECOGNITION

```
public static final int OPTICAL_CHARACTER_RECOGNITION
```

This corresponds to the character range (U+2440..U+245F) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

ORIYA

```
public static final int ORIYA
```

This corresponds to the character ranges (U+0B00..U+0B7F) and (U+200C..U+200D) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

PRIVATE_USE_AREA

```
public static final int PRIVATE_USE_AREA
```

This corresponds to the character range (U+E000..U+F8FF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

SMALL_FORM_VARIANTS

```
public static final int SMALL_FORM_VARIANTS
```

This corresponds to the character range (U+FE50..U+FE6F) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

SPACING_MODIFIER_LETTERS

```
public static final int SPACING_MODIFIER_LETTERS
```

This corresponds to the character range (U+02B0..U+02FF) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

SPECIALS

```
public static final int SPECIALS
```

This corresponds to the character range (U+FFF0..U+FFFD) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

SUPERSCRIPTS_AND_SUBSCRIPTS

```
public static final int SUPERSCRIPTS_AND_SUBSCRIPTS
```

This corresponds to the character range (U+2070..U+209F) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

TAMIL

```
public static final int TAMIL
```

This corresponds to the character ranges (U+0B80..U+0BFF) and (U+200C..U+200D) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

TELUGU

```
public static final int TELUGU
```

This corresponds to the character ranges (U+0C00..U+0C7F) and (U+200C..U+200D) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

THAI

```
public static final int THAI
```

This corresponds to the character range (U+0E00..U+0E7F) as defined in ISO/IEC 10646-1:1993(E) normative Annex A

Constructors

HFontCapabilities()

```
protected HFontCapabilities()
```

It is not intended that applications should directly construct `HFontCapabilities` objects.

This method is protected to allow the platform to override it in a different package scope.

Methods

downloadFont(Font)

```
public static void downloadFont(java.awt.Font f)
```

Download a font which is only temporarily available on a platform. If called for fonts which are permanently available on a platform, this method has no effect. This method blocks while the font is downloaded. If the font is not accessible then this method has no effect and the normal Java font behavior is followed. The platform will use a platform dependent approximation of this font if needed. If a font is already downloaded then it shall not be downloaded again.

Parameters:
`f` - the font to load.

Throws:
`java.io.IOException` - if an error occurs while trying to download a font.

fontAccessible(Font)

```
public static boolean fontAccessible(java.awt.Font f)
```

Tests if the specified font is accessible in a form usable with this graphics configuration. For platforms which define a mechanism for (possibly temporary) download of fonts, this method shall check fonts available through that mechanism. This does not cause the font to be downloaded but indicates whether a download will succeed. If information needed to determine the existence of the font needs to be downloaded then that information shall be downloaded as part of the execution of this method. This method shall block while any such downloading happens. An error in the downloading of any such information shall be reported as the font not existing.

Parameters:
`f` - the font to test.

Returns:
`true` if the font is accessible, otherwise `false`.

---

getSupportedCharacterRanges(Font)

```
public static int[] getSupportedCharacterRanges(java.awt.Font font)
```

Returns the set of character ranges as defined in ISO/IEC 10646-1:1993(E) normative Annex A that this font supports, or a null array if the capabilities of the font are unknown.

Support for a character range does not imply that ALL characters within that range are available in the specified font.

When deciding whether a particular character range (U+XXXX..U+YYYY) is supported, characters which are in the `GENERAL PUNCTUATION` range shall not be considered for character ranges other than `GENERAL PUNCTUATION`.

Parameters:

`font` - The font to query for its support for Unicode ranges.

Returns:

An array of integer values, as defined in ISO/IEC 10646-1:1993(E) normative Annex A that this font supports, or null.

---

isCharAvailable(Font, char)

```
public static boolean isCharAvailable(java.awt.Font font, char c)
```

Returns whether a specific character is available within the specified font, and can be used as defined in ISO/IEC 10646-1:1993(E) specification by the rendering system, e.g. if rendering of bi-directional text, using `BI-DIRECTIONAL_FORMAT_MARKS` is supported

Parameters:

`font` - The font to query for its support for the specified character.

`c` - The character whose presence should be tested.

Returns:

true is the character is available within the font and can be rendered as defined in the ISO/IEC 10646-1:1993(E) specification, false otherwise.

org.havi.ui
HGraphicButton

Syntax

```
public class HGraphicButton extends HIcon implements HActionable
```

```
java.lang.Object
  |
  +--java.awt.Component
        |
        +--HComponent
              |
              +--HVisible
                    |
                    +--HStaticIcon
                          |
                          +--HIcon
                                |
                                +--org.havi.ui.HGraphicButton
```

Direct Known Subclasses:

HToggleButton

All Implemented Interfaces:

HActionable, HActionInputPreferred, HMatteLayer, HNavigable, HNavigationInputPreferred, HNoInputPreferred, HState, java.awt.image.ImageObserver, java.awt.MenuContainer, java.io.Serializable, TestOpacity

Description

The HGraphicButton is a user interface component representing a push-button with static read-only graphical content. This component can be navigated to, i.e. it can have the input focus, and it can also be actioned as defined by the HActionable interface. By default it uses the HGraphicLook class to render itself. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
x	x-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
y	y-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
width	width of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
height	height of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds

image	The image to be used as the content for every state of this component.	null	setGraphicContent(Image, int)	getGraphicContent(int)
imageNormal	The image to be used as the content for the NORMAL_STATE state of this component.	null	setGraphicContent(Image, int)	getGraphicContent(int)
imageFocus	The image to be used as the content for the focused states of this component.	null	setGraphicContent(Image, int)	getGraphicContent(int)
imageAction	The image to be used as the content for the actioned states of this component.	null	setGraphicContent(Image, int)	getGraphicContent(int)

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
Associated matte (HMatte).	none (i.e. getMatte() returns null)	setMatte(HMatte)	getMatte()
The text layout manager responsible for text formatting.	An HDefaultTextLayoutManager object.	setTextLayoutManager(HTextLayoutManager)	getTextLayoutManager()
The background painting mode	NO_BACKGROUND_FILL	setBackgroundMode(int)	getBackgroundMode()
The default preferred size	not set (i.e. null) unless specified by width and height parameters	setDefaultSize(Dimension)	getDefaultSize()
The horizontal content alignment	HALIGN_CENTER	setHorizontalAlignment(int)	getHorizontalAlignment()
The vertical content alignment	VALIGN_CENTER	setVerticalAlignment(int)	getVerticalAlignment()
The content scaling mode	RESIZE_NONE	setResizeMode(int)	getResizeMode()
The default "look" for this class.	A platform specific HGraphicLook	setDefaultLook(HGraphicLook)	getDefaultLook()
The "look" for this object.	The HGraphicLook returned from HGraphicButton.getDefaultLook when this object was created.	setLook(HLook)	getLook()
The gain focus sound.	null	setGainFocusSound(HSound)	getGainFocusSound()

The lose focus sound.	null	setLoseFocusSound(HSound)	getLoseFocusSound()
The action sound.	null	setActionSound(HSound)	getActionSound()

See Also:
HStaticIcon, HIcon, HNavigable, HActionable

Constructors

HGraphicButton()

```
public HGraphicButton()
```

Creates an HGraphicButton object. See the class description for details of constructor parameters and default values.

HGraphicButton(Image)

```
public HGraphicButton(java.awt.Image image)
```

Creates an HGraphicButton object. See the class description for details of constructor parameters and default values.

HGraphicButton(Image, Image, Image)

```
public HGraphicButton(java.awt.Image imageNormal, java.awt.Image imageFocused,
            java.awt.Image imageActioned)
```

Creates an HGraphicButton object. See the class description for details of constructor parameters and default values.

HGraphicButton(Image, Image, Image, int, int, int, int)

```
public HGraphicButton(java.awt.Image imageNormal, java.awt.Image imageFocused,
            java.awt.Image imageActioned, int x, int y, int width, int height)
```

Creates an HGraphicButton object. See the class description for details of constructor parameters and default values.

HGraphicButton(Image, int, int, int, int)

```
public HGraphicButton(java.awt.Image image, int x, int y, int width, int height)
```

Creates an HGraphicButton object. See the class description for details of constructor parameters and default values.

Methods

addHActionListener(HActionListener)

```
public void addHActionListener(HActionListener l)
```

Adds the specified HActionListener to receive HActionEvent events sent from this HGraphicButton. If the listener has already been added further calls will add further references to the listener, which will then receive multiple copies of a single event.

Specified By:
addHActionListener(HActionListener) in interface HActionable

Parameters:
l - the HActionListener.

getActionCommand()

```
public java.lang.String getActionCommand()
```

Gets the command name for the HActionEvent event fired by this HGraphicButton.

Specified By:
getActionCommand() in interface HActionable

Returns:
A String representing the command name of the HActionEvent fired by this HGraphicButton.

See Also:
getActionCommand()

getActionSound()

```
public HSound getActionSound()
```

Associate a sound to be played when the interaction state of the HGraphicButton makes the following transitions:

- NORMAL_STATE to ACTIONED_STATE
- FOCUSED_STATE to ACTIONED_FOCUSED_STATE

Specified By:
getActionSound() in interface HActionable

Returns:
The sound played when the component is actioned.

getDefaultLook()

```
public static HGraphicLook getDefaultLook()
```

Returns the currently set default HLook for HGraphicButton components.

Returns:
The HLook that is used by default when creating a new HGraphicButton.

getGainFocusSound()

```
public HSound getGainFocusSound()
```

Get the sound associated with the gain focus event.

Specified By:
getGainFocusSound() in interface HNavigable

Overrides:
getGainFocusSound() in class HIcon

Returns:
The sound played when the component gains focus. If no sound is associated with gaining focus, then null shall be returned.

---

getLoseFocusSound()

```
public HSound getLoseFocusSound()
```

Get the sound associated with the lost focus event.

Specified By:
getLoseFocusSound() in interface HNavigable

Overrides:
getLoseFocusSound() in class HIcon

Returns:
The sound played when the component loses focus. If no sound is associated with losing focus, then null shall be returned.

---

getMove(int)

```
public HNavigable getMove(int keyCode)
```

Provides the HNavigable object that is navigated to when a particular key is pressed.

Specified By:
getMove(int) in interface HNavigable

Overrides:
getMove(int) in class HIcon

Parameters:
keyCode - The key code of the pressed key.

Returns:
Returns the HNavigable object, or if no HNavigable is associated with the keyCode then returns null.

---

getNavigationKeys()

```
public int[] getNavigationKeys()
```

Retrieve the set of key codes which this component maps to navigation targets.

Specified By:
getNavigationKeys() in interface HNavigationInputPreferred

Overrides:
getNavigationKeys() in class HIcon

Returns:
an array of key codes, or null if no navigation targets are set on this component.

---

isSelected()

```
public boolean isSelected()
```

Indicates if this component has focus.

Specified By:

isSelected() in interface HNavigable

Overrides:
isSelected() in class HIcon

Returns:
true if the component has focus, otherwise returns false.

---

processHActionEvent(HActionEvent)

```
public void processHActionEvent(HActionEvent evt)
```

Process an HActionEvent sent to this HGraphicButton .

Specified By:
processHActionEvent(HActionEvent) in interface HActionInputPreferred

Parameters:
evt - the HActionEvent to process.

---

processHFocusEvent(HFocusEvent)

```
public void processHFocusEvent(HFocusEvent evt)
```

Process an HFocusEvent sent to this HGraphicButton .

Specified By:
processHFocusEvent(HFocusEvent) in interface HNavigationInputPreferred

Overrides:
processHFocusEvent(HFocusEvent) in class HIcon

Parameters:
evt - the HFocusEvent to process.

---

removeHActionListener(HActionListener)

```
public void removeHActionListener(HActionListener l)
```

Removes the specified HActionListener so that it no longer receives HActionEvent events from this HGraphicButton . If the specified listener is not registered, the method has no effect. If multiple references to a single listener have been registered it should be noted that this method will only remove one reference per call.

Specified By:
removeHActionListener(HActionListener) in interface HActionable

Parameters:
l - the HActionListener.

---

setActionCommand(String)

```
public void setActionCommand(java.lang.String command)
```

Sets the command name for the HActionEvent event fired by this HGraphicButton .

Specified By:
setActionCommand(String) in interface HActionable

Parameters:
command - a String used to set the action command.

See Also:
getActionCommand()

---

setActionSound(HSound)

```
public void setActionSound(HSound sound)
```

Associate a sound to be played when the interaction state of the HGraphicButton makes the following transitions:

- NORMAL_STATE to ACTIONED_STATE
- FOCUSED_STATE to ACTIONED_FOCUSED_STATE

Specified By:
setActionSound(HSound) in interface HActionable

Parameters:
sound - the sound to be played, when the component is actioned. If sound content is already set, the original content is replaced. To remove the sound specify a null HSound .

---

setDefaultLook(HGraphicLook)

```
public static void setDefaultLook(HGraphicLook hlook)
```

Sets the default HLook for further HGraphicButton components.

Parameters:
hlook - The HLook that will be used by default when creating a new HGraphicButton component. Note that this parameter may be null, in which case newly created components shall not draw themselves until a non-null look is set using the setLook(HLook) method.

---

setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)

```
public void setFocusTraversal(HNavigable up, HNavigable down, HNavigable left,
            HNavigable right)
```

Set the focus control for an HNavigable component. Note setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) is a convenience function for application programmers where a standard up, down, left and right focus traversal between components is required.

Note setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) is equivalent to multiple calls to setMove(int, HNavigable) , where the key codes VK_UP, VK_DOWN, VK_LEFT, VK_RIGHT are used.

Note that this API does not prevent the creation of "isolated" HNavigable components --- authors should endeavor to avoid confusing the user.

Specified By:
setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) in interface HNavigable

Overrides:
setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) in class HIcon

Parameters:
up - The HNavigable component to move to, when the user generates a VK_UP KeyEvent. If there is no HNavigable component to move "up" to, then null should be specified.

down - The HNavigable component to move to, when the user generates a VK_DOWN KeyEvent. If there is no HNavigable component to move "down" to, then null should be specified.

left - The HNavigable component to move to, when the user generates a VK_LEFT KeyEvent. If there is no HNavigable component to move "left" to, then null should be specified.

right - The HNavigable component to move to, when the user generates a VK_RIGHT KeyEvent. If there is no HNavigable component to move "right" to, then null should be specified.

---

setGainFocusSound(HSound)

```
public void setGainFocusSound(HSound sound)
```

Associate a sound with gaining focus, i.e. when the HNavigable receives a java.awt.event.FocusEvent event of type FOCUS_GAINED. This sound will start to be played when an object implementing this interface gains focus. It is not guaranteed to be played to completion. If the object implementing this interface loses focus before the audio completes playing, the audio will be truncated. Applications wishing to ensure the audio is always played to completion must implement special logic to slow down the focus transitions.

By default, an HNavigable object does not have any gain focus sound associated with it.

Note that the ordering of playing sounds is dependent on the order of the focus lost, gained events.

Specified By:
setGainFocusSound(HSound) in interface HNavigable

Overrides:
setGainFocusSound(HSound) in class HIcon

Parameters:
sound - the sound to be played, when the component gains focus. If sound content is already set, the original content is replaced. To remove the sound specify a null HSound .

---

setLoseFocusSound(HSound)

```
public void setLoseFocusSound(HSound sound)
```

Associate a sound with losing focus, i.e. when the HNavigable receives a java.awt.event.FocusEvent event of type FOCUS_LOST. This sound will start to be played when an object implementing this interface loses focus. It is not guaranteed to be played to completion. It is implementation dependent whether and when this sound will be truncated by any gain focus sound played by the next object to gain focus.

By default, an HNavigable object does not have any lose focus sound associated with it.

Note that the ordering of playing sounds is dependent on the order of the focus lost, gained events.

Specified By:
setLoseFocusSound(HSound) in interface HNavigable

Overrides:
setLoseFocusSound(HSound) in class HIcon

Parameters:
sound - the sound to be played, when the component loses focus. If sound content is already set, the original content is replaced. To remove the sound specify a null HSound .

---

setMove(int, HNavigable)

```
public void setMove(int keyCode, HNavigable target)
```

Defines the navigation path from the current HNavigable to another HNavigable when a particular key is pressed.

Note that setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) is equivalent to multiple calls to setMove(int, HNavigable) , where the key codes VK_UP, VK_DOWN, VK_LEFT, VK_RIGHT are used.

Specified By:
`setMove(int, HNavigable)` in interface `HNavigable`

Overrides:
`setMove(int, HNavigable)` in class `HIcon`

Parameters:
`keyCode` - The key code of the pressed key. Any numerical keycode is allowed, but the platform may not be able to generate all keycodes. Application authors should only use keys for which `HRcCapabilities.isSupported()` or `HKeyCapabilities.isSupported()` returns true.

`target` - The target `HNavigable` object that should be navigated to. If a target is to be removed from a particular navigation path, then `null` should be specified.

org.havi.ui
HGraphicLook

Syntax

```
public class HGraphicLook implements HLook

java.lang.Object
  |
  +--org.havi.ui.HGraphicLook
```

All Implemented Interfaces:

java.lang.Cloneable, HLook

Description

The HGraphicLook class is used by any HVisible component to display static graphical content. This look will be provided by the platform and the exact way in which it is rendered will be platform dependant.

The HGraphicLook class draws the content set on an HVisible. It uses the getGraphicContent(int) method with the current state of the HVisible to determine the content to render.

Implementations of HGraphicLook should use the appropriate methods on HVisible to determine which scaling and alignment modes to use when rendering content. See the class description for HLook for more details. HGraphicLook may support scalable graphical content. As a minimum, all implementations must support the RESIZE_NONE scaling mode, and all alignment modes.

Note that the results of applying the VALIGN_JUSTIFY and HALIGN_JUSTIFY alignment modes for graphical content are defined to identical to VALIGN_CENTER and HALIGN_CENTER modes respectively, as justification is meaningless in this context.

This is the default look that is used by HStaticIcon and its subclasses. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

See Also:

HStaticIcon, HVisible, HLook

Constructors

HGraphicLook()

```
public HGraphicLook()
```

Creates a `HGraphicLook` object. See the class description for details of constructor parameters and default values.

Methods

getInsets(HVisible)

```
public java.awt.Insets getInsets(HVisible visible)
```

Determines the insets of this `HLook` , which indicate the size of the border. This area is reserved for the `HLook` to use for drawing borders around the associated `HVisible` .

Specified By:
`getInsets(HVisible)` in interface `HLook`

Parameters:
`hvisible` - `HVisible` to which this `HLook` is attached.

Returns:
the insets of this `HLook` .

getMaximumSize(HVisible)

```
public java.awt.Dimension getMaximumSize(HVisible hvisible)
```

Gets the maximum size of the `HVisible` component when drawn with this `HLook` .

This size may be determined in several ways depending on the information available to the look. These steps are performed in order and the first available result is returned. For the purposes of this algorithm `HLook` classes that do not use content (e.g. `HRangeLook`) are treated as if no content was present.

The extra space required for border decoration can be determined from the `getInsets(HVisible)` method.

1. If the `HLook` supports the scaling of its content (e.g. an `HGraphicLook`) then the return value is the current size of the `HVisible` (as returned by `HVisible#getSize`).
2. If the `HLook` does not support scaling of content or no scaling is requested, and content is set then the return value is the size of the largest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
3. If there is no content set then a maximum size of `[ Short.MAX_VALUE, Short.MAX_VALUE]` is returned as a Dimension.

Specified By:
`getMaximumSize(HVisible)` in interface `HLook`

Parameters:
`hvisible` - `HVisible` to which this `HLook` is attached.

Returns:
A dimension object indicating this `HLook` maximum size.

See Also:
`getMaximumSize()`

getMinimumSize(HVisible)

```
public java.awt.Dimension getMinimumSize(HVisible hvisible)
```

Gets the minimum size of the HVisible component when drawn with this HLook .

This size may be determined in several ways depending on the information available to the look. These steps are performed in order and the first available result is returned. For the purposes of this algorithm HLook classes that do not use content (e.g. HRangeLook) are treated as if no content was present.

The extra space required for border decoration can be determined from the getInsets(HVisible) method.

1. If the HLook supports the scaling of its content (e.g. an HGraphicLook) and content is set then the return value is the size of the smallest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
2. If the HLook does not support scaling of content or no scaling is requested, *and* content is set then the return value is the size of the largest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
3. If no content is available but a default preferred size has been set using setDefaultSize(Dimension) has been called to set then the return value is this value (as obtained with getDefaultSize()) plus any additional dimensions that the HLook requires for border decoration etc.
4. If there is no content or default size set then the return value is an implementation-specific minimum size plus any additional dimensions that the HLook requires for border decoration etc.

Specified By:
getMinimumSize(HVisible) in interface HLook

Parameters:
hvisible - HVisible to which this HLook is attached.

Returns:
A dimension object indicating this HLook minimum size.

See Also:
getMinimumSize()

getPreferredSize(HVisible)

```
public java.awt.Dimension getPreferredSize(HVisible hvisible)
```

Gets the preferred size of the HVisible component when drawn with this HLook .

This size may be determined in several ways depending on the information available to the look. These steps are performed in order and the first available result is returned. For the purposes of this algorithm HLook classes that do not use content (e.g. HRangeLook) are treated as if no content was present.

The extra space required for border decoration can be determined from the getInsets(HVisible) method.

1. If a default preferred size has been set for this HVisible (using setDefaultSize(Dimension)) then the return value is this size (obtained with getDefaultSize()) plus any additional dimensions that the HLook requires for border decoration etc.
2. If this HLook does not support scaling of content or no scaling is requested, and content is present then the return value is the size of the largest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
3. If this HLook supports the scaling of its content (e.g. an HGraphicLook) and content is set then the

return value is the current size of the HVisible as returned by getSize).

4. If there is no content and no default size set then the return value is the current size of the HVisible as returned by getSize).

Specified By:
getPreferredSize(HVisible) in interface HLook

Parameters:
hvisible - HVisible to which this HLook is attached.

Returns:
A dimension object indicating the preferred size of the HVisible when drawn with this HLook .

See Also:
getPreferredSize(), setDefaultSize(Dimension)

---

isOpaque(HVisible)

```
public boolean isOpaque(HVisible visible)
```

Returns true if the entire painted area of the HVisible when using this look is fully opaque, i.e. the showLook(Graphics, HVisible, int) method guarantees that all pixels are painted in an opaque Color.

The default value is implementation specific and depends on the background painting mode of the given HVisible . The consequences of an invalid overridden value are implementation specific.

Specified By:
isOpaque(HVisible) in interface HLook

Parameters:
visible - the visible to test

Returns:
true if all the pixels with the java.awt.Component#getBounds method of an HVisible using this look are fully opaque, i.e. the showLook(Graphics, HVisible, int) method guarantees that all pixels are painted in an opaque Color, otherwise false.

---

showLook(Graphics, HVisible, int)

```
public void showLook(java.awt.Graphics g, HVisible visible, int state)
```

The showLook(Graphics, HVisible, int) method is responsible for repainting the entire HVisible component, (including any content set on the component, and the component background), subject to the clipRect of the Graphics object passed to it.

The showLook(Graphics, HVisible, int) method should not modify the clipRect of the Graphics object that is passed to it.

For looks which draw content (e.g. HTextLook , HGraphicLook and HAnimateLook), if no content is associated with the component, the showLook(Graphics, HVisible, int) method paints the component with its current background Color according to the setBackgroundMode(int) method of HVisible and draws any (implementation-specific) borders. Note that by default the background mode is set so as to **not** paint a background. Furthermore on platforms which support transparent colors the background Color may be partially or completely transparent.

Any resources **explicitly** associated with an HLook should be loaded by the HLook during its creation, etc., or via its setXXX() methods. Note that the "standard" looks don't load content by default.

This method is called from the `paint(Graphics)` method of `HVisible` and must never be called from elsewhere. Components wishing to redraw themselves should call their repaint method in the usual way.

Specified By:
`showLook(Graphics, HVisible, int)` in interface `HLook`

Parameters:
`g` - the graphics context.

`visible` - the visible.

`state` - the state parameter indicates the state of the visible, allowing the look to render the appropriate content for that state. Note that some components (e.g. HStaticRange, HRange, HRangeValue) do not use state-based content).

---

widgetChanged(HVisible, HChangeData[])

```
public void widgetChanged(HVisible visible, HChangeData[] changes)
```

Called by the `HVisible` whenever its content, state, or any other data changes. See the class description of `HVisible` for more information about the `changes` parameter.

The implementation of this method should work out which graphical areas of the `HVisible` have changed and make any relevant calls to trigger the repainting of those areas.

A minimum implementation of this method could simply call

```
visible.repaint()
```

Specified By:
`widgetChanged(HVisible, HChangeData[])` in interface `HLook`

Parameters:
`visible` - the `HVisible` which has changed

`changes` - an array containing hint data and associated hint objects. If this argument is `null` a full repaint will be triggered.

org.havi.ui
HGraphicsConfigTemplate

Syntax
```
public class HGraphicsConfigTemplate extends HScreenConfigTemplate

java.lang.Object
  |
  +--HScreenConfigTemplate
        |
        +--org.havi.ui.HGraphicsConfigTemplate
```

Description
The `HGraphicsConfigTemplate` class is used to obtain a valid `HGraphicsConfiguration`. An application instantiates one of these objects and then sets all non-default attributes as desired. The `getBestConfiguration(HGraphicsConfigTemplate)` method found in the `HGraphicsDevice` class is then called with this `HGraphicsConfigTemplate`. A valid `HGraphicsConfiguration` is returned that meets or exceeds what was requested in the `HGraphicsConfigTemplate`.

This class may be subclassed to support additional properties of graphics configurations which may be requested by applications. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

See Also:
`HScreenConfigTemplate`, `HBackgroundConfigTemplate`, `HVideoConfigTemplate`

Fields

IMAGE_SCALING_SUPPORT
```
public static final int IMAGE_SCALING_SUPPORT
```
A value for use in the preference field of the `setPreference(int, int)` and `getPreferencePriority(int)` methods in the `HGraphicsConfigTemplate` that indicates that the graphics configuration should or shall support rapid (hardware) image scaling.

MATTE_SUPPORT
```
public static final int MATTE_SUPPORT
```

A value for use in the preference field of the `setPreference(int, int)` and `getPreferencePriority(int)` methods in the `HGraphicsConfigTemplate` that indicates that the graphics configuration should or shall support the HAVi mattes feature.

VIDEO_MIXING

```
public static final int VIDEO_MIXING
```

A value for use in the preference field of the `setPreference(int, int)` and `getPreferencePriority(int)` methods in the `HGraphicsConfigTemplate` that indicates that the graphics configuration should or shall support transparency in the graphics system such that the output of a video decoder is visible. This includes the following configurations :-

- Configurations where there is a well defined transformation between video pixels and graphics pixels (e.g. pixels are the same size).
- Configurations where an application displays graphics over video but where the video is considered as a background and hence no transformation between the two sets of pixels is required.

Applications may specify a particular video configuration with which mixing must be supported. In this case, the video configuration is specified as an `HVideoConfiguration` object. If no specific video configuration is required then it is not required to specify such a configuration and null can be used.

This preference is used by the platform as a constraint in selecting configurations. Templates generated by the platform and then returned to applications (e.g. from a `getConfigTemplate` method) shall not have this preference filled in by the platform.

Constructors

HGraphicsConfigTemplate()

```
public HGraphicsConfigTemplate()
```

Creates an `HGraphicsConfigTemplate` object. See the class description for details of constructor parameters and default values.

Methods

---

getPreferenceObject(int)

```
public java.lang.Object getPreferenceObject(int preference)
```

Return the preference object for the specified preference.

Instances of `HGraphicsConfigTemplate` which have not had this preference set shall return null for this object. Note that instances constructed by the platform and returned to applications are required to have all preferences (except where explicitly identified) set by the platform before it is returned.

Overrides:

`getPreferenceObject(int)` in class `HScreenConfigTemplate`

Parameters:

`preference` - the preference to be indicated. Valid values for an `HGraphicsConfigTemplate` are: `VIDEO_GRAPHICS_PIXEL_ALIGNED`, `PIXEL_ASPECT_RATIO`, `PIXEL_RESOLUTION`, `SCREEN_RECTANGLE`, and `VIDEO_MIXING`.

Subclasses may add further valid values. A IllegalArgumentException shall be thrown if the preference is not a valid value for this instance of `HGraphicsConfigTemplate`, or if `preference` does not have an associated value object.

Returns:

the preference object for the specified preference.

---

getPreferencePriority(int)

```
public int getPreferencePriority(int preference)
```

Return the priority for the specified preference.

By default the preferences in a template returned from the system will have an `DONT_CARE` priority unless specified otherwise. Any configuration always satisfies these attributes.

Overrides:

`getPreferencePriority(int)` in class `HScreenConfigTemplate`

Parameters:

`preference` - the preference to be indicated. Valid values for an `HGraphicsConfigTemplate` are: `ZERO_BACKGROUND_IMPACT`, `ZERO_GRAPHICS_IMPACT`, `ZERO_VIDEO_IMPACT`, `INTERLACED_DISPLAY`, `FLICKER_FILTERING`, `VIDEO_GRAPHICS_PIXEL_ALIGNED`. `PIXEL_ASPECT_RATIO`, `PIXEL_RESOLUTION`, `SCREEN_RECTANGLE`, `VIDEO_MIXING`, `MATTE_SUPPORT` and `IMAGE_SCALING_SUPPORT`.

Subclasses may add further valid values. An IllegalArgumentException shall be thrown if the preference is not a valid value for this instance of `HGraphicsConfigTemplate`

Returns:

the priority for the specified preference.

---

isConfigSupported(HGraphicsConfiguration)

```
public boolean isConfigSupported(HGraphicsConfiguration hgc)
```

Returns a boolean indicating whether or not the specified `HGraphicsConfiguration` can be used to create a graphics plane that supports the features set in this template.

Parameters:

`hgc` - - the `HGraphicsConfiguration` object to test against this template.

Returns:

true if this `HGraphicsConfiguration` object can be used to create a graphics plane that supports the features set in this template, false otherwise.

---

setPreference(int, int)

```
public void setPreference(int preference, int priority)
```

Set the indicated preference to have the specified priority. If the preference has been previously set, then the previous priority for the preference shall be overwritten.

Attributes that are not filled in in a template (through `setPreference(int, int)`), shall have the priority `DONT_CARE`. Any configuration always satisfies these attributes.

Overrides:

setPreference(int, int) in class HScreenConfigTemplate

Parameters:

preference - the preference to be indicated. Valid values for an HGraphicsConfigTemplate are: ZERO_BACKGROUND_IMPACT, ZERO_GRAPHICS_IMPACT, ZERO_VIDEO_IMPACT, INTERLACED_DISPLAY, FLICKER_FILTERING, MATTE_SUPPORT and IMAGE_SCALING_SUPPORT.

Subclasses may add further valid values. An IllegalArgumentException shall be thrown if the preference is not a valid value for this instance of HGraphicsConfigTemplate

priority - the priority of the preference. Valid values include: REQUIRED, PREFERRED, DONT_CARE, PREFERRED_NOT and REQUIRED_NOT.

If priority is not a valid priority as defined here a java.lang.IllegalArgumentException will be thrown.

---

setPreference(int, Object, int)

```
public void setPreference(int preference, java.lang.Object object, int priority)
```

Set the indicated preference (and associated value object) to have the specified priority. If the preference has been previously set, then the previous object and priority shall be overwritten.

Attributes that are not filled in in a template (through setPreference(int, int)), shall have the priority DONT_CARE. Any configuration always satisfies these attributes.

An application which wishes to remove a preference from an existing template (e.g. one generated by the platform) may call this method with null for the object parameter.

Overrides:

setPreference(int, Object, int) in class HScreenConfigTemplate

Parameters:

preference - the preference to be indicated. Valid values for an HScreenConfigTemplate are: PIXEL_ASPECT_RATIO, PIXEL_RESOLUTION, SCREEN_RECTANGLE, VIDEO_GRAPHICS_PIXEL_ALIGNED and VIDEO_MIXING.

Subclasses may add further valid values. An IllegalArgumentException shall be thrown if the preference is not a valid value for this instance of HScreenConfigTemplate

object - the Object associated with the given preference, or null.

priority - the priority of the preference. Valid values include: REQUIRED, PREFERRED, DONT_CARE, PREFERRED_NOT and REQUIRED_NOT.

If priority is not a valid priority as defined here a java.lang.IllegalArgumentException will be thrown.

org.havi.ui
HGraphicsConfiguration

Syntax
```
public class HGraphicsConfiguration extends HScreenConfiguration

java.lang.Object
  |
  +--HScreenConfiguration
        |
        +--org.havi.ui.HGraphicsConfiguration
```

Direct Known Subclasses:
HEmulatedGraphicsConfiguration

Description
The HGraphicsConfiguration class describes the characteristics (settings) of an HGraphicsDevice. There can be many HGraphicsConfiguration objects associated with a single HGraphicsDevice. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

See Also:
HGraphicsDevice

Constructors

HGraphicsConfiguration()

```
protected HGraphicsConfiguration()
```

It is not intended that applications should directly construct HGraphicsConfiguration objects.

Creates an HGraphicsConfiguration object. See the class description for details of constructor parameters and default values.

Methods

---

dispose(Color)

```
public void dispose(java.awt.Color c)
```

This method is used by an application when a color returned from those versions of the method getPunchThroughToBackgroundColor with a Color as a parameter is no longer required. It is the responsibility of applications to ensure that no pixels which they had drawn using this color are still displayed on the screen before calling this method. The result of using such a Color after calling this method is implementation dependent. Using a color obtained from another source apart from the specified methods will result in this method having no effect.

Parameters:

`c` - the Color which is no longer required.

---

getAllFonts()

```
public java.awt.Font[] getAllFonts()
```

List the fonts that are always available on the device, but does not list fonts that may be (temporarily) available for download from other sources.

Returns:

an array of java.awt.Font objects which are always available on the device.

---

getCompatibleImage(Image, HImageHints)

```
public java.awt.Image getCompatibleImage(java.awt.Image input, HImageHints ih)
```

Generate a java.awt.Image which *may* be a modified copy of the image passed as `input`. Such a copy is modified as necessary such that it is compatible with the current `HGraphicsConfiguration` . For example this may involve dithering the image to a restricted color palette. In the case where no modification is required a reference to the original image `input` will be returned instead of a separate new java.awt.Image.

Note: Unmodified Images, or Images modified for other `HGraphicsConfiguration` should still be able to be rendered within this `HGraphicsConfiguration` , but may not be as efficient (rapid) in terms of rendering, and may not be presented optimally. For example, an 8 bit per RGB pixel image loaded onto a configuration with a 4 bit per RGB pixel framebuffer may have its pixel values truncated, if this Image is then displayed on an alternate configuration with 16 bits per RGB pixel then it will obviously not be displayed optimally.

The `HImageHints` provide a mechanism to indicate how any conversion to a constrained graphics environment might best be performed, by describing the general image contents.

It is implementation (and algorithmically) dependent whether this method operates on partial, or complete Image pixel data.

Parameters:

`input` - the java.awt.Image to be modified

`ih` - an `HImageHints` object that indicates the expected type of the input Image, so that its presentation can be optimally adjusted.

Returns:

a java.awt.Image which has been determined to be optimally suited for presentation on the `HGraphicsDevice` associated with this `HGraphicsConfiguration` . Note that on some `HGraphicsConfiguration` a reference to the original Image may be returned, this is especially true for systems with high-end graphics capabilities.

getComponentHScreenRectangle(Component)

```
public HScreenRectangle getComponentHScreenRectangle(java.awt.Component component)
```

Returns the on-screen location of a given visible java.awt.Component as an HScreenRectangle for this HGraphicsDevice .

Parameters:

component - the java.awt.Component whose on-screen area is to be determined.

Returns:

the on-screen location of component as an HScreenRectangle for this HGraphicsDevice , or null if the component is not currently added to the HScene (or one of its "child" containers).

See Also:

HScreenRectangle

getConfigTemplate()

```
public HGraphicsConfigTemplate getConfigTemplate()
```

Returns an HGraphicsConfigTemplate object that describes and uniquely identifies this HGraphicsConfiguration .

Hence, the following sequence should return the original HGraphicsConfiguration .

```
HGraphicsDevice.getBestMatch(HGraphicsConfiguration.getConfigTemplate())
```

Features that are implemented in the HGraphicsConfiguration will return REQUIRED priority. Features that are not implemented in the HGraphicsConfiguration will return REQUIRED_NOT priority.

Returns:

an HGraphicsConfigTemplate object which both describes and uniquely identifies this HGraphicsConfiguration .

getDevice()

```
public HGraphicsDevice getDevice()
```

Returns the HGraphicsDevice associated with this HGraphicsConfiguration .

Returns:

the HGraphicsDevice object that is associated with this HGraphicsConfiguration ,

getPixelCoordinatesHScreenRectangle(HScreenRectangle, Container)

```
public java.awt.Rectangle getPixelCoordinatesHScreenRectangle(HScreenRectangle sr,
            java.awt.Container cont)
```

Returns a java.awt.Rectangle which contains the graphics (AWT) pixel area for an HScreenRectangle relative to the supplied java.awt.Container.

Parameters:

sr - the screen location expressed as an HScreenRectangle .

cont - the java.awt.Container in whose coordinate system the screen location should be expressed.

Returns:

a java.awt.Rectangle which contains the graphics (AWT) pixel area for an HScreenRectangle relative to the supplied java.awt.Container. The returned x, y, width, height values in the java.awt.Rectangle should be such that a

- r = getPixelCoordinatesHScreenRectangle(sr, cont);
- cont.add(component);
- component.setBounds(r.x, r.y, r.width, r.height);
  should ensure that the dimensions of the component on-screen should correspond to the given `HScreenRectangle` , subject to clipping by its parent container, cont.

  Note that the `HScreenRectangle` (`HScreenPoint`) coordinates are in floats - conversion to pixel coordinate systems necessarily implies a potential loss of precision - however, such conversion should be to the "nearest" integer pixel coordinate.

---

getPunchThroughToBackgroundColor(Color, int)

```
public java.awt.Color getPunchThroughToBackgroundColor(java.awt.Color color,
            int percentage)
```

This method returns a Color that may be used in standard graphics drawing operations, which has the effect of "punching though" all Components that are behind the Component in which the drawing operation is performed. This includes any visual Components acquired from JMF players. What is behind this `HGraphicsConfiguration` is revealed through the drawn "hole" blended with the graphics color specified as the first parameter to this method. Platforms with restricted color spaces may make approximations as required to obtain the best match possible.

Parameters:

`color` - the graphics color to blend

`percentage` - the blending value for this color with respect to what is outside this `HGraphicsConfiguration` . The specified value will be clamped to the range 0 to 100.

Returns:

a Color with the desired effect or null for configurations which do not or are currently unable to support this rendering mode.

---

getPunchThroughToBackgroundColor(Color, int, HVideoDevice)

```
public java.awt.Color getPunchThroughToBackgroundColor(java.awt.Color color,
            int percentage, HVideoDevice v)
```

This method returns a Color that may be used in standard graphics drawing operations, which has the effect of modifying the existing color of a pixel to make it partially (or wholly) transparent to the background. The existing pixel percentage transparency to the background at that point shall be equivalent to the (closest) percentage value as specified in the getPunchThroughToBackgroundColor percentage parameter.

The existing RGB values of the pixel are unchanged as far as possible, within the limits of the platform. Platforms with restricted color spaces may make approximations as required to obtain the best possible match.

The precise contents of the background are as defined by the platform including any `HBackgroundDevice` , etc.

Parameters:

`color` - the graphics color to blend

`percentage` - the alpha value for this color with respect to what is outside this `HGraphicsConfiguration` . The specified value will be clamped to the range 0 to 100.

Returns:

a Color with the desired effect or null for configurations which do not or are currently unable to support this rendering mode.

---

getPunchThroughToBackgroundColor(int)

```
public java.awt.Color getPunchThroughToBackgroundColor(int percentage)
```

This method returns a Color that may be used in standard graphics drawing operations, which has the effect of modifying the existing color of a pixel to make it partially (or wholly) transparent to the background. The existing pixel percentage transparency to the background at that point shall be equivalent to the (closest) percentage value as specified in the getPunchThroughToBackgroundColor percentage parameter. A value of 0% is fully transparent and 100% is fully opaque.

The existing RGB values of the pixel are unchanged as far as possible, within the limits of the platform. Platforms with restricted color spaces may make approximations as required to obtain the best possible match.

The precise contents of the background are as defined by the platform including any `HBackgroundDevice` , etc.

Parameters:

`percentage` - the new blending value for each pixel drawn with this color with respect to what is outside this `HGraphicsConfiguration` . The specified value will be clamped to the range 0 to 100.

Returns:

a Color with the desired effect or null for configurations which do not or are currently unable to support this rendering mode.

---

getPunchThroughToBackgroundColor(int, HVideoDevice)

```
public java.awt.Color getPunchThroughToBackgroundColor(int percentage, HVideoDevice hvd)
```

This method returns a Color that may be used in standard graphics drawing operations, which has the effect of "punching though" the `HGraphicsDevice` in which the drawing operation is performed. The specified `HVideoDevice` is revealed through the drawn "hole". The value specified replaces the blending value (with respect to this `HVideoDevice`) of each pixel drawn with this color. The existing RGB values of the pixel are unchanged as far as possible within the limits of the platform. Platforms with restricted color spaces may make approximations as required to obtain the best match possible.

Parameters:

`percentage` - the new alpha value for each pixel drawn with this color with respect to the the `HVideoDevice` specified. The specified value will be clamped to the range 0 to 100.

`hvd` - the `HVideoDevice` to reveal.

Returns:

a Color with the desired effect or null for configurations which do not or are currently unable to support this rendering mode.

org.havi.ui
HGraphicsDevice

Syntax
```
public class HGraphicsDevice extends HScreenDevice

java.lang.Object
  |
  +--HScreenDevice
        |
        +--org.havi.ui.HGraphicsDevice
```

Direct Known Subclasses:
HEmulatedGraphicsDevice

All Implemented Interfaces:
org.davic.resources.ResourceProxy, org.davic.resources.ResourceServer

Description
The HGraphicsDevice class describes the raster graphics devices that are available for a particular HScreen. Each HGraphicsDevice has one or more HGraphicsConfiguration objects associated with it. These objects specify the different configurations (settings) in which the HGraphicsDevice can be used. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

See Also:
HGraphicsConfiguration, HScreenDevice, HScreen

Constructors

HGraphicsDevice()
```
protected HGraphicsDevice()
```
It is not intended that applications should directly construct HGraphicsDevice objects.

Creates an HGraphicsDevice object. See the class description for details of constructor parameters and default values.

Methods

---

getBestConfiguration(HGraphicsConfigTemplate)

```
public HGraphicsConfiguration getBestConfiguration(HGraphicsConfigTemplate hgct)
```

The getBestConfiguration method attempts to return an HGraphicsConfiguration that matches the specified HGraphicsConfigTemplate. If this is not possible it will attempt to construct an HEmulatedGraphicsConfiguration where the emulated configuration best matches this HGraphicsConfigTemplate. If this is not possible, null is returned. Note that the algorithm used for this behavior, and the extent and behavior of HEmulatedGraphicsConfiguration are platform specific.

Equally best in this sense means that the configurations satisfy an equal number of preferences with priorities PREFERRED and PREFERRED_NOT and all preferences with priorities REQUIRED and REQUIRED_NOT.

Configurations are chosen according to the following algorithm, based on the priority as supplied to setPreference(int, int). Configurations must:

1. satisfy ALL the preferences whose priority was REQUIRED
2. satisfy NONE of the preferences whose priority was REQUIRED_NOT
3. satisfy as many as possible of the preferences whose priority was PREFERRED.
4. satisfy as few as possible of the preferences whose priority was PREFERRED_NOT.

Preferences whose priority was DONT_CARE are ignored.

This method returns null if no configuration exists that satisfies all REQUIRED and REQUIRED_NOT priorities.

Parameters:

hgct - an HGraphicsConfigTemplate object used to obtain a valid HGraphicsConfiguration. If this parameter is null the default configuration for the platform shall be returned.

Returns:

an HGraphicsConfiguration that passes the criteria defined in the specified HGraphicsConfigTemplate or null if no HGraphicsConfiguration or HEmulatedGraphicsConfiguration passes the criteria.

---

getBestConfiguration(HGraphicsConfigTemplate[])

```
public HGraphicsConfiguration getBestConfiguration(HGraphicsConfigTemplate[] hgcta)
```

The getBestConfiguration method attempts to return an HGraphicsConfiguration that matches the specified HGraphicsConfigTemplate objects within the specified array. The HGraphicsTemplate objects should be considered for matching in priority order from 0 to (hgcta.length - 1). If this is not possible, it will attempt to construct an HEmulatedGraphicsConfiguration where the emulated configuration best matches the specified HGraphicsConfigTemplate objects. If this is not possible, null is returned.

Equally best in this sense means that the configurations satisfy an equal number of preferences with priorities PREFERRED and PREFERRED_NOT and all preferences with priorities REQUIRED and REQUIRED_NOT.

Configurations are chosen according to the following algorithm, based on the priority as supplied to setPreference(int, int). Configurations must:

1. satisfy ALL the preferences whose priority was REQUIRED
2. satisfy NONE of the preferences whose priority was REQUIRED_NOT

3. satisfy as many as possible of the preferences whose priority was PREFERRED .
4. satisfy as few as possible of the preferences whose priority was PREFERRED_NOT .

Preferences whose priority was DONT_CARE are ignored.

This method returns null if no configuration exists that satisfies all REQUIRED and REQUIRED_NOT priorities.

Parameters:
hgcta - the HGraphicsConfigTemplate array used to obtain a valid HGraphicsConfiguration .

Returns:
an HGraphicsConfiguration that passes the criteria defined in one of the HGraphicsConfigTemplate objects within the specified array. The class of the object returned can also be a class inheriting from HGraphicsConfiguration (e.g. HEmulatedGraphicsConfiguration).

---

getConfigurations()

```
public HGraphicsConfiguration[] getConfigurations()
```

Returns all of the HGraphicsConfiguration objects associated with this HGraphicsDevice .

Returns:
an array of HGraphicsConfiguration objects that are associated with this HGraphicsDevice . The class of the objects returned can also be a class inheriting from HGraphicsConfiguration (e.g. HEmulatedGraphicsConfiguration).

See Also:
HGraphicsConfiguration

---

getCurrentConfiguration()

```
public HGraphicsConfiguration getCurrentConfiguration()
```

Returns the current HGraphicsConfiguration for this HGraphicsDevice .

Returns:
the current HGraphicsConfiguration for this HGraphicsDevice . The class of the object returned can also be a class inheriting from HGraphicsConfiguration (e.g. HEmulatedGraphicsConfiguration).

See Also:
HGraphicsConfiguration

---

getDefaultConfiguration()

```
public HGraphicsConfiguration getDefaultConfiguration()
```

Returns the default HGraphicsConfiguration associated with this HGraphicsDevice . This (single) default configuration should correspond to some well-behaved settings for the device, such as, a minimal configuration, or factory preset settings.

Returns:
the default HGraphicsConfiguration of this HGraphicsDevice . The class of the object returned can also be a class inheriting from HGraphicsConfiguration (e.g. HEmulatedGraphicsConfiguration).

setGraphicsConfiguration(HGraphicsConfiguration)

```
public boolean setGraphicsConfiguration(HGraphicsConfiguration hgc)
```

Set the graphics configuration for the device.

An application is only allowed to call this method after it reserved the device explicitly and subject to the security policy of the platform. Subject to this, the following rules determine whether this method can succeed.

- If the application selects a configuration that is not conflicting with the configurations of all the other devices on the same `HScreen` then that configuration is selected.
- If an application tries to select a configuration that conflicts with a configuration of another device on this `HScreen` which this application cannot control due to platform security policy then this method shall fail with a `SecurityException`.
- If an application tries to select a configuration that conflicts with a configuration of another device on this `HScreen` which this application cannot control due to another application owning the right to control that device and the platform not giving that right to this application then this method shall fail with an `HPermissionDeniedException` .
- If an application tries to select a configuration that conflicts with a configuration of another device which this application can control due to either this or no application having reserved the device, then the configuration of the other device is automatically changed. There is no change in the resource ownership of the other device.

Applications can prevent or limit changes to configurations of other, not intended, devices by using constants `ZERO_GRAPHICS_IMPACT` and `ZERO_VIDEO_IMPACT` in their configuration templates. The first one will cause no changes to already running graphical applications. This means that no changes may be applied to the graphics device. Similarly the second constant will result in no changes to the video device.

Any modifications made to the configurations of other devices shall be reflected by the API for the devices concerned. The `getCurrentConfiguration()` method for those devices shall return the new configuration.

On successful change to the specified configuration, the device shall fire one or more `HScreenConfigurationEvent` for all listeners that are currently registered (if the criteria for receiving such an event has been satisfied). If the new configuration differs by more than one characteristic from the previous configuration then the device may fire one or more `HScreenConfigurationEvent` . This behavior is implementation specific.

If an attempt is made to set the identical configuration to that which is current, then no such event(s) shall be fired.

Parameters:

`hgc` - the `HGraphicsConfiguration` to which this device should be set.

Returns:

A boolean indicating whether the configuration could be applied successfully. If the configuration could not be applied successfully, the configuration after this method may not match the configuration of the device prior to this method being called --- applications should take steps to determine whether a partial change of settings has been made.

Throws:

`SecurityException` - if the application does not have sufficient rights to set the configuration for this device.

`{ @link` - org.havi.ui.HPermissionDeniedException HPermissionDeniedException} if the application does not currently have the right to set the configuration for this device.

`{ @link` - org.havi.ui.HConfigurationException HConfigurationException} if the specified configuration is not valid for this device, or if it conflicts with other devices whose configuration(s) cannot be changed by this application.

`HConfigurationException`, `HPermissionDeniedException`

org.havi.ui
HIcon

Syntax

```
public class HIcon extends HStaticIcon implements HNavigable
```

```
java.lang.Object
  |
  +--java.awt.Component
        |
        +--HComponent
              |
              +--HVisible
                    |
                    +--HStaticIcon
                          |
                          +--org.havi.ui.HIcon
```

Direct Known Subclasses:

HGraphicButton

All Implemented Interfaces:

HMatteLayer, HNavigable, HNavigationInputPreferred, HNoInputPreferred, HState, java.awt.image.ImageObserver, java.awt.MenuContainer, java.io.Serializable, TestOpacity

Description

The HIcon is a user interface component used to display static graphical content (as HStaticIcon) which also enables a user to navigate to it, i.e. it can have the input focus. By default it uses the HGraphicLook to render itself. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
x	x-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
y	y-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
width	width of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
height	height of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
image	The image to be used as the content for every state of this component.	null	setGraphicContent(Image, int)	getGraphicContent(int)

imageNormal	The image to be used as the content for the NORMAL_STATE state of this component.	null	setGraphicContent(Image, int)	getGraphicContent(int)
imageFocus	The image to be used as the content for the focused states of this component.	null	setGraphicContent(Image, int)	getGraphicContent(int)

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
Associated matte (HMatte).	none (i.e. getMatte() returns null)	setMatte(HMatte)	getMatte()
The text layout manager responsible for text formatting.	An HDefaultTextLayoutManager object.	setTextLayoutManager(HTextLayoutManager)	getTextLayoutManager()
The background painting mode	NO_BACKGROUND_FILL	setBackgroundMode(int)	getBackgroundMode()
The default preferred size	not set (i.e. null) unless specified by width and height parameters	setDefaultSize(Dimension)	getDefaultSize()
The horizontal content alignment	HALIGN_CENTER	setHorizontalAlignment(int)	getHorizontalAlignment()
The vertical content alignment	VALIGN_CENTER	setVerticalAlignment(int)	getVerticalAlignment()
The content scaling mode	RESIZE_NONE	setResizeMode(int)	getResizeMode()
The default "look" for this class.	A platform specific HGraphicLook	setDefaultLook(HGraphicLook)	getDefaultLook()
The "look" for this object.	The HGraphicLook returned from HIcon.getDefaultLook when this object was created.	setLook(HLook)	getLook()
The gain focus sound.	null	setGainFocusSound(HSound)	getGainFocusSound()
The lose focus sound.	null	setLoseFocusSound(HSound)	getLoseFocusSound()

See Also:

HStaticIcon, HNavigable

Constructors

HIcon()

```
public HIcon()
```

Creates an `HIcon` object. See the class description for details of constructor parameters and default values.

HIcon(Image)

```
public HIcon(java.awt.Image image)
```

Creates an `HIcon` object. See the class description for details of constructor parameters and default values.

HIcon(Image, Image, int, int, int, int)

```
public HIcon(java.awt.Image imageNormal, java.awt.Image imageFocus, int x, int y,
             int width, int height)
```

Creates an `HIcon` object. See the class description for details of constructor parameters and default values.

HIcon(Image, int, int, int, int)

```
public HIcon(java.awt.Image image, int x, int y, int width, int height)
```

Creates an `HIcon` object. See the class description for details of constructor parameters and default values.

Methods

getDefaultLook()

```
public static HGraphicLook getDefaultLook()
```

Returns the currently set default look for `HIcon` components.

Returns:
The look that is used by default when creating a new `HIcon` component.

getGainFocusSound()

```
public HSound getGainFocusSound()
```

Get the sound associated with the gain focus event.

Specified By:
`getGainFocusSound()` in interface `HNavigable`

Returns:
The sound played when the component gains focus. If no sound is associated with gaining focus, then null shall be returned.

---

getLoseFocusSound()

```
public HSound getLoseFocusSound()
```

Get the sound associated with the lost focus event.

Specified By:
`getLoseFocusSound()` in interface `HNavigable`

Returns:
The sound played when the component loses focus. If no sound is associated with losing focus, then null shall be returned.

---

getMove(int)

```
public HNavigable getMove(int keyCode)
```

Provides the `HNavigable` object that is navigated to when a particular key is pressed.

Specified By:
`getMove(int)` in interface `HNavigable`

Parameters:
`keyCode` - The key code of the pressed key.

Returns:
Returns the `HNavigable` object, or if no `HNavigable` is associated with the keyCode then returns `null`.

---

getNavigationKeys()

```
public int[] getNavigationKeys()
```

Retrieve the set of key codes which this component maps to navigation targets.

Specified By:
`getNavigationKeys()` in interface `HNavigationInputPreferred`

Returns:
an array of key codes, or `null` if no navigation targets are set on this component.

---

isSelected()

```
public boolean isSelected()
```

Indicates if this component has focus.

Specified By:
`isSelected()` in interface `HNavigable`

Returns:
`true` if the component has focus, otherwise returns `false`.

---

processHFocusEvent(HFocusEvent)

```
public void processHFocusEvent(HFocusEvent evt)
```

Process an `HFocusEvent` sent to this `HIcon` .

Specified By:
`processHFocusEvent(HFocusEvent)` in interface `HNavigationInputPreferred`

Parameters:
`evt` - the `HFocusEvent` to process.

---

setDefaultLook(HGraphicLook)

```
public static void setDefaultLook(HGraphicLook hlook)
```

Sets the default HLook for further HIcon Components.

Parameters:

hlook - The HLook that will be used by default when creating a new HIcon component. Note that this parameter may be null, in which case newly created components shall not draw themselves until a non-null look is set using the setLook(HLook) method.

---

setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)

```
public void setFocusTraversal(HNavigable up, HNavigable down, HNavigable left,
            HNavigable right)
```

Set the focus control for an HNavigable component. Note setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) is a convenience function for application programmers where a standard up, down, left and right focus traversal between components is required.

Note setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) is equivalent to multiple calls to setMove(int, HNavigable), where the key codes VK_UP, VK_DOWN, VK_LEFT, VK_RIGHT are used.

Note that this API does not prevent the creation of "isolated" HNavigable components --- authors should endeavor to avoid confusing the user.

Specified By:

setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) in interface HNavigable

Parameters:

up - The HNavigable component to move to, when the user generates a VK_UP KeyEvent. If there is no HNavigable component to move "up" to, then null should be specified.

down - The HNavigable component to move to, when the user generates a VK_DOWN KeyEvent. If there is no HNavigable component to move "down" to, then null should be specified.

left - The HNavigable component to move to, when the user generates a VK_LEFT KeyEvent. If there is no HNavigable component to move "left" to, then null should be specified.

right - The HNavigable component to move to, when the user generates a VK_RIGHT KeyEvent. If there is no HNavigable component to move "right" to, then null should be specified.

---

setGainFocusSound(HSound)

```
public void setGainFocusSound(HSound sound)
```

Associate a sound with gaining focus, i.e. when the HNavigable receives a java.awt.event.FocusEvent event of type FOCUS_GAINED. This sound will start to be played when an object implementing this interface gains focus. It is not guaranteed to be played to completion. If the object implementing this interface loses focus before the audio completes playing, the audio will be truncated. Applications wishing to ensure the audio is always played to completion must implement special logic to slow down the focus transitions.

By default, an HNavigable object does not have any gain focus sound associated with it.

Note that the ordering of playing sounds is dependent on the order of the focus lost, gained events.

Specified By:

setGainFocusSound(HSound) in interface HNavigable

Parameters:

sound - the sound to be played, when the component gains focus. If sound content is already set, the original content is replaced. To remove the sound specify a null HSound .

---

setLoseFocusSound(HSound)

```
public void setLoseFocusSound(HSound sound)
```

Associate a sound with losing focus, i.e. when the HNavigable receives a java.awt.event.FocusEvent event of type FOCUS_LOST. This sound will start to be played when an object implementing this interface loses focus. It is not guaranteed to be played to completion. It is implementation dependent whether and when this sound will be truncated by any gain focus sound played by the next object to gain focus.

By default, an HNavigable object does not have any lose focus sound associated with it.

Note that the ordering of playing sounds is dependent on the order of the focus lost, gained events.

Specified By:

setLoseFocusSound(HSound) in interface HNavigable

Parameters:

sound - the sound to be played, when the component loses focus. If sound content is already set, the original content is replaced. To remove the sound specify a null HSound .

---

setMove(int, HNavigable)

```
public void setMove(int keyCode, HNavigable target)
```

Defines the navigation path from the current HNavigable to another HNavigable when a particular key is pressed.

Note that setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) is equivalent to multiple calls to setMove(int, HNavigable) , where the key codes VK_UP, VK_DOWN, VK_LEFT, VK_RIGHT are used.

Specified By:

setMove(int, HNavigable) in interface HNavigable

Parameters:

keyCode - The key code of the pressed key. Any numerical keycode is allowed, but the platform may not be able to generate all keycodes. Application authors should only use keys for which HRcCapabilities.isSupported() or HKeyCapabilities.isSupported() returns true.

target - The target HNavigable object that should be navigated to. If a target is to be removed from a particular navigation path, then null should be specified.

org.havi.ui
HImageEffectMatte

Syntax

```
public class HImageEffectMatte implements HMatte, HAnimateEffect

java.lang.Object
  |
  +--org.havi.ui.HImageEffectMatte
```

All Implemented Interfaces:

HAnimateEffect, HMatte

Description

The HImageEffectMatte class represents a matte that varies over both space and time, it is specified as a sequence of image masks.

The data for any HImageEffectMatte may be changed "on the fly" using the setMatteData(Image[]) method. However, some implementations may be asynchronously referencing their content (i.e. through a separate implementation-specific animation thread). Therefore the following restrictions apply to the setMatteData(Image[]) method:

- The method must be synchronized with any implementation-specific animation thread such that content cannot be changed while a different thread is using it.
- If the animation was running the method should stop the animation in a synchronized manner before changing content.
- The method should reset the animation to a starting position defined by the current play mode. The repeat count of the animation should be reset to 0.
- If the animation was running the method should start the animation.

The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
data	The transparency data for this image effect matte.	null (the matte should be treated as being spatially and temporally unvarying and opaque)	setMatteData(Image[])	getMatteData()

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
The initial piece of content to be presented, i.e. its position in the content array.	0	setPosition(int)	getPosition()
By default the animation should be stopped. Hence, to start the animation its start method must be explicitly invoked. This mechanism allows for animations that are programmatically controlled, e.g. via the setPosition method.	"stopped"	start() / stop()	isAnimated()

The pixel offset for each image within the HImageEffectMatte , relative to the top, left corner of its associated component.	A java.awt.Point (0, 0)	setOff-set(Point, int)	getOffset(int)

Constructors

HImageEffectMatte()

```
public HImageEffectMatte()
```

Creates an HImageEffectMatte object. See the class description for details of constructor parameters and default values.

HImageEffectMatte(Image[])

```
public HImageEffectMatte(java.awt.Image[] data)
```

Creates an HImageEffectMatte object. See the class description for details of constructor parameters and default values.

Methods

getDelay()

```
public int getDelay()
```

Gets the presentation delay for this HImageEffectMatte .

Specified By:
getDelay() in interface HAnimateEffect

Returns:
the presentation delay in units of 0.1 seconds.

getMatteData()

```
public java.awt.Image[] getMatteData()
```

Returns the data used for this matte.

Returns:
the data used for this matte (an array of images) or null if no matte data has been set.

getOffset(int)

```
public java.awt.Point getOffset(int index)
```

Get the offset of a specified frame of the matte relative to its component in pixels.

Parameters:
index - the zero-index to the data for which the offset should be recovered. If index is not valid for this matte an IndexOutOfBounds exception is thrown.

Returns:

the offset of the specified frame of the matte relative to its component in pixels (as a Point)

---

getPlayMode()

```
public int getPlayMode()
```

Gets the playing mode for this `HImageEffectMatte` .

Specified By:
`getPlayMode()` in interface `HAnimateEffect`

Returns:
the play mode for this `HImageEffectMatte` .

---

getPosition()

```
public int getPosition()
```

Get the current index into the content array which this `HImageEffectMatte` is using to display content.

Specified By:
`getPosition()` in interface `HAnimateEffect`

Returns:
the index of the content currently being displayed, in the range `0 <= index < length`

---

getRepeatCount()

```
public int getRepeatCount()
```

Gets the number of times that this `HImageEffectMatte` is to be played. Note that this method does *not* return the number of repeats that are remaining to be played.

Specified By:
`getRepeatCount()` in interface `HAnimateEffect`

Returns:
the total number of times that an `HImageEffectMatte` is to be played. The returned value shall be greater than zero, or `REPEAT_INFINITE` .

---

isAnimated()

```
public boolean isAnimated()
```

This method indicates the animation (running) state of the `HImageEffectMatte` .

Specified By:
`isAnimated()` in interface `HAnimateEffect`

Returns:
`true` if this `HImageEffectMatte` is running, i.e. the `start` method has been invoked - `false` otherwise.

---

setDelay(int)

```
public void setDelay(int count)
```

Sets the delay between the presentation of successive pieces of content (frames).

After calling `setDelay(int)` on a currently playing `HImageEffectMatte`, there is no guarantee that one or more frames will not be displayed using the previous delay until the new delay value takes effect.

Specified By:
`setDelay(int)` in interface `HAnimateEffect`

Parameters:
`count` - the content presentation delay in units of 0.1 seconds duration. If count is less than one "unit", then it shall be treated as if it were a delay of one "unit", i.e. 0.1 seconds.

---

setMatteData(Image[])

```
public void setMatteData(java.awt.Image[] data)
```

Sets the data for this matte (an array of images). Any previously set data is replaced. If this method is called when the animation is running the data is changed immediately and the current animation position is reset according to the active play mode. The changes affect the animation immediately.

Note that if the size of an image is smaller than the size of the component to which the matte is applied, the empty space behaves as if it were an opaque flat matte of value 1.0. By default images are aligned at the top left corner of the component. This can be changed with the `setOffset(Point, int)` method

Parameters:
`data` - the data for this matte. Specify a null object to remove the associated data for this matte. If the length of the data array is zero, an IllegalArgumentException is thrown. If an element of the data array is null, or an image referred to is still being loaded, then that image will be skipped when the animation is playing.

---

setOffset(Point, int)

```
public void setOffset(java.awt.Point p, int index)
```

Set the offset of a specified frame of the matte relative to its component in pixels.

Parameters:
`p` - the offset of the specified frame of the matte relative to the top left corner of its component in pixels. If p is null a NullPointerException is thrown.

`index` - the zero-index to the data for which the offset should be applied. If index is not valid for this matte an IndexOutOfBounds exception is thrown.

---

setPlayMode(int)

```
public void setPlayMode(int mode)
```

Sets the playing mode for this `HImageEffectMatte`. If the animation is already running a call to `setPlayMode` will change the current value and affect the animation immediately. The position of the animation is unchanged.

Specified By:
`setPlayMode(int)` in interface `HAnimateEffect`

Parameters:
`mode` - the play mode for this `HImageEffectMatte`, which must be either `PLAY_ALTERNATING` or `PLAY_REPEATING`.

---

setPosition(int)

```
public void setPosition(int position)
```

Set this HImageEffectMatte to display the content at the specified position. If the animation is already running a call to setPosition will change the current value and affect the animation immediately.

Specified By:
setPosition(int) in interface HAnimateEffect

Parameters:
position - an index into the content array which specifies the next piece of content to be displayed. If position is less than 0, then the array element at index 0 is displayed, if position is greater than or equal to the length of the content array, then the array element at index [length-1] will be used.

---

setRepeatCount(int)

```
public void setRepeatCount(int count)
```

Sets the number of times that this HImageEffectMatte should be played. If the animation is already running a call to setRepeatCount will change the current value and reset the current number of repeats to 0, affecting the animation immediately.

Specified By:
setRepeatCount(int) in interface HAnimateEffect

Parameters:
count - the number of times that an HImageEffectMatte should be played. Valid values of the repeat count are one or more, and REPEAT_INFINITE .

---

start()

```
public void start()
```

This method starts this HImageEffectMatte playing. If start is called when the animation is already running it resets the animation according to the current play mode, as returned by getPlayMode() .

Specified By:
start() in interface HAnimateEffect

---

stop()

```
public void stop()
```

This method indicates that the running HImageEffectMatte should be stopped. After calling this method, there is no guarantee that one or more frames will not be displayed before the animation actually stops playing. If the animation is already stopped further calls to stop have no effect.

Specified By:
stop() in interface HAnimateEffect

org.havi.ui
HImageHints

Syntax
```
public class HImageHints

java.lang.Object
  |
  +--org.havi.ui.HImageHints
```

Description
The `HImageHints` object allows an application to pass hints to the system how best to tailor an image to match a (possibly) restricted `HGraphicsConfiguration`. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
The image type.	`NATURAL_IMAGE`	---	---

Fields

BUSINESS_GRAPHICS
```
public static final int BUSINESS_GRAPHICS
```
The image is business graphics, with strong, well-defined, blocks of solid color, etc. Not suitable for dithering, suitable for nearest color matching.

CARTOON
```
public static final int CARTOON
```
The image is a cartoon, with strong, well-defined, blocks of solid color, etc. Not suitable for dithering, suitable for nearest color matching.

LINE_ART
```
public static final int LINE_ART
```
The image is a two-tone lineart, with colors varying between foreground and background, etc. Not suitable for dithering. Possibly suitable for color-map adjustment, etc., if applicable.

NATURAL_IMAGE

```
public static final int NATURAL_IMAGE
```

The image is a "natural" scene, with subtle gradations of color, etc. Suitable for dithering.

Constructors

HImageHints()

```
public HImageHints()
```

Creates an HImageHints object. See the class description for details of constructor parameters and default values.

Methods

getType()

```
public int getType()
```

Get the expected type of the image being loaded.

setType(int)

```
public void setType(int type)
```

Set the expected type of the image being loaded.

Parameters:

`type` - the expected type of image

org.havi.ui
HImageMatte

Syntax
```
public class HImageMatte implements HMatte

java.lang.Object
  |
  +--org.havi.ui.HImageMatte
```

All Implemented Interfaces:
HMatte

Description
The HImageMatte class represents a matte that varies over space but is constant over time, it can be specified by an "image mask" (a single channel image) where the pixels indicate matte transparency. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
data	The transparency value for this image matte.	null (the matte should be treated as being spatially unvarying and opaque)	setMatteData(Image)	getMatteData()

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
The pixel offset for the image matte, relative to the top, left corner of its associated component.	A java.awt.Point (0, 0)	setOffset(Point)	getOffset()

Constructors

HImageMatte()
```
public HImageMatte()
```
Creates an HImageMatte object. See the class description for details of constructor parameters and default values.

HImageMatte(Image)
```
public HImageMatte(java.awt.Image data)
```
Creates an HImageMatte object. See the class description for details of constructor parameters and default values.

Methods

---

getMatteData()

```
public java.awt.Image getMatteData()
```

Returns the data used for this matte.

Returns:
the data used for this matte (an image) or null if no matte data has been set.

---

getOffset()

```
public java.awt.Point getOffset()
```

Get the offset of the matte relative to its component in pixels.

Returns:
the offset of the specified frame of the matte relative to its component in pixels (as a Point)

---

setMatteData(Image)

```
public void setMatteData(java.awt.Image data)
```

Sets the data for this matte. Any previously set data is replaced.

Parameters:
`data` - the data for this matte. Specify a null object to remove the associated data for this matte.

---

setOffset(Point)

```
public void setOffset(java.awt.Point p)
```

Set the offset of the matte relative to its component in pixels.

Parameters:
`p` - the offset of the matte relative to its component in pixels. If p is null a NullPointerException is thrown.

org.havi.ui
HInvalidLookException

Syntax
```
public class HInvalidLookException extends HUIException

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--HUIException
                    |
                    +--org.havi.ui.HInvalidLookException
```

All Implemented Interfaces:
java.io.Serializable

Description
An HInvalidLookException is an exception that is thrown when a particular `HLook` is not compatible with the `HVisible` component it has been associated with. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
message	Message explaining why the exception was thrown	null	-	java.lang.Throwable#getMessage

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

Constructors

HInvalidLookException()
```
public HInvalidLookException()
```
Creates an HInvalidLookException object. See the class description for details of constructor parameters and default values.

HInvalidLookException(String)
```
public HInvalidLookException(java.lang.String message)
```
Creates an HInvalidLookException object with a specified reason string.

Parameters:
`message` - the reason why the exception was raised

org.havi.ui
HItemValue

Syntax
```
public interface HItemValue extends HNavigable, HSelectionInputPreferred
```

All Superinterfaces:
HNavigable, HNavigationInputPreferred, HOrientable, HSelectionInputPreferred

All Known Implementing Classes:
HListGroup

Description
This interface is implemented by all HAVi UI components which have some form of selectable content (e.g. a list group).

Event Behavior

Subclasses of HComponent which implement HItemValue must respond to HFocusEvent and HItemEvent events.

Applications should assume that classes which implement HItemValue can generate events of the types HFocusEvent and HItemEvent in response to other types of input event.

An application may add one or more HItemListener listeners to the component. The selectionChanged(HItemEvent) method of the HItemListener is invoked whenever the selection managed by the HItemValue is changed.


HAVi item events are discussed in detail in the HSelectionInputPreferred interface description.

Interaction States

The following interaction states are valid for this HItemValue component:

- NORMAL_STATE
- FOCUSED_STATE
- DISABLED_STATE
- DISABLED_FOCUSED_STATE

The state machine diagram below shows the valid state transitions for an HItemValue component.

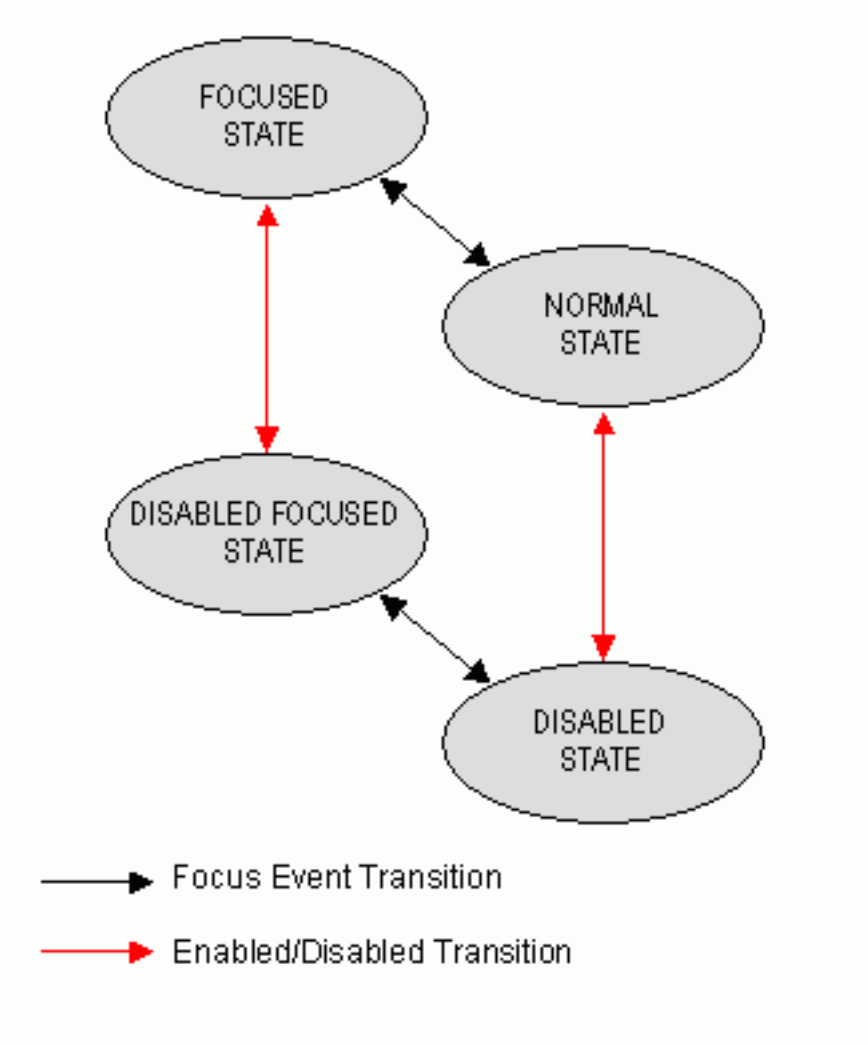

Platform Classes

The following HAVi platform classes implement or inherit the `HItemValue` interface. These classes shall all generate both `HFocusEvent` and `HItemEvent` events in addition to any other events specified in the respective class descriptions.

- `HListGroup`

See Also:

`HNavigable`, `HOrientable`, `HSelectionInputPreferred`, `HItemEvent`, `HItemListener`

Methods

---

addItemListener(HItemListener)

```
public void addItemListener(HItemListener l)
```

Adds the specified HItemListener to receive HItemEvent sent from this object. If the listener has already been added further calls will add further references to the listener, which will then receive multiple copies of a single event.

Parameters:

l - the HItemListener to be notified.

---

getSelectionSound()

```
public HSound getSelectionSound()
```

Get the sound to be played when the selection changes.

Returns:

The sound played when the selection changes

---

removeItemListener(HItemListener)

```
public void removeItemListener(HItemListener l)
```

Removes the specified HItemListener so that it no longer receives HItemEvent from this object. If the specified listener is not registered, the method has no effect. If multiple references to a single listener have been registered it should be noted that this method will only remove one reference per call.

Parameters:

l - the HItemListener to be removed from notification.

---

setSelectionSound(HSound)

```
public void setSelectionSound(HSound sound)
```

Associate a sound to be played when the selection is modified. The sound is played irrespective of whether an HItemEvent is sent to one or more listeners.

Parameters:

sound - the sound to be played, when the selection is modified. If sound content is already set, the original content is replaced. To remove the sound specify a null HSound .

org.havi.ui
HKeyboardInputPreferred

Syntax
```
public interface HKeyboardInputPreferred
```

All Known Subinterfaces:
`HTextValue`

Description
A component which implements `HKeyboardInputPreferred` indicates that this component expects to receive both `HKeyEvent` and `HTextEvent` input events.

All interoperable implementations of the `HKeyboardInputPreferred` interface must extend `HComponent`.

The set of characters which the component expects to receive via `HKeyEvent` events is defined by the return code from the `getType()` method.

When this component has focus, platforms without a physical means of generating key events with the desired range of characters will provide another means for keyboard entry e.g. by offering an on-screen "virtual&quot keyboard. Applications can query the system about the support of specific keyCodes through the `isSupported(int)` method.

Note that the java.awt.Component method isFocusTraversable should always return true for a `java.awt.Component` implementing this interface.

Fields

INPUT_ALPHA
```
public static final int INPUT_ALPHA
```
This constant indicates that the component only requires alphanumeric input, as determined by the `java.lang.Character isLetter` method.

INPUT_ALPHANUMERIC
```
public static final int INPUT_ALPHANUMERIC
```
This constant indicates that the component only requires alphanumeric input, as determined by the `java.lang.Character isLetterOrDigit` method.

INPUT_ANY
```
public static final int INPUT_ANY
```
Indicates that the component requires any possible character as input, as determined by the `java.lang.Character isDefined` method.

INPUT_CUSTOMIZED

```
public static final int INPUT_CUSTOMIZED
```

Indicates that the component requires as input the characters present in the array returned from the `getValidInput()` method.

INPUT_NUMERIC

```
public static final int INPUT_NUMERIC
```

This constant indicates that the component only requires alphanumeric input, as determined by the `java.lang.Character isDigit` method.

Methods

getEditMode()

```
public boolean getEditMode()
```

Get the editing mode for this `HKeyboardInputPreferred`. If the returned value is `true` the component is in edit mode, and its textual content may be changed through user interaction such as keyboard events.

The component is switched into and out of edit mode on receiving `TEXT_START_CHANGE` and `TEXT_END_CHANGE` events.

Returns:

`true` if this component is in edit mode, `false` otherwise.

getType()

```
public int getType()
```

Retrieve the desired input type for this component. This value should be set to indicate to the system which input keys are required by this component.

Returns:

one of `INPUT_ALPHANUMERIC`, `INPUT_NUMERIC`, `INPUT_ALPHA`, or `INPUT_CUSTOMIZED`.

getValidInput()

```
public char[] getValidInput()
```

Retrieve the customized input character range. The return value of this method should reflect the range of input keys which the component wishes to see, should `getType()` return `INPUT_CUSTOMIZED`. This method may return `null` if and only if it can guarantee that customized input is *never* required.

If customized input can be used but no specific customized input is set, this method should return the same range as the `INPUT_ALPHANUMERIC` input type, i.e. that range of characters for which the `java.lang.Character isLetterOrDigit` returns `true`.

Returns:

an array containing the characters which this component expects the platform to provide, or `null` to indicate that customized characters are not used.

---

processHKeyEvent(HKeyEvent)

```
public void processHKeyEvent(HKeyEvent evt)
```

Process an `HKeyEvent` sent to this `HKeyboardInputPreferred`.

Parameters:
`evt` - the `HKeyEvent` to process.

---

processHTextEvent(HTextEvent)

```
public void processHTextEvent(HTextEvent evt)
```

Process an `HTextEvent` sent to this `HKeyboardInputPreferred`.

Parameters:
`evt` - the `HTextEvent` to process.

---

setEditMode(boolean)

```
public void setEditMode(boolean edit)
```

Set the editing mode for this `HKeyboardInputPreferred`.

This method is provided for the convenience of component implementors. Interoperable applications shall not call this method. It cannot be made protected because interfaces cannot have protected methods.

Parameters:
`edit` - true to switch this component into edit mode, false otherwise.

See Also:
`getEditMode()`

org.havi.ui
HListElement

Syntax
```
public class HListElement

java.lang.Object
  |
  +--org.havi.ui.HListElement
```

Description
`HListElement` is a holder for content used with the `HListGroup` component. It must contain a text string, and may also contain a single graphical image.

Applications should **not** directly manipulate `HListElement` objects. They are intended to be used in conjunction with an `HListGroup` which maintains a list of them, and is responsible for their rendering via the `HListGroupLook` class. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
label	text content of this item	no default	-	`getLabel()`
icon	image content of this item	null	-	`getIcon()`

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

See Also:
`HListGroup`, `HListGroupLook`

Constructors

HListElement(Image, String)
```
public HListElement(java.awt.Image icon, java.lang.String label)
```
Creates an HListElement object. See the class description for details of constructor parameters and default values.

Parameters:

`icon` - The icon for this HListElement.

`label` - The label for this HListElement.

HListElement(String)

```
public HListElement(java.lang.String label)
```

Creates an HListElement object. See the class description for details of constructor parameters and default values.

Parameters:
`label` - The label for this HListElement.

Methods

getIcon()

```
public java.awt.Image getIcon()
```

Retrieve the icon for this HListElement.

Returns:
the graphical icon for this HListElement, or `null` if no icon was set.

getLabel()

```
public java.lang.String getLabel()
```

Retrieve the label for this HListElement.

Returns:
the text label for this HListElement.

setIcon(Image)

```
public void setIcon(java.awt.Image icon)
```

Set the icon for this HListElement. If icon is null, the HListElement will be in the same state as if no icon was set.

Parameters:
`icon` - The icon for this HListElement.

setLabel(String)

```
public void setLabel(java.lang.String label)
```

Set the label for this HListElement.

Parameters:
`label` - The label for this HListElement.

org.havi.ui
HListGroup

Syntax

```
public class HListGroup extends HVisible implements HItemValue
```

```
java.lang.Object
  |
  +--java.awt.Component
        |
        +--HComponent
              |
              +--HVisible
                    |
                    +--org.havi.ui.HListGroup
```

All Implemented Interfaces:

HItemValue, HMatteLayer, HNavigable, HNavigationInputPreferred, HOrientable, HSelectionInputPreferred, HState, java.awt.image.ImageObserver, java.awt.MenuContainer, java.io.Serializable, TestOpacity

Description

The HListGroup is a user interface component representing a list of selectable items (HListElement) which contain static read-only graphical and / or textual content.

This component can be navigated to, i.e. it can have the input focus. It also responds to HItemEvent events as follows:

- When the component has focus, sending an ITEM_START_CHANGE event to the component causes it to enter selection mode.
- When the component has focus, sending an ITEM_END_CHANGE event to the component causes it to leave selection mode.
- When the component has focus and is in selection mode, the current item can be set by sending ITEM_SET_CURRENT , ITEM_SET_PREVIOUS and ITEM_SET_NEXT events to the component.
- When the component has focus and is in selection mode, sending an ITEM_TOGGLE_SELECTED event causes the current item to be toggled between a selected and unselected state.
- Irrespective of focus and selection mode, sending an ITEM_SELECTION_CLEARED event to the component causes the current selection set to be cleared. The position of the current item is unchanged.

HListGroup has the following properties which make it slightly different from the other platform components.

- uses the HTextLayoutManager to render text from the elements. HListGroup is not required to respect the default horizontal and vertical content alignments specified by HVisible . For HListGroup these defaults are implementation specific. Application programmers who require a specific alignment policy must therefore make explicit calls to setHorizontalAlignment(int) and setVerticalAlignment(int) to enforce the alignments required.
- the resize mode as defined by HVisible determines how the icons are scaled.
- focus traversal applies to the entire list component. The elements in the list are not components in their own right and never receive focus. The concept of the current element is handled through HItemEvent events.
- for the purpose of layout management of the HListGroup component, the following constraints are applied:

5. the minimum size is the size to present one element or an implementation specific minimum (32 x 32 for example) if no elements are present.
6. the preferred size is that set by setDefaultSize(Dimension) rounded down to the nearest element (minimum of one) or the size required to present 5 elements if a default size is not set.
7. the maximum size is that required to present all elements.

By default this component uses the HListGroupLook class to render itself. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
x	x-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
y	y-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
width	width of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
height	height of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
Associated matte (HMatte).	none (i.e. getMatte() returns null)	setMatte(HMatte)	getMatte()
The text layout manager responsible for text formatting.	An HDefaultTextLayoutManager object.	setTextLayoutManager(HTextLayoutManager)	getTextLayoutManager()
The background painting mode	NO_BACKGROUND_FILL	setBackgroundMode(int)	getBackgroundMode()
The default preferred size	not set (i.e. null) unless specified by width and height parameters	setDefaultSize(Dimension)	getDefaultSize()
The horizontal content alignment	HALIGN_CENTER	setHorizontalAlignment(int)	getHorizontalAlignment()
The vertical content alignment	VALIGN_CENTER	setVerticalAlignment(int)	getVerticalAlignment()
The content scaling mode	RESIZE_NONE	setResizeMode(int)	getResizeMode()
The default "look" for this class.	A platform specific HListGroupLook	setDefaultLook(HListGroupLook)	getDefaultLook()

The "look" for this object.	The HListGroupLook returned from HListGroup.getDefaultLook when this object was created.	setLook(HLook)	getLook()
The gain focus sound.	null	setGainFocusSound(HSound)	getGainFocusSound()
The lose focus sound.	null	setLoseFocusSound(HSound)	getLoseFocusSound()
The selection sound.	null	setSelectionSound(HSound)	getSelectionSound()

See Also:

HListElement, HListGroupLook, HNavigable, HItemValue

Fields

ADD_INDEX_END

```
public static final int ADD_INDEX_END
```

A constant for use with addItem(HListElement, int) and addItems(HListElement[], int) which specifies that the new items should be appended to the end of the list.

DEFAULT_ICON_HEIGHT

```
public static final int DEFAULT_ICON_HEIGHT
```

A constant for use with setIconSize(Dimension) and getIconSize(). When no call to setIconSize(Dimension) has been made then getIconSize() will return this value for its default height. The default icon height for all orientations is implementation specific.

DEFAULT_ICON_WIDTH

```
public static final int DEFAULT_ICON_WIDTH
```

A constant for use with setIconSize(Dimension) and getIconSize(). When no call to setIconSize(Dimension) has been made then getIconSize() will return this value for its default width. The default icon width for all orientations is implementation specific.

DEFAULT_LABEL_HEIGHT

```
public static final int DEFAULT_LABEL_HEIGHT
```

A constant for use with setLabelSize(Dimension) and getLabelSize(). When no call to setLabelSize(Dimension) has been made then getLabelSize() will return this value for its default height. The default label height for all orientations is the current font height.

DEFAULT_LABEL_WIDTH

```
public static final int DEFAULT_LABEL_WIDTH
```

A constant for use with `setLabelSize(Dimension)` and `getLabelSize()`. When no call to `setLabelSize(Dimension)` has been made then `getLabelSize()` will return this value for its default width. The default label width for all orientations is implementation specific.

ITEM_NOT_FOUND

```
public static final int ITEM_NOT_FOUND
```

A constant which may be returned from `getIndex(HListElement)` if the requested element is not found in the content.

Constructors

HListGroup()

```
public HListGroup()
```

Creates an `HListGroup` object. See the class description for details of constructor parameters and default values.

HListGroup(HListElement[])

```
public HListGroup(HListElement[] items)
```

Creates an `HListGroup` object. See the class description for details of constructor parameters and default values.

HListGroup(HListElement[], int, int, int, int)

```
public HListGroup(HListElement[] items, int x, int y, int width, int height)
```

Creates an `HListGroup` object. See the class description for details of constructor parameters and default values.

Methods

addItem(HListElement, int)

```
public void addItem(HListElement item, int index)
```

Add an item to this `HListGroup`. The item is inserted after the specified `HListElement` in the content list. If no content exists a new content list is created to contain the new item and the value of the `index` parameter is ignored.

If the act of adding a new item causes the current active item index to change, an `HAdjustmentEvent` shall be sent.

Note that items are stored in the content list by reference, they are not copied.

Parameters:

`item` - the item to add.

`index` - the index of the currently existing item which the new items should be placed after, or `ADD_INDEX_END` to append the new items to the end of the list. If this value is not a valid item index for this list a `java.lang.IndexOutOfBoundsException` shall be thrown.

---

addItemListener(HItemListener)

```
public void addItemListener(HItemListener l)
```

Adds the specified `HItemListener` to receive `HItemEvent` sent from this object. If the listener has already been added further calls will add further references to the listener, which will then receive multiple copies of a single event.

Specified By:

`addItemListener(HItemListener)` in interface `HItemValue`

Parameters:

`l` - the `HItemListener` to be notified.

---

addItems(HListElement[], int)

```
public void addItems(HListElement[] items, int index)
```

Add an array of items to this `HListGroup`. The items are inserted in the same order as they are in the array after the item specified. If no content exists a new content list is created to contain the new items and the value of the `index` parameter is ignored.

If the act of adding a new item causes the current active item index to change, an `HAdjustmentEvent` shall be sent.

Note that items are stored in the content list by reference, they are not copied.

Parameters:

`item` - the item to add.

`index` - the index of the currently existing item which the new items should be placed after, or `ADD_INDEX_END` to append the new items to the end of the list. If this value is not a valid item index for this list a `java.lang.IndexOutOfBoundsException` shall be thrown.

---

clearSelection()

```
public void clearSelection()
```

Destroy the selection. This method deselects any selected `HListElement`, but does not remove them from the `HListGroup`. After calling this method calls to `getSelection()` shall return `null` until a new selection is made.

If the selection was not already empty, an `HItemEvent` shall be sent to any registered listeners.

See Also:

`getSelection()`

---

getCurrentIndex()

```
public int getCurrentIndex()
```

Retrieve the current active item index, if one is currently chosen. The current index is the index of the `HListElement` which would be selected or deselected should the user action the `HListGroup`. If there is no current element or there is no content set this method shall return `ITEM_NOT_FOUND`

Returns:
the current item index, or ITEM_NOT_FOUND if no such item exists.

---

getCurrentItem()

```
public HListElement getCurrentItem()
```

Retrieve the current active item, if one has been chosen. The current item is the HListElement which would be selected or deselected should the user action the HListGroup. If there is no current item or there is no content set this method shall return null

Returns:
the current item, or null if no such item exists.

---

getDefaultLook()

```
public static HListGroupLook getDefaultLook()
```

Returns the currently set default HLook for HListGroup components.

Returns:
The HLook that is used by default when creating a new HListGroup component.

---

getGainFocusSound()

```
public HSound getGainFocusSound()
```

Get the sound associated with the gain focus event.

Specified By:
getGainFocusSound() in interface HNavigable

Returns:
The sound played when the component gains focus. If no sound is associated with gaining focus, then null shall be returned.

---

getIconSize()

```
public java.awt.Dimension getIconSize()
```

Retrieve the icon size for this HListGroup. This size is the desired size of the area into which the HListGroupLook should render any image content of the HListElement.

Returns:
the icon size. If no size has been set then this method shall return new Dimension(DEFAULT_ICON_WIDTH, DEFAULT_ICON_HEIGHT).

---

getIndex(HListElement)

```
public int getIndex(HListElement item)
```

Retrieve the index position of an item in the content list.

Parameters:
item - the item to retrieve the index for.

Returns:
the index of the given HListElement, or ITEM_NOT_FOUND if no such element exists.

---

getItem(int)

```
public HListElement getItem(int index)
```

Retrieve an item from the content list by index.

Parameters:
`index` - the index of the item to retrieve. If this parameter is negative a `java.lang.IllegalArgumentException` shall be thrown.

Returns:
the `HListElement` at the given index, or `null` if no such element exists.

---

getLabelSize()

```
public java.awt.Dimension getLabelSize()
```

Retrieve the label size for this `HListGroup` . This size is the desired size of the area into which the `HListGroupLook` should render any textual content of the `HListElement` .

Returns:
the label size. If no size has been set then this method shall return `new Dimension(DEFAULT_LABEL_WIDTH, DEFAULT_LABEL_HEIGHT).`

---

getListContent()

```
public HListElement[] getListContent()
```

Retrieve the list content for this `HListGroup` .

Returns:
the list content or `null` if no content has been set.

---

getLoseFocusSound()

```
public HSound getLoseFocusSound()
```

Get the sound associated with the lost focus event.

Specified By:
`getLoseFocusSound()` in interface `HNavigable`

Returns:
The sound played when the component loses focus. If no sound is associated with losing focus, then null shall be returned.

---

getMove(int)

```
public HNavigable getMove(int keyCode)
```

Provides the `HNavigable` object that is navigated to when a particular key is pressed.

Specified By:
`getMove(int)` in interface `HNavigable`

Parameters:
`keyCode` - The key code of the pressed key.

Returns:
Returns the `HNavigable` object, or if no `HNavigable` is associated with the keyCode then returns `null`.

---

getMultiSelection()

```
public boolean getMultiSelection()
```

Return the multiple selection mode currently active for this HListGroup. Multiple selection mode means that there may be more than one `HListElement` selected at a time.

Returns:
`true` if multiple selections are permitted, `false` otherwise.

---

getNavigationKeys()

```
public int[] getNavigationKeys()
```

Retrieve the set of key codes which this component maps to navigation targets.

Specified By:
`getNavigationKeys()` in interface `HNavigationInputPreferred`

Returns:
an array of key codes, or `null` if no navigation targets are set on this component.

---

getNumItems()

```
public int getNumItems()
```

Retrieve the number of items in the content list.

Returns:
the number of items in the content list, or 0 if no content has been set.

---

getNumSelected()

```
public int getNumSelected()
```

Return the number of items which would be in the selection, if the `getSelection()` method were called at this time.

Returns:
the number of selected items.

---

getOrientation()

```
public int getOrientation()
```

Retrieve the orientation of the `HListGroup`. The orientation controls how an associated `HLook` lays out the component and affects the visual behavior of the `HAdjustmentEvent` and `HItemEvent` events. For example, the system might use this information to select appropriate key mappings for these events.

Specified By:
`getOrientation()` in interface `HOrientable`

Returns:
one of `ORIENT_LEFT_TO_RIGHT`, `ORIENT_RIGHT_TO_LEFT`, `ORIENT_TOP_TO_BOTTOM`, or `ORIENT_BOTTOM_TO_TOP`.

---

getScrollPosition()

```
public int getScrollPosition()
```

Retrieve the scroll position of the HListGroup. The scroll position determines the first HListElement to be drawn when the HListGroupLook lays out the list.

Returns:
the current scroll position.

---

getSelection()

```
public HListElement[] getSelection()
```

Get the selection from this HListGroup. The selection is defined as that set of HListElement which the user has caused to be selected by actioning the HListGroup.

Returns:
the selection, or null if no items are selected. Only items which are currently part of the content for this HListGroup may be selected.

---

getSelectionIndices()

```
public int[] getSelectionIndices()
```

Get the list of selection indices from this HListGroup. The selection is defined as that set of HListElement indices which the user has caused to be selected by actioning the HListGroup.

Returns:
the index selection, or null if no items are selected. Only items which are currently part of the content for this HListGroup may be selected.

---

getSelectionMode()

```
public boolean getSelectionMode()
```

Get the selection mode for this HListGroup. If the returned value is true the component is in selection mode, and the selection may be changed.

The component is switched into and out of selection mode on receiving ITEM_START_CHANGE and ITEM_END_CHANGE events.

Specified By:
getSelectionMode() in interface HSelectionInputPreferred

Returns:
true if this component is in selection mode, false otherwise.

---

getSelectionSound()

```
public HSound getSelectionSound()
```

Get the sound to be played when the selection changes.

Specified By:
getSelectionSound() in interface HItemValue

Returns:
The sound played when the selection changes

---

isItemSelected(int)

```
public boolean isItemSelected(int index)
```

Retrieve the selection state of a particular HListElement.

Note that if multiple selections are not permitted only one HListElement may be selected at a time.

Parameters:
`index` - the index of the `HListElement` to query. A `java.lang.IllegalArgumentException` shall be thrown if this index is not valid for the `HListGroup`.

Returns:
`true` if the given `HListElement` is selected, `false` otherwise.

---

isSelected()

```
public boolean isSelected()
```

Indicates if this component has focus.

Specified By:
`isSelected()` in interface `HNavigable`

Returns:
`true` if the component has focus, otherwise returns `false`.

---

processHFocusEvent(HFocusEvent)

```
public void processHFocusEvent(HFocusEvent evt)
```

Process an `HFocusEvent` sent to this `HListGroup`.

Specified By:
`processHFocusEvent(HFocusEvent)` in interface `HNavigationInputPreferred`

Parameters:
`evt` - the `HFocusEvent` to process.

---

processHItemEvent(HItemEvent)

```
public void processHItemEvent(HItemEvent evt)
```

Process an `HItemEvent` sent to this `HListGroup`.

Specified By:
`processHItemEvent(HItemEvent)` in interface `HSelectionInputPreferred`

Parameters:
`evt` - the `HItemEvent` to process.

---

removeAllItems()

```
public void removeAllItems()
```

Remove all the content. The selection is also destroyed and calls to `getSelection()` shall return `null` until new content and selections are created.

See Also:
`getSelection()`

---

removeItem(int)

```
public HListElement removeItem(int index)
```

Remove the HListElement at the specified index. The item is also removed from the selection, if any is set. If this was the last item in the selection the entire selection is destroyed and calls to getSelection() shall return null until new content and selections are created.

If the act of removing an item causes the current active item index to change, an HAdjustmentEvent shall be sent.

If the act of removing an item causes the selection to change, an HItemEvent shall be sent.

Parameters:
index - the index of the item to remove.

Returns:
the HListElement that has been removed or null if the index is not valid. No exception is thrown if index is not valid.

See Also:
getSelection()

---

removeItemListener(HItemListener)

```
public void removeItemListener(HItemListener l)
```

Removes the specified HItemListener so that it no longer receives HItemEvent from this object. If the specified listener is not registered, the method has no effect. If multiple references to a single listener have been registered it should be noted that this method will only remove one reference per call.

Specified By:
removeItemListener(HItemListener) in interface HItemValue

Parameters:
l - the HItemListener to be removed from notification.

---

setCurrentItem(int)

```
public boolean setCurrentItem(int index)
```

Set the current active item. The current item is the HListElement which would be selected or deselected should the user action the HListGroup .

Parameters:
index - the index of the new current item.

Returns:
true if the current item was changed, false if index was not a valid index for this HListGroup or the current item was not changed because it is already selected. No exception is thrown if index is not valid.

---

setDefaultLook(HListGroupLook)

```
public static void setDefaultLook(HListGroupLook look)
```

Sets the default HLook for further HListGroup Components.

Parameters:
look - The HLook that will be used by default when creating a new HListGroup component. Note that this parameter may be null, in which case newly created components shall not draw themselves until a non-null look is set using the setLook(HLook) method.

setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)

```
public void setFocusTraversal(HNavigable up, HNavigable down, HNavigable left,
            HNavigable right)
```

Set the focus control for an `HNavigable` component. Note `setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)` is a convenience function for application programmers where a standard up, down, left and right focus traversal between components is required.

Note `setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)` is equivalent to multiple calls to `setMove(int, HNavigable)`, where the key codes VK_UP, VK_DOWN, VK_LEFT, VK_RIGHT are used.

Note that this API does not prevent the creation of "isolated" `HNavigable` components --- authors should endeavor to avoid confusing the user.

Specified By:

`setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)` in interface `HNavigable`

Parameters:

`up` - The `HNavigable` component to move to, when the user generates a VK_UP KeyEvent. If there is no `HNavigable` component to move "up" to, then null should be specified.

`down` - The `HNavigable` component to move to, when the user generates a VK_DOWN KeyEvent. If there is no `HNavigable` component to move "down" to, then null should be specified.

`left` - The `HNavigable` component to move to, when the user generates a VK_LEFT KeyEvent. If there is no `HNavigable` component to move "left" to, then null should be specified.

`right` - The `HNavigable` component to move to, when the user generates a VK_RIGHT KeyEvent. If there is no `HNavigable` component to move "right" to, then null should be specified.

setGainFocusSound(HSound)

```
public void setGainFocusSound(HSound sound)
```

Associate a sound with gaining focus, i.e. when the `HNavigable` receives a `java.awt.event.FocusEvent` event of type `FOCUS_GAINED`. This sound will start to be played when an object implementing this interface gains focus. It is not guaranteed to be played to completion. If the object implementing this interface loses focus before the audio completes playing, the audio will be truncated. Applications wishing to ensure the audio is always played to completion must implement special logic to slow down the focus transitions.

By default, an `HNavigable` object does not have any gain focus sound associated with it.

Note that the ordering of playing sounds is dependent on the order of the focus lost, gained events.

Specified By:

`setGainFocusSound(HSound)` in interface `HNavigable`

Parameters:

`sound` - the sound to be played, when the component gains focus. If sound content is already set, the original content is replaced. To remove the sound specify a null `HSound`.

setIconSize(Dimension)

```
public void setIconSize(java.awt.Dimension size)
```

Set the icon size for this HListGroup. This size is the desired size of the area into which the HListGroupLook should render any image content of the HListElement.

Parameters:

size - the icon size. If this parameter is new Dimension(DEFAULT_ICON_SIZE, DEFAULT_ICON_SIZE) or null the HListGroup shall revert to using an implementation-specific icon size.

---

setItemSelected(int, boolean)

```
public void setItemSelected(int index, boolean sel)
```

Set the selection state of a particular HListElement.

If a successful call to this method causes the selection to change an HItemEvent shall be sent to any registered listeners.

Parameters:

index - the index of the HListElement to alter. A java.lang.IllegalArgumentException shall be thrown if this index is not valid for the HListGroup.

sel - true to select the given HListElement, false otherwise.

---

setLabelSize(Dimension)

```
public void setLabelSize(java.awt.Dimension size)
```

Set the label size for this HListGroup. This size is the desired size of the area into which the HListGroupLook should render any textual content of the HListElement.

Parameters:

size - the label size. If this parameter is new Dimension(DEFAULT_LABEL_WIDTH, DEFAULT_LABEL_HEIGHT) or null the HListGroup shall revert to using an implementation-specific label size.

---

setListContent(HListElement[])

```
public void setListContent(HListElement[] elements)
```

Set the list content for this HListGroup. Any existing selection is discarded (which may cause an HItemEvent to be generated.)

Parameters:

elements - the list content. If this parameter is null any existing content is removed.

---

setLook(HLook)

```
public void setLook(HLook hlook)
```

Sets the HLook for this component.

Overrides:

setLook(HLook) in class HVisible

Parameters:

hlook - The HLook that is to be used for this component. Note that this parameter may be null, in which case the component will not draw itself until a look is set.

Throws:

HInvalidLookException - If the Look is not an HListGroupLook.

---

setLoseFocusSound(HSound)

```
public void setLoseFocusSound(HSound sound)
```

Associate a sound with losing focus, i.e. when the HNavigable receives a java.awt.event.FocusEvent event of type FOCUS_LOST. This sound will start to be played when an object implementing this interface loses focus. It is not guaranteed to be played to completion. It is implementation dependent whether and when this sound will be truncated by any gain focus sound played by the next object to gain focus.

By default, an HNavigable object does not have any lose focus sound associated with it.

Note that the ordering of playing sounds is dependent on the order of the focus lost, gained events.

Specified By:
setLoseFocusSound(HSound) in interface HNavigable

Parameters:
sound - the sound to be played, when the component loses focus. If sound content is already set, the original content is replaced. To remove the sound specify a null HSound .

---

setMove(int, HNavigable)

```
public void setMove(int keyCode, HNavigable target)
```

Defines the navigation path from the current HNavigable to another HNavigable when a particular key is pressed.

Note that setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) is equivalent to multiple calls to setMove(int, HNavigable) , where the key codes VK_UP, VK_DOWN, VK_LEFT, VK_RIGHT are used.

Specified By:
setMove(int, HNavigable) in interface HNavigable

Parameters:
keyCode - The key code of the pressed key. Any numerical keycode is allowed, but the platform may not be able to generate all keycodes. Application authors should only use keys for which HRcCapabilities.isSupported() or HKeyCapabilities.isSupported() returns true.

target - The target HNavigable object that should be navigated to. If a target is to be removed from a particular navigation path, then null should be specified.

---

setMultiSelection(boolean)

```
public void setMultiSelection(boolean multi)
```

Set the multiple selection mode for this HListGroup. Multiple selection mode means that there may be more than one HListElement selected at a time.

Note that if the HListGroup is switched out of multiple selection mode and more than one item is selected, the selection shall change so that the first of the items is selected and the others are deselected. This will cause an HItemEvent to be sent to any registered listeners.

Parameters:
<code>true</code> - if multiple selections are to be permitted, false otherwise.

---

setOrientation(int)

```
public void setOrientation(int orient)
```

Set the orientation of the HListGroup . The orientation controls how the associated HLook lays out the component.

Specified By:
`setOrientation(int)` in interface `HOrientable`

Parameters:
`orient` - one of `ORIENT_LEFT_TO_RIGHT`, `ORIENT_RIGHT_TO_LEFT`, `ORIENT_TOP_TO_BOTTOM`, or `ORIENT_BOTTOM_TO_TOP`.

---

setScrollPosition(int)

```
public void setScrollPosition(int scroll)
```

Set the scroll position of the `HListGroup`. The scroll position determines the first `HListElement` to be drawn when the `HListGroupLook` lays out the list. An IllegalArgumentException shall be thrown if scroll is not a valid scroll position.

It is an implementation option for `HListGroupLook` to draw elements before this first one, in order to fill the available space.

Returns:
the current scroll position, or 0 if no content is set.

---

setSelectionMode(boolean)

```
public void setSelectionMode(boolean adjust)
```

Set the selection mode for this `HListGroup`.

This method is provided for the convenience of component implementors. Interoperable applications shall not call this method. It cannot be made protected because interfaces cannot have protected methods.

Specified By:
`setSelectionMode(boolean)` in interface `HSelectionInputPreferred`

Parameters:
`edit` - true to switch this component into selection mode, false otherwise.

See Also:
`getSelectionMode()`

---

setSelectionSound(HSound)

```
public void setSelectionSound(HSound sound)
```

Associate a sound to be played when the selection is modified. The sound is played irrespective of whether an `HItemEvent` is sent to one or more listeners.

Specified By:
`setSelectionSound(HSound)` in interface `HItemValue`

Parameters:
`sound` - the sound to be played, when the selection is modified. If sound content is already set, the original content is replaced. To remove the sound specify a null `HSound`.

org.havi.ui
HListGroupLook

Syntax

```
public class HListGroupLook implements HAdjustableLook

java.lang.Object
  |
  +--org.havi.ui.HListGroupLook
```

All Implemented Interfaces:

java.lang.Cloneable, HAdjustableLook, HLook

Description

The HListGroupLook class is used by the HListGroup component to display both the HListGroup itself (potentially including a scrollbar component) and graphical or textual list content held on the HListGroup . This look will be provided by the platform and the exact way in which it is rendered will be platform dependent.

The HListGroupLook class draws the HListGroup and any look-specific borders around the component, and then renders the content set on the HListGroup . It uses the getListContent() method to determine the content to render. The content of the HListGroup does not depend on the interaction state. Borders are not drawn around the content.

HListGroupLook should use the following properties of HListGroup to lay out and render the HListElement content:

Item	Method	Purpose
Orientation	getOrientation()	direction to lay out elements
Content	getListContent()	elements to display
Scroll position	getScrollPosition()	first element to draw
Selection	isItemSelected(int)	mark an element as selected
Current item	getCurrentItem()	highlight an element

HListGroupLook should draw a scrollbar as necessary when there are more HListElement than can be displayed. It is an implementation option to leave border space between each element. The insets used for the element borders can be retrieved using getElementInsets()

Implementations of HListGroupLook should use the appropriate methods on HListGroup to determine which scaling and alignment modes to use when rendering content. See the class description for HLook for more details.

HListGroupLook may support scalable graphical content. As a minimum, all implementations must support the RESIZE_NONE scaling mode for graphical content, and all alignment modes for text content. However, Note that HListGroupLook behaves slightly differently from other HAVi HLook classes, as follows.

- Where supported, scaling applies to the icon (graphical content) of each HListElement , based on the area

allocated to that HListElement rather than the entire area of the HListGroup .
- Alignment mode applies to the content of the HListElement within the area allocated to that HListElement rather than the entire area of the HListGroup .

Note that the results of applying the VALIGN_JUSTIFY and HALIGN_JUSTIFY alignment modes to graphical content are defined to identical to VALIGN_CENTER and HALIGN_CENTER modes respectively, as justification is meaningless in this context.

This is the default look that is used by HListGroup . The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
Element insets	null	getElementInsets()	---

See Also:

HListGroup, HListElement, HVisible, HLook, HDefaultTextLayoutManager

Constructors

HListGroupLook()

```
public HListGroupLook()
```

Creates a HListGroupLook object. See the class description for details of constructor parameters and default values.

Methods

getElementInsets()

```
public java.awt.Insets getElementInsets()
```

Retrieve the element insets for this instance of HListGroupLook . The element insets control the amount of empty space left between the elements and the border of the HListGroup component.

Returns:

the element insets, or null if insets are not used by this implementation of HListGroupLook .

getInsets(HVisible)

```
public java.awt.Insets getInsets(HVisible visible)
```

Determines the insets of this HLook , which indicate the size of the border. This area is reserved for the HLook to use for drawing borders around the associated HVisible .

Specified By:
getInsets(HVisible) in interface HLook

Parameters:
hvisible - HVisible to which this HLook is attached.

Returns:
the insets of this HLook .

---

getMaximumSize(HVisible)

```
public java.awt.Dimension getMaximumSize(HVisible hvisible)
```

Gets the maximum size of the HVisible component when drawn with this HLook .

This size may be determined in several ways depending on the information available to the look. These steps are performed in order and the first available result is returned. For the purposes of this algorithm HLook classes that do not use content (e.g. HRangeLook) are treated as if no content was present.

The extra space required for border decoration can be determined from the getInsets(HVisible) method.

1. If the HLook supports the scaling of its content (e.g. an HGraphicLook) then the return value is the current size of the HVisible (as returned by HVisible#getSize).
2. If the HLook does not support scaling of content or no scaling is requested, and content is set then the return value is the size of the largest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
3. If there is no content set then a maximum size of [Short.MAX_VALUE, Short.MAX_VALUE] is returned as a Dimension.

Specified By:
getMaximumSize(HVisible) in interface HLook

Parameters:
hvisible - HVisible to which this HLook is attached.

Returns:
A dimension object indicating this HLook maximum size.

See Also:
getMaximumSize()

---

getMinimumSize(HVisible)

```
public java.awt.Dimension getMinimumSize(HVisible hvisible)
```

Gets the minimum size of the HVisible component when drawn with this HLook .

This size may be determined in several ways depending on the information available to the look. These steps are performed in order and the first available result is returned. For the purposes of this algorithm HLook classes that do not use content (e.g. HRangeLook) are treated as if no content was present.

The extra space required for border decoration can be determined from the getInsets(HVisible) method.

1. If the HLook supports the scaling of its content (e.g. an HGraphicLook) and content is set then the return value is the size of the smallest piece of content plus any additional dimensions that the HLook requires for border decoration etc.

2. If the HLook does not support scaling of content or no scaling is requested, *and* content is set then the return value is the size of the largest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
3. If no content is available but a default preferred size has been set using setDefaultSize(Dimension) has been called to set then the return value is this value (as obtained with getDefaultSize()) plus any additional dimensions that the HLook requires for border decoration etc.
4. If there is no content or default size set then the return value is an implementation-specific minimum size plus any additional dimensions that the HLook requires for border decoration etc.

Specified By:
getMinimumSize(HVisible) in interface HLook

Parameters:
hvisible - HVisible to which this HLook is attached.

Returns:
A dimension object indicating this HLook minimum size.

See Also:
getMinimumSize()

---

getNumVisible(HVisible)

```
public int getNumVisible(HVisible visible)
```

Retrieve the number of visible elements for the specified component.

This method should determine the number of list elements that would be completely visible should the specified component be drawn using this look.

Parameters:
visible - the HVisible to obtain the number of visible elements for.

Returns:
the number of visible elements.

---

getPreferredSize(HVisible)

```
public java.awt.Dimension getPreferredSize(HVisible hvisible)
```

Gets the preferred size of the HVisible component when drawn with this HLook .

This size may be determined in several ways depending on the information available to the look. These steps are performed in order and the first available result is returned. For the purposes of this algorithm HLook classes that do not use content (e.g. HRangeLook) are treated as if no content was present.

The extra space required for border decoration can be determined from the getInsets(HVisible) method.

1. If a default preferred size has been set for this HVisible (using setDefaultSize(Dimension)) then the return value is this size (obtained with getDefaultSize()) plus any additional dimensions that the HLook requires for border decoration etc.
2. If this HLook does not support scaling of content or no scaling is requested, and content is present then the return value is the size of the largest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
3. If this HLook supports the scaling of its content (e.g. an HGraphicLook) and content is set then the return value is the current size of the HVisible as returned by getSize).
4. If there is no content and no default size set then the return value is the current size of the HVisible as

returned by `getSize`).

Specified By:
`getPreferredSize(HVisible)` in interface `HLook`

Parameters:
`hvisible` - `HVisible` to which this `HLook` is attached.

Returns:
A dimension object indicating the preferred size of the `HVisible` when drawn with this `HLook` .

See Also:
`getPreferredSize()`, `setDefaultSize(Dimension)`

---

hitTest(HAdjustmentValue, Point)

```
public int hitTest(HAdjustmentValue component, java.awt.Point pt)
```

Returns a value which indicates the pointer click position in the on-screen representation of the adjustable component. Note that it is a valid implementation option to always return `ADJUST_NONE` .

Specified By:
`hitTest(HAdjustmentValue, Point)` in interface `HAdjustableLook`

Parameters:
`component` - the `HAdjustmentValue` component for which the hit position should be calculated.

`pt` - the pointer click point.

Returns:
one of `ADJUST_NONE` , `ADJUST_BUTTON_LESS` , `ADJUST_PAGE_LESS` , `ADJUST_THUMB` , `ADJUST_PAGE_MORE` or `ADJUST_BUTTON_MORE` .

---

isOpaque(HVisible)

```
public boolean isOpaque(HVisible visible)
```

Returns true if the entire painted area of the `HVisible` when using this look is fully opaque, i.e. the `showLook(Graphics, HVisible, int)` method guarantees that all pixels are painted in an opaque Color.

The default value is implementation specific and depends on the background painting mode of the given `HVisible` . The consequences of an invalid overridden value are implementation specific.

Specified By:
`isOpaque(HVisible)` in interface `HLook`

Parameters:
`visible` - the visible to test

Returns:
true if all the pixels with the java.awt.Component#getBounds method of an `HVisible` using this look are fully opaque, i.e. the `showLook(Graphics, HVisible, int)` method guarantees that all pixels are painted in an opaque Color, otherwise false.

---

showLook(Graphics, HVisible, int)

```
public void showLook(java.awt.Graphics g, HVisible visible, int state)
```

The `showLook(Graphics, HVisible, int)` method is responsible for repainting the entire `HVisible` component, (including any content set on the component, and the component background), subject to the clipRect of the Graphics object passed to it.

The showLook(Graphics, HVisible, int) method should not modify the clipRect of the Graphics object that is passed to it.

For looks which draw content (e.g. HTextLook, HGraphicLook and HAnimateLook), if no content is associated with the component, the showLook(Graphics, HVisible, int) method paints the component with its current background Color according to the setBackgroundMode(int) method of HVisible and draws any (implementation-specific) borders. Note that by default the background mode is set so as to **not** paint a background. Furthermore on platforms which support transparent colors the background Color may be partially or completely transparent.

Any resources **explicitly** associated with an HLook should be loaded by the HLook during its creation, etc., or via its setXXX() methods. Note that the "standard" looks don't load content by default.

This method is called from the paint(Graphics) method of HVisible and must never be called from elsewhere. Components wishing to redraw themselves should call their repaint method in the usual way.

Specified By:
showLook(Graphics, HVisible, int) in interface HLook

Parameters:
g - the graphics context.

visible - the visible.

state - the state parameter indicates the state of the visible, allowing the look to render the appropriate content for that state. Note that some components (e.g. HStaticRange, HRange, HRangeValue) do not use state-based content).

---

widgetChanged(HVisible, HChangeData[])

```
public void widgetChanged(HVisible visible, HChangeData[] changes)
```

Called by the HVisible whenever its content, state, or any other data changes. See the class description of HVisible for more information about the changes parameter.

The implementation of this method should work out which graphical areas of the HVisible have changed and make any relevant calls to trigger the repainting of those areas.

A minimum implementation of this method could simply call

```
visible.repaint()
```

Specified By:
widgetChanged(HVisible, HChangeData[]) in interface HLook

Parameters:
visible - the HVisible which has changed

changes - an array containing hint data and associated hint objects. If this argument is null a full repaint will be triggered.

org.havi.ui
HLook

Syntax
```
public interface HLook extends java.lang.Cloneable
```

All Known Subinterfaces:
`HAdjustableLook`

All Superinterfaces:
java.lang.Cloneable

All Known Implementing Classes:
`HAnimateLook`, `HGraphicLook`, `HTextLook`, `HSinglelineEntryLook`

Description
The `HLook` interface defines the "look" of a component and may be regarded as a mechanism to allow a "pluggable" paint method to be attached to the component. Instead of having to subclass the entire component to change its look, it is possible to simply implement an `HLook` that will render the component "look" and then associate this `HLook` implementation with the component.

Borders

An implementation of `HLook` will also include code to draw implementation-specific borders. The application or component can query the reserved space for an `HLook` with the `getInsets(HVisible)` method.

Since the border area is included in the overall size of the component, the border effectively constrains the area available for rendering content to the rectangle which has an upper-left corner location of `(insets.left, insets.top)`, and has a size of `width - (insets.left + insets.right)` by `height - (insets.top + insets.bottom)`.

Invocation Mechanism

The `showLook(Graphics, HVisible, int)` method of the `HLook` interface will be called by the havi.ui framework in response to the paint method of the `HVisible` being called by the AWT lightweight component framework. Applications should simply invoke the component repaint method as in normal AWT, rather than calling the `showLook(Graphics, HVisible, int)` method directly.

The conditions under which the `showLook(Graphics, HVisible, int)` method shall be invoked include the following:

- If the class implements one of the following interfaces, the `showLook(Graphics, HVisible, int)` method shall be invoked when the trigger events specified in the table below are processed:

Interface	Trigger Events
HNavigable	HFocusEvent
HActionable	HFocusEvent, HActionEvent
HSwitchable	HFocusEvent, HActionEvent

HAdjustmentValue	HFocusEvent, HAdjustmentEvent
HItemValue	HFocusEvent, HItemEvent
HTextValue	HFocusEvent, HTextEvent

- If the implementing class is an `HVisible`, then the `showLook(Graphics, HVisible, int)` method shall be invoked when content is set on that `HVisible`.
- Content Rendering

Some looks make use of content stored on an associated `HVisible`. These looks are:

- `HAnimateLook` - for animated graphical content
- `HGraphicLook` - for static graphical content
- `HTextLook` - for static textual content
- `HSinglelineEntryLook` - for single line text entry content
- `HMultilineEntryLook` - for multiline text entry content
- `HListGroupLook` - for list element content

Some of these looks may support the scaling and alignment of their content as an implementation option. The scaling and alignment modes supported are specified in the class description of `HVisible`. The table below details which features the content-based platform looks should support:

HLook	Scaling	Alignment
HAnimateLook	Optional	Mandatory
HGraphicLook	Optional	Mandatory
HListGroupLook	Optional	Mandatory
HTextLook	Not used	Mandatory
HSinglelineEntryLook	Not used	Not used
HMultilineEntryLook	Not used	Not used

Where scaling support is optional all implementations must as a minimum support the `RESIZE_NONE` scaling mode. Platforms are *not* required to support scaling of textual content by default.

Looks should use the `getHorizontalAlignment()` and `getVerticalAlignment()` methods to retrieve the current alignment modes, and the `getResizeMode()` method to determine the active scaling mode, where supported. However, note that HAVi platform looks which render text content using the `HDefaultTextLayoutManager` class shall delegate the alignment of text content to the layout manager.

Rendering Hints

HLook provides a method, `widgetChanged(HVisible, HChangeData[])` which can be called by an `HVisible` with one or more hints to inform the look that something has changed. This method provides information to the look about what has changed, which allows smarter repainting than having the HVisible simply call its `repaint` method. The hint constants are defined on `HVisible`. See the class definition for `HVisible` for more information.

Private Data

Implementations of HLook may store private data on each instance of an HVisible to optimize the drawing of that component. However, this is an implementation option. Furthermore such data may be invalidated by another part of the system, for example if setLook(HLook) is called on HVisible. Therefore if this mechanism is used by implementations of HLook those implementations *must* be capable of regenerating such data on the fly, according to the current state of the HVisible.

Platform Looks

The HAVi UI provides a number of classes implementing the HLook interface. Applications wishing to provide their own HLook may directly implement this interface or may subclass those provided by the platform.

Default Behavior

Unless already specified in a particular HLook, implementations of HLook should use:

- the foreground color of each associated HVisible (using the java.awt.Component method getForeground) to determine the Color to render both the content and border (as necessary)
- the background color of each associated HVisible (using the java.awt.Component method getBackground) to determine the Color used to render a rectangular area to fill the component and erase any previous content, as specified by the current background drawing mode for that component - see setBackgroundMode(int) on HVisible.
- the current alignment mode of each associated HVisible (using getHorizontalAlignment() and getVerticalAlignment()) to determine how to align content.
- the current scaling mode of each associated HVisible (using to getResizeMode()) to determine how to scale content.

See Also:

setLook(HLook), setLookData(Object, Object), paint(Graphics), setBackgroundMode(int), setHorizontalAlignment(int), setVerticalAlignment(int), setResizeMode(int), HTextLook, HGraphicLook, HAnimateLook, HRangeLook, HSinglelineEntryLook, HMultilineEntryLook

Methods

---

getInsets(HVisible)

```
public java.awt.Insets getInsets(HVisible visible)
```

Determines the insets of this HLook, which indicate the size of the border. This area is reserved for the HLook to use for drawing borders around the associated HVisible.

Parameters:

hvisible - HVisible to which this HLook is attached.

Returns:

the insets of this HLook.

---

getMaximumSize(HVisible)

```
public java.awt.Dimension getMaximumSize(HVisible hvisible)
```

Gets the maximum size of the HVisible component when drawn with this HLook.

This size may be determined in several ways depending on the information available to the look. These steps are performed in order and the first available result is returned. For the purposes of this algorithm HLook classes that do not use content (e.g. HRangeLook) are treated as if no content was present.

The extra space required for border decoration can be determined from the `getInsets(HVisible)` method.

1. If the `HLook` supports the scaling of its content (e.g. an `HGraphicLook`) then the return value is the current size of the `HVisible` (as returned by `HVisible#getSize`).
2. If the `HLook` does not support scaling of content or no scaling is requested, and content is set then the return value is the size of the largest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
3. If there is no content set then a maximum size of `[ Short.MAX_VALUE, Short.MAX_VALUE]` is returned as a Dimension.

Parameters:
`hvisible` - `HVisible` to which this `HLook` is attached.

Returns:
A dimension object indicating this `HLook` maximum size.

See Also:
`getMaximumSize()`

---

getMinimumSize(HVisible)

```
public java.awt.Dimension getMinimumSize(HVisible hvisible)
```

Gets the minimum size of the `HVisible` component when drawn with this `HLook`.

This size may be determined in several ways depending on the information available to the look. These steps are performed in order and the first available result is returned. For the purposes of this algorithm `HLook` classes that do not use content (e.g. `HRangeLook`) are treated as if no content was present.

The extra space required for border decoration can be determined from the `getInsets(HVisible)` method.

1. If the `HLook` supports the scaling of its content (e.g. an `HGraphicLook`) and content is set then the return value is the size of the smallest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
2. If the `HLook` does not support scaling of content or no scaling is requested, *and* content is set then the return value is the size of the largest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
3. If no content is available but a default preferred size has been set using `setDefaultSize(Dimension)` has been called to set then the return value is this value (as obtained with `getDefaultSize()`) plus any additional dimensions that the HLook requires for border decoration etc.
4. If there is no content or default size set then the return value is an implementation-specific minimum size plus any additional dimensions that the HLook requires for border decoration etc.

Parameters:
`hvisible` - `HVisible` to which this `HLook` is attached.

Returns:
A dimension object indicating this `HLook` minimum size.

See Also:
`getMinimumSize()`

---

getPreferredSize(HVisible)

```
public java.awt.Dimension getPreferredSize(HVisible hvisible)
```

Gets the preferred size of the HVisible component when drawn with this HLook .

This size may be determined in several ways depending on the information available to the look. These steps are performed in order and the first available result is returned. For the purposes of this algorithm HLook classes that do not use content (e.g. HRangeLook) are treated as if no content was present.

The extra space required for border decoration can be determined from the getInsets(HVisible) method.

1. If a default preferred size has been set for this HVisible (using setDefaultSize(Dimension)) then the return value is this size (obtained with getDefaultSize()) plus any additional dimensions that the HLook requires for border decoration etc.
2. If this HLook does not support scaling of content or no scaling is requested, and content is present then the return value is the size of the largest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
3. If this HLook supports the scaling of its content (e.g. an HGraphicLook) and content is set then the return value is the current size of the HVisible as returned by getSize).
4. If there is no content and no default size set then the return value is the current size of the HVisible as returned by getSize).

Parameters:
hvisible - HVisible to which this HLook is attached.

Returns:
A dimension object indicating the preferred size of the HVisible when drawn with this HLook .

See Also:
getPreferredSize(), setDefaultSize(Dimension)

---

isOpaque(HVisible)

```
public boolean isOpaque(HVisible visible)
```

Returns true if the entire painted area of the HVisible when using this look is fully opaque, i.e. the showLook(Graphics, HVisible, int) method guarantees that all pixels are painted in an opaque Color.

The default value is implementation specific and depends on the background painting mode of the given HVisible . The consequences of an invalid overridden value are implementation specific.

Parameters:
visible - the visible to test

Returns:
true if all the pixels with the java.awt.Component#getBounds method of an HVisible using this look are fully opaque, i.e. the showLook(Graphics, HVisible, int) method guarantees that all pixels are painted in an opaque Color, otherwise false.

---

showLook(Graphics, HVisible, int)

```
public void showLook(java.awt.Graphics g, HVisible visible, int state)
```

The showLook(Graphics, HVisible, int) method is responsible for repainting the entire HVisible component, (including any content set on the component, and the component background), subject to the clipRect of the Graphics object passed to it.

The showLook(Graphics, HVisible, int) method should not modify the clipRect of the Graphics object that is passed to it.

For looks which draw content (e.g. `HTextLook`, `HGraphicLook` and `HAnimateLook`), if no content is associated with the component, the `showLook(Graphics, HVisible, int)` method paints the component with its current background `Color` according to the `setBackgroundMode(int)` method of `HVisible` and draws any (implementation-specific) borders. Note that by default the background mode is set so as to **not** paint a background. Furthermore on platforms which support transparent colors the background `Color` may be partially or completely transparent.

Any resources **explicitly** associated with an `HLook` should be loaded by the `HLook` during its creation, etc., or via its setXXX() methods. Note that the "standard" looks don't load content by default.

This method is called from the `paint(Graphics)` method of `HVisible` and must never be called from elsewhere. Components wishing to redraw themselves should call their repaint method in the usual way.

Parameters:

`g` - the graphics context.

`visible` - the visible.

`state` - the state parameter indicates the state of the visible, allowing the look to render the appropriate content for that state. Note that some components (e.g. HStaticRange, HRange, HRangeValue) do not use state-based content).

---

widgetChanged(HVisible, HChangeData[])

```
public void widgetChanged(HVisible visible, HChangeData[] changes)
```

Called by the `HVisible` whenever its content, state, or any other data changes. See the class description of `HVisible` for more information about the `changes` parameter.

The implementation of this method should work out which graphical areas of the `HVisible` have changed and make any relevant calls to trigger the repainting of those areas.

A minimum implementation of this method could simply call

```
visible.repaint()
```

Parameters:

`visible` - the `HVisible` which has changed

`changes` - an array containing hint data and associated hint objects. If this argument is `null` a full repaint will be triggered.

org.havi.ui
HMatte

Syntax
```
public interface HMatte
```

All Known Implementing Classes:
HImageMatte, HFlatMatte, HFlatEffectMatte, HImageEffectMatte

Description
HMatte is the base interface for all matte classes.

Where pixels in a component already have an alpha value (e.g. from an image), the alpha value from the component and the alpha value from the HMatte are multiplied together to obtain the actual alpha value to be used for that pixel.

The final displayed value of the component and its HMatte is obviously subject to the capabilities of the underlying hardware platform.

org.havi.ui
HMatteException

Syntax
```
public class HMatteException extends HUIException

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--HUIException
                    |
                    +--org.havi.ui.HMatteException
```

All Implemented Interfaces:
java.io.Serializable

Description
An `HMatteException` is an exception that is thrown when a Component is unable to support the desired `HMatte` effect. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
message	Message explaining why the exception was thrown	null	-	java.lang.Throwable#getMessage

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method

None.

See Also:
`HMatteLayer`

Constructors

HMatteException()
```
public HMatteException()
```
Creates an HMatteException object. See the class description for details of constructor parameters and default values.

HMatteException(String)

```
public HMatteException(java.lang.String message)
```

Creates an HMatteException object with a specified reason string.

Parameters:

`message` - the reason why the exception was raised

org.havi.ui
HMatteLayer

Syntax
```
public interface HMatteLayer
```

All Known Implementing Classes:
HComponent, HContainer

Description
This HMatteLayer interface enables the presentation of components, together with an associated HMatte , for matte compositing.

See Also:
HMatte

Methods

---

getMatte()

```
public HMatte getMatte()
```

Get any HMatte currently associated with this component.

Returns:
the HMatte currently associated with this component or null if there is no associated matte.

---

setMatte(HMatte)

```
public void setMatte(HMatte m)
```

Applies an HMatte to this component, for matte compositing. Any existing animated matte must be stopped before this method is called or an HMatteException will be thrown.

Parameters:
m - The HMatte to be applied to this component -- note that only one matte may be associated with the component, thus any previous matte will be replaced. If m is null, then any matte associated with the component is removed and further calls to getMatte() shall return null. The component shall behave as if it had a fully opaque HFlatMatte associated with it (i.e an HFlatMatte with the default value of 1.0.)

Throws:
HMatteException - if the HMatte cannot be associated with the component. This can occur:

- if the specific matte type is not supported
- if the platform does not support any matte type
- if the component is associated with an already running HFlatEffectMatte or HImageEffectMatte . The exception is thrown even if m is null.

See Also:
HMatte

org.havi.ui
HMultilineEntry

Syntax

```
public class HMultilineEntry extends HSinglelineEntry
```

```
java.lang.Object
  |
  +--java.awt.Component
        |
        +--HComponent
              |
              +--HVisible
                    |
                    +--HSinglelineEntry
                          |
                          +--org.havi.ui.HMultilineEntry
```

All Implemented Interfaces:

HKeyboardInputPreferred, HMatteLayer, HNavigable, HNavigationInputPreferred, HState, HTextValue, java.awt.image.ImageObserver, java.awt.MenuContainer, java.io.Serializable, TestOpacity

Description

The HMultilineEntry is a user interface component used to receive multiple lines of alphanumeric entry from the user. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
x	x-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
y	y-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
width	width of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
height	height of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
text	The text within this HMultilineEntry , to be used as the displayed and editable content for all states.	null	setTextContent(String, int)	getTextContent(int)

maxChars	The maximum number of characters (per line) allowed in this HMultilineEntry.	16 characters	setMaxCharsPerLine(int)	getMaxCharsPerLine()
font	The font to be used for this component.	---	java.awt.Component#setFont.	java.awt.Component#getFont.
color	The color to be used for this component.	---	java.awt.Component#setForeground.	java.awt.Component#getForeground.

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
Associated matte (HMatte).	none (i.e. getMatte() returns null)	setMatte(HMatte)	getMatte()
The text layout manager responsible for text formatting.	An HDefaultTextLayoutManager object.	setTextLayoutManager(HTextLayoutManager)	getTextLayoutManager()
The background painting mode	NO_BACKGROUND_FILL	setBackgroundMode(int)	getBackgroundMode()
The default preferred size	not set (i.e. null) unless specified by width and height parameters	setDefaultSize(Dimension)	getDefaultSize()
The horizontal content alignment	HALIGN_CENTER	setHorizontalAlignment(int)	getHorizontalAlignment()
The vertical content alignment	VALIGN_CENTER	setVerticalAlignment(int)	getVerticalAlignment()
The content scaling mode	RESIZE_NONE	setResizeMode(int)	getResizeMode()
Caret position	At the end of the current text string	setCaretCharPosition(int)	getCaretCharPosition()
Input type	INPUT_ANY	setType(int)	getType()
Customized input range	As for INPUT_ALPHANUMERIC	setValidInput(char[])	getValidInput()
Password protection (the echo character)	Entry is "clear", i.e. not password protected.	setEchoChar(char)	getEchoChar() and echoCharIsSet()
The default "look" for this class.	A platform specific HMultilineEntryLook	setDefaultLook(HMultilineEntryLook)	getDefaultLook()

The "look" for this object.	The HMultilineEntryLook returned from HMultilineEntry.getDefaultLook when this object was created.	setLook(HLook)	getLook()
The gain focus sound.	null	setGainFocusSound(HSound)	getGainFocusSound()
The lose focus sound.	null	setLoseFocusSound(HSound)	getLoseFocusSound()

Constructors

HMultilineEntry()

```
public HMultilineEntry()
```

Creates an HMultilineEntry object. See the class description for details of constructor parameters and default values.

HMultilineEntry(int)

```
public HMultilineEntry(int maxChars)
```

Creates an HMultilineEntry object. See the class description for details of constructor parameters and default values.

HMultilineEntry(int, int, int, int, int)

```
public HMultilineEntry(int x, int y, int width, int height, int maxChars)
```

Creates an HMultilineEntry object. See the class description for details of constructor parameters and default values.

HMultilineEntry(String, int, Font, Color)

```
public HMultilineEntry(java.lang.String text, int maxChars, java.awt.Font font,
            java.awt.Color color)
```

Creates an HMultilineEntry object. See the class description for details of constructor parameters and default values.

HMultilineEntry(String, int, int, int, int, int, Font, Color)

```
public HMultilineEntry(java.lang.String text, int x, int y, int width, int height,
            int maxChars, java.awt.Font font, java.awt.Color color)
```

Creates an HMultilineEntry object. See the class description for details of constructor parameters and default values.

Methods

---

caretNextLine()

```
public void caretNextLine()
```

Move the caret to the same column position on the next line. If the caret would be past the end of the text on the line the new caret position will be at the end of the line.

---

caretPreviousLine()

```
public void caretPreviousLine()
```

Move the caret to the same column position on the previous line. If the caret would be past the end of the text on the line the new caret position will be at the end of the line.

---

getDefaultLook()

```
public static HSinglelineEntryLook getDefaultLook()
```

Returns the currently set default look for `HMultilineEntry` components.

Returns:

The `HMultilineEntryLook` that is used by default when creating a new `HMultilineEntry` component, cast to an `HSinglelineEntryLook`.

---

setDefaultLook(HMultilineEntryLook)

```
public static void setDefaultLook(HMultilineEntryLook look)
```

Sets the default look for further `HMultilineEntry` Components.

Parameters:

`look` - The look that will be used by default when creating a new `HMultilineEntry` component. Note that this parameter may be null, in which case newly created components shall not draw themselves until a non-null look is set using the `setLook(HLook)` method.

---

setLook(HLook)

```
public void setLook(HLook hlook)
```

Sets the `HLook` for this component.

Overrides:

`setLook(HLook)` in class `HSinglelineEntry`

Parameters:

`hlook` - The `HLook` that is to be used for this component.

Throws:

`HInvalidLookException` - If the Look is not an `HMultilineEntryLook`.

org.havi.ui
HMultilineEntryLook

Syntax
```
public class HMultilineEntryLook extends HSinglelineEntryLook

java.lang.Object
  |
  +--HSinglelineEntryLook
        |
        +--org.havi.ui.HMultilineEntryLook
```

All Implemented Interfaces:
java.lang.Cloneable, HLook

Description
The HMultilineEntryLook class is used by the HMultilineEntry component to display the entering of text. This look will be provided by the platform and the exact way in which it is rendered will be platform dependent.

The HMultilineEntryLook class draws the content set on an HMultilineEntry. It uses the getTextContent(int) method to determine the content to render. The interaction state of the HMultilineEntry is ignored.

This is the default look that is used by HMultilineEntry and its subclasses. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

See Also:
HMultilineEntry

Constructors

HMultilineEntryLook()
```
public HMultilineEntryLook()
```
Creates a HMultilineEntryLook object. See the class description for details of constructor parameters and default values.

Methods

---

getCaretCharPositionForLine(HVisible, int)

```
public int getCaretCharPositionForLine(HVisible visible, int line)
```

Returns the character position of the caret within the content string if it were to be moved vertically to the given 'line'. A line is identified by its first character as obtained from the getSoftLineBreakPositions() method. If an invalid line is specified an IllegalArgumentException is thrown If it cannot be moved the nearest position should be returned

Parameters:

`visible` - a multiline text entry component.

Note that if this component is not actually using this `HLook` to display itself the return value of this method will probably be wrong. Application authors should take care to only call this method with components which are using this instance of the `HMultilineEntryLook`.

`line` - the line number for which the caret position is requested

Returns:

the caret position (as defined in `getCaretCharPosition()`) to move the caret to if it were moved to this line.

See Also:

`getCaretCharPosition()`, `getSoftLineBreakPositions(HVisible)`

---

getCaretPositionNextLine(HVisible)

```
public int getCaretPositionNextLine(HVisible visible)
```

Returns the character position of the caret within the content string if it were to be moved down one line.

Parameters:

`visible` - a multiline text entry component.

Note that if this component is not actually using this `HLook` to display itself the return value of this method will probably be wrong. Application authors should take care to only call this method with components which are using this instance of the `HMultilineEntryLook`.

Returns:

the caret position (as defined in `getCaretCharPosition()`) to move the caret to if it were moved down one line, or the nearest position if this is not possible.

---

getCaretPositionPreviousLine(HVisible)

```
public int getCaretPositionPreviousLine(HVisible visible)
```

Returns the character position of the caret within the content string if it were to be moved up one line.

Parameters:

`visible` - a multiline text entry component.

Note that if this component is not actually using this `HLook` to display itself the return value of this method will probably be wrong. Application authors should take care to only call this method with components which are using this instance of the `HMultilineEntryLook`.

Returns:

the caret position (as defined in `getCaretCharPosition()`) to move the caret to if it were moved up one line, or the nearest position if this is not possible.

getInsets(HVisible)

```
public java.awt.Insets getInsets(HVisible visible)
```

Determines the insets of this HLook , which indicate the size of the border. This area is reserved for the HLook to use for drawing borders around the associated HVisible .

Overrides:
getInsets(HVisible) in class HSinglelineEntryLook

Parameters:
hvisible - HVisible to which this HLook is attached.

Returns:
the insets of this HLook .

getMaximumSize(HVisible)

```
public java.awt.Dimension getMaximumSize(HVisible hvisible)
```

Gets the maximum size of the HVisible component when drawn with this HLook .

This size may be determined in several ways depending on the information available to the look. These steps are performed in order and the first available result is returned. For the purposes of this algorithm HLook classes that do not use content (e.g. HRangeLook) are treated as if no content was present.

The extra space required for border decoration can be determined from the getInsets(HVisible) method.

1. If the HLook supports the scaling of its content (e.g. an HGraphicLook) then the return value is the current size of the HVisible (as returned by HVisible#getSize).
2. If the HLook does not support scaling of content or no scaling is requested, and content is set then the return value is the size of the largest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
3. If there is no content set then a maximum size of [Short.MAX_VALUE, Short.MAX_VALUE] is returned as a Dimension.

Overrides:
getMaximumSize(HVisible) in class HSinglelineEntryLook

Parameters:
hvisible - HVisible to which this HLook is attached.

Returns:
A dimension object indicating this HLook maximum size.

See Also:
getMaximumSize()

getMinimumSize(HVisible)

```
public java.awt.Dimension getMinimumSize(HVisible hvisible)
```

Gets the minimum size of the HVisible component when drawn with this HLook .

This size may be determined in several ways depending on the information available to the look. These steps are performed in order and the first available result is returned. For the purposes of this algorithm HLook classes that do not use content (e.g. HRangeLook) are treated as if no content was present.

The extra space required for border decoration can be determined from the getInsets(HVisible) method.

1. If the HLook supports the scaling of its content (e.g. an HGraphicLook) and content is set then the return value is the size of the smallest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
2. If the HLook does not support scaling of content or no scaling is requested, *and* content is set then the return value is the size of the largest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
3. If no content is available but a default preferred size has been set using setDefaultSize(Dimension) has been called to set then the return value is this value (as obtained with getDefaultSize()) plus any additional dimensions that the HLook requires for border decoration etc.
4. If there is no content or default size set then the return value is an implementation-specific minimum size plus any additional dimensions that the HLook requires for border decoration etc.

Overrides:
getMinimumSize(HVisible) in class HSinglelineEntryLook

Parameters:
hvisible - HVisible to which this HLook is attached.

Returns:
A dimension object indicating this HLook minimum size.

See Also:
getMinimumSize()

---

getPreferredSize(HVisible)

```
public java.awt.Dimension getPreferredSize(HVisible hvisible)
```

Gets the preferred size of the HVisible component when drawn with this HLook .

This size may be determined in several ways depending on the information available to the look. These steps are performed in order and the first available result is returned. For the purposes of this algorithm HLook classes that do not use content (e.g. HRangeLook) are treated as if no content was present.

The extra space required for border decoration can be determined from the getInsets(HVisible) method.

1. If a default preferred size has been set for this HVisible (using setDefaultSize(Dimension)) then the return value is this size (obtained with getDefaultSize()) plus any additional dimensions that the HLook requires for border decoration etc.
2. If this HLook does not support scaling of content or no scaling is requested, and content is present then the return value is the size of the largest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
3. If this HLook supports the scaling of its content (e.g. an HGraphicLook) and content is set then the return value is the current size of the HVisible as returned by getSize).
4. If there is no content and no default size set then the return value is the current size of the HVisible as returned by getSize).

Overrides:
getPreferredSize(HVisible) in class HSinglelineEntryLook

Parameters:
hvisible - HVisible to which this HLook is attached.

Returns:
A dimension object indicating the preferred size of the HVisible when drawn with this HLook .

See Also:

getPreferredSize(), setDefaultSize(Dimension)

---

getSoftLineBreakPositions(HVisible)

```
public int[] getSoftLineBreakPositions(HVisible visible)
```

Returns the positions within the content string of all those characters that start on a new 'line' (including those following \n), in order from the first line to the last, including the line starting at 0.

Parameters:

visible - a multiline text entry component.

Note that if this component is not actually using this HLook to display itself the return value of this method will probably be wrong. Application authors should take care to only call this method with components which are using this instance of the HMultilineEntryLook.

Returns:

the positions of 'soft line breaks' introduced by the HLook.

---

getVisibleSoftLineBreakPositions(HVisible)

```
public int[] getVisibleSoftLineBreakPositions(HVisible visible)
```

Returns the starting positions of lines currently shown within the HVisible. Lines are identified by the positions of those characters that start on a new 'line' (including those following \n), in order, from the first visible line to the last. This method can be used to calculate the number of visible lines currently shown in the look as well as the line shown at the top of the visible window.

Parameters:

visible - a multiline text entry component.

Returns:

the starting positions of the lines currently shown within the HVisible.

---

isOpaque(HVisible)

```
public boolean isOpaque(HVisible visible)
```

Returns true if the entire painted area of the HVisible when using this look is fully opaque, i.e. the showLook(Graphics, HVisible, int) method guarantees that all pixels are painted in an opaque Color.

The default value is implementation specific and depends on the background painting mode of the given HVisible. The consequences of an invalid overridden value are implementation specific.

Overrides:

isOpaque(HVisible) in class HSinglelineEntryLook

Parameters:

visible - the visible to test

Returns:

true if all the pixels with the java.awt.Component#getBounds method of an HVisible using this look are fully opaque, i.e. the showLook(Graphics, HVisible, int) method guarantees that all pixels are painted in an opaque Color, otherwise false.

---

showLook(Graphics, HVisible, int)

```
public void showLook(java.awt.Graphics g, HVisible visible, int state)
```

The showLook(Graphics, HVisible, int) method is responsible for repainting the entire HVisible component, (including any content set on the component, and the component background), subject to the clipRect of the Graphics object passed to it.

The showLook(Graphics, HVisible, int) method should not modify the clipRect of the Graphics object that is passed to it.

For looks which draw content (e.g. HTextLook, HGraphicLook and HAnimateLook), if no content is associated with the component, the showLook(Graphics, HVisible, int) method paints the component with its current background Color according to the setBackgroundMode(int) method of HVisible and draws any (implementation-specific) borders. Note that by default the background mode is set so as to **not** paint a background. Furthermore on platforms which support transparent colors the background Color may be partially or completely transparent.

Any resources **explicitly** associated with an HLook should be loaded by the HLook during its creation, etc., or via its setXXX() methods. Note that the "standard" looks don't load content by default.

This method is called from the paint(Graphics) method of HVisible and must never be called from elsewhere. Components wishing to redraw themselves should call their repaint method in the usual way.

Overrides:
showLook(Graphics, HVisible, int) in class HSinglelineEntryLook

Parameters:
g - the graphics context.

visible - the visible.

state - the state parameter indicates the state of the visible, allowing the look to render the appropriate content for that state. Note that some components (e.g. HStaticRange, HRange, HRangeValue) do not use state-based content).

---

widgetChanged(HVisible, HChangeData[])

```
public void widgetChanged(HVisible visible, HChangeData[] changes)
```

Called by the HVisible whenever its content, state, or any other data changes. See the class description of HVisible for more information about the changes parameter.

The implementation of this method should work out which graphical areas of the HVisible have changed and make any relevant calls to trigger the repainting of those areas.

A minimum implementation of this method could simply call

```
visible.repaint()
```

Overrides:
widgetChanged(HVisible, HChangeData[]) in class HSinglelineEntryLook

Parameters:
visible - the HVisible which has changed

changes - an array containing hint data and associated hint objects. If this argument is null a full repaint will be triggered.

org.havi.ui
HNavigable

Syntax
```
public interface HNavigable extends HNavigationInputPreferred
```

All Known Subinterfaces:
HActionable, HAdjustmentValue, HItemValue, HSwitchable, HTextValue

All Superinterfaces:
HNavigationInputPreferred

All Known Implementing Classes:
HIcon, HRange, HText, HAnimation

Description
This interface is implemented by all HAVi UI components that can be navigated to by the user (i.e. components which can gain focus).

Event Behavior

Subclasses of HComponent which implement HNavigable must respond to HFocusEvent events.

Applications should assume that classes which implement HNavigable can only generate events of the type HFocusEvent in response to other types of input event.

An application may add one or more HFocusListener listeners to the component. The focusGained and focusLost methods of the HFocusListener are invoked whenever the HNavigable gains or loses focus.

An HNavigable has an arbitrary focus traversal table associated with it (see setMove(int, HNavigable) and getMove(int)). This mechanism allows the four-way focus behavior of a set of components to be set (see setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) , setMove(int, HNavigable) and getMove(int)).


HAVi focus events are discussed in detail in the HNavigationInputPreferred interface description.

Interaction States

The following interaction states are valid for this HNavigable component:

- NORMAL_STATE
- FOCUSED_STATE
- DISABLED_STATE
- DISABLED_FOCUSED_STATE

The state machine diagram below shows the valid state transitions for an HNavigable component.

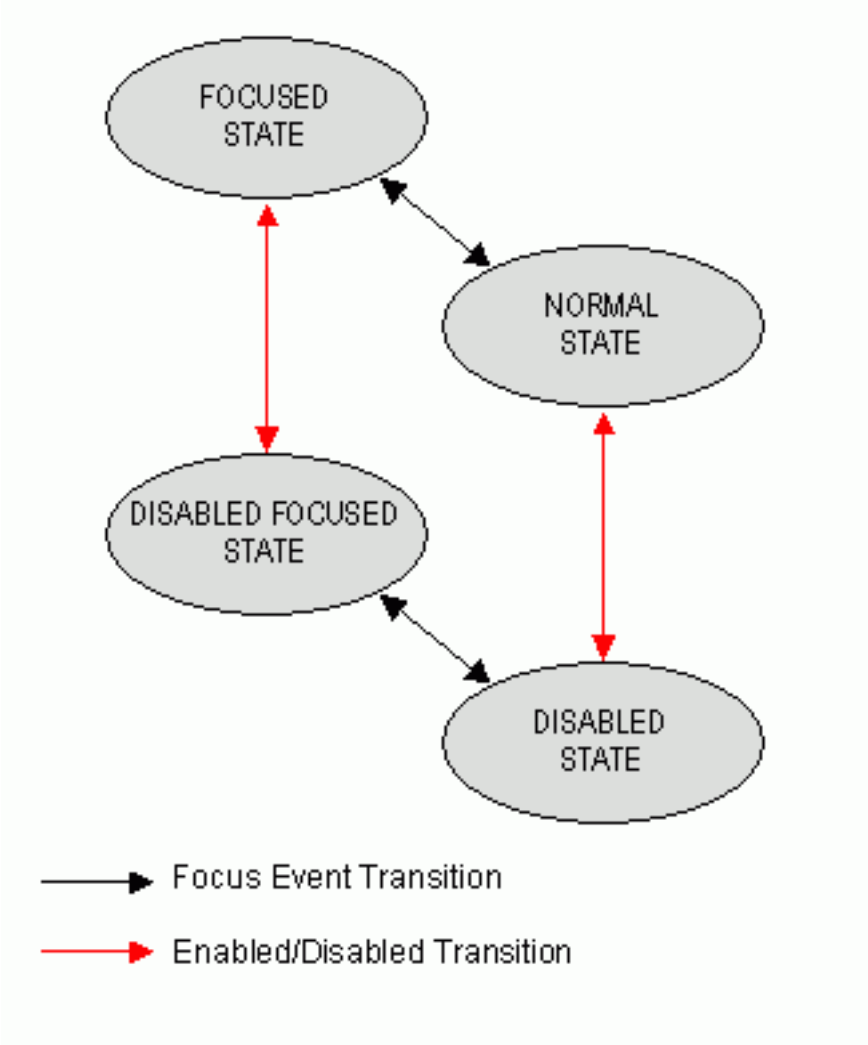

Platform Classes

The following HAVi platform classes implement or inherit the `HNavigable` interface. These classes shall all generate `HFocusEvent` events in addition to any other events specified in the respective class descriptions.

- `HAnimation`
- `HIcon`
- `HText`
- `HRange`
- `HGraphicButton`
- `HTextButton`
- `HToggleButton`
- `HListGroup`
- `HSinglelineEntry`
- `HMultilineEntry`
- `HRangeValue`

See Also:

`HNavigationInputPreferred`, `HFocusEvent`, `HFocusListener`

Methods

---

getGainFocusSound()

```
public HSound getGainFocusSound()
```

Get the sound associated with the gain focus event.

Returns:
The sound played when the component gains focus. If no sound is associated with gaining focus, then null shall be returned.

---

getLoseFocusSound()

```
public HSound getLoseFocusSound()
```

Get the sound associated with the lost focus event.

Returns:
The sound played when the component loses focus. If no sound is associated with losing focus, then null shall be returned.

---

getMove(int)

```
public HNavigable getMove(int keyCode)
```

Provides the `HNavigable` object that is navigated to when a particular key is pressed.

Parameters:
`keyCode` - The key code of the pressed key.

Returns:
Returns the `HNavigable` object, or if no `HNavigable` is associated with the keyCode then returns `null`.

---

isSelected()

```
public boolean isSelected()
```

Indicates if this component has focus.

Returns:
`true` if the component has focus, otherwise returns `false`.

---

setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)

```
public void setFocusTraversal(HNavigable up, HNavigable down, HNavigable left,
            HNavigable right)
```

Set the focus control for an `HNavigable` component. Note `setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)` is a convenience function for application programmers where a standard up, down, left and right focus traversal between components is required.

Note `setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)` is equivalent to multiple calls to `setMove(int, HNavigable)`, where the key codes VK_UP, VK_DOWN, VK_LEFT, VK_RIGHT are used.

Note that this API does not prevent the creation of "isolated" `HNavigable` components --- authors should endeavor to avoid confusing the user.

Parameters:

`up` - The `HNavigable` component to move to, when the user generates a VK_UP KeyEvent. If there is no `HNavigable` component to move "up" to, then null should be specified.

`down` - The `HNavigable` component to move to, when the user generates a VK_DOWN KeyEvent. If there is no `HNavigable` component to move "down" to, then null should be specified.

`left` - The `HNavigable` component to move to, when the user generates a VK_LEFT KeyEvent. If there is no `HNavigable` component to move "left" to, then null should be specified.

`right` - The `HNavigable` component to move to, when the user generates a VK_RIGHT KeyEvent. If there is no `HNavigable` component to move "right" to, then null should be specified.

---

setGainFocusSound(HSound)

```
public void setGainFocusSound(HSound sound)
```

Associate a sound with gaining focus, i.e. when the `HNavigable` receives a `java.awt.event.FocusEvent` event of type `FOCUS_GAINED`. This sound will start to be played when an object implementing this interface gains focus. It is not guaranteed to be played to completion. If the object implementing this interface loses focus before the audio completes playing, the audio will be truncated. Applications wishing to ensure the audio is always played to completion must implement special logic to slow down the focus transitions.

By default, an `HNavigable` object does not have any gain focus sound associated with it.

Note that the ordering of playing sounds is dependent on the order of the focus lost, gained events.

Parameters:

`sound` - the sound to be played, when the component gains focus. If sound content is already set, the original content is replaced. To remove the sound specify a null `HSound` .

---

setLoseFocusSound(HSound)

```
public void setLoseFocusSound(HSound sound)
```

Associate a sound with losing focus, i.e. when the `HNavigable` receives a java.awt.event.FocusEvent event of type FOCUS_LOST. This sound will start to be played when an object implementing this interface loses focus. It is not guaranteed to be played to completion. It is implementation dependent whether and when this sound will be truncated by any gain focus sound played by the next object to gain focus.

By default, an `HNavigable` object does not have any lose focus sound associated with it.

Note that the ordering of playing sounds is dependent on the order of the focus lost, gained events.

Parameters:

`sound` - the sound to be played, when the component loses focus. If sound content is already set, the original content is replaced. To remove the sound specify a null `HSound` .

---

setMove(int, HNavigable)

```
public void setMove(int keyCode, HNavigable target)
```

Defines the navigation path from the current `HNavigable` to another `HNavigable` when a particular key is pressed.

Note that `setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)` is equivalent to multiple calls to `setMove(int, HNavigable)` , where the key codes `VK_UP`, `VK_DOWN`, `VK_LEFT`, `VK_RIGHT` are used.

Parameters:

`keyCode` - The key code of the pressed key. Any numerical keycode is allowed, but the platform may not be able to generate all keycodes. Application authors should only use keys for which `HRcCapabilities.isSupported()` or `HKeyCapabilities.isSupported()` returns true.

`target` - The target `HNavigable` object that should be navigated to. If a target is to be removed from a particular navigation path, then `null` should be specified.

org.havi.ui
HNavigationInputPreferred

Syntax
```
public interface HNavigationInputPreferred
```

All Known Subinterfaces:
HActionable, HAdjustmentValue, HItemValue, HNavigable, HSwitchable, HTextValue

Description
A component which implements HNavigationInputPreferred indicates that this component expects to receive HFocusEvent events. The focus event system in HAVi is designed to be compatible with standard AWT focus mechanisms while supporting key event-based focus traversal for HAVi UI components.

All interoperable implementations of the HNavigationInputPreferred interface must extend HComponent .

Components which implement HNavigationInputPreferred to handle HFocusEvent events can optionally manage focus traversal based on keyboard input events, in addition to the normal semantics of the FOCUS_GAINED and FOCUS_LOST event types. The focus traversal mechanism specified by the HAVI UI HNavigable interface is one such system.

In the case where such an implementation requires specific keys to manage focus traversal the getNavigationKeys() method is provided to allow the HAVi platform to query the set of keys for which a navigation target has been set. When such a component has the input focus, platforms without a physical means of generating the desired keystrokes shall provide another means for navigation e.g. by offering an on-screen "virtual&quot keyboard. Applications can query the system about the support of specific keyCodes through the isSupported(int) method.

The keyCodes for navigation keystrokes generated on the HNavigationInputPreferred will be passed to the HNavigationInputPreferred as an HFocusEvent transferId through the processHFocusEvent(HFocusEvent) method. No HKeyEvent will be generated on the HNavigationInputPreferred as a result of these keystrokes.

Note that the java.awt.Component method isFocusTraversable should always return true for a java.awt.Component implementing this interface.

Methods

---

getNavigationKeys()

```
public int[] getNavigationKeys()
```

Retrieve the set of key codes which this component maps to navigation targets.

Returns:
an array of key codes, or null if no navigation targets are set on this component.

---

processHFocusEvent(HFocusEvent)

```
public void processHFocusEvent(HFocusEvent evt)
```

Process an `HFocusEvent` sent to this `HNavigationInputPreferred`.

Parameters:

`evt` - the `HFocusEvent` to process.

org.havi.ui
HNoInputPreferred

Syntax
```
public interface HNoInputPreferred
```

All Known Implementing Classes:
HStaticIcon, HStaticRange, HStaticText, HStaticAnimation

Description
A component which implements HNoInputPreferred indicates that the user cannot navigate to this component.

All interoperable implementations of the HNoInputPreferred interface must extend HComponent .

In some cases a component which implements this interface will be extended, and that component will implement another "XxxInputPreferred" interface. In all cases, these other interfaces take precedence.

org.havi.ui
HOrientable

Syntax
```
public interface HOrientable
```

All Known Subinterfaces:
HAdjustmentInputPreferred, HAdjustmentValue, HItemValue, HSelectionInputPreferred

All Known Implementing Classes:
HStaticRange

Description
The HOrientable interface provides support for components which have an orientation.

All interoperable implementations of the HOrientable interface must extend HComponent .

Fields

ORIENT_BOTTOM_TO_TOP

```
public static final int ORIENT_BOTTOM_TO_TOP
```

A constant which specifies that the HOrientable should be rendered with a vertical orientation, with the minimum value on the bottom, and the maximum value on the top.

ORIENT_LEFT_TO_RIGHT

```
public static final int ORIENT_LEFT_TO_RIGHT
```

A constant which specifies that the HOrientable should be rendered with a horizontal orientation, with the minimum value on the left side, and the maximum value on the right side.

ORIENT_RIGHT_TO_LEFT

```
public static final int ORIENT_RIGHT_TO_LEFT
```

A constant which specifies that the HOrientable should be rendered with a horizontal orientation, with the minimum value on the right side, and the maximum value on the left side.

ORIENT_TOP_TO_BOTTOM

```
public static final int ORIENT_TOP_TO_BOTTOM
```

A constant which specifies that the HOrientable should be rendered with a vertical orientation, with the minimum value on the top, and the maximum of the range on the bottom.

Methods

---

getOrientation()

```
public int getOrientation()
```

Retrieve the orientation of the HOrientable . The orientation controls how an associated HLook lays out the component and affects the visual behavior of the HAdjustmentEvent and HItemEvent events. For example, the system might use this information to select appropriate key mappings for these events.

Returns:

one of ORIENT_LEFT_TO_RIGHT , ORIENT_RIGHT_TO_LEFT , ORIENT_TOP_TO_BOTTOM , or ORIENT_BOTTOM_TO_TOP .

---

setOrientation(int)

```
public void setOrientation(int orient)
```

Set the orientation of the HOrientable . The orientation controls how the associated HLook lays out the component.

Parameters:

orient - one of ORIENT_LEFT_TO_RIGHT , ORIENT_RIGHT_TO_LEFT , ORIENT_TOP_TO_BOTTOM , or ORIENT_BOTTOM_TO_TOP .

org.havi.ui
HPermissionDeniedException

Syntax
```
public class HPermissionDeniedException extends java.lang.Exception

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--org.havi.ui.HPermissionDeniedException
```

All Implemented Interfaces:
java.io.Serializable

Description
Thrown when an application attempts to control a device or feature it does not have the right to do at the time of making the call. The precise conditions of this are defined in more detail in the places where this exception is thrown. It could be when the application does not have some underlying resource reserved.

This exception is not related in any way to the Java security model or to `java.lang.SecurityException`. Methods where an application could be denied the right to control a device or feature by security policy also must throw a `java.lang.SecurityException`. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
message	Message explaining why the exception was thrown	null	-	java.lang.Throwable#getMessage

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

Constructors

HPermissionDeniedException()
```
public HPermissionDeniedException()
```
Creates an HPermissionDeniedException object. See the class description for details of constructor parameters and default values.

HPermissionDeniedException(String)

```
public HPermissionDeniedException(java.lang.String message)
```

Creates an HPermissionDeniedException object with a specified reason string.

Parameters:

`message` - the reason why the exception was raised

org.havi.ui
HRange

Syntax

```
public class HRange extends HStaticRange implements HNavigable
```

```
java.lang.Object
  |
  +--java.awt.Component
        |
        +--HComponent
              |
              +--HVisible
                    |
                    +--HStaticRange
                          |
                          +--org.havi.ui.HRange
```

Direct Known Subclasses:

HRangeValue

All Implemented Interfaces:

HMatteLayer, HNavigable, HNavigationInputPreferred, HNoInputPreferred, HOrientable, HState, java.awt.image.ImageObserver, java.awt.MenuContainer, java.io.Serializable, TestOpacity

Description

The HRange is a user interface component used to display a value within a fixed range (as org.havi.ui.HStaticRange HStaticRange}) which also enables a user to navigate to it, i.e. it can have the input focus. By default it uses the HRangeLook to render itself. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
x	x-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
y	y-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
width	width of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
height	height of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds

orientation	The "orientation" of the range object.	ORIENT_LEFT_TO_RIGHT	setOrientation(int)	getOrientation()
minimum	The minimum value that can be returned by this range object.	0	setRange(int, int)	getMinValue()
maximum	The maximum value that can be returned by this range object.	100	setRange(int, int)	getMaxValue()
value	The current value returned by this range object.	0	setValue(int)	getValue()

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
Associated matte (HMatte).	none (i.e. getMatte() returns null)	setMatte(HMatte)	getMatte()
The text layout manager responsible for text formatting.	An HDefaultTextLayoutManager object.	setTextLayoutManager(HTextLayoutManager)	getTextLayoutManager()
The background painting mode	NO_BACKGROUND_FILL	setBackgroundMode(int)	getBackgroundMode()
The default preferred size	not set (i.e. null) unless specified by width and height parameters	setDefaultSize(Dimension)	getDefaultSize()
The horizontal content alignment	HALIGN_CENTER	setHorizontalAlignment(int)	getHorizontalAlignment()
The vertical content alignment	VALIGN_CENTER	setVerticalAlignment(int)	getVerticalAlignment()
The content scaling mode	RESIZE_NONE	setResizeMode(int)	getResizeMode()
The default "look" for this class.	A platform specific HRangeLook	setDefaultLook(HRangeLook)	getDefaultLook()
The "look" for this object.	The HRangeLook returned from HRange.getDefaultLook when this object was created.	setLook(HLook)	getLook()

The offsets for the "thumb" of this range control	min = 0, max = 0	setThumbOffsets(int, int)	getThumbMinOffset() / getThumbMaxOffset()
The behavior of this range object with respect to its "thumb" values	SLIDER_BEHAVIOR	setBehavior(int)	getBehavior()
The gain focus sound.	null	setGainFocusSound(HSound)	getGainFocusSound()
The lose focus sound.	null	setLoseFocusSound(HSound)	getLoseFocusSound()

See Also:

HStaticRange, HNavigable

Constructors

HRange()

```
public HRange()
```

Creates an HRange object. See the class description for details of constructor parameters and default values.

HRange(int, int, int, int)

```
public HRange(int orientation, int minimum, int maximum, int value)
```

Creates an HRange object. See the class description for details of constructor parameters and default values.

HRange(int, int, int, int, int, int, int, int)

```
public HRange(int orientation, int minimum, int maximum, int value, int x, int y,
              int width, int height)
```

Creates an HRange object. See the class description for details of constructor parameters and default values.

Methods

---

getDefaultLook()

```
public static HRangeLook getDefaultLook()
```

Returns the currently set default HLook for HRange components.

Returns:
The HLook that is used by default when creating a new HRange component.

---

getGainFocusSound()

```
public HSound getGainFocusSound()
```

Get the sound associated with the gain focus event.

Specified By:
getGainFocusSound() in interface HNavigable

Returns:
The sound played when the component gains focus. If no sound is associated with gaining focus, then null shall be returned.

---

getLoseFocusSound()

```
public HSound getLoseFocusSound()
```

Get the sound associated with the lost focus event.

Specified By:
getLoseFocusSound() in interface HNavigable

Returns:
The sound played when the component loses focus. If no sound is associated with losing focus, then null shall be returned.

---

getMove(int)

```
public HNavigable getMove(int keyCode)
```

Provides the HNavigable object that is navigated to when a particular key is pressed.

Specified By:
getMove(int) in interface HNavigable

Parameters:
keyCode - The key code of the pressed key.

Returns:
Returns the HNavigable object, or if no HNavigable is associated with the keyCode then returns null.

---

getNavigationKeys()

```
public int[] getNavigationKeys()
```

Retrieve the set of key codes which this component maps to navigation targets.

Specified By:
getNavigationKeys() in interface HNavigationInputPreferred

Returns:
an array of key codes, or null if no navigation targets are set on this component.

---

isSelected()

```
public boolean isSelected()
```

Indicates if this component has focus.

Specified By:
`isSelected()` in interface `HNavigable`

Returns:
`true` if the component has focus, otherwise returns `false`.

---

processHFocusEvent(HFocusEvent)

```
public void processHFocusEvent(HFocusEvent evt)
```

Process an `HFocusEvent` sent to this `HRange`.

Specified By:
`processHFocusEvent(HFocusEvent)` in interface `HNavigationInputPreferred`

Parameters:
`evt` - the `HFocusEvent` to process.

---

setDefaultLook(HRangeLook)

```
public static void setDefaultLook(HRangeLook look)
```

Sets the default `HLook` for further `HRange` Components.

Parameters:
`look` - The `HLook` that will be used by default when creating a new `HRange` component. Note that this parameter may be null, in which case newly created components shall not draw themselves until a non-null look is set using the `setLook(HLook)` method.

---

setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)

```
public void setFocusTraversal(HNavigable up, HNavigable down, HNavigable left,
            HNavigable right)
```

Set the focus control for an `HNavigable` component. Note `setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)` is a convenience function for application programmers where a standard up, down, left and right focus traversal between components is required.

Note `setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)` is equivalent to multiple calls to `setMove(int, HNavigable)`, where the key codes VK_UP, VK_DOWN, VK_LEFT, VK_RIGHT are used.

Note that this API does not prevent the creation of "isolated" `HNavigable` components --- authors should endeavor to avoid confusing the user.

Specified By:
`setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)` in interface `HNavigable`

Parameters:
`up` - The `HNavigable` component to move to, when the user generates a VK_UP KeyEvent. If there is no `HNavigable` component to move "up" to, then null should be specified.

`down` - The `HNavigable` component to move to, when the user generates a VK_DOWN KeyEvent. If there is no `HNavigable` component to move "down" to, then null should be specified.

`left` - The `HNavigable` component to move to, when the user generates a VK_LEFT KeyEvent. If there is no `HNavigable` component to move "left" to, then null should be specified.

`right` - The `HNavigable` component to move to, when the user generates a VK_RIGHT KeyEvent. If there is no `HNavigable` component to move "right" to, then null should be specified.

---

setGainFocusSound(HSound)

```
public void setGainFocusSound(HSound sound)
```

Associate a sound with gaining focus, i.e. when the `HNavigable` receives a `java.awt.event.FocusEvent` event of type `FOCUS_GAINED`. This sound will start to be played when an object implementing this interface gains focus. It is not guaranteed to be played to completion. If the object implementing this interface loses focus before the audio completes playing, the audio will be truncated. Applications wishing to ensure the audio is always played to completion must implement special logic to slow down the focus transitions.

By default, an `HNavigable` object does not have any gain focus sound associated with it.

Note that the ordering of playing sounds is dependent on the order of the focus lost, gained events.

Specified By:
`setGainFocusSound(HSound)` in interface `HNavigable`

Parameters:
`sound` - the sound to be played, when the component gains focus. If sound content is already set, the original content is replaced. To remove the sound specify a null `HSound` .

---

setLoseFocusSound(HSound)

```
public void setLoseFocusSound(HSound sound)
```

Associate a sound with losing focus, i.e. when the `HNavigable` receives a java.awt.event.FocusEvent event of type FOCUS_LOST. This sound will start to be played when an object implementing this interface loses focus. It is not guaranteed to be played to completion. It is implementation dependent whether and when this sound will be truncated by any gain focus sound played by the next object to gain focus.

By default, an `HNavigable` object does not have any lose focus sound associated with it.

Note that the ordering of playing sounds is dependent on the order of the focus lost, gained events.

Specified By:
`setLoseFocusSound(HSound)` in interface `HNavigable`

Parameters:
`sound` - the sound to be played, when the component loses focus. If sound content is already set, the original content is replaced. To remove the sound specify a null `HSound` .

---

setMove(int, HNavigable)

```
public void setMove(int keyCode, HNavigable target)
```

Defines the navigation path from the current `HNavigable` to another `HNavigable` when a particular key is pressed.

Note that `setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)` is equivalent to multiple calls to `setMove(int, HNavigable)` , where the key codes `VK_UP`, `VK_DOWN`, `VK_LEFT`, `VK_RIGHT` are used.

Specified By:
`setMove(int, HNavigable)` in interface `HNavigable`

Parameters:

`keyCode` - The key code of the pressed key. Any numerical keycode is allowed, but the platform may not be able to generate all keycodes. Application authors should only use keys for which `HRcCapabilities.isSupported()` or `HKeyCapabilities.isSupported()` returns true.

`target` - The target `HNavigable` object that should be navigated to. If a target is to be removed from a particular navigation path, then `null` should be specified.

org.havi.ui
HRangeLook

Syntax
```
public class HRangeLook implements HAdjustableLook

java.lang.Object
  |
  +--org.havi.ui.HRangeLook
```

All Implemented Interfaces:
java.lang.Cloneable, HAdjustableLook, HLook

Description
The HRangeLook class is used to display a slider or scrollbar type range control on screen. It is used by specific HVisible components which implement the HAdjustmentValue interface to present a graphical representation of the value to the user. This look will be provided by the platform and the exact way in which it is rendered will be platform dependant.

This look does NOT use content set on the HVisible .

This is the default look that is used by HStaticRange and its subclasses. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

See Also:
HRange

Constructors

HRangeLook()
```
public HRangeLook()
```
Creates an HRangeLook object. See the class description for details of constructor parameters and default values.

Methods

---

getInsets(HVisible)

```
public java.awt.Insets getInsets(HVisible visible)
```

Determines the insets of this HLook , which indicate the size of the border. This area is reserved for the HLook to use for drawing borders around the associated HVisible .

Specified By:
getInsets(HVisible) in interface HLook

Parameters:
hvisible - HVisible to which this HLook is attached.

Returns:
the insets of this HLook .

---

getMaximumSize(HVisible)

```
public java.awt.Dimension getMaximumSize(HVisible hvisible)
```

Gets the maximum size of the HVisible component when drawn with this HLook .

This size may be determined in several ways depending on the information available to the look. These steps are performed in order and the first available result is returned. For the purposes of this algorithm HLook classes that do not use content (e.g. HRangeLook) are treated as if no content was present.

The extra space required for border decoration can be determined from the getInsets(HVisible) method.

1. If the HLook supports the scaling of its content (e.g. an HGraphicLook) then the return value is the current size of the HVisible (as returned by HVisible#getSize).
2. If the HLook does not support scaling of content or no scaling is requested, and content is set then the return value is the size of the largest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
3. If there is no content set then a maximum size of [Short.MAX_VALUE, Short.MAX_VALUE] is returned as a Dimension.

Specified By:
getMaximumSize(HVisible) in interface HLook

Parameters:
hvisible - HVisible to which this HLook is attached.

Returns:
A dimension object indicating this HLook maximum size.

See Also:
getMaximumSize()

---

getMinimumSize(HVisible)

```
public java.awt.Dimension getMinimumSize(HVisible hvisible)
```

Gets the minimum size of the HVisible component when drawn with this HLook .

This size may be determined in several ways depending on the information available to the look. These steps are performed in order and the first available result is returned. For the purposes of this

algorithm HLook classes that do not use content (e.g. HRangeLook) are treated as if no content was present.

The extra space required for border decoration can be determined from the getInsets(HVisible) method.

1. If the HLook supports the scaling of its content (e.g. an HGraphicLook) and content is set then the return value is the size of the smallest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
2. If the HLook does not support scaling of content or no scaling is requested, *and* content is set then the return value is the size of the largest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
3. If no content is available but a default preferred size has been set using setDefaultSize(Dimension) has been called to set then the return value is this value (as obtained with getDefaultSize()) plus any additional dimensions that the HLook requires for border decoration etc.
4. If there is no content or default size set then the return value is an implementation-specific minimum size plus any additional dimensions that the HLook requires for border decoration etc.

Specified By:
getMinimumSize(HVisible) in interface HLook

Parameters:
hvisible - HVisible to which this HLook is attached.

Returns:
A dimension object indicating this HLook minimum size.

See Also:
getMinimumSize()

---

getPreferredSize(HVisible)

```
public java.awt.Dimension getPreferredSize(HVisible hvisible)
```

Gets the preferred size of the HVisible component when drawn with this HLook .

This size may be determined in several ways depending on the information available to the look. These steps are performed in order and the first available result is returned. For the purposes of this algorithm HLook classes that do not use content (e.g. HRangeLook) are treated as if no content was present.

The extra space required for border decoration can be determined from the getInsets(HVisible) method.

1. If a default preferred size has been set for this HVisible (using setDefaultSize(Dimension)) then the return value is this size (obtained with getDefaultSize()) plus any additional dimensions that the HLook requires for border decoration etc.
2. If this HLook does not support scaling of content or no scaling is requested, and content is present then the return value is the size of the largest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
3. If this HLook supports the scaling of its content (e.g. an HGraphicLook) and content is set then the return value is the current size of the HVisible as returned by getSize).
4. If there is no content and no default size set then the return value is the current size of the HVisible as returned by getSize).

Specified By:
getPreferredSize(HVisible) in interface HLook

Parameters:
`hvisible` - `HVisible` to which this `HLook` is attached.

Returns:
A dimension object indicating the preferred size of the `HVisible` when drawn with this `HLook`.

See Also:
`getPreferredSize()`, `setDefaultSize(Dimension)`

---

hitTest(HAdjustmentValue, Point)

```
public int hitTest(HAdjustmentValue component, java.awt.Point pt)
```

Returns a value which indicates the pointer click position in the on-screen representation of the adjustable component. Note that it is a valid implementation option to always return `ADJUST_NONE`.

Specified By:
`hitTest(HAdjustmentValue, Point)` in interface `HAdjustableLook`

Parameters:
`component` - the `HAdjustmentValue` component for which the hit position should be calculated.

`pt` - the pointer click point.

Returns:
one of `ADJUST_NONE`, `ADJUST_BUTTON_LESS`, `ADJUST_PAGE_LESS`, `ADJUST_THUMB`, `ADJUST_PAGE_MORE` or `ADJUST_BUTTON_MORE`.

---

isOpaque(HVisible)

```
public boolean isOpaque(HVisible visible)
```

Returns true if the entire painted area of the `HVisible` when using this look is fully opaque, i.e. the `showLook(Graphics, HVisible, int)` method guarantees that all pixels are painted in an opaque Color.

The default value is implementation specific and depends on the background painting mode of the given `HVisible`. The consequences of an invalid overridden value are implementation specific.

Specified By:
`isOpaque(HVisible)` in interface `HLook`

Parameters:
`visible` - the visible to test

Returns:
true if all the pixels with the java.awt.Component#getBounds method of an `HVisible` using this look are fully opaque, i.e. the `showLook(Graphics, HVisible, int)` method guarantees that all pixels are painted in an opaque Color, otherwise false.

---

showLook(Graphics, HVisible, int)

```
public void showLook(java.awt.Graphics g, HVisible visible, int state)
```

The `showLook(Graphics, HVisible, int)` method is responsible for repainting the entire `HVisible` component, (including any content set on the component, and the component background), subject to the clipRect of the Graphics object passed to it.

The `showLook(Graphics, HVisible, int)` method should not modify the clipRect of the `Graphics` object that is passed to it.

For looks which draw content (e.g. `HTextLook`, `HGraphicLook` and `HAnimateLook`), if no content is associated with the component, the `showLook(Graphics, HVisible, int)` method paints the component with its current background `Color` according to the `setBackgroundMode(int)` method of `HVisible` and draws any (implementation-specific) borders. Note that by default the background mode is set so as to **not** paint a background. Furthermore on platforms which support transparent colors the background `Color` may be partially or completely transparent.

Any resources **explicitly** associated with an `HLook` should be loaded by the `HLook` during its creation, etc., or via its setXXX() methods. Note that the "standard" looks don't load content by default.

This method is called from the `paint(Graphics)` method of `HVisible` and must never be called from elsewhere. Components wishing to redraw themselves should call their repaint method in the usual way.

Specified By:
`showLook(Graphics, HVisible, int)` in interface `HLook`

Parameters:
`g` - the graphics context.

`visible` - the visible.

`state` - the state parameter indicates the state of the visible, allowing the look to render the appropriate content for that state. Note that some components (e.g. HStaticRange, HRange, HRangeValue) do not use state-based content).

---

widgetChanged(HVisible, HChangeData[])

```
public void widgetChanged(HVisible visible, HChangeData[] changes)
```

Called by the `HVisible` whenever its content, state, or any other data changes. See the class description of `HVisible` for more information about the `changes` parameter.

The implementation of this method should work out which graphical areas of the `HVisible` have changed and make any relevant calls to trigger the repainting of those areas.

A minimum implementation of this method could simply call

```
visible.repaint()
```

Specified By:
`widgetChanged(HVisible, HChangeData[])` in interface `HLook`

Parameters:
`visible` - the `HVisible` which has changed

`changes` - an array containing hint data and associated hint objects. If this argument is `null` a full repaint will be triggered.

org.havi.ui
HRangeValue

Syntax

```
public class HRangeValue extends HRange implements HAdjustmentValue, HAdjustmentInputPreferred
```

```
java.lang.Object
  |
  +--java.awt.Component
        |
        +--HComponent
              |
              +--HVisible
                    |
                    +--HStaticRange
                          |
                          +--HRange
                                |
                                +--org.havi.ui.HRangeValue
```

All Implemented Interfaces:

HAdjustmentInputPreferred, HAdjustmentValue, HMatteLayer, HNavigable, HNavigationInputPreferred, HNoInputPreferred, HOrientable, HState, java.awt.image.ImageObserver, java.awt.MenuContainer, java.io.Serializable, TestOpacity

Description

The HRangeValue is a user interface component used to display a value within a fixed range (as org.havi.ui.HStaticRange HStaticRange}) which enables a user to navigate to and alter the value of it, i.e. it can have the input focus and it can be adjusted. By default it uses the HRangeLook to render itself. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
x	x-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
y	y-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
width	width of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
height	height of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
orientation	The "orientation" of the range object.	ORIENT_LEFT_TO_RIGHT	setOrientation(int)	getOrientation()

minimum	The minimum value that can be returned by this range object.	0	setRange(int, int)	getMinValue()
maximum	The maximum value that can be returned by this range object.	100	setRange(int, int)	getMaxValue()
value	The current value returned by this range object.	0	setValue(int)	getValue()

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
Associated matte (HMatte).	none (i.e. getMatte() returns null)	setMatte(HMatte)	getMatte()
The text layout manager responsible for text formatting.	An HDefaultTextLayoutManager object.	setTextLayout-Manager(HTextLayoutManager)	getTextLayoutManager()
The background painting mode	NO_BACKGROUND_FILL	setBackgroundMode(int)	getBackgroundMode()
The default preferred size	not set (i.e. null) unless specified by width and height parameters	setDefaultSize (Dimension)	getDefaultSize()
The horizontal content alignment	HALIGN_CENTER	setHorizontalAlignment(int)	getHorizontalAlignment()
The vertical content alignment	VALIGN_CENTER	setVerticalAlignment(int)	getVerticalAlignment()
The content scaling mode	RESIZE_NONE	setResizeMode(int)	getResizeMode()
The default "look" for this class.	A platform specific HRangeLook	setDefaultLook (HRangeLook)	getDefaultLook()
The "look" for this object.	The HRangeLook returned from HRangeValue.getDefault-Look when this object was created.	setLook(HLook)	getLook()
The offsets for the "thumb" of this range control	min = 0, max = 0	setThumbOff-sets(int, int)	getThumbMinOffset() / getThumbMaxOffset()
The behavior of this range object with respect to its "thumb" values	SLIDER_BEHAVIOR	setBehavior(int)	getBehavior()

The block increment for this object.	1 unit	setBlockIncrement(int)	getBlockIncrement()
The gain focus sound.	null	setGainFocusSound(HSound)	getGainFocusSound()
The lose focus sound.	null	setLoseFocusSound(HSound)	getLoseFocusSound()

See Also:

HStaticRange, HRange, HNavigable, HAdjustmentValue

Constructors

HRangeValue()

```
public HRangeValue()
```

Creates an HRangeValue object. See the class description for details of constructor parameters and default values.

HRangeValue(int, int, int, int)

```
public HRangeValue(int orientation, int minimum, int maximum, int value)
```

Creates an HRangeValue object. See the class description for details of constructor parameters and default values.

HRangeValue(int, int, int, int, int, int, int, int)

```
public HRangeValue(int orientation, int minimum, int maximum, int value, int x, int y,
            int width, int height)
```

Creates an HRangeValue object. See the class description for details of constructor parameters and default values.

Methods

---

addAdjustmentListener(HAdjustmentListener)

```
public void addAdjustmentListener(HAdjustmentListener l)
```

Adds the specified HAdjustmentListener to receive HAdjustmentEvent sent from this object. If the listener has already been added further calls will add further references to the listener, which will then receive multiple copies of a single event.

Specified By:

addAdjustmentListener(HAdjustmentListener) in interface HAdjustmentValue

Parameters:

l - the HAdjustmentListener to be notified.

---

getAdjustmentSound()

```
public HSound getAdjustmentSound()
```

Get the sound to be played when the value changes.

Specified By:
getAdjustmentSound() in interface HAdjustmentValue

Returns:
The sound played when the value changes

---

getAdjustMode()

```
public boolean getAdjustMode()
```

Get the adjustment mode for this HRangeValue . If the returned value is true the component is in adjustment mode, and its value may be changed on receipt of ADJUST_LESS and ADJUST_MORE events.

The component is switched into and out of adjustment mode on receiving ADJUST_START_CHANGE and ADJUST_END_CHANGE events.

Specified By:
getAdjustMode() in interface HAdjustmentInputPreferred

Returns:
true if this component is in adjustment mode, false otherwise.

---

getBlockIncrement()

```
public int getBlockIncrement()
```

Get the block increment for this HRangeValue .

Specified By:
getBlockIncrement() in interface HAdjustmentValue

Returns:
the block increment value for this HRangeValue .

---

getDefaultLook()

```
public static HRangeLook getDefaultLook()
```

Returns the currently set default look for HRangeValue components.

Returns:
The look that is used by default when creating a new HRangeValue component.

---

getGainFocusSound()

```
public HSound getGainFocusSound()
```

Get the sound associated with the gain focus event.

Specified By:
getGainFocusSound() in interface HNavigable

Overrides:
getGainFocusSound() in class HRange

Returns:

The sound played when the component gains focus. If no sound is associated with gaining focus, then null shall be returned.

---

getLoseFocusSound()

```
public HSound getLoseFocusSound()
```

Get the sound associated with the lost focus event.

Specified By:
`getLoseFocusSound()` in interface `HNavigable`

Overrides:
`getLoseFocusSound()` in class `HRange`

Returns:
The sound played when the component loses focus. If no sound is associated with losing focus, then null shall be returned.

---

getMove(int)

```
public HNavigable getMove(int keyCode)
```

Provides the `HNavigable` object that is navigated to when a particular key is pressed.

Specified By:
`getMove(int)` in interface `HNavigable`

Overrides:
`getMove(int)` in class `HRange`

Parameters:
`keyCode` - The key code of the pressed key.

Returns:
Returns the `HNavigable` object, or if no `HNavigable` is associated with the keyCode then returns `null`.

---

getNavigationKeys()

```
public int[] getNavigationKeys()
```

Retrieve the set of key codes which this component maps to navigation targets.

Specified By:
`getNavigationKeys()` in interface `HNavigationInputPreferred`

Overrides:
`getNavigationKeys()` in class `HRange`

Returns:
an array of key codes, or `null` if no navigation targets are set on this component.

---

getUnitIncrement()

```
public int getUnitIncrement()
```

Get the unit increment for this `HRangeValue` .

Specified By:
`getUnitIncrement()` in interface `HAdjustmentValue`

Returns:
the increment value for this `HRangeValue` .

---

isSelected()

```
public boolean isSelected()
```

Indicates if this component has focus.

Specified By:
`isSelected()` in interface `HNavigable`

Overrides:
`isSelected()` in class `HRange`

Returns:
`true` if the component has focus, otherwise returns `false`.

---

processHAdjustmentEvent(HAdjustmentEvent)

```
public void processHAdjustmentEvent(HAdjustmentEvent evt)
```

Process an `HAdjustmentEvent` sent to this `HRangeValue` .

Specified By:
`processHAdjustmentEvent(HAdjustmentEvent)` in interface `HAdjustmentInputPreferred`

Parameters:
`evt` - the `HAdjustmentEvent` to process.

---

processHFocusEvent(HFocusEvent)

```
public void processHFocusEvent(HFocusEvent evt)
```

Process an `HFocusEvent` sent to this `HRangeValue` .

Specified By:
`processHFocusEvent(HFocusEvent)` in interface `HNavigationInputPreferred`

Overrides:
`processHFocusEvent(HFocusEvent)` in class `HRange`

Parameters:
`evt` - the `HFocusEvent` to process.

---

removeAdjustmentListener(HAdjustmentListener)

```
public void removeAdjustmentListener(HAdjustmentListener l)
```

Removes the specified `HAdjustmentListener` so that it no longer receives `HAdjustmentEvent` from this object. If the specified listener is not registered, the method has no effect. If multiple references to a single listener have been registered it should be noted that this method will only remove one reference per call.

Specified By:
`removeAdjustmentListener(HAdjustmentListener)` in interface `HAdjustmentValue`

Parameters:
`l` - the `HAdjustmentListener` to be removed from notification.

---

setAdjustmentSound(HSound)

```
public void setAdjustmentSound(HSound sound)
```

Associate a sound to be played when the value is modified. The sound is played irrespective of whether an HAdjustmentEvent is sent to one or more listeners.

Specified By:
setAdjustmentSound(HSound) in interface HAdjustmentValue

Parameters:
sound - the sound to be played, when the value is modified. If sound content is already set, the original content is replaced. To remove the sound specify a null HSound .

---

setAdjustMode(boolean)

```
public void setAdjustMode(boolean adjust)
```

Set the adjustment mode for this HRangeValue .

This method is provided for the convenience of component implementors. Interoperable applications shall not call this method. It cannot be made protected because interfaces cannot have protected methods.

Specified By:
setAdjustMode(boolean) in interface HAdjustmentInputPreferred

Parameters:
edit - true to switch this component into adjustment mode, false otherwise.

See Also:
getAdjustMode()

---

setBlockIncrement(int)

```
public void setBlockIncrement(int increment)
```

Set the block increment for this HRangeValue .

Specified By:
setBlockIncrement(int) in interface HAdjustmentValue

Parameters:
increment - the amount by which the value of the HRangeValue should change when an ADJUST_PAGE_LESS or ADJUST_PAGE_MORE event is received. Values of increment less than one shall be treated as a value of one.

---

setDefaultLook(HRangeLook)

```
public static void setDefaultLook(HRangeLook look)
```

Sets the default HLook for further HRangeValue Components.

Parameters:
look - The HLook that will be used by default when creating a new HRangeValue component. Note that this parameter may be null, in which case newly created components shall not draw themselves until a non-null look is set using the setLook(HLook) method.

---

setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)

```
public void setFocusTraversal(HNavigable up, HNavigable down, HNavigable left,
            HNavigable right)
```

Set the focus control for an HNavigable component. Note setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) is a convenience function for application

programmers where a standard up, down, left and right focus traversal between components is required.

Note `setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)` is equivalent to multiple calls to `setMove(int, HNavigable)`, where the key codes VK_UP, VK_DOWN, VK_LEFT, VK_RIGHT are used.

Note that this API does not prevent the creation of "isolated" `HNavigable` components --- authors should endeavor to avoid confusing the user.

Specified By:
`setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)` in interface `HNavigable`

Overrides:
`setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)` in class `HRange`

Parameters:
`up` - The `HNavigable` component to move to, when the user generates a VK_UP KeyEvent. If there is no `HNavigable` component to move "up" to, then null should be specified.

`down` - The `HNavigable` component to move to, when the user generates a VK_DOWN KeyEvent. If there is no `HNavigable` component to move "down" to, then null should be specified.

`left` - The `HNavigable` component to move to, when the user generates a VK_LEFT KeyEvent. If there is no `HNavigable` component to move "left" to, then null should be specified.

`right` - The `HNavigable` component to move to, when the user generates a VK_RIGHT KeyEvent. If there is no `HNavigable` component to move "right" to, then null should be specified.

---

setGainFocusSound(HSound)

```
public void setGainFocusSound(HSound sound)
```

Associate a sound with gaining focus, i.e. when the `HNavigable` receives a `java.awt.event.FocusEvent` event of type `FOCUS_GAINED`. This sound will start to be played when an object implementing this interface gains focus. It is not guaranteed to be played to completion. If the object implementing this interface loses focus before the audio completes playing, the audio will be truncated. Applications wishing to ensure the audio is always played to completion must implement special logic to slow down the focus transitions.

By default, an `HNavigable` object does not have any gain focus sound associated with it.

Note that the ordering of playing sounds is dependent on the order of the focus lost, gained events.

Specified By:
`setGainFocusSound(HSound)` in interface `HNavigable`

Overrides:
`setGainFocusSound(HSound)` in class `HRange`

Parameters:
`sound` - the sound to be played, when the component gains focus. If sound content is already set, the original content is replaced. To remove the sound specify a null `HSound`.

---

setLoseFocusSound(HSound)

```
public void setLoseFocusSound(HSound sound)
```

Associate a sound with losing focus, i.e. when the `HNavigable` receives a java.awt.event.FocusEvent event of type FOCUS_LOST. This sound will start to be played when an

object implementing this interface loses focus. It is not guaranteed to be played to completion. It is implementation dependent whether and when this sound will be truncated by any gain focus sound played by the next object to gain focus.

By default, an HNavigable object does not have any lose focus sound associated with it.

Note that the ordering of playing sounds is dependent on the order of the focus lost, gained events.

Specified By:
setLoseFocusSound(HSound) in interface HNavigable

Overrides:
setLoseFocusSound(HSound) in class HRange

Parameters:
sound - the sound to be played, when the component loses focus. If sound content is already set, the original content is replaced. To remove the sound specify a null HSound .

---

setMove(int, HNavigable)

```
public void setMove(int keyCode, HNavigable target)
```

Defines the navigation path from the current HNavigable to another HNavigable when a particular key is pressed.

Note that setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) is equivalent to multiple calls to setMove(int, HNavigable) , where the key codes VK_UP, VK_DOWN, VK_LEFT, VK_RIGHT are used.

Specified By:
setMove(int, HNavigable) in interface HNavigable

Overrides:
setMove(int, HNavigable) in class HRange

Parameters:
keyCode - The key code of the pressed key. Any numerical keycode is allowed, but the platform may not be able to generate all keycodes. Application authors should only use keys for which HRcCapabilities.isSupported() or HKeyCapabilities.isSupported() returns true.

target - The target HNavigable object that should be navigated to. If a target is to be removed from a particular navigation path, then null should be specified.

---

setUnitIncrement(int)

```
public void setUnitIncrement(int increment)
```

Set the unit increment for this HRangeValue .

Specified By:
setUnitIncrement(int) in interface HAdjustmentValue

Parameters:
increment - the amount by which the value of the HRangeValue should change when an ADJUST_LESS or ADJUST_MORE event is received. Values of increment less than one shall be treated as a value of one.

org.havi.ui
HScene

Syntax

```
public class HScene extends java.awt.Container implements HComponentOrdering
```

```
java.lang.Object
  |
  +--java.awt.Component
        |
        +--java.awt.Container
              |
              +--org.havi.ui.HScene
```

All Implemented Interfaces:

HComponentOrdering, java.awt.image.ImageObserver, java.awt.MenuContainer, java.io.Serializable

Description

An HScene is a container representing the displayable area on-screen within which the application can display itself and thus interact with the user.

HScene may be regarded as a simple connection to the window management policy within the device, acting as a "screen resource reservation mechanism" denoting the area within which an application may present components.

Rendering Behavior

By default, HScene does not paint itself on-screen, only its added "child" components and hence its only immediate graphical effect is to "clip" its child components. However, it is possible to request that the entire HScene be painted in the current background color before any drawing takes place, and/or that a background image be drawn before the children are rendered.

Class Behavior

For all interoperable applications, the HScene is considered the top-level component of the application. No parent component to an HScene should be accessible to applications. Interoperable applications should not use the getParent method in HScene , since results are implementation dependent and valid implementations may generate a run-time error.

Although HScene is a subclass of java.awt.Container, implementations are allowed to insert extra classes in the inheritance tree between HScene and Container. It is allowed that this may result in HScene inheriting additional methods beyond those specified here. This allows platforms with only one native java.awt.Frame to use HScene as specified, whereas platforms with support for multiple java.awt.Frame or java.awt.Window classes can use an HScene class derived from the appropriate class.

HScene follow the design pattern of the java.awt.Window class. They are not a scarce resource on the platform. On platforms which only support one HScene being visible at one time the current HScene both loses the input focus and is hidden (e.g. iconified) when another application successfully requests the input focus. Two java.awt.event.WindowEvent events, with ids WINDOW_DEACTIVATED and WINDOW_ICONIFIED, shall be generated and sent to the HScene which has lost the focus and the isShowing method for that HScene shall return false.

In terms of delegation, the HScene shall behave like a Window with a native peer implementation, in that it will not appear to delegate any functionality to any parent object. Components which do not specify default characteristics inherit default values transitively from their parent objects. Therefore, the

implementation of HScene must have valid defaults defined for all characteristics, e.g. Font, foreground Color, background Color, ColorModel, Cursor and Locale.

Additional Z-order support

HScene extends the java.awt.Container class by providing additional Z-ordering capabilities, which are required since components in the HAVi user-interface are explicitly allowed to overlap each other. The Z-ordering capabilities are defined by the HComponentOrdering interface.

Note that these Z-ordering capabilities (addBefore, addAfter, pop, popInFrontOf, popToFront, push, pushBehind and pushToBack) must be implemented by (implicitly) reordering the child Components within the HScene , so that the standard AWT convention that the Z-order is defined as the order in which Components are added to a given Container is maintained. See the description for HComponentOrdering for more details.

Shortcut Keys

It is an implementation option for HAVi systems to implement shortcut keys by forwarding java.awt.KeyEvent events to the parent HScene of an application. Under these circumstances it is the responsibility of the application designer to ensure that the relevant java.awt.KeyEvent events used for "shortcut keys" are not consumed by any custom components.

Implementations of the standard HAVi UI components which process java.awt.event.KeyEvent events shall not consume any KeyEvent, thus allowing their use as a shortcut key on implementation which rely on KeyEvents being available in this way.

Event Handling

The mechanism by which input events are passed to the HScene and its component hierarchy is not specified.

Note that whether the HScene is visible or not (as determined by the isVisible() method) does not guarantee that it has the input focus and is receiving events.

When the application initially gains the input focus, this is indicated by the system sending a java.awt.event.WindowEvent of type WINDOW_ACTIVATED to the HScene . The HScene should request that a child component gain the focus, if one is available. However, the mechanism by which this occurs is intentionally not specified here.

When the entire application loses the user's focus, the system shall notify the HScene that it is no longer receiving events by sending a java.awt.event.WindowEvent of type WINDOW_DEACTIVATED to the HScene .

If the entire application has its location, or extent modified, then these events should be signaled via a java.awt.event.WindowEvent with an id of ComponentEvent.COMPONENT_MOVED being sent to the HScene object.

Acquiring and Displaying HScenes

There is no public constructor for HScene , it is constructed by an HSceneFactory . Only one HScene per HGraphicsDevice can be acquired at any one time for each application.

The application may request that it be made visible by calling the the show() method. This method should ensure that the HScene is completely visible to the user, e.g. by expanding an icon, or changing the stacking order between competing overlapping applications.

Making the HScene visible shall not automatically cause it to receive or even request input focus. Input focus can be requested by the application by calling the requestFocus method at any time.

The requestFocus method should first ensure that the HScene is visible, and call the show() method if this is not the case. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
Visibility of the HScene	false	setVisible	isVisible
Activity of associated shortcuts	Shortcuts are active	enableShortcuts(boolean)	isEnableShortcuts()
Associated layout manager	null	java.awt.Container#setLayout	java.awt.Container#getLayout
Background image mode	IMAGE_NONE	setRenderMode(int)	getRenderMode()

Fields

BACKGROUND_FILL

```
public static final int BACKGROUND_FILL
```

A constant for use with the setBackgroundMode(int) method which indicates that the HScene should fill its bounding rectangle with its current background color before painting any background image and children.

IMAGE_CENTER

```
public static final int IMAGE_CENTER
```

A constant for use with setRenderMode(int) which specifies that any background image rendered in this HScene should be centered in the extents of the HScene . No tiling or scaling of the image shall be performed.

IMAGE_NONE

```
public static final int IMAGE_NONE
```

A constant for use with setRenderMode(int) which specifies that a background image should not be rendered in this HScene .

IMAGE_STRETCH

```
public static final int IMAGE_STRETCH
```

A constant for use with setRenderMode(int) which specifies that any background image rendered in this HScene should be stretched to fill the extents of the HScene .

IMAGE_TILE

```
public static final int IMAGE_TILE
```

A constant for use with `setRenderMode(int)` which specifies that any background image rendered in this `HScene` should be tiled starting from the top left origin of the `HScene` . No scaling of the image shall be performed.

NO_BACKGROUND_FILL

```
public static final int NO_BACKGROUND_FILL
```

A constant for use with the `setBackgroundMode(int)` method which indicates that the `HScene` should not fill its bounding rectangle with any color before painting any background image and children.

Constructors

HScene()

```
protected HScene()
```

It is not intended that applications should directly construct `HScene` objects. `HScene` objects should be constructed via the `HSceneFactory` classes factory methods.

Creates an `HScene` object. See the class description for details of constructor parameters and default values.

See Also:

`HSceneFactory`

Methods

addAfter(Component, Component)

```
public java.awt.Component addAfter(java.awt.Component component, java.awt.Component front)
```

Adds a `java.awt.Component` to this `HScene` directly behind a previously added `java.awt.Component`.

If `component` has already been added to this container, then addAfter moves `component` behind `front`. If `front` and `component` are the same component which was already added to this container, `addAfter` does not change the ordering of the components and returns `component`.

This method affects the Z-order of the `java.awt.Component` children within the `HScene` , and may also implicitly change the numeric ordering of those children.

Specified By:

`addAfter(Component, Component)` in interface `HComponentOrdering`

Parameters:

`component` - is the `java.awt.Component` to be added to the `HScene`

`front` - is the `java.awt.Component`, which `component` will be placed behind, i.e. `front` will be directly in front of the added `java.awt.Component`

Returns:

If the java.awt.Component is successfully added, then it will be returned from this call. If the java.awt.Component is not successfully added, e.g. front is not a java.awt.Component currently added to the HScene , then null will be returned.

This method must be implemented in a thread safe manner.

---

addBefore(Component, Component)

```
public java.awt.Component addBefore(java.awt.Component component,
            java.awt.Component behind)
```

Adds a java.awt.Component to this HScene directly in front of a previously added java.awt.Component.

If component has already been added to this container, then addBefore moves component in front of behind. If behind and component are the same component which was already added to this container, addBefore does not change the ordering of the components and returns component.

This method affects the Z-order of the java.awt.Component children within the HScene , and may also implicitly change the numeric ordering of those children.

Specified By:

addBefore(Component, Component) in interface HComponentOrdering

Parameters:

component - is the java.awt.Component to be added to the HScene

behind - is the java.awt.Component, which component will be placed in front of, i.e. behind will be directly behind the added java.awt.Component

Returns:

If the java.awt.Component is successfully added, then it will be returned from this call. If the java.awt.Component is not successfully added, e.g. behind is not a java.awt.Component currently added to the HScene , then null will be returned.

This method must be implemented in a thread safe manner.

---

addShortcut(int, HActionable)

```
public boolean addShortcut(int keyCode, HActionable comp)
```

Adds a shortcut key to action the specified HActionable . Generating the defined java.awt.KeyEvent or HRcEvent keycode causes the specified component to become actioned --- potentially any keyCode may have a shortcut associated with it. The shortcut will only be added if the HActionable component is a child component in the container hierarchy of which the HScene is the root container. If this is not the case this method shall return false.

Note that a maximum of one HActionable may be associated with a given keyCode. An HActionable can have at most one associated shortcut keycode. Calling addShortcut(int, HActionable) repeatedly with the same HActionable will result in the previous short cut being removed. A short cut can be set on an invisible HActionable and therefore it is possible to provide short-cuts that have no user representation.

If the relevant keyCode is received by the HScene , then the HActionable will be actioned by the HScene sending it an ACTION_PERFORMED .

Parameters:

keyCode - the keycode that represents the short cut. If keycode is java.awt.event.KeyEvent#VK_UNDEFINED, then the shortcut will not be added, any existing shortcut for this component will not be changed and this method shall return false.

comp - The actionable component that will be actioned.

Returns:
true if the shortcut was added, false otherwise.

---

addWindowListener(WindowListener)

```
public void addWindowListener(java.awt.event.WindowListener wl)
```

Add a listener to receive any java.awt.event.WindowEvents sent from this `HScene` . If the listener has already been added further calls will add further references to the listener, which will then receive multiple copies of a single event.

Parameters:
`wl` - The java.awt.event.WindowListener to be notified of any java.awt.event.WindowEvents.

---

dispose()

```
public void dispose()
```

Disposes of this window. This method must be called at application exit to release the resources that are used for the HScene. Calling this method will be equivalent to calling `dispose(HScene)` . Calling this method on an HScene that was already disposed will have no effect or result in an unspecified exception being thrown. This is intentionally implementation-dependent.

---

enableShortcuts(boolean)

```
public void enableShortcuts(boolean enable)
```

Enables or disables all short cuts that are currently set on the Scene. To enable or disable a single shortcut use `addShortcut(int, HActionable)` or `removeShortcut(int)` .

Note `enableShortcuts(boolean)` does not remove existing added `HScene` shortcuts - they are merely disabled and may be subsequently re-enabled with `enableShortcuts(boolean)` .

Parameters:
`enable` - a value of true indicates all shortcuts are to be enabled, and a value of false indicates all shortcuts are to be disabled.

---

getAllShortcutKeycodes()

```
public int[] getAllShortcutKeycodes()
```

Returns all keycodes added in the HScene as shortcuts.

Returns:
all keycodes added in the HScene as shortcuts, there are no ordering guarantees.

---

getBackgroundImage()

```
public java.awt.Image getBackgroundImage()
```

Retrieve any image used as a background for this `HScene` .

Returns:
an image used as a background, or `null` if no image is set. Note that depending on the current render mode any image set may not actually be rendered.

See Also:
`setRenderMode(int)`

---

getBackgroundMode()

```
public int getBackgroundMode()
```

Get the background mode of this HScene . The return value specifies whether the paint method should draw the background (i.e. a rectangle filling the bounds of the HScene).

Returns:
one of NO_BACKGROUND_FILL or BACKGROUND_FILL .

---

getFocusOwner()

```
public java.awt.Component getFocusOwner()
```

Returns the child component of this HScene which has focus if and only if this HScene is active.

Returns:
the component with focus, or null if no children have focus assigned to them.

---

getPixelCoordinatesHScreenRectangle(Rectangle)

```
public HScreenRectangle getPixelCoordinatesHScreenRectangle(java.awt.Rectangle r)
```

Returns an HScreenRectangle which corresponds to the graphics (AWT) pixel area specified by the parameter in this HScene. (i.e. within the HScene's coordinate space).

Parameters:
r - the AWT pixel area within this HScene (i.e. within the HScene's coordinate space), specified as an java.awt.Rectangle.

Returns:
an HScreenRectangle which corresponds to the graphics (AWT) pixel area specified by the parameter in this HScene (i.e. within the HScene's coordinate space).

---

getRenderMode()

```
public int getRenderMode()
```

Get the rendering mode of any background image associated with this HScene .

Returns:
the rendering mode, one of IMAGE_NONE , IMAGE_STRETCH , IMAGE_CENTER or IMAGE_TILE .

---

getSceneTemplate()

```
public HSceneTemplate getSceneTemplate()
```

Return an HSceneTemplate describing this HScene . This template can be queried in order to obtain the size & position of the HScene in screen coordinates and the display device used for the HScene , etc.

Returns:
an HSceneTemplate describing of the HScene .

---

getShortcutComponent(int)

```
public HActionable getShortcutComponent(int keyCode)
```

Retrieve the HActionable associated with the specified shortcut key.

Parameters:
`keyCode` - the shortcut key code to be queried for an associated `HActionable` .

Returns:
the `HActionable` associated with the specified key if `keyCode` is a valid shortcut key for this `HScene` , `null` otherwise.

---

getShortcutKeycode(HActionable)

```
public int getShortcutKeycode(HActionable comp)
```

Returns the keycode associated with the specified HActionable component.

Parameters:
`comp` - the HActionable to return the keycode that it is associated with.

Returns:
the keycode associated with the specified HActionable component, if it is currently a valid shortcut "target", otherwise return java.awt.event.KeyEvent#VK_UNDEFINED.

---

isDoubleBuffered()

```
public boolean isDoubleBuffered()
```

Returns `true` if all the drawing done during the update and paint methods for this specific `HScene` object is automatically double buffered.

Overrides:
java.awt.Component.isDoubleBuffered() in class java.awt.Component

Returns:
`true` if all the drawing done during the update and paint methods for this specific `HScene` object is automatically double buffered, or `false` if drawing is not double buffered. The default value for the double buffering setting is platform-specific.

---

isEnableShortcuts()

```
public boolean isEnableShortcuts()
```

Returns the status of all short cuts that are currently set on the HScene.

Returns:
true if shortcuts are enabled, false otherwise.

See Also:
`enableShortcuts(boolean)`

---

isOpaque()

```
public boolean isOpaque()
```

Returns true if the entire `HScene` area, as given by the `java.awt.Component#getBounds` method, is fully opaque, i.e. its paint method (or surrogate methods) guarantee that all pixels are painted in an opaque `Color`.

By default, the return value depends on the value of the current background mode, as set by the `setBackgroundMode(int)` method. The return value should be overridden by subclasses that can guarantee full opacity. The consequences of an invalid overridden value are implementation specific.

Returns:

`true` if all the pixels within the area given by the `java.awt.Component#getBounds` method are fully opaque, i.e. its paint method (or surrogate methods) guarantee that all pixels are painted in an opaque Color, otherwise `false`.

---

isVisible()

```
public boolean isVisible()
```

Determines if the `HScene` (or more properly its added child components) is Visible. Initially an `HScene` is invisible.

Overrides:
java.awt.Component.isVisible() in class java.awt.Component

Returns:
true if the `HScene` is visible; false otherwise.

---

paint(Graphics)

```
public void paint(java.awt.Graphics g)
```

`HScene` objects override the paint method (defined in `java.awt.Component`) to paint the added "child" components on top of an optional background color or image. The paint behavior is as follows:

1. If the current background mode is `BACKGROUND_FILL`, the entire `HScene` is first filled using the current background color.
2. If a background image has been set using the `setBackgroundImage(Image)` method, *and* the current image rendering mode as set using `setRenderMode(int)` is not IMAGE_NONE, the specified image is painted. Scaling and tiling are performed according to the render mode set.
3. Finally any children of the HScene are rendered in z-order.

Overrides:
java.awt.Container.paint(java.awt.Graphics) in class java.awt.Container

Parameters:
`g` - the graphics context to use for painting.

---

pop(Component)

```
public boolean pop(java.awt.Component component)
```

Moves the specified `java.awt.Component` one component nearer in the Z-order, i.e. swapping it with the `java.awt.Component` that was directly in front of it.

If `component` is already at the front of the Z-order, the order is unchanged and `pop` returns `true`.

Specified By:
`pop(Component)` in interface `HComponentOrdering`

Parameters:
`component` - The `java.awt.Component` to be moved.

Returns:
returns `true` on success, `false` on failure, for example if the `java.awt.Component` has yet to be added to the `HScene`.

---

popInFrontOf(Component, Component)

```
public boolean popInFrontOf(java.awt.Component move, java.awt.Component behind)
```

Puts the specified java.awt.Component in front of another java.awt.Component in the Z-order of this HScene .

If move and behind are the same component which has been added to the container popInFront does not change the Z-order and returns true.

Specified By:
popInFrontOf(Component, Component) in interface HComponentOrdering

Parameters:
move - The java.awt.Component to be moved directly in front of the "behind" Component in the Z-order of this HScene .

behind - The java.awt.Component which the "move" Component should be placed directly in front of.

Returns:
returns true on success, false on failure, for example when either java.awt.Component has yet to be added to the HScene . If this method fails, the Z-order is unchanged.

---

popToFront(Component)

```
public boolean popToFront(java.awt.Component component)
```

Brings the specified java.awt.Component to the "front" of the Z-order in this HScene .

If component is already at the front of the Z-order, the order is unchanged and popToFront returns true.

Specified By:
popToFront(Component) in interface HComponentOrdering

Parameters:
component - The java.awt.Component to bring to the "front" of the Z-order of this HScene .

Returns:
returns true on success, false on failure, for example when the java.awt.Component has yet to be added to the HScene . If this method fails, the Z-order is unchanged.

---

processWindowEvent(WindowEvent)

```
protected void processWindowEvent(java.awt.event.WindowEvent we)
```

Process a java.awt.event.WindowEvent for this HScene .

Parameters:
we - the java.awt.event.WindowEvent to be processed.

---

push(Component)

```
public boolean push(java.awt.Component component)
```

Moves the specified java.awt.Component one component further away in the Z-order, i.e. swapping it with the java.awt.Component that was directly behind it.

If component is already at the back of the Z-order, the order is unchanged and push returns true.

Specified By:
push(Component) in interface HComponentOrdering

Parameters:
component - The java.awt.Component to be moved.

Returns:

returns `true` on success, `false` on failure, for example if the `java.awt.Component` has yet to be added to the `HScene` .

---

pushBehind(Component, Component)

```
public boolean pushBehind(java.awt.Component move, java.awt.Component front)
```

Puts the specified `java.awt.Component` behind another `java.awt.Component` in the Z-order of this `HScene` .

If `move` and `front` are the same component which has been added to the container `pushBehind` does not change the Z-order and returns `true`.

Specified By:
`pushBehind(Component, Component)` in interface `HComponentOrdering`

Parameters:
`move` - The `java.awt.Component` to be moved directly behind the "front" Component in the Z-order of this `HScene` .

`front` - The `java.awt.Component` which the "move" Component should be placed directly behind.

Returns:
returns `true` on success, `false` on failure, for example when either `java.awt.Component` has yet to be added to the `HScene` .

---

pushToBack(Component)

```
public boolean pushToBack(java.awt.Component component)
```

Place the specified `java.awt.Component` at the "back" of the Z-order in this `HScene` .

If `component` is already at the back the Z-order is unchanged and `pushToBack` returns `true`.

Specified By:
`pushToBack(Component)` in interface `HComponentOrdering`

Parameters:
`component` - The `java.awt.Component` to place at the "back" of the Z-order of this `HScene` .

Returns:
returns `true` on success, `false` on failure, for example when the `java.awt.Component` has yet to be added to the `HScene` . If the component was not added to the container `pushToBack` does not change the Z-order.

---

removeShortcut(int)

```
public void removeShortcut(int keyCode)
```

Removes the specified short-cut key. if the specified short-cut key is not registered, the method has no effect

Parameters:
`keyCode` - The keycode that represents the short cut

---

removeWindowListener(WindowListener)

```
public void removeWindowListener(java.awt.event.WindowListener wl)
```

Remove a listener so that it no longer receives any java.awt.event.WindowEvents. If the specified listener is not registered, the method has no effect. If multiple references to a single listener have been registered it should be noted that this method will only remove one reference per call.

Parameters:

`wl` - The java.awt.event.WindowListener to be removed from notification of any java.awt.event.WindowEvents.

---

setBackgroundImage(Image)

```
public void setBackgroundImage(java.awt.Image image)
```

Set an image which shall be painted in the background of the `HScene` , after the background has been drawn according to the current mode set with `setBackgroundMode(int)` , but before any children are drawn. The image is rendered according to the current render mode set with `setRenderMode(int)` .

Note that the use of a background image in this way may affect the return value of the `isOpaque()` method, depending on the image and the current rendering mode.

Parameters:

`image` - the image to be used as a background. If this parameter is `null` any current image is removed. Note that depending on the current render mode any image set may not actually be rendered.

See Also:

`setRenderMode(int)`

---

setBackgroundMode(int)

```
public void setBackgroundMode(int mode)
```

Set the background mode of this `HScene` . The value specifies whether the paint method should draw the background (i.e. a rectangle filling the bounds of the `HScene`).

Note that the background mode will affect the return value of the `isOpaque()` method, depending on the value of the `mode` parameter. A fill mode of `BACKGROUND_FILL` implies that `isOpaque()` must return `true`.

Parameters:

`mode` - one of `NO_BACKGROUND_FILL` or `BACKGROUND_FILL` . If mode is not a valid value, an IllegalArgumentException will be thrown.

---

setRenderMode(int)

```
public boolean setRenderMode(int mode)
```

Set the rendering mode of any background image associated with this `HScene` .

Note that the minimum requirement is to support only the `IMAGE_NONE` mode. Support of the other modes is platform and implementation specific.

Parameters:

`mode` - the rendering mode, one of `IMAGE_NONE` , `IMAGE_STRETCH` , `IMAGE_CENTER` or `IMAGE_TILE` .

Returns:

`true` if the mode was set successfully, `false` if the mode is not supported by the platform.

---

setVisible(boolean)

```
public void setVisible(boolean visible)
```

Shows or hides this `HScene` depending on the value of the input parameter `visible`. An `HScene` is initially not visible, a call to `setVisible` should be used to make it visible. Unlike the `show()` method This method does *not* cause the `HScene` to request the input focus.

Overrides:
java.awt.Component.setVisible(boolean) in class java.awt.Component

Parameters:
`visible` - If true, makes this `HScene` visible; otherwise, hides this `HScene` .

See Also:
`show()`

---

show()

```
public void show()
```

Shows this `HScene` , and brings it to the front.

If this `HScene` is not yet visible, `show` makes it visible. If this `HScene` is already visible, then this method brings it to the front.

Overrides:
java.awt.Component.show() in class java.awt.Component

See Also:
`setVisible(boolean)`

org.havi.ui
HSceneFactory

Syntax

```
public class HSceneFactory

java.lang.Object
  |
  +--org.havi.ui.HSceneFactory
```

Description

The `HSceneFactory` class provides a generic mechanism for an application to request `HScene` resources from a (conceptual) window management system. The `HSceneFactory` is the single entry to potentially multiple HGraphicsDevice centric window management policies.

The `HSceneFactory` class provides an opaque interface between any application (or window) management scheme and the Java application, itself.

Note that only one `HScene` per `HGraphicsDevice` can be acquired at any one time for each application.

`HScene` follow the design pattern of the `java.awt.Window` class. They are not a scarce resource on the platform. On platforms which only support one `HScene` being visible at one time the current `HScene` both loses the input focus and is hidden (e.g. iconified) when another application successfully requests the input focus. Two `java.awt.event.WindowEvent` events, with ids `WINDOW_DEACTIVATED` and `WINDOW_ICONIFIED`, shall be generated and sent to the `HScene` which has lost the focus and the `isShowing` method for that HScene shall return false.

The constraints on the sizing and positioning of the `HScene` returned by the methods are dependent on the platform-specific `HScene` support. The three scenarios are defined below:

Platforms Supporting a Full Multi-Window System

Platforms where windows may obscure each other shall allow applications to create `HScene` objects which are fully within the area of the supporting `HGraphicsDevice` without any restriction on size or location. Whether successful creation of HScenes which are wholly or partially outside the area of the HGraphicsDevice is supported is implementation dependent.

Platforms Supporting a Single Window System

Platforms supporting a simple "full-screen" view on a single application at any one time are required to allow applications to create HScenes which cover the full area of the supporting HGraphicsDevice. HScenes matching this description shall be returned as the default `HScene` for the supporting `HGraphicsDevice` . It is implementation dependent whether requests to create HScene objects which cover less than the full area of the supporting HGraphicsDevice succeed and if they succeed, what the consequences are of their being displayed.

Platforms Supporting a Restricted Multi-Window System

Platforms supporting a "paned" system where each application occupies an area on-screen that is always visible make fewer guarantees to applications. When an `HScene` is created on such a system, the platform shall return an HScene which, if visible at that time, would cover as much as possible of the requested area of the supporting HGraphicsDevice considering all other visible HScenes at that time. HScenes which are not visible at this time shall not be considered when fixing the location & size of the new HScene. HScenes which are visible at this time shall not be effected by the creation of the new HScene.

When `setVisible(boolean)` is called on such an `HScene` , the platform shall attempt to make the HScene visible using its currently set position and size. If this would conflict with HScenes which are already visible (e.g. because of changes between when the HScene was created and when

setVisible was called) then the call to setVisible shall fail silently. Applications are responsible for testing for failure using the isVisible() method. The HScenes of already visible applications shall not be impacted by this method call.

The above text specifies the relationship between an HScene and its supporting HGraphicsDevice. This specification intentionally does not define minimum requirements for HGraphicsDevices or for their relationship with other HScreenDevices of any type.

Calling resizeScene(HScene, HSceneTemplate) for an HScene shall apply the same policies as described above for newly created HScenes when deciding whether the resizing operation requested is possible. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

Methods

dispose(HScene)

```
public void dispose(HScene scene)
```

This method allows an application to dispose of its HScene, indicating that the application has no further need for user interaction (i.e. its resources may be released to the system, for future garbage collection. After dispose() has been called the application may then acquire another HScene.

After calling this method, further method calls on the HScene will have no effect or result in an unspecified exception being thrown. This is intentionally implementation-dependent.

Parameters:

scene - the HScene to be disposed of.

See Also:

HScene

getBestScene(HSceneTemplate)

```
public HScene getBestScene(HSceneTemplate hst)
```

Returns an HScene that best corresponds to the input HSceneTemplate, or null if such an HScene cannot be generated.

Note that conflict may occur between properties in the HSceneTemplate and the HGraphicsConfigTemplate corresponding to the currently active HGraphicsConfiguration. In the event of conflict between properties which are PREFERRED or UNNECESSARY, the properties concerned shall be ignored and the default will prevail. In the event of conflict between properties which are REQUIRED, this method shall fail and return null.

Parameters:
`hst` - the HSceneTemplate to match against

Returns:
the `HScene` that matches the properties as specified in the `HSceneTemplate`, or null if they cannot be satisfied, or if no further `HScene` are available for this application.

---

getBestSceneTemplate(HSceneTemplate)

```
public HSceneTemplate getBestSceneTemplate(HSceneTemplate hst)
```

Returns an `HSceneTemplate` that is closest to to the input `HSceneTemplate` and corresponds to an HScene which could be successfully created on this platform at the time that this method is called.

Note that since some platforms may support more than one concurrent application there is no guarantee that the values returned by this method would actually match those of a subsequently requested `HScene`, using the same template.

Note that conflict may occur between properties in the `HSceneTemplate` and the `HGraphicsConfigTemplate` corresponding to the currently active `HGraphicsConfiguration`. In the event of conflict between properties which are PREFERRED or UNNECESSARY, the properties concerned shall be ignored and the default will prevail. In the event of conflict between properties which are REQUIRED, this method shall fail and return null.

Parameters:
`hst` - The `HSceneTemplate` properties that the `HScene` should satisfy.

Returns:
an `HSceneTemplate` that best corresponds to the input `HSceneTemplate`.

---

getDefaultHScene()

```
public HScene getDefaultHScene()
```

Create the default `HScene` for the default `HScreen` for this application. This shall be identical to calling

```
org.havi.ui.HScene.getDefaultHscene(org.havi.ui.HScreen.getDefaultHScreen())
```

Returns:
the default `HScene` for the default `HScreen`. If the application has already obtained an `HScene` for the default `HScreen`, then that HScene is returned.

---

getDefaultHScene(HScreen)

```
public HScene getDefaultHScene(HScreen screen)
```

Create the default `HScene` for this `HScreen`. This shall use the `HGraphicsConfiguration` returned by calling

```
screen.getDefaultHGraphicsDevice().getDefaultConfiguration()
```

Parameters:
`screen` - the screen for which the `HScene` should be returned.

Returns:
the default `HScene` for this `HScreen`. If the application has already obtained an `HScene` for this `HScreen`, then that HScene is returned.

---

getFullScreenScene(HGraphicsDevice)

```
public HScene getFullScreenScene(HGraphicsDevice device)
```

Create a full-screen `HScene` on the specified `HGraphicsDevice` or null if such an `HScene` cannot be generated.

Parameters:

`device` - the graphics device with which to create the `HScene` . This is obtained through a `HGraphicsConfigTemplate` / `HGraphicsConfiguration` sequence as described in the document for these classes.

Returns:

a created full-screen `HScene` or null if this is not possible.

---

getInstance()

```
public static HSceneFactory getInstance()
```

Returns an `HSceneFactory` object to an application.

Returns:

an `HSceneFactory` object to an application. Note that repeated invocations of this method should return the same object (reference).

---

resizeScene(HScene, HSceneTemplate)

```
public HSceneTemplate resizeScene(HScene hs, HSceneTemplate hst)
```

Resizes an `HScene` so that it best corresponds to the input `HSceneTemplate` , or remains unchanged if it cannot be so resized.

Parameters:

`hs` - the `HScene` to be resized.

`hst` - the `HSceneTemplate` which denotes the new size / location. Only size location options in the `HSceneTemplate` will be considered.

Returns:

an `HSceneTemplate` that indicates the `HScene` properties after (possible) resizing.

Throws:

`java.lang.IllegalStateException` - if the `HScene` had previously been disposed.

org.havi.ui
HSceneTemplate

Syntax

```
public class HSceneTemplate

java.lang.Object
  |
  +--org.havi.ui.HSceneTemplate
```

Description

The HSceneTemplate class is used to obtain an HScene subject to a variety of constraints.

The following constraints are supported:

Preference	Object
GRAPHICS_CONFIGURATION	HGraphicsConfiguration
SCENE_PIXEL_LOCATION	java.awt.Point
SCENE_PIXEL_DIMENSION	java.awt.Dimension
SCENE_SCREEN_LOCATION	HScreenPoint
SCENE_SCREEN_DIMENSION	HScreenDimension

Note that as defined here users must set both a location and a dimension preference to request a given rectangle area. Instances of HSceneTemplate returned by the system will always be fully specified. Therefore, if an application only sets a preference on SCENE_SCREEN_LOCATION the system will fill in SCENE_SCREEN_DIMENSION, SCENE_PIXEL_LOCATION and SCENE_PIXEL_DIMENSION with default values based on the appropriate HGraphicsConfiguration and its associated HGraphicsDevice.

In the event of a conflict between REQUIRED preferences specified in pixel coordinates (SCENE_PIXEL_LOCATION, SCENE_PIXEL_DIMENSION) and normalized screen coordinates (SCENE_SCREEN_LOCATION, SCENE_SCREEN_DIMENSION) the system shall ignore the pixel coordinates and use only the screen coordinate preferences. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method

None.

See Also:
HSceneFactory

Fields

GRAPHICS_CONFIGURATION

```
public static final int GRAPHICS_CONFIGURATION
```

A value for use in the preference field of the setPreference(int, Object, int), getPreferenceObject(int) and getPreferencePriority(int) methods in the HSceneTemplate that indicates that the HScene be created with a specified HGraphicsConfiguration (corresponding to a particular HGraphicsDevice).

By default the HSceneTemplate creates HScene on the default HScreen default HGraphicsDevice with its current HGraphicsConfiguration.

LARGEST_PIXEL_DIMENSION

```
public static final java.awt.Dimension LARGEST_PIXEL_DIMENSION
```

A Dimension object for use in the object field of the setPreference(int, Object, int) and getPreferenceObject(int) methods in the HSceneTemplate that indicates that the SCENE_PIXEL_DIMENSION feature should be set to its largest possible dimension.

PREFERRED

```
public static final int PREFERRED
```

A value for use in the priority field of the setPreference(int, Object, int) and getPreferencePriority(int) methods in the HSceneTemplate that indicates that this feature is preferred over a selection that does not include this feature, although both selections can be considered valid.

REQUIRED

```
public static final int REQUIRED
```

A value for use in the priority field of the setPreference(int, Object, int) and getPreferencePriority(int) methods in the HSceneTemplate that indicates that this feature is required in the HScene. If this feature is not available, do not create an HScene object.

SCENE_PIXEL_DIMENSION

```
public static final int SCENE_PIXEL_DIMENSION
```

A value for use in the preference field of the setPreference(int, Object, int), getPreferenceObject(int) and getPreferencePriority(int) methods in the HSceneTemplate that indicates that the HScene be created with preferred dimensions in pixels as given by a Dimension object. If the Dimension object is LARGEST_DIMENSION then the returned HScene should have the largest possible dimensions.

SCENE_PIXEL_LOCATION

```
public static final int SCENE_PIXEL_LOCATION
```

A value for use in the preference field of the `setPreference(int, Object, int)`, `getPreferenceObject(int)` and `getPreferencePriority(int)` methods in the `HSceneTemplate` that indicates that the `HScene` be created with a preferred location in pixels as given by a Point object. The graphics pixels shall correspond to the pixel setting for the `HGraphicsDevice` settings as indicated by the `HGraphicsConfiguration` as specified in the `HSceneTemplate` (or its default value).

SCENE_SCREEN_DIMENSION

```
public static final int SCENE_SCREEN_DIMENSION
```

A value for use in the preference field of the `setPreference(int, Object, int)`, `getPreferenceObject(int)` and `getPreferencePriority(int)` methods in the `HSceneTemplate` that indicates that the `HScene` be created with preferred dimensions in normalized screen coordinates as given by an `HScreenDimension` object.

SCENE_SCREEN_LOCATION

```
public static final int SCENE_SCREEN_LOCATION
```

A value for use in the preference field of the `setPreference(int, Object, int)`, `getPreferenceObject(int)` and `getPreferencePriority(int)` methods in the `HSceneTemplate` that indicates that the `HScene` be created with a preferred location in normalized screen coordinates, as given by an `HScreenPoint` object.

UNNECESSARY

```
public static final int UNNECESSARY
```

A value for use in the priority field of the `setPreference(int, Object, int)` and `getPreferencePriority(int)` methods in the `HSceneTemplate` that indicates that this feature is unnecessary in the `HScene`. A selection without this feature is preferred over a selection that includes this feature since it is not used.

Constructors

HSceneTemplate()

```
public HSceneTemplate()
```

Creates a new `HSceneTemplate` object. See the class description for details of constructor parameters and default values.

Methods

getPreferenceObject(int)

```
public java.lang.Object getPreferenceObject(int preference)
```

Return the preference object for the specified preference.

Parameters:

`preference` - the preference to be indicated.

Returns:

the preference object for the specified preference. Valid values shall be of the following types, or null if no preference object was set:

- An `HGraphicsConfiguration` object which is returned for the `GRAPHICS_CONFIGURATION` preference.
- A java.awt.Point object which is returned for the `SCENE_PIXEL_LOCATION` preference.
- A java.awt.Dimension object which is returned for the `SCENE_PIXEL_DIMENSION` preference.
- An `HScreenPoint` object which is returned for the `SCENE_SCREEN_LOCATION` preference.
- An `HScreenDimension` object which is returned for the `SCENE_SCREEN_DIMENSION` preference.

---

getPreferencePriority(int)

```
public int getPreferencePriority(int preference)
```

Return the priority for the specified preference.

Parameters:

`preference` - the preference to be indicated. Valid values are: `GRAPHICS_CONFIGURATION`, `SCENE_PIXEL_LOCATION`, `SCENE_PIXEL_DIMENSION`, `SCENE_SCREEN_LOCATION` and `SCENE_SCREEN_DIMENSION`.

Returns:

the priority for the specified preference.

---

setPreference(int, Object, int)

```
public void setPreference(int preference, java.lang.Object object, int priority)
```

Set the indicated preference (and associated value object) to have the specified priority. If the preference has been previously set, then the previous object and priority shall be overwritten.

By default, the preferences should have an `UNNECESSARY` priority.

Parameters:

`preference` - the preference to be indicated. Valid values are: `GRAPHICS_CONFIGURATION`, `SCENE_PIXEL_LOCATION`, `SCENE_PIXEL_DIMENSION`, `SCENE_SCREEN_LOCATION` and `SCENE_SCREEN_DIMENSION`.

An IllegalArgumentException shall be thrown if the preference is not a valid value as listed above.

`object` - the Object associated with the given preference.

An IllegalArgumentException shall be thrown if the object is not valid for the preference as specified in the class description.

`priority` - the priority of the preference. Valid values are: `REQUIRED`, `PREFERRED` and `UNNECESSARY`.

If `priority` is not a valid priority as defined here a java.lang.IllegalArgumentException will be thrown.

org.havi.ui
HScreen

Syntax
```
public class HScreen

java.lang.Object
  |
  +--org.havi.ui.HScreen
```

Description
This class describes the final output composition of a device. It ties together all the (MPEG) video decoders, all the graphics sub-systems and backgrounds which are all combined together before finally being displayed. A platform with two independent displays would support two instances of this class. Where a device outputs audio closely bound with video, that audio output can also be represented through this class.

Since an HScreen represents a single video output signal from a device, all the devices which contribute to that signal must have certain properties in common. It is not possible to select conflicting configurations for different devices on the same HScreen - for example having a video device whose logical output has a 4:3 picture aspect ratio and a graphics device whose logical output has a 16:9 picture aspect ratio. This specification intentionally does not define configurations, or which configurations would be conflicting, since these are essentially region or market dependent. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

Methods

getBestConfiguration(HBackgroundConfigTemplate[])

```
public HBackgroundConfiguration getBestConfiguration(HBackgroundConfigTemplate[] hbcta)
```

Returns an `HBackgroundConfiguration` from an `HBackgroundDevice` which is present on this `HScreen` that best matches at least one of the specified `HBackgroundConfigTemplate`, or null if this is not possible.

Equally best in this sense means that the configurations satisfy an equal number of preferences with priorities `PREFERRED` and `PREFERRED_NOT` and all preferences with priorities `REQUIRED` and `REQUIRED_NOT`.

Configurations are chosen according to the following algorithm, based on the priority as supplied to `setPreference(int, int)`. Configurations must:

1. satisfy ALL the preferences whose priority was `REQUIRED`
2. satisfy NONE of the preferences whose priority was `REQUIRED_NOT`
3. satisfy as many as possible of the preferences whose priority was `PREFERRED`.
4. satisfy as few as possible of the preferences whose priority was `PREFERRED_NOT`.

Preferences whose priority was `DONT_CARE` are ignored.

This method returns null if no configuration exists that satisfies all `REQUIRED` and `REQUIRED_NOT` priorities.

Parameters:

`hvca` - the array of `HBackgroundConfiguration` objects to choose from, represented as an array of `HBackgroundConfiguration` objects.

Returns:

an `HBackgroundConfiguration` object that is the best matching configuration possible, or null if no HBackgroundConfiguration passes the criteria.

---

getBestConfiguration(HGraphicsConfigTemplate[])

```
public HGraphicsConfiguration getBestConfiguration(HGraphicsConfigTemplate[] hgcta)
```

Returns an `HGraphicsConfiguration` from an `HGraphicsDevice` which is present on this `HScreen` that best matches at least one of the specified `HGraphicsConfigTemplate`. If this is not possible this method will attempt to construct an `HEmulatedGraphicsConfiguration` where the emulated configuration best matches one of the specified `HGraphicsConfigTemplate`. If this is not possible, null is returned.

Equally best in this sense means that the configurations satisfy an equal number of preferences with priorities `PREFERRED` and `PREFERRED_NOT` and all preferences with priorities `REQUIRED` and `REQUIRED_NOT`.

Configurations are chosen according to the following algorithm, based on the priority as supplied to `setPreference(int, int)`. Configurations must:

1. satisfy ALL the preferences whose priority was `REQUIRED`
2. satisfy NONE of the preferences whose priority was `REQUIRED_NOT`
3. satisfy as many as possible of the preferences whose priority was `PREFERRED`.
4. satisfy as few as possible of the preferences whose priority was `PREFERRED_NOT`.

Preferences whose priority was `DONT_CARE` are ignored.

This method returns null if no configuration exists that satisfies all `REQUIRED` and `REQUIRED_NOT` priorities.

Parameters:

`hgcta` - - the array of `HGraphicsConfigTemplate` objects to choose from.

Returns:

an `HGraphicsConfiguration` object that is the best matching configuration possible, or null if no HGraphicsConfiguration or HEmulatedGraphicsConfiguration object passes the criteria.

---

getBestConfiguration(HVideoConfigTemplate[])

```
public HVideoConfiguration getBestConfiguration(HVideoConfigTemplate[] hvcta)
```

Returns an HVideoConfiguration from an HVideoDevice which is present on this HScreen that best matches at least one of the specified HVideoConfigTemplate. If this is not possible, null is returned.

Equally best in this sense means that the configurations satisfy an equal number of preferences with priorities PREFERRED and PREFERRED_NOT and all preferences with priorities REQUIRED and REQUIRED_NOT.

Configurations are chosen according to the following algorithm, based on the priority as supplied to setPreference(int, int). Configurations must:

1. satisfy ALL the preferences whose priority was REQUIRED
2. satisfy NONE of the preferences whose priority was REQUIRED_NOT
3. satisfy as many as possible of the preferences whose priority was PREFERRED.
4. satisfy as few as possible of the preferences whose priority was PREFERRED_NOT.

Preferences whose priority was DONT_CARE are ignored.

This method returns null if no configuration exists that satisfies all REQUIRED and REQUIRED_NOT priorities.

Parameters:

hvcta - - the array of HVideoConfigTemplate objects to choose from.

Returns:

an HVideoConfiguration object that is the best matching configuration possible, or null if no HVideoConfiguration object passes the criteria.

---

getCoherentScreenConfigurations(HScreenConfigTemplate[])

```
public HScreenConfiguration[] getCoherentScreenConfigurations(HScreenConfigTemplate[]
            hscta)
```

Return a coherent set of HScreenConfiguration matching a set of templates. One HScreenConfiguration will be returned for each HScreenConfigTemplate provided as input. The class of the returned objects will correspond to the class of the templates provided as input - where an HGraphicsConfigTemplate is provided as input, an HGraphicsConfiguration shall be returned. Where an HVideoConfigTemplate is provided as input, an HVideoConfiguration shall be returned. If more than one template of the same type is provided then the configurations returned must be on different devices but presented on the same screen. If more templates of one type are provided than there are devices of that type in the system, this function will return null.

Coherent means that all the required properties are respected in all of the templates provided and that a configuration can be returned for each template provided.

Conflicts between templates are resolved as discussed in the description of HScreenConfigTemplate.

Parameters:

hscta - an array of objects describing desired / required configurations. If a zero-length array is passed this function will throw a java.lang.IllegalArgumentException.

Returns:

an array of non-null objects describing a coherent set of screen device configurations or null if no such coherent set is possible.

---

getDefaultHBackgroundDevice()

```
public HBackgroundDevice getDefaultHBackgroundDevice()
```

Return the default background device for this screen.

Returns:
the default background device for this screen or null if none exist.

---

getDefaultHGraphicsDevice()

```
public HGraphicsDevice getDefaultHGraphicsDevice()
```

Return the default graphics device for this screen. Note that the `HGraphicsDevice` is the default device for rendering graphics, but it may not be capable of displaying video / mixing it with graphics concurrently.

Returns:
the default graphics device for this screen or null if none exist.

---

getDefaultHScreen()

```
public static HScreen getDefaultHScreen()
```

Returns the default `HScreen` for this application. For systems where an application is associated with audio or video which is started before the application starts, this method will return the `HScreen` where that associated audio / video is being output.

Returns:
the default `HScreen` for this application.

---

getDefaultHVideoDevice()

```
public HVideoDevice getDefaultHVideoDevice()
```

Return the default video device for this screen. Note that the `HVideoDevice` is the default device for rendering video, but it may not be capable of displaying graphics / mixing it with graphics concurrently.

Returns:
an `HVideoDevice` object or null if none exist.

---

getHBackgroundDevices()

```
public HBackgroundDevice[] getHBackgroundDevices()
```

Returns a list of background devices for this screen.

Returns:
an array of `HBackgroundDevice` or null if none exist.

---

getHGraphicsDevices()

```
public HGraphicsDevice[] getHGraphicsDevices()
```

Returns a list of graphics devices for this screen.

Returns:
an array of `HGraphicsDevice` or null if none exist.

---

getHScreens()

```
public static HScreen[] getHScreens()
```

Returns all `HScreen` in this system.

Returns:
an array of `HScreen` representing all `HScreen` in this system.

---

getHVideoDevices()

```
public HVideoDevice[] getHVideoDevices()
```

Returns a list of video device for this screen. For systems where an application is associated with video started before the application starts, the first entry in the array returned will be the video device where that video is being output.

Returns:
an array of `HVideoDevice` objects or null if none exist.

---

setCoherentScreenConfigurations(HScreenConfiguration[])

```
public boolean setCoherentScreenConfigurations(HScreenConfiguration[] hsca)
```

Modify the settings for a set of `HScreenDevice`, based on their `HScreenConfiguration` supplied. Settings should be modified atomically (where possible) or should not be modified if the `HScreenConfiguration` can be determined to be conflicting a priori, i.e. are not "coherent", or would cause an exception to be thrown.

Parameters:
`hsca` - the array of configurations that should be applied atomically (where possible). If the length of this array is zero a java.lang.IllegalArgumentException will be thrown.

Returns:
A boolean indicating whether all `HScreenConfiguration` could be applied successfully. If all of the `HScreenConfiguration` could not be applied successfully, the configuration after this method may not match the configuration of the devices prior to this method being called --- applications should take steps to determine whether a partial change of settings has been made on each device.

Throws:
`java.lang.SecurityException` - if the application does not have sufficient rights to set the `HScreenConfiguration` for any of the devices.

`HPermissionDeniedException` - if the application does not currently have the right to set the configuration for any of the devices.

`HConfigurationException` - if the specified `HScreenConfiguration` array is not valid for any of the devices.

org.havi.ui
HScreenConfigTemplate

Syntax
```
public abstract class HScreenConfigTemplate

java.lang.Object
  |
  +--org.havi.ui.HScreenConfigTemplate
```

Direct Known Subclasses:
HBackgroundConfigTemplate, HGraphicsConfigTemplate, HVideoConfigTemplate

Description
This class describes a configuration of a screen device in terms of various properties and their importance to the application. It is used to request a valid instance of a configuration conforming to the description provided. Sub-classes of this define additional constants which may be used for additional properties. Those classes can be sub-classed in turn to add further properties by systems using the HAVi UI.

In the event of conflicting preferences between HScreenConfigTemplates (for example where a configuration is requested which conflicts with an existing configuration) the following rules shall be applied in all cases.

- Where all the conflicting preferences have priority PREFERRED, PREFERRED_NOT or DONT_CARE, the conflicting preferences shall be discarded from the template.
- Where all the conflicting preferences have priority REQUIRED or REQUIRED_NOT, the method concerned shall fail.
- In situations other than the above, all preferences with priority PREFERRED, PREFERRED_NOT or DONT_CARE shall be discarded. If there is still a conflict after this, the method concerned shall fail.

The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

See Also:
HBackgroundConfigTemplate, HGraphicsConfigTemplate, HVideoConfigTemplate

Fields

DONT_CARE

```
public static final int DONT_CARE
```

A value for use in the priority field of the setPreference(int, int) and getPreferencePriority(int) methods in the HScreenConfigTemplate that indicates that the presence or absence of this feature in the HScreenConfiguration does not matter. Preferences with this priority play no part in the selection procedure.

FLICKER_FILTERING

```
public static final int FLICKER_FILTERING
```

A value for use in the preference field of the setPreference(int, int) and getPreferencePriority(int) methods in the HScreenConfigTemplate that indicates that the device configuration supports flicker filtering (if it supports an interlaced screen).

INTERLACED_DISPLAY

```
public static final int INTERLACED_DISPLAY
```

A value for use in the preference field of the setPreference(int, int) and getPreferencePriority(int) methods in the HScreenConfigTemplate that indicates that the device configuration supports an interlaced display.

PIXEL_ASPECT_RATIO

```
public static final int PIXEL_ASPECT_RATIO
```

A value for use in the preference field of the setPreference(int, int), getPreferenceObject(int) and getPreferencePriority(int) methods in the HScreenConfigTemplate that indicates that the device configuration supports the pixel aspect ratio, as specified in a Dimension object which indicates the (relative) x, y pixel aspect ratio.

Instances of HScreenConfigTemplate generated by the platform and returned to applications (e.g. from getConfigTemplate() shall have this preference set to a platform specific value with the REQUIRED priority.

PIXEL_RESOLUTION

```
public static final int PIXEL_RESOLUTION
```

A value for use in the preference field of the setPreference(int, int), getPreferenceObject(int) and getPreferencePriority(int) methods in the HScreenConfigTemplate that indicates that the device configuration supports the pixel resolution, as specified in a Dimension object which indicates the pixel resolution of (the area of) the graphics device (as specified using the SCREEN_RECTANGLE preference).

Instances of HScreenConfigTemplate generated by the platform and returned to applications (e.g. from getConfigTemplate() shall have this preference set to a platform specific value with the REQUIRED priority.

PREFERRED

```
public static final int PREFERRED
```

A value for use in the priority field of the setPreference(int, int) and getPreferencePriority(int) methods in the HScreenConfigTemplate that indicates that

this feature is desired in the HScreenConfiguration. A selection with this feature is preferred over a selection that does not include this feature, although both selections can be considered valid matches.

PREFERRED_NOT

```
public static final int PREFERRED_NOT
```

A value for use in the priority field of the setPreference(int, int) and getPreferencePriority(int) methods in the HScreenConfigTemplate that indicates that this feature is desired not to be present in the HScreenConfiguration. A selection without this feature is preferred over a selection that does not include this feature, although both selections can be considered valid matches.

REQUIRED

```
public static final int REQUIRED
```

A value for use in the priority field of the setPreference(int, int) and getPreferencePriority(int) methods in the HScreenConfigTemplate that indicates that this feature is required in the HScreenConfiguration. If this feature is not available, do not select the HScreenConfiguration object.

REQUIRED_NOT

```
public static final int REQUIRED_NOT
```

A value for use in the priority field of the setPreference(int, int) and getPreferencePriority(int) methods in the HScreenConfigTemplate that indicates that this feature is required not to be present in the HScreenConfiguration. If this feature is available, do not select the HScreenConfiguration object.

SCREEN_RECTANGLE

```
public static final int SCREEN_RECTANGLE
```

A value for use in the preference field of the setPreference(int, int), getPreferenceObject(int) and getPreferencePriority(int) methods in the HScreenConfigTemplate that indicates that the device configuration supports presentation on a particular on-screen area, as specified in an HScreenRectangle object

Use of this value with an HScreenRectangle object other than the identity rectangle [0, 0 -> 1, 1] implies scaling of the presentation to fit within the specified HScreenRectangle.

Platforms not supporting such scaling at all or choosing to expose such scaling through other APIs should only return HScreenConfigTemplate with the HScreenRectangle [0, 0 -> 1, 1] for the SCREEN_RECTANGLE preference.

Instances of HScreenConfigTemplate generated by the platform and returned to applications (e.g. from getConfigTemplate() shall have this preference set to a platform specific value with the REQUIRED priority.

VIDEO_GRAPHICS_PIXEL_ALIGNED

```
public static final int VIDEO_GRAPHICS_PIXEL_ALIGNED
```

A value for use in the preference field of the setPreference(int, int), getPreferenceObject(int) and getPreferencePriority(int) methods in the

HScreenConfigTemplate that indicates that the device configuration supports the display of video streams and graphics with aligned pixels of the same size. Alignment of the origins of the two pixel coordinate spaces is explicitly not required. Where a video device is moving the video relative to the screen in real time (e.g. implementing pan and scan), graphics configurations shall only support this feature where the implementation of the graphics device can track the position changes in the video device automatically.

If this preference is set and used to request an HVideoConfiguration then an HGraphicsConfiguration shall be used as the preference object. If it is set and used to request an HGraphicsConfiguration then an HVideoConfiguration shall be used as the preference object. Requesting an HVideoConfiguration which is VIDEO_GRAPHICS_PIXEL_ALIGNED with another HVideoConfiguration shall fail unless the system concerned supports two HVideoDevice objects which can support this exact feature.

This preference is used by the platform as a constraint in selecting configurations. Templates generated by the platform and then returned to applications (e.g. from a getConfigTemplate method) shall not have this preference filled in by the platform.

ZERO_BACKGROUND_IMPACT

```
public static final int ZERO_BACKGROUND_IMPACT
```

A value for use in the preference field of the setPreference(int, int) and getPreferencePriority(int) methods in the HScreenConfigTemplate that indicates that the device configuration should have zero impact on already displayed backgrounds. If used with the REQUIRED priority, this means no changes shall be made. If used with the PREFERRED priority, this means changes may be made but should be minimized.

The PREFERRED_NOT and REQUIRED_NOT priorities may be ignored in the selection of an HScreenConfiguration for this preference type.

This preference is used by the platform as a constraint in selecting configurations. Templates generated by the platform and then returned to applications (e.g. from a getConfigTemplate method) shall not have this preference filled in by the platform.

ZERO_GRAPHICS_IMPACT

```
public static final int ZERO_GRAPHICS_IMPACT
```

A value for use in the preference field of the setPreference(int, int) and getPreferencePriority(int) methods in the HScreenConfigTemplate that indicates that the device configuration should have zero impact on already running graphical applications. If used with the REQUIRED priority, this means no changes shall be made. If used with the PREFERRED priority, this means changes may be made but should be minimized.

The PREFERRED_NOT and REQUIRED_NOT priorities may be ignored in the selection of an HScreenConfiguration for this preference type.

This preference is used by the platform as a constraint in selecting configurations. Templates generated by the platform and then returned to applications (e.g. from a getConfigTemplate method) shall not have this preference filled in by the platform.

ZERO_VIDEO_IMPACT

```
public static final int ZERO_VIDEO_IMPACT
```

A value for use in the preference field of the setPreference(int, int) and getPreferencePriority(int) methods in the HScreenConfigTemplate that indicates that the device configuration should have zero impact on already running video streams. If used with the

REQUIRED priority, this means no changes shall be made. If used with the PREFERRED priority, this means changes may be made but should be minimized.

The PREFERRED_NOT and REQUIRED_NOT. priorities may be ignored in the selection of an HScreenConfiguration for this preference type.

This preference is used by the platform as a constraint in selecting configurations. Templates generated by the platform and then returned to applications (e.g. from a getConfigTemplate method) shall not have this preference filled in by the platform.

Constructors

HScreenConfigTemplate()

```
public HScreenConfigTemplate()
```

Creates an HScreenConfigTemplate object. See the class description for details of constructor parameters and default values.

Methods

---

getPreferenceObject(int)

```
public java.lang.Object getPreferenceObject(int preference)
```

Return the preference object for the specified preference.

Instances of HScreenConfigTemplate which have not had this preference set shall return null for this object. Note that instances constructed by the platform and returned to applications are required to have all preferences (except where explicitly identified) set by the platform before it is returned.

Parameters:

preference - the preference to be indicated. Valid values for an HScreenConfigTemplate are: VIDEO_GRAPHICS_PIXEL_ALIGNED, PIXEL_ASPECT_RATIO, PIXEL_RESOLUTION and SCREEN_RECTANGLE.

Subclasses may add further valid values. A IllegalArgumentException shall be thrown if the preference is not a valid value for this instance of HScreenConfigTemplate, or if preference does not have an associated value object.

Returns:

the preference object for the specified preference.

---

getPreferencePriority(int)

```
public int getPreferencePriority(int preference)
```

Return the priority for the specified preference.

By default the preferences in a template returned from the system will have an DONT_CARE priority unless specified otherwise. Any configuration always satisfies these attributes.

Parameters:

preference - the preference to be indicated. Valid values for an HScreenConfigTemplate are: ZERO_BACKGROUND_IMPACT, ZERO_GRAPHICS_IMPACT, ZERO_VIDEO_IMPACT,

INTERLACED_DISPLAY , FLICKER_FILTERING , VIDEO_GRAPHICS_PIXEL_ALIGNED , PIXEL_ASPECT_RATIO , PIXEL_RESOLUTION and SCREEN_RECTANGLE .

Subclasses may add further valid values. An IllegalArgumentException shall be thrown if the preference is not a valid value for this instance of HScreenConfigTemplate

Returns:
the priority for the specified preference.

---

setPreference(int, int)

```
public void setPreference(int preference, int priority)
```

Set the indicated preference to have the specified priority. If the preference has been previously set, then the previous priority for the preference shall be overwritten.

Attributes that are not filled in in a template (through setPreference(int, int)), shall have the priority DONT_CARE . Any configuration always satisfies these attributes.

Parameters:
preference - the preference to be indicated. Valid values for an HScreenConfigTemplate are: ZERO_GRAPHICS_IMPACT , ZERO_BACKGROUND_IMPACT , ZERO_VIDEO_IMPACT , INTERLACED_DISPLAY and FLICKER_FILTERING .

Subclasses may add further valid values. An IllegalArgumentException shall be thrown if the preference is not a valid value for this instance of HScreenConfigTemplate

priority - the priority of the preference. Valid values are: REQUIRED , PREFERRED , DONT_CARE , PREFERRED_NOT and REQUIRED_NOT .

If priority is not a valid priority as defined here a java.lang.IllegalArgumentException will be thrown.

---

setPreference(int, Object, int)

```
public void setPreference(int preference, java.lang.Object object, int priority)
```

Set the indicated preference (and associated value object) to have the specified priority. If the preference has been previously set, then the previous object and priority shall be overwritten.

Attributes that are not filled in in a template (through setPreference(int, int)), shall have the priority DONT_CARE . Any configuration always satisfies these attributes.

An application which wishes to remove a preference from an existing template (e.g. one generated by the platform) may call this method with null for the object parameter.

Parameters:
preference - the preference to be indicated. Valid values for an HScreenConfigTemplate are: VIDEO_GRAPHICS_PIXEL_ALIGNED , PIXEL_ASPECT_RATIO , PIXEL_RESOLUTION and SCREEN_RECTANGLE .

Subclasses may add further valid values. An IllegalArgumentException shall be thrown if the preference is not a valid value for this instance of HScreenConfigTemplate

object - the Object associated with the given preference, or null.

priority - the priority of the preference. Valid values include: REQUIRED , PREFERRED , DONT_CARE , PREFERRED_NOT and REQUIRED_NOT .

If priority is not a valid priority as defined here a java.lang.IllegalArgumentException will be thrown.

org.havi.ui
HScreenConfiguration

Syntax
```
public abstract class HScreenConfiguration

java.lang.Object
  |
  +--org.havi.ui.HScreenConfiguration
```

Direct Known Subclasses:
HBackgroundConfiguration, HGraphicsConfiguration, HVideoConfiguration

Description
The HScreenConfiguration class describes the characteristics (settings) of an HScreenDevice. There can be many HScreenConfiguration objects associated with a single HScreenDevice.

See Also:
HScreenDevice

Methods

---

convertTo(HScreenConfiguration, Point)

```
public java.awt.Point convertTo(HScreenConfiguration destination, java.awt.Point source)
```

Convert a pixel position from one coordinate system to another without including any rounding errors from passing through normalized coordinates. This returns null if this transformation isn't possible for various reasons. These reasons are:

- at least one of the two HScreenConfiguration isn't pixel based or doesn't yet have a fixed location on the HScreen.
- a non-linear transformation is in use between the two.
- the information needed to calculate this isn't available.
- the transformation is changing with time (e.g. due to pan & scan).

The source position is interpreted in the coordinate system of the HScreenConfiguration object on which this method is called.

Parameters:

destination - the destination HScreenConfiguration.

source - the pixel position in this HScreenConfiguration.

Returns:

the position of the specified pixel position measured in the destination coordinate system, or null if this isn't possible.

---

getFlickerFilter()

```
public boolean getFlickerFilter()
```

Return whether this configuration includes filtering to reduce interlace flicker.

Returns:

true if filtering is included, false otherwise.

---

getInterlaced()

```
public boolean getInterlaced()
```

Return whether this configuration is interlaced

Returns:
true if this configuration is interlaced, false otherwise.

---

getOffset(HScreenConfiguration)

```
public java.awt.Dimension getOffset(HScreenConfiguration hsc)
```

Returns the offset between the origin of the pixel coordinate space of the specified `HScreenConfiguration`, and the origin of the current pixel coordinate space of this `HScreenConfiguration`. The offset is returned in the pixel coordinate space of this `HScreenConfiguration`.

Parameters:
`hsc` - the `HScreenConfiguration` to which the offset between pixel origins should be recovered.

Returns:
the offset between the pixel coordinate space of the specified `HScreenConfiguration` and the current pixel coordinate space of this `HScreenConfiguration`. A null object will be returned if there is insufficient information to recover the pixel offset.

---

getPixelAspectRatio()

```
public java.awt.Dimension getPixelAspectRatio()
```

Return the pixel aspect ratio of this configuration. Some examples are {16:15}, {64:45}, {1:1}.

Returns:
the aspect ratio of the pixels in this configuration.

---

getPixelResolution()

```
public java.awt.Dimension getPixelResolution()
```

Return the resolution of this configuration in pixels. The pixel coordinate system used is that of the device concerned.

Returns:
the resolution of this configuration in pixels.

---

getScreenArea()

```
public HScreenRectangle getScreenArea()
```

Return the position and size of this configuration on the screen in screen coordinates.

Returns:
the area on the screen of this configuration in screen coordinates.

org.havi.ui
HScreenDevice

Syntax

```
public class HScreenDevice implements org.davic.resources.ResourceProxy,
    org.davic.resources.ResourceServer

java.lang.Object
   |
  +--org.havi.ui.HScreenDevice
```

Direct Known Subclasses:

HBackgroundDevice, HGraphicsDevice, HVideoDevice

All Implemented Interfaces:

org.davic.resources.ResourceProxy, org.davic.resources.ResourceServer

Description

An instance of the HScreen class represents a single independent video output signal from a device. Devices with multiple independent video output signals should support multiple instances of this class. A video output signal is created by adding together the contributions from the devices represented by a number of objects inheriting from the HScreenDevice class. These can be HGraphicsDevice objects, HVideoDevice objects and HBackgroundDevice objects. A given HScreen may support any number of any of these objects as far as the API is concerned however some form of profiling may restrict this. In reality right now, one instance of each is all that may reasonably expected to be present.

Each HScreenDevice can have multiple settings (HScreenConfiguration) but only one "setting" (HScreenConfiguration) can be active at any point in time. The current configuration can be determined on the HScreenDevice subclasses using their specific getCurrentConfiguration methods. The current configuration can be modified on the HScreenDevice subclasses using their specific setCurrentConfiguration methods (assuming sufficient rights, etc.).

Applications may select the best of these configurations for them by creating an instance of HScreenConfigTemplate and populating that with a number preferences each with a priority. The implementation then matches this template against the range of possible configurations and attempts to find one which matches the template provided. Priorities REQUIRED and REQUIRED_NOT must be respected. If they cannot be respected then the method call shall fail and not return any configuration. Priorities PREFERRED and PREFERRED_NOT should be respected as much as possible. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

Methods

---

addResourceStatusEventListener(ResourceStatusListener)

```
public void addResourceStatusEventListener(org.davic.resources.ResourceStatusListener
            listener)
```

Register a listener for events about changes in the state of the ownership of this device. If the listener has already been added further calls will add further references to the listener, which will then receive multiple copies of a single event.

Specified By:

org.davic.resources.ResourceServer.addResourceStatusEventListener(org.davic.resources.ResourceStatusListener) in interface org.davic.resources.ResourceServer

Parameters:

`listener` - the object to be informed of state changes

See Also:

`HScreenDeviceReleasedEvent`, `HScreenDeviceReservedEvent`

---

addScreenConfigurationListener(HScreenConfigurationListener)

```
public void addScreenConfigurationListener(HScreenConfigurationListener hscl)
```

Add an `HScreenConfigurationListener` to this device, which is notified whenever the device's configuration is modified. If the listener has already been added further calls will add further references to the listener, which will then receive multiple copies of a single event.

Parameters:

`hscl` - the `HScreenConfigurationListener` to be added to this device.

---

addScreenConfigurationListener(HScreenConfigurationListener, HScreenConfigTemplate)

```
public void addScreenConfigurationListener(HScreenConfigurationListener hscl,
            HScreenConfigTemplate hsct)
```

Add an `HScreenConfigurationListener` to this device, which is notified when the device's configuration is further modified so that it is no longer compatible with the specified `HScreenConfigTemplate`. If the listener has already been added further calls will add further references to the listener, which will then receive multiple copies of a single event.

Note that if the device configuration does not match the specified template, then the listener should be added and a `HScreenConfigurationEvent` immediately generated for the specified `HScreenConfigurationListener`.

Parameters:

`hscl` - the `HScreenConfigurationListener` to be added to this device.

`hsct` - the `HScreenConfigTemplate` which is to be used to determine compatibility with the device configuration.

---

getClient()

```
public org.davic.resources.ResourceClient getClient()
```

Return the last `ResourceClient` passed to the last successful call to the `reserveDevice(ResourceClient)` method of this instance of `HScreenDevice`, or null if this method has not been called on this instance.

Specified By:

org.davic.resources.ResourceProxy.getClient() in interface org.davic.resources.ResourceProxy

Returns:
a representation of the intended owner of the resource or null if none has been set.

---

getIDstring()

```
public java.lang.String getIDstring()
```

Returns the identification string associated with this HScreenDevice .

Returns:
an identification string

---

getScreenAspectRatio()

```
public java.awt.Dimension getScreenAspectRatio()
```

Return the aspect ratio of the screen as far as is known. i.e. 4:3, 16:9, etc.

This Dimension may be used to determine the pixel aspect ratio for given HScreenConfiguration .

Returns:
a Dimension object specifying the aspect ratio of the screen

---

releaseDevice()

```
public void releaseDevice()
```

Release the right to control of this device. If this application doesn't have this right then this method has no effect. It is not specified whether any device configuration set by this application will be removed from display immediately or whether it will remain on display until a subsequent application obtains the device and sets its own configuration. Applications wishing to ensure a configuration they have installed is removed must actively remove it before calling this method.

---

removeResourceStatusEventListener(ResourceStatusListener)

```
public void removeResourceStatusEventListener(org.davic.resources.ResourceStatusListener
            listener)
```

Remove a listener for events about changes in the state of the ownership of this device. This method has no effect if the listener specified is not registered.

Specified By:
org.davic.resources.ResourceServer.removeResourceStatusEventListener(org.davic.resources.ResourceStatusListener) in interface org.davic.resources.ResourceServer

Parameters:
`listener` - the object which is no longer interested

See Also:
HScreenDeviceReleasedEvent, HScreenDeviceReservedEvent

---

removeScreenConfigurationListener(HScreenConfigurationListener)

```
public void removeScreenConfigurationListener(HScreenConfigurationListener hscl)
```

Remove an HScreenConfigurationListener from this device. if the specified listener is not registered, the method has no effect. If multiple references to a single listener have been registered it should be noted that this method will only remove one reference per call.

Parameters:
`hscl` - the `HScreenConfigurationListener` to be removed from this device.

---

reserveDevice(ResourceClient)

```
public boolean reserveDevice(org.davic.resources.ResourceClient client)
```

Requests the right to call any method which may otherwise throw an HPermissionDeniedException. If this method returns true this exception will never be thrown until this right is revoked as notified by methods on `ResourceClient` . The policy by which the platform decides whether or not to grant this right is not defined in this specification.

Note that the word "right" in this context has nothing to do with security. See the description of `HPermissionDeniedException` .

Once the right to control this device has been granted and not removed in the intervening period further calls to this method shall have no effect and return true.

Parameters:
`client` - a representation of the intended owner of the resource

Returns:
true if the right is granted, otherwise false

org.havi.ui
HScreenDimension

Syntax
```
public class HScreenDimension

java.lang.Object
  |
  +--org.havi.ui.HScreenDimension
```

Description
HScreenDimension denotes a screen dimension expressed as a relative value of the screen dimensions. Note that since these are relative dimensions they are effectively independent of any particular screen's physical dimensions, or aspect ratio.

Note that the extents of the dimension must be positive (including zero), but are otherwise unconstrained - and hence may denote areas greater in size than the entire screen.

Hence,

- (1.0, 1.0) denotes the size of the entire screen.
- (0.5, 0.5) denotes a quarter of the screen.

Note that in practice, particularly in the case of television, the precise dimension may vary slightly due to effects of overscan, etc.

Note that systems using HScreenDimension directly should consider the effects of rounding errors, etc. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
width	The horizontal extent of the dimension	no default constructor exists	setSize(float, float)	---
height	The vertical extent of the dimension	no default constructor exists	setSize(float, float)	---

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

See Also:
HScreenPoint

Fields

---

height

```
public float height
```

---

width

```
public float width
```

Constructors

HScreenDimension(float, float)

```
public HScreenDimension(float width, float height)
```

Creates an `HScreenDimension` object. See the class description for details of constructor parameters and default values.

Methods

---

setSize(float, float)

```
public void setSize(float width, float height)
```

Set the extents of the HScreenDimension.

Parameters:

`width` - the horizontal extent of the HScreenDimension

`height` - the vertical extent of the HScreenDimension

org.havi.ui
HScreenPoint

Syntax

```
public class HScreenPoint

java.lang.Object
  |
  +--org.havi.ui.HScreenPoint
```

Description

HScreenPoint denotes a screen location expressed as a relative value of the screen dimensions. Note that since these are relative dimensions they are effectively independent of any particular screen's physical dimensions, or aspect ratio.

The x coordinate is in terms of the ratio of the particular horizontal screen location to the entire screen width.

The y coordinate is in terms of the ratio of the particular vertical screen location to the entire screen width.

All measurements should be taken from the top, left corner of the screen, measuring positive dimensions down and to the right.

Note that x and y coordinates are not constrained - they may be negative, or have values greater than one - and hence, may denote locations that are not "on- screen".

Hence,

- (0.0, 0.0) denotes the top, left hand corner of the screen.
- (1.0, 0.0) denotes the top, right hand corner of the screen.
- (0.5, 0.5) denotes the center (middle) of the screen.
- (0.0, 1.0) denotes the bottom, left hand corner of the screen.
- (1.0, 1.0) denotes the bottom, right hand corner of the screen.

Note that in practice, particularly in the case of television, the precise location may vary slightly due to effects of overscan, etc. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
x	The horizontal position of the point	no default constructor exists	setLocation(float, float)	---
y	The vertical position of the point	no default constructor exists	setLocation(float, float)	---

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

See Also:
HScreenRectangle

Fields

---

x

```
public float x
```

---

y

```
public float y
```

Constructors

HScreenPoint(float, float)

```
public HScreenPoint(float x, float y)
```

Creates an HScreenPoint object. See the class description for details of constructor parameters and default values.

Methods

---

setLocation(float, float)

```
public void setLocation(float x, float y)
```

Set the location of the HScreenPoint.

Parameters:
x - the horizontal position of the point

y - the vertical position of the point

org.havi.ui
HScreenRectangle

Syntax

```
public class HScreenRectangle

java.lang.Object
  |
  +--org.havi.ui.HScreenRectangle
```

Description

HScreenRectangle denotes a screen area expressed as a relative value of the screen dimensions. Note that since these are relative dimensions they are effectively independent of any particular screen's physical dimensions, or aspect ratio.

Note that the x and y offset coordinates of the top, left corner of the area are not constrained - they may be negative, or have values greater than one - and hence, may denote an offset location that is not "on-screen". The width and height of the area should be positive (including zero), but are otherwise unconstrained - and hence may denote areas greater in size than the entire screen.

Hence,

- (0.0, 0.0, 1.0, 1.0) denotes the whole of the screen.
- (0.0, 0.0, 0.5, 0.5) denotes the top, left hand quarter of the screen.
- (0.5, 0.0, 0.5, 0.5) denotes the top, right hand quarter of the screen.
- (0.25, 0.25, 0.5, 0.5) denotes a centered quarter-screen area of the screen.
- (0.0, 0.5, 0.5, 0.5) denotes the bottom, left hand quarter of the screen.
- (0.5, 0.5, 0.5, 0.5) denotes the bottom, right hand quarter of the screen.

Note that in practice, particularly in the case of television, the precise location may vary slightly due to effects of overscan, etc.

Note that systems using HScreenRectangle directly should consider the effects of rounding errors, etc. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
x	The horizontal position of the top left corner	no default constructor exists	setLocation(float, float)	---
y	The vertical position of the top left corner	no default constructor exists	setLocation(float, float)	---
width	The width of the rectangle	no default constructor exists	setSize(float, float)	---
height	The height of the rectangle	no default constructor exists	setSize(float, float)	---

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

See Also:
HScreenPoint

Fields

height

```
public float height
```

width

```
public float width
```

x

```
public float x
```

y

```
public float y
```

Constructors

HScreenRectangle(float, float, float, float)

```
public HScreenRectangle(float x, float y, float width, float height)
```

Creates an HScreenRectangle object. See the class description for details of constructor parameters and default values.

Methods

setLocation(float, float)

```
public void setLocation(float x, float y)
```

Set the location of the top left corner of the HScreenRectangle.

Parameters:
x - the horizontal position of the top left corner

`y` - the vertical position of the top left corner

---

setSize(float, float)

```
public void setSize(float width, float height)
```

Set the size of the HScreenRectangle.

Parameters:

`width` - the width of the HScreenRectangle

`height` - the height of the HScreenRectangle

org.havi.ui
HSelectionInputPreferred

Syntax
```
public interface HSelectionInputPreferred extends HOrientable
```

All Known Subinterfaces:
HItemValue

All Superinterfaces:
HOrientable

Description
A component which implements HSelectionInputPreferred indicates that this component expects to receive HItemEvent input events.

All interoperable implementations of the HSelectionInputPreferred interface must extend HComponent.

Note that the java.awt.Component method isFocusTraversable should always return true for a java.awt.Component implementing this interface.

Methods

---

getSelectionMode()

```
public boolean getSelectionMode()
```

Get the selection mode for this HSelectionInputPreferred. If the returned value is true the component is in selection mode, and the selection may be changed.

The component is switched into and out of selection mode on receiving ITEM_START_CHANGE and ITEM_END_CHANGE events.

Returns:
true if this component is in selection mode, false otherwise.

---

processHItemEvent(HItemEvent)

```
public void processHItemEvent(HItemEvent evt)
```

Process an HItemEvent sent to this HSelectionInputPreferred.

Parameters:
evt - the HItemEvent to process.

---

setSelectionMode(boolean)

```
public void setSelectionMode(boolean adjust)
```

Set the selection mode for this HSelectionInputPreferred.

This method is provided for the convenience of component implementors. Interoperable applications shall not call this method. It cannot be made protected because interfaces cannot have protected methods.

Parameters:

`edit` - true to switch this component into selection mode, false otherwise.

See Also:

`getSelectionMode()`

org.havi.ui
HSinglelineEntry

Syntax

```
public class HSinglelineEntry extends HVisible implements HTextValue
```

```
java.lang.Object
  |
  +--java.awt.Component
        |
        +--HComponent
              |
              +--HVisible
                    |
                    +--org.havi.ui.HSinglelineEntry
```

Direct Known Subclasses:

HMultilineEntry

All Implemented Interfaces:

HKeyboardInputPreferred, HMatteLayer, HNavigable, HNavigationInputPreferred, HState, HTextValue, java.awt.image.ImageObserver, java.awt.MenuContainer, java.io.Serializable, TestOpacity

Description

The HSinglelineEntry is a user interface component used to receive a single line of alphanumeric entry from the user and can also be used for password input.

Upon creation the HSinglelineEntry is set to a non-editable mode identical in functionality to an HText .

On keyboard-based systems, if the user navigates to the component using the keyboard then the component must first be switched into edit mode before it will accept any key presses (other than for navigation to another component). The mechanism by which the component is switched into and out of edit mode is via the TEXT_START_CHANGE and TEXT_END_CHANGE events, which may be triggered in response to a key stroke or other Java AWT event.

On entering its editable mode the component will send an TEXT_START_CHANGE event to all registered HTextListener listeners. The HSinglelineEntry will then respond to key events by inserting characters into the text string or positioning the insertion point (caret) (via further HTextEvent events.

For example, on platforms which do not provide a means of positioning the caret independently from navigating to components, the navigation keys will be interpreted as caret positioning keys in this mode.

While in the editing mode, the component will generate an TEXT_CHANGE event whenever the text content of the HSinglelineEntry changes (e.g. a character is inserted).

On receiving an TEXT_END_CHANGE event the component shall leave its editable mode and send an TEXT_END_CHANGE event to all registered HTextListener listeners. The user can then navigate out of the HSinglelineEntry .

On mouse-based systems, if the user selects the component by clicking a mouse button inside its bounds then the HSinglelineEntry will automatically switch into edit mode and generate a TEXT_START_CHANGE event. It will stay in edit mode so long as the mouse pointer remains within the bounds of the component. Once the mouse pointer leaves the bounds then it will switch back into non-editable mode and generate a TEXT_END_CHANGE event.

By default `HSinglelineEntry` uses the `HSinglelineEntryLook` to render itself. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
x	x-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
y	y-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
width	width of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
height	height of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
text	The text within this `HSinglelineEntry`, to be used as the displayed and editable content for all states.	null	`setTextContent(String, int)`	`getTextContent(int)`
maxChars	The maximum number of characters (per line) allowed in this `HSinglelineEntry`.	16 characters	`setMaxCharsPerLine(int)`	`getMaxCharsPerLine()`
font	The font to be used for this component.	---	`java.awt.Component#setFont`.	`java.awt.Component#getFont`.
color	The color to be used for this component.	---	`java.awt.Component#setForeground`.	`java.awt.Component#getForeground`.

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
Associated matte (`HMatte`).	none (i.e. getMatte() returns `null`)	`setMatte(HMatte)`	`getMatte()`
The text layout manager responsible for text formatting.	An `HDefaultTextLayoutManager` object.	`setTextLayoutManager(HTextLayoutManager)`	`getTextLayoutManager()`
The background painting mode	`NO_BACKGROUND_FILL`	`setBackgroundMode(int)`	`getBackgroundMode()`

The default preferred size	not set (i.e. null) unless specified by `width` and `height` parameters	`setDefaultSize(Dimension)`	`getDefaultSize()`
The horizontal content alignment	`HALIGN_CENTER`	`setHorizontalAlignment(int)`	`getHorizontalAlignment()`
The vertical content alignment	`VALIGN_CENTER`	`setVerticalAlignment(int)`	`getVerticalAlignment()`
The content scaling mode	`RESIZE_NONE`	`setResizeMode(int)`	`getResizeMode()`
Caret position	At the end of the current text string	`setCaretCharPosition(int)`	`getCaretCharPosition()`
Input type	`INPUT_ANY`	`setType(int)`	`getType()`
Customized input range	As for `INPUT_ALPHANUMERIC`	`setValidInput(char[])`	`getValidInput()`
Password protection (the echo character)	Entry is "clear", i.e. not password protected.	`setEchoChar(char)`	`getEchoChar()` and `echoCharIsSet()`
The default "look" for this class.	A platform specific `HSinglelineEntryLook`	`setDefault-Look(HSinglelineEntryLook)`	`getDefaultLook()`
The "look" for this object.	The `HSinglelineEntryLook` returned from HSinglelineEntry.getDefaultLook when this object was created.	`setLook(HLook)`	`getLook()`
The gain focus sound.	null	`setGainFocusSound(HSound)`	`getGainFocusSound()`
The lose focus sound.	null	`setLoseFocusSound(HSound)`	`getLoseFocusSound()`

Constructors

HSinglelineEntry()

```
public HSinglelineEntry()
```

Creates an `HSinglelineEntry` object. See the class description for details of constructor parameters and default values.

HSinglelineEntry(int)

```
public HSinglelineEntry(int maxChars)
```

Creates an `HSinglelineEntry` object. See the class description for details of constructor parameters and default values.

HSinglelineEntry(int, int, int, int, int)

```
public HSinglelineEntry(int x, int y, int width, int height, int maxChars)
```

Creates an `HSinglelineEntry` object. See the class description for details of constructor parameters and default values.

HSinglelineEntry(String, int, Font, Color)

```
public HSinglelineEntry(java.lang.String text, int maxChars, java.awt.Font font,
            java.awt.Color color)
```

Creates an `HSinglelineEntry` object. See the class description for details of constructor parameters and default values.

HSinglelineEntry(String, int, int, int, int, int, Font, Color)

```
public HSinglelineEntry(java.lang.String text, int x, int y, int width, int height,
            int maxChars, java.awt.Font font, java.awt.Color color)
```

Creates an `HSinglelineEntry` object. See the class description for details of constructor parameters and default values.

Methods

caretNextCharacter()

```
public void caretNextCharacter()
```

Move the caret to the next character. The caret position is constrained such that the insert point lies within the range as defined by the `getCaretCharPosition()` method.

caretPreviousCharacter()

```
public void caretPreviousCharacter()
```

Move the caret to the previous character. The caret position is constrained such that the insert point lies within the range as defined by the `getCaretCharPosition()` method.

deleteNextChar()

```
public boolean deleteNextChar()
```

Delete a character forward of the current caret position.

Returns:
true if a character was deleted, false otherwise.

---

deletePreviousChar()

```
public boolean deletePreviousChar()
```

Delete a character behind the current caret position.

Returns:
true if a character was deleted, false otherwise.

---

echoCharIsSet()

```
public boolean echoCharIsSet()
```

Determine if this component has an echo character set, i.e. if the echo character is non-zero.

Returns:
true if an echo character is set, false otherwise.

---

getCaretCharPosition()

```
public int getCaretCharPosition()
```

Gets the position of the text insertion caret for this the current line in this text component. The valid values of the caret position are from 0 to the length of the string retrieved using `getTextContent(int)` , where 0 implies insertion as the first character (i.e. at the start of the string) and `getTextContent(int)` implies that further characters are to be appended onto the end of the string. Hence, the valid caret positions for the string "abc" of length 3, are 0, 1, 2 and 3 --- with caret locations as shown below:

```
 0 "a" 1 "b" 2 "c" 3
```

Returns:
the position of the text insertion caret.

---

getDefaultLook()

```
public static HSinglelineEntryLook getDefaultLook()
```

Returns the currently set default `HLook` for `HSinglelineEntry` components.

Returns:
The `HLook` that is used by default when creating a new `HSinglelineEntry` component.

---

getEchoChar()

```
public char getEchoChar()
```

Returns the character to be used for echoing.

Returns:
the character to be used for echoing or 0 (ASCII NUL) if no echo character is set.

---

getEditMode()

```
public boolean getEditMode()
```

Get the editing mode for this `HSinglelineEntry` . If the returned value is `true` the component is in edit mode, and its textual content may be changed through user interaction such as keyboard events.

The component is switched into and out of edit mode on receiving TEXT_START_CHANGE and TEXT_END_CHANGE events.

Specified By:
getEditMode() in interface HKeyboardInputPreferred

Returns:
true if this component is in edit mode, false otherwise.

---

getGainFocusSound()

```
public HSound getGainFocusSound()
```

Get the sound associated with the gain focus event.

Specified By:
getGainFocusSound() in interface HNavigable

Returns:
The sound played when the component gains focus. If no sound is associated with gaining focus, then null shall be returned.

---

getLoseFocusSound()

```
public HSound getLoseFocusSound()
```

Get the sound associated with the lost focus event.

Specified By:
getLoseFocusSound() in interface HNavigable

Returns:
The sound played when the component loses focus. If no sound is associated with losing focus, then null shall be returned.

---

getMaxCharsPerLine()

```
public int getMaxCharsPerLine()
```

Get maximum number of characters per (single) line. The behavior of the component when the last character on a line is typed is implementation dependent.

Returns:
the maximum number of characters per line.

---

getMove(int)

```
public HNavigable getMove(int keyCode)
```

Provides the HNavigable object that is navigated to when a particular key is pressed.

Specified By:
getMove(int) in interface HNavigable

Parameters:
keyCode - The key code of the pressed key.

Returns:
Returns the HNavigable object, or if no HNavigable is associated with the keyCode then returns null.

---

getNavigationKeys()

```
public int[] getNavigationKeys()
```

Retrieve the set of key codes which this component maps to navigation targets.

Specified By:
`getNavigationKeys()` in interface `HNavigationInputPreferred`

Returns:
an array of key codes, or `null` if no navigation targets are set on this component.

---

getTextContent(int)

```
public java.lang.String getTextContent(int state)
```

Gets the text content used in this `HSinglelineEntry`.

Note that `HSinglelineEntry` components do not support separate pieces of textual content per state (as defined in `HState`) --- rather a single piece of content is defined for all its interaction states.

Overrides:
`getTextContent(int)` in class `HVisible`

Parameters:
`state` - The state of the component for which this content should be displayed. This parameter shall be ignored.

Returns:
the text content used in this `HSinglelineEntry`

See Also:
`setTextContent(String, int)`

---

getType()

```
public int getType()
```

Retrieve the desired input type for this component. This value should be set to indicate to the system which input keys are required by this component.

Specified By:
`getType()` in interface `HKeyboardInputPreferred`

Returns:
one of `INPUT_ALPHANUMERIC`, `INPUT_NUMERIC`, `INPUT_ALPHA`, or `INPUT_CUSTOMIZED`.

---

getValidInput()

```
public char[] getValidInput()
```

Retrieve the customized input character range. The return value of this method should reflect the range of input keys which the component wishes to see, should `getType()` return `INPUT_CUSTOMIZED`. This method may return `null` if and only if it can guarantee that customized input is *never* required.

If customized input can be used but no specific customized input is set, this method should return the same range as the `INPUT_ALPHANUMERIC` input type, i.e. that range of characters for which the `java.lang.Character isLetterOrDigit` returns `true`.

Specified By:
`getValidInput()` in interface `HKeyboardInputPreferred`

Returns:
an array containing the characters which this component expects the platform to provide, or `null` to indicate that customized characters are not used.

---

insertChar(char)

```
public boolean insertChar(char c)
```

Insert a character at the current caret position, subject to the maximum number of input characters.

Parameters:
`c` - the character to insert

Returns:
true if the character was inserted, false otherwise.

---

isSelected()

```
public boolean isSelected()
```

Indicates if this component has focus.

Specified By:
`isSelected()` in interface `HNavigable`

Returns:
`true` if the component has focus, otherwise returns `false`.

---

processHFocusEvent(HFocusEvent)

```
public void processHFocusEvent(HFocusEvent evt)
```

Process an `HFocusEvent` sent to this `HSinglelineEntry`.

Specified By:
`processHFocusEvent(HFocusEvent)` in interface `HNavigationInputPreferred`

Parameters:
`evt` - the `HFocusEvent` to process.

---

processHKeyEvent(HKeyEvent)

```
public void processHKeyEvent(HKeyEvent evt)
```

Process an `HKeyEvent` sent to this `HSinglelineEntry`.

Specified By:
`processHKeyEvent(HKeyEvent)` in interface `HKeyboardInputPreferred`

Parameters:
`evt` - the `HKeyEvent` to process.

---

processHTextEvent(HTextEvent)

```
public void processHTextEvent(HTextEvent evt)
```

Process an `HTextEvent` sent to this `HSinglelineEntry`.

Specified By:
`processHTextEvent(HTextEvent)` in interface `HKeyboardInputPreferred`

Parameters:
`evt` - the `HTextEvent` to process.

---

setCaretCharPosition(int)

```
public int setCaretCharPosition(int position)
```

Sets the position of the text insertion caret for this text component. If position is not valid for the current content the caret is moved to the nearest position.

Parameters:
`position` - the new position of the text insertion caret.

Returns:
the new caret position.

---

setDefaultLook(HSinglelineEntryLook)

```
public static void setDefaultLook(HSinglelineEntryLook look)
```

Sets the default `HLook` for further `HSinglelineEntry` Components.

Parameters:
`look` - The `HLook` that will be used by default when creating a new `HSinglelineEntry` component. Note that this parameter may be null, in which case newly created components shall not draw themselves until a non-null look is set using the `setLook(HLook)` method.

---

setEchoChar(char)

```
public void setEchoChar(char c)
```

Sets the number of character to echo for this component.

Parameters:
`c` - the character used to echo any input, e.g. if c == '*' a password-style input will be displayed. If c is zero (ASCII NUL), then all characters will be echoed on-screen, this is the default behavior.

---

setEditMode(boolean)

```
public void setEditMode(boolean edit)
```

Set the editing mode for this `HSinglelineEntry`.

This method is provided for the convenience of component implementors. Interoperable applications shall not call this method. It cannot be made protected because interfaces cannot have protected methods.

Specified By:
`setEditMode(boolean)` in interface `HKeyboardInputPreferred`

Parameters:
`edit` - true to switch this component into edit mode, false otherwise.

See Also:
`getEditMode()`

---

setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)

```
public void setFocusTraversal(HNavigable up, HNavigable down, HNavigable left,
            HNavigable right)
```

Set the focus control for an `HNavigable` component. Note `setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)` is a convenience function for application programmers where a standard up, down, left and right focus traversal between components is required.

Note setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) is equivalent to multiple calls to setMove(int, HNavigable), where the key codes VK_UP, VK_DOWN, VK_LEFT, VK_RIGHT are used.

Note that this API does not prevent the creation of "isolated" HNavigable components --- authors should endeavor to avoid confusing the user.

Specified By:
setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) in interface HNavigable

Parameters:
up - The HNavigable component to move to, when the user generates a VK_UP KeyEvent. If there is no HNavigable component to move "up" to, then null should be specified.

down - The HNavigable component to move to, when the user generates a VK_DOWN KeyEvent. If there is no HNavigable component to move "down" to, then null should be specified.

left - The HNavigable component to move to, when the user generates a VK_LEFT KeyEvent. If there is no HNavigable component to move "left" to, then null should be specified.

right - The HNavigable component to move to, when the user generates a VK_RIGHT KeyEvent. If there is no HNavigable component to move "right" to, then null should be specified.

---

setGainFocusSound(HSound)

```
public void setGainFocusSound(HSound sound)
```

Associate a sound with gaining focus, i.e. when the HNavigable receives a java.awt.event.FocusEvent event of type FOCUS_GAINED. This sound will start to be played when an object implementing this interface gains focus. It is not guaranteed to be played to completion. If the object implementing this interface loses focus before the audio completes playing, the audio will be truncated. Applications wishing to ensure the audio is always played to completion must implement special logic to slow down the focus transitions.

By default, an HNavigable object does not have any gain focus sound associated with it.

Note that the ordering of playing sounds is dependent on the order of the focus lost, gained events.

Specified By:
setGainFocusSound(HSound) in interface HNavigable

Parameters:
sound - the sound to be played, when the component gains focus. If sound content is already set, the original content is replaced. To remove the sound specify a null HSound.

---

setLook(HLook)

```
public void setLook(HLook hlook)
```

Sets the HLook for this component.

Overrides:
setLook(HLook) in class HVisible

Parameters:
hlook - The HLook that is to be used for this component. Note that this parameter may be null, in which case the component will not draw itself until a look is set.

Throws:
HInvalidLookException - If the Look is not an HSinglelineEntryLook.

---

setLoseFocusSound(HSound)

```
public void setLoseFocusSound(HSound sound)
```

Associate a sound with losing focus, i.e. when the HNavigable receives a java.awt.event.FocusEvent event of type FOCUS_LOST. This sound will start to be played when an object implementing this interface loses focus. It is not guaranteed to be played to completion. It is implementation dependent whether and when this sound will be truncated by any gain focus sound played by the next object to gain focus.

By default, an HNavigable object does not have any lose focus sound associated with it.

Note that the ordering of playing sounds is dependent on the order of the focus lost, gained events.

Specified By:
setLoseFocusSound(HSound) in interface HNavigable

Parameters:
sound - the sound to be played, when the component loses focus. If sound content is already set, the original content is replaced. To remove the sound specify a null HSound .

---

setMaxCharsPerLine(int)

```
public void setMaxCharsPerLine(int maxCol)
```

Set maximum number of characters per (single) line.

Parameters:
maxCol - the maximum number of characters per line.

---

setMove(int, HNavigable)

```
public void setMove(int keyCode, HNavigable target)
```

Defines the navigation path from the current HNavigable to another HNavigable when a particular key is pressed.

Note that setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) is equivalent to multiple calls to setMove(int, HNavigable) , where the key codes VK_UP, VK_DOWN, VK_LEFT, VK_RIGHT are used.

Specified By:
setMove(int, HNavigable) in interface HNavigable

Parameters:
keyCode - The key code of the pressed key. Any numerical keycode is allowed, but the platform may not be able to generate all keycodes. Application authors should only use keys for which HRcCapabilities.isSupported() or HKeyCapabilities.isSupported() returns true.

target - The target HNavigable object that should be navigated to. If a target is to be removed from a particular navigation path, then null should be specified.

---

setTextContent(String, int)

```
public void setTextContent(java.lang.String string, int state)
```

Sets the text content used in this HSinglelineEntry .

Note that HSinglelineEntry components do not support separate pieces of textual content per state (as defined in HState) --- rather a single piece of content is defined for all its interaction states.

Additionally, the `setTextContent(String, int)` method truncates the string according to the current maxChars setting.

Overrides:
`setTextContent(String, int)` in class `HVisible`

Parameters:
`string` - The content. If the content is null, then any currently assigned content shall be removed for the specified state.

`state` - The state of the component for which this content should be displayed. This parameter shall be ignored and considered to have the value `ALL_STATES` .

See Also:
`getTextContent(int)`

---

setType(int)

```
public void setType(int type)
```

Set the type of permitted keyboard entry.

Parameters:
`type` - one of `INPUT_ANY` , `INPUT_ALPHANUMERIC` `INPUT_ALPHA` , `INPUT_NUMERIC` or `INPUT_CUSTOMIZED`

---

setValidInput(char[])

```
public void setValidInput(char[] inputChars)
```

Defines the set of the characters which are valid for customized keyboard input, i.e. when the input type is set to `INPUT_CUSTOMIZED` .

Parameters:
`inputChars` - an array of characters which comprises the valid input characters.

org.havi.ui
HSinglelineEntryLook

Syntax
```
public class HSinglelineEntryLook implements HLook

java.lang.Object
  |
  +--org.havi.ui.HSinglelineEntryLook
```

Direct Known Subclasses:
HMultilineEntryLook

All Implemented Interfaces:
java.lang.Cloneable, HLook

Description
The HSinglelineEntryLook class is used by the HSinglelineEntry component to display the entering of text. This look will be provided by the platform and the exact way in which it is rendered will be platform dependant.

The HSinglelineEntryLook class draws the content set on an HSinglelineEntry. It uses the getTextContent(int) method to determine the content to render. The interaction state of the HSinglelineEntry is ignored.

This is the default look that is used by HSinglelineEntry and its subclasses. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

See Also:
HSinglelineEntry

Constructors

HSinglelineEntryLook()
```
public HSinglelineEntryLook()
```

Creates a HSinglelineEntryLook object. See the class description for details of constructor parameters and default values.

Methods

---

getInsets(HVisible)

```
public java.awt.Insets getInsets(HVisible visible)
```

Determines the insets of this HLook , which indicate the size of the border. This area is reserved for the HLook to use for drawing borders around the associated HVisible .

Specified By:
getInsets(HVisible) in interface HLook

Parameters:
hvisible - HVisible to which this HLook is attached.

Returns:
the insets of this HLook .

---

getMaximumSize(HVisible)

```
public java.awt.Dimension getMaximumSize(HVisible hvisible)
```

Gets the maximum size of the HVisible component when drawn with this HLook .

This size may be determined in several ways depending on the information available to the look. These steps are performed in order and the first available result is returned. For the purposes of this algorithm HLook classes that do not use content (e.g. HRangeLook) are treated as if no content was present.

The extra space required for border decoration can be determined from the getInsets(HVisible) method.

1. If the HLook supports the scaling of its content (e.g. an HGraphicLook) then the return value is the current size of the HVisible (as returned by HVisible#getSize).
2. If the HLook does not support scaling of content or no scaling is requested, and content is set then the return value is the size of the largest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
3. If there is no content set then a maximum size of [Short.MAX_VALUE, Short.MAX_VALUE] is returned as a Dimension.

Specified By:
getMaximumSize(HVisible) in interface HLook

Parameters:
hvisible - HVisible to which this HLook is attached.

Returns:
A dimension object indicating this HLook maximum size.

See Also:
getMaximumSize()

---

getMinimumSize(HVisible)

```
public java.awt.Dimension getMinimumSize(HVisible hvisible)
```

Gets the minimum size of the HVisible component when drawn with this HLook .

This size may be determined in several ways depending on the information available to the look. These steps are performed in order and the first available result is returned. For the purposes of this algorithm HLook classes that do not use content (e.g. HRangeLook) are treated as if no content was present.

The extra space required for border decoration can be determined from the getInsets(HVisible) method.

1. If the HLook supports the scaling of its content (e.g. an HGraphicLook) and content is set then the return value is the size of the smallest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
2. If the HLook does not support scaling of content or no scaling is requested, *and* content is set then the return value is the size of the largest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
3. If no content is available but a default preferred size has been set using setDefaultSize(Dimension) has been called to set then the return value is this value (as obtained with getDefaultSize()) plus any additional dimensions that the HLook requires for border decoration etc.
4. If there is no content or default size set then the return value is an implementation-specific minimum size plus any additional dimensions that the HLook requires for border decoration etc.

Specified By:
getMinimumSize(HVisible) in interface HLook

Parameters:
hvisible - HVisible to which this HLook is attached.

Returns:
A dimension object indicating this HLook minimum size.

See Also:
getMinimumSize()

---

getPreferredSize(HVisible)

```
public java.awt.Dimension getPreferredSize(HVisible hvisible)
```

Gets the preferred size of the HVisible component when drawn with this HLook .

This size may be determined in several ways depending on the information available to the look. These steps are performed in order and the first available result is returned. For the purposes of this algorithm HLook classes that do not use content (e.g. HRangeLook) are treated as if no content was present.

The extra space required for border decoration can be determined from the getInsets(HVisible) method.

1. If a default preferred size has been set for this HVisible (using setDefaultSize(Dimension)) then the return value is this size (obtained with getDefaultSize()) plus any additional dimensions that the HLook requires for border decoration etc.
2. If this HLook does not support scaling of content or no scaling is requested, and content is present then the return value is the size of the largest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
3. If this HLook supports the scaling of its content (e.g. an HGraphicLook) and content is set then the return value is the current size of the HVisible as returned by getSize).
4. If there is no content and no default size set then the return value is the current size of the HVisible as returned by getSize).

Specified By:
`getPreferredSize(HVisible)` in interface `HLook`

Parameters:
`hvisible` - `HVisible` to which this `HLook` is attached.

Returns:
A dimension object indicating the preferred size of the `HVisible` when drawn with this `HLook`.

See Also:
`getPreferredSize()`, `setDefaultSize(Dimension)`

---

isOpaque(HVisible)

```
public boolean isOpaque(HVisible visible)
```

Returns true if the entire painted area of the `HVisible` when using this look is fully opaque, i.e. the `showLook(Graphics, HVisible, int)` method guarantees that all pixels are painted in an opaque Color.

The default value is implementation specific and depends on the background painting mode of the given `HVisible`. The consequences of an invalid overridden value are implementation specific.

Specified By:
`isOpaque(HVisible)` in interface `HLook`

Parameters:
`visible` - the visible to test

Returns:
true if all the pixels with the java.awt.Component#getBounds method of an `HVisible` using this look are fully opaque, i.e. the `showLook(Graphics, HVisible, int)` method guarantees that all pixels are painted in an opaque Color, otherwise false.

---

showLook(Graphics, HVisible, int)

```
public void showLook(java.awt.Graphics g, HVisible visible, int state)
```

The `showLook(Graphics, HVisible, int)` method is responsible for repainting the entire `HVisible` component, (including any content set on the component, and the component background), subject to the clipRect of the Graphics object passed to it.

The `showLook(Graphics, HVisible, int)` method should not modify the clipRect of the `Graphics` object that is passed to it.

For looks which draw content (e.g. `HTextLook`, `HGraphicLook` and `HAnimateLook`), if no content is associated with the component, the `showLook(Graphics, HVisible, int)` method paints the component with its current background `Color` according to the `setBackgroundMode(int)` method of `HVisible` and draws any (implementation-specific) borders. Note that by default the background mode is set so as to **not** paint a background. Furthermore on platforms which support transparent colors the background `Color` may be partially or completely transparent.

Any resources **explicitly** associated with an `HLook` should be loaded by the `HLook` during its creation, etc., or via its setXXX() methods. Note that the "standard" looks don't load content by default.

This method is called from the `paint(Graphics)` method of `HVisible` and must never be called from elsewhere. Components wishing to redraw themselves should call their repaint method in the usual way.

Specified By:
`showLook(Graphics, HVisible, int)` in interface `HLook`

Parameters:

`g` - the graphics context.

`visible` - the visible.

`state` - the state parameter indicates the state of the visible, allowing the look to render the appropriate content for that state. Note that some components (e.g. HStaticRange, HRange, HRangeValue) do not use state-based content).

---

widgetChanged(HVisible, HChangeData[])

```
public void widgetChanged(HVisible visible, HChangeData[] changes)
```

Called by the `HVisible` whenever its content, state, or any other data changes. See the class description of `HVisible` for more information about the `changes` parameter.

The implementation of this method should work out which graphical areas of the `HVisible` have changed and make any relevant calls to trigger the repainting of those areas.

A minimum implementation of this method could simply call

```
visible.repaint()
```

Specified By:

`widgetChanged(HVisible, HChangeData[])` in interface `HLook`

Parameters:

`visible` - the `HVisible` which has changed

`changes` - an array containing hint data and associated hint objects. If this argument is `null` a full repaint will be triggered.

org.havi.ui
HSound

Syntax
```
public class HSound

java.lang.Object
  |
  +--org.havi.ui.HSound
```

Description
The `HSound` class is used to represent an audio clip. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
The starting position of any audio clip to be played.	At the beginning of the audio clip.	---	---

Constructors

HSound()
```
public HSound()
```
Creates an `HSound` object. See the class description for details of constructor parameters and default values.

Methods

dispose()
```
public void dispose()
```
If the `HSound` object is playing / looping then it will be stopped. The dispose method then discards all sample resources used by the `HSound` object. This mechanism resets the `HSound` object to the state before a load() method was invoked.

load(String)
```
public void load(java.lang.String location)
```

Loads data synchronously into an `HSound` object from an audio sample in the specified file. If the object already contains data, this method shall perform the following sequence:

- stop the sample if it is playing or looping.
- dispose of the old data and any associated resources, as if the `dispose()` method had been called.
- load the new data synchronously.

Parameters:

`location` - the name of a file containing audio data in a recognized file format.

Throws:

`java.io.IOException` - if the sample cannot be loaded due to an IO problem.

`java.lang.SecurityException` - if the caller does not have sufficient rights to access the specified audio sample.

---

load(URL)

```
public void load(java.net.URL contents)
```

Loads data synchronously into an `HSound` object from an audio sample indicated by a URL. If the object already contains data, this method shall perform the following sequence:

- stop the sample if it is playing or looping.
- dispose of the old data and any associated resources, as if the `dispose()` method had been called.
- load the new data synchronously.

Parameters:

`contents` - a URL referring to the data to load.

Throws:

`java.io.IOException` - if the audio sample cannot be loaded due to an IO problem.

`java.lang.SecurityException` - if the caller does not have sufficient rights to access the specified audio sample.

---

loop()

```
public void loop()
```

Starts the `HSound` class looping from the beginning of its associated audio data. If the sample data has not been completely loaded, this method has no effect.

When the audio data has been played in its entirety, then it should be played again from the beginning of its associated data, so as to cause a "seamless" continuous (infinite) audio playback - until the next stop, or play method is invoked. Note that the audio data is played back asynchronously, there is no mechanism for synchronization with other classes presenting sounds, images, or video.

This method may fail "silently" if (local) audio facilities are unavailable on the platform.

---

play()

```
public void play()
```

Starts the `HSound` class playing from the beginning of its associated audio data. If the sample data has not been completely loaded, this method has no effect.

When the audio data has been played in its entirety then no further audible output should be made until the next play or loop method is invoked. Note that the audio data is played back asynchronously. There is no mechanism for synchronization with other classes presenting sounds, images, or video.

This method may fail "silently" if (local) audio facilities are unavailable on the platform.

---

set(byte[])

```
public void set(byte[] data)
```

Constructs an `HSound` object from an array of bytes encoded in the same encoding format as when reading this type of audio sample data from a file. If the object already contains data, this method shall perform the following sequence:

- stop the sample if it is playing or looping.
- dispose of the old data and any associated resources, as if the `dispose()` method had been called.
- load the new data synchronously.

If the byte array does not contain a valid audio sample then this method shall throw a `java.lang.IllegalArgumentException`.

Parameters:

`data` - the data for the `HSound` object encoded in the specified format for audio sample files of this type.

---

stop()

```
public void stop()
```

Stops the `HSound` class playing its associated audio data.

Note that, if a play or loop method is invoked, after a stop, then presentation of the audio data will restart from the beginning of the audio data, rather than from the position where the audio data was stopped.

org.havi.ui
HState

Syntax
```
public interface HState
```

All Known Implementing Classes:
HVisible

Description
The HState interface encapsulates constants for component states which are used in the various HVisible setContent and getContent methods, to indicate which state the specified content is to be set.

There are two sets of constants defined in this interface. The first set are mutually exclusive state bits, which define properties of the component. The order of the states is important; each state has precedence over the one before it when considering the effect on the component. For example, the DISABLED_STATE_BIT property is considered the most significant property of a state. The state bits are shown in the table below.

Name	Interpretation
FOCUSED_STATE_BIT	component has focus
ACTIONED_STATE_BIT	component is actioned
DISABLED_STATE_BIT	component is disabled

The state bits combine to provide the actual interaction states which HVisible components may be in. Content for components is set on these states, not the state bits shown above. The interaction states are shown in the table below.

State	DISABLED_BIT	ACTIONED_BIT	FOCUSED_BIT
NORMAL_STATE	0	0	0
FOCUSED_STATE	0	0	1
ACTIONED_STATE	0	1	0
ACTIONED_FOCUSED_STATE	0	1	1
DISABLED_STATE	1	0	0
DISABLED_FOCUSED_STATE	1	0	1

DISABLED_ACTIONED_STATE	1	1	0
DISABLED_ACTIONED_FOCUSED_STATE	1	1	1

See Also:
setTextContent(String, int), getTextContent(int), setGraphicContent(Image, int), getGraphicContent(int), setAnimateContent(Image[], int), getAnimateContent(int), setContent(Object, int), getContent(int), setInteractionState(int), getInteractionState()

Fields

ACTIONED_FOCUSED_STATE

```
public static final int ACTIONED_FOCUSED_STATE
```

This state indicates that the widget has been actioned, and has focus. HSwitchable components may stay in this state until they are actioned again. This state is applicable to all HActionable and HSwitchable components.

See Also:
HActionable, HSwitchable

ACTIONED_STATE

```
public static final int ACTIONED_STATE
```

This state indicates that the widget has been actioned, but does not have focus. HSwitchable components may stay in this state until they are actioned again. This state is applicable to all HActionable and HSwitchable components.

See Also:
HActionable, HSwitchable

ACTIONED_STATE_BIT

```
public static final int ACTIONED_STATE_BIT
```

This state bit indicates that the widget has been actioned. HActionable components only have this bit set for the duration of the calls to their registered ActionListeners, whereas HSwitchable components may remain with the ACTIONED bit set until further user input causes them to leave it. If state-based content is not used, the associated look should visually distinguish components with this bit set e.g. by drawing them as "pushed in".

ALL_STATES

```
public static final int ALL_STATES
```

Constant used to indicate all of the applicable states for a given component.

Note that the ALL_STATES constant should only be used in setting content setTextContent(String, int) setGraphicContent(Image, int) setAnimateContent(Image[], int) setContent(Object, int)

The ALL_STATES constant should not be used for retrieving content: getTextContent(int) getGraphicContent(int) getAnimateContent(int) getContent(int)

DISABLED_ACTIONED_FOCUSED_STATE

```
public static final int DISABLED_ACTIONED_FOCUSED_STATE
```

This state indicates that the widget has been actioned and has input focus but is disabled. This state is applicable to all HSwitchable components.

See Also:
HSwitchable

DISABLED_ACTIONED_STATE

```
public static final int DISABLED_ACTIONED_STATE
```

This state indicates that the widget has been actioned but is disabled. This state is applicable to all HSwitchable components.

See Also:
HSwitchable

DISABLED_FOCUSED_STATE

```
public static final int DISABLED_FOCUSED_STATE
```

This state indicates that the widget has input focus but is disabled. This state is applicable to all HNavigable components.

See Also:
HNavigable

DISABLED_STATE

```
public static final int DISABLED_STATE
```

This state indicates that the widget is disabled. This state is applicable to all HVisible components.

See Also:
HVisible

DISABLED_STATE_BIT

```
public static final int DISABLED_STATE_BIT
```

This state bit indicates that the component is disabled. Regardless of other bits being set it shall not respond to user action, shortcut keys or mouse clicks. However the component is only disabled at the HAVi level. It may still receive AWT events directly, which interoperable components must ignore. If state-based content is not used the associated look should visually distinguish components with this bit set e.g. by graying them out.

FIRST_STATE

```
public static final int FIRST_STATE
```

Constant used to indicate the value of the first (builtin) component state.

FOCUSED_STATE

```
public static final int FOCUSED_STATE
```

This state indicates that the widget has input focus. This state is applicable to all `HNavigable` components.

See Also:
`HNavigable`

FOCUSED_STATE_BIT

```
public static final int FOCUSED_STATE_BIT
```

This state bit indicates that the widget has the input focus. This state is only valid for widgets implementing HNavigable. If state-based content is not used, the associated look should visually distinguish components with this bit set e.g. by highlighting them.

LAST_STATE

```
public static final int LAST_STATE
```

Constant used to indicate the value of the last (builtin) component state.

NORMAL_STATE

```
public static final int NORMAL_STATE
```

This constant (i.e. no state bits set) indicates that the widget is in its normal state. This state is applicable to all `HVisible` components.

See Also:
`HVisible`

org.havi.ui
HStaticAnimation

Syntax

```
public class HStaticAnimation extends HVisible implements HNoInputPreferred, HAnimateEffect
```

```
java.lang.Object
  |
  +--java.awt.Component
        |
        +--HComponent
              |
              +--HVisible
                    |
                    +--org.havi.ui.HStaticAnimation
```

Direct Known Subclasses:

HAnimation

All Implemented Interfaces:

HAnimateEffect, HMatteLayer, HNoInputPreferred, HState, java.awt.image.ImageObserver, java.awt.MenuContainer, java.io.Serializable, TestOpacity

Description

The HStaticAnimation is a user interface component used to display animated graphical content but which does *not* permit the user to navigate (focus) upon it. By default it uses the HAnimateLook to render itself.

The HStaticAnimation class supports animating images a finite number of times or infinitely (continuously), and either forward or in alternating directions with a specified time delay between the rendering of consecutive images. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
x	x-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
y	y-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
width	width of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
height	height of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds

imagesNormal	The array of images to be used as the content for the NORMAL_STATE state of this component.	null	setAnimateContent(Image[], int)	getAnimateContent(int)
delay	The delay between the presentation of successive content in the animation, in units of 0.1 second	1 (i.e. 0.1 seconds)	setDelay(int)	getDelay()
repeatCount	The number of times that the animation is to be played.	REPEAT_INFINITE	setRepeatCount(int)	getRepeatCount()
playMode	The playing mode for the animation.	PLAY_REPEATING	setPlayMode(int)	getPlayMode()

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
Associated matte (HMatte).	none (i.e. getMatte() returns null)	setMatte(HMatte)	getMatte()
The text layout manager responsible for text formatting.	An HDefaultTextLayoutManager object.	setTextLayoutManager(HTextLayoutManager)	getTextLayoutManager()
The background painting mode	NO_BACKGROUND_FILL	setBackgroundMode(int)	getBackgroundMode()
The default preferred size	not set (i.e. null) unless specified by width and height parameters	setDefaultSize(Dimension)	getDefaultSize()
The horizontal content alignment	HALIGN_CENTER	setHorizontalAlignment(int)	getHorizontalAlignment()
The vertical content alignment	VALIGN_CENTER	setVerticalAlignment(int)	getVerticalAlignment()
The content scaling mode	RESIZE_NONE	setResizeMode(int)	getResizeMode()
The initial piece of content to be presented, i.e. its position in the content array.	0	setPosition(int)	getPosition()
By default the animation should be stopped. Hence, to start the animation its start method must be explicitly invoked. This mechanism allows for animations that are programmatically controlled, e.g. via the setPosition method.	"stopped"	start() / stop()	isAnimated()

The default "look" for this class.	A platform specific HAnimateLook	setDefaultLook(HAnimateLook)	getDefaultLook()
The "look" for this object.	The HAnimateLook returned from HStaticAnimation.getDefaultLook when this object was created.	setLook(HLook)	getLook()

Constructors

HStaticAnimation()

```
public HStaticAnimation()
```

Creates an HStaticAnimation object. See the class description for details of constructor parameters and default values.

HStaticAnimation(Image[], int, int, int)

```
public HStaticAnimation(java.awt.Image[] imagesNormal, int delay, int playMode,
            int repeatCount)
```

Creates an HStaticAnimation object. See the class description for details of constructor parameters and default values.

HStaticAnimation(Image[], int, int, int, int, int, int, int)

```
public HStaticAnimation(java.awt.Image[] imagesNormal, int delay, int playMode,
            int repeatCount, int x, int y, int width, int height)
```

Creates an HStaticAnimation object. See the class description for details of constructor parameters and default values.

Methods

getDefaultLook()

```
public static HAnimateLook getDefaultLook()
```

Returns the currently set default HLook for HStaticAnimation components.

Returns:

The HLook that is used by default when creating a new HStaticAnimation component.

getDelay()

```
public int getDelay()
```

Gets the presentation delay for this HStaticAnimation .

Specified By:

getDelay() in interface HAnimateEffect

Returns:
the presentation delay in units of 0.1 seconds.

---

getPlayMode()

```
public int getPlayMode()
```

Gets the playing mode for this HStaticAnimation .

Specified By:
getPlayMode() in interface HAnimateEffect

Returns:
the play mode for this HStaticAnimation .

---

getPosition()

```
public int getPosition()
```

Get the current index into the content array which this HStaticAnimation is using to display content.

Specified By:
getPosition() in interface HAnimateEffect

Returns:
the index of the content currently being displayed, in the range `0 <= index < length`

---

getRepeatCount()

```
public int getRepeatCount()
```

Gets the number of times that this HStaticAnimation is to be played. Note that this method does *not* return the number of repeats that are remaining to be played.

Specified By:
getRepeatCount() in interface HAnimateEffect

Returns:
the total number of times that an HStaticAnimation is to be played. The returned value shall be greater than zero, or REPEAT_INFINITE .

---

isAnimated()

```
public boolean isAnimated()
```

This method indicates the animation (running) state of the HStaticAnimation .

Specified By:
isAnimated() in interface HAnimateEffect

Returns:
`true` if this HStaticAnimation is running, i.e. the `start` method has been invoked - `false` otherwise.

---

setDefaultLook(HAnimateLook)

```
public static void setDefaultLook(HAnimateLook hlook)
```

Sets the default HLook for further HStaticAnimation Components.

Parameters:
`hlook` - The `HLook` that will be used by default when creating a new `HStaticAnimation` component. Note that this parameter may be null, in which case newly created components shall not draw themselves until a non-null look is set using the `setLook(HLook)` method.

---

setDelay(int)

```
public void setDelay(int count)
```

Sets the delay between the presentation of successive pieces of content (frames).

After calling `setDelay(int)` on a currently playing `HStaticAnimation`, there is no guarantee that one or more frames will not be displayed using the previous delay until the new delay value takes effect.

Specified By:
`setDelay(int)` in interface `HAnimateEffect`

Parameters:
`count` - the content presentation delay in units of 0.1 seconds duration. If count is less than one "unit", then it shall be treated as if it were a delay of one "unit", i.e. 0.1 seconds.

---

setLook(HLook)

```
public void setLook(HLook hlook)
```

Sets the `HLook` for this component.

Overrides:
`setLook(HLook)` in class `HVisible`

Parameters:
`hlook` - The `HLook` that is to be used for this component. Note that this parameter may be null, in which case the component will not draw itself until a look is set.

Throws:
`HInvalidLookException` - If the `HLook` is not an `HAnimateLook`.

---

setPlayMode(int)

```
public void setPlayMode(int mode)
```

Sets the playing mode for this `HStaticAnimation`. If the animation is already running a call to `setPlayMode` will change the current value and affect the animation immediately. The position of the animation is unchanged.

Specified By:
`setPlayMode(int)` in interface `HAnimateEffect`

Parameters:
`mode` - the play mode for this `HStaticAnimation`, which must be either `PLAY_ALTERNATING` or `PLAY_REPEATING`.

---

setPosition(int)

```
public void setPosition(int position)
```

Set this `HStaticAnimation` to display the content at the specified position. If the animation is already running a call to `setPosition` will change the current value and affect the animation immediately.

Specified By:

setPosition(int) in interface HAnimateEffect

Parameters:

position - an index into the content array which specifies the next piece of content to be displayed. If position is less than 0, then the array element at index 0 is displayed, if position is greater than or equal to the length of the content array, then the array element at index [length-1] will be used.

---

setRepeatCount(int)

```
public void setRepeatCount(int count)
```

Sets the number of times that this HStaticAnimation should be played. If the animation is already running a call to setRepeatCount will change the current value and reset the current number of repeats to 0, affecting the animation immediately.

Specified By:

setRepeatCount(int) in interface HAnimateEffect

Parameters:

count - the number of times that an HStaticAnimation should be played. Valid values of the repeat count are one or more, and REPEAT_INFINITE .

---

start()

```
public void start()
```

This method starts this HStaticAnimation playing. If start is called when the animation is already running it resets the animation according to the current play mode, as returned by getPlayMode() .

Specified By:

start() in interface HAnimateEffect

---

stop()

```
public void stop()
```

This method indicates that the running HStaticAnimation should be stopped. After calling this method, there is no guarantee that one or more frames will not be displayed before the animation actually stops playing. If the animation is already stopped further calls to stop have no effect.

Specified By:

stop() in interface HAnimateEffect

org.havi.ui
HStaticIcon

Syntax

```
public class HStaticIcon extends HVisible implements HNoInputPreferred
```

```
java.lang.Object
  |
  +--java.awt.Component
        |
        +--HComponent
              |
              +--HVisible
                    |
                    +--org.havi.ui.HStaticIcon
```

Direct Known Subclasses:

HIcon

All Implemented Interfaces:

HMatteLayer, HNoInputPreferred, HState, java.awt.image.ImageObserver, java.awt.MenuContainer, java.io.Serializable, TestOpacity

Description

The HStaticIcon is a user interface component used to display static graphical content which does *not* permit the user to navigate (focus) upon it. By default it uses the HGraphicLook to render itself. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
x	x-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
y	y-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
width	width of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
height	height of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
imageNormal	The image to be used as the content for the NORMAL_STATE state of this component.	null	setGraphicContent(Image, int)	getGraphicContent(int)

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
Associated matte (HMatte).	none (i.e. getMatte() returns null)	setMatte(HMatte)	getMatte()
The text layout manager responsible for text formatting.	An HDefaultTextLayoutManager object.	setTextLayout-Manager(HTextLayoutManager)	getTextLayoutManager()
The background painting mode	NO_BACKGROUND_FILL	setBackgroundMode(int)	getBackgroundMode()
The default preferred size	not set (i.e. null) unless specified by width and height parameters	setDefaultSize(Dimension)	getDefaultSize()
The horizontal content alignment	HALIGN_CENTER	setHorizontalAlignment(int)	getHorizontalAlignment()
The vertical content alignment	VALIGN_CENTER	setVerticalAlignment(int)	getVerticalAlignment()
The content scaling mode	RESIZE_NONE	setResizeMode(int)	getResizeMode()
The default "look" for this class.	A platform specific HGraphicLook	setDefaultLook(HGraphicLook)	getDefaultLook()
The "look" for this object.	The HGraphicLook returned from HStaticIcon.getDefault-Look when this object was created.	setLook(HLook)	getLook()

Constructors

HStaticIcon()

```
public HStaticIcon()
```

Creates an HStaticIcon object. See the class description for details of constructor parameters and default values.

HStaticIcon(Image)

```
public HStaticIcon(java.awt.Image imageNormal)
```

Creates an HStaticIcon object. See the class description for details of constructor parameters and default values.

HStaticIcon(Image, int, int, int, int)

```
public HStaticIcon(java.awt.Image imageNormal, int x, int y, int width, int height)
```

Creates an HStaticIcon object. See the class description for details of constructor parameters and default values.

Methods

getDefaultLook()

```
public static HGraphicLook getDefaultLook()
```

Returns the currently set default HLook for HStaticIcon components.

Returns:

The HLook that is used by default when creating a new HStaticIcon component.

setDefaultLook(HGraphicLook)

```
public static void setDefaultLook(HGraphicLook hlook)
```

Sets the default HLook for further HStaticIcon Components.

Parameters:

hlook - The HLook that will be used by default when creating a new HStaticIcon component. Note that this parameter may be null, in which case newly created components shall not draw themselves until a non-null look is set using the setLook(HLook) method.

setLook(HLook)

```
public void setLook(HLook hlook)
```

Sets the HLook for this component.

Overrides:

setLook(HLook) in class HVisible

Parameters:

hlook - The HLook that is to be used for this component. Note that this parameter may be null, in which case the component will not draw itself until a look is set.

Throws:

HInvalidLookException - If the HLook is not an HGraphicLook .

org.havi.ui
HStaticRange

Syntax

```
public class HStaticRange extends HVisible implements HNoInputPreferred, HOrientable
```

```
java.lang.Object
  |
  +--java.awt.Component
        |
        +--HComponent
              |
              +--HVisible
                    |
                    +--org.havi.ui.HStaticRange
```

Direct Known Subclasses:

HRange

All Implemented Interfaces:

HMatteLayer, HNoInputPreferred, HOrientable, HState, java.awt.image.ImageObserver, java.awt.MenuContainer, java.io.Serializable, TestOpacity

Description

The HStaticRange is a user interface component used to display a static value which is within a fixed range, but does *not* permit the user to navigate (focus) upon it. By default it uses the HRangeLook to render itself. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
x	x-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
y	y-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
width	width of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
height	height of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
orientation	The "orientation" of the range object.	ORIENT_LEFT_TO_RIGHT	setOrientation(int)	getOrientation()

minimum	The minimum value that can be returned by this range object.	0	setRange(int, int)	getMinValue()
maximum	The maximum value that can be returned by this range object.	100	setRange(int, int)	getMaxValue()
value	The current value returned by this range object.	0	setValue(int)	getValue()

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
Associated matte (HMatte).	none (i.e. getMatte() returns null)	setMatte(HMatte)	getMatte()
The text layout manager responsible for text formatting.	An HDefaultTextLayoutManager object.	setTextLayout-Manager(HTextLayoutManager)	getTextLayoutManager()
The background painting mode	NO_BACKGROUND_FILL	setBackgroundMode(int)	getBackgroundMode()
The default preferred size	not set (i.e. null) unless specified by width and height parameters	setDefaultSize(Dimension)	getDefaultSize()
The horizontal content alignment	HALIGN_CENTER	setHorizontalAlignment(int)	getHorizontalAlignment()
The vertical content alignment	VALIGN_CENTER	setVerticalAlignment(int)	getVerticalAlignment()
The content scaling mode	RESIZE_NONE	setResizeMode(int)	getResizeMode()
The default "look" for this class.	A platform specific HRangeLook	setDefaultLook(HRangeLook)	getDefaultLook()
The "look" for this object.	The HRangeLook returned from HStaticRange.getDefault-Look when this object was created.	setLook(HLook)	getLook()
The offsets for the "thumb" of this range control	min = 0, max = 0	setThumbOff-sets(int, int)	getThumbMinOffset() / getThumbMaxOffset()
The behavior of this range object with respect to its "thumb" values	SLIDER_BEHAVIOR	setBehavior(int)	getBehavior()

Fields

SCROLLBAR_BEHAVIOR

```
public static final int SCROLLBAR_BEHAVIOR
```

The HStaticRange should behave as a scrollbar, i.e. the allowable values that may be set / returned for the HStaticRange should be affected by the "thumb" offsets, and hence its value should be able to vary between [minimum + minThumbOffset, maximum - maxThumbOffset].

SLIDER_BEHAVIOR

```
public static final int SLIDER_BEHAVIOR
```

The HStaticRange should behave as a slider, i.e. the allowable values that may be set / returned for the HStaticRange should not be affected by the "thumb" offsets, and hence its value should be able to vary between [minimum, maximum].

Constructors

HStaticRange()

```
public HStaticRange()
```

Creates an HStaticRange object. See the class description for details of constructor parameters and default values.

HStaticRange(int, int, int, int)

```
public HStaticRange(int orientation, int minimum, int maximum, int value)
```

Creates an HStaticRange object. See the class description for details of constructor parameters and default values.

HStaticRange(int, int, int, int, int, int, int, int)

```
public HStaticRange(int orientation, int minimum, int maximum, int value, int x, int y,
            int width, int height)
```

Creates an HStaticRange object. See the class description for details of constructor parameters and default values.

Methods

getBehavior()

```
public int getBehavior()
```

Returns the behavior for this HStaticRange.

Returns:

the behavior for this HStaticRange .

---

getDefaultLook()

```
public static HRangeLook getDefaultLook()
```

Returns the currently set default HLook for HStaticRange components.

Returns:
The HLook that is used by default when creating a new HStaticRange component.

---

getMaxValue()

```
public int getMaxValue()
```

Get the maximum value of the range

Returns:
The maximum value of the range.

---

getMinValue()

```
public int getMinValue()
```

Gets the minimum of the range.

Returns:
The minimum value for the range

---

getOrientation()

```
public int getOrientation()
```

Retrieve the orientation of the HStaticRange . The orientation controls how an associated HLook lays out the component and affects the visual behavior of the HAdjustmentEvent and HItemEvent events. For example, the system might use this information to select appropriate key mappings for these events.

Specified By:
getOrientation() in interface HOrientable

Returns:
one of ORIENT_LEFT_TO_RIGHT , ORIENT_RIGHT_TO_LEFT , ORIENT_TOP_TO_BOTTOM , or ORIENT_BOTTOM_TO_TOP .

---

getThumbMaxOffset()

```
public int getThumbMaxOffset()
```

Returns the thumb offset for its maximum value.

Returns:
the thumb offset for its maximum value.

---

getThumbMinOffset()

```
public int getThumbMinOffset()
```

Returns the thumb offset for its minimum value.

Returns:

the thumb offset for its minimum value.

---

getValue()

```
public int getValue()
```

Gets the value of the control. Note that the recovered value is subject to the control's current behavior.

See Also:
SLIDER_BEHAVIOR, SCROLLBAR_BEHAVIOR

---

setBehavior(int)

```
public void setBehavior(int behavior)
```

Sets the behavior for this HStaticRange .

Parameters:
behavior - the behavior for this HStaticRange (SLIDER_BEHAVIOR or SCROLLBAR_BEHAVIOR).

---

setDefaultLook(HRangeLook)

```
public static void setDefaultLook(HRangeLook look)
```

Sets the default HLook for further HStaticRange Components.

Parameters:
look - The HLook that will be used by default when creating a new HStaticRange component. Note that this parameter may be null, in which case newly created components shall not draw themselves until a non-null look is set using the setLook(HLook) method.

---

setLook(HLook)

```
public void setLook(HLook hlook)
```

Sets the HLook for this component.

Overrides:
setLook(HLook) in class HVisible

Parameters:
hlook - The HLook that is to be used for this component. Note that this parameter may be null, in which case the component will not draw itself until a look is set.

Throws:
HInvalidLookException - If the Look is not an HRangeLook .

---

setOrientation(int)

```
public void setOrientation(int orient)
```

Set the orientation of the HStaticRange . The orientation controls how the associated HLook lays out the component.

Specified By:
setOrientation(int) in interface HOrientable

Parameters:
orient - one of ORIENT_LEFT_TO_RIGHT , ORIENT_RIGHT_TO_LEFT , ORIENT_TOP_TO_BOTTOM , or ORIENT_BOTTOM_TO_TOP .

---

setRange(int, int)

```
public boolean setRange(int minimum, int maximum)
```

Sets the range of values for the control.

Parameters:

`minimum` - The minimum value of the range control

`maximum` - The maximum value of the range control

Returns:

Indicates if the min and max values have been set correctly. Returns false if the minimum value is greater than or equal to the maximum value, otherwise returns true

---

setThumbOffsets(int, int)

```
public void setThumbOffsets(int minOffset, int maxOffset)
```

Set the offsets for the "thumb" area on this range control. The "thumb" is then drawn from (value - minOffset), to (value + maxOffset) positions outside of the HRange values [minimum:maximum] are clipped to the closest value.

There is no requirement that minOffset == maxOffset. For example, both offsets may be zero, yielding a thermometer-like range object. All measurements are in the same units as the minimum / maximum values on the `HStaticRange` object. The size of the "thumb" is the application author's responsibility. By default the "thumb" does not affect the range over which the value of the `HStaticRange` may be modified. It is recommended that the `HRangeLook` provides mechanisms to denote the value of the `HStaticRange`, in addition to indicating the extent of the thumb as defined by the offsets.

See Also:

`setBehavior(int)`

---

setValue(int)

```
public void setValue(int value)
```

Sets the value of the control, subject to its current behavior.

Parameters:

`value` - the value to which the control should be set.

See Also:

`SLIDER_BEHAVIOR`, `SCROLLBAR_BEHAVIOR`

org.havi.ui
HStaticText

Syntax

```
public class HStaticText extends HVisible implements HNoInputPreferred
```

```
java.lang.Object
  |
  +--java.awt.Component
        |
        +--HComponent
              |
              +--HVisible
                    |
                    +--org.havi.ui.HStaticText
```

Direct Known Subclasses:

HText

All Implemented Interfaces:

HMatteLayer, HNoInputPreferred, HState, java.awt.image.ImageObserver, java.awt.MenuContainer, java.io.Serializable, TestOpacity

Description

The HStaticText is a user interface component used to display static read-only textual content which does *not* permit the user to navigate (focus) upon it. By default it uses the HTextLook to render itself. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
x	x-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
y	y-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
width	width of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
height	height of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds

textNormal	The string to be used as the content for the NORMAL_STATE state of this component.	null	setTextContent(String, int)	getTextContent(int)
tlm	The text layout manager responsible for text formatting.	An HDefaultTextLayoutManager object.	setTextLayoutManager(HTextLayoutManager)	getTextLayoutManager()
font	The font for this component.	---	java.awt.Component#setFont	java.awt.Component#getFont
background	The background color for this component.	---	java.awt.Component#getBackground	java.awt.Component#setBackground
foreground	The foreground color for this component.	---	java.awt.Component#getForeground	java.awt.Component#setForeground

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
Associated matte (HMatte).	none (i.e. getMatte() returns null)	setMatte(HMatte)	getMatte()
The text layout manager responsible for text formatting.	An HDefaultTextLayoutManager object.	setTextLayoutManager(HTextLayoutManager)	getTextLayoutManager()
The background painting mode	NO_BACKGROUND_FILL	setBackgroundMode(int)	getBackgroundMode()
The default preferred size	not set (i.e. null) unless specified by width and height parameters	setDefaultSize(Dimension)	getDefaultSize()
The horizontal content alignment	HALIGN_CENTER	setHorizontalAlignment(int)	getHorizontalAlignment()
The vertical content alignment	VALIGN_CENTER	setVerticalAlignment(int)	getVerticalAlignment()
The content scaling mode	RESIZE_NONE	setResizeMode(int)	getResizeMode()
The default "look" for this class.	A platform specific HTextLook	setDefaultLook(HTextLook)	getDefaultLook()

The "look" for this object.	The HTextLook returned from HStaticText.getDefaultLook when this object was created.	setLook(HLook)	getLook()

See Also:

HDefaultTextLayoutManager, HTextLayoutManager

Constructors

HStaticText()

```
public HStaticText()
```

Creates an HStaticText object. See the class description for details of constructor parameters and default values.

HStaticText(String)

```
public HStaticText(java.lang.String textNormal)
```

Creates an HStaticText object. See the class description for details of constructor parameters and default values.

HStaticText(String, Font, Color, Color, HTextLayoutManager)

```
public HStaticText(java.lang.String textNormal, java.awt.Font font,
            java.awt.Color foreground, java.awt.Color background, HTextLayoutManager tlm)
```

Creates an HStaticText object. See the class description for details of constructor parameters and default values.

HStaticText(String, int, int, int, int)

```
public HStaticText(java.lang.String textNormal, int x, int y, int width, int height)
```

Creates an HStaticText object. See the class description for details of constructor parameters and default values.

HStaticText(String, int, int, int, int, Font, Color, Color, HTextLayoutManager)

```
public HStaticText(java.lang.String textNormal, int x, int y, int width, int height,
            java.awt.Font font, java.awt.Color foreground, java.awt.Color background,
            HTextLayoutManager tlm)
```

Creates an HStaticText object. See the class description for details of constructor parameters and default values.

Methods

---

getDefaultLook()

```
public static HTextLook getDefaultLook()
```

Returns the currently set default `HLook` for `HStaticText` components.

Returns:
The `HLook` that is used by default when creating a new `HStaticText` component.

---

setDefaultLook(HTextLook)

```
public static void setDefaultLook(HTextLook hlook)
```

Sets the default `HLook` for further `HStaticText` Components.

Parameters:
`hlook` - The `HLook` that will be used by default when creating a new `HStaticText` component. Note that this parameter may be null, in which case newly created components shall not draw themselves until a non-null look is set using the `setLook(HLook)` method.

---

setLook(HLook)

```
public void setLook(HLook hlook)
```

Sets the `HLook` for this component.

Overrides:
`setLook(HLook)` in class `HVisible`

Parameters:
`hlook` - The `HLook` that is to be used for this component. Note that this parameter may be null, in which case the component will not draw itself until a look is set.

Throws:
`HInvalidLookException` - if the Look is not an `HTextLook`.

org.havi.ui
HStillImageBackgroundConfiguration

Syntax

```
public class HStillImageBackgroundConfiguration extends HBackgroundConfiguration

java.lang.Object
  |
  +--HScreenConfiguration
        |
        +--HBackgroundConfiguration
              |
              +--org.havi.ui.HStillImageBackgroundConfiguration
```

Description

This class represents a background configuration which supports the installation of still images. The platform using the HAVi user-interface specification must specify which image formats are supported. The `java.awt.Image` class is intentionally not used in order to allow the support of image formats which carry sufficient restrictions that expressing them through the API of that class would require extensive use of runtime errors. One specific example of this is MPEG I-frames. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

Constructors

HStillImageBackgroundConfiguration()

```
protected HStillImageBackgroundConfiguration()
```

It is not intended that applications should directly construct `HStillImageBackgroundConfiguration` objects.

Creates an `HStillImageBackgroundConfiguration` object. See the class description for details of constructor parameters and default values.

Methods

---

displayImage(HBackgroundImage)

```
public void displayImage(HBackgroundImage image)
```

Display an image. If the data for the image has not been loaded then this method will block while the data is loaded. It is platform dependent whether this image is scaled to fit or whether it is cropped (where too large) or repeated (where too small). The position of the image is platform-dependent. If the platform does not scale the image to fit, the previous color set using `setColor(Color)` is shown in the areas where no image is displayed. If no color has been set what is shown in this area is platform dependent. What is displayed while the image is loading is implementation specific.

Note that the image may be removed by calling the `setColor(Color)` method.

If the `image` parameter is null a java.lang.NullPointerException is thrown.

Parameters:

`image` - the image to display.

Throws:

`java.io.IOException` - if the data for the `HBackgroundImage` is not loaded and loading the data is impossible or fails.

`java.lang.IllegalArgumentException` - if the `HBackgroundImage` does not contain an image in a supported image encoding format

`HPermissionDeniedException` - if the `HBackgroundDevice` concerned is not reserved.

`HConfigurationException` - if the `HStillImageBackgroundConfiguration` is not the currently set configuration for its `HBackgroundDevice` .

---

displayImage(HBackgroundImage, HScreenRectangle)

```
public void displayImage(HBackgroundImage image, HScreenRectangle r)
```

Display an image to cover a particular area of the screen. If the data for the image has not been loaded then this method will block while the data is loaded. It is platform dependent whether this image is scaled to fit or whether it is cropped (where too large) or repeated (where too small). The position of the image within the rectangle is platform-dependent. If the platform does not scale the image to fit, or the rectangle does not cover the entire display area, the previous color set using `setColor(Color)` is shown in the areas where no image is displayed. If no color has been set what is shown in this area is platform dependent.

Note that the image may be removed by calling the `setColor(Color)` method.

If either or both parameters are null a java.lang.NullPointerException is thrown.

Parameters:

`image` - the image to display

`r` - the area of the screen to cover with the image

Throws:

`java.io.IOException` - if the data for the `HBackgroundImage` is not loaded and loading the data is impossible or fails.

`java.lang.IllegalArgumentException` - if the `HBackgroundImage` does not contain an image in a supported image encoding format

`HPermissionDeniedException` - if the `HBackgroundDevice` concerned is not reserved.

`HConfigurationException` - if the `HStillImageBackgroundConfiguration` is not the currently set configuration for its `HBackgroundDevice` .

---

setColor(Color)

```
public void setColor(java.awt.Color color)
```

Set the current color of this background. On platforms where there is a sub-class of java.awt.Color supporting transparency of any kind, passing an object representing a non-opaque color is illegal. Platforms with a limited color resolution for backgrounds may approximate this value to the nearest available. The `getColor()` method will return the actual value used.

Note that calling this method will clear any image currently displayed by the `HBackgroundDevice`.

Overrides:

`setColor(Color)` in class `HBackgroundConfiguration`

Parameters:

`color` - the color to be used for the background

Throws:

`HPermissionDeniedException` - if this `HBackgroundDevice` does not have the right to control the background

`HConfigurationException` - if the color specified is illegal for this platform.

org.havi.ui
HSwitchable

Syntax
```
public interface HSwitchable extends HActionable
```

All Superinterfaces:
HActionable, HActionInputPreferred, HNavigable, HNavigationInputPreferred

All Known Implementing Classes:
HToggleButton

Description
This interface is implemented for all user interface components that can be actioned such that they "toggle" on and off and maintain the chosen state.

Event Behavior

Subclasses of HComponent which implement HSwitchable must respond to HFocusEvent and HActionEvent events.

Applications should assume that classes which implement HSwitchable can generate events of the types HFocusEvent and HActionEvent in response to other types of input event.

An application may add one or more HActionListener listeners to the component. The actionPerformed method of the HActionListener is invoked whenever the HSwitchable is actioned.


HAVi action events are discussed in detail in the HActionInputPreferred interface description.

Interaction States

The following interaction states are valid for this HSwitchable component:

- NORMAL_STATE
- FOCUSED_STATE
- ACTIONED_STATE
- ACTIONED_FOCUSED_STATE
- DISABLED_STATE
- DISABLED_FOCUSED_STATE
- DISABLED_ACTIONED_STATE
- DISABLED_ACTIONED_FOCUSED_STATE

The state machine diagram below shows the valid state transitions for an HSwitchable component.

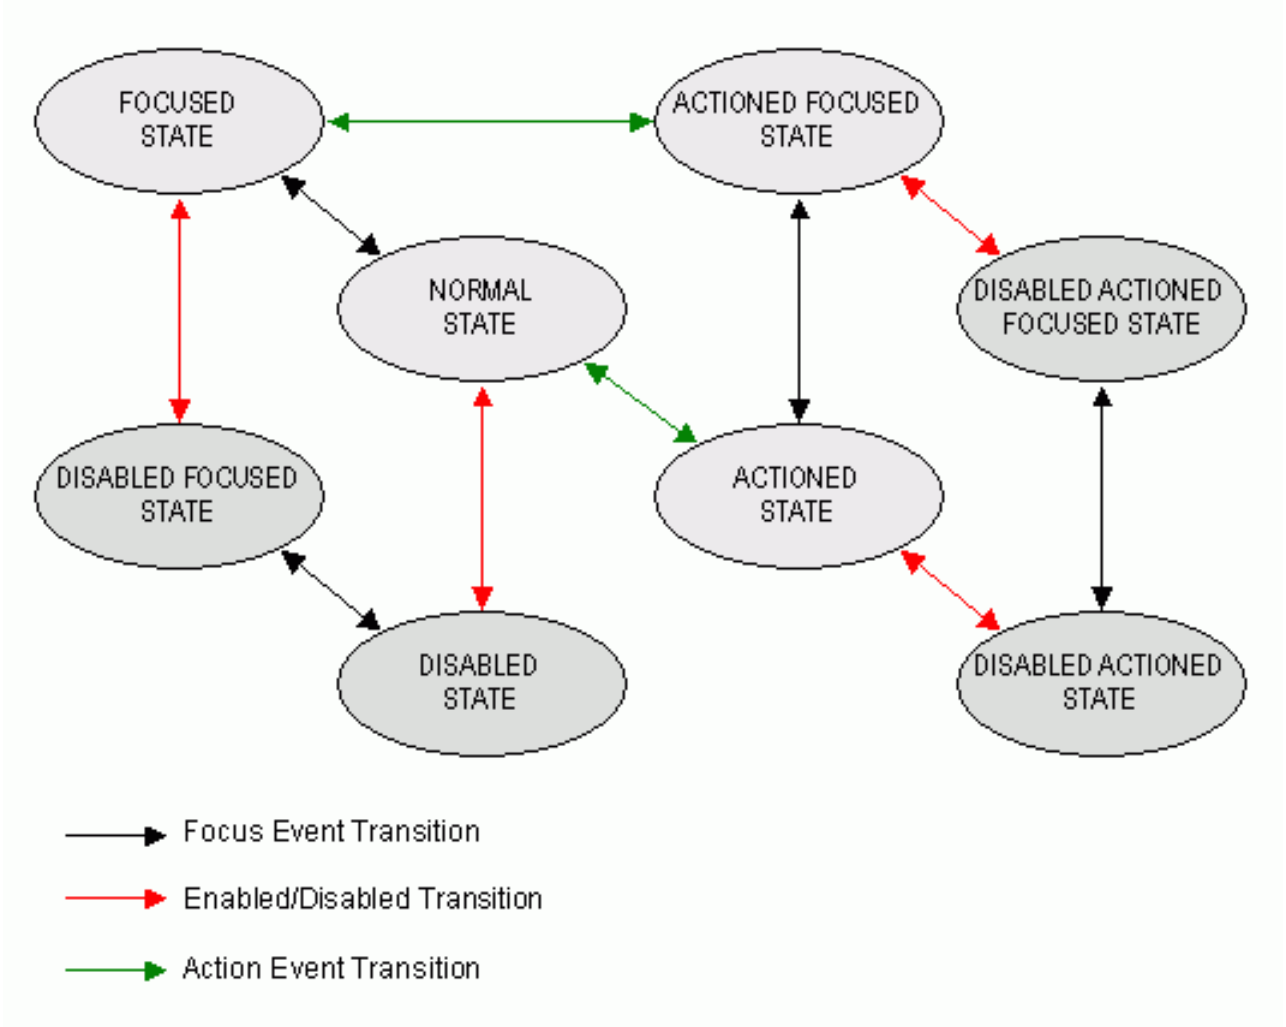

Unlike `HActionable` components there are no automatic transitions to other states. Actioned states (i.e. those with the `ACTIONED_STATE_BIT` bit set may persist after any registered `HActionListener` listeners have been called, until a further `HActionEvent` is received.

Platform Classes

The following HAVi platform classes implement or inherit the `HSwitchable` interface. These classes shall all generate both `HFocusEvent` and `HActionEvent` events in addition to any other events specified in the respective class descriptions.

- `HToggleButton`

See Also:

`HNavigable`, `HActionable`, `HActionInputPreferred`, `HActionEvent`, `HActionListener`

Methods

---

getSwitchableState()

```
public boolean getSwitchableState()
```

Returns the current switchable state of this `HSwitchable` .

Returns:
the current switchable state of this `HSwitchable` .

---

getUnsetActionSound()

```
public HSound getUnsetActionSound()
```

Get the sound to be played when the interaction state of the `HSwitchable` makes the following transitions:

- `ACTIONED_STATE` to `NORMAL_STATE`
- `ACTIONED_FOCUSED_STATE` to `FOCUSED_STATE`

Returns:
the sound to be played when the `HSwitchable` transitions from an actioned state.

---

setSwitchableState(boolean)

```
public void setSwitchableState(boolean state)
```

Sets the current state of the button. Note that ActionListeners are only called when an ACTION_PERFORMED event is received, or if they are called directly, e.g. via `processActionEvent`, they are not called by `setSwitchableState(boolean)` .

---

setUnsetActionSound(HSound)

```
public void setUnsetActionSound(HSound sound)
```

Associate a sound to be played when the interaction state of the `HSwitchable` makes the following transitions:

- `ACTIONED_STATE` to `NORMAL_STATE`
- `ACTIONED_FOCUSED_STATE` to `FOCUSED_STATE`

Parameters:
`sound` - a sound to be played when the `HSwitchable` transitions from an actioned state. If sound content is already set, the original content is replaced. To remove the sound specify a null `HSound` .

org.havi.ui
HText

Syntax

```
public class HText extends HStaticText implements HNavigable
```

```
java.lang.Object
  |
  +--java.awt.Component
        |
        +--HComponent
              |
              +--HVisible
                    |
                    +--HStaticText
                          |
                          +--org.havi.ui.HText
```

Direct Known Subclasses:

HTextButton

All Implemented Interfaces:

HMatteLayer, HNavigable, HNavigationInputPreferred, HNoInputPreferred, HState, java.awt.image.ImageObserver, java.awt.MenuContainer, java.io.Serializable, TestOpacity

Description

The HText is a user interface component used to display static read-only textual content (as HStaticText) which additionally enables a user to navigate to it, i.e. it can have the input focus. By default it uses the HTextLook to render itself. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
x	x-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
y	y-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
width	width of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
height	height of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds

text	The text to be used as the content for every permissible state of this component.	null	setTextContent(String, int)	getTextContent(int)
textNormal	The string to be used as the content for the NORMAL_STATE state of this component.	null	setTextContent(String, int)	getTextContent(int)
textFocus	The string to be used as the content for the focused statesof this component.	null	setTextContent(String, int)	getTextContent(int)
tlm	The text layout manager responsible for text formatting.	An HDefaultTextLayoutManager object.	setTextLayoutManager(HTextLayoutManager)	getTextLayoutManager()
font	The font for this component.	---	java.awt.Component#setFont	java.awt.Component#getFont
background	The background color for this component.	---	java.awt.Component#getBackground	java.awt.Component#setBackground
foreground	The foreground color for this component.	---	java.awt.Component#getForeground	java.awt.Component#setForeground

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
Associated matte (HMatte).	none (i.e. getMatte() returns null)	setMatte(HMatte)	getMatte()
The text layout manager responsible for text formatting.	An HDefaultTextLayoutManager object.	setTextLayoutManager(HTextLayoutManager)	getTextLayoutManager()
The background painting mode	NO_BACKGROUND_FILL	setBackgroundMode(int)	getBackgroundMode()
The default preferred size	not set (i.e. null) unless specified by width and height parameters	setDefaultSize(Dimension)	getDefaultSize()
The horizontal content alignment	HALIGN_CENTER	setHorizontalAlignment(int)	getHorizontalAlignment()
The vertical content alignment	VALIGN_CENTER	setVerticalAlignment(int)	getVerticalAlignment()

The content scaling mode	RESIZE_NONE	setResizeMode(int)	getResizeMode()
The default "look" for this class.	A platform specific HTextLook	setDefaultLook(HTextLook)	getDefaultLook()
The "look" for this object.	The HTextLook returned from HText.getDefaultLook when this object was created.	setLook(HLook)	getLook()
The gain focus sound.	null	setGainFocusSound(HSound)	getGainFocusSound()
The lose focus sound.	null	setLoseFocusSound(HSound)	getLoseFocusSound()

See Also:

HStaticText, HDefaultTextLayoutManager, HTextLayoutManager, HNavigable

Constructors

HText()

```
public HText()
```

Creates an HText object. See the class description for details of constructor parameters and default values.

HText(String)

```
public HText(java.lang.String text)
```

Creates an HText object. See the class description for details of constructor parameters and default values.

HText(String, Font, Color, Color, HTextLayoutManager)

```
public HText(java.lang.String text, java.awt.Font font, java.awt.Color foreground,
             java.awt.Color background, HTextLayoutManager tlm)
```

Creates an HText object. See the class description for details of constructor parameters and default values.

HText(String, int, int, int, int)

```
public HText(java.lang.String text, int x, int y, int width, int height)
```

Creates an HText object. See the class description for details of constructor parameters and default values.

HText(String, int, int, int, int, Font, Color, Color, HTextLayoutManager)

```
public HText(java.lang.String text, int x, int y, int width, int height,
             java.awt.Font font, java.awt.Color foreground, java.awt.Color background,
             HTextLayoutManager tlm)
```

Creates an `HText` object. See the class description for details of constructor parameters and default values.

HText(String, String)

```
public HText(java.lang.String textNormal, java.lang.String textFocus)
```

Creates an `HText` object. See the class description for details of constructor parameters and default values.

HText(String, String, Font, Color, Color, HTextLayoutManager)

```
public HText(java.lang.String textNormal, java.lang.String textFocus, java.awt.Font font,
             java.awt.Color foreground, java.awt.Color background, HTextLayoutManager tlm)
```

Creates an `HText` object. See the class description for details of constructor parameters and default values.

HText(String, String, int, int, int, int)

```
public HText(java.lang.String textNormal, java.lang.String textFocus, int x, int y,
             int width, int height)
```

Creates an `HText` object. See the class description for details of constructor parameters and default values.

HText(String, String, int, int, int, int, Font, Color, Color, HTextLayoutManager)

```
public HText(java.lang.String textNormal, java.lang.String textFocus, int x, int y,
             int width, int height, java.awt.Font font, java.awt.Color foreground,
             java.awt.Color background, HTextLayoutManager tlm)
```

Creates an `HText` object. See the class description for details of constructor parameters and default values.

Methods

getDefaultLook()

```
public static HTextLook getDefaultLook()
```

Returns the currently set default `HLook` for `HText` components.

Returns:

The `HLook` that is used by default when creating a new `HText` component.

getGainFocusSound()

```
public HSound getGainFocusSound()
```

Get the sound associated with the gain focus event.

Specified By:
`getGainFocusSound()` in interface `HNavigable`

Returns:
The sound played when the component gains focus. If no sound is associated with gaining focus, then null shall be returned.

---

getLoseFocusSound()

```
public HSound getLoseFocusSound()
```

Get the sound associated with the lost focus event.

Specified By:
`getLoseFocusSound()` in interface `HNavigable`

Returns:
The sound played when the component loses focus. If no sound is associated with losing focus, then null shall be returned.

---

getMove(int)

```
public HNavigable getMove(int keyCode)
```

Provides the `HNavigable` object that is navigated to when a particular key is pressed.

Specified By:
`getMove(int)` in interface `HNavigable`

Parameters:
`keyCode` - The key code of the pressed key.

Returns:
Returns the `HNavigable` object, or if no `HNavigable` is associated with the keyCode then returns `null`.

---

getNavigationKeys()

```
public int[] getNavigationKeys()
```

Retrieve the set of key codes which this component maps to navigation targets.

Specified By:
`getNavigationKeys()` in interface `HNavigationInputPreferred`

Returns:
an array of key codes, or `null` if no navigation targets are set on this component.

---

isSelected()

```
public boolean isSelected()
```

Indicates if this component has focus.

Specified By:
`isSelected()` in interface `HNavigable`

Returns:
`true` if the component has focus, otherwise returns `false`.

---

processHFocusEvent(HFocusEvent)

```
public void processHFocusEvent(HFocusEvent evt)
```

Process an `HFocusEvent` sent to this `HText` .

Specified By:
`processHFocusEvent(HFocusEvent)` in interface `HNavigationInputPreferred`

Parameters:
`evt` - the `HFocusEvent` to process.

---

setDefaultLook(HTextLook)

```
public static void setDefaultLook(HTextLook look)
```

Sets the default `HLook` for further `HText` Components.

Parameters:
`look` - The `HLook` that will be used by default when creating a new `HText` component. Note that this parameter may be null, in which case newly created components shall not draw themselves until a non-null look is set using the `setLook(HLook)` method.

---

setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)

```
public void setFocusTraversal(HNavigable up, HNavigable down, HNavigable left,
            HNavigable right)
```

Set the focus control for an `HNavigable` component. Note `setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)` is a convenience function for application programmers where a standard up, down, left and right focus traversal between components is required.

Note `setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)` is equivalent to multiple calls to `setMove(int, HNavigable)` , where the key codes VK_UP, VK_DOWN, VK_LEFT, VK_RIGHT are used.

Note that this API does not prevent the creation of "isolated" `HNavigable` components --- authors should endeavor to avoid confusing the user.

Specified By:
`setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)` in interface `HNavigable`

Parameters:
`up` - The `HNavigable` component to move to, when the user generates a VK_UP KeyEvent. If there is no `HNavigable` component to move "up" to, then null should be specified.

`down` - The `HNavigable` component to move to, when the user generates a VK_DOWN KeyEvent. If there is no `HNavigable` component to move "down" to, then null should be specified.

`left` - The `HNavigable` component to move to, when the user generates a VK_LEFT KeyEvent. If there is no `HNavigable` component to move "left" to, then null should be specified.

`right` - The `HNavigable` component to move to, when the user generates a VK_RIGHT KeyEvent. If there is no `HNavigable` component to move "right" to, then null should be specified.

---

setGainFocusSound(HSound)

```
public void setGainFocusSound(HSound sound)
```

Associate a sound with gaining focus, i.e. when the HNavigable receives a java.awt.event.FocusEvent event of type FOCUS_GAINED. This sound will start to be played when an object implementing this interface gains focus. It is not guaranteed to be played to completion. If the object implementing this interface loses focus before the audio completes playing, the audio will be truncated. Applications wishing to ensure the audio is always played to completion must implement special logic to slow down the focus transitions.

By default, an HNavigable object does not have any gain focus sound associated with it.

Note that the ordering of playing sounds is dependent on the order of the focus lost, gained events.

Specified By:

setGainFocusSound(HSound) in interface HNavigable

Parameters:

sound - the sound to be played, when the component gains focus. If sound content is already set, the original content is replaced. To remove the sound specify a null HSound .

---

setLoseFocusSound(HSound)

```
public void setLoseFocusSound(HSound sound)
```

Associate a sound with losing focus, i.e. when the HNavigable receives a java.awt.event.FocusEvent event of type FOCUS_LOST. This sound will start to be played when an object implementing this interface loses focus. It is not guaranteed to be played to completion. It is implementation dependent whether and when this sound will be truncated by any gain focus sound played by the next object to gain focus.

By default, an HNavigable object does not have any lose focus sound associated with it.

Note that the ordering of playing sounds is dependent on the order of the focus lost, gained events.

Specified By:

setLoseFocusSound(HSound) in interface HNavigable

Parameters:

sound - the sound to be played, when the component loses focus. If sound content is already set, the original content is replaced. To remove the sound specify a null HSound .

---

setMove(int, HNavigable)

```
public void setMove(int keyCode, HNavigable target)
```

Defines the navigation path from the current HNavigable to another HNavigable when a particular key is pressed.

Note that setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) is equivalent to multiple calls to setMove(int, HNavigable) , where the key codes VK_UP, VK_DOWN, VK_LEFT, VK_RIGHT are used.

Specified By:

setMove(int, HNavigable) in interface HNavigable

Parameters:

keyCode - The key code of the pressed key. Any numerical keycode is allowed, but the platform may not be able to generate all keycodes. Application authors should only use keys for which HRcCapabilities.isSupported() or HKeyCapabilities.isSupported() returns true.

target - The target HNavigable object that should be navigated to. If a target is to be removed from a particular navigation path, then null should be specified.

org.havi.ui
HTextButton

Syntax

```
public class HTextButton extends HText implements HActionable
```

```
java.lang.Object
  |
  +--java.awt.Component
        |
        +--HComponent
              |
              +--HVisible
                    |
                    +--HStaticText
                          |
                          +--HText
                                |
                                +--org.havi.ui.HTextButton
```

All Implemented Interfaces:

HActionable, HActionInputPreferred, HMatteLayer, HNavigable, HNavigationInputPreferred, HNoInputPreferred, HState, java.awt.image.ImageObserver, java.awt.MenuContainer, java.io.Serializable, TestOpacity

Description

The HTextButton is a user interface component representing a push-button with static read-only textual content. This component can be navigated to, i.e. it can have the input focus, and it can also be actioned as defined by the HActionable interface. By default it uses the HTextLook class to render itself. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
x	x-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
y	y-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
width	width of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds

height	height of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
text	The text to be used as the content for every permissible state of this component.	null	setTextContent(String, int)	getTextContent(int)
textNormal	The string to be used as the content for the NORMAL_STATE state of this component.	null	setTextContent(String, int)	getTextContent(int)
textFocus	The string to be used as the content for the focused statesof this component.	null	setTextContent(String, int)	getTextContent(int)
textAction	The string to be used as the content for the actioned states of this component.	null	setTextContent(String, int)	getTextContent(int)
tlm	The text layout manager responsible for text formatting.	An HDefaultTextLayoutManager object.	setTextLayoutManager(HTextLayoutManager)	getTextLayoutManager()
font	The font for this component.	---	java.awt.Component#setFont	java.awt.Component#getFont
background	The background color for this component.	---	java.awt.Component#getBackground	java.awt.Component#setBackground
foreground	The foreground color for this component.	---	java.awt.Component#getForeground	java.awt.Component#setForeground

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
Associated matte (HMatte).	none (i.e. getMatte() returns null)	setMatte(HMatte)	getMatte()
The text layout manager responsible for text formatting.	An HDefaultTextLayoutManager object.	setTextLayoutManager(HTextLayoutManager)	getTextLayoutManager()
The background painting mode	NO_BACKGROUND_FILL	setBackgroundMode(int)	getBackgroundMode()
The default preferred size	not set (i.e. null) unless specified by width and height parameters	setDefaultSize(Dimension)	getDefaultSize( )

The horizontal content alignment	HALIGN_CENTER	setHorizontalAlignment(int)	getHorizontalAlignment()
The vertical content alignment	VALIGN_CENTER	setVerticalAlignment(int)	getVerticalAlignment()
The content scaling mode	RESIZE_NONE	setResizeMode(int)	getResizeMode()
The default "look" for this class.	A platform specific HTextLook	setDefaultLook(HTextLook)	getDefaultLook()
The "look" for this object.	The HTextLook returned from HTextButton.getDefaultLook when this object was created.	setLook(HLook)	getLook()
The gain focus sound.	null	setGainFocusSound(HSound)	getGainFocusSound()
The lose focus sound.	null	setLoseFocusSound(HSound)	getLoseFocusSound()
The action sound.	null	setActionSound(HSound)	getActionSound()

See Also:

HStaticText, HText, HDefaultTextLayoutManager, HTextLayoutManager, HNavigable, HActionable

Constructors

HTextButton()

```
public HTextButton()
```

Creates an HTextButton object. See the class description for details of constructor parameters and default values.

HTextButton(String)

```
public HTextButton(java.lang.String text)
```

Creates an HTextButton object. See the class description for details of constructor parameters and default values.

HTextButton(String, Font, Color, Color, HTextLayoutManager)

```
public HTextButton(java.lang.String text, java.awt.Font font, java.awt.Color foreground,
            java.awt.Color background, HTextLayoutManager tlm)
```

Creates an HTextButton object. See the class description for details of constructor parameters and default values.

HTextButton(String, int, int, int, int)

```
public HTextButton(java.lang.String text, int x, int y, int width, int height)
```

Creates an HTextButton object. See the class description for details of constructor parameters and default values.

HTextButton(String, int, int, int, int, Font, Color, Color, HTextLayoutManager)

```
public HTextButton(java.lang.String text, int x, int y, int width, int height,
            java.awt.Font font, java.awt.Color foreground, java.awt.Color background,
            HTextLayoutManager tlm)
```

Creates an HTextButton object. See the class description for details of constructor parameters and default values.

Methods

---

addHActionListener(HActionListener)

```
public void addHActionListener(HActionListener l)
```

Adds the specified HActionListener to receive HActionEvent events sent from this HTextButton. If the listener has already been added further calls will add further references to the listener, which will then receive multiple copies of a single event.

Specified By:
addHActionListener(HActionListener) in interface HActionable

Parameters:
l - the HActionListener.

---

getActionCommand()

```
public java.lang.String getActionCommand()
```

Gets the command name for the HActionEvent event fired by this HTextButton.

Specified By:
getActionCommand() in interface HActionable

Returns:
A String representing the command name of the HActionEvent fired by this HTextButton.

See Also:
getActionCommand()

---

getActionSound()

```
public HSound getActionSound()
```

Associate a sound to be played when the interaction state of the HTextButton makes the following transitions:

- _NORMAL_STATE to _ACTIONED_STATE
- _FOCUSED_STATE to _ACTIONED_FOCUSED_STATE

Specified By:
`getActionSound()` in interface `HActionable`

Returns:
The sound played when the component is actioned.

---

getDefaultLook()

```
public static HTextLook getDefaultLook()
```

Returns the currently set default `HLook` for `HTextButton` components.

Returns:
The `HLook` that is used by default when creating a new `HTextButton`.

---

getGainFocusSound()

```
public HSound getGainFocusSound()
```

Get the sound associated with the gain focus event.

Specified By:
`getGainFocusSound()` in interface `HNavigable`

Overrides:
`getGainFocusSound()` in class `HText`

Returns:
The sound played when the component gains focus. If no sound is associated with gaining focus, then null shall be returned.

---

getLoseFocusSound()

```
public HSound getLoseFocusSound()
```

Get the sound associated with the lost focus event.

Specified By:
`getLoseFocusSound()` in interface `HNavigable`

Overrides:
`getLoseFocusSound()` in class `HText`

Returns:
The sound played when the component loses focus. If no sound is associated with losing focus, then null shall be returned.

---

getMove(int)

```
public HNavigable getMove(int keyCode)
```

Provides the `HNavigable` object that is navigated to when a particular key is pressed.

Specified By:
`getMove(int)` in interface `HNavigable`

Overrides:
`getMove(int)` in class `HText`

Parameters:
`keyCode` - The key code of the pressed key.

Returns:
Returns the HNavigable object, or if no HNavigable is associated with the keyCode then returns null.

---

getNavigationKeys()

```
public int[] getNavigationKeys()
```

Retrieve the set of key codes which this component maps to navigation targets.

Specified By:
getNavigationKeys() in interface HNavigationInputPreferred

Overrides:
getNavigationKeys() in class HText

Returns:
an array of key codes, or null if no navigation targets are set on this component.

---

isSelected()

```
public boolean isSelected()
```

Indicates if this component has focus.

Specified By:
isSelected() in interface HNavigable

Overrides:
isSelected() in class HText

Returns:
true if the component has focus, otherwise returns false.

---

processHActionEvent(HActionEvent)

```
public void processHActionEvent(HActionEvent evt)
```

Process an HActionEvent sent to this HTextButton .

Specified By:
processHActionEvent(HActionEvent) in interface HActionInputPreferred

Parameters:
evt - the HActionEvent to process.

---

processHFocusEvent(HFocusEvent)

```
public void processHFocusEvent(HFocusEvent evt)
```

Process an HFocusEvent sent to this HTextButton .

Specified By:
processHFocusEvent(HFocusEvent) in interface HNavigationInputPreferred

Overrides:
processHFocusEvent(HFocusEvent) in class HText

Parameters:
evt - the HFocusEvent to process.

removeHActionListener(HActionListener)

```
public void removeHActionListener(HActionListener l)
```

Removes the specified HActionListener so that it no longer receives HActionEvent events from this HTextButton. If the specified listener is not registered, the method has no effect. If multiple references to a single listener have been registered it should be noted that this method will only remove one reference per call.

Specified By:
removeHActionListener(HActionListener) in interface HActionable

Parameters:
l - the HActionListener.

setActionCommand(String)

```
public void setActionCommand(java.lang.String command)
```

Sets the command name for the HActionEvent event fired by this HTextButton.

Specified By:
setActionCommand(String) in interface HActionable

Parameters:
command - a String used to set the action command.

See Also:
getActionCommand()

setActionSound(HSound)

```
public void setActionSound(HSound sound)
```

Associate a sound to be played when the interaction state of the HTextButton makes the following transitions:

- _NORMAL_STATE to _ACTIONED_STATE
- _FOCUSED_STATE to _ACTIONED_FOCUSED_STATE

Specified By:
setActionSound(HSound) in interface HActionable

Parameters:
sound - the sound to be played, when the component is actioned. If sound content is already set, the original content is replaced. To remove the sound specify a null HSound.

setDefaultLook(HTextLook)

```
public static void setDefaultLook(HTextLook hlook)
```

Sets the default HLook for further HTextButton components.

Parameters:
hlook - The HLook that will be used by default when creating a new HTextButton. Note that this parameter may be null, in which case newly created components shall not draw themselves until a non-null look is set using the setLook(HLook) method.

setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)

```
public void setFocusTraversal(HNavigable up, HNavigable down, HNavigable left,
            HNavigable right)
```

Set the focus control for an HNavigable component. Note setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) is a convenience function for application programmers where a standard up, down, left and right focus traversal between components is required.

Note setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) is equivalent to multiple calls to setMove(int, HNavigable), where the key codes VK_UP, VK_DOWN, VK_LEFT, VK_RIGHT are used.

Note that this API does not prevent the creation of "isolated" HNavigable components --- authors should endeavor to avoid confusing the user.

Specified By:
setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) in interface HNavigable

Overrides:
setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) in class HText

Parameters:
up - The HNavigable component to move to, when the user generates a VK_UP KeyEvent. If there is no HNavigable component to move "up" to, then null should be specified.

down - The HNavigable component to move to, when the user generates a VK_DOWN KeyEvent. If there is no HNavigable component to move "down" to, then null should be specified.

left - The HNavigable component to move to, when the user generates a VK_LEFT KeyEvent. If there is no HNavigable component to move "left" to, then null should be specified.

right - The HNavigable component to move to, when the user generates a VK_RIGHT KeyEvent. If there is no HNavigable component to move "right" to, then null should be specified.

---

setGainFocusSound(HSound)

```
public void setGainFocusSound(HSound sound)
```

Associate a sound with gaining focus, i.e. when the HNavigable receives a java.awt.event.FocusEvent event of type FOCUS_GAINED. This sound will start to be played when an object implementing this interface gains focus. It is not guaranteed to be played to completion. If the object implementing this interface loses focus before the audio completes playing, the audio will be truncated. Applications wishing to ensure the audio is always played to completion must implement special logic to slow down the focus transitions.

By default, an HNavigable object does not have any gain focus sound associated with it.

Note that the ordering of playing sounds is dependent on the order of the focus lost, gained events.

Specified By:
setGainFocusSound(HSound) in interface HNavigable

Overrides:
setGainFocusSound(HSound) in class HText

Parameters:
sound - the sound to be played, when the component gains focus. If sound content is already set, the original content is replaced. To remove the sound specify a null HSound.

---

setLoseFocusSound(HSound)

```
public void setLoseFocusSound(HSound sound)
```

Associate a sound with losing focus, i.e. when the HNavigable receives a java.awt.event.FocusEvent event of type FOCUS_LOST. This sound will start to be played when an object implementing this interface loses focus. It is not guaranteed to be played to completion. It is implementation dependent whether and when this sound will be truncated by any gain focus sound played by the next object to gain focus.

By default, an HNavigable object does not have any lose focus sound associated with it.

Note that the ordering of playing sounds is dependent on the order of the focus lost, gained events.

Specified By:
setLoseFocusSound(HSound) in interface HNavigable

Overrides:
setLoseFocusSound(HSound) in class HText

Parameters:
sound - the sound to be played, when the component loses focus. If sound content is already set, the original content is replaced. To remove the sound specify a null HSound .

---

setMove(int, HNavigable)

```
public void setMove(int keyCode, HNavigable target)
```

Defines the navigation path from the current HNavigable to another HNavigable when a particular key is pressed.

Note that setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) is equivalent to multiple calls to setMove(int, HNavigable) , where the key codes VK_UP, VK_DOWN, VK_LEFT, VK_RIGHT are used.

Specified By:
setMove(int, HNavigable) in interface HNavigable

Overrides:
setMove(int, HNavigable) in class HText

Parameters:
keyCode - The key code of the pressed key. Any numerical keycode is allowed, but the platform may not be able to generate all keycodes. Application authors should only use keys for which HRcCapabilities.isSupported() or HKeyCapabilities.isSupported() returns true.

target - The target HNavigable object that should be navigated to. If a target is to be removed from a particular navigation path, then null should be specified.

org.havi.ui
HTextLayoutManager

Syntax
```
public interface HTextLayoutManager
```

All Known Implementing Classes:
DVBTextLayoutManager, HDefaultTextLayoutManager


Description
The HTextLayoutManager class manages the layout and rendering on-screen of a "marked-up" string.

Possible implementations of HTextLayoutManager could enable the following behaviors:


- Interpreting basic markup, such as changing color or font, and forced line breaks.
- Providing text alignment, as in the HDefaultTextLayoutManager .
- Providing text wrapping policies, such as word-wrap.
- Providing text orientations, such as right-to-left, or top-to-bottom rendering.
- Providing specialized support for missing characters, or fonts.
- Providing specific language support.
- Additional text styles, such as drop capitals or "shadow" characters.

HTextLayoutManager supports passing a java.awt.Insets object as argument to the render(String, Graphics, HVisible, Insets) method to restrict the area in which text may be rendered. If the insets are zero, the text is rendered into the area defined by the bounds of the HVisible passed to the render(String, Graphics, HVisible, Insets) method.

The clipping rectangle of the Graphics object passed to the render(String, Graphics, HVisible, Insets) method is *not* used to determine the area in which text is rendered, as its size and position is not guaranteed to cover the entire HVisible - for example, when partial repainting of an HVisible is performed. The diagram below shows a possible scenario:

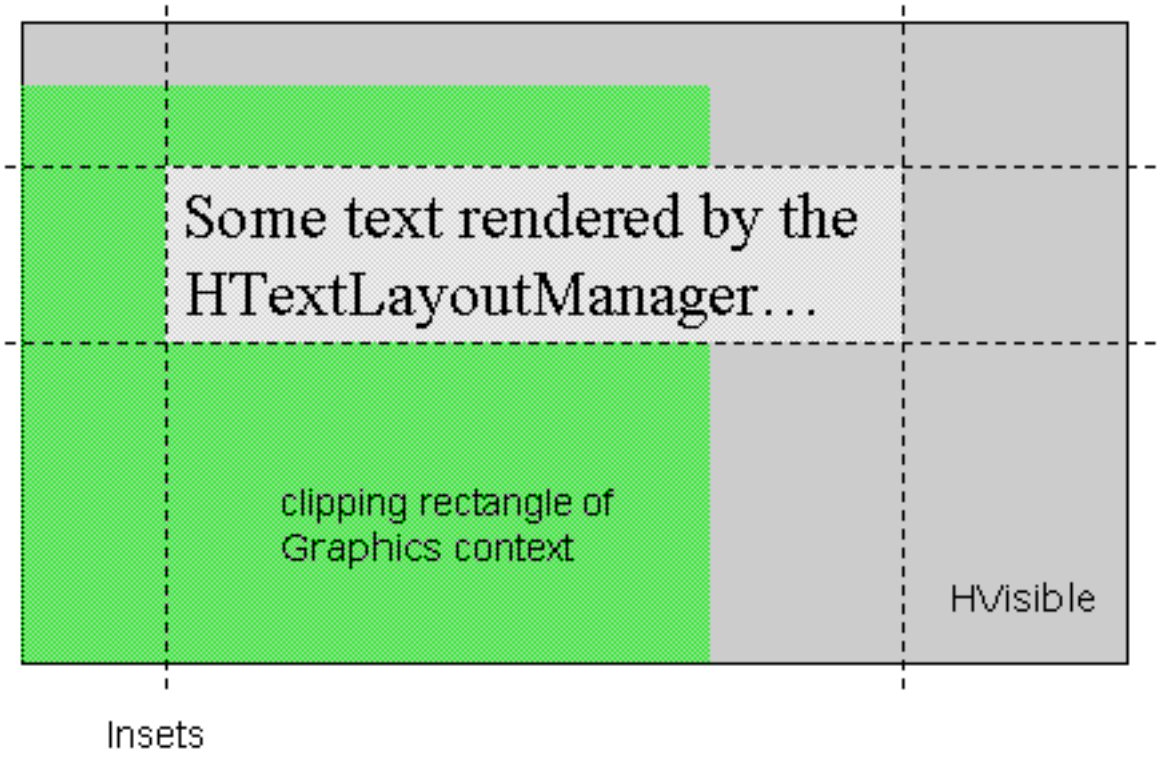

The gray area shows the bounds of the `HVisible`. The green area shows the clipping rectangle of the `Graphics` context, and the dashed lines show the insets passed to the `render(String, Graphics, HVisible, Insets)` method. The text is laid out into the rectangle defined by the `HVisible` bounds after subtracting the insets. However, only the part of the text covered by the clipping rectangle is actually drawn to the screen, as shown in the diagram below:

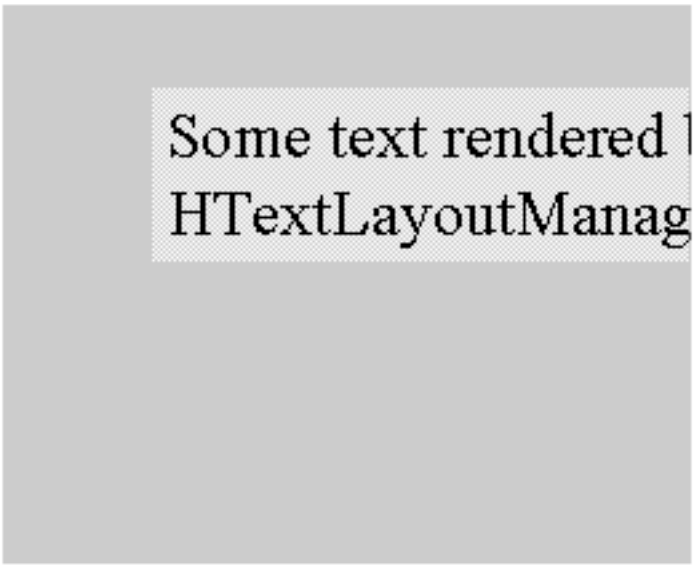

The behavior of the render method when the text to be rendered does not fit in the current area specified is implementation-specific.

See Also:
`HDefaultTextLayoutManager`

Methods

---

render(String, Graphics, HVisible, Insets)

```
public void render(java.lang.String markedUpString, java.awt.Graphics g, HVisible v,
            java.awt.Insets insets)
```

Render the string. The `HTextLayoutManager` should use the passed `HVisible` object to determine any additional information required to render the string, e.g. `Font`, `Color` etc.

The text should be laid out in the layout area, which is defined by the bounds of the specified `HVisible`, after subtracting the insets. If the insets are `null` the full bounding rectangle is used as the area to render text into.

The `HTextLayoutManager` should not modify the clipping rectangle of the `Graphics` object.

Parameters:

`markedUpString` - the string to render.

`g` - the graphics context, including a clipping rectangle which encapsulates the area within which rendering is permitted. If a valid insets value is passed to this method then text must only be rendered into the bounds of the widget after the insets are subtracted. If the insets value is `null` then text is rendered into the entire bounding area of the `HVisible`. It is implementation specific whether or not the renderer takes into account the intersection of the clipping rectangle in each case for optimization purposes.

`v` - the `HVisible` into which to render.

`insets` - the insets to determine the area in which to layout the text, or `null`.

org.havi.ui
HTextLook

Syntax
```
public class HTextLook implements HLook

java.lang.Object
  |
  +--org.havi.ui.HTextLook
```

All Implemented Interfaces:
java.lang.Cloneable, HLook

Description
The HTextLook class is used by any HVisible component to display static text content. This look will be provided by the platform and the exact way in which it is rendered will be platform dependant.

The HTextLook class draws the content set on an HVisible. It uses the getTextContent(int) getTextContent(int

In addition to the basic class behavior defined by the HLook interface the HTextLook associated with a given HVisible should use:

- HVisible.getTextLayoutManager() to determine the HTextLayoutManager to perform the rendering. If the returned object is null, then the text should not be rendered.

Implementations of HTextLook need not use the alignment mode methods on HVisible, since all rendering of content is deferred to the associated HTextLayoutManager which will use these methods accordingly.

This is the default look that is used by HListElement, HStaticText and their subclasses. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

See Also:
HStaticText, HDefaultTextLayoutManager

Constructors

HTextLook()

```
public HTextLook()
```

Creates a HTextLook object. See the class description for details of constructor parameters and default values.

Methods

getInsets(HVisible)

```
public java.awt.Insets getInsets(HVisible visible)
```

Determines the insets of this HLook , which indicate the size of the border. This area is reserved for the HLook to use for drawing borders around the associated HVisible .

Specified By:
getInsets(HVisible) in interface HLook

Parameters:
hvisible - HVisible to which this HLook is attached.

Returns:
the insets of this HLook .

getMaximumSize(HVisible)

```
public java.awt.Dimension getMaximumSize(HVisible hvisible)
```

Gets the maximum size of the HVisible component when drawn with this HLook .

This size may be determined in several ways depending on the information available to the look. These steps are performed in order and the first available result is returned. For the purposes of this algorithm HLook classes that do not use content (e.g. HRangeLook) are treated as if no content was present.

The extra space required for border decoration can be determined from the getInsets(HVisible) method.

1. If the HLook supports the scaling of its content (e.g. an HGraphicLook) then the return value is the current size of the HVisible (as returned by HVisible#getSize).
2. If the HLook does not support scaling of content or no scaling is requested, and content is set then the return value is the size of the largest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
3. If there is no content set then a maximum size of [Short.MAX_VALUE, Short.MAX_VALUE] is returned as a Dimension.

Specified By:
getMaximumSize(HVisible) in interface HLook

Parameters:
hvisible - HVisible to which this HLook is attached.

Returns:
A dimension object indicating this HLook maximum size.

See Also:
getMaximumSize()

---

getMinimumSize(HVisible)

```
public java.awt.Dimension getMinimumSize(HVisible hvisible)
```

Gets the minimum size of the HVisible component when drawn with this HLook .

This size may be determined in several ways depending on the information available to the look. These steps are performed in order and the first available result is returned. For the purposes of this algorithm HLook classes that do not use content (e.g. HRangeLook) are treated as if no content was present.

The extra space required for border decoration can be determined from the getInsets(HVisible) method.

1. If the HLook supports the scaling of its content (e.g. an HGraphicLook) and content is set then the return value is the size of the smallest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
2. If the HLook does not support scaling of content or no scaling is requested, *and* content is set then the return value is the size of the largest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
3. If no content is available but a default preferred size has been set using setDefaultSize(Dimension) has been called to set then the return value is this value (as obtained with getDefaultSize()) plus any additional dimensions that the HLook requires for border decoration etc.
4. If there is no content or default size set then the return value is an implementation-specific minimum size plus any additional dimensions that the HLook requires for border decoration etc.

Specified By:
getMinimumSize(HVisible) in interface HLook

Parameters:
hvisible - HVisible to which this HLook is attached.

Returns:
A dimension object indicating this HLook minimum size.

See Also:
getMinimumSize()

---

getPreferredSize(HVisible)

```
public java.awt.Dimension getPreferredSize(HVisible hvisible)
```

Gets the preferred size of the HVisible component when drawn with this HLook .

This size may be determined in several ways depending on the information available to the look. These steps are performed in order and the first available result is returned. For the purposes of this algorithm HLook classes that do not use content (e.g. HRangeLook) are treated as if no content was present.

The extra space required for border decoration can be determined from the getInsets(HVisible) method.

1. If a default preferred size has been set for this HVisible (using setDefaultSize(Dimension)) then the return value is this size (obtained with getDefaultSize()) plus any additional dimensions that the HLook requires for border decoration etc.
2. If this HLook does not support scaling of content or no scaling is requested, and content is present then the return value is the size of the largest piece of content plus any additional dimensions that the HLook requires for border decoration etc.
3. If this HLook supports the scaling of its content (e.g. an HGraphicLook) and content is set then the

return value is the current size of the HVisible as returned by getSize).

4. If there is no content and no default size set then the return value is the current size of the HVisible as returned by getSize).

Specified By:
getPreferredSize(HVisible) in interface HLook

Parameters:
hvisible - HVisible to which this HLook is attached.

Returns:
A dimension object indicating the preferred size of the HVisible when drawn with this HLook .

See Also:
getPreferredSize(), setDefaultSize(Dimension)

---

isOpaque(HVisible)

```
public boolean isOpaque(HVisible visible)
```

Returns true if the entire painted area of the HVisible when using this look is fully opaque, i.e. the showLook(Graphics, HVisible, int) method guarantees that all pixels are painted in an opaque Color.

The default value is implementation specific and depends on the background painting mode of the given HVisible . The consequences of an invalid overridden value are implementation specific.

Specified By:
isOpaque(HVisible) in interface HLook

Parameters:
visible - the visible to test

Returns:
true if all the pixels with the java.awt.Component#getBounds method of an HVisible using this look are fully opaque, i.e. the showLook(Graphics, HVisible, int) method guarantees that all pixels are painted in an opaque Color, otherwise false.

---

showLook(Graphics, HVisible, int)

```
public void showLook(java.awt.Graphics g, HVisible visible, int state)
```

The showLook(Graphics, HVisible, int) method is responsible for repainting the entire HVisible component, (including any content set on the component, and the component background), subject to the clipRect of the Graphics object passed to it.

The showLook(Graphics, HVisible, int) method should not modify the clipRect of the Graphics object that is passed to it.

For looks which draw content (e.g. HTextLook , HGraphicLook and HAnimateLook), if no content is associated with the component, the showLook(Graphics, HVisible, int) method paints the component with its current background Color according to the setBackgroundMode(int) method of HVisible and draws any (implementation-specific) borders. Note that by default the background mode is set so as to **not** paint a background. Furthermore on platforms which support transparent colors the background Color may be partially or completely transparent.

Any resources **explicitly** associated with an HLook should be loaded by the HLook during its creation, etc., or via its setXXX() methods. Note that the "standard" looks don't load content by default.

This method is called from the `paint(Graphics)` method of `HVisible` and must never be called from elsewhere. Components wishing to redraw themselves should call their repaint method in the usual way.

Specified By:
`showLook(Graphics, HVisible, int)` in interface `HLook`

Parameters:
`g` - the graphics context.

`visible` - the visible.

`state` - the state parameter indicates the state of the visible, allowing the look to render the appropriate content for that state. Note that some components (e.g. HStaticRange, HRange, HRangeValue) do not use state-based content).

---

widgetChanged(HVisible, HChangeData[])

```
public void widgetChanged(HVisible visible, HChangeData[] changes)
```

Called by the `HVisible` whenever its content, state, or any other data changes. See the class description of `HVisible` for more information about the `changes` parameter.

The implementation of this method should work out which graphical areas of the `HVisible` have changed and make any relevant calls to trigger the repainting of those areas.

A minimum implementation of this method could simply call

```
visible.repaint()
```

Specified By:
`widgetChanged(HVisible, HChangeData[])` in interface `HLook`

Parameters:
`visible` - the `HVisible` which has changed

`changes` - an array containing hint data and associated hint objects. If this argument is `null` a full repaint will be triggered.

org.havi.ui
HTextValue

Syntax
```
public interface HTextValue extends HNavigable, HKeyboardInputPreferred
```

All Superinterfaces:
HKeyboardInputPreferred, HNavigable, HNavigationInputPreferred

All Known Implementing Classes:
HSinglelineEntry

Description
This interface is implemented by all HAVi UI components which have have editable text content (e.g. a text entry control).

Event Behavior

Subclasses of HComponent which implement HTextValue must respond to HFocusEvent, HKeyEvent and HTextEvent events.

Applications should assume that classes which implement HTextValue can generate events of the types HFocusEvent and HTextEvent in response to other types of input event.

An application may add one or more HTextListener listeners to the component. The textChanged(HTextEvent) method of the HTextListener is invoked whenever the text in the HTextValue is changed, and the caretMoved(HTextEvent) method of the HTextListener is invoked whenever the text caret position is altered.


HAVi text events are discussed in detail in the HKeyboardInputPreferred interface description.

Interaction States

The following interaction states are valid for this HTextValue component:

- NORMAL_STATE
- FOCUSED_STATE
- DISABLED_STATE
- DISABLED_FOCUSED_STATE

The state machine diagram below shows the valid state transitions for an HTextValue component.

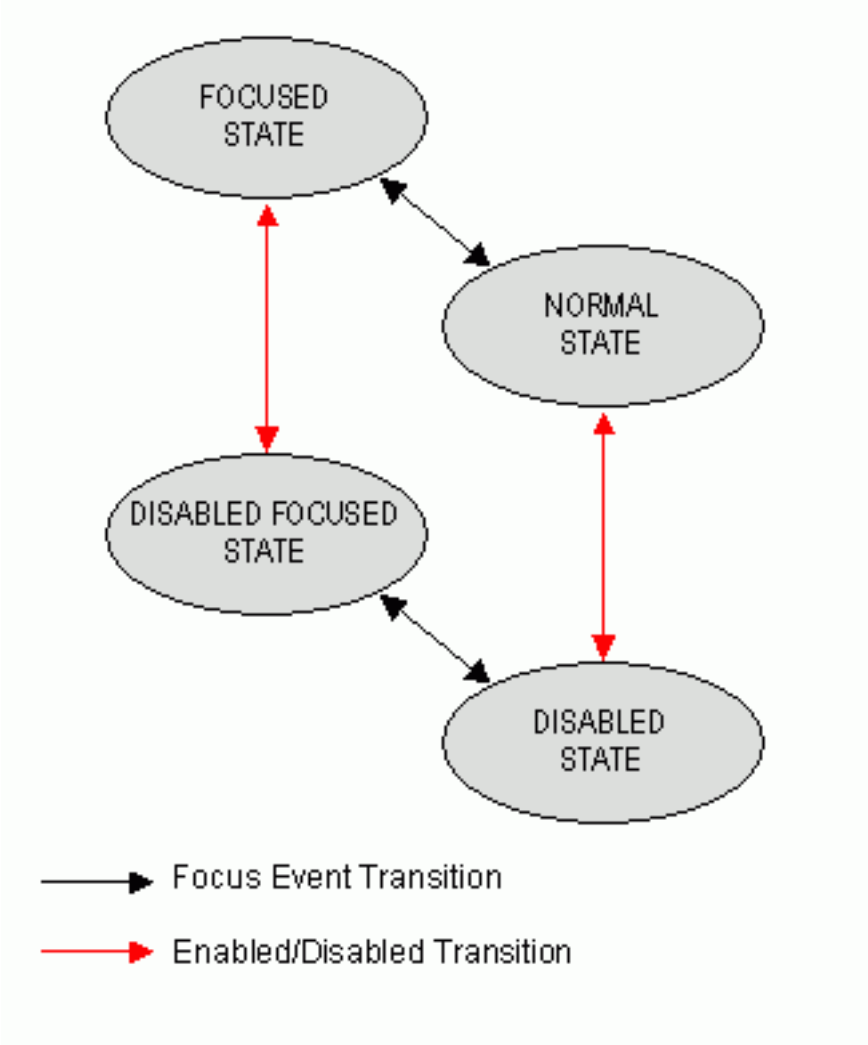

Platform Classes

The following HAVi platform classes implement or inherit the `HTextValue` interface. These classes shall all generate both `HFocusEvent` and `HTextEvent` events in addition to any other events specified in the respective class descriptions.

- `HSinglelineEntry`
- `HMultilineEntry`

See Also:

`HNavigable`, `HKeyboardInputPreferred`, `HTextEvent`, `HTextListener`

org.havi.ui
HToggleButton

Syntax

```
public class HToggleButton extends HGraphicButton implements HSwitchable
```

```
java.lang.Object
  |
  +--java.awt.Component
        |
        +--HComponent
              |
              +--HVisible
                    |
                    +--HStaticIcon
                          |
                          +--HIcon
                                |
                                +--HGraphicButton
                                      |
                                      +--org.havi.ui.HToggleButton
```

All Implemented Interfaces:

HActionable, HActionInputPreferred, HMatteLayer, HNavigable, HNavigationInputPreferred, HNoInputPreferred, HState, HSwitchable, java.awt.image.ImageObserver, java.awt.MenuContainer, java.io.Serializable, TestOpacity

Description

The HToggleButton is a user interface component representing a "check box", or with the support of the HToggleGroup class, "radio buttons". It displays static read-only graphical content. This component can be navigated to, i.e. it can have the input focus, and it can be actioned as defined by the HSwitchable interface. This means that the interaction state persists after HActionEvent event processing is complete.

The current switchable state can be manipulated using setSwitchableState(boolean) and getSwitchableState()

By default it uses the HGraphicLook class to render itself. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
x	x-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
y	y-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
width	width of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds

height	height of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
image	The image to be used as the content for every state of this component.	null	setGraphicContent(Image, int)	getGraphicContent(int)
imageNormal	The image to be used as the content for the NORMAL_STATE state of this component.	null	setGraphicContent(Image, int)	getGraphicContent(int)
imageFocus	The image to be used as the content for the focused states of this component.	null	setGraphicContent(Image, int)	getGraphicContent(int)
imageAction	The image to be used as the content for the actioned states of this component.	null	setGraphicContent(Image, int)	getGraphicContent(int)
imageNormal-Actioned	The image to be used as the content for the actioned without focus states of this component.	null	setGraphicContent(Image, int)	getGraphicContent(int)
state	The switchable state of this HToggleButton .	false	setSwitchableState(boolean)	getSwitchableState()
group	The HToggleGroup with which to associate this HToggleButton .	null	setToggleGroup(HToggleGroup)	getToggleGroup()

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
Associated matte (HMatte).	none (i.e. getMatte() returns null)	setMatte(HMatte)	getMatte()
The text layout manager responsible for text formatting.	An HDefaultTextLayoutManager object.	setTextLayout-Manager(HTextLayoutManager)	getTextLayoutManager()
The background painting mode	NO_BACKGROUND_FILL	setBackgroundMode(int)	getBackgroundMode()
The default preferred size	not set (i.e. null) unless specified by width and height parameters	setDefaultSize(Dimension)	getDefaultSize()
The horizontal content alignment	HALIGN_CENTER	setHorizontalAlignment(int)	getHorizontalAlignment()
The vertical content alignment	VALIGN_CENTER	setVerticalAlignment(int)	getVerticalAlignment()

The content scaling mode	RESIZE_NONE	setResizeMode(int)	getResizeMode()
The default "look" for this class.	A platform specific HGraphicLook	setDefaultLook(HGraphicLook)	getDefaultLook()
The "look" for this object.	The HGraphicLook returned from HToggleButton.getDefaultLook when this object was created.	setLook(HLook)	getLook()
The gain focus sound.	null	setGainFocusSound(HSound)	getGainFocusSound()
The lose focus sound.	null	setLoseFocusSound(HSound)	getLoseFocusSound()
The action sound.	null	setActionSound(HSound)	getActionSound()
The unset action sound.	null	setUnsetActionSound(HSound)	getUnsetActionSound()

See Also:

HStaticIcon, HIcon, HNavigable, HActionable, HSwitchable

Constructors

HToggleButton()

```
public HToggleButton()
```

Creates an HToggleButton object. See the class description for details of constructor parameters and default values.

HToggleButton(Image)

```
public HToggleButton(java.awt.Image image)
```

Creates an HToggleButton object. See the class description for details of constructor parameters and default values.

HToggleButton(Image, boolean, HToggleGroup)

```
public HToggleButton(java.awt.Image image, boolean state, HToggleGroup group)
```

Creates an HToggleButton object. See the class description for details of constructor parameters and default values.

HToggleButton(Image, Image, Image, Image, boolean)

```
public HToggleButton(java.awt.Image imageNormal, java.awt.Image imageFocused,
            java.awt.Image imageActioned, java.awt.Image imageNormalActioned,
            boolean state)
```

Creates an HToggleButton object. See the class description for details of constructor parameters and default values.

HToggleButton(Image, Image, Image, Image, boolean, HToggleGroup)

```
public HToggleButton(java.awt.Image imageNormal, java.awt.Image imageFocused,
            java.awt.Image imageActioned, java.awt.Image imageNormalActioned,
            boolean state, HToggleGroup group)
```

Creates an HToggleButton object. See the class description for details of constructor parameters and default values.

HToggleButton(Image, Image, Image, Image, int, int, int, int, boolean)

```
public HToggleButton(java.awt.Image imageNormal, java.awt.Image imageFocused,
            java.awt.Image imageActioned, java.awt.Image imageNormalActioned, int x,
            int y, int width, int height, boolean state)
```

Creates an HToggleButton object. See the class description for details of constructor parameters and default values.

HToggleButton(Image, Image, Image, Image, int, int, int, int, boolean, HToggleGroup)

```
public HToggleButton(java.awt.Image imageNormal, java.awt.Image imageFocused,
            java.awt.Image imageActioned, java.awt.Image imageNormalActioned, int x,
            int y, int width, int height, boolean state, HToggleGroup group)
```

Creates an HToggleButton object. See the class description for details of constructor parameters and default values.

HToggleButton(Image, int, int, int, int)

```
public HToggleButton(java.awt.Image image, int x, int y, int width, int height)
```

Creates an HToggleButton object. See the class description for details of constructor parameters and default values.

HToggleButton(Image, int, int, int, int, boolean)

```
public HToggleButton(java.awt.Image image, int x, int y, int width, int height,
            boolean state)
```

Creates an HToggleButton object. See the class description for details of constructor parameters and default values.

HToggleButton(Image, int, int, int, int, boolean, HToggleGroup)

```
public HToggleButton(java.awt.Image image, int x, int y, int width, int height,
            boolean state, HToggleGroup group)
```

Creates an HToggleButton object. See the class description for details of constructor parameters and default values.

Methods

---

addHActionListener(HActionListener)

```
public void addHActionListener(HActionListener l)
```

Adds the specified `HActionListener` to receive `HActionEvent` events sent from this `HToggleButton`. If the listener has already been added further calls will add further references to the listener, which will then receive multiple copies of a single event.

Specified By:
`addHActionListener(HActionListener)` in interface `HActionable`

Overrides:
`addHActionListener(HActionListener)` in class `HGraphicButton`

Parameters:
`l` - the HActionListener.

---

getActionCommand()

```
public java.lang.String getActionCommand()
```

Gets the command name for the `HActionEvent` event fired by this `HToggleButton`.

Specified By:
`getActionCommand()` in interface `HActionable`

Overrides:
`getActionCommand()` in class `HGraphicButton`

Returns:
A `String` representing the command name of the `HActionEvent` fired by this `HToggleButton`.

See Also:
`getActionCommand()`

---

getActionSound()

```
public HSound getActionSound()
```

Associate a sound to be played when the interaction state of the `HToggleButton` makes the following transitions:

- _NORMAL_STATE to _ACTIONED_STATE
- _FOCUSED_STATE to _ACTIONED_FOCUSED_STATE

Specified By:
`getActionSound()` in interface `HActionable`

Overrides:
`getActionSound()` in class `HGraphicButton`

Returns:
The sound played when the component is actioned.

---

getDefaultLook()

```
public static HGraphicLook getDefaultLook()
```

Returns the currently set default `HLook` for `HToggleButton` components.

Returns:
The HLook that is used by default when creating a new HToggleButton component.

---

getGainFocusSound()

```
public HSound getGainFocusSound()
```

Get the sound associated with the gain focus event.

Specified By:
getGainFocusSound() in interface HNavigable

Overrides:
getGainFocusSound() in class HGraphicButton

Returns:
The sound played when the component gains focus. If no sound is associated with gaining focus, then null shall be returned.

---

getLoseFocusSound()

```
public HSound getLoseFocusSound()
```

Get the sound associated with the lost focus event.

Specified By:
getLoseFocusSound() in interface HNavigable

Overrides:
getLoseFocusSound() in class HGraphicButton

Returns:
The sound played when the component loses focus. If no sound is associated with losing focus, then null shall be returned.

---

getMove(int)

```
public HNavigable getMove(int keyCode)
```

Provides the HNavigable object that is navigated to when a particular key is pressed.

Specified By:
getMove(int) in interface HNavigable

Overrides:
getMove(int) in class HGraphicButton

Parameters:
keyCode - The key code of the pressed key.

Returns:
Returns the HNavigable object, or if no HNavigable is associated with the keyCode then returns null.

---

getNavigationKeys()

```
public int[] getNavigationKeys()
```

Retrieve the set of key codes which this component maps to navigation targets.

Specified By:
getNavigationKeys() in interface HNavigationInputPreferred

Overrides:

getNavigationKeys() in class HGraphicButton

Returns:
an array of key codes, or null if no navigation targets are set on this component.

---

getSwitchableState()

```
public boolean getSwitchableState()
```

Returns the current switchable state of this HSwitchable .

Specified By:
getSwitchableState() in interface HSwitchable

Returns:
the current switchable state of this HSwitchable .

---

getToggleGroup()

```
public HToggleGroup getToggleGroup()
```

Gets the HToggleGroup the HToggleButton is associated with.

Returns:
The HToggleGroup the HToggleButton is associated with, or null if the HToggleButton is not associated with an HToggleGroup .

---

getUnsetActionSound()

```
public HSound getUnsetActionSound()
```

Get the sound to be played when the interaction state of the HSwitchable makes the following transitions:

- _ACTIONED_STATE to _NORMAL_STATE
- _ACTIONED_FOCUSED_STATE to _FOCUSED_STATE

Specified By:
getUnsetActionSound() in interface HSwitchable

Returns:
the sound to be played when the HSwitchable transitions from an actioned state.

---

isSelected()

```
public boolean isSelected()
```

Indicates if this component has focus.

Specified By:
isSelected() in interface HNavigable

Overrides:
isSelected() in class HGraphicButton

Returns:
true if the component has focus, otherwise returns false.

---

processHActionEvent(HActionEvent)

```
public void processHActionEvent(HActionEvent evt)
```

Process an HActionEvent sent to this HToggleButton .

Specified By:
processHActionEvent(HActionEvent) in interface HActionInputPreferred

Overrides:
processHActionEvent(HActionEvent) in class HGraphicButton

Parameters:
evt - the HActionEvent to process.

---

processHFocusEvent(HFocusEvent)

```
public void processHFocusEvent(HFocusEvent evt)
```

Process an HFocusEvent sent to this HToggleButton .

Specified By:
processHFocusEvent(HFocusEvent) in interface HNavigationInputPreferred

Overrides:
processHFocusEvent(HFocusEvent) in class HGraphicButton

Parameters:
evt - the HFocusEvent to process.

---

removeHActionListener(HActionListener)

```
public void removeHActionListener(HActionListener l)
```

Removes the specified HActionListener so that it no longer receives HActionEvent events from this HToggleButton . If the specified listener is not registered, the method has no effect. If multiple references to a single listener have been registered it should be noted that this method will only remove one reference per call.

Specified By:
removeHActionListener(HActionListener) in interface HActionable

Overrides:
removeHActionListener(HActionListener) in class HGraphicButton

Parameters:
l - the HActionListener.

---

removeToggleGroup()

```
public void removeToggleGroup()
```

Removes the button from the toggle group that it has been added to. This method does nothing if the button had not been previously added to an HToggleGroup .

---

setActionCommand(String)

```
public void setActionCommand(java.lang.String command)
```

Sets the command name for the HActionEvent event fired by this HToggleButton .

Specified By:
setActionCommand(String) in interface HActionable

Overrides:
setActionCommand(String) in class HGraphicButton

Parameters:
command - a String used to set the action command.

See Also:
getActionCommand()

---

setActionSound(HSound)

```
public void setActionSound(HSound sound)
```

Associate a sound to be played when the interaction state of the HToggleButton makes the following transitions:

- _NORMAL_STATE to _ACTIONED_STATE
- _FOCUSED_STATE to _ACTIONED_FOCUSED_STATE

Specified By:
setActionSound(HSound) in interface HActionable

Overrides:
setActionSound(HSound) in class HGraphicButton

Parameters:
sound - the sound to be played, when the component is actioned. If sound content is already set, the original content is replaced. To remove the sound specify a null HSound .

---

setDefaultLook(HGraphicLook)

```
public static void setDefaultLook(HGraphicLook hlook)
```

Sets the default HLook for further HToggleButton components.

Parameters:
hlook - The HLook that will be used by default when creating a new HToggleButton component. Note that this parameter may be null, in which case newly created components shall not draw themselves until a non-null look is set using the setLook(HLook) method.

---

setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)

```
public void setFocusTraversal(HNavigable up, HNavigable down, HNavigable left,
            HNavigable right)
```

Set the focus control for an HNavigable component. Note setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) is a convenience function for application programmers where a standard up, down, left and right focus traversal between components is required.

Note setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) is equivalent to multiple calls to setMove(int, HNavigable) , where the key codes VK_UP, VK_DOWN, VK_LEFT, VK_RIGHT are used.

Note that this API does not prevent the creation of "isolated" HNavigable components --- authors should endeavor to avoid confusing the user.

Specified By:
setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) in interface HNavigable

Overrides:
setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) in class HGraphicButton

Parameters:
up - The HNavigable component to move to, when the user generates a VK_UP KeyEvent. If there is no HNavigable component to move "up" to, then null should be specified.

down - The HNavigable component to move to, when the user generates a VK_DOWN KeyEvent. If there is no HNavigable component to move "down" to, then null should be specified.

left - The HNavigable component to move to, when the user generates a VK_LEFT KeyEvent. If there is no HNavigable component to move "left" to, then null should be specified.

right - The HNavigable component to move to, when the user generates a VK_RIGHT KeyEvent. If there is no HNavigable component to move "right" to, then null should be specified.

---

setGainFocusSound(HSound)

```
public void setGainFocusSound(HSound sound)
```

Associate a sound with gaining focus, i.e. when the HNavigable receives a java.awt.event.FocusEvent event of type FOCUS_GAINED. This sound will start to be played when an object implementing this interface gains focus. It is not guaranteed to be played to completion. If the object implementing this interface loses focus before the audio completes playing, the audio will be truncated. Applications wishing to ensure the audio is always played to completion must implement special logic to slow down the focus transitions.

By default, an HNavigable object does not have any gain focus sound associated with it.

Note that the ordering of playing sounds is dependent on the order of the focus lost, gained events.

Specified By:
setGainFocusSound(HSound) in interface HNavigable

Overrides:
setGainFocusSound(HSound) in class HGraphicButton

Parameters:
sound - the sound to be played, when the component gains focus. If sound content is already set, the original content is replaced. To remove the sound specify a null HSound .

---

setLoseFocusSound(HSound)

```
public void setLoseFocusSound(HSound sound)
```

Associate a sound with losing focus, i.e. when the HNavigable receives a java.awt.event.FocusEvent event of type FOCUS_LOST. This sound will start to be played when an object implementing this interface loses focus. It is not guaranteed to be played to completion. It is implementation dependent whether and when this sound will be truncated by any gain focus sound played by the next object to gain focus.

By default, an HNavigable object does not have any lose focus sound associated with it.

Note that the ordering of playing sounds is dependent on the order of the focus lost, gained events.

Specified By:
setLoseFocusSound(HSound) in interface HNavigable

Overrides:
setLoseFocusSound(HSound) in class HGraphicButton

Parameters:
sound - the sound to be played, when the component loses focus. If sound content is already set, the original content is replaced. To remove the sound specify a null HSound .

---

setMove(int, HNavigable)

```
public void setMove(int keyCode, HNavigable target)
```

Defines the navigation path from the current HNavigable to another HNavigable when a particular key is pressed.

Note that setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) is equivalent to multiple calls to setMove(int, HNavigable), where the key codes VK_UP, VK_DOWN, VK_LEFT, VK_RIGHT are used.

Specified By:
setMove(int, HNavigable) in interface HNavigable

Overrides:
setMove(int, HNavigable) in class HGraphicButton

Parameters:
keyCode - The key code of the pressed key. Any numerical keycode is allowed, but the platform may not be able to generate all keycodes. Application authors should only use keys for which HRcCapabilities.isSupported() or HKeyCapabilities.isSupported() returns true.

target - The target HNavigable object that should be navigated to. If a target is to be removed from a particular navigation path, then null should be specified.

---

setSwitchableState(boolean)

```
public void setSwitchableState(boolean state)
```

Sets the current state of the button. Note that ActionListeners are only called when an ACTION_PERFORMED event is received, or if they are called directly, e.g. via processActionEvent, they are not called by setSwitchableState(boolean).

Specified By:
setSwitchableState(boolean) in interface HSwitchable

---

setToggleGroup(HToggleGroup)

```
public void setToggleGroup(HToggleGroup group)
```

Associates the HToggleButton with an HToggleGroup. If this HToggleButton is already in a different HToggleGroup, it is first taken out of that group.

Parameters:
group - The HToggleGroup the HToggleButton is to be associated with.

---

setUnsetActionSound(HSound)

```
public void setUnsetActionSound(HSound sound)
```

Associate a sound to be played when the interaction state of the HSwitchable makes the following transitions:

- _ACTIONED_STATE to _NORMAL_STATE
- _ACTIONED_FOCUSED_STATE to _FOCUSED_STATE

Specified By:
setUnsetActionSound(HSound) in interface HSwitchable

Parameters:
sound - a sound to be played when the HSwitchable transitions from an actioned state. If sound content is already set, the original content is replaced. To remove the sound specify a null HSound.

org.havi.ui
HToggleGroup

Syntax
```
public class HToggleGroup

java.lang.Object
  |
  +--org.havi.ui.HToggleGroup
```

Description
HToggleButton within the same HToggleGroup will behave so that a maximum of one HToggleButton has switchable state true, as returned by getSwitchableState() , so as to achieve a "radio button" effect. When an HToggleButton is acted upon to change its switchable state to true, then if any other HToggleButton within the HToggleGroup currently has switchable state true, it will have its switchable state set to false. Similarly, if an HToggleButton is added which has switchable state true, then any current HToggleButton within the HToggleGroup with switchable state true, shall have its switchable state modified to false.

If the forced selection mode for the HToggleGroup is set via a call to setForcedSelection(true) then there will always be one HToggleButton selected (i.e. with switchable state true), and if necessary the HToggleGroup will automatically force a selection to ensure this. If forced selection mode is not set it is valid for there to be no selection, i.e. all HToggleButton may have switchable state false. By default forced selection mode is not set.

Note that when an HToggleButton has switchable state true this implies that the interaction state as returned by getInteractionState() will be either the ACTIONED_STATE or ACTIONED_FOCUSED_STATE state.

Similarly, a switchable state of false implies that the interaction state is any other state for which the ACTIONED_STATE_BIT is not set. See the HSwitchable class description for more information about the valid interaction states. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
Enable or disable buttons in group	enable	setEnabled(boolean)	isEnabled()
Forced selection mode.	false	setForcedSelection(boolean)	getForcedSelection()

Constructors

HToggleGroup()

```
public HToggleGroup()
```

Creates a new version instance of an HToggleGroup

Methods

add(HToggleButton)

```
protected void add(HToggleButton button)
```

Add the specified HToggleButton to this HToggleGroup. The HToggleButton will be enabled or disabled as necessary to match the current state of the HToggleGroup as determined by the isEnabled() method.

If the HToggleGroup is empty and forced selection mode is active then the HToggleButton will automatically have its switchable state set to true. Note that any ActionListeners registered with the HToggleButton are not called as a result of this operation.

This method is protected to allow the platform to override it in subclasses of HToggleGroup. It is not intended for use by the application and conformant applications shall not use this method.

Parameters:

button - the HToggleButton to add to the HToggleGroup.

getCurrent()

```
public HToggleButton getCurrent()
```

Returns the HToggleButton from this HToggleGroup which has state true, or null otherwise, for example, if there are no HToggleButton associated with this HToggleGroup, or if all HToggleButton within this HToggleGroup have state false.

Returns:

the currently selected HToggleButton or null if no such HToggleButton exists.

getForcedSelection()

```
public boolean getForcedSelection()
```

Return the current forced selection mode of the group.

Returns:

the current forced selection mode. If this value is true the group is forced to always have one HToggleButton selected (i.e. with switchable state true). Otherwise, the group may have either one or zero HToggleButton selected.

isEnabled()

```
public boolean isEnabled()
```

Determines whether the HToggleGroup is enabled. HToggleGroup are enabled initially by default. A group may be enabled or disabled by calling its setEnabled method.

Returns:

true if the component is enabled; false otherwise.

See Also:

setEnabled(boolean)

---

remove(HToggleButton)

```
protected void remove(HToggleButton button)
```

Remove the specified HToggleButton to this HToggleGroup. If button is not part of this HToggleGroup this method throws a java.lang.IllegalArgumentException.

If the HToggleButton is the currently selected button in this group and forced selection mode is set the first remaining HToggleButton will automatically have its switchable state set to true. Note that any ActionListeners registered with the HToggleButton are not called as a result of this operation.

This method is protected to allow the platform to override it in subclasses of HToggleGroup. It is not intended for use by the application and conformant applications shall not use this method.

Parameters:
button - the HToggleButton to remove from the HToggleGroup.

Throws:
java.lang.IllegalArgumentException - if button is not a member of this HToggleGroup.

---

setCurrent(HToggleButton)

```
public void setCurrent(HToggleButton selection)
```

If the specified HToggleButton is a member of this HToggleGroup, then it is selected, its state is set to true and consequently any other HToggleButton within the HToggleGroup will have their states set to false.

If the specified HToggleButton is not a member of this HToggleGroup, then no actions are performed.

Parameters:
selection - the HToggleButton to be set as the currently selected item within the HToggleGroup.

---

setEnabled(boolean)

```
public void setEnabled(boolean enable)
```

Enables or disables the group, depending on the value of the parameter enable. An enabled group's HToggleButton can respond to user input and generate events. An HToggleGroup is initially enabled by default.

Enabling or disabling an HToggleGroup enables or disables all the HToggleButton components in the group by calling their setEnabled methods.

Whether or not a group is enabled does not affect the adding or removing of HToggleButton from that group.

Parameters:
enable - true to enable all the HToggleButton components in the group, false to disable them.

See Also:
isEnabled()

setForcedSelection(boolean)

```
public void setForcedSelection(boolean forceSelection)
```

Set the forced selection mode of the group. If `forceSelection` is true and no `HToggleButton` is currently selected in the group the first `HToggleButton` automatically has its switchable state set to true. If no `HToggleButton` components have been added to this group there will be no visual indication of the mode change.

Parameters:

`forceSelection` - if this parameter is `true` the group is forced to always have one `HToggleButton` selected (i.e. with switchable state `true`). Otherwise, the group may have either one or zero `HToggleButton` selected.

org.havi.ui
HUIException

Syntax

```
public class HUIException extends java.lang.Exception

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--org.havi.ui.HUIException
```

Direct Known Subclasses:

HInvalidLookException, HMatteException

All Implemented Interfaces:

java.io.Serializable

Description

HUIException is a generic exception that indicates that the desired user-interface mechanism cannot be performed for some reason. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
message	Message explaining why the exception was thrown	null	-	java.lang.Throwable#getMessage

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

Constructors

HUIException()

```
public HUIException()
```

Creates an HUIException object. See the class description for details of constructor parameters and default values.

HUIException(String)

```
public HUIException(java.lang.String message)
```

Creates an HUIException object with a specified reason string.

Parameters:

`message` - the reason why the exception was raised

org.havi.ui
HVersion

Syntax
```
public interface HVersion
```

Description
The HVersion interface defines some versioning constants that are accessible by using the java.lang.System method getProperty, with the appropriate property name.

Note that it is a valid implementation to return empty strings for the implementation, vendor and name strings.

Fields

HAVI_IMPLEMENTATION_NAME

```
public static final java.lang.String HAVI_IMPLEMENTATION_NAME
```

A string constant describing the HAVi implementation name, as returned via java.lang.System.getProperty(havi.implementation.name).

HAVI_IMPLEMENTATION_VENDOR

```
public static final java.lang.String HAVI_IMPLEMENTATION_VENDOR
```

A string constant describing the HAVi implementation vendor, as returned via java.lang.System.getProperty(havi.implementation.vendor).

HAVI_IMPLEMENTATION_VERSION

```
public static final java.lang.String HAVI_IMPLEMENTATION_VERSION
```

A string constant describing the HAVi implementation version, as returned via java.lang.System.getProperty(havi.implementation.version).

HAVI_SPECIFICATION_NAME

```
public static final java.lang.String HAVI_SPECIFICATION_NAME
```

A string constant describing the HAVi specification name, as returned via java.lang.System.getProperty(havi.specification.name).

HAVI_SPECIFICATION_VENDOR

```
public static final java.lang.String HAVI_SPECIFICATION_VENDOR
```

A string constant describing the HAVi specification vendor, as returned via java.lang.System.getProperty(havi.specification.vendor).

HAVI_SPECIFICATION_VERSION

```
public static final java.lang.String HAVI_SPECIFICATION_VERSION
```

A string constant describing the HAVi specification version, as returned via java.lang.System.getProperty(havi.specification.version).

org.havi.ui
HVideoComponent

Syntax

```
public class HVideoComponent extends HComponent

java.lang.Object
  |
  +--java.awt.Component
        |
        +--HComponent
              |
              +--org.havi.ui.HVideoComponent
```

All Implemented Interfaces:

HMatteLayer, java.awt.image.ImageObserver, java.awt.MenuContainer, java.io.Serializable, TestOpacity

Description

HVideoComponent is an opaque class encapsulating the presentation of a video source *within* an application, i.e. contained within a conventional AWT hierarchy.

An HVideoComponent obeys all conventional java.awt.Component semantics, including being clipped by its parent container, etc. An HVideoComponent also obeys all HComponent semantics including Z-ordering, etc. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

Constructors

HVideoComponent()

```
protected HVideoComponent()
```

It is not intended that applications should directly construct HVideoComponent objects.

Creates an HVideoComponent object. See the class description for details of constructor parameters and default values.

Methods

---

addOnScreenLocationModifiedListener(HScreenLocationModifiedListener)

```
public void addOnScreenLocationModifiedListener(HScreenLocationModifiedListener slml)
```

Register a listener to determine if the Component's on-screen location is modified - irrespective of its relative location to its parent Container. If the listener has already been added further calls will add further references to the listener, which will then receive multiple copies of a single event.

Parameters:

`slml` - listener to be notified when the on-screen location of the component is modified.

---

getVideoDevice()

```
public HVideoDevice getVideoDevice()
```

Returns the `HVideoDevice` that this `HVideoComponent` is associated with.

Returns:

the `HVideoDevice` that this `HVideoComponent` is associated with, or null if this cannot be determined.

---

removeOnScreenLocationModifiedListener(HScreenLocationModifiedListener)

```
public void removeOnScreenLocationModifiedListener(HScreenLocationModifiedListener slml)
```

Remove a listener that determines if the Component's on-screen location is modified - irrespective of its relative location to its parent Container. If the specified listener is not registered, the method has no effect. If multiple references to a single listener have been registered it should be noted that this method will only remove one reference per call.

Parameters:

`slml` - listener to be notified when the on-screen location of the component is modified.

org.havi.ui
HVideoConfigTemplate

Syntax
```
public class HVideoConfigTemplate extends HScreenConfigTemplate

java.lang.Object
  |
  +--HScreenConfigTemplate
        |
        +--org.havi.ui.HVideoConfigTemplate
```

Description
The HVideoConfigTemplate class is used to obtain a valid HVideoConfiguration. An application instantiates one of these objects and then sets all non-default attributes as desired. The object is then passed to the getBestConfiguration(HVideoConfigTemplate) method found in the HVideoDevice class. If possible, a valid HVideoConfiguration is returned which meets or exceeds the requirements set in the HVideoConfigTemplate.

This class may be subclassed to support additional properties of video configurations which may be requested by applications. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

See Also:
HScreenConfigTemplate, HBackgroundConfigTemplate, HGraphicsConfigTemplate

Fields

GRAPHICS_MIXING
```
public static final int GRAPHICS_MIXING
```
A value for use in the preference field of the setPreference(int, int) and getPreferencePriority(int) methods in the HVideoConfigTemplate that indicates that the device configuration supports the display of graphics in addition to video streams. This display includes both configurations where the video pixels and graphics pixels are fully aligned (same size) as well as configurations where they are displayed together but where a more complex relationship exists between the two pixel coordinate spaces. The graphics configuration for mixing is specified as an HGraphicsConfiguration.

This preference is used by the platform as a constraint in selecting configurations. Templates generated by the platform and then returned to applications (e.g. from a `getConfigTemplate` method) shall not have this preference filled in by the platform.

Constructors

HVideoConfigTemplate()

```
public HVideoConfigTemplate()
```

Creates an `HVideoConfigTemplate` object. See the class description for details of constructor parameters and default values.

Methods

---

getPreferenceObject(int)

```
public java.lang.Object getPreferenceObject(int preference)
```

Return the preference object for the specified preference.

Instances of `HVideoConfigTemplate` which have not had this preference set shall return null for this object. Note that instances constructed by the platform and returned to applications are required to have all preferences (except where explicitly identified) set by the platform before it is returned.

Overrides:
`getPreferenceObject(int)` in class `HScreenConfigTemplate`

Parameters:
`preference` - the preference to be indicated. Valid values for an `HVideoConfigTemplate` are: `VIDEO_GRAPHICS_PIXEL_ALIGNED`, `PIXEL_ASPECT_RATIO`, `PIXEL_RESOLUTION`, `SCREEN_RECTANGLE`, and `GRAPHICS_MIXING`.

Subclasses may add further valid values. A IllegalArgumentException shall be thrown if the preference is not a valid value for this instance of `HVideoConfigTemplate`, or if `preference` does not have an associated value object.

Returns:
the preference object for the specified preference.

---

getPreferencePriority(int)

```
public int getPreferencePriority(int preference)
```

Return the priority for the specified preference.

By default the preferences in a template returned from the system will have an `DONT_CARE` priority unless specified otherwise. Any configuration always satisfies these attributes.

Overrides:
`getPreferencePriority(int)` in class `HScreenConfigTemplate`

Parameters:
`preference` - the preference to be indicated. Valid values for an `HVideoConfigTemplate` are: `ZERO_BACKGROUND_IMPACT`, `ZERO_GRAPHICS_IMPACT`, `ZERO_VIDEO_IMPACT`, `INTERLACED_DISPLAY`, `FLICKER_FILTERING`, `VIDEO_GRAPHICS_PIXEL_ALIGNED`,

PIXEL_ASPECT_RATIO , PIXEL_RESOLUTION , SCREEN_RECTANGLE and GRAPHICS_MIXING .

Subclasses may add further valid values. An IllegalArgumentException shall be thrown if the preference is not a valid value for this instance of HVideoConfigTemplate

Returns:

the priority for the specified preference.

---

isConfigSupported(HVideoConfiguration)

```
public boolean isConfigSupported(HVideoConfiguration hvc)
```

Returns a boolean indicating whether or not the specified HVideoConfiguration can be used to create a video plane that supports the features set in this template.

Parameters:

hvc - - the HVideoConfiguration object to test against this template.

Returns:

true if this HVideoConfiguration object can be used to create a video plane that supports the features set in this template, false otherwise.

---

setPreference(int, Object, int)

```
public void setPreference(int preference, java.lang.Object object, int priority)
```

Set the indicated preference (and associated value object) to have the specified priority. If the preference has been previously set, then the previous object and priority shall be overwritten.

Attributes that are not filled in in a template (through setPreference(int, Object, int)), shall have the priority DONT_CARE . Any configuration always satisfies these attributes.

An application which wishes to remove a preference from an existing template (e.g. one generated by the platform) may call this method with null for the object parameter.

Overrides:

setPreference(int, Object, int) in class HScreenConfigTemplate

Parameters:

preference - the preference to be indicated. Valid values for an HScreenConfigTemplate are: PIXEL_ASPECT_RATIO , PIXEL_RESOLUTION , SCREEN_RECTANGLE , VIDEO_GRAPHICS_PIXEL_ALIGNED and GRAPHICS_MIXING .

Subclasses may add further valid values. An IllegalArgumentException shall be thrown if the preference is not a valid value for this instance of HVideoConfigTemplate

object - the Object associated with the given preference, or null.

priority - the priority of the preference. Valid values include: REQUIRED , PREFERRED , DONT_CARE , PREFERRED_NOT and REQUIRED_NOT .

If priority is not a valid priority as defined here a java.lang.IllegalArgumentException will be thrown.

org.havi.ui
HVideoConfiguration

Syntax
```
public class HVideoConfiguration extends HScreenConfiguration

java.lang.Object
  |
  +--HScreenConfiguration
        |
        +--org.havi.ui.HVideoConfiguration
```

Description
The `HVideoConfiguration` class describes the characteristics (settings) of an `HVideoDevice`. There can be many `HVideoConfiguration` objects associated with a single `HVideoDevice`. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

See Also:
`HVideoDevice`

Constructors

HVideoConfiguration()
```
protected HVideoConfiguration()
```
It is not intended that applications should directly construct `HVideoConfiguration` objects.

Creates an `HVideoConfiguration` object. See the class description for details of constructor parameters and default values.

Methods

---

getConfigTemplate()

```
public HVideoConfigTemplate getConfigTemplate()
```

Returns an `HVideoConfigTemplate` object that describes and uniquely identifies this `HVideoConfiguration`.

Hence, the following sequence should return the original `HVideoConfiguration`.

```
HVideoDevice.getBestMatch(HVideoConfiguration .getConfigTemplate())
```

Features that are implemented in the `HVideoConfiguration` will return `REQUIRED` priority. Features that are not implemented in the `HVideoConfiguration` will return `REQUIRED_NOT` priority.

Returns:

an `HVideoConfigTemplate` object which both describes and uniquely identifies this `HVideoConfiguration`.

---

getDevice()

```
public HVideoDevice getDevice()
```

Returns the `HVideoDevice` associated with this `HVideoConfiguration`.

Returns:

the `HVideoDevice` object that is associated with this `HVideoConfiguration`,

org.havi.ui
HVideoDevice

Syntax
```
public class HVideoDevice extends HScreenDevice

java.lang.Object
  |
  +--HScreenDevice
        |
        +--org.havi.ui.HVideoDevice
```

All Implemented Interfaces:
org.davic.resources.ResourceProxy, org.davic.resources.ResourceServer

Description
The `HVideoDevice` class describes the logical video devices which can contribute to the appearance of a particular screen. Each `HVideoDevice` has one or more `HVideoConfiguration` objects associated with it. These objects specify the different configurations (settings) in which the `HVideoDevice` can be used. This class represents the presentation only of video and does not provide for the selection of which video is to be presented. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

See Also:
`HVideoConfiguration`, `HScreenDevice`, `HScreen`

Fields

NOT_CONTRIBUTING
```
public static final HVideoConfiguration NOT_CONTRIBUTING
```
Constant indicating that a video device is not contributing to the output of its `HScreen`. This shall only be used in implementations where an `HVideoDevice` shares an underlying MPEG decoder with an `HBackgroundDevice` when the `HBackgroundDevice` is in an `HStillImageBackgroundConfiguration`. In such implementations, this configuration shall be returned from the `getCurrentConfiguration()` method when the underlying video decoder is being used for displaying `HBackgroundImage`. It shall not be returned from any other method. The

setVideoConfiguration(HVideoConfiguration) method shall consider this to be an invalid configuration for this device and fail as specified.

On implementations where getCurrentConfiguration() never returns this value, NOT_CONTRIBUTING shall be null.

Constructors

HVideoDevice()

```
protected HVideoDevice()
```

It is not intended that applications should directly construct HVideoDevice objects.

Creates an HVideoDevice object. See the class description for details of constructor parameters and default values.

Methods

---

getBestConfiguration(HVideoConfigTemplate)

```
public HVideoConfiguration getBestConfiguration(HVideoConfigTemplate hvct)
```

Returns the "best" configuration possible that passes the criteria defined in the HVideoConfigTemplate or null.

Equally best in this sense means that the configurations satisfy an equal number of preferences with priorities PREFERRED and PREFERRED_NOT and all preferences with priorities REQUIRED and REQUIRED_NOT .

Configurations are chosen according to the following algorithm, based on the priority as supplied to setPreference(int, int) . Configurations must:

1. satisfy ALL the preferences whose priority was REQUIRED
2. satisfy NONE of the preferences whose priority was REQUIRED_NOT
3. satisfy as many as possible of the preferences whose priority was PREFERRED .
4. satisfy as few as possible of the preferences whose priority was PREFERRED_NOT .

Preferences whose priority was DONT_CARE are ignored.

This method returns null if no configuration exists that satisfies all REQUIRED and REQUIRED_NOT priorities.

Parameters:

hvct - an HVideoConfigTemplate object used to obtain a valid HVideoConfiguration . If this parameter is null the default configuration for the platform shall be returned.

Returns:

an HVideoConfiguration that passes the criteria defined in the specified HVideoConfigTemplate or null if no HVideoConfiguration passes the criteria.

---

getBestConfiguration(HVideoConfigTemplate[])

```
public HVideoConfiguration getBestConfiguration(HVideoConfigTemplate[] hvcta)
```

Returns the "best" configuration possible that passes the criteria defined in one of the HVideoConfigTemplate objects within the specified array or null. The HVideoTemplate objects should be considered for matching in priority order from 0 to (hvcta.length - 1).

Equally best in this sense means that the configurations satisfy an equal number of preferences with priorities PREFERRED and PREFERRED_NOT and all preferences with priorities REQUIRED and REQUIRED_NOT.

Configurations are chosen according to the following algorithm, based on the priority as supplied to setPreference(int, int). Configurations must:

1. satisfy ALL the preferences whose priority was REQUIRED
2. satisfy NONE of the preferences whose priority was REQUIRED_NOT
3. satisfy as many as possible of the preferences whose priority was PREFERRED.
4. satisfy as few as possible of the preferences whose priority was PREFERRED_NOT.

Preferences whose priority was DONT_CARE are ignored.

This method returns null if no configuration exists that satisfies all REQUIRED and REQUIRED_NOT priorities.

Parameters:
hvcta - the HVideoConfigTemplate array used to obtain a valid HVideoConfiguration.

Returns:
an HVideoConfiguration that passes the criteria defined in one of the HVideoConfigTemplate objects within the specified array

---

getConfigurations()

```
public HVideoConfiguration[] getConfigurations()
```

Returns all of the HVideoConfiguration objects associated with this HVideoDevice.

Returns:
an array of HVideoConfiguration objects

See Also:
HVideoConfiguration

---

getCurrentConfiguration()

```
public HVideoConfiguration getCurrentConfiguration()
```

Returns the current HVideoConfiguration for this HVideoDevice.

Returns:
the current HVideoConfiguration for this HVideoDevice.

See Also:
HVideoConfiguration

---

getDefaultConfiguration()

```
public HVideoConfiguration getDefaultConfiguration()
```

Returns the default HVideoConfiguration associated with this HVideoDevice. This (single) default configuration should correspond to some well-behaved settings for the device, such as, a minimal configuration or factory preset settings.

Returns:
the default HVideoConfiguration of this HVideoDevice.

See Also:
HVideoConfiguration

---

getVideoController()

```
public java.lang.Object getVideoController()
```

Obtain a reference to the object which controls the presentation of the video. Null is returned if no video is being presented. In systems based on JMF, this would be the javax.media.Player instance which owns the resource.

Returns:
the object which controls the presentation of the video

Throws:
SecurityException - if the application does not have sufficient rights to get the VideoPlayer object.

HPermissionDeniedException - (HPermissionDeniedException) if the application does not currently have the right to get the VideoPlayer object.

---

getVideoSource()

```
public java.lang.Object getVideoSource()
```

Obtain a reference to the source of the video being presented by this device at this moment. The precise class to be be returned must be specified outside the HAVi user- interface specification. Null is returned if no video is being presented.

Returns:
a reference to the source of the video

Throws:
SecurityException - if the application does not have sufficient rights to get the VideoSource object.

HPermissionDeniedException - (HPermissionDeniedException) if the application does not currently have the right to get the VideoSource object.

---

setVideoConfiguration(HVideoConfiguration)

```
public boolean setVideoConfiguration(HVideoConfiguration hvc)
```

Set the video configuration for the device.

An application is only allowed to call this method after it reserved the device explicitly and subject to the security policy of the platform. Subject to this, the following rules determine whether this method can succeed.

- If the application selects a configuration that is not conflicting with the configurations of all the other devices on the same HScreen then that configuration is selected.
- If an application tries to select a configuration that conflicts with a configuration of another device on this HScreen which this application cannot control due to platform security policy then this method shall fail with a SecurityException.
- If an application tries to select a configuration that conflicts with a configuration of another device on this HScreen which this application cannot control due to another application owning the right to control that device and the platform not giving that right to this application then this method shall fail with an HPermissionDeniedException .
- If an application tries to select a configuration that conflicts with a configuration of another device which this application can control due to either this or no application having reserved the device, then the configuration of the other device is automatically changed. There is no change in the resource ownership of the

other device.

Applications can prevent or limit changes to configurations of other, not intended, devices by using constants `ZERO_GRAPHICS_IMPACT` and `ZERO_VIDEO_IMPACT` in their configuration templates. The first one will cause no changes to already running graphical applications. This means that no changes may be applied to the graphics device. Similarly the second constant will result in no changes to the video device.

Any modifications made to the configurations of other devices shall be reflected by the API for the devices concerned. The `getCurrentConfiguration()` method for those devices shall return the new configuration.

On successful change to the specified configuration, the device shall fire one or more `HScreenConfigurationEvent` for all listeners that are currently registered (if the criteria for receiving such an event has been satisfied). If the new configuration differs by more than one characteristic from the previous configuration then the device may fire one or more `HScreenConfigurationEvent` . This behavior is implementation specific.

If an attempt is made to set the identical configuration to that which is current, then no such event(s) shall be fired.

Parameters:

`hvc` - the `HVideoConfiguration` to which this device should be set.

Returns:

A boolean indicating whether the configuration could be applied successfully. If the configuration could not be applied successfully, the configuration after this method may not match the configuration of the device prior to this method being called --- applications should take steps to determine whether a partial change of settings has been made.

Throws:

`SecurityException` - if the application does not have sufficient rights to set the configuration for this device.

{ `@link` - org.havi.ui.HPermissionDeniedException HPermissionDeniedException} if the application does not currently have the right to set the configuration for this device.

{ `@link` - org.havi.ui.HConfigurationException HConfigurationException} if the specified configuration is not valid for this device, or if it conflicts with other devices whose configuration(s) cannot be changed by this application.

`HConfigurationException`, `HPermissionDeniedException`

org.havi.ui
HVisible

Syntax

```
public class HVisible extends HComponent implements HState
```

```
java.lang.Object
  |
  +--java.awt.Component
        |
        +--HComponent
              |
              +--org.havi.ui.HVisible
```

Direct Known Subclasses:

HListGroup, HSinglelineEntry, HStaticAnimation, HStaticIcon, HStaticRange, HStaticText

All Implemented Interfaces:

HMatteLayer, HState, java.awt.image.ImageObserver, java.awt.MenuContainer, java.io.Serializable, TestOpacity

Description

The HVisible class is the base class for all non-interactive components.

If a layout manager is associated with the Container into which a HVisible component is placed, the size and location of the component will be controlled by the layout manager.

HVisible provides the following features for the use of subclasses:

- support for interaction states.
- a mechanism to associate the component with a pluggable HLook class to which all drawing is delegated.
- support for state-related content which is drawn by the associated HLook .
- support for scalable and alignable content.
- support for private look data.
- support for preferred sizes when used with a layout manager.
- control over the background painting behavior.
- a pluggable text layout management mechanism.

Some of these features are discussed in more detail below.

Interaction State

Interaction states for HVisible components are defined in the HState interface. The only interaction states valid for a plain (un-subclassed) HVisible are:

- NORMAL_STATE - indicating that the component is in its normal interaction state.
- DISABLED_STATE - indicating that the component is disabled. While this has no effect on user interaction with a plain HVisible (since there is no user interaction) it will affect the visual appearance.

Subclasses of HVisible may use other states. However, setInteractionState(int) is the only means by which state can be changed and will throw an IllegalArgumentException if the state is not valid for a particular component type. Subclasses of HVisible must not manipulate state in other ways.

The getInteractionState() method is provided to allow any class to read the current state of a component.

State-based content

Specific content may be set for any interaction state defined in HState , irrespective of whether the subclass of HVisible can ever be in that state.

Note that content is set on the various STATE constants defined in HState , and *not* on the STATE_BIT constants. A java.lang.IllegalArgumentException will be thrown by any method which takes a state as a parameter if a STATE_BIT rather than a STATE is passed.

By default it is possible to set content for any of eight discrete states. However, if no content has been set for a particular state, the associated HLook should use content from the nearest matching state as defined below:

State	Content if missing	Example style
NORMAL_STATE	none	no special style
FOCUSED_STATE	NORMAL_STATE	highlighted
ACTIONED_STATE	FOCUSED_STATE	pushed in
ACTIONED_FOCUSED_STATE	FOCUSED_STATE	highlighted & pushed in
DISABLED_STATE	NORMAL_STATE	grayed out
DISABLED_FOCUSED_STATE	DISABLED_STATE	grayed out & highlighted
DISABLED_ACTIONED_STATE	ACTIONED_STATE	grayed out & pushed in
DISABLED_ACTIONED_FOCUSED_STATE	DISABLED_STATE	grayed out & highlighted & pushed

It is recommended that HLook implementations be capable of drawing components in styles that allow the interaction state to be visually distinguished even when no content is set, or the content is the same for several states.

Most content is stored by reference, but text content is copied as java.lang.String objects are immutable.

Content for any component may be changed "on the fly" using the setContent methods. However, some components (e.g. HStaticAnimation and HAnimation) may be asynchronously referencing their content (i.e. through a separate implementation-specific animation thread). Therefore the following restrictions apply to the setAnimateContent(Image[], int) method when the instance of HVisible on which it is invoked implements the HAnimateEffect interface:

- The method must be synchronized with any implementation-specific animation thread such that content cannot be changed while a different thread is using it.
- If the animation was running the method should stop the animation in a synchronized manner before changing content.
- The method should reset the animation to a starting position defined by the current play mode. The repeat count of the animation should be reset to 0.
- If the animation was running the method should start the animation.

Alternative platform-specific animation schemes which do not use HAnimateEffect are outside the scope of this document. However, a similar strategy should be employed to avoid synchronization problems.

Content Scaling and Alignment

Where state-based content is used, it is an implementation option to support scaling of the content to fit the HVisible. Some looks also support alignment of content. See the class description of HLook for

details of which looks support scaling and alignment. See the fields description of this class for constants which can be used to specify scaling and alignment modes.

The following methods are used to get and set alignment of content:

- `setHorizontalAlignment(int)`
- `setVerticalAlignment(int)`
- `getHorizontalAlignment()`
- `getVerticalAlignment()`

The following methods are used to get and set the scaling of content. Scaling support is optional, however all implementations must support the `RESIZE_NONE` scaling mode. Platforms are *not* required to support scaling of textual content by default.

- `setResizeMode(int)`
- `getResizeMode()`
- Repaint Hints

An associated HLook provides a mechanism of efficiently repainting an `HVisible`, based on a hint which provides data about the change which triggered the redrawing. The `widgetChanged(HVisible, HChangeData[])` method should be called in preference to `repaint` whenever the HVisible requires a redraw to change its appearance.

The `widgetChanged(HVisible, HChangeData[])` method requires aan array of one or more `HChangeData` objects, which contain a hint, and associated data. All keys are `java.lang.Integer` objects, with values defined as constants in this class. The following hints are defined:

Hint (key)	Data (value)	Data Interpretation
`TEXT_CONTENT_CHANGE`	Object[9]	[Integer changedState, String oldNORMAL_STATEtext, String oldFOCUSED_STATEtext, String oldACTIONED_STATEtext, String oldACTIONED_FOCUSED_STATEtext, String oldDISABLED_STATEtext, String oldDISABLED_FOCUSED_STATEtext, String oldDISABLED_ACTIONED_STATEtext, String oldDISABLED_ACTIONED_FOCUSED_STATEtext]
`GRAPHIC_CONTENT_CHANGE`	Object[9]	[Integer changedState, Image oldNORMAL_STATEimage, Image oldFOCUSED_STATEimage, Image oldACTIONED_STATEimage, Image oldACTIONED_FOCUSED_STATEimage, Image oldDISABLED_STATEimage, Image oldDISABLED_FOCUSED_STATEimage, Image oldDISABLED_ACTIONED_STATEimage, Image oldDISABLED_ACTIONED_FOCUSED_STATEimage]
`ANIMATE_CONTENT_CHANGE`	Object[9]	[Integer changedState, Image[] oldNORMAL_STATEanimation, Image[] oldFOCUSED_STATEanimation, Image[] oldACTIONED_STATEanimation, Image[] oldACTIONED_FOCUSED_STATEanimation, Image[] oldDISABLED_STATEanimation, Image[] oldDISABLED_FOCUSED_STATEanimation, Image[] oldDISABLED_ACTIONED_STATEanimation, Image[] oldDISABLED_ACTIONED_FOCUSED_STATEanimation]

CONTENT_CHANGE	Object[9]	[Integer changedState, Object oldNORMAL_STATEcontent, Object oldFOCUSED_STATEcontent, Object oldACTIONED_STATEcontent, Object oldACTIONED_FOCUSED_STATEcontent, Object oldDISABLED_STATEcontent, Object oldDISABLED_FOCUSED_STATEcontent, Object oldDISABLED_ACTIONED_STATEcontent, Object oldDISABLED_ACTIONED_FOCUSED_STATEcontent]
STATE_CHANGE	Integer	oldState
CARET_POSITION_CHANGE	Integer	oldPosition
ECHO_CHAR_CHANGE	Character	oldEcho
EDIT_MODE_CHANGE	Boolean	oldEditMode
MIN_MAX_CHANGE	Integer[2]	[oldMin, oldMax]
THUMB_OFFSETS_CHANGE	Integer[2]	[oldMin, oldMax]
ORIENTATION_CHANGE	Integer	oldOrientation
TEXT_VALUE_CHANGE	Integer	oldValue
ITEM_VALUE_CHANGE	Integer	oldValue
ADJUSTMENT_VALUE_CHANGE	Integer	oldIndex
LIST_CONTENT_CHANGE	HListElement[]	oldContent
LIST_ICONSIZE_CHANGE	Dimension	oldSize
LIST_LABELSIZE_CHANGE	Dimension	oldSize
LIST_MULTISELECTION_CHANGE	Boolean	oldSelection
LIST_SCROLLPOSITION_CHANGE	Integer	oldScrollPosition
UNKNOWN_CHANGE	Integer	UNKNOWN_CHANGE

Note that implementations of `HLook` may not actually implement more efficient drawing code for a given hint. In particular, simply repainting the entire `HVisible` is a valid implementation option.

The following code for the `setThumbOffsets(int, int)` method demonstrates how hint objects are used. Note that the values passed in the hint are always the *old* values, since the `HLook` can always retrieve the new values as needed from the `HVisible`. Variables starting with "my" are member variables of the class.

```
    public void setThumbOffsets(int min, int max)
    {
      int oldValue = myValue;
      HChangeData[] array = new HChangeData[1];
      array[0] = null;
      // valid argument checking elided
      // create hint object with the OLD values
      HChangeData d = new HChangeData(HVisible.MIN_MAX_CHANGE,
      new Integer[] { new Integer(myMin),
      new Integer(myMax) });
      // update the values
      myMin = min;
      myMax = max;

      // check bounds
      myValue = Math.min(myMin, Math.max(myMax, myValue));

      // create value hint if needed
      if (myValue != oldValue)
          array[0] = d;

      // tell the look to repaint as needed
      myLook.widgetChanged(this, array);
    }
  Private HLook data
```

Private data for the use of an associated `HLook` to optimize the redraw of the component may be set on any `HVisible`. Examples of such data are:

- cached bitmap representations of complex drawing operations
- scrolling metrics and positions
- cached layout data

Data is set using the `setLookData(Object, Object)` method, and retrieved with the `getLookData(Object)` method.

To keep the on-screen representation of an `HVisible` synchronized with its state, any class may call `setLookData(Object, Object)` with a parameter of `null` to invalidate any cached data. Instances of `HLook` must be able to regenerate any data they store on `HVisible` classes at any time. This mechanism is intended for implementation optimization only and shall not be used for storing content.

Use of this mechanism is an implementation option. If this mechanism is not used by an implementation, `getLookData(Object)` shall always return `null` and `setLookData(Object, Object)` shall do nothing. Interoperable systems shall not assume that this mechanism is implemented.

Preferred Sizes

The `setDefaultSize(Dimension)` and `getDefaultSize()` methods provide support for a user-defined default preferred size to be passed to a layout manager. This value is returned to the layout manager through the `getPreferredSize(HVisible)` method and if set overrides any look-specific value based on content calculated by the `HLook`.

Note that the interpretation of the size passed to `setDefaultSize(Dimension)` is *not* the overall size of the component, but the area available to the look to render the component into excluding any look-specific borders. Therefore when a layout manager is in use the *actual* size of the component is likely to be larger than this default size. See the descriptions of `getMinimumSize(HVisible)`, `getPreferredSize(HVisible)` and `getMaximumSize(HVisible)` in `HLook` for details of the exact algorithm used.

Note that constructors of `HVisible` and subclasses which accept `width` and `height` parameters shall set the default size to `[width, height]` as if these parameters were passed to `setDefaultSize(Dimension)`. If a layout manager is in use the actual size of the component will probably be larger than this size after layout due to the `HLook` adding borders. However, if no layout manager is used the `width` and `height` parameters are simply used to set the *actual* size of the component.

Background Painting

Normally the associated HLook does not paint the background of the HVisible, allowing for non-rectangular components and text overlaying bitmaps. However, HVisible provides for components which require their background to be painted through the setBackgroundMode method. Note that if the mode is set to BACKGROUND_FILL the return value of the isOpaque() method *may* be true, depending on whether the current background color of the HVisible is opaque. If the background mode is set to NO_BACKGROUND_FILL the isOpaque() method *must* return false.

Event Handling

While implementations of HVisible may enable certain java.awt.AWTEvents, applications should assume that an HVisible class does not generate or respond to any java.awt.AWTEvents. If this behavior is required the standard AWT mechanisms (i.e. processEvent and similar functions) may be used to handle events on HVisible or subclasses. However, it is strongly recommended that component implementors use the HAVi events defined in the org.havi.ui.event package where possible.

For example, a component wishing to respond to user action should normally subclass HComponent, implement the HActionInputPreferred interface and handle HActionEvent events in the processHActionEvent(HActionEvent) method, instead of overriding java.awt.Component#processEvent or similar. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
x	x-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
y	y-coordinate of top left hand corner of this component in pixels, relative to its parent container (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
width	width of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds
height	height of this component in pixels (subject to layout management).	---	java.awt.Component#setBounds	java.awt.Component#getBounds

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
Associated matte (HMatte).	none (i.e. getMatte() returns null)	setMatte(HMatte)	getMatte()
The text layout manager responsible for text formatting.	An HDefaultTextLayoutManager object.	setTextLayoutManager(HTextLayoutManager)	getTextLayoutManager()
The background painting mode	NO_BACKGROUND_FILL	setBackgroundMode(int)	getBackgroundMode()

The default preferred size	not set (i.e. null) unless specified by `width` and `height` parameters	`setDefaultSize(Dimension)`	`getDefaultSize()`
The horizontal content alignment	`HALIGN_CENTER`	`setHorizontalAlignment(int)`	`getHorizontalAlignment()`
The vertical content alignment	`VALIGN_CENTER`	`setVerticalAlignment(int)`	`getVerticalAlignment()`
The content scaling mode	`RESIZE_NONE`	`setResizeMode(int)`	`getResizeMode()`

Fields

ADJUSTMENT_VALUE_CHANGE

```
public static final int ADJUSTMENT_VALUE_CHANGE
```

A constant for use with the hinting mechanism (see the `widgetChanged(HVisible, HChangeData[])` method in `HLook`). This hint indicates that the value of an `HAdjustmentValue` component has changed. The value for this hint is a `java.lang.Integer` which contains the old index.

ANIMATE_CONTENT_CHANGE

```
public static final int ANIMATE_CONTENT_CHANGE
```

A constant for use with the hinting mechanism (see the `widgetChanged(HVisible, HChangeData[])` method in `HLook`). This hint indicates that the animated content has changed. The value for this hint is an array, `java.lang.Object[9]`, which contains the state for which the content changed (a `java.lang.Integer`) and the old content (a `java.awt.Image[]`) for all 8 states.

BACKGROUND_FILL

```
public static final int BACKGROUND_FILL
```

A constant for use with the `setBackgroundMode(int)` method of `HVisible` which indicates that an associated `HLook` should fill the bounding rectangle of the `HVisible` with its current background color before drawing any content. Any previous content will be erased during the repainting of the `HVisible`.

CARET_POSITION_CHANGE

```
public static final int CARET_POSITION_CHANGE
```

A constant for use with the hinting mechanism (see the `widgetChanged(HVisible, HChangeData[])` method in `HLook`). This hint indicates that the caret position has changed. The value for this hint is a `java.lang.Integer` which has the value of the old caret position.

CONTENT_CHANGE

```
public static final int CONTENT_CHANGE
```

A constant for use with the hinting mechanism (see the `widgetChanged(HVisible, HChangeData[])` method in `HLook`). This hint indicates that the miscellaneous content has changed. The value for this hint is an array, `java.lang.Object[9]`, which contains the state for which the content changed (a `java.lang.Integer`) and the old content (a `java.lang.Object`) for all 8 states.

ECHO_CHAR_CHANGE

```
public static final int ECHO_CHAR_CHANGE
```

A constant for use with the hinting mechanism (see the `widgetChanged(HVisible, HChangeData[])` method in `HLook`). This hint indicates that the echo character has changed. The value for this hint is a `java.lang.Character` which has the value of the old echo character.

EDIT_MODE_CHANGE

```
public static final int EDIT_MODE_CHANGE
```

A constant for use with the hinting mechanism (see the `widgetChanged(HVisible, HChangeData[])` method in `HLook`). This hint indicates that the editing mode has changed. The value for this hint is a `java.lang.Boolean` which has the value of the old edit mode.

FIRST_CHANGE

```
public static final int FIRST_CHANGE
```

A constant which indicates the first change value for use with the hinting mechanism.

GRAPHIC_CONTENT_CHANGE

```
public static final int GRAPHIC_CONTENT_CHANGE
```

A constant for use with the hinting mechanism (see the `widgetChanged(HVisible, HChangeData[])` method in `HLook`). This hint indicates that the graphical content has changed. The value for this hint is an array, `java.lang.Object[9]`, which contains the state for which the content changed (a `java.lang.Integer`) and the old content (a `java.awt.Image`) for all 8 states.

HALIGN_CENTER

```
public static final int HALIGN_CENTER
```

A constant for use with the `setHorizontalAlignment(int)` method of `HVisible` which indicates that content should be centered horizontally.

HALIGN_JUSTIFY

```
public static final int HALIGN_JUSTIFY
```

A constant for use with the `setHorizontalAlignment(int)` method of `HVisible` which indicates that content should be fully justified (horizontally).

HALIGN_LEFT

```
public static final int HALIGN_LEFT
```

A constant for use with the `setHorizontalAlignment(int)` method of `HVisible` which indicates that content should be left aligned.

HALIGN_RIGHT

```
public static final int HALIGN_RIGHT
```

A constant for use with the `setHorizontalAlignment(int)` method of `HVisible` which indicates that content should be right aligned.

ITEM_VALUE_CHANGE

```
public static final int ITEM_VALUE_CHANGE
```

A constant for use with the hinting mechanism (see the `widgetChanged(HVisible, HChangeData[])` method in `HLook`). This hint indicates that the value of an `HItemValue` component has changed. The value for this hint is a `java.lang.Integer` which contains the old value.

LAST_CHANGE

```
public static final int LAST_CHANGE
```

A constant which indicates the last defined value for use with the hinting mechanism.

LIST_CONTENT_CHANGE

```
public static final int LIST_CONTENT_CHANGE
```

A constant for use with the hinting mechanism (see the `widgetChanged(HVisible, HChangeData[])` method in `HLook`). This hint indicates that the content of an `HListGroup` component has changed. The value for this hint is a `java.lang.Integer` which contains the old content.

LIST_ICONSIZE_CHANGE

```
public static final int LIST_ICONSIZE_CHANGE
```

A constant for use with the hinting mechanism (see the `widgetChanged(HVisible, HChangeData[])` method in `HLook`). This hint indicates that the iconsize of an `HListGroup` component has changed. The value for this hint is a `java.lang.Integer` which contains the old size.

LIST_LABELSIZE_CHANGE

```
public static final int LIST_LABELSIZE_CHANGE
```

A constant for use with the hinting mechanism (see the `widgetChanged(HVisible, HChangeData[])` method in `HLook`). This hint indicates that the labelsize of an `HListGroup` component has changed. The value for this hint is a `java.lang.Integer` which contains the old size.

LIST_MULTISELECTION_CHANGE

```
public static final int LIST_MULTISELECTION_CHANGE
```

A constant for use with the hinting mechanism (see the `widgetChanged(HVisible, HChangeData[])` method in `HLook`). This hint indicates that the multiselection setting of an `HListGroup` component has changed. The value for this hint is a `java.lang.Integer` which contains the old setting.

LIST_SCROLLPOSITION_CHANGE

```
public static final int LIST_SCROLLPOSITION_CHANGE
```

A constant for use with the hinting mechanism (see the `widgetChanged(HVisible, HChangeData[])` method in `HLook`). This hint indicates that the scrollposition of an `HListGroup` component has changed. The value for this hint is a `java.lang.Integer` which contains the old position.

MIN_MAX_CHANGE

```
public static final int MIN_MAX_CHANGE
```

A constant for use with the hinting mechanism (see the `widgetChanged(HVisible, HChangeData[])` method in `HLook`). This hint indicates that the range of an `HAdjustmentValue` component has changed. The value for this hint is an array, `java.lang.Object[2]`, which contains the old minimum and maximum extents of the range as `java.lang.Integer`.

NO_BACKGROUND_FILL

```
public static final int NO_BACKGROUND_FILL
```

A constant for use with the `setBackgroundMode(int)` method of `HVisible` which indicates that an associated `HLook` should not fill the bounding rectangle of the `HVisible` with its current background color before drawing any content. Therefore any previous content will NOT necessarily be erased during the repainting of the `HVisible`.

NO_DEFAULT_HEIGHT

```
public static final int NO_DEFAULT_HEIGHT
```

A constant for use with the `setDefaultSize(Dimension)` and `getDefaultSize()` methods of `HVisible` which indicates that no default height is desired for the `HVisible`.

NO_DEFAULT_SIZE

```
public static final java.awt.Dimension NO_DEFAULT_SIZE
```

A constant for use with the `setDefaultSize(Dimension)` and `getDefaultSize()` methods of `HVisible` which indicates that no default size is desired for the `HVisible`.

NO_DEFAULT_WIDTH

```
public static final int NO_DEFAULT_WIDTH
```

A constant for use with the `setDefaultSize(Dimension)` and `getDefaultSize()` methods of `HVisible` which indicates that no default width is desired for the `HVisible`.

ORIENTATION_CHANGE

```
public static final int ORIENTATION_CHANGE
```

A constant for use with the hinting mechanism (see the `widgetChanged(HVisible, HChangeData[])` method in `HLook`). This hint indicates that the orientation of an `HOrientable` component has changed. The value for this hint is a `java.lang.Integer` which has the value of the old orientation.

RESIZE_ARBITRARY

```
public static final int RESIZE_ARBITRARY
```

A constant for use with the `setResizeMode(int)` method of `HVisible` which indicates that content should be scaled to fit the component. Aspect ratios of the content need not be preserved.

RESIZE_NONE

```
public static final int RESIZE_NONE
```

A constant for use with the `setResizeMode(int)` method of `HVisible` which indicates that content should not be scaled to fit the component.

RESIZE_PRESERVE_ASPECT

```
public static final int RESIZE_PRESERVE_ASPECT
```

A constant for use with the `setResizeMode(int)` method of `HVisible` which indicates that content should be scaled to fit the component while preserving the aspect ratio of the content. Areas of the component that are not filled by the content will be look dependent.

STATE_CHANGE

```
public static final int STATE_CHANGE
```

A constant for use with the hinting mechanism (see the `widgetChanged(HVisible, HChangeData[])` method in `HLook`). This hint indicates that the interaction state has changed. The value for this hint is a `java.lang.Integer` which has the value of the old state.

TEXT_CONTENT_CHANGE

```
public static final int TEXT_CONTENT_CHANGE
```

A constant for use with the hinting mechanism (see the `widgetChanged(HVisible, HChangeData[])` method in `HLook`). This hint indicates that the text content has changed. The value for this hint is an array, `java.lang.Object[9]`, which contains the state for which the content changed (a `java.lang.Integer`) and the old content (a `java.lang.String`) for all 8 states.

TEXT_VALUE_CHANGE

```
public static final int TEXT_VALUE_CHANGE
```

A constant for use with the hinting mechanism (see the `widgetChanged(HVisible, HChangeData[])` method in `HLook`). This hint indicates that the value of an `HTextValue` component has changed. The value for this hint is a `java.lang.Integer` which contains the old value.

THUMB_OFFSETS_CHANGE

```
public static final int THUMB_OFFSETS_CHANGE
```

A constant for use with the hinting mechanism (see the `widgetChanged(HVisible, HChangeData[])` method in `HLook`). This hint indicates that the thumb offsets of an `HAdjustmentValue` component have changed. The value for this hint is an array, `java.lang.Object[2]`, which contains the old minimum and maximum thumb offsets as `java.lang.Integer`.

UNKNOWN_CHANGE

```
public static final int UNKNOWN_CHANGE
```

A constant for use with the hinting mechanism (see the `widgetChanged(HVisible, HChangeData[])` method in `HLook`). This hint indicates that some unspecified change has occurred. The value for this hint is a `java.lang.Integer` which also has the value UNKNOWN_CHANGE.

VALIGN_BOTTOM

```
public static final int VALIGN_BOTTOM
```

A constant for use with the `setVerticalAlignment(int)` method of `HVisible` which indicates that content should be vertically aligned to the bottom of the component.

VALIGN_CENTER

```
public static final int VALIGN_CENTER
```

A constant for use with the `setVerticalAlignment(int)` method of `HVisible` which indicates that content should be centered vertically.

VALIGN_JUSTIFY

```
public static final int VALIGN_JUSTIFY
```

A constant for use with the `setVerticalAlignment(int)` method of `HVisible` which indicates that content should be fully justified (vertically).

VALIGN_TOP

```
public static final int VALIGN_TOP
```

A constant for use with the `setVerticalAlignment(int)` method of `HVisible` which indicates that content should be vertically aligned to the top of the component.

Constructors

HVisible()

```
public HVisible()
```

Creates an `HVisible` component with no `HLook`. See the class description for details of constructor parameters and default values.

HVisible(HLook)

```
public HVisible(HLook hlook)
```

Creates an `HVisible` component with the given `HLook`. See the class description for details of constructor parameters and default values.

Parameters:

`hlook` - The `HLook` associated with the `HVisible` component.

HVisible(HLook, int, int, int, int)

```
public HVisible(HLook hlook, int x, int y, int width, int height)
```

Creates an `HVisible` component with the given `HLook` and the specified location and size. See the class description for details of constructor parameters and default values.

Parameters:

`hlook` - The `HLook` associated with the `HVisible` component.

`x` - the x-coordinate of the `HVisible` component within its Container.

`y` - the y-coordinate of the `HVisible` component within its Container.

`width` - the width of the `HVisible` component in pixels.

`height` - the height of the `HVisible` component in pixels.

Methods

getAnimateContent(int)

```
public java.awt.Image[] getAnimateContent(int state)
```

Gets the animate content for this component.

Parameters:

`state` - The state for which content is to be retrieved. Note that content is set on the `XXX_STATE` constants defined in `HState`, and *not* on the `XXX_STATE_BIT` constants. A `java.lang.IllegalArgumentException` will be thrown if a `STATE_BIT` rather than a `STATE` is passed.

Returns:

The animate content associated with the specified state. If no animate content has been set for the specified state, then `null` is returned.

getBackgroundMode()

```
public int getBackgroundMode()
```

Get the background mode of this `HVisible`. The return value specifies how the look should draw the background (i.e. a rectangle filling the bounds of the `HVisible`).

Returns:

one of `NO_BACKGROUND_FILL` or `BACKGROUND_FILL`.

getContent(int)

```
public java.lang.Object getContent(int state)
```

Gets the content for this component.

Parameters:

`state` - The state for which content is to be retrieved. Note that content is set on the `XXX_STATE` constants defined in `HState` , and *not* on the `XXX_STATE_BIT` constants. A `java.lang.IllegalArgumentException` will be thrown if a `STATE_BIT` rather than a `STATE` is passed.

Returns:

The content associated with the specified state. If no content has been set for the specified state, then `null` is returned.

---

getDefaultSize()

```
public java.awt.Dimension getDefaultSize()
```

Returns the default preferred size to be used for this component when a layout manager is in use. If no default size has been set using the `setDefaultSize(Dimension)` method`NO_DEFAULT_SIZE` is returned.

If the parent Container into which the HVisible is placed has no layout manager the default preferred size has no effect.

The default size of a component is to be interpreted as the area in which the component can be rendered, *excluding* look-specific borders.

Returns:

the default preferred size to be used for this component when a layout manager is in use.

---

getGraphicContent(int)

```
public java.awt.Image getGraphicContent(int state)
```

Gets the graphic content for this component.

Parameters:

`state` - The state for which content is to be retrieved. Note that content is set on the `XXX_STATE` constants defined in `HState` , and *not* on the `XXX_STATE_BIT` constants. A `java.lang.IllegalArgumentException` will be thrown if a `STATE_BIT` rather than a `STATE` is passed.

Returns:

The graphical content associated with the specified state. If no graphical content has been set for the specified state, then `null` is returned.

---

getHorizontalAlignment()

```
public int getHorizontalAlignment()
```

Get the horizontal alignment of any state-based content rendered by an associated `HLook` . If content is not used in the rendering of this HVisible the value returned shall be valid, but has no affect on the rendered representation.

Returns:

the current horizontal alignment mode, one of `HALIGN_LEFT` , `HALIGN_CENTER` , `HALIGN_RIGHT` or `HALIGN_JUSTIFY` .

---

getInteractionState()

```
public int getInteractionState()
```

Return the interaction state the component is currently in.

Returns:
the interaction state the component is currently in.

See Also:
HState

---

getLook()

```
public HLook getLook()
```

Gets the HLook for this component.

Returns:
the HLook that is being used by this component - if no HLook has been set, then returns null.

---

getLookData(Object)

```
public java.lang.Object getLookData(java.lang.Object key)
```

Retrieve a look-specific private data object. Instances of HLook may use this method to retrieve private data (e.g. layout hints, cached images etc.) from the HVisible. Use of this mechanism is an implementation option. If this mechanism is not used by an implementation, or no data has been set for the specified key this method returns null.

Parameters:
key - an object which uniquely identifies the type of look for which the private data is to be retrieved. Keys need not be unique across different instances of the same look class.

Returns:
a private data object as previously set using setLookData(Object, Object) , or null.

See Also:
HLook, setLookData(Object, Object)

---

getMaximumSize()

```
public java.awt.Dimension getMaximumSize()
```

Gets the maximum size of the HVisible . The getMaximumSize method of the HLook that is associated with this HVisible will be called to calculate the dimensions.

Overrides:
java.awt.Component.getMaximumSize() in class java.awt.Component

Returns:
A dimension object indicating this HVisible 's maximum size - if no HLook has been associated with the HVisible , then the current HVisible dimensions as determined with getSize will be returned.

See Also:
getMaximumSize(HVisible)

---

getMinimumSize()

```
public java.awt.Dimension getMinimumSize()
```

Gets the minimum size of the HVisible . The getMinimumSize method of the HLook that is associated with this HVisible will be called to calculate the dimensions.

Overrides:
java.awt.Component.getMinimumSize() in class java.awt.Component

Returns:
A dimension object indicating this HVisible 's minimum size - if no HLook has been associated with the HVisible , then the current HVisible dimensions as determined with getSize will be returned.

See Also:
getMinimumSize(HVisible)

---

getPreferredSize()

```
public java.awt.Dimension getPreferredSize()
```

Gets the preferred size of the HVisible . The getPreferredSize method of the HLook that is associated with this HVisible will be called to calculate the dimensions.

Overrides:
java.awt.Component.getPreferredSize() in class java.awt.Component

Returns:
A dimension object indicating this HVisible 's preferred size - if no HLook has been associated with the HVisible , then the current HVisible dimensions as determined with getSize will be returned.

See Also:
getPreferredSize(HVisible)

---

getResizeMode()

```
public int getResizeMode()
```

Get the scaling mode for scaling any state-based content rendered by an associated HLook . If content is not used in the rendering of this HVisible the value returned shall be valid, but has no affect on the rendered representation.

Returns:
the current scaling mode, one of RESIZE_NONE , RESIZE_PRESERVE_ASPECT or RESIZE_ARBITRARY

---

getTextContent(int)

```
public java.lang.String getTextContent(int state)
```

Gets the text content for this component.

Parameters:
state - The state for which content is to be retrieved. Note that content is set on the XXX_STATE constants defined in HState , and *not* on the XXX_STATE_BIT constants. A java.lang.IllegalArgumentException will be thrown if a STATE_BIT rather than a STATE is passed.

Returns:
The text content associated with the specified state. If no text content has been set for the specified state, then null is returned.

---

getTextLayoutManager()

```
public HTextLayoutManager getTextLayoutManager()
```

Gets the text layout manager that is being used to layout this text.

Returns:

The HTextLayoutManager that is being used by this component.

---

getVerticalAlignment()

```
public int getVerticalAlignment()
```

Get the vertical alignment of any state-based content rendered by an associated HLook . If content is not used in the rendering of this HVisible the value returned shall be valid, but has no affect on the rendered representation.

Returns:
the current vertical alignment mode, one of VALIGN_TOP , VALIGN_CENTER , VALIGN_BOTTOM or VALIGN_JUSTIFY .

---

isFocusTraversable()

```
public boolean isFocusTraversable()
```

By default an HVisible component is not focus-traversable.

Overrides:
java.awt.Component.isFocusTraversable() in class java.awt.Component

Returns:
false

See Also:
java.awt.Component.isFocusTraversable()

---

isOpaque()

```
public boolean isOpaque()
```

Returns true if the entire HVisible area, as given by the java.awt.Component#getBounds method, is fully opaque, i.e. its HLook guarantees that all pixels are painted in an opaque Color.

This method will call the isOpaque(HVisible) method of an associated HLook if one is set. If no HLook is associated this method returns false.

The default return value is implementation specific and depends on the background painting mode of the given HVisible . The consequences of an invalid overridden value are implementation specific.

Specified By:
isOpaque() in interface TestOpacity

Overrides:
isOpaque() in class HComponent

Returns:
true if all the pixels with the java.awt.Component#getBounds method are fully opaque, i.e. its associated HLook guarantees that all pixels are painted in an opaque Color.

---

paint(Graphics)

```
public void paint(java.awt.Graphics g)
```

Draws the current state of the component, by calling the showLook(Graphics, HVisible, int) method of the associated HLook . If no HLook is associated with the component, (i.e. the HVisible was created with a null HLook or the look has been set to null using setLook(HLook)) then the paint method should do nothing. This mechanism may be used for components that wish to extend HVisible , and override the paint method, without supporting the HLook interface.

Overrides:
java.awt.Component.paint(java.awt.Graphics) in class java.awt.Component

Parameters:
`g` - the graphics context to use for painting.

---

setAnimateContent(Image[], int)

```
public void setAnimateContent(java.awt.Image[] imageArray, int state)
```

Sets an array of graphical content (primarily used for animation), per state. Different (single arrays of) content can be associated with the different states of a component.

Note that the content is not copied, merely its object reference.

If the `HVisible` has an associated `HLook`, then it should repaint itself.

Parameters:
`imageArray` - An array of images that make up the animation. If the array is null, then any currently assigned content shall be removed for the specified state.

`state` - The state of the component for which this content should be displayed. Note that content is set on the `XXX_STATE` constants defined in `HState`, and *not* on the `XXX_STATE_BIT` constants. A `java.lang.IllegalArgumentException` will be thrown if a `STATE_BIT` rather than a `STATE` is passed.

---

setBackgroundMode(int)

```
public void setBackgroundMode(int mode)
```

Set the background drawing mode. The value specifies how the look should draw the background (i.e. a rectangle filling the bounds of the `HVisible`).

Parameters:
`mode` - one of `NO_BACKGROUND_FILL` or `BACKGROUND_FILL`

---

setContent(Object, int)

```
public void setContent(java.lang.Object object, int state)
```

Sets a single piece of content for this component, per state. Different (single pieces of) content can be associated with the different states of a component.

Note that the content is not copied, merely its object reference.

If the `HVisible` has an associated `HLook`, then it should repaint itself.

Parameters:
`object` - The content. If the content is null, then any currently assigned content shall be removed for the specified state.

`state` - The state of the component for which this content should be displayed. Note that content is set on the `XXX_STATE` constants defined in `HState`, and *not* on the `XXX_STATE_BIT` constants. A `java.lang.IllegalArgumentException` will be thrown if a `STATE_BIT` rather than a `STATE` is passed.

---

setDefaultSize(Dimension)

```
public void setDefaultSize(java.awt.Dimension defaultSize)
```

Set the preferred default size for this component when a layout manager is in use. If the parent Container into which the HVisible is placed has no layout manager this method has no effect.

Note that the size set with this method is not a *guaranteed* size; if set it will be passed to the layout manager through the `getPreferredSize(HVisible)` method. The default size of a component is to be interpreted as the area in which the component can be rendered, *excluding* look-specific borders.

Valid arguments include `NO_DEFAULT_SIZE`, and Dimensions containing `NO_DEFAULT_WIDTH` or`NO_DEFAULT_HEIGHT`

Parameters:

`defaultSize` - specifies the default preferred size. If this parameter is null a `java.lang.NullPointerException` will be thrown.

If this parameter or specifies a size smaller than an implementation-defined minimum size a `java.lang.IllegalArgumentException` will be thrown.

---

setGraphicContent(Image, int)

```
public void setGraphicContent(java.awt.Image image, int state)
```

Sets a single piece of graphical content for this component, per state. Different (single pieces of) content can be associated with the different states of a component.

Note that the content is not copied, merely its object reference.

If the `HVisible` has an associated `HLook`, then it should repaint itself.

Parameters:

`image` - The content. If the content is null, then any currently assigned content shall be removed for the specified state.

`state` - The state of the component for which this content should be displayed. Note that content is set on the `XXX_STATE` constants defined in `HState`, and *not* on the `XXX_STATE_BIT` constants. A `java.lang.IllegalArgumentException` will be thrown if a `STATE_BIT` rather than a `STATE` is passed.

---

setHorizontalAlignment(int)

```
public void setHorizontalAlignment(int halign)
```

Set the horizontal alignment of any state-based content rendered by an associated `HLook`. If content is not used in the rendering of this HVisible calls to this method shall change the current alignment mode, but this will not affect the rendered representation.

Parameters:

`halign` - the new horizontal alignment mode, one of `HALIGN_LEFT`, `HALIGN_CENTER`, `HALIGN_RIGHT` or `HALIGN_JUSTIFY`.

---

setInteractionState(int)

```
protected void setInteractionState(int state)
```

Set the interaction state for this component. This method is provided for the use by subclasses of `HVisible` to change the interaction state of the `HVisible`. Subclasses *MUST NOT* manipulate the state by any other mechanism.

Attempts to set states which are not valid for the subclass will cause an `java.lang.IllegalArgumentException` to be thrown. See the class descriptions of each component for the definitions of which states are valid.

Parameters:

`state` - the interaction state for this component. A `java.lang.IllegalArgumentException` will be thrown if a `STATE_BIT` rather than a `STATE` is passed.

See Also:

`HState`

---

setLook(HLook)

```
public void setLook(HLook hlook)
```

Sets the `HLook` for this component.

Parameters:

`hlook` - The `HLook` that is to be used for this component. Note that this parameter may be null, in which case the component will not draw itself until a look is set.

Throws:

`HInvalidLookException` - If the Look is not compatible with this type of component, for example a graphic look being set on a text component, an HInvalidLookException is thrown. Note that HVisible itself will never throw this exception, but it may be thrown by a subclass which has overridden this method.

---

setLookData(Object, Object)

```
public void setLookData(java.lang.Object key, java.lang.Object data)
```

Set a look-specific private data object. Instances of `HLook` may use this method to set private data (e.g. layout hints, cached images etc.) on the HVisible. Use of this mechanism is an implementation option. If this mechanism is not used by an implementation, this method will have no effect and calls to `getLookData(Object)` shall return `null`.

Parameters:

`key` - an object which uniquely identifies the type of look for which the private data is to be retrieved. Keys need not be unique across different instances of the same look class.

`data` - a private data object, or null to remove any current object set on this HVisible.

See Also:

`HLook`, `getLookData(Object)`

---

setResizeMode(int)

```
public void setResizeMode(int resize)
```

Set the scaling mode for scaling any state-based content rendered by an associated `HLook`. If content is not used in the rendering of this HVisible calls to this method shall change the current alignment mode, but this will not affect the rendered representation.

Parameters:

`resize` - the new scaling mode, one of `RESIZE_NONE`, `RESIZE_PRESERVE_ASPECT` or `RESIZE_ARBITRARY`

---

setTextContent(String, int)

```
public void setTextContent(java.lang.String string, int state)
```

Sets a single piece of text content for this component, per state. Different (single pieces of) content can be associated with the different states of a component. Note that unlike `setGraphicContent(Image, int)`, `setAnimateContent(Image[], int)` and

setContent(Object, int) , the content is copied as it is not possible to store a reference to a java.lang.String.

If the HVisible has an associated HLook , then it should repaint itself.

Parameters:

string - The content. If the content is null, then any currently assigned content shall be removed for the specified state.

state - The state of the component for which this content should be displayed. Note that content is set on the XXX_STATE constants defined in HState , and *not* on the XXX_STATE_BIT constants. A java.lang.IllegalArgumentException will be thrown if a STATE_BIT rather than a STATE is passed.

---

setTextLayoutManager(HTextLayoutManager)

```
public void setTextLayoutManager(HTextLayoutManager manager)
```

Sets the text layout manager that should be used to layout the text for this component.

Parameters:

manager - the HTextLayoutManager to be used by this component.

---

setVerticalAlignment(int)

```
public void setVerticalAlignment(int valign)
```

Set the vertical alignment of any state-based content rendered by an associated HLook . If content is not used in the rendering of this HVisible calls to this method shall change the current alignment mode, but this will not affect the rendered representation.

Parameters:

valign - the new vertical alignment mode, one of VALIGN_TOP , VALIGN_CENTER , VALIGN_BOTTOM or VALIGN_JUSTIFY .

---

update(Graphics)

```
public void update(java.awt.Graphics g)
```

The update() method in HVisible overrides that in Component and does not clear the background of the component, it simply modifies the current Color of the Graphics object to match that of the components background Color, and calls the paint() method.

Overrides:

java.awt.Component.update(java.awt.Graphics) in class java.awt.Component

Parameters:

g - the graphics context to use for updating.

Package org.havi.ui.event

Class Summary

Interfaces

HActionListener	The HActionListener interface enables the reception of HActionEvent events, as generated by objects implementing HActionable .
HAdjustmentListener	The HAdjustmentListener interface enables the reception of HAdjustmentEvent , as generated by objects implementing HAdjustmentValue .
HBackgroundImageListener	The listener interface for receiving events related to HBackgroundImage objects.
HFocusListener	The HFocusListener interface enables the reception of HFocusEvent events, as generated by objects implementing HNavigable .
HItemListener	The HItemListener interface enables the reception of HItemEvent , as generated by objects implementing HItemValue .
HKeyListener	The HKeyListener interface enables the reception of HKeyEvent events.
HScreenConfigurationListener	This listener is used to monitor when the configuration of an HScreenDevice is modified.
HScreenLocationModifiedListener	This listener is used to monitor when a component, such as an HVideoComponent on-screen location is modified.
HTextListener	The HTextListener interface enables the reception of HTextEvent , as generated by objects implementing HTextValue .

Classes

HActionEvent	An HActionEvent event is used to interact with a component implementing the HActionInputPreferred interface as follows:
HAdjustmentEvent	An HAdjustmentEvent event is used to interact with a component implementing the HAdjustmentValue interface as follows:
HBackgroundImageEvent	This event informs an application that a loading operation for an HBackgroundImage has finished.
HEventRepresentation	This class is able to describe the representation of an event generator as a string, color or symbol (such as a triangle, '>', for 'play').
HFocusEvent	An HFocusEvent event is used to interact with a component implementing the HNavigationInputPreferred interface as follows:
HItemEvent	An HItemEvent event is used to interact with a component implementing the HSelectionInputPreferred interface as follows:
HKeyCapabilities	This class is used to describe the (basic) keyboard capabilities of the platform.
HKeyEvent	An HKeyEvent event is used to interact with a component implementing the HKeyboardInputPreferred interface as follows:
HMouseCapabilities	This class is used to describe the (basic) mouse capabilities of the platform.
HRcCapabilities	This class is used to describe the (basic) remote control capabilities of the platform.
HRcEvent	The remote control event class.

Class Summary	
HScreenConfiguration-Event	This event is sent to all registered HScreenConfigurationListener when an HScreenDevice modifies its configuration.
HScreenDeviceRe-leasedEvent	This event informs an application that a device for this HScreen has been released by an application or other entity in the system.
HScreenDeviceRe-servedEvent	This event informs that a device on this HScreen has been reserved by an application or other entity in the system.
HScreenLocationModi-fiedEvent	This event is generated by the system when a component is moved on-screen, rather than within a container.
HTextEvent	An HTextEvent event is used to interact with a component implementing the HKeyboardInputPreferred interface as follows:

org.havi.ui.event
HActionEvent

Syntax
```
public class HActionEvent extends java.awt.event.ActionEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--java.awt.AWTEvent
              |
              +--java.awt.event.ActionEvent
                    |
                    +--org.havi.ui.event.HActionEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
An `HActionEvent` event is used to interact with a component implementing the `HActionInputPreferred` interface as follows:

- An `HActionEvent` event may be sent from the HAVi system to the component to cause the component to become actioned.
- An `HActionEvent` event is sent from the component to all registered `HActionListener` whenever the component is actioned.

All interoperable HAVi components which expect to receive `HActionEvent` events must implement the `HActionInputPreferred` interface.

Constructors

HActionEvent(HActionable, int, String)

```
public HActionEvent(HActionable source, int id, java.lang.String command)
```

Constructs an `HActionEvent` .

Parameters:

`source` - The `HActionable` component which has been actioned.

`id` - The event id of the `HActionEvent` generated by the `HActionable` component. This is the value that will be returned by the event object's `getID` method.

`command` - A String which is used as the action command string for this event.

Methods

---

getActionCommand()

```
public java.lang.String getActionCommand()
```

Retrieve the action command string associated with this event.

Overrides:
java.awt.event.ActionEvent.getActionCommand() in class java.awt.event.ActionEvent

Returns:
the String which was used as the action command string when this event was constructed.

---

getModifiers()

```
public int getModifiers()
```

Returns any modifiers held down during this action event.

Modifiers are not used with the HAVi platform. Interoperable HAVi applications shall not use the return value of this method.

Overrides:
java.awt.event.ActionEvent.getModifiers() in class java.awt.event.ActionEvent

Returns:
an implementation-specific value.

org.havi.ui.event
HActionListener

Syntax
```
public interface HActionListener extends java.awt.event.ActionListener
```

All Superinterfaces:
java.awt.event.ActionListener, java.util.EventListener

All Known Implementing Classes:
HEventMulticaster

Description
The HActionListener interface enables the reception of HActionEvent events, as generated by objects implementing HActionable . The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

org.havi.ui.event
HAdjustmentEvent

Syntax
```
public class HAdjustmentEvent extends java.awt.AWTEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--java.awt.AWTEvent
              |
              +--org.havi.ui.event.HAdjustmentEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
An `HAdjustmentEvent` event is used to interact with a component implementing the `HAdjustmentValue` interface as follows:

- An `HAdjustmentEvent` event may be sent from the HAVi system to the component to cause a change to the value or editable mode of the component as a result of user interaction. For example, this event may be generated by a virtual keyboard user interface on a platform which lacks suitable adjustment keys.
- An `HAdjustmentEvent` event is sent from the component to all registered `HAdjustmentListener` when a change to the value or editable mode of the component occurs.

All interoperable HAVi components which expect to receive `HAdjustmentEvent` events should also implement the `HAdjustmentInputPreferred` interface. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

Fields

ADJUST_END_CHANGE
```
public static final int ADJUST_END_CHANGE
```
An adjustment event with this id indicates that the value of an `HAdjustmentValue` component has been finally set. This event is sent when the user causes the component to leave its editable mode. Note that it is a platform specific implementation option for such components to leave editable mode

automatically e.g. when they lose input focus. In such a case the order in which the HFocusEvent and HAdjustmentEvent are sent is platform specific.

See Also:
getAdjustMode()

ADJUST_FIRST

```
public static final int ADJUST_FIRST
```

The first integer id in the range of event ids supported by the HAdjustmentEvent class.

ADJUST_LAST

```
public static final int ADJUST_LAST
```

The last integer id in the range of event ids supported by the HAdjustmentEvent class.

ADJUST_LESS

```
public static final int ADJUST_LESS
```

An adjustment event with this id is sent whenever the value of an HAdjustmentValue component is decreased by one unit.

See Also:
setUnitIncrement(int), getUnitIncrement()

ADJUST_MORE

```
public static final int ADJUST_MORE
```

An adjustment event with this id is sent whenever the value of an HAdjustmentValue component is increased by one unit.

See Also:
setUnitIncrement(int), getUnitIncrement()

ADJUST_PAGE_LESS

```
public static final int ADJUST_PAGE_LESS
```

An adjustment event with this id is sent whenever the value of an HAdjustmentValue component is decreased by one block.

See Also:
setBlockIncrement(int), getBlockIncrement()

ADJUST_PAGE_MORE

```
public static final int ADJUST_PAGE_MORE
```

An adjustment change event with this id is sent whenever the value of an HAdjustmentValue component is increased by one block.

See Also:
setBlockIncrement(int), getBlockIncrement()

ADJUST_START_CHANGE

```
public static final int ADJUST_START_CHANGE
```

An adjustment event with this id indicates that the value of an `HAdjustmentValue` component may be about to change. This event is sent when the user causes the component to enter its editable mode. Note that it is a platform specific implementation option for such components to enter editable mode automatically e.g. when they receive input focus. In such a case the order in which the `HFocusEvent` and `HAdjustmentEvent` are sent is platform specific.

See Also:
`getAdjustMode()`

Constructors

HAdjustmentEvent(HAdjustmentValue, int)

```
public HAdjustmentEvent(HAdjustmentValue source, int id)
```

Constructs an `HAdjustmentEvent` .

Parameters:
`source` - The `HAdjustmentValue` component whose value has been modified.

`id` - The event id of the `HAdjustmentEvent` generated by the `HAdjustmentValue` component. This is the value that will be returned by the event object's `getID` method.

org.havi.ui.event
HAdjustmentListener

Syntax
```
public interface HAdjustmentListener extends java.util.EventListener
```

All Superinterfaces:
java.util.EventListener

All Known Implementing Classes:
HEventMulticaster

Description
The HAdjustmentListener interface enables the reception of HAdjustmentEvent , as generated by objects implementing HAdjustmentValue . The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

Methods

valueChanged(HAdjustmentEvent)

```
public void valueChanged(HAdjustmentEvent e)
```

Called when the value of the component has started to be changed, is changed, or has finished changing.

Parameters:
e - is the HAdjustmentEvent generated by the object implementing HAdjustmentValue .

org.havi.ui.event

HBackgroundImageEvent

Syntax

```
public class HBackgroundImageEvent extends java.util.EventObject

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--org.havi.ui.event.HBackgroundImageEvent
```

All Implemented Interfaces:

java.io.Serializable

Description

This event informs an application that a loading operation for an `HBackgroundImage` has finished. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

Fields

BACKGROUNDIMAGE_FILE_NOT_FOUND

```
public static final int BACKGROUNDIMAGE_FILE_NOT_FOUND
```

The loading failed before attempting to load any data from the file. e.g. the file not existing or due to a badly formed or otherwise broken filename

BACKGROUNDIMAGE_FIRST

```
public static final int BACKGROUNDIMAGE_FIRST
```

Marks the first integer for the range of background image events

BACKGROUNDIMAGE_INVALID

```
public static final int BACKGROUNDIMAGE_INVALID
```

The loading failed because the data loaded is not valid. e.g. not a supported coding format for background images.

BACKGROUNDIMAGE_IOERROR

```
public static final int BACKGROUNDIMAGE_IOERROR
```

The loading failed due to an error while loading the data. e.g. the file is not accessible or loading of it was interrupted

---

BACKGROUNDIMAGE_LAST

```
public static final int BACKGROUNDIMAGE_LAST
```

Marks the last integer for the range of background image events

---

BACKGROUNDIMAGE_LOADED

```
public static final int BACKGROUNDIMAGE_LOADED
```

The loading succeeded

Constructors

HBackgroundImageEvent(Object, int)

```
public HBackgroundImageEvent(java.lang.Object source, int id)
```

Constructs a new HBackgroundImageEvent .

Parameters:

source - the HBackgroundImage which has been loaded.

id - the type of event (one of BACKGROUNDIMAGE_LOADED , BACKGROUNDIMAGE_FILE_NOT_FOUND , BACKGROUNDIMAGE_IOERROR or BACKGROUNDIMAGE_INVALID).

Methods

---

getID()

```
public int getID()
```

Returns the type for this event.

Returns:

the event type (one of BACKGROUNDIMAGE_LOADED , BACKGROUNDIMAGE_FILE_NOT_FOUND , BACKGROUNDIMAGE_IOERROR or BACKGROUNDIMAGE_INVALID).

---

getSource()

```
public java.lang.Object getSource()
```

Returns the HBackgroundImage for which the data has been loaded.

Overrides:
java.util.EventObject.getSource() in class java.util.EventObject

Returns:
the object which has been loaded.

org.havi.ui.event
HBackgroundImageListener

Syntax
```
public interface HBackgroundImageListener extends java.util.EventListener
```

All Superinterfaces:
java.util.EventListener

All Known Implementing Classes:
HEventMulticaster

Description
The listener interface for receiving events related to HBackgroundImage objects.

Methods

---

imageLoaded(HBackgroundImageEvent)

```
public void imageLoaded(HBackgroundImageEvent e)
```

Invoked when the data for an HBackgroundImage has been loaded.

Parameters:
e - the event describing the loading

---

imageLoadFailed(HBackgroundImageEvent)

```
public void imageLoadFailed(HBackgroundImageEvent e)
```

Invoked when loading of an HBackgroundImage fails.

Parameters:
e - the event describing the failure

org.havi.ui.event
HEventRepresentation

Syntax

```
public class HEventRepresentation

java.lang.Object
  |
  +--org.havi.ui.event.HEventRepresentation
```

Description

This class is able to describe the representation of an event generator as a string, color or symbol (such as a triangle, '>', for 'play'). This allows an application to describe a button on an input device correctly for a given platform.

The particular text, color, or symbol can be determined by calling the `getString()`, `getColor()` or `getSymbol()` methods respectively. All available events should return a valid text representation from the `getString()` method.

If supported the six colored key events (`VK_COLORED_KEY_0` thru `VK_COLORED_KEY_5`) must also be represented by a color, i.e. the `getColor()` method must return a valid `java.awt.Color` object.

Key events may also be represented as a symbol - if the platform does not support a symbolic representation for a given event, then the application is responsible for rendering the symbol itself. The rendering of keys with a commonly known representation should follow the guidelines given here, as defined in the following table.

Event	Implied symbol	Sample
VK_GO_TO_START	Two equilateral triangles, pointing at a line to the left	
VK_REWIND	Two equilateral triangles, pointing to the left	
VK_STOP	A square	
VK_PAUSE	Two vertical lines, side by side	
VK_PLAY	One equilateral triangle, pointing to the right	

VK_FAST_FWD	Two equilateral triangles, pointing to the right 
VK_GO_TO_END	Two equilateral triangles, pointing to a line at the right 
VK_TRACK_PREV	One equilateral triangle, pointing to a line at the left 
VK_TRACK_NEXT	One equilateral triangle, pointing to a line at the right 
VK_RECORD	A circle, normally red 
VK_EJECT_TOGGLE	A line under a wide triangle which points up 
VK_VOLUME_UP	A ramp, increasing to the right, near a plus sign 
VK_VOLUME_DOWN	A ramp, increasing to the right, near a minus sign 
VK_UP	An arrow pointing up 
VK_DOWN	An arrow pointing down 
VK_LEFT	An arrow pointing to the left 

VK_RIGHT	An arrow pointing to the right 
VK_POWER	A circle, broken at the top, with a vertical line in the break 

The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

Fields

ER_TYPE_COLOR

```
public static final int ER_TYPE_COLOR
```

The event representation type for the current event is supported as a color.

See Also:
ER_TYPE_NOT_SUPPORTED

ER_TYPE_NOT_SUPPORTED

```
public static final int ER_TYPE_NOT_SUPPORTED
```

The event representation type for the current event is not supported.

The four ER_TYPE integers describe if an input mechanism is not supported, or is described by a string, color or symbol.

The values of the four ER_TYPE integers are required to be bitwise distinct, and the value of ER_TYPE_NOT_SUPPORTED should be 0.

See Also:
ER_TYPE_STRING, ER_TYPE_COLOR, ER_TYPE_SYMBOL

ER_TYPE_STRING

```
public static final int ER_TYPE_STRING
```

The event representation type for the current event is supported as a string.

See Also:
ER_TYPE_NOT_SUPPORTED

ER_TYPE_SYMBOL

```
public static final int ER_TYPE_SYMBOL
```

The event representation type for the current event is supported as a symbol.

See Also:
ER_TYPE_NOT_SUPPORTED

Constructors

HEventRepresentation()

```
protected HEventRepresentation()
```

It is not intended that applications should directly construct HEventRepresentation objects.

Creates an HEventRepresentation object. See the class description for details of constructor parameters and default values.

This method is protected to allow the platform to override it in a different package scope.

Methods

---

getColor()

```
public java.awt.Color getColor()
```

This returns the color representation (generally used for colored soft keys) of the current event code.

Returns:
The color representation of the current event code, or null if not available.

---

getString()

```
public java.lang.String getString()
```

Returns the text representation of the current event code.

Returns:
The text representation of the current event code, or null if not available.

---

getSymbol()

```
public java.awt.Image getSymbol()
```

This returns an image-based representation (generally used for symbolic keys) of the current event code.

Note that it is platform specific whether this method will return a valid Image, in particular it is a valid implementation option to always return null. Note that for non-null Images, the size and other Image characteristics are dependent on particular manufacturer implementation.

Returns:
The symbolic representation of the current event code, or null if not available.

---

getType()

```
public int getType()
```

This returns the type of representation(s) available for the event code which this instance of `HEventRepresentation` represents.

If the event code can be represented in multiple ways, then the returned type will be the sum of the supported types, e.g. an event generated by a key with a particular font representation of an "A" in yellow might return ER_TYPE_STRING + ER_TYPE_COLOR + ER_TYPE_SYMBOL. Where the string representation is "A", the color representation is "yellow" and the symbol representation might be a likeness of the "A glyph" from a particular font.

---

isSupported()

```
public boolean isSupported()
```

This method returns true if the current event is supported by the platform.

---

setColor(Color)

```
protected void setColor(java.awt.Color aColor)
```

Sets the Color representation for this `HEventRepresentation` . Any previous value is overwritten.

This method is protected to allow the platform to override it in subclasses of HEventRepresentation. It is not intended for use by the application and conformant applications shall not use this method.

Parameters:
`aColor` - - the color to be associated with this event.

---

setString(String)

```
protected void setString(java.lang.String aText)
```

Sets the string representation for this `HEventRepresentation` . Any previous value is overwritten.

This method is protected to allow the platform to override it in subclasses of HEventRepresentation. It is not intended for use by the application and conformant applications shall not use this method.

Parameters:
`aText` - - the text string to be associated with this event.

---

setSymbol(Image)

```
protected void setSymbol(java.awt.Image aSymbol)
```

Sets the symbolic representation for this `HEventRepresentation` . Any previous value is overwritten.

This method is protected to allow the platform to override it in subclasses of HEventRepresentation. It is not intended for use by the application and conformant applications shall not use this method.

Parameters:

`aSymbol` - - the symbol image to be associated with this event.

---

setType(int)

```
protected void setType(int aType)
```

Sets the type of representation(s) available for the event code which this this instance of `HEventRepresentation` represents. If no representation(s) are available then `aType` should be set to ER_TYPE_NOT_SUPPORTED. Otherwise the representation should be set to the sum of one or more of the following: ER_TYPE_STRING, ER_TYPE_COLOR, ER_TYPE_SYMBOL.

For example, if both string and color representations are available then the system should call this method with the parameter set to `ER_TYPE_STRING + ER_TYPE_COLOR`.

This method is protected to allow the platform to override it in subclasses of HEventRepresentation. It is not intended for use by the application and conformant applications shall not use this method.

Parameters:

`aType` - the type of representation(s) available for this event

org.havi.ui.event
HFocusEvent

Syntax

```
public class HFocusEvent extends java.awt.event.FocusEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--java.awt.AWTEvent
              |
              +--java.awt.event.ComponentEvent
                    |
                    +--java.awt.event.FocusEvent
                          |
                          +--org.havi.ui.event.HFocusEvent
```

All Implemented Interfaces:

java.io.Serializable

Description

An `HFocusEvent` event is used to interact with a component implementing the `HNavigationInputPreferred` interface as follows:

- An `HFocusEvent` event may be sent from the HAVi system to the component to inform the component that it has gained or lost the input focus, or that it should transfer focus to another component.
- An `HFocusEvent` event is sent from the component to all registered `HFocusListener` listeners whenever the component focus status changes or focus is transferred to another component.

Note that because the underlying focus mechanism is based on AWT, focus transfer events do not guarantee that another component will actually get focus, or that the current component will lose focus.

All interoperable HAVi components which expect to receive `HFocusEvent` events must implement the `HNavigationInputPreferred` interface.

Fields

FOCUS_TRANSFER

```
public static final int FOCUS_TRANSFER
```

An event id which indicates that the component should transfer focus to the component identified by the data returned from the `getTransferId()` method.

If a component matching the data cannot be found the component receiving this event should do nothing and not send an event to any registered `HFocusListener` listeners.

HFOCUS_FIRST

```
public static final int HFOCUS_FIRST
```

The first integer id in the range of event ids supported by the `HFocusEvent` class.

HFOCUS_LAST

```
public static final int HFOCUS_LAST
```

The last integer id in the range of event ids supported by the `HFocusEvent` class.

NO_TRANSFER_ID

```
public static final int NO_TRANSFER_ID
```

A constant returned from the `getTransferId()` method if the event id is not `FOCUS_TRANSFER`.

Constructors

HFocusEvent(Component, int)

```
public HFocusEvent(java.awt.Component source, int id)
```

Constructs an `HFocusEvent`.

Parameters:

`source` - The `java.awt.Component` component which originated this event.

`id` - The event id of the `HFocusEvent` generated by the `HNavigable` component. This is the value that will be returned by the event object's `getID` method.

HFocusEvent(Component, int, int)

```
public HFocusEvent(java.awt.Component source, int id, int transfer)
```

Constructs an `HFocusEvent`.

Parameters:

`source` - The `java.awt.Component` component which originated this event.

`id` - The event id of the `HFocusEvent` generated by the `HNavigable` component. This is the value that will be returned by the event object's `getID` method.

`transfer` - a key which maps to the component to transfer focus to, if the `id` parameter has the value `FOCUS_TRANSFER`. If the `id` parameter does not have this value `NO_TRANSFER_ID` is substituted for its value.

Methods

getTransferId()

```
public int getTransferId()
```

Returns a key which maps to the component to transfer focus to.

Returns:

a key which maps to the component to transfer focus to, or `NO_TRANSFER_ID` if the id of this event is not `FOCUS_TRANSFER`.

The return value of this function is used to pass key codes to an `HNavigable` to implement focus transfer for HAVi UI components.

isTemporary()

```
public boolean isTemporary()
```

Returns whether or not this focus change event is a temporary change.

Overrides:

java.awt.event.FocusEvent.isTemporary() in class java.awt.event.FocusEvent

Returns:

an implementation specific value. The HAVi UI does not use temporary focus events and interoperable applications shall not call this method.

org.havi.ui.event
HFocusListener

Syntax
```
public interface HFocusListener extends java.awt.event.FocusListener
```

All Superinterfaces:
java.util.EventListener, java.awt.event.FocusListener

All Known Implementing Classes:
HEventMulticaster

Description
The HFocusListener interface enables the reception of HFocusEvent events, as generated by objects implementing HNavigable . The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

org.havi.ui.event
HItemEvent

Syntax

```
public class HItemEvent extends java.awt.AWTEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--java.awt.AWTEvent
              |
              +--org.havi.ui.event.HItemEvent
```

All Implemented Interfaces:

java.io.Serializable

Description

An `HItemEvent` event is used to interact with a component implementing the `HSelectionInputPreferred` interface as follows:

- An `HItemEvent` event may be sent from the HAVi system to the component to change the state of the component, and the selection set held by the component.
- An `HItemEvent` event is sent from the component to all registered `HItemListener` when a change to the component state or selection set occurs.

The `HItemEvent` event class therefore provides support for selecting and clearing individual elements, selecting or clearing all elements and managing the currently focused element, i.e. the item whose selection state is toggled by some user interaction.

All interoperable HAVi components which expect to receive `HItemEvent` events should implement the `HSelectionInputPreferred` interface.

See Also:

`HListGroup`

Fields

ITEM_CLEARED

```
public static final int ITEM_CLEARED
```

An item event with this id is sent from the component whenever an item is removed from the selection set of an `HItemValue` component. Note that events of this type are silently ignored if they are sent to the component.

ITEM_END_CHANGE

```
public static final int ITEM_END_CHANGE
```

An item event with this id indicates that the selection of an `HItemValue` component has been finally set. This event is sent to or from the component when the user causes the component to leave selection mode. Note that it is a platform specific implementation option for such components to

leave selection mode automatically e.g. when they lose input focus. In such a case the order in which the `HFocusEvent` and `HItemEvent` are sent is platform specific.

See Also:
`getSelectionMode()`

ITEM_FIRST

```
public static final int ITEM_FIRST
```

The first integer id in the range of event ids supported by the `HItemEvent` class.

ITEM_LAST

```
public static final int ITEM_LAST
```

The last integer id in the range of event ids supported by the `HItemEvent` class.

ITEM_SELECTED

```
public static final int ITEM_SELECTED
```

An item event with this id is sent from the component whenever an item is added to the selection set of an `HItemValue` component. Note that events of this type are silently ignored if they are sent to the component.

ITEM_SELECTION_CLEARED

```
public static final int ITEM_SELECTION_CLEARED
```

An item event with this id is sent to or from the component whenever the entire selection set of an `HItemValue` component is removed.

ITEM_SET_CURRENT

```
public static final int ITEM_SET_CURRENT
```

An item event with this id is sent to or from the component whenever the current item of an `HItemValue` component changes.

ITEM_SET_NEXT

```
public static final int ITEM_SET_NEXT
```

An item event with this id is sent to or from the component whenever the current item of an `HItemValue` component changes to the next item in the group.

ITEM_SET_PREVIOUS

```
public static final int ITEM_SET_PREVIOUS
```

An item event with this id is sent to or from the component whenever the current item of an `HItemValue` component changes to the previous item in the group.

ITEM_START_CHANGE

```
public static final int ITEM_START_CHANGE
```

An item event with this id indicates that the selection of an HItemValue component may be about to change. This event is sent to or from the component when the user causes the component to enter selection mode. Note that it is a platform specific implementation option for such components to enter selection mode automatically e.g. when they receive input focus. In such a case the order in which the HFocusEvent and HItemEvent are sent is platform specific.

See Also:
getSelectionMode()

ITEM_TOGGLE_SELECTED

```
public static final int ITEM_TOGGLE_SELECTED
```

An item event with this id may be sent to an HItemValue component to toggle the selection state of the currently focused item. Note that events of this type are never sent to listeners from the component; instead an event of type ITEM_SELECTED or ITEM_CLEARED is sent in response to an event with this id, depending on the new state of the currently focused item.

Constructors

HItemEvent(HItemValue, int, Object)

```
public HItemEvent(HItemValue source, int id, java.lang.Object item)
```

Constructs an HItemEvent .

Parameters:

source - The HItemValue component whose value or current item has been modified.

id - The event id of the HItemEvent generated by the HItemValue component. This is the value that will be returned by the event object's getID method.

item - The item which caused the change, or null if this information is not available. This information shall be provided if the event id is one of ITEM_SELECTED or ITEM_CLEARED .

Methods

---

getItem()

```
public java.lang.Object getItem()
```

Retrieve the item which caused this HItemEvent . This information is not available for the ITEM_SELECTION_CLEARED event id.

Returns:

the item which was selected or cleared, or became the current item, or null if this information is not available for this event.

org.havi.ui.event
HItemListener

Syntax
```
public interface HItemListener extends java.util.EventListener
```

All Superinterfaces:
java.util.EventListener

All Known Implementing Classes:
HEventMulticaster

Description
The HItemListener interface enables the reception of HItemEvent, as generated by objects implementing HItemValue. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

Methods

currentItemChanged(HItemEvent)

```
public void currentItemChanged(HItemEvent e)
```

Called when a change to the current item of the HItemValue occurs.

Parameters:
e - is the HItemEvent generated by the object implementing HItemValue.

selectionChanged(HItemEvent)

```
public void selectionChanged(HItemEvent e)
```

Called when a change to the set of selected items held by the HItemValue occurs.

Parameters:
e - is the HItemEvent generated by the object implementing HItemValue.

org.havi.ui.event
HKeyCapabilities

Syntax
```
public class HKeyCapabilities

java.lang.Object
  |
  +--org.havi.ui.event.HKeyCapabilities
```

Direct Known Subclasses:
HRcCapabilities

Description
This class is used to describe the (basic) keyboard capabilities of the platform.

This class is not intended to be constructed by applications. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

Constructors

HKeyCapabilities()
```
protected HKeyCapabilities()
```
It is not intended that applications should directly construct HKeyCapabilities objects.

Creates an HKeyCapabilities object. See the class description for details of constructor parameters and default values.

This method is protected to allow the platform to override it in a different package scope.

Methods

getInputDeviceSupported()
```
public static boolean getInputDeviceSupported()
```

Determine if keyboard input functionality exists in the system. Note that this functionality may be provided through a "virtual" keyboard.

Returns:
true if keyboard input functionality exists in the system, false otherwise.

See Also:
`getInputDeviceSupported()`

---

isSupported(int)

```
public static boolean isSupported(int keycode)
```

Queries whether the system keyboard can generate an event of the given type. Note that this method does not distinguish between key codes which can only be generated via a virtual keyboard and key codes generated as a result of "real" key presses.

Parameters:
`keycode` - the keycode to query e.g. `VK_SPACE`

Returns:
true if events with the given key code can (ever) be generated on this system, false otherwise.

See Also:
`isSupported(int)`

org.havi.ui.event
HKeyEvent

Syntax

```
public class HKeyEvent extends java.awt.event.KeyEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--java.awt.AWTEvent
              |
              +--java.awt.event.ComponentEvent
                    |
                    +--java.awt.event.InputEvent
                          |
                          +--java.awt.event.KeyEvent
                                |
                                +--org.havi.ui.event.HKeyEvent
```

Direct Known Subclasses:

HRcEvent

All Implemented Interfaces:

java.io.Serializable

Description

An HKeyEvent event is used to interact with a component implementing the HKeyboardInputPreferred interface as follows:

- An HKeyEvent event may be sent from the HAVi system to inform the component about key-input. The source of the input may be either a real or a virtual keyboard.
- An HKeyEvent event is sent from the component to all registered HKeyListener whenever the component received input.

Note that the HAVi system should only generate KEY_PRESSED events. Neither KEY_TYPED nor KEY_RELEASED events should be generated. Furthermore, the system should collapse combined events. For example, a usual Java Virtual Machine generates for the letter A three events: KEY_PRESSED for modifier key Shift, KEY_PRESSED for letter 'A' and KEY_TYPED for 'A'. This should be collapsed into one single KEY_PRESSED event with the letter 'A' and the Shift modifier set. This is to simplify the key event handling of applications.

All interoperable HAVi components which expect to receive HKeyEvent events must either implement the HKeyboardInputPreferred interface or subclass components providing the processHKeyEvent(HKeyEvent) method. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method

None.

See Also:

processHKeyEvent(HKeyEvent)

Constructors

HKeyEvent(Component, int, long, int, int)

```
public HKeyEvent(java.awt.Component source, int id, long when, int modifiers, int keyCode)
```

Deprecated.
See explanation in java.awt.event.KeyEvent.

Constructs an HKeyEvent object with the specified source component, type, modifiers and key.

Parameters:

source - the object where the event originated.

id - the identifier.

when - the time stamp for this event.

modifiers - indication of any modification keys that are active for this event.

keyCode - the code of the key associated with this event.

HKeyEvent(Component, int, long, int, int, char)

```
public HKeyEvent(java.awt.Component source, int id, long when, int modifiers, int keyCode,
            char keyChar)
```

Constructs an HKeyEvent object with the specified source component, type, modifiers and key.

Parameters:

source - the object where the event originated.

id - the identifier.

when - the time stamp for this event.

modifiers - indication of any modification keys that are active for this event.

keyCode - the code of the key associated with this event.

keyChar - the character representation of the key associated with this event.

org.havi.ui.event
HKeyListener

Syntax
```
public interface HKeyListener extends java.awt.event.KeyListener
```

All Superinterfaces:
java.util.EventListener, java.awt.event.KeyListener

All Known Implementing Classes:
`HEventMulticaster`

Description
The `HKeyListener` interface enables the reception of `HKeyEvent` events.

Note that HAVi compliant systems should never call the methods `keyReleased(KeyEvent)` and `keyTyped(KeyEvent)` of the superinterface on an `HKeyListener`. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

org.havi.ui.event
HMouseCapabilities

Syntax

```
public class HMouseCapabilities

java.lang.Object
  |
  +--org.havi.ui.event.HMouseCapabilities
```

Description

This class is used to describe the (basic) mouse capabilities of the platform.

This class is not intended to be constructed by applications. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

Constructors

HMouseCapabilities()

```
protected HMouseCapabilities()
```

It is not intended that applications should directly construct `HMouseCapabilities` objects.

Creates an `HMouseCapabilities` object. See the class description for details of constructor parameters and default values.

This method is protected to allow the platform to override it in a different package scope.

Methods

getInputDeviceSupported()

```
public static boolean getInputDeviceSupported()
```

Determine if a mouse exists in the system.

Returns:
true if a mouse exists in the system, false otherwise.

org.havi.ui.event
HRcCapabilities

Syntax

```
public class HRcCapabilities extends HKeyCapabilities

java.lang.Object
  |
  +--HKeyCapabilities
        |
        +--org.havi.ui.event.HRcCapabilities
```

Description

This class is used to describe the (basic) remote control capabilities of the platform.

This class is not intended to be constructed by applications. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

Constructors

HRcCapabilities()

```
protected HRcCapabilities()
```

It is not intended that applications should directly construct `HRcCapabilities` objects.

Creates an `HRcCapabilities` object. See the class description for details of constructor parameters and default values.

This method is protected to allow the platform to override it in a different package scope.

Methods

getInputDeviceSupported()

```
public static boolean getInputDeviceSupported()
```

Determine if a physical remote control exists in the system.

Returns:
true if a physical remote control exists in the system, false otherwise.

See Also:
`getInputDeviceSupported()`

---

getRepresentation(int)

```
public static HEventRepresentation getRepresentation(int aCode)
```

Get the `HEventRepresentation` object for a specified key event id.

Parameters:
`aCode` - the key event id for which the `HEventRepresentation` should be returned.

Returns:
an `HEventRepresentation` object for the specified key event id, or null if there is no valid representation available.

---

isSupported(int)

```
public static boolean isSupported(int keycode)
```

Queries whether the remote control can directly generate an event of the given type. Note that this method will return false for key codes which can only be generated on this system via a virtual keyboard.

Parameters:
`keycode` - the keycode to query e.g. `VK_SPACE`

Returns:
true if events with the given key code can be directly generated on this system via a physical remote control, false otherwise.

See Also:
`isSupported(int)`

org.havi.ui.event
HRcEvent

Syntax

```
public class HRcEvent extends HKeyEvent
```

```
java.lang.Object
  |
  +--java.util.EventObject
        |
        +--java.awt.AWTEvent
              |
              +--java.awt.event.ComponentEvent
                    |
                    +--java.awt.event.InputEvent
                          |
                          +--java.awt.event.KeyEvent
                                |
                                +--HKeyEvent
                                      |
                                      +--org.havi.ui.event.HRcEvent
```

All Implemented Interfaces:

java.io.Serializable

Description

The remote control event class.

The presence or absence of these keys and their desired representation is provided by the `HRcCapabilities` class.

Note that it is an implementation option if remote control key events are repeated.

Instances of `HRcEvent` are reported through the normal `java.awt` event mechanism Note that the reception of these events by a `java.awt.Component` is dependent on it having `java.awt.event.KeyEvent` events enabled.

Note that it is an implementation constraint that the `HRcEvent` event range should not intersect with the Java AWT key event range. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

Fields

RC_FIRST

```
public static final int RC_FIRST
```

Marks the first integer id for the range of remote control event ids.

RC_LAST

```
public static final int RC_LAST
```

Marks the last integer id for the range of remote control event ids.

VK_BALANCE_LEFT

```
public static final int VK_BALANCE_LEFT
```

The 'balance left' action id - moves the audio balance to the left.

VK_BALANCE_RIGHT

```
public static final int VK_BALANCE_RIGHT
```

The 'balance right' action id - moves the audio balance to the right.

VK_BASS_BOOST_DOWN

```
public static final int VK_BASS_BOOST_DOWN
```

The 'bass boost down' action id - decreases the audio amplifier bass boost.

VK_BASS_BOOST_UP

```
public static final int VK_BASS_BOOST_UP
```

The 'bass boost up' action id - increases the audio amplifier bass boost.

VK_CHANNEL_DOWN

```
public static final int VK_CHANNEL_DOWN
```

The 'channel down' action id.

VK_CHANNEL_UP

```
public static final int VK_CHANNEL_UP
```

The 'channel up' action id.

VK_CLEAR_FAVORITE_0

```
public static final int VK_CLEAR_FAVORITE_0
```

The 'clear favorite 0' action id.

VK_CLEAR_FAVORITE_1

```
public static final int VK_CLEAR_FAVORITE_1
```

The 'clear favorite 1' action id.

VK_CLEAR_FAVORITE_2

```
public static final int VK_CLEAR_FAVORITE_2
```

The 'clear favorite 2' action id.

VK_CLEAR_FAVORITE_3

```
public static final int VK_CLEAR_FAVORITE_3
```

The 'clear favorite 3' action id.

VK_COLORED_KEY_0

```
public static final int VK_COLORED_KEY_0
```

Colored key 0 action id.

Up to six colored soft keys can be included on a remote control. These are optional, and must be identified with a color. If implemented, these keys are to be oriented from left to right, or from top to bottom in ascending order.

The application can determine how many colored keys are implemented, and what colors are to be used, so that the application can match the controls, by using the getRepresentation method in the HRcCapabilities class.

See Also:

VK_COLORED_KEY_1, VK_COLORED_KEY_2, VK_COLORED_KEY_3, VK_COLORED_KEY_4, VK_COLORED_KEY_5

VK_COLORED_KEY_1

```
public static final int VK_COLORED_KEY_1
```

Colored key 1 action id.

See Also:

VK_COLORED_KEY_0

VK_COLORED_KEY_2

```
public static final int VK_COLORED_KEY_2
```

Colored key 2 action id.

See Also:

VK_COLORED_KEY_0

VK_COLORED_KEY_3

```
public static final int VK_COLORED_KEY_3
```

Colored key 3 action id.

See Also:

VK_COLORED_KEY_0

VK_COLORED_KEY_4

```
public static final int VK_COLORED_KEY_4
```

Colored key 4 action id.

See Also:
VK_COLORED_KEY_0

VK_COLORED_KEY_5

```
public static final int VK_COLORED_KEY_5
```

Colored key 5 action id.

See Also:
VK_COLORED_KEY_0

VK_DIMMER

```
public static final int VK_DIMMER
```

The 'device dimmer' action id adjusts illumination of the device.

This may be a toggle between two states, or a sequence through multiple states.

VK_DISPLAY_SWAP

```
public static final int VK_DISPLAY_SWAP
```

The 'display swap' action id - swaps displayed video sources.

VK_EJECT_TOGGLE

```
public static final int VK_EJECT_TOGGLE
```

The 'eject / insert media' action id.

VK_FADER_FRONT

```
public static final int VK_FADER_FRONT
```

The 'fader front' action id - moves the audio fader to the front.

VK_FADER_REAR

```
public static final int VK_FADER_REAR
```

The 'fader rear' action id - moves the audio fader to the rear.

VK_FAST_FWD

```
public static final int VK_FAST_FWD
```

The 'fast forward (media)' action id.

VK_GO_TO_END

```
public static final int VK_GO_TO_END
```

The '(send media) to end position' action id.

VK_GO_TO_START

```
public static final int VK_GO_TO_START
```

The 'go (send media) to start position' action id.

VK_GUIDE

```
public static final int VK_GUIDE
```

The 'guide' action id - indicates a user request for a program guide (toggle).

VK_INFO

```
public static final int VK_INFO
```

The 'info' action id - indicates that the user has requested additional information (toggle).

VK_MUTE

```
public static final int VK_MUTE
```

The 'mute' action id - mute audio output

VK_PINP_TOGGLE

```
public static final int VK_PINP_TOGGLE
```

The 'picture in picture toggle' action id - turns picture in picture mode on or off.

VK_PLAY

```
public static final int VK_PLAY
```

The 'play (media)' action id.

VK_PLAY_SPEED_DOWN

```
public static final int VK_PLAY_SPEED_DOWN
```

The 'decrease (media) play speed' action id.

VK_PLAY_SPEED_RESET

```
public static final int VK_PLAY_SPEED_RESET
```

The 'set (media) play speed to normal' action id.

VK_PLAY_SPEED_UP

```
public static final int VK_PLAY_SPEED_UP
```

The 'increase (media) play speed' action id.

VK_POWER

```
public static final int VK_POWER
```

The 'device power' action id turns on or off the delegated device.

VK_RANDOM_TOGGLE

```
public static final int VK_RANDOM_TOGGLE
```

The 'toggle random (media) play' action id.

VK_RECALL_FAVORITE_0

```
public static final int VK_RECALL_FAVORITE_0
```

The 'recall favorite 0' action id.

VK_RECALL_FAVORITE_1

```
public static final int VK_RECALL_FAVORITE_1
```

The 'recall favorite 1' action id.

VK_RECALL_FAVORITE_2

```
public static final int VK_RECALL_FAVORITE_2
```

The 'recall favorite 2' action id.

VK_RECALL_FAVORITE_3

```
public static final int VK_RECALL_FAVORITE_3
```

The 'recall favorite 3' action id.

VK_RECORD

```
public static final int VK_RECORD
```

The 'record (to media)' action id.

VK_RECORD_SPEED_NEXT

```
public static final int VK_RECORD_SPEED_NEXT
```

The 'select next (media) record speed' action id.

VK_REWIND

```
public static final int VK_REWIND
```

The 'rewind (media)' action id.

VK_SCAN_CHANNELS_TOGGLE

```
public static final int VK_SCAN_CHANNELS_TOGGLE
```

The 'scan channels toggle' action id - turns channel scanning on or off.

VK_SCREEN_MODE_NEXT

```
public static final int VK_SCREEN_MODE_NEXT
```

The 'screen mode next' action id - advances the display screen mode.

VK_SPLIT_SCREEN_TOGGLE

```
public static final int VK_SPLIT_SCREEN_TOGGLE
```

The 'split screen toggle' action id - turns split screen on or off.

VK_STOP

```
public static final int VK_STOP
```

The 'stop (media)' action id.

VK_STORE_FAVORITE_0

```
public static final int VK_STORE_FAVORITE_0
```

The 'store current setting as favorite 0' action id.

VK_STORE_FAVORITE_1

```
public static final int VK_STORE_FAVORITE_1
```

The 'store current setting as favorite 1' action id.

VK_STORE_FAVORITE_2

```
public static final int VK_STORE_FAVORITE_2
```

The 'store current setting as favorite 2' action id.

VK_STORE_FAVORITE_3

```
public static final int VK_STORE_FAVORITE_3
```

The 'store current setting as favorite 3' action id.

VK_SUBTITLE

```
public static final int VK_SUBTITLE
```

The 'subtitle' action id - indicates a user request for subtitling (toggle).

VK_SURROUND_MODE_NEXT

```
public static final int VK_SURROUND_MODE_NEXT
```

The 'surround mode next' action id - advances audio amplifier surround mode.

VK_TELETEXT

```
public static final int VK_TELETEXT
```

The 'teletext' action id - indicates a user request for a teletext service (toggle).

VK_TRACK_NEXT

```
public static final int VK_TRACK_NEXT
```

The '(send media) to next track' action id.

VK_TRACK_PREV

```
public static final int VK_TRACK_PREV
```

The '(send media) to previous track' action id.

VK_VIDEO_MODE_NEXT

```
public static final int VK_VIDEO_MODE_NEXT
```

The 'video mode next' action id - advances the display video mode.

VK_VOLUME_DOWN

```
public static final int VK_VOLUME_DOWN
```

The 'volume down' action id - decreases audio amplifier volume.

VK_VOLUME_UP

```
public static final int VK_VOLUME_UP
```

The 'volume up' action id - increases audio amplifier volume.

VK_WINK

```
public static final int VK_WINK
```

The 'device wink' action id is used to indicated that the device should identify itself in some manner, for example, audibly or visually.

Constructors

HRcEvent(Component, int, long, int, int)

```
public HRcEvent(java.awt.Component source, int id, long when, int modifiers, int keyCode)
```

Deprecated.
See explanation in java.awt.event.KeyEvent.

Constructs an `HRcEvent` object with the specified source component, type, modifiers and key.

Parameters:
`source` - the object where the event originated.

`id` - the identifier.

`when` - the time stamp for this event.

`modifiers` - indication of any modification keys that are active for this event.

`keyCode` - the code of the key associated with this event.

HRcEvent(Component, int, long, int, int, char)

```
public HRcEvent(java.awt.Component source, int id, long when, int modifiers, int keyCode,
            char keyChar)
```

Constructs an `HRcEvent` object with the specified source component, type, modifiers and key.

Parameters:

`source` - the object where the event originated.

`id` - the identifier.

`when` - the time stamp for this event.

`modifiers` - indication of any modification keys that are active for this event.

`keyCode` - the code of the key associated with this event.

`keyChar` - the character representation of the key associated with this event.

org.havi.ui.event
HScreenConfigurationEvent

Syntax
```
public class HScreenConfigurationEvent extends java.util.EventObject

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--org.havi.ui.event.HScreenConfigurationEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
This event is sent to all registered HScreenConfigurationListener when an HScreenDevice modifies its configuration. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

See Also:
HScreenConfigurationListener, HScreenDevice

Constructors

HScreenConfigurationEvent(Object)

```
public HScreenConfigurationEvent(java.lang.Object source)
```

Construct an HScreenConfigurationEvent

Parameters:
source - the HScreenDevice whose configuration changed

org.havi.ui.event
HScreenConfigurationListener

Syntax
```
public interface HScreenConfigurationListener extends java.util.EventListener
```

All Superinterfaces:
java.util.EventListener

All Known Implementing Classes:
HEventMulticaster

Description
This listener is used to monitor when the configuration of an HScreenDevice is modified. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

See Also:
HScreenConfigurationEvent, HScreenDevice

Methods

report(HScreenConfigurationEvent)
```
public void report(HScreenConfigurationEvent gce)
```
This method is called when the configuration of an HScreenDevice is modified.

org.havi.ui.event
HScreenDeviceReleasedEvent

Syntax

```
public class HScreenDeviceReleasedEvent extends org.davic.resources.ResourceStatusEvent

java.lang.Object
  |
  +--org.davic.resources.ResourceStatusEvent
        |
        +--org.havi.ui.event.HScreenDeviceReleasedEvent
```

Description

This event informs an application that a device for this `HScreen` has been released by an application or other entity in the system. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

Constructors

HScreenDeviceReleasedEvent(Object)

```
public HScreenDeviceReleasedEvent(java.lang.Object source)
```

Creates an `HScreenDeviceReleasedEvent` object. See the class description for details of constructor parameters and default values.

Parameters:

`source` - the `HScreenDevice` which has been released

Methods

getSource()

```
public java.lang.Object getSource()
```

Returns the device that has been released

Overrides:

org.davic.resources.ResourceStatusEvent.getSource() in class org.davic.resources.ResourceStatusEvent

Returns:

the `HScreenDevice` object representing the device that has been released

org.havi.ui.event
HScreenDeviceReservedEvent

Syntax
```
public class HScreenDeviceReservedEvent extends org.davic.resources.ResourceStatusEvent

java.lang.Object
  |
  +--org.davic.resources.ResourceStatusEvent
        |
        +--org.havi.ui.event.HScreenDeviceReservedEvent
```

Description
This event informs that a device on this `HScreen` has been reserved by an application or other entity in the system. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

Constructors

HScreenDeviceReservedEvent(Object)

```
public HScreenDeviceReservedEvent(java.lang.Object source)
```

Creates an `HScreenDeviceReservedEvent` object. See the class description for details of constructor parameters and default values.

Parameters:
`source` - the `HScreenDevice` representing the device which has been reserved

Methods

getSource()

```
public java.lang.Object getSource()
```

Returns the device that has been reserved

Overrides:
org.davic.resources.ResourceStatusEvent.getSource() in class org.davic.resources.ResourceStatusEvent

Returns:
an `HScreenDevice` representing the device that has been reserved

org.havi.ui.event
HScreenLocationModifiedEvent

Syntax
```
public class HScreenLocationModifiedEvent extends java.util.EventObject

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--org.havi.ui.event.HScreenLocationModifiedEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
This event is generated by the system when a component is moved on-screen, rather than within a container. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

Constructors

HScreenLocationModifiedEvent(Object)

```
public HScreenLocationModifiedEvent(java.lang.Object source)
```

Creates an `HScreenLocationModifiedEvent` object. See the class description for details of constructor parameters and default values.

Parameters:
`source` - the Component whose on-screen location has been modified.

Methods

getSource()

```
public java.lang.Object getSource()
```

Returns the Component whose on-screen location has been modified.

Overrides:
java.util.EventObject.getSource() in class java.util.EventObject

Returns:
the Component whose on-screen location has been modified.

org.havi.ui.event
HScreenLocationModifiedListener

Syntax
```
public interface HScreenLocationModifiedListener extends java.util.EventListener
```

All Superinterfaces:
java.util.EventListener

All Known Implementing Classes:
HEventMulticaster

Description
This listener is used to monitor when a component, such as an HVideoComponent on-screen location is modified. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

See Also:
HScreenLocationModifiedEvent, HVideoComponent

Methods

report(HScreenLocationModifiedEvent)
```
public void report(HScreenLocationModifiedEvent gce)
```
This method is called when the component's on-screen location is modified.

org.havi.ui.event
HTextEvent

Syntax

```
public class HTextEvent extends java.awt.AWTEvent

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--java.awt.AWTEvent
              |
              +--org.havi.ui.event.HTextEvent
```

All Implemented Interfaces:

java.io.Serializable

Description

An `HTextEvent` event is used to interact with a component implementing the `HKeyboardInputPreferred` interface as follows:

- An `HTextEvent` event may be sent from the HAVi system to the component to cause a change to the caret position or editable mode of the component as a result of user interaction. For example, a platform which lacks suitable caret positioning or mode switching keys may choose to generate this using a virtual keyboard user interface.
- An `HTextEvent` event is sent from the component to all registered `HTextListener` when a change to the text content, caret position or editable mode of the component occurs.

All interoperable HAVi components which expect to receive `HTextEvent` events should implement the `HKeyboardInputPreferred` interface. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

Fields

CARET_NEXT_CHAR

```
public static final int CARET_NEXT_CHAR
```

When a text event with this id is sent to a HTextValue component, then its caret position should move one character forward. If such an event is sent from a component to HTextListener , then it was moved.

CARET_NEXT_LINE

```
public static final int CARET_NEXT_LINE
```

When a text event with this id is sent to a HTextValue component, then its caret position should move down one line. If such an event is sent from a component to HTextListener , then it was moved. It is widget specific, if the caret remains at the same column or at an approximate horizontal pixel position for non-fixed-width fonts.

CARET_NEXT_PAGE

```
public static final int CARET_NEXT_PAGE
```

When a text event with this id is sent to a HTextValue component, then its caret position should move down to the last possible line in the visible window. If the caret position is already on the last visible line then the caret should move down so that the last visible line scrolls up to the top of the visible window. If such an event is sent from a component to HTextListener , then it was moved. It is widget specific, if the caret remains at the same column or at an approximate horizontal pixel position for non-fixed-width fonts.

CARET_PREV_CHAR

```
public static final int CARET_PREV_CHAR
```

When a text event with this id is sent to a HTextValue component, then its caret position should move one character backward. If such an event is sent from a component to HTextListener , then it was moved.

CARET_PREV_LINE

```
public static final int CARET_PREV_LINE
```

When a text event with this id is sent to a HTextValue component, then its caret position should move up one line. If such an event is sent from a component to HTextListener , then it was moved. It is widget specific, if the caret remains at the same column or at an approximate horizontal pixel position for non-fixed-width fonts.

CARET_PREV_PAGE

```
public static final int CARET_PREV_PAGE
```

When a text event with this id is sent to a HTextValue component, then its caret position should move up to the first possible line in the visible window. If the caret position is already on the first visible line then the caret should move down so that the first visible line scrolls down to the bottom of the visible window. If such an event is sent from a component to HTextListener , then it was moved. It is widget specific, if the caret remains at the same column or at an approximate horizontal pixel position for non-fixed-width fonts.

TEXT_CARET_CHANGE

```
public static final int TEXT_CARET_CHANGE
```

A text event with this id is sent from the component whenever the caret position of an HTextValue component is changed. This event will be sent only if the caret position changed in a manner not notified by the CARET_NEXT_CHAR, CARET_NEXT_LINE, CARET_PREV_CHAR, CARET_PREV_LINE, CARET_NEXT_PAGE, or CARET_PREV_PAGE events.

TEXT_CHANGE

```
public static final int TEXT_CHANGE
```

A text event with this id is sent from the component whenever the textual content of an HTextValue component is changed.

TEXT_END_CHANGE

```
public static final int TEXT_END_CHANGE
```

A text event with this id indicates that the textual content of an HTextValue component has been finally set. This event is sent to or from the component when the user causes the component to leave its editable mode. Note that it is a platform specific implementation option for such components to leave editable mode automatically e.g. when they lose input focus. In such a case the order in which the HFocusEvent and HTextEvent are sent is platform specific.

See Also:
getEditMode()

TEXT_FIRST

```
public static final int TEXT_FIRST
```

The first integer id in the range of event ids supported by the HTextEvent class.

TEXT_LAST

```
public static final int TEXT_LAST
```

The last integer id in the range of event ids supported by the HTextEvent class.

TEXT_START_CHANGE

```
public static final int TEXT_START_CHANGE
```

A text event with this id indicates that the textual content of an HTextValue component may be about to change. This event is sent to or from the component when the user causes the component to enter its editable mode. Note that it is a platform specific implementation option for such components to enter editable mode automatically e.g. when they receive input focus. In such a case the order in which the HFocusEvent and HTextEvent are sent is platform specific.

See Also:
getEditMode()

Constructors

HTextEvent(HTextValue, int)

```
public HTextEvent(HTextValue source, int id)
```

Constructs an `HTextEvent` .

Parameters:

`source` - The `HTextValue` component whose value has been modified.

`id` - The event id of the `HTextEvent` generated by the `HTextValue` component. This is the value that will be returned by the event object's `getID` method.

org.havi.ui.event
HTextListener

Syntax
```
public interface HTextListener extends java.util.EventListener
```

All Superinterfaces:
java.util.EventListener

All Known Implementing Classes:
HEventMulticaster

Description
The HTextListener interface enables the reception of HTextEvent, as generated by objects implementing HTextValue. The parameters to the constructors are as follows, in cases where parameters are not used, then the constructor should use the default values.

Default parameter values exposed in the constructors

Parameter	Description	Default value	Set method	Get method
None.				

Default parameter values not exposed in the constructors

Description	Default value	Set method	Get method
None.			

Methods

caretMoved(HTextEvent)
```
public void caretMoved(HTextEvent e)
```
Called when the caret position of an HTextValue component has moved.

Parameters:
e - is the HTextEvent generated by the object implementing HTextValue.

textChanged(HTextEvent)
```
public void textChanged(HTextEvent e)
```
Called when the textual content of an HTextValue component has changed.

Parameters:
e - is the HTextEvent generated by the object implementing HTextValue.

Annex W (normative): DVB-J examples

W.1 DVB-J Application lifecycle implementation example

```
package com.random.myxlet;

/**
 * This pseudocode illustrates the kind of actions that an Xlet should
 * take in response to Xlet state change callbacks.  It is primarily meant
 * to illustrate what is to be done in the paused state.  An example of
 * the kind of application that might use this kind of resource-management
 * policy is a slide-show application that is used to view images.  In this
 * example, the application caches only the current image when in the
 * paused state, but caches more images when in the active state.
 */

import javax.tv.Xlet;
import javax.tv.XletContext;

public class Sample implements Xlet {

   private boolean started = false;       // Latch, set true when first started
   private boolean active = false;        // Condition variable synchronized on this
   private boolean destroyed = false;     // Latch, set true when destroyed
   private XletContext context;

   public void initXlet(XletContext ctx) {
      context = ctx;
   }

   public synchronized void destroyXlet(boolean unconditional) {
      active = false;
   }

   private void manageCache() {
      for (;;) {
      synchronized(this) {
         if (destroyed) {
         ... free any resources we hold ...;
         cancel any image loading currently in progress;
         return;                          // Terminates thread
      }
      if (!active) {
         free all cached images, except the one currently
            being viewed;
      } else {                            // active
         if (cached images remain to be loaded && an image load is not in process)
         {
         Start an image load. Provide the image loader with a listener that will,
         when the image loading is complete, notify us and do this.notifyAll().
         }
      }
      wait();
      }
   }
   }
}
```

A simple example of Xlet lifecycle is a stock ticker application that uses a back channel to retrieve stock quotes, which it displays on the viewer's television.

a) The application manager retrieves the Xlet's code.

b) The application manager creates an instance of the XletContext Object and initializes it for the new Xlet.

c) The application manager initializes the Xlet by calling its `initXlet()` method and passing it the context object.

d) The Xlet uses the context object to initialize itself and enters the `Paused` state.

e) The application manager calls the Xlet's `startXlet()` method. The application manager assumes that the Xlet is performing its service.

f) Upon receiving this signal, the Xlet creates a new thread that opens the back channel to retrieve the stock quotes. The Xlet is now in the `Active` state.

g) The Xlet begins to show the stock quotes.

h) Due to circumstances beyond the control of the Xlet, it is no longer able to retrieve updated stock quotes.

i) The Xlet decides to continue displaying the most recent quotes it has. Note that the Xlet is still in the `Active` state.

j) After a time, the Xlet is still unable to open the back channel. It decides that the quotes it is displaying are too old to present and that it can no longer perform its service. It chooses to take itself out of the `Active` state. It calls the `paused()` method on XletContext to signal this change to the application manager.

k) Finally, the Xlet decides it no longer has any chance of performing its service, so it decides it should be terminated. It calls the `destroyed()` method on the XletContext to signal application manager that it has entered the `Destroyed` state. The Xlet does some final clean up.

l) The application manager prepares the Xlet for garbage collection.

W.2 Example of exporting an object for inter-application communication

```
public interface MyService extends java.rmi.Remote {
        public String getData() throws java.rmi.RemoteException;
    }

    public class MyServer extends MyService {

        private static javax.tv.xlet.XletContext ctx;

        public String getData() throws java.rmi.RemoteException {
            return "Hello from " + ctx.getXletProperty("dvb.app.id");
        }

        //
        // Called upon Xlet initialization
        //
        public static void export(XletXontext ctx) {
            this.ctx = ctx;
            Remote server = new MyServer();
            org.dvb.io.ixc.IxcRegistry.bind("myserver", server);
        }

        //
        //  Try to import the object that we previously exported.
        // Note that this would typically be done from a different
        // Xlet, but importing from yourself works, too.
        // Called when the Xlet is run.
        //
        public static void import(XletContext ctx) {
            String appId = ctx.getXletProperty("dvb.app.id");
            String orgId = ctx.getXletProperty("dvb.org.id");
            Remote obj;
            try {
                obj = org.dvb.io.ixc.IxcRegistry.lookup(
                       "/" + appId + "/"
                       + orgId + "/myserver");
                MyService r = (MyService) obj;
                System.out.println("Success " + r
                                                + ", " + r.getData());
            } catch (Exception ex) {
            }
        }
    }
```

Annex X (normative): Test support


Package
org.dvb.test

Description

Broadcast model

In a broadcast-based conformance system, there are effectively three main entities involved in an automated test process:

1. The test server that is used to hold and initiate all of the tests.
2. The test client which runs the tests and logs the results.
3. The broadcast chain that is used to transfer applications and application data from the server to the client.

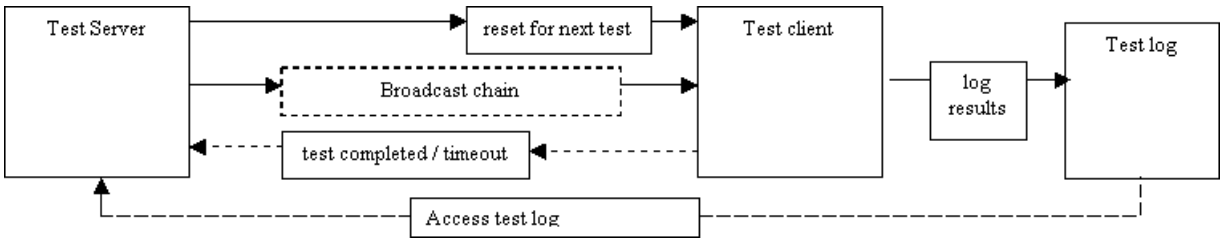

The communication order is as follows:

1. The test-server uses the "reset for next test" mechanism to set the test client into a known default state, ready to receive the test-application.
2. The test-server uses the "broadcast chain" mechanism to supply the test-application to the test client and to signal that the test-application should be executed.
3. The test-client runs the test-application.
4. The test-application either:

- finishes within a given timelimit, the result of the test is known and shall be considered to be the value reported by the test application for the purposes of compliance.
- Optionally, the test-client may signal to the test-server that the test-application has finished executing and that the test-client is ready to be reset in order to receive the next test-application.
- fails to finish the test-application within a given timeout, the result of the test is unknown and shall be treated as a failure for the purposes of compliance. The test-server may treat the test-client as ready to be reset in order to receive the next application.

[Successive tests are then repeated from stage 1.]

"Reset for next test"

The "reset for next test" path is used by the test server to reset the test client to receive the next test. The reset for next test API is considered to be a private implementation issue between the test-server and test-client and therefore has no public Java API implications. Note that this "communication" needs to take place prior to any application being executed. Note that the precise manner of the reset mechanism is intentionally not specified -- in the worst case, this may involve "power cycling" the test client.

Test log
Communication from the test client to the test log is considered as write-only access. Hence, results from successive tests cannot overwrite results from previous ones. Multiple (intermediate) results may be sent to the test log for any given test. It is recommended that all communication to the test log is synchronous.

See the DVBTest.log method for details of the proposed API and implementation issues.

"Test completed"
The "test completed" path is used by the test client to indicate to the test server that it has completed the previous test and is now able to accept a subsequent one. Note that this communication path is an optimisation, since direct communication from the client to the server is not actually required, e.g. the server might simply "time-out" the client, and then perform a "reset for next test" action. However, this optimisation may be important when large numbers of tests are being performed on a "capable" platform, since e.g. if a 30 second timeout is applied for 1000 test cases which typically run within say 6 seconds, then the timeout implies a typical running time of 500 minutes, i.e. ~4.5 hours --- rather than 100 minutes, i.e. ~1.5 hours.

See the DVBTest.terminate method for details of the proposed API and implementation issues.

Access test log
The mechanism by which the test-log is accessed is not considered in this document, this is a private mechanism, which might include reading a file from flash / RAM. Similarly, the mechanism by which results are recovered from the test log is not considered in this document, e.g. the test-log may actually reside on the test server, e.g. as in the case that results are transmitted over an IP connection.

Class Summary

Classes

DVBTest	The DVBTest class allows test applications to log messages during their execution and to indicate their termination condition in a platform independent manner.

org.dvb.test
DVBTest

Syntax

```
public class DVBTest

java.lang.Object
  |
  +--org.dvb.test.DVBTest
```

Description

The DVBTest class allows test applications to log messages during their execution and to indicate their termination condition in a platform independent manner.

A number of constants are defined in the DVBTest class and are reserved as follows

- Zero and negative values defined within the class are reserved by DVB.
- Positive return values are available for test application specific return values, which must be defined within the procedure for executing the test application as to their precise meaning as regards conformance.

Fields

FAIL

```
public static final int FAIL
```

The application executed and terminated unsuccessfully and has therefore operated in a non-conformant manner.

HUMAN_INTERVENTION

```
public static final int HUMAN_INTERVENTION
```

The application is unable to determine whether it has operated conformantly and therefore requires some human intervention to determine whether conformance has been achieved. Until the application has been checked the result of the application should be considered as non-conformant.

It is envisaged that tests returning this value may be those requiring evaluation of presented content, such as graphics, etc. Such presentation may require (subjective) human evaluation.

OPTION_UNSUPPORTED

```
public static final int OPTION_UNSUPPORTED
```

The platform does not contain the option under test and therefore the test is inapplicable, the test result should not be considered when determining the status of the platform's conformance.

PASS

```
public static final int PASS
```

The application executed and terminated successfully and has therefore operated in a conformant manner.

UNRESOLVED

```
public static final int UNRESOLVED
```

A setup stage necessary to execute the application failed, and hence the result of the application is unknown and therefore should be considered to have operated in a non-conformant manner.

UNTESTED

```
public static final int UNTESTED
```

The application ran successfully, but the particular test was unable to execute. Hence the result of is unknown, and may require human evaluation to determine conformance.

For example, an out of disk space test may not execute within a fixed number of iterations (within a practical amount of time) for devices with large capacity storage, etc.

Methods

log(String, int)

```
public static void log(java.lang.String id, int no)
```

This method has the same behaviour, implementation options and restrictions as log(String, String) - except that. it allows an integer value to be logged, rather than a String, which may prove a useful option for automating tests.

Parameters:

`id` - a string identifying the application (thread) that is logging the test result.

`no` - the integer value that the application wishes to be logged.

Throws:

`IOException` - under the same conditions as log(String, String).

log(String, String)

```
public static void log(java.lang.String id, java.lang.String message)
```

This synchronous, blocking, method logs a result (intermediate result) of a test application using write-only access. The method takes both an identifier string, e.g. "Test number 1" and a message to output, e.g. "Now invoking the xletPause method...". The application is not required to open a file or network connection, per se, and the log() method is always available for writing (in principle).

The precise format of the logged message is left deliberately unspecified, implementers may choose to output compressed messages, XML documents, or other formats of their choice (obviously provided that the original information can be recovered). It is an implementation option to include additional information with each logging message, e.g. including:

- version of the specification being implemented
- compiler version and options.
- build-version
- timestamp
- date
- debug info

Messages sent using this method should "atomic", i.e. that they are not interleaved with other messages sent using the methods defined in the DVBTest class.

Implementation

The precise mechanism(s) by which the this method may be implemented are intentionally unspecified, implementation options might include:

- logging the message to a local file system.
- logging the message to a mounted remote file system.
- logging the message to a RAM disk, etc.
- logging the message via an RS-232 (or other serial) connection.
- logging the message to a remote host via some IP / UDP based mechanism, e.g. using a socket-based connection.

Note that the implementation of the log method may use the same or a different mechanism to that used by the terminate method.

The log method does not require any explicit initialisation on the part of the application under test. For example if messages are being stored to a file system, then the application is not required to mount / open any storage file. Similarly, if the messages are being logged via a network connection, then the application is not required to open a connection to the storage host, etc. In principle, the mechanism should always be available to accept messages.

If this method is implemented on top of some buffering mechanism, it is strongly recommended that the buffer be flushed for each occurrence of a message being logged.

Security and implementation options

There is no Java security mechanism that is used to secure the log method.

Note that even if the log method is based on a particular implementation option, it shall be able to operate in spite of that particular implementation option itself being subject to security checks. For example, a log method implemented using the java.net.Socket class shall always be able to log a message from a test-application, even if the test-application is unable to directly access the java.net.Socket class due to security restrictions, etc.

It is an allowed implementation option to require that the test-client be put into some particular "test-mode" before any test-results are logged. This mechanism is required to reduce any inadvertent interaction due to downloaded applications accessing the test methods.

Authoring guidelines

The log method is not intended to be accessed by downloaded applications directly, it is purely intended for the use of conformance test applications. Authors of downloaded applications should not call this method, since there may be interactions between this method and normal in-field operation of the test-client (MHP platform).

It is an allowed implementation option to require that the test-client be put into some particular "test-mode" before any test-results are logged. This mechanism is required to reduce any inadvertent interaction due to downloaded applications accessing the test methods.

It is an allowed implementation option to have a number of "test-modes" that are appropriate to different elements being conformance tested, for example, it is a valid implementation for a test-client to have a test-mode where results are stored via a serial port, and a separate test-mode where results are stored via a RAM disk. It is allowable for a conformance test to be performed with the test-client in some specific test- mode, e.g. a java.net test (using a serial modem) might have its test results logged to a RAM disk, to avoid interaction between test-log messages and the serial protocol.

The mechanism by which a test-client is put into a given test mode is intentionally left unspecified.

Relationship to java.io

It is an implementation option to map the implementation of this method onto corresponding write method(s) of appropriate java.io classes. These classes may in turn be obtained, e.g. from java.net Socket classes, etc.

Parameters:

`id` - a string identifying the application (thread) that is logging the test result.

`message` - the message that the application wishes to be logged.

Throws:

`IOException` - if there is any problem in providing synchronous logging to an application. This IOException may be due to failure to write to a file system, inability to access a remote socket, etc. the precise causes are deliberately unspecified and are implementation dependent.

---

prompt(String, int, String)

```
public static void prompt(java.lang.String id, int controlCode, java.lang.String message)
```

This is a method is used to "approximately" synchronise a test-client and test-server, the method blocks until the test-server positively or negatively acknowledges the particular message. The intended use of this method is to remove critical timing issues from conformance tests, e.g. a conformance test to ensure that an Xlet responds to a change in broadcast signalling must first ensure that the Xlet is in a state where it is able to respond to such signalling -- since the time taken for an Xlet to achieve such a state is reliant on aspects outside of the scope of the conformance test itself (delivery bit rate, hardware and CPU capabilities of the test-client, etc.).

Messages sent using this method should "atomic", i.e. that they are not interleaved with other messages sent using the methods defined in the DVBTest class.

Implementation

The precise mechanism(s) by which the this method may be implemented are intentionally unspecified. Implementation options for sending the prompt might include:

- logging the controlCode via an RS-232 (or other serial) connection.
- logging the controlCode to a remote host via some IP / UDP based mechanism, e.g. using a socket-based connection.
- displaying the message on-screen for a (human) test operator, e.g. for systems not implementing a return channel capability.

Implementation options for receiving the acknowledgement might include:

- acknowledgement via an RS-232 (or other serial) connection.
- acknowledgement from a remote host via some IP / UDP based mechanism, e.g. using a socket-based connection.
- a (human) test operator manually acknowledging the message, e.g. for systems not implementing a return channel capability.

Parameters:

`id` - a string identifying the application (thread) that is sending the prompt.

`controlCode` - an integer value (unique within a given Xlet) intended for use by some automated test process (corresponding to the readable message).

`message` - a message (unique within a given Xlet) intended to be readable by a (human) test operator (corresponding to the automated controlCode).

Throws:

`IOException` - If there is any problem in receiving a positive acknowledgement from the test-server, then an this shall be thrown. This may be due to a negative acknowledgement from the test-server, or due to other communication based causes -- which are deliberately left unspecified.

---

terminate(String, int)

```
public static void terminate(java.lang.String id, int terminationCondition)
```

This synchronous, blocking, method logs the termination condition of a test application using write-only access. The method takes both an identifier string, e.g. "Test number 1" and a integer value to output, e.g. org.dvb.test.DVBTest.PASS. In addition to logging the termination condition of the test,

invoking this method also indicates that the test application has terminated its operation. Note that termination of operation does not necessarily correspond to the application being in any particular lifecycle state (as defined in the "Application Model" chapter of the MHP specification). The application is not required to open a file or network connection, per se, and the terminate() method is always available for writing (in principle).

The precise format of the termination message is left deliberately unspecified, implementers may choose to output compressed messages, XML documents, or other formats of their choice (obviously provided that the original information can be recovered). It is an implementation option to include additional information with each termination message, e.g. including:

- version of the specification being implemented
- compiler version and options.
- build-version
- timestamp
- date
- debug info

On test-clients whose implementation of the terminate() method supports external communication to its test-server, implementations of this method may optionally indicate to the test-server that the test-client can be reset by its test-server so that another test may be initiated. The precise mechanism by which this communication takes place is not specified it may be via a IP / socket, serial port, etc.

In the case of an test-client that does not support communication to its test-server, or in the case of an unsuccessful (hanging) test, or inability of this method to return (without throwing an exception) the test-server must be prepared to "time out" the application running on the test-client and then reset the test-client.

Implementation

The precise mechanism(s) by which the this method may be implemented are intentionally unspecified, implementation options might include:

- storing the termination condition to a local file system.
- storing the termination condition to a mounted remote file system.
- storing the termination condition to a RAM disk, etc.
- storing the termination condition via an RS-232 (or other serial) connection.
- storing the termination condition to a remote host via some IP / UDP based mechanism, e.g. using a socket-based connection.

Messages sent using this method should "atomic", i.e. that they are not interleaved with other messages sent using the methods defined in the DVBTest class.

Note that the implementation of the terminate method may use the same or a different mechanism to that used by the log method.

The terminate method does not require any explicit initialisation on the part of the application under test. For example if termination conditions are being stored to a file system, then the application is not required to mount / open any storage file. Similarly, if the results are being logged via a network connection, then the application is not required to open a connection to the storage host, etc. In principle, the mechanism should always be available to accept termination messages.

If this method is implemented on top of some buffering mechanism, it is strongly recommended that the buffer be flushed for each occurrence of a message being logged.

Security and implementation options

There is no Java security mechanism that is used to secure the terminate method.

Note that even if the terminate methods is based on a particular implementation option, it shall be able to operate in spite of that particular implementation option itself being subject to security checks. For example, a terminate method implemented using the java.net.Socket class shall always be able to log the termination condition of a test-application, even if the test-application is unable to directly access the java.net.Socket class due to security restrictions, etc.

It is an allowed implementation option to require that the test-client be put into some particular "test-mode" before any test-results are logged. This mechanism is required to reduce any inadvertent interaction due to downloaded applications accessing the test methods.

Authoring guidelines

The terminate method is not intended to be accessed by downloaded applications directly, it is purely intended for the use of conformance test applications. Authors of downloaded applications should not call this method, since there may be interactions between this method and normal in-field operation of the test-client (MHP platform).

It is an allowed implementation option to require that the test-client be put into some particular "test-mode" before any test-results are logged. This mechanism is required to reduce any inadvertent interaction due to downloaded applications accessing the test methods.

It is an allowed implementation option to have a number of "test-modes" that are appropriate to different elements being conformance tested, for example, it is a valid implementation for a test-client to have a test-mode where results are stored via a serial port, and a separate test-mode where results are stored via a RAM disk. It is allowable for a conformance test to be performed with the test-client in some specific test- mode, e.g. a java.net test (using a serial modem) might have its test results logged to a RAM disk, to avoid interaction between test-log messages and the serial protocol.

The mechanism by which a test-client is put into a given test mode is intentionally left unspecified.

Relationship to java.io

It is an implementation option to map the implementation of this method onto corresponding write method(s) of appropriate java.io classes. These classes may in turn be obtained, e.g. from java.net Socket classes, etc.

Parameters:

`id` - a string identifying the application (thread) that is terminating the test.

`terminationCondition` - the termination condition of the test application.

Throws:

`IOException` - thrown if there is any problem in terminating an application. This may be due to failure to write to a file system, inability to access a remote socket, etc. the precise causes are deliberately unspecified.

Annex Y (normative): Inter-application and Inter-Xlet communication API

Package
org.dvb.io.ixc

Description
Provides support for inter-application communication.

Class Summary	
Classes	
IxcRegistry	This is the bootstrap mechanism for obtaining references to remote objects residing in other Xlets executing on the same MHP terminal, using a URL-like syntax.

org.dvb.io.ixc
IxcRegistry

Syntax

```
public class IxcRegistry

java.lang.Object
  |
  +--org.dvb.io.ixc.IxcRegistry
```

Description

This is the bootstrap mechanism for obtaining references to remote objects residing in other Xlets executing on the same MHP terminal, using a URL-like syntax. The identification of a remote object is given using a syntax indicating the organisation ID and application ID:

/organisation_id/application_id/name

organisation_id = the organisation ID of the Xlet, as signalled in the application_identifier record, defined in the MHP specification.

application_id = the application ID of the Xlet, as signalled in the application_identifier record, defined in the MHP specification.

name = the name under which the remote object was exported.

The organisation ID and the application ID shall be encoded as a hexadecimal string, as would be accepted by java.lang.Integer.parseInt(String s, 16).

When RMI is used to communicate over a network, stubs generated by a tool like rmic are often required. This is not necessary for inter-xlet communication initiated with IxcRegistry. If such stubs are present, they shall be ignored.

Similarly, network RMI objects often extend the class server.RemoteObject, in order to get appropriate implementations for Object.hashCode(), Object.equals(), and Object.toString(). Overriding Object's implementation of these methods in this way is not necessary for inter-xlet communication initiated with IxcRegistry, although it is not harmful. Note that the class server.RemoteObject is not required in all MHP profiles.

Methods

---

bind(XletContext, String, Remote)

```
public static void bind(javax.tv.xlet.XletContext xc, java.lang.String name,
            java.rmi.Remote obj)
```

Binds a remote object under a given name in the namespace of an Xlet. The name can be any valid non-null String. No hierarchical namespace exists, e.g. the names "foo" and "bar/../foo" are distinct. If the exporting xlet has been destroyed, this method may fail silently.

The object shall be made visible to other applications. A call to bind(xc, name, obj) is thus equivalent to a call to bind(xc, name, obj, true).

Parameters:

`xc` - The context of the Xlet exporting the object.

`name` - The name identifying the object.

`obj` - The object being exported

Throws:

`AlreadyBoundException` - if this Xlet has previously exported an object under the given name.

`NullPointerException` - if xc, name or obj is null

---

bind(XletContext, String, Remote, boolean)

```
public static void bind(javax.tv.xlet.XletContext xc, java.lang.String name,
            java.rmi.Remote obj, boolean external)
```

Binds a remote object under a given name in the namespace of an Xlet. The name can be any valid non-null String. No hierarchical namespace exists, e.g. the names "foo" and "bar/../foo" are distinct. If the exporting xlet has been destroyed, this method may fail silently.

Parameters:

`xc` - The context of the Xlet exporting the object.

`name` - The name identifying the object.

`obj` - The object being exported

`external` - Determines if this object is exported outside the scope of the current application, as defined in this specification. If set true, the object shall be visible to other applications; if false, it shall only be visible to Xlets within the same application. Note that an embedded Xlet with a different app ID than its enclosing HTML page is still considered to be the same application as that which contains the enclosing page.

Throws:

`AlreadyBoundException` - if this Xlet has previously exported an object under the given name.

`NullPointerException` - if xc, name or obj is null

Since:

MHP 1.1

---

list(XletContext)

```
public static java.lang.String[] list(javax.tv.xlet.XletContext xc)
```

Returns an array of string paths objects available in the registry. The array contains a snapshot of the names present in the registry that the current Xlet would be allowed to import using IxcRegistry.lookup.

Parameters:

`xc` - The context of the current Xlet.

Returns:

A non-null array of strings containing a snapshot of the path names of all objects available to the caller in this registry.

See Also:

`lookup(XletContext, String)`

---

lookup(XletContext, String)

```
public static java.rmi.Remote lookup(javax.tv.xlet.XletContext xc, java.lang.String path)
```

Returns a remote object previously exported by an Xlet that has not been destroyed. The identification of a remote object is given using a syntax indicating the organisation ID and application ID:

/organisation_id/application_id/name

organisation_id = the organisation ID of the Xlet, as signalled in the application_identifier record.

application_id = the applicatin ID of the Xlet, as signalled in the application_identifier record.

name = the name under which the remote object was exported.

The organisation ID and the application ID shall be encoded as a hexadecimal string, as would be accepted by java.lang.Integer.parseInt(String s, 16). If the caller is not authorized to import a given object due to the security policy, then this API will behave as though the object had not been exported, that is, a NotBoundException shall be thrown.

Parameters:

`xc` - The context of the current Xlet (that is, the Xlet importing the object).

`path` - A file pathname-like string identifying the Xlet and the name of the object to be imported.

Returns:

A remote object

Throws:

`NotBoundException` - If the name is not currently bound.

`RemoteException` - If a remote stub class cannot be generated for the object being imported.

`java.lang.IllegalArgumentException` - If the name is not formatted in the syntax given above.

`NullPointerException` - if path is null

---

rebind(XletContext, String, Remote)

```
public static void rebind(javax.tv.xlet.XletContext xc, java.lang.String name,
            java.rmi.Remote obj)
```

Rebind the name to a new object in the context of an Xlet; replaces any existing binding. The name can be any valid non-null String. No hierarchical namespace exists, e.g. the names "foo" and "bar/../foo" are distinct. If the exporting xlet has been destroyed, this method may fail silently.

The object shall be made visible to other applications. A call to rebind(xc, name, obj) is thus equivalent to a call to rebind(xc, name, obj, true).

Parameters:

`xc` - The context of the Xlet that exported the object.

`name` - The name identifying the object.

`obj` - The object being exported

Throws:

`NullPointerException` - if xc, name or obj is null

---

rebind(XletContext, String, Remote, boolean)

```
public static void rebind(javax.tv.xlet.XletContext xc, java.lang.String name,
            java.rmi.Remote obj, boolean external)
```

Rebind the name to a new object in the context of an Xlet; replaces any existing binding. The name can be any valid non-null String. No hierarchical namespace exists, e.g. the names "foo" and "bar/../foo" are distinct. If the exporting xlet has been destroyed, this method may fail silently.

Parameters:

`xc` - The context of the Xlet that exported the object.

`name` - The name identifying the object.

`obj` - The object being exported

`external` - Determines if this object is exported outside the scope of the current application, as defined in this specification. If set true, the object shall be visible to other applications; if false, it shall only be visible to Xlets within the same application. Note that an embedded Xlet with a different app ID than its enclosing HTML page is still considered to be the same application as that which contains the enclosing page.

Throws:

`NullPointerException` - if xc, name or obj is null

---

unbind(XletContext, String)

```
public static void unbind(javax.tv.xlet.XletContext xc, java.lang.String name)
```

Unbind the name.

Parameters:

`xc` - The context of the Xlet that exported the object to be unbound.

`name` - The name identifying the object.

Throws:

`NotBoundException` - if this is not currently any object exported by this Xlet under the given name.

`NullPointerException` - if xc or name is null

Annex Z (informative):Services, Service Contexts and Applications in an MHP Environment

Z.1 Introduction

This document describes the concepts that link the various parts of an MHP execution environment so that it can display a complete MHP service, including media and applications. This is really an overview to the MHP application lifecycle model, but does include some additional information.

We assume some familiarity with MHP and the JavaTV specification.

Z.2 Basic concepts

The unit for the presentation and execution of content in the MHP specification is the service. A service in MHP represents a group of pieces of content which are intended to be presented together to the end-user. In this version of the specification, the service is the contents of a broadcast DVB service, including audio/video streams, data streams and all the service information, applications and application signalling that is being broadcast. The current service will largely be responsible for determining what media and applications are presented to the user.

Every service that gets presented by an MHP platform is presented within a service context. These form one of the foundations for the runtime environment and the execution model. A service context is an "environment" in which a service gets presented - it defines the boundaries of the service (letting the platform and applications identify which of the pieces of content that are being presented make up a given service). It also enables that service to be addressed and controlled as a single entity. A DVB-J application can call the select method on a service context (represented by javax.tv.service.selection.ServiceContext) and the platform will stop presenting all of the content that makes up the current service being presented by that service context and start presenting the content that makes up the new service. In this case, "content" may include one or more applications.

A service context has some major differences from a DVB-J Xlet context. It is not necessary to have one service context for every possible service that can or will get presented - one service context is needed for every service that can be presented simultaneously, but that is all. Also, a service context is not destroyed when the service within it is stopped, unlike the Xlet context for a DVB-J application. The service context exists until an application or the platform explicitly destroys it. In normal operational mode, the built-in navigator or EPG for an MHP system will create one single service context when it starts and never destroy that. MHP applications will run in that service context.

Z.3 Presenting a service in MHP

From the MHP point of view, the content of a service can be one of two types - media or applications. Media is the simplest case and is described first.

Z.3.1 Presenting the media components of a service

If there are several different streams of media that may get presented (such as several different video streams) then the platform uses a variety of methods to tell which streams should be used. These include user preferences and platform defaults, but will also include using service information do determine which streams get presented to the user.

For a DVB-J application, a JMF Player object is created for any media that gets presented as part of the service. These players are directly linked to the service context, and the service context can be queried to find out which JMF Players are linked with it. It is also possible for applications to create JMF Player objects directly without linkage to the applications service context.

Z.3.2 Presenting the application components of a service

Applications are handled in a slightly different way. The lifecycle of all applications in an MHP environment is controlled by an application manager, a software entity that forms part of the MHP runtime environment. It takes its instructions on which applications to start and stop from the user, but also from information that is included in the MHP broadcast (called an "AIT", can logically be considered an extension to MPEG's PMT) and the free resources in the platform.

The information carried in the AIT (Application Information Table) not only says which applications are available, but also provides some instructions to the application manager about whether an application should be started automatically or whether an application should be killed automatically. The application manager monitors this information for changes, and creates, starts or kills applications as appropriate.

Every DVB-J application executes within an Xlet context. This is a similar concept to the applet context that a Java applet executes in, and it provides the Xlet with a link to its environment, both for accessing system properties and for telling the environment that the Xlet has changed its own state.

Since every Xlet executes as part of a DVB service, there is also a link between the Xlet and its associated service. This link is the class javax.tv.service.selection.ServiceContextFactory. Using methods on this class, an Xlet can lookup its service context from its xlet context. From the service context, an Xlet can discover which service it is current running as part of. It can also register for events to be told when the service being presented in its service context changes.

The application manager must maintain a list of all the applications in a system, so that it knows which ones are currently executing. It must also know (directly or indirectly) which applications are associated with which service context, so that if the service being presented in that service context changes due to a new service being selected, it can kill the

applications that are not signalled in the new service. When a service is selected in a service context, the following steps happen in approximately this order:

a) The platform examines the MPEG PMT for the service that has been selected (tuning first if necessary) and works out which media streams are to be presented.

b) Any media streams currently playing are stopped and any new media streams that need to be presented are started. Any JMF players presenting the old content are stopped and destroyed, and players for the new content are created and started if necessary.

c) The platform monitors the application information table for the new service to find out which applications should be running. Any applications that are currently running but which are not signalled in the application information table of the new service (or which are signalled as killed) are killed and the Xlet contexts of DVB-J applications associated with the old service are destroyed.

d) For any applications which are signalled as autostart and are not currently running, the following steps are taken:

- The platform attaches to the object carousel signalled in the application information table
- The platform attempts to load the main application file as signalled in the application information table
- For a DVB-J application, the platform creates an instance of the main class using the default constructor, creates an XletContext object for the application and calls the Xlet.initXlet() method on the newly loaded class, passing the XletContext object as a parameter. Once this call is complete, the platform calls the Xlet.startXlet() method.

If several applications are signalled as autostart, the platform will load and start every one in the same way. Each DVB-J application will have a different Xlet context and will execute independently, although they are all associated with the same service context.

Z.4 Multiple service contexts in an MHP platform

The MHP specification allows the platform to have any number of service contexts, although the platform may choose to limit the number it can produce, possibly even to one. Each service context can present a different service, completely independently of the other service contexts. Operations carried out on one service context will not affect another (unless they cause tuning which prevents the contents of a service in another service context from being presented). It is even possible to display the same service in several service contexts simultaneously - this may not be very useful, but it is allowed. This may result in several instances of the same application running in at the same time in different service contexts. In practice, this is most likely to happen in future MHP terminals with multiple independent video output channels.

Z.5 How does the platform know which services are available?

In order to select a new service, an application (or the platform) has to know three things about the service it wants to start: the original network ID, the transport stream ID and the service ID for the service in question. In the case of an application, those values may be hard-wired into the application by the developer, but this not required. The application can find out about a service in the same way that the platform can - using service information.

The platform can not know the details of every available service when it started for the first time, and so it must use another method to find out about what services it can receive. A set-top box may do the following to find this out, for instance:

a) Scan the input (satellite, cable or some other input) to find out which transport streams are available and the physical parameters it needs to tune to them successfully.

b) For every transport stream:

- Tune to it
- Use the service information API to access the service description table (SDT) and network information table (NIT) for that transport stream.
- Use these tables to find what services are in the transport stream and the values needed to select those services
- In the case of the platform performing an initial scan, write this information to non-volatile memory

c) When the application has found the service it wants (or in the case of the platform performing a scan, once every transport stream has been scanned in this way), a service can be selected.

At this point, the platform has all the information it needs to start presenting services to the user. It is important to realise that this is not the only way of finding this information - other ways may be possible, depending on the MHP implementation.

Annex AA (normative): DVB-HTML 1.0 DTD

AA.1 DVB-HTML 1.0 DTD

AA.1.1 DVB-HTML DTD driver

This section contains the driver for the DVB-HTML 1.0 document type implementation as an XML DTD. It relies upon XHTML module implementations defined in Modularization of XHTML [80] and in this annex. This driver is the DTD that shall be referenced by conformant DVB-HTML 1.0 documents.

```
<!-- .................................................................... -->
<!--                          DVB-HTML 1.0 DTD                          -->
<!-- .................................................................... -->
<!-- file: dvbhtml-1-0.dtd                                              -->
<!-- .................................................................... -->

<!--      This is the DTD driver for DVB-HTML 1.0.

     The following formal public identifier shall be used to identify it:
                "-//DVB//DTD XHTML DVB-HTML 1.0//EN"

   The following URL may be used to reference this file :
      "http://www.dvb.org/mhp/dtd/dvbhtml-1-0.dtd"                 -->

<!-- .................................................................... -->
<!--                        XHTML Driver Parameters                     -->
<!-- .................................................................... -->

<!ENTITY % XHTML.version "-//DVB//DTD XHTML DVB-HTML 1.0//EN" >
<!-- reserved for use with document profiles      -->
<!ENTITY % XHTML.profile "" >

<!-- .................................................................... -->
<!--                              Framework                             -->
<!-- .................................................................... -->

<!-- Tell the XHTML Framework module to use the DVB-HTML Qualified Names     -->
<!-- module as an extra qname driver      -->
<!ENTITY % xhtml-qname-extra.mod
   PUBLIC "-//DVB//ENTITIES DVB-HTML Qualified Names 1.0//EN"
   "dvb-qname-1.mod" >

<!-- Define the Content Model for the framework to use -->
<!ENTITY % xhtml-model.mod
   PUBLIC "-//DVB//ENTITIES DVB-HTML Content Model 1.0//EN"
   "dvbhtml-model-1-0.mod" >

<!-- Include bidirectional text support -->
<!ENTITY % XHTML.bidi "INCLUDE" >

<!-- Comment : Needed for tool verification purpose -->
<!ENTITY % iframe.qname "iframe" >

<!-- XHTML Inline Style Module  ..................................... -->
<!-- needs to be included prior to the XHTML Modular Framework to be taken  -->
<!-- into account                -->
<!ENTITY % xhtml-inlstyle.module "INCLUDE">
<![%xhtml-inlstyle.module;[
    !ENTITY % xhtml-inlstyle.mod
    PUBLIC "-//W3C//ENTITIES XHTML Inline Style 1.0//EN"
"http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-inlstyle-1.mod" >
%xhtml-inlstyle.mod;]]>


<!-- Bring in the XHTML Framework module -->
<!ENTITY % xhtml-framework.mod
   PUBLIC "-//W3C//ENTITIES XHTML Modular Framework 1.0//EN"
   "http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-framework-1.mod"  >
```

```
%xhtml-framework.mod;

<!-- Using tables, so we need to declare this. Is also present on the Content Model -->
<!ENTITY % Table.class "| %table.qname;">

<!-- instantiate the DVB Character Entities module (for the VK_* codes).      -->
<!--
   NOTE 1: The content of this module is not defined in this specification
   since the mappings of those DVB character entities to the character
   set are implementation specific

   NOTE 2: The DVB-HTML Character Entities Module is referenced from the
   DVB-HTML DTDs using a local URL (see <xref AA.1.1 "DVB-HTML DTD Driver").
   Hence the location from which the DTD is fetched will affect the
   values given to the "VK_*" entities defined for use with the HTML
   "accesskey" attribute, described in <xref to 8.5.3.1.8 "Accesskey
   attribute">.  Implementations may therefore choose to store these DTDs
   locally and access them in an implementation-defined manner.
                                        -->
<!ENTITY % dvb-charent.module "INCLUDE" >
<![%dvb-charent.module;[
<!ENTITY % dvb-charent.mod
   SYSTEM "dvb-charent-1.mod" >
%dvb-charent.mod;]]>

<!-- ..................................................................... -->
<!--                          Modules List                                 -->
<!-- ..................................................................... -->

<!-- This DTD will accept both frameset and body elements as root element childs -->
<!ENTITY % html.content  "( %head.qname;, (%frameset.qname; | %body.qname; ))" >

<!-- XHTML Document Structure Module ..................................... -->
<!ENTITY % xhtml-struct.module "INCLUDE">
<![%xhtml-struct.module;[
<!ENTITY % xhtml-struct.mod
    PUBLIC "-//W3C//ELEMENTS XHTML Document Structure 1.0//EN"
    "http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-struct-1.mod" >
%xhtml-struct.mod;]]>

<!-- XHTML Text Module ................................................... -->
<!-- Fix up the blockquote content model -->
<!ENTITY % blockquote-fixed.element "INCLUDE">
<![%blockquote-fixed.element;[
<!ENTITY % blockquote.content
     "( #PCDATA | %Block.mix;)*"
>
<!ENTITY % blockquote.qname  "blockquote" >
<!ELEMENT %blockquote.qname;  %blockquote.content; >
<!-- end of blockquote.element -->]]>
<!ENTITY % xhtml-text.module "INCLUDE">
<![%xhtml-text.module;[
<!ENTITY % xhtml-text.mod
    PUBLIC "-//W3C//ELEMENTS XHTML Text 1.0//EN"
    "http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-text-1.mod" >
%xhtml-text.mod;]]>

<!-- XHTML Hypertext Module ............................... -->
<!ENTITY % xhtml-hypertext.module "INCLUDE">
<![%xhtml-hypertext.module;[
<!ENTITY % xhtml-hypertext.mod
    PUBLIC "-//W3C//ELEMENTS XHTML Hypertext 1.0//EN"
    "http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-hypertext-1.mod" >
%xhtml-hypertext.mod;]]>

<!-- XHTML Lists Module ................................... -->
<!ENTITY % xhtml-list.module "INCLUDE">
<![%xhtml-list.module;[
<!ENTITY % xhtml-list.mod
    PUBLIC "-//W3C//ELEMENTS XHTML Lists 1.0//EN"
    "http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-list-1.mod" >
```

```
%xhtml-list.mod;]]>

<!-- XHTML Presentation Module  ..................................... -->
<!ENTITY % xhtml-pres.module "INCLUDE">
<![%xhtml-pres.module;[
<!ENTITY % xhtml-pres.mod
    PUBLIC "-//W3C//ELEMENTS XHTML Presentation 1.0//EN"
    "http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-pres-1.mod" >
%xhtml-pres.mod;]]>

<!-- XHTML BDO Element Module  ..................................... -->
<!ENTITY % xhtml-bdo.module "INCLUDE">
<![%xhtml-bdo.module;[
<!ENTITY % xhtml-bdo.mod
    PUBLIC "-//W3C//ELEMENTS XHTML BDO Element 1.0//EN"
    "http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-bdo-1.mod" >
%xhtml-bdo.mod;]]>

<!-- XHTML Forms Module  ..................................... -->
<!ENTITY % xhtml-form.module "INCLUDE">
<![%xhtml-form.module;[
<!ENTITY % xhtml-form.mod
    PUBLIC "-//W3C//ELEMENTS XHTML Forms 1.0//EN"
    "http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-form-1.mod" >
%xhtml-form.mod;]]>

<!-- XHTML Basic Tables Module  ..................................... -->
<!ENTITY % xhtml-basic-table.module "INCLUDE">
<![%xhtml-basic-table.module;[
<!ENTITY % xhtml-basic-table.mod
    PUBLIC "-//W3C//ELEMENTS XHTML Basic Tables 1.0//EN"
    "http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-basic-table-1.mod">
%xhtml-basic-table.mod;]]>

<!-- XHTML Images module ....................................... -->
<!ENTITY % xhtml-image.module "INCLUDE">
<![%xhtml-image.module;[
<!ENTITY % xhtml-image.mod
    PUBLIC "-//W3C//ELEMENTS XHTML Images 1.0//EN"
    "http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-image-1.mod" >
%xhtml-image.mod;]]>

<!-- XHTML Client Side Image Map module ........................... -->
<!ENTITY % xhtml-csismap.module "INCLUDE">
<![%xhtml-csismap.module;[
<!ENTITY % xhtml-csismap.mod
    PUBLIC "-//W3C//ELEMENTS XHTML Client Side Image Maps 1.0//EN"
    "http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-csismap-1.mod" >
%xhtml-csismap.mod;]]>

<!-- XHTML Embedded Object module ..................................... -->
<!ENTITY % xhtml-object.module "INCLUDE">
<![%xhtml-object.module;[
<!ENTITY % xhtml-object.mod
    PUBLIC "-//W3C//ELEMENTS XHTML Embedded Object 1.0//EN"
    "http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-object-1.mod" >
%xhtml-object.mod;]]>

<!-- XHTML Frames module ...............................................-->
<!ENTITY % xhtml-frames.module "INCLUDE">
<![%xhtml-frames.module;[
<!ENTITY % xhtml-frames.mod
    PUBLIC "-//W3C//ELEMENTS XHTML Frames 1.0//EN"
    "http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-frames-1.mod" >
%xhtml-frames.mod;]]>

<!-- XHTML Target module ....................................... -->
<!ENTITY % xhtml-target.module "INCLUDE">
<![%xhtml-target.module;[
<!ENTITY % xhtml-target.mod
    PUBLIC "-//W3C//ELEMENTS XHTML Target 1.0//EN"
```

```
    "http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-target-1.mod" >
%xhtml-target.mod;]]>

<!-- XHTML IFrame module ..................................... -->
<!ENTITY % xhtml-iframe.module "INCLUDE">
<![%xhtml-iframe.module;[
<!ENTITY % xhtml-iframe.mod
    PUBLIC "-//W3C//ELEMENTS XHTML Inline Frame Element 1.0//EN"
    "http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-iframe-1.mod" >
%xhtml-iframe.mod;]]>

<!-- DVB-HTML Intrinsic Events Module ............................. -->
<!ENTITY % dvbhtml-events.module "INCLUDE" >
<![%dvbhtml-events.module;[
<!ENTITY % dvbhtml-events.mod
    PUBLIC "-//DVB//ENTITIES DVB-HTML Intrinsic Events 1.0//EN"
    "http://www.dvb.org/mhp/dtd/dvbhtml-events-1.mod" >
%dvbhtml-events.mod;]]>

<!-- XHTML Document Metainformation Module ........................... -->
<!ENTITY % xhtml-meta.module "INCLUDE">
<![%xhtml-meta.module;[
<!ENTITY % xhtml-meta.mod
    PUBLIC "-//W3C//ELEMENTS XHTML Metainformation 1.0//EN"
    "http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-meta-1.mod" >
%xhtml-meta.mod;]]>

<!-- XHTML Document Scripting Module  ................................. -->
<!ENTITY % xhtml-script.module "INCLUDE">
<![%xhtml-script.module;[
<!ENTITY % xhtml-script.mod
    PUBLIC "-//W3C//ELEMENTS XHTML Scripting 1.0//EN"
    "http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-script-1.mod" >
%xhtml-script.mod;]]>

<!-- XHTML Document Stylesheet Module  ................................ -->
<!ENTITY % xhtml-style.module "INCLUDE">
<![%xhtml-style.module;[
<!ENTITY % xhtml-style.mod
    PUBLIC "-//W3C//ELEMENTS XHTML Stylesheets 1.0//EN"
    "http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-style-1.mod" >
%xhtml-style.mod;]]>

<!-- XHTML Link Element Module  ................................... -->
<!ENTITY % xhtml-link.module "INCLUDE">
<![%xhtml-link.module;[
<!ENTITY % xhtml-link.mod
PUBLIC "-//W3C//ELEMENTS XHTML Link Element 1.0//EN"
"http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-link-1.mod" >
%xhtml-link.mod;]]>

<!-- XHTML Base Element Module  ................................... -->
<!ENTITY % xhtml-base.module "INCLUDE">
<![%xhtml-base.module;[
    !ENTITY % xhtml-base.mod
    PUBLIC "-//W3C//ELEMENTS XHTML Base Element 1.0//EN"
"http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-base-1.mod" >
%xhtml-base.mod;]]>

<!-- ..................................................................... -->
<!-- XHTML Modularization modules ignored in DVB-HTML 1.0 DTD.............. -->
<!-- ..................................................................... -->

<!-- XHTML Java Applet Module  ................................... -->
<!ENTITY % xhtml-applet.module "IGNORE">
<![%xhtml-applet.module;[
    !ENTITY % xhtml-applet.mod
    PUBLIC "-//W3C//ELEMENTS XHTML Java Applets 1.0//EN"
"http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-applet-1.mod" >
%xhtml-applet.mod;]]>
```

```
<!-- XHTML Edit Module  ................................... -->
<!ENTITY % xhtml-edit.module "IGNORE">
<![%xhtml-edit.module;[
    !ENTITY % xhtml-edit.mod
    PUBLIC "-//W3C//ELEMENTS XHTML Editing Markup 1.0//EN"
"http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-edit-1.mod" >
%xhtml-edit.mod;]]>

<!-- XHTML Basic Forms Module  ................................... -->
<!ENTITY % xhtml-basic-form.module "IGNORE">
<![%xhtml-basic-form.module;[
    !ENTITY % xhtml-basic-form.mod
    PUBLIC "-//W3C//ELEMENTS XHTML Basic Forms 1.0//EN"
"http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-basic-form-1.mod" >
%xhtml-basic-form.mod;]]>

<!-- XHTML Table Module  ................................... -->
<!ENTITY % xhtml-table.module "IGNORE">
<![%xhtml-table.module;[
    !ENTITY % xhtml-table.mod
    PUBLIC "-//W3C//ELEMENTS XHTML Tables 1.0//EN"
"http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-table-1.mod" >
%xhtml-table.mod;]]>

<!-- XHTML Server Side Image Map Module  ................................... -->
<!ENTITY % xhtml-ssismap.module "IGNORE">
<![%xhtml-ssismap.module;[
    !ENTITY % xhtml-ssismap.mod
    PUBLIC "-//W3C//ELEMENTS XHTML Server-side Image Maps 1.0//EN"
"http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-ssismap-1.mod" >
%xhtml-ssismap.mod;]]>

<!-- XHTML Intrinsic Events Module  ................................... -->
<!ENTITY % xhtml-events.module "IGNORE">
<![%xhtml-events.module;[
    !ENTITY % xhtml-events.mod
    PUBLIC "-//W3C//ELEMENTS XHTML Intrinsic Events 1.0//EN"
"http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-events-1.mod" >
%xhtml-events.mod;]]>

<!-- XHTML Name Identification Module  ................................... -->
<!ENTITY % xhtml-nameident.module "IGNORE">
<![%xhtml-nameident.module;[
    !ENTITY % xhtml-nameident.mod
    PUBLIC "-//W3C//ELEMENTS XHTML Name Identifier 1.0//EN"
"http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-nameident-1.mod" >
%xhtml-nameident.mod;]]>

<!-- XHTML Legacy Markup Module  ................................... -->
<!ENTITY % xhtml-legacy.module "IGNORE">
<![%xhtml-legacy.module;[
    !ENTITY % xhtml-legacy.mod
    PUBLIC "-//W3C//ELEMENTS XHTML Legacy Markup 1.0//EN"
"http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-legacy-1.mod" >
%xhtml-legacy.mod;]]>


<!-- end of DVB-HTML 1.0 DTD  ........................................... -->
<!-- ..................................................................... -->
```

AA.1.2 DVB-HTML DVB Intrinsic Events module

This DVB defined module adds some event attributes to the <body> and <frame> element.

```
<!-- ..................................................................... -->
<!--        DVB-HTML Intrinsic Events 1.0 Module     -->
<!-- ..................................................................... -->
<!-- file: dvbhtml-events-1.mod    -->
<!-- ..................................................................... -->
```

```
<!--  This is the DTD module for the DVB-HTML defined events.

      The following formal public identifier shall be used to identify it:
       "-//DVB//ENTITIES DVB-HTML Intrinsic Events 1.0//EN"

   The following URL may be used to reference this file :
      "http://www.dvb.org/mhp/dtd/dvbhtml-events-1.mod"

   The namespace and the default prefix of this module are respectively
      xmlns:dvbhtml="http://www.dvb.org/mhp/"
                                                                              -->

<!-- Declare PEs for the DVB Intrinsic events attributes on the body element -->
<!ENTITY % dvbhtml.body.onload.qname "%dvbhtml.pfx;onload" >
<!ENTITY % dvbhtml.body.onunload.qname "%dvbhtml.pfx;onunload" >
<!ENTITY % dvbhtml.body.ondvbdomstable.qname "%dvbhtml.pfx;ondvbdomstable" >

<!-- Declare PEs for the DVB-HTML Intrinsic events attributes on the     -->
<!-- frameset element (only used in the DVB-HTML Frameset DTD)             -->
<!ENTITY % dvbhtml.frameset.onload.qname "%dvbhtml.pfx;onload" >
<!ENTITY % dvbhtml.frameset.onunload.qname "%dvbhtml.pfx;onunload" >
<!ENTITY % dvbhtml.frameset.ondvbdomstable.qname "%dvbhtml.pfx;ondvbdomstable" >


<!-- additional attributes on body element -->
<!ATTLIST %body.qname;
    %dvbhtml.body.onload.qname       %Script.datatype;      #IMPLIED
    %dvbhtml.body.onunload.qname     %Script.datatype;      #IMPLIED
    %dvbhtml.body.ondvbdomstable.qname  %Script.datatype;      #IMPLIED
>

<!-- end of dvbhtml-events-1.mod ..................................... -->
<!-- ................................................................. -->
```

AA.1.3 DVB-HTML Qualified Names module

This DVB-defined module is declared in the DVB-HTML DTD driver and instantiated through the XHTML Modular Framework. It defines parameter entities to support namespace-qualified names. In particular, it defines namespace declarations and name prefixing rules. The actual namespace defined by this module is provided by the following URI: `"http://www.dvb.org/mhp/"` and the default prefix by the string `"dvbhtml"`.

It is defined below:

```
<!-- ................................................................. -->
<!--        DVB-HTML 1.0 Qname Module        -->
<!-- ................................................................. -->
<!-- file: dvbhtml-qname-1.mod    -->
<!-- ................................................................. -->

<!--
     The following formal public identifier shall be used to identify it:
       "-//DVB//ENTITIES DVB-HTML Qualified Names 1.0//EN"

   The following URL may be used to reference this file :
      "http://www.dvb.org/mhp/dtd/dvbhtml-qname-1.mod"          -->


<!-- Bring in the XHTML datatypes, since the URI.datatype parameter entity  -->
<!-- is used for declaring the xmlns attributes.             -->
<!ENTITY % dvb-datatypes.mod
   PUBLIC "-//W3C//ENTITIES XHTML Datatypes 1.0//EN"
   "http://www.w3.org/TR/xhtml-modularization/DTD/xhtml-datatypes-1.mod" >
%dvb-datatypes.mod;

<!-- Declare the default value for prefixing of this module's attributes    -->
<!-- Note that the NS.prefixed will get overridden by the XHTML Framework   -->
<!-- or by a document instance.             -->
```

```
<!ENTITY % NS.prefixed "IGNORE" >
<!ENTITY % dvbhtml.prefixed "%NS.prefixed;" >

<!-- Declare the actual namespace of this module -->
<!ENTITY % dvbhtml.xmlns "http://www.dvb.org/mhp/" >

<!-- Declare the default prefix for this module -->
<!ENTITY % dvbhtml.prefix "dvbhtml" >

<!-- Declare the prefix and any prefixed namespaces that are required by    -->
<!-- this module. -->
<![%dvbhtml.prefixed;[
<!ENTITY % dvbhtml.pfx "%dvbhtml.prefix;:" >
<!ENTITY % dvbhtml.xmlns.extra.attrib
   "xmlns:%dvbhtml.prefix; %URI.datatype; #FIXED '%dvbhtml.xmlns;'" >
]]>
<!ENTITY % dvbhtml.pfx "" >

<!-- Declare a Parameter Entity (PE) that defines any external namespaces  -->
<!-- that are used by this module            -->
<!ENTITY % dvbhtml.xmlns.extra.attrib "" >

<!-- Declare a PE that defines the xmlns attributes for use by dvbhtml.    -->
<![%dvbhtml.prefixed;[
<!ENTITY % dvbhtml.xmlns.attrib
   "xmlns:%dvbhtml.prefix; %URI.datatype; #FIXED í%dvbhtml.xmlns;í
   %dvbhtml.xmlns.extra.attrib;"
>
]]>
<!ENTITY % dvbhtml.xmlns.attrib
   "xmlns %URI.datatype; #FIXED í%dvbhtml.xmlns;í
   %dvbhtml.xmlns.extra.attrib;"
>
<!-- Make sure that the dvbhtml namespace attributes are included on the   -->
<!-- XHTML attribute set    -->
<![%NS.prefixed;[
<!ENTITY % XHTML.xmlns.extra.attrib
   "%dvbhtml.xmlns.attrib;" >
]]>
<!ENTITY % XHTML.xmlns.extra.attrib "" >

<!-- end of dvbhtml-qname-1.mod ..................................... -->
<!-- ................................................................ -->
```

AA.1.4 DVB-HTML Content Model module

The DVB-HTML content model module works together with the DVB-HTML 1.0 DTD driver to customize the XHTML module implementations to the document type's specific requirements. This module is instantiated by the XHTML modular framework module.

It is defined below:

```
<!-- ................................................................ -->
<!--     DVB-HTML 1.0 Document Model Module       -->
<!-- ................................................................ -->
<!-- file: dvbhtml-model-1-0.mod     -->
<!-- ................................................................ -->

<!--  This is the DTD module for the DVB-HTML Document Model.

      The following formal public identifier shall be used to identify it:
            PUBLIC "-//DVB//ENTITIES DVB-HTML Document Model 1.0//EN"

   The following URL may be used to reference this file :
      "http://www.dvb.org/mhp/dtd/dvbhtml-model-1-0.mod"     -->

<!-- Document Model
```

```
       This module describes the groupings of elements that make up
       common content models for DVB-HTML elements.                         -->

<!-- ..............  Optional Elements in head  .................. -->

<!ENTITY % HeadOpts.mix   "(        %script.qname;
                                  | %style.qname;
                                  | %meta.qname;
                                  | %link.qname;
                                  | %object.qname;)*" >

<!-- .................  Miscellaneous Elements  .................. -->

<!-- script and noscript are used to contain scripts -->

<!ENTITY % Misc.extra           " | %script.qname;
                                  | %noscript.qname; " >

<!-- These elements are neither block nor inline, and can
            essentially be used anywhere in the document body. -->
<!ENTITY % Misc.class            " %Misc.extra; "  >

<!-- ....................  Inline Elements  ..................... -->

<!ENTITY % InlStruct.class      "   %br.qname;
                                  | %span.qname; " >

<!ENTITY % InlPhras.class       " | %em.qname;
                                  | %strong.qname;
                                  | %dfn.qname;
                                  | %code.qname;
                                  | %samp.qname;
                                  | %kbd.qname;
                                  | %var.qname;
                                  | %cite.qname;
                                  | %abbr.qname;
                                  | %acronym.qname;
                                  | %q.qname; " >

<!ENTITY % InlPres.class        " | %tt.qname;
                                  | %i.qname;
                                  | %b.qname;
                                  | %big.qname;
                                  | %small.qname;
                                  | %sub.qname;
                                  | %sup.qname; " >

<!ENTITY % I18n.class           " | %bdo.qname; " >

<!ENTITY % Anchor.class         " | %a.qname; " >

<!ENTITY % InlSpecial.class     " | %img.qname;
                                  | %map.qname;
                                  | %object.qname; " >

<!ENTITY % Control.class        " | %input.qname;
                                  | %select.qname;
                                  | %textarea.qname;
                                  | %label.qname;
                                  | %button.qname; " >


<!ENTITY % Inline.extra         " | %iframe.qname; " >


<!-- %Inline.class; includes all inline elements, used as a component in mixes -->
<!ENTITY % Inline.class           " %InlStruct.class;
                                    %InlPhras.class;
                                    %InlPres.class;
                                    %I18n.class;
```

```
                %Control.class;
                                %Anchor.class;
                                %InlSpecial.class;
                                %Inline.extra;" >

<!-- %InlNoAnchor.class; includes all non-anchor inline elements,
used as a component in mixes -->

<!ENTITY % InlNoAnchor.class      " %InlStruct.class;
                                  %InlPhras.class;
                                  %InlPres.class;
                                  %I18n.class;
                %Control.class;
                                  %InlSpecial.class;
                                  %Inline.extra;" >

<!-- %Inline-noa.mix; includes all non-anchor inlines -->
<!ENTITY % InlNoAnchor.mix        " %InlNoAnchor.class;
                                  %Misc.class;">

<!-- %Inline.mix; includes all inline elements, including %Misc.class; -->
<!ENTITY % Inline.mix             " %Inline.class;
                                  %Misc.class;" >


<!-- .....................  Block Elements  ..................... -->

<!ENTITY % Heading.class          " %h1.qname;
                                  | %h2.qname;
                                  | %h3.qname;
                                  | %h4.qname;
                                  | %h5.qname;
                                  | %h6.qname; " >

<!ENTITY % List.class             " %ul.qname;
                                  | %ol.qname;
                                  | %dl.qname; " >

<!ENTITY % BlkStruct.class        " %p.qname;
                                  | %div.qname; " >

<!ENTITY % BlkPhras.class       " | %pre.qname;
                                  | %blockquote.qname;
                                  | %address.qname; " >

<!ENTITY % BlkPres.class         "| %hr.qname; " >

<!ENTITY % BlkNoTable.extra      "| %form.qname;
                                  | %fieldset.qname; " >

<!ENTITY % Table.class     "| %table.qname; " >


<!ENTITY % Block.extra             "%Table.class;
                                  | %form.qname;
                                  | %fieldset.qname; " >

<!ENTITY % BlkNoTable.class        "%BlkStruct.class;
                                   %BlkPhras.class;
                                   %BlkPres.class;
                                   %BlkNoTable.extra;" >


<!-- %Block.class; includes all block elements, used as a component in mixes -->
<!ENTITY % Block.class             "%BlkStruct.class;
                                   %BlkPhras.class;
                                   %BlkPres.class;
                                   %Block.extra;" >

<!-- %Block.mix; includes all block elements plus %Misc.class; -->
<!ENTITY % Block.mix               "%Heading.class;
```

```
                                  | %List.class;
                                  | %Block.class;
                                    %Misc.class;" >

<!-- ................  All Content Elements  .................. -->

<!ENTITY % FlowNoTable.mix         "%Heading.class;
                                  | %List.class;
                                  | %BlkNoTable.class;
                                  | %Inline.class;
                                    %Misc.class;" >


<!-- %Flow.mix; includes all text content, block and inline -->
<!ENTITY % Flow.mix                "%Heading.class;
                                  | %List.class;
                                  | %Block.class;
                                  | %Inline.class;
                                    %Misc.class;" >

<!-- ..................................................................... -->
<!-- end of dvbhtml-model-1-0.mod                                         -->
<!-- ..................................................................... -->
```

Annex AB (normative): DVB HTML StyleSheet

In the absence of any other styling information for a page, the support application shall render using the following default stylesheet:

```
/*
  * Since MHP implementations may add element types, this rule prevents
  * any such elements from being displayed by default.  The following
  * rule restores the default "inline" value to HTML element types which
  * should be displayed inline.
  */
*               { display: none }
style, meta, link,
script, noscript,
br, span,
em, strong, dfn,
code, samp, kbd,
var, cite, abbr,
acronym, q,
tt, i, d, big,
small, sub, sup,
bdo, a,
img, map, object,
input, select,
textarea, label,
button          { display: inline }

address,
blockquote,
body, dd, div,
dl, dt, fieldset,
form, frame,
frameset, h1, h2,
h3, h4, h5, h6,
hr, noframes, ol,
p, pre, ul      { display: block }
object          { display: inline }
li              { display: list-item }
head            { display: none }
table           { display: table }
tr              { display: table-row }

/*
* NOTE: Removed for DVB-HTML, as these elements and these values of display
* property are not supported.
*
* thead          { display: table-header-group }
* tbody          { display: table-row-group }
* tfoot          { display: table-footer-group }
* col            { display: table-column }
* colgroup       { display: table-column-group }
*/
td, th          { display: table-cell }
caption         { display: table-caption }
th              { font-weight: bolder; text-align: center }
caption         { text-align: center }

/*
* NOTE: The padding here and the initial block below (in the @viewport
* rule) is defined such that the initial block matches the "Safe Action
* Area" and the content area of the BODY matches the "Safe Title Area".
* The Safe Action Area is the centre 90% of the screen; the Safe Title
* Area is the centre 80%. Percentages are not used to specify the body
* padding because both axes are interpreted with respect to the *width*
* of the containing block. Therefore the padding below is in pixels.
*
* NOTE: The sample HTML 4.0 stylesheet in the CSS2 specification, derived
* from a survey of existing User Agents, has "line-height: 1.33". However,
* the errata (as of 19980512) reduce this to 1.12em.
```

```
*/
body             { font-family: Tiresias; font-size: 26pt;
                padding: 29px 36px; line-height: 1.12em;
                opacity: 0;
                background-color: rgb(0, 0, 0);
                color: rgb(255, 255, 255); }

/*
* NOTE: The margins here are chosen to be 26pt/18px (according to the
* information on Tiresias in TAM232r16). They are
* expressed in "em" units so overriding stylesheets can change just the
* font-size and have the margins scaled.
*/
h6, h4, h2       { text-transform: uppercase }
h6               { font-size: 24pt; margin: 1.08em 0 }
h5, h4           { font-size: 26pt; margin: 1em 0 }
h3, h2           { font-size: 31pt; margin: 0.84em 0 }
h1               { font-size: 36pt; margin: 0.72em 0 }

/*
* NOTE: The vertical margin here is left at 1.33em despite the CSS 2 errata
* mentioned above.
*/
blockquote, dl, fieldset, form, ol, p, ul { margin: 1.33em 0 }
h1, h2, h3, h4, h5, h6,
strong           { font-weight: bolder }
blockquote       { margin-left: 1.5em; margin-right: 1.5em }
address, cite,
em, i, var       { font-style: italic }
pre, code, kbd,
samp             { font-family: monospace }
pre              { white-space: pre }
big              { font-size: larger }
small, sub, sup  { font-size: smaller }
sub              { vertical-align: sub }
sup              { vertical-align: super }
hr               { border: 1px solid }
ol, ul, dd       { margin-left: 1.5em }
ol               { list-style-type: decimal }
ol ul, ul ol,
ul ul, ol ol     { margin-top: 0; margin-bottom: 0 }

br:before        { content: "\A" }

abbr, acronym    { letter-spacing: 0.1em }

:link            { color: rgb(0, 127, 255) } /* opaque blue */
:focus           { color: rgb(0, 127, 255); /* opaque blue */
                   outline: 2px solid rgb(255, 0, 127) } /* opaque blue */
:active          { color: rgb(255, 31, 0); /* opaque red */
                   outline: 2px solid rgb(255, 31, 0) } /* opaque red */
:visited         { color: rgb(191, 0, 127) } /* opaque violet */

/* Begin bidirectionality settings (do not change) */
bdo[dir="ltr"]   { direction: ltr; unicode-bidi: bidi-override }
bdo[dir="rtl"]   { direction: rtl; unicode-bidi: bidi-override }

*[dir="ltr"]     { direction: ltr; unicode-bidi: embed }
*[dir="rtl"]     { direction: rtl; unicode-bidi: embed }

/* Elements that are block-level in HTML4 */
/*
* NOTE: Removed for DVB-HTML, as these elements and these values of display
* property are not supported: thead, tbody, tfoot, col, colgroup
*/
address, blockquote, body, dd, div, dl, dt, fieldset,
form, frame, frameset, h1, h2, h3, h4, h5, h6, iframe,
noscript, noframes, object, ol, p, ul,
hr, pre, li, table, tr, td, th, caption { unicode-bidi: embed }
/* End bidi settings */
```

```
@viewport {
  /* scene: defaults to rect(0%, 0%, 100%, 100%), full screen */
  /* horizontal-resolution: defaults to 720px; */
  /* vertical-resolution: 576px; */
  /* By default, stay within Safe Action Area (centre 90%) */
  /* initial: (36px, 29px, 648px, 518px); */
  initial: rect(10%, 10%, 90%, 90%);
  type: none;
  background: rgb(0, 0, 0);
  area: screen;
}
```

Annex AC (normative): ECMAScript Binding

This appendix contains the complete ECMAScript [81] binding for the DVB HTML Document Object Model ECMAScript Language Binding.

AC.1 ECMAScript language binding

Since ECMAScript is a prototype-based language, the DOM implementation using this language can add mechanisms which can't be defined using the IDL language. This section defines two sets of functionnalities that an ECMAScript DOM DVB implementation shall support.

For other considerations concerning the ECMAScript language binding, please refer to the appendix D of HTML 4 [90].

AC.1.1 Shortcuts to access objects

The IDL interfaces defined in section 8.11.4.6, "DVB-HTML element related interfaces" on page 140 provide access to some objects using DVB HTML collections. For example, the third form element of a document can be accessed by using the following instruction, where `document` is the name of the object representing the DVB HTML document :

```
document.forms[2]
```

In this perspective, each object shall add a new property for each object that it encapsulates. The name of the property shall be the identifier of the corresponding encapsulated object (i.e. the value of the `id` attribute inherited by the `DVBHTMLElement` interface). The document will fail to parse if the id of an element would rename a property of the host object. Setting a property on the ECMAScript GlobalObject will override the shortcut of the same name.

This property only exists if the element has an id attribute. This shall be applied for the following interfaces:

- `DVBHTMLAnchorElement`,
- `DVBHTMLMapElement`,
- `DVBHTMLAreaElement`,
- `DVBHTMLButtonElement`,
- `DVBHTMLFrameElement`,
- `DVBHTMLFramesetElement`,
- `DVBHTMLImageElement`,
- `DVBHTMLInputElement`,
- `DVBHTMLOptionElement`,
- `DVBHTMLSelectElement`,
- `DVBHTMLTextareaElement`.

For example, if a document contains a form whose identifier is `myForm`, the form can be accessed using the following equivalent instructions :

```
document.myForm
document["myForm"]
myForm // since document is the global object
```

Subsequently, if the form contains a button identified by the `myButton` string, the button can be accessed using :

```
document.myForm.myButton
```

AC.1.2 Grouping the objects of a form

In DVB HTML, the following elements of a form may belong to different groups: button, input, select, textarea. The `name` attribute of those elements identifies this group. The `DVBHTMLFormElement` interface doesn't represent this relation. Instead, all the elements included in the form are accessed by the `elements` collection. To determine the elements belonging to the same group, an application can list all the elements, looking for the ones with the `name` attribute equals to a particular group name.

A DOM DVB HTML implementation shall provide an easier access by integrating a property in a form element for each group included in this form. The property is a table containing all the elements of the group. The name of the property shall be the `name` attribute of the elements which corresponds to the name of the group. For example, if the DVB HTML document contains a form identified by `myForm`, with two elements having their name attribute set to `myGroup`, these buttons will be accessed using the following instructions :

```
document.myForm.myGroup[0]
document.myForm.myGroup[1]
```

The rule defined in the previous section also applies. Thus, if the two elements are respectively identified by `myInput1`, and `myInput2`, they can also be accessed by the following instructions :

```
document.myForm.myInput1
document.myForm.myInput2
```

Methods that attempt to set read-only attributes shall cause the DOMException with the error code NO_ MODIFICATION_ALLOWED_ERR to be raised.

AC.2 The DVB-HTML host objects

AC.2.1 Object DVBHTMLCollection

The DVBHTMLCollection object has the following properties:

length: This read-only property is of type Number.

The DVBHTMLCollection object has the following methods:

item(index): This method returns a Node object.

The **index** parameter is of type Number.

Note: This object can also be dereferenced using square bracket notation (e.g. obj[1]).

Dereferencing with an integer index is equivalent to invoking the item method with that index.

namedItem(name): This method returns a Node object.

The **name** parameter is of type String.

Note: This object can also be dereferenced using square bracket notation (e.g. obj["foo"]).Dereferencing using a string index is equivalent to invoking the namedItem method with that name.

NOTE: In DVB HTML names are not used for identification purposes, so only Nodes with id attributes will appear in a DVBHTMLCollection object.

See:

- 8.11.4.5.1, "DVB-HTMLCollection Interface" on page 137

AC.2.2 Object DVBHTMLDocument

DVBHTMLDocument has the all the properties and methods of the Document object as well as the properties and methods defined below.

The DVBHTMLDocument object has the following properties:

title: This property is of type String.

referrer: This read-only property is of type String.

domain: This read-only property is of type String.

URL: This read-only property is of type String.

body: This property is a DVBHTMLElement object.

images: This read-only property is a DVBHTMLCollection object.

links: This read-only property is a DVBHTMLCollection object.

forms: This read-only property is a DVBHTMLCollection object.

anchors: This read-only property is a DVBHTMLCollection object.

cookie: This property is of type String.

The DVBHTMLDocument object has the following methods:

open(): This method has no return value. The ECMAScript context which opened the new document cannot be destroyed until it calls document.close().

close(): This method has no return value. Deletes the ECMAScript context that opened the document.

write(text): This method has no return value.

The **text** parameter is of type String.

writeln(text): This method has no return value.

The **text** parameter is of type String.

See:

- 8.11.4.5.2, "DVBHTMLDocument Interface" on page 138

AC.2.3 Object DVBHTMLElement

DVBHTMLElement has the all the properties and methods of the Element object as well as the properties and methods defined below.

The DVBHTMLElement object has the following properties:

id: This property is of type String.

title: This property is of type String.

lang: This property is of type String; This property can raise a DOMException on setting.

dir: This property is of type String; This property can raise a DOMException on setting.

className: This property is of type String.

AC.2.4 Object DVBHTMLFormElement

DVBHTMLFormElement has the all the properties and methods of the DVBHTMLElement object as well asthe properties and methods defined below.

The DVBHTMLFormElement object has the following properties:

elements: This read-only property is a DVBHTMLCollection object.

length: This read-only property is of type Number.

acceptCharset: This property is of type String.

action: This property is of type String.

enctype: This property is of type String.

method: This property is of type String; This property can raise a DOMException on setting.

target: This property is of type String.

The DVBHTMLFormElement object has the following methods:

submit(): This method has no return value.

reset(): This method has no return value.

See:

- 8.11.4.6.6, "DVBHTMLFormElement Interface" on page 143

AC.2.5 Object DVBHTMLSelectElement

DVBHTMLSelectElement has the all the properties and methods of the DVBHTMLElement object as well asthe properties and methods defined below.

The DVBHTMLSelectElement object has the following properties:

type: This read-only property is of type String.

selectedIndex: This property is a long object.

value: This property is of type String.

length: This read-only property is of type Number

form: This read-only property is a DVBHTMLFormElement object.

options: This read-only property is a DVBHTMLCollection object.

disabled: This property is of type Boolean.

multiple: This read-only property is of type Boolean.

name: This property is of type String.

size: This property is of type Number.

The DVBHTMLSelectElement object has the following methods:

add(element, before): This method has no return value.

The **element** parameter is a DVBHTMLElement object.

The **before** parameter is a DVBHTMLElement object.

This method can raise a **DOMException** object.

remove(index): This method has no return value.

The **index** parameter is of type Number.

blur(): This method has no return value.

focus(): This method has no return value.

See:

- 8.11.4.6.14, "DVBHTMLSelectElement Interface" on page 150

AC.2.6 Object DVBHTMLOptionElement

DVBHTMLOptionElement has the all the properties and methods of the DVBHTMLElement object as well as the properties and methods defined below.

The DVBHTMLOptionElement object has the following properties:

form: This read-only property is a DVBHTMLFormElement object.

defaultSelected: This property is of type Boolean.

text: This read-only property is of type String.

index: This read-only property is of type Number.

disabled: This property is of type Boolean.

label: This property is of type String.

selected: This property is of type Boolean.

value: This property is of type String.

See:

- 8.11.4.6.13, "DVBHTMLOptionElement Interface" on page 149

AC.2.7 Object DVBHTMLInputElement

DVBHTMLInputElement has the all the properties and methods of the DVBHTMLElement object as well as the properties and methods defined below.

The DVBHTMLInputElement object has the following properties:

defaultValue: This property is of type String.

defaultChecked: This property is of type Boolean.

form: This read-only property is a DVBHTMLFormElement object.

accept: This property is of type String.

accessKey: This property is of type String.

alt: This property is of type String.

checked: This property is of type Boolean.

disabled: This property is of type Boolean.

maxLength: This property is of type Number.

name: This property is of type String.

readOnly: This property is of type Boolean.

size: This property is of type String.

src: This property is of type String.

type: This read-only property is of type String.

useMap: This read-only property is of type String.

value: This property is of type String.

The DVBHTMLInputElement object has the following methods:

blur(): This method has no return value.

focus(): This method has no return value.

select(): This method has no return value.

click(): This method has no return value.

See:

- 8.11.4.6.12, "DVBHTMLInputElement Interface" on page 147

AC.2.8 Object DVBHTMLTextAreaElement

DVBHTMLTextAreaElement has the all the properties and methods of the DVBHTMLElement object as well as the properties and methods defined below.

The DVBHTMLTextAreaElement object has the following properties:

defaultValue: This property is of type String.

form: This read-only property is a DVBHTMLFormElement object.

accessKey: This property is of type String.

cols: This read-only property is a long object.

disabled: This property is of type Boolean.

name: This property is of type String.

readOnly: This property is of type Boolean.

rows: This property is a long object.

type: This read-only property is of type String.

value: This property is of type String.

The DVBHTMLTextAreaElement object has the following methods:

blur(): This method has no return value.

focus(): This method has no return value.

select(): This method has no return value.

See:

- 8.11.4.6.15, "DVBHTMLTextAreaElement Interface" on page 151

AC.2.9 Object DVBHTMLButtonElement

DVBHTMLButtonElement has the all the properties and methods of the DVBHTMLElement object as well as the properties and methods defined below.

The DVBHTMLButtonElement object has the following properties:

form: This read-only property is a DVBHTMLFormElement object.

accessKey: This property is of type String.

disabled: This property is of type Boolean.

name: This property is of type String.

type: This read-only property is of type String.

value: This property is of type String.

See:

- 8.11.4.6.5, "DVBHTMLButtonElement Interface" on page 142

AC.2.10 Object DVBHTMLAnchorElement

DVBHTMLAnchorElement has the all the properties and methods of the DVBHTMLElement object as well as the properties and methods defined below.

The DVBHTMLAnchorElement object has the following properties:

accessKey: This property is of type String.

charset: This property is of type String.

href: This property is of type String.

hreflang: This property is of type String.

target: This property is of type String.

type: This property is of type String.

The DVBHTMLAnchorElement object has the following methods:

blur(): This method has no return value.

focus(): This method has no return value.

See:

- 8.11.4.6.2, "DVBHTMLAnchorElement Interface" on page 141

AC.2.11 Object DVBHTMLImageElement

DVBHTMLImageElement has the all the properties and methods of the DVBHTMLElement object as well as the properties and methods defined below.

The DVBHTMLImageElement object has the following properties:

lowSrc: This property is of type String.

alt: This property is of type String.

height: This property is of type String.

longDesc: This property is of type String.

src: This property is of type String.

useMap: This read-only property is of type String.

width: This property is of type String.

See:

- 8.11.4.6.10, "DVBHTMLImageElement Interface" on page 145

AC.2.12 Object DVBHTMLObjectElement

DVBHTMLObjectElement has the all the properties and methods of the DVBHTMLElement object as well as the properties and methods defined below.

The DVBHTMLObjectElement object has the following properties:

form: This read-only property is a DVBHTMLFormElement object.

code: This property is of type String.

archive: This property is of type String.

codeBase: This property is of type String.

codeType: This property is of type String.

data: This property is of type String.

declare: This property is of type Boolean.

height: This property is of type String.

standby: This property is of type String.

tabIndex: This property is a long object.

type: This property is of type String.

useMap: This read-only property is of type String.

width: This property is of type String.

contentDocument: This read-only property is a Document object.

See:

- 8.11.4.6.11, "DVBHTMLObjectElement Interface" on page 146

AC.2.13 Object DVBHTMLMapElement

DVBHTMLMapElement has the all the properties and methods of the DVBHTMLElement object as well as the properties and methods defined below.

The DVBHTMLMapElement object has the following properties:

areas: This read-only property is a DVBHTMLCollection object.

See:

- 8.11.4.6.3, "DVBHTMLMapElement Interface" on page 141

AC.2.14 Object DVBHTMLAreaElement

DVBHTMLAreaElement has the all the properties and methods of the DVBHTMLElement object as well as the properties and methods defined below.

The DVBHTMLAreaElement object has the following properties:

accessKey: This property is of type String.

alt: This property is of type String.

href: This property is of type String.

noHref: This property is of type Boolean.

target: This property is of type String.

See:

- 8.11.4.6.4, "DVBHTMLAreaElement Interface" on page 142

AC.2.15 Object DVBHTMLFrameSetElement

DVBHTMLFrameSetElement has the all the properties and methods of the DVBHTMLElement object as well as the properties and methods defined below.

The DVBHTMLFrameSetElement object has the following properties:

cols: This read-only property is of type String.

rows: This read-only property is of type String.

See:

- 8.11.4.6.8, "DVBHTMLFrameSetElement Interface" on page 145

AC.2.16 Object DVBHTMLFrameElement

DVBHTMLFrameElement has the all the properties and methods of the DVBHTMLElement object as well as the properties and methods defined below.

The DVBHTMLFrameElement object has the following properties:

frameBorder: This read-only property is of type String.

longDesc: This property is of type String.

marginHeight: This read-only property is of type String.

marginWidth: This read-only property is of type String.

scrolling: This read-only property is of type String.

src: This property is of type String.

contentDocument: This read-only property is a Document object.

See:

- 8.11.4.6.7, "DVBHTMLFrameElement Interface" on page 144

AC.2.17 Object DVBHTMLIFrameElement

DVBHTMLIFrameElement has the all the properties and methods of the DVBHTMLElement object as well as the properties and methods defined below.

The DVBHTMLIFrameElement object has the following properties:

frameBorder: This read-only property is of type String.

longDesc: This property is of type String.

marginHeight: This read-only property is of type String.

marginWidth: This read-only property is of type String.

scrolling: This read-only property is of type String.

src: This property is of type String.

contentDocument: This read-only property is a Document object.

See:

- 8.11.4.6.9, "DVBHTMLIFrameElement Interface" on page 145

AC.3 DVB-HTML event host objects

AC.3.1 Object DVBLifecycleEvent

DVBLifecycleEvent has the all the properties and methods of the DOMEvent object as well as the properties and methods defined below.

The DVBLifecycleEvent object has the following properties:

detail : this readonly property is of type Number

The DVBHTMLAnchorElement object has the following methods:

initDVBLifecycleEvent(typeArg, canBubbleArg, cancelableArg, detailArg): This method has no return value.

The **typeArg** parameter is of type String

The **canBubbleArg** parameter is of type Boolean

The **cancelableArg** parameter is of type Boolean

The **detailArg** parameter is of type Number

See:

- 8.11.2.2.1, "Interface DVBLifecycleEvent" on page 129

AC.4 DVB-HTML environment host objects

AC.4.1 Navigator Object

appCodeName: this read-only property is of type String ;

appName: this read-only property is of type String ;

appVersion: this read-only property is of type String ;

userAgent: this read-only property is of type String ;

See:

- 8.11.7.2.1, "Navigator Object" on page 154

AC.4.2 Window Object

Window object has the all the properties and methods defined below.

The Window object has the following properties:

document: this read-only property is of type DVBHTMLDocument ;

DOMImplementation: this read-only property is of type DVBDOMImplementation ;

frames: this read-only property is of type DVBHTMLCollection ;

length: this read-only property is of type Number

location: this property is of type Location ;

name: this read-only property is of type String ;

navigator: this read-only property is of type Navigator

parent: this read-only property is of type Window ;

window: this read-only property is of type Window

self: this read-only property is of type Window ;

status: this property is of type String ;

defaultStatus: this property is of type String ;

top: this read-only property is of type Window

The Window object has the following methods:

clearTimeout(timerId): This method has no return value

The parameter **timerId** is of type Number

open(url, name, features): This method returns a Window object

The parameter **url** is of type String

The parameter **name** is of type String

The parameter **features** is of type String

setTimeout(statement, delay): This method returns a Number

The **statement** parameter is of type String

The **delay** parameter is of type Number

See:

- 8.11.7.2.2, "Window object" on page 154

AC.4.3 Location object

:Location has the all the properties and methods defined below.

The Location object has the following properties:

hash; This property is of type String

host; This property is of type String

hostname; This property is of type String

href; This property is of type String

pathname; This property is of type String

port; This property is of type String

protocol; This property is of type String

search: This property is of type String

See:

- 8.11.7.2.3, "Location object." on page 157

AC.5 DVB-HTML CSS host objects

AC.5.1 DVBInlineStyle

The DVBElement object for elements supporting the 'style' attribute has the additional properties:

style: This read-only property is of type CSS2Properties

See:

- 8.11.8.1.1, "DVBCSSInlineStyle" on page 157

AC.5.2 DVBCSSStyle

The DVBElement object for the root element in a top level document has the additional properties:

viewport: This read-only property is of type DVBCSSViewportRule

See:

- 8.11.8.1.2, "DVBCSSStyle" on page 158

AC.5.3 DVBCSSViewportRule

DVBCSSviewportRule has the all the properties and methods of the CSSRule object as well as the properties and methods dened below.

style: This read-only property is of type DVBCSSViewportProperties

See:

- 8.11.8.1.3, "DVBCSSViewportRule" on page 158

AC.5.4 DVBCSSViewportProperties

DVBCSSViewportProperties has the following properties:

pseudoClass: This property is of type String

area: This property is of type String

backgroundVideoTransform: This property is of type Array of String

backgroundVideo: This property is of type Array of String

backgroundVideoPreserveAspect: This property is of type Array of String

backgroundVideoClip: This property is of type Array of String

backgroundVideoRectangle: This property is of type Array of String

background: This property is of type String

backgroundImageRectangle: This property is of type String

initial: This property is of type String

verticalResolution: This property is of type Number

horizontalResolution: This property is of type Number

scene: This property is of type String"

See:

- 8.11.8.1.4, "DVBCSSViewportProperties" on page 158

Annex AD (normative): Support for DVB-HTML

AD.1 Java bindings to DVB extensions

AD.1.1 The org.dvb.dom.dvbhtml package

All of these are in the package `org.dvb.dom.dvbhtml`.

AD.1.1.1 DVBHTMLButtonElement

```
public interface DVBHTMLButtonElement
   extends DVBHTMLElement {
   public String getAccessKey();
   public void setAccessKey(String key);
   public boolean getDisabled();
   public void setDisabled(boolean disabled)
   public DVBHTMLFormElement getForm();
   public String getName();
   public void setName(String name);
   public String getType();
   public void setValue(String value);
   public String getValue();
   public void blur();
   public void focus();
};
```

AD.1.1.2 DVBHTMLCollection

See:

- 8.11.4.5.1, "DVB-HTMLCollection Interface" on page 137
- AC.2.1, "Object DVBHTMLCollection" on page 1284

```
public interface DVBHTMLCollection {
//Methods
   public Node getIdentifiedItem(String name)
   public Node getItem(Number index)
   public Number getLength()
}
```

AD.1.1.3 DVBHTMLDocument

See:

- 8.11.4.5.2, "DVBHTMLDocument Interface" on page 138
- AC.2.2, "Object DVBHTMLDocument" on page 1284

```
public interface DVBHTMLDocument
   extends Document {
//Methods
   public DVBHTMLCollection getAnchors()
   public DVBHTMLElement getBody()
   public String getCookie()
   public String getDomain()
   public DVBHTMLCollection getForms()
   public DVBHTMLCollection getImages()
   public DVBHTMLCollection getLinks()
   public String getReference()
   public String getTitle()
   public void setTitle(String title)
   public String getURL()
   public void open()
```

```
      throws IllegalStateException
   public void close()
      throws IllegalStateException
   public void write(String text)
      throws IllegalStateException
   public void writeIn(String text)
      throws IllegalStateException
}
```

AD.1.1.4 DVBHTMLElement

See:

- 8.11.4.6.1, "DVBHTMLElement Interface" on page 140
- AC.2.3, "Object DVBHTMLElement" on page 1285

```
public interface DVBHTMLElement
   extends Element {
   public String getClassName()
   public void setClassName()
   public String getDir()
   public void setDir()
   public String getId()
   public void setId(String id)
   public String getLang()
   public void setLang(String lang)
   public String getTitle()
   public void setTitle(String)
}
```

AD.1.1.5 DVBHTMLFormElement

See:

- 8.11.4.6.6, "DVBHTMLFormElement Interface" on page 143
- AC.2.4, "Object DVBHTMLFormElement" on page 1286

```
public interface DVBHTMLFormElement
   extends DVBHTMLElement {
   public String getAction()
   public void setAction(String action)
   public String getCharSet()
   public void setCharSet(String charset)
   public DVBHTMLCollection getElements()
   public String getEncType()
   public void setEncType(String action)
   public long getLength()
   public String getMethod()
   public void setMethod(String action)
   public String getTarget()
   public void setTarget(String action)
   public void submit()
   public void reset()
}
```

AD.1.1.6 DVBHTMLSelectElement

See:

- 8.11.4.6.14, "DVBHTMLSelectElement Interface" on page 150
- AC.2.5, "Object DVBHTMLSelectElement" on page 1286

```
public interface DVBHTMLSelectElement
   extends DVBHTMLElement {
   public String getType()
```

```
   public long getSelectedIndex()
   public void setSelectedIndex(long index)
   public String getValue()
   public void setvalue(String value)
   public long getLength()
   public DVBHTMLFormElement getForm()
   public DVBHTMLCollection getOptions()
   public boolean isDisabled()
   public void setDisabled(Boolean disabled)
   public boolean isMultiple()
   public String getName()
   public void setName(String name)
   public long getSize()
   public void setSize(long index)
   public long getTabIndex()
   public void setTabIndex(long index)
   public void add(DVBHTMLElement element, DVBHTMLElement before)
      throws DOMException
   public void remove(long index)
   public void blur()
   public void focus()
}
```

AD.1.1.7 DVBHTMLOptionElement

See:

- 8.11.4.6.13, "DVBHTMLOptionElement Interface" on page 149
- AC.2.6, "Object DVBHTMLOptionElement" on page 1287

```
public interface DVBHTMLOptionElement
   extends DVBHTMLElement {
   public boolean isDefaultSelected()
   public void setDefaultSelected(boolean defaultselected)
   public boolean isSelected()
   public void setSelected(boolean selected)
   public boolean isDisabled()
   public void setDisabled(boolean disabled)
   public DVBHTMLFormElement getForm()
   public long getIndex()
   public String getLabel()
   public void setLabel(String Lable)
   public String getText()
   public void setText(String text)
   public String getValue()
   public void setValue(String value)
}
```

AD.1.1.8 DVBHTMLInputElement

See:

- 8.11.4.6.12, "DVBHTMLInputElement Interface" on page 147
- AC.2.7, "Object DVBHTMLInputElement" on page 1287

```
public interface DVBHTMLInputElement
   extends DVBHTMLElement {
   public boolean isChecked()
   public void setChecked(boolean checked)
   public boolean isDefaultChecked()
   public void setDefaultChecked(boolean defaultchecked)
   public boolean isDisabled()
   public void setDisabled(boolean disabled)
   public boolean isReadOnly()
   public void setReadOnly(boolean readonly)
   public String getAccept()
   public void setAccept(String accept)
```

```
   public String getAccessKey()
   public void setAccessKey(String accesskey)
   public String getAlt()
   public void setAlt(String alt)
   public String getDefaultValue()
   public void setDefaultValue(String value)
   public DVBHTMLFormElement getForm()
   public long getMaxLength()
   public void setMaxLength(long length)
   public String getName()
   public void setName(String name)
   public String getSize()
   public void setSize(String size)
   public String getSrc()
   public void setSrc(String src)
   public String getType()
   public void setType(String type)
   public String getUseMap()
   public String getValue()
   public void setValue(String value)
   public void blur()
   public void click()
   public void focus()
   public void select()
}
```

AD.1.1.9 DVBHTMLTextAreaElement

See:

- 8.11.4.6.15, "DVBHTMLTextAreaElement Interface" on page 151
- AC.2.8, "Object DVBHTMLTextAreaElement" on page 1288

```
public interface DVBHTMLTextAreaElement
   extends DVBHTMLElement {
   public boolean isDisabled()
   public void setDisabled(boolean disabled)
   public String getAccessKey()
   public void setAccessKey(String accesskey)
   public String getDefaultValue()
   public void setDefaultValue(String value)
   public DVBHTMLFormElement getForm()
   public String getName()
   public void setName(String name)
   public String getType()
   public void setType(String type)
   public String getValue()
   public void setValue(String value)
}
```

AD.1.1.10 DVBHTMLAnchorElement

See:

- 8.11.4.6.2, "DVBHTMLAnchorElement Interface" on page 141
- AC.2.10, "Object DVBHTMLAnchorElement" on page 1289

```
public interface DVBHTMLAnchorElement
   extends DVBHTMLElement {
   public String getAccessKey()
   public void setAccessKey(String accesskey)
   public String getCharSet()
   public void setCharSet(String charset)
   public String getHRef()
   public void setHRef(String href)
   public String getHRefLang()
   public void setHRefLang(String hreflang)
```

```
   public String getTarget()
   public void setTarget(String target)
   public String getType()
   public void setType(String type)
   public void blur()
   public void focus()
}
```

AD.1.1.11 DVBHTMLImageElement

See:

- 8.11.4.6.10, "DVBHTMLImageElement Interface" on page 145
- AC.2.11, "Object DVBHTMLImageElement" on page 1290

```
public interface DVBHTMLImageElement
   extends DVBHTMLElement {
   public String getLOwSrc()
   public void setLowSrc(String lowsrc)
   public String getAlt()
   public void setAlt(String alt)
   public String getHeight()
   public void setHeight(String height)
   public String getLongDesc()
   public void setLongDesc(String longdesc)
   public String getArc()
   public void setArc(String arc)
   public String getUsemap()
   public void setUseMap(String usemap)
   public String getWidth()
   public void setWidth(String width)
}
```

AD.1.1.12 DVBHTMLObjectElement

See:

- 8.11.4.6.11, "DVBHTMLObjectElement Interface" on page 146
- AC.2.12, "Object DVBHTMLObjectElement" on page 1290

```
public interface DVBHTMLObjectElement
   extends DVBHTMLElement {
   public boolean isDeclare()
   public void setDeclare(boolean declare)
   public DVBHTMLFormElement getForm()
   public String getCode()
   public void setCode(String code)
   public String getArchive()
   public void setArchive(String archive)
   public String getCodeBase()
   public void setCodeBase(String codebase)
   public String getCodeType()
   public void setCodeType(String codetype)
   public String getData()
   public void setData(String data)
   public String getHeight()
   public void setHeight(String height)
   public String getStandby()
   public void setStandby(String standby)
   public long getTabIndex()
   public void setTabIndex(String index)
   public String getType()
   public void setType(String type)
   public String getUseMap()
   public void setUseMap(String usemap)
   public String getWidth()
   public void setWidth(String width)
```

```
   public Document getContentDocument()
}
```

AD.1.1.13 DVBHTMLMapElement

See:

- 8.11.4.6.3, "DVBHTMLMapElement Interface" on page 141
- AC.2.13, "Object DVBHTMLMapElement" on page 1291

```
public interface DVBHTMLMapElement
   extends DVBHTMLElement {
   public DVBHTMLCollection getAreas()
}
```

AD.1.1.14 DVBHTMLAreaElement

See:

- 8.11.4.6.4, "DVBHTMLAreaElement Interface" on page 142
- AC.2.14, "Object DVBHTMLAreaElement" on page 1291

```
public interface DVBHTMLAreaElement
   extends DVBHTMLElement {
   public boolean isNoHRef()
   public void setNoHRef(boolean nohref)
   public String getAccessKey()
   public void setAccessKey(String accesskey)
   public String getAlt()
   public void setAlt(String alt)
   public String getHRef()
   public void setHRef(String href)
   public String getTarget()
   public void setTarget(String target)
}
```

AD.1.1.15 DVBHTMLFrameSetElement

See:

- 8.11.4.6.8, "DVBHTMLFrameSetElement Interface" on page 145
- AC.2.15, "Object DVBHTMLFrameSetElement" on page 1291

```
public interface DVBHTMLFrameSetElement
   extends DVBHTMLElement {
   public String getCols()
   public void setCols(String cols)
   public String getRows()
   public void setRows(String rows)
}
```

AD.1.1.16 DVBHTMLFrameElement

See:

- 8.11.4.6.7, "DVBHTMLFrameElement Interface" on page 144
- AC.2.16, "Object DVBHTMLFrameElement" on page 1291

```
public interface DVBHTMLFrameElement
   extends DVBHTMLElement {
   public Document getContentDocument()
   public String getFrameBorder()
```

```
   public void setFraneBorder(String border)
   public String getLongDesc()
   public void setLongDesc(String longdesc)
   public String getMarginHeight()
   public void setMarginHeight(String marginheight)
   public String getMarginWidth()
   public void setMarginWidth(String marginwidth)
   public String getScrolling()
   public void setScrolling(String scrolling)
   public String getSrc()
   public void setSrc(String src)
}
```

AD.1.1.17 DVBHTMLIFrameElement

See:

- 8.11.4.6.9, "DVBHTMLIFrameElement Interface" on page 145
- AC.2.17, "Object DVBHTMLIFrameElement" on page 1292

```
public interface DVBHTMLIFrameElement
   extends DVBHTMLElement {
   public String getAlign()
   public void setAlign(String align)
   public Document getContentDocument()
   public String getFrameBorder()
   public void setFraneBorder(String border)
   public String getHeight()
   public void setHeight(String height)
   public String getLongDesc()
   public void setLongDesc(String longdesc)
   public String getMarginHeight()
   public void setMargineHeight(String marginheight)
   public String getMarginWidth()
   public void setMarginWidth(String marginwidth)
   public String getName()
   public void setName(String name)
   public String getScrolling()
   public void setScrolling(String scrolling)
   public String getSrc()
   public void setSrc(String src)
   public String getWidth()
   public void setWidth(String width)
}
```

AD.1.2 The org.dvb.dom.css package

All of these are in the package `org.dvb.dom.css`.

AD.1.2.1 DVBInlineStyle

This interface shall be implemented by objects that implement the `org.w3c.dom.Element` interface and which represent elements that support the style attribute.

```
public interface DVBCSSInlineStyle {
   public CSS2Properties getStyle();
};
```

See:

- 8.11.8.1.1, "DVBCSSInlineStyle" on page 157
- AC.5.1, "DVBInlineStyle" on page 1294

AD.1.2.2 DVBCSSStyle

This interface shall be implemented by objects that implement the `org.w3c.dom.Element` interface that represent the root element of a document.

```
public interface DVBCSSStyle {
   public DVBCSSViewportRule getViewport();
};
```

See:

- 8.11.8.1.2, "DVBCSSStyle" on page 158
- AC.5.2, "DVBCSSStyle" on page 1294

AD.1.2.3 DVBCSSViewportRule

```
public interface DVBCSSViewportRule extends org.w3c.dom.CSSRule {
   public DVBCSSViewportProperties getStyle();
};
```

See:

- 8.11.8.1.3, "DVBCSSViewportRule" on page 158
- AC.5.3, "DVBCSSViewportRule" on page 1295

AD.1.2.4 DVBCSSViewportProperties

```
public interface DVBCSSViewportProperties {
   public String getPseudoClass();
   public String getArea();
   public void setArea(String area);
   public String[] getBackgroundVideoTransform();
   public void setBackgroundVideoTransform(String transform[]);
   public String[] getBackgroundVideo();
   public void setBackgroundVideo(String video[]);
   public String[] getBackgroundVideoPreserveAspect();
   public void setBackgroundVideoPreserveAspect(String aspect[]);
   public String[] getBackgroundVideoClip();
   public void setBackgroundVideoClip(String clip[]);
   public String[] getBackgroundVideoRectangle()
   public void setBackgroundVideoRectangle(String rectangle[]);
   public String getBackground();
   public void setBackground(String background);
   public String getBackgroundImageRectangle();
   public void setBackgroundImageRectangle(String rect);
   public String getInitial();
   public void setInitial(String initial);
   public int getVerticalResolution();
   public void setVerticalResolution(int res);
   public int getHorizontalResolution();
   public void setHorizontalResolution(int res);
   public String getScene();
   public void setScene(String scene);
};
```

See:

- 8.11.8.1.4, "DVBCSSViewportProperties" on page 158
- AC.5.4, "DVBCSSViewportProperties" on page 1295

AD.1.3 The org.dvb.dom.environment package

All of these are in the package org.dvb.dom.environment.

AD.1.3.1 Navigator

See:

- 8.11.7.2.1, "Navigator Object" on page 154
- AC.4.1, "Navigator Object" on page 1293

```
public class Navigator
   extends java.lang.Object {
   public Navigator()
   public Navigator(String appname, String appcodename,
      String appversion, String useragent)
   public String getAppCodeName()
   public String getAppName()
   public String getAppVersion()
   public String getUserAgent()
}
```

AD.1.3.2 Window

See:

- 8.11.7.2.2, "Window object" on page 154
- AC.4.2, "Window Object" on page 1293

```
public class Window
   extends java.lang.Object {
   public Window()
   public Window(DVBHTMLDocument document, DVBDOMImpl impl,
      DVBHTMLCollection frames, long length, Navigator navigator,
      Window parent, Window window, Window top)
   public String getDefaultStatus()
   public void setDefaultStatus(String defaultstatus)
   public DVBHTMLDocument getDocument()
   public DVBDOMImpl getDVBDOMImpl()
   public DVBHTMLCollection getFranes()
   public long getLength()
   public Location getLocation()
   public void setLocation(Location location)
   public String getName()
   public void setName(String name)
   public Navigator getNavigator()
   public Window getParent()
   public Window getWindow()
   public Window getSelf()
   public String getStatus()
   public void setStatus(String status)
   public Window getTop()
   public void open(String url, String name, String features)
}
```

AD.1.3.3 Location

See:

- 8.11.7.2.3, "Location object." on page 157
- AC.4.3, "Location object" on page 1294

```
public class Location
   extends java.lang.Object {
   public Location()
```

```
   public String getNash()
   public void setHash(String hash)
   public String getHost()
   public void setHost(String host)
   public String getHostName()
   public void setHostName(String hostname)
   public String getHRef()
   public void setHRef(String href)
   public String getPathName()
   public void setPathName(String pathname)
   public String getPort()
   public void setPort(String port)
   public String getProtocol()
   public void setProtocol(String protocol)
   public String getSearch()
   public void setSearch(String search)
}
```

AD.1.4 The org.dvb.dom.event package

All of these are in the package org.dvb.dom.event.

AD.1.4.1 DVBLifecycleEvent

See:

- 8.11.2.2.1, "Interface DVBLifecycleEvent" on page 129
- AC.3.1, "Object DVBLifecycleEvent" on page 1292

```
public class DVBLifecycleEvent
   extends java.util.event {
   public DVBLifecycleEvent()
   public DVBLifecycleEvent(String typearg, boolean canbubblearg,
      boolean candisablearg, long detailarg)
   public long getDetail()
}
```

Package
org.dvb.dom.bootstrap

Description
Provides the entry point to the W3C DOM APIs for Java applications.

Class Summary	
Interfaces	
DocumentAction	DocumentAction is used for an action that modifies a W3C Document.
DocumentFactory	DocumentFactory contains bootstrap methods for applications embedded in a document to access the document object model of the document in which they are contained.
MultipleDocumentsAction	MultipleDocumentAction is used for an action that modifies zero or more W3C Document instances.

org.dvb.dom.bootstrap
DocumentAction

Syntax
```
public interface DocumentAction
```

Description
DocumentAction is used for an action that modifies a W3C Document. When an application wishes to access a Document, it creates an instance of a class that implements DocumentAction, and passes this instance to the system. The system then calls back to the user code via the DocumentAction interface.

See Also:
`MultipleDocumentsAction`, `DocumentFactory`

Methods

---

run(Document)

```
public void run(org.w3c.dom.Document doc)
```

Access and/or modify a W3C DOM Document. All modifications must take place during this callback. The results of retaining and using DOM references outside the context of this callback are undefined.

Parameters:
`doc` - the DOM document to modify

org.dvb.dom.bootstrap
DocumentFactory

Syntax
```
public interface DocumentFactory
```

Description
DocumentFactory contains bootstrap methods for applications embedded in a document to access the document object model of the document in which they are contained.

Since:
MHP 1.1

Fields

DOM

```
public static final java.lang.String DOM
```

The property string to use with `XletContext.getXletProperty` in order to obtain the DocumentFactory for this Xlet (if one exists).

Methods

---

performAction(DocumentAction)

```
public void performAction(DocumentAction act)
```

Perform an action on the document that contains the Xlet controlled by the given XletContext.

Parameters:

`act` - The action to perform. It will be called by the system either synchronously, or on a system thread.

---

performActionOnFrames(String[], MultipleDocumentsAction)

```
public void performActionOnFrames(java.lang.String[] names, MultipleDocumentsAction act)
```

Perform an action on a set of documents, each contained in a frame that is a part of the same application as the Xlet controlled by the given XletContext.

Parameters:

`names` - The names of the desired frames.

`act` - The action to perform. It will be called by the system either synchronously, or on a system thread.

---

performActionReadOnly(DocumentAction)

```
public void performActionReadOnly(DocumentAction act)
```

Perform an action on the document that contains the Xlet controlled by the given XletContext. The action is called without any ability to modify the DOM.

Parameters:

`act` - The action to perform. It will be called by the system either synchronously, or on a system thread. Attempts by this action to modify the DOM shall fail.

org.dvb.dom.bootstrap
MultipleDocumentsAction

Syntax
```
public interface MultipleDocumentsAction
```

Description
MultipleDocumentAction is used for an action that modifies zero or more W3C Document instances. When an application wishes to access a number of Documents simultaneously, it creates an instance of a class that implements MultipleDocumentAction, and passes this instance to the system. The system then calls back to the user code via the MultipleDocumentAction interface.

See Also:
DocumentAction, DocumentFactory

Methods

---

run(Document[])

```
public void run(org.w3c.dom.Document[] docs)
```

Access and/or modify a set of W3C DOM Documents. All modifications must take place during this callback. The results of retaining and using DOM references outside the context of this callback are undefined.

Parameters:

`docs` - The array of documents on which to operate. If a requested document is not found, the corresponding entry in this array will be null.

Package
org.dvb.dom.inner

Description
Provides support for embedding DVB-HTML applications within the user interface of a DVB-J application.

Class Summary	
Classes	
HTMLApplication	Encapsulates the information needed to define a DVB-HTML application.
HTMLInnerApplication-Container	Represents embedding of an DVB-HTML inner application within the user interface of a DVB-J application.

org.dvb.dom.inner
HTMLApplication

Syntax

```
public class HTMLApplication extends InnerApplication
```

```
java.lang.Object
  |
  +--InnerApplication
        |
        +--org.dvb.dom.inner.HTMLApplication
```

Description

Encapsulates the information needed to define a DVB-HTML application.

Constructors

HTMLApplication(URL, String, String)

```
public HTMLApplication(java.net.URL physicalRoot, java.lang.String initialPathBytes,
            java.lang.String parameters)
```

Constructor for instances of the class. The semantics of these shall be as defined in the main body of this specification for the equivalent information when provided through an AIT.

Parameters:

`physicalRoot` - the physical root of the application entry point.

`initialPathBytes` - a string specifying the URL path component to the entry point document. This path is relative to the root defined in the physicalRoots parameter.

`parameters` - the string that is appended to the application initial path as parameters

---

HTMLApplication(URL, String, String, String[], String[])

```
public HTMLApplication(java.net.URL physicalRoot, java.lang.String initialPathBytes,
            java.lang.String parameters, java.lang.String[] label,
            java.lang.String[] regex)
```

Constructor for instances of the class. The semantics of these shall be as defined in the main body of this specification for the equivalent information when provided through an AIT.

Parameters:

`physicalRoot` - the physical root of the application entry point.

`initialPathBytes` - a string specifying the URL path component to the entry point document. This path is relative to the root defined in the physicalRoots parameter.

`parameters` - the string that is appended to the application initial path as parameters

`label` - an aarry of one or more strings specifying a label that is associated with the set of data identified by the regular expression. This label can be used for pre-fetching in a transport specific manner.

`regex` - an array of one or more strings specifying a regular expressions that can generate all URLs that are in the domain of the application.

Throws:

`IllegalArgumentException` - if either the regex or label parameters are an array of length zero or if the lengths of these two arrays are not the same

org.dvb.dom.inner
HTMLInnerApplicationContainer

Syntax

```
public class HTMLInnerApplicationContainer extends InnerApplicationContainer
```

```
java.lang.Object
  |
  +--java.awt.Component
        |
        +--org.havi.ui.HComponent
              |
              +--InnerApplicationContainer
                    |
                    +--org.dvb.dom.inner.HTMLInnerApplicationContainer
```

All Implemented Interfaces:

org.havi.ui.HMatteLayer, org.havi.ui.HNavigable, org.havi.ui.HNavigationInputPreferred, java.awt.image.ImageObserver, java.awt.MenuContainer, java.io.Serializable, org.dvb.ui.TestOpacity

Description

Represents embedding of an DVB-HTML inner application within the user interface of a DVB-J application.

Constructors

HTMLInnerApplicationContainer(HTMLApplication)

```
public HTMLInnerApplicationContainer(HTMLApplication a)
```

Construct an instance of this class with a DVB-HTML application as its content. The instance is initialised to present the entry point document of the application.

Parameters:

`a` - the DVB-HTML application

Throws:

`IOException` - if an error occurred while reading the code or data for the inner application

Methods

---

performAction(DocumentAction)

```
public void performAction(DocumentAction act)
```

Perform an action on the DVB-HTML document.

Parameters:

`act` - The action to perform. It will be called by the system either synchronously, or on a system thread.

Annex AE (normative): Inner Applications

Package org.dvb.application.inner

Description

Provides support for embedding other interactive applications within the user interface of a DVB-J application.

Class Summary	
Interfaces	
DVBScene	Represents various features which are common to the top level Container of applications whether running stand-alone or embedded in a DVB-HTML application.
InnerApplicationListener	Listener for events related to inner applications
Classes	
InnerApplication	Encapsulates the information needed to define an inner application.
InnerApplicationContainer	Represents embedding of an inner application within the user interface of a DVB-J application.
InnerApplicationEvent	InnerApplicationEvent is used to notify applications which have registered interest in events coming from inner applications that such an event has happened.

org.dvb.application.inner
DVBScene

Syntax
```
public interface DVBScene
```

Description
Represents various features which are common to the top level Container of applications whether running stand-alone or embedded in a DVB-HTML application. All integer constants used in this class are those defined in the class org.havi.ui.HScene.

Methods

---

addWindowListener(WindowListener)

```
public void addWindowListener(java.awt.event.WindowListener wl)
```

Add a listener to receive any java.awt.event.WindowEvents sent from this `DVBScene` . If the listener has already been added further calls will add further references to the listener, which will then receive multiple copies of a single event.

Parameters:

`wl` - The java.awt.event.WindowListener to be notified of any java.awt.event.WindowEvents.

---

enableShortcuts(boolean)

```
public void enableShortcuts(boolean enable)
```

Enables or disables all short cuts that are currently set on the Scene. To enable or disable a single shortcut use `org.dvb.application.inner.DVBScene#addShortcut addShortcut` or `removeShortcut(int)` .

Note `enableShortcuts(boolean)` does not remove existing added `DVBScene` shortcuts - they are merely disabled and may be subsequently re-enabled with `enableShortcuts(boolean)` .

Parameters:

`enable` - a value of true indicates all shortcuts are to be enabled, and a value of false indicates all shortcuts are to be disabled.

---

getAllShortcutKeycodes()

```
public int[] getAllShortcutKeycodes()
```

Returns all keycodes added in the DVBScene as shortcuts.

Returns:

all keycodes added in the DVBScene as shortcuts, there are no ordering guarantees.

---

getBackgroundImage()

```
public java.awt.Image getBackgroundImage()
```

Retrieve any image used as a background for this `DVBScene` .

Returns:
an image used as a background, or `null` if no image is set. Note that depending on the current render mode any image set may not actually be rendered.

See Also:
`setRenderMode(int)`

---

getBackgroundMode()

```
public int getBackgroundMode()
```

Get the background mode of this `DVBScene` . The return value specifies whether the paint method should draw the background (i.e. a rectangle filling the bounds of the `DVBScene`).

Returns:
one of `NO_BACKGROUND_FILL` or `BACKGROUND_FILL` .

---

getFocusOwner()

```
public java.awt.Component getFocusOwner()
```

Returns the child component of this `DVBScene` which has focus if and only if this `DVBScene` is active.

Returns:
the component with focus, or null if no children have focus assigned to them.

---

getRenderMode()

```
public int getRenderMode()
```

Get the rendering mode of any background image associated with this `DVBScene` .

Returns:
the rendering mode, one of `IMAGE_NONE` , `IMAGE_STRETCH` , `IMAGE_CENTER` or `IMAGE_TILE` .

---

getShortcutComponent(int)

```
public org.havi.ui.HActionable getShortcutComponent(int keyCode)
```

Retrieve the `HActionable` associated with the specified shortcut key.

Parameters:
`keyCode` - the shortcut key code to be queried for an associated `HActionable` .

Returns:
the `HActionable` associated with the specified key if `keyCode` is a valid shortcut key for this `DVBScene` , `null` otherwise.

---

getShortcutKeycode(HActionable)

```
public int getShortcutKeycode(org.havi.ui.HActionable comp)
```

Returns the keycode associated with the specified HActionable component.

Parameters:
`comp` - the HActionable to return the keycode that it is associated with.

Returns:
the keycode associated with the specified HActionable component, if it is currently a valid shortcut "target", otherwise return java.awt.event.KeyEvent#VK_UNDEFINED.

isDoubleBuffered()

```
public boolean isDoubleBuffered()
```

Returns `true` if all the drawing done during the update and paint methods for this specific `DVBScene` object is automatically double buffered.

Returns:

`true` if all the drawing done during the update and paint methods for this specific `DVBScene` object is automatically double buffered, or `false` if drawing is not double buffered. The default value for the double buffering setting is platform-specific.

isEnableShortcuts()

```
public boolean isEnableShortcuts()
```

Returns the status of all short cuts that are currently set on the DVBScene.

Returns:

true if shortcuts are enabled, false otherwise.

See Also:

`enableShortcuts(boolean)`

isOpaque()

```
public boolean isOpaque()
```

Returns true if the entire `DVBScene` area, as given by the `java.awt.Component#getBounds` method, is fully opaque, i.e. its paint method (or surrogate methods) guarantee that all pixels are painted in an opaque `Color`.

By default, the return value depends on the value of the current background mode, as set by the `setBackgroundMode(int)` method. The return value should be overridden by subclasses that can guarantee full opacity. The consequences of an invalid overridden value are implementation specific.

Returns:

`true` if all the pixels within the area given by the `java.awt.Component#getBounds` method are fully opaque, i.e. its paint method (or surrogate methods) guarantee that all pixels are painted in an opaque Color, otherwise `false`.

isVisible()

```
public boolean isVisible()
```

Determines if the `DVBScene` (or more properly its added child components) is Visible. Initially an `DVBScene` is invisible.

Returns:

true if the `DVBScene` is visible; false otherwise.

removeShortcut(int)

```
public void removeShortcut(int keyCode)
```

Removes the specified short-cut key. if the specified short-cut key is not registered, the method has no effect

Parameters:

`keyCode` - The keycode that represents the short cut

---

removeWindowListener(WindowListener)

```
public void removeWindowListener(java.awt.event.WindowListener wl)
```

Remove a listener so that it no longer receives any java.awt.event.WindowEvents. If the specified listener is not registered, the method has no effect. If multiple references to a single listener have been registered it should be noted that this method will only remove one reference per call.

Parameters:

`wl` - The java.awt.event.WindowListener to be removed from notification of any java.awt.event.WindowEvents.

---

setBackgroundImage(Image)

```
public void setBackgroundImage(java.awt.Image image)
```

Set an image which shall be painted in the background of the `DVBScene` , after the background has been drawn according to the current mode set with `setBackgroundMode(int)` , but before any children are drawn. The image is rendered according to the current render mode set with `setRenderMode(int)` .

Note that the use of a background image in this way may affect the return value of the `isOpaque()` method, depending on the image and the current rendering mode.

Parameters:

`image` - the image to be used as a background. If this parameter is `null` any current image is removed. Note that depending on the current render mode any image set may not actually be rendered.

See Also:

`setRenderMode(int)`

---

setBackgroundMode(int)

```
public void setBackgroundMode(int mode)
```

Set the background mode of this `DVBScene` . The value specifies whether the paint method should draw the background (i.e. a rectangle filling the bounds of the `DVBScene`).

Note that the background mode will affect the return value of the `isOpaque()` method, depending on the value of the `mode` parameter. A fill mode of `BACKGROUND_FILL` implies that `isOpaque()` must return `true`.

Parameters:

`mode` - one of `NO_BACKGROUND_FILL` or `BACKGROUND_FILL` . If mode is not a valid value, an IllegalArgumentException will be thrown.

---

setRenderMode(int)

```
public boolean setRenderMode(int mode)
```

Set the rendering mode of any background image associated with this `DVBScene` .

Note that the minimum requirement is to support only the `IMAGE_NONE` mode. Support of the other modes is platform and implementation specific.

Parameters:

`mode` - the rendering mode, one of `IMAGE_NONE` , `IMAGE_STRETCH` , `IMAGE_CENTER` or `IMAGE_TILE` .

Returns:

`true` if the mode was set successfully, `false` if the mode is not supported by the platform.

org.dvb.application.inner
InnerApplication

Syntax

```
public abstract class InnerApplication

java.lang.Object
  |
  +--org.dvb.application.inner.InnerApplication
```

Direct Known Subclasses:

HTMLApplication

Description

Encapsulates the information needed to define an inner application.

Constructors

InnerApplication()

```
protected InnerApplication()
```

A protected constructor. This shall not be used by inter-operable applications.

org.dvb.application.inner
InnerApplicationContainer

Syntax

```
public abstract class InnerApplicationContainer extends org.havi.ui.HComponent implements
    org.havi.ui.HNavigable

java.lang.Object
  |
  +--java.awt.Component
        |
        +--org.havi.ui.HComponent
              |
              +--org.dvb.application.inner.InnerApplicationContainer
```

Direct Known Subclasses:

HTMLInnerApplicationContainer

All Implemented Interfaces:

org.havi.ui.HMatteLayer, org.havi.ui.HNavigable, org.havi.ui.HNavigationInputPreferred, java.awt.image.ImageObserver, java.awt.MenuContainer, java.io.Serializable, org.dvb.ui.TestOpacity

Description

Represents embedding of an inner application within the user interface of a DVB-J application. The inner application shall be started when the object of this class is constructed. The behaviour of instances of this class when an inner application exits is either implementation or inner application format dependent.

When an instance of this class gains input focus,shall gain the input focus. The meaning of this is specific to the format of the inner application concerned. Inner applications are allowed to consume the events VK_UP, VK_DOWN, VK_LEFT and VK_RIGHT. While this is happening, the HNavigable focus management shall be disabled and the actions defined by `setFocusTraversal` shall not happen. The mechanisms by which inner applications start and stop consuming these events are specific to the content format of the inner application.

Constructors

InnerApplicationContainer(InnerApplication)

```
protected InnerApplicationContainer(InnerApplication a)
```

Construct an instance of this class with a particular inner application as its content. This shall not be used by inter-operable applications.

Parameters:

`a` - the inner application

Throws:

`IOException` - if an error occurred while reading the code or data for the inner application

Methods

---

addInnerApplicationListener(InnerApplicationListener)

```
public void addInnerApplicationListener(InnerApplicationListener l)
```

Add a listener for events when the inner application exits.

Parameters:
`l` - the listener to be notified when the inner application exits

---

getGainFocusSound()

```
public org.havi.ui.HSound getGainFocusSound()
```

Get the sound associated with the gain focus event.

Specified By:
org.havi.ui.HNavigable.getGainFocusSound() in interface org.havi.ui.HNavigable

Returns:
The sound played when the component gains focus. If no sound is associated with gaining focus, then null shall be returned.

---

getLoseFocusSound()

```
public org.havi.ui.HSound getLoseFocusSound()
```

Get the sound associated with the lost focus event.

Specified By:
org.havi.ui.HNavigable.getLoseFocusSound() in interface org.havi.ui.HNavigable

Returns:
The sound played when the component loses focus. If no sound is associated with losing focus, then null shall be returned.

---

getMove(int)

```
public org.havi.ui.HNavigable getMove(int keyCode)
```

Provides the `HNavigable` object that is navigated to when a particular key is pressed.

Specified By:
org.havi.ui.HNavigable.getMove(int) in interface org.havi.ui.HNavigable

Parameters:
`keyCode` - The key code of the pressed key.

Returns:
Returns the `HNavigable` object, or if no `HNavigable` is associated with the keyCode then returns `null`.

---

getNavigationKeys()

```
public int[] getNavigationKeys()
```

Retrieve the set of key codes which this component maps to navigation targets.

Specified By:
org.havi.ui.HNavigationInputPreferred.getNavigationKeys() in interface org.havi.ui.HNavigationInputPreferred

Returns:
an array of key codes, or `null` if no navigation targets are set on this component.

---

isSelected()

```
public boolean isSelected()
```

Indicates if this component has focus.

Specified By:
org.havi.ui.HNavigable.isSelected() in interface org.havi.ui.HNavigable

Returns:
`true` if the component has focus, otherwise returns `false`.

---

processHFocusEvent(HFocusEvent)

```
public void processHFocusEvent(org.havi.ui.event.HFocusEvent evt)
```

Process an `HFocusEvent` sent to this `HNavigationInputPreferred`.

Specified By:
org.havi.ui.HNavigationInputPreferred.processHFocusEvent(org.havi.ui.event.HFocusEvent) in interface org.havi.ui.HNavigationInputPreferred

Parameters:
`evt` - the `HFocusEvent` to process.

---

removeInnerApplicationListener(InnerApplicationListener)

```
public void removeInnerApplicationListener(InnerApplicationListener l)
```

Remove a listener for events when the inner application exits.

Parameters:
`l` - the listener to be removed

---

setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable)

```
public void setFocusTraversal(org.havi.ui.HNavigable up, org.havi.ui.HNavigable down,
            org.havi.ui.HNavigable left, org.havi.ui.HNavigable right)
```

Set the focus control for an `HNavigable` component. Note `setFocusTraversal` is a convenience function for application programmers where a standard up, down, left and right focus traversal between components is required.

Note `setFocusTraversal` is equivalent to multiple calls to `setMove`, where the key codes VK_UP, VK_DOWN, VK_LEFT, VK_RIGHT are used.

Note that this API does not prevent the creation of "isolated" `HNavigable` components --- authors should endeavor to avoid confusing the user.

Specified By:
org.havi.ui.HNavigable.setFocusTraversal(org.havi.ui.HNavigable, org.havi.ui.HNavigable, org.havi.ui.HNavigable, org.havi.ui.HNavigable) in interface org.havi.ui.HNavigable

Parameters:
`up` - The `HNavigable` component to move to, when the user generates a VK_UP KeyEvent. If there is no `HNavigable` component to move "up" to, then null should be specified.

`down` - The `HNavigable` component to move to, when the user generates a VK_DOWN KeyEvent. If there is no `HNavigable` component to move "down" to, then null should be specified.

`left` - The `HNavigable` component to move to, when the user generates a VK_LEFT KeyEvent. If there is no `HNavigable` component to move "left" to, then null should be specified.

`right` - The `HNavigable` component to move to, when the user generates a VK_RIGHT KeyEvent. If there is no `HNavigable` component to move "right" to, then null should be specified.

---

setGainFocusSound(HSound)

```
public void setGainFocusSound(org.havi.ui.HSound sound)
```

Associate a sound with gaining focus, i.e. when the `HNavigable` receives a `java.awt.event.FocusEvent` event of type `FOCUS_GAINED`. This sound will start to be played when an object implementing this interface gains focus. It is not guaranteed to be played to completion. If the object implementing this interface loses focus before the audio completes playing, the audio will be truncated. Applications wishing to ensure the audio is always played to completion must implement special logic to slow down the focus transitions.

By default, an `HNavigable` object does not have any gain focus sound associated with it.

Note that the ordering of playing sounds is dependent on the order of the focus lost, gained events.

Specified By:
org.havi.ui.HNavigable.setGainFocusSound(org.havi.ui.HSound) in interface org.havi.ui.HNavigable

Parameters:
`sound` - the sound to be played, when the component gains focus. If sound content is already set, the original content is replaced. To remove the sound specify a null `HSound` .

---

setLoseFocusSound(HSound)

```
public void setLoseFocusSound(org.havi.ui.HSound sound)
```

Associate a sound with losing focus, i.e. when the `HNavigable` receives a java.awt.event.FocusEvent event of type FOCUS_LOST. This sound will start to be played when an object implementing this interface loses focus. It is not guaranteed to be played to completion. It is implementation dependent whether and when this sound will be truncated by any gain focus sound played by the next object to gain focus.

By default, an `HNavigable` object does not have any lose focus sound associated with it.

Note that the ordering of playing sounds is dependent on the order of the focus lost, gained events.

Specified By:
org.havi.ui.HNavigable.setLoseFocusSound(org.havi.ui.HSound) in interface org.havi.ui.HNavigable

Parameters:
`sound` - the sound to be played, when the component loses focus. If sound content is already set, the original content is replaced. To remove the sound specify a null `HSound` .

---

setMove(int, HNavigable)

```
public void setMove(int keyCode, org.havi.ui.HNavigable target)
```

Defines the navigation path from the current `HNavigable` to another `HNavigable` when a particular key is pressed.

Note that `setFocusTraversal` is equivalent to multiple calls to `setMove` , where the key codes `VK_UP`, `VK_DOWN`, `VK_LEFT`, `VK_RIGHT` are used.

Specified By:
org.havi.ui.HNavigable.setMove(int, org.havi.ui.HNavigable) in interface org.havi.ui.HNavigable

Parameters:

`keyCode` - The key code of the pressed key. Any numerical keycode is allowed, but the platform may not be able to generate all keycodes. Application authors should only use keys for which `HRcCapabilities.isSupported()` or `HKeyCapabilities.isSupported()` returns true.

`target` - The target `HNavigable` object that should be navigated to. If a target is to be removed from a particular navigation path, then `null` should be specified.

org.dvb.application.inner
InnerApplicationEvent

Syntax
```
public class InnerApplicationEvent extends java.util.EventObject

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--org.dvb.application.inner.InnerApplicationEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
InnerApplicationEvent is used to notify applications which have registered interest in events coming from inner applications that such an event has happened.

Constructors

InnerApplicationEvent(InnerApplicationContainer)

```
public InnerApplicationEvent(InnerApplicationContainer source)
```

Constructor for an event.

Parameters:
`source` - the `InnerApplicationContainer` which generated the event.

org.dvb.application.inner
InnerApplicationListener

Syntax
```
public interface InnerApplicationListener
```

Description
Listener for events related to inner applications

Methods

InnerApplicationExited(InnerApplicationEvent)

```
public void InnerApplicationExited(InnerApplicationEvent e)
```

Called when an inner application exits.

Parameters:

`e` - an event object encapsulating what happened

Annex AF (normative): Plug-in APIs

Package
org.dvb.application.plugins

Description

Provides support for inter-operable plugins in the MHP specification. The following classes and interfaces are intended for generic plug-ins and are not specific to any particular content format.

- InvalidApplicationException
- Plugin

The following classes are intended specifically for DVB-HTML plug-ins.

- ApplicationSecurityContext
- XletContainer
- XletSystemCall

Class Summary

Interfaces

`InvocationHandler`	`InvocationHandler` is the interface implemented by the *invocation handler* of a proxy instance.
`Plugin`	This interface allows an application or service manager to control the lifecycle of applications being executed by an inter-operable plug-in.

Classes

`ApplicationSecurity-Context`	This class represents the security context for an application managed by user code, e.g.
`Proxy`	`Proxy` provides static methods for creating dynamic proxy classes and instances, and it is also the superclass of all dynamic proxy classes created by those methods.
`XletContainer`	This class provides a container that can be embedded in a widget hierarchy, and can provide a container that can safely be used as the top-level container of an embedded Xlet.
`XletSystemCall`	This class permits user code to intercept certain system calls initiated by an embedded Xlet that need to be serviced by a support application.

Exceptions

`InvalidApplicationEx-ception`	Thrown if an application is not valid for execution by a plug-in.
`UndeclaredThrowable-Exception`	Thrown by a method invocation on a proxy instance if its invocation handler's `invoke(Object, Method, Object[])` method throws a checked exception (a `Throwable` that is not assignable to `RuntimeException` or `Error`) that is not assignable to any of the exception types declared in the `throws` clause of the method that was invoked on the proxy instance and dispatched to the invocation handler.

org.dvb.application.plugins
ApplicationSecurityContext

Syntax

```
public class ApplicationSecurityContext

java.lang.Object
  |
  +--org.dvb.application.plugins.ApplicationSecurityContext
```

Description

This class represents the security context for an application managed by user code, e.g. by a plug-in application managing DVB-HTML applications.

Constructors

ApplicationSecurityContext(URL[], Locator)

```
public ApplicationSecurityContext(java.net.URL[] path, javax.tv.locator.Locator entryPoint)
```

Creates a new security context for an application whose code can be found on the path supplied, and whose entry point is as given. Under no circumstances will an application managed by a plug-in be given access to resources not available to the plug-in itself. This policy is reflected in the permissions granted to the ApplicationSecurityContext, as well as the permissions granted to any classes loaded by any class loaders managed by a security context.

Parameters:

`path` - The search path for locating resources within the application.

`entryPoint` - The resource of the entry point of this application.

Throws:

`NullPointerException` - if entryPoint is null, if path is null, or if any element of path is null.

`IllegalArgumentException` - if path.length < 1

Methods

---

checkPermission(Permission)

```
public void checkPermission(java.security.Permission p)
```

Throws a `SecurityException` if the requested access, specified by the given permission, is not permitted to the appliction or sub-application represented by this application security context object. The set of permissions granted to an entity is be a function of receiver policy, possibly influenced by user settings, application signer, and permission request file.

Parameters:

`p` - A permission object representing the resource for which access is being checked.

Throws:

`NullPointerException` - if p is null

`SecurityException` - if this application has not been granted access to the resource represneted by p.

---

createEmbeddedContext(URL[], Locator)

```
public ApplicationSecurityContext createEmbeddedContext(java.net.URL[] path,
            javax.tv.locator.Locator entryPoint)
```

Creates a context for an embedded part of an application, e.g. an Xlet embedded within a DVB-HTML page. The set of premissions granted to the application will be the same as the parent ApplicationSecurityContext.

Parameters:

`path` - The search path for locating resources within the application.

`entryPoint` - The resource of the entry point of this application.

Returns:

a context for the part of the application concerned

Throws:

`NullPointerException` - if entryPoint is null, if path is null, or if any element of path is null.

`IllegalArgumentException` - if path.length < 1

---

getClassLoader(String[])

```
public java.lang.ClassLoader getClassLoader(java.lang.String[] forbiddenPackages)
```

Get a classloader that is approprate for loading classes for the application (or sub-application) represented by this application security context object. If this method is called more than once, the same instance will be returned.

It is important that embedded DVB-J code be prevented from accessing classes that implement the plug-in applicaiton. To this end, the plug-in may specify a list of forbidden packages. Classes loaded by the returned classloader will be forbidden from loading or accessing classes in the named packages.

Parameters:

`forbiddenPackages` - a list of forbidden package names, e.g. `{ "de.tu-bs.ing.ifn.plugin.impl" }`.

Returns:

A class loader that is appropriate for loading and DVB-J classes that are a part of this application or sub-application.

---

getResource(String, boolean)

```
public java.net.URL getResource(java.lang.String name, boolean sameSigner)
```

Get a locator to the named resource, within the search path for this application. Will return null if a resource with the given name that is appropriately signed (if necessary) cannot be found.

Note (informative): This method can be used, for example, by an interoperable plug-in that needs to fetch part of an application that is not loaded by a classloader. For example, it could be used to get a locator to an HTML page, if and only if that page is appropriately signed.

Parameters:

`name` - The name of the resource (e.g. com/foo/MyPage.html)

`sameSigner` - True if this is code, or any other resource for which the signer must be the same as the signer of the entry point.

Returns:

URL to the named resource, or null.

org.dvb.application.plugins
InvalidApplicationException

Syntax

```
public class InvalidApplicationException extends java.lang.Exception

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--org.dvb.application.plugins.InvalidApplicationException
```

All Implemented Interfaces:

java.io.Serializable

Description

Thrown if an application is not valid for execution by a plug-in.

Since:

MHP1.1

Constructors

InvalidApplicationException()

```
public InvalidApplicationException()
```

Construct a InvalidApplicationException with no detail message

---

InvalidApplicationException(String)

```
public InvalidApplicationException(java.lang.String s)
```

Construct a InvalidApplicationException with a detail message

Parameters:

`s` - detail message

org.dvb.application.plugins
InvocationHandler

Syntax

```
public interface InvocationHandler
```

Description

`InvocationHandler` is the interface implemented by the *invocation handler* of a proxy instance.

Each proxy instance has an associated invocation handler. When a method is invoked on a proxy instance, the method invocation is encoded and dispatched to the `invoke` method of its invocation handler.

Methods

---

invoke(Object, Method, Object[])

```
public java.lang.Object invoke(java.lang.Object proxy, java.lang.reflect.Method method,
            java.lang.Object[] args)
```

Processes a method invocation on a proxy instance and returns the result. This method will be invoked on an invocation handler when a method is invoked on a proxy instance that it is associated with.

Parameters:

`proxy` - the proxy instance that the method was invoked on

`method` - the `Method` instance corresponding to the interface method invoked on the proxy instance. The declaring class of the `Method` object will be the interface that the method was declared in, which may be a superinterface of the proxy interface that the proxy class inherits the method through.

`args` - an array of objects containing the values of the arguments passed in the method invocation on the proxy instance, or `null` if interface method takes no arguments. Arguments of primitive types are wrapped in instances of the appropriate primitive wrapper class, such as `java.lang.Integer` or `java.lang.Boolean`.

Returns:

the value to return from the method invocation on the proxy instance. If the declared return type of the interface method is a primitive type, then the value returned by this method must be an instance of the corresponding primitive wrapper class; otherwise, it must be a type assignable to the declared return type. If the value returned by this method is `null` and the interface method's return type is primitive, then a `NullPointerException` will be thrown by the method invocation on the proxy instance. If the value returned by this method is otherwise not compatible with the interface method's declared return type as described above, a `ClassCastException` will be thrown by the method invocation on the proxy instance.

Throws:

`Throwable` - the exception to throw from the method invocation on the proxy instance. The exception's type must be assignable either to any of the exception types declared in the `throws` clause of the interface method or to the unchecked exception types `java.lang.RuntimeException` or `java.lang.Error`. If a checked exception is thrown by this method that is not assignable to any of the exception types declared in the `throws` clause of the interface method, then an `UndeclaredThrowableException` containing the exception that was thrown by this method will be thrown by the method invocation on the proxy instance.

See Also:

`UndeclaredThrowableException`

org.dvb.application.plugins
Plugin

Syntax
```
public interface Plugin
```

Description
This interface allows an application or service manager to control the lifecycle of applications being executed by an inter-operable plug-in. It shall be implemented by inter-operable plug-ins and shall be called by implementation of the application manager in an MHP terminal. It shall not be called by MHP applications. The usage model for this interface is the reuse of the `javax.tv.xlet.Xlet` interface to represent applications in formats other than DVB-J. It is the responsibility of the plug-in to provide implementations of the methods in that interface and to perform the translation between the semantics specified for DVB-J applications and the semantics of the application format which the plug-in supports. The plug-in is initialised by the application manager calling the no-argument constructor of the object implementing this interface. Plug-ins are not expected to perform any time consuming activities or hold any scarce resources in this call.

Methods

---

initApplication(AppAttributes)

```
public javax.tv.xlet.Xlet initApplication(org.dvb.application.AppAttributes app)
```

Request the plug-in to prepare for executing an instance of an application in a format which it supports. If the application cannot be prepared then null shall be returned. While the plug-in is in the terminated state then this method shall always return null. The application shall only be considered to be started when the application manager calls the methods on the Xlet interface returned by this method.

Parameters:
`app` - an instance of `AppAttributes` for the application which is to be started.

Returns:
an object implementing the Xlet interface or null if the application cannot be started.

Throws:
`InvalidApplicationException` - if the application to be started is not valid for this plug-in

---

initApplication(InnerApplication)

```
public javax.tv.xlet.Xlet initApplication(InnerApplication app)
```

Request the plug-in to prepare for executing an instance of an application in a format which it supports.If the application cannot be prepared then null shall be returned. While the plug-in is in the terminated state then this method shall always return null. The application shall only be considered to be started when the application manager calls the methods on the Xlet interface returned by this method.

Parameters:
`app` - an instance of InnerApplication for the application which is to be started

Throws:

`InvalidApplicationException` - if the application to be started is not valid for this plug-in

---

initPlugin()

```
public boolean initPlugin()
```

Initialise the plug-in. Any time consuming initialisations should be performed during this method call. This method shall be called after the no-argument constructor of the object implementing this interface and before any calls to the `startApplication`. It may also be called after a call to `terminatePlugin` if a plug-in was not removed from the virtual machine where it was executing. The behaviour of an application manager should a plug-in fail to initialise is intentionally unspecified.

Returns:
true if the plug-in initialised successfully otherwise false

---

isSupported(AppAttributes)

```
public boolean isSupported(org.dvb.application.AppAttributes app)
```

Test whether this plug-in is able to support a particular application. This method shall work regardless of whether the plug-in has been initialised or not.

Parameters:
`app` - an instance of `AppAttributes` for the application which is to be started.

Returns:
true if the plug-in can support this application otherwise false

---

terminatePlugin()

```
public void terminatePlugin()
```

Terminate the plug-in. This method shall only be called after all applications being executed by this plug-in have been terminated. The implementation of this method shall release all resources held by the plug-in. Once this method has returned, the plug-in shall either be unloaded from the virtual machine where it was executing or the `initPlugin` method shall be called again to put the plug-in again in an initialised condition. A plug-in may not refuse to terminate and throwing a runtime exception or error from this method shall result in the plug-in being removed from the virtual machine where it was executing.

org.dvb.application.plugins
Proxy

Syntax

```
public class Proxy

java.lang.Object
  |
  +--org.dvb.application.plugins.Proxy
```

Description

`Proxy` provides static methods for creating dynamic proxy classes and instances, and it is also the superclass of all dynamic proxy classes created by those methods.

To create a proxy for some interface `Foo`:

```
InvocationHandler handler = new MyInvocationHandler(...);
Class proxyClass = Proxy.getProxyClass(
    Foo.class.getClassLoader(), new Class[] { Foo.class });
Foo f = (Foo) proxyClass.
    getConstructor(new Class[] { InvocationHandler.class }).
    newInstance(new Object[] { handler });
```

or more simply:

```
Foo f = (Foo) Proxy.newProxyInstance(Foo.class.getClassLoader(),
                                     new Class[] { Foo.class },
                                     handler);
```

A *dynamic proxy class* (simply referred to as a *proxy class* below) is a class that implements a list of interfaces specified at runtime when the class is created, with behavior as described below. A *proxy interface* is such an interface that is implemented by a proxy class. A *proxy instance* is an instance of a proxy class. Each proxy instance has an associated *invocation handler* object, which implements the interface `InvocationHandler` . A method invocation on a proxy instance through one of its proxy interfaces will be dispatched to the `invoke(Object, Method, Object[])` method of the instance's invocation handler, passing the proxy instance, a `java.lang.reflect.Method` object identifying the method that was invoked, and an array of type `Object` containing the arguments. The invocation handler processes the encoded method invocation as appropriate and the result that it returns will be returned as the result of the method invocation on the proxy instance.

A proxy class has the following properties:

- Proxy classes are public, final, and not abstract.
- The unqualified name of a proxy class is unspecified. The space of class names that begin with the string "`$Proxy`" should be, however, reserved for proxy classes.
- A proxy class extends `org.dvb.application.plugins.Proxy`.
- A proxy class implements exactly the interfaces specified at its creation, in the same order.
- If a proxy class implements a non-public interface, then it will be defined in the same package as that interface. Otherwise, the package of a proxy class is also unspecified. Note that package sealing will not prevent a proxy class from being successfully defined in a particular package at runtime, and neither will classes already defined in the same class loader and the same package with particular signers.
- Since a proxy class implements all of the interfaces specified at its creation, invoking `getInterfaces` on its `Class` object will return an array containing the same list of interfaces (in the order specified at its creation), invoking `getMethods` on its `Class` object will return an array of `Method` objects that include all of the methods in those interfaces, and invoking `getMethod` will find methods in the proxy interfaces as would be expected.
- The `isProxyClass(Class)` method will return true if it is passed a proxy class-- a class returned by `Proxy.getProxyClass` or the class of an object returned by `Proxy.newProxyInstance`-- and false otherwise.

- The java.security.ProtectionDomain of a proxy class is the same as that of system classes loaded by the bootstrap class loader, such as java.lang.Object, because the code for a proxy class is generated by trusted system code. This protection domain will typically be granted java.security.AllPermission.
- Each proxy class has one public constructor that takes one argument, an implementation of the interface InvocationHandler , to set the invocation handler for a proxy instance. Rather than having to use the reflection API to access the public constructor, a proxy instance can be also be created by calling the newProxyInstance(ClassLoader, Class[], InvocationHandler) method, which combines the actions of calling getProxyClass(ClassLoader, Class[]) with invoking the constructor with an invocation handler.

A proxy instance has the following properties:

- Given a proxy instance proxy and one of the interfaces implemented by its proxy class Foo, the following expression will return true:

```
proxy instanceof Foo
```

and the following cast operation will succeed (rather than throwing a ClassCastException):

```
(Foo) proxy
```

- Each proxy instance has an associated invocation handler, the one that was passed to its constructor. The static getInvocationHandler(Object) method will return the invocation handler associated with the proxy instance passed as its argument.
- An interface method invocation on a proxy instance will be encoded and dispatched to the invocation handler's invoke(Object, Method, Object[]) method as described in the documentation for that method.
- An invocation of the hashCode, equals, or toString methods declared in java.lang.Object on a proxy instance will be encoded and dispatched to the invocation handler's invoke method in the same manner as interface method invocations are encoded and dispatched, as described above. The declaring class of the Method object passed to invoke will be java.lang.Object. Other public methods of a proxy instance inherited from java.lang.Object are not overridden by a proxy class, so invocations of those methods behave like they do for instances of java.lang.Object.
- Methods Duplicated in Multiple Proxy Interfaces

When two or more interfaces of a proxy class contain a method with the same name and parameter signature, the order of the proxy class's interfaces becomes significant. When such a *duplicate method* is invoked on a proxy instance, the Method object passed to the invocation handler will not necessarily be the one whose declaring class is assignable from the reference type of the interface that the proxy's method was invoked through. This limitation exists because the corresponding method implementation in the generated proxy class cannot determine which interface it was invoked through. Therefore, when a duplicate method is invoked on a proxy instance, the Method object for the method in the foremost interface that contains the method (either directly or inherited through a superinterface) in the proxy class's list of interfaces is passed to the invocation handler's invoke method, regardless of the reference type through which the method invocation occurred.

If a proxy interface contains a method with the same name and parameter signature as the hashCode, equals, or toString methods of java.lang.Object, when such a method is invoked on a proxy instance, the Method object passed to the invocation handler will have java.lang.Object as its declaring class. In other words, the public, non-final methods of java.lang.Object logically precede all of the proxy interfaces for the determination of which Method object to pass to the invocation handler.

Note also that when a duplicate method is dispatched to an invocation handler, the invoke method may only throw checked exception types that are assignable to one of the exception types in the throws clause of the method in *all* of the proxy interfaces that it can be invoked through. If the invoke method throws a checked exception that is not assignable to any of the exception types declared by the method in one of the the proxy interfaces that it can be invoked through, then an unchecked UndeclaredThrowableException will be thrown by the invocation on the proxy instance. This restriction means that not all of the exception types returned by invoking getExceptionTypes on the Method object passed to the invoke method can necessarily be thrown successfully by the invoke method.

Fields

h

```
protected InvocationHandler h
```

the invocation handler for this proxy instance.

Constructors

Proxy(InvocationHandler)

```
protected Proxy(InvocationHandler h)
```

Constructs a new `Proxy` instance from a subclass (typically, a dynamic proxy class) with the specified value for its invocation handler.

Parameters:
`h` - the invocation handler for this proxy instance

Methods

getInvocationHandler(Object)

```
public static InvocationHandler getInvocationHandler(java.lang.Object proxy)
```

Returns the invocation handler for the specified proxy instance.

Parameters:
`proxy` - the proxy instance to return the invocation handler for

Returns:
the invocation handler for the proxy instance

Throws:
`IllegalArgumentException` - if the argument is not a proxy instance

getProxyClass(ClassLoader, Class[])

```
public static java.lang.Class getProxyClass(java.lang.ClassLoader loader,
            java.lang.Class[] interfaces)
```

Returns the `java.lang.Class` object for a proxy class given a class loader and an array of interfaces. The proxy class will be defined in the specified class loader and will implement all of the supplied interfaces. If a proxy class for the same permutation of interfaces has already been defined in the class loader, then the existing proxy class will be returned; otherwise, a proxy class for those interfaces will be generated dynamically and defined in the class loader.

There are several restrictions on the parameters that may be passed to `Proxy.getProxyClass`:

- All of the `Class` objects in the `interfaces` array must represent interfaces, not classes or primitive types.
- No two elements in the `interfaces` array may refer to identical `Class` objects.
- All of the interface types must be visible by name through the specified class loader. In other words, for class loader `cl` and every interface `i`, the following expression must be true:

```
Class.forName(i.getName(), false, cl) == i
```

- All non-public interfaces must be in the same package; otherwise, it would not be possible for the proxy class to implement all of the interfaces, regardless of what package it is defined in.
- No two interfaces may each have a method with the same name and parameter signature but different return type.
- The resulting proxy class must not exceed any limits imposed on classes by the virtual machine. For example, the VM may limit the number of interfaces that a class may implement to 65535; in that case, the size of the `interfaces` array must not exceed 65535.

If any of these restrictions are violated, `Proxy.getProxyClass` will throw an `IllegalArgumentException`. If the `interfaces` array argument or any of its elements are `null`, a `NullPointerException` will be thrown.

Note that the order of the specified proxy interfaces is significant: two requests for a proxy class with the same combination of interfaces but in a different order will result in two distinct proxy classes.

Parameters:

`loader` - the class loader to define the proxy class in

`interfaces` - the list of interfaces for the proxy class to implement

Returns:

a proxy class that is defined in the specified class loader and that implements the specified interfaces

Throws:

`IllegalArgumentException` - if any of the restrictions on the parameters that may be passed to `getProxyClass` are violated

`NullPointerException` - if the `interfaces` array argument or any of its elements are `null`

---

isProxyClass(Class)

```
public static boolean isProxyClass(java.lang.Class cl)
```

Returns true if and only if the specified class was dynamically generated to be a proxy class using the `getProxyClass` method or the `newProxyInstance` method.

The reliability of this method is important for the ability to use it to make security decisions, so its implementation should not just test if the class in question extends `Proxy`.

Parameters:

`cl` - the class to test

Returns:

`true` if the class is a proxy class and `false` otherwise

Throws:

`NullPointerException` - if `cl` is `null`

---

newProxyInstance(ClassLoader, Class[], InvocationHandler)

```
public static java.lang.Object newProxyInstance(java.lang.ClassLoader loader,
            java.lang.Class[] interfaces, InvocationHandler h)
```

Returns an instance of a proxy class for the specified interfaces that dispatches method invocations to the specified invocation handler. This method is equivalent to:

```
Proxy.getProxyClass(loader, interfaces).
    getConstructor(new Class[] { InvocationHandler.class }).
    newInstance(new Object[] { handler });
```

`Proxy.newProxyInstance` throws `IllegalArgumentException` for the same reasons that `Proxy.getProxyClass` does.

Parameters:

`loader` - the class loader to define the proxy class in

`interfaces` - the list of interfaces for the proxy class to implement

`h` - the invocation handler to dispatch method invocations to

Returns:

a proxy instance with the specified invocation handler of a proxy class that is defined in the specified class loader and that implements the specified interfaces

Throws:

`IllegalArgumentException` - if any of the restrictions on the parameters that may be passed to `getProxyClass` are violated

`NullPointerException` - if the `interfaces` array argument or any of its elements are `null`, or if the invocation handler, `h`, is `null`

org.dvb.application.plugins
UndeclaredThrowableException

Syntax

```
public class UndeclaredThrowableException extends java.lang.RuntimeException
```

```
java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--java.lang.RuntimeException
                    |
                    +--org.dvb.application.plugins.UndeclaredThrowableException
```

All Implemented Interfaces:

java.io.Serializable

Description

Thrown by a method invocation on a proxy instance if its invocation handler's `invoke(Object, Method, Object[])` method throws a checked exception (a `Throwable` that is not assignable to `RuntimeException` or `Error`) that is not assignable to any of the exception types declared in the `throws` clause of the method that was invoked on the proxy instance and dispatched to the invocation handler.

An `UndeclaredThrowableException` instance contains the undeclared checked exception that was thrown by the invocation handler, and it can be retrieved with the `getUndeclaredThrowable()` method. `UndeclaredThrowableException` extends `RuntimeException`, so it is an unchecked exception that wraps a checked exception.

Constructors

UndeclaredThrowableException(Throwable)

```
public UndeclaredThrowableException(java.lang.Throwable undeclaredThrowable)
```

Constructs an `UndeclaredThrowableException` with the specifed `Throwable`.

Parameters:

`undeclaredThrowable` - the undeclared checked exception that was thrown

UndeclaredThrowableException(Throwable, String)

```
public UndeclaredThrowableException(java.lang.Throwable undeclaredThrowable,
            java.lang.String s)
```

Constructs an `UndeclaredThrowableException` with the specified `Throwable` and a detail message.

Parameters:

`undeclaredThrowable` - the undeclared checked exception that was thrown

`s` - the detail message

Methods

---

getUndeclaredThrowable()

```
public java.lang.Throwable getUndeclaredThrowable()
```

Returns the `Throwable` instance wrapped in this `UndeclaredThrowableException`.

Returns:
the undeclared checked exception that was thrown

---

printStackTrace()

```
public void printStackTrace()
```

Prints this `UndeclaredThrowableException` and its backtrace to the standard error stream.

Overrides:
java.lang.Throwable.printStackTrace() in class java.lang.Throwable

---

printStackTrace(PrintStream)

```
public void printStackTrace(java.io.PrintStream ps)
```

Prints this `UndeclaredThrowableException` and its backtrace to the specified `PrintStream`.

Overrides:
java.lang.Throwable.printStackTrace(java.io.PrintStream) in class java.lang.Throwable

Parameters:
`ps` - the `PrintStream` to print the exception to

---

printStackTrace(PrintWriter)

```
public void printStackTrace(java.io.PrintWriter pw)
```

Prints this `UndeclaredThrowableException` and its backtrace to the specified `PrintWriter`.

Overrides:
java.lang.Throwable.printStackTrace(java.io.PrintWriter) in class java.lang.Throwable

Parameters:
`pw` - the `PrintWriter` to print this exception to

org.dvb.application.plugins
XletContainer

Syntax

```
public class XletContainer extends java.awt.Container

java.lang.Object
  |
  +--java.awt.Component
        |
        +--java.awt.Container
              |
              +--org.dvb.application.plugins.XletContainer
```

All Implemented Interfaces:

java.awt.image.ImageObserver, java.awt.MenuContainer, java.io.Serializable

Description

This class provides a container that can be embedded in a widget hierarchy, and can provide a container that can safely be used as the top-level container of an embedded Xlet. This solves the problem of an embedded Xlet being able to call getParent() to discover the widget hierarchy in which it is embedded.

Since:

MHP 1.1

Constructors

XletContainer(Container)

```
public XletContainer(java.awt.Container parent)
```

Construct a new XletContainer as a child of Parent. The XletContainer contains exactly one widget: A child container. The child container is constrained to be at the same location and the same size as the parent XletContainer.

Parameters:

`parent` - The widget that is to have an Xlet embedded within it.

Throws:

`NullPointerException` - if parent is null

See Also:

`getXletContainer()`

Methods

---

getXletContainer()

```
public java.awt.Container getXletContainer()
```

Get the only child of the XletContainer. This container can safely be used as the top-level container of an Xlet, e.g. an Xlet embedded in a DVB-HTML page. Calling getParent() on this container from client code will return null, unless the caller has been granted special access via a platform-dependent mechanism.

If this method is invoked more than once for the same instance of XletContainer, it will return the same instance.

Returns:

The child of this XletContainer.

org.dvb.application.plugins
XletSystemCall

Syntax

```
public abstract class XletSystemCall

java.lang.Object
  |
  +--org.dvb.application.plugins.XletSystemCall
```

Description

This class permits user code to intercept certain system calls initiated by an embedded Xlet that need to be serviced by a support application. For example, a DVB-HTML plug-in application needs to service requests that are made by an embedded Xlet, typically via static method calls.

Since:

MHP1.1

Constructors

XletSystemCall()

```
protected XletSystemCall()
```

Create a new XletSystemCall

Methods

---

getRootContainer(XletContext)

```
public abstract java.awt.Container getRootContainer(javax.tv.xlet.XletContext ctx)
```

Called when the Xlet calls javax.tv.graphics.TVContainer.getRootContainer().

Parameters:

`ctx` - The context of the Xlet making the request; it shall be identical to the XletContext used to create this instance of XletSystemCall.

Returns:

a container object to be returned to the embedded xlet

See Also:

`javax.tv.graphics.TVContainer`

---

register(Plugin, XletContext)

```
public final void register(Plugin p, javax.tv.xlet.XletContext ctx)
```

Register this instance of XletSystemCall with the system.

Parameters:

`p` - The Plugin that services calls made by the xlet, i.e. the Plugin of which this instance of XletSystemCall is a part.

`ctx` - The XletContext of the Xlet making the calls

Throws:

`NullPointerException` - if p or ctx is null

See Also:

`unregister(Plugin, XletContext)`

---

unregister(Plugin, XletContext)

```
public final void unregister(Plugin p, javax.tv.xlet.XletContext ctx)
```

Unregister this instance of XletSystemCall with the system. When an interoperable Plugin terminates, of an Xlet managed by a Plugin is asked to terminate, the Plugin must unregister any relevant XletSystemCall instances.

Parameters:

`p` - The Plugin that services calls made by the xlet, i.e. the Plugin of which this instance of XletSystemCall is a part.

`ctx` - The XletContext of the Xlet making the calls

Throws:

`NullPointerException` - if p or ctx is null

See Also:

`register(Plugin, XletContext)`

Annex AG (normative): Stored application APIs

The current draft of this package is a partial definition of the org.dvb.application package. It includes changed classes or interfaces, new classes or interfaces and some existing classes & interfaces which have not changed. These existing classes / interfaces which are included but which have not changed can be identified by the absence of any comment or description apart from the class or interface signature. It is an open editing issue to discover whether they can easily be removed or not.

Package org.dvb.application.storage

Description
Provides support for storage of applications.

Class Summary	
Interfaces	
ApplicationStorage	An interface that shall be implemented by the objects that implement javax.service.Service interface and where the MHP terminal supports storing applications.
ExtendedAppAttributes	The `ExtendedAppAttributes` interface provides additional attributes that are useful when application can be stored in the MHP terminal.
StoredApplicationService	Defines the information about a stored application service.
StoredServiceCreator	This interface supports creating new Service objects representing stand-alone stored application services.
Classes	
ApplicationStoragePermission	This class represents a permission to manage applications stored in the MHP terminal.
Exceptions	
ApplicationDownloadException	Thrown if the downloading of the application failed.
InvalidApplicationException	Thrown if an application is not valid for installing into a particular service.
InvalidDescriptionFileException	Thrown if the description of the application to be stored is invalid or otherwise not conformant to the specification.
NotEnoughResourcesException	Thrown if the MHP terminal does not have enough resources to install the application.
ServiceAlreadyExistsException	Thrown if a StoredApplicationService already exists with the identifiers the application tried to create a new one.
UserRejectedInstallException	Thrown if the end user rejects the request to install an application.

org.dvb.application.storage
ApplicationDownloadException

Syntax

```
public class ApplicationDownloadException extends java.lang.Exception

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--org.dvb.application.storage.ApplicationDownloadException
```

All Implemented Interfaces:

java.io.Serializable

Description

Thrown if the downloading of the application failed.

Since:

MHP1.1

Constructors

ApplicationDownloadException()

```
public ApplicationDownloadException()
```

Constructs an ApplicationDownloadException with no detail message.

ApplicationDownloadException(String)

```
public ApplicationDownloadException(java.lang.String s)
```

Constructs an ApplicationDownloadException with a detail message

Parameters:

`s` - detail message

org.dvb.application.storage
ApplicationStorage

Syntax
```
public interface ApplicationStorage extends javax.tv.service.Service
```

All Known Subinterfaces:
StoredApplicationService

All Superinterfaces:
javax.tv.service.Service

Description
An interface that shall be implemented by the objects that implement javax.service.Service interface and where the MHP terminal supports storing applications. MHP terminals which do not support storing applications shall not return objects implementing this interface.

When this object represents a service that is retrieved from a network, e.g. a broadcast service, storing applications using the methods in this interface will install them in the receiver as broadcast service related stored applications.

When this object represents a stored application service, storing applications using the methods in this interface will add the application into this service.

Since:
MHP1.1

Methods

---

getStoredAppIDs()

```
public org.dvb.application.AppID[] getStoredAppIDs()
```

Lists the AppIDs of the applications that are stored within this service.

Returns:
an array of AppID object representing the stored application

Throws:
SecurityException - Thrown for broadcast services if the service represented by this object is not the currently selected service of the the service context in which the calling application is running. Thrown for a stand-alone stored service if the application calling this method does not have the same organisation_id as the application which originally created the stand-alone stored service.

Since:
MHP1.1

---

getVersionNumber(AppID)

```
public int getVersionNumber(org.dvb.application.AppID appId)
```

Return the version number of the stored application whose AppID is given as a parameter.

Parameters:

`appId` - the AppID of the application whose version is queried

Returns:

the version number of the stored application, returns -1 if the application given as a parameter is not stored

Throws:

`SecurityException` - Thrown for broadcast services if the service represented by this object is not the currently selected service of the the service context in which the calling application is running. Thrown for a stand-alone stored service if the application calling this method does not have the same organisation_id as the application which originally created the stand-alone stored service.

Since:

MHP1.1

---

initiateApplicationInstall(AppProxy, boolean, String[])

```
public void initiateApplicationInstall(org.dvb.application.AppProxy app, boolean autoStart,
            java.lang.String[] args)
```

Requests the MHP terminal to initiate the installation of an application into the MHP terminal.

Applications should be prepared for the platform consulting the end user of the MHP terminal for the permission to install the application

Note: This method is synchronous and will block until the installation is either completed or fails.

Parameters:

`app` - an AppProxy representing the application to be installed

`autoStart` - true, if the application becomes an autostart application in the stored application service; false, if the application becomes a normal present (non-autostart) application in the stored application service. This parameter is not used if storing a broadcast service related application.

`args` - parameters to be available to the application when started. Passing in either null or an array of size zero indicates no parameters are to be available. These parameters shall be available to applications when running as part of the stored application service using the Xlet property "dvb.installer.parameters".

Throws:

`InvalidApplicationException` - thrown if the application is not valid for installation into this service. For a broadcast service, only applications signalled in that service are valid. For a stand-alone stored service, all applications identified as able to run stand-alone in their application description file are defined to be valid for the purposes of this exception.

`UserRejectedInstallException` - thrown if the end user rejects the installation

`NotEnoughResourcesException` - thrown if the MHP terminal does not have enough resources, e.g. storage space, available for the application

`InvalidDescriptionFileException` - thrown if the application description file is not valid

`ApplicationDownloadException` - thrown if the downloading of the application files was not successful

`java.lang.SecurityException` - Thrown if the application calling this method does not have an ApplicationStoragePermission with action "store" or "*" for the organisation_id of the application to be stored. Also thrown for a stand-alone stored service if the application calling this method does not have the same organisation_id as the application which originally created the stand-alone stored service.

Since:
MHP1.1

---

initiateApplicationRemoval(AppID)

```
public void initiateApplicationRemoval(org.dvb.application.AppID app)
```

Requests the MHP terminal to initiate the removal of an application stored in the MHP terminal from this service.

Applications should be prepared for the platform consulting the end user of the MHP terminal for the permission to remove the application

If the application identified by the AppID passed in as a parameter is not installed in this service, the method shall fail silently.

Parameters:
`app` - AppID of the application to be removed

Throws:
`java.lang.SecurityException` - thrown if the application calling this method does not have an ApplicationStoragePermission with action "remove" or "*" for the organisation_id of the application to be removed. Also thrown for a stand-alone stored service if the application calling this method does not have the same organisation_id as the application which originally created the stand-alone stored service.

Since:
MHP1.1

See Also:
`ApplicationStoragePermission`

org.dvb.application.storage
ApplicationStoragePermission

Syntax

```
public class ApplicationStoragePermission extends java.security.BasicPermission

java.lang.Object
  |
  +--java.security.Permission
        |
        +--java.security.BasicPermission
              |
              +--org.dvb.application.storage.ApplicationStoragePermission
```

All Implemented Interfaces:

java.security.Guard, java.io.Serializable

Description

This class represents a permission to manage applications stored in the MHP terminal. An ApplicationStoragePermission contains a name representing the organisation_id whose applications can be managed and an actions list representing the permitted actions, i.e. store and/or remove applications.

The name of the permission contains the organisation_id represented in hexadecimal form without any "0x" prefix. When the application possesses this permission, it is able to initiate storage or removal of applications signalled with this organisation_id. If the application does not have the ApplicationStoragePermission granted with the same organisation_id as the application is signalled with when it tries to initiate either storing or removal of an application, the methods to store/remove will throw a SecurityException.

The actions string shall be one of the following:-

- "store", representing permission to store an application
- "remove", representing permission to remove an application
- "create", representing permission to create a stored application service
- "remove_service", representing permission to remove a stored application service
- "*", representing all of the above

Since:

MHP1.1

Constructors

ApplicationStoragePermission(String)

```
public ApplicationStoragePermission(java.lang.String name)
```

Creates a new ApplicationStoragePermission with the specified name. Permissions created with this constructor implicitly have the actions string set to "*".

Parameters:

`name` - the organisation_id whose applications can be managed. This is encoded in hexadecimal representation without any preceding "0x" prefix.

ApplicationStoragePermission(String, String)

```
public ApplicationStoragePermission(java.lang.String name, java.lang.String actions)
```

Creates a new ApplicationStoragePermission object with the specified name. The name contains the organisation_id of the applications that can be managed and the actions String shall be either "store", "remove" or "*". Permission objects constructed with incorrectly encoded parameters do not represent any permission and are ignored by the platform.

Parameters:

`name` - the organisation_id whose applications can be managed. This is encoded in hexadecimal representation without any preceding "0x" prefix.

`actions` - Shall contain "store", "remove" or "*"

org.dvb.application.storage
ExtendedAppAttributes

Syntax
```
public interface ExtendedAppAttributes
```

Description
The `ExtendedAppAttributes` interface provides additional attributes that are useful when application can be stored in the MHP terminal.

AppAttributes objects that are returned from the AppsDatabase shall implement this interface

Since:
MHP1.1

Methods

---

getCurrentVersionNumber()

```
public int getCurrentVersionNumber()
```

Returns the optional version number currently signalled for this application. e.g. in the AIT. If this is not available, -1 shall be returned.

Returns:
the version number signalled for this application.

Since:
MHP1.1

org.dvb.application.storage
InvalidApplicationException

Syntax

```
public class InvalidApplicationException extends java.lang.Exception

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--org.dvb.application.storage.InvalidApplicationException
```

All Implemented Interfaces:

java.io.Serializable

Description

Thrown if an application is not valid for installing into a particular service.

Since:

MHP1.1

Constructors

InvalidApplicationException()

```
public InvalidApplicationException()
```

Constructs an InvalidApplicationException with no detail message.

InvalidApplicationException(String)

```
public InvalidApplicationException(java.lang.String s)
```

Construct a InvalidApplicationException with a detail message

Parameters:

`s` - detail message

org.dvb.application.storage
InvalidDescriptionFileException

Syntax

```
public class InvalidDescriptionFileException extends java.lang.Exception

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--org.dvb.application.storage.InvalidDescriptionFileException
```

All Implemented Interfaces:

java.io.Serializable

Description

Thrown if the description of the application to be stored is invalid or otherwise not conformant to the specification.

Since:

MHP1.1

Constructors

InvalidDescriptionFileException()

```
public InvalidDescriptionFileException()
```

Constructs an InvalidDescriptionFileException with no detail message.

InvalidDescriptionFileException(String)

```
public InvalidDescriptionFileException(java.lang.String s)
```

Constructs an InvalidDescriptionFileException with a detail message

Parameters:

`s` - detail message

org.dvb.application.storage
NotEnoughResourcesException

Syntax

```
public class NotEnoughResourcesException extends java.lang.Exception

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--org.dvb.application.storage.NotEnoughResourcesException
```

All Implemented Interfaces:

java.io.Serializable

Description

Thrown if the MHP terminal does not have enough resources to install the application. e.g. not enough storage space.

Since:

MHP1.1

Constructors

NotEnoughResourcesException()

```
public NotEnoughResourcesException()
```

Constructs a NotEnoughResourcesException with no detail message.

NotEnoughResourcesException(String)

```
public NotEnoughResourcesException(java.lang.String s)
```

Constructs a NotEnoughResourcesException with a detail message

Parameters:

`s` - detail message

org.dvb.application.storage
ServiceAlreadyExistsException

Syntax

```
public class ServiceAlreadyExistsException extends java.lang.Exception
```

```
java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--org.dvb.application.storage.ServiceAlreadyExistsException
```

All Implemented Interfaces:

java.io.Serializable

Description

Thrown if a StoredApplicationService already exists with the identifiers the application tried to create a new one.

Since:

MHP1.1

Constructors

ServiceAlreadyExistsException()

```
public ServiceAlreadyExistsException()
```

Constructs a ServiceAlreadyExistsException with no detail message.

ServiceAlreadyExistsException(String)

```
public ServiceAlreadyExistsException(java.lang.String s)
```

Constructs a ServiceAlreadyExistsException with a detail message

Parameters:

`s` - detail message

org.dvb.application.storage
StoredApplicationService

Syntax
```
public interface StoredApplicationService extends javax.tv.service.Service, ApplicationStorage
```

All Superinterfaces:
ApplicationStorage, javax.tv.service.Service

Description
Defines the information about a stored application service.

Stored application services can be created by applications that have a permission to store applications for an organisation_id.

Stored application services are uniquely identified within the terminal by the combination of the organisation_id and service_id.

Since:
MHP1.1

Fields

STORED

```
public static final javax.tv.service.ServiceInformationType STORED
```

The service information is from storage

STORED_APPLICATION_SERVICE

```
public static final javax.tv.service.ServiceType STORED_APPLICATION_SERVICE
```

The service type for a stored application

See Also:
`javax.tv.service.navigation.ServiceTypeFilter`

Methods

---

getLocator()

```
public javax.tv.locator.Locator getLocator()
```

Gets the Locator for this stored application service. This locator is opaque and platform specific. It is not required to be an instance of any public locator class in the platform.

Overrides:
javax.tv.service.Service.getLocator() in interface javax.tv.service.Service

Returns:
a locator for this stored application service

---

getName()

```
public java.lang.String getName()
```

Returns the name of the stored application service as defined when the stored application service was created.

Overrides:
javax.tv.service.Service.getName() in interface javax.tv.service.Service

Returns:
the name of the stored application service

---

getOrganisationId()

```
public int getOrganisationId()
```

Return the organisation id of this stored application service

Returns:
the organisation id of this stored application service

---

getServiceId()

```
public int getServiceId()
```

Return the service id of this stored application service

Returns:
the service id of this stored application service

---

getServiceInformationType()

```
public javax.tv.service.ServiceInformationType getServiceInformationType()
```

Returns the service information format of this object. This shall always return STORED.

Returns:
the service information format

---

getServiceType()

```
public javax.tv.service.ServiceType getServiceType()
```

Returns the type of this service. For stored application services, this method shall always return STORED_APPLICATION_SERVICE.

Overrides:
javax.tv.service.Service.getServiceType() in interface javax.tv.service.Service

Returns:
service type of this service

---

hasMultipleInstances()

```
public boolean hasMultipleInstances()
```

Indicates whether the service represented by this Service is available on multiple transports. For stored application services, this shall always return false.

Overrides:
javax.tv.service.Service.hasMultipleInstances() in interface javax.tv.service.Service

Returns:
false

---

removeService()

```
public void removeService()
```

Request the removal of the whole stored application service from the terminal. Removal of the service results in the removal of all the applications from within that service.

---

retrieveDetails(SIRequestor)

```
public javax.tv.service.SIRequest retrieveDetails(javax.tv.service.SIRequestor requestor)
```

This method retrieves additional information about the service. This shall result in failure with the SIRequestFailureType DATA_UNAVAILABLE.

Overrides:
javax.tv.service.Service.retrieveDetails(javax.tv.service.SIRequestor) in interface javax.tv.service.Service

Parameters:
`requestor` - The SIRequestor to be notified when this operation completes.

Returns:
A SIRequest object identifying this request.

org.dvb.application.storage
StoredServiceCreator

Syntax
```
public interface StoredServiceCreator
```

Description
This interface supports creating new Service objects representing stand-alone stored application services. Services thus created shall appear in the list of services maintained by the SIManager until removed using `StoredApplicationService.remove` or some MHP terminal specific mechanism. i.e. they shall be returned by `filterServices` both when passed an instance of `ServiceTypeFilter` constructed with the type `StoredApplicationService.STORED_APPLICATION_SERVICE` and when passed null to list all known services.

This interface shall be implemented by the object returned from `javax.tv.service.SIManager.getInstance` only in those MHP implementations which support stand-alone stored applications.

Since:
MHP1.1

Methods

---

createStoredApplicationService(int, int, String)

```
public StoredApplicationService createStoredApplicationService(int organisation_id,
            int service_id, java.lang.String serviceName)
```

Requests the platform to create a new stored application service.

Parameters:

`organisation_id` - the organisation_id of the organisation to whom this service belongs to

`service_id` - unique identifier for this service within the organisation

`serviceName` - a name for the service that can be displayed to the end user to identify this service

Returns:

the stored application service created

Throws:

`UserRejectedInstallException` - thrown if the end user rejects the installation

`NotEnoughResourcesException` - thrown if the MHP terminal does not have enough resources, e.g. storage space, available for the application

`ServiceAlreadyExistsException` - thrown if a stored application service with the same organisation_id and service_id already exists in the terminal

org.dvb.application.storage
UserRejectedInstallException

Syntax
```
public class UserRejectedInstallException extends java.lang.Exception

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--org.dvb.application.storage.UserRejectedInstallException
```

All Implemented Interfaces:
java.io.Serializable

Description
Thrown if the end user rejects the request to install an application.

Since:
MHP1.1

Constructors

UserRejectedInstallException()

```
public UserRejectedInstallException()
```

Constructs a UserRejectedInstallException with no detail message.

UserRejectedInstallException(String)

```
public UserRejectedInstallException(java.lang.String s)
```

Constructs a UserRejectedInstallException with a detail message

Parameters:
`s` - detail message

Annex AH (normative): Internet client APIs

Package org.dvb.internet

Description

Provides a mechanism for MHP applications to control internet clients that may be present on an MHP such as a web browser or email client.

This package provides a mechanism for MHP applications to control internet clients that may be present on an MHP such as a web browser or email client. The API makes no assumptions about whether an internet client and downloaded MHP application can run simultaneously, and in some cases starting an internet client may result in the calling application being killed.

The API consists of two main class hierarchies. `InternetClientService` and its clients provide a mechanism to get a locator for a resident internet client so that it can be started, and also provide any functionality that does not require the client to be started. This can include adding bookmarks or getting the capabilities of the clients. The second major part of the API is the `InternetClient` class and its subclasses. These provide an interface to a running instance of an internet client and support the operations that can only be carried out when the client is running.

The internet client API uses the JavaTV service navigation API for accessing resident applications. Any effect that the invocation of a resident internet client has on the lifecycle of a downloaded application is dependent on the service context in which the resident application is started (using `ServiceContext.select()`). If the internet client is started in the same service context as the downloaded application, then the downloaded application will be terminated, following the usual semantics of the service selection API. The following section introduces the basic concepts and then explores a few scenarios to illustrate combinations or broadcast application versus resident application execution.

Concepts

The first implication of resident applications is that it should be feasible for broadcast applications to isolate, browse, and select such services. The collection of `javax.tv.service.*` packages provides the framework for the solution to this requirement.

The class `ServiceType` in the `javax.tv.service` package defines various kinds of services. This is extended in this API to provide additional service types for Internet clients. The `javax.tv framework` lets a client filter the services known to a platform to create a `ServiceCollection`. The client would first create an instance of `ServiceTypeFilter`

```
public ServiceTypeFilter(ServiceType type)
```

where the `ServiceType` in the signature would be the instance for the resident service in question. The client would then filter the services known to the platform to isolate the resident services of this type. The `ServiceCollection` interface provides the filter operation.

```
public ServiceCollection createServiceCollection(ServiceFilter filter)
```

Given the `ServiceCollection`, the client can iterate over the resident services to find a specific resident service. Given the `Service`, the client can recover its locator:

```
public Locator getLocator()
```

The last step is to `select()` the resident service. The `ServiceContext` interface of the `javax.tv.service.selection` package provides the operation:

```
public void select(Locator selection)
throws InvalidLocatorException, java.lang.SecurityException,
java.lang.IllegalStateException
```

The semantics of `select()` are that the implementation first examines the locator of the signature. If the locator is found to be valid, the operation returns. The implementation does not stall while it attempts to allocate resources to download the service, and then attempts to allocate resources to execute the service.

If the implementation determines that it can not realize the service due to scarce resources, it forwards a `SelectionFailedEvent` (of the `javax.tv.service. selection` package) with the reason code `INSUFFICIENT_RESOURCES`. The `ServiceContextListener` interface fields the event:

```
public void receiveServiceContextEvent(ServiceContextEvent e)
```

Thus the client should implement an instance of the `ServiceContextListener` interface and register interest in service context events. The `ServiceContext` interface provides the mechanism:

```
public void addListener(ServiceContextListener listener)
throws java.lang.IllegalStateException
```

The semantics of a `ServiceContext` are that at most a single `Service` can execute within a `ServiceContext` at a time. Since the premise is that a broadcast service selects a resident service, there are two scenarios of interest.

The first scenario presumes that the broadcast service wants to select the resident service but not survive. It expects the selection to cause its termination. The broadcast service in this case should create an instance of `ServiceContextFactory`. The operation on `ServiceContextFactory` itself is:

```
public static ServiceContextFactory getInstance()
```

The broadcast application then requests the service contexts that are visible to the broadcast application:

```
public abstract ServiceContext getServiceContext(XletContext ctx)
```

which returns *its* `ServiceContext`. The broadcast application selects the resident application within its service context:

```
public void select(Locator selection)
throws InvalidLocatorException, java.lang.SecurityException,
java.lang.IllegalStateException
```

which causes the broadcast application to terminate.

The premise of the second scenario is that the broadcast application wants to survive the selection of the resident service. In this case the broadcast again creates a `ServiceContextFactory` but then creates a `ServiceContext` which is not its `ServiceContext`:

```
public abstract ServiceContext createServiceContext()
throws InsufficientResourcesException,
java.lang.SecurityException
```

The broadcast application selects the resident application. Since the operation is on a `ServiceContext` that is not its `ServiceContext`, the broadcast application survives the selection.

One subtle aspect of the invocation patterns is that the platform does not know whether the broadcast application will attempt to select a resident application versus another broadcast application until the broadcast application invokes the `select()` operation. For example, assume the platform supports a single broadcast application plus a single resident application. Further assume that, after the broadcast application creates a second `ServiceContext`, it selects a second broadcast application rather than a resident application. If the locator is valid, the operation succeeds, but the broadcast application then receives a `SelectionFailedEvent`.

Likewise assume the platform supports multiple broadcast applications but not (for the present) a resident application. If the broadcast application selects a resident application, and if the locator is valid, the operation succeeds, but the broadcast application then receives a `SelectionFailedEvent`. (The second case is rather improbable. If the platform does not support resident applications, it is not clear how the broadcast application could obtain a valid locator to a broadcast application. The platform would have to support resident applications in concept, but not at the instant the broadcast applications selects a resident application.)

Class Summary
Interfaces

Class Summary	
EmailClient	Interface supporting the operations required on an email client.
EmailClientService	Service representing the resident email client
InternetClient	Base interface for the internet clients.
InternetClientListener	Interface for objects that wish to receive InternetClientEvents
InternetClientService	The base class for the interface to resident applications that are supported by the internet access profile.
UsenetClient	This interface supports the operations required on a Usenet news client.
UsenetClientService	Service representing the resident usenet news client
WWWBrowser	This interface provides support for the operations required on an WWW browser.
WWWBrowserService	Service representing a resident WWW browser
Classes	
CancelledByUserEvent	Event indicating that an operation on an internet client failed because the operation was canceled by the user
HomePagePermission	This class is for permissions related to the ability for an MHP application to set the home page of a WWW browser in the internet access profile.
InternetClientEvent	Base class for all status events from internet clients.
InternetClientFailureEvent	Event indicating that an operation on an internet client failed.
InternetClientSuccessEvent	Event indicating that an operation on an internet client succeeded
InternetServiceFilter	InternetServiceFilter represents a service type for a particular kind of internet client.
InternetServiceType	Class representing the additional service types available in the Internet Access profile.
PermissionDeniedEvent	Event indicating that an operation on an internet client failed due to the specified URL not being accessible by the client due to access controls on the server.
URLUnavailableEvent	Event indicating that an operation on an internet client failed due to the specified URL not being available.
Exceptions	
BookmarkExistsException	Exception generated when an application tries to add a bookmark that already exists
ClientNotRunningException	Exception thrown when a method of InternetClient or one of its subclasses is called while the client is not running, for instance if the client has been terminated by the user.
EntryExistsException	Exception generated when an application tries to add a bookmark or address book entry that already exists

org.dvb.internet
BookmarkExistsException

Syntax
```
public class BookmarkExistsException extends java.lang.Exception

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--org.dvb.internet.BookmarkExistsException
```

All Implemented Interfaces:
java.io.Serializable

Description
Exception generated when an application tries to add a bookmark that already exists

Constructors

BookmarkExistsException()

```
public BookmarkExistsException()
```

Construct a `BookmarkExistsException` with no detail message

BookmarkExistsException(String)

```
public BookmarkExistsException(java.lang.String message)
```

Construct a `BookmarkExistsException` with the specified detail message

Parameters:
`message` - the detail message

org.dvb.internet
CancelledByUserEvent

Syntax

```
public class CancelledByUserEvent extends InternetClientFailureEvent
```

```
java.lang.Object
  |
  +--java.util.EventObject
        |
        +--InternetClientEvent
              |
              +--InternetClientFailureEvent
                    |
                    +--org.dvb.internet.CancelledByUserEvent
```

All Implemented Interfaces:

java.io.Serializable

Description

Event indicating that an operation on an internet client failed because the operation was canceled by the user

Constructors

CancelledByUserEvent(Object, URL)

```
public CancelledByUserEvent(java.lang.Object source, java.net.URL url)
```

Construct a new `CancelledByUserEvent`

Parameters:

`source` - the source of the event

`url` - the URL to which the event relates.

org.dvb.internet
ClientNotRunningException

Syntax

```
public class ClientNotRunningException extends java.lang.Exception
```

```
java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--org.dvb.internet.ClientNotRunningException
```

All Implemented Interfaces:

java.io.Serializable

Description

Exception thrown when a method of `InternetClient` or one of its subclasses is called while the client is not running, for instance if the client has been terminated by the user.

Constructors

ClientNotRunningException()

```
public ClientNotRunningException()
```

Construct a `ClientNotRunningException` with no detail message

ClientNotRunningException(String)

```
public ClientNotRunningException(java.lang.String reason)
```

Construct a `ClientNotRunningException` with the specified detail message

Parameters:

`reason` - the reason why the exception was thrown

org.dvb.internet
EmailClient

Syntax
```
public interface EmailClient extends InternetClient
```

All Superinterfaces:
`InternetClient`, javax.tv.service.selection.ServiceContentHandler

Description
Interface supporting the operations required on an email client.

Methods

---

createMessage(String, String, String, String)

```
public void createMessage(java.lang.String to, java.lang.String subject,
            java.lang.String messageBody, java.lang.String sender)
```

Create a new email message. If any of the parameters are an empty string, the user will be prompted for the missing information. If the sender is null, then the default email address will be used. Null values for any of the other parameters will cause an exception to be thrown.

This is an asynchronous operation, whose success or failure will be indicated by an `InternetClientSuccessEvent` or `InternetClientFailureEvent` or one of their subclasses.

Applications can send email 'silently', without any user intervention as long as the sender email address that is used is not that of the user. Whenever email is to be sent with the users email address, the user must be prompted before the email can be sent.

Parameters:

`to` - the address to which the email should be sent.

`subject` - the subject for the email.

`messageBody` - the body of the message.

`sender` - the sender address to be used.

Throws:

`NullPointerException` - if any of the to address, subject or message body are null.

`ClientNotRunningException` - if the client is not currently running.

`IllegalArgumentException` - if either the destination address or the sender is an empty string.

org.dvb.internet
EmailClientService

Syntax
```
public interface EmailClientService extends InternetClientService
```

All Superinterfaces:
InternetClientService, javax.tv.service.Service

Description
Service representing the resident email client

Methods

---

addToAddressBook(String, String)

```
public void addToAddressBook(java.lang.String address, java.lang.String name)
```

Add an entry to the address book. As a side-effect an entry previously added by this method may be lost. Implementations may restrict the number of entries a single MHP application or source of applications may add.

Parameters:

`address` - the address to be added to the address book

`name` - the name that should be associated with that address

Throws:

`EntryExistsException` - if an entry with both the same name and the same address already exists in the address book.

`IllegalArgumentException` - if the string passed as the email address does not conform to the internet email address format

`IOException` - if no more address book entries can be added due to a lack of storage space or a limitation in the client

`IOException`

---

getUserEmailAddress()

```
public java.lang.String getUserEmailAddress()
```

Get the email address of the user. The returned value shall be the same as that obtained by reading the value of the "User @" preference (see org.dvb.user.GeneralPreferences for details).

Returns:

the email address of the user, or null if no email address is set or the email address is not available to the client.

Throws:

`SecurityException` - if the caller does not have a `UserPreferencePermission` with the name "read".

org.dvb.internet
EntryExistsException

Syntax
```
public class EntryExistsException extends java.lang.Exception

java.lang.Object
  |
  +--java.lang.Throwable
        |
        +--java.lang.Exception
              |
              +--org.dvb.internet.EntryExistsException
```

All Implemented Interfaces:
java.io.Serializable

Description
Exception generated when an application tries to add a bookmark or address book entry that already exists

Constructors

EntryExistsException()

```
public EntryExistsException()
```

Construct a `EntryExistsException` with no detail message

EntryExistsException(String)

```
public EntryExistsException(java.lang.String message)
```

Construct a `EntryExistsException` with the specified detail message

Parameters:

`message` - the reason why the exception was thrown

org.dvb.internet
HomePagePermission

Syntax

```
public class HomePagePermission extends java.security.BasicPermission

java.lang.Object
  |
  +--java.security.Permission
        |
        +--java.security.BasicPermission
              |
              +--org.dvb.internet.HomePagePermission
```

All Implemented Interfaces:

java.security.Guard, java.io.Serializable

Description

This class is for permissions related to the ability for an MHP application to set the home page of a WWW browser in the internet access profile. If an application has this permission then shall be able to set the home page.

Constructors

HomePagePermission(String)

```
public HomePagePermission(java.lang.String name)
```

Creates a new `HomePagePermission`. The name parameter is not used and must be set to empty string "". Implementations of this version of this specification shall ignore the name, but it could be taken into use in future versions of this specification.

Parameters:

`name` - the name of the `HomePagePermission`. Not used, shall be "".

HomePagePermission(String, String)

```
public HomePagePermission(java.lang.String name, java.lang.String actions)
```

Creates a new `HomePagePermission`. The name and actions parameters are not used. Implementations of this version of this specification shall ignore the name and actions, but they could be taken into use in future versions of this specification. This constructor exists for use by the Policy object to instantiate new Permission objects.

Parameters:

`name` - the name of the `HomePagePermission`. Not used, shall be "".

`actions` - Not used, shall be null.

org.dvb.internet
InternetClient

Syntax
```
public interface InternetClient extends javax.tv.service.selection.ServiceContentHandler
```

All Known Subinterfaces:
EmailClient, UsenetClient, WWWBrowser

All Superinterfaces:
javax.tv.service.selection.ServiceContentHandler

Description
Base interface for the internet clients. Access to those methods common to all running instances of the client (e.g. operations on bookmark lists) are all carried out through the service objects associated with the `InternetClient` object in question. These are accessed using the `getService()` method.

Methods

---

addInternetClientListener(InternetClientListener)

```
public void addInternetClientListener(InternetClientListener l)
```

Add a listener for `InternetClientEvents`. If the listener is already registered, or the client is not running, then calls to this method have no effect.

Parameters:
`l` - the listener to be added.

---

getService()

```
public InternetClientService getService()
```

Get the service object which matches this internet client. In the case of a web browser, for example, this would be an instance of the WWWBrowserService class.

Returns:
the service which matches the `InternetClient` object.

---

getServiceContentLocators()

```
public javax.tv.locator.Locator[] getServiceContentLocators()
```

Reports the portions of the service on which this handler operates.

Overrides:
javax.tv.service.selection.ServiceContentHandler.getServiceContentLocators() in interface javax.tv.service.selection.ServiceContentHandler

Returns:
An array of length 1, containing the locator representing the internet client. This shall be the same locator returned by calls to `getService().getLocator()`.

removeInternetClientListener(InternetClientListener)

```
public void removeInternetClientListener(InternetClientListener l)
```

Remove a listener for `InternetClientEvents`. If the listener is not registered, or the client is not running, then calls to this method have no effect.

Parameters:

`l` - the listener to be added.

org.dvb.internet
InternetClientEvent

Syntax
```
public class InternetClientEvent extends java.util.EventObject

java.lang.Object
  |
  +--java.util.EventObject
        |
        +--org.dvb.internet.InternetClientEvent
```

Direct Known Subclasses:
InternetClientFailureEvent, InternetClientSuccessEvent

All Implemented Interfaces:
java.io.Serializable

Description
Base class for all status events from internet clients.

Constructors

InternetClientEvent(Object, URL)

```
public InternetClientEvent(java.lang.Object source, java.net.URL url)
```

Construct a new `InternetClientEvent`

Parameters:

`source` - the source of the event

`url` - the URL to which the event relates.

Methods

---

getUrl()

```
public java.net.URL getUrl()
```

Get the URL for which this event was generated. In the case that a URL was not specified when the event was constructed, null shall be returned.

Returns:

an instance of `java.net.URL` or null

org.dvb.internet
InternetClientFailureEvent

Syntax
```
public class InternetClientFailureEvent extends InternetClientEvent
```

```
java.lang.Object
  |
  +--java.util.EventObject
        |
        +--InternetClientEvent
              |
              +--org.dvb.internet.InternetClientFailureEvent
```

Direct Known Subclasses:
CancelledByUserEvent, PermissionDeniedEvent, URLUnavailableEvent

All Implemented Interfaces:
java.io.Serializable

Description
Event indicating that an operation on an internet client failed. Typically, internet clients will post subclasses of this event detailing the reason why the operation failed.

Constructors

InternetClientFailureEvent(Object, URL)

```
public InternetClientFailureEvent(java.lang.Object source, java.net.URL url)
```

Construct a new `InternetClientFailureEvent`

Parameters:

`source` - the source of the event

`url` - the URL to which the event relates.

org.dvb.internet
InternetClientListener

Syntax
```
public interface InternetClientListener extends java.util.EventListener
```

All Superinterfaces:
java.util.EventListener

Description
Interface for objects that wish to receive `InternetClientEvents`

Methods

ReceiveInternetClientEvent(InternetClientEvent)

```
public void ReceiveInternetClientEvent(InternetClientEvent event)
```

The method to be called when an `InternetClientEvent` is received.

Parameters:
`event` - the received `InternetClientEvent`

org.dvb.internet
InternetClientService

Syntax
```
public interface InternetClientService extends javax.tv.service.Service
```

All Known Subinterfaces:
`EmailClientService`, `UsenetClientService`, `WWWBrowserService`

All Superinterfaces:
javax.tv.service.Service

Description
The base class for the interface to resident applications that are supported by the internet access profile.

The lifecycle of an application which implements this interface or its subclasses is for a broadcast service. The application is started by selecting the appropriate service (using the `Locator` object returned by calls to `getLocator()`). If this service is selected in the service context which contains the executing application, any currently presented content will be stopped and the application will be destroyed before the client is launched. Calling `destroy()` or `stop()` on the service context in which the client is running will cause the client to be terminated.

Methods in this API will not affect the lifecycle of the calling application.

Methods

---

canRunApplication()

```
public boolean canRunApplication()
```

Returns true if the application can run without having to stop the downloaded MHP application.

Returns:
true if the application can be run without stopping the calling application, or false otherwise.

---

getName()

```
public java.lang.String getName()
```

Returns a short service name or an acronym. In the case of subclasses of `InternetClient`, the returned value is implementation dependent

Overrides:
javax.tv.service.Service.getName() in interface javax.tv.service.Service

Returns:
A string representing this service's short name.

---

getServiceType()

```
public javax.tv.service.ServiceType getServiceType()
```

Returns the type of this service. In the case of internet clients, one of the service types defined in the `InternetServiceType` class shall be returned.

Overrides:
javax.tv.service.Service.getServiceType() in interface javax.tv.service.Service

Returns:
The service type of this Service.

---

getSupportedClientServices()

```
public InternetClientService[] getSupportedClientServices()
```

Returns all `InternetClientService`s supported by the same application as this one. This `InternetClientService` is included in the array.

Returns:
an array of `InternetClientServices`

---

hasMultipleInstances()

```
public boolean hasMultipleInstances()
```

This method indicates whether the service represented by this Service is available on multiple transports. This method has no effect in the case of an `InternetClient`

Overrides:
javax.tv.service.Service.hasMultipleInstances() in interface javax.tv.service.Service

Returns:
FALSE always for `InternetClient` instances

---

retrieveDetails(SIRequestor)

```
public javax.tv.service.SIRequest retrieveDetails(javax.tv.service.SIRequestor requestor)
```

This method will always fail when called for an `InternetClient`. The requestor will always be notified of a failure of type DATA_UNAVAILABLE.

Overrides:
javax.tv.service.Service.retrieveDetails(javax.tv.service.SIRequestor) in interface javax.tv.service.Service

Parameters:
`requestor` - - The `SIRequestor` to be notified when this retrieval operation completes.

Returns:
An `SIRequest` object identifying the request

org.dvb.internet
InternetClientSuccessEvent

Syntax
```
public class InternetClientSuccessEvent extends InternetClientEvent
```

```
java.lang.Object
  |
  +--java.util.EventObject
        |
        +--InternetClientEvent
              |
              +--org.dvb.internet.InternetClientSuccessEvent
```

All Implemented Interfaces:
java.io.Serializable

Description
Event indicating that an operation on an internet client succeeded

Constructors

InternetClientSuccessEvent(Object, URL)

```
public InternetClientSuccessEvent(java.lang.Object source, java.net.URL url)
```

Construct a new `InternetClientSuccessEvent`

Parameters:

`source` - the source of the event

`url` - the URL to which the event relates.

org.dvb.internet
InternetServiceFilter

Syntax

```
public final class InternetServiceFilter extends javax.tv.service.navigation.ServiceFilter

java.lang.Object
  |
  +--javax.tv.service.navigation.ServiceFilter
        |
        +--org.dvb.internet.InternetServiceFilter
```

Description

`InternetServiceFilter` represents a service type for a particular kind of internet client. A `ServiceList` resulting from this filter will include only services providing access to the specified type of internet client.

Fields

EMAIL_CLIENT

```
public static final int EMAIL_CLIENT
```

Constant identifying an email client service

NEWS_CLIENT

```
public static final int NEWS_CLIENT
```

Constant identifying a usenet news client service

WWW_CLIENT

```
public static final int WWW_CLIENT
```

Constant identifying a WWW client service

Constructors

InternetServiceFilter(int)

```
public InternetServiceFilter(int service_type)
```

Constructs the filter based on a particular type of internet client service. The types of service required are those defined by the constants in this class. Support for other values is platform dependent. Platforms not supporting services of the type specified shall return an empty `ServiceList` when instances of this class constructed using that type are used.

Parameters:

`service_type` - the type of service required

Methods

---

accept(Service)

```
public boolean accept(javax.tv.service.Service service)
```

Tests if a particular service represents an internet client of the type specified in the constructor of this instance.

Overrides:
javax.tv.service.navigation.ServiceFilter.accept(javax.tv.service.Service) in class javax.tv.service.navigation.ServiceFilter

Parameters:
`service` - A Service to be evaluated against the filtering algorithm.

Returns:
true if service satisfies the filtering algorithm; false otherwise.

org.dvb.internet
InternetServiceType

Syntax
```
public class InternetServiceType extends javax.tv.service.ServiceType

java.lang.Object
  |
  +--javax.tv.service.ServiceType
        |
        +--org.dvb.internet.InternetServiceType
```

Description
Class representing the additional service types available in the Internet Access profile. When this service type is used in a `java.tv.service.navigation.ServiceTypeFilter` for filtering available services on their type, all internet client services shall be returned. Applications wishing to obtain a specific sub-type of internet client service should use `InternetServiceFilter`.

See Also:
`InternetServiceFilter`

Fields

INTERNET_CLIENT

```
public static final javax.tv.service.ServiceType INTERNET_CLIENT
```

WWW service type

Constructors

InternetServiceType(String)

```
protected InternetServiceType(java.lang.String name)
```

This protected constructor is provided for implementation use and to enable future evolution of this or other specifications. It shall not be called by inter-operable applications.

Parameters:
`name` - the name of the service type

org.dvb.internet
PermissionDeniedEvent

Syntax

```
public class PermissionDeniedEvent extends InternetClientFailureEvent
```

```
java.lang.Object
  |
  +--java.util.EventObject
        |
        +--InternetClientEvent
              |
              +--InternetClientFailureEvent
                    |
                    +--org.dvb.internet.PermissionDeniedEvent
```

All Implemented Interfaces:

java.io.Serializable

Description

Event indicating that an operation on an internet client failed due to the specified URL not being accessible by the client due to access controls on the server.

Constructors

PermissionDeniedEvent(Object, URL)

```
public PermissionDeniedEvent(java.lang.Object source, java.net.URL url)
```

Construct a new `PermissionDeniedEvent`

Parameters:

`source` - the source of the event

`url` - the URL to which the event relates.

org.dvb.internet
URLUnavailableEvent

Syntax

```
public class URLUnavailableEvent extends InternetClientFailureEvent
```

```
java.lang.Object
  |
  +--java.util.EventObject
        |
        +--InternetClientEvent
              |
              +--InternetClientFailureEvent
                    |
                    +--org.dvb.internet.URLUnavailableEvent
```

All Implemented Interfaces:

java.io.Serializable

Description

Event indicating that an operation on an internet client failed due to the specified URL not being available. This could be because a server is not available or because a file is not available on that server

Constructors

URLUnavailableEvent(Object, URL)

```
public URLUnavailableEvent(java.lang.Object source, java.net.URL url)
```

Construct a new `URLUnavailableEvent`

Parameters:

`source` - the source of the event

`url` - the URL to which the event relates.

org.dvb.internet
UsenetClient

Syntax
```
public interface UsenetClient extends InternetClient
```

All Superinterfaces:
InternetClient, javax.tv.service.selection.ServiceContentHandler

Description
This interface supports the operations required on a Usenet news client.

Any URLs passed to methods in this interface should correspond to the usenet news URL format specified in RFC 1738

Methods

---

selectGroup(URL)

```
public void selectGroup(java.net.URL group)
```

Select and display messages in the specified newsgroup. If the news client is not running, then this method will not cause it to be started and the call will fail.

This is an asynchronous operation, whose success or failure will be indicated by an InternetClientSuccessEvent or InternetClientFailureEvent or one of their subclasses.

Parameters:
group - the URL of the group. This may or may not include the address of a news server.

Throws:
SecurityException - if the caller does not have a SocketPermission for the host part of the specified URL.

IllegalArgumentException - if the specified URL does not correspond to the Usenet news URL format specified in RFC 1738

ClientNotRunningException - if the client is not currently running.

---

selectMessage(URL)

```
public void selectMessage(java.net.URL message)
```

Select and display a message with the given message ID. If the news client is not running, then this method will not cause it to be started and the call will fail.

This is an asynchronous operation, whose success or failure will be indicated by an InternetClientSuccessEvent or InternetClientFailureEvent or one of their subclasses.

Parameters:
message - the URL of the message. This may or may not include the address of a news server.

Throws:

`SecurityException` - if the caller does not have a `SocketPermission` for the host part of the specified URL

`IllegalArgumentException` - if the specified URL does not include a Usenet news message ID or does not correspond to the Usenet news URL format specified in RFC 1738

`ClientNotRunningException` - if the client is not currently running.

org.dvb.internet
UsenetClientService

Syntax
```
public interface UsenetClientService extends InternetClientService
```

All Superinterfaces:
InternetClientService, javax.tv.service.Service

Description
Service representing the resident usenet news client

Methods

---

subscribe(String)

```
public void subscribe(java.lang.String newsgroup)
```

Add a newsgroup to the list currently subscribed newsgroups. If the newsgroup is already in the list, then this method has no effect. As a side-effect a newsgroup previously subscribed to by this method may be unsubscribed. Implementations may restrict the number of newsgroups a single MHP application or source of applications may subscribe to.

Parameters:

`newsgroup` - the name of the newsgroup that should be subscribed to

Throws:

`IOException` - if no more newsgroups can be added due to a lack of storage space

`IOException`

org.dvb.internet
WWWBrowser

Syntax
```
public interface WWWBrowser extends InternetClient
```

All Superinterfaces:
InternetClient, javax.tv.service.selection.ServiceContentHandler

Description
This interface provides support for the operations required on an WWW browser.

Any URLs passed to methods in this interface should correspond to the HTTP or FTP URL schemes specified in RFC 1738. Other schemes or URL formats may be supported, but these are implementation-specific and additional supported schemes should be discovered by querying the capabilities of the web browser if they are required.

Methods

---

goToURL(URL)

```
public void goToURL(java.net.URL url)
```

Direct the web browser to display the page at the specified URL. If the web browser is not already running, then this method will not cause the web browser to be started and the call will fail.

This is an asynchronous operation, whose success or failure will be indicated by an `InternetClientSuccessEvent` or `InternetClientFailureEvent` or one of their subclasses.

Parameters:

`url` - the URL to visit

Throws:

`SecurityException` - if the caller does not have a `SocketPermission` for the host part of the specified URL

`IllegalArgumentException` - if the URL scheme is not supported by the web browser.

`ClientNotRunningException` - if the client is not currently running.

org.dvb.internet
WWWBrowserService

Syntax
```
public interface WWWBrowserService extends InternetClientService
```

All Superinterfaces:
InternetClientService, javax.tv.service.Service

Description
Service representing a resident WWW browser

Methods

---

addBookmark(Locator, String)

```
public void addBookmark(javax.tv.locator.Locator locator, java.lang.String name)
```

Add a bookmark to the list of bookmarks in the current application. As a side-effect a bookmark previously added by this method may be lost. Implementations may restrict the number of bookmarks a single MHP application or source of applications may add.

Parameters:

`locator` - the Locator that should be added to the bookmarks list

`name` - the name that should be displayed for that locator in the bookmarks list. Multiple entries in the bookmarks list may not have the same name.

Throws:

`EntryExistsException` - if a bookmark with both the same name and the same locator already exists in the bookmarks list.

`IOException` - if no more bookmarks can be added due to a lack of storage space or a limitation in the client

`IOException`

---

addBookmark(URL, String)

```
public void addBookmark(java.net.URL bookmarkUrl, java.lang.String name)
```

Add a bookmark to the list of bookmarks in the current application. As a side-effect a bookmark previously added by this method may be lost. Implementations may restrict the number of bookmarks a single MHP application or source of applications may add.

Parameters:

`bookmarkUrl` - the URL that should be added to the bookmarks list.

`name` - the name that should be displayed for that URL in the bookmarks list.

Throws:

`EntryExistsException` - if a bookmark with both the same name and the same URL already exists in the bookmarks list.

`java.lang.IllegalArgumentException` - if the URL scheme is not supported by the application.

`IOException` - if no more bookmarks can be added due to a lack of storage space or other limitation in the client

`IOException`

---

areFramesSupported()

```
public boolean areFramesSupported()
```

Check whether frames are supported by the browser and enabled.

Returns:
true if the browser supports frames and frame support is enabled by the user, false otherwise.

---

getAcceptedMediaTypes()

```
public java.lang.String[] getAcceptedMediaTypes()
```

Returns an array of supported MIME types, e.g. "application/vnd.rn-realmedia" The returned MIME types shall include at least one entry with type "text/html". Each entry of this type shall have a 'version' parameter that indicates the version of HTML that is supported, for example text/html; version = "4.0". A browser may claim to support an HTML version while only implementing a subset of the features - this is implementation-dependent. A browser that wishes to explicitly indicate support for multiple HTML versions shall return multiple entries of type "text/html" with different values for the 'version' parameter.

Returns:
an array of MIME types supported by the web browser

---

getSupportedPlugins()

```
public java.lang.String[] getSupportedPlugins()
```

Returns an array of names of installed plug-ins. The name in each string is defined by the plug-in provider

Returns:
an array of plugin names

---

getUserAgent()

```
public java.lang.String getUserAgent()
```

Returns the string used in the HTTP "User-Agent" header.

Returns:
the string identifying the user agent

---

setHomepage(URL)

```
public void setHomepage(java.net.URL defaultUrl)
```

Set the home page for the web browser.

Parameters:
`defaultUrl` - the URL to be used as the default when the application is launched with no starting URL.

Throws:

`SecurityException` - if the caller does not have a `HomePagePermission`

`IllegalArgumentException` - if the URL scheme is not supported by the application. Different classes which implement or extend this interface may implement different schemes.

Annex AI (normative): Non-CA Smartcard APIs

Package
org.dvb.smartcard

Description
Provides DVB specific support for smart card reader APIs.

Class Summary	
Classes	
SmartCardPermission	This class is for permissions related to access to smart cards via the smart card API.

org.dvb.smartcard
SmartCardPermission

Syntax

```
public class SmartCardPermission extends java.security.BasicPermission

java.lang.Object
  |
  +--java.security.Permission
        |
        +--java.security.BasicPermission
              |
              +--org.dvb.smartcard.SmartCardPermission
```

All Implemented Interfaces:

java.security.Guard, java.io.Serializable

Description

This class is for permissions related to access to smart cards via the smart card API. A SmartCardPermission contains no name and no actions list. If an application has the SmartCard permission, then it is allowed to access the SmartCard API and any smart cards via that API.

Constructors

SmartCardPermission(String)

```
public SmartCardPermission(java.lang.String name)
```

Creates a new SmartCardPermission. The name parameter is not used and must be set to empty string "". Implementations of this version of this specification shall ignore the name, but it could be taken into use in future versions of this specification.

Parameters:

`name` - the name of the SmartCardPermission. Not used, shall be "".

SmartCardPermission(String, String)

```
public SmartCardPermission(java.lang.String name, java.lang.String actions)
```

Creates a new SmartCardPermission. The name and actions parameters are not used. Implementations of this version of this specification shall ignore the name and actions, but they could be taken into use in future versions of this specification. This constructor exists for use by the Policy object to instantiate new Permission objects.

Parameters:

`name` - the name of the SmartCardPermission. Not used, shall be "".

`actions` - Not used, shall be null.

Index

Symbols

a - of org.havi.ui.HEventMulticaster 866
abort() - of org.dvb.dsmcc.DSMCCObject 632
accept(AppID) - of org.dvb.application.AppsDatabaseFilter 735
accept(AppID) - of org.dvb.application.CurrentServiceFilter 739
accept(Service) - of org.dvb.internet.InternetServiceFilter 1385
ACTIONED_FOCUSED_STATE - of org.havi.ui.HState 1088
ACTIONED_STATE - of org.havi.ui.HState 1088
ACTIONED_STATE_BIT - of org.havi.ui.HState 1088
actionPerformed(ActionEvent) - of org.havi.ui.HEventMulticaster 866
ActiveFormatDescriptionChangedEvent - of org.dvb.media 577
ActiveFormatDescriptionChangedEvent(Object, int) - of org.dvb.media.ActiveFormatDescriptionChangedEvent 577
add(HActionListener, HActionListener) - of org.havi.ui.HEventMulticaster 867
add(HAdjustmentListener, HAdjustmentListener) - of org.havi.ui.HEventMulticaster 867
add(HBackgroundImageListener, HBackgroundImageListener) - of org.havi.ui.HEventMulticaster 867
add(HFocusListener, HFocusListener) - of org.havi.ui.HEventMulticaster 867
add(HItemListener, HItemListener) - of org.havi.ui.HEventMulticaster 867
add(HKeyListener, HKeyListener) - of org.havi.ui.HEventMulticaster 867
add(HScreenConfigurationListener, HScreenConfigurationListener) - of org.havi.ui.HEventMulticaster 868
add(HScreenConfigurationListener, HScreenConfigurationListener, HScreenConfigTemplate) - of org.havi.ui.HEventMulticaster 868
add(HScreenLocationModifiedListener, HScreenLocationModifiedListener) - of org.havi.ui.HEventMulticaster 868
add(HTextListener, HTextListener) - of org.havi.ui.HEventMulticaster 868
add(HToggleButton) - of org.havi.ui.HToggleGroup 1154
add(int, String) - of org.dvb.user.Preference 482
add(ResourceStatusListener, ResourceStatusListener) - of org.havi.ui.HEventMulticaster 868
add(String) - of org.dvb.user.Preference 482
add(String[]) - of org.dvb.user.Preference 482
add(WindowListener, WindowListener) - of org.havi.ui.HEventMulticaster 869
ADD_INDEX_END - of org.havi.ui.HListGroup 948
addAdjustmentListener(HAdjustmentListener) - of org.havi.ui.HAdjustmentValue 811
addAdjustmentListener(HAdjustmentListener) - of org.havi.ui.HRangeValue 1013
addAfter(Component, Component) - of org.havi.ui.HComponentOrdering 846
addAfter(Component, Component) - of org.havi.ui.HContainer 853
addAfter(Component, Component) - of org.havi.ui.HScene 1023
addAllArrowKeys() - of org.dvb.event.UserEventRepository 467
addAllColourKeys() - of org.dvb.event.UserEventRepository 467
addAllNumericKeys() - of org.dvb.event.UserEventRepository 467
addAppStateChangeEventListener(AppStateChangeEventListener) - of org.dvb.application.AppProxy 722
addBefore(Component, Component) - of org.havi.ui.HComponentOrdering 846
addBefore(Component, Component) - of org.havi.ui.HContainer 854
addBefore(Component, Component) - of org.havi.ui.HScene 1024
addBookmark(Locator, String) - of org.dvb.internet.WWWBrowserService 1393
addBookmark(URL, String) - of org.dvb.internet.WWWBrowserService 1393
addBouquetMonitoringListener(SIMonitoringListener, int) - of org.dvb.si.SIDatabase 509
addConnectionListener(ConnectionListener) - of org.dvb.net.rc.ConnectionRCInterface 696
addEventPresentFollowingMonitoringListener(SIMonitoringListener, int, int, int) - of org.dvb.si.SIDatabase 509
addEventScheduleMonitoringListener(SIMonitoringListener, int, int, int, Date, Date) - of org.dvb.si.SIData-

base 510
addExclusiveAccessToAWTEvent(ResourceClient, UserEventRepository) - of org.dvb.event.EventManager 457
addHActionListener(HActionListener) - of org.havi.ui.HActionable 802
addHActionListener(HActionListener) - of org.havi.ui.HGraphicButton 898
addHActionListener(HActionListener) - of org.havi.ui.HTextButton 1126
addHActionListener(HActionListener) - of org.havi.ui.HToggleButton 1146
addInnerApplicationListener(InnerApplicationListener) - of org.dvb.application.inner.InnerApplicationContainer 1322
addInternal(EventListener, EventListener) - of org.havi.ui.HEventMulticaster 869
addInternetClientListener(InternetClientListener) - of org.dvb.internet.InternetClient 1376
addItem(HListElement, int) - of org.havi.ui.HListGroup 949
addItemListener(HItemListener) - of org.havi.ui.HItemValue 939
addItemListener(HItemListener) - of org.havi.ui.HListGroup 950
addItems(HListElement[], int) - of org.havi.ui.HListGroup 950
addKey(int) - of org.dvb.event.UserEventRepository 467
addListener(AppsDatabaseEventListener) - of org.dvb.application.AppsDatabase 728
addNetworkMonitoringListener(SIMonitoringListener, int) - of org.dvb.si.SIDatabase 511
addNPTListener(NPTListener) - of org.dvb.dsmcc.DSMCCStream 638
addObjectChangeEventListener(ObjectChangeEventListener) - of org.dvb.dsmcc.DSMCCObject 633
addOnScreenLocationModifiedListener(HScreenLocationModifiedListener) - of org.havi.ui.HVideoComponent 1162
addPMTServiceMonitoringListener(SIMonitoringListener, int, int, int) - of org.dvb.si.SIDatabase 511
addResourceStatusEventListener(ResourceStatusListener) - of org.dvb.event.EventManager 457
addResourceStatusEventListener(ResourceStatusListener) - of org.dvb.net.rc.RCInterfaceManager 705
addResourceStatusEventListener(ResourceStatusListener) - of org.havi.ui.HScreenDevice 1055
addScreenConfigurationListener(HScreenConfigurationListener) - of org.havi.ui.HScreenDevice 1055
addScreenConfigurationListener(HScreenConfigurationListener, HScreenConfigTemplate) - of org.havi.ui.HScreenDevice 1055
addServiceMonitoringListener(SIMonitoringListener, int, int) - of org.dvb.si.SIDatabase 512
addShortcut(int, HActionable) - of org.havi.ui.HScene 1024
addSubtitleListener(SubtitleListener) - of org.dvb.media.SubtitlingEventControl 601
addTextOverflowListener(TextOverflowListener) - of org.dvb.ui.DVBTextLayoutManager 778
addToAddressBook(String, String) - of org.dvb.internet.EmailClientService 1373
addUserEvent(UserEvent) - of org.dvb.event.UserEventRepository 467
addUserEventListener(UserEventListener, ResourceClient, UserEventRepository) - of org.dvb.event.EventManager 458
addUserEventListener(UserEventListener, UserEventRepository) - of org.dvb.event.EventManager 458
addUserPreferenceChangeListener(UserPreferenceChangeListener) - of org.dvb.user.UserPreferenceManager 487
addVideoFormatListener(VideoFormatListener) - of org.dvb.media.VideoFormatControl 605
addWindowListener(WindowListener) - of org.dvb.application.inner.DVBScene 1316
addWindowListener(WindowListener) - of org.havi.ui.HScene 1025
ADJUST_BUTTON_LESS - of org.havi.ui.HAdjustableLook 806
ADJUST_BUTTON_MORE - of org.havi.ui.HAdjustableLook 806
ADJUST_END_CHANGE - of org.havi.ui.event.HAdjustmentEvent 1199
ADJUST_FIRST - of org.havi.ui.event.HAdjustmentEvent 1200
ADJUST_LAST - of org.havi.ui.event.HAdjustmentEvent 1200
ADJUST_LESS - of org.havi.ui.event.HAdjustmentEvent 1200
ADJUST_MORE - of org.havi.ui.event.HAdjustmentEvent 1200
ADJUST_NONE - of org.havi.ui.HAdjustableLook 806
ADJUST_PAGE_LESS - of org.havi.ui.event.HAdjustmentEvent 1200
ADJUST_PAGE_LESS - of org.havi.ui.HAdjustableLook 806
ADJUST_PAGE_MORE - of org.havi.ui.event.HAdjustmentEvent 1200
ADJUST_PAGE_MORE - of org.havi.ui.HAdjustableLook 806

ADJUST_START_CHANGE - of org.havi.ui.event.HAdjustmentEvent 1201
ADJUST_THUMB - of org.havi.ui.HAdjustableLook 807
ADJUSTMENT_VALUE_CHANGE - of org.havi.ui.HVisible 1179
AFD_14_9 - of org.dvb.media.VideoFormatControl 602
AFD_14_9_TOP - of org.dvb.media.VideoFormatControl 602
AFD_16_9 - of org.dvb.media.VideoFormatControl 602
AFD_16_9_SP_14_9 - of org.dvb.media.VideoFormatControl 602
AFD_16_9_SP_4_3 - of org.dvb.media.VideoFormatControl 602
AFD_16_9_TOP - of org.dvb.media.VideoFormatControl 603
AFD_4_3 - of org.dvb.media.VideoFormatControl 603
AFD_4_3_SP_14_9 - of org.dvb.media.VideoFormatControl 603
AFD_GT_16_9 - of org.dvb.media.VideoFormatControl 603
AFD_NOT_PRESENT - of org.dvb.media.VideoFormatControl 603
AFD_SAME - of org.dvb.media.VideoFormatControl 603
ALL_STATES - of org.havi.ui.HState 1088
ALPHABETIC_PRESENTATION_FORMS_A - of org.havi.ui.HFontCapabilities 884
ANIMATE_CONTENT_CHANGE - of org.havi.ui.HVisible 1179
APP_ADDED - of org.dvb.application.AppsDatabaseEvent 731
APP_CHANGED - of org.dvb.application.AppsDatabaseEvent 731
APP_DELETED - of org.dvb.application.AppsDatabaseEvent 731
AppAttributes - of org.dvb.application 713
AppIcon - of org.dvb.application 718
AppIcon() - of org.dvb.application.AppIcon 718
AppID - of org.dvb.application 719
AppID(int, int) - of org.dvb.application.AppID 719
ApplicationDownloadException - of org.dvb.application.storage 1349
ApplicationDownloadException() - of org.dvb.application.storage.ApplicationDownloadException 1349
ApplicationDownloadException(String) - of org.dvb.application.storage.ApplicationDownloadException 1349
ApplicationSecurityContext - of org.dvb.application.plugins 1330
ApplicationSecurityContext(URL[], Locator) - of org.dvb.application.plugins.ApplicationSecurityContext 1330
ApplicationStorage - of org.dvb.application.storage 1350
ApplicationStoragePermission - of org.dvb.application.storage 1353
ApplicationStoragePermission(String) - of org.dvb.application.storage.ApplicationStoragePermission 1353
ApplicationStoragePermission(String, String) - of org.dvb.application.storage.ApplicationStoragePermission 1354
AppProxy - of org.dvb.application 721
AppsControlPermission - of org.dvb.application 725
AppsControlPermission() - of org.dvb.application.AppsControlPermission 725
AppsControlPermission(String, String) - of org.dvb.application.AppsControlPermission 725
AppsDatabase - of org.dvb.application 727
AppsDatabaseEvent - of org.dvb.application 731
AppsDatabaseEvent(int, AppID, Object) - of org.dvb.application.AppsDatabaseEvent 732
AppsDatabaseEventListener - of org.dvb.application 733
AppsDatabaseFilter - of org.dvb.application 735
AppsDatabaseFilter() - of org.dvb.application.AppsDatabaseFilter 735
AppStateChangeEvent - of org.dvb.application 736
AppStateChangeEvent(AppID, int, int, Object, boolean) - of org.dvb.application.AppStateChangeEvent 736
AppStateChangeEventListener - of org.dvb.application 738
ARABIC_EXTENDED - of org.havi.ui.HFontCapabilities 884
ARABIC_PRESENTATION_FORMS_A - of org.havi.ui.HFontCapabilities 884
ARABIC_PRESENTATION_FORMS_B - of org.havi.ui.HFontCapabilities 884
areFramesSupported() - of org.dvb.internet.WWWBrowserService 1394
ARMENIAN - of org.havi.ui.HFontCapabilities 884

ARROWS - of org.havi.ui.HFontCapabilities 885
ASPECT_RATIO_16_9 - of org.dvb.media.VideoFormatControl 603
ASPECT_RATIO_2_21_1 - of org.dvb.media.VideoFormatControl 603
ASPECT_RATIO_4_3 - of org.dvb.media.VideoFormatControl 603
ASPECT_RATIO_UNKNOWN - of org.dvb.media.VideoFormatControl 603
AspectRatioChangedEvent - of org.dvb.media 578
AspectRatioChangedEvent(Object, int) - of org.dvb.media.AspectRatioChangedEvent 578
asynchronousLoad(AsynchronousLoadingEventListener) - of org.dvb.dsmcc.DSMCCObject 633
AsynchronousLoadingEvent - of org.dvb.dsmcc 628
AsynchronousLoadingEvent(DSMCCObject) - of org.dvb.dsmcc.AsynchronousLoadingEvent 628
AsynchronousLoadingEventListener - of org.dvb.dsmcc 629
attach(byte[]) - of org.dvb.dsmcc.ServiceDomain 672
attach(Locator) - of org.dvb.dsmcc.ServiceDomain 672
attach(Locator, int) - of org.dvb.dsmcc.ServiceDomain 672
b - of org.havi.ui.HEventMulticaster 866
BACKGROUND_FILL - of org.havi.ui.HScene 1022
BACKGROUND_FILL - of org.havi.ui.HVisible 1179
BACKGROUNDIMAGE_FILE_NOT_FOUND - of org.havi.ui.event.HBackgroundImageEvent 1203
BACKGROUNDIMAGE_FIRST - of org.havi.ui.event.HBackgroundImageEvent 1203
BACKGROUNDIMAGE_INVALID - of org.havi.ui.event.HBackgroundImageEvent 1203
BACKGROUNDIMAGE_IOERROR - of org.havi.ui.event.HBackgroundImageEvent 1204
BACKGROUNDIMAGE_LAST - of org.havi.ui.event.HBackgroundImageEvent 1204
BACKGROUNDIMAGE_LOADED - of org.havi.ui.event.HBackgroundImageEvent 1204
BackgroundVideoPresentationControl - of org.dvb.media 579
BASIC_ARABIC - of org.havi.ui.HFontCapabilities 885
BASIC_GEORGIAN - of org.havi.ui.HFontCapabilities 885
BASIC_GREEK - of org.havi.ui.HFontCapabilities 885
BASIC_HEBREW - of org.havi.ui.HFontCapabilities 885
BASIC_LATIN - of org.havi.ui.HFontCapabilities 885
BENGALI - of org.havi.ui.HFontCapabilities 885
bind(XletContext, String, Remote) - of org.dvb.io.ixc.IxcRegistry 1263
bind(XletContext, String, Remote, boolean) - of org.dvb.io.ixc.IxcRegistry 1264
BLOCK_ELEMENTS - of org.havi.ui.HFontCapabilities 885
BookmarkExistsException - of org.dvb.internet 1369
BookmarkExistsException() - of org.dvb.internet.BookmarkExistsException 1369
BookmarkExistsException(String) - of org.dvb.internet.BookmarkExistsException 1369
BOPOMOFO - of org.havi.ui.HFontCapabilities 886
BOUQUET - of org.dvb.si.SIMonitoringType 542
BOUQUET_NAME - of org.dvb.si.DescriptorTag 496
BOX_DRAWING - of org.havi.ui.HFontCapabilities 886
brighter() - of org.dvb.ui.DVBColor 768
BUSINESS_GRAPHICS - of org.havi.ui.HImageHints 933
CA_FAILURE - of org.dvb.media.PresentationChangedEvent 590
CA_IDENTIFIER - of org.dvb.si.DescriptorTag 496
CA_RETURNED - of org.dvb.media.PresentationChangedEvent 590
CABLE_DELIVERY_SYSTEM - of org.dvb.si.DescriptorTag 496
CAException - of org.dvb.media 580
CAException() - of org.dvb.media.CAException 580
CAException(String) - of org.dvb.media.CAException 580
CancelledByUserEvent - of org.dvb.internet 1370
CancelledByUserEvent(Object, URL) - of org.dvb.internet.CancelledByUserEvent 1370
cancelRequest() - of org.dvb.si.SIRequest 549
canRunApplication() - of org.dvb.internet.InternetClientService 1381
CAPermission - of org.dvb.net.ca 748
CAPermission(String) - of org.dvb.net.ca.CAPermission 748

CAPermission(String, String) - of org.dvb.net.ca.CAPermission 749
CARET_NEXT_CHAR - of org.havi.ui.event.HTextEvent 1245
CARET_NEXT_LINE - of org.havi.ui.event.HTextEvent 1246
CARET_NEXT_PAGE - of org.havi.ui.event.HTextEvent 1246
CARET_POSITION_CHANGE - of org.havi.ui.HVisible 1179
CARET_PREV_CHAR - of org.havi.ui.event.HTextEvent 1246
CARET_PREV_LINE - of org.havi.ui.event.HTextEvent 1246
CARET_PREV_PAGE - of org.havi.ui.event.HTextEvent 1246
caretMoved(HTextEvent) - of org.havi.ui.event.HTextListener 1249
caretMoved(HTextEvent) - of org.havi.ui.HEventMulticaster 869
caretNextCharacter() - of org.havi.ui.HSinglelineEntry 1070
caretNextLine() - of org.havi.ui.HMultilineEntry 980
caretPreviousCharacter() - of org.havi.ui.HSinglelineEntry 1070
caretPreviousLine() - of org.havi.ui.HMultilineEntry 980
CARTOON - of org.havi.ui.HImageHints 933
CAStopEvent - of org.dvb.media 581
CAStopEvent(Controller) - of org.dvb.media.CAStopEvent 581
CAStopEvent(Controller, MediaLocator) - of org.dvb.media.CAStopEvent 581
CHANGEABLE_SINGLE_COLOR - of org.havi.ui.HBackgroundConfigTemplate 831
checkPermission(Permission) - of org.dvb.application.plugins.ApplicationSecurityContext 1330
CJK_COMPATIBILITY - of org.havi.ui.HFontCapabilities 886
CJK_COMPATIBILITY_FORMS - of org.havi.ui.HFontCapabilities 886
CJK_COMPATIBILITY_IDEOGRAPHS - of org.havi.ui.HFontCapabilities 886
CJK_MISCELLANEOUS - of org.havi.ui.HFontCapabilities 886
CJK_SYMBOLS_AND_PUNCTUATION - of org.havi.ui.HFontCapabilities 886
CJK_UNIFIED_IDEOGRAPHS - of org.havi.ui.HFontCapabilities 886
CLEAR - of org.dvb.ui.DVBAlphaComposite 756
Clear - of org.dvb.ui.DVBAlphaComposite 755
clearSelection() - of org.havi.ui.HListGroup 950
ClientNotRunningException - of org.dvb.internet 1371
ClientNotRunningException() - of org.dvb.internet.ClientNotRunningException 1371
ClientNotRunningException(String) - of org.dvb.internet.ClientNotRunningException 1371
close() - of org.davic.net.ca.MMIObject 384
COMBINING_DIACRITICAL_MARKS - of org.havi.ui.HFontCapabilities 887
COMBINING_DIACTRICAL_MARKS_FOR_SYMBOLS - of org.havi.ui.HFontCapabilities 887
COMBINING_HALF_MARKS - of org.havi.ui.HFontCapabilities 887
COMPONENT - of org.dvb.si.DescriptorTag 496
connect() - of org.dvb.media.DripFeedDataSource 585
connect() - of org.dvb.net.rc.ConnectionRCInterface 696
connectionChanged(ConnectionRCEvent) - of org.dvb.net.rc.ConnectionListener 692
ConnectionEstablishedEvent - of org.dvb.net.rc 690
ConnectionEstablishedEvent(Object) - of org.dvb.net.rc.ConnectionEstablishedEvent 690
ConnectionFailedEvent - of org.dvb.net.rc 691
ConnectionFailedEvent(Object) - of org.dvb.net.rc.ConnectionFailedEvent 691
ConnectionListener - of org.dvb.net.rc 692
ConnectionParameters - of org.dvb.net.rc 693
ConnectionParameters(String, String, String) - of org.dvb.net.rc.ConnectionParameters 693
ConnectionParameters(String, String, String, InetAddress[]) - of org.dvb.net.rc.ConnectionParameters 693
ConnectionRCEvent - of org.dvb.net.rc 695
ConnectionRCEvent(Object) - of org.dvb.net.rc.ConnectionRCEvent 695
ConnectionRCInterface - of org.dvb.net.rc 696
ConnectionTerminatedEvent - of org.dvb.net.rc 700
ConnectionTerminatedEvent(Object) - of org.dvb.net.rc.ConnectionTerminatedEvent 700
CONTENT - of org.dvb.si.DescriptorTag 496
CONTENT_CHANGE - of org.havi.ui.HVisible 1180

CONTROL_PICTURES - of org.havi.ui.HFontCapabilities 887
convertSIStringToJavaString(byte[], int, int, boolean) - of org.dvb.si.SIUtil 572
convertTo(HScreenConfiguration, Point) - of org.havi.ui.HScreenConfiguration 1052
COUNTRY_AVAILABILITY - of org.dvb.si.DescriptorTag 496
createEmbeddedContext(URL[], Locator) - of org.dvb.application.plugins.ApplicationSecurityContext 1331
createFont(String, int, int) - of org.dvb.ui.FontFactory 784
createGraphics() - of org.dvb.ui.DVBBufferedImage 761
createMessage(String, String, String, String) - of org.dvb.internet.EmailClient 1372
createStoredApplicationService(int, int, String) - of org.dvb.application.storage.StoredServiceCreator 1363
CURRENCY_SYMBOLS - of org.havi.ui.HFontCapabilities 887
currentItemChanged(HItemEvent) - of org.havi.ui.event.HItemListener 1220
currentItemChanged(HItemEvent) - of org.havi.ui.HEventMulticaster 869
CurrentServiceFilter - of org.dvb.application 739
CurrentServiceFilter() - of org.dvb.application.CurrentServiceFilter 739
CYRILLIC - of org.havi.ui.HFontCapabilities 887
D_D2_MAC - of org.dvb.si.SIServiceType 561
DAR_16_9 - of org.dvb.media.VideoFormatControl 604
DAR_4_3 - of org.dvb.media.VideoFormatControl 604
darker() - of org.dvb.ui.DVBColor 769
data - of org.havi.ui.HChangeData 842
DATA_BROADCAST - of org.dvb.si.DescriptorTag 497
DATA_BROADCAST - of org.dvb.si.SIServiceType 561
DatagramSocketBufferControl - of org.dvb.net 687
DEFAULT_ICON_HEIGHT - of org.havi.ui.HListGroup 948
DEFAULT_ICON_WIDTH - of org.havi.ui.HListGroup 948
DEFAULT_LABEL_HEIGHT - of org.havi.ui.HListGroup 948
DEFAULT_LABEL_WIDTH - of org.havi.ui.HListGroup 949
deleteNextChar() - of org.havi.ui.HSinglelineEntry 1070
deletePreviousChar() - of org.havi.ui.HSinglelineEntry 1071
Descriptor - of org.dvb.si 494
DescriptorTag - of org.dvb.si 496
DESTROYED - of org.dvb.application.AppProxy 721
detach() - of org.dvb.dsmcc.ServiceDomain 673
DEVANAGARI - of org.havi.ui.HFontCapabilities 887
DFC_PLATFORM - of org.dvb.media.VideoFormatControl 604
DFC_PROCESSING_CCO - of org.dvb.media.VideoFormatControl 604
DFC_PROCESSING_FULL - of org.dvb.media.VideoFormatControl 604
DFC_PROCESSING_LB_14_9 - of org.dvb.media.VideoFormatControl 604
DFC_PROCESSING_LB_16_9 - of org.dvb.media.VideoFormatControl 604
DFC_PROCESSING_LB_2_21_1_ON_16_9 - of org.dvb.media.VideoFormatControl 604
DFC_PROCESSING_LB_2_21_1_ON_4_3 - of org.dvb.media.VideoFormatControl 605
DFC_PROCESSING_NONE - of org.dvb.media.VideoFormatControl 605
DFC_PROCESSING_PAN_SCAN - of org.dvb.media.VideoFormatControl 605
DFC_PROCESSING_UNKNOWN - of org.dvb.media.VideoFormatControl 605
DFCChangedEvent - of org.dvb.media 583
DFCChangedEvent(Object, int) - of org.dvb.media.DFCChangedEvent 583
DIGITAL_RADIO_SOUND - of org.dvb.si.SIServiceType 561
DIGITAL_TELEVISION - of org.dvb.si.SIServiceType 561
DINGBATS - of org.havi.ui.HFontCapabilities 887
DISABLED_ACTIONED_FOCUSED_STATE - of org.havi.ui.HState 1089
DISABLED_ACTIONED_STATE - of org.havi.ui.HState 1089
DISABLED_FOCUSED_STATE - of org.havi.ui.HState 1089
DISABLED_STATE - of org.havi.ui.HState 1089
DISABLED_STATE_BIT - of org.havi.ui.HState 1089
disconnect() - of org.dvb.media.DripFeedDataSource 585

disconnect() - of org.dvb.net.rc.ConnectionRCInterface 696
displayImage(HBackgroundImage) - of org.havi.ui.HStillImageBackgroundConfiguration 1111
displayImage(HBackgroundImage, HScreenRectangle) - of org.havi.ui.HStillImageBackgroundConfiguration 1111
dispose() - of org.dvb.ui.DVBBufferedImage 761
dispose() - of org.havi.ui.HScene 1025
dispose() - of org.havi.ui.HSound 1084
dispose(Color) - of org.havi.ui.HGraphicsConfiguration 914
dispose(HScene) - of org.havi.ui.HSceneFactory 1034
DocumentAction - of org.dvb.dom.bootstrap 1307
DocumentFactory - of org.dvb.dom.bootstrap 1308
DOM - of org.dvb.dom.bootstrap.DocumentFactory 1308
DONT_CARE - of org.havi.ui.HScreenConfigTemplate 1047
downloadFont(Font) - of org.havi.ui.HFontCapabilities 893
DripFeedDataSource - of org.dvb.media 584
DripFeedDataSource() - of org.dvb.media.DripFeedDataSource 584
DripFeedPermission - of org.dvb.media 587
DripFeedPermission(String) - of org.dvb.media.DripFeedPermission 587
DripFeedPermission(String, String) - of org.dvb.media.DripFeedPermission 587
DSMCCException - of org.dvb.dsmcc 630
DSMCCException() - of org.dvb.dsmcc.DSMCCException 630
DSMCCException(String) - of org.dvb.dsmcc.DSMCCException 630
DSMCCObject - of org.dvb.dsmcc 631
DSMCCObject(DSMCCObject, String) - of org.dvb.dsmcc.DSMCCObject 632
DSMCCObject(String) - of org.dvb.dsmcc.DSMCCObject 632
DSMCCObject(String, String) - of org.dvb.dsmcc.DSMCCObject 632
DSMCCStream - of org.dvb.dsmcc 637
DSMCCStream(DSMCCObject) - of org.dvb.dsmcc.DSMCCStream 637
DSMCCStream(String) - of org.dvb.dsmcc.DSMCCStream 637
DSMCCStream(String, String) - of org.dvb.dsmcc.DSMCCStream 638
DSMCCStreamEvent - of org.dvb.dsmcc 641
DSMCCStreamEvent(DSMCCObject) - of org.dvb.dsmcc.DSMCCStreamEvent 641
DSMCCStreamEvent(String) - of org.dvb.dsmcc.DSMCCStreamEvent 641
DSMCCStreamEvent(String, String) - of org.dvb.dsmcc.DSMCCStreamEvent 641
DST_IN - of org.dvb.ui.DVBAlphaComposite 756
DST_OUT - of org.dvb.ui.DVBAlphaComposite 756
DST_OVER - of org.dvb.ui.DVBAlphaComposite 756
DstIn - of org.dvb.ui.DVBAlphaComposite 756
DstOut - of org.dvb.ui.DVBAlphaComposite 757
DstOver - of org.dvb.ui.DVBAlphaComposite 757
DVB_HTML_application - of org.dvb.application.AppAttributes 713
DVB_J_application - of org.dvb.application.AppAttributes 713
DVBAlphaComposite - of org.dvb.ui 755
DVBBufferedImage - of org.dvb.ui 760
DVBBufferedImage(int, int) - of org.dvb.ui.DVBBufferedImage 761
DVBBufferedImage(int, int, int) - of org.dvb.ui.DVBBufferedImage 761
DVBClassLoader - of org.dvb.lang 451
DVBClassLoader(URL[]) - of org.dvb.lang.DVBClassLoader 451
DVBClassLoader(URL[], ClassLoader) - of org.dvb.lang.DVBClassLoader 451
DVBColor - of org.dvb.ui 767
DVBColor(Color) - of org.dvb.ui.DVBColor 767
DVBColor(float, float, float, float) - of org.dvb.ui.DVBColor 767
DVBColor(int, boolean) - of org.dvb.ui.DVBColor 768
DVBColor(int, int, int, int) - of org.dvb.ui.DVBColor 768
DVBGraphics - of org.dvb.ui 771

DVBGraphics() - of org.dvb.ui.DVBGraphics 771
DVBHTMLProxy - of org.dvb.application 740
DVBJProxy - of org.dvb.application 742
DvbNetworkInterfaceSIUtil - of org.dvb.net.tuning 751
DVBRasterFormatException - of org.dvb.ui 775
DVBRasterFormatException(String) - of org.dvb.ui.DVBRasterFormatException 775
DVBScene - of org.dvb.application.inner 1316
DVBTest - of org.dvb.test 1255
DVBTextLayoutManager - of org.dvb.ui 776
DVBTextLayoutManager() - of org.dvb.ui.DVBTextLayoutManager 778
DVBTextLayoutManager(int, int, int, int, boolean, int, int, int) - of org.dvb.ui.DVBTextLayoutManager 778
ECHO_CHAR_CHANGE - of org.havi.ui.HVisible 1180
echoCharIsSet() - of org.havi.ui.HSinglelineEntry 1071
EDIT_MODE_CHANGE - of org.havi.ui.HVisible 1180
EMAIL_CLIENT - of org.dvb.internet.InternetServiceFilter 1384
EmailClient - of org.dvb.internet 1372
EmailClientService - of org.dvb.internet 1373
enableShortcuts(boolean) - of org.dvb.application.inner.DVBScene 1316
enableShortcuts(boolean) - of org.havi.ui.HScene 1025
ENCLOSED_ALPHANUMERICS - of org.havi.ui.HFontCapabilities 888
ENCLOSED_CJK_LETTERS_AND_MONTHS - of org.havi.ui.HFontCapabilities 888
entryAdded(AppsDatabaseEvent) - of org.dvb.application.AppsDatabaseEventListener 733
entryChanged(AppsDatabaseEvent) - of org.dvb.application.AppsDatabaseEventListener 733
EntryExistsException - of org.dvb.internet 1374
EntryExistsException() - of org.dvb.internet.EntryExistsException 1374
EntryExistsException(String) - of org.dvb.internet.EntryExistsException 1374
entryRemoved(AppsDatabaseEvent) - of org.dvb.application.AppsDatabaseEventListener 733
equals(Object) - of org.dvb.application.AppsControlPermission 725
equals(Object) - of org.dvb.ui.DVBAlphaComposite 758
equals(Object) - of org.dvb.ui.DVBColor 769
ER_TYPE_COLOR - of org.havi.ui.event.HEventRepresentation 1209
ER_TYPE_NOT_SUPPORTED - of org.havi.ui.event.HEventRepresentation 1209
ER_TYPE_STRING - of org.havi.ui.event.HEventRepresentation 1209
ER_TYPE_SYMBOL - of org.havi.ui.event.HEventRepresentation 1210
EventManager - of org.dvb.event 457
EXTENDED_EVENT - of org.dvb.si.DescriptorTag 497
ExtendedAppAttributes - of org.dvb.application.storage 1355
Facility - of org.dvb.user 479
Facility(String, String) - of org.dvb.user.Facility 479
Facility(String, String[]) - of org.dvb.user.Facility 479
FAIL - of org.dvb.test.DVBTest 1255
feed(byte[]) - of org.dvb.media.DripFeedDataSource 585
FileAccessPermissions - of org.dvb.io.persistent 471
FileAccessPermissions(boolean, boolean, boolean, boolean, boolean, boolean) - of org.dvb.io.persistent.File-AccessPermissions 471
FileAttributes - of org.dvb.io.persistent 473
findClass(String) - of org.dvb.lang.DVBClassLoader 452
FIRST_CHANGE - of org.havi.ui.HVisible 1180
FIRST_STATE - of org.havi.ui.HState 1089
FLICKER_FILTERING - of org.havi.ui.HScreenConfigTemplate 1047
flush() - of org.dvb.ui.DVBBufferedImage 762
flush() - of org.havi.ui.HBackgroundImage 840
FM_RADIO - of org.dvb.si.SIServiceType 561
FOCUS_TRANSFER - of org.havi.ui.event.HFocusEvent 1213
FOCUSED_STATE - of org.havi.ui.HState 1090

FOCUSED_STATE_BIT - of org.havi.ui.HState 1090
focusGained(FocusEvent) - of org.havi.ui.HEventMulticaster 870
focusLost(FocusEvent) - of org.havi.ui.HEventMulticaster 870
fontAccessible(Font) - of org.havi.ui.HFontCapabilities 893
FontFactory - of org.dvb.ui 783
FontFactory() - of org.dvb.ui.FontFactory 783
FontFactory(URL) - of org.dvb.ui.FontFactory 783
FontFormatException - of org.dvb.ui 785
FontFormatException() - of org.dvb.ui.FontFormatException 785
FontFormatException(String) - of org.dvb.ui.FontFormatException 785
FontNotAvailableException - of org.dvb.ui 786
FontNotAvailableException() - of org.dvb.ui.FontNotAvailableException 786
FontNotAvailableException(String) - of org.dvb.ui.FontNotAvailableException 786
FREQUENCY_LIST - of org.dvb.si.DescriptorTag 497
FROM_CACHE - of org.dvb.dsmcc.DSMCCObject 631
FROM_CACHE_ONLY - of org.dvb.si.SIInformation 531
FROM_CACHE_OR_STREAM - of org.dvb.dsmcc.DSMCCObject 631
FROM_CACHE_OR_STREAM - of org.dvb.si.SIInformation 531
FROM_STREAM_ONLY - of org.dvb.dsmcc.DSMCCObject 632
FROM_STREAM_ONLY - of org.dvb.si.SIInformation 531
fromActual() - of org.dvb.si.SIInformation 532
GENERAL_PUNCTUATION - of org.havi.ui.HFontCapabilities 888
GeneralPreference - of org.dvb.user 480
GeneralPreference(String) - of org.dvb.user.GeneralPreference 480
GEOMETRICAL_SHAPES - of org.havi.ui.HFontCapabilities 888
GEORGIAN_EXTENDED - of org.havi.ui.HFontCapabilities 888
getAcceptedMediaTypes() - of org.dvb.internet.WWWBrowserService 1394
getActionCommand() - of org.havi.ui.event.HActionEvent 1196
getActionCommand() - of org.havi.ui.HActionable 802
getActionCommand() - of org.havi.ui.HGraphicButton 898
getActionCommand() - of org.havi.ui.HTextButton 1126
getActionCommand() - of org.havi.ui.HToggleButton 1146
getActions() - of org.dvb.application.AppsControlPermission 726
getActionSound() - of org.havi.ui.HActionable 802
getActionSound() - of org.havi.ui.HGraphicButton 898
getActionSound() - of org.havi.ui.HTextButton 1126
getActionSound() - of org.havi.ui.HToggleButton 1146
getActiveFormatDefinition() - of org.dvb.media.VideoFormatControl 605
getActiveVideoArea() - of org.dvb.media.VideoPresentationControl 610
getActiveVideoAreaOnScreen() - of org.dvb.media.VideoPresentationControl 610
getAdjustmentSound() - of org.havi.ui.HAdjustmentValue 812
getAdjustmentSound() - of org.havi.ui.HRangeValue 1014
getAdjustMode() - of org.havi.ui.HAdjustmentInputPreferred 808
getAdjustMode() - of org.havi.ui.HRangeValue 1014
getAID() - of org.dvb.application.AppID 719
getAllFonts() - of org.havi.ui.HGraphicsConfiguration 914
getAllShortcutKeycodes() - of org.dvb.application.inner.DVBScene 1316
getAllShortcutKeycodes() - of org.havi.ui.HScene 1025
getAlpha() - of org.dvb.ui.DVBAlphaComposite 759
getAlpha() - of org.dvb.ui.DVBColor 769
getAnimateContent(int) - of org.havi.ui.HVisible 1185
getAppAttributes(AppID) - of org.dvb.application.AppsDatabase 728
getAppAttributes(AppsDatabaseFilter) - of org.dvb.application.AppsDatabase 728
getAppData() - of org.dvb.si.SIRetrievalEvent 551
getAppIcon() - of org.dvb.application.AppAttributes 713

getAppID() - of org.dvb.application.AppsDatabaseEvent 732
getAppID() - of org.dvb.application.AppStateChangeEvent 737
getAppIDs(AppsDatabaseFilter) - of org.dvb.application.AppsDatabase 729
getAppProxy(AppID) - of org.dvb.application.AppsDatabase 729
getAppsDatabase() - of org.dvb.application.AppsDatabase 729
getAspectRatio() - of org.dvb.media.VideoFormatControl 605
getAvailableCompositeRules() - of org.dvb.ui.DVBGraphics 772
getBackgroundImage() - of org.dvb.application.inner.DVBScene 1316
getBackgroundImage() - of org.havi.ui.HScene 1025
getBackgroundMode() - of org.dvb.application.inner.DVBScene 1317
getBackgroundMode() - of org.havi.ui.HScene 1026
getBackgroundMode() - of org.havi.ui.HVisible 1185
getBehavior() - of org.havi.ui.HStaticRange 1102
getBestColorMatch(Color) - of org.dvb.ui.DVBGraphics 772
getBestConfiguration(HBackgroundConfigTemplate) - of org.havi.ui.HBackgroundDevice 836
getBestConfiguration(HBackgroundConfigTemplate[]) - of org.havi.ui.HBackgroundDevice 836
getBestConfiguration(HBackgroundConfigTemplate[]) - of org.havi.ui.HScreen 1041
getBestConfiguration(HGraphicsConfigTemplate) - of org.havi.ui.HGraphicsDevice 919
getBestConfiguration(HGraphicsConfigTemplate[]) - of org.havi.ui.HGraphicsDevice 919
getBestConfiguration(HGraphicsConfigTemplate[]) - of org.havi.ui.HScreen 1042
getBestConfiguration(HVideoConfigTemplate) - of org.havi.ui.HVideoDevice 1169
getBestConfiguration(HVideoConfigTemplate[]) - of org.havi.ui.HScreen 1042
getBestConfiguration(HVideoConfigTemplate[]) - of org.havi.ui.HVideoDevice 1169
getBestScene(HSceneTemplate) - of org.havi.ui.HSceneFactory 1034
getBestSceneTemplate(HSceneTemplate) - of org.havi.ui.HSceneFactory 1035
getBlockIncrement() - of org.havi.ui.HAdjustmentValue 812
getBlockIncrement() - of org.havi.ui.HRangeValue 1014
getBouquetID() - of org.dvb.si.SIBouquet 505
getBouquetID() - of org.dvb.si.SIMonitoringEvent 539
getBouquetID() - of org.dvb.si.SITransportStreamBAT 569
getByteAt(int) - of org.dvb.si.Descriptor 494
getCaretCharPosition() - of org.havi.ui.HSinglelineEntry 1071
getCaretCharPositionForLine(HVisible, int) - of org.havi.ui.HMultilineEntryLook 982
getCaretPositionNextLine(HVisible) - of org.havi.ui.HMultilineEntryLook 982
getCaretPositionPreviousLine(HVisible) - of org.havi.ui.HMultilineEntryLook 982
getCarouselId() - of org.dvb.dsmcc.ServiceXFRReference 678
getClassLoader(String[]) - of org.dvb.application.plugins.ApplicationSecurityContext 1331
getClient() - of org.dvb.event.RepositoryDescriptor 461
getClient() - of org.dvb.net.rc.ConnectionRCInterface 697
getClient() - of org.havi.ui.HScreenDevice 1055
getClipRegion() - of org.dvb.media.VideoPresentationControl 610
getClipRegion() - of org.dvb.media.VideoTransformation 614
getClosestMatch(VideoTransformation) - of org.dvb.media.BackgroundVideoPresentationControl 579
getCode() - of org.dvb.event.UserEvent 463
getCoherentScreenConfigurations(HScreenConfigTemplate[]) - of org.havi.ui.HScreen 1043
getColor() - of org.dvb.ui.DVBGraphics 772
getColor() - of org.havi.ui.event.HEventRepresentation 1210
getColor() - of org.havi.ui.HBackgroundConfiguration 834
getCompatibleImage(Image, HImageHints) - of org.havi.ui.HGraphicsConfiguration 914
getComponentHScreenRectangle(Component) - of org.havi.ui.HGraphicsConfiguration 915
getComponentTag() - of org.dvb.si.PMTElementaryStream 500
getConfigTemplate() - of org.havi.ui.HBackgroundConfiguration 834
getConfigTemplate() - of org.havi.ui.HEmulatedGraphicsConfiguration 862
getConfigTemplate() - of org.havi.ui.HGraphicsConfiguration 915
getConfigTemplate() - of org.havi.ui.HVideoConfiguration 1167

getConfigurations() - of org.havi.ui.HBackgroundDevice 837
getConfigurations() - of org.havi.ui.HGraphicsDevice 920
getConfigurations() - of org.havi.ui.HVideoDevice 1170
getConnectedTime() - of org.dvb.net.rc.ConnectionRCInterface 697
getContent() - of org.dvb.si.Descriptor 494
getContent(int) - of org.havi.ui.HVisible 1185
getContentLength() - of org.dvb.si.Descriptor 494
getContentNibbles() - of org.dvb.si.SIEvent 525
getContentType() - of org.dvb.media.DripFeedDataSource 585
getControl(String) - of org.dvb.media.DripFeedDataSource 585
getControls() - of org.dvb.media.DripFeedDataSource 586
getCurrent() - of org.havi.ui.HToggleGroup 1154
getCurrentConfiguration() - of org.havi.ui.HBackgroundDevice 837
getCurrentConfiguration() - of org.havi.ui.HGraphicsDevice 920
getCurrentConfiguration() - of org.havi.ui.HVideoDevice 1170
getCurrentIndex() - of org.havi.ui.HListGroup 950
getCurrentItem() - of org.havi.ui.HListGroup 951
getCurrentTarget() - of org.dvb.net.rc.ConnectionRCInterface 697
getCurrentVersionNumber() - of org.dvb.application.storage.ExtendedAppAttributes 1355
getDataRate() - of org.dvb.net.rc.RCInterface 704
getDataSource() - of org.dvb.si.SIInformation 532
getDecoderFormatConversion() - of org.dvb.media.VideoFormatControl 606
getDefaultConfiguration() - of org.havi.ui.HBackgroundDevice 837
getDefaultConfiguration() - of org.havi.ui.HGraphicsDevice 920
getDefaultConfiguration() - of org.havi.ui.HVideoDevice 1170
getDefaultHBackgroundDevice() - of org.havi.ui.HScreen 1043
getDefaultHGraphicsDevice() - of org.havi.ui.HScreen 1044
getDefaultHScene() - of org.havi.ui.HSceneFactory 1035
getDefaultHScene(HScreen) - of org.havi.ui.HSceneFactory 1035
getDefaultHScreen() - of org.havi.ui.HScreen 1044
getDefaultHVideoDevice() - of org.havi.ui.HScreen 1044
getDefaultLook() - of org.havi.ui.HAnimation 826
getDefaultLook() - of org.havi.ui.HGraphicButton 898
getDefaultLook() - of org.havi.ui.HIcon 924
getDefaultLook() - of org.havi.ui.HListGroup 951
getDefaultLook() - of org.havi.ui.HMultilineEntry 980
getDefaultLook() - of org.havi.ui.HRange 1001
getDefaultLook() - of org.havi.ui.HRangeValue 1014
getDefaultLook() - of org.havi.ui.HSinglelineEntry 1071
getDefaultLook() - of org.havi.ui.HStaticAnimation 1093
getDefaultLook() - of org.havi.ui.HStaticIcon 1099
getDefaultLook() - of org.havi.ui.HStaticRange 1103
getDefaultLook() - of org.havi.ui.HStaticText 1109
getDefaultLook() - of org.havi.ui.HText 1119
getDefaultLook() - of org.havi.ui.HTextButton 1127
getDefaultLook() - of org.havi.ui.HToggleButton 1146
getDefaultSize() - of org.havi.ui.HVisible 1186
getDelay() - of org.havi.ui.HAnimateEffect 815
getDelay() - of org.havi.ui.HFlatEffectMatte 878
getDelay() - of org.havi.ui.HImageEffectMatte 929
getDelay() - of org.havi.ui.HStaticAnimation 1093
getDenominator() - of org.dvb.dsmcc.NPTRate 662
getDescriptorTags() - of org.dvb.si.SIBouquet 505
getDescriptorTags() - of org.dvb.si.SIInformation 532
getDescriptorTags() - of org.dvb.si.SINetwork 543

getDevice() - of org.havi.ui.HBackgroundConfiguration 834
getDevice() - of org.havi.ui.HGraphicsConfiguration 915
getDevice() - of org.havi.ui.HVideoConfiguration 1167
getDisplayAspectRatio() - of org.dvb.media.VideoFormatControl 606
getDNSServer() - of org.dvb.net.rc.ConnectionParameters 693
getDuration() - of org.dvb.dsmcc.DSMCCStream 638
getDuration() - of org.dvb.media.DripFeedDataSource 586
getDuration() - of org.dvb.si.SIEvent 525
getDVBComposite() - of org.dvb.ui.DVBGraphics 773
getDvbLocator() - of org.dvb.si.PMTElementaryStream 500
getDvbLocator() - of org.dvb.si.PMTService 502
getDvbLocator() - of org.dvb.si.SIEvent 525
getDvbLocator() - of org.dvb.si.SIService 555
getDvbLocator() - of org.dvb.si.SITransportStream 567
getEchoChar() - of org.havi.ui.HSinglelineEntry 1071
getEditMode() - of org.havi.ui.HKeyboardInputPreferred 942
getEditMode() - of org.havi.ui.HSinglelineEntry 1071
getEITPresentFollowingFlag() - of org.dvb.si.SIService 555
getEITScheduleFlag() - of org.dvb.si.SIService 555
getElementaryPID() - of org.dvb.si.PMTElementaryStream 500
getElementaryStreams() - of org.davic.mpeg.NotAuthorizedException 374
getElementInsets() - of org.havi.ui.HListGroupLook 962
getEmulation() - of org.havi.ui.HEmulatedGraphicsConfiguration 862
getEndTime() - of org.dvb.si.SIMonitoringEvent 539
getEventData() - of org.dvb.dsmcc.StreamEvent 680
getEventId() - of org.dvb.application.AppsDatabaseEvent 732
getEventId() - of org.dvb.dsmcc.StreamEvent 681
getEventID() - of org.dvb.si.SIEvent 526
getEventList() - of org.dvb.dsmcc.DSMCCStreamEvent 642
getEventName() - of org.dvb.dsmcc.StreamEvent 681
getEventNPT() - of org.dvb.dsmcc.StreamEvent 681
getExpirationDate() - of org.dvb.io.persistent.FileAttributes 473
getFamily() - of org.dvb.event.UserEvent 463
getFavourites() - of org.dvb.user.Preference 482
getFileAttributes(File) - of org.dvb.io.persistent.FileAttributes 473
getFirstNPT() - of org.dvb.dsmcc.NPTDiscontinuityEvent 659
getFlickerFilter() - of org.havi.ui.HScreenConfiguration 1052
getFocusOwner() - of org.dvb.application.inner.DVBScene 1317
getFocusOwner() - of org.havi.ui.HScene 1026
getForcedSelection() - of org.havi.ui.HToggleGroup 1154
getFreeCAMode() - of org.dvb.si.SIEvent 526
getFreeCAMode() - of org.dvb.si.SIService 555
getFromState() - of org.dvb.application.AppStateChangeEvent 737
getFullScreenScene(HGraphicsDevice) - of org.havi.ui.HSceneFactory 1036
getGainFocusSound() - of org.dvb.application.inner.InnerApplicationContainer 1322
getGainFocusSound() - of org.havi.ui.HAnimation 826
getGainFocusSound() - of org.havi.ui.HGraphicButton 898
getGainFocusSound() - of org.havi.ui.HIcon 924
getGainFocusSound() - of org.havi.ui.HListGroup 951
getGainFocusSound() - of org.havi.ui.HNavigable 989
getGainFocusSound() - of org.havi.ui.HRange 1002
getGainFocusSound() - of org.havi.ui.HRangeValue 1014
getGainFocusSound() - of org.havi.ui.HSinglelineEntry 1072
getGainFocusSound() - of org.havi.ui.HText 1119
getGainFocusSound() - of org.havi.ui.HTextButton 1127

getGainFocusSound() - of org.havi.ui.HToggleButton 1147
getGraphicContent(int) - of org.havi.ui.HVisible 1186
getGraphics() - of org.dvb.ui.DVBBufferedImage 762
getHBackgroundDevices() - of org.havi.ui.HScreen 1044
getHeight() - of org.dvb.ui.DVBBufferedImage 762
getHeight() - of org.havi.ui.HBackgroundImage 840
getHeight(ImageObserver) - of org.dvb.ui.DVBBufferedImage 762
getHGraphicsDevices() - of org.havi.ui.HScreen 1044
getHorizontalAlign() - of org.dvb.ui.DVBTextLayoutManager 778
getHorizontalAlignment() - of org.havi.ui.HVisible 1186
getHorizontalScalingFactors() - of org.dvb.media.VideoPresentationControl 611
getHorizontalTabSpacing() - of org.dvb.ui.DVBTextLayoutManager 778
getHScreens() - of org.havi.ui.HScreen 1044
getHVideoDevices() - of org.havi.ui.HScreen 1045
getIcon() - of org.havi.ui.HListElement 945
getIconFlags() - of org.dvb.application.AppIcon 718
getIconSize() - of org.havi.ui.HListGroup 951
getID() - of org.havi.ui.event.HBackgroundImageEvent 1204
getIdentifier() - of org.dvb.application.AppAttributes 713
getIDstring() - of org.havi.ui.HScreenDevice 1056
getImage() - of org.dvb.ui.DVBBufferedImage 762
getImplementation() - of org.havi.ui.HEmulatedGraphicsConfiguration 862
getIndex(HListElement) - of org.havi.ui.HListGroup 951
getInputDeviceSupported() - of org.havi.ui.event.HKeyCapabilities 1221
getInputDeviceSupported() - of org.havi.ui.event.HMouseCapabilities 1226
getInputDeviceSupported() - of org.havi.ui.event.HRcCapabilities 1227
getInputVideoSize() - of org.dvb.media.VideoPresentationControl 611
getInsets() - of org.dvb.ui.DVBTextLayoutManager 779
getInsets(HVisible) - of org.havi.ui.HAnimateLook 819
getInsets(HVisible) - of org.havi.ui.HGraphicLook 905
getInsets(HVisible) - of org.havi.ui.HListGroupLook 962
getInsets(HVisible) - of org.havi.ui.HLook 969
getInsets(HVisible) - of org.havi.ui.HMultilineEntryLook 983
getInsets(HVisible) - of org.havi.ui.HRangeLook 1007
getInsets(HVisible) - of org.havi.ui.HSinglelineEntryLook 1080
getInsets(HVisible) - of org.havi.ui.HTextLook 1136
getInstance() - of org.dvb.event.EventManager 458
getInstance() - of org.dvb.net.rc.RCInterfaceManager 705
getInstance() - of org.dvb.user.UserPreferenceManager 487
getInstance() - of org.havi.ui.HSceneFactory 1036
getInstance(int) - of org.dvb.ui.DVBAlphaComposite 759
getInstance(int, float) - of org.dvb.ui.DVBAlphaComposite 759
getInteractionState() - of org.havi.ui.HVisible 1186
getInterface(InetAddress) - of org.dvb.net.rc.RCInterfaceManager 705
getInterface(Socket) - of org.dvb.net.rc.RCInterfaceManager 706
getInterface(URLConnection) - of org.dvb.net.rc.RCInterfaceManager 706
getInterfaces() - of org.dvb.net.rc.RCInterfaceManager 706
getInterlaced() - of org.havi.ui.HScreenConfiguration 1053
getInvocationHandler(Object) - of org.dvb.application.plugins.Proxy 1338
getIsServiceBound() - of org.dvb.application.AppAttributes 714
getItem() - of org.havi.ui.event.HItemEvent 1219
getItem(int) - of org.havi.ui.HListGroup 952
getKeyChar() - of org.dvb.event.UserEvent 463
getLabel() - of org.havi.ui.HListElement 945
getLabelSize() - of org.havi.ui.HListGroup 952

getLastNPT() - of org.dvb.dsmcc.NPTDiscontinuityEvent 659
getLetterSpace() - of org.dvb.ui.DVBTextLayoutManager 779
getLevel1ContentNibbles() - of org.dvb.si.SIEvent 526
getLineOrientation() - of org.dvb.ui.DVBTextLayoutManager 779
getLineSpace() - of org.dvb.ui.DVBTextLayoutManager 779
getListContent() - of org.havi.ui.HListGroup 952
getLocator() - of org.dvb.application.AppIcon 718
getLocator() - of org.dvb.application.storage.StoredApplicationService 1360
getLocator() - of org.dvb.dsmcc.ServiceDomain 673
getLocator() - of org.dvb.dsmcc.ServiceXFRReference 679
getLook() - of org.havi.ui.HVisible 1187
getLookData(Object) - of org.havi.ui.HVisible 1187
getLoseFocusSound() - of org.dvb.application.inner.InnerApplicationContainer 1322
getLoseFocusSound() - of org.havi.ui.HAnimation 826
getLoseFocusSound() - of org.havi.ui.HGraphicButton 899
getLoseFocusSound() - of org.havi.ui.HIcon 925
getLoseFocusSound() - of org.havi.ui.HListGroup 952
getLoseFocusSound() - of org.havi.ui.HNavigable 989
getLoseFocusSound() - of org.havi.ui.HRange 1002
getLoseFocusSound() - of org.havi.ui.HRangeValue 1015
getLoseFocusSound() - of org.havi.ui.HSinglelineEntry 1072
getLoseFocusSound() - of org.havi.ui.HText 1120
getLoseFocusSound() - of org.havi.ui.HTextButton 1127
getLoseFocusSound() - of org.havi.ui.HToggleButton 1147
getMatte() - of org.havi.ui.HComponent 844
getMatte() - of org.havi.ui.HContainer 854
getMatte() - of org.havi.ui.HMatteLayer 976
getMatteData() - of org.havi.ui.HFlatEffectMatte 878
getMatteData() - of org.havi.ui.HFlatMatte 883
getMatteData() - of org.havi.ui.HImageEffectMatte 929
getMatteData() - of org.havi.ui.HImageMatte 936
getMaxCharsPerLine() - of org.havi.ui.HSinglelineEntry 1072
getMaximumSize() - of org.havi.ui.HVisible 1187
getMaximumSize(HVisible) - of org.havi.ui.HAnimateLook 819
getMaximumSize(HVisible) - of org.havi.ui.HGraphicLook 905
getMaximumSize(HVisible) - of org.havi.ui.HListGroupLook 963
getMaximumSize(HVisible) - of org.havi.ui.HLook 969
getMaximumSize(HVisible) - of org.havi.ui.HMultilineEntryLook 983
getMaximumSize(HVisible) - of org.havi.ui.HRangeLook 1007
getMaximumSize(HVisible) - of org.havi.ui.HSinglelineEntryLook 1080
getMaximumSize(HVisible) - of org.havi.ui.HTextLook 1136
getMaxValue() - of org.havi.ui.HStaticRange 1103
getMinimumSize() - of org.havi.ui.HVisible 1187
getMinimumSize(HVisible) - of org.havi.ui.HAnimateLook 820
getMinimumSize(HVisible) - of org.havi.ui.HGraphicLook 906
getMinimumSize(HVisible) - of org.havi.ui.HListGroupLook 963
getMinimumSize(HVisible) - of org.havi.ui.HLook 970
getMinimumSize(HVisible) - of org.havi.ui.HMultilineEntryLook 983
getMinimumSize(HVisible) - of org.havi.ui.HRangeLook 1007
getMinimumSize(HVisible) - of org.havi.ui.HSinglelineEntryLook 1080
getMinimumSize(HVisible) - of org.havi.ui.HTextLook 1137
getMinValue() - of org.havi.ui.HStaticRange 1103
getModifiers() - of org.dvb.event.UserEvent 463
getModifiers() - of org.havi.ui.event.HActionEvent 1197
getMostFavourite() - of org.dvb.user.Preference 482

getMountPoint() - of org.dvb.dsmcc.ServiceDomain 673
getMove(int) - of org.dvb.application.inner.InnerApplicationContainer 1322
getMove(int) - of org.havi.ui.HAnimation 826
getMove(int) - of org.havi.ui.HGraphicButton 899
getMove(int) - of org.havi.ui.HIcon 925
getMove(int) - of org.havi.ui.HListGroup 952
getMove(int) - of org.havi.ui.HNavigable 989
getMove(int) - of org.havi.ui.HRange 1002
getMove(int) - of org.havi.ui.HRangeValue 1015
getMove(int) - of org.havi.ui.HSinglelineEntry 1072
getMove(int) - of org.havi.ui.HText 1120
getMove(int) - of org.havi.ui.HTextButton 1127
getMove(int) - of org.havi.ui.HToggleButton 1147
getMultiSelection() - of org.havi.ui.HListGroup 953
getName() - of org.dvb.application.AppAttributes 714
getName() - of org.dvb.application.storage.StoredApplicationService 1361
getName() - of org.dvb.event.RepositoryDescriptor 461
getName() - of org.dvb.internet.InternetClientService 1381
getName() - of org.dvb.si.SIBouquet 505
getName() - of org.dvb.si.SIEvent 526
getName() - of org.dvb.si.SINetwork 543
getName() - of org.dvb.si.SIService 556
getName() - of org.dvb.user.Preference 482
getName() - of org.dvb.user.UserPreferenceChangeEvent 485
getName(String) - of org.dvb.application.AppAttributes 714
getNames() - of org.dvb.application.AppAttributes 714
getNavigationKeys() - of org.dvb.application.inner.InnerApplicationContainer 1322
getNavigationKeys() - of org.havi.ui.HAnimation 827
getNavigationKeys() - of org.havi.ui.HGraphicButton 899
getNavigationKeys() - of org.havi.ui.HIcon 925
getNavigationKeys() - of org.havi.ui.HListGroup 953
getNavigationKeys() - of org.havi.ui.HNavigationInputPreferred 992
getNavigationKeys() - of org.havi.ui.HRange 1002
getNavigationKeys() - of org.havi.ui.HRangeValue 1015
getNavigationKeys() - of org.havi.ui.HSinglelineEntry 1073
getNavigationKeys() - of org.havi.ui.HText 1120
getNavigationKeys() - of org.havi.ui.HTextButton 1128
getNavigationKeys() - of org.havi.ui.HToggleButton 1147
getNetworkID() - of org.dvb.si.SIMonitoringEvent 539
getNetworkID() - of org.dvb.si.SINetwork 544
getNetworkID() - of org.dvb.si.SITransportStreamNIT 571
getNetworkInterface(SIDatabase) - of org.dvb.net.tuning.DvbNetworkInterfaceSIUtil 751
getNewDFC() - of org.dvb.media.DFCChangedEvent 583
getNewFormat() - of org.dvb.media.ActiveFormatDescriptionChangedEvent 577
getNewRatio() - of org.dvb.media.AspectRatioChangedEvent 578
getNewVersionNumber() - of org.dvb.dsmcc.ObjectChangeEvent 666
getNPT() - of org.dvb.dsmcc.DSMCCStream 638
getNPTRate() - of org.dvb.dsmcc.DSMCCStream 639
getNSAPAddress() - of org.dvb.dsmcc.ServiceDomain 673
getNSAPAddress() - of org.dvb.dsmcc.ServiceXFRReference 679
getNumerator() - of org.dvb.dsmcc.NPTRate 662
getNumItems() - of org.havi.ui.HListGroup 953
getNumSelected() - of org.havi.ui.HListGroup 953
getNumVisible(HVisible) - of org.havi.ui.HListGroupLook 964
getOffset() - of org.havi.ui.HImageMatte 936

getOffset(HScreenConfiguration) - of org.havi.ui.HScreenConfiguration 1053
getOffset(int) - of org.havi.ui.HImageEffectMatte 929
getOID() - of org.dvb.application.AppID 719
getOrganisationId() - of org.dvb.application.storage.StoredApplicationService 1361
getOrientation() - of org.havi.ui.HListGroup 953
getOrientation() - of org.havi.ui.HOrientable 996
getOrientation() - of org.havi.ui.HStaticRange 1103
getOriginalNetworkID() - of org.dvb.si.PMTElementaryStream 501
getOriginalNetworkID() - of org.dvb.si.PMTService 502
getOriginalNetworkID() - of org.dvb.si.SIEvent 526
getOriginalNetworkID() - of org.dvb.si.SIMonitoringEvent 539
getOriginalNetworkID() - of org.dvb.si.SIService 556
getOriginalNetworkID() - of org.dvb.si.SITransportStream 567
getPassword() - of org.dvb.net.rc.ConnectionParameters 694
getPathName() - of org.dvb.dsmcc.ServiceXFRReference 679
getPcrPid() - of org.dvb.si.PMTService 502
getPermissions() - of org.dvb.io.persistent.FileAttributes 474
getPixelAspectRatio() - of org.havi.ui.HScreenConfiguration 1053
getPixelCoordinatesHScreenRectangle(HScreenRectangle, Container) - of org.havi.ui.HGraphicsConfiguration 915
getPixelCoordinatesHScreenRectangle(Rectangle) - of org.havi.ui.HScene 1026
getPixelResolution() - of org.havi.ui.HScreenConfiguration 1053
getPlayMode() - of org.havi.ui.HAnimateEffect 815
getPlayMode() - of org.havi.ui.HFlatEffectMatte 878
getPlayMode() - of org.havi.ui.HImageEffectMatte 930
getPlayMode() - of org.havi.ui.HStaticAnimation 1094
getPosition() - of org.havi.ui.HAnimateEffect 815
getPosition() - of org.havi.ui.HFlatEffectMatte 879
getPosition() - of org.havi.ui.HImageEffectMatte 930
getPosition() - of org.havi.ui.HStaticAnimation 1094
getPosition(String) - of org.dvb.user.Preference 483
getPositioningCapability() - of org.dvb.media.VideoPresentationControl 611
getPreferenceObject(int) - of org.havi.ui.HGraphicsConfigTemplate 910
getPreferenceObject(int) - of org.havi.ui.HSceneTemplate 1039
getPreferenceObject(int) - of org.havi.ui.HScreenConfigTemplate 1050
getPreferenceObject(int) - of org.havi.ui.HVideoConfigTemplate 1164
getPreferencePriority(int) - of org.havi.ui.HBackgroundConfigTemplate 831
getPreferencePriority(int) - of org.havi.ui.HGraphicsConfigTemplate 911
getPreferencePriority(int) - of org.havi.ui.HSceneTemplate 1040
getPreferencePriority(int) - of org.havi.ui.HScreenConfigTemplate 1050
getPreferencePriority(int) - of org.havi.ui.HVideoConfigTemplate 1164
getPreferredSize() - of org.havi.ui.HVisible 1188
getPreferredSize(HVisible) - of org.havi.ui.HAnimateLook 820
getPreferredSize(HVisible) - of org.havi.ui.HGraphicLook 906
getPreferredSize(HVisible) - of org.havi.ui.HListGroupLook 964
getPreferredSize(HVisible) - of org.havi.ui.HLook 970
getPreferredSize(HVisible) - of org.havi.ui.HMultilineEntryLook 984
getPreferredSize(HVisible) - of org.havi.ui.HRangeLook 1008
getPreferredSize(HVisible) - of org.havi.ui.HSinglelineEntryLook 1081
getPreferredSize(HVisible) - of org.havi.ui.HTextLook 1137
getPriority() - of org.dvb.application.AppAttributes 715
getPriority() - of org.dvb.io.persistent.FileAttributes 474
getProfiles() - of org.dvb.application.AppAttributes 715
getProperty(String) - of org.dvb.application.AppAttributes 715
getProperty(String, ImageObserver) - of org.dvb.ui.DVBBufferedImage 763

getProviderName() - of org.dvb.si.SIService 556
getProxyClass(ClassLoader, Class[]) - of org.dvb.application.plugins.Proxy 1338
getPunchThroughToBackgroundColor(Color, int) - of org.havi.ui.HGraphicsConfiguration 916
getPunchThroughToBackgroundColor(Color, int, HVideoDevice) - of org.havi.ui.HGraphicsConfiguration 916
getPunchThroughToBackgroundColor(int) - of org.havi.ui.HGraphicsConfiguration 917
getPunchThroughToBackgroundColor(int, HVideoDevice) - of org.havi.ui.HGraphicsConfiguration 917
getRate() - of org.dvb.dsmcc.NPTRateChangeEvent 663
getReason() - of org.dvb.media.PresentationChangedEvent 591
getReason(int) - of org.davic.mpeg.NotAuthorizedException 375
getReceiveBufferSize(DatagramSocket) - of org.dvb.net.DatagramSocketBufferControl 687
getRenderMode() - of org.dvb.application.inner.DVBScene 1317
getRenderMode() - of org.havi.ui.HScene 1026
getRepeatCount() - of org.havi.ui.HAnimateEffect 815
getRepeatCount() - of org.havi.ui.HFlatEffectMatte 879
getRepeatCount() - of org.havi.ui.HImageEffectMatte 930
getRepeatCount() - of org.havi.ui.HStaticAnimation 1094
getRepresentation(int) - of org.havi.ui.event.HRcCapabilities 1228
getResizeMode() - of org.havi.ui.HVisible 1188
getResource(String, boolean) - of org.dvb.application.plugins.ApplicationSecurityContext 1331
getResult() - of org.dvb.si.SISuccessfulRetrieveEvent 563
getRGB() - of org.dvb.ui.DVBColor 769
getRGB(int, int) - of org.dvb.ui.DVBBufferedImage 763
getRGB(int, int, int, int, int[], int, int) - of org.dvb.ui.DVBBufferedImage 764
getRootContainer(XletContext) - of org.dvb.application.plugins.XletSystemCall 1345
getRule() - of org.dvb.ui.DVBAlphaComposite 759
getRunningStatus() - of org.dvb.si.SIEvent 526
getRunningStatus() - of org.dvb.si.SIService 556
getScalingFactors() - of org.dvb.media.VideoTransformation 615
getSceneTemplate() - of org.havi.ui.HScene 1026
getScreenArea() - of org.havi.ui.HScreenConfiguration 1053
getScreenAspectRatio() - of org.havi.ui.HScreenDevice 1056
getScrollPosition() - of org.havi.ui.HListGroup 953
getSelection() - of org.havi.ui.HListGroup 954
getSelectionIndices() - of org.havi.ui.HListGroup 954
getSelectionMode() - of org.havi.ui.HListGroup 954
getSelectionMode() - of org.havi.ui.HSelectionInputPreferred 1065
getSelectionSound() - of org.havi.ui.HItemValue 940
getSelectionSound() - of org.havi.ui.HListGroup 954
getService() - of org.davic.mpeg.NotAuthorizedException 375
getService() - of org.dvb.internet.InternetClient 1376
getServiceContentLocators() - of org.dvb.internet.InternetClient 1376
getServiceId() - of org.dvb.application.storage.StoredApplicationService 1361
getServiceID() - of org.dvb.si.PMTElementaryStream 501
getServiceID() - of org.dvb.si.PMTService 502
getServiceID() - of org.dvb.si.SIEvent 527
getServiceID() - of org.dvb.si.SIMonitoringEvent 539
getServiceID() - of org.dvb.si.SIService 556
getServiceInformationType() - of org.dvb.application.storage.StoredApplicationService 1361
getServiceLocator() - of org.dvb.application.AppAttributes 716
getServiceType() - of org.dvb.application.storage.StoredApplicationService 1361
getServiceType() - of org.dvb.internet.InternetClientService 1381
getServiceXFR() - of org.dvb.dsmcc.ServiceXFRErrorEvent 675
getServiceXFR() - of org.dvb.dsmcc.ServiceXFRException 677
getSetupTimeEstimate() - of org.dvb.net.rc.ConnectionRCInterface 697

getShortBouquetName() - of org.dvb.si.SIBouquet 506
getShortcutComponent(int) - of org.dvb.application.inner.DVBScene 1317
getShortcutComponent(int) - of org.havi.ui.HScene 1026
getShortcutKeycode(HActionable) - of org.dvb.application.inner.DVBScene 1317
getShortcutKeycode(HActionable) - of org.havi.ui.HScene 1027
getShortDescription() - of org.dvb.si.SIEvent 527
getShortEventName() - of org.dvb.si.SIEvent 527
getShortNetworkName() - of org.dvb.si.SINetwork 544
getShortProviderName() - of org.dvb.si.SIService 556
getShortServiceName() - of org.dvb.si.SIService 557
getSIDatabase() - of org.dvb.si.SIDatabase 512
getSIDatabase() - of org.dvb.si.SIInformation 532
getSIDatabase(NetworkInterface) - of org.dvb.net.tuning.DvbNetworkInterfaceSIUtil 751
getSigners() - of org.dvb.dsmcc.DSMCCObject 633
getSIInformationType() - of org.dvb.si.SIMonitoringEvent 539
getSIServiceLocators() - of org.dvb.si.SIBouquet 506
getSIServiceType() - of org.dvb.si.SIService 557
getSoftLineBreakPositions(HVisible) - of org.havi.ui.HMultilineEntryLook 985
getSource() - of org.davic.mpeg.sections.TimeOutEvent 377
getSource() - of org.dvb.dsmcc.AsynchronousLoadingEvent 628
getSource() - of org.dvb.dsmcc.InvalidFormatEvent 647
getSource() - of org.dvb.dsmcc.InvalidPathnameEvent 649
getSource() - of org.dvb.dsmcc.LoadingAbortedEvent 651
getSource() - of org.dvb.dsmcc.MPEGDeliveryErrorEvent 652
getSource() - of org.dvb.dsmcc.NotEntitledEvent 654
getSource() - of org.dvb.dsmcc.NPTRateChangeEvent 663
getSource() - of org.dvb.dsmcc.NPTStatusEvent 665
getSource() - of org.dvb.dsmcc.ObjectChangeEvent 666
getSource() - of org.dvb.dsmcc.ServerDeliveryErrorEvent 669
getSource() - of org.dvb.dsmcc.ServiceXFRErrorEvent 675
getSource() - of org.dvb.dsmcc.StreamEvent 681
getSource() - of org.dvb.dsmcc.SuccessEvent 683
getSource() - of org.dvb.media.SubtitleAvailableEvent 596
getSource() - of org.dvb.media.SubtitleNotAvailableEvent 598
getSource() - of org.dvb.media.SubtitleNotSelectedEvent 599
getSource() - of org.dvb.media.SubtitleSelectedEvent 600
getSource() - of org.dvb.net.rc.RCInterfaceReleasedEvent 707
getSource() - of org.dvb.net.rc.RCInterfaceReservedEvent 708
getSource() - of org.dvb.si.SIMonitoringEvent 540
getSource() - of org.dvb.si.SIRetrievalEvent 552
getSource() - of org.dvb.ui.DVBBufferedImage 764
getSource() - of org.havi.ui.event.HBackgroundImageEvent 1204
getSource() - of org.havi.ui.event.HScreenDeviceReleasedEvent 1240
getSource() - of org.havi.ui.event.HScreenDeviceReservedEvent 1241
getSource() - of org.havi.ui.event.HScreenLocationModifiedEvent 1243
getStartCorner() - of org.dvb.ui.DVBTextLayoutManager 779
getStartTime() - of org.dvb.si.SIEvent 527
getStartTime() - of org.dvb.si.SIMonitoringEvent 540
getState() - of org.dvb.application.AppProxy 722
getStoredAppIDs() - of org.dvb.application.storage.ApplicationStorage 1350
getStream() - of org.dvb.media.CAStopEvent 582
getStream() - of org.dvb.media.NoComponentSelectedEvent 589
getStream() - of org.dvb.media.PresentationChangedEvent 591
getStream() - of org.dvb.media.ServiceRemovedEvent 593
getStream() - of org.dvb.media.StopByResourceLossEvent 595

getStreamLocator() - of org.dvb.dsmcc.DSMCCStream 639
getStreams() - of org.dvb.media.DripFeedDataSource 586
getStreamType() - of org.dvb.si.PMTElementaryStream 501
getString() - of org.havi.ui.event.HEventRepresentation 1210
getSubimage(int, int, int, int) - of org.dvb.ui.DVBBufferedImage 764
getSupportedCharacterRanges(Font) - of org.havi.ui.HFontCapabilities 894
getSupportedClientServices() - of org.dvb.internet.InternetClientService 1382
getSupportedPlugins() - of org.dvb.internet.WWWBrowserService 1394
getSwitchableState() - of org.havi.ui.HSwitchable 1115
getSwitchableState() - of org.havi.ui.HToggleButton 1148
getSymbol() - of org.havi.ui.event.HEventRepresentation 1210
getTag() - of org.dvb.si.Descriptor 495
getTarget() - of org.dvb.net.rc.ConnectionParameters 694
getTextContent(int) - of org.havi.ui.HSinglelineEntry 1073
getTextContent(int) - of org.havi.ui.HVisible 1188
getTextLayoutManager() - of org.havi.ui.HVisible 1188
getTextualServiceIdentifiers() - of org.dvb.si.SIService 557
getTextualServiceIdentifiers() - of org.dvb.si.TextualServiceIdentifierQuery 573
getTextWrapping() - of org.dvb.ui.DVBTextLayoutManager 779
getThumbMaxOffset() - of org.havi.ui.HStaticRange 1103
getThumbMinOffset() - of org.havi.ui.HStaticRange 1103
getToggleGroup() - of org.havi.ui.HToggleButton 1148
getToState() - of org.dvb.application.AppStateChangeEvent 737
getTotalVideoArea() - of org.dvb.media.VideoPresentationControl 611
getTotalVideoAreaOnScreen() - of org.dvb.media.VideoPresentationControl 611
getTransferId() - of org.havi.ui.event.HFocusEvent 1214
getTransportStreamID() - of org.dvb.si.PMTElementaryStream 501
getTransportStreamID() - of org.dvb.si.PMTService 503
getTransportStreamID() - of org.dvb.si.SIEvent 527
getTransportStreamID() - of org.dvb.si.SIMonitoringEvent 540
getTransportStreamID() - of org.dvb.si.SIService 557
getTransportStreamID() - of org.dvb.si.SITransportStream 567
getType() - of org.davic.mpeg.NotAuthorizedException 375
getType() - of org.dvb.application.AppAttributes 716
getType() - of org.dvb.event.UserEvent 464
getType() - of org.dvb.net.rc.RCInterface 704
getType() - of org.dvb.ui.DVBGraphics 773
getType() - of org.havi.ui.event.HEventRepresentation 1211
getType() - of org.havi.ui.HImageHints 934
getType() - of org.havi.ui.HKeyboardInputPreferred 942
getType() - of org.havi.ui.HSinglelineEntry 1073
getUndeclaredThrowable() - of org.dvb.application.plugins.UndeclaredThrowableException 1342
getUnitIncrement() - of org.havi.ui.HAdjustmentValue 812
getUnitIncrement() - of org.havi.ui.HRangeValue 1015
getUnsetActionSound() - of org.havi.ui.HSwitchable 1115
getUnsetActionSound() - of org.havi.ui.HToggleButton 1148
getUpdateTime() - of org.dvb.si.SIInformation 533
getURL() - of org.dvb.dsmcc.DSMCCObject 633
getUrl() - of org.dvb.internet.InternetClientEvent 1378
getURL(Locator) - of org.dvb.dsmcc.ServiceDomain 673
getUserAgent() - of org.dvb.internet.WWWBrowserService 1394
getUserEmailAddress() - of org.dvb.internet.EmailClientService 1373
getUserEvent() - of org.dvb.event.UserEventRepository 467
getUsername() - of org.dvb.net.rc.ConnectionParameters 694
getUTCTime() - of org.dvb.si.SITime 566

getValidInput() - of org.havi.ui.HKeyboardInputPreferred 942
getValidInput() - of org.havi.ui.HSinglelineEntry 1073
getValue() - of org.havi.ui.HStaticRange 1104
getVersionNumber(AppID) - of org.dvb.application.storage.ApplicationStorage 1350
getVersions(String) - of org.dvb.application.AppAttributes 716
getVerticalAlign() - of org.dvb.ui.DVBTextLayoutManager 780
getVerticalAlignment() - of org.havi.ui.HVisible 1189
getVerticalScalingFactors() - of org.dvb.media.VideoPresentationControl 612
getVideoController() - of org.havi.ui.HVideoDevice 1171
getVideoDevice() - of org.havi.ui.HVideoComponent 1162
getVideoPosition() - of org.dvb.media.VideoTransformation 615
getVideoSize() - of org.dvb.media.VideoPresentationControl 612
getVideoSource() - of org.havi.ui.HVideoDevice 1171
getVideoTransformation() - of org.dvb.media.BackgroundVideoPresentationControl 579
getVideoTransformation(int) - of org.dvb.media.VideoFormatControl 606
getVisibleSoftLineBreakPositions(HVisible) - of org.havi.ui.HMultilineEntryLook 985
getWidth() - of org.dvb.ui.DVBBufferedImage 765
getWidth() - of org.havi.ui.HBackgroundImage 840
getWidth(ImageObserver) - of org.dvb.ui.DVBBufferedImage 765
getXletContainer() - of org.dvb.application.plugins.XletContainer 1343
goToURL(URL) - of org.dvb.internet.WWWBrowser 1392
GRAPHIC_CONTENT_CHANGE - of org.havi.ui.HVisible 1180
GRAPHICS_CONFIGURATION - of org.havi.ui.HSceneTemplate 1038
GRAPHICS_MIXING - of org.havi.ui.HVideoConfigTemplate 1163
GREEK_EXTENDED - of org.havi.ui.HFontCapabilities 888
GREEK_SYMBOLS_AND_COPTIC - of org.havi.ui.HFontCapabilities 888
group() - of org.havi.ui.HContainer 854
GUJARATI - of org.havi.ui.HFontCapabilities 888
GURMUKHI - of org.havi.ui.HFontCapabilities 889
h - of org.dvb.application.plugins.Proxy 1338
HActionable - of org.havi.ui 800
HActionEvent - of org.havi.ui.event 1196
HActionEvent(HActionable, int, String) - of org.havi.ui.event.HActionEvent 1196
HActionInputPreferred - of org.havi.ui 804
HActionListener - of org.havi.ui.event 1198
HAdjustableLook - of org.havi.ui 805
HAdjustmentEvent - of org.havi.ui.event 1199
HAdjustmentEvent(HAdjustmentValue, int) - of org.havi.ui.event.HAdjustmentEvent 1201
HAdjustmentInputPreferred - of org.havi.ui 808
HAdjustmentListener - of org.havi.ui.event 1202
HAdjustmentValue - of org.havi.ui 810
HALFWIDTH_AND_FULLWIDTH_FORMS - of org.havi.ui.HFontCapabilities 889
HALIGN_CENTER - of org.havi.ui.HVisible 1180
HALIGN_JUSTIFY - of org.havi.ui.HVisible 1180
HALIGN_LEFT - of org.havi.ui.HVisible 1181
HALIGN_RIGHT - of org.havi.ui.HVisible 1181
HANGUL - of org.havi.ui.HFontCapabilities 889
HANGUL_COMPATIBILITY_JAMO - of org.havi.ui.HFontCapabilities 889
HANGUL_JAMO - of org.havi.ui.HFontCapabilities 889
HANGUL_SUPPLEMENTARY_A - of org.havi.ui.HFontCapabilities 889
HANGUL_SUPPLEMENTARY_B - of org.havi.ui.HFontCapabilities 889
HAnimateEffect - of org.havi.ui 814
HAnimateLook - of org.havi.ui 818
HAnimateLook() - of org.havi.ui.HAnimateLook 819
HAnimation - of org.havi.ui 823

HAnimation() - of org.havi.ui.HAnimation 825
HAnimation(Image[], Image[], int, int, int) - of org.havi.ui.HAnimation 825
HAnimation(Image[], Image[], int, int, int, int, int, int, int) - of org.havi.ui.HAnimation 825
HAnimation(Image[], int, int, int) - of org.havi.ui.HAnimation 826
HAnimation(Image[], int, int, int, int, int, int, int) - of org.havi.ui.HAnimation 826
hasFailed() - of org.dvb.application.AppStateChangeEvent 737
hashCode() - of org.dvb.application.AppsControlPermission 726
hasMultipleInstances() - of org.dvb.application.storage.StoredApplicationService 1361
hasMultipleInstances() - of org.dvb.internet.InternetClientService 1382
hasReadApplicationAccessRight() - of org.dvb.io.persistent.FileAccessPermissions 471
hasReadOrganisationAccessRight() - of org.dvb.io.persistent.FileAccessPermissions 471
hasReadWorldAccessRight() - of org.dvb.io.persistent.FileAccessPermissions 472
hasValue() - of org.dvb.user.Preference 483
hasWriteApplicationAccessRight() - of org.dvb.io.persistent.FileAccessPermissions 472
hasWriteOrganisationAccessRight() - of org.dvb.io.persistent.FileAccessPermissions 472
hasWriteWorldAccessRight() - of org.dvb.io.persistent.FileAccessPermissions 472
HAVI_IMPLEMENTATION_NAME - of org.havi.ui.HVersion 1159
HAVI_IMPLEMENTATION_VENDOR - of org.havi.ui.HVersion 1159
HAVI_IMPLEMENTATION_VERSION - of org.havi.ui.HVersion 1159
HAVI_SPECIFICATION_NAME - of org.havi.ui.HVersion 1159
HAVI_SPECIFICATION_VENDOR - of org.havi.ui.HVersion 1159
HAVI_SPECIFICATION_VERSION - of org.havi.ui.HVersion 1160
HBackgroundConfigTemplate - of org.havi.ui 830
HBackgroundConfigTemplate() - of org.havi.ui.HBackgroundConfigTemplate 831
HBackgroundConfiguration - of org.havi.ui 833
HBackgroundConfiguration() - of org.havi.ui.HBackgroundConfiguration 833
HBackgroundDevice - of org.havi.ui 835
HBackgroundDevice() - of org.havi.ui.HBackgroundDevice 835
HBackgroundImage - of org.havi.ui 839
HBackgroundImage(byte[]) - of org.havi.ui.HBackgroundImage 839
HBackgroundImage(String) - of org.havi.ui.HBackgroundImage 839
HBackgroundImage(URL) - of org.havi.ui.HBackgroundImage 840
HBackgroundImageEvent - of org.havi.ui.event 1203
HBackgroundImageEvent(Object, int) - of org.havi.ui.event.HBackgroundImageEvent 1204
HBackgroundImageListener - of org.havi.ui.event 1206
HChangeData - of org.havi.ui 842
HChangeData(int, Object) - of org.havi.ui.HChangeData 842
HComponent - of org.havi.ui 843
HComponent() - of org.havi.ui.HComponent 844
HComponent(int, int, int, int) - of org.havi.ui.HComponent 844
HComponentOrdering - of org.havi.ui 846
HConfigurationException - of org.havi.ui 850
HConfigurationException() - of org.havi.ui.HConfigurationException 850
HConfigurationException(String) - of org.havi.ui.HConfigurationException 850
HContainer - of org.havi.ui 852
HContainer() - of org.havi.ui.HContainer 853
HContainer(int, int, int, int) - of org.havi.ui.HContainer 853
HDefaultTextLayoutManager - of org.havi.ui 859
HDefaultTextLayoutManager() - of org.havi.ui.HDefaultTextLayoutManager 860
HEBREW_EXTENDED - of org.havi.ui.HFontCapabilities 889
height - of org.havi.ui.HScreenDimension 1059
height - of org.havi.ui.HScreenRectangle 1063
HEmulatedGraphicsConfiguration - of org.havi.ui 861
HEmulatedGraphicsConfiguration() - of org.havi.ui.HEmulatedGraphicsConfiguration 861
HEmulatedGraphicsDevice - of org.havi.ui 863

HEmulatedGraphicsDevice() - of org.havi.ui.HEmulatedGraphicsDevice 863
HEventMulticaster - of org.havi.ui 865
HEventMulticaster(EventListener, EventListener) - of org.havi.ui.HEventMulticaster 866
HEventRepresentation - of org.havi.ui.event 1207
HEventRepresentation() - of org.havi.ui.event.HEventRepresentation 1210
HFlatEffectMatte - of org.havi.ui 877
HFlatEffectMatte() - of org.havi.ui.HFlatEffectMatte 878
HFlatEffectMatte(float[]) - of org.havi.ui.HFlatEffectMatte 878
HFlatMatte - of org.havi.ui 882
HFlatMatte() - of org.havi.ui.HFlatMatte 882
HFlatMatte(float) - of org.havi.ui.HFlatMatte 882
HFOCUS_FIRST - of org.havi.ui.event.HFocusEvent 1213
HFOCUS_LAST - of org.havi.ui.event.HFocusEvent 1214
HFocusEvent - of org.havi.ui.event 1213
HFocusEvent(Component, int) - of org.havi.ui.event.HFocusEvent 1214
HFocusEvent(Component, int, int) - of org.havi.ui.event.HFocusEvent 1214
HFocusListener - of org.havi.ui.event 1216
HFontCapabilities - of org.havi.ui 884
HFontCapabilities() - of org.havi.ui.HFontCapabilities 893
HGraphicButton - of org.havi.ui 895
HGraphicButton() - of org.havi.ui.HGraphicButton 897
HGraphicButton(Image) - of org.havi.ui.HGraphicButton 897
HGraphicButton(Image, Image, Image) - of org.havi.ui.HGraphicButton 897
HGraphicButton(Image, Image, Image, int, int, int, int) - of org.havi.ui.HGraphicButton 897
HGraphicButton(Image, int, int, int, int) - of org.havi.ui.HGraphicButton 897
HGraphicLook - of org.havi.ui 904
HGraphicLook() - of org.havi.ui.HGraphicLook 905
HGraphicsConfigTemplate - of org.havi.ui 909
HGraphicsConfigTemplate() - of org.havi.ui.HGraphicsConfigTemplate 910
HGraphicsConfiguration - of org.havi.ui 913
HGraphicsConfiguration() - of org.havi.ui.HGraphicsConfiguration 913
HGraphicsDevice - of org.havi.ui 918
HGraphicsDevice() - of org.havi.ui.HGraphicsDevice 918
HIcon - of org.havi.ui 922
HIcon() - of org.havi.ui.HIcon 924
HIcon(Image) - of org.havi.ui.HIcon 924
HIcon(Image, Image, int, int, int, int) - of org.havi.ui.HIcon 924
HIcon(Image, int, int, int, int) - of org.havi.ui.HIcon 924
HImageEffectMatte - of org.havi.ui 928
HImageEffectMatte() - of org.havi.ui.HImageEffectMatte 929
HImageEffectMatte(Image[]) - of org.havi.ui.HImageEffectMatte 929
HImageHints - of org.havi.ui 933
HImageHints() - of org.havi.ui.HImageHints 934
HImageMatte - of org.havi.ui 935
HImageMatte() - of org.havi.ui.HImageMatte 935
HImageMatte(Image) - of org.havi.ui.HImageMatte 935
hint - of org.havi.ui.HChangeData 842
HInvalidLookException - of org.havi.ui 937
HInvalidLookException() - of org.havi.ui.HInvalidLookException 937
HInvalidLookException(String) - of org.havi.ui.HInvalidLookException 937
HIRAGANA - of org.havi.ui.HFontCapabilities 890
HItemEvent - of org.havi.ui.event 1217
HItemEvent(HItemValue, int, Object) - of org.havi.ui.event.HItemEvent 1219
HItemListener - of org.havi.ui.event 1220
HItemValue - of org.havi.ui 938

hitTest(HAdjustmentValue, Point) - of org.havi.ui.HAdjustableLook 807
hitTest(HAdjustmentValue, Point) - of org.havi.ui.HListGroupLook 965
hitTest(HAdjustmentValue, Point) - of org.havi.ui.HRangeLook 1009
HKeyboardInputPreferred - of org.havi.ui 941
HKeyCapabilities - of org.havi.ui.event 1221
HKeyCapabilities() - of org.havi.ui.event.HKeyCapabilities 1221
HKeyEvent - of org.havi.ui.event 1223
HKeyEvent(Component, int, long, int, int) - of org.havi.ui.event.HKeyEvent 1224
HKeyEvent(Component, int, long, int, int, char) - of org.havi.ui.event.HKeyEvent 1224
HKeyListener - of org.havi.ui.event 1225
HListElement - of org.havi.ui 944
HListElement(Image, String) - of org.havi.ui.HListElement 944
HListElement(String) - of org.havi.ui.HListElement 945
HListGroup - of org.havi.ui 946
HListGroup() - of org.havi.ui.HListGroup 949
HListGroup(HListElement[]) - of org.havi.ui.HListGroup 949
HListGroup(HListElement[], int, int, int, int) - of org.havi.ui.HListGroup 949
HListGroupLook - of org.havi.ui 961
HListGroupLook() - of org.havi.ui.HListGroupLook 962
HLook - of org.havi.ui 967
HMatte - of org.havi.ui 973
HMatteException - of org.havi.ui 974
HMatteException() - of org.havi.ui.HMatteException 974
HMatteException(String) - of org.havi.ui.HMatteException 975
HMatteLayer - of org.havi.ui 976
HMouseCapabilities - of org.havi.ui.event 1226
HMouseCapabilities() - of org.havi.ui.event.HMouseCapabilities 1226
HMultilineEntry - of org.havi.ui 977
HMultilineEntry() - of org.havi.ui.HMultilineEntry 979
HMultilineEntry(int) - of org.havi.ui.HMultilineEntry 979
HMultilineEntry(int, int, int, int, int) - of org.havi.ui.HMultilineEntry 979
HMultilineEntry(String, int, Font, Color) - of org.havi.ui.HMultilineEntry 979
HMultilineEntry(String, int, int, int, int, int, Font, Color) - of org.havi.ui.HMultilineEntry 979
HMultilineEntryLook - of org.havi.ui 981
HMultilineEntryLook() - of org.havi.ui.HMultilineEntryLook 981
HNavigable - of org.havi.ui 987
HNavigationInputPreferred - of org.havi.ui 992
HNoInputPreferred - of org.havi.ui 994
HomePagePermission - of org.dvb.internet 1375
HomePagePermission(String) - of org.dvb.internet.HomePagePermission 1375
HomePagePermission(String, String) - of org.dvb.internet.HomePagePermission 1375
HOrientable - of org.havi.ui 995
HORIZONTAL_CENTER - of org.dvb.ui.DVBTextLayoutManager 776
HORIZONTAL_END_ALIGN - of org.dvb.ui.DVBTextLayoutManager 776
HORIZONTAL_START_ALIGN - of org.dvb.ui.DVBTextLayoutManager 776
HPermissionDeniedException - of org.havi.ui 997
HPermissionDeniedException() - of org.havi.ui.HPermissionDeniedException 997
HPermissionDeniedException(String) - of org.havi.ui.HPermissionDeniedException 998
HRange - of org.havi.ui 999
HRange() - of org.havi.ui.HRange 1001
HRange(int, int, int, int) - of org.havi.ui.HRange 1001
HRange(int, int, int, int, int, int, int, int) - of org.havi.ui.HRange 1001
HRangeLook - of org.havi.ui 1006
HRangeLook() - of org.havi.ui.HRangeLook 1006
HRangeValue - of org.havi.ui 1011

HRangeValue() - of org.havi.ui.HRangeValue 1013
HRangeValue(int, int, int, int) - of org.havi.ui.HRangeValue 1013
HRangeValue(int, int, int, int, int, int, int, int) - of org.havi.ui.HRangeValue 1013
HRcCapabilities - of org.havi.ui.event 1227
HRcCapabilities() - of org.havi.ui.event.HRcCapabilities 1227
HRcEvent - of org.havi.ui.event 1229
HRcEvent(Component, int, long, int, int) - of org.havi.ui.event.HRcEvent 1236
HRcEvent(Component, int, long, int, int, char) - of org.havi.ui.event.HRcEvent 1237
HScene - of org.havi.ui 1020
HScene() - of org.havi.ui.HScene 1023
HSceneFactory - of org.havi.ui 1033
HSceneTemplate - of org.havi.ui 1037
HSceneTemplate() - of org.havi.ui.HSceneTemplate 1039
HScreen - of org.havi.ui 1041
HScreenConfigTemplate - of org.havi.ui 1046
HScreenConfigTemplate() - of org.havi.ui.HScreenConfigTemplate 1050
HScreenConfiguration - of org.havi.ui 1052
HScreenConfigurationEvent - of org.havi.ui.event 1238
HScreenConfigurationEvent(Object) - of org.havi.ui.event.HScreenConfigurationEvent 1238
HScreenConfigurationListener - of org.havi.ui.event 1239
HScreenDevice - of org.havi.ui 1054
HScreenDeviceReleasedEvent - of org.havi.ui.event 1240
HScreenDeviceReleasedEvent(Object) - of org.havi.ui.event.HScreenDeviceReleasedEvent 1240
HScreenDeviceReservedEvent - of org.havi.ui.event 1241
HScreenDeviceReservedEvent(Object) - of org.havi.ui.event.HScreenDeviceReservedEvent 1241
HScreenDimension - of org.havi.ui 1058
HScreenDimension(float, float) - of org.havi.ui.HScreenDimension 1059
HScreenLocationModifiedEvent - of org.havi.ui.event 1242
HScreenLocationModifiedEvent(Object) - of org.havi.ui.event.HScreenLocationModifiedEvent 1242
HScreenLocationModifiedListener - of org.havi.ui.event 1244
HScreenPoint - of org.havi.ui 1060
HScreenPoint(float, float) - of org.havi.ui.HScreenPoint 1061
HScreenRectangle - of org.havi.ui 1062
HScreenRectangle(float, float, float, float) - of org.havi.ui.HScreenRectangle 1063
HSelectionInputPreferred - of org.havi.ui 1065
HSinglelineEntry - of org.havi.ui 1067
HSinglelineEntry() - of org.havi.ui.HSinglelineEntry 1069
HSinglelineEntry(int) - of org.havi.ui.HSinglelineEntry 1070
HSinglelineEntry(int, int, int, int, int) - of org.havi.ui.HSinglelineEntry 1070
HSinglelineEntry(String, int, Font, Color) - of org.havi.ui.HSinglelineEntry 1070
HSinglelineEntry(String, int, int, int, int, int, Font, Color) - of org.havi.ui.HSinglelineEntry 1070
HSinglelineEntryLook - of org.havi.ui 1079
HSinglelineEntryLook() - of org.havi.ui.HSinglelineEntryLook 1079
HSound - of org.havi.ui 1084
HSound() - of org.havi.ui.HSound 1084
HState - of org.havi.ui 1087
HStaticAnimation - of org.havi.ui 1091
HStaticAnimation() - of org.havi.ui.HStaticAnimation 1093
HStaticAnimation(Image[], int, int, int) - of org.havi.ui.HStaticAnimation 1093
HStaticAnimation(Image[], int, int, int, int, int, int, int) - of org.havi.ui.HStaticAnimation 1093
HStaticIcon - of org.havi.ui 1097
HStaticIcon() - of org.havi.ui.HStaticIcon 1098
HStaticIcon(Image) - of org.havi.ui.HStaticIcon 1098
HStaticIcon(Image, int, int, int, int) - of org.havi.ui.HStaticIcon 1099
HStaticRange - of org.havi.ui 1100

HStaticRange() - of org.havi.ui.HStaticRange 1102
HStaticRange(int, int, int, int) - of org.havi.ui.HStaticRange 1102
HStaticRange(int, int, int, int, int, int, int, int) - of org.havi.ui.HStaticRange 1102
HStaticText - of org.havi.ui 1106
HStaticText() - of org.havi.ui.HStaticText 1108
HStaticText(String) - of org.havi.ui.HStaticText 1108
HStaticText(String, Font, Color, Color, HTextLayoutManager) - of org.havi.ui.HStaticText 1108
HStaticText(String, int, int, int, int) - of org.havi.ui.HStaticText 1108
HStaticText(String, int, int, int, int, Font, Color, Color, HTextLayoutManager) - of org.havi.ui.HStaticText 1108
HStillImageBackgroundConfiguration - of org.havi.ui 1110
HStillImageBackgroundConfiguration() - of org.havi.ui.HStillImageBackgroundConfiguration 1110
HSwitchable - of org.havi.ui 1113
HText - of org.havi.ui 1116
HText() - of org.havi.ui.HText 1118
HText(String) - of org.havi.ui.HText 1118
HText(String, Font, Color, Color, HTextLayoutManager) - of org.havi.ui.HText 1118
HText(String, int, int, int, int) - of org.havi.ui.HText 1118
HText(String, int, int, int, int, Font, Color, Color, HTextLayoutManager) - of org.havi.ui.HText 1119
HText(String, String) - of org.havi.ui.HText 1119
HText(String, String, Font, Color, Color, HTextLayoutManager) - of org.havi.ui.HText 1119
HText(String, String, int, int, int, int) - of org.havi.ui.HText 1119
HText(String, String, int, int, int, int, Font, Color, Color, HTextLayoutManager) - of org.havi.ui.HText 1119
HTextButton - of org.havi.ui 1123
HTextButton() - of org.havi.ui.HTextButton 1125
HTextButton(String) - of org.havi.ui.HTextButton 1125
HTextButton(String, Font, Color, Color, HTextLayoutManager) - of org.havi.ui.HTextButton 1125
HTextButton(String, int, int, int, int) - of org.havi.ui.HTextButton 1126
HTextButton(String, int, int, int, int, Font, Color, Color, HTextLayoutManager) - of org.havi.ui.HTextButton 1126
HTextEvent - of org.havi.ui.event 1245
HTextEvent(HTextValue, int) - of org.havi.ui.event.HTextEvent 1248
HTextLayoutManager - of org.havi.ui 1132
HTextListener - of org.havi.ui.event 1249
HTextLook - of org.havi.ui 1135
HTextLook() - of org.havi.ui.HTextLook 1136
HTextValue - of org.havi.ui 1140
HTMLApplication - of org.dvb.dom.inner 1312
HTMLApplication(URL, String, String) - of org.dvb.dom.inner.HTMLApplication 1312
HTMLApplication(URL, String, String, String[], String[]) - of org.dvb.dom.inner.HTMLApplication 1312
HTMLInnerApplicationContainer - of org.dvb.dom.inner 1313
HTMLInnerApplicationContainer(HTMLApplication) - of org.dvb.dom.inner.HTMLInnerApplicationContainer 1313
HToggleButton - of org.havi.ui 1142
HToggleButton() - of org.havi.ui.HToggleButton 1144
HToggleButton(Image) - of org.havi.ui.HToggleButton 1144
HToggleButton(Image, boolean, HToggleGroup) - of org.havi.ui.HToggleButton 1144
HToggleButton(Image, Image, Image, Image, boolean) - of org.havi.ui.HToggleButton 1145
HToggleButton(Image, Image, Image, Image, boolean, HToggleGroup) - of org.havi.ui.HToggleButton 1145
HToggleButton(Image, Image, Image, Image, int, int, int, int, boolean) - of org.havi.ui.HToggleButton 1145
HToggleButton(Image, Image, Image, Image, int, int, int, int, boolean, HToggleGroup) - of org.havi.ui.HToggleButton 1145
HToggleButton(Image, int, int, int, int) - of org.havi.ui.HToggleButton 1145
HToggleButton(Image, int, int, int, int, boolean) - of org.havi.ui.HToggleButton 1145
HToggleButton(Image, int, int, int, int, boolean, HToggleGroup) - of org.havi.ui.HToggleButton 1145

HToggleGroup - of org.havi.ui 1153
HToggleGroup() - of org.havi.ui.HToggleGroup 1154
HUIException - of org.havi.ui 1157
HUIException() - of org.havi.ui.HUIException 1157
HUIException(String) - of org.havi.ui.HUIException 1158
HUMAN_INTERVENTION - of org.dvb.test.DVBTest 1255
HVersion - of org.havi.ui 1159
HVideoComponent - of org.havi.ui 1161
HVideoComponent() - of org.havi.ui.HVideoComponent 1161
HVideoConfigTemplate - of org.havi.ui 1163
HVideoConfigTemplate() - of org.havi.ui.HVideoConfigTemplate 1164
HVideoConfiguration - of org.havi.ui 1166
HVideoConfiguration() - of org.havi.ui.HVideoConfiguration 1166
HVideoDevice - of org.havi.ui 1168
HVideoDevice() - of org.havi.ui.HVideoDevice 1169
HVisible - of org.havi.ui 1173
HVisible() - of org.havi.ui.HVisible 1184
HVisible(HLook) - of org.havi.ui.HVisible 1185
HVisible(HLook, int, int, int, int) - of org.havi.ui.HVisible 1185
IllegalObjectTypeException - of org.dvb.dsmcc 644
IllegalObjectTypeException() - of org.dvb.dsmcc.IllegalObjectTypeException 644
IllegalObjectTypeException(String) - of org.dvb.dsmcc.IllegalObjectTypeException 644
IllegalProfileParameterException - of org.dvb.application 744
IllegalProfileParameterException() - of org.dvb.application.IllegalProfileParameterException 744
IllegalProfileParameterException(String) - of org.dvb.application.IllegalProfileParameterException 744
IMAGE_CENTER - of org.havi.ui.HScene 1022
IMAGE_NONE - of org.havi.ui.HScene 1022
IMAGE_SCALING_SUPPORT - of org.havi.ui.HGraphicsConfigTemplate 909
IMAGE_STRETCH - of org.havi.ui.HScene 1022
IMAGE_TILE - of org.havi.ui.HScene 1023
imageLoaded(HBackgroundImageEvent) - of org.havi.ui.event.HBackgroundImageListener 1206
imageLoaded(HBackgroundImageEvent) - of org.havi.ui.HEventMulticaster 870
imageLoadFailed(HBackgroundImageEvent) - of org.havi.ui.event.HBackgroundImageListener 1206
imageLoadFailed(HBackgroundImageEvent) - of org.havi.ui.HEventMulticaster 870
implies(Permission) - of org.dvb.application.AppsControlPermission 726
IncompleteTargetException - of org.dvb.net.rc 701
IncompleteTargetException() - of org.dvb.net.rc.IncompleteTargetException 701
IncompleteTargetException(String) - of org.dvb.net.rc.IncompleteTargetException 701
init() - of org.dvb.application.DVBJProxy 742
initApplication(AppAttributes) - of org.dvb.application.plugins.Plugin 1334
initApplication(InnerApplication) - of org.dvb.application.plugins.Plugin 1334
initiateApplicationInstall(AppProxy, boolean, String[]) - of org.dvb.application.storage.ApplicationStorage 1351
initiateApplicationRemoval(AppID) - of org.dvb.application.storage.ApplicationStorage 1352
initPlugin() - of org.dvb.application.plugins.Plugin 1335
InnerApplication - of org.dvb.application.inner 1320
InnerApplication() - of org.dvb.application.inner.InnerApplication 1320
InnerApplicationContainer - of org.dvb.application.inner 1321
InnerApplicationContainer(InnerApplication) - of org.dvb.application.inner.InnerApplicationContainer 1321
InnerApplicationEvent - of org.dvb.application.inner 1326
InnerApplicationEvent(InnerApplicationContainer) - of org.dvb.application.inner.InnerApplicationEvent 1326
InnerApplicationExited(InnerApplicationEvent) - of org.dvb.application.inner.InnerApplicationListener 1327
InnerApplicationListener - of org.dvb.application.inner 1327
INPUT_ALPHA - of org.havi.ui.HKeyboardInputPreferred 941

INPUT_ALPHANUMERIC - of org.havi.ui.HKeyboardInputPreferred 941
INPUT_ANY - of org.havi.ui.HKeyboardInputPreferred 941
INPUT_CUSTOMIZED - of org.havi.ui.HKeyboardInputPreferred 942
INPUT_NUMERIC - of org.havi.ui.HKeyboardInputPreferred 942
insertChar(char) - of org.havi.ui.HSinglelineEntry 1074
InsufficientResourcesException - of org.dvb.dsmcc 645
InsufficientResourcesException() - of org.dvb.dsmcc.InsufficientResourcesException 645
InsufficientResourcesException(String) - of org.dvb.dsmcc.InsufficientResourcesException 645
INTERLACED_DISPLAY - of org.havi.ui.HScreenConfigTemplate 1047
INTERNET_CLIENT - of org.dvb.internet.InternetServiceType 1386
InternetClient - of org.dvb.internet 1376
InternetClientEvent - of org.dvb.internet 1378
InternetClientEvent(Object, URL) - of org.dvb.internet.InternetClientEvent 1378
InternetClientFailureEvent - of org.dvb.internet 1379
InternetClientFailureEvent(Object, URL) - of org.dvb.internet.InternetClientFailureEvent 1379
InternetClientListener - of org.dvb.internet 1380
InternetClientService - of org.dvb.internet 1381
InternetClientSuccessEvent - of org.dvb.internet 1383
InternetClientSuccessEvent(Object, URL) - of org.dvb.internet.InternetClientSuccessEvent 1383
InternetServiceFilter - of org.dvb.internet 1384
InternetServiceFilter(int) - of org.dvb.internet.InternetServiceFilter 1384
InternetServiceType - of org.dvb.internet 1386
InternetServiceType(String) - of org.dvb.internet.InternetServiceType 1386
InvalidAddressException - of org.dvb.dsmcc 646
InvalidAddressException() - of org.dvb.dsmcc.InvalidAddressException 646
InvalidAddressException(String) - of org.dvb.dsmcc.InvalidAddressException 646
InvalidApplicationException - of org.dvb.application.plugins 1332
InvalidApplicationException - of org.dvb.application.storage 1356
InvalidApplicationException() - of org.dvb.application.plugins.InvalidApplicationException 1332
InvalidApplicationException() - of org.dvb.application.storage.InvalidApplicationException 1356
InvalidApplicationException(String) - of org.dvb.application.plugins.InvalidApplicationException 1332
InvalidApplicationException(String) - of org.dvb.application.storage.InvalidApplicationException 1356
InvalidDescriptionFileException - of org.dvb.application.storage 1357
InvalidDescriptionFileException() - of org.dvb.application.storage.InvalidDescriptionFileException 1357
InvalidDescriptionFileException(String) - of org.dvb.application.storage.InvalidDescriptionFileException 1357
InvalidFormatEvent - of org.dvb.dsmcc 647
InvalidFormatEvent(DSMCCObject) - of org.dvb.dsmcc.InvalidFormatEvent 647
InvalidFormatException - of org.dvb.dsmcc 648
InvalidFormatException() - of org.dvb.dsmcc.InvalidFormatException 648
InvalidFormatException(String) - of org.dvb.dsmcc.InvalidFormatException 648
InvalidLocatorException - of org.davic.net 379
InvalidLocatorException() - of org.davic.net.InvalidLocatorException 379
InvalidLocatorException(String) - of org.davic.net.InvalidLocatorException 379
InvalidPathnameEvent - of org.dvb.dsmcc 649
InvalidPathnameEvent(DSMCCObject) - of org.dvb.dsmcc.InvalidPathnameEvent 649
InvalidPathNameException - of org.dvb.dsmcc 650
InvalidPathNameException() - of org.dvb.dsmcc.InvalidPathNameException 650
InvalidPathNameException(String) - of org.dvb.dsmcc.InvalidPathNameException 650
InvocationHandler - of org.dvb.application.plugins 1333
invoke(Object, Method, Object[]) - of org.dvb.application.plugins.InvocationHandler 1333
IPA_EXTENSIONS - of org.havi.ui.HFontCapabilities 890
isAltDown() - of org.dvb.event.UserEvent 464
isAnimated() - of org.havi.ui.HAnimateEffect 816
isAnimated() - of org.havi.ui.HFlatEffectMatte 879

isAnimated() - of org.havi.ui.HImageEffectMatte 930
isAnimated() - of org.havi.ui.HStaticAnimation 1094
isAttached() - of org.dvb.dsmcc.ServiceDomain 674
isAudio() - of org.dvb.dsmcc.DSMCCStream 639
isAvailableInCache() - of org.dvb.si.SIRequest 549
isCharAvailable(Font, char) - of org.havi.ui.HFontCapabilities 894
isConfigSupported(HBackgroundConfiguration) - of org.havi.ui.HBackgroundConfigTemplate 832
isConfigSupported(HGraphicsConfiguration) - of org.havi.ui.HGraphicsConfigTemplate 911
isConfigSupported(HVideoConfiguration) - of org.havi.ui.HVideoConfigTemplate 1165
isConnected() - of org.dvb.net.rc.ConnectionRCInterface 697
isControlDown() - of org.dvb.event.UserEvent 464
isData() - of org.dvb.dsmcc.DSMCCStream 639
isDoubleBuffered() - of org.dvb.application.inner.DVBScene 1318
isDoubleBuffered() - of org.havi.ui.HComponent 844
isDoubleBuffered() - of org.havi.ui.HContainer 854
isDoubleBuffered() - of org.havi.ui.HScene 1027
isEnabled() - of org.havi.ui.HToggleGroup 1154
isEnableShortcuts() - of org.dvb.application.inner.DVBScene 1318
isEnableShortcuts() - of org.havi.ui.HScene 1027
isFocusTraversable() - of org.havi.ui.HVisible 1189
isGrouped() - of org.havi.ui.HContainer 855
isItemSelected(int) - of org.havi.ui.HListGroup 954
isLoaded() - of org.dvb.dsmcc.DSMCCObject 634
isMetaDown() - of org.dvb.event.UserEvent 464
isMPEGProgram() - of org.dvb.dsmcc.DSMCCStream 639
isNetworkConnectionAvailable() - of org.dvb.dsmcc.ServiceDomain 674
isObjectKindKnown() - of org.dvb.dsmcc.DSMCCObject 634
isOpaque() - of org.dvb.application.inner.DVBScene 1318
isOpaque() - of org.dvb.ui.TestOpacity 787
isOpaque() - of org.havi.ui.HComponent 844
isOpaque() - of org.havi.ui.HContainer 855
isOpaque() - of org.havi.ui.HScene 1027
isOpaque() - of org.havi.ui.HVisible 1189
isOpaque(HVisible) - of org.havi.ui.HAnimateLook 821
isOpaque(HVisible) - of org.havi.ui.HGraphicLook 907
isOpaque(HVisible) - of org.havi.ui.HListGroupLook 965
isOpaque(HVisible) - of org.havi.ui.HLook 971
isOpaque(HVisible) - of org.havi.ui.HMultilineEntryLook 985
isOpaque(HVisible) - of org.havi.ui.HRangeLook 1009
isOpaque(HVisible) - of org.havi.ui.HSinglelineEntryLook 1082
isOpaque(HVisible) - of org.havi.ui.HTextLook 1138
isPanAndScan() - of org.dvb.media.VideoTransformation 615
isProxyClass(Class) - of org.dvb.application.plugins.Proxy 1339
isSelected() - of org.dvb.application.inner.InnerApplicationContainer 1323
isSelected() - of org.havi.ui.HAnimation 827
isSelected() - of org.havi.ui.HGraphicButton 899
isSelected() - of org.havi.ui.HIcon 925
isSelected() - of org.havi.ui.HListGroup 955
isSelected() - of org.havi.ui.HNavigable 989
isSelected() - of org.havi.ui.HRange 1002
isSelected() - of org.havi.ui.HRangeValue 1016
isSelected() - of org.havi.ui.HSinglelineEntry 1074
isSelected() - of org.havi.ui.HText 1120
isSelected() - of org.havi.ui.HTextButton 1128
isSelected() - of org.havi.ui.HToggleButton 1148

isShiftDown() - of org.dvb.event.UserEvent 464
isStartable() - of org.dvb.application.AppAttributes 716
isStream() - of org.dvb.dsmcc.DSMCCObject 634
isStreamEvent() - of org.dvb.dsmcc.DSMCCObject 634
isSupported() - of org.havi.ui.event.HEventRepresentation 1211
isSupported(AppAttributes) - of org.dvb.application.plugins.Plugin 1335
isSupported(int) - of org.havi.ui.event.HKeyCapabilities 1222
isSupported(int) - of org.havi.ui.event.HRcCapabilities 1228
isTemporary() - of org.havi.ui.event.HFocusEvent 1215
isVideo() - of org.dvb.dsmcc.DSMCCStream 639
isVisible() - of org.dvb.application.inner.DVBScene 1318
isVisible() - of org.havi.ui.HScene 1028
ITEM_CLEARED - of org.havi.ui.event.HItemEvent 1217
ITEM_END_CHANGE - of org.havi.ui.event.HItemEvent 1217
ITEM_FIRST - of org.havi.ui.event.HItemEvent 1218
ITEM_LAST - of org.havi.ui.event.HItemEvent 1218
ITEM_NOT_FOUND - of org.havi.ui.HListGroup 949
ITEM_SELECTED - of org.havi.ui.event.HItemEvent 1218
ITEM_SELECTION_CLEARED - of org.havi.ui.event.HItemEvent 1218
ITEM_SET_CURRENT - of org.havi.ui.event.HItemEvent 1218
ITEM_SET_NEXT - of org.havi.ui.event.HItemEvent 1218
ITEM_SET_PREVIOUS - of org.havi.ui.event.HItemEvent 1218
ITEM_START_CHANGE - of org.havi.ui.event.HItemEvent 1218
ITEM_TOGGLE_SELECTED - of org.havi.ui.event.HItemEvent 1219
ITEM_VALUE_CHANGE - of org.havi.ui.HVisible 1181
IxcRegistry - of org.dvb.io.ixc 1263
KANNADA - of org.havi.ui.HFontCapabilities 890
KATAKANA - of org.havi.ui.HFontCapabilities 890
keyPressed(KeyEvent) - of org.havi.ui.HEventMulticaster 870
keyReleased(KeyEvent) - of org.havi.ui.HEventMulticaster 871
keyTyped(KeyEvent) - of org.havi.ui.HEventMulticaster 871
LanguageNotAvailableException - of org.dvb.application 745
LanguageNotAvailableException() - of org.dvb.application.LanguageNotAvailableException 745
LanguageNotAvailableException(String) - of org.dvb.application.LanguageNotAvailableException 745
LAO - of org.havi.ui.HFontCapabilities 890
LARGEST_PIXEL_DIMENSION - of org.havi.ui.HSceneTemplate 1038
LAST_CHANGE - of org.havi.ui.HVisible 1181
LAST_STATE - of org.havi.ui.HState 1090
LATIN_1_SUPPLEMENT - of org.havi.ui.HFontCapabilities 890
LATIN_EXTENDED_A - of org.havi.ui.HFontCapabilities 890
LATIN_EXTENDED_ADDITIONAL - of org.havi.ui.HFontCapabilities 890
LATIN_EXTENDED_B - of org.havi.ui.HFontCapabilities 891
LETTERLIKE_SYMBOLS - of org.havi.ui.HFontCapabilities 891
LINE_ART - of org.havi.ui.HImageHints 933
LINE_ORIENTATION_HORIZONTAL - of org.dvb.ui.DVBTextLayoutManager 776
LINE_ORIENTATION_VERTICAL - of org.dvb.ui.DVBTextLayoutManager 777
LINKAGE - of org.dvb.si.DescriptorTag 497
list(XletContext) - of org.dvb.io.ixc.IxcRegistry 1264
LIST_CONTENT_CHANGE - of org.havi.ui.HVisible 1181
LIST_ICONSIZE_CHANGE - of org.havi.ui.HVisible 1181
LIST_LABELSIZE_CHANGE - of org.havi.ui.HVisible 1181
LIST_MULTISELECTION_CHANGE - of org.havi.ui.HVisible 1182
LIST_SCROLLPOSITION_CHANGE - of org.havi.ui.HVisible 1182
load() - of org.dvb.application.DVBJProxy 742
load(HBackgroundImageListener) - of org.havi.ui.HBackgroundImage 841

load(String) - of org.havi.ui.HSound 1084
load(URL) - of org.havi.ui.HSound 1085
loadDirectoryEntry(AsynchronousLoadingEventListener) - of org.dvb.dsmcc.DSMCCObject 634
LOADED - of org.dvb.application.DVBJProxy 742
LoadingAbortedEvent - of org.dvb.dsmcc 651
LoadingAbortedEvent(DSMCCObject) - of org.dvb.dsmcc.LoadingAbortedEvent 651
LOCAL_TIME_OFFSET - of org.dvb.si.DescriptorTag 497
log(String, int) - of org.dvb.test.DVBTest 1256
log(String, String) - of org.dvb.test.DVBTest 1256
lookup(XletContext, String) - of org.dvb.io.ixc.IxcRegistry 1264
loop() - of org.havi.ui.HSound 1085
MALAYALAM - of org.havi.ui.HFontCapabilities 891
MATHEMATICAL_OPERATORS - of org.havi.ui.HFontCapabilities 891
MATTE_SUPPORT - of org.havi.ui.HGraphicsConfigTemplate 909
MHP_APPLICATION - of org.dvb.si.SIServiceType 561
MIN_MAX_CHANGE - of org.havi.ui.HVisible 1182
MISCELLANEOUS_SYMBOLS - of org.havi.ui.HFontCapabilities 891
MISCELLANEOUS_TECHNICAL - of org.havi.ui.HFontCapabilities 891
MMIObject - of org.davic.net.ca 384
MOSAIC - of org.dvb.si.DescriptorTag 497
MOSAIC - of org.dvb.si.SIServiceType 562
MPEG1_AUDIO - of org.dvb.si.PMTStreamType 504
MPEG1_VIDEO - of org.dvb.si.PMTStreamType 504
MPEG2_AUDIO - of org.dvb.si.PMTStreamType 504
MPEG2_VIDEO - of org.dvb.si.PMTStreamType 504
MPEGDeliveryErrorEvent - of org.dvb.dsmcc 652
MPEGDeliveryErrorEvent(DSMCCObject) - of org.dvb.dsmcc.MPEGDeliveryErrorEvent 652
MPEGDeliveryException - of org.dvb.dsmcc 653
MPEGDeliveryException() - of org.dvb.dsmcc.MPEGDeliveryException 653
MPEGDeliveryException(String) - of org.dvb.dsmcc.MPEGDeliveryException 653
MULTILINGUAL_BOUQUET_NAME - of org.dvb.si.DescriptorTag 497
MULTILINGUAL_COMPONENT - of org.dvb.si.DescriptorTag 497
MULTILINGUAL_NETWORK_NAME - of org.dvb.si.DescriptorTag 497
MULTILINGUAL_SERVICE_NAME - of org.dvb.si.DescriptorTag 497
MultipleDocumentsAction - of org.dvb.dom.bootstrap 1310
NATURAL_IMAGE - of org.havi.ui.HImageHints 934
NETWORK - of org.dvb.si.SIMonitoringType 542
NETWORK_NAME - of org.dvb.si.DescriptorTag 498
NEW_DATABASE - of org.dvb.application.AppsDatabaseEvent 732
newDatabase(AppsDatabaseEvent) - of org.dvb.application.AppsDatabaseEventListener 734
newInstance(URL[]) - of org.dvb.lang.DVBClassLoader 452
newInstance(URL[], ClassLoader) - of org.dvb.lang.DVBClassLoader 452
newProxyInstance(ClassLoader, Class[], InvocationHandler) - of org.dvb.application.plugins.Proxy 1339
NEWS_CLIENT - of org.dvb.internet.InternetServiceFilter 1384
NO_BACKGROUND_FILL - of org.havi.ui.HScene 1023
NO_BACKGROUND_FILL - of org.havi.ui.HVisible 1182
NO_DEFAULT_HEIGHT - of org.havi.ui.HVisible 1182
NO_DEFAULT_SIZE - of org.havi.ui.HVisible 1182
NO_DEFAULT_WIDTH - of org.havi.ui.HVisible 1182
NO_TRANSFER_ID - of org.havi.ui.event.HFocusEvent 1214
NoComponentSelectedEvent - of org.dvb.media 588
NoComponentSelectedEvent(Controller) - of org.dvb.media.NoComponentSelectedEvent 588
NoComponentSelectedEvent(Controller, MediaLocator) - of org.dvb.media.NoComponentSelectedEvent 588
NoFreeCapacityException - of org.davic.net.ca 383
NoFreeCapacityException() - of org.davic.net.ca.NoFreeCapacityException 383

NoFreeCapacityException(String) - of org.davic.net.ca.NoFreeCapacityException 383
NORMAL_STATE - of org.havi.ui.HState 1090
NOT_CONTRIBUTING - of org.havi.ui.HVideoDevice 1168
NOT_LOADED - of org.dvb.application.AppProxy 721
NOT_RUNNING - of org.dvb.si.SIRunningStatus 554
NotAuthorizedException - of org.davic.mpeg 374
NotAuthorizedException() - of org.davic.mpeg.NotAuthorizedException 374
NotAuthorizedException(String) - of org.davic.mpeg.NotAuthorizedException 374
NotAuthorizedMediaException(ElementaryStream[], int[]) - of org.davic.media.NotAuthorizedMediaException 378
NotAuthorizedMediaException(Service, int) - of org.davic.media.NotAuthorizedMediaException 378
NotEnoughResourcesException - of org.dvb.application.storage 1358
NotEnoughResourcesException() - of org.dvb.application.storage.NotEnoughResourcesException 1358
NotEnoughResourcesException(String) - of org.dvb.application.storage.NotEnoughResourcesException 1358
NotEntitledEvent - of org.dvb.dsmcc 654
NotEntitledEvent(DSMCCObject) - of org.dvb.dsmcc.NotEntitledEvent 654
NotEntitledException - of org.dvb.dsmcc 655
NotEntitledException() - of org.dvb.dsmcc.NotEntitledException 655
NotEntitledException(String) - of org.dvb.dsmcc.NotEntitledException 655
NothingToAbortException - of org.dvb.dsmcc 656
NothingToAbortException() - of org.dvb.dsmcc.NothingToAbortException 656
NothingToAbortException(String) - of org.dvb.dsmcc.NothingToAbortException 656
notifyTextOverflow(String, HVisible, boolean, boolean) - com.nokia.mhp.ui.TextOverflowListener.notifyTextOverflow(java.lang.String, org.havi.ui.HVisible, boolean, boolean) 430
notifyTextOverflow(String, HVisible, boolean, boolean) - of org.dvb.ui.TextOverflowListener 788
NotLoadedException - of org.dvb.dsmcc 657
NotLoadedException() - of org.dvb.dsmcc.NotLoadedException 657
NotLoadedException(String) - of org.dvb.dsmcc.NotLoadedException 657
NPTDiscontinuityEvent - of org.dvb.dsmcc 658
NPTDiscontinuityEvent(DSMCCStream, long, long) - of org.dvb.dsmcc.NPTDiscontinuityEvent 658
NPTListener - of org.dvb.dsmcc 660
NPTPresentEvent - of org.dvb.dsmcc 661
NPTPresentEvent(DSMCCStream) - of org.dvb.dsmcc.NPTPresentEvent 661
NPTRate - of org.dvb.dsmcc 662
NPTRateChangeEvent - of org.dvb.dsmcc 663
NPTRateChangeEvent(DSMCCStream, NPTRate) - of org.dvb.dsmcc.NPTRateChangeEvent 663
NPTRemovedEvent - of org.dvb.dsmcc 664
NPTRemovedEvent(DSMCCStream) - of org.dvb.dsmcc.NPTRemovedEvent 664
NPTStatusEvent - of org.dvb.dsmcc 665
NPTStatusEvent(DSMCCStream) - of org.dvb.dsmcc.NPTStatusEvent 665
NTSC - of org.dvb.si.SIServiceType 562
NUMBER_FORMS - of org.havi.ui.HFontCapabilities 891
numberOfRemainingObjects() - of org.dvb.si.SIIterator 536

Numer-

NVOD_REFERENCE - of org.dvb.si.DescriptorTag 498
NVOD_REFERENCE - of org.dvb.si.SIServiceType 562
NVOD_TIME_SHIFTED - of org.dvb.si.SIServiceType 562
ObjectChangeEvent - of org.dvb.dsmcc 666
ObjectChangeEvent(DSMCCObject, int) - of org.dvb.dsmcc.ObjectChangeEvent 666
ObjectChangeEventListener - of org.dvb.dsmcc 668
OPTICAL_CHARACTER_RECOGNITION - of org.havi.ui.HFontCapabilities 891
OPTION_UNSUPPORTED - of org.dvb.test.DVBTest 1255
org.davic.net - package 379

org.dvb.application - package 712
org.dvb.application.inner - package 1315
org.dvb.application.plugins - package 1329
org.dvb.application.storage - package 1348
org.dvb.dom.bootstrap - package 1306
org.dvb.dom.inner - package 1311
org.dvb.dsmcc - package 626
org.dvb.event - package 456
org.dvb.internet - package 1366
org.dvb.io.ixc - package 1262
org.dvb.io.persistent - package 470
org.dvb.lang - package 450
org.dvb.media - package 575
org.dvb.net - package 686
org.dvb.net.ca - package 747
org.dvb.net.rc - package 689
org.dvb.net.tuning - package 750
org.dvb.si - package 491
org.dvb.smartcard - package 1397
org.dvb.test - package 1253
org.dvb.ui - package 754
org.dvb.user - package 478
org.havi.ui - package 795
org.havi.ui.event - package 1194
ORIENT_BOTTOM_TO_TOP - of org.havi.ui.HOrientable 995
ORIENT_LEFT_TO_RIGHT - of org.havi.ui.HOrientable 995
ORIENT_RIGHT_TO_LEFT - of org.havi.ui.HOrientable 995
ORIENT_TOP_TO_BOTTOM - of org.havi.ui.HOrientable 995
ORIENTATION_CHANGE - of org.havi.ui.HVisible 1183
ORIYA - of org.havi.ui.HFontCapabilities 892
OverallRepository - of org.dvb.event 460
OverallRepository() - of org.dvb.event.OverallRepository 460
paint(Graphics) - of org.havi.ui.HScene 1028
paint(Graphics) - of org.havi.ui.HVisible 1189
PAL - of org.dvb.si.SIServiceType 562
PARENTAL_RATING - of org.dvb.si.DescriptorTag 498
PARTIAL_TRANSPORT_STREAM - of org.dvb.si.DescriptorTag 498
PASS - of org.dvb.test.DVBTest 1255
pause() - of org.dvb.application.AppProxy 722
PAUSED - of org.dvb.application.AppProxy 722
PAUSING - of org.dvb.si.SIRunningStatus 554
performAction(DocumentAction) - of org.dvb.dom.bootstrap.DocumentFactory 1308
performAction(DocumentAction) - of org.dvb.dom.inner.HTMLInnerApplicationContainer 1313
performActionOnFrames(String[], MultipleDocumentsAction) - of org.dvb.dom.bootstrap.DocumentFactory 1308
performActionReadOnly(DocumentAction) - of org.dvb.dom.bootstrap.DocumentFactory 1309
PermissionDeniedEvent - of org.dvb.internet 1387
PermissionDeniedEvent(Object, URL) - of org.dvb.internet.PermissionDeniedEvent 1387
PermissionDeniedException - of org.dvb.net.rc 702
PermissionDeniedException() - of org.dvb.net.rc.PermissionDeniedException 702
PermissionDeniedException(String) - of org.dvb.net.rc.PermissionDeniedException 702
PIXEL_ASPECT_RATIO - of org.havi.ui.HScreenConfigTemplate 1047
PIXEL_RESOLUTION - of org.havi.ui.HScreenConfigTemplate 1047
play() - of org.havi.ui.HSound 1085
PLAY_ALTERNATING - of org.havi.ui.HAnimateEffect 814

PLAY_REPEATING - of org.havi.ui.HAnimateEffect 814
Plugin - of org.dvb.application.plugins 1334
PMT_SERVICE - of org.dvb.si.SIMonitoringType 542
PMTElementaryStream - of org.dvb.si 500
PMTService - of org.dvb.si 502
PMTStreamType - of org.dvb.si 504
pop(Component) - of org.havi.ui.HComponentOrdering 847
pop(Component) - of org.havi.ui.HContainer 855
pop(Component) - of org.havi.ui.HScene 1028
popInFrontOf(Component, Component) - of org.havi.ui.HComponentOrdering 847
popInFrontOf(Component, Component) - of org.havi.ui.HContainer 856
popInFrontOf(Component, Component) - of org.havi.ui.HScene 1028
popToFront(Component) - of org.havi.ui.HComponentOrdering 847
popToFront(Component) - of org.havi.ui.HContainer 856
popToFront(Component) - of org.havi.ui.HScene 1029
POS_CAP_FULL - of org.dvb.media.VideoPresentationControl 609
POS_CAP_FULL_EVEN_LINES - of org.dvb.media.VideoPresentationControl 609
POS_CAP_FULL_EVEN_LINES_IF_ENTIRE_VIDEO_ON_SCREEN - of org.dvb.media.VideoPresentationControl 609
POS_CAP_FULL_IF_ENTIRE_VIDEO_ON_SCREEN - of org.dvb.media.VideoPresentationControl 610
POS_CAP_OTHER - of org.dvb.media.VideoPresentationControl 610
postMonitoringEvent(SIMonitoringEvent) - of org.dvb.si.SIMonitoringListener 541
postRetrievalEvent(SIRetrievalEvent) - of org.dvb.si.SIRetrievalListener 553
Preference - of org.dvb.user 481
Preference() - of org.dvb.user.Preference 481
Preference(String, String) - of org.dvb.user.Preference 481
Preference(String, String[]) - of org.dvb.user.Preference 481
PREFERRED - of org.havi.ui.HSceneTemplate 1038
PREFERRED - of org.havi.ui.HScreenConfigTemplate 1047
PREFERRED_NOT - of org.havi.ui.HScreenConfigTemplate 1048
prefetch() - of org.dvb.application.DVBHTMLProxy 740
prefetch(DSMCCObject, String, byte) - of org.dvb.dsmcc.DSMCCObject 634
prefetch(String, byte) - of org.dvb.dsmcc.DSMCCObject 635
PRESENT_FOLLOWING_EVENT - of org.dvb.si.SIMonitoringType 542
PresentationChangedEvent - of org.dvb.media 590
PresentationChangedEvent(Controller, MediaLocator, int) - of org.dvb.media.PresentationChangedEvent 591
printStackTrace() - of org.dvb.application.plugins.UndeclaredThrowableException 1342
printStackTrace(PrintStream) - of org.dvb.application.plugins.UndeclaredThrowableException 1342
printStackTrace(PrintWriter) - of org.dvb.application.plugins.UndeclaredThrowableException 1342
PRIORITY_HIGH - of org.dvb.io.persistent.FileAttributes 473
PRIORITY_LOW - of org.dvb.io.persistent.FileAttributes 473
PRIORITY_MEDIUM - of org.dvb.io.persistent.FileAttributes 473
PRIVATE_DATA_SPECIFIER - of org.dvb.si.DescriptorTag 498
PRIVATE_USE_AREA - of org.havi.ui.HFontCapabilities 892
processEvent(AWTEvent) - of org.havi.ui.HComponent 845
processHActionEvent(HActionEvent) - of org.havi.ui.HActionInputPreferred 804
processHActionEvent(HActionEvent) - of org.havi.ui.HGraphicButton 900
processHActionEvent(HActionEvent) - of org.havi.ui.HTextButton 1128
processHActionEvent(HActionEvent) - of org.havi.ui.HToggleButton 1148
processHAdjustmentEvent(HAdjustmentEvent) - of org.havi.ui.HAdjustmentInputPreferred 808
processHAdjustmentEvent(HAdjustmentEvent) - of org.havi.ui.HRangeValue 1016
processHFocusEvent(HFocusEvent) - of org.dvb.application.inner.InnerApplicationContainer 1323
processHFocusEvent(HFocusEvent) - of org.havi.ui.HAnimation 827
processHFocusEvent(HFocusEvent) - of org.havi.ui.HGraphicButton 900
processHFocusEvent(HFocusEvent) - of org.havi.ui.HIcon 925

processHFocusEvent(HFocusEvent) - of org.havi.ui.HListGroup 955
processHFocusEvent(HFocusEvent) - of org.havi.ui.HNavigationInputPreferred 993
processHFocusEvent(HFocusEvent) - of org.havi.ui.HRange 1003
processHFocusEvent(HFocusEvent) - of org.havi.ui.HRangeValue 1016
processHFocusEvent(HFocusEvent) - of org.havi.ui.HSinglelineEntry 1074
processHFocusEvent(HFocusEvent) - of org.havi.ui.HText 1121
processHFocusEvent(HFocusEvent) - of org.havi.ui.HTextButton 1128
processHFocusEvent(HFocusEvent) - of org.havi.ui.HToggleButton 1149
processHItemEvent(HItemEvent) - of org.havi.ui.HListGroup 955
processHItemEvent(HItemEvent) - of org.havi.ui.HSelectionInputPreferred 1065
processHKeyEvent(HKeyEvent) - of org.havi.ui.HKeyboardInputPreferred 943
processHKeyEvent(HKeyEvent) - of org.havi.ui.HSinglelineEntry 1074
processHTextEvent(HTextEvent) - of org.havi.ui.HKeyboardInputPreferred 943
processHTextEvent(HTextEvent) - of org.havi.ui.HSinglelineEntry 1074
processWindowEvent(WindowEvent) - of org.havi.ui.HScene 1029
prompt(String, int, String) - of org.dvb.test.DVBTest 1258
Proxy - of org.dvb.application.plugins 1336
Proxy(InvocationHandler) - of org.dvb.application.plugins.Proxy 1338
push(Component) - of org.havi.ui.HComponentOrdering 848
push(Component) - of org.havi.ui.HContainer 856
push(Component) - of org.havi.ui.HScene 1029
pushBehind(Component, Component) - of org.havi.ui.HComponentOrdering 848
pushBehind(Component, Component) - of org.havi.ui.HContainer 857
pushBehind(Component, Component) - of org.havi.ui.HScene 1030
pushToBack(Component) - of org.havi.ui.HComponentOrdering 848
pushToBack(Component) - of org.havi.ui.HContainer 857
pushToBack(Component) - of org.havi.ui.HScene 1030
RC_FIRST - of org.havi.ui.event.HRcEvent 1230
RC_LAST - of org.havi.ui.event.HRcEvent 1230
RCInterface - of org.dvb.net.rc 703
RCInterfaceManager - of org.dvb.net.rc 705
RCInterfaceReleasedEvent - of org.dvb.net.rc 707
RCInterfaceReleasedEvent(Object) - of org.dvb.net.rc.RCInterfaceReleasedEvent 707
RCInterfaceReservedEvent - of org.dvb.net.rc 708
RCInterfaceReservedEvent(Object) - of org.dvb.net.rc.RCInterfaceReservedEvent 708
RCPermission - of org.dvb.net.rc 709
RCPermission(String) - of org.dvb.net.rc.RCPermission 709
RCPermission(String, String) - of org.dvb.net.rc.RCPermission 710
read(Preference) - of org.dvb.user.UserPreferenceManager 487
read(Preference, Facility) - of org.dvb.user.UserPreferenceManager 487
rebind(XletContext, String, Remote) - of org.dvb.io.ixc.IxcRegistry 1265
rebind(XletContext, String, Remote, boolean) - of org.dvb.io.ixc.IxcRegistry 1265
receiveEvent(AsynchronousLoadingEvent) - of org.dvb.dsmcc.AsynchronousLoadingEventListener 629
ReceiveInternetClientEvent(InternetClientEvent) - of org.dvb.internet.InternetClientListener 1380
receiveNPTStatusEvent(NPTStatusEvent) - of org.dvb.dsmcc.NPTListener 660
receiveObjectChangeEvent(ObjectChangeEvent) - of org.dvb.dsmcc.ObjectChangeEventListener 668
receiveRateChangedEvent(NPTRateChangeEvent) - of org.dvb.dsmcc.NPTListener 660
receiveStreamEvent(StreamEvent) - of org.dvb.dsmcc.StreamEventListener 682
receiveUserPreferenceChangeEvent(UserPreferenceChangeEvent) - of org.dvb.user.UserPreferenceChange-Listener 486
receiveVideoFormatEvent(VideoFormatEvent) - of org.dvb.media.VideoFormatListener 608
register(Plugin, XletContext) - of org.dvb.application.plugins.XletSystemCall 1345
release() - of org.dvb.net.rc.ConnectionRCInterface 698
releaseDevice() - of org.havi.ui.HScreenDevice 1056
remove(EventListener) - of org.havi.ui.HEventMulticaster 871

remove(HActionListener, HActionListener) - of org.havi.ui.HEventMulticaster 871
remove(HAdjustmentListener, HAdjustmentListener) - of org.havi.ui.HEventMulticaster 871
remove(HBackgroundImageListener, HBackgroundImageListener) - of org.havi.ui.HEventMulticaster 872
remove(HFocusListener, HFocusListener) - of org.havi.ui.HEventMulticaster 872
remove(HItemListener, HItemListener) - of org.havi.ui.HEventMulticaster 872
remove(HKeyListener, HKeyListener) - of org.havi.ui.HEventMulticaster 872
remove(HScreenConfigurationListener, HScreenConfigurationListener) - of org.havi.ui.HEventMulticaster 872
remove(HScreenLocationModifiedListener, HScreenLocationModifiedListener) - of org.havi.ui.HEventMulticaster 873
remove(HTextListener, HTextListener) - of org.havi.ui.HEventMulticaster 873
remove(HToggleButton) - of org.havi.ui.HToggleGroup 1155
remove(ResourceStatusListener, ResourceStatusListener) - of org.havi.ui.HEventMulticaster 873
remove(String) - of org.dvb.user.Preference 483
remove(WindowListener, WindowListener) - of org.havi.ui.HEventMulticaster 873
removeAdjustmentListener(HAdjustmentListener) - of org.havi.ui.HAdjustmentValue 812
removeAdjustmentListener(HAdjustmentListener) - of org.havi.ui.HRangeValue 1016
removeAll() - of org.dvb.user.Preference 483
removeAllArrowKeys() - of org.dvb.event.UserEventRepository 467
removeAllColourKeys() - of org.dvb.event.UserEventRepository 468
removeAllItems() - of org.havi.ui.HListGroup 955
removeAllNumericKeys() - of org.dvb.event.UserEventRepository 468
removeAppStateChangeEventListener(AppStateChangeEventListener) - of org.dvb.application.AppProxy 722
removeBouquetMonitoringListener(SIMonitoringListener, int) - of org.dvb.si.SIDatabase 513
removeConnectionListener(ConnectionListener) - of org.dvb.net.rc.ConnectionRCInterface 698
removeEventPresentFollowingMonitoringListener(SIMonitoringListener, int, int, int) - of org.dvb.si.SIDatabase 513
removeEventScheduleMonitoringListener(SIMonitoringListener, int, int, int) - of org.dvb.si.SIDatabase 513
removeExclusiveAccessToAWTEvent(ResourceClient) - of org.dvb.event.EventManager 459
removeHActionListener(HActionListener) - of org.havi.ui.HActionable 802
removeHActionListener(HActionListener) - of org.havi.ui.HGraphicButton 900
removeHActionListener(HActionListener) - of org.havi.ui.HTextButton 1129
removeHActionListener(HActionListener) - of org.havi.ui.HToggleButton 1149
removeInnerApplicationListener(InnerApplicationListener) - of org.dvb.application.inner.InnerApplicationContainer 1323
removeInternal(EventListener, EventListener) - of org.havi.ui.HEventMulticaster 873
removeInternetClientListener(InternetClientListener) - of org.dvb.internet.InternetClient 1377
removeItem(int) - of org.havi.ui.HListGroup 955
removeItemListener(HItemListener) - of org.havi.ui.HItemValue 940
removeItemListener(HItemListener) - of org.havi.ui.HListGroup 956
removeKey(int) - of org.dvb.event.UserEventRepository 468
removeListener(AppsDatabaseEventListener) - of org.dvb.application.AppsDatabase 730
removeNetworkMonitoringListener(SIMonitoringListener, int) - of org.dvb.si.SIDatabase 514
removeNPTListener(NPTListener) - of org.dvb.dsmcc.DSMCCStream 640
removeObjectChangeEventListener(ObjectChangeEventListener) - of org.dvb.dsmcc.DSMCCObject 635
removeOnScreenLocationModifiedListener(HScreenLocationModifiedListener) - of org.havi.ui.HVideoComponent 1162
removePMTServiceMonitoringListener(SIMonitoringListener, int, int, int) - of org.dvb.si.SIDatabase 514
removeResourceStatusEventListener(ResourceStatusListener) - of org.dvb.event.EventManager 459
removeResourceStatusEventListener(ResourceStatusListener) - of org.dvb.net.rc.RCInterfaceManager 706
removeResourceStatusEventListener(ResourceStatusListener) - of org.havi.ui.HScreenDevice 1056
removeScreenConfigurationListener(HScreenConfigurationListener) - of org.havi.ui.HScreenDevice 1056
removeService() - of org.dvb.application.storage.StoredApplicationService 1362
removeServiceMonitoringListener(SIMonitoringListener, int, int) - of org.dvb.si.SIDatabase 514

removeShortcut(int) - of org.dvb.application.inner.DVBScene 1318
removeShortcut(int) - of org.havi.ui.HScene 1030
removeSubtitleListener(SubtitleListener) - of org.dvb.media.SubtitlingEventControl 601
removeTextOverflowListener(TextOverflowListener) - of org.dvb.ui.DVBTextLayoutManager 780
removeToggleGroup() - of org.havi.ui.HToggleButton 1149
removeUserEvent(UserEvent) - of org.dvb.event.UserEventRepository 468
removeUserEventListener(UserEventListener) - of org.dvb.event.EventManager 459
removeUserPreferenceChangeListener(UserPreferenceChangeListener) - of org.dvb.user.UserPreferenceManager 488
removeVideoFormatListener(VideoFormatListener) - of org.dvb.media.VideoFormatControl 606
removeWindowListener(WindowListener) - of org.dvb.application.inner.DVBScene 1319
removeWindowListener(WindowListener) - of org.havi.ui.HScene 1030
render(String, Graphics, HVisible, Insets) - of org.dvb.ui.DVBTextLayoutManager 780
render(String, Graphics, HVisible, Insets) - of org.havi.ui.HDefaultTextLayoutManager 860
render(String, Graphics, HVisible, Insets) - of org.havi.ui.HTextLayoutManager 1134
REPEAT_INFINITE - of org.havi.ui.HAnimateEffect 815
report(HScreenConfigurationEvent) - of org.havi.ui.event.HScreenConfigurationListener 1239
report(HScreenConfigurationEvent) - of org.havi.ui.HEventMulticaster 874
report(HScreenLocationModifiedEvent) - of org.havi.ui.event.HScreenLocationModifiedListener 1244
report(HScreenLocationModifiedEvent) - of org.havi.ui.HEventMulticaster 874
RepositoryDescriptor - of org.dvb.event 461
REQUIRED - of org.havi.ui.HSceneTemplate 1038
REQUIRED - of org.havi.ui.HScreenConfigTemplate 1048
REQUIRED_NOT - of org.havi.ui.HScreenConfigTemplate 1048
reserve(ResourceClient, Object) - of org.dvb.net.rc.ConnectionRCInterface 698
reserveDevice(ResourceClient) - of org.havi.ui.HScreenDevice 1057
RESIZE_ARBITRARY - of org.havi.ui.HVisible 1183
RESIZE_NONE - of org.havi.ui.HVisible 1183
RESIZE_PRESERVE_ASPECT - of org.havi.ui.HVisible 1183
resizeScene(HScene, HSceneTemplate) - of org.havi.ui.HSceneFactory 1036
resume() - of org.dvb.application.AppProxy 723
retrieveActualSINetwork(short, Object, SIRetrievalListener, short[]) - of org.dvb.si.SIDatabase 515
retrieveActualSIServices(short, Object, SIRetrievalListener, short[]) - of org.dvb.si.SIDatabase 515
retrieveActualSITransportStream(short, Object, SIRetrievalListener, short[]) - of org.dvb.si.SIDatabase 516
retrieveDescriptors(short, Object, SIRetrievalListener) - of org.dvb.si.SIBouquet 506
retrieveDescriptors(short, Object, SIRetrievalListener) - of org.dvb.si.SIInformation 533
retrieveDescriptors(short, Object, SIRetrievalListener) - of org.dvb.si.SINetwork 544
retrieveDescriptors(short, Object, SIRetrievalListener, short[]) - of org.dvb.si.SIBouquet 507
retrieveDescriptors(short, Object, SIRetrievalListener, short[]) - of org.dvb.si.SIInformation 533
retrieveDescriptors(short, Object, SIRetrievalListener, short[]) - of org.dvb.si.SINetwork 544
retrieveDetails(SIRequestor) - of org.dvb.application.storage.StoredApplicationService 1362
retrieveDetails(SIRequestor) - of org.dvb.internet.InternetClientService 1382
retrieveFollowingSIEvent(short, Object, SIRetrievalListener, short[]) - of org.dvb.si.SIService 557
retrievePMTElementaryStreams(short, Object, SIRetrievalListener, DvbLocator, short[]) - of org.dvb.si.SIDatabase 517
retrievePMTElementaryStreams(short, Object, SIRetrievalListener, int, int, short[]) - of org.dvb.si.SIDatabase 517
retrievePMTElementaryStreams(short, Object, SIRetrievalListener, short[]) - of org.dvb.si.PMTService 503
retrievePMTService(short, Object, SIRetrievalListener, DvbLocator, short[]) - of org.dvb.si.SIDatabase 518
retrievePMTService(short, Object, SIRetrievalListener, short[]) - of org.dvb.si.SIService 558
retrievePMTServices(short, Object, SIRetrievalListener, int, short[]) - of org.dvb.si.SIDatabase 519
retrievePresentSIEvent(short, Object, SIRetrievalListener, short[]) - of org.dvb.si.SIService 559
retrieveScheduledSIEvents(short, Object, SIRetrievalListener, short[], Date, Date) - of org.dvb.si.SIService 559
retrieveSIBouquets(short, Object, SIRetrievalListener, int, short[]) - of org.dvb.si.SIDatabase 520

retrieveSIBouquetTransportStreams(short, Object, SIRetrievalListener, short[]) - of org.dvb.si.SIBouquet 507
retrieveSINetworks(short, Object, SIRetrievalListener, int, short[]) - of org.dvb.si.SIDatabase 520
retrieveSIService(short, Object, SIRetrievalListener, DvbLocator, short[]) - of org.dvb.si.SIDatabase 521
retrieveSIService(short, Object, SIRetrievalListener, short[]) - of org.dvb.si.SIEvent 527
retrieveSIServices(short, Object, SIRetrievalListener, int, int, int, short[]) - of org.dvb.si.SIDatabase 522
retrieveSIServices(short, Object, SIRetrievalListener, short[]) - of org.dvb.si.SITransportStream 568
retrieveSITimeFromTDT(short, Object, SIRetrievalListener) - of org.dvb.si.SIDatabase 523
retrieveSITimeFromTOT(short, Object, SIRetrievalListener, short[]) - of org.dvb.si.SIDatabase 523
retrieveSITransportStreamDescription(short, Object, SIRetrievalListener, short[]) - of org.dvb.si.SIDatabase 524
retrieveSITransportStreams(short, Object, SIRetrievalListener, short[]) - of org.dvb.si.SINetwork 545
run(Document) - of org.dvb.dom.bootstrap.DocumentAction 1307
run(Document[]) - of org.dvb.dom.bootstrap.MultipleDocumentsAction 1310
RUNNING - of org.dvb.si.SIRunningStatus 554
SATELLITE_DELIVERY_SYSTEM - of org.dvb.si.DescriptorTag 498
SCENE_PIXEL_DIMENSION - of org.havi.ui.HSceneTemplate 1038
SCENE_PIXEL_LOCATION - of org.havi.ui.HSceneTemplate 1039
SCENE_SCREEN_DIMENSION - of org.havi.ui.HSceneTemplate 1039
SCENE_SCREEN_LOCATION - of org.havi.ui.HSceneTemplate 1039
SCHEDULED_EVENT - of org.dvb.si.SIMonitoringType 542
SCREEN_RECTANGLE - of org.havi.ui.HScreenConfigTemplate 1048
SCROLLBAR_BEHAVIOR - of org.havi.ui.HStaticRange 1102
SECAM - of org.dvb.si.SIServiceType 562
selectGroup(URL) - of org.dvb.internet.UsenetClient 1389
selectionChanged(HItemEvent) - of org.havi.ui.event.HItemListener 1220
selectionChanged(HItemEvent) - of org.havi.ui.HEventMulticaster 874
selectMessage(URL) - of org.dvb.internet.UsenetClient 1389
ServerDeliveryErrorEvent - of org.dvb.dsmcc 669
ServerDeliveryErrorEvent(DSMCCObject) - of org.dvb.dsmcc.ServerDeliveryErrorEvent 669
ServerDeliveryException - of org.dvb.dsmcc 670
ServerDeliveryException() - of org.dvb.dsmcc.ServerDeliveryException 670
ServerDeliveryException(String) - of org.dvb.dsmcc.ServerDeliveryException 670
SERVICE - of org.dvb.si.DescriptorTag 498
SERVICE - of org.dvb.si.SIMonitoringType 542
SERVICE_LIST - of org.dvb.si.DescriptorTag 498
SERVICE_MOVE - of org.dvb.si.DescriptorTag 498
ServiceAlreadyExistsException - of org.dvb.application.storage 1359
ServiceAlreadyExistsException() - of org.dvb.application.storage.ServiceAlreadyExistsException 1359
ServiceAlreadyExistsException(String) - of org.dvb.application.storage.ServiceAlreadyExistsException 1359
ServiceDomain - of org.dvb.dsmcc 671
ServiceDomain() - of org.dvb.dsmcc.ServiceDomain 671
ServiceRemovedEvent - of org.dvb.media 592
ServiceRemovedEvent(Controller) - of org.dvb.media.ServiceRemovedEvent 592
ServiceRemovedEvent(Controller, MediaLocator) - of org.dvb.media.ServiceRemovedEvent 592
ServiceXFRErrorEvent - of org.dvb.dsmcc 675
ServiceXFRErrorEvent(DSMCCObject, ServiceXFRReference) - of org.dvb.dsmcc.ServiceXFRErrorEvent 675
ServiceXFRException - of org.dvb.dsmcc 676
ServiceXFRException(byte[], String) - of org.dvb.dsmcc.ServiceXFRException 676
ServiceXFRException(Locator, int, String) - of org.dvb.dsmcc.ServiceXFRException 676
ServiceXFRReference - of org.dvb.dsmcc 678
ServiceXFRReference(byte[], String) - of org.dvb.dsmcc.ServiceXFRReference 678
ServiceXFRReference(Locator, int, String) - of org.dvb.dsmcc.ServiceXFRReference 678
set(byte[]) - of org.havi.ui.HSound 1086
setActionCommand(String) - of org.havi.ui.HActionable 802

setActionCommand(String) - of org.havi.ui.HGraphicButton 900
setActionCommand(String) - of org.havi.ui.HTextButton 1129
setActionCommand(String) - of org.havi.ui.HToggleButton 1149
setActionSound(HSound) - of org.havi.ui.HActionable 803
setActionSound(HSound) - of org.havi.ui.HGraphicButton 901
setActionSound(HSound) - of org.havi.ui.HTextButton 1129
setActionSound(HSound) - of org.havi.ui.HToggleButton 1150
setAdjustmentSound(HSound) - of org.havi.ui.HAdjustmentValue 812
setAdjustmentSound(HSound) - of org.havi.ui.HRangeValue 1016
setAdjustMode(boolean) - of org.havi.ui.HAdjustmentInputPreferred 809
setAdjustMode(boolean) - of org.havi.ui.HRangeValue 1017
setAnimateContent(Image[], int) - of org.havi.ui.HVisible 1190
setBackgroundConfiguration(HBackgroundConfiguration) - of org.havi.ui.HBackgroundDevice 837
setBackgroundImage(Image) - of org.dvb.application.inner.DVBScene 1319
setBackgroundImage(Image) - of org.havi.ui.HScene 1031
setBackgroundMode(int) - of org.dvb.application.inner.DVBScene 1319
setBackgroundMode(int) - of org.havi.ui.HScene 1031
setBackgroundMode(int) - of org.havi.ui.HVisible 1190
setBehavior(int) - of org.havi.ui.HStaticRange 1104
setBlockIncrement(int) - of org.havi.ui.HAdjustmentValue 812
setBlockIncrement(int) - of org.havi.ui.HRangeValue 1017
setCaretCharPosition(int) - of org.havi.ui.HSinglelineEntry 1075
setClipRegion(Rectangle) - of org.dvb.media.VideoPresentationControl 612
setClipRegion(Rectangle) - of org.dvb.media.VideoTransformation 615
setCoherentScreenConfigurations(HScreenConfiguration[]) - of org.havi.ui.HScreen 1045
setColor(Color) - of org.dvb.ui.DVBGraphics 773
setColor(Color) - of org.havi.ui.event.HEventRepresentation 1211
setColor(Color) - of org.havi.ui.HBackgroundConfiguration 834
setColor(Color) - of org.havi.ui.HStillImageBackgroundConfiguration 1112
setContent(Object, int) - of org.havi.ui.HVisible 1190
setCurrent(HToggleButton) - of org.havi.ui.HToggleGroup 1155
setCurrentItem(int) - of org.havi.ui.HListGroup 956
setDefaultLook(HAnimateLook) - of org.havi.ui.HAnimation 827
setDefaultLook(HAnimateLook) - of org.havi.ui.HStaticAnimation 1094
setDefaultLook(HGraphicLook) - of org.havi.ui.HGraphicButton 901
setDefaultLook(HGraphicLook) - of org.havi.ui.HIcon 926
setDefaultLook(HGraphicLook) - of org.havi.ui.HStaticIcon 1099
setDefaultLook(HGraphicLook) - of org.havi.ui.HToggleButton 1150
setDefaultLook(HListGroupLook) - of org.havi.ui.HListGroup 956
setDefaultLook(HMultilineEntryLook) - of org.havi.ui.HMultilineEntry 980
setDefaultLook(HRangeLook) - of org.havi.ui.HRange 1003
setDefaultLook(HRangeLook) - of org.havi.ui.HRangeValue 1017
setDefaultLook(HRangeLook) - of org.havi.ui.HStaticRange 1104
setDefaultLook(HSinglelineEntryLook) - of org.havi.ui.HSinglelineEntry 1075
setDefaultLook(HTextLook) - of org.havi.ui.HStaticText 1109
setDefaultLook(HTextLook) - of org.havi.ui.HText 1121
setDefaultLook(HTextLook) - of org.havi.ui.HTextButton 1129
setDefaultSize(Dimension) - of org.havi.ui.HVisible 1190
setDelay(int) - of org.havi.ui.HAnimateEffect 816
setDelay(int) - of org.havi.ui.HFlatEffectMatte 879
setDelay(int) - of org.havi.ui.HImageEffectMatte 930
setDelay(int) - of org.havi.ui.HStaticAnimation 1095
setDVBComposite(DVBAlphaComposite) - of org.dvb.ui.DVBGraphics 773
setEchoChar(char) - of org.havi.ui.HSinglelineEntry 1075
setEditMode(boolean) - of org.havi.ui.HKeyboardInputPreferred 943

setEditMode(boolean) - of org.havi.ui.HSinglelineEntry 1075
setEnabled(boolean) - of org.havi.ui.HToggleGroup 1155
setExpirationDate(Date) - of org.dvb.io.persistent.FileAttributes 474
setFileAttributes(FileAttributes, File) - of org.dvb.io.persistent.FileAttributes 474
setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) - of org.dvb.application.inner.Inner-ApplicationContainer 1323
setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) - of org.havi.ui.HAnimation 827
setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) - of org.havi.ui.HGraphicButton 901
setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) - of org.havi.ui.HIcon 926
setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) - of org.havi.ui.HListGroup 957
setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) - of org.havi.ui.HNavigable 989
setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) - of org.havi.ui.HRange 1003
setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) - of org.havi.ui.HRangeValue 1017
setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) - of org.havi.ui.HSinglelineEntry 1075
setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) - of org.havi.ui.HText 1121
setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) - of org.havi.ui.HTextButton 1129
setFocusTraversal(HNavigable, HNavigable, HNavigable, HNavigable) - of org.havi.ui.HToggleButton 1150
setForcedSelection(boolean) - of org.havi.ui.HToggleGroup 1156
setGainFocusSound(HSound) - of org.dvb.application.inner.InnerApplicationContainer 1324
setGainFocusSound(HSound) - of org.havi.ui.HAnimation 828
setGainFocusSound(HSound) - of org.havi.ui.HGraphicButton 902
setGainFocusSound(HSound) - of org.havi.ui.HIcon 926
setGainFocusSound(HSound) - of org.havi.ui.HListGroup 957
setGainFocusSound(HSound) - of org.havi.ui.HNavigable 990
setGainFocusSound(HSound) - of org.havi.ui.HRange 1004
setGainFocusSound(HSound) - of org.havi.ui.HRangeValue 1018
setGainFocusSound(HSound) - of org.havi.ui.HSinglelineEntry 1076
setGainFocusSound(HSound) - of org.havi.ui.HText 1121
setGainFocusSound(HSound) - of org.havi.ui.HTextButton 1130
setGainFocusSound(HSound) - of org.havi.ui.HToggleButton 1151
setGraphicContent(Image, int) - of org.havi.ui.HVisible 1191
setGraphicsConfiguration(HEmulatedGraphicsConfiguration) - of org.havi.ui.HEmulatedGraphicsDevice 864
setGraphicsConfiguration(HGraphicsConfiguration) - of org.havi.ui.HGraphicsDevice 921
setHomepage(URL) - of org.dvb.internet.WWWBrowserService 1394
setHorizontalAlign(int) - of org.dvb.ui.DVBTextLayoutManager 780
setHorizontalAlignment(int) - of org.havi.ui.HVisible 1191
setHorizontalTabSpacing(int) - of org.dvb.ui.DVBTextLayoutManager 781
setIcon(Image) - of org.havi.ui.HListElement 945
setIconSize(Dimension) - of org.havi.ui.HListGroup 957
setInsets(Insets) - of org.dvb.ui.DVBTextLayoutManager 781
setInteractionState(int) - of org.havi.ui.HVisible 1191
setItemSelected(int, boolean) - of org.havi.ui.HListGroup 958
setLabel(String) - of org.havi.ui.HListElement 945
setLabelSize(Dimension) - of org.havi.ui.HListGroup 958
setLetterSpace(int) - of org.dvb.ui.DVBTextLayoutManager 781
setLineOrientation(int) - of org.dvb.ui.DVBTextLayoutManager 781
setLineSpace(int) - of org.dvb.ui.DVBTextLayoutManager 781
setListContent(HListElement[]) - of org.havi.ui.HListGroup 958
setLocation(float, float) - of org.havi.ui.HScreenPoint 1061
setLocation(float, float) - of org.havi.ui.HScreenRectangle 1063
setLook(HLook) - of org.havi.ui.HListGroup 958
setLook(HLook) - of org.havi.ui.HMultilineEntry 980
setLook(HLook) - of org.havi.ui.HSinglelineEntry 1076
setLook(HLook) - of org.havi.ui.HStaticAnimation 1095

setLook(HLook) - of org.havi.ui.HStaticIcon 1099
setLook(HLook) - of org.havi.ui.HStaticRange 1104
setLook(HLook) - of org.havi.ui.HStaticText 1109
setLook(HLook) - of org.havi.ui.HVisible 1192
setLookData(Object, Object) - of org.havi.ui.HVisible 1192
setLoseFocusSound(HSound) - of org.dvb.application.inner.InnerApplicationContainer 1324
setLoseFocusSound(HSound) - of org.havi.ui.HAnimation 828
setLoseFocusSound(HSound) - of org.havi.ui.HGraphicButton 902
setLoseFocusSound(HSound) - of org.havi.ui.HIcon 927
setLoseFocusSound(HSound) - of org.havi.ui.HListGroup 959
setLoseFocusSound(HSound) - of org.havi.ui.HNavigable 990
setLoseFocusSound(HSound) - of org.havi.ui.HRange 1004
setLoseFocusSound(HSound) - of org.havi.ui.HRangeValue 1018
setLoseFocusSound(HSound) - of org.havi.ui.HSinglelineEntry 1077
setLoseFocusSound(HSound) - of org.havi.ui.HText 1122
setLoseFocusSound(HSound) - of org.havi.ui.HTextButton 1130
setLoseFocusSound(HSound) - of org.havi.ui.HToggleButton 1151
setMatte(HMatte) - of org.havi.ui.HComponent 845
setMatte(HMatte) - of org.havi.ui.HContainer 857
setMatte(HMatte) - of org.havi.ui.HMatteLayer 976
setMatteData(float) - of org.havi.ui.HFlatMatte 883
setMatteData(float[]) - of org.havi.ui.HFlatEffectMatte 879
setMatteData(Image) - of org.havi.ui.HImageMatte 936
setMatteData(Image[]) - of org.havi.ui.HImageEffectMatte 931
setMaxCharsPerLine(int) - of org.havi.ui.HSinglelineEntry 1077
setMostFavourite(String) - of org.dvb.user.Preference 483
setMove(int, HNavigable) - of org.dvb.application.inner.InnerApplicationContainer 1324
setMove(int, HNavigable) - of org.havi.ui.HAnimation 829
setMove(int, HNavigable) - of org.havi.ui.HGraphicButton 902
setMove(int, HNavigable) - of org.havi.ui.HIcon 927
setMove(int, HNavigable) - of org.havi.ui.HListGroup 959
setMove(int, HNavigable) - of org.havi.ui.HNavigable 990
setMove(int, HNavigable) - of org.havi.ui.HRange 1004
setMove(int, HNavigable) - of org.havi.ui.HRangeValue 1019
setMove(int, HNavigable) - of org.havi.ui.HSinglelineEntry 1077
setMove(int, HNavigable) - of org.havi.ui.HText 1122
setMove(int, HNavigable) - of org.havi.ui.HTextButton 1131
setMove(int, HNavigable) - of org.havi.ui.HToggleButton 1151
setMultiSelection(boolean) - of org.havi.ui.HListGroup 959
setOffset(Point) - of org.havi.ui.HImageMatte 936
setOffset(Point, int) - of org.havi.ui.HImageEffectMatte 931
setOrientation(int) - of org.havi.ui.HListGroup 959
setOrientation(int) - of org.havi.ui.HOrientable 996
setOrientation(int) - of org.havi.ui.HStaticRange 1104
setPermissions(boolean, boolean, boolean, boolean, boolean, boolean) - of org.dvb.io.persistent.FileAccessPermissions 472
setPermissions(FileAccessPermissions) - of org.dvb.io.persistent.FileAttributes 475
setPlayMode(int) - of org.havi.ui.HAnimateEffect 816
setPlayMode(int) - of org.havi.ui.HFlatEffectMatte 880
setPlayMode(int) - of org.havi.ui.HImageEffectMatte 931
setPlayMode(int) - of org.havi.ui.HStaticAnimation 1095
setPosition(int) - of org.havi.ui.HAnimateEffect 816
setPosition(int) - of org.havi.ui.HFlatEffectMatte 880
setPosition(int) - of org.havi.ui.HImageEffectMatte 931
setPosition(int) - of org.havi.ui.HStaticAnimation 1095

setPreference(int, int) - of org.havi.ui.HBackgroundConfigTemplate 832
setPreference(int, int) - of org.havi.ui.HGraphicsConfigTemplate 911
setPreference(int, int) - of org.havi.ui.HScreenConfigTemplate 1051
setPreference(int, Object, int) - of org.havi.ui.HGraphicsConfigTemplate 912
setPreference(int, Object, int) - of org.havi.ui.HSceneTemplate 1040
setPreference(int, Object, int) - of org.havi.ui.HScreenConfigTemplate 1051
setPreference(int, Object, int) - of org.havi.ui.HVideoConfigTemplate 1165
setPriority(int) - of org.dvb.io.persistent.FileAttributes 475
setRange(int, int) - of org.havi.ui.HStaticRange 1105
setReceiveBufferSize(DatagramSocket, int) - of org.dvb.net.DatagramSocketBufferControl 687
setRenderMode(int) - of org.dvb.application.inner.DVBScene 1319
setRenderMode(int) - of org.havi.ui.HScene 1031
setRepeatCount(int) - of org.havi.ui.HAnimateEffect 816
setRepeatCount(int) - of org.havi.ui.HFlatEffectMatte 880
setRepeatCount(int) - of org.havi.ui.HImageEffectMatte 932
setRepeatCount(int) - of org.havi.ui.HStaticAnimation 1096
setResizeMode(int) - of org.havi.ui.HVisible 1192
setRetrievalMode(int) - of org.dvb.dsmcc.DSMCCObject 635
setRGB(int, int, int) - of org.dvb.ui.DVBBufferedImage 765
setRGB(int, int, int, int, int[], int, int) - of org.dvb.ui.DVBBufferedImage 765
setScalingFactors(float, float) - of org.dvb.media.VideoTransformation 615
setScrollPosition(int) - of org.havi.ui.HListGroup 960
setSelectionMode(boolean) - of org.havi.ui.HListGroup 960
setSelectionMode(boolean) - of org.havi.ui.HSelectionInputPreferred 1065
setSelectionSound(HSound) - of org.havi.ui.HItemValue 940
setSelectionSound(HSound) - of org.havi.ui.HListGroup 960
setSize(float, float) - of org.havi.ui.HScreenDimension 1059
setSize(float, float) - of org.havi.ui.HScreenRectangle 1064
setStartCorner(int) - of org.dvb.ui.DVBTextLayoutManager 781
setString(String) - of org.havi.ui.event.HEventRepresentation 1211
setSwitchableState(boolean) - of org.havi.ui.HSwitchable 1115
setSwitchableState(boolean) - of org.havi.ui.HToggleButton 1152
setSymbol(Image) - of org.havi.ui.event.HEventRepresentation 1211
setTarget(ConnectionParameters) - of org.dvb.net.rc.ConnectionRCInterface 698
setTargetToDefault() - of org.dvb.net.rc.ConnectionRCInterface 698
setTextContent(String, int) - of org.havi.ui.HSinglelineEntry 1077
setTextContent(String, int) - of org.havi.ui.HVisible 1192
setTextLayoutManager(HTextLayoutManager) - of org.havi.ui.HVisible 1193
setTextWrapping(boolean) - of org.dvb.ui.DVBTextLayoutManager 781
setThumbOffsets(int, int) - of org.havi.ui.HStaticRange 1105
setToggleGroup(HToggleGroup) - of org.havi.ui.HToggleButton 1152
setType(int) - of org.havi.ui.event.HEventRepresentation 1212
setType(int) - of org.havi.ui.HImageHints 934
setType(int) - of org.havi.ui.HSinglelineEntry 1078
setUnitIncrement(int) - of org.havi.ui.HAdjustmentValue 813
setUnitIncrement(int) - of org.havi.ui.HRangeValue 1019
setUnsetActionSound(HSound) - of org.havi.ui.HSwitchable 1115
setUnsetActionSound(HSound) - of org.havi.ui.HToggleButton 1152
setValidInput(char[]) - of org.havi.ui.HSinglelineEntry 1078
setValue(int) - of org.havi.ui.HStaticRange 1105
setVerticalAlign(int) - of org.dvb.ui.DVBTextLayoutManager 782
setVerticalAlignment(int) - of org.havi.ui.HVisible 1193
setVideoConfiguration(HVideoConfiguration) - of org.havi.ui.HVideoDevice 1171
setVideoPosition(HScreenPoint) - of org.dvb.media.VideoTransformation 616
setVideoTransformation(VideoTransformation) - of org.dvb.media.BackgroundVideoPresentationControl

579
setVisible(boolean) - of org.havi.ui.HScene 1032
SHORT_EVENT - of org.dvb.si.DescriptorTag 499
SHORT_SMOOTHING_BUFFER - of org.dvb.si.DescriptorTag 499
show() - of org.havi.ui.HScene 1032
showLook(Graphics, HVisible, int) - of org.havi.ui.HAnimateLook 821
showLook(Graphics, HVisible, int) - of org.havi.ui.HGraphicLook 907
showLook(Graphics, HVisible, int) - of org.havi.ui.HListGroupLook 965
showLook(Graphics, HVisible, int) - of org.havi.ui.HLook 971
showLook(Graphics, HVisible, int) - of org.havi.ui.HMultilineEntryLook 985
showLook(Graphics, HVisible, int) - of org.havi.ui.HRangeLook 1009
showLook(Graphics, HVisible, int) - of org.havi.ui.HSinglelineEntryLook 1082
showLook(Graphics, HVisible, int) - of org.havi.ui.HTextLook 1138
SIBouquet - of org.dvb.si 505
SIDatabase - of org.dvb.si 509
SIEvent - of org.dvb.si 525
SIException - of org.dvb.si 529
SIException() - of org.dvb.si.SIException 529
SIException(String) - of org.dvb.si.SIException 529
SIIllegalArgumentException - of org.dvb.si 530
SIIllegalArgumentException() - of org.dvb.si.SIIllegalArgumentException 530
SIIllegalArgumentException(String) - of org.dvb.si.SIIllegalArgumentException 530
SIInformation - of org.dvb.si 531
SIInvalidPeriodException - of org.dvb.si 535
SIInvalidPeriodException() - of org.dvb.si.SIInvalidPeriodException 535
SIInvalidPeriodException(String) - of org.dvb.si.SIInvalidPeriodException 535
SIIterator - of org.dvb.si 536
SILackOfResourcesEvent - of org.dvb.si 537
SILackOfResourcesEvent(Object, SIRequest) - of org.dvb.si.SILackOfResourcesEvent 537
SIMonitoringEvent - of org.dvb.si 538
SIMonitoringEvent(SIDatabase, byte, int, int, int, int, int, Date, Date) - of org.dvb.si.SIMonitoringEvent 538
SIMonitoringListener - of org.dvb.si 541
SIMonitoringType - of org.dvb.si 542
SINetwork - of org.dvb.si 543
SINotInCacheEvent - of org.dvb.si 547
SINotInCacheEvent(Object, SIRequest) - of org.dvb.si.SINotInCacheEvent 547
SIObjectNotInTableEvent - of org.dvb.si 548
SIObjectNotInTableEvent(Object, SIRequest) - of org.dvb.si.SIObjectNotInTableEvent 548
SIRequest - of org.dvb.si 549
SIRequestCancelledEvent - of org.dvb.si 550
SIRequestCancelledEvent(Object, SIRequest) - of org.dvb.si.SIRequestCancelledEvent 550
SIRetrievalEvent - of org.dvb.si 551
SIRetrievalEvent(Object, SIRequest) - of org.dvb.si.SIRetrievalEvent 551
SIRetrievalListener - of org.dvb.si 553
SIRunningStatus - of org.dvb.si 554
SIService - of org.dvb.si 555
SIServiceType - of org.dvb.si 561
SISuccessfulRetrieveEvent - of org.dvb.si 563
SISuccessfulRetrieveEvent(Object, SIRequest, SIIterator) - of org.dvb.si.SISuccessfulRetrieveEvent 563
SITableNotFoundEvent - of org.dvb.si 564
SITableNotFoundEvent(Object, SIRequest) - of org.dvb.si.SITableNotFoundEvent 564
SITableUpdatedEvent - of org.dvb.si 565
SITableUpdatedEvent(Object, SIRequest) - of org.dvb.si.SITableUpdatedEvent 565
SITime - of org.dvb.si 566
SITransportStream - of org.dvb.si 567

SITransportStreamBAT - of org.dvb.si 569
SITransportStreamDescription - of org.dvb.si 570
SITransportStreamNIT - of org.dvb.si 571
SIUtil - of org.dvb.si 572
size() - of org.dvb.application.AppsDatabase 730
SLIDER_BEHAVIOR - of org.havi.ui.HStaticRange 1102
SMALL_FORM_VARIANTS - of org.havi.ui.HFontCapabilities 892
SmartCardPermission - of org.dvb.smartcard 1398
SmartCardPermission(String) - of org.dvb.smartcard.SmartCardPermission 1398
SmartCardPermission(String, String) - of org.dvb.smartcard.SmartCardPermission 1398
SPACING_MODIFIER_LETTERS - of org.havi.ui.HFontCapabilities 892
SPECIALS - of org.havi.ui.HFontCapabilities 892
SRC - of org.dvb.ui.DVBAlphaComposite 757
Src - of org.dvb.ui.DVBAlphaComposite 757
SRC_IN - of org.dvb.ui.DVBAlphaComposite 757
SRC_OUT - of org.dvb.ui.DVBAlphaComposite 757
SRC_OVER - of org.dvb.ui.DVBAlphaComposite 758
SrcIn - of org.dvb.ui.DVBAlphaComposite 758
SrcOut - of org.dvb.ui.DVBAlphaComposite 758
SrcOver - of org.dvb.ui.DVBAlphaComposite 758
start() - of org.dvb.application.AppProxy 723
start() - of org.dvb.media.DripFeedDataSource 586
start() - of org.havi.ui.HAnimateEffect 817
start() - of org.havi.ui.HFlatEffectMatte 880
start() - of org.havi.ui.HImageEffectMatte 932
start() - of org.havi.ui.HStaticAnimation 1096
start(String[]) - of org.dvb.application.AppProxy 723
START_CORNER_LOWER_LEFT - of org.dvb.ui.DVBTextLayoutManager 777
START_CORNER_LOWER_RIGHT - of org.dvb.ui.DVBTextLayoutManager 777
START_CORNER_UPPER_LEFT - of org.dvb.ui.DVBTextLayoutManager 777
START_CORNER_UPPER_RIGHT - of org.dvb.ui.DVBTextLayoutManager 777
STARTED - of org.dvb.application.AppProxy 722
STARTS_IN_A_FEW_SECONDS - of org.dvb.si.SIRunningStatus 554
startTrigger(Date) - of org.dvb.application.DVBHTMLProxy 740
STATE_CHANGE - of org.havi.ui.HVisible 1183
stateChange(AppStateChangeEvent) - of org.dvb.application.AppStateChangeEventListener 738
statusChanged(ResourceStatusEvent) - of org.havi.ui.HEventMulticaster 874
STILL_IMAGE - of org.havi.ui.HBackgroundConfigTemplate 831
stop() - of org.dvb.media.DripFeedDataSource 586
stop() - of org.havi.ui.HAnimateEffect 817
stop() - of org.havi.ui.HFlatEffectMatte 881
stop() - of org.havi.ui.HImageEffectMatte 932
stop() - of org.havi.ui.HSound 1086
stop() - of org.havi.ui.HStaticAnimation 1096
stop(boolean) - of org.dvb.application.AppProxy 724
StopByResourceLossEvent - of org.dvb.media 594
StopByResourceLossEvent(Controller) - of org.dvb.media.StopByResourceLossEvent 594
StopByResourceLossEvent(Controller, MediaLocator) - of org.dvb.media.StopByResourceLossEvent 594
STORED - of org.dvb.application.storage.StoredApplicationService 1360
STORED_APPLICATION_SERVICE - of org.dvb.application.storage.StoredApplicationService 1360
StoredApplicationService - of org.dvb.application.storage 1360
StoredServiceCreator - of org.dvb.application.storage 1363
STREAM_IDENTIFIER - of org.dvb.si.DescriptorTag 499
STREAM_UNAVAILABLE - of org.dvb.media.PresentationChangedEvent 590
StreamEvent - of org.dvb.dsmcc 680

StreamEvent(DSMCCStreamEvent, long, String, int, byte[]) - of org.dvb.dsmcc.StreamEvent 680
StreamEventListener - of org.dvb.dsmcc 682
STUFFING - of org.dvb.si.DescriptorTag 499
subscribe(String) - of org.dvb.internet.UsenetClientService 1391
subscribe(String, StreamEventListener) - of org.dvb.dsmcc.DSMCCStreamEvent 642
SubtitleAvailableEvent - of org.dvb.media 596
SubtitleAvailableEvent(SubtitlingLanguageControl) - of org.dvb.media.SubtitleAvailableEvent 596
SubtitleListener - of org.dvb.media 597
SubtitleNotAvailableEvent - of org.dvb.media 598
SubtitleNotAvailableEvent(SubtitlingLanguageControl) - of org.dvb.media.SubtitleNotAvailableEvent 598
SubtitleNotSelectedEvent - of org.dvb.media 599
SubtitleNotSelectedEvent(SubtitlingLanguageControl) - of org.dvb.media.SubtitleNotSelectedEvent 599
SubtitleSelectedEvent - of org.dvb.media 600
SubtitleSelectedEvent(SubtitlingLanguageControl) - of org.dvb.media.SubtitleSelectedEvent 600
subtitleStatusChanged(EventObject) - of org.dvb.media.SubtitleListener 597
SUBTITLING - of org.dvb.si.DescriptorTag 499
SubtitlingEventControl - of org.dvb.media 601
SuccessEvent - of org.dvb.dsmcc 683
SuccessEvent(DSMCCObject) - of org.dvb.dsmcc.SuccessEvent 683
SUPERSCRIPTS_AND_SUBSCRIPTS - of org.havi.ui.HFontCapabilities 892
supportsArbitraryHorizontalScaling() - of org.dvb.media.VideoPresentationControl 612
supportsArbitraryVerticalScaling() - of org.dvb.media.VideoPresentationControl 613
supportsClipping() - of org.dvb.media.VideoPresentationControl 613
synchronousLoad() - of org.dvb.dsmcc.DSMCCObject 636
TAMIL - of org.havi.ui.HFontCapabilities 892
TELEPHONE - of org.dvb.si.DescriptorTag 499
TELETEXT - of org.dvb.si.DescriptorTag 499
TELETEXT - of org.dvb.si.SIServiceType 562
TELUGU - of org.havi.ui.HFontCapabilities 892
terminate(String, int) - of org.dvb.test.DVBTest 1258
terminatePlugin() - of org.dvb.application.plugins.Plugin 1335
TERRESTRIAL_DELIVERY_SYSTEM - of org.dvb.si.DescriptorTag 499
TestOpacity - of org.dvb.ui 787
TEXT_CARET_CHANGE - of org.havi.ui.event.HTextEvent 1246
TEXT_CHANGE - of org.havi.ui.event.HTextEvent 1247
TEXT_CONTENT_CHANGE - of org.havi.ui.HVisible 1183
TEXT_END_CHANGE - of org.havi.ui.event.HTextEvent 1247
TEXT_FIRST - of org.havi.ui.event.HTextEvent 1247
TEXT_LAST - of org.havi.ui.event.HTextEvent 1247
TEXT_START_CHANGE - of org.havi.ui.event.HTextEvent 1247
TEXT_VALUE_CHANGE - of org.havi.ui.HVisible 1183
textChanged(HTextEvent) - of org.havi.ui.event.HTextListener 1249
textChanged(HTextEvent) - of org.havi.ui.HEventMulticaster 874
TextOverflowListener - of org.dvb.ui 788
TextualServiceIdentifierQuery - of org.dvb.si 573
THAI - of org.havi.ui.HFontCapabilities 893
THUMB_OFFSETS_CHANGE - of org.havi.ui.HVisible 1184
TIME_SHIFTED_EVENT - of org.dvb.si.DescriptorTag 499
TIME_SHIFTED_SERVICE - of org.dvb.si.DescriptorTag 499
toString() - of org.dvb.application.AppID 720
toString() - of org.dvb.ui.DVBBufferedImage 766
toString() - of org.dvb.ui.DVBColor 770
toString() - of org.dvb.ui.DVBGraphics 774
toString() - of org.dvb.user.Preference 483
trigger(Date, Object) - of org.dvb.application.DVBHTMLProxy 740

TunerPermission - of org.dvb.net.tuning 752
TunerPermission(String) - of org.dvb.net.tuning.TunerPermission 752
TunerPermission(String, String) - of org.dvb.net.tuning.TunerPermission 752
TYPE_ADVANCED - of org.dvb.ui.DVBBufferedImage 760
TYPE_BASE - of org.dvb.ui.DVBBufferedImage 760
TYPE_CATV - of org.dvb.net.rc.RCInterface 703
TYPE_DECT - of org.dvb.net.rc.RCInterface 703
TYPE_ISDN - of org.dvb.net.rc.RCInterface 703
TYPE_LMDS - of org.dvb.net.rc.RCInterface 703
TYPE_MATV - of org.dvb.net.rc.RCInterface 703
TYPE_PSTN - of org.dvb.net.rc.RCInterface 704
UEF_KEY_EVENT - of org.dvb.event.UserEvent 462
unbind(XletContext, String) - of org.dvb.io.ixc.IxcRegistry 1266
UndeclaredThrowableException - of org.dvb.application.plugins 1341
UndeclaredThrowableException(Throwable) - of org.dvb.application.plugins.UndeclaredThrowableException 1341
UndeclaredThrowableException(Throwable, String) - of org.dvb.application.plugins.UndeclaredThrowableException 1341
UNDEFINED - of org.dvb.si.SIRunningStatus 554
ungroup() - of org.havi.ui.HContainer 858
UNKNOWN - of org.dvb.si.SIServiceType 562
UNKNOWN_CHANGE - of org.havi.ui.HVisible 1184
UnknownEventException - of org.dvb.dsmcc 684
UnknownEventException() - of org.dvb.dsmcc.UnknownEventException 684
UnknownEventException(String) - of org.dvb.dsmcc.UnknownEventException 684
unload() - of org.dvb.dsmcc.DSMCCObject 636
UNNECESSARY - of org.havi.ui.HSceneTemplate 1039
unregister(Plugin, XletContext) - of org.dvb.application.plugins.XletSystemCall 1346
UNRESOLVED - of org.dvb.test.DVBTest 1256
unsubscribe(int, StreamEventListener) - of org.dvb.dsmcc.DSMCCStreamEvent 642
unsubscribe(String, StreamEventListener) - of org.dvb.dsmcc.DSMCCStreamEvent 643
UnsupportedDrawingOperationException - of org.dvb.ui 789
UnsupportedDrawingOperationException(String) - of org.dvb.ui.UnsupportedDrawingOperationException 789
UnsupportedPreferenceException - of org.dvb.user 484
UnsupportedPreferenceException() - of org.dvb.user.UnsupportedPreferenceException 484
UnsupportedPreferenceException(String) - of org.dvb.user.UnsupportedPreferenceException 484
UNTESTED - of org.dvb.test.DVBTest 1256
update(Graphics) - of org.havi.ui.HVisible 1193
URLUnavailableEvent - of org.dvb.internet 1388
URLUnavailableEvent(Object, URL) - of org.dvb.internet.URLUnavailableEvent 1388
UsenetClient - of org.dvb.internet 1389
UsenetClientService - of org.dvb.internet 1391
UserEvent - of org.dvb.event 462
UserEvent(Object, int, char) - of org.dvb.event.UserEvent 462
UserEvent(Object, int, int, int, int) - of org.dvb.event.UserEvent 463
UserEventListener - of org.dvb.event 465
userEventReceived(UserEvent) - of org.dvb.event.UserEventListener 465
UserEventRepository - of org.dvb.event 466
UserEventRepository(String) - of org.dvb.event.UserEventRepository 466
UserPreferenceChangeEvent - of org.dvb.user 485
UserPreferenceChangeEvent(String) - of org.dvb.user.UserPreferenceChangeEvent 485
UserPreferenceChangeListener - of org.dvb.user 486
UserPreferenceManager - of org.dvb.user 487
UserPreferencePermission - of org.dvb.user 489

UserPreferencePermission(String) - of org.dvb.user.UserPreferencePermission 489
UserPreferencePermission(String, String) - of org.dvb.user.UserPreferencePermission 489
UserRejectedInstallException - of org.dvb.application.storage 1364
UserRejectedInstallException() - of org.dvb.application.storage.UserRejectedInstallException 1364
UserRejectedInstallException(String) - of org.dvb.application.storage.UserRejectedInstallException 1364
VALIGN_BOTTOM - of org.havi.ui.HVisible 1184
VALIGN_CENTER - of org.havi.ui.HVisible 1184
VALIGN_JUSTIFY - of org.havi.ui.HVisible 1184
VALIGN_TOP - of org.havi.ui.HVisible 1184
valueChanged(HAdjustmentEvent) - of org.havi.ui.event.HAdjustmentListener 1202
valueChanged(HAdjustmentEvent) - of org.havi.ui.HEventMulticaster 875
VERTICAL_CENTER - of org.dvb.ui.DVBTextLayoutManager 777
VERTICAL_END_ALIGN - of org.dvb.ui.DVBTextLayoutManager 777
VERTICAL_START_ALIGN - of org.dvb.ui.DVBTextLayoutManager 777
VIDEO_GRAPHICS_PIXEL_ALIGNED - of org.havi.ui.HScreenConfigTemplate 1048
VIDEO_MIXING - of org.havi.ui.HGraphicsConfigTemplate 910
VideoFormatControl - of org.dvb.media 602
VideoFormatEvent - of org.dvb.media 607
VideoFormatEvent(Object) - of org.dvb.media.VideoFormatEvent 607
VideoFormatListener - of org.dvb.media 608
VideoPresentationControl - of org.dvb.media 609
VideoTransformation - of org.dvb.media 614
VideoTransformation() - of org.dvb.media.VideoTransformation 614
VideoTransformation(Rectangle, float, float, HScreenPoint) - of org.dvb.media.VideoTransformation 614
VK_BALANCE_LEFT - of org.havi.ui.event.HRcEvent 1230
VK_BALANCE_RIGHT - of org.havi.ui.event.HRcEvent 1230
VK_BASS_BOOST_DOWN - of org.havi.ui.event.HRcEvent 1230
VK_BASS_BOOST_UP - of org.havi.ui.event.HRcEvent 1230
VK_CHANNEL_DOWN - of org.havi.ui.event.HRcEvent 1230
VK_CHANNEL_UP - of org.havi.ui.event.HRcEvent 1230
VK_CLEAR_FAVORITE_0 - of org.havi.ui.event.HRcEvent 1230
VK_CLEAR_FAVORITE_1 - of org.havi.ui.event.HRcEvent 1230
VK_CLEAR_FAVORITE_2 - of org.havi.ui.event.HRcEvent 1231
VK_CLEAR_FAVORITE_3 - of org.havi.ui.event.HRcEvent 1231
VK_COLORED_KEY_0 - of org.havi.ui.event.HRcEvent 1231
VK_COLORED_KEY_1 - of org.havi.ui.event.HRcEvent 1231
VK_COLORED_KEY_2 - of org.havi.ui.event.HRcEvent 1231
VK_COLORED_KEY_3 - of org.havi.ui.event.HRcEvent 1231
VK_COLORED_KEY_4 - of org.havi.ui.event.HRcEvent 1232
VK_COLORED_KEY_5 - of org.havi.ui.event.HRcEvent 1232
VK_DIMMER - of org.havi.ui.event.HRcEvent 1232
VK_DISPLAY_SWAP - of org.havi.ui.event.HRcEvent 1232
VK_EJECT_TOGGLE - of org.havi.ui.event.HRcEvent 1232
VK_FADER_FRONT - of org.havi.ui.event.HRcEvent 1232
VK_FADER_REAR - of org.havi.ui.event.HRcEvent 1232
VK_FAST_FWD - of org.havi.ui.event.HRcEvent 1232
VK_GO_TO_END - of org.havi.ui.event.HRcEvent 1232
VK_GO_TO_START - of org.havi.ui.event.HRcEvent 1233
VK_GUIDE - of org.havi.ui.event.HRcEvent 1233
VK_INFO - of org.havi.ui.event.HRcEvent 1233
VK_MUTE - of org.havi.ui.event.HRcEvent 1233
VK_PINP_TOGGLE - of org.havi.ui.event.HRcEvent 1233
VK_PLAY - of org.havi.ui.event.HRcEvent 1233
VK_PLAY_SPEED_DOWN - of org.havi.ui.event.HRcEvent 1233
VK_PLAY_SPEED_RESET - of org.havi.ui.event.HRcEvent 1233

VK_PLAY_SPEED_UP - of org.havi.ui.event.HRcEvent 1233
VK_POWER - of org.havi.ui.event.HRcEvent 1234
VK_RANDOM_TOGGLE - of org.havi.ui.event.HRcEvent 1234
VK_RECALL_FAVORITE_0 - of org.havi.ui.event.HRcEvent 1234
VK_RECALL_FAVORITE_1 - of org.havi.ui.event.HRcEvent 1234
VK_RECALL_FAVORITE_2 - of org.havi.ui.event.HRcEvent 1234
VK_RECALL_FAVORITE_3 - of org.havi.ui.event.HRcEvent 1234
VK_RECORD - of org.havi.ui.event.HRcEvent 1234
VK_RECORD_SPEED_NEXT - of org.havi.ui.event.HRcEvent 1234
VK_REWIND - of org.havi.ui.event.HRcEvent 1234
VK_SCAN_CHANNELS_TOGGLE - of org.havi.ui.event.HRcEvent 1234
VK_SCREEN_MODE_NEXT - of org.havi.ui.event.HRcEvent 1235
VK_SPLIT_SCREEN_TOGGLE - of org.havi.ui.event.HRcEvent 1235
VK_STOP - of org.havi.ui.event.HRcEvent 1235
VK_STORE_FAVORITE_0 - of org.havi.ui.event.HRcEvent 1235
VK_STORE_FAVORITE_1 - of org.havi.ui.event.HRcEvent 1235
VK_STORE_FAVORITE_2 - of org.havi.ui.event.HRcEvent 1235
VK_STORE_FAVORITE_3 - of org.havi.ui.event.HRcEvent 1235
VK_SUBTITLE - of org.havi.ui.event.HRcEvent 1235
VK_SURROUND_MODE_NEXT - of org.havi.ui.event.HRcEvent 1235
VK_TELETEXT - of org.havi.ui.event.HRcEvent 1236
VK_TRACK_NEXT - of org.havi.ui.event.HRcEvent 1236
VK_TRACK_PREV - of org.havi.ui.event.HRcEvent 1236
VK_VIDEO_MODE_NEXT - of org.havi.ui.event.HRcEvent 1236
VK_VOLUME_DOWN - of org.havi.ui.event.HRcEvent 1236
VK_VOLUME_UP - of org.havi.ui.event.HRcEvent 1236
VK_WINK - of org.havi.ui.event.HRcEvent 1236
widgetChanged(HVisible, HChangeData[]) - of org.havi.ui.HAnimateLook 822
widgetChanged(HVisible, HChangeData[]) - of org.havi.ui.HGraphicLook 908
widgetChanged(HVisible, HChangeData[]) - of org.havi.ui.HListGroupLook 966
widgetChanged(HVisible, HChangeData[]) - of org.havi.ui.HLook 972
widgetChanged(HVisible, HChangeData[]) - of org.havi.ui.HMultilineEntryLook 986
widgetChanged(HVisible, HChangeData[]) - of org.havi.ui.HRangeLook 1010
widgetChanged(HVisible, HChangeData[]) - of org.havi.ui.HSinglelineEntryLook 1083
widgetChanged(HVisible, HChangeData[]) - of org.havi.ui.HTextLook 1139
width - of org.havi.ui.HScreenDimension 1059
width - of org.havi.ui.HScreenRectangle 1063
windowActivated(WindowEvent) - of org.havi.ui.HEventMulticaster 875
windowClosed(WindowEvent) - of org.havi.ui.HEventMulticaster 875
windowClosing(WindowEvent) - of org.havi.ui.HEventMulticaster 875
windowDeactivated(WindowEvent) - of org.havi.ui.HEventMulticaster 876
windowDeiconified(WindowEvent) - of org.havi.ui.HEventMulticaster 876
windowIconified(WindowEvent) - of org.havi.ui.HEventMulticaster 876
windowOpened(WindowEvent) - of org.havi.ui.HEventMulticaster 876
write(Preference) - of org.dvb.user.UserPreferenceManager 488
WWW_CLIENT - of org.dvb.internet.InternetServiceFilter 1384
WWWBrowser - of org.dvb.internet 1392
WWWBrowserService - of org.dvb.internet 1393
x - of org.havi.ui.HScreenPoint 1061
x - of org.havi.ui.HScreenRectangle 1063
XletContainer - of org.dvb.application.plugins 1343
XletContainer(Container) - of org.dvb.application.plugins.XletContainer 1343
XletSystemCall - of org.dvb.application.plugins 1345
XletSystemCall() - of org.dvb.application.plugins.XletSystemCall 1345
y - of org.havi.ui.HScreenPoint 1061

y - of org.havi.ui.HScreenRectangle 1063
ZERO_BACKGROUND_IMPACT - of org.havi.ui.HScreenConfigTemplate 1049
ZERO_GRAPHICS_IMPACT - of org.havi.ui.HScreenConfigTemplate 1049
ZERO_VIDEO_IMPACT - of org.havi.ui.HScreenConfigTemplate 1049

History

Document history		
V1.1.1	November 2001	Published