

FLEXIWORK 2

FLEXIWORK SERIES
POCKET WET WIPES SERIES



Instructions for Use

Date :
Place : Gostyn, PL

EC DECLARATION OF CONFORMITY



We, as KANSAN MAKINA KAGIT SAN. VE TIC. AŞ., are a manufacturer settled at the address Capak Mah. 2594 Sok. No:6 Torbali – Izmir 35860 Turkey. We hereby declare that machine, whose name, serial number and model are indicated below, are in accordance with below mentioned standards.

PRODUCT DETAILS

Automatic Cross Fold Converting Machine
Model: FLEXIWORK 2

CONCERNED STANDARDS

Machine is in conformity with the following standards and normative documents.

EC-Machinery Directive 2006/42/EC
EC-Low Voltage Directive 2014/35/UE

Applied harmonized norms:

EN ISO 12100: safety of machinery, basic concept, general principle for design, Basic terminology and methodology.

EN 60204-1: Safety of machinery, electrical equipment of machines, general requirements.

KANSAN MAKINA KAGIT SAN. VE TIC. AŞ.,
Capak Mah. 2594 Sok. No:6 35860 Torbali, Izmir,
Turkey

Mr.Özgür Hayreter (Representative EU for Kansan)

Address: W.Boratyskiego No.1
63-800 Gostyn Poland

Date: 06.06.2017

INDEX

General Informations	3
General Machine Image	4
Machine Layout	5
General Machine Informations	7
Machine Technical Features	8
Machine Utility Consumption Information and Used Components	13
Machine Transfer and Installation Instructions	14
Machine Scale and Electric Pneumatic Connection	16
Electric Board Details	17
Pneumatic Board Details	18
Screen Introduction	19
Adjustments	36
Warning Symbols	48
Machine Line Operating Area	48
Precautions to Be Taken on Machine Operating	50
Warning Label Explanations	52
Security Warning Areas	54
Warning Signals Explanations	59
Emergency Stop Areas	60
Machine Alarm Lists	61
General Machine and Module Introduction	65
Machine Module Information	66
Rotation Conveyor Introduction	67
Output Conveyor Introduction	69
Stacking Module Introduction	71
Folding Mold Introduction	73
Cutting Module Introduction	75
Bobbin Group Introduction	77
Splice Module Introduction	78
Puller Module Introduction	80
Folding Roll Module Introduction	81
Plumbing Group Introduction	83
Cleaning Instructions	83
Periodic Maintenance Intructions	88
Mechanical Lubrication Areas	90
Precautions to Be Taken by Operator	94

GENERAL INFORMATION

This user manual belongs to **FLEXIWORK 2/** Automatic Pocket Wet Wipe Machine. It is written to provide adjusting machine healthy and effective, productive and safe usage of it.

Please directly contact with us if any technical problem is not clear in this user manual.



**Compact
solutions**
for wet wipe
production

Adres: Çapak mahallesi 2594 sokak
No: 6 Çapak, Torbalı - İzmir 35860 Türkiye

Tel: +90 232 853 9634
Faks: +90 232 853 9107
E-posta: info@kansanmak.com

Destek: support@kansanmak.com

URL: www.kansanmak.com




MACHINE GENERAL IMAGE


FLEXIWORK 2 / Get to know Automatic Pocket Wet Wipes Machines.



This machine cannot be used with alcohol and flammable material.

MACHINE LAYOUT

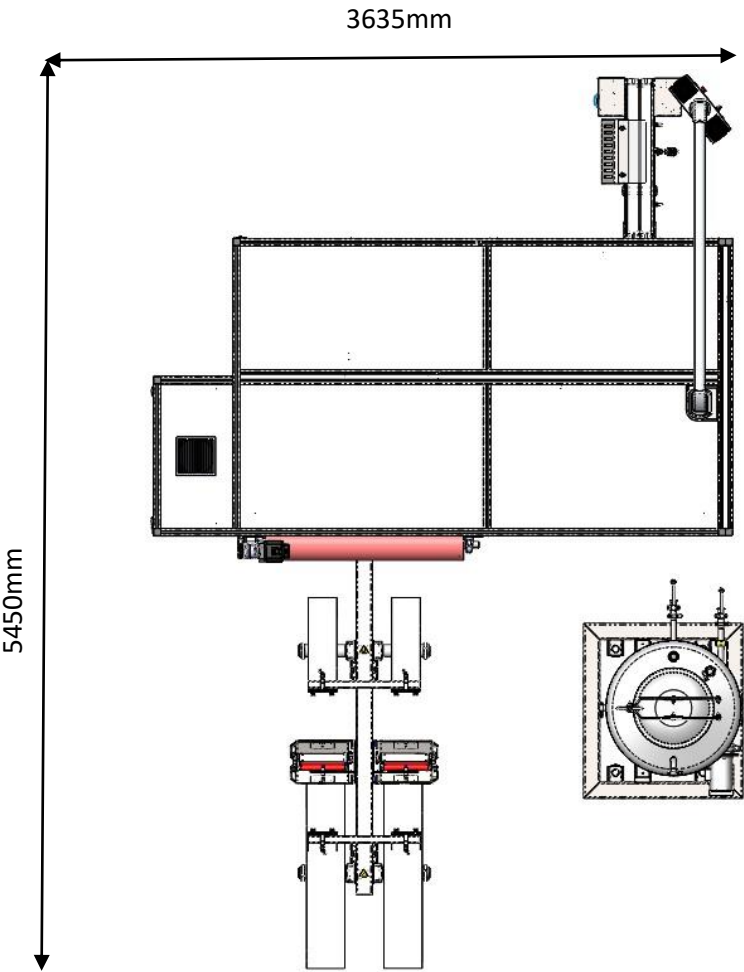

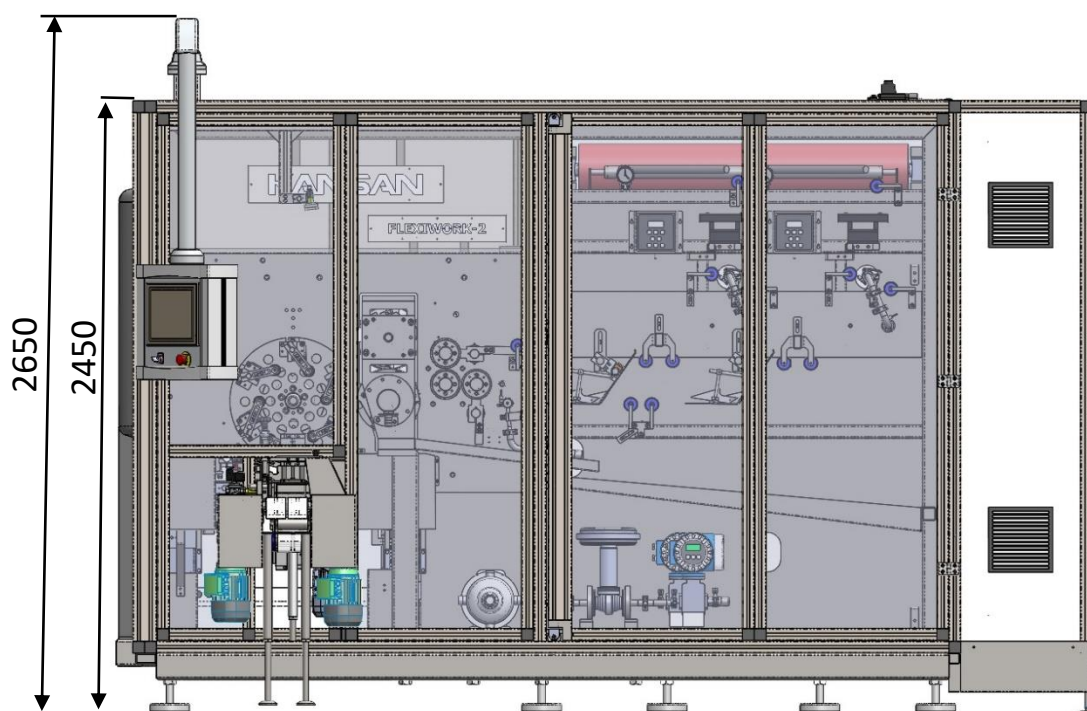MACHINE LAYOUT

Machine General Features:

All conveyor belts are anti-bacterial

All mechanical parts and electronic components are in compliance with FDA specifications.

Machine chassis is 304L stainless steel

All products touching surfaces are stainless 316L Cr-Ni (excluding transferring elements)

All mechanically adjusted parts have rulers and indicators

Standard machine colour RAL9010

Easy adjustable "Z" folding molds for each stations

Wetting system with dipping and nozzles

Automatically controlled wetting system in sync with machine speed

Wetting nozzles for each line

Liquid tank with pressure sensor control

Special dosage pump with minimum wastage

Ability to intervene in case of malfunction without stopping the machine

UV filtered glass

Mobile start-stop button

Safety switches on doors

Visual and audible alarm system for operational errors

Lightning on operational areas

User friendly HMI panel

Operator authorization function on machine control panel

Statistics info screen

Vacuumed, mechanical folding

Servo controlled cross fold position adjustment

Servo assisted sensitive raw material tension control

Sensor controlled roll finish and automatic splice

Separate DC and high voltage units

All I/O parameters can be tracked on HMI

Electric and pneumatic panel compact with machine

Servo controlled rotary-flexi, sharp cutting system

Easy stacking setting with stacking help platform

Working with different materials on the same machine (different dimensions, lotions, folding types)

Reduced noise and vibration

Technical Features:

A. Capacity:

Cutting Speed: 700 cuts/min (Design Speed)*

650 cuts/min (Advisable Speed)

Vacuumed cutting speed: 700 cuts/min

Stacking Speed: 50 stacks /min* (for each module)

Linear speed: 115 meters/ min*

Wipe Amount: 1400 wipes/min (Design Speed, on each line)*

1300 wipes/min (Advisable Speed, on each line)*

1400 wipes/min (Vacuumed Cutting Speed, on each line)*

* Verilen değerlerden önce ulaşılan makinenin hızını belirler.

* Makine kapasitesi kullanılan hammaddeye ve kalitesine göre değişiklik gösterebilir

B. Productivity:

Performance $\geq$ 85*

***Roll chance, cleaning, periodical maintenance etc. are taken into consideration while calculation machine operating conditions.*

Operation Continuity 24/7

C. Cutting System:

3 blades with rotary flexi system cuts with 1 helix angle. Therefore while the use time of blades extends, the cutting is quieter but more effective. With this system the impact is reduced to minimum and with the help of scissor type single point cutting, sensitive and effective cutting is possible with various raw materials with different compositions, especially materials with high polyester ratio. **Also, angled knife system enables easier blade adjustment.**

Maximum Wipe Count

600 wipes/min (for 1 module)

Cutting Range

90 mm – 230 mm (Optional: 280 mm)

Blades

Specially hardened stainless steel material

Bottom Anvil

Specially hardened stainless steel

Bottom and Upper Cylinders

Stainless steel

Designed to endure against high force and absorb vibration

Conveyor Belts

All conveyor belts are polyurethane and in compliance with FDA specifications

D. Unwinding Unit

Bobbin unwinding unit consists of a module for 1 bobbin. Bobbin finish sensor placed on the line gives alarm and stops the machine if bobbin finishes, tears or tangles.


Optionally, automatic splice unit can be added to the bobbin unit.

Bobbin Specifications and Dimensions	<i>Bobbin width (for each line)</i>
	Max .: 200 mm*
	Min .: 120 mm
	<i>Max. .Bobbin Diameter: 1100 mm</i>
	Core Diameter: 76 mm
	<i>Max. Bobbin Weight: 35 kg</i>
	<i>Bobbin Amount: 1 for each module</i>
	<i>Bobbin Change: Automatic non-stop flying splice</i>
	<i>Base nonwoven weight (gr/m²)</i>
	Min .:30 gr/m²
	Max .:100 gr/m²
	* It's possible to work with wider rolls for different folding types. Please contact and consult your sales representative for more information..

E. Folding Unit

There is a group of folding plates on the unit. All folding plates have a mechanism to enable easy adjustment on the plates. On this section the folding unit can make "Z" type folding.

Folding Unit Specifications	<i>Folded product width</i>
	Max : 100 mm (Unfolded 200 mm)
	Min. : 55-60 mm
	Unfolded : 120 mm
	<i>Folded Product Length</i>
	Max. : 115 mm (Katlanmamış 230 mm)
	Min. : 45 mm (Cross folded 90 mm)
	<i>Folding Type "Z"</i>

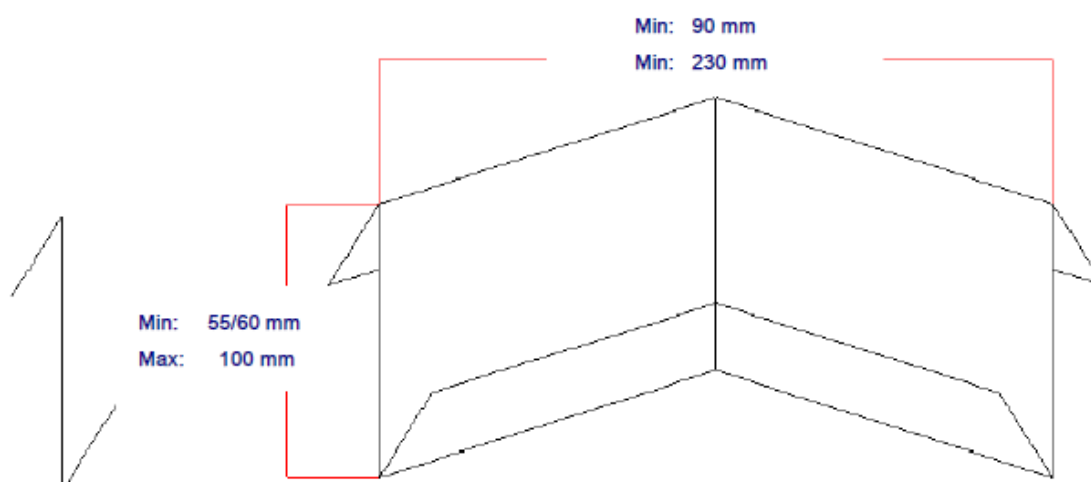

F. Cross Folding and Stacking Unit

This servo controlled unit realizes cross fold mechanically without VACUUM.

Hygiene is our number one priority on the folding system. Therefore this part of the machine is designed to give easy mechanic maintenance and intervene easily when needed.

Max. Stack Sped: 50 stacks/min (for each line).

Stackable Product Length (Folded)


Max. : 115 mm

Min. : 45 mm

Stackable Product Width (Folded)

Max. : 100 mm

Min. : 55/60 mm

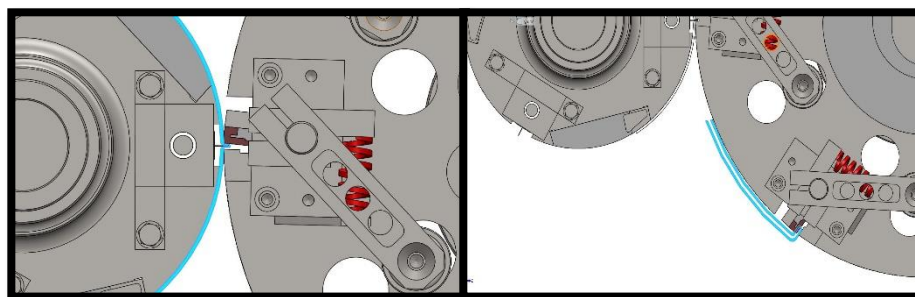

Minimum Stack Amount: 5

Maximum Product Height *: 60 mm (depending on the base) / Optional: 70-80 mm

* Product width must be equal to the value of max. product height.

Stacking System Components and Features	
Product Pushing Unit	<i>Servo controlled. AISI 316 L stainless steel construction</i> <i>Controllable product transfer speed ramp</i>
Stacking Platform	<i>AISI 316 L stainless steel construction</i> <i>Independent servo control</i> <i>Electronic change option depending on stack height</i> <i>Torque control system to prevent mechanical jams</i>

G. Liquid Dosing System

Wetting system consists of below units:

High quality stainless steel 500 lt buffer tank;

Wetting nozzles on each line

Electronic pump has speed control which makes it work in sync with machine speed. It is possible to increase or decrease the amount of liquid dosing level with the help of this control mechanism. All welded joints are passivated against the possibility of rusting and blurring in pipes.

Wetting Amount

Minimum system flow 0,2 L/min. – 3,5 L/min

Maximum system flow: 0,8 L/min. – 14,0 L/min

Wetting type: By nozzles

Sensitivity: $\leq 3\%$ (On constant speed)

Liquid Dosing System Components	
Liquid Tank	Capacity: 500lt - AISI 316 L Stainless steel <i>Tri-Clamp Joints</i> <i>Automatic Feeding System:</i> System automatically checks the liquid level inside the tank. When liquid level probes sense low liquid amount, they send a signal to PLC which starts working liquid feeding pump. When the tank is full, PLC automatically stops the pump. <i>Feeding pump :</i> Alfa laval brand stainless steel centrifuge
Installation	<i>Filter :</i> AISI 316 L stainless steel <i>Piping maintenance :</i> Electronically controlled MANUAL EVACUATION mode <i>Easy cleaning nozzles</i> <i>All components AISI 316 L stainless steel</i> <i>Tri-Clamp Joints</i> <i>Wetting pump :</i> Ebara brand stainless steel centrifuge <i>Grundfosddi wetting pump</i>

Consumption

Electricity 380 VAC / 50 Hz / 3PH/16KW

Air Pressure: 6-8 bars


Air Consumption : 75 nominal lt/min 7 bars

Components:


Electronic parts and PLC	: Omron, Pilz, Cognex, Yaskawa
Electronic equipments	: Schneider, Telemecanique, Phoenix, Contact,
Transmission	: Bonfiglioli, Tramec
Belts	: Optibelt, Megadyne, Isoflex, Gates
Pneumatic Parts	: Pneumax, Festo, SMC, Mindman
Sensors	: Sick, Telemecanique, Turck, Leuze, FAG, Nachi, ORS
Bearings	: SKF, Asahi
Gear system	: SIT, KTR, RAN
Linear Carriers	: INA, Hiwin, CPC
Stainless Steel	: Finland, Sweden

MACHINE TRANSPORTATION AND INSTALLATION INSTRUCTIONS


- Separate Rotation Conveyor
- Separate Operator Screen Panel
- Separate Bobbin Group
- Installation and electrical connections must be dismantled and assembled.

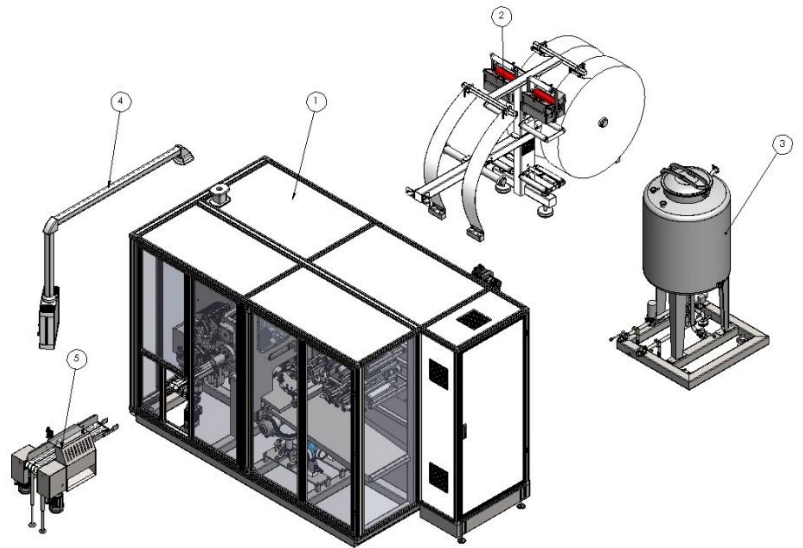

- On First Pallet Cabin Group

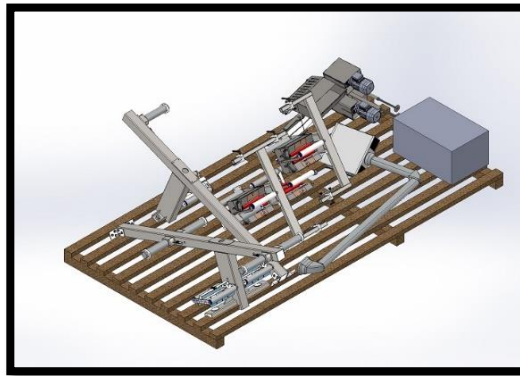



- On Second Pallet Cabin Group
- Operator SScreen
- Rotating Conveyor
- Spare Parts Box

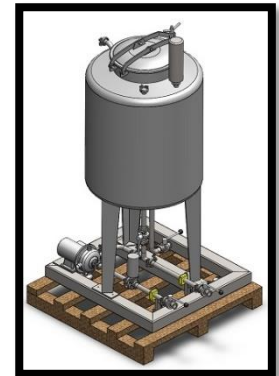

- On Third Pallet Cabin Group


- After the machine is packed, it is necessary to be loaded in appropriate locations for transit.
- For loading, machines must be transported in accordance with instructions from specified locations.
- Machine is landed again and installed by using installation instructions.

MACHINE TRANSPORTATION AND INSTALLATION INSTRUCTIONS

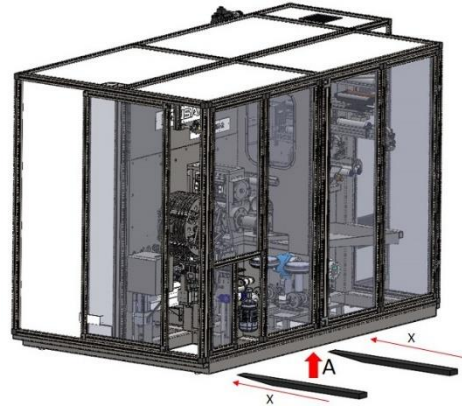
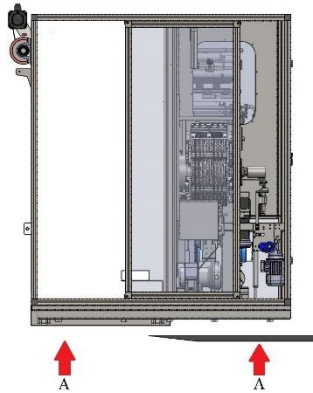


- The machine should be raised from the A points with the help of a jack.
- Raise the machine by placing the forklift blades underneath the machine in the X position.

- There should be put 4 or more high chocks to the gaps prepared for the machines as shown in the picture.

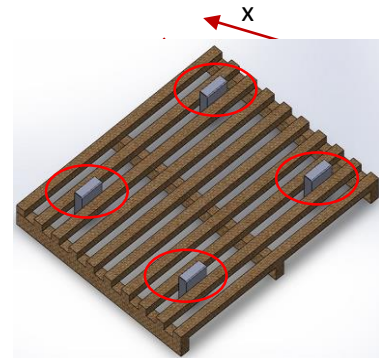

- Leave the machine on the pallet by setting the chocks as shown in the picture.
- Remove the forklift blades.

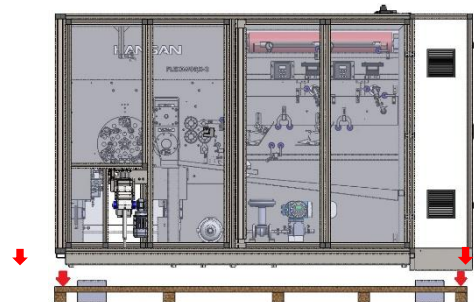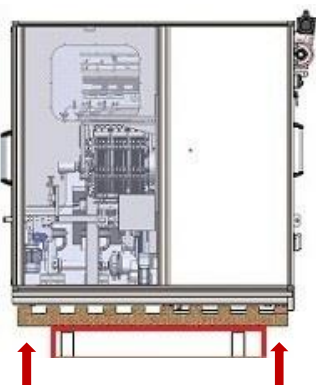

- Forklift blades are lifted from under the pallets and released from the chocks.
- The machine is secured to pallets by scale bolts.
- Landing of the machine should also be done with these instructions


MACHINE LEVEL AND ELECTRICAL-PNEUMATIC CONNECTIONS

Frames of the machine are connected according to layout.

During this process, a forklift is needed. To check if the positioned modules of machine are on axis, measuremental coordinates or a laser pointer is needed.

After placement, machine feet (**Picture – A1**) should be assembled with the help of a water gage to check the parallelism of machine with the ground. After this, the height of the machine should be between 30~60mm.


Tension of trigger and conveyor belts must be checked after levelling. After these controls, tension should be suitable to “1 cm stretch on 1 kg pressure” ratio.

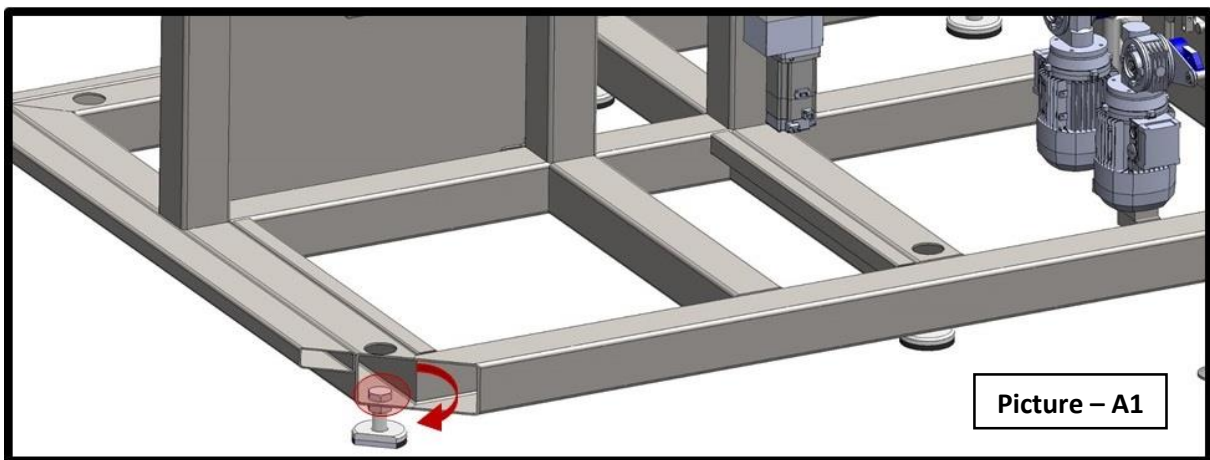




First thing to do on electrical and pneumatic connection is to make sure that main switch and pneumatic valve is off. Electrical (multi socket etc.) and pneumatic connections must be done properly according to the codes. (**Picture – E1**)


Electric; 3 PHASE – 1 NEUTRAL – 1 GROUND, between PHASE-NEUTRAL 220V, between PHASE-PHASE 380V, between GROUND – NEUTRAL should be 0V and must be tested.

Pneumatic main air pressure source must be 7-8 bars. Our machine's pneumatic working air pressure is 6 bars.

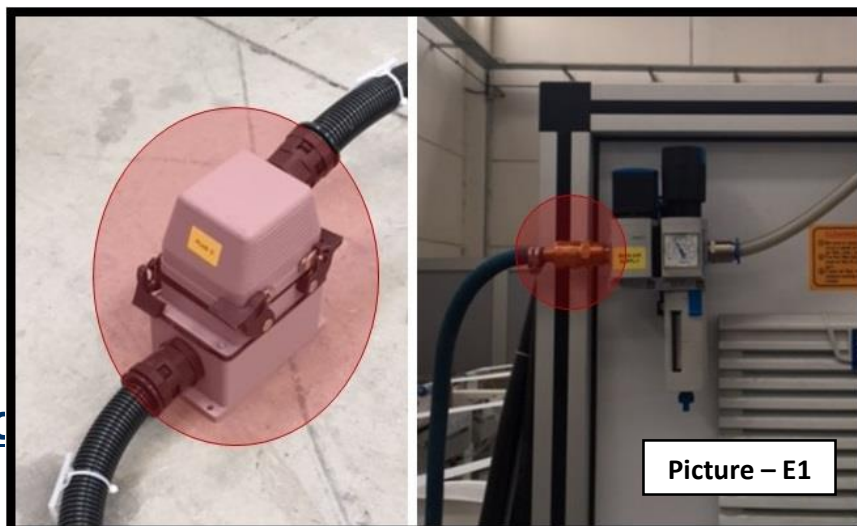


ELEC

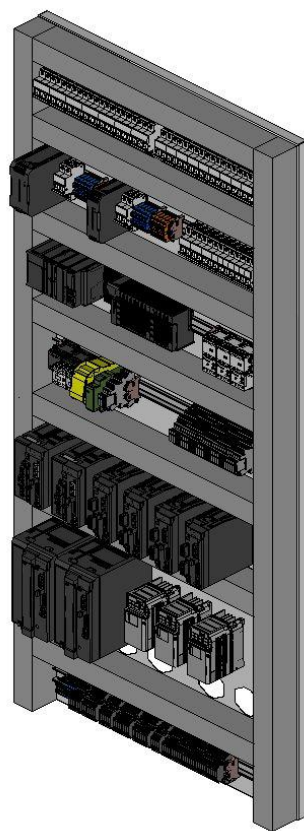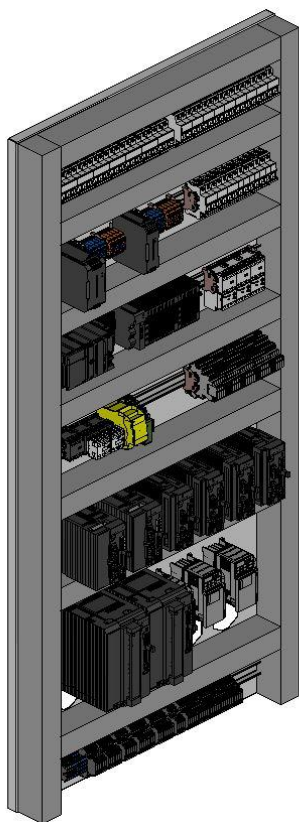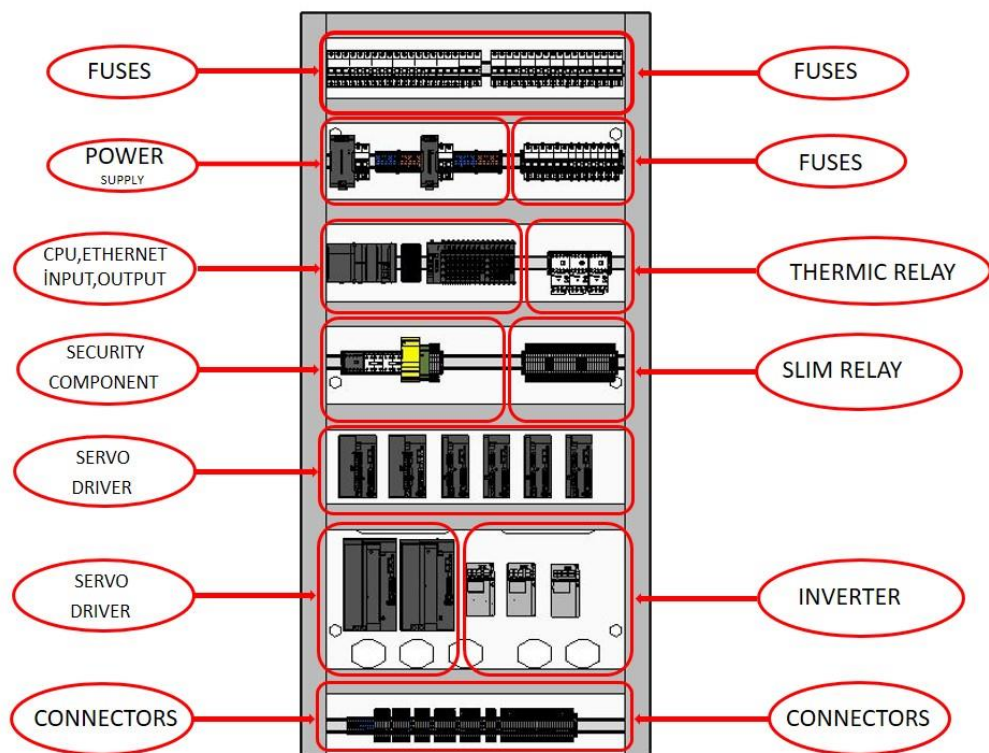

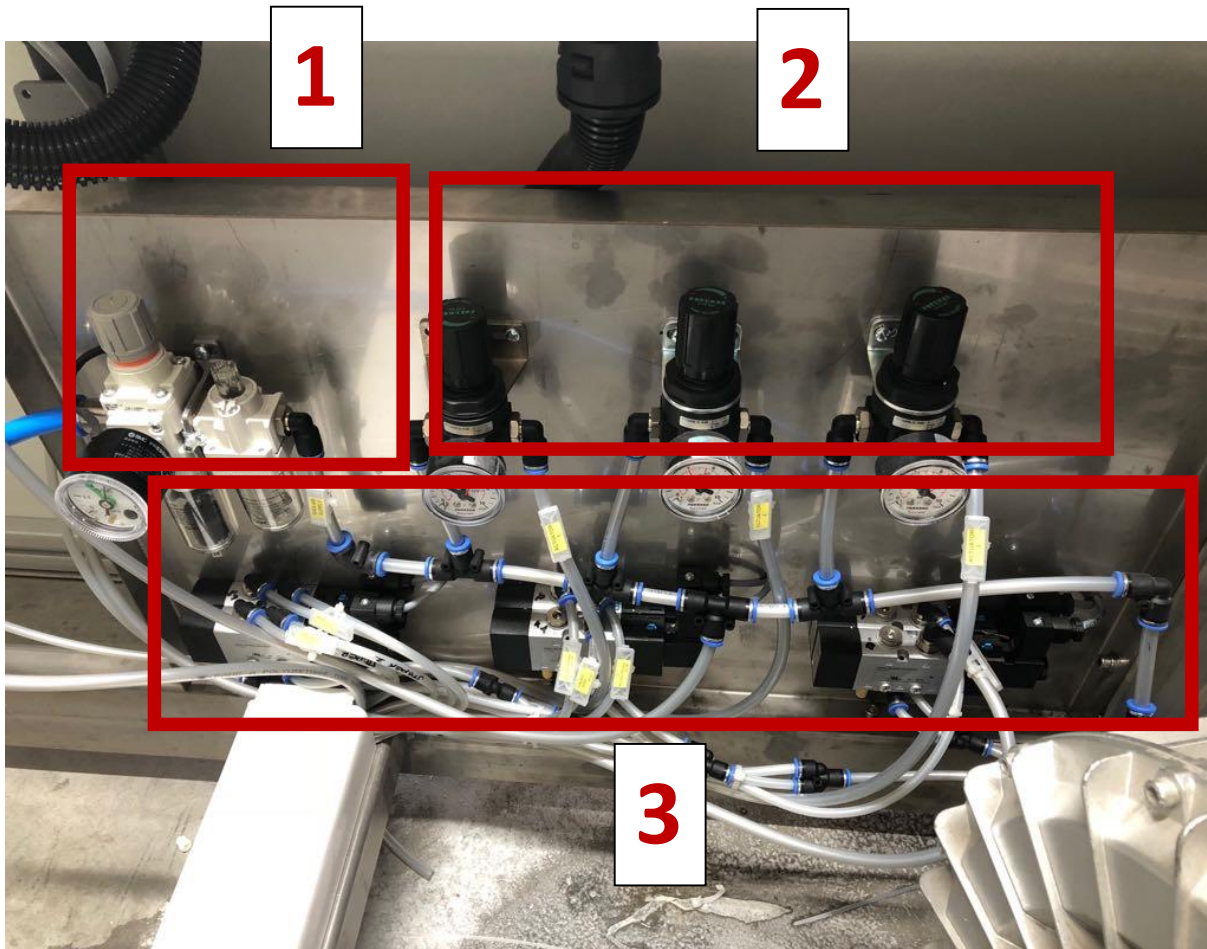PNEUMATIC PANEL DETAILS

1. Regulator, Manometer ,Lubricator
2. Manometer, Regulator
3. 5/2 – 1/8 Pneumatic Valve

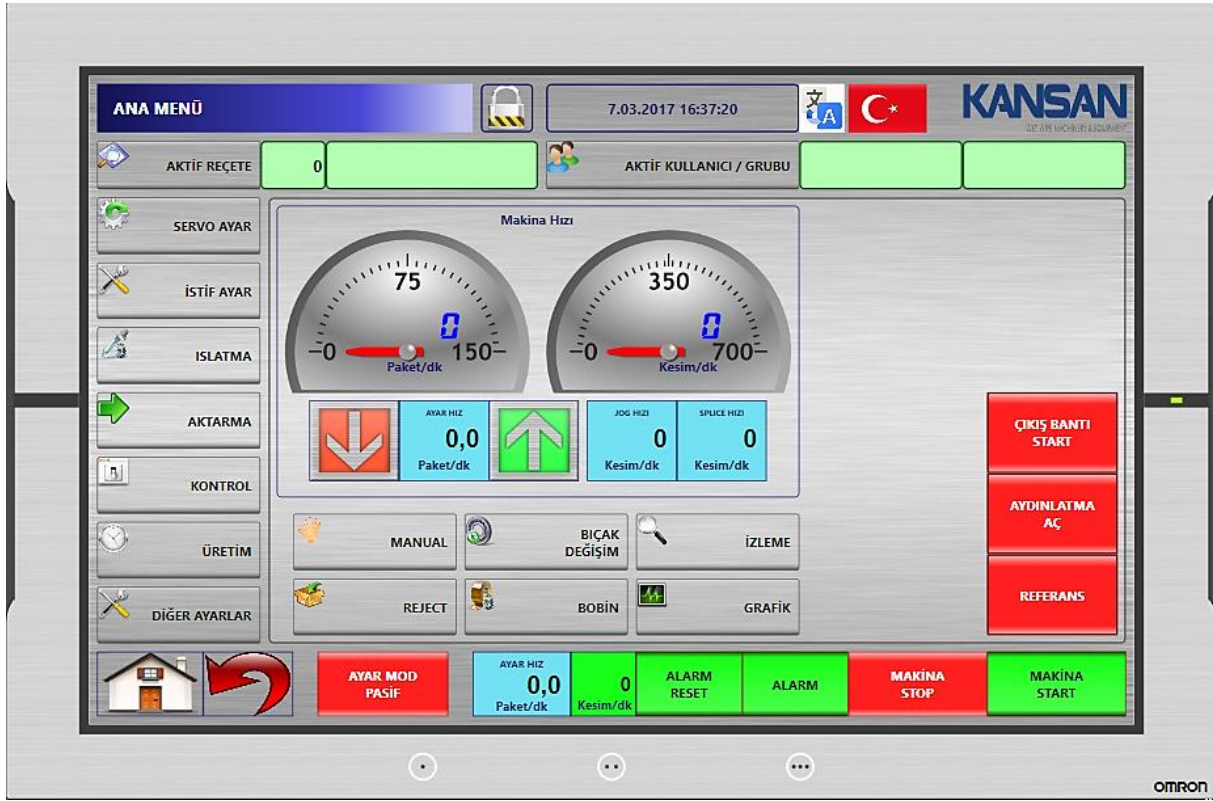HMI DISPLAY

- Cutting Speed: Shows the speed of cutting.
- Pack Speed: Shows the speed of packs produced in one minute.
- Cutting speed setting and target-real values can be observed.

HMI DISPLAY



- The button to go back to main page.
- The button to go to the previous page.
- **Setup Mode:** When setup mode is activated, it creates product setup with suitable working and safety conditions.
- **Alarm Reset:** The button to reset the alarm. Machine does not start without resetting the alarm.
- **Alarm:** Shows the description of the alarm that occurs.
- **Makine Start - Stop:** Buttons used to start or stop the machine.



- **Output Belt:** Activates-passivates product output belt.
- **Lighting:** Turns on the lights inside the machine.
- **Reference:** The state machine and components are positioned according to the places producer decided previously and waits ready to work. Machine doesn't start without calling reference first. Some settings requires calling reference after. In these cases reference request will show up on the screen.



(Picture – M1)



HMI DISPLAY

- Active Recipe: After settings are done for the product machine will work on, a recipe is created with a recipe code and recipe name.

Depending on the product that is decided to work with, its recipe is chosen with **LOAD RECIPE** button if there are more than one recipes

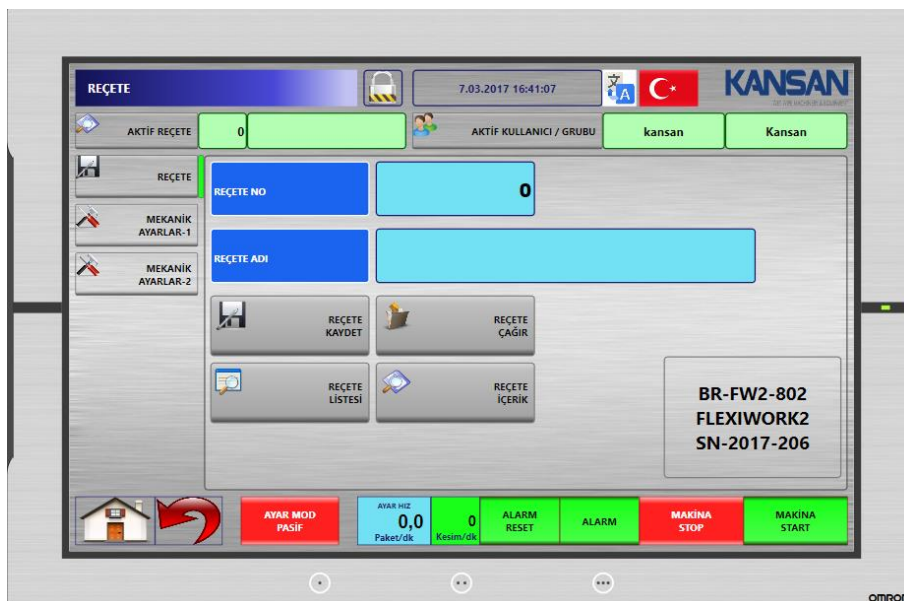



HMI DISPLAY




- **Towel Length:** Sets the folded cut length of the wipe.
- **Puller Speed:** Sets the tension of raw material going through the folding plates.
- **Folding Offset:** Adjusts the folding axis of the product.

- **Puller-1 Offset:** During pack change, depending on the axis of the last wipe, it adjusts the entering angle of the pusher system (White delrin helper platform) By changing this value, it is possible to make Stack-1 to touch the wipe sooner or later during transfer.
- **Stack-2 Offset:** (Main stack platform) Depending on the angle of the last wipe on pack level, it adjusts the timing of stack platform's descent (transfer time).

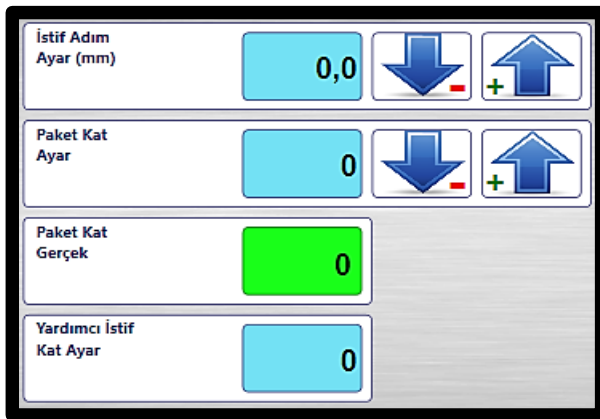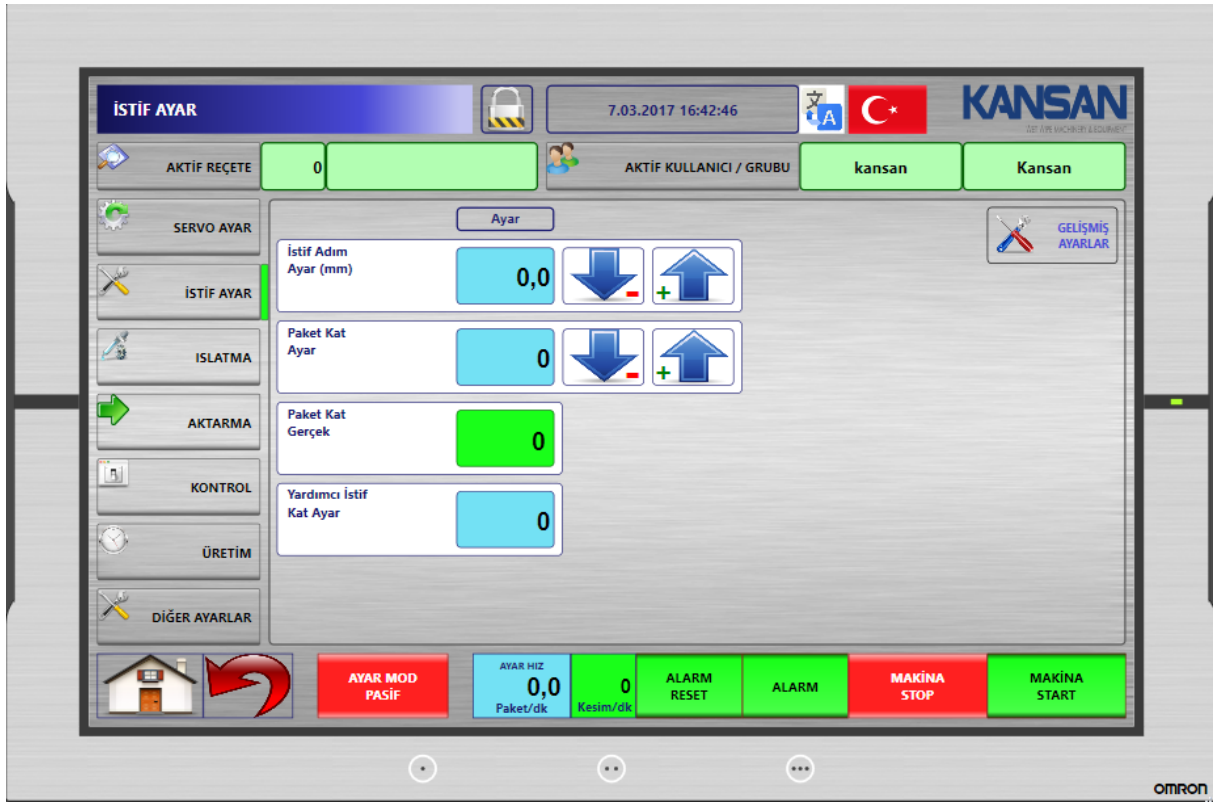
HMI DISPLAY

- **Stack Step Set (mm):** The value of one wipe's thickness should be entered. When every wipe is stacked, the value entered on the platform will decrease.
- **Pack Layer Set:** Ideal pack layer set of a pack with 15 wipes is 6-7 wipes. Therefore pack layer set is 6-7.

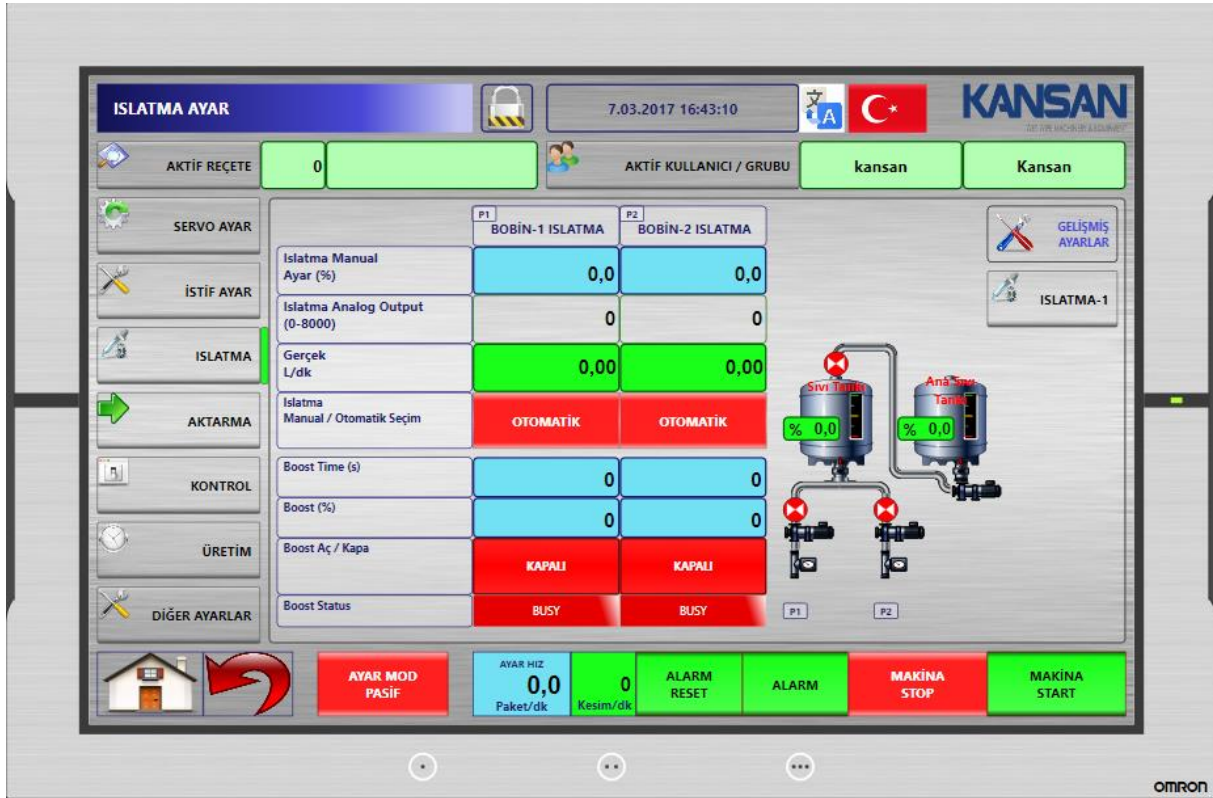HMI DISPLAY

- **Manual Wetting Setting (%)**: If wetting is set to activate manual from automatic, by entering a value here system can transfer liquid without turning on the machine. This function is used for cleaning mechanical parts.
- **Boost Time (s)**: It is used to determine the extra liquid amount timewise for machine's start ramp or until the cc value of proportional or lobe pump is stabilized after start up.
- **Boost On - Off**: Activates-passivates this feature.

HMI DISPLAY

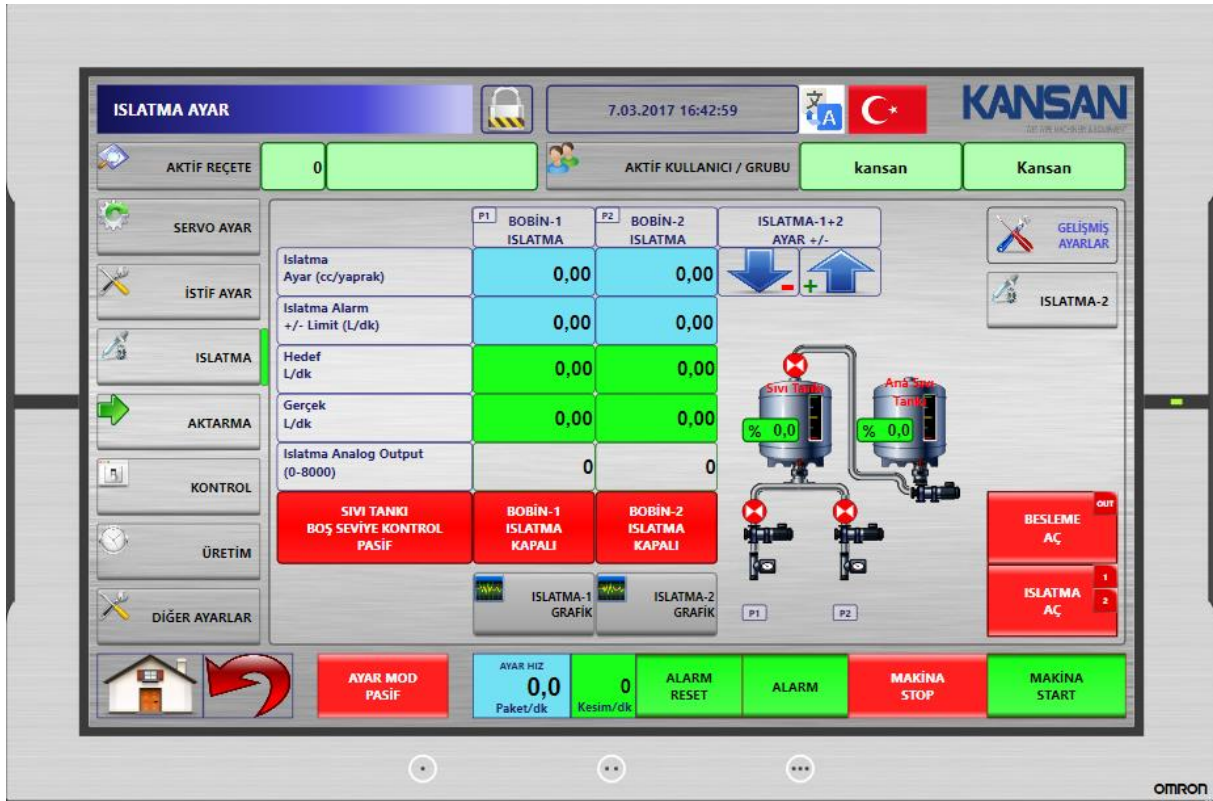


- **Wetting Set (cc/wipe):** It is used to determine the amount of liquid as cc per wipe.
- **Wetting Alarm +/- Limit (L/min):** Adjusts the +/- alarm tolerance on designated cc/wipe wetting amount.
- **Target Liter:** Targeted liter.
- **Actual Liter:** Actual liter.




- **Tank Empty Level Control (Active-Passive):** If activated, this control gives alarm or stops the machine when liquid inside the tank decreases to the designated empty level.
- **Bobbin 1 and 2 Wetting Control:** These buttons are used to activate or passivate the wetting.



- **Feeding Control:** If activated, it feeds the liquid tank automatically when empty and stands by.
- **Wetting Control:** Activates or passivates all wetting system.

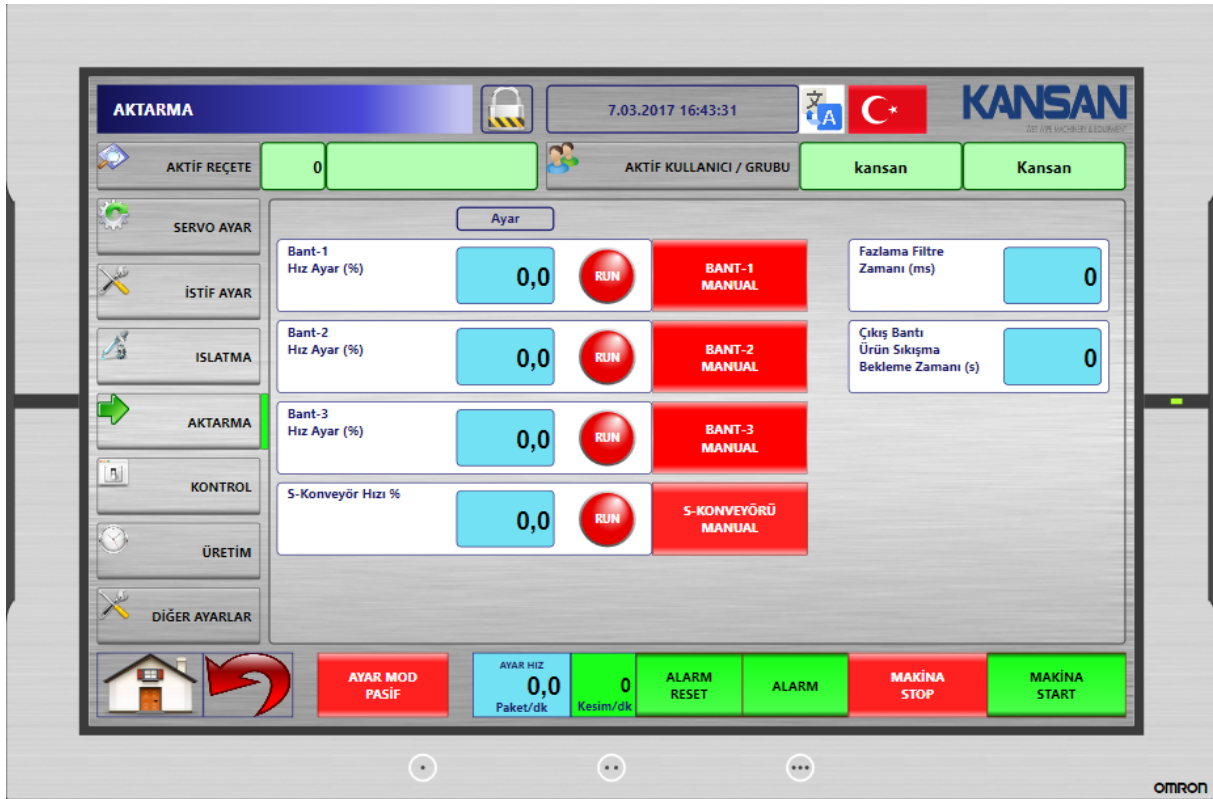HMI DISPLAY

- **Transfer Page:** On this page product output belt speed and product axis turning speed is set. There is a manual option on the same page.

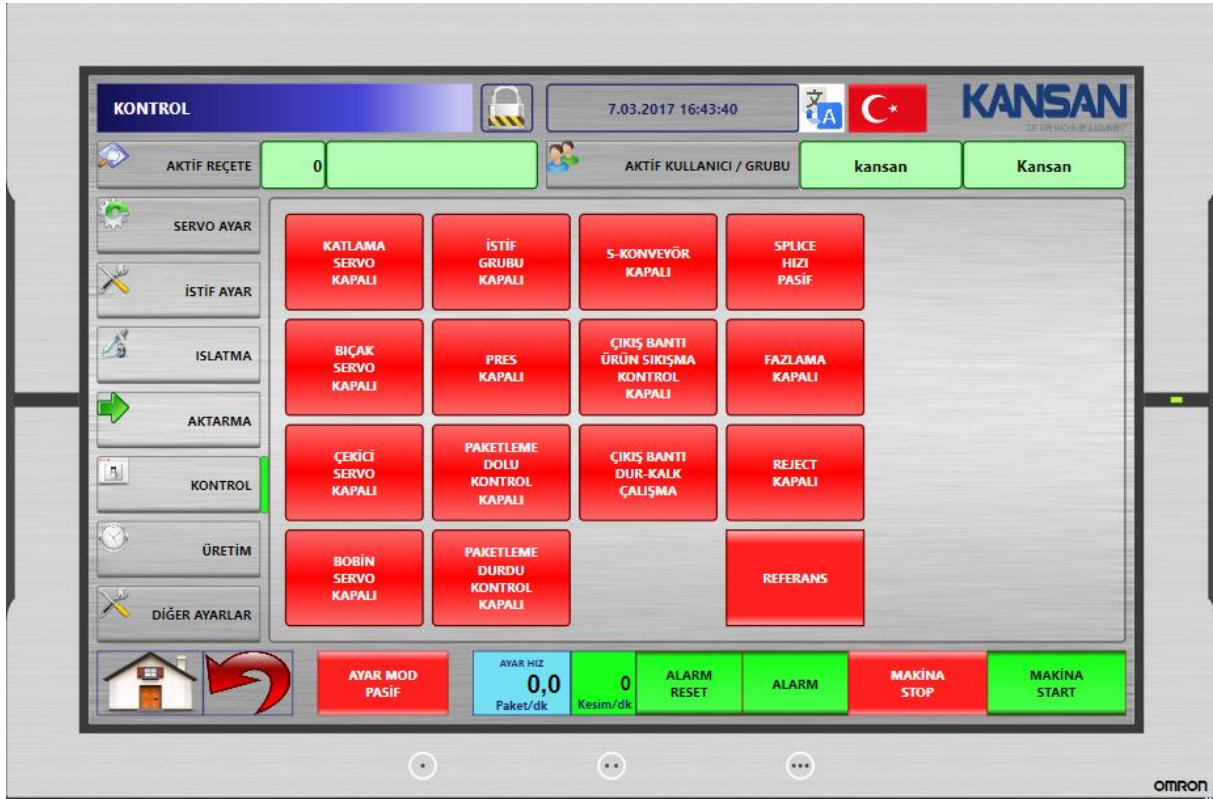
HMI DISPLAY

- **Control Page:** This page is used to activate or passivate servo groups and other modules the product system needs.

HMI DISPLAY



- **Production Page:** Activities like production on the machine, working, stopping can be observed on this machine.

HMI DISPLAY

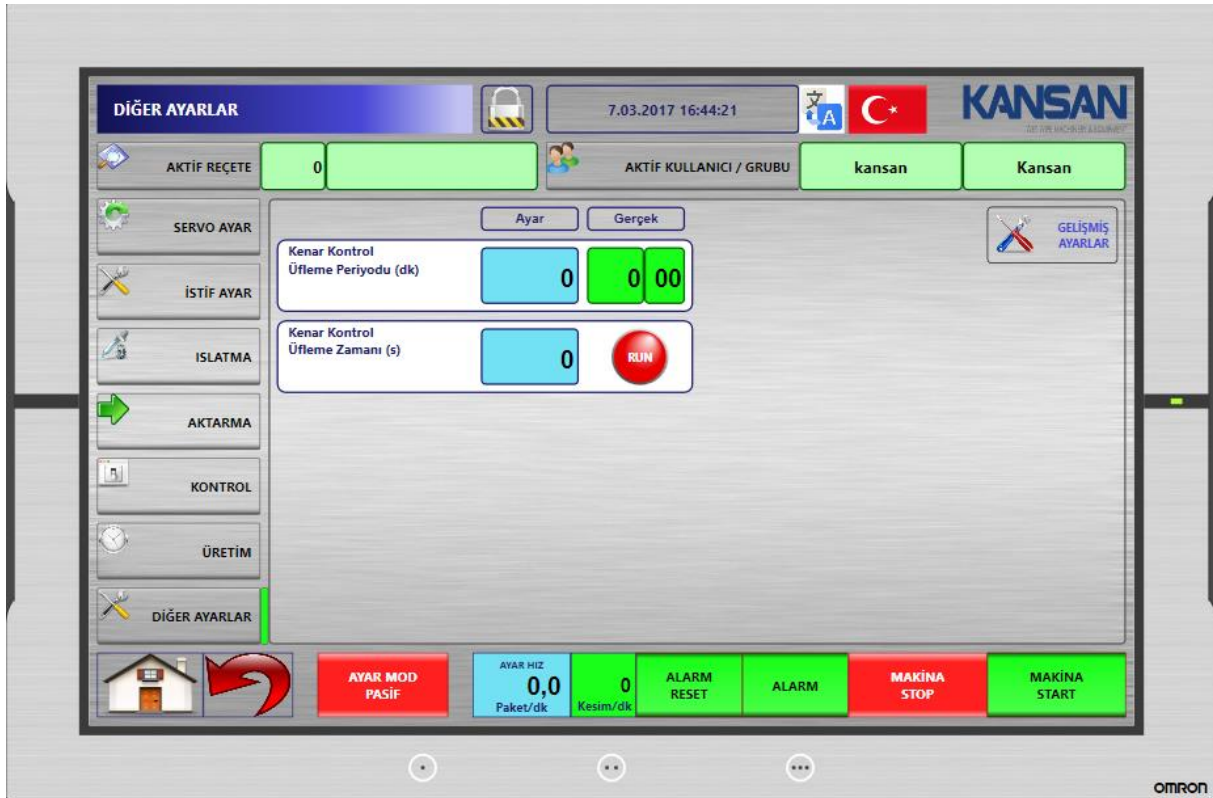


- **Edge Control Blowing Period (s):** On this page web guider sensor's cleaning with automatic air blow time is set.
- **Edge Control Cleaning Period (min):** Cleaning period is set on this page.

HMI DISPLAY

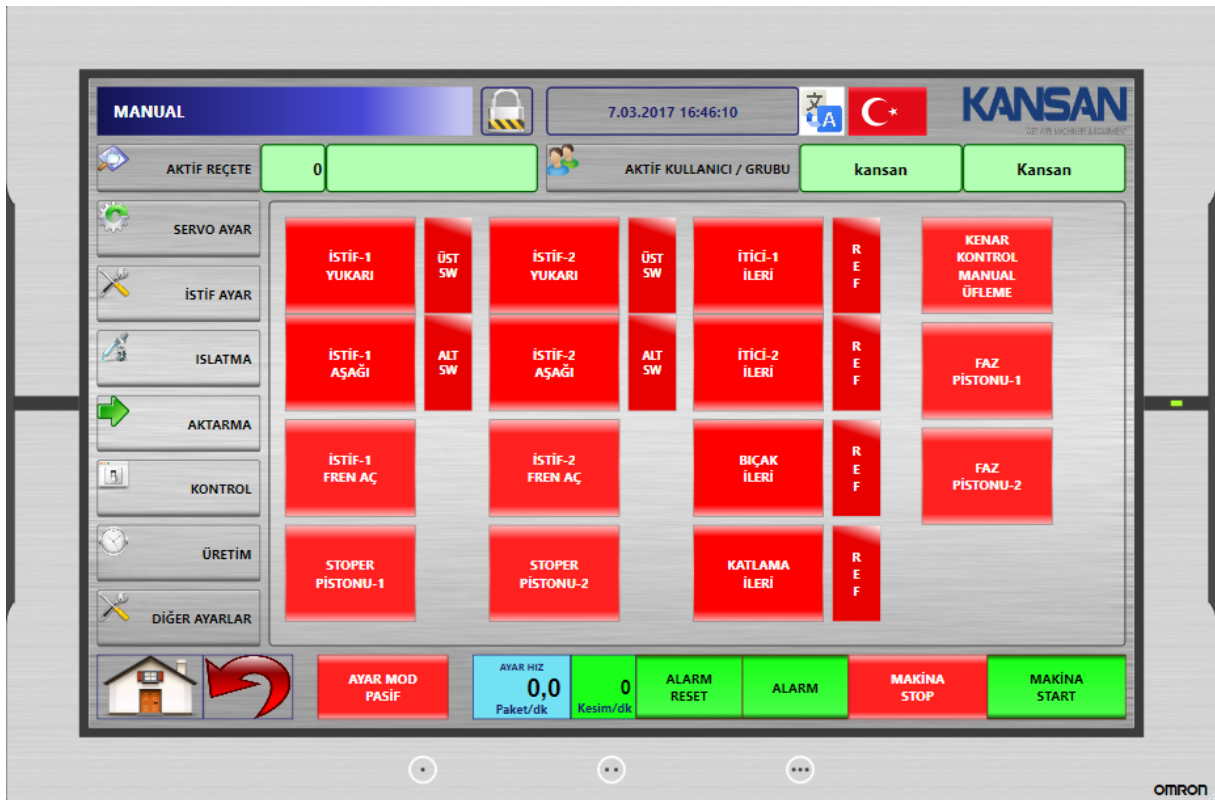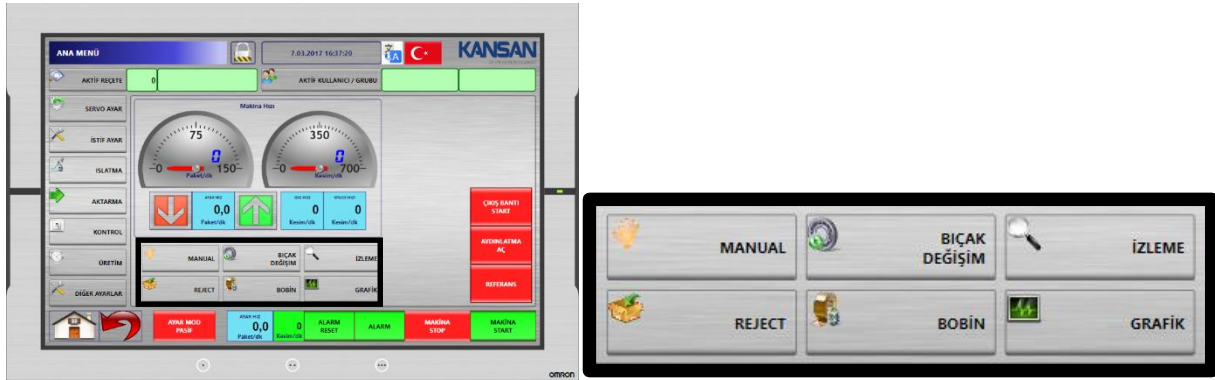

- **MANUAL:** There are buttons to test and activate each module on the machine and it is possible to set the modules on motion manually.

HMI DISPLAY

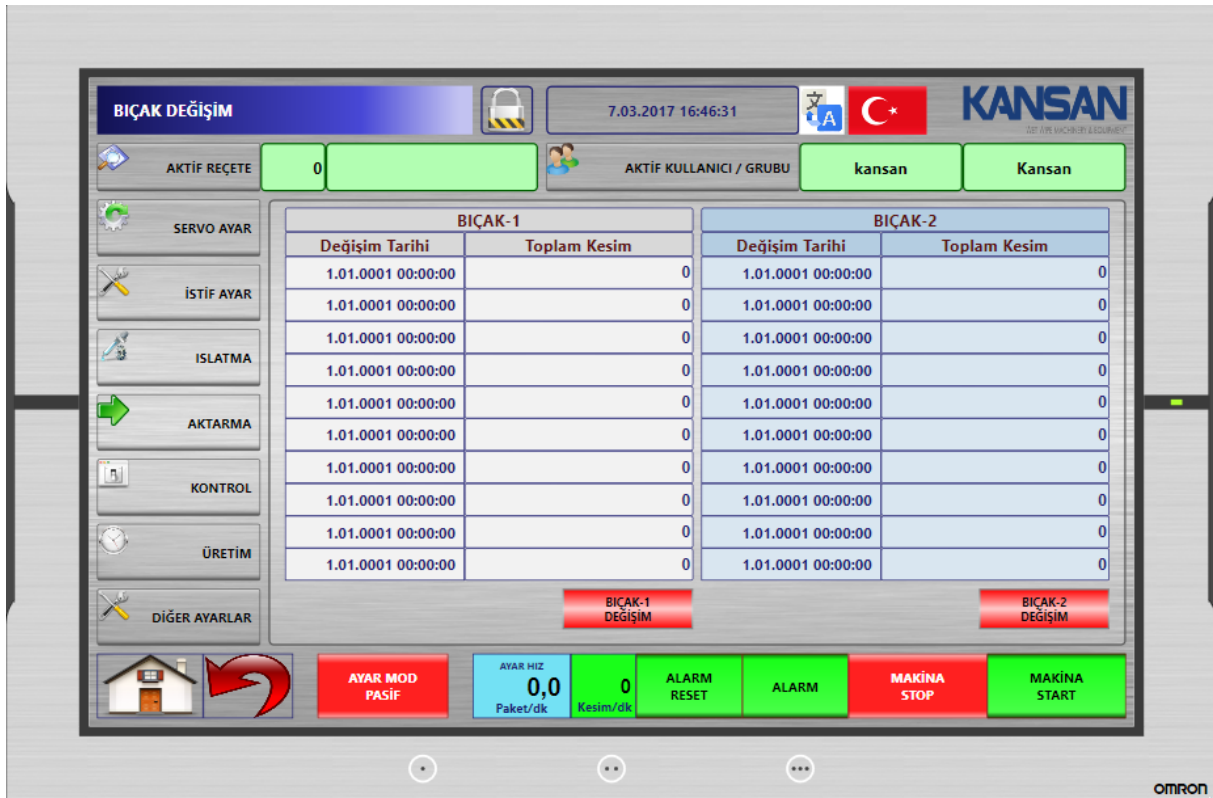



- **KNIFE CHANGE:** By pushing KNIFE CHANGE-1/2 buttons, it is possible to save the blade changing time of the rotary knife on the machine. By regularly using this page you can track the use time of blades on the machine.

HMI DISPLAY





- **MONITOR:** You can control servo speeds, torque values and digital input-outputs by making them active or passive on this page. You can observe malfunctioning servos, sensors connected to modules and other components, cycle of servo motors and their torques on this page.

HMI DISPLAY

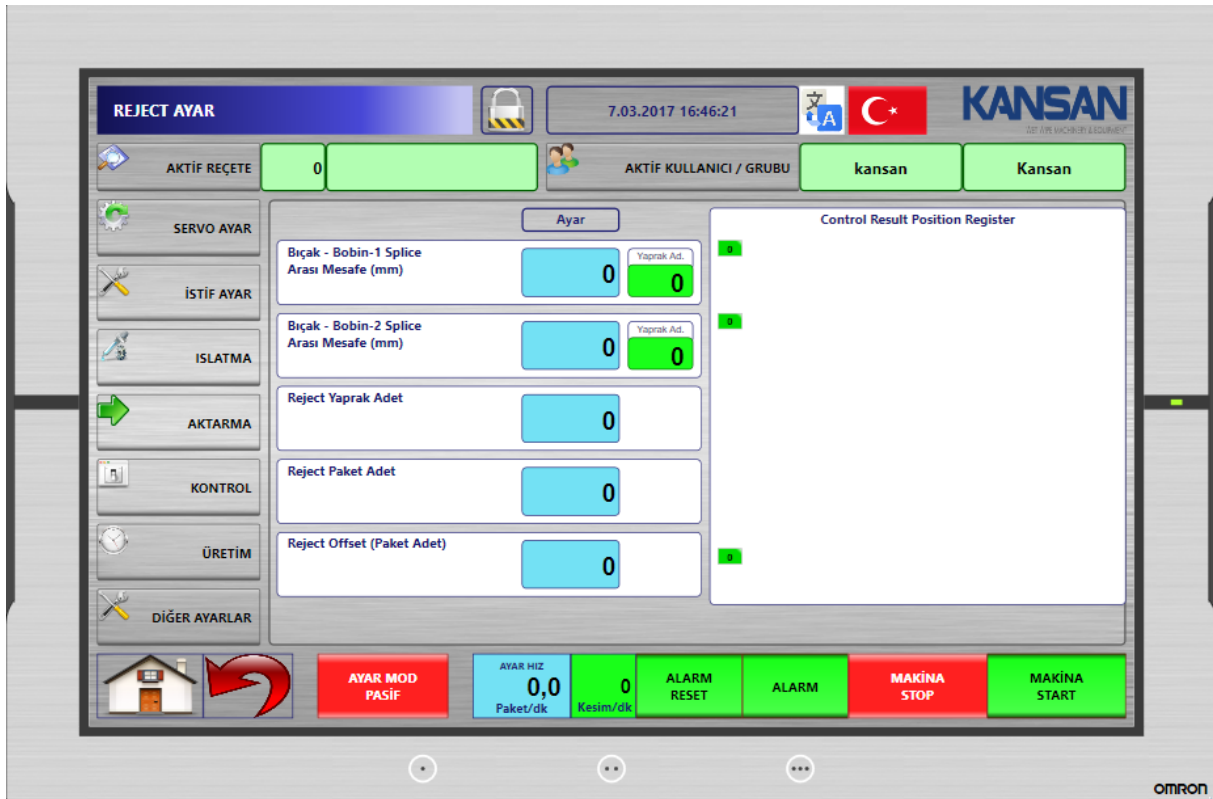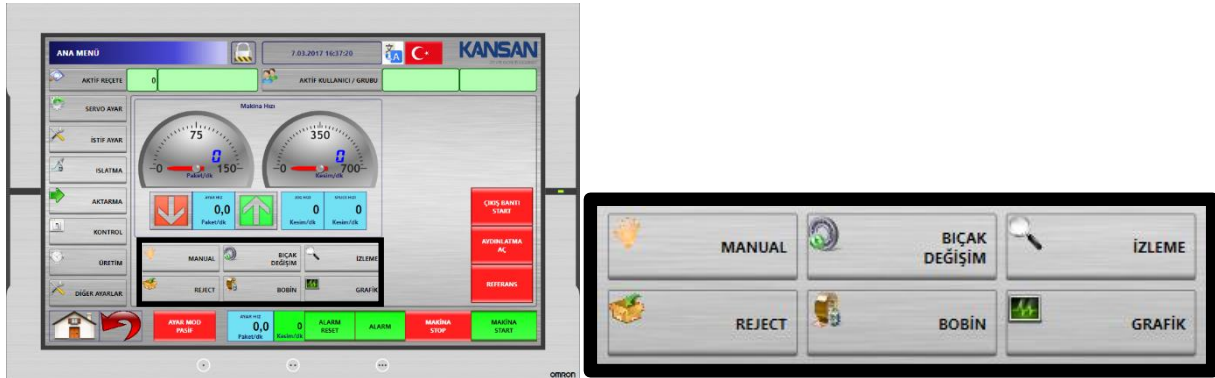


- **REJECT SETTING:** This screen allows you to check the speed, torque values and active / passive states of the digital inputs and outputs of the servos running on the machine. You can observe malfunctioning servos, sensors connected to modules and other components, cycle of servo motors and their torques on this page.

HMI DISPLAY

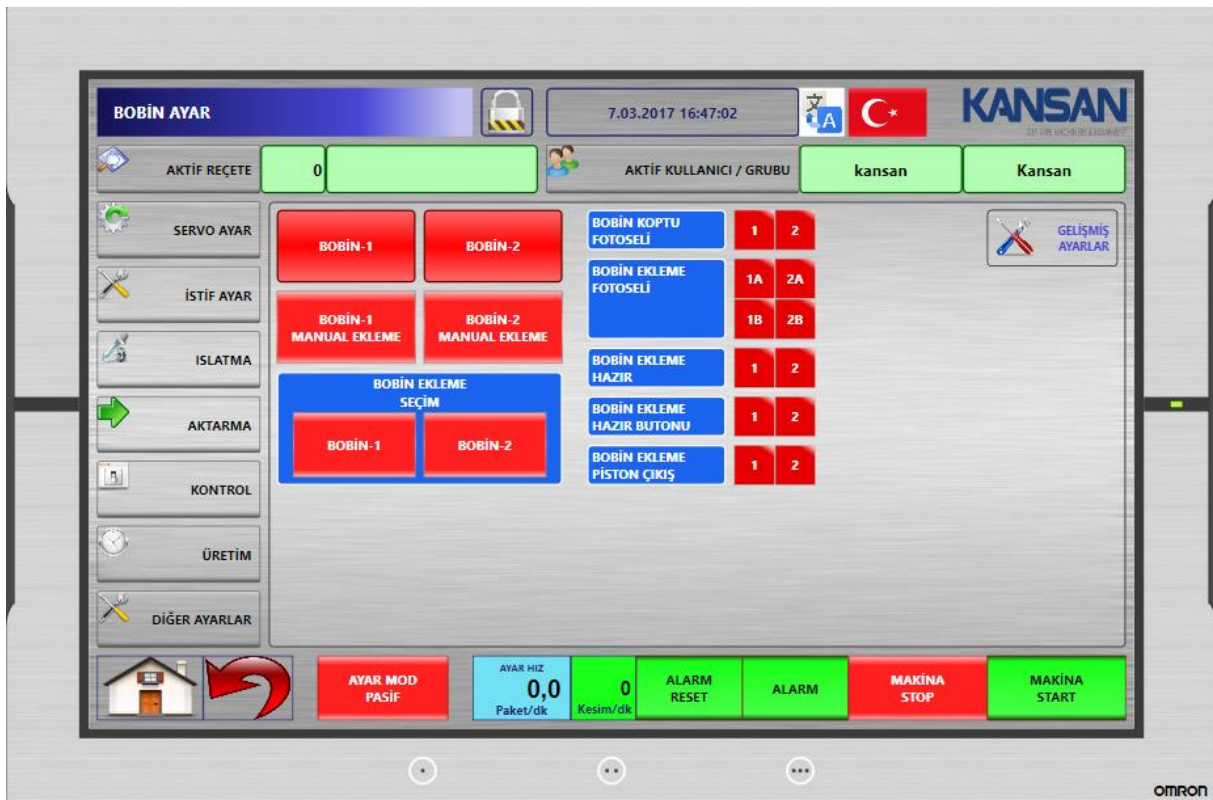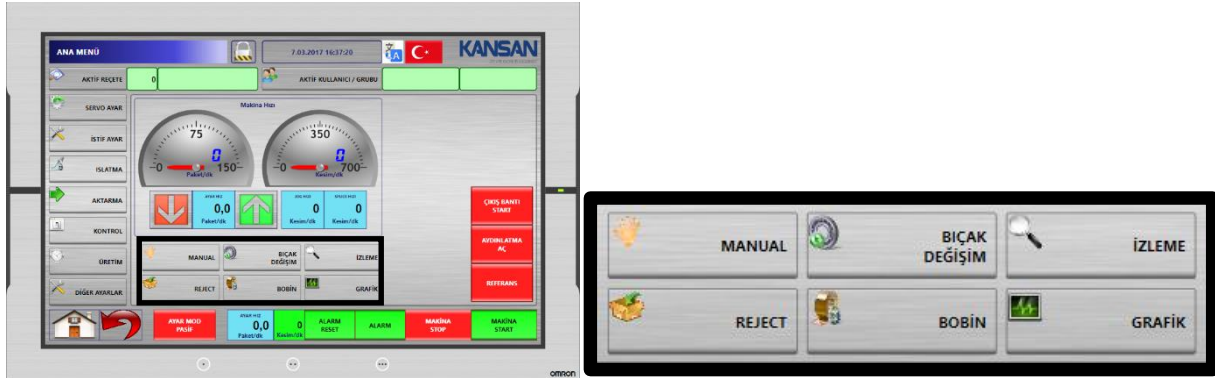

- **ROLL SET:** This page is used to activate and passivate sensors and buttons on roll unit. You can observe the activity on this unit and turn on/off automatic splice units. You can test splice rolls by manually activate/passivate them.

HMI DISPLAY

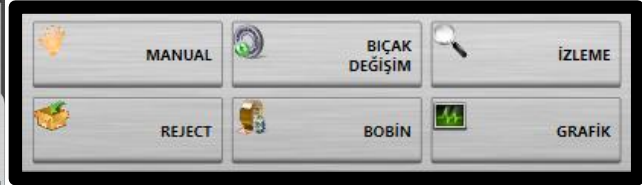

- **GRAPHICS:** On this page you can observe the speed of active systems including dosing system with the help of graphics.

SETTINGS


EXAMPLE RECIPE CREATION

Example Product Description: 200*180 “Z” type folding. Total product weight is 240 gr and wipe count is 25. Recipe name will be saved as KANSAN01. Total product width is 90mm.

1. Cut length is decided according to 180mm or 200mm roll width. In our example we'll use 180mm roll width. Therefore cut length will be 200mm.
2. Roll with 180mm width (Pictures_R1) centered on pneumatic shafts. (Pictures_R2) With air gun, pneumatic shafts are pumped with air. Roll's unwinding direction should be suitable according to the way it will go through splice unit. (see scheme)




3. After roll is passed through splice system properly, brake weights should be positioned on the roll. (see picture)
Raw material is passed through unwinder rolls and brought until 90° cross shafts. (see pictures)



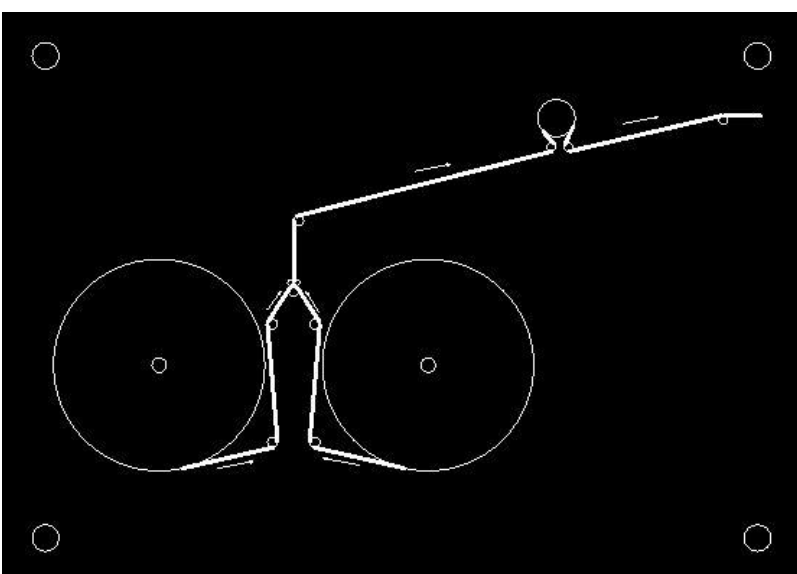


4. While passing the raw material according to flow scheme, it should be centered on folding plates and center position should be chosen on edge control and reached to the point of the puller with the help of machine start button.



After this, puller speed is entered as 101 from the servo setting page. Wipe length is entered as 200. During and after material flow, in case 101 value is too high, flowing material will have tension. This tension will reduce 180 mm original roll width down to 160-170 mm. Under these circumstances, puller roll speed must be decreased. If puller roll speed is decreased too much, the material will be loose and folding plates will not be able to make desired folding. 100 should be regarded as starting point and ideal value must be adjusted by increasing or decreasing the value according to the tension or looseness of the flowing material. When ideal value setting is done, enter point and exit point of folding plates should be measured and roll width must be 180 mm as a result. Material should be on a stable flow and be prevented from sliding left-right.

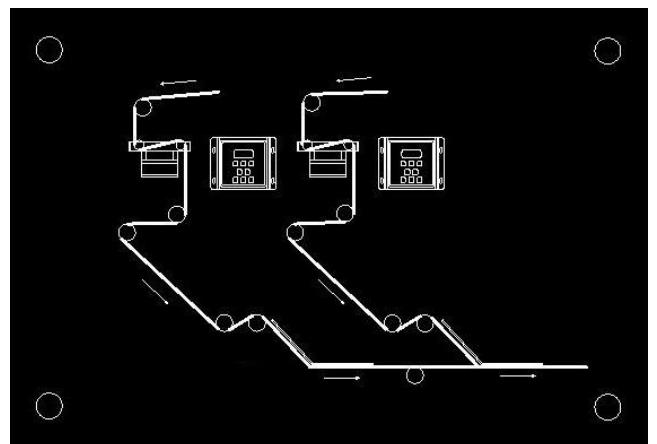

5. After puller roll, material width 180 mm must be folded into 90 mm, which is the recipe value, by going through the folding plates. To adjust this fold dimension, the button (in the picture) is turned to left or right which moves the folding plate and therefore desired folded width can be obtained
6. The material should not touch against the wide surface of the folding plate. (see picture)
7. It must be checked that product touching rolls are turning and turning easily (see picture).
8. Wetting nozzle must be adjusted to impregnate the material going between two rolls around 5-10 mm (see picture).
9. Wetting nozzles must be positioned vertically against the surface of raw material. (see picture) Material's top surface should be impregnated. The surface that touches the folding plate must not be wet. (see picture) If nozzle tube pistons are not adjusted according to product width, liquid will overflow outside. (see picture) Tube pistons must be adjusted in a way not to overflow the liquid outside but enough to wet all the surface so no part of the product stays dry.

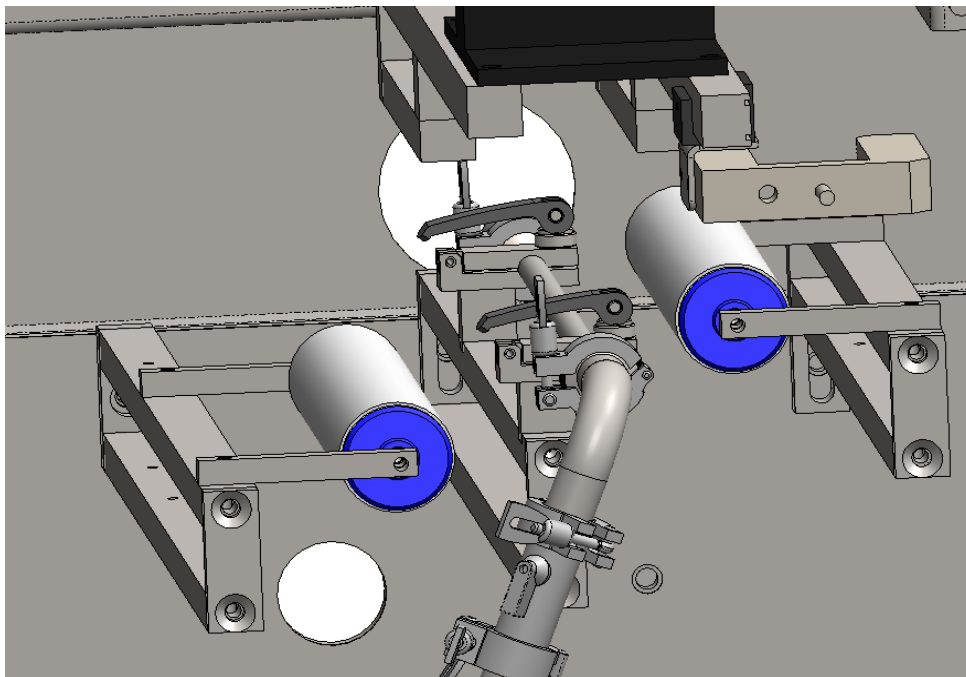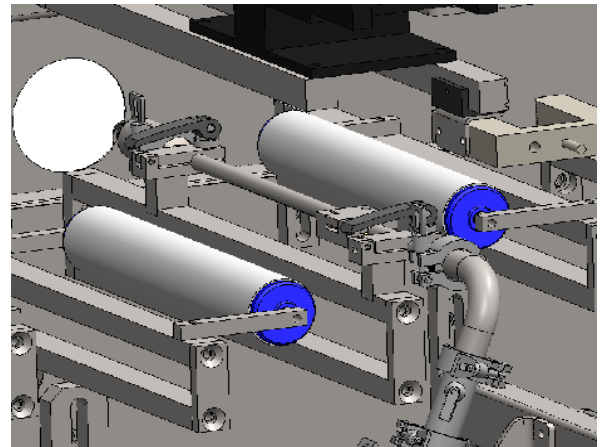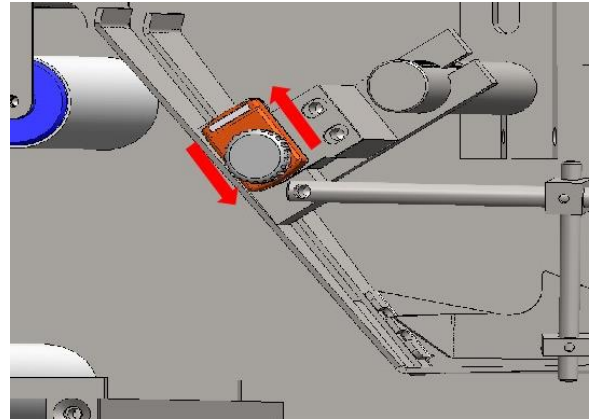

10. After material flow is complete and folded product is obtain from the puller , cross shaft is moved to left or right to adjust the folding axis of the product right into the middle of the product. (see picture) Since folding type is "Z", edges folded from the sides to top and bottom should be in line and meet in the middle of the product creating 90 mm width.
11. After this, edge control sensor centering settings are done (see Fife user guide) and automatic mode is selected. So if looseness or axis shift occurs, control system will tolerate it to some point
12. After product width is adjusted and dimensions are obtained according to the recipe values, last wetting tube is positioned under the product with nozzles facing up (see picture) and product is widened 1 cm. If nozzle tube pistons are not adjusted according to product width, liquid will overflow outside. (see picture) Tube pistons must be adjusted in a way not to overflow the liquid outside but enough to wet all the surface so no part of the product stays dry.

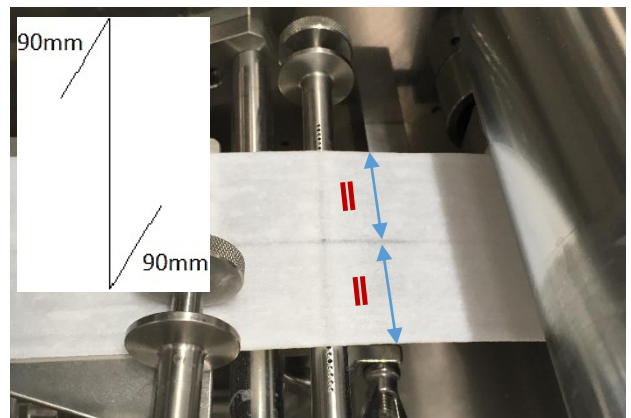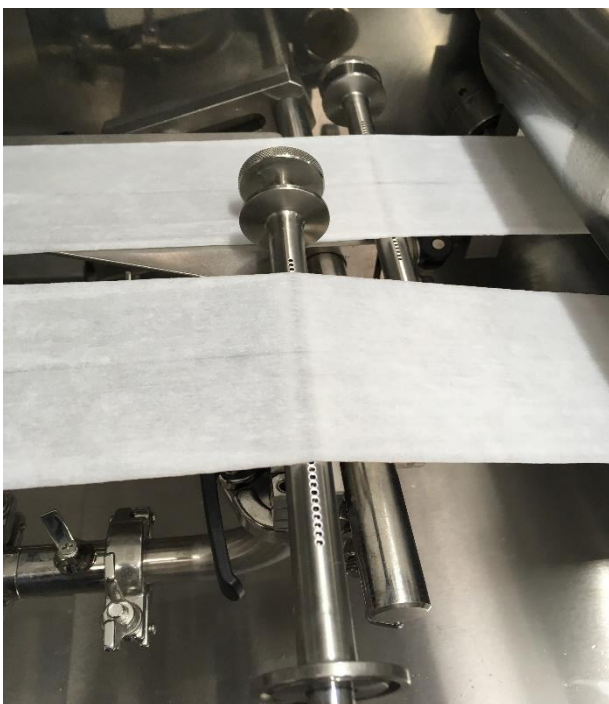

13. After product's exit from puller roll with correct dimensions and homogeneous wetting, the material goes through the cutting roll. (see picture)

14. Make sure the blade is positioned linear to the cap.





After leaning the blade onto the cap, tighten the bolts on the cap enough to let set screws move the blade.

While the cutting edge of the blade is on tangent point to the bottom anvil, move the blade away from the set screws evenly and get it closer to the anvil enough to be 0-0,05 mm parallel to it.

Knife cutting is adjusted while machine runs, adjusting is repeated from the set screws until both edges cut evenly. After cutting is adjusted, cap bolts are tightened completely.

See below detailed drawings.

15. There must be 6-6,5 mm between top point of plastic sheet apparatus and edge of plastic sheet material. (see picture) You need to pay attention that while the plastic sheet enters between jaws, it should enter from the center without touching top or bottom jaw. **See below detailed drawings.**

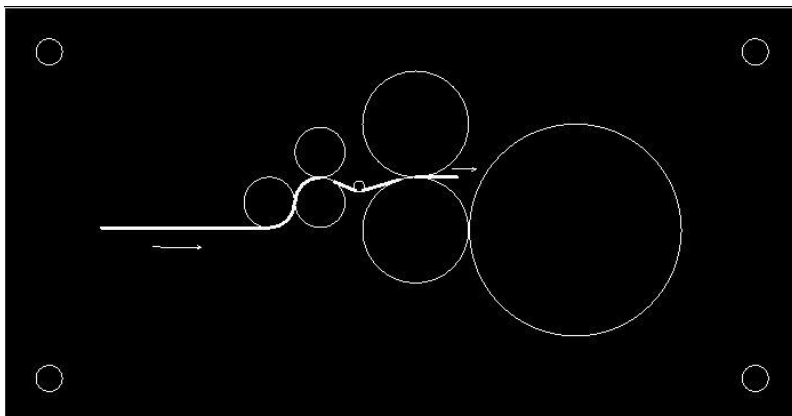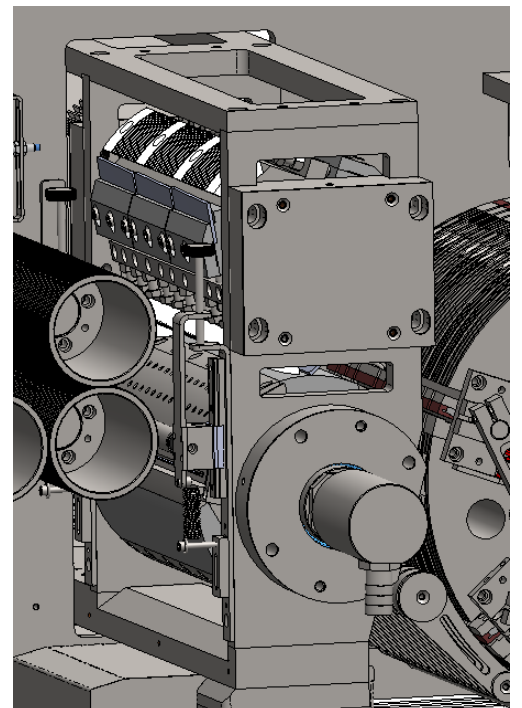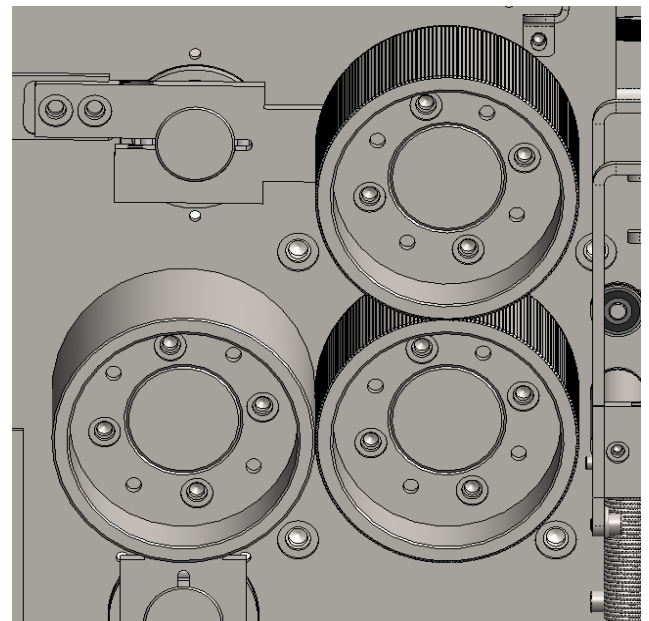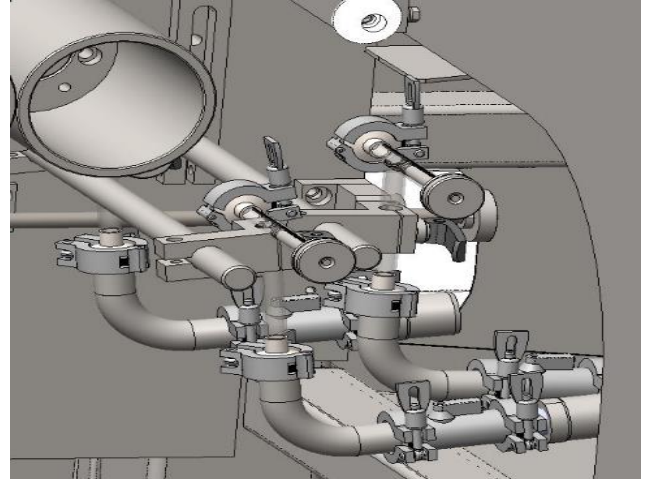





For cutting adjustment, first untighten stabilizing bolts of the blade very gently.

Tighten the set screws until blade position is proper.

After bringing the blade to the desired point, tighten stabilizing bolts and fix the blade.

When blade is first put on the roll, instructions on the top should be followed respectively before running the machine and blade should be adjusted to leave 0-0,05 mm distance between the anvil and itself. This adjustment must be done while edge of the blade is on the top tangent point of bottom anvil. After adjusting the space between, put a sheet of paper for testing, run the machine on jog speed and repeat the instructions above until optimum cutting is obtained. During this process, set screws must be tightened equally.






NOTE: While adjusting the cutting, speed should be %10-20 (jog speed)

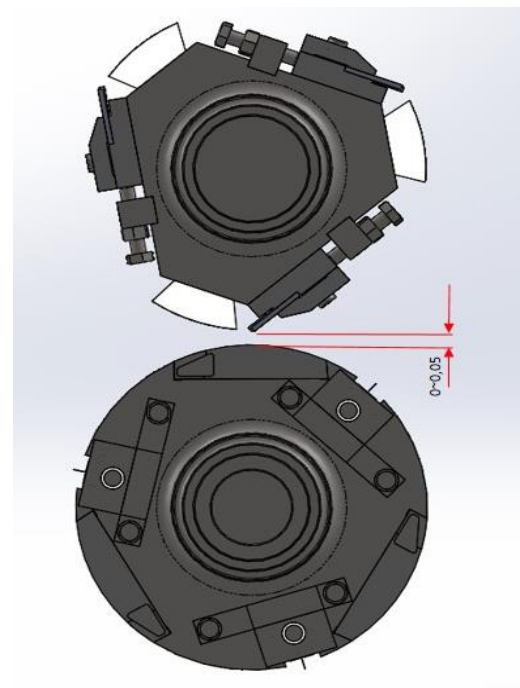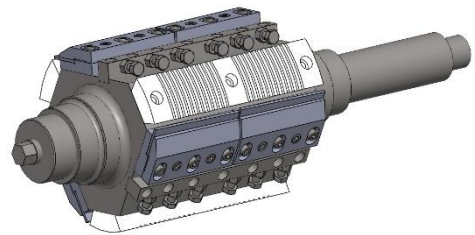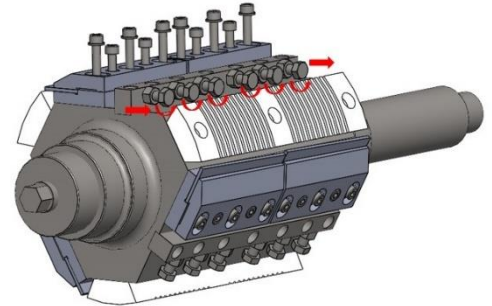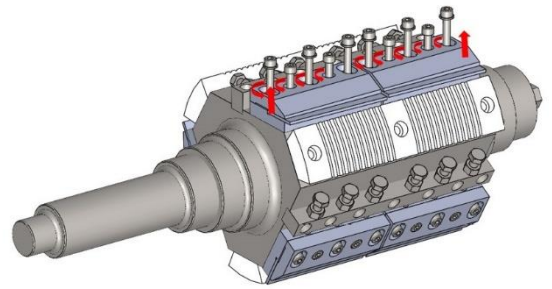

When plastic sheet is held to the holder, it should be 5 mm higher.

While adjusting the cross folding roll, the plastic sheet on bottom cutting roll are called to reference. Plastic sheet should be around 2 mm inside of stable holder clip. The plastic sheet on bottom cutting roll and moving jaw on the cross folding roll should be on the same axis.

If moving jaw is more forward than the plastic sheet's axis, turn the cross folding roll counter clockwise and make it on the same axis with the plastic sheet. If moving jaw is more backward than the plastic sheet axis, turn the cross folding roll clockwise and make it on the same axis with the plastic sheet.

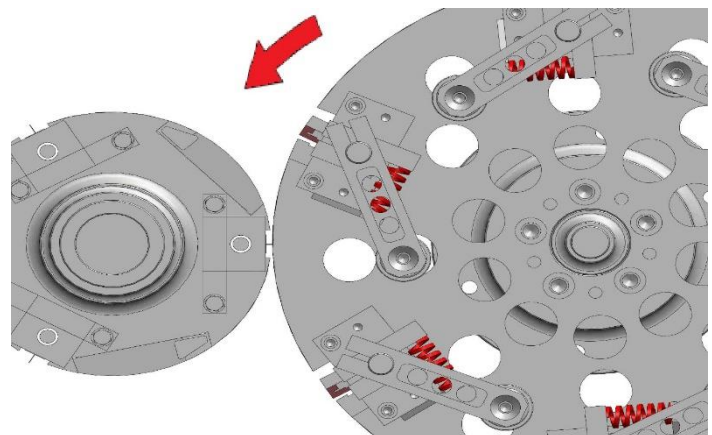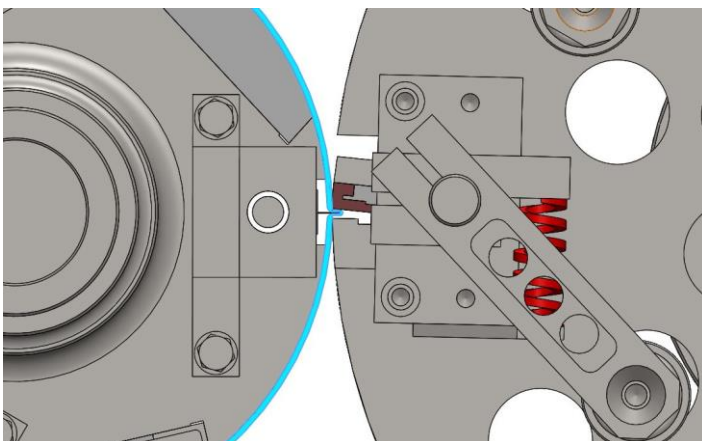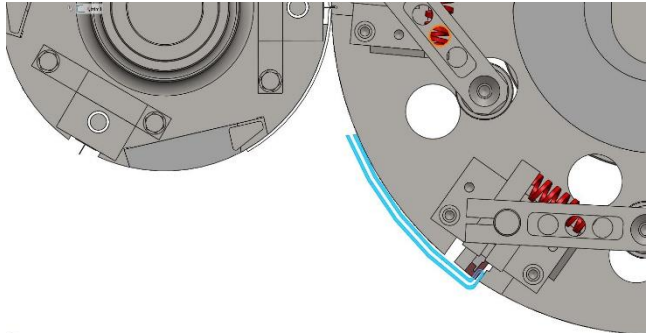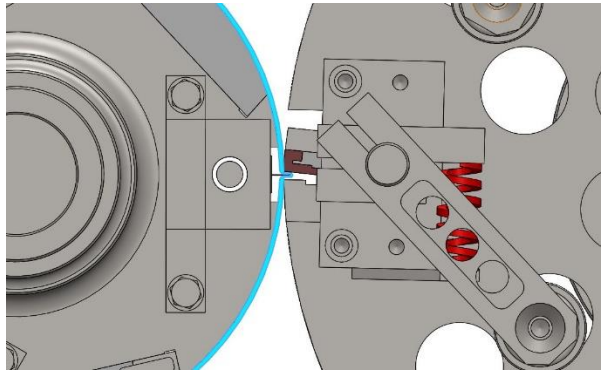

16. When stacker fingers are lowered, the distance between the bottom of the fingers which touch the product and the outer diameter of the cross folding roll should be 10 mm (see picture)

Working time of stacker fingers (time of going up and down) should be checked like this: when the plastic sheet comes to jaw center, bottom part of stacker fingers must go down from the outer diameter of the cross folding drum. This timing is adjusted by turning the running gear of stacker fingers

Interval measure of stacker finger's stopper and knife gusset is 300mm dir. (see picture)
Product stopper place and stacker fingers stopper area must be parallel. Jaw should open when stacker fingers are 35 mm away. (see picture)

Opening time of jaw is adjusted by changing the position of cam (see picture)
Distance between folding drum and upper position of co-stacker should be around 20 mm. On page STACK SETUP, STACK STEP SET value must be set as 2-2.5 mm. This value may vary due to material type and thickness. For example: When step set is little, product will be jammed and every wipe will be put on the stack earlier than the previous one which will create a stair type look.

To make main stacker and co-stacker work and transfer on the right time, STACK 1 OFFSET AND OFFSET 2 settings must be done from the SERVO SETUP page.

STACK 1 OFFSET: Co-stacker's timing of moving forward. If wrong value is set, co-stacker will hit against the wipes on the top. This means timing of co-stacker is too early.







If co-stacker is too late, then it will not catch the first wipes of the pack. In this case first wipes of the packs will tend to pop out. Since move forward time of co-stackers is independent from the machine speed, when optimum speed is found, it is not suggest to change it unless there is a material change.




STACK 2 OFFSET: Main stack platform's timing of moving down. It can be also referred as "pack wipe count complete, transfer start". If wrong value entered, below situations may occur:

If stack platform goes down too early, because the last wipe won't be on correct position, the first wipe of pack will be outer. If stack platform goes down too late, co-stacker will hit against the wipes on top. STACK 1 OFFSET – STACK 2 OFFSET settings are interconnected. Therefore first STACK 2 OFFSET (MAIN STACK) settings are done. STACK 2 OFFSET value is increased, platform's early down movement and top wipe's wrong positioning is observed, little by little the value is decreased until top wipe finds the correct position and transfer is realized.

After optimum transfer time is set, STACK 1 OFFSET setting is done too.

STACK 2 OFFSET value is reduced until co-stacker hits against the top wipe. This means platform goes down too early and the value is increased until there is no more hitting and optimum value is found like this.

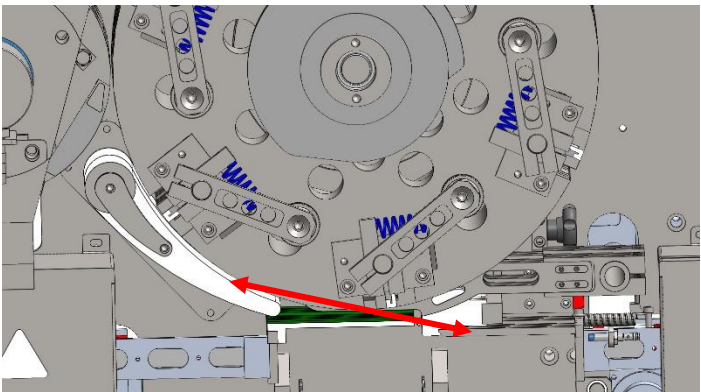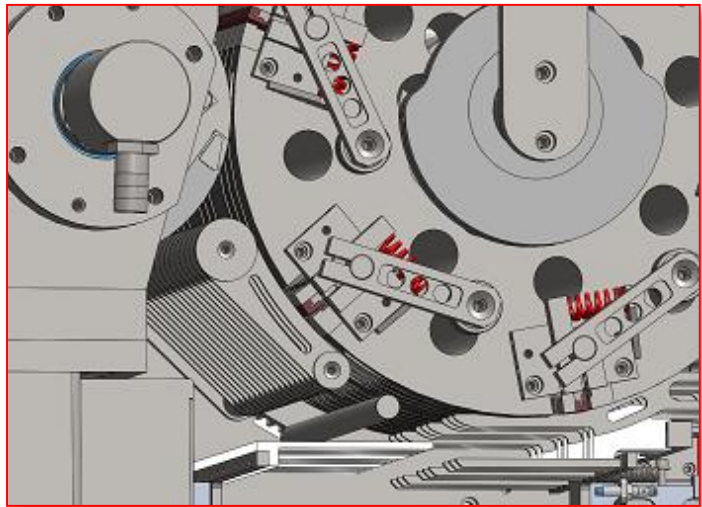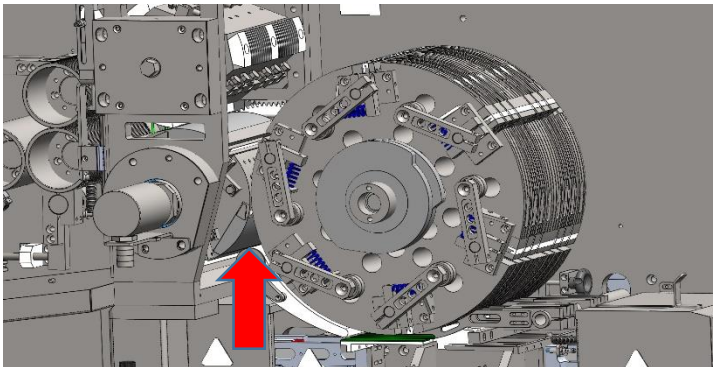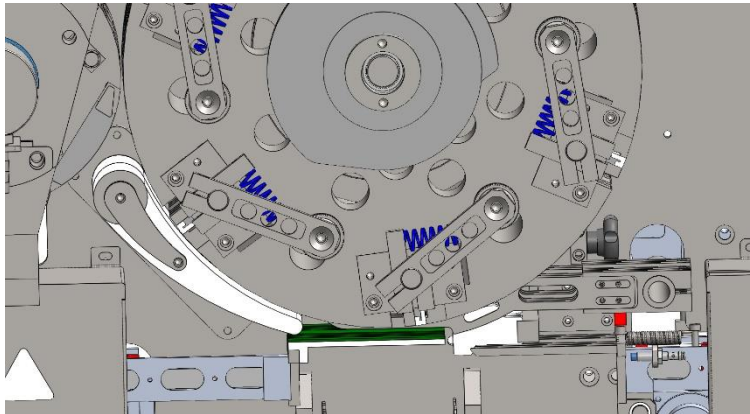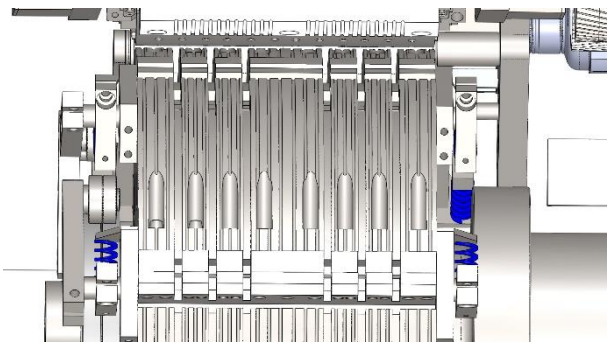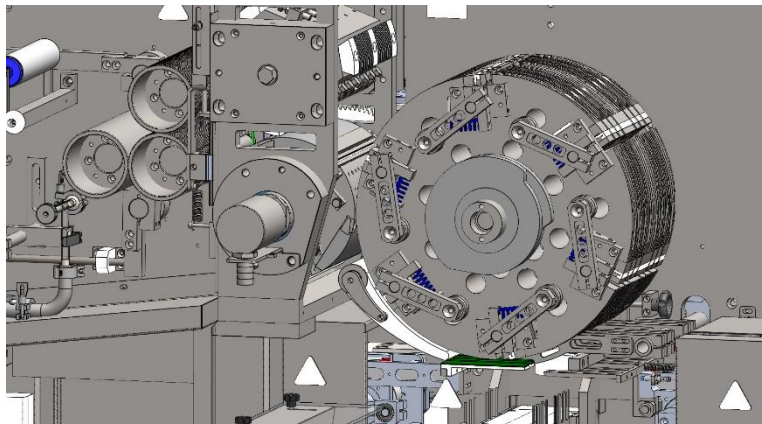

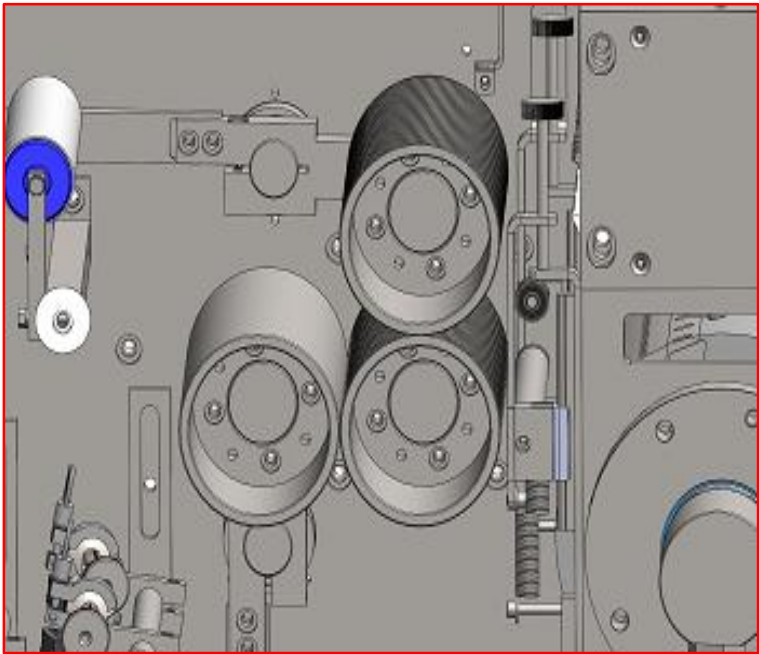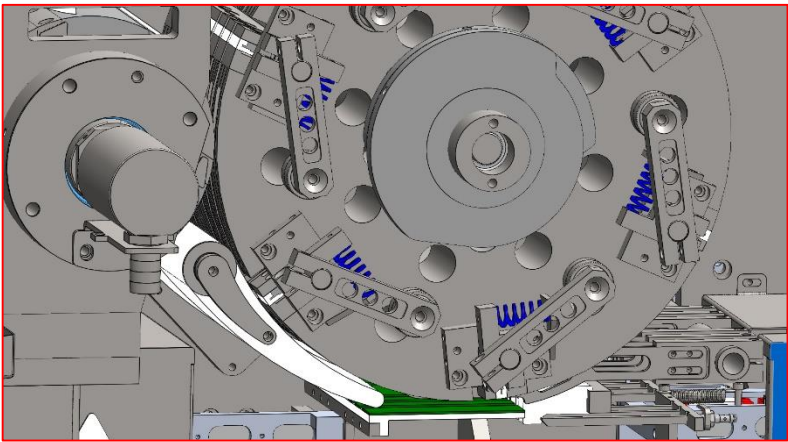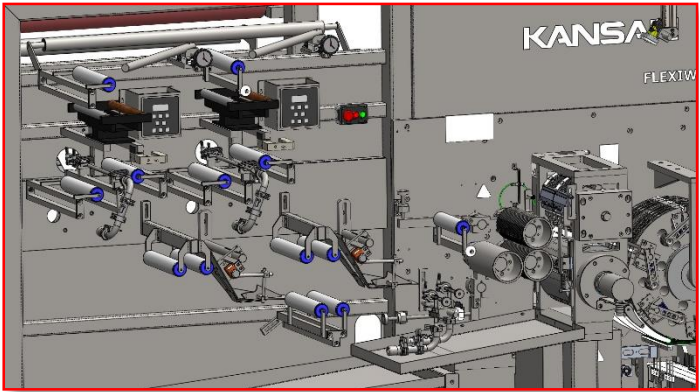

WARNING SYMBOLS


MACHINE OPERATING AREA



1 METER OPEN AREA MUST BE LEFT IN THE STRIPED AREA AROUND THE MACHINE



The machine does not generate more than 84 dB of noise during normal operation.

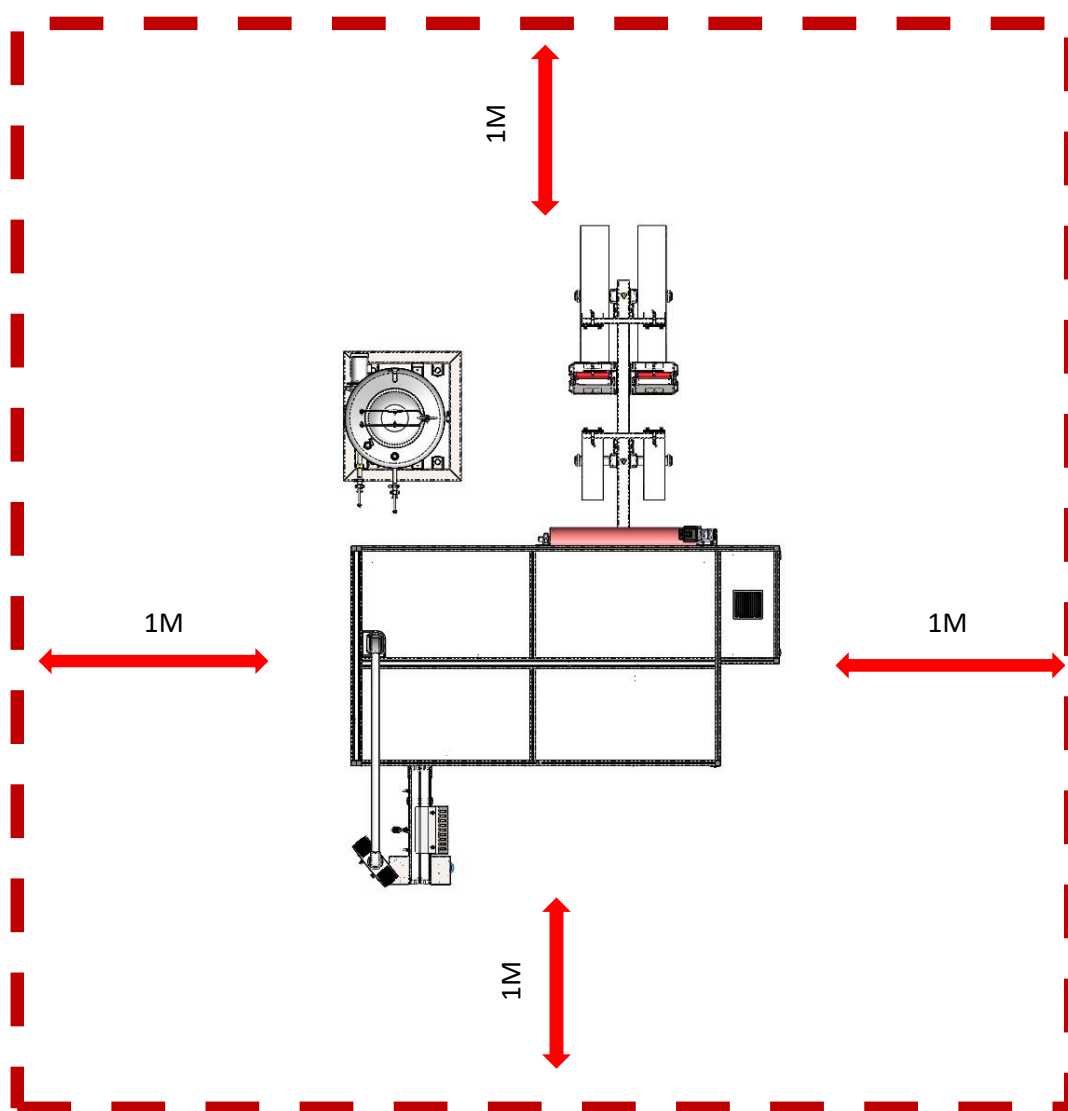


1 METER OPEN AREA MUST BE LEFT IN THE STRIPED AREA AROUND THE CONVEYOR.



The conveyor does not generate more than 84 dB of noise during normal operation.

WARNING SYMBOLS


MACHINE OPERATING AREA

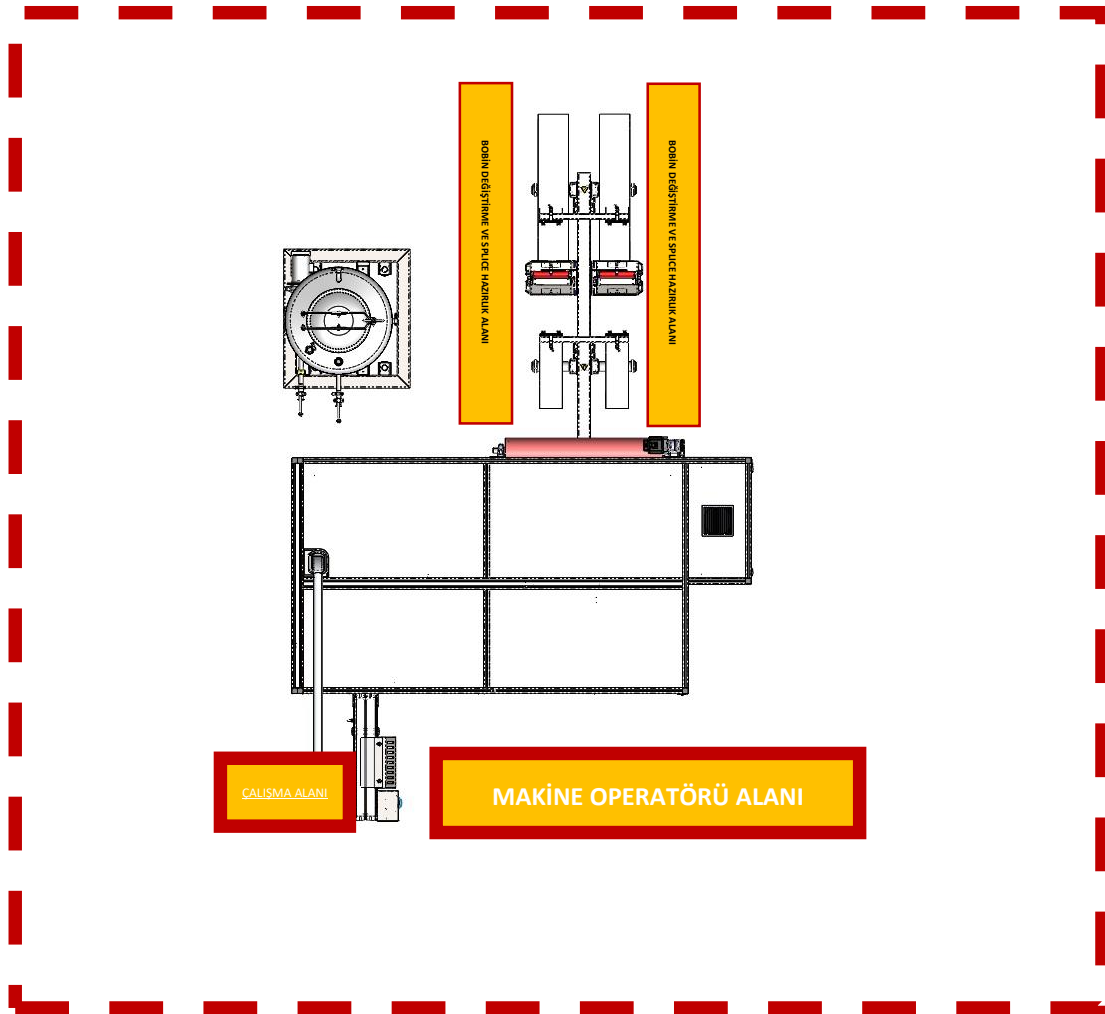

OPERATOR SHOULD BE IN A SECURE AREA SPECIFIED DURING THE OPERATION OF MACHINE.



DO NOT INTERVENE ANY MECHANICAL OR ELECTRONIC COMPONENTS DURING THE OPERATION OF MACHINE.

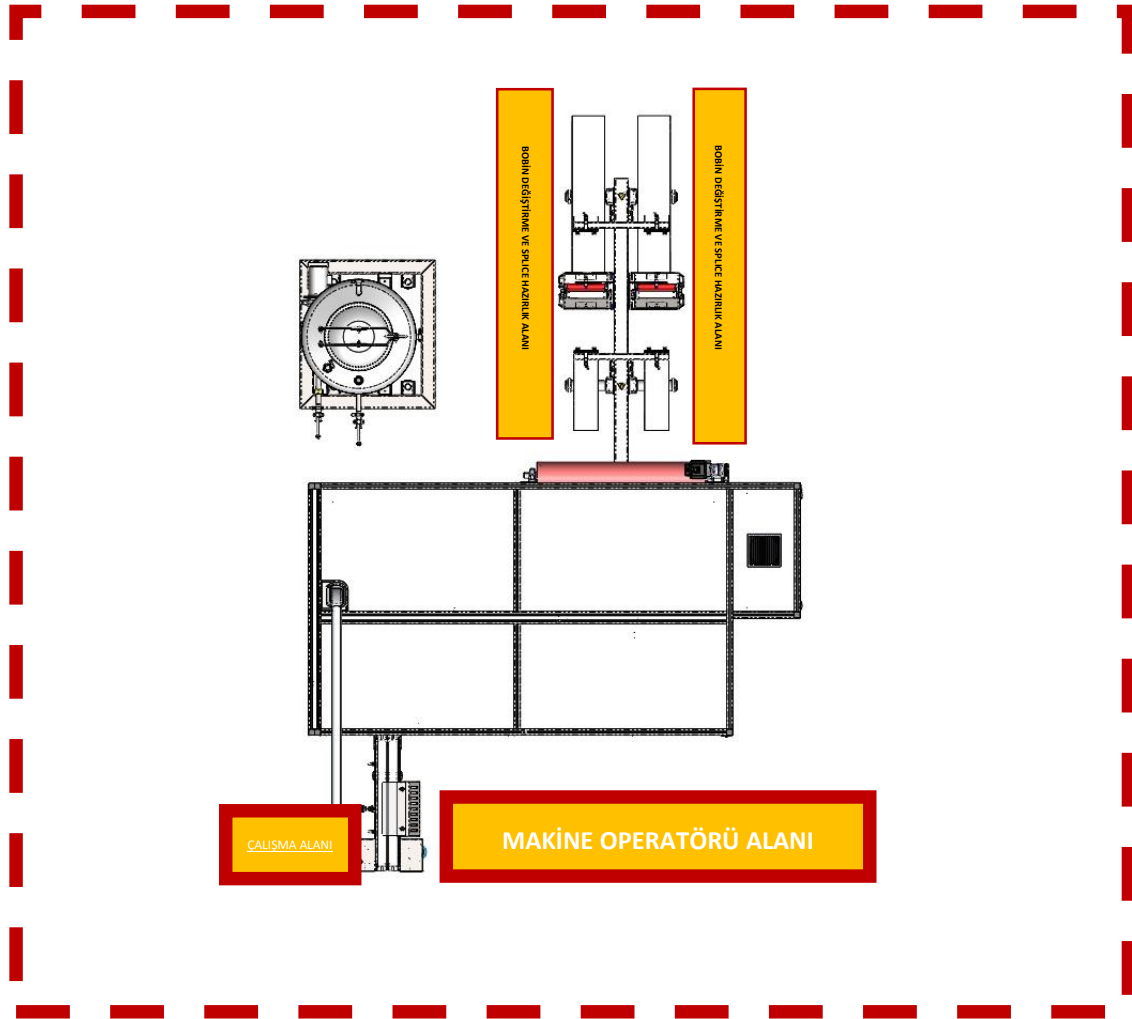WARNING SYMBOLS**OPERATOR WORKING AREA**

OPERATOR SHOULD BE IN A SECURE AREA SPECIFIED DURING THE OPERATION OF MACHINE. DO NOT INTERVENE ANY MECHANICAL OR ELECTRONIC COMPONENTS DURING THE OPERATION OF MACHINE.

BOBBİN CHANGE VE SPİLCE PREPARATION AREA

This operator needs to be prepared for the bobbin change and splice in the specified area


MACHINE OPERATOR WORKING AREA

This operator control is needed in a specified area for product pass, mold control and other settings.

Precautions to Be Taken While Machine Operating

- ☑ Measuring instruments used in machine operation must appropriate to mm unit.
- ☑ There must be tools on the machine technician that you can quickly replace spare parts such as hex bolts, allen keys, flathead screwdrivers and a clean cloth that are suitable for setting.
- ☑ The operator must have bonnet with white colored hygienic clothes.
- ☑ Protective glasses and gloves should be worn.
- ☑ Do not wear protective glasses that prevent vision.
- ☑ You should wear non-slip shoes.
- ☑ The arms of the outfit should not be abundant but collectable with tire.
- ☑ Jewelry, such as necklaces, rings, bracelets, should not be worn.
- ☑ Security warning symbols should be followed.
- ☑ **Do not operate the machine if there is an electrical gap anywhere in the machine.**
- ☑ **If there are any visible damage, do not use the machine and contact with the technician or manufacturer.**
- ☑ Operator should take his own security precautions.
- ☑ He should not wear jewelry such as necklaces, rings, bracelets.
- ☑ The arms of the outfit should not be abundant and name badges should not be worn.
- ☑ Non-slip shoes and elastic outfits with tires should be worn.
- ☑ Air and electricity must be turn off to secure the machine.
- ☑ All mechanical adjustments must be recorded in case they change during maintenance.
- ☑ Equipment suitable for the area to be maintained and cleaned should be selected and maintained- cleaned with these.
- ☑ If a malfunction is detected during maintenance, contact the authorized personnel or the manufacturer.

WARNING SYMBOLS

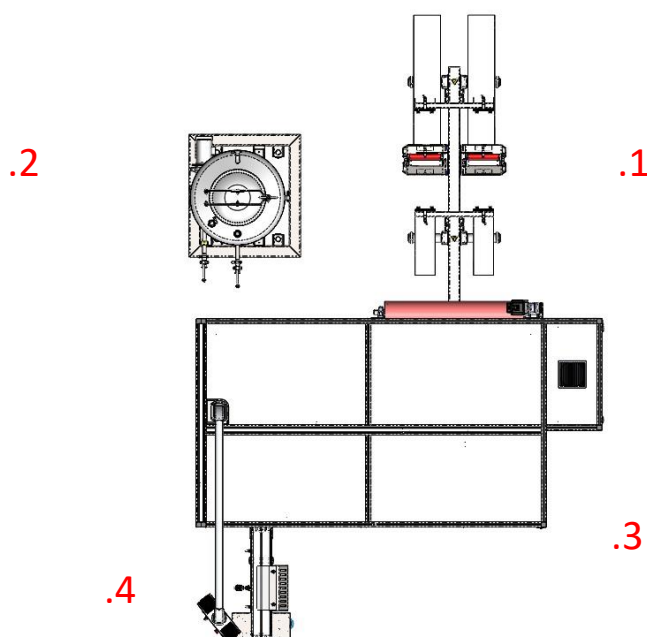

Measured Values			
Measured Unit	Magnetic Field (nT)	Electric Field (V/m)	High Frequency Electromagnetic Field (mW/m ²)
1.Point	35	8	0,05
2.Point (Panel)	35	15	0,04
3.Point	25	16	0,05
4.Point	25	9	0,04

- The values of Electric, Magnetic and Electromagnetic Fields in regions where values are indicated in the measured plans(drawings) are lower than the levels to be ionized. Considering exposure over 4-8 hours, all permanent areas are being **harmlessly** qualified.
- Although it is rarely seen high values in front of panel , the area is called “safe” because it has been found that there is no exposure over 4 hours. No shielding or protection work is required.**

WARNING SYMBOLS

WARNING LABEL MEANINGS



- Do not interfere with the sensor
- Designates sensor reference point. If setting is not correct then it won't bring reference and will keep the machine from working correctly.
- Air hose connection label
- Liquid hose connection label
- The danger of hand-jamming warning
- Do not be close to the moving parts.
- Do not be close to the rolls.
- The danger of hand-jamming to the trigger gears
- Compressed air danger
- Hand-jamming danger
- Being careful is necessary during roll loading.

WARNING SYMBOLS

WARNING LABEL MEANINGS



- Do not interfere when machine operating.

- Do not touch on the panel when machine operating

- Network & high voltage line warning


- See the relevant documents before working on the machine.


- Do not interfere when machine operating.


- Hand-crashing danger


- Read the user manual before operating on the machine.
- Hand-crashing danger


- Danger of hand-jamming between rollers

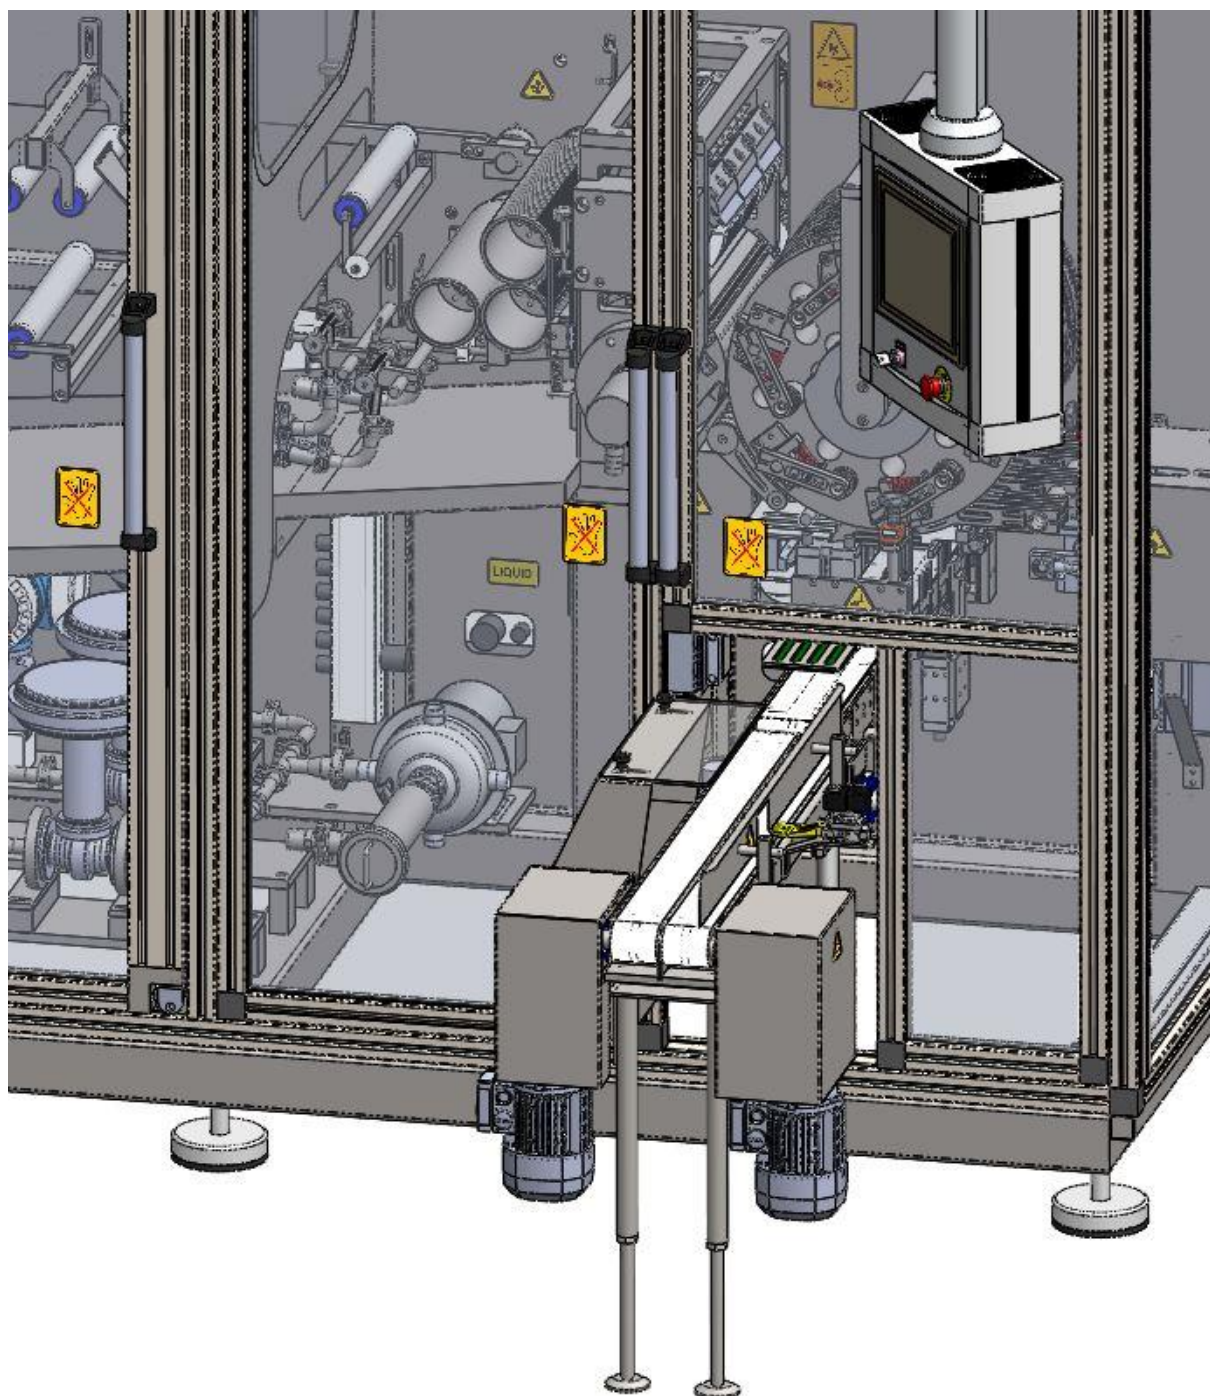WARNING SYMBOLS**SECURITY WARNING AREAS**

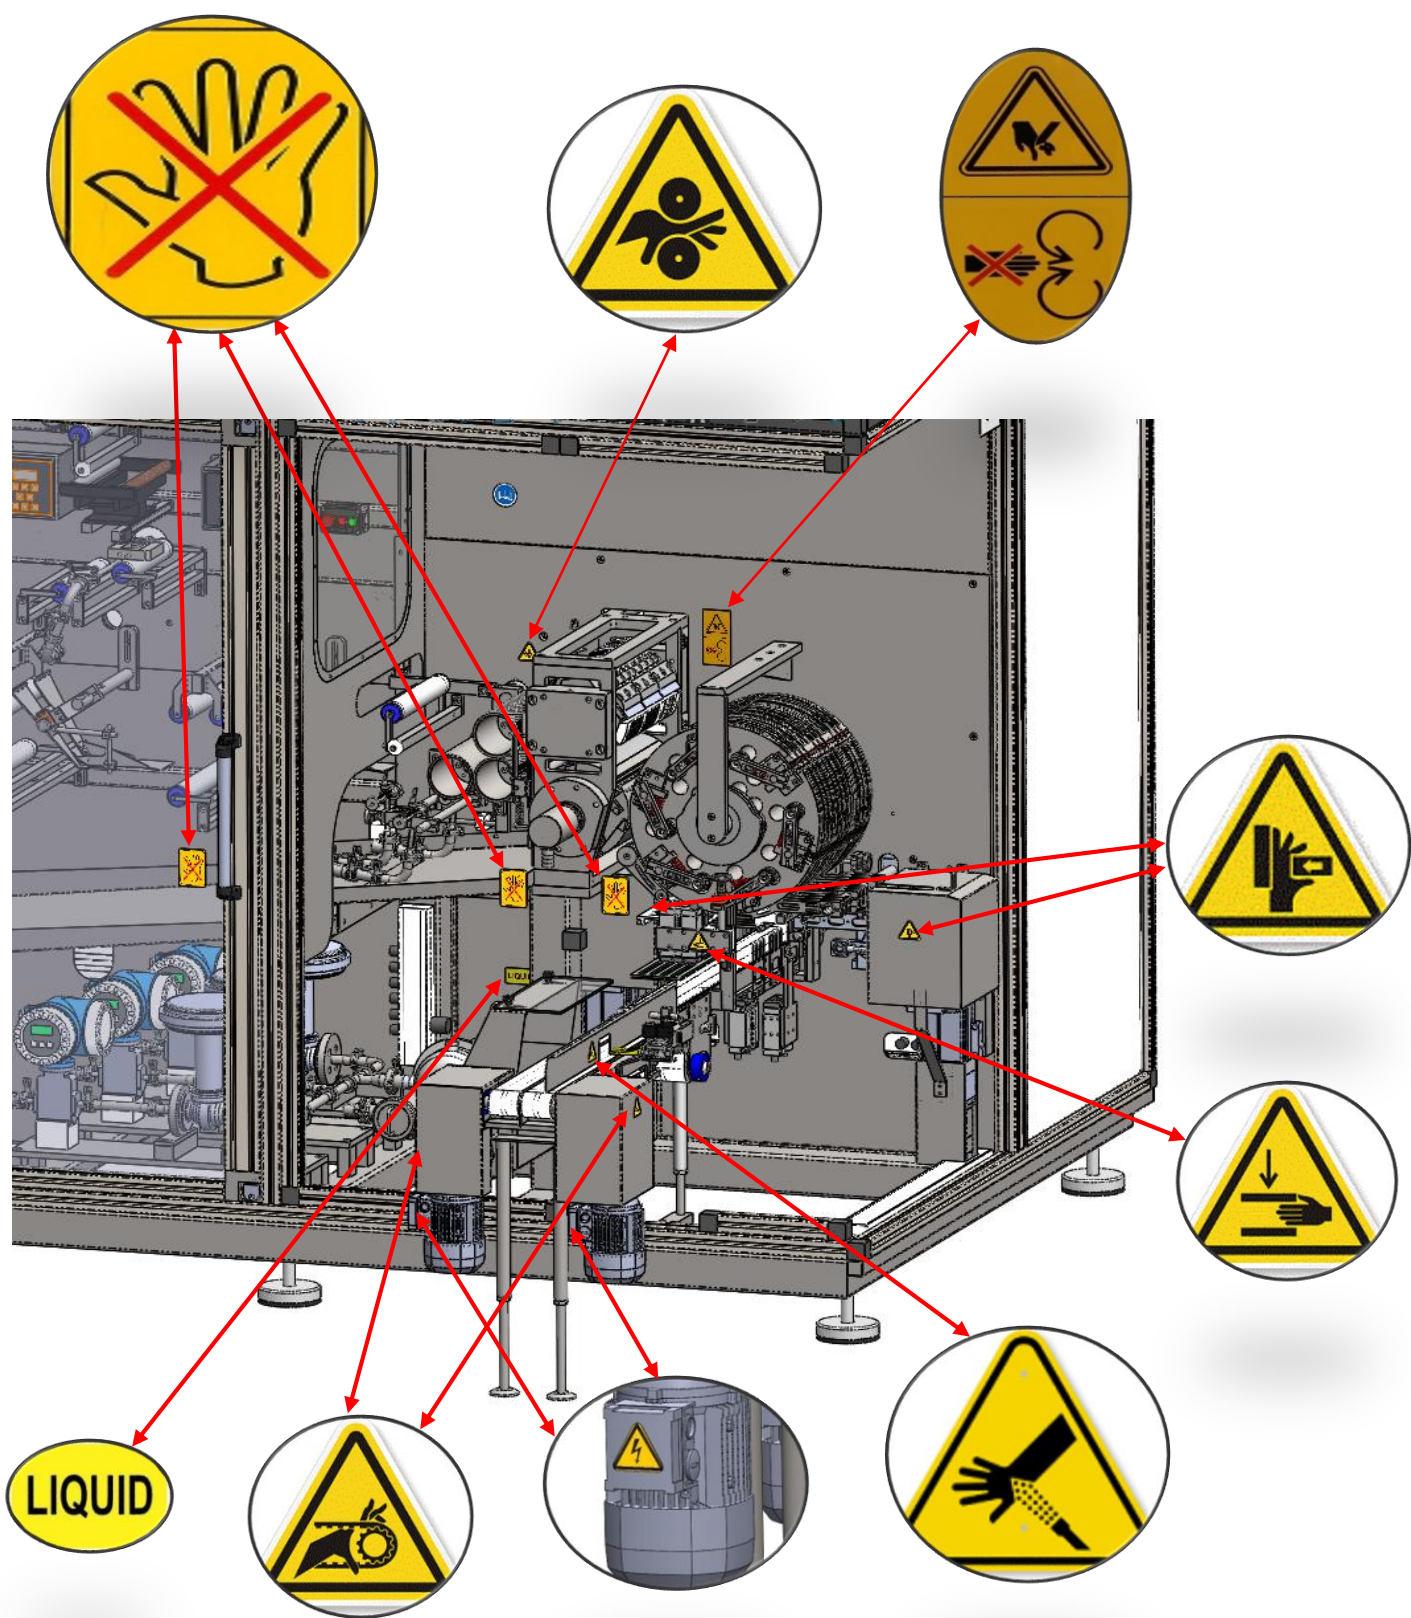

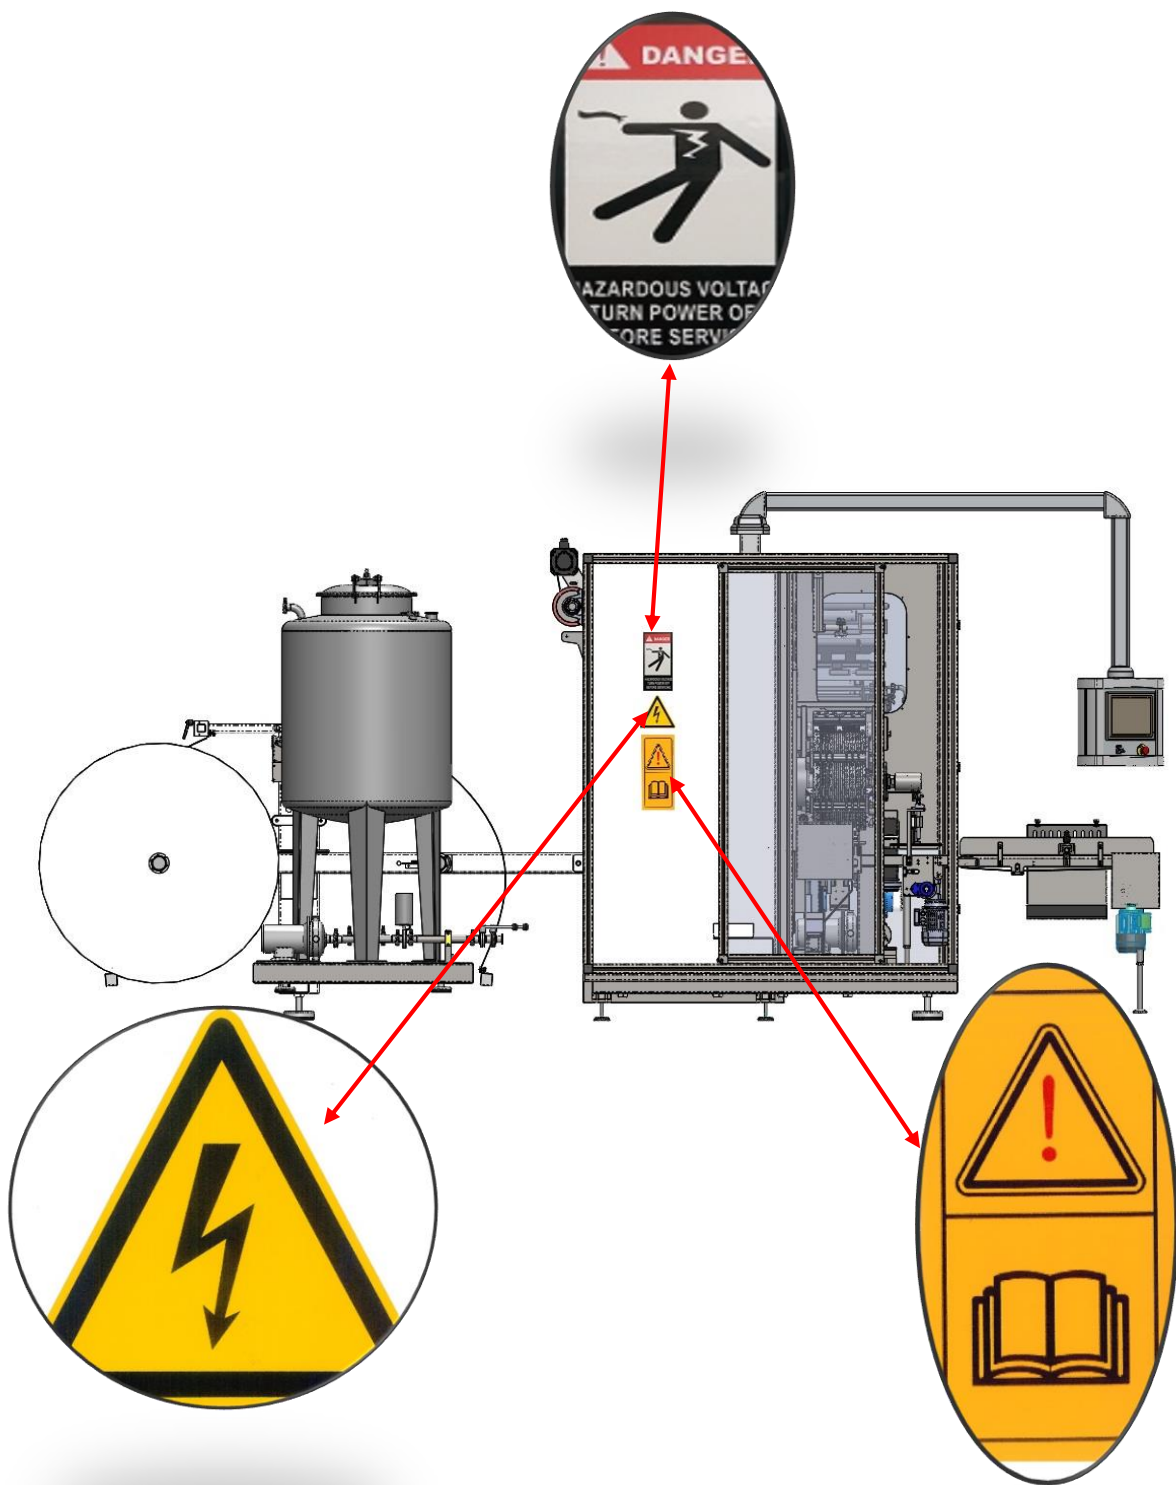


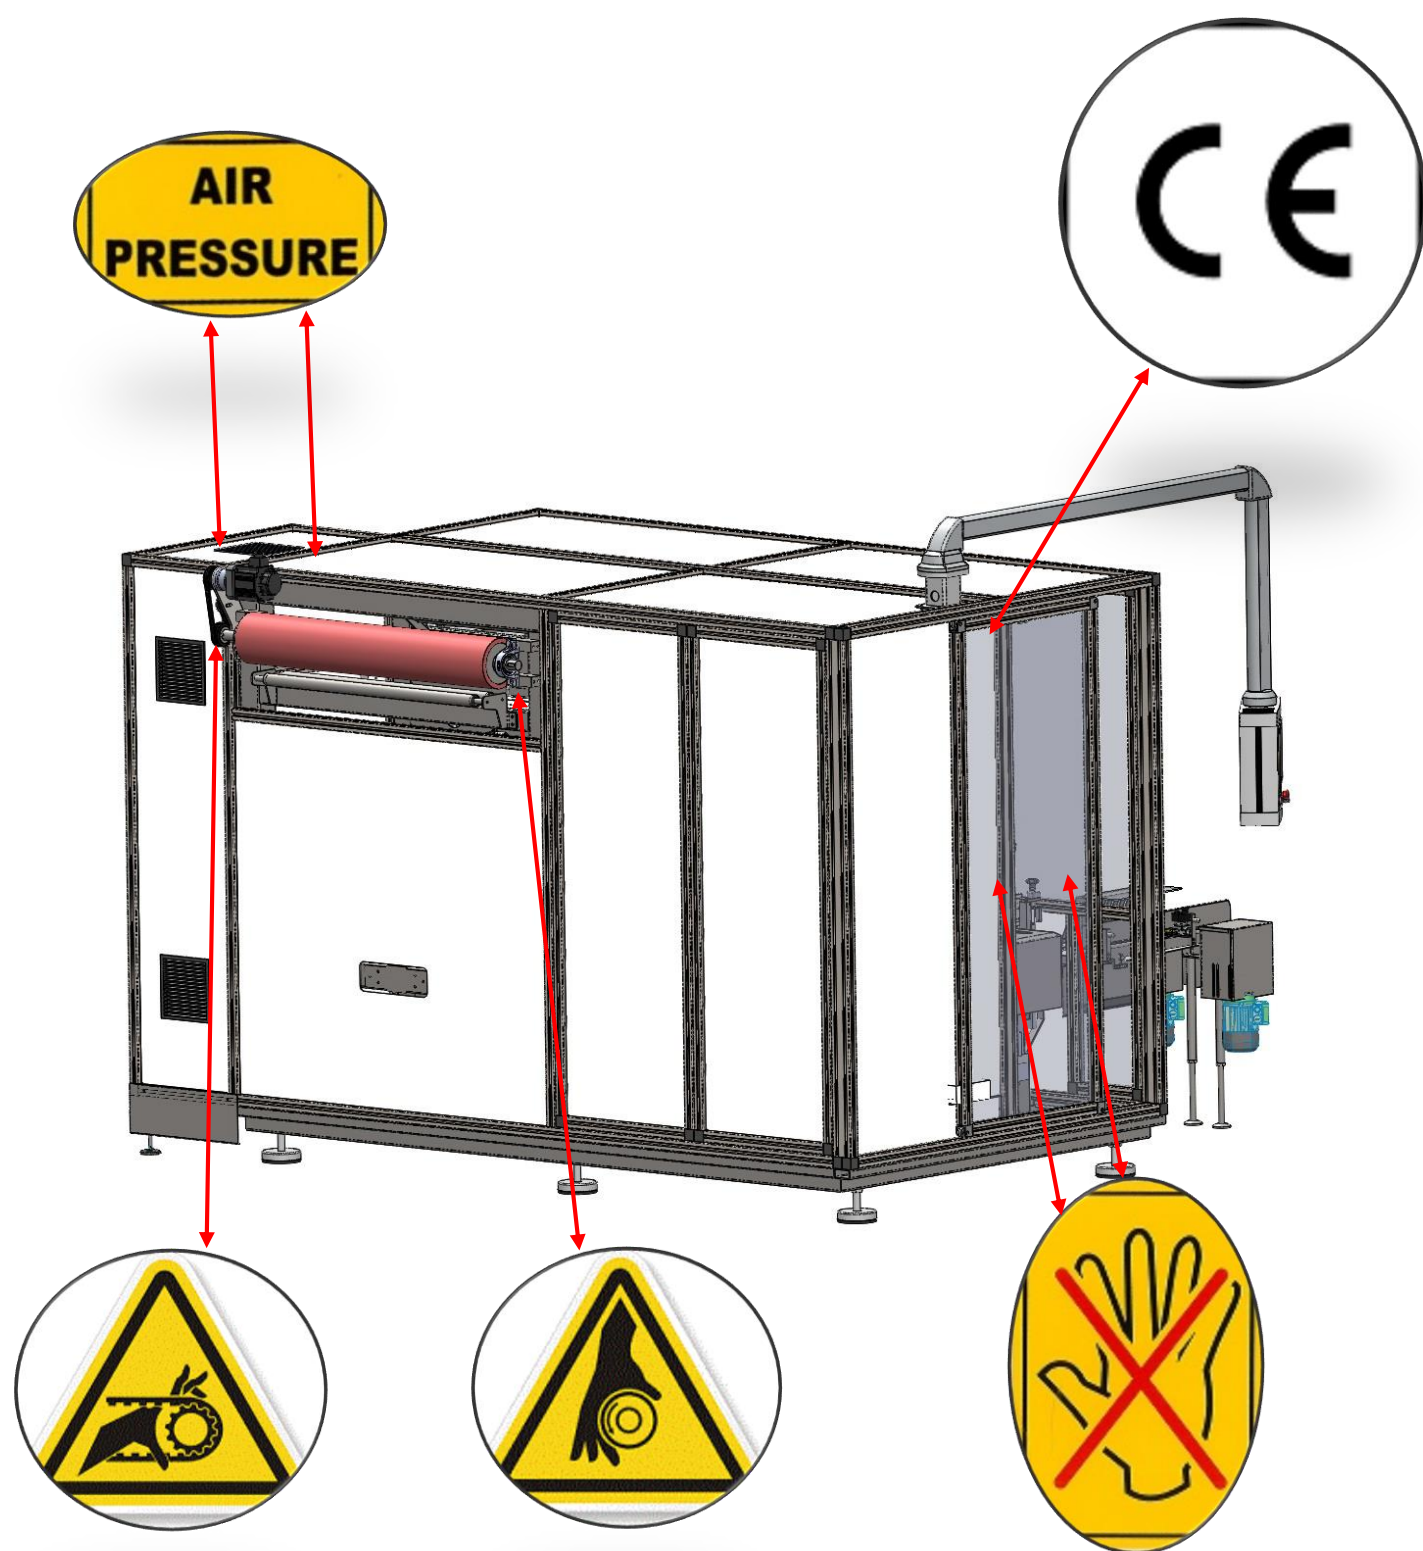

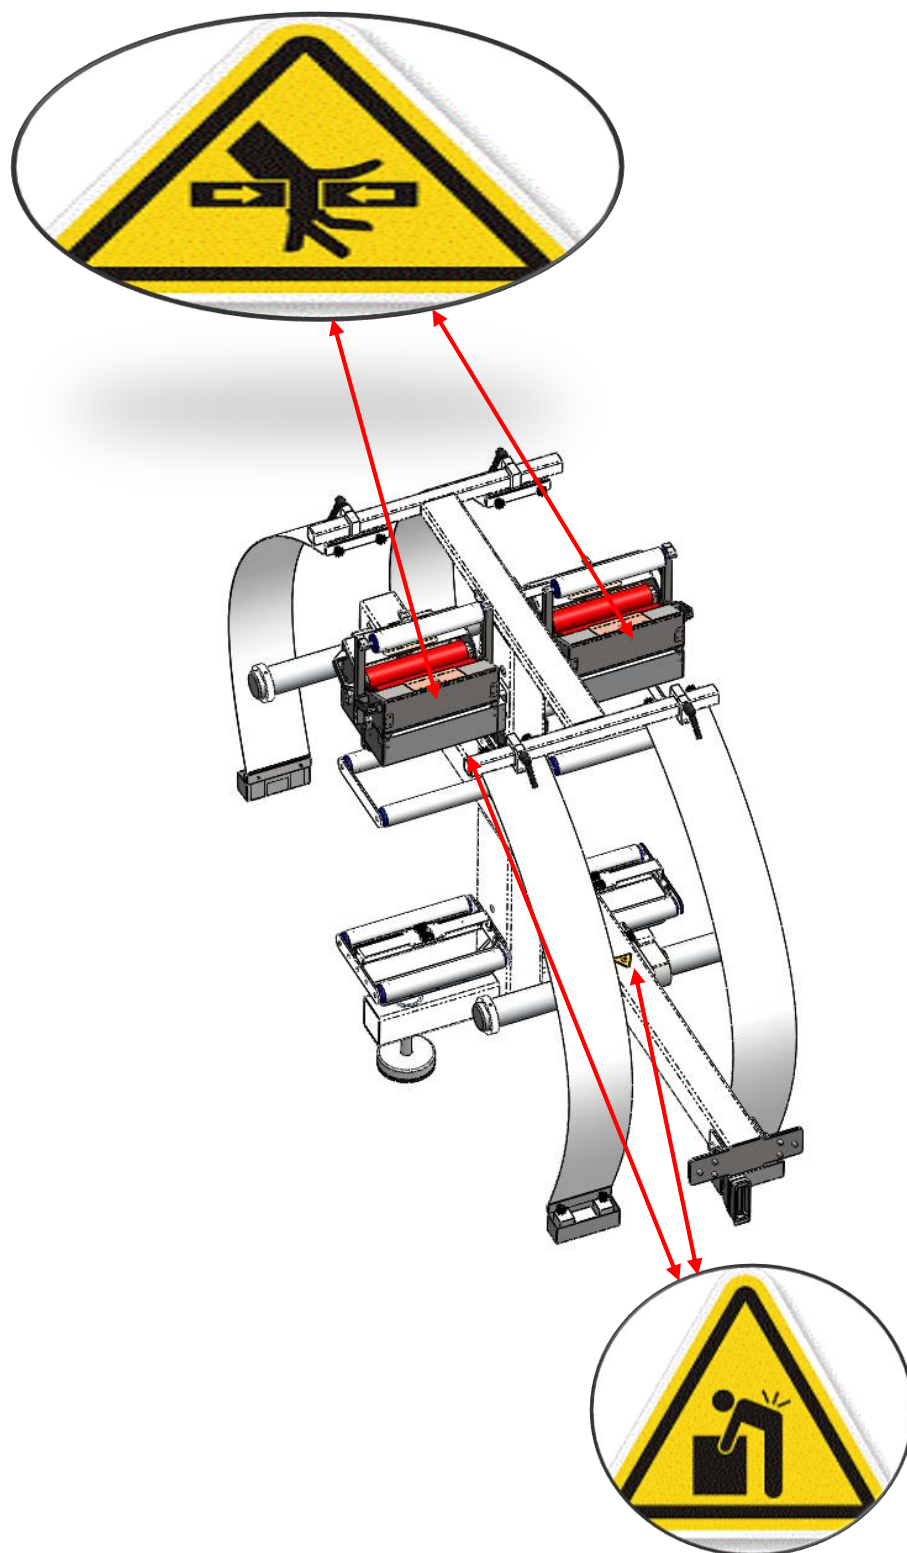

SECURITY WARNINGS

EXPLANATIONS OF WARNING SYMBOLS

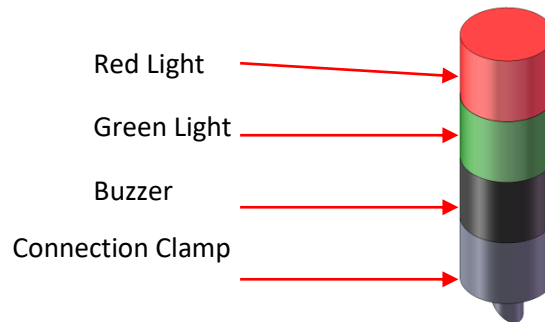

RED LIGHT: This light is on when;


- There is a malfunctioning device during operation
- In case of any malfunction in any electric equipment and component
- In any alarm message situation

GREEN LIGHT: This light is on when;

When all functions are normal and the machine is in the start (operating) position.

BUZZER: In the situations which may cause to turn on red light, the buzzer turns on with red light and makes warning sound. Besides, it warns the machine before starting to operate.

RED–GREEN LIGHT: When there are warnings and alarms that the machine does not need to stop, buzzer alarms with red light. After that, when the operator resets the alarm from the moving panel screen, the buzzer is deactivated and the red - green warning lights continue to light together

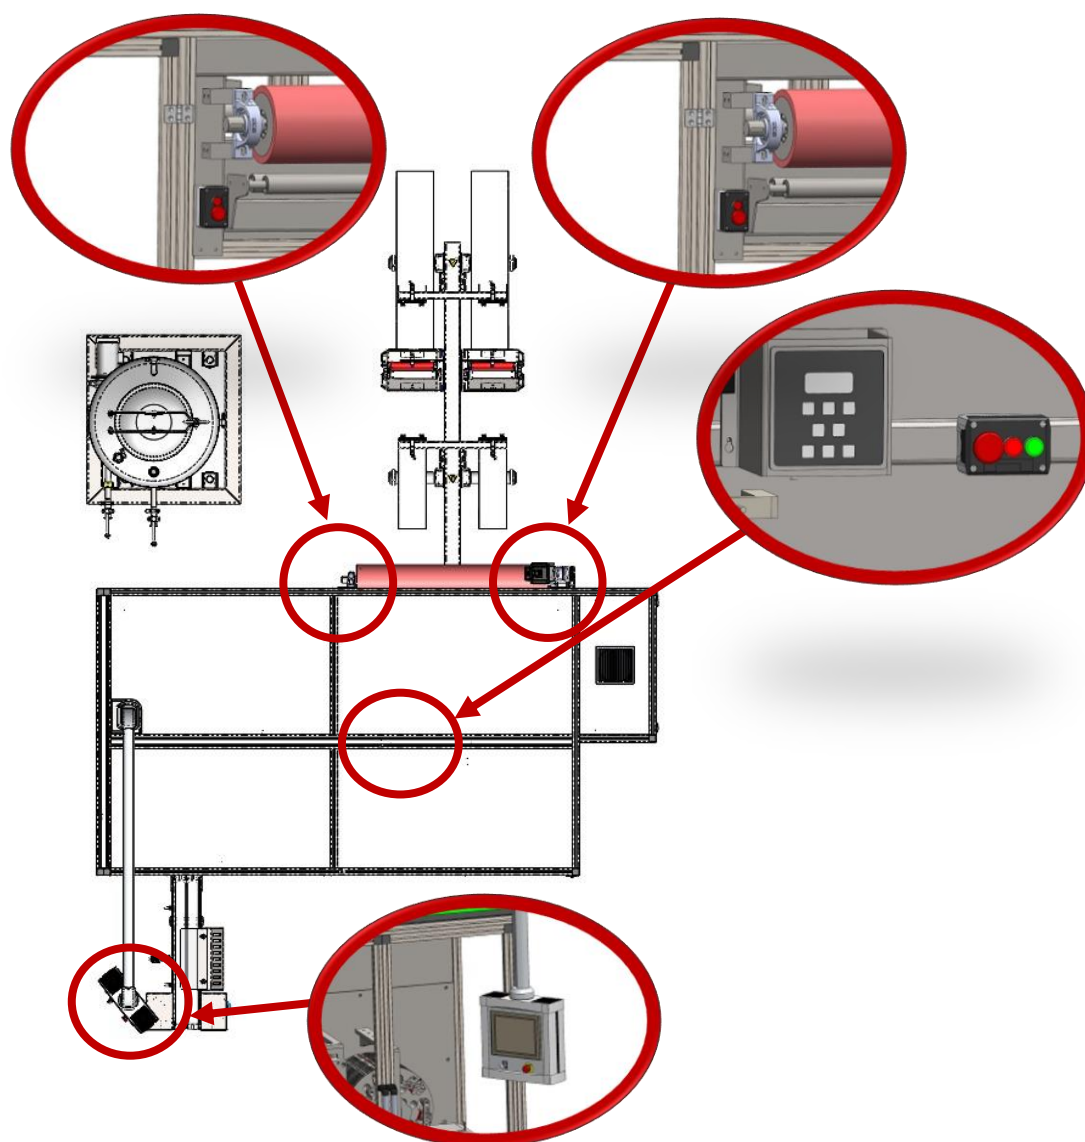SECURITY WARNING**EMERGENCY STOP BUTTON AREAS**

MACHINE ALARM LIST

<u>ERROR AND WARNING MESSAGE</u>	<u>EXPLANATION AND SOLUTION</u>
NX-ECC203 NODE:1 ETHERCAT COMMUNICATION ALARM!!	PLEASE CONTROL COMMUNICATION WIRES AND BE SURE OF THAT SOCKET AREAS ARE FULLY INSTALLED. FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL
NX-ECC203 NODE:2 ETHERCAT COMMUNICATION ALARM!	PLEASE CONTROL COMMUNICATION WIRES AND BE SURE OF THAT SOCKET AREAS ARE FULLY INSTALLED. FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL
FOLDING SERVO COMMUNICATION ALARM!	PLEASE CONTROL COMMUNICATION WIRES AND BE SURE OF THAT SOCKET AREAS ARE FULLY INSTALLED. FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL
BLADE SERVO COMMUNICATION ALARM!	PLEASE CONTROL COMMUNICATION WIRES AND BE SURE OF THAT SOCKET AREAS ARE FULLY INSTALLED. FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL
PULLER SERVO COMMUNICATION ALARM!	PLEASE CONTROL COMMUNICATION WIRES AND BE SURE OF THAT SOCKET AREAS ARE FULLY INSTALLED. FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL
BOBBIN SERVO COMMUNICATION ALARM!	PLEASE CONTROL COMMUNICATION WIRES AND BE SURE OF THAT SOCKET AREAS ARE FULLY INSTALLED. FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL
STACK-1 SERVO COMMUNICATION ALARM!	PLEASE CONTROL COMMUNICATION WIRES AND BE SURE OF THAT SOCKET AREAS ARE FULLY INSTALLED. FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL
STACK-2 SERVO COMMUNICATION ALARM!	PLEASE CONTROL COMMUNICATION WIRES AND BE SURE OF THAT SOCKET AREAS ARE FULLY INSTALLED. FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL
DRIVING-1 SERVO COMMUNICATION ALARM!	PLEASE CONTROL COMMUNICATION WIRES AND BE SURE OF THAT SOCKET AREAS ARE FULLY INSTALLED. FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL
DRIVING-2 SERVO COMMUNICATION ALARM!	PLEASE CONTROL COMMUNICATION WIRES AND BE SURE OF THAT SOCKET AREAS ARE FULLY INSTALLED. FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL
FOLDING SERVO ALARM!	FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL.
BLADE SERVO ALARM!	FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL.
PULLER SERVO ALARM!	FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL.
BOBBIN SERVO ALARM!	FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL.
STACK-1 HORIZONTAL SERVO ALARM!	FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL.
STACK-2 HORIZONTAL SERVO ALARM!!	FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL.
STACK-1 VERTICAL SERVO ALARM!	FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL.
STACK-2 VERTICAL SERVO ALARM!	FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL.
CONT.PANEL EMERGENCY STOP BUTTON!	DEACTIVATE THE EMERGENCY STOP PAWL ON THE PANEL


MOBILE EMERGENCY STOP BUTTON!	DEACTIVATE THE MOBILE EMERGENCY STOP PAWL.
--------------------------------------	--

FINAL BAND EMERGENCY STOP BUTTON!	DEACTIVATE THE EMERGENCY STOP PAWL ON THE FINAL BAND
CABIN EMERGENCY STOP BUTTON!	DEACTIVATE THE CABIN GROUP EMERGENCY STOP PAWL.
BOBBIN GROUP EMERGENCY STOP BUTTON!	DEACTIVATE THE BOBBIN GROUP EMERGENCY STOP PAWL.
MOBILE MACHINE STOP BUTTON PRESSED!	PLEASE CHECK THE CONNECTION OR CABLE IN THE STOP BOX FOR ACCORDANCE OF PROJECT.
FINAL BAND MACHINE STOP BUTTON PRESSED!	PLEASE CHECK THE CONNECTION OR CABLE IN THE STOP BOX FOR ACCORDANCE OF PROJECT.
CABIN MACHINE STOP BUTTON PRESSED!	PLEASE CHECK THE CONNECTION OR CABLE IN THE STOP BOX FOR ACCORDANCE OF PROJECT.
BOBBIN GROUP MACHINE STOP BUTTON PRESSED!	PLEASE CHECK THE CONNECTION OR CABLE IN THE STOP BOX FOR ACCORDANCE OF PROJECT.
BAND-1 INVERTER ALARM!	PLEASE CHECK THE ERROR CODE ON INVERTER THROUGH ITS MANUAL.
LIQUID MIXING MOTOR INVERTER FAULT!	PLEASE CHECK THE ERROR CODE ON INVERTER THROUGH ITS MANUAL.
WETTING-1 PUMP INVERTER ALARM!	PLEASE CHECK THE ERROR CODE ON INVERTER THROUGH ITS MANUAL.
FEEDING PUMP THERMAL WASTE!	PLEASE CHECK CABLE CONNECTIONS OF ENGINE AND PACKING GLAND AND BEARING.
DISCHARGING PUMP THERMAL WASTE!	PLEASE CHECK CABLE CONNECTIONS OF ENGINE AND PACKING GLAND AND BEARING.
S-CONVEYOR BAND INVERTER ALARM!	PLEASE CHECK THE ERROR CODE ON INVERTER THROUGH ITS MANUAL.
AIR PRESSURE LOW!	PLEASE CHECK THE REGULATOR IN THE MAIN AIR INPUT.
STACK-1 LOWER LIMIT SWITCH FELT!	PLEASE CHECK LOW LIMIT PLATFORM.
STACK-1 UPPER LIMIT SWITCH FELT!	PLEASE CHECK LOW LIMIT PLATFORM.
STACK-2 LOWER LIMIT SWITCH FELT!	PLEASE CHECK LOW LIMIT PLATFORM.
STACK-2 UPPER LIMIT SWITCH FELT!	PLEASE CHECK LOW LIMIT PLATFORM.
BOBBIN-1 HAS TORN!	THE ALARM WHICH SHOWS THE BOBBIN HAS FINISHED.
BOBBIN-2 HAS TORN!	THE ALARM WHICH SHOWS THE BOBBIN HAS FINISHED.
BATTERY OF PLC CPU DOWN!	PLEASE CHANGE THE BATTERY IN THE SW SETTING SECTION WHICH IS AT THE LEFT BELOW OF NJ501-1400 CPU MODULE.
PACKAGING MACHINE STOPPED!	IF THIS SECTION IS ACTIVE ON THE CONTROL PAGE, IT SHOWS THE PACKAGING MACHINE STOPPED, PLEASE ACTIVATE THE PACKAGING MACHINE OR DEACTIVATE THIS SECTION.
DOOR OPENED!	IT SHOWS THAT THERE MAY BE SOME OPEN DOORS.

LIQUID TANK LEVEL LOW!	INDICATES THAT THE LIQUID LEVEL IS LOWER THAN AWAITED. PLEASE CHECK YOUR LIQUID LEVEL AND LIMITS.
LIQUID TANK CANNOT BE FED! FEEDING PUMP STOPPED!	TANK DIMENSION NOT AVAILABLE AT THE SUPERVISOR POSITION. PLEASE CONTROL IF THERE IS ANY PNEUMATIC, MANUAL VALVE AND FILTER OBSTRUCTION OR NOT.
PACKING SPEED LIMIT EXCEEDED !	PLEASE CONTROL MACHINE CAPACITY, PRODUCT LENGTH AND STACKING NUMBERS. THE WRONG VALUES WHICH WERE WRITTEN HERE MAY CAUSE REVOLUTION OVERRUN OF THE MACHINE
LINE SPEED LIMIT EXCEEDED!	PLEASE CONTROL MACHINE CAPACITY, PRODUCT LENGTH AND STACKING NUMBERS. THE WRONG VALUES WHICH WERE WRITTEN HERE MAY CAUSE REVOLUTION OVERRUN OF THE MACHINE
FOLDING SERVO NORMAL TRANSFER EXCEEDED!	PLEASE CONTROL MACHINE CAPACITY, PRODUCT LENGTH AND STACKING NUMBERS. THE WRONG VALUES WHICH WERE WRITTEN HERE MAY CAUSE REVOLUTION OVERRUN OF THE MACHINE
BLADE SERVO NOMINAL REVOLUTION OVERRUN!	PLEASE CONTROL MACHINE CAPACITY, PRODUCT LENGTH AND STACKING NUMBERS. THE WRONG VALUES WHICH WERE WRITTEN HERE MAY CAUSE REVOLUTION OVERRUN OF THE MACHINE
PULLER SERVO NOMINAL REVOLUTION OVERRUN!	PLEASE CONTROL MACHINE CAPACITY, PRODUCT LENGTH AND STACKING NUMBERS. THE WRONG VALUES WHICH WERE WRITTEN HERE MAY CAUSE REVOLUTION OVERRUN OF THE MACHINE
BOBBIN SERVO NOMINAL REVOLUTION OVERRUN!	PLEASE CONTROL MACHINE CAPACITY, PRODUCT LENGTH AND STACKING NUMBERS. THE WRONG VALUES WHICH WERE WRITTEN HERE MAY CAUSE REVOLUTION OVERRUN OF THE MACHINE
STACK-1 HORIZONTAL SERVO NOMINAL REVOLUTION OVERRUN!	PLEASE CHECK FORWARD AND BACKWARD STACK VALUES.
STACK-2 HORIZONTAL SERVO NOMINAL REVOLUTION OVERRUN!	PLEASE CHECK FORWARD AND BACKWARD STACK VALUES.
PUSHER-1 VERTICAL SERVO NOMINAL REVOLUTION OVERRUN!	PLEASE CHECK LOWER AND UPPER STACK VALUES
PUSHER-2 VERTICAL SERVO NOMINAL REVOLUTION OVERRUN!	PLEASE CHECK LOWER AND UPPER STACK VALUES
STACK FOLDING ADJUSTMENT OR STEP ADJUSTMENT EXCESSIVE!	INDICATES THAT ON THE STACKING PLATFORM IS ENTERED MORE VALUES THAT THE SPECIFIED OPERATING RANGE. CHECK THE STACKING FOLD ADJUSTMENT AND STEP SETTINGS
STACK UPPER DISTANCE SMALLER THAN STACK LOWER DISTANCE!	PLEASE CHECK THE VALUES THAT DETERMINE OPERATING RANGE OF THE STACK PLATFORM
STACK-1 CANNOT REACH!	PLEASE CHECK SPEED OF STACK PLATFORM
STACK-2 CANNOT REACH!	PLEASE CHECK SPEED OF STACK PLATFORM
BOBBIN-1 ADDED!	THE OPERATOR ALERT THAT SHOWS SPLICE OPERATION IS DONE
BOBBIN-2 ADDED!	THE OPERATOR ALERT THAT SHOWS SPLICE OPERATION IS DONE
BOBBIN-3 ADDED!	THE OPERATOR ALERT THAT SHOWS SPLICE OPERATION IS DONE
BOBBIN-1A FINISHED!	THE ALERT THAT SHOWS THERE IS NO PRODUCT IN FRONT OF THE RELEVANT BOBBIN SENSOR

BOBBIN-1B FINISHED!	THE ALERT THAT SHOWS THERE IS NO PRODUCT IN FRONT OF THE RELEVANT BOBBIN SENSOR
BOBBIN-2A FINISHED!	THE ALERT THAT SHOWS THERE IS NO PRODUCT IN FRONT OF THE RELEVANT BOBBIN SENSOR
BOBBIN-2B FINISHED!	THE ALERT THAT SHOWS THERE IS NO PRODUCT IN FRONT OF THE RELEVANT BOBBIN SENSOR
BOBBIN-3B FINISHED!	THE ALERT THAT SHOWS THERE IS NO PRODUCT IN FRONT OF THE RELEVANT BOBBIN SENSOR
BOBBIN-1A NOT READY FOR ADDING !	THE WARNING THAT SHOWS BOBBIN HAS FINISHED AND THE PRODUCT IS NOT READY IN FRONT OF ONE OF THE TWO SENSORS AT THE BOTTOM WHICH MOVE SPLICE.
BOBBIN-1B NOT READY FOR ADDING !	THE WARNING THAT SHOWS BOBBIN HAS FINISHED AND THE PRODUCT IS NOT READY IN FRONT OF ONE OF THE TWO SENSORS AT THE BOTTOM WHICH MOVE SPLICE.
BOBBIN-2A NOT READY FOR ADDING !	THE WARNING THAT SHOWS BOBBIN HAS FINISHED AND THE PRODUCT IS NOT READY IN FRONT OF ONE OF THE TWO SENSORS AT THE BOTTOM WHICH MOVE SPLICE.
BOBBIN-2B NOT READY FOR ADDING !	THE WARNING THAT SHOWS BOBBIN HAS FINISHED AND THE PRODUCT IS NOT READY IN FRONT OF ONE OF THE TWO SENSORS AT THE BOTTOM WHICH MOVE SPLICE.
BOBBIN-2A NOT READY FOR ADDING !	THE WARNING THAT SHOWS BOBBIN HAS FINISHED AND THE PRODUCT IS NOT READY IN FRONT OF ONE OF THE TWO SENSORS AT THE BOTTOM WHICH MOVE SPLICE.
BOBBIN-2B NOT READY FOR ADDING !	THE WARNING THAT SHOWS BOBBIN HAS FINISHED AND THE PRODUCT IS NOT READY IN FRONT OF ONE OF THE TWO SENSORS AT THE BOTTOM WHICH MOVE SPLICE.
BOBBIN-3A NOT READY FOR ADDING !	THE WARNING THAT SHOWS BOBBIN HAS FINISHED AND THE PRODUCT IS NOT READY IN FRONT OF ONE OF THE TWO SENSORS AT THE BOTTOM WHICH MOVE SPLICE.
BOBBIN-3B NOT READY FOR ADDING !	THE WARNING THAT SHOWS BOBBIN HAS FINISHED AND THE PRODUCT IS NOT READY IN FRONT OF ONE OF THE TWO SENSORS AT THE BOTTOM WHICH MOVE SPLICE.
BAND-2 INVERTER ALARM!	PLEASE CHECK THE ERROR CODE ON THE INVERTER THROUGH ITS USER MANUAL.
BAND-3 INVERTER ALARM!	PLEASE CHECK THE ERROR CODE ON THE INVERTER THROUGH ITS USER MANUAL.
WETTING-1 UPPER LIMIT EXCEEDED!	THE ALERT THAT SHOWS LIMIT EXCEEDED ON THE WETTING PAGE, PLEASE CHECK THE VALUES ON THE WETTING PAGE.
WETTING-1 LOWER LIMIT EXCEEDED!	THE ALERT THAT SHOWS LIMIT EXCEEDED ON THE WETTING PAGE, PLEASE CHECK THE VALUES ON THE WETTING PAGE.
WIPE STUCK AT PULLER LOWER CYLINDER !	PLEASE CONTROL THE RANGE AND SWITCH POSITIONS OF PULLER CYLINDERS.
WETTING-2 UPPER LIMIT EXCEEDED!	THE ALERT THAT SHOWS LIMIT EXCEEDED ON THE WETTING PAGE, PLEASE CHECK THE VALUES ON THE WETTING PAGE.
WETTING-2 PUMP INVERTER ALARM!	PLEASE CHECK THE ERROR CODE ON THE INVERTER THROUGH ITS USER MANUAL.
CONNECTOR CONVEYOR ALARM!	PLEASE CHECK THE ERROR CODE ON THE INVERTER THROUGH ITS USER MANUAL.
WIPE STUCK AT STACK PLATFORM!	PLEASE CHECK THE SENSOR ON THE STACK PLATFORM AND CLEAN IF ANY PRODUCT IS STUCK.


MACHINE AND MODULES INTRODUCTION

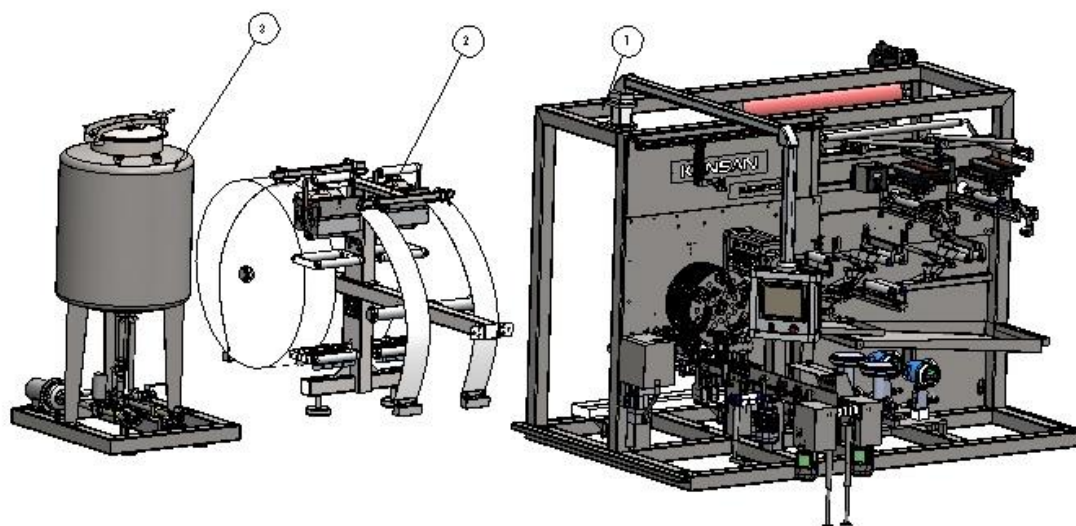

FLEXIWORK 2 consists of there parts :

- 1- CABIN GROUP
- 2- BOBBIN GROUP
- 3- INSTALLATION GROUP


MODULE INTRODUCTION

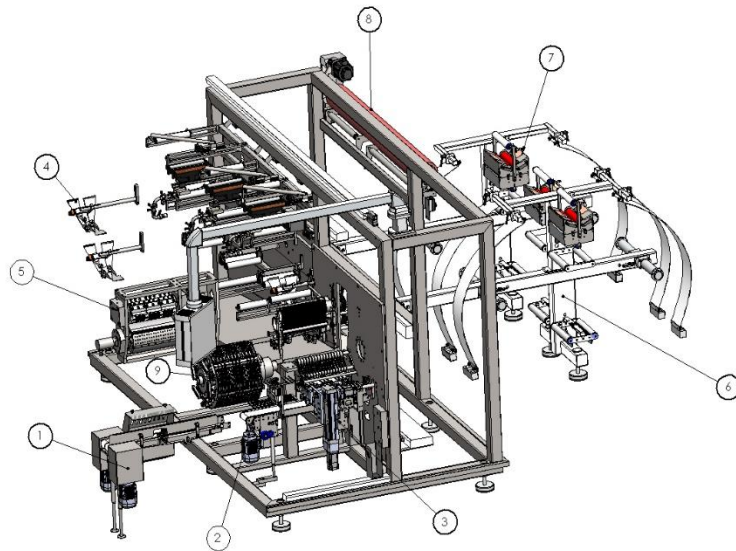

FLEXIWORK CONSISTS OF 9 SECTIONS :


- 1- PRODUCT EXIT CONVEYOR
- 2- PRESS CONVEYOR
- 3- STACK MODULE
- 4- FOLDING MOLD GROUP
- 5- CUTTING MODULE
- 6- BOBBIN GROUP
- 7- SPLICE GROUP
- 8- TIRE PULLING CYLINDER GROUP
- 9- FOLDING VALSE MODULE

TURNING CONVEYOR INTRODUCTION

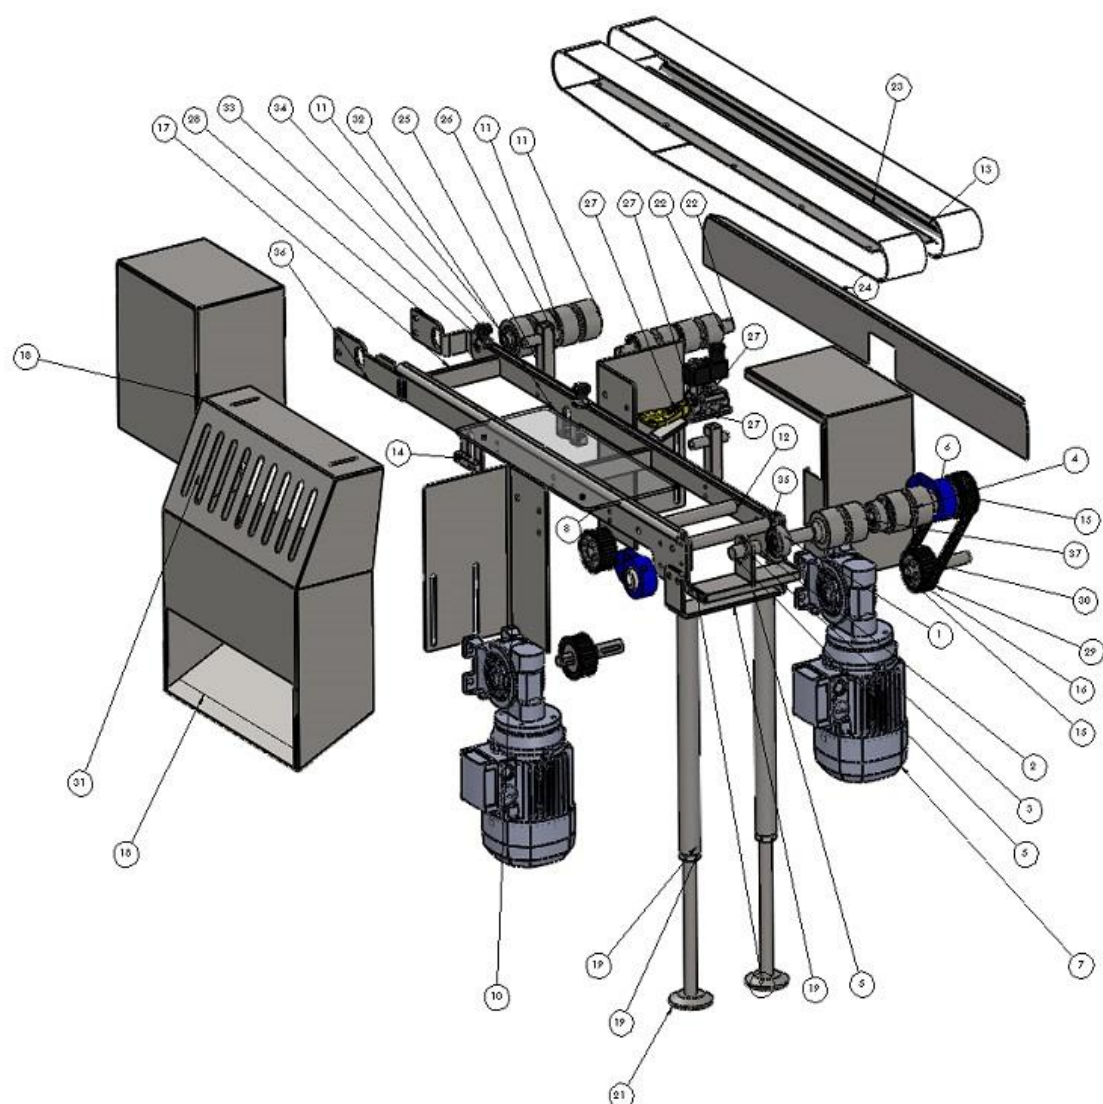


MONTAGE NO.	EXPLANATION	QUANTITY
1	COTTON-TURNING CONVEYOR SIDE SHEET METAL	1
2	COTTON-TURNING CONVEYOR DRIVE CYLINDER CONNECTION SHAFT	1
3	COTTON-TURNING CONVEYOR DRIVE CYLINDER BUSH	1
4	COTTON-TURNING CONVEYOR DRIVE CYLINDER	2
5	COTTON-TURNING CONVEYOR DRIVE CYLINDER CONNECTION	1
6	UCFK 204 BEARING METAL	2
7	REDUKTOR VF 44 A 7 P71 B14 B3 - BN 71B 4 230,400-50 IP55 CLF B14 BONFIGLIOLI MOTOR COUPLED	2
8	COTTON-TURNING CONVEYOR REDUCTOR CONNECTION SHEET METAL	1
9	COTTON-TURNING CONVEYOR SIDE SHEET METAL	1
10	COTTON-TURNING CONVEYOR REDUCTOR CONNECTION SHEET METAL	1
11	COTTON-TURNING CONVEYOR REAR IDLE MONTAGE	1
12	COTTON-TURNING CONVEYOR INTERMEDIATE SHAFT	2
13	COTTON-TURNING CONVEYOR BAND LOWER SHEET METAL	1
14	COTTON-TURNING CONVEYOR TENSIONER ADJUSTMENT PLATE	2
15	COTTON-TURNING CONVEYOR TRIGGER GEAR MONTAGE	4
16	Ø20*122mm 304 FINAL EXIT CONVEYOR BAND REDUCTOR SHAFT	2
17	COTTON-TURNING CONVEYOR INTERMEDIATE PLATE	2
18	COTTON-TURNING CONVEYOR REJECT CAN	1
19	COTTON-TURNING CONVEYOR FOOT CONNECTION	1
20	M20*400mm SHEAR CONNECTOR 304 FINAL EXIT CONVEYOR BAND FEET	2
21	Ø70*20mm 304 CONVEYOR BAND FOOT FLANGE	2
22	COTTON-TURNING CONVEYOR TENSIONER	1
23	KD2WH1501 73,5X2050 mm CORDED M6 SILICONE LOWER MIDDLE CONVEYOR BAND RULTRANS	2
24	COTTON-TURNING CONVEYOR PRODUCT ALIGNMENT SHEET METAL	1
25	COTTON-TURNING CONVEYOR PRODUCT ALIGNMENT PLATE-	2
26	Ø15*75mm 304 SIDE SHEET METAL CONNECTION SHAFT	2
27	COTTON-REJECT NOZZLE MONTAGE	1
28	COTTON-TURNING CONVEYOR SIDE CONNECTION SHEET METAL	1
29	240 H EN 20mm TRIGGER BELT	2
30	COTTON-TURNING CONVEYOR MOTOR PROTECTION	1
31	COTTON-TURNING CONVEYOR MOTOR PROTECTION	1
32	COTTON-TURNING CONVEYOR REJECT CAN UPPER GLASS	1
33	COTTON-TURNING CONVEYOR BAKALITE PRESSING SHEET METAL	2
34	M6 MALE THREAD BAKALITE	2
35	COTTON-TURNING CONVEYOR SIDE PLATE WELDING SHEET METAL	2
36	COTTON-TURNING CONVEYOR SIDE CONNECTION SHEET METAL	1
37	2204 2RS BEARING	2

EXIT CONVEYOR INTRODUCTION

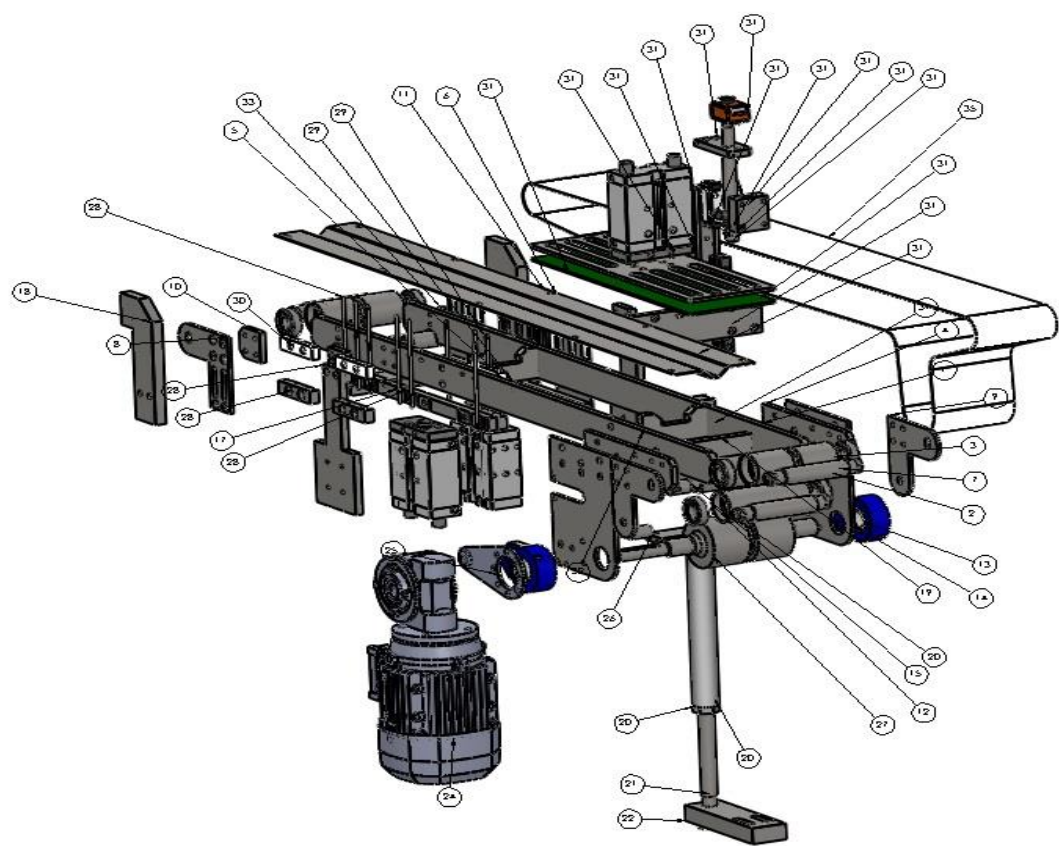



MONTAGE NU.	EXPLANATION	QUANTIT Y
1	COTTON-CONVEYOR SIDE PLATE	1
2	ZAI-CONVEYOR BAND IDLE TUBE-	2
3	SS6004 ZZ BEARING CHROME	8
4	ZAI-CONVEYOR SIDE PLATE WELDING PLATE	2
5	COTTON-CONVEYOR SIDE PLATE	1
6	COTTON-CONVEYOR BAND LOWER SHEET METAL	1
7	ZAI-CONVEYOR BAND IDLE SHAFT	3
8	ZAI-CONVEYOR BAND CYLINDER CONNECTION SHEET METAL	1
9	ZAI-CONVEYOR BAND CYLINDER CONNECTION SHEET METAL	2
10	ZAI-CONVEYOR SIDE PLATE WELDING PLATE	2
11	ZAI-CONVEYOR BAND CYLINDER CONNECTION SHEET METAL	1
12	ZAI-CONVEYOR TENSIONER IDLE TUBE	2
13	UCFK 205 BEARING METAL	2
14	ZAI-CONVEYOR BAND DRIVE CYLINDER CONENCTION SHEET METAL	2
15	ZAI-CONVEYOR TENSIONER IDLE SHAFT	1
16	ZAI-CONVEYOR BAND TENSIONER ADJUSTMENT PLATE	2
17	ZAI-CONVEYOR INTERMEDIATE PLATE	1
18	ZAI-CONVEYOR SIDE CONNECTION PLATE	2
19	ZAI-CONVEYOR INTERMEDIATE PLATE	1
20	ZAI-CONVEYOR BAND FOOT	1
21	ZAI-CONVEYOR BAND FOOT SHEAR CONNECTOR	1
22	ZAI-CONVEYOR BAND FOOT CHASIS CONNECTION PLATE	1
23	ZAI-CONVEYOR BAND FOOT FIXING WASHER	1
24	MOTOR 0,37 KW 1400 D D BN 71B 4 230-400 50 IP55 CLF B14 + VF 44 P1 7 P71 B14 V5 REDUCTOR BONFIGLIOLI	1
25	VF 44 REACT TORQUE ARM BONFIGLIOLI	1
26	Ø20*45mm 304 JAW FINAL EXIT CONVEYOR TORQUE ARM SHAFT (BONFIGLIOLI)	1
27	ZAI-CONVEYOR DRIVE CYLINDER	1
28	COTTON-CONVEYOR PRODUCT STOPPER LOWER MONTAGE STOPER	1
29	COTTON-CONVEYOR PRODUCT STOPPER LOWER MONTAGE STOPER	1
30	25*15*80mm DELRIN CONVEYOR PRODUCT STOPPER BAR URUN STOPER ALIGNING COMPONENT	3
31	COTTON-CONVEYOR PRESS GROUP MONTAGE	1
32	COTTON-CONVEYOR INTERMEDIATE PLATE	2
33	COTTON-IDLE CONVEYOR CONNECTION PLATE	2
34	COTTON-CONVEYOR IDLE MONTAGE	1
35	KD2WH1501 115X2500mm CORDED M6 SILICONE LOWER MIDDLE CONVEYOR BAND RULTRANS	1

STACKING MODULE INTRODUCTION

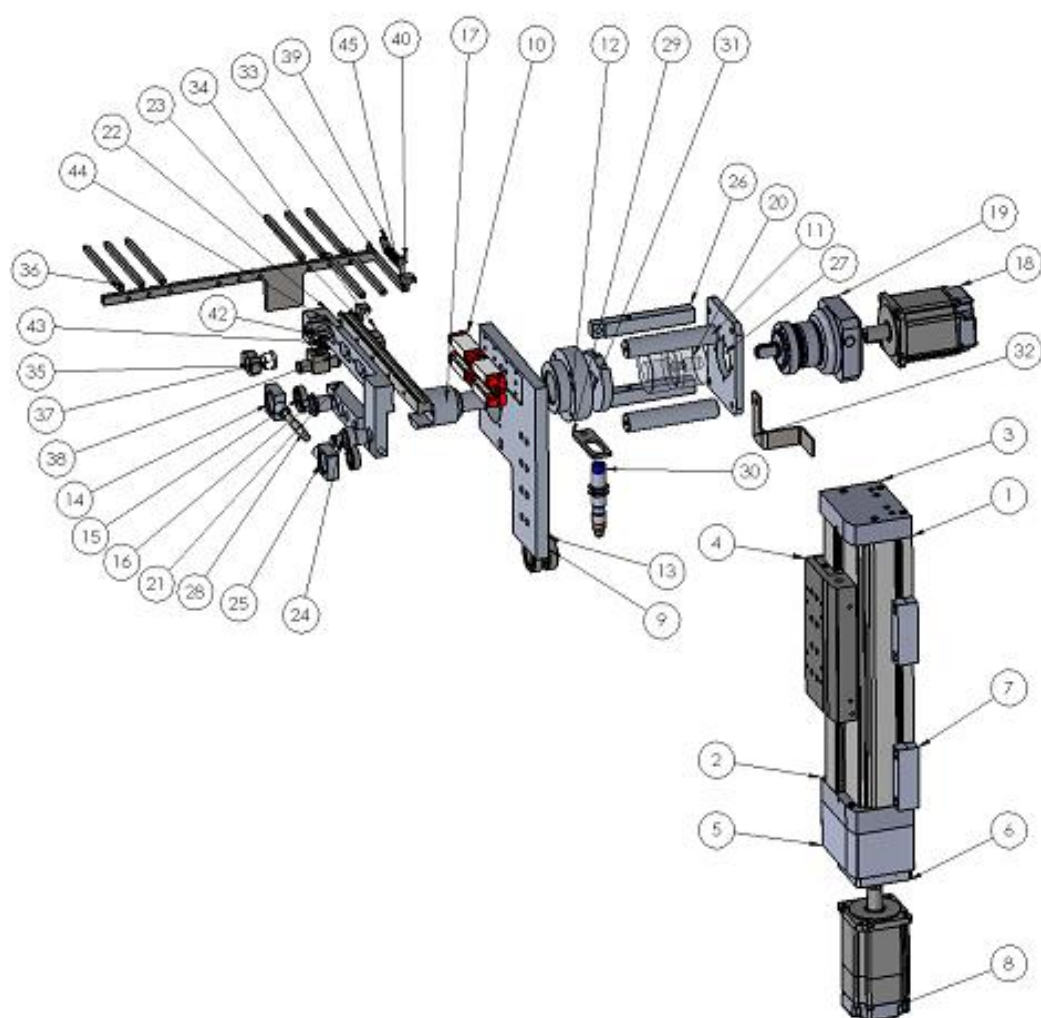


COMPONENT NO.	EXPLANATION	QUANTITY
1	HI_EGC-120-BS396102GK0--0ML-0_0_R0L22000	1
2	HI_EGC-120-BS-KF_(Deckel LI2_0)	1
3	HI_EGC-120-BS-KF_(Deckel RE1_0)	1
4	HI_EGC-120-GK-GPBS1----(0)	1
5	558173_EAMK_A_S62_62AB_1O_-06.11.16	1
6	OMRON MOTOR FLANGE-06.11.16	1
7	558044_MUE_120_185____120__p1-06.11.16	4
8	R88M_K75030H_BS2	1
9	ZAI-STACK GROUP CONNECTION PLATE	1
10	BMWR 20 C G3V1 LINEAR CARRIAGE SCHNEEBERGER	2
11	ZAI-STACK GROUP REDUCTOR CONNECTION SHEET METAL BASE	2
12	ZAI-STACK GROUP BEARING HOUSE	1
13	6005 ZZ RADIAL CONTACT BALL BEARING	2
14	CO 05 17	1
15	SS 6002 RADIAL CONTACT BALL BEARING (STAINLESS)	2
16	ZAI-STACK GROUP MOVE CONNECTION PIN	1
17	ZAI-STACK GROUP MOVE SHAFT	1
18	R88M_K75030H_S2	1
19	PEII 070-003 OMRON R88M-K75030H APEX	1
20	KTR GS 24 READY COUPLING (GOBEK 25/16)	1
21	ZAI-STACK GROUP CONNECTION CLAMP	1
22	PRODUCT PUSHER CONNECTION SHEET METAL	1
23	BMSR 20 ND LINEAR SLIDE HEIGHT 302,5 MM	1
24	ZAI-STACK GROUP MOVE CONNECTION PIN	1
25	CO 05 17	1
26	ZAI-STACK GROUP REDUCTOR CONNECTION SHEET METAL BASE	2
27	ZAI-STACK GROUP REDUCTOR CONNECTION SHEET METAL	1
28	ZAI-STACK GROUP ADJUSTMENT SHEAR CONNECTOR	1
29	PRODUCT PUSHER CONNECTION SHEET METAL	1
30	M18 INDUCTIVE SENSOR	1
31	ZAI-STACK GROUP COUNTER EYE FLANGE	1
32	FAIR-STACK GROUP SENSOR DETECTING SHEET METAL	1
33	COTTON-HINGED STACK BAR CONNECTION PLATE	1
34	DRSCH-HINGED STACK BAR CONNECTION WEDGE	1
35	DRSCH-HINGED STACK BAR CONNECTION WEDGE	1
36	FAIR-PRODUCT STACK BAR	9
37	DRSCH-HINGED STACK BAR CONNECTION BUSHING	2
38	DRSCH-HINGED STACK BAR CONNECTION INTERMEDIATE WEDGE	1
39	M6x8 IMBUS BOLT	1
40	M6x20 IMBUS BOLT	1
41	NANO-HINGED STACK BAR RETURN SPRING	1
42	_SICK IME08-04NPSZT0S-Bestell-Nr.10408862	1
43	_SICK Mutter M8x1	1
44	DR SCH-STACK GROUP SENSOR SHEET METAL	1
45	SENSOR CABLE HOLDER	2

FOLDING MOLD INTRODUCTION

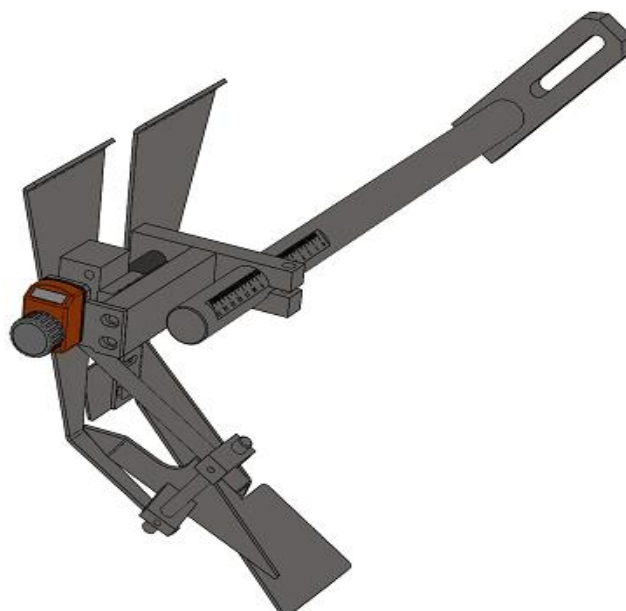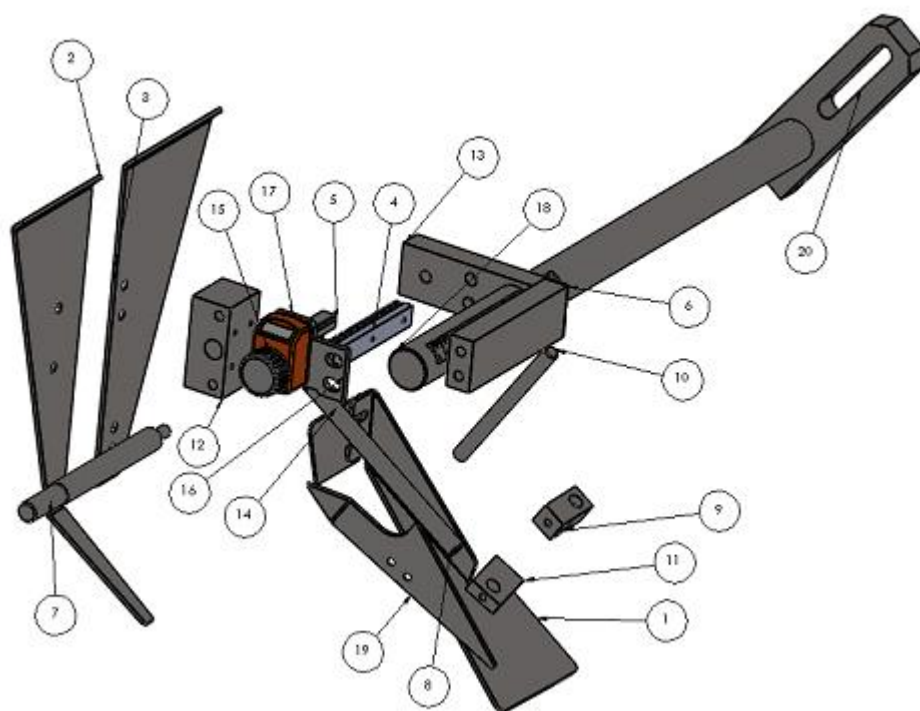


MONTAGE NO.	EXPLANATION	QUANTITY
1	FOLDING EQUIPMENT LOWER BLADE SHEET METAL	1
2	FOLDING MOLD SHEET METAL	1
3	FOLDING MOLD SHEET METAL	1
4	MR 15X100mm (CPC) LINEAR SLIDE (MINIATURE STAINLESS) HOLE SIZE FROM EDGES 10mm	1
5	MR 15 MN (CPC) LINEAR CARRIAGE	1
6	FOLDING EQUIPMENT SLIDE CONNECTION BASE	1
7	FOLDING EQUIPMENT ADJUSTMENT SHEAR CONNECTOR	1
8	FOLDING EQUIPMENT SIDE EAR CONNECTION SHAFT	1
9	FOLDING EQUIPMENT SHAFT CONNECTION WEDGE	1
10	FOLDING EQUIPMENT SIDE EAR SHEET METAL CONNECTION SHAFT	1
11	FOLDING EQUIPMENT SHAFT CONNECTION BASE	1
12	FOLDING WEDGE	1
13	FOLDING CONNECTION CLAMP	1
14	FOLDING EQUIPMENT SIDE EAR CONNECTION SHAFT	1
15	CE 85851 TOURMETER FLYWHEEL	1
16	FOLDING ADJUSTMENT SHEAR CONNECTOR CONNECTION PLATE	1
17	MECHANIC NUMERATOR OB14-D-1-S (LINPOTEK)	1
18	COTTON-FOLDING MOLD CONNECTION SHAFT	1
19	FOLDING EQUIPMENT SIDE EAR SHEET METAL	1
20	COTTON-FOLDING MOLD CONNECTION CLAMP	1

CUTTING MODULE INTRODUCTION

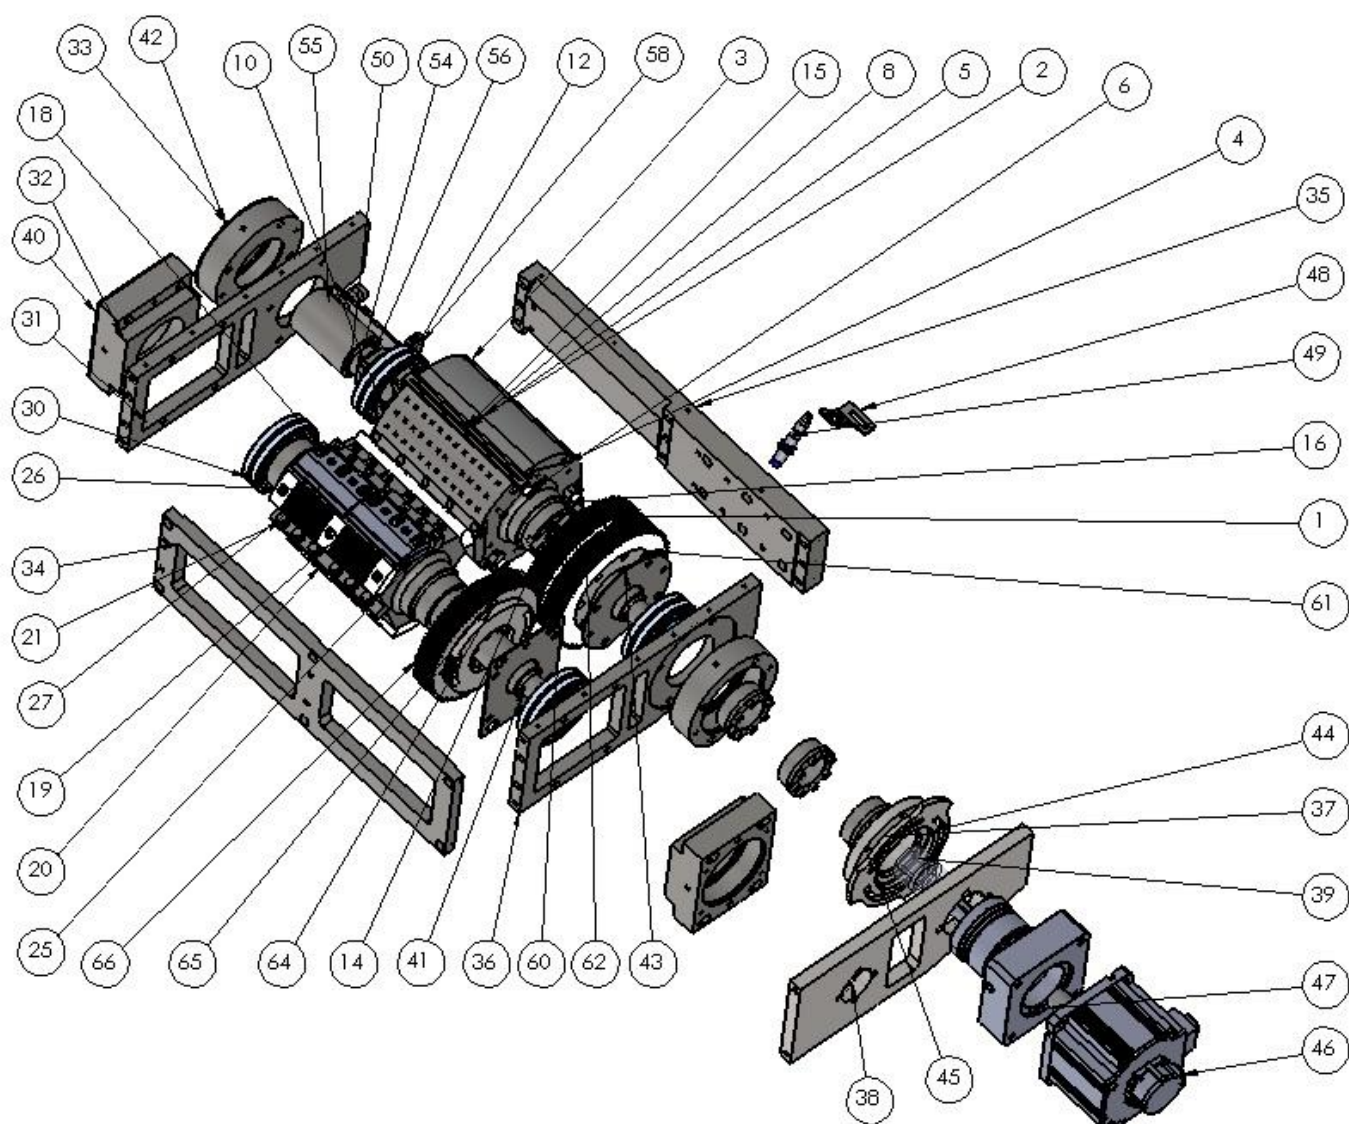

COMPONENT NO.	EXPLANATION	QUANTITY.
1	LOWER CUTTING CYLINDER	1
2	LOWER CUTTING ANVIL WEDGE	3
3	COTTON-ANVIL WEDGE CLAMPING PIECE	3
4	ZAI-ANVIL WEDGE CONNECTING TAB COMPONENT	6
5	CONNECTING TAB HOLDER CONENCTION PLATE	3
6	CONNECTING TAB HOLDER CONNECTION BUSHING	6
7	CONNECTING TAB HOLDER EXPANDER-PRESSED	12
8	CONNECTING TAB HOLDER SHEET METAL	6
9	M6 x 6 SOCKET SET SCREW STAINLESS	24
10	CONNECTING TAB HOLDER LOWER CONNECTION PLATE	3
11	M5 x 5 SOCKET SET SCREW	21
12	CONNECTING TAB COMPONENT	3
13	CONNECTING TAB HOLDER CONNECTION WEDGE	6
14	DIN6325 Ø6X20mm STRAIGHT FIXING PIN	6
15	FLEXI CUTTING BLADE-HELIX VISUAL	3
16	M8x30 BOLT	12
17	M8 WASHER STAINLESS	12
18	UPPER CUTTING CYLINDER	1
19	UPPER CUTTING ROLLER INTERLUDE CONNECTION PART	3
20	M10 HEXAGON NUT	3
21	FLEXI CUTTING BLADE-HELIX VISUAL	18
22	M10 HEXAGON NUT	18
23	M8 x 20 HEXOGANE SOCKET HEAD STAINLESS	6
24	M10x50 HEXAGON BOLTS CHROME	6
25	M10 HEXAGON NUT	3
26	HELIX CUT VISUAL	3
27	CENTRAL HELIX UPPER KEEP PART	3
28	M8x20 HEXOGANE SOCKET HEAD STAINLESS	6
29	DIN 6325 Ø3x16 PLAIN DOWEL	6
30	22216 E BEARING	4
31	210*30*530mm 304 CUT GROUP CONNECTION PLATE	1
32	BLADE GROUP MOVING BEARING HOLDER	2
33	BLADE GROUP MOVING BEARING HOUSE COVER	2
34	BLADE GROUP REAR CONNECTION PLATE	1
35	CTL350F-60 TAPER BUSHING	1
36		3
37	CTL350F-60 FERRULE	1
38	BLADE GROUP REDUCTOR CONNECTION PLATE	1
39	KTR GS 28 COUPLIN	1
40	BLADE GROUP MOVING BEARING HOUSE COVER	1
41	BLADE GROUP MOVING BEARING HOUSE COVER LID	1
42	Metric - Spur gear 2.5M 96T 20PA 40FW ---S96N75H50L0.8N	1
43	LOWER BLADE CYLINDER DELRIN GEAR HUB	2
44	Metric - Spur gear 3.5M 69T 20PA 40FW ---S69N75H50L0.8N	1
45	LOWER CUTTING CYLINDER COUNTER FLANGE	1
46	LOWER CUTTING CYLINDER COUNTER FLANGE HUB	1
47	R88M_K5K020F_S2	1
48	PEII 120-005 OMRON R88M-K5K020F APEX	1
49	LOWER CUTTING CYLINDER SENSOR SHEET METAL	1
50	M18 INDUCTIVE SENSOR	1
51	VACUUM CONNECTOR COMPONENT	1
52	SS 6008 RADIAL CONTACT BALL BEARING (STAINLESS)	2
53	VACUUM CONNECTOR INTERMEDIATE BUSHING	1
54	READY-MECHANICAL SEAL-2	1
55	READY-MECHANICAL SEAL-1	1
56	VACUUM CONNECTOR COMPONENT-2	1
57	30001388-1 INCH HOSE NOZZLE GEAR	1
58	VACUUM CONNECTOR COUNTER NUT	1
59	Metric - Spur gear 2.5M 96T 20PA 40FW ---S96N75H50L0.8N	1
60	UPPER BLADE CYLINDER GEAR HUB	1
61	Metric - Spur gear 2.5M 96T 20PA 40FW ---S96N75H50L0.8N	1
62	CTL350F-60 TAPER BUSHING	1


BOBBIN GROUP INTRODUCTION

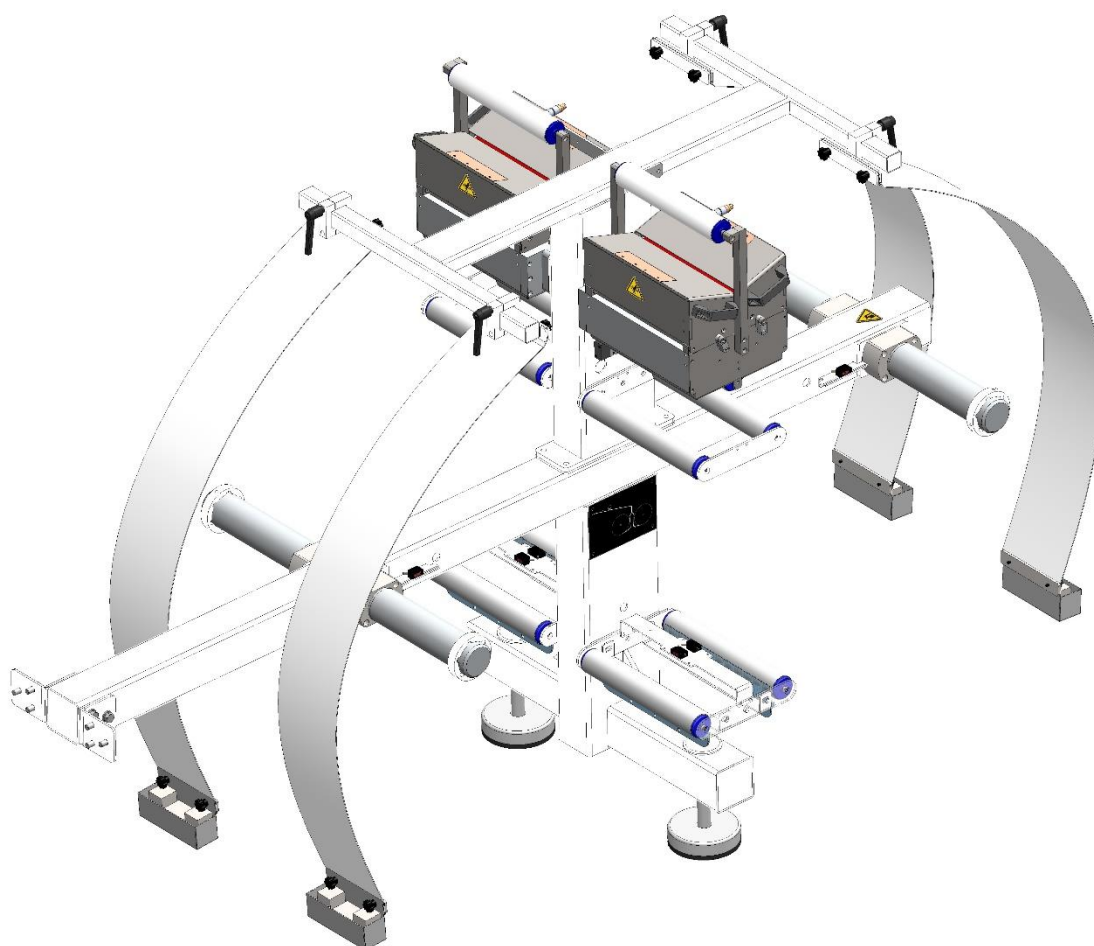

BOBBIN GROUP CONSISTS OF TWO SECTIONS.


- 1- BOBBIN CARRIER SHAFT (PNEUMATIC SHAFT)**
- 2- SPLICE GROUP**

SPLICE MODULE INTRODUCTION

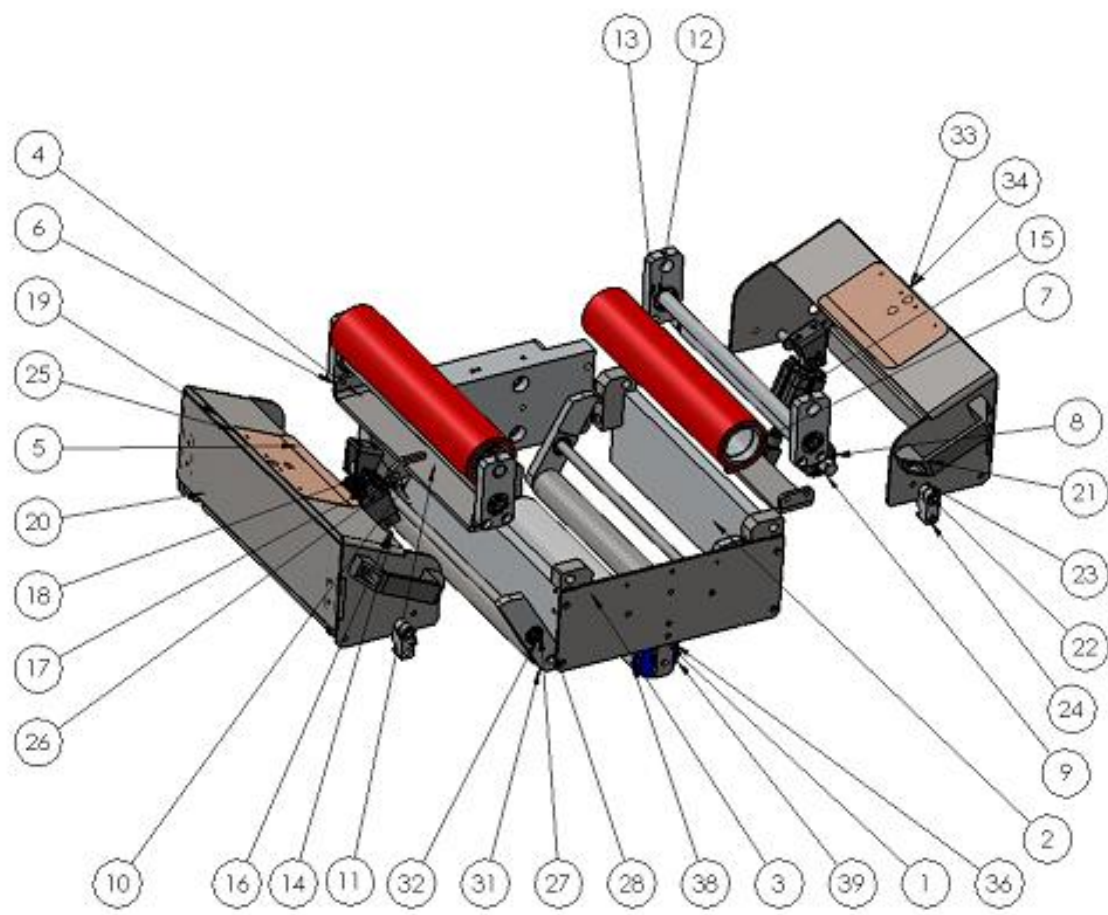


COMPONENT NO.	EXPLANATION	QUANTITY.
1	SPLICE FIX COMPONENT FRONT SHEET METAL	1
2	SPLICE FIX COMPONENT SIDE SUPPORTS	2
3	SPLICE HINGE	4
4	SPLICE REAR PLATE	1
5	SPLICE RUBBER CYLINDER OPENNING SIDE SHEET METAL	1
6	ALUMINUM 7075 T6 SPLICE RUBBER CYLINDER HOUSE	4
7	AUTOMATIC SPLICE RUBBER CYLINDER	2
8	6203 RADIAL CONTACT BALL BEARING	4
9	SPLICE CYLINDER SHAFT	2
10	SPLICE RUBBER CYLINDER RELEASE ROD	2
11	SPLICE RUBBER CYLINDER PUSHING	2
12	SPLICE RUBBER CYLINDER INTERMEDIATE SHAFT	2
13	SS 6001 RADIAL CONTACT BALL BEARING (STAINLESS)	4
14	3111_SG_M8	2
15	536233_ADN_15P_Z	2
16	536233_ADN_15P0_KS	2
17	537792_SNCL_20	2
18	6059_LBN_20_25	2
19	PVC COVERED SPLICE REAR COVER	1
20	HINGE PIN	4
21	ELASA GANTER M 443 110 EH 5 (37037)	2
22	SPLICE LOCK ARM HINGE PIN	2
23	SPLICE LOCK ARM	2
24	BALL SET SCREW	2
25	BRONZE PHOSPHORE 0,4 MM	2
26	IDLE SIDE CONNECTION PLATE	2
27	608 zz BEARING	4
28	SPLICE CONVEYOR IDLE	2
29	ss6001 BEARING	4
30	IDLE INNER SHAFT	2
31	IDLE SIDE CONNECTION PLATE	2
32	SPLICE CONVEYOR IDLE OSCILLATING SHAFT	2
33	SPLICE RUBBER CYLINDER OPENNING SIDE SHEET METAL	1
34	SPLICE REAR COVER BUTTON	1
35	BUTTON	1
36	UNDER SPLICE IDLE CONNECTION SHEET METAL	2
37	COTTON-UNDER SPLICE IDLE SHAFT	1
38	COTTON-UNDER SPLICE IDLE TUBE	1
39	KTR 50x1,5 MM BLUE ROLL CAP	2

PULLING MODULE INTRODUCTION

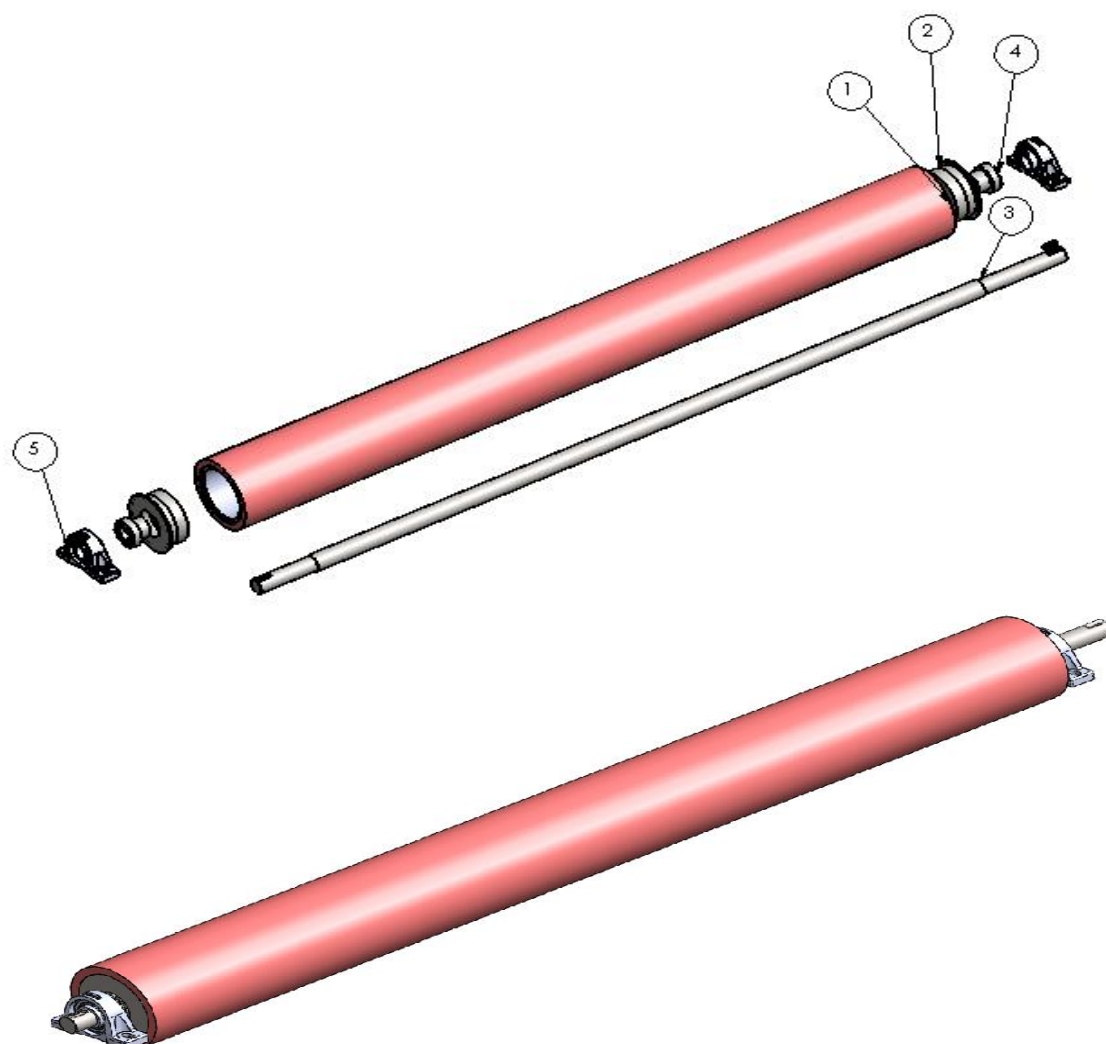


MONTAGE NO.	EXPLANATION	QUANTITY
1	PULLING RUBBER CYLINDER	1
2	UPPER BOBBIN PULLING CYLINDER COVER	2
3	PULLING RUBBER CYLINDER SHAFT	1
4	CTL 100-40 TAPER	2
5	UCP 208 BEARING HOUSE	2
6	12 x 8 x 40 COTTER	1

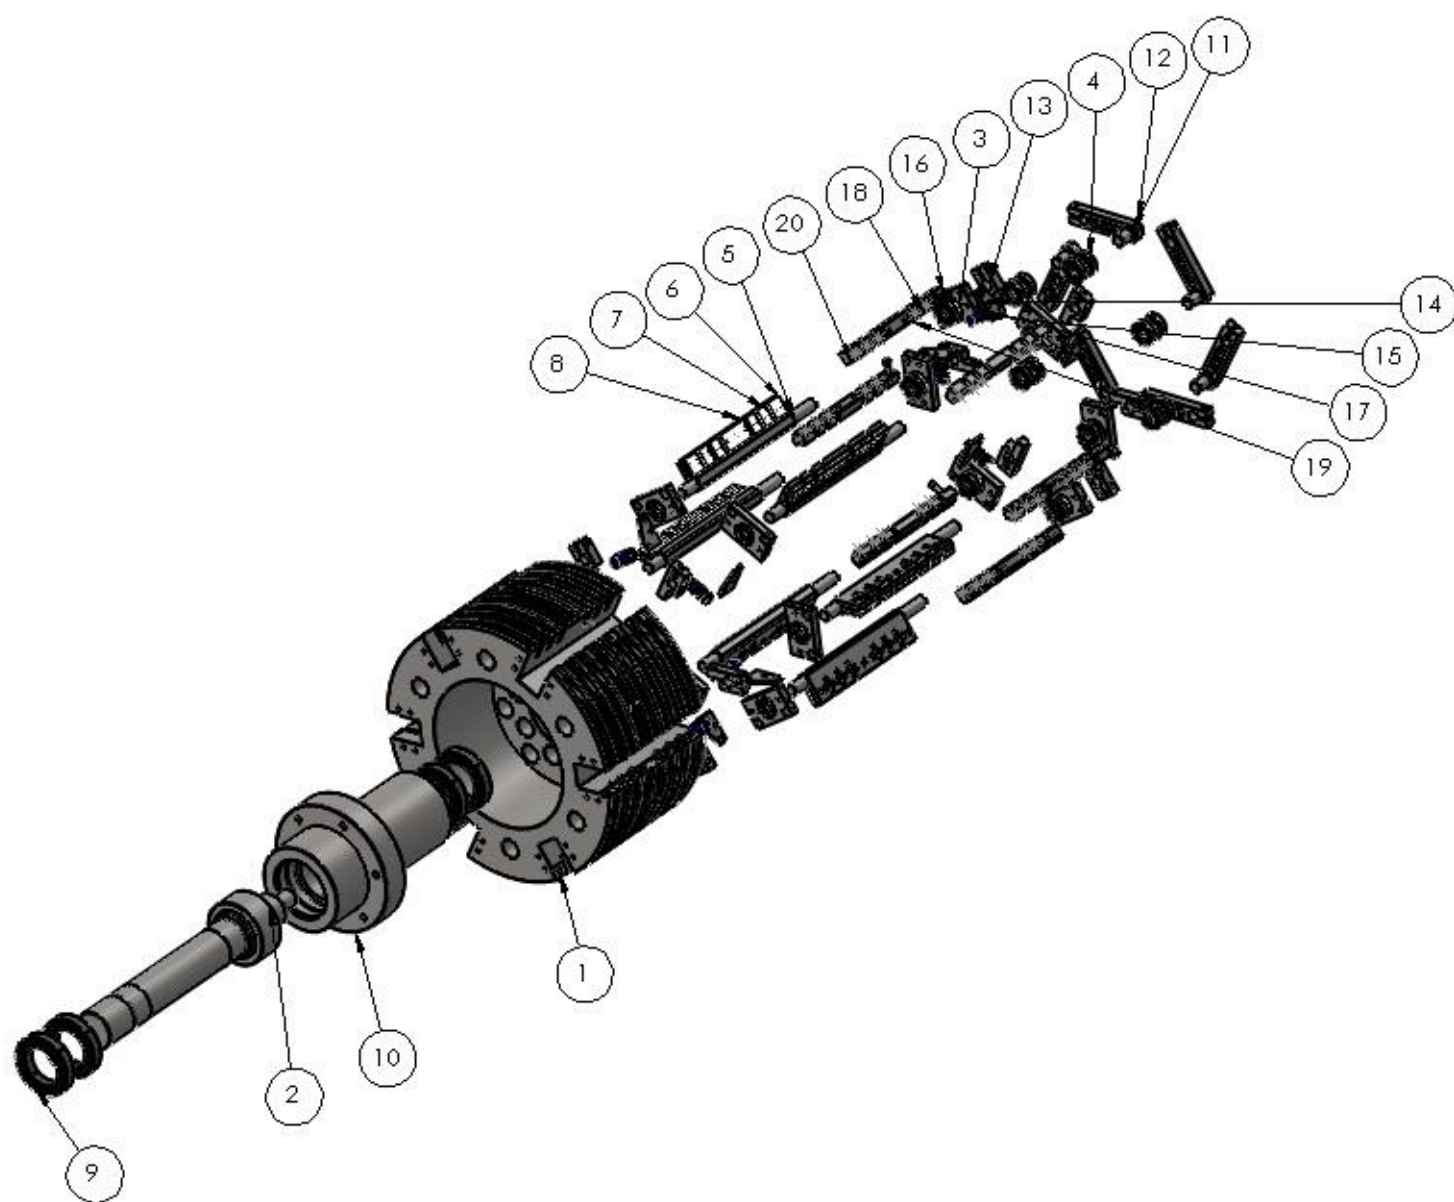FOLDING VALVE MODULE INTRODUCTION

MONTAGE NO.	EXPLANATION	QUANTITY
1	FOLDING VALVE-RIGHT	1
2	FOLDING VALVE SHAFT	1
3	FOLDING VALVE MOVING BEARING HOUSE	12
3	FOLDING VALVE MONTAGE-RIGHT	24
4	SS6014 2RS BEARING CHROME	6
5	FOLDING VALVE FIX JAW	12
6	FOLDING VALVE FIX JAW	24
7	FOLDING VALVE FIX JAW	6
8	FOLDING VALVE MOVING JAW MONTAGE	4
9	SS6014 2RS BEARING CHROME	1
10	FOLDING VALVE BEARING CAPSULE	6
11	FOLDING VALVE CAM ARM MONTAGE	6
12	FOLDING VALVE CAM ARM	12
13	FOLDING VALVE MOVING JAW SPRING CONNECTION WEDGE	12
14	FOLDING VALVE SPRING CONNECTION PLATE	12
15	3S19050 MOLD SPRING BLUE	7
17	FOLDING VALVE THYROPLAST PHX SUPRA HRC42	6
18	FOLDING VALVE THYROPLAST PHX SUPRA HRC42-2	24
19	FOLDING VALVE THYROPLAST PHX SUPRA HRC42-3	6
20	FOLDING VALVE THYROPLAST PHX SUPRA HRC42-1	6

PLUMBING GROUP INTRODUCTION

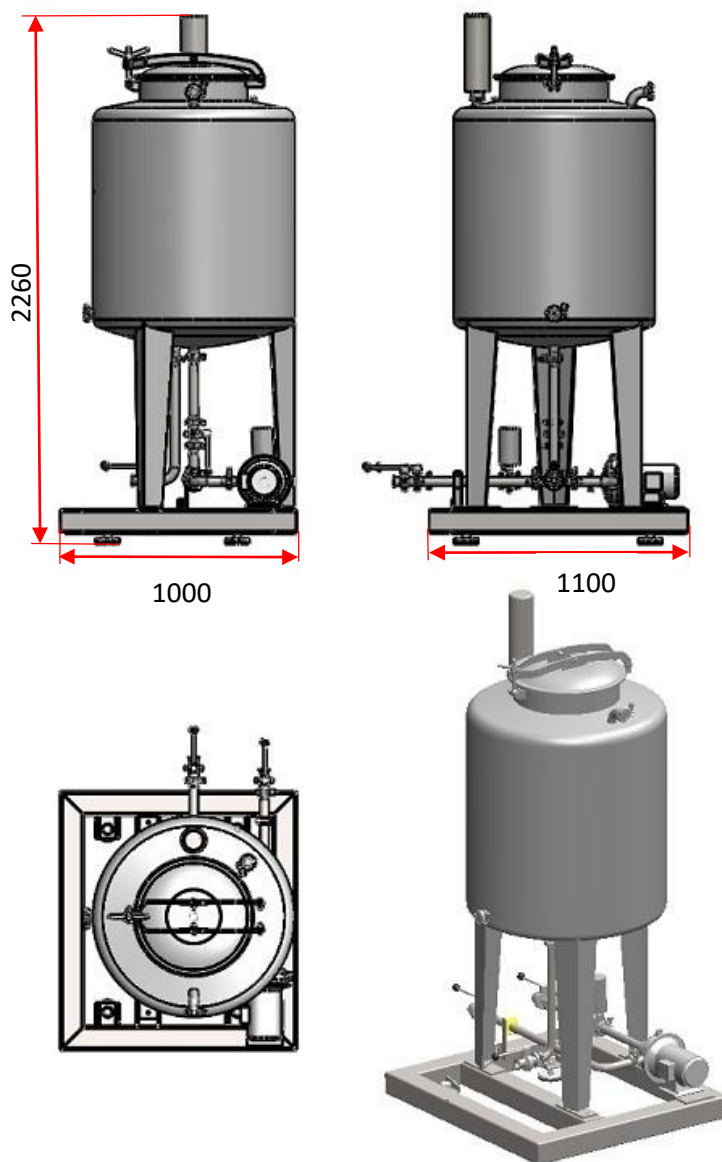

PLUMBING GROUP CONSISTS OF THESE SECTIONS :

- 1- SOLUTION TANK
- 2- PUMP

CLEANING INTRUCTIONS TO BE MADE ON PRODUCT CHANGE

- Disinfect these areas in order to avoid old products and lotions in the folding vales, knives, stackers.
- Clean the components in the folding mold part.
- Clean all components which provide nozzle and lotion pass.
- Clean the inside of the tank and filters.
- Clean inside of the conveyors and upper product contact of product carrier conveyors.

 Daily- Weekly Periodic Maintenance and Cleaning Instructions

- Make general cleaning of the machine.
- Clean the electrical panel with a vacuum cleaner.
- Clean the ventilation fan on the electric panel.
- Clean the optical sensors by not removing them.



The belts used on the machine should be firstly ventilated during the periodic maintenance process to remove dust, dirt or small particles. Then maintain the trigger belts wiping with a damp cloth.

- Check all the gears. Replace the damaged ones.
- Discharge the conditioner drainage water.
- Clean the electric panel with a vacuum cleaner.
- Clean the ventilation fan on the electric panel.

 Monthly Periodic Maintenance and Cleaning Instructions

- Clean the rubber rolls with water, after it is thoroughly dried, powder it.
- Clean the filters of ventilation covers each month.



In periodic maintenance, wipe the conveyor belt with a cloth dipped in acetone.

- Make the general machine cleaning.
- Clean the electric panel with a vacuum clenaer.
- Check the conditioner oil.
- Clean the optical sensors by not removing them.
- Clean the tank and the filters on plumbing.

WEEKLY PERIDIOC MAINTENANCE INSTRUCTIONS

- Make the general machine cleaning.
- Clean the tank and filters on plumbing.
-



According to the CLEANING TIME SET in the time setting, all plumbing and nozzles are filled with liquid and the inside of them are cleaned.

- Check the tightness of the bolts on stacking and cutting system.
- Check the straining of all belts. Please make the maintenance. Replace if there is any worn belt.



The belts used on the machine should be firstly ventilated during the periodic maintenance process to remove dust, dirt or small particles. Then maintain the trigger belts wiping with a damp cloth.

- Check all the Delrin gears. Replace the damaged ones.
- Check the temperatures of reductors.
- Discharge the conditioner drainage water.

MONTHLY PERIODIC MAINTENANCE INSTRUCTIONS


- Check the tightness of all visible connecting bolts.
- Remove all machine straps and perform gear, pulley and bearing checks. Check the mechanics manually for any abnormalities. Change the bearings of non-rotating mechanisms.
- Check the filters of ventilation covers at every month.
- Maintain and make visual – tension controls of conveyor belts.
- Check the conditioner oil.






For the maintenance of the other parts, please read their own MAINTENANCE INSTRUCTIONS booklet.



- Manually turn the mechanisms by unscrewing all the straps on the machine. Change the bearings of non-rotating mechanisms.
- Perform visual inspection of pulling rolls.
- Lubricate all of the other linear slides on the machine.
- Maintain and make visual – tension controls of conveyor belts.
 - Check the tightness of the bolts on the stacking and cutting system.
 - All of the displayed greases must be lubricated at every month.

MECHANICAL LUBRICATION AREAS

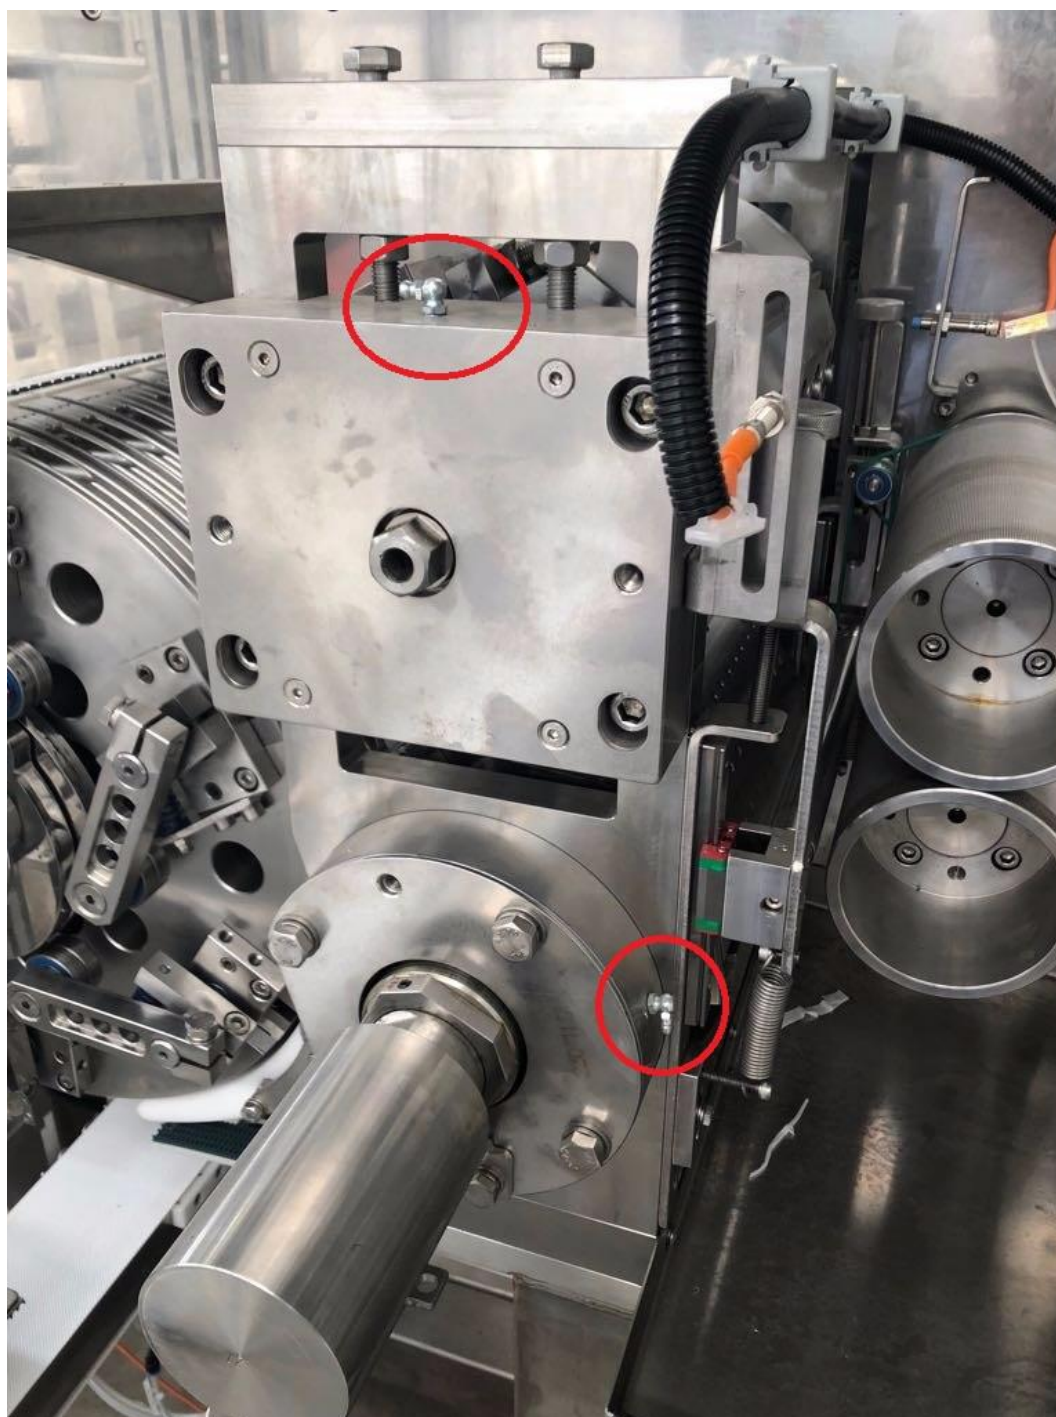

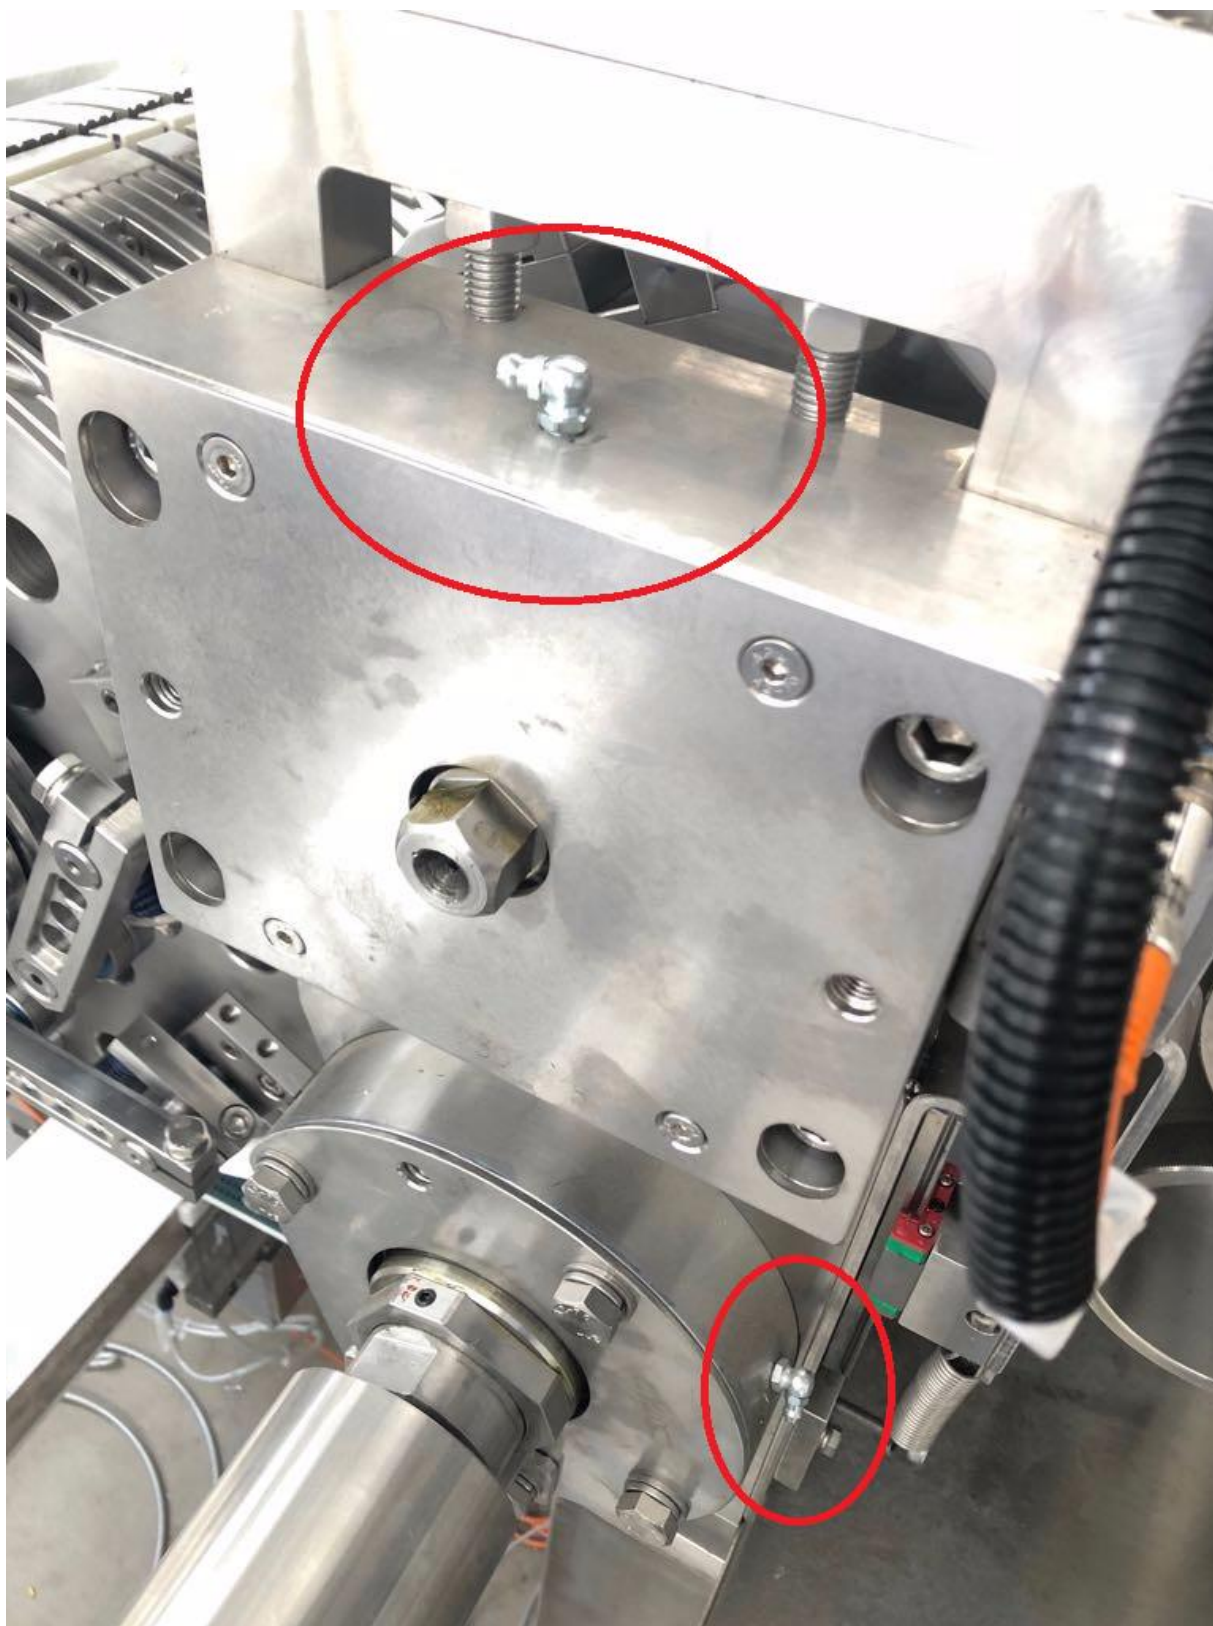

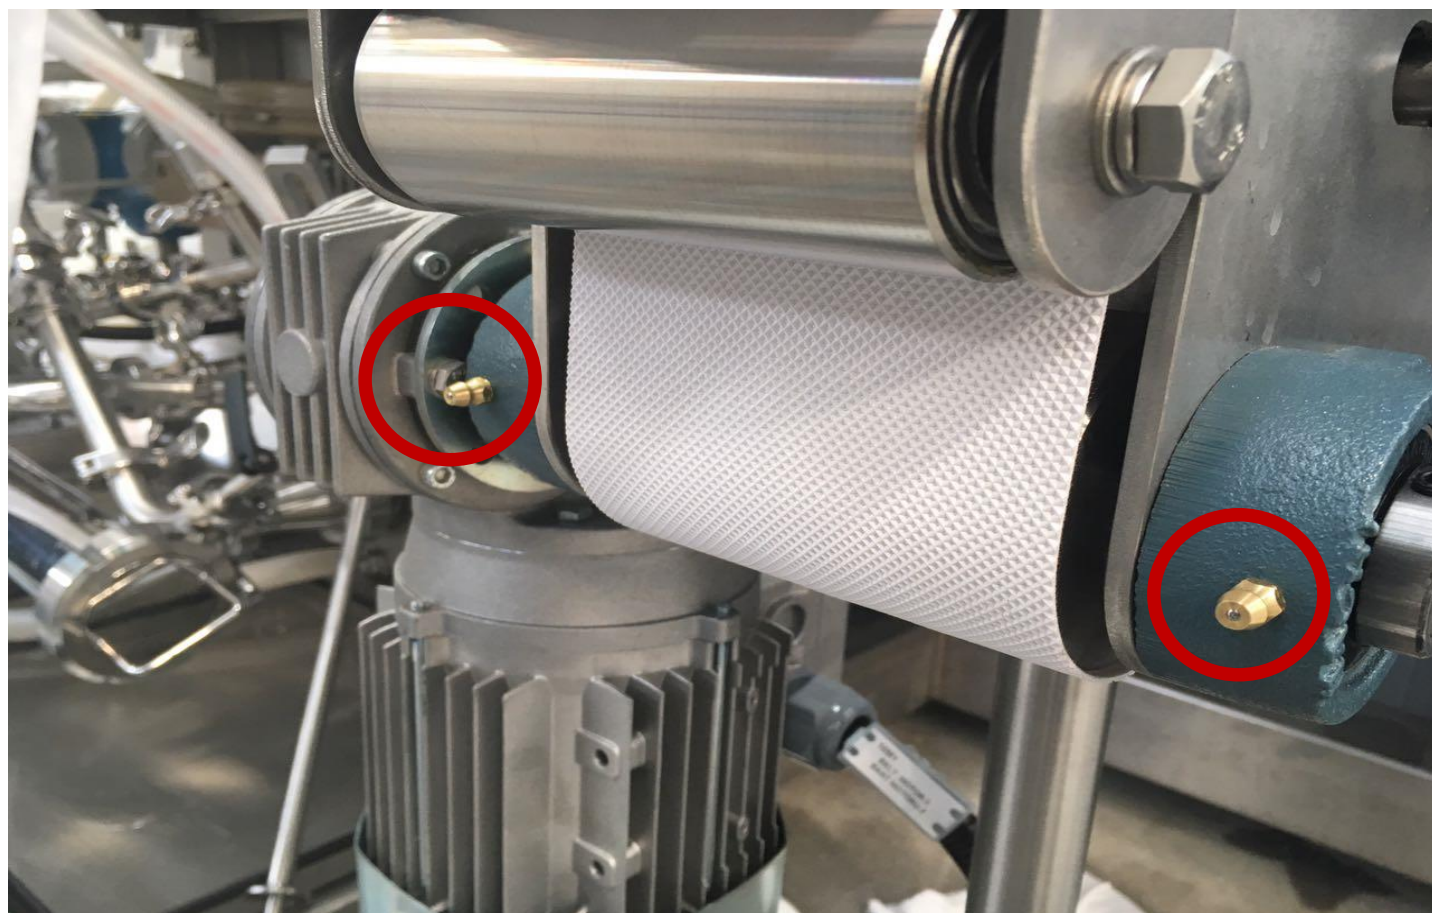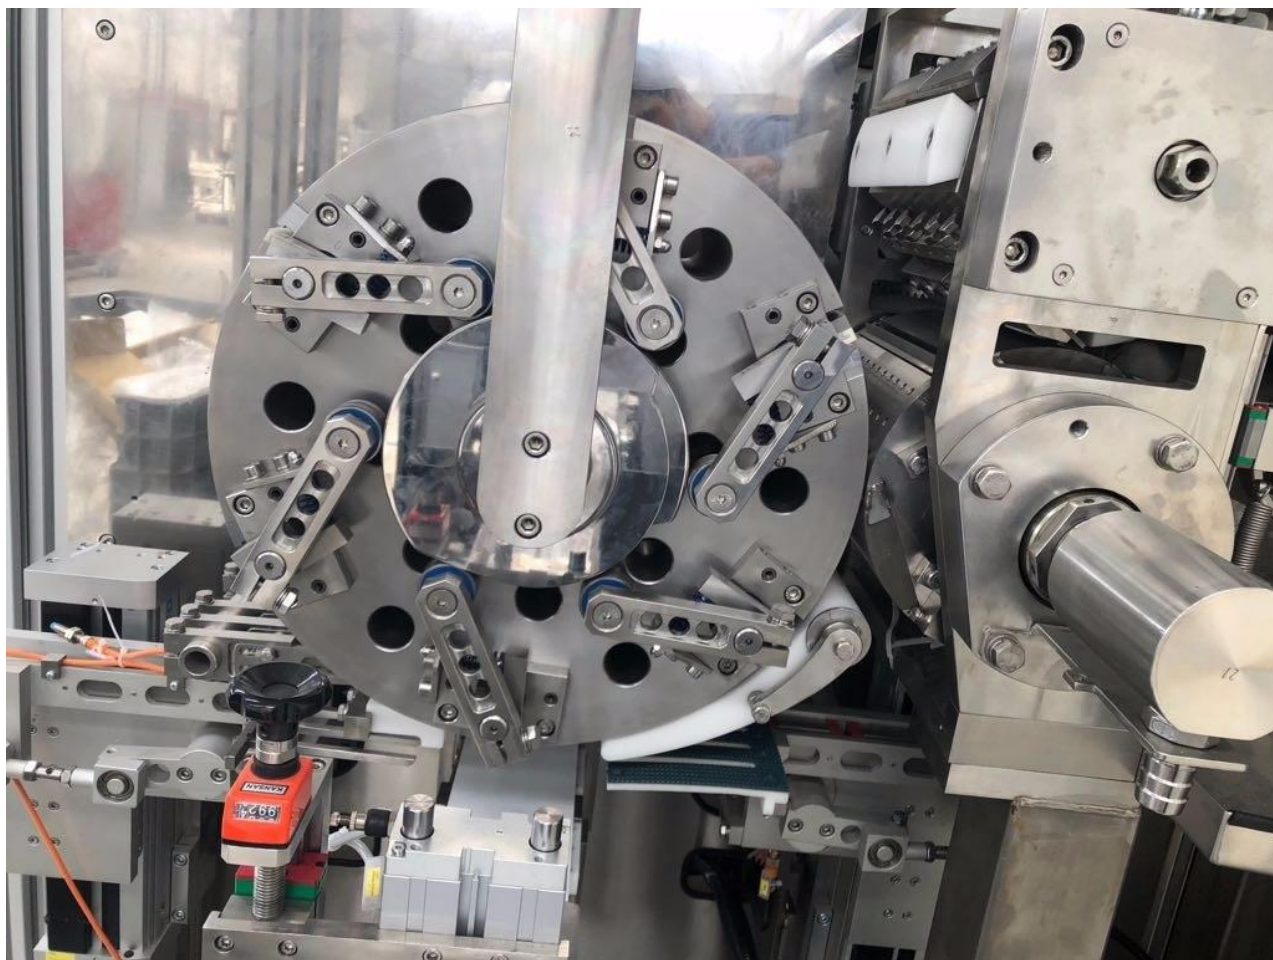

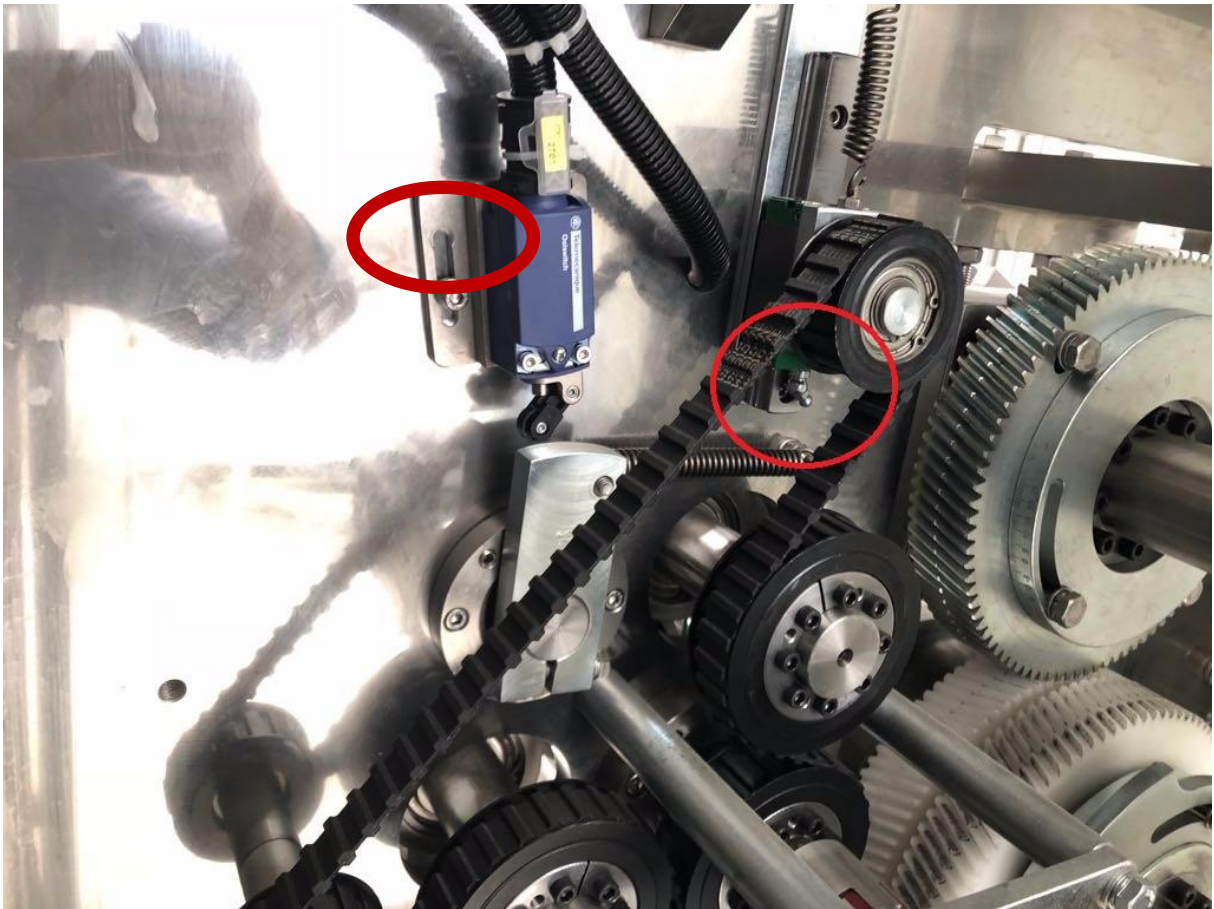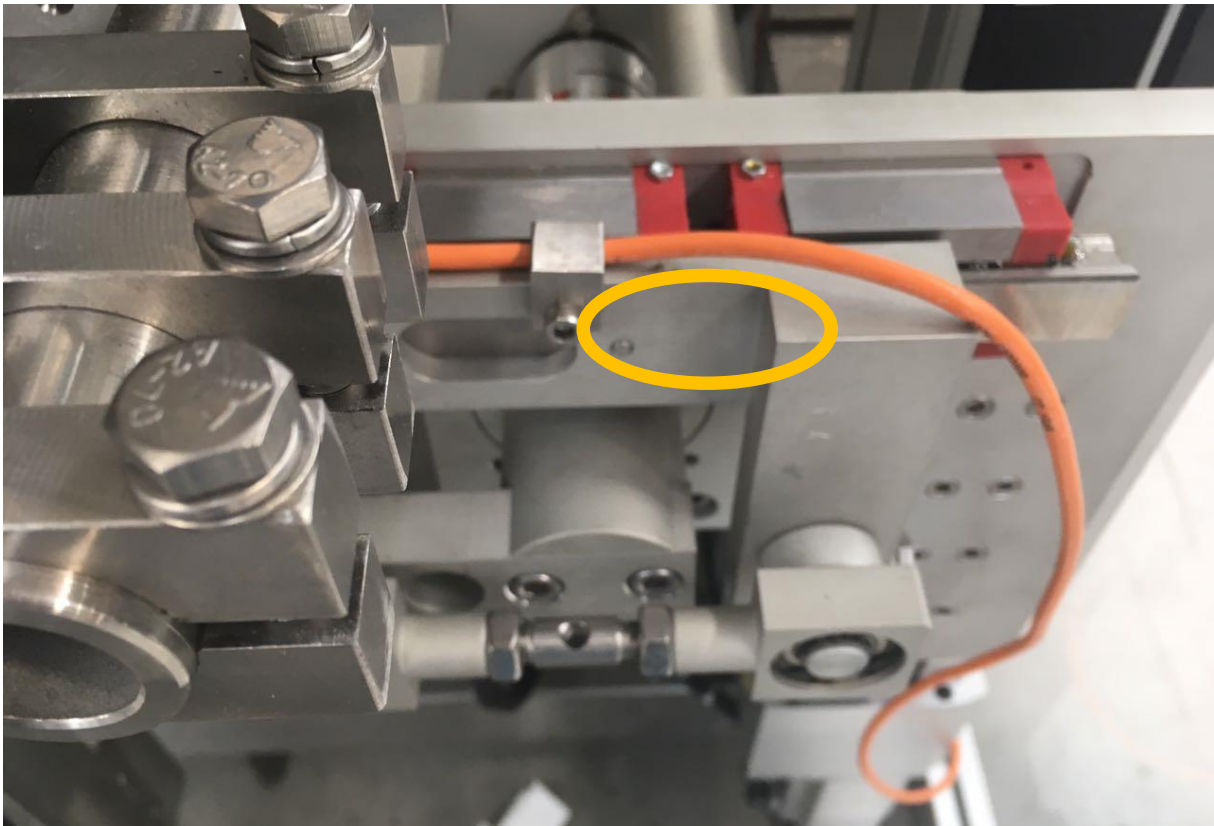



PRECAUTIONS TO BE TAKEN BY OPERATOR



The operator must wear safety goggles before using the machine.



Accessories such as necklaces, rings, watches should not be worn.

It is necessary that the work clothes to be worn are not abundant and that ID cards such as hanging badges can not be worn.

Non-slip footwear and outfits with rubber should be worn.



Machine must not definitely used by someone drunk.



The operator should not operate the machine when the covers of the machine are open.

Safety switch and emergency stop connections and their locations must not be altered.



The operator must comply with the general safety warnings on the machine and in the operating instructions.

MACHINE LABEL





Compact
solutions
for wet wipe
production