

EN
QUICKSTACK 12
USER MANUAL

QUICKSTACK 12

Date:22.08.2017

Place: Gostyn, PL

EC DECLARATION OF CONFORMITY



Declaration Number: DEC170822-1

We, as KANSAN MAKINA KAGIT SAN. VE TIC. AŞ., are a manufacturer settled at the address Capak Mah. 2594 Sok. No:6 Torbali – Izmir 35860 Turkey. We hereby declare that machine, whose name, serial number and model are indicated below, are in accordance with below mentioned standards.

PRODUCT DETAILS

ACURAPACK 140 PACKAGING MACHINE, Model Year:2018

CONCERNED STANDARDS

Machine is in conformity with the following standards and normative documents.

EC-Machinery Directive 2006/42/EC

EC-Low Voltage Directive 2014/35/UE

EC-Directive 2014/30/UE EMC

Applied harmonized norms:

EN ISO 12100: safety of machinery, basic concept, general principle for design, Basic terminology and methodology.

PN-EN ISO 13850: Machine Safety E-Stop Rules of Protecting

PN-EN ISO 13857: Machine Safety Safe Distances for Reach Zones

EN 60204-1: Safety of machinery, electrical equipment of machines, general requirements.

KANSAN MAKINA KAGIT SAN. VE TIC. AŞ.,

Capak Mah. 2594 Sok. No:6 35860 Torbali, Izmir, Turkey

Sedat Gezer
General Manager

USER MANUAL

This user manual belongs to **QUICKSTACK 12** / Automatic Wet Wipes Machines. It is written to provide adjusting machine healthy and effective,productive and safe usage of it.

Please directly contact with us if any technical problem is not clear in this user manual.

SALES DEPARTMENT

TEL : +90 (232) 853 9634

E-mail : info@kansanmak.com

AFTER-SALES SUPPORT

E-mail : support@kansanmak.com



**Compact
solutions
for wet wipe
production**

Adres: Çapak Mah. 2594 sk. No. 6
Torbalı - İzmir 35860 Türkiye

Tel: +90 232 853 9634

Faks: +90 232 853 9107

E-posta: info@kansanmak.com

URL: www.kansanmak.com

INDEX

GENERAL INFORMATIONS ABOUT THE MACHINE

TECHNICAL INFORMATION

18

MACHINE LAYOUT MEASURES

28

TOWER LIGHT INDICATOR

32

BOBBIN CHANGE

37

CUTTING ROLLER AND BLADE ADJUSTMENT

38

BLADE CHANGE FOLLOW-UP

40

CARRIER CONVEYOR ADJUSTMENTS

41

STACKING PLATFORM ADJUSTMENTS

43

RECIPE SAMPLE AND PREPARATION

47

PACKING WIPE NUMBER ADJUSTMENTS

48

FOLDING TYPES

49

METAL DETECTOR AND SPLICE FORMS

OPERATOR SCREEN INFORMATION

51

LANGUAGE SELECTION AND MAIN MENU SCREEN

52

ADJUSTMENT AND WETTING SCREEN

53

SERVO ADJUSTMENT AND BOBBIN SCREEN

54

TRANSFER AND PRODUCTION SCREEN

58

MANUAL AND AUTHORIZATION SCREEN

62

ALARM AND ALARM HISTORY SCREEN

63

SERVICE MENU AND SERVICE ADJUSTMENT-1 SCREEN

64

RECIPE LIST SCREEN

MODULES VE COMPONENTS DETAILS

MACHINE PARTS

68

CABIN PART

69

OPERATING PANEL

70

LAST EXIT CONVEYOR MODULE

72

LOWER STACKING MODULE

74

PRODUCT STACKING CONVEYOR MODULE

77

PRODUCT PUSHER MODULE

79

PRODUCT STACKING MODULE

81

PRODUCT CUTTING MODULE

83

PRODUCT CARRIER CONVEYOR MODULE

86

BOBBIN CONVEYOR DRIVE MODULE

88

BOBBIN CONVEYOR PNEUMATIC TENSIONER MODULE

90

FOLDING MOLDS GROUP

97

PLUMBING GROUP

101

GENERAL SECURITY WARNING

WARNING SYMBOLS AND EXPLANATIONS

MAINTENANCE AND CLEANING INSTRUCTIONS 106

107
BEARING LUBRICATION INSTRUCTIONS

108
PERIODIC MAINTENANCE INSTRUCTIONS

120
PROBLEMS AND SOLUTIONS



General Information About Machine




Compact
solutions
for wet wipe
production



This machine cannot be used with alcohol and flammable material.

QUICKSTACK 12

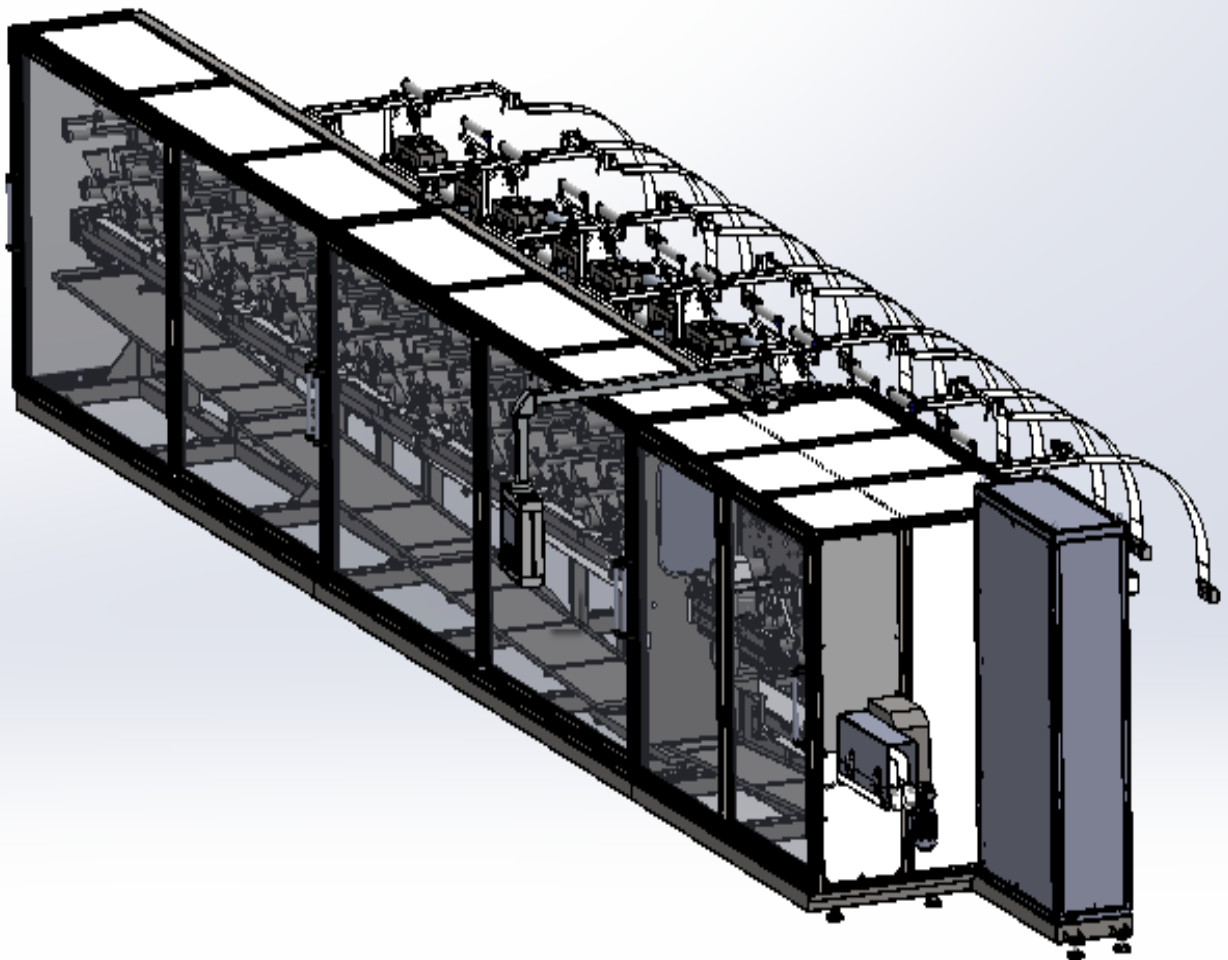



Get to know the Wet Wipe Machine.

1. Quickstack series machines produce hygienic wet cleaning wipes.
2. Products from the machine work with products which are determined by the producer company.
3. Content of products on the machine is specified by the purchaser company and its responsibility is accepted.
4. Produced products are sent to packaging for the next operation.



This machine cannot be used with alcohol and flammable material.

QUICKSTACK 12



Total Needed Electric Power: 380 VAC+N+PE / Network Type: TN-S / 50 Hz –37 kW

Total Needed Air Pressure Power: 300 Lt/dk – 6-8 Bar

Technical Specifications

a. Capacity

Cutting Speed: 800 wipes/min (Design Speed)*

725 wipes/min (Advisable Speed)

Package Speed: 150 packages/min*

Line Speed : 167 meters/min*

Number of Wipes: 19200 wipes/min (Design Speed)*

17400 wipes/min (Advisable Speed)

* Adjust the speed of the machine reached before the given values.

* Machine capacity can vary depending on the used raw material and its quality.

b. Efficiency

Performance $\geq 85\%$ *

* Bobbin change, cleaning, maintenance etc. times are included.

BOBBIN EXCHANGE WASTE: ≤ 3 cuts

START-STOP WASTE: ≤ 5 cuts

Continuity of Work: 7/24

c. Cutting System

In the 2-blade rotary flex cutting system, blades cut with a helical angle of 3 degree. Thus, the blade offer longer use and it provides much quieter but efficient and precise cutting comparing the other products on the market. This system, which is the stroke at least level, enables to make a more efficient and precise cut in the production of raw materials with different compositions and especially raw materials with high polyester ratio thanks to cutting with single touch point basis. The unit has a design capacity of 800 cuts / min. This unit is compactly designed to be able to make easy maintenance of the system. If necessary, any other mechanism can be easily disassembled and assembled without disrupting the integrity of components.

Cutting System Featured Specifications

- 1) *The system which ensures that the blade does not stay on the cutting chock during postures*
- 2) *Sensor and warning system to detect the blunt on cutting blade or the problem on cutting quality*

QUICKSTACK 12

- 3) *Monitoring of blade changing times on operator screen*
- 4) *Rotary steering which provides easy adjustment of blades*
- 5) *Advanced low vibration on the entirely cutting system*
- 6) *Longer use and durable blades*

Maximum Cut

800 cuts/min (Design Speed)

725 cuts/min (Advisable Speed)

Maximum Wipe Numbers

19200 wipes/min (800 cuts min x24 line)

Cutting Range

100 mm – 220 mm

Blade

Hardened special steel material

Anvil

Hardened special steel material

Lower and Upper Roller

Vibration Absorbing Design which has stainless high-strength steel

Carrier Conveyors

All belts are polyurethane and suitable for FDA standards



d. Bobbin Unit

The unwind unit consists of a module of 24 bobbins. The unit function is to unwind bobbin and drive it towards to folding molds. In the fully servo-controlled bobbin unwind system, the diameter of the rollers used for unwinding is kept large. As a result of this, by enlarging the roller surface area, the nonwoven contact area on the surface is increased and this ensures more stable and uniform bobbin unwinding. Besides, the special rubber material used on the surface of the rollers increases the friction and this increases the holding of the raw material on the roller surface. In addition all these, there is a pulling roller system on the main conveyor after folding molds. Thus, the unwinding bobbin operation is supported by two-way unwinding and pulling. When the bobbin finishes, the "Bobbin has finished" sensors which are placed in every line alarm to stop the machine in any separating or winding.

There is a bobbin station with two pneumatic shafts in each line for the working and reserve bobbins. Thus, when the bobbin finishes, the micro-material strain differences at the bobbin diameter change are minimized. Since the bobbin shafts are stationary, the operator can continue his routine operations without losing time with changing, readjusting or repositioning bobbin shafts like in conventional systems during loading or changing of the bobbin. Because the distance between the working bobbin and waiting bobbin is very short when the manual bobbin is added, the manual adding can be more effective and error free comparing the conventional systems. For each line, there is braking mechanism to prevent the machine turn unnecessarily when the machine is stopped.

Raw material strain between bobbin unwinding and cutting station can be adjusted very precisely by changing the speed difference between servo-controlled main conveyor and pulling rollers and the bobbin unwinding servo on the PLC screen.



Bobbin Unwind Unit Featured Specifications

- 1) Precise Raw Material Strain Control
- 2) New bobbin part saves valuable time in bobbin change
- 3) Braking mechanism in the bobbin stations

Bobbin Specifications ve Dimensions	Bobbin Width
	Max.: 300 mm *
	Min.: 160 mm
	Max. Bobbin Diameter: 1200 mm
	Bobbin Diameter: 76 mm
	Max. Bobbin weight: 70 kgs
	Product Working Weight (gr/m ²)
	Min: 30 gr/m ²
	Max: 80 gr/m ²
	Bobbin Change:
	Without Stopping Machine – Semi-Automatic
	Minimum Bobbin Number: 4
	*Optionally up to 300 mm

e. Folding Unit

There is a folding mold set for each bobbin on the unit. The nonwoven comes from the unwind unit is directed to adding molds through 90 degree turning bars. There are levers which enable to edjust easily in all turnig bars and folding molds. Various folding shapes suitable for market demand can be made with easily adjustable molds.

***** Please contact with your customer representantive for different folding shapes and foldings up to 140 mm. *****

Folding Unit and Features	<i>Folded products measures</i>
	Max. : 120 mm
	Min. : 70 mm
	

f. Stacking Unit

Stacking unit is a fully servo-controlled unit. Stacking punches, are synchronized to the cutting system, stack the clippers which come from the line moving vertically in desired numbers on the Stack Platform and then stop. If the splice is detected in the incoming clip, the incoming product is not stacked and automatically discarded.

The stacking platform, after each clip has been stacked, moves down on vertical axis as the step value entered on the screen. When the number of clips in the package is complete, it moves to the transfer point. After the transfer is complete, it moves to the start point for stacking of next package. Thus, stacking of the product can be complete.

Stackable Clip Length

Max. :220 mm

(Optional: 300 mm cut with one blade)

Min. :100 mm

Stackable Clip Width

Max. :120 mm

Min. :80 mm

Minimum Stack Number: 2 pieces

Maximum Product Height* :

120 mm (It depends on the transferred product floor space.)

* Width of product must be equal to the maximum product height.

g. Liquid Dosing System

The Liquid Dosing system consists of 316L high-quality stainless steel feed tank with a capacity of 500 liters, liquid dosing system, liquid dosing nozzles for each line, electronic flow meter, proportional valve and pump. All welded links in the system have been passivated. Thus, the possibility of rusting due to burrs in the pipe has been eliminated. The amount of liquid application is continuously controlled through the flow meter, the amount of liquid delivered according to the value specified on the PLC screen is stable by increasing or decreasing through the proportional valve and provides extremely precise liquid dosing. Sensivity is under +/- %1,5. Thanks to the nozzles placed in each line separately, homogeneity at the highest level is achieved not only in terms of quantity but also in terms of implementing on the surface area. In the whole system, tri-clamp connection componets are used.

Before or after folding, liquid dosing system can be set up according to the choice of customer.

Thanks to its powerful pump and drainage system, it provides great time for lotion exchange and sanitation.

Wetting Amount

Minimum system flow: 0,9 lt/min

Maximum system flow: 41 lt/min

Wetting Type : Nozzle After Folding

Sensitivity : $\leq 1,5\%$ (under constant speed conditions)

Power and Comsumption

Needed Electric Power 380 VAC / 50 Hz / 37 Kw

All electric components have CE documents

All electrical cables are coded according to the electricity project given to the customer.

INFORMATIONS

- **Liquid Tank Capacity** : 500 liter
- **Machine Sizes**
 - **Width** : 2570 mm
 - **Length** : 25170 mm
 - **Height** : 2410 mm
 - **Weight** : 24250 kgs
- **Line Number** : 24
- **Minimum Bobbin Number** : 4
- **Bobbin Sizes (Unwind product sizes)**

QUICKSTACK 12

- **Max. Bobbin Width** : 300 mm
- **Min. Bobbin Width** : 160 mm
- **Max. Bobbin Diameter** : 1200 mm
- **Folded Product Sizes**
 - **Max. Product Width** : 150 mm
 - **Min. Product Width** : 80 mm
 - **Max. Product Length** : 220 mm
 - **Min. Product Length** : 110 mm
- **Usable Tube Diameters**
 - **Standard Tube Diameter** : 76 mm
- **Capacity**
 - **Wipes/min** : 19200 pieces
 - **Package/min** : 150 pieces




THE ABOVE VALUES ARE MAXIMUM VALUES. THE MAXIMUM CAPACITY WILL BE COMPLETED ACCORDING TO PRODUCT TYPE IT REACH FIRST.

- **Air Pressure** : 6–8 bar
- **Motors**
 - **Bobbin-1 conveyor motor** : 2x5 KW Servo
 - **Bobbin-2 conveyor motor** : 0,5 KW AC
 - **Product exit conveyor motor** : 0,37 KW AC
 - **Product stack platform motor** : 2x0,75KW Servo
 - **Product pusher engine** : 2x0,75KW Servo
 - **Bobbin unwind motor** : 2x1,5 KW Servo
 - **Upper stack motor** : 2x1,5 KW Servo
 - **Cutting module motor** : 5 KW Servo
 - **Cabin input conveyor motor** : 3 KW Servo
 - **Centrifugal pump** : 1x5,5 KW

- Lobed Pump (Optional) : 2x1,1 KW
- PLC Specifications
 - Screen : Touch Screen
 - 50 special product recipe memory
 - PLC : OMRON
 - Digital Input : 64 pcs NPN
 - Dijital Output : 200 pcs PNP
 - Analog Input : 4 pcs + - 10V/5V/4-20mA
 - Analog Output : 4 pcs+ - 10V/5V7 4-20mA
 - Operator Panel : OMRON 12" screen
 - Motion Control : 16 axis motion control
- 16. Feeding
 - 380V AC / 50 Hz / 48 Amp /25 Kw
- 17. Noise (db)
 - 74 db

MACHINE SETTLEMENT MEASUREMENTS

QUICKSTACK 12

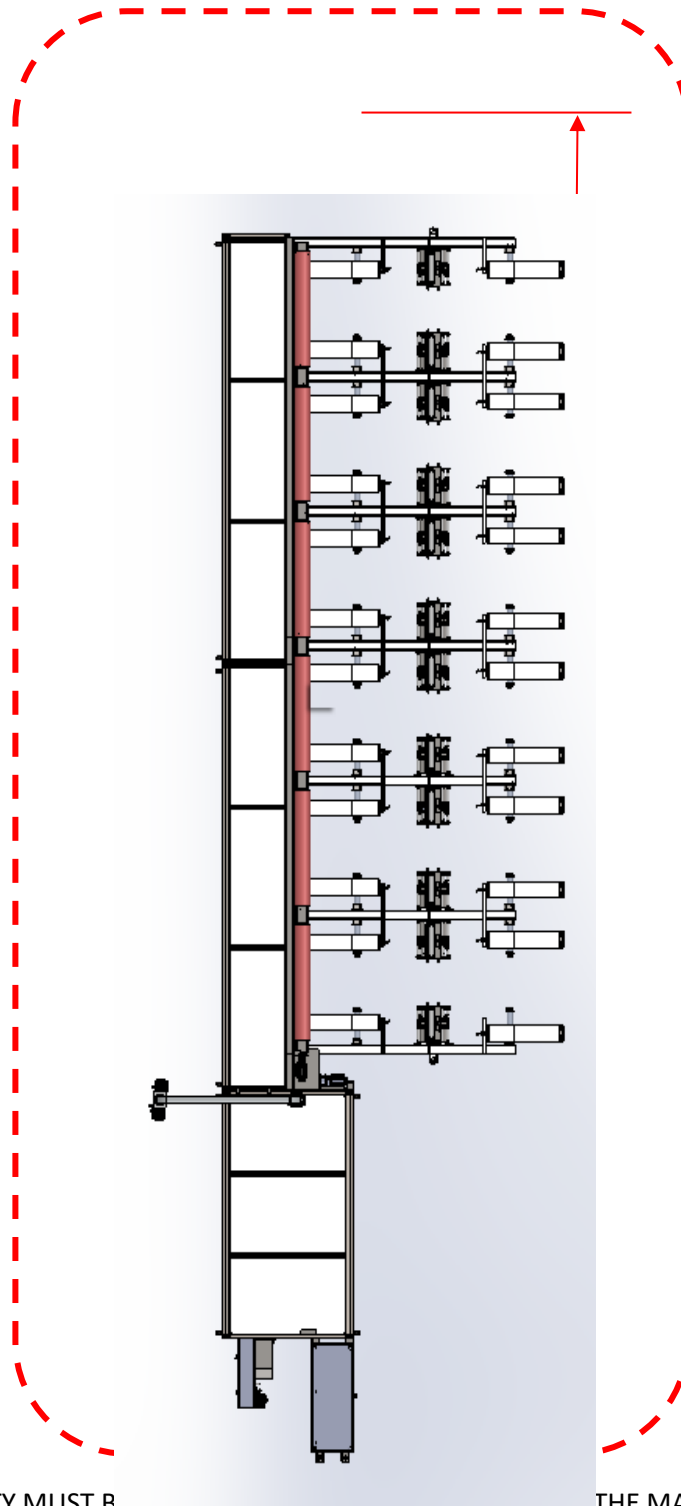

SAFETY MUST BE RESPECTED DURING ENTRY FROM THE MACHINE.




The machine does not generate more than 84 dB of noise during normal operation.

OPERATOR WORKING AREA

Machine noise ratings

1. 77 Db
2. 59 Db
3. 41 Db

QUICKSTACK 12

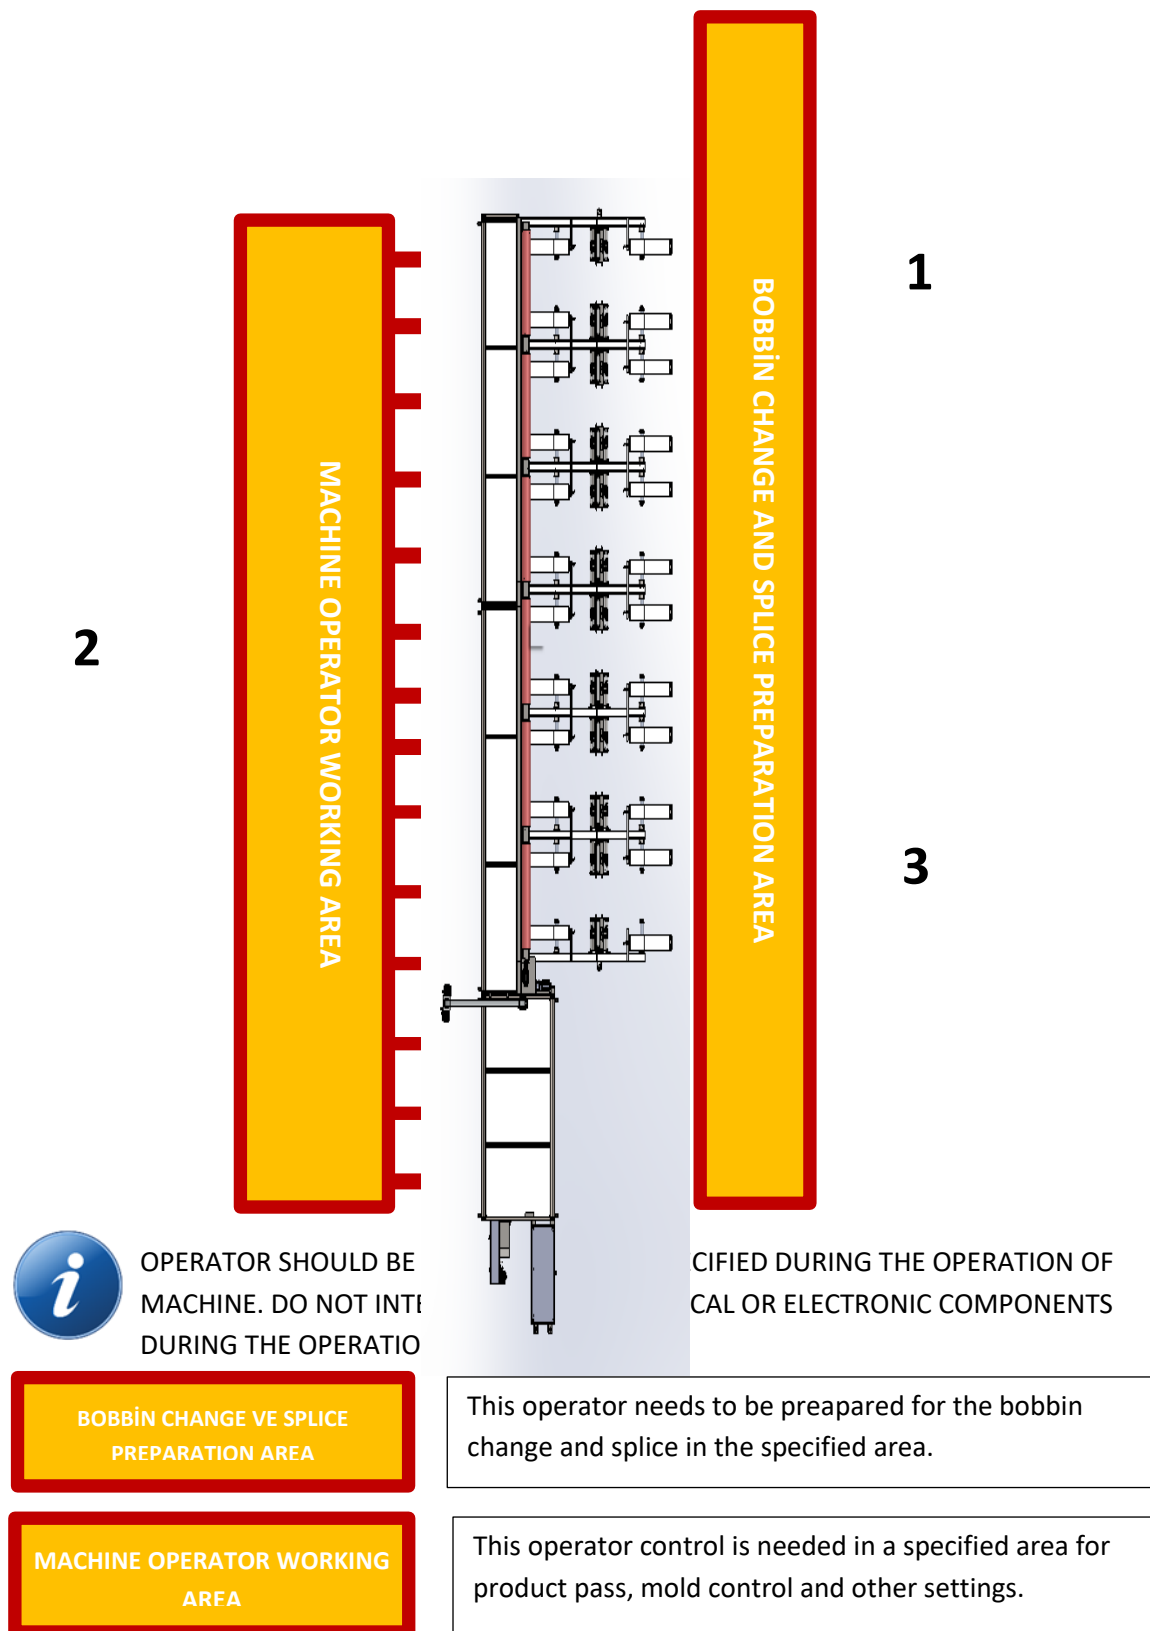

☒ Measuring instruments used in machine operation must appropriate to mm unit.


☒ There must be tools on the machine technician that you can quickly replace spare parts such as hex bolts, allen keys, flathead screwdrivers and a clean cloth that are suitable for setting.

- **Operating Schema of the Machine in Brief**


- The product packages are attached to the machine, the products folded in the folding molds are stacked on the package conveyor one after the other and wetted at this time.
- With the help of the pulling conveyor, the products are cut at the limits determined in the cutting unit.
- The cut products are stacked according to the desired number in the stacking section.
- Stacked products are transferred to the final exit conveyor with the help of the pusher platform.
- They move out of the machine to be packed on the exit bands.

EMERGENCY STOP BUTTONS ,SWITCH SECTIONS VE WARNING SECTION

QUICKSTACK 12

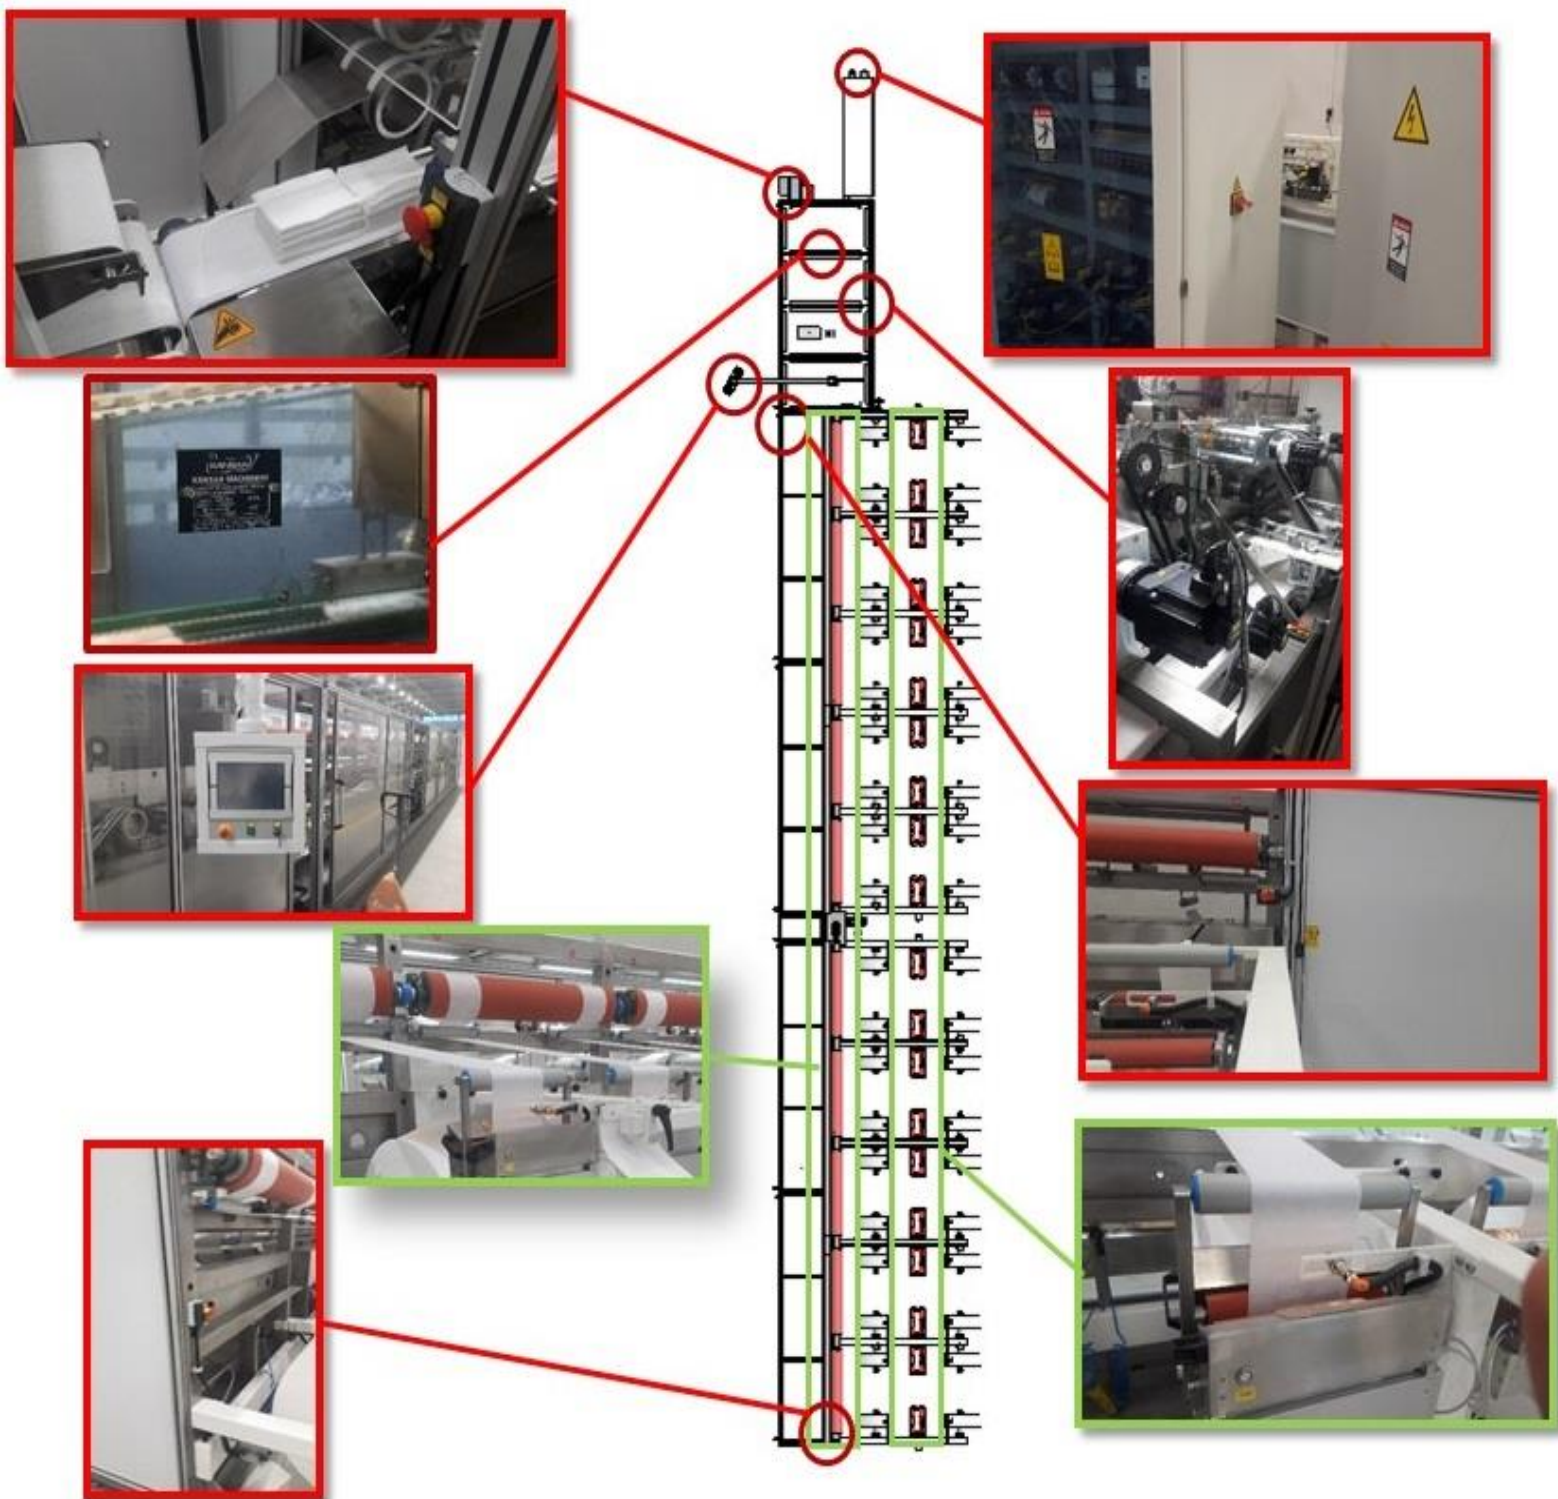

EMR VALUES

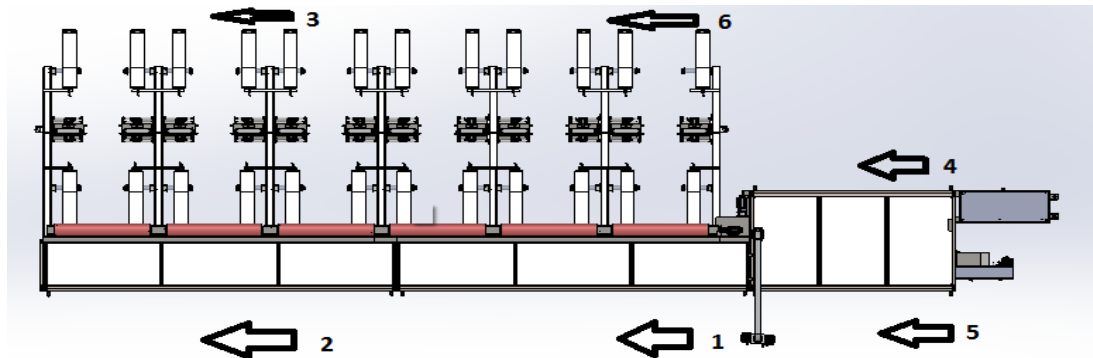


The values of Electric, Magnetic and Electromagnetic fields in regions where values are indicated in the measured plans(drawings) are lower than the levels to be ionized. Considering exposure over 4-8 hours, all permanent areas are being harmlessly qualified.

- Although it is rarely seen high values in front of panel, the area is called “safe” because it has been found that there is no exposure over 4 hours. No shielding or protection work is required.

Measured Values			
Measured Unit	Magnetic Field (nT)	Electric Field (V/m)	High Frequency Electromagnetic Field (mW/m ²)
Converting			
1. Point	27	8	0,04
2. Point	27	10	0,04
3.Point	35	10	0,03
4.Point(Panel)	350	12	0,03
5.Point	25	10	0,04
6.Point	25	10	0,03


ELECTRIC PANEL DETAILS

QUICKSTACK 12

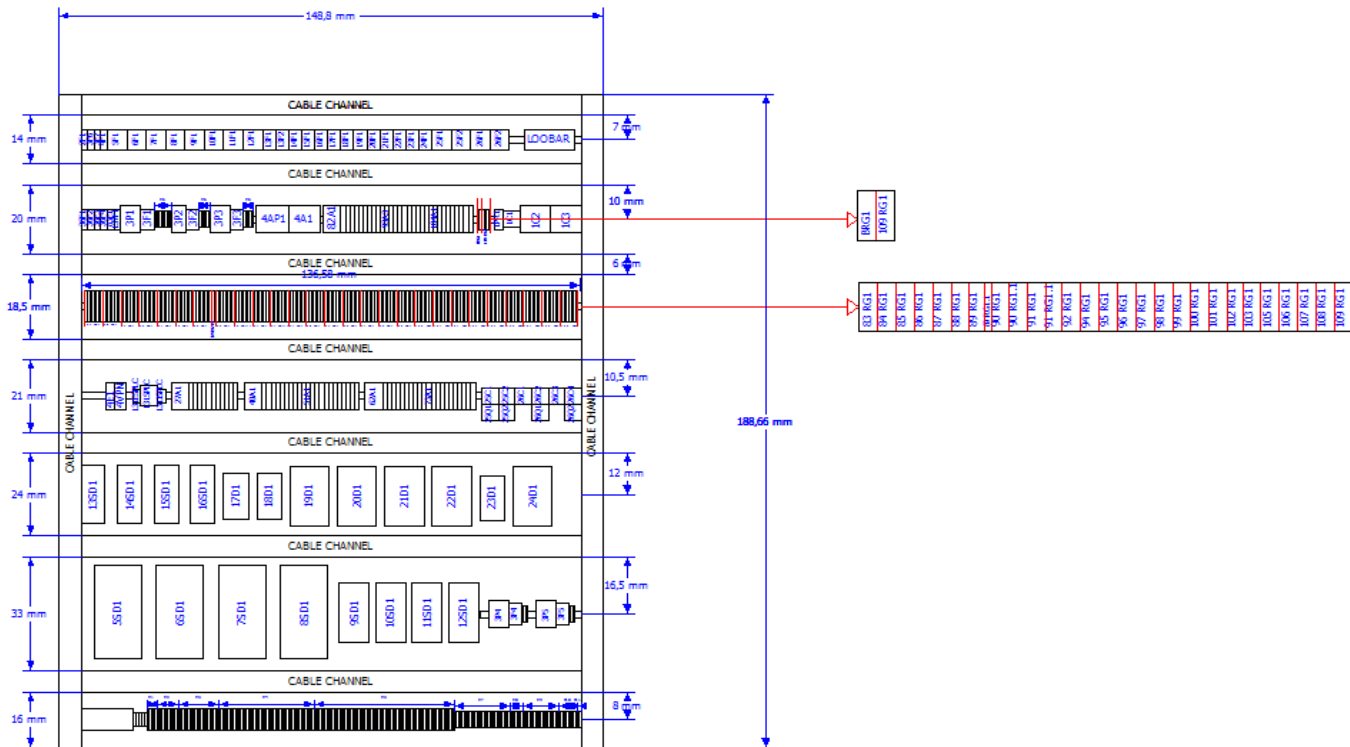

QUICKSTACK 12

PNEUMATIC PANEL DETAILS

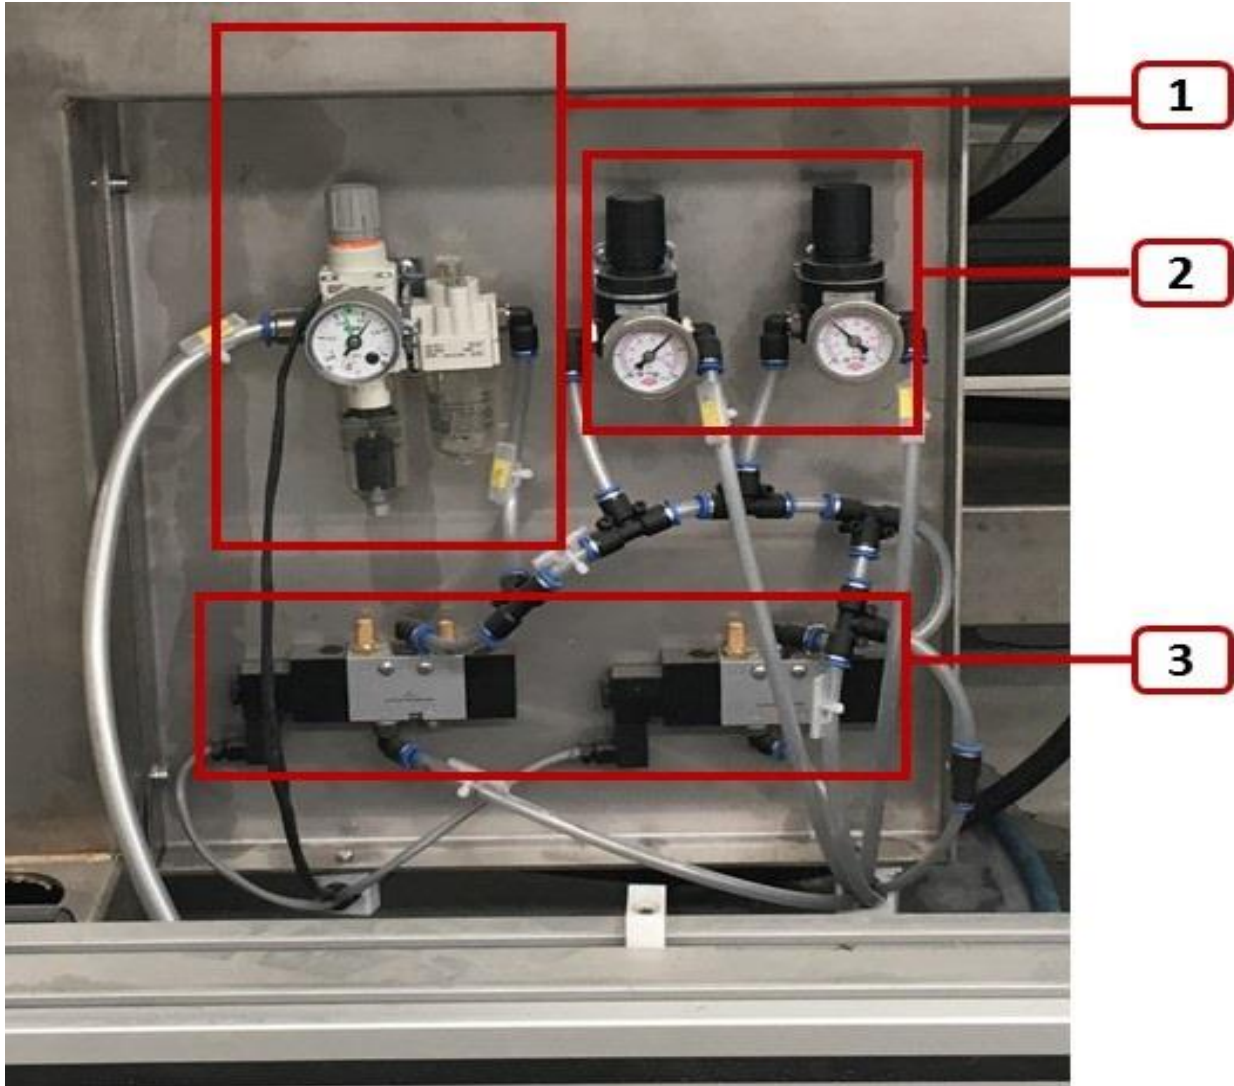

1. Main Air Input
2. Regulator
3. 5/2 – 1/8 Pneumatic Valve


MACHINE SCALE AND ELECTRIC-PNEUMATIC CONNECTIONS

The machine sachets are assembled according to relevant layout plan.

Forklift support is required during this operation. To check placed machine modules are in axis, it is necessary to use with measurement coordinates or the laser pointer.

After placement, the scales feet (**Picture – A1**) and the parison of the machine floor to machine sachet should be adjusted with the help of a water scale. At the end of this adjustment, the height of the machine should be 30 ~ 60mm above the floor.


After adjustment, the strain of the machine's triggers and conveyor belts should be checked. These controls should be in appropriate strain setting which is 1 kg pressure and 1 cm stretch.

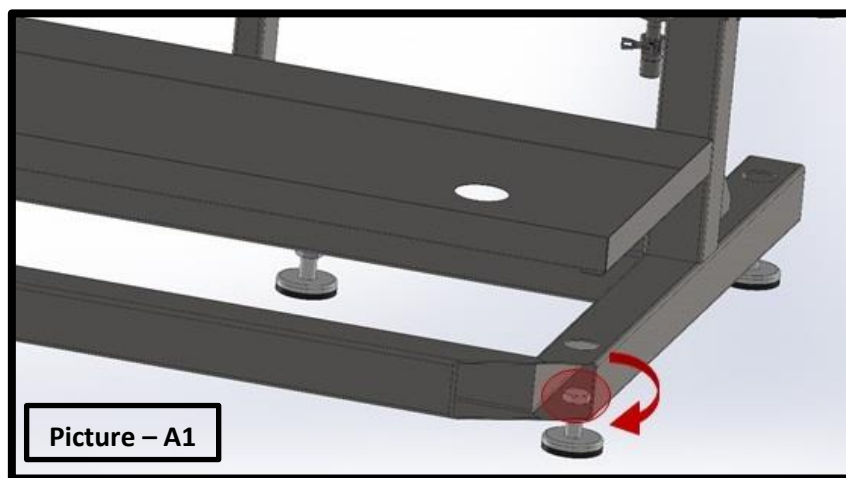

The first thing to do in electrical and pneumatic connections is to ensure that the main switch and the pneumatic valve are closed. Electric (multiple plug etc.) and pneumatic connections must be made in accordance with their codes. (Picture - E1)

The electrical connection should be tested such that the PHASE-NOTR to 220V, PHASE to PHASE-to-PHASE-380~400V, SOIL to NOTR will be 0V, such as 3 PHASE - 1 NOTR - 1 SOIL.


The pneumatic main pressure source should be 7-8 bar. The pneumatic working pressure of our machine is 6 bar.

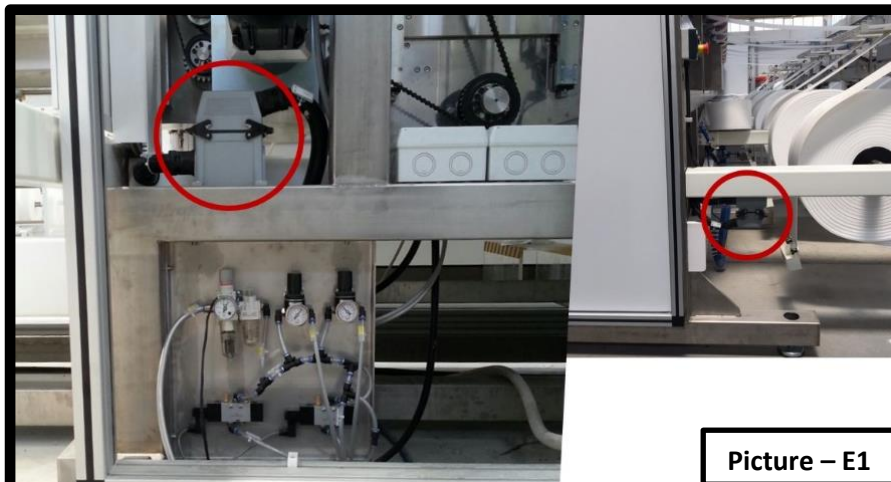


QUICKSTACK 12

MACHINE TRANSPORTATION AND INSTALLATION INSTRUCTIONS


During the transportation and installation of the machine, it is necessary to use protective equipment such as helmet, gloves and glasses for the people to carry

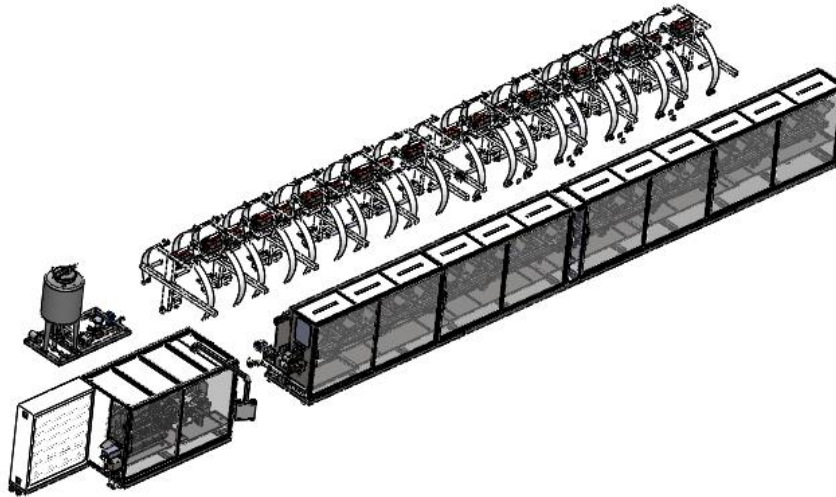


- After the machine is packed, it is necessary to be loaded in appropriate locations for transit.
 - For, machines must be transported in accordance with instructions from specified locations.
 - Machine is landed again and installed by using installation instructions.
-
- Folding group should be separated
 - Operator screen panel should be separated
 - Bobbin group should be separated
 - Installation and electrical connections must be dismantled and assembled.

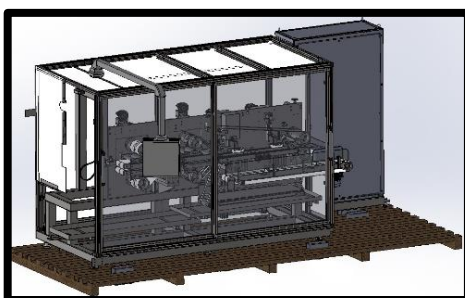

1. Cabin Group on Pallet

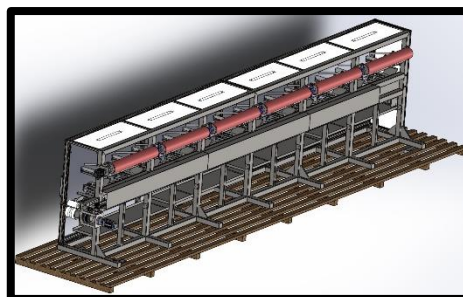


2. Folding Group on Pallet-1

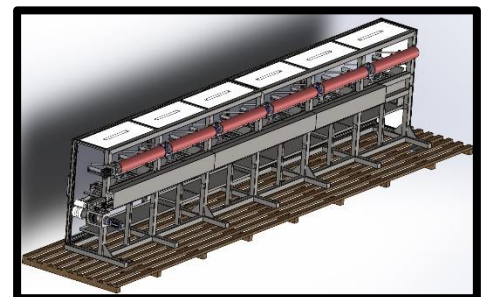


3. Folding Group on Pallet-2



4. Plumbing Group on Pallet

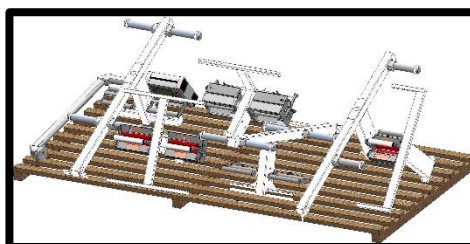


5. Bobbin Group and Operator Screen on Pallet

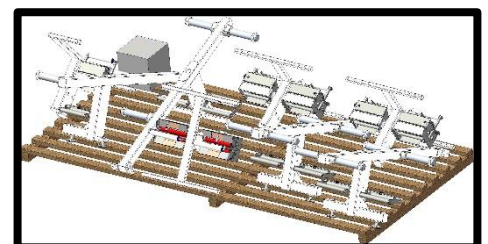

6. Bobbin Group and Spare Parts Box on Pallet



QUICKSTACK 12

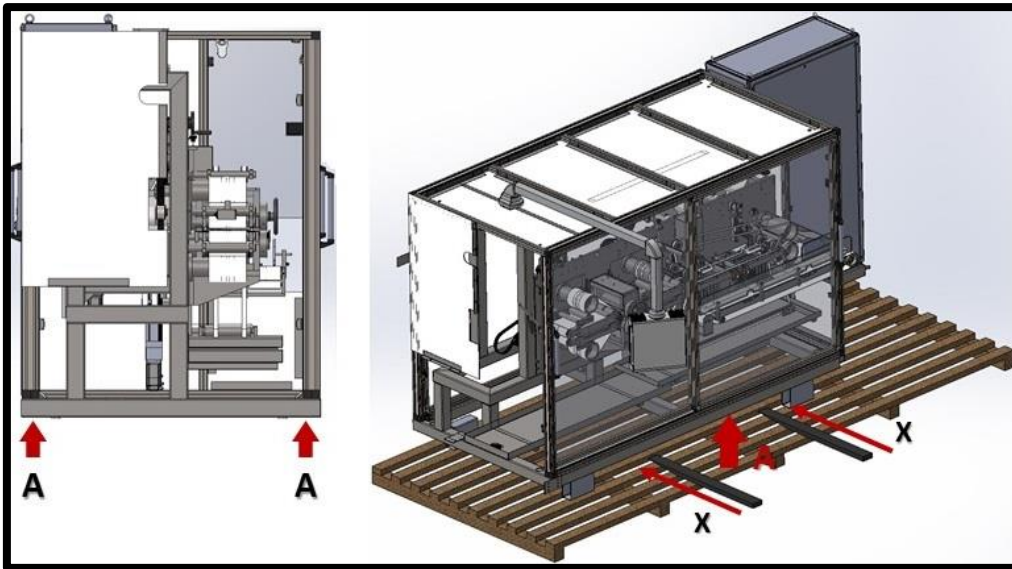

- The machine should be raised from the A points with the help of a jack.
- Raise the machine by placing the forklift blades underneath the machine in the X position.

- There must be put 4 or more (if necessary) high chocks to the gaps prepared for the machines as shown in the picture.

- Leave the machine on the pallet by setting the chocks as shown in the picture.
- Remove the forklift blades.

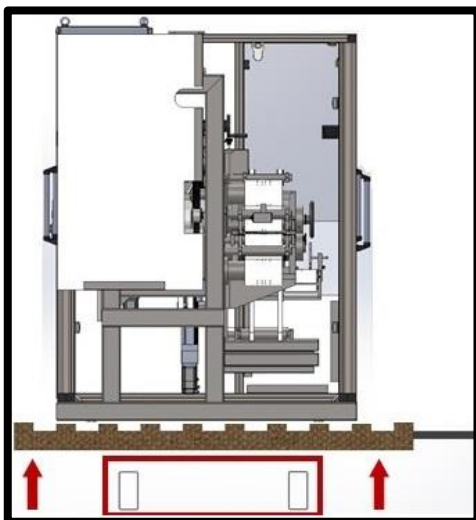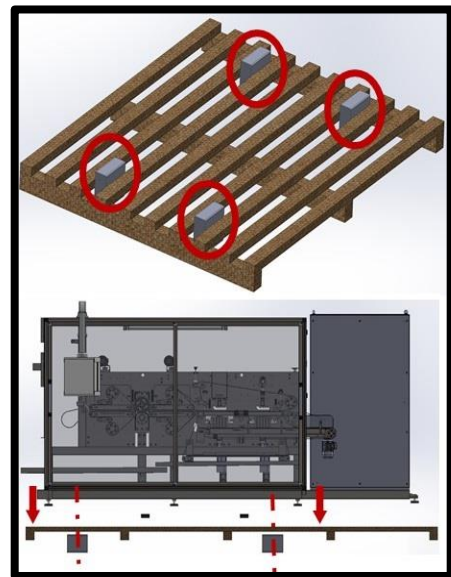

- Forklift blades are lifted from under the pallets and released from the chocks.
- The machine is secured to pallets by scale bolts.
- Landing of the machine should also be done with these instructions.

the operator resets the alarm from the moving panel screen, the buzzer is deactivated and the red - green warning lights continue to light together.




<u>ERROR AND WARNING MESSAGE</u>	<u>EXPLANATION AND SOLUTION</u>
NX-ECC203 NODE:1 ETHERCAT COMMUNICATION ALARM!	PLEASE CONTROL COMMUNICATION WIRES AND BE SURE OF THAT SOCKET AREAS ARE FULLY INSTALLED. FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL.
NX-ECC203 NODE:2 ETHERCAT COMMUNICATION ALARM!	PLEASE CONTROL COMMUNICATION WIRES AND BE SURE OF THAT SOCKET AREAS ARE FULLY INSTALLED. FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL.
FOLDING SERVO COMMUNICATION ALARM!	PLEASE CONTROL COMMUNICATION WIRES AND BE SURE OF THAT SOCKET AREAS ARE FULLY INSTALLED. FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL.
BLADES SERVO COMMUNICATION ALARM!	PLEASE CONTROL COMMUNICATION WIRES AND BE SURE OF THAT SOCKET AREAS ARE FULLY INSTALLED. FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL.
PULLER SERVO COMMUNICATION ALARM!	PLEASE CONTROL COMMUNICATION WIRES AND BE SURE OF THAT SOCKET AREAS ARE FULLY INSTALLED. FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL.
BOBBIN SERVO COMMUNICATION ALARM!	PLEASE CONTROL COMMUNICATION WIRES AND BE SURE OF THAT SOCKET AREAS ARE FULLY INSTALLED. FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL.
STACK-1 SERVO COMMUNICATION ALARM!	PLEASE CONTROL COMMUNICATION WIRES AND BE SURE OF THAT SOCKET AREAS ARE FULLY INSTALLED. FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL.
STACK-2 SERVO COMMUNICATION ALARM!	PLEASE CONTROL COMMUNICATION WIRES AND BE SURE OF THAT SOCKET AREAS ARE FULLY INSTALLED. FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL.
DRIVING-1 SERVO COMMUNICATION ALARM!	PLEASE CONTROL COMMUNICATION WIRES AND BE SURE OF THAT SOCKET AREAS ARE FULLY INSTALLED. FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL.
DRIVING-2 SERVO COMMUNICATION ALARM!	PLEASE CONTROL COMMUNICATION WIRES AND BE SURE OF THAT SOCKET AREAS ARE FULLY INSTALLED. FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL.
FOLDING SERVO ALARM!	FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL.
BLADE SERVO ALARM!	FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL.
PULLER SERVO ALARM!	FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL.
BOBBIN SERVO ALARM!	FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL.
STACK-1 SERVO ALARM!	FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL.
STACK-2 SERVO ALARM!	FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL.

PUSHER-1 SERVO ALARM!	FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL.
PUSHER-2 SERVO ALARM!	FOLLOW YOUR ERROR CODES ON THE RELATED DEVICES THROUGH ITS MANUAL.
CONT.PANEL EMERGENCY STOP BUTTON!	DEACTIVATE THE EMERGENCY STOP PAWL ON THE PANEL.
MOBILE EMERGENCY STOP BUTTON!	DEACTIVATE THE MOBILE EMERGENCY STOP PAWL.
EXIT BAND EMERGENCY STOP BUTTON!	DEACTIVATE THE EMERGENCY STOP PAWL ON THE EXIT BAND.
CABIN EMERGENCY STOP BUTTON!	DEACTIVATE THE CABIN GROUP EMERGENCY STOP PAWL.
BOBBIN GROUP EMERGENCY STOP BUTTON!	DEACTIVATE THE BOBBIN GROUP EMERGENCY STOP PAWL.
MOBILE MACHINE STOP BUTTON PRESSED!	PLEASE CHECK THE CONNECTION OR CABLE IN THE STOP BOX FOR ACCORDANCE OF PROJECT.
EXIT BAND MACHINE STOP BUTTON PRESSED!	PLEASE CHECK THE CONNECTION OR CABLE IN THE STOP BOX FOR ACCORDANCE OF PROJECT.
CABIN MACHINE STOP BUTTON PRESSED!	PLEASE CHECK THE CONNECTION OR CABLE IN THE STOP BOX FOR ACCORDANCE OF PROJECT.
BOBBIN GROUP MACHINE STOP BUTTON PRESSED!	PLEASE CHECK THE CONNECTION OR CABLE IN THE STOP BOX FOR ACCORDANCE OF PROJECT.
BAND-1 INVERTER ALARM!	PLEASE CHECK THE ERROR CODE ON INVERTER THROUGH ITS MANUAL.
WETTING-1 PUMP INVERTER ALARM!	PLEASE CHECK THE ERROR CODE ON INVERTER THROUGH ITS MANUAL.
FEEDING PUMP THERMAL WASTE!	PLEASE CHECK CABLE CONNECTIONS OF ENGINE AND PACKING GLAND AND BEARING.
AIR PRESSURE LOW!	PLEASE CHECK THE REGULATOR IN THE MAIN AIR INPUT.
STACK-1 LOWER LIMIT SWITCH FELT!	PLEASE CHECK LOW LIMIT PLATFORM.
STACK-1 UPPER LIMIT SWITCH FELT!	PLEASE CHECK LOW LIMIT PLATFORM.
STACK-2 LOWER LIMIT SWITCH FELT!	PLEASE CHECK LOW LIMIT PLATFORM.
STACK-2 UPPER LIMIT SWITCH FELT!	PLEASE CHECK LOW LIMIT PLATFORM.
BOBBIN-1...24 BROKEN!	THE ALARM WHICH INDICATED THE BOBBIN HAS FINISHED.
BATTERY OF PLC CPU DOWN!	PLEASE CHANGE THE BATTERY IN THE SW SETTING SECTION WHICH IS AT THE LEFT BELOW OF NJ501-1400 CPU MODULE.
PACKAGING MACHINE STOPPED!	IF THIS SECTION IS ACTIVE ON THE CONTROL PAGE, IT SHOWS THE PACKAGING MACHINE STOPPED, PLEASE ACTIVATE THE PACKAGING MACHINE OR DEACTIVATE THIS SECTION.
DOOR OPENED!	IT SHOWS THAT THERE MAY BE SOME OPEN DOORS.
LIQUID TANK LEVEL LOW!	INDICATES THAT THE LIQUID LEVEL IS LOWER THAN AWAITED. PLEASE CHECK YOUR LIQUID LEVEL AND LIMITS.
LIQUID TANK CANNOT BE FED! FEEDING PUMP STOPPED!	TANK DIMENSION NOT AVAILABLE AT THE SUPERVISOR POSITION. PLEASE CONTROL IF THERE IS ANY PNEUMATIC, MANUAL VALVE AND FILTER OBSTRUCTION OR NOT.
PACKING SPEED LIMIT EXCEEDED !	PLEASE CONTROL MACHINE CAPACITY, PRODUCT LENGTH AND STACKING NUMBERS. THE WRONG VALUES WHICH WERE WRITTEN HERE MAY CAUSE REVOLUTION OVERRUN OF THE MACHINE
LINE SPEED LIMIT EXCEEDED!	PLEASE CONTROL MACHINE CAPACITY, PRODUCT LENGTH AND STACKING NUMBERS. THE WRONG VALUES WHICH WERE WRITTEN HERE MAY CAUSE REVOLUTION OVERRUN OF THE MACHINE
FOLDING SERVO NORMAL TRANSFER EXCEEDED!	PLEASE CONTROL MACHINE CAPACITY, PRODUCT LENGTH AND STACKING NUMBERS. THE WRONG VALUES WHICH WERE WRITTEN HERE MAY CAUSE REVOLUTION OVERRUN OF THE MACHINE

BLADE SERVO NOMINAL REVOLUTION OVERRUN!	PLEASE CONTROL MACHINE CAPACITY, PRODUCT LENGTH AND STACKING NUMBERS. THE WRONG VALUES WHICH WERE WRITTEN HERE MAY CAUSE REVOLUTION OVERRUN OF THE MACHINE
PULLER SERVO NOMINAL REVOLUTION OVERRUN!	PLEASE CONTROL MACHINE CAPACITY, PRODUCT LENGTH AND STACKING NUMBERS. THE WRONG VALUES WHICH WERE WRITTEN HERE MAY CAUSE REVOLUTION OVERRUN OF THE MACHINE
BOBBIN SERVO NOMINAL REVOLUTION OVERRUN!	PLEASE CONTROL MACHINE CAPACITY, PRODUCT LENGTH AND STACKING NUMBERS. THE WRONG VALUES WHICH WERE WRITTEN HERE MAY CAUSE REVOLUTION OVERRUN OF THE MACHINE
STACK-1 SERVO NOMINAL REVOLUTION OVERRUN!	PLEASE CHECK FORWARD AND BACKWARD STACK VALUES.
STACK-2 SERVO NOMINAL REVOLUTION OVERRUN!	PLEASE CHECK FORWARD AND BACKWARD STACK VALUES.
PUSHER-1 SERVO NOMINAL REVOLUTION OVERRUN!	PLEASE CHECK LOWER AND UPPER STACK VALUES
PUSHER-2 SERVO NOMINAL REVOLUTION OVERRUN!	PLEASE CHECK LOWER AND UPPER STACK VALUES
STACK FOLDING ADJUSTMENT OR STEP ADJUSTMENT EXCESSIVE!	INDICATES THAT ON THE STACKING PLATFORM IS ENTERED MORE VALUES THAT THE SPECIFIED OPERATING RANGE. CHECK THE STACKING FOLD ADJUSTMENT AND STEP SETTINGS
STACK UPPER DISTANCE SMALLER THAN STACK LOWER DISTANCE!	PLEASE CHECK THE VALUES THAT DETERMINE OPERATING RANGE OF THE STACK PLATFORM
STACK-1 CANNOT REACH!	PLEASE CHECK SPEED OF STACK PLATFORM
STACK-2 CANNOT REACH!	PLEASE CHECK SPEED OF STACK PLATFORM
BOBBIN-1...24 ADDED!	THE OPERATOR ALERT THAT SHOWS SPLICE OPERATION IS DONE
BOBBIN-1A...24A FINISHED!	THE ALERT THAT SHOWS THERE IS NO PRODUCT IN FRONT OF THE RELEVANT BOBBIN SENSOR
BOBBIN-1B...24B FINISHED!	THE ALERT THAT SHOWS THERE IS NO PRODUCT IN FRONT OF THE RELEVANT BOBBIN SENSOR
BOBBIN-1A...24A BOBBIN IS NOT READY FOR ADDING!	THE ALERT THAT SHOWS BOBBIN HAS FINISHED AND THERE IS NO PRODUCT IN FRONT OF THE TWO BELOW SENSORS WHICH MOVE SPLICE
BOBBIN-1B...24B BOBBIN IS NOT READY FOR ADDING!	THE ALERT THAT SHOWS BOBBIN HAS FINISHED AND THERE IS NO PRODUCT IN FRONT OF THE TWO BELOW SENSORS WHICH MOVE SPLICE
WETTING-2 LOWER LIMIT EXCEEDED!	THE ALERT THAT SHOWS THE LIMIT INDICATED ON THE WETTING PAGE EXCEEDED, PLEASE CHECK THE OTHER VALUES ON WETTING PAGE
WIPE STUCK IN UPPER OF PULLER ROLLER!	PLEASE CHECK RANGES OF PULLER ROLLERS AND SWITCH POSITIONS
STACK ARM STUCK!	PLEASE CHECK THE PRODUCT TIGHTNESS BETWEEN THE FOLDING ROLLERS AND THE STACKING BARS, CHECK THE SENSOR POSITION IN THE CABINET THAT CONTROLS THIS TIGHTNESS
BAND-2 INVERTER ALARM!	PLEASE CHECK THE ERROR CODE ON THE INVERTER IN ITS BOOKLET
WETTING-1 UPPER LIMIT EXCEEDED!	THE ALERT THAT SHOWS LIMIT EXCEEDED ON THE WETTING PAGE, PLEASE CHECK THE VALUES ON THE WETTING PAGE
WETTING-1 LOWER LIMIT EXCEEDED!	THE ALERT THAT SHOWS LIMIT EXCEEDED ON THE WETTING PAGE, PLEASE CHECK THE VALUES ON THE WETTING PAGE
WETTING-2 UPPER LIMIT EXCEEDED!	THE ALERT THAT SHOWS LIMIT EXCEEDED ON THE WETTING PAGE, PLEASE CHECK THE VALUES ON THE WETTING PAGE
WIPE STUCK AT STACK PLATFORM!	PLEASE CHECK THE SENSOR ON THE STACK PLATFORM AND CLEAN IF ANY PRODUCT IS STUCK




PRODUCT TRANSITION AND QUICK SETTING TEMPLATE

1. The bobbin which will be used at minimum 140mm to maximum 240mm width will be fitted to pneumatic shafts centered.
2. Pneumatic shafts are inflated with that air pistol. When attaching the bobbin, the splice system should be inserted in the proper direction considering that the bobbin should be opened at the bottom. (SCHEMA)
3. Please put the chocks to the braking belts to prevent loosening of added bobbin after machine stops.
4. Please pass the installed bobbins through the sensor idles that will activate the splice unit.
5. After passing the bobbin through the sensor idles, pass it through the splice unit to the puller rubber roller.

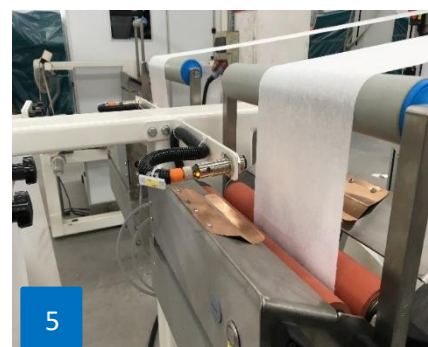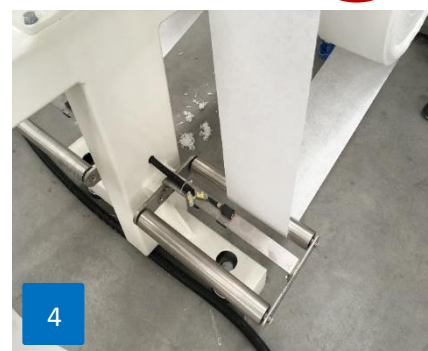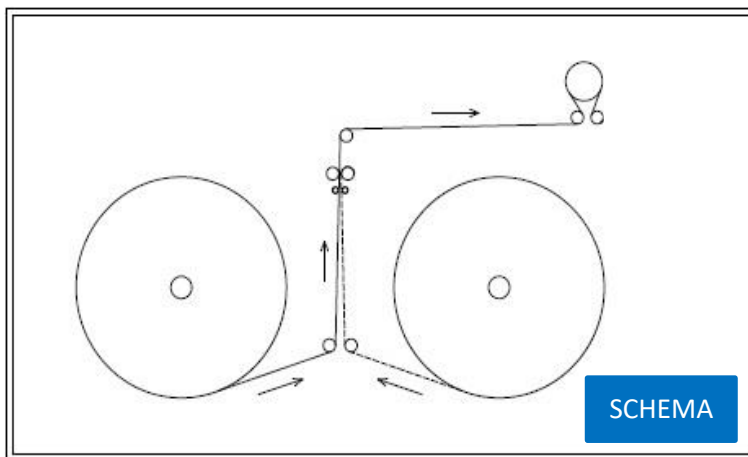




PRODUCT TRANSITION AND QUICK SETTING TEMPLATE

6. After all these operations, by entering the control page from the main menu, activating the servo and puller servos of the bobbins, only the selected modules are moved and the product flow is ensured.
7. The turning bar is the adjusting mechanism for changing the position of the spindle paper on the folding mold.
The edge control sensor is set after the paper is centered on the mold. (A)
8. **From the edge control screen, the device is switched to manual mode, the edge control sensor is brought to the edge of the centered product, and the sensor position is set so that the indicator lights on the edge control screen are at the center of the screen. The device switches to automatic mode. (B)**
9. With the help of numerators shown in the picture, the folded product is carried out to the desired measurement.

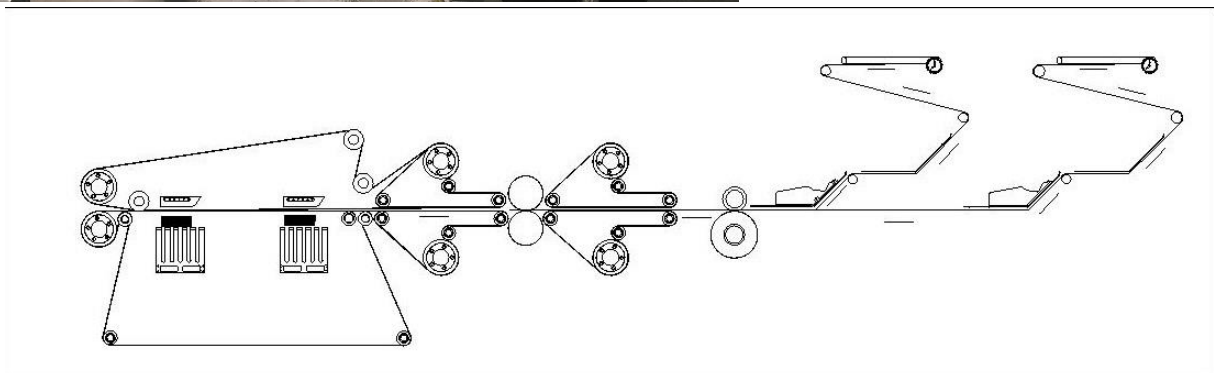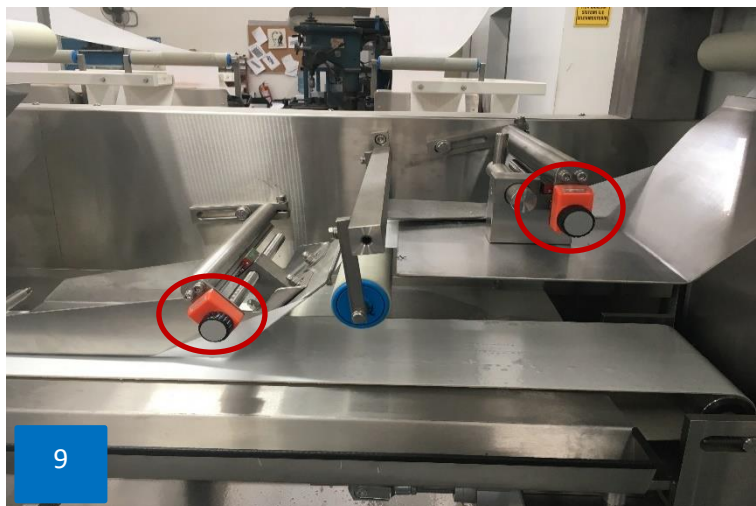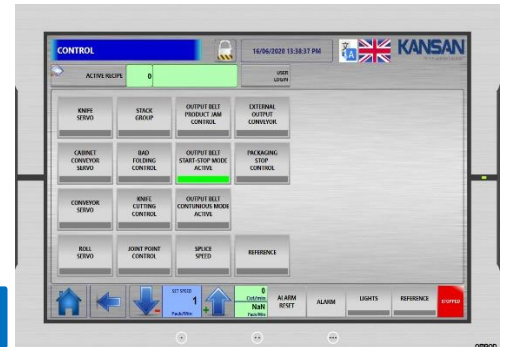

PRODUCT TRANSITION AND QUICK SETTING TEMPLATE



10. The pressing rollers on the product help to pull the product and adjust the product stress. We must adjust their height manually, when adjusting this, we have to be careful not to swift the product.
11. Metal bands stuck to the splice region should not be smaller than 40 * 80mm for the healthy operation of the metal detector. Because the working range of the metal sensor is limited, the sensor must be operated at a distance of 5mm from the product.
12. We must use manual valves to equalize the liquid nozzles which come in different amounts. Nozzles holes should be equal to product width.
13. The exposed nozzle holes should be blocked, the product should be adjusted to wet all the width. Nozzle holes should be on the product and facing the flow direction.
14. If the distances between conveyors become too much, this causes to lose pulling speciality of conveyors.
15. If the distances between conveyors become too closed, the folds are spread and the solution is squeezed and wasted. If the distances between conveyors become open, the conveyors lose their pulling speciality.

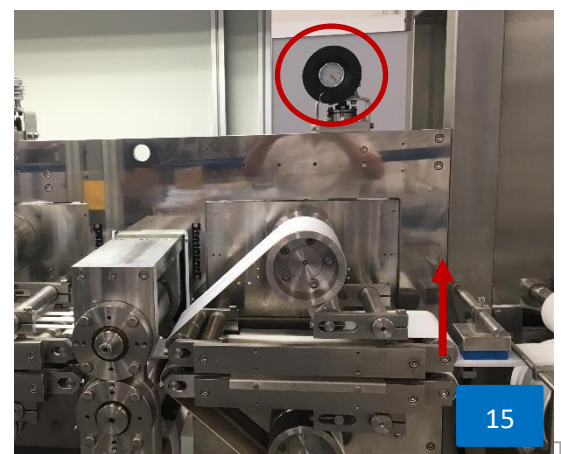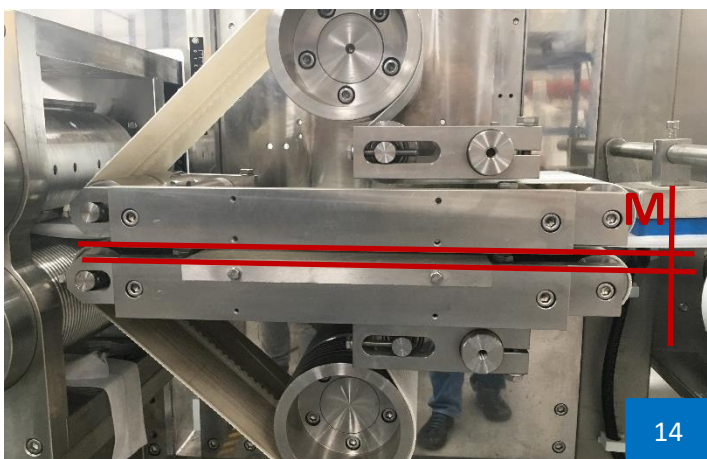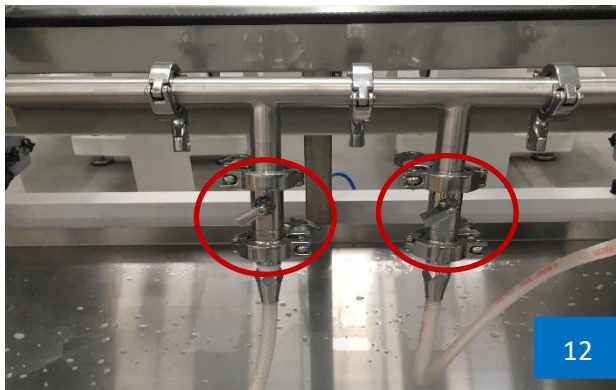

PRODUCT TRANSITION AND QUICK SETTING TEMPLATE



- 16.** In the cutting settings, first loosen the blade fixing bolts lightly. Tighten the blade set screws until the blade is in the proper position. Secure the blade by squeezing the blade fixing bolts as the blade comes to the proper position. When the knife is first installed on the roller, the above operations must be carried out according to the order of instruction before the machine is started, so that the gap between the knife and the anvil is $0 \sim 0.1\text{mm}$. This setting should be done while the knife edge is at the upper tangent point of the lower anvil. After the gap adjustment is made, the machine should be run at jog speed with paper and the blade must be brought to the proper position by repeating the above sequence of operations until the optimum cutting is achieved. When this is done, the blade set screws should be tightened in equal amounts. **The setting of the cutting operation must be done at 10-20% speed (jog speed).**

- 17.** The strain of the conveyor belts must be equal to each other. This carrier conveyor after the knife must be adjusted so that the height adjustment will force the product height a little bit to carry the cut products to the stack area as stabilized.
- 18.** The conveyor belts should hold the product in equal distances from the edges during the transfer of the product. The product should not run out of the belts and should be in a minimum 10mm belt.

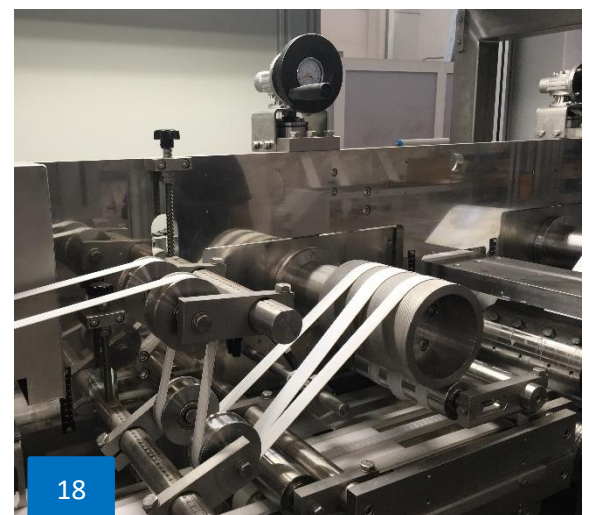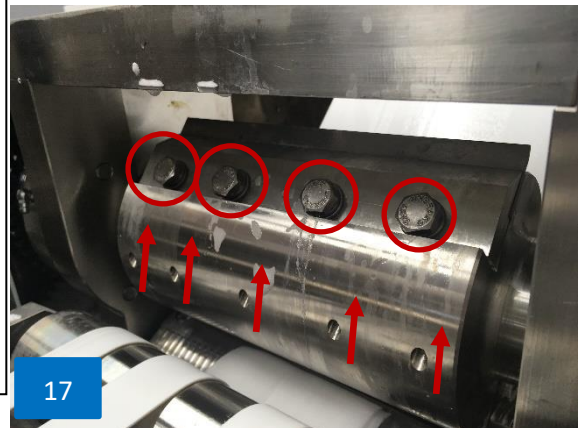

PRODUCT TRANSITION AND QUICK SETTING TEMPLATE

19. The stacking pallets should be at the center of the product carrier conveyor.
20. Centering adjustment of the pallets should be done by using the slots in the places as shown in the picture.


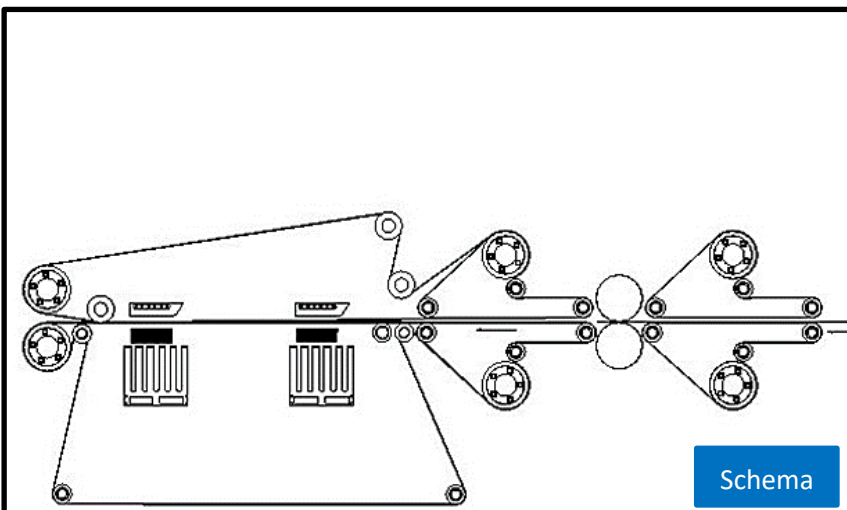
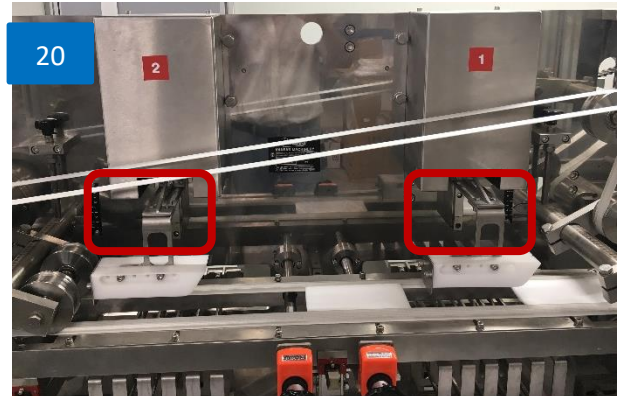


CUTTING ROLLER AND BLADE ADJUSTMENT

- Loosen the fixing bolts.
- Squeeze blade set screws and move forward the blade to proper position.
- When the blade is in the proper position, secure the blade by tightening the securing bolts. **When the knife is first attached to the roller, it must be adjusted to leave 0.1 mm space between the knife and the lower anvil following the above steps before the machine is started. This setting should be done while the blade cutting edge is at the upper tangent point of the lower anvil.**



After this adjustment is complete, the machine must be run at jog speed with paper and the blade must be advanced by applying the above steps until the optimum cut is achieved. When doing this, the blade set screws should be equally tightened.

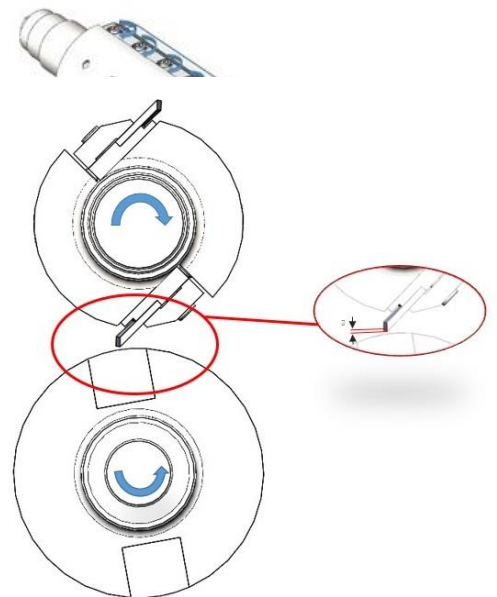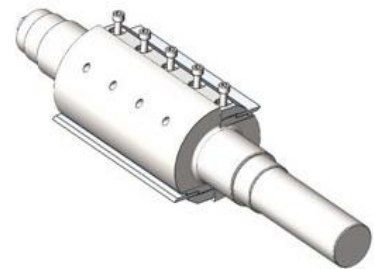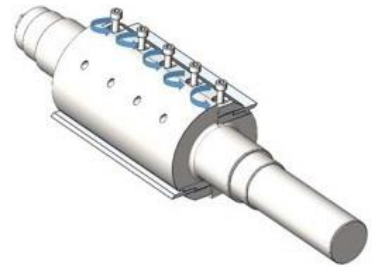

BLADE CHANGE FOLLOW-UP


- When changing the blade, record the date and time of the blade change on the BLADE CHANGE page on the screen
- Thanks to these records, the amount cut follow-up will be more accurate.




- During the exchange of blades, you can record by pressing one time the sequential date lines on the screen.



Wipe Length: The entered value determines the length of product. The product length varies on tolerance of ± 5 mm, depending on the strain values.

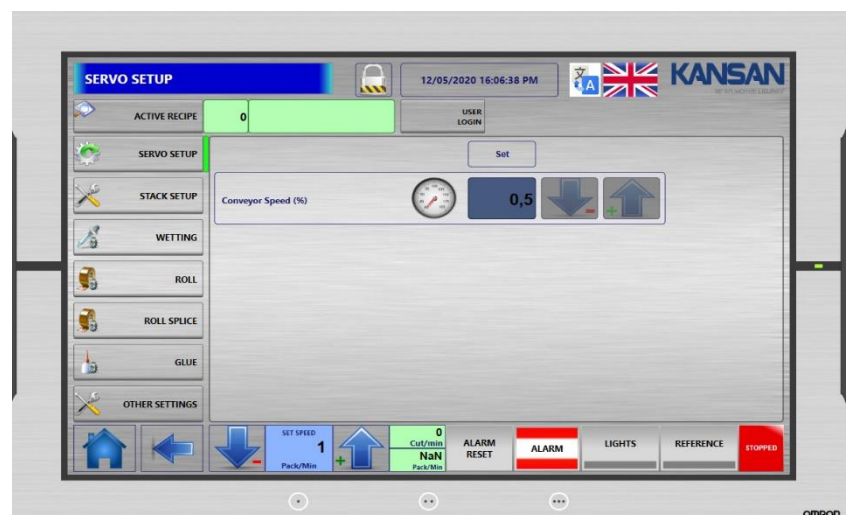

CARRIER CONVEYOR SETTINGS


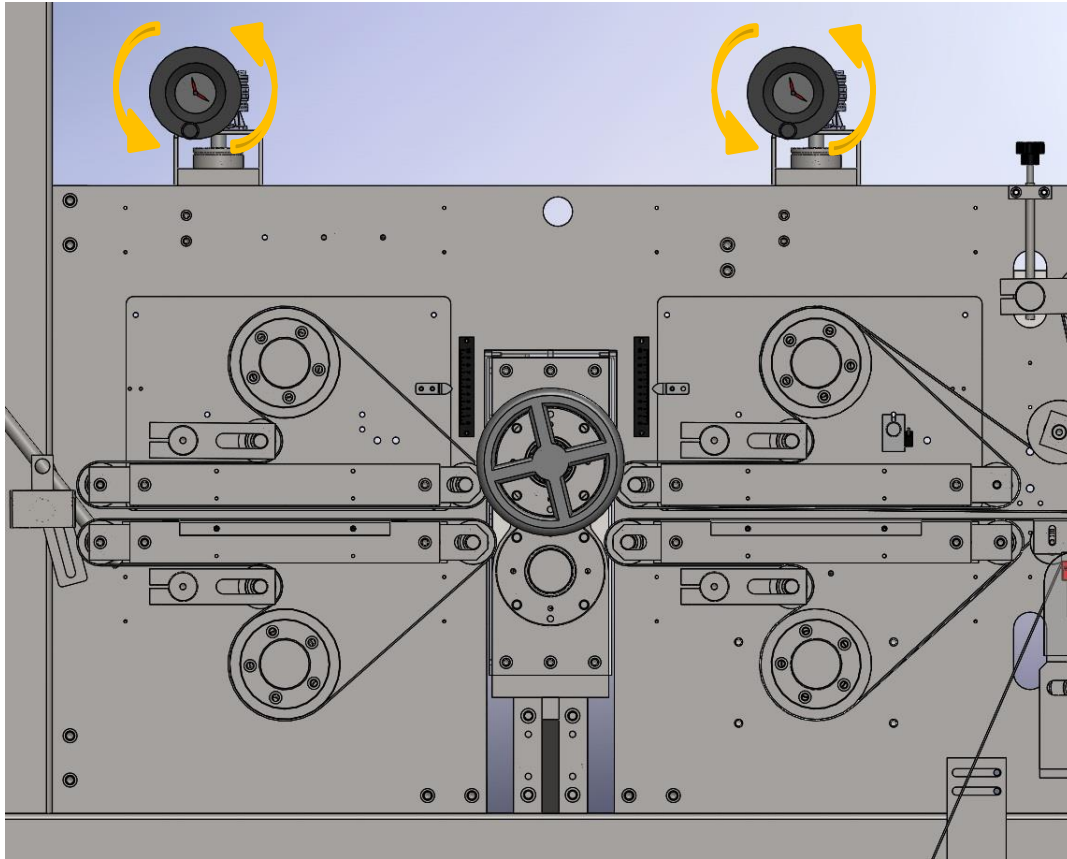


- The space between the carrier conveyors should be set less than 1 to 3 mm from the product thickness.
- If the distance between conveyors become too closed, the folds are spread and the solution is squeezed and waste.
- If the distance between conveyors become too opened, the conveyors lose their speciality of pulling.

CARRIER CONVEYOR SETTINGS

- Two pallets are sent with the machine.


- Pallets are designed for narrow - short (A) and wide - long (B) product types.

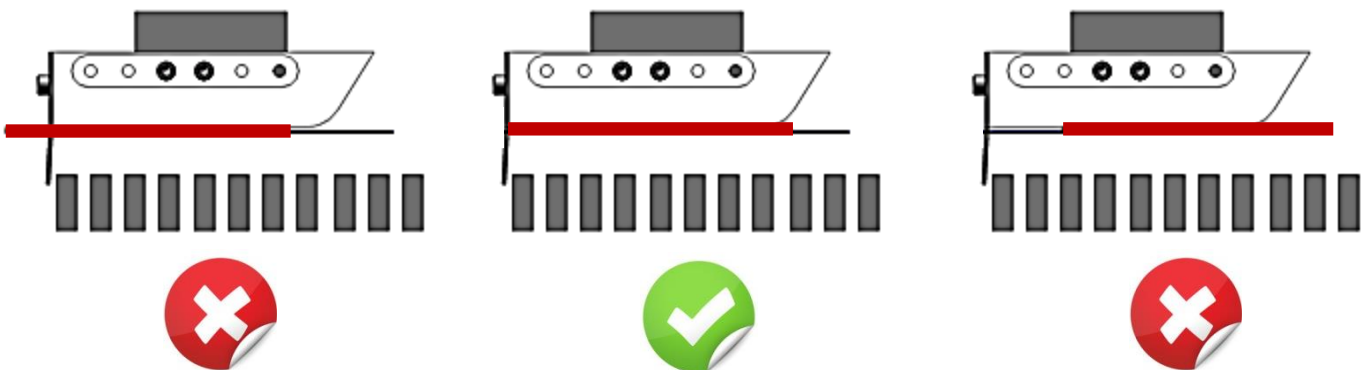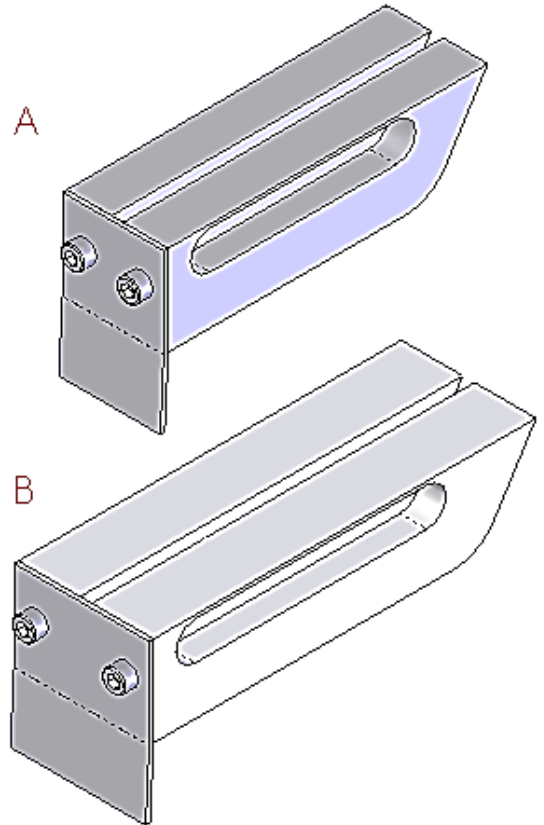

Punch - 1, 2. Offset: Stacking of the product at its fully retaining position is set by entering a value in the Punch 1 and Punch 2 Offset.

Punch-1, followed by Punch-2. Therefore, Punch-2 must be set first. The range of values to be entered in the setting section is between 0 ° and 359 °.


STACK PLATFORM SETTINGS

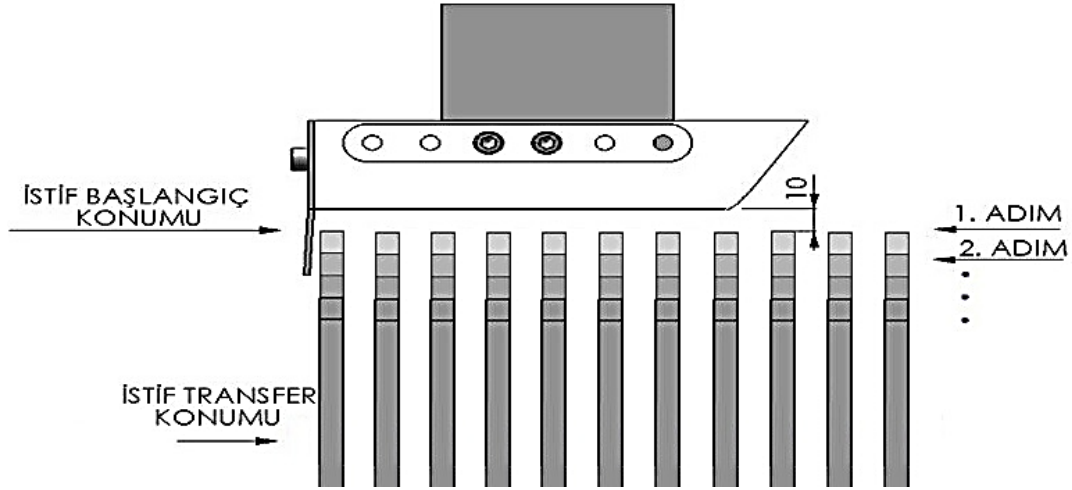

Reference distance: It is the distance between the stack starting position and the stacking platform lower limit sensor. It should be set to 10 mm between the stacking platform and punch.

Lower Distance: It is the measure of lower platform between stack starting position and stack transfer band position. This value is set to 10 mm between the lower platform and the product exit position.

Step Adjustment: The distance value of the lower platform going down in each step is entered. Value should be determined according to product thickness.

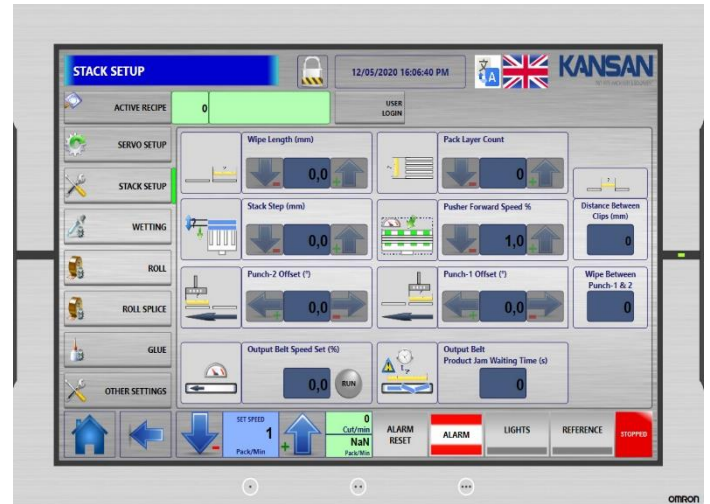


Waiting Time at Below: Before the bottom platform moves to the upper dead point, the product must be separated from the platform level. The time required for product transfer (t) should be entered in this section. This time varies depending on the weight of the product. The normal value is 0.3 s.

Punch-2 Space Adjustment: It is determined by the number of products between the two punches. Service value is 2. This value can be changed when the product size is reduced.



After all these values have been entered, the MACHINE REFERENCE button should be pressed and the new values must be introduced to the machine.

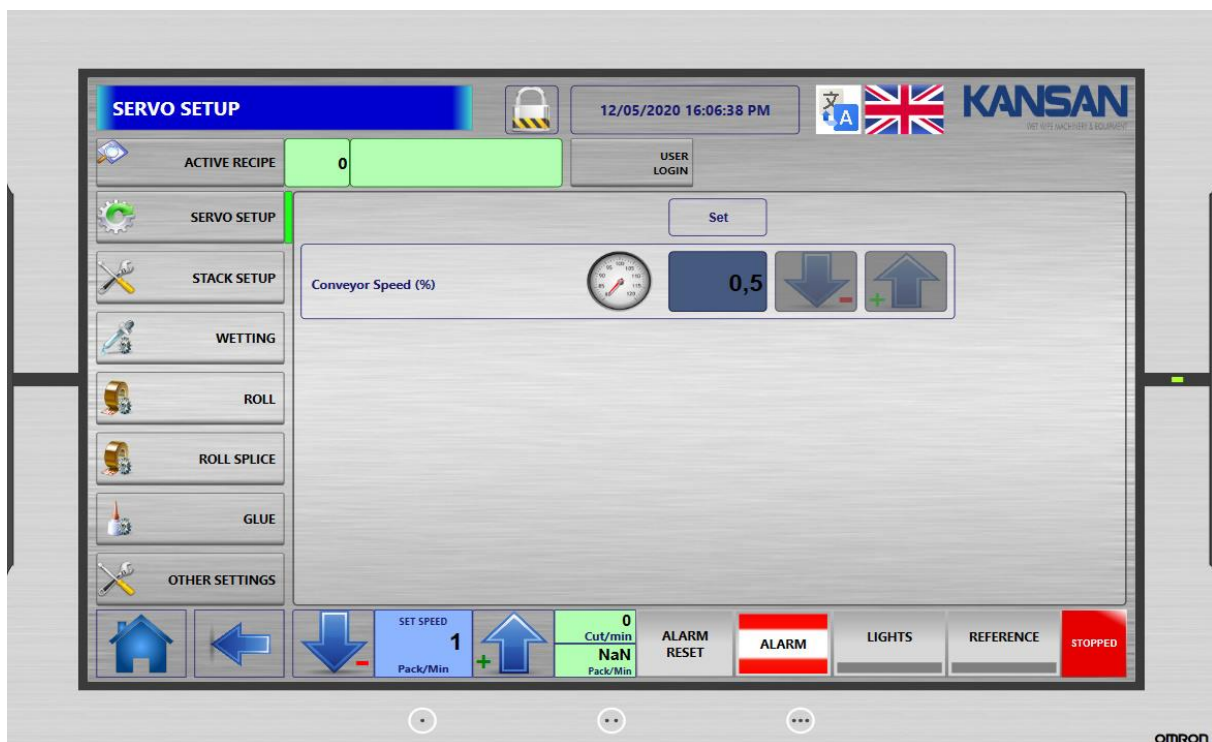

RECIPE SAMPLE AND PREPARATION


PRODUCT SPECIFICATIONS:

NUMBER OF WIPES: 120 wipes
 PRODUCT LENGTH: 175 mm
 NUMBER OF BOBBINS: 20 pcs
 PRODUCT WEIGHT: 450 gr
 NUMBER OF PACKAGES TO BE PRODUCED: 3000 packs

1. OPERATION (MAKING RECIPE)

First we enter our recipe number and recipe name.


Recipe No: 8
 Recipe Name: SAMPLE

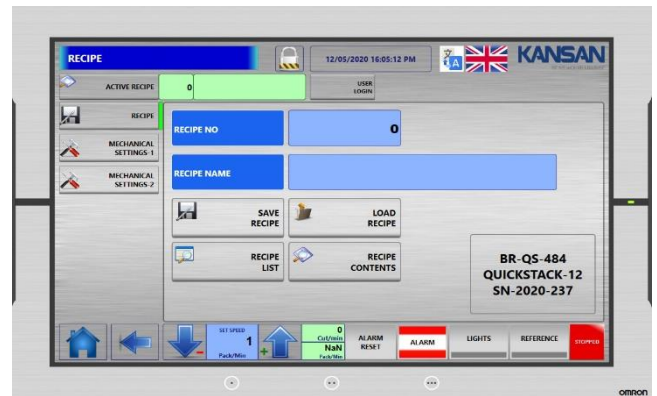


2. OPERATION (PACKAGE INFORMATIONS)

PACKAGE FOLD NUMBER
 ADJUSTMENT: 6

6 x 20 = 120
20 (NUMBER OF BOBBIN)
120 (NUMBER OF WIPES)

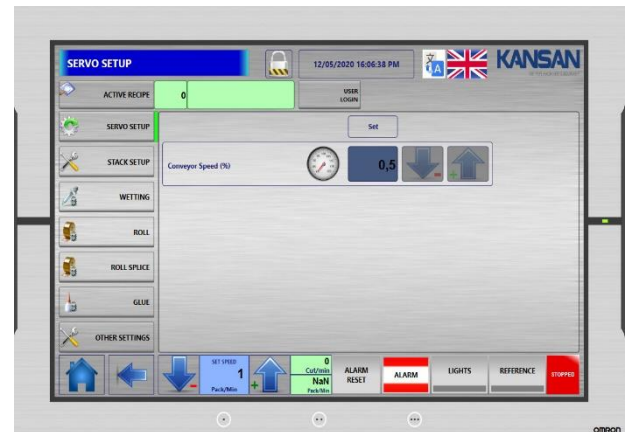

TARGETED PRODUCTION
 ADJUSTMENT: 3000

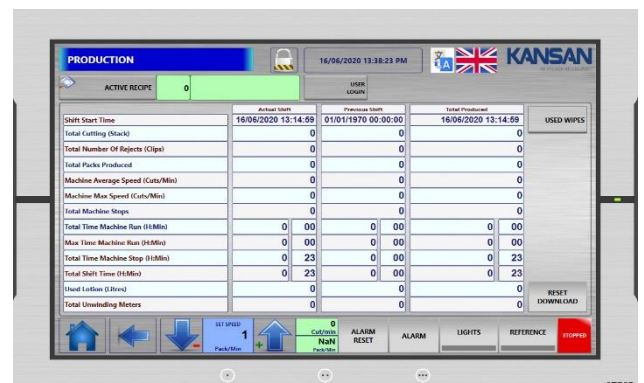


3. OPERATION (ENTERING WETTING VALUES)

We input the amount of wetting in cc / mt.

WETTING ADJUSTMENT
cc/mt: 230

The amount of wetting may vary depending on the product used.
Must be verified by scale.

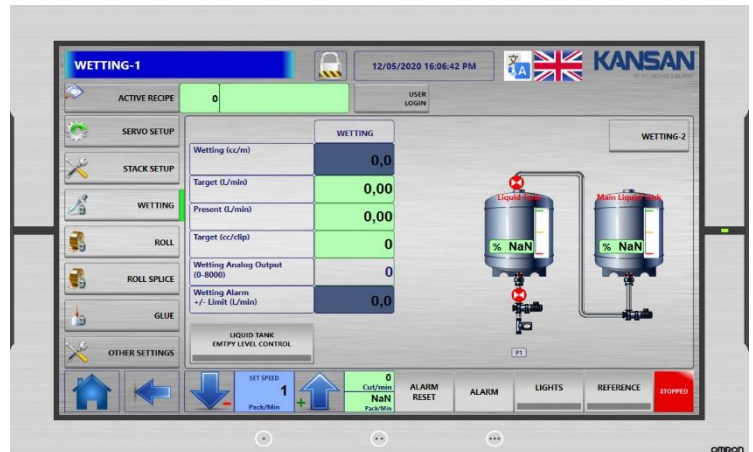

4. OPERATION (ENTERING LOWER PLATFORM VALUES)

STEP ADJUSTMENT:

7mm

LOWER DISTANCE:

15 mm

WAITING TIME AT BELOW: 0 sn

PUNCH-2 SPACE ADJUSTMENT:

1 or 2



6. OPERATION (ENTERING SERVO ADJUSTMENT)

LENGTH OF WIPE: 175 mm

SPEED OF CONVEYOR: 100*

SPEED OF BOBBIN: 100*



PUNCH - 1 OFFSET: 270° **


PUNCH - 2 OFFSET: 120° **



** These values must be entered while the machine is running. First the Punch-2 value is entered. Touching the punch stoppers of the machine, it is set in line with 2 offset and 1 offset.


7. OPERATION (RECORDING RECIPE)

Record the recipe by pressing
“RECORD RECIPE” button.

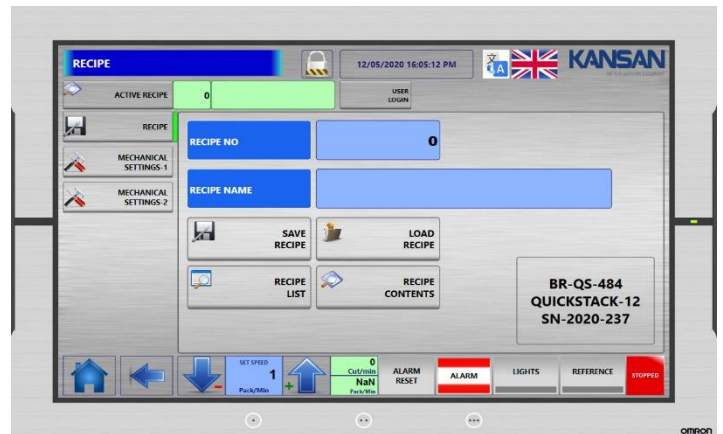

8. OPERATION (RECALLING RECIPE)

- Enter the recipe number you want to recall.
- Recall the recipe by pressing
“RECALL RECIPE” button .

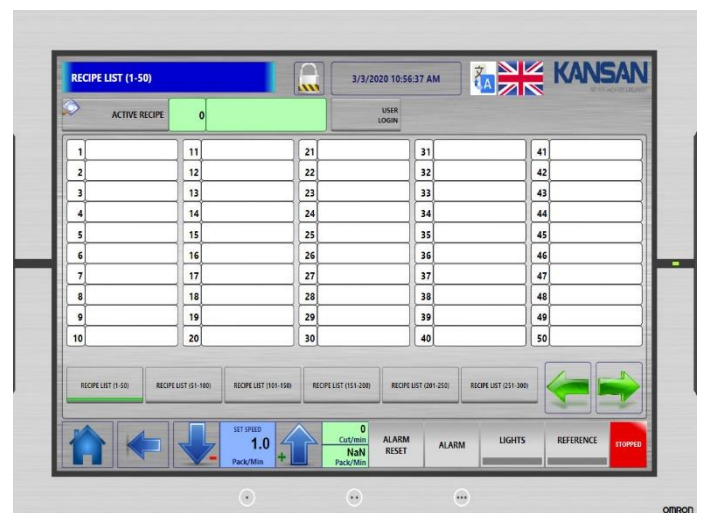


NUMBER OF PACKAGE WIPE ADJUSTMENT

PACKAGE FOLD NUMBER (ON THE ADJUSTMENT SCREEN)

Adjustment : The number of stack which we enter is stacked up one after the other. Number of wipes in group x Number of Stacks determines the total number of wipes in the package.

For example; If 14 bobbins are active and the setting is 6, you get 84 sheets of product. If the number of active bobbins are 5 and the setting is 8, $5 \times 8 = 40$ wipes. (Active Bobbin x Setting Package Number)


Real: Shows the current number of stacks.

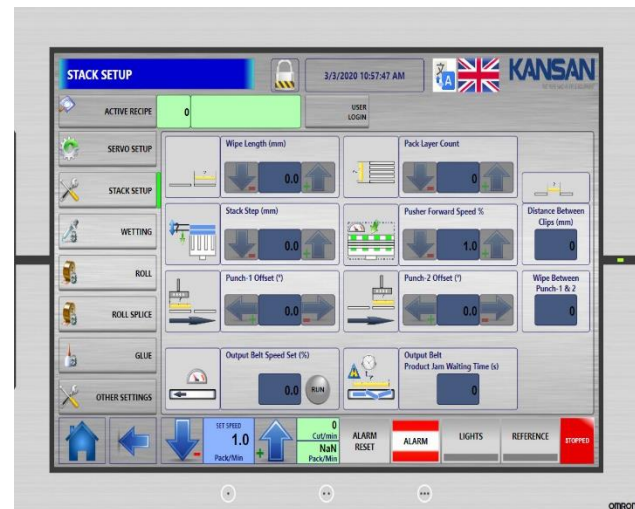


TARGETED PRODUCTION (ON THE PRODUCTION SCREEN)

Adjustment: If you enter a value in the setting section, your machine stops when it reaches this package number. Your machine will continue to work unless you enter a value to this section.

Reel: It shows the number of packages produced so far.

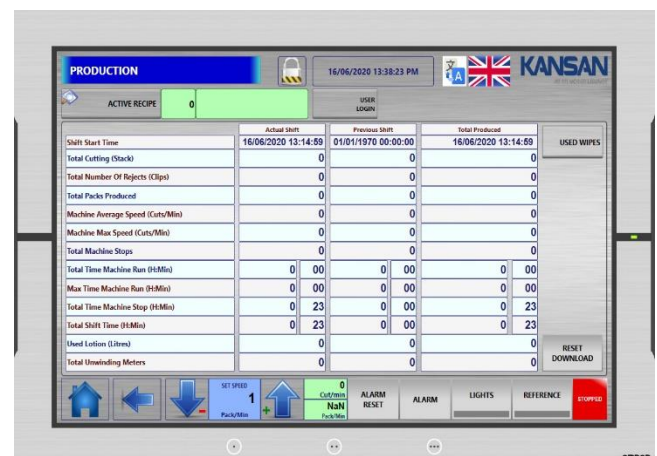


FOLD TYPES

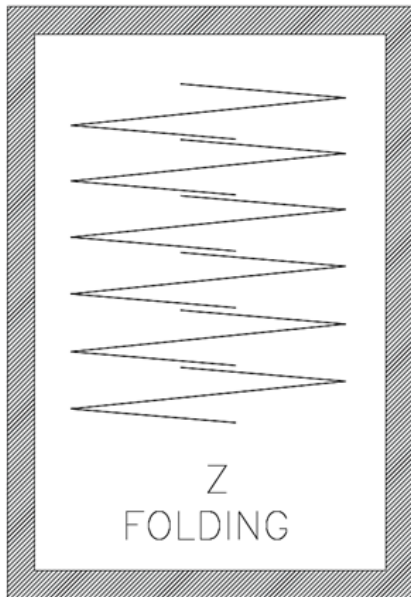

- ALL FOLDING MOLDS (UPPER RIGHT AND BOTTOM LEFT) ALL THE MOLDS SHOULD BE ADJUSTED FOR A RIGHT DIRECTION AND A LEFT DIRECTION.

- OPTION FOLDING TYPE REQUIRING ROTARY CONVEYOR.
- BOTTOM AND TOP IN THE SAME DIRECTION FOR THE ALL MOLDS (TOP+BOTTOM), MOLD GROUP SHOULD BE ADJUSTED ONE RIGHT AND ONE LEFT.

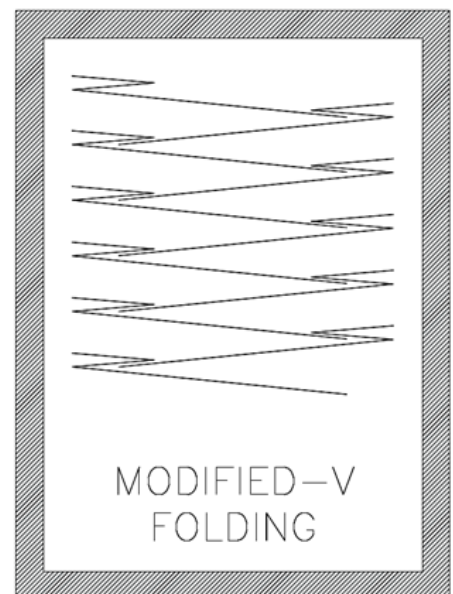

METAL DETECTORS AND SPLICE SHAPES



METAL DETECTOR
(IQ80-50BPP-KCO)

- The metal detector detects the metal bands you have stuck for the splice and does not stack it so that it does not enter in the package.
- Determines how many products will be fired when the detector detects on the SERVICE SETTING-3 screen.
- For the detection of the detector, you can see the sticking form of the metal band in the following table.



QUICKSTACK 12



LANGUAGE SELECTION AND MAIN MENU SCREEN

- Language selection for the operator and the main menu login screen.





- The main menu page is the page where you can change the general settings of the machine.




SETTING AND WETTING SCREEN

- You can change stack step settings, package fold settings and instant operations on SETUP page.
- At the same time, it is also possible to set the on-blast time and period interval of edge control on the setting page.
- You can also set the manual and automatic setting of edge control on-blast time.
- On the wetting page; you can change the amount of solution filling, the amount of wetting (manual) and the wetting limit alarm in L / min.
- On this page you can manually or automatically control the pneumatic valve control.

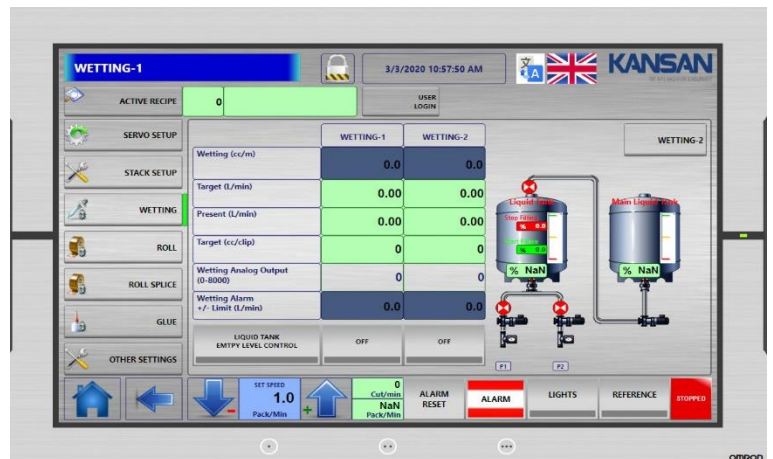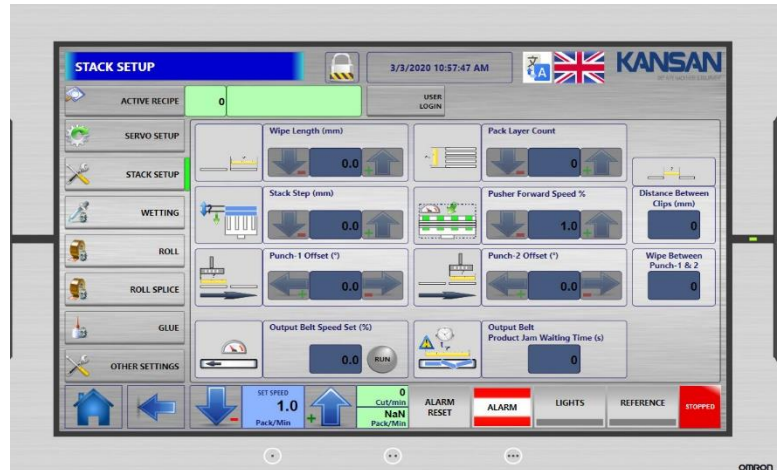


SERVO SETTING AND BOBBIN SCREEN

- By changing the servomotor speeds on SERVO SETUP page, you can edit the length of the wipe, bobbin speed, driver speed and ranges of blade offset.

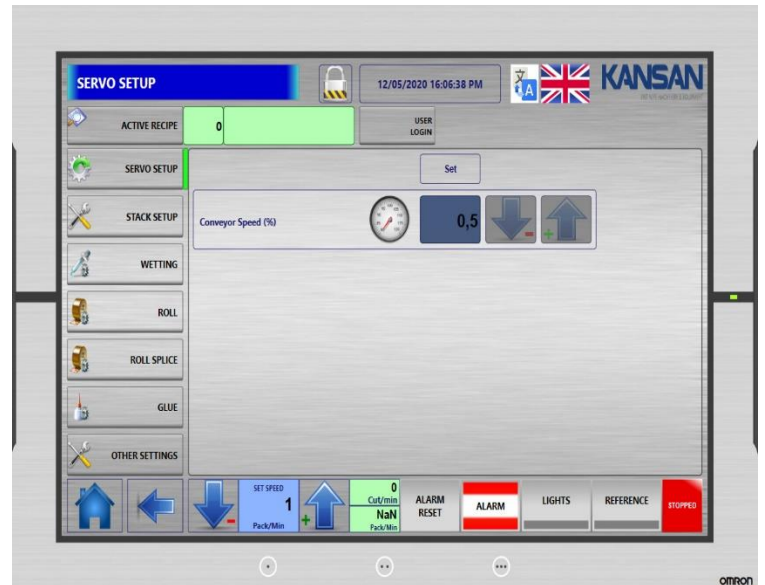


- This is the section where you can make all photocells of the bobbin group active-passive on the BOBBIN page.
- The photos you turn off on this page will not work unless you manually re-activate them.

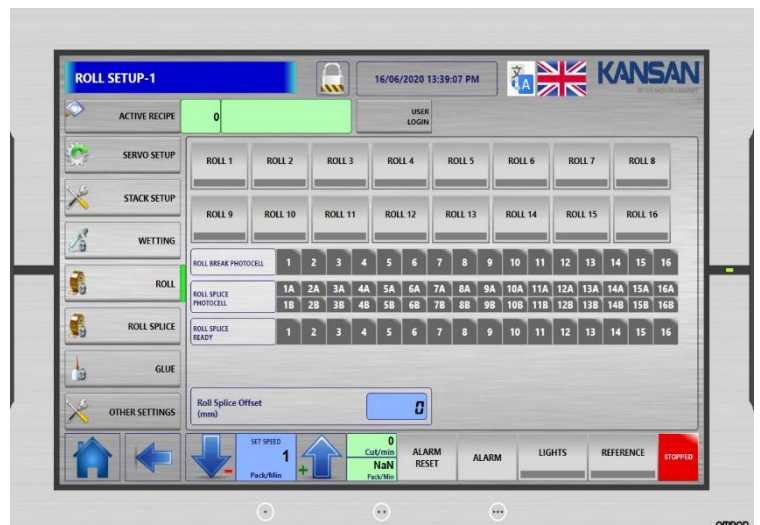


TRANSFER AND PRODUCTION SCREEN

- It will help you to remember the last state of the mold and other module settings by entering the mold settings on the saved recipe into this page.

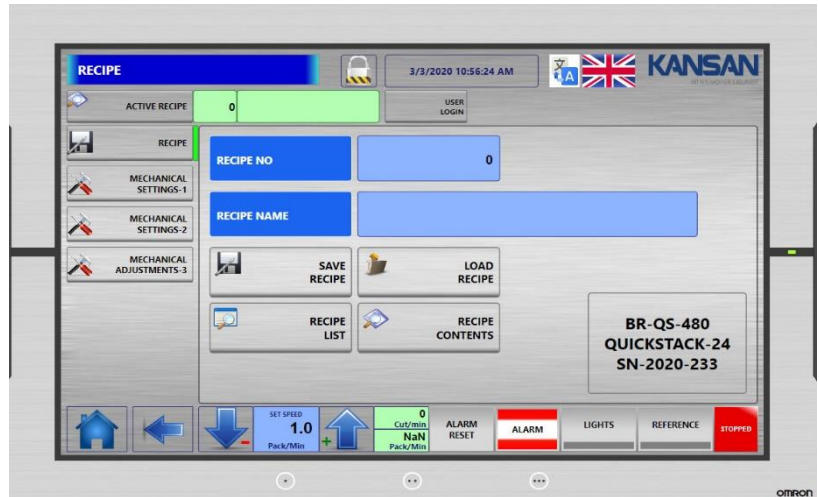


- On the PRODUCTION page, the total working hours of the machine's running time can not be reset and can not be changed.
- It is possible to see the production period of the shift production and shift work hours. It can be reset by pressing RESET button at any time.
- You can enter the targeted amount of production to the SETTING area in the TARGETED PRODUCTION area.

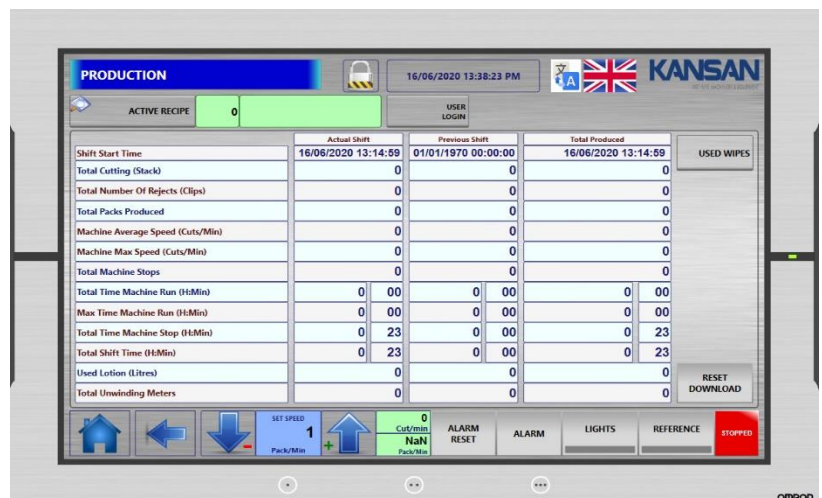

It is possible to see the production made in the REAL section. You can also reset this section.

SENSOR AND SERVO MONITORING SCREEN

- This section is where you can check the sensors when the machine is in operation.
- It is only possible to watch sensors working on this screen, it is not possible to intervene.

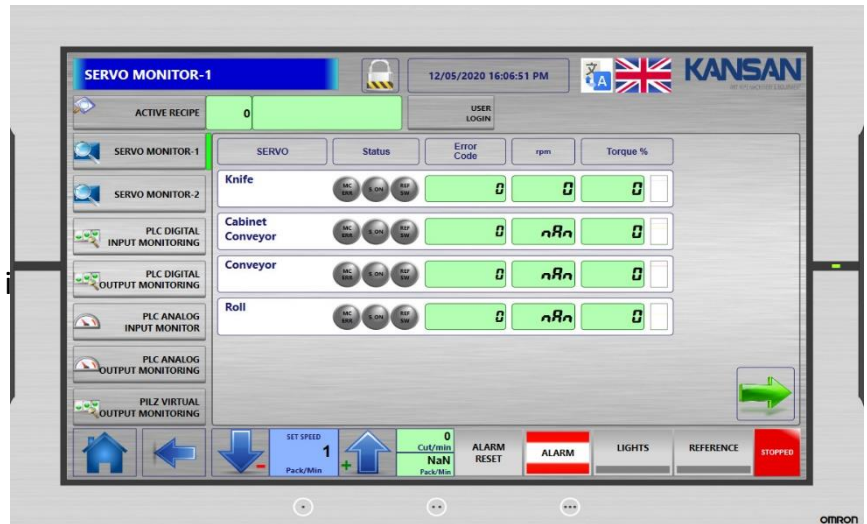


- SERVOMONITORING section, where you can check the servos when the machine is in operation.
- It is only possible to watch servos working on this screen, it is not possible to intervene.




STACK AND PLC INPUT MONITORING SCREEN

- This section is where you can check all stacking steps while the machine is running.
- In this screen, only the stacking operation can be monitored and no intervention is possible.

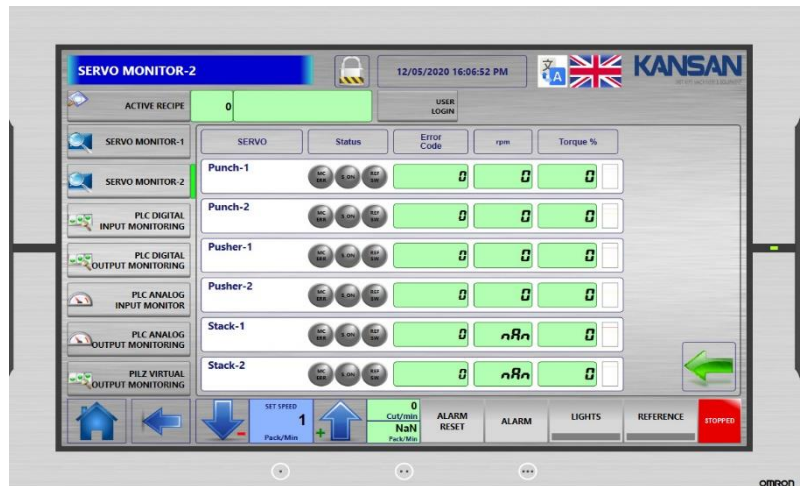

- In this screen it is possible to monitor input modules are active or passive on bobbin screen.

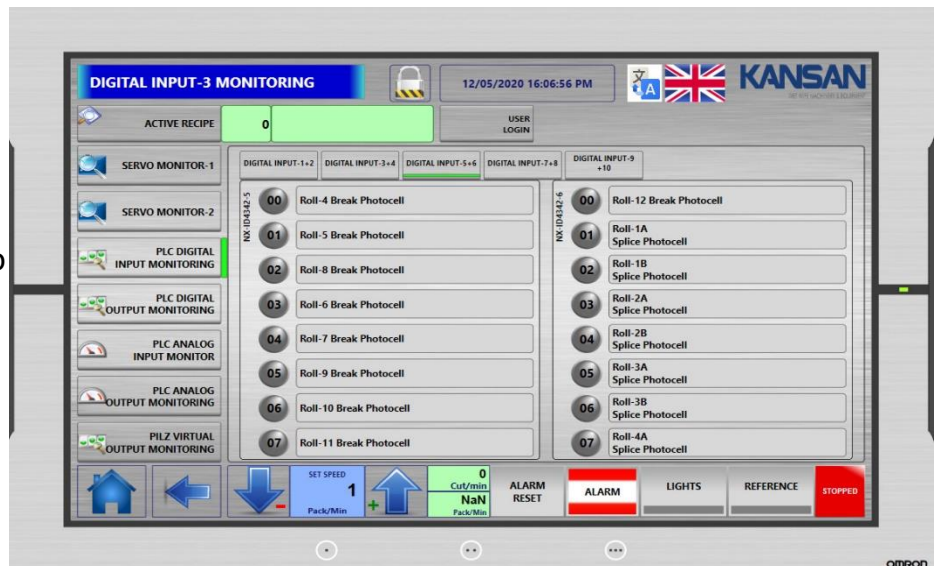


PLC OUTPUT MONITORING AND CONTROL SCREEN

- This screen shows that the output modules are active / inactive on the PLC screen.



- CONTROL page is the section that makes active and passive modules working on the machine.
- It is enough to press the buttons of the modules you can control.

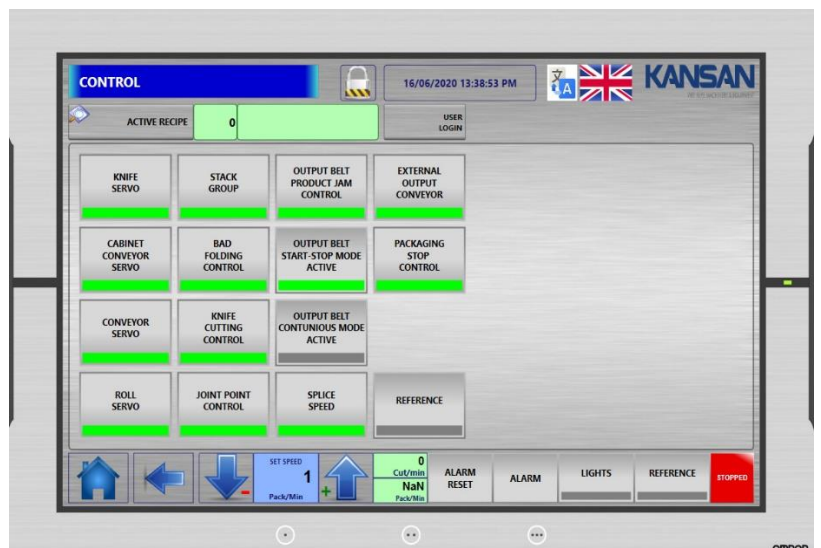


MANUAL AND AUTHORIZATION SCREEN

- This page is where you can manually move the stacking and pushing module when the machine is off.



In this page, move the modules in accordance with job security when doing operations, otherwise it may cause a job accident.

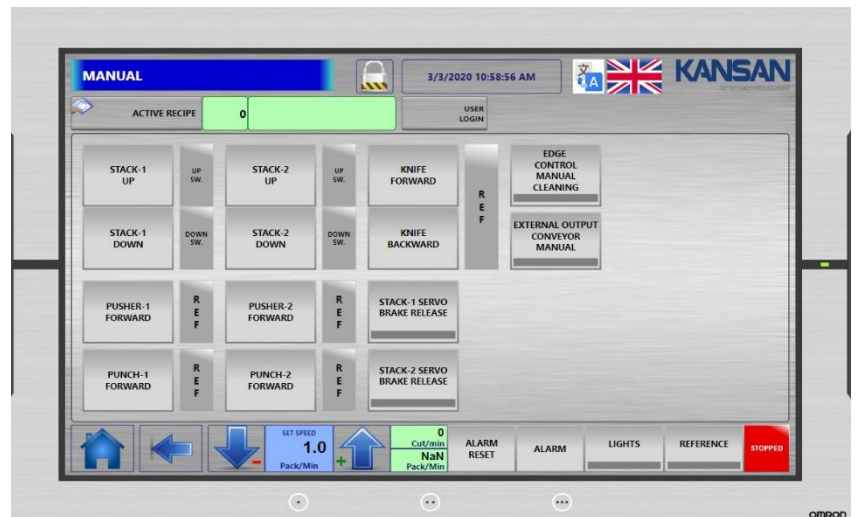

- This is the section that allows the operator to use the machine to promote the right of use on restricted screens.
- It is absolutely not recommended that the operator be given the right to access all screens due to work safety.


BOBBIN ADDING MANUAL SCREEN

- This screen allows you to make the automatic splice module of the bobbins active or passive.
- You can also see in the boxes at the bottom of the screen that the bobbin is ready for use.



CUTTING AND PACKAGE SPEED SCREEN

- The CUTTING SPEED screen is the screen where you can graphically view the change of cutting speed depending on time.

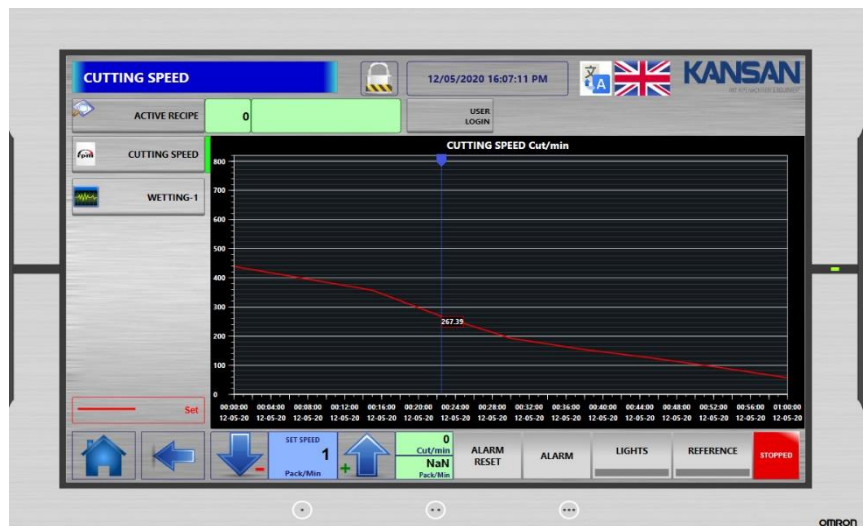


LINE SPEED AND LIQUID DOSING SCREEN

- LIQUID DOSING screen is the screen which you can graphically view the liquid dosing change depending on time.




ALARM AND ALARM HISTORY SCREEN

- Machine warning alarms are in ALARM screen message box.
- You can select and see the related alarms.

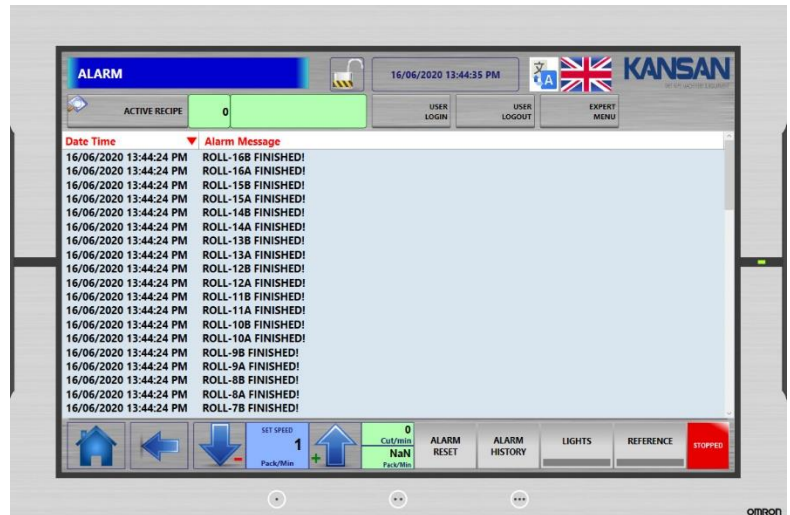

- It is possible to see the history of the alarms on this screen.
- It is possible to delete by selecting these alarms that you can see its time and history.

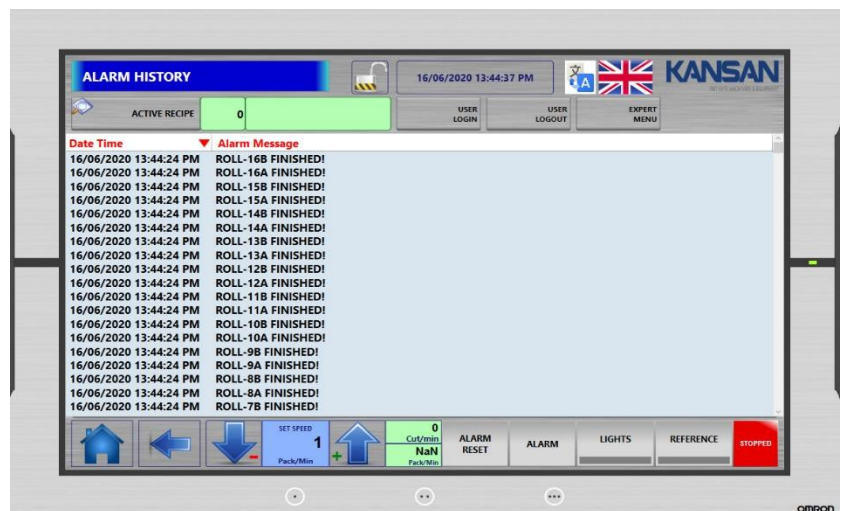

SERVICE MENU AND SERVICE SETTING-1 SCREEN

- In this screen, the authorized personnel at second level can enter password and adjust the system.




- This screen determines the operating speed and duration of the modules.




RECIPE LIST SCREEN

- This screen is the recipe order you can see for the names or numbers of product recipes that have been created.

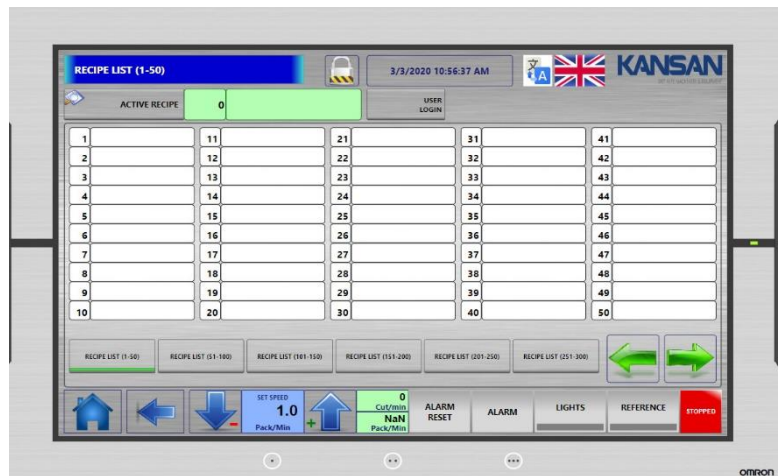



RECIPE AND RECIPE CONTENTS SCREEN

- After the desired product is created, the machine settings for each product will be different.
- Recalling the recorded recipe,
- Record the recipe,
- Monitoring the recipes in a list,
- It is possible to check the contents of the recipe on this screen.

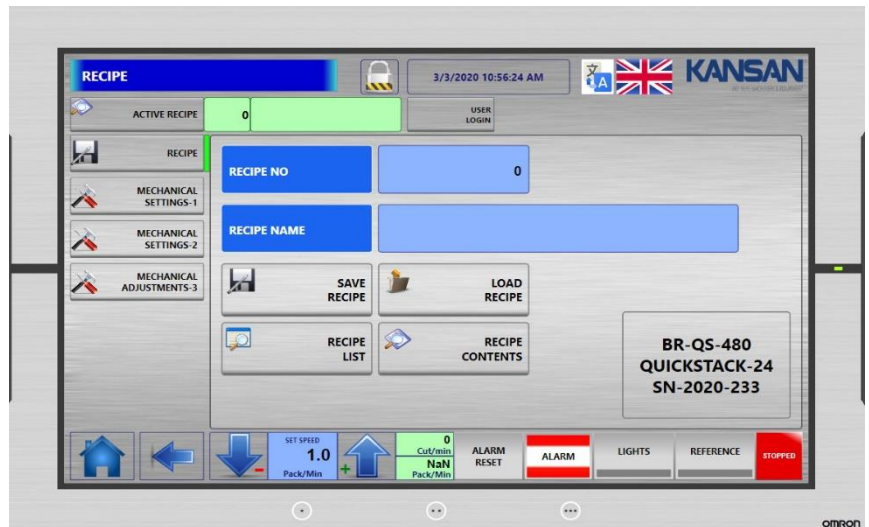

- On this screen, it is possible to see only the content of the recipe you selected.
- You will see only the settings made in the past and you will not be able to make changes.

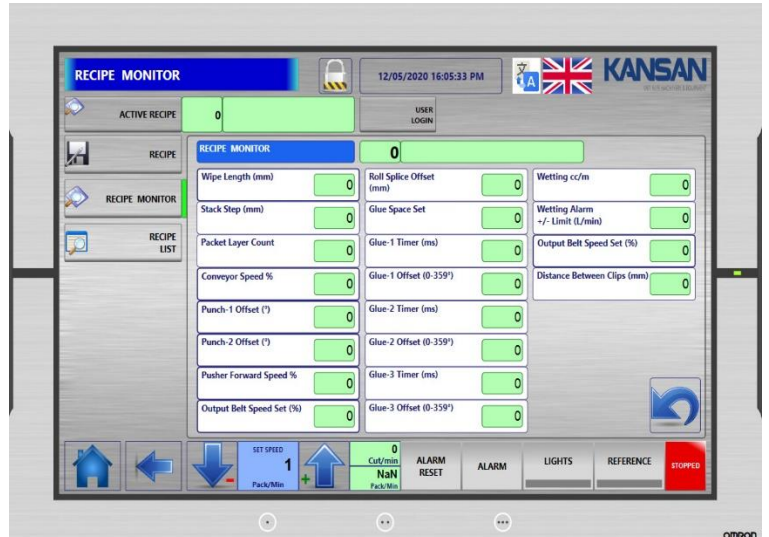

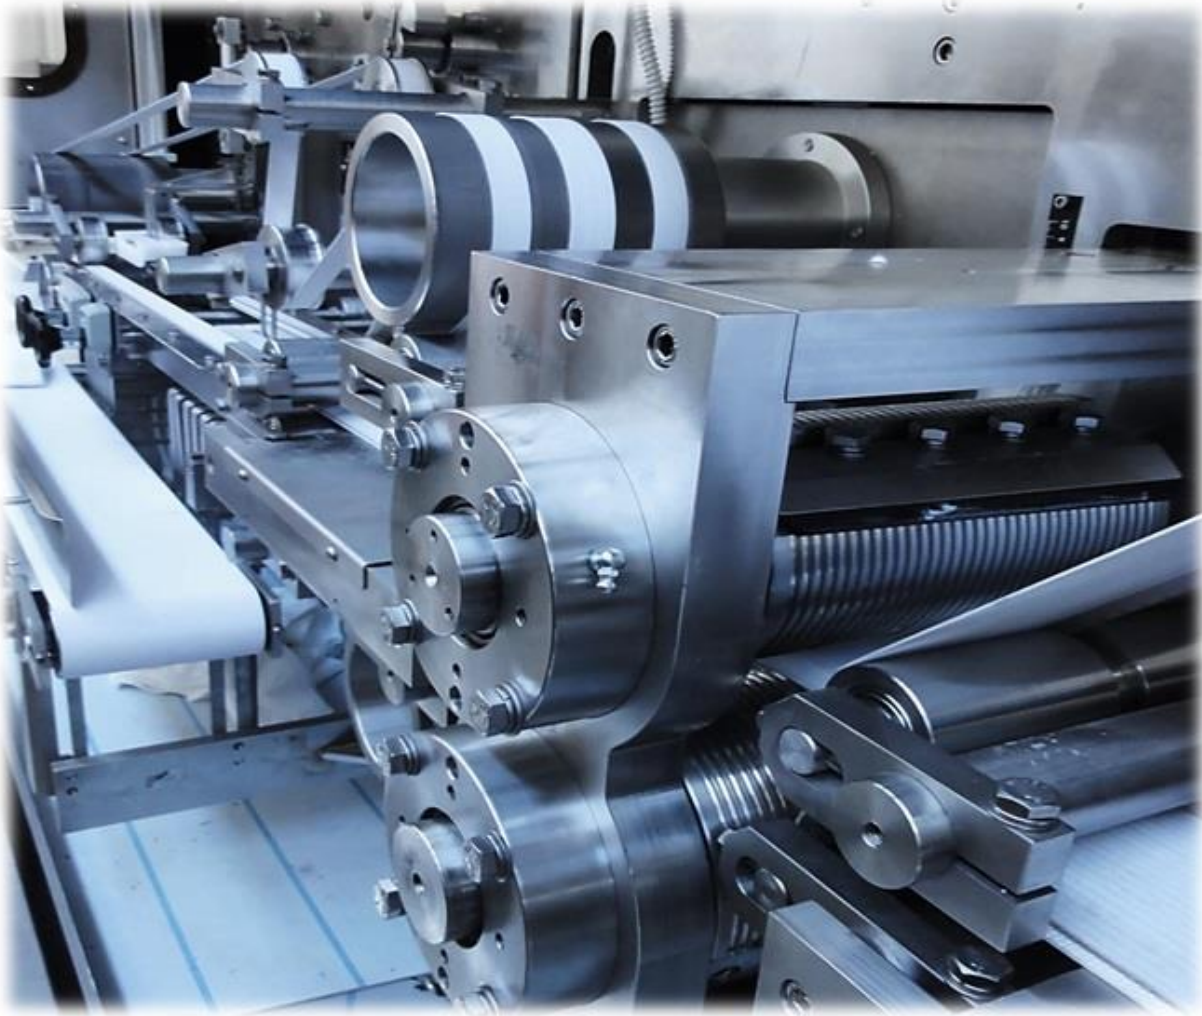


MODUL AND PARTS DETAILS




Compact
solutions
for wet wipe
production

MACHINE PARTS

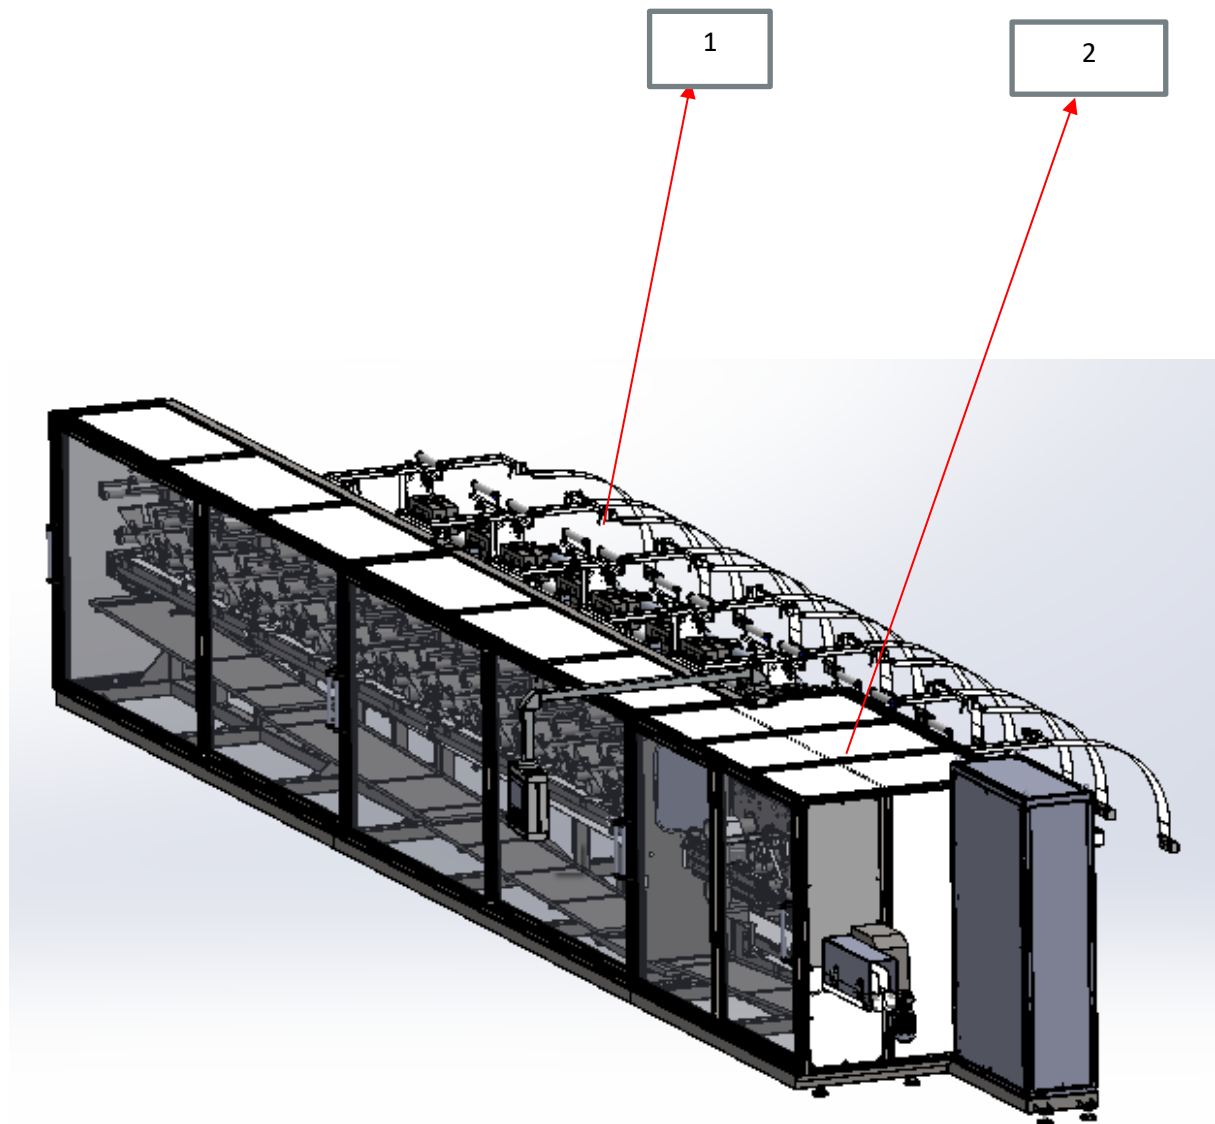


PART NO	KANSAN CODE	DESCRIPTION	QUANTITY	WEIGHT
0001		BOBBIN PART	1	10+
0002		CABIN PART	1	10+

CABIN PART

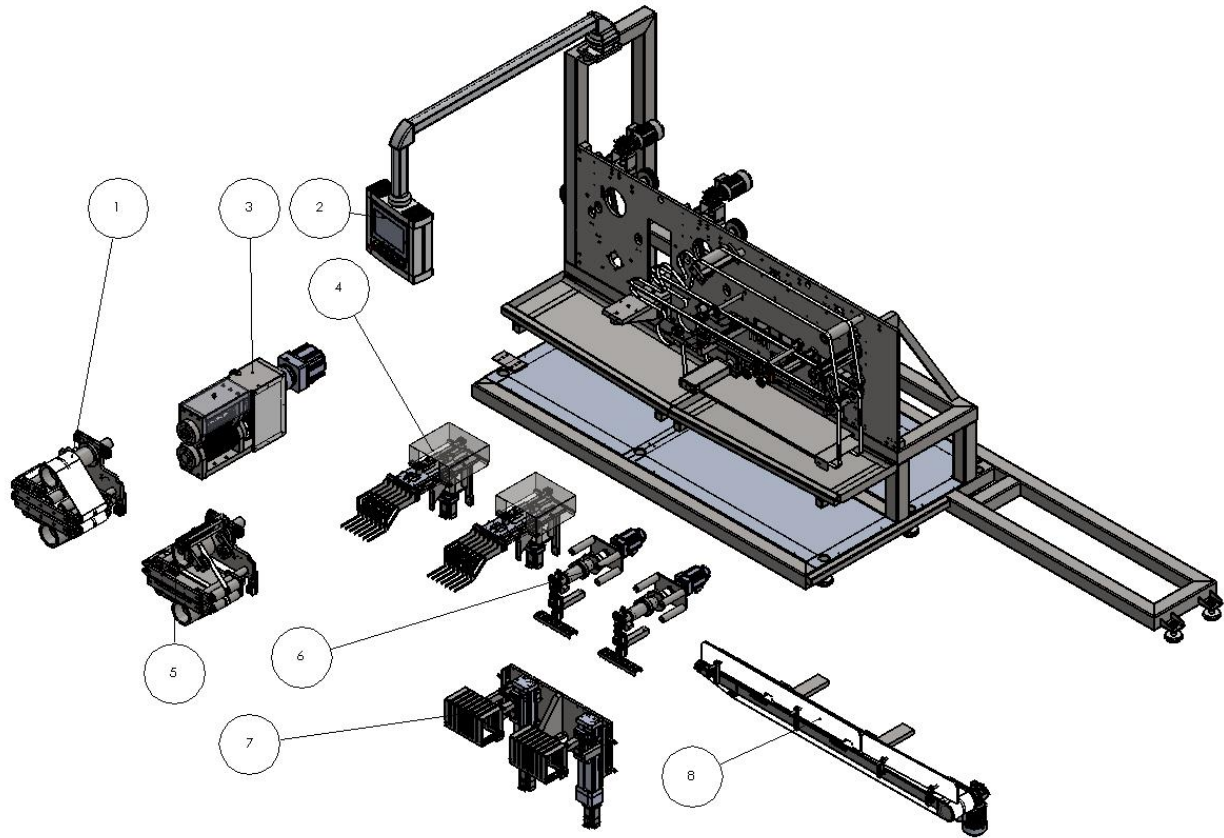


PART NO	DESCRIPTION	QUANTITY
0001	PRODUCT CARRIER CONVEYOR MODULE	1
0002	OPERATOR PANEL	1
0003	PRODUCT CUTTING MODULE	1
0004	PRODUCT IMPORTER MODULE	1
0005	PRODUCT CARRIER MODULE	2
0006	PRODUCT STACKING MODULE	2
0007	SUB STACKING MODULE	1
0008	PRODUCT OUTPUT KONVEYOR	1

OPERATOR PANEL

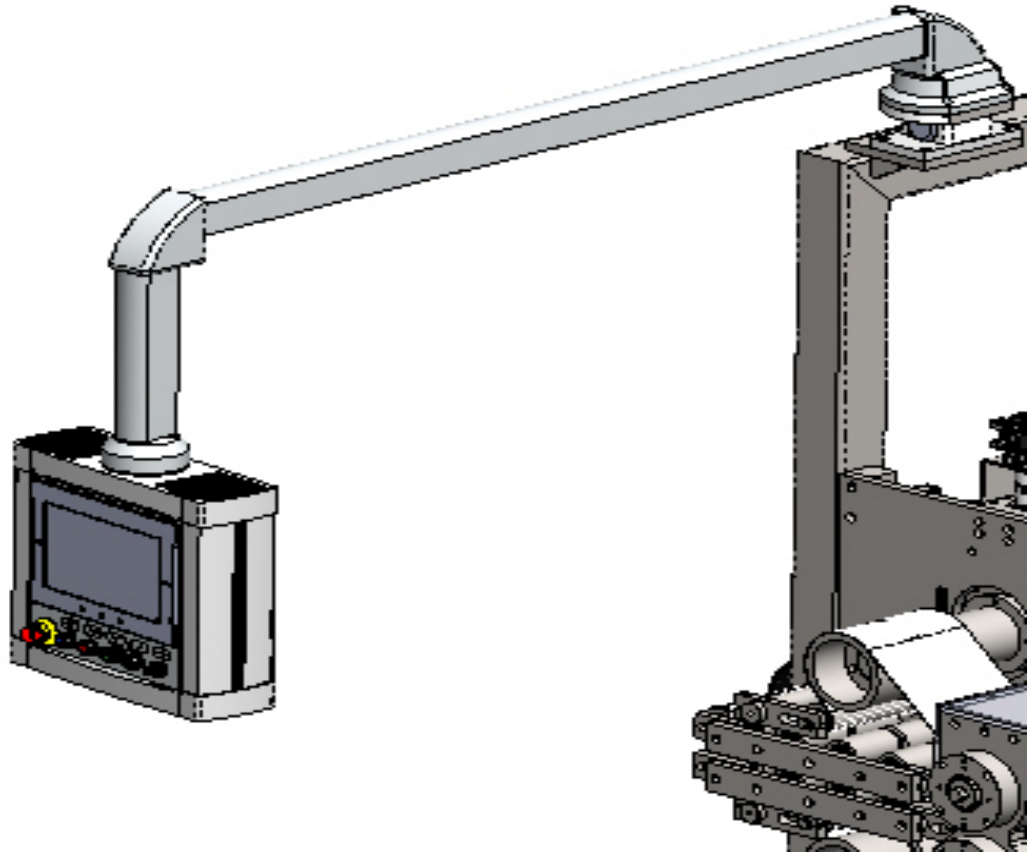

- The Mobile Operator Screen allows you to view all the operation operations.
- With the switch on it, manual and automatic modes can be switched.
- There is an tower light indicator on the Mobile Operator Screen for alerts.
- Machine operation recipes and PLC controls can also be made on this screen.

LAST EXIT CONVEYOR MODULE

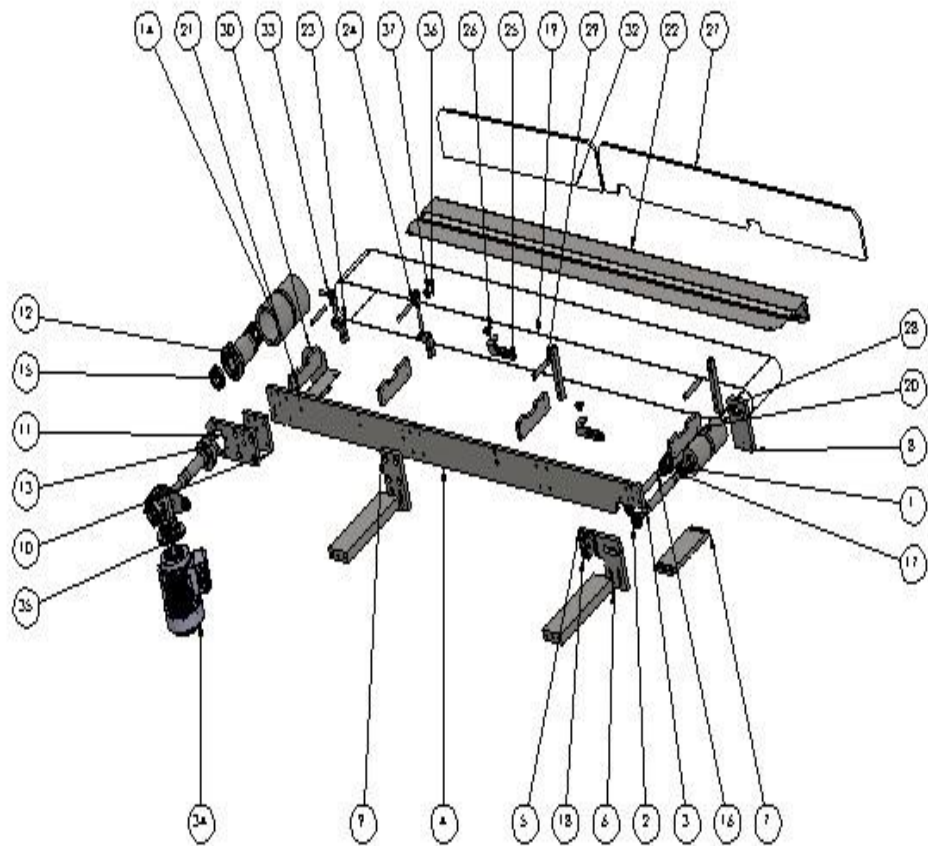


LAST EXIT CONVEYOR MODULE

ÖĞE NO.	PARÇA NUMARASI	MİKT.
1	CONVEYOR BELT ADHESIVE	1
2	SS6004 ZZ CHROME BALL BEARING	1
3	Ø25*220mm 304 LAST OUTPUT CONVEYOR TENSIONING AVERAGE SHAFT	1
4	110*20*1855mm 304 LAST OUTPUT CONVEYOR MAIN CONNECTION PLATE RIGHT	1
5	CARRIER CONVEYOR HANDLE CLAMP	1
6	100*35*305mm 304 LAST OUTLET CONVEYOR CHASSIS CONNECTION MOUNTING	2
7	100*20*225mm 304 LAST OUTPUT CONVEYOR TENSIONED LOWER CONNECTION	1
8	CARRIER CONVEYOR HANDLE CLAMP	1
9	100*20*170mm 304 LAST OUTPUT CONVEYOR CHASSIS CONNECTION	1
10	110*20*115mm 304 LAST OUTPUT KONVEYOR INTERIOR CONNECTION	1
11	110*20*240mm 304 LAST OUTPUT CONVEYOR REDUCER CONNECTION SHEET RIGHT	1
12	Ø100*130mm 304 FINAL OUTPUT CONVEYOR TOWING ROLLER BUCKET	1
13	Ø90*275mm 304 FINAL OUTPUT KONVEYOR TOWING ROLLER SHAFT	1
14	Ø120*175mm 304 LAST EXIT KONVEYOR HAMMER ROLLER	1
15	6007 RADIAL CONTACT BALL BEARING	2
16	Ø22*190mm 304 LAST OUTPUT CONVEYOR HANDLE SHAFT	1
17	Ø50*175mm 304 LAST OUTPUT CONVEYOR HUNTING PIPE	1
18	40*15*75mm 304 LAST OUTPUT CONVEYOR AVARE CONNECTION	1
19	KD2WH1501 170*4270mm CONVEYOR BELT	1
20	60*20*175mm 304 LAST OUTPUT CONVEYOR INTERMEDIATE	3
21	60*20*175mm 304 LAST EXIT CONVEYOR INTERFERENCE	1
22	LZR 1850*275,5*1,5mm 304 LAST OUTPUT CONVEYOR LOWER SHEET RIGHT	1
23	LAST EXIT CONVEYOR GLASS MOVABLE CONNECTION WEDGE	2
24	ROTATING CONVEYOR SIDE STAND SHAFT	2
25	LZR 60*132,5*5mm 304 SENSOR SHEET RIGHT	2
26	OMRON E3Z-LS61 FOCUSE PHOTOCELL NPN	2
27	LAST EXIT CONVEYOR GLASS	1
28		2
29	PRODUCT GUIDANCE PIN	2
30	FINAL OUTPUT CONVEYOR DRIVE CLOSING SHEET	1
31	Ø20*30mm 304 LAST EXIT CONVEYOR TORQUE SHAFT	1
32	LAST EXIT CONVEYOR GLASS	1

33	20*20*120mm 304 SIDE SHEET CONNECTION WEDGE	2
34	ENGINE 0,37 KW 1400 D D BN 71B 4 230 400-50 IP55 CLF B14	1
35	_BFK_40_P_7.5_71_B14_V6_H18	1
36	M8 WASHER	4
37	M8 x 20 HEXAGON SCREW GRADE STAINLESS	2


LOWER STACK MODULE

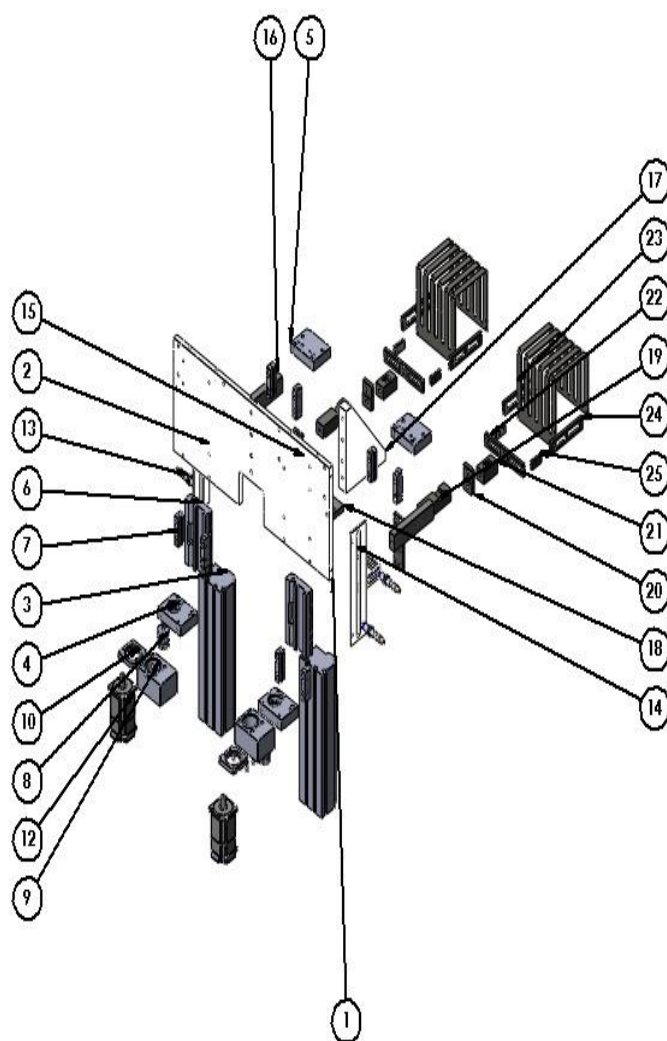


LOWER STACK MODULE

COMPONENT NO.	EXPLANATION	QUANTITY
1	820*25*360mm ST37 LOWER STACKING SHEET	1
2	LOWER STACK EYE CONNECTION	2
3	EGC_120_BS446123GK 0_0ML_R	2
4	EGC_120_BS_KF_Deckel_LI2_	2
5	EGC_120_BS_KF_Deckel_RE1_	2
6	EGC_120_GK_GPBS1	2
7	558044_MUE_120_185____120_p1	8
8	551005_EAMC_42_50_12_19	2
9	558173_EAMK_A_S62_62AB_1O_	2
10	OMRON ENGINE FLANS	2
11	Socket Head Cap Screw_AM_B18.3.1M - 6 x 1.0 x 16 Hex SHCS -- 16NHX	8
12	R88M_K75030H_BS2	2
13	M18 ENDUCTIF SENSOR	4
14	STACKING SENSOR SHEET	2
15	LOWER STACK SLIDE RAIL CONNECTION PLATE	2
16	50*25*210mm COLD PULL STACK SIDE SHEET CONNECTION	2
17	LOWER STACK SHEET OF MODULE CONNECTION PART	1
18	100*20*225mm COLD PULL SUB STACKING CHASSIS CONNECTION PART	1
19	40*40*145mm 304 SUB STACKING CONNECTION PART	2
20	50*15*80mm 304 LOWER STACK SHEET CONNECTION COMPONENT	2
21	40*40*75mm 304 LOWER STACKING SHEET CONNECTION COMPONENT	2
22	LOWER STACKING SHEET CONNECTION COMPONENT	2
23	LOWER STACKING SHEET	2
24	LOWER STACKING SHEET REINFORCEMENT COMPONENT	4
25	30*15*55mm 304 STACKING REINFORCEMENT COMPONENT	4

PRODUCT STACKING CONVEYOR MODULE

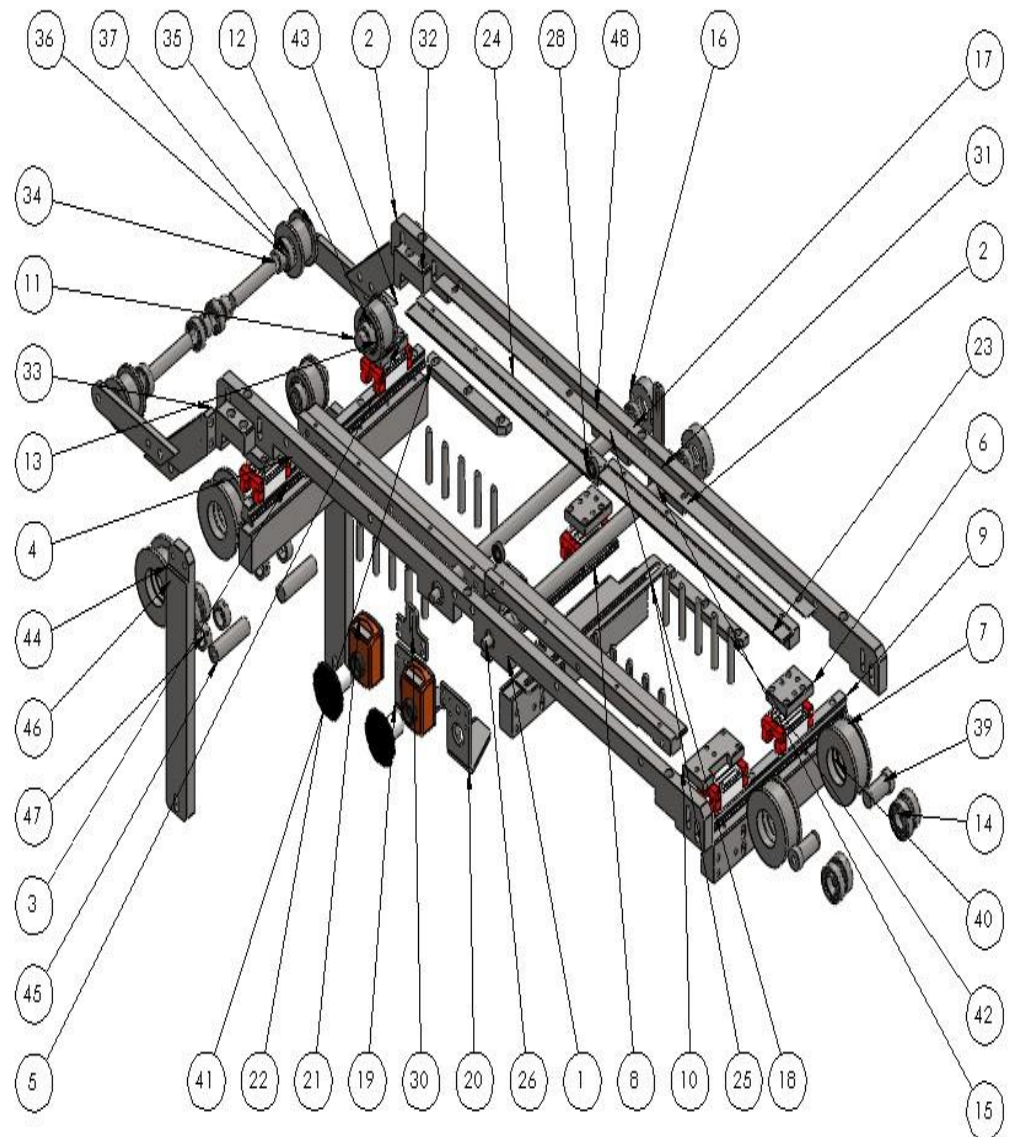

PRODUCT STACKING CONVEYOR MODULE

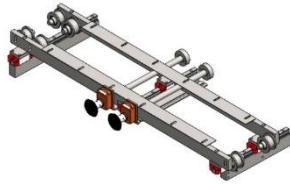


COMPONENT NO	EXPLANATION	QUANTITY
1	TOP STACKING SERVO CONNECTION SHAFT	4
2	KTR-GS 24 COUPLING	1
3	BALANCING WEIGHT	1
4	FLANGE	1
5	LZR 101*30*10mm 304 LOWER CONNECTION COMPONENT	1
6	TOP STACKING	1
7	R88M_K1K530F_S2	1
8	PEII 090-003 OMRON R88MK1K530F	1
9	Ø115*215mm 304 PUNCH KOVANI	1
10	SS 6006 2RS (KROM) BALL BEARING	2
11	Ø55*321mm 304 PUNCH KOVANI MILI	1
12	40*25*145mm 304 PUNCH SHEET CONNECTION PART	1
13	STACKING MOTION PIN	1
14	BMWR 20 C G3V1 LINEER CARRIAGE	2
15	55*20*150mm 304 PUNCH CARRIAGE CONNECTION PART	1
16	45*45*191mm 304 PUNCH CARRIAGE MAIN CONNECTION PART	1
17	BMSR 20 ND LINEER SLIDE SCHNEEBERGER PUNCH SLIDE	1
18	50*30*47mm 304 PUNCH SHEET CONNECTION PART	1
19	Ø20*34mm 304 PUNCH OFFSET CONNECTION PIN	1
20	SS6002 ZZ BALL BEARING KROM	2
21	STACK MOVING FLANGE PIN BEARING BEARING	1
22	STACK MOVING FLANGE PIN BEARING BEARING	1
23	STACK PALLET SHEET	1
24	PRODUCT STACKING FEET ADJUSTING SHAFT	1


QUICKSTACK 12

25	M8 WASHER	4
26	M8 x 40 HEXAGON SCREW GRADE	2
27	M14 HEXAGON NUT 304CR (SOL PASO)	1
28	M14 HEXAGON NUT 304CR (SAĚ PASO)	1
29	M8 FLAT WASHER	4
30	M8 x 35 HEXAGON SCREW GRADE	2

PRODUCT DRIVER MODULE

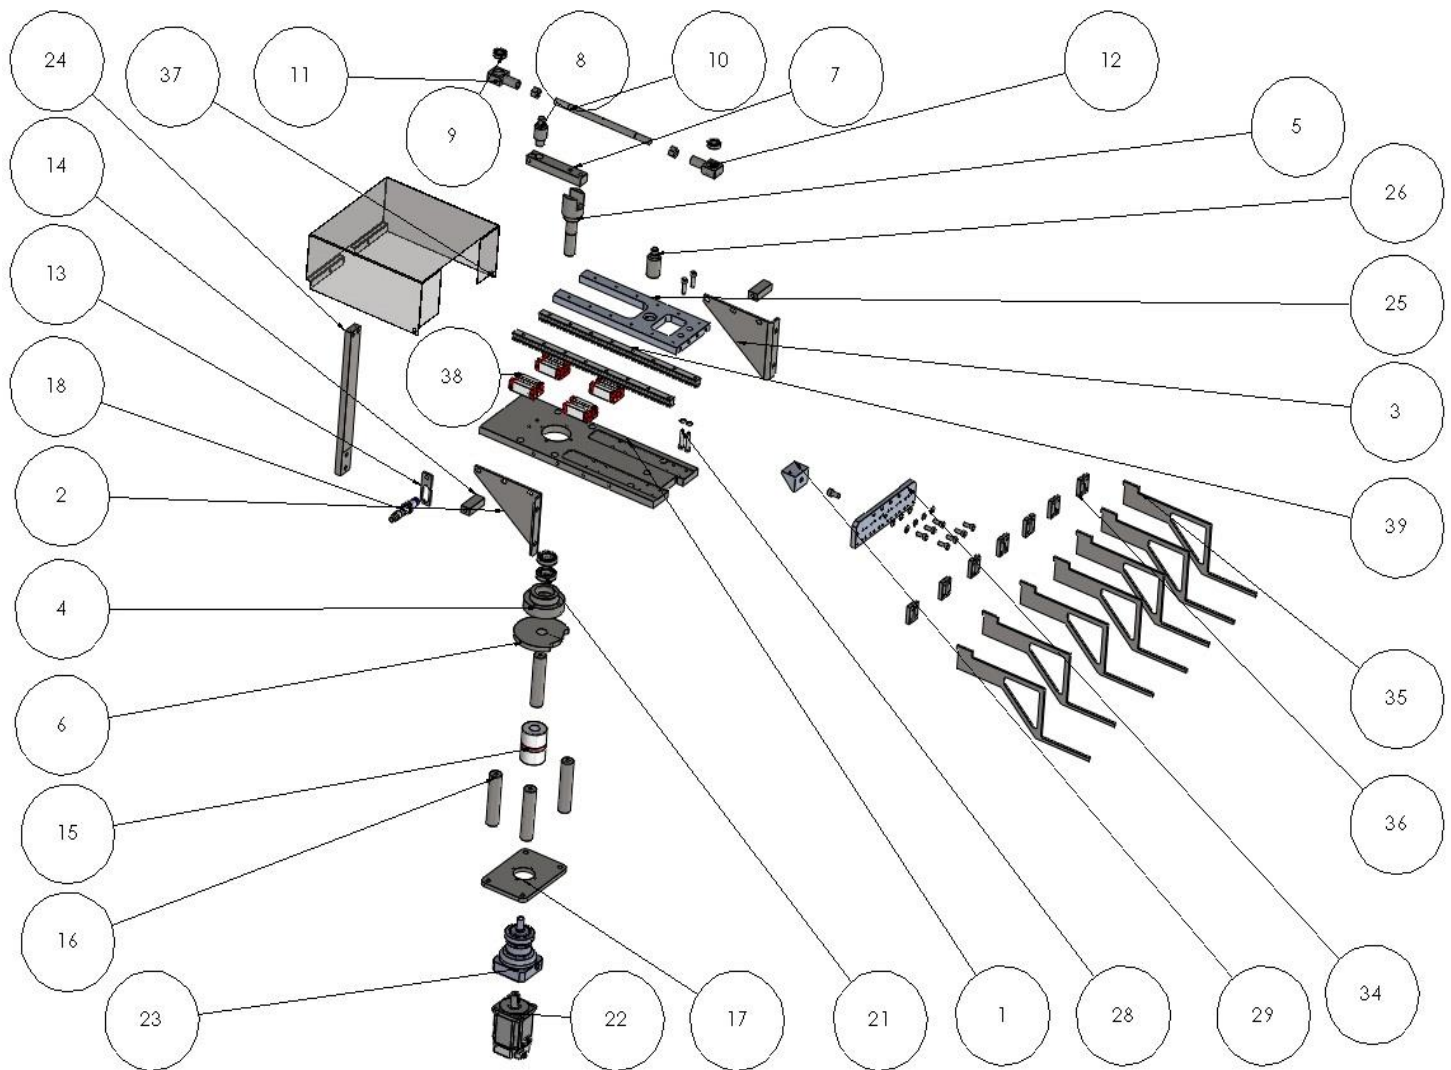

PRODUCT DRIVER MODULE

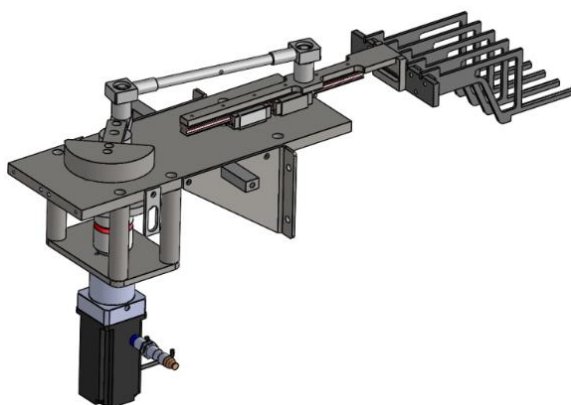


COMPENENT NO	EXPLANATION	QUANTITIY
1	PUSHER MAIN PLATE	1
2	PRODUCT PUSHER CONNECTION SHEET-RIGHT	1
3	PRODUCT PUSHER CONNECTION SHEET-LEFT	1
4	PRODUCT PUSHER BEARING BEARING	1
5	PRODUCT PUSHER MAIN MOVEMENT SHAFT	1
6	FLANGE (Ø25)	1
7	CONNECTING ROD	1
8	PRODUCT PUSHER PIN	1
9	6002 ZZ RADIAL CONTACT BALL BEARING	2
10	PRODUCT PUSHER ADJUSTMENT GIGON	1
11	PRODUCT PUSHER OFFSET BEARING BEARINGS	1
12	PRODUCT PUSHER OFFSET BEARING BEARINGS	1
13	LZR 85*28*5mm 304 PRODUCT PUSHER FLANGE SHEET	1
14	PRODUCT PUSHER CASING SHEET CONNECTION PART	2
15	KTR-GS24 COUPLING	1
16	PRODUCT PUSHER REDUCER SUPPORT SHAFT	4
17	PRODUCT PUSHER SERVO CONNECTION SHEET	1
18	M18 ENDUCTIF SENSOR	1


QUICKSTACK 12

19	M14 HEXAGONAL NUT 304CR (SAĞ PASO)	1
20	M14 HEXAGONAL N 304CR (SOL PASO)	1
21	6005 ZZ RADIAL CONTACT BALL BEARING	2
22	R88M_K75030H_S2	1
23	PEII 070-005 OMRON R88M-K75030H APEX	1
24	CHASSIS STACK SUPPORT CONNECTION PART	1
25	150*25*365mm ALUMINUM 7075 T6 PUSHER GROUP SLIDE CONNECTION PART	1
26	Ø35*73mm 304 PRODUCT PUSHER MOVEMENT SHAFT	1
27	M8 FLAT WASHER	2
28	M8 x 40 HEXAGON SCREW GRADE	2
29	60*45*45mm ALUMINYUM 7075 T6 PUSHER SHEET CONNECTION PART SUPPORT	1
30	M10 x 20 HEXOGANE SOCKET HEAD STAINLESS	1
31	M8 WASHER	7
32	M8 x 20 HEXAGON SOCKET HEAD	7
33	M8 x 30 HEXAGON SOCKET HEAD STAINLESS	2
34	PUSHER SHEET CONNECTION PART (LONG)	1
35	LONG PUSHER SHEET	7
36	PUSHER STICK WELDING PART	7
37	PRODUCT PUSHER GROUP CASING SHEET (HIGH)	1
38	BMWR 20 C G3V1 LINEER CARRIAGE	4
39	BMSR 20 ND L=1000 LINEER SLIDE SCHNEEBERGER	2

PRODUCT STACKING MODULE

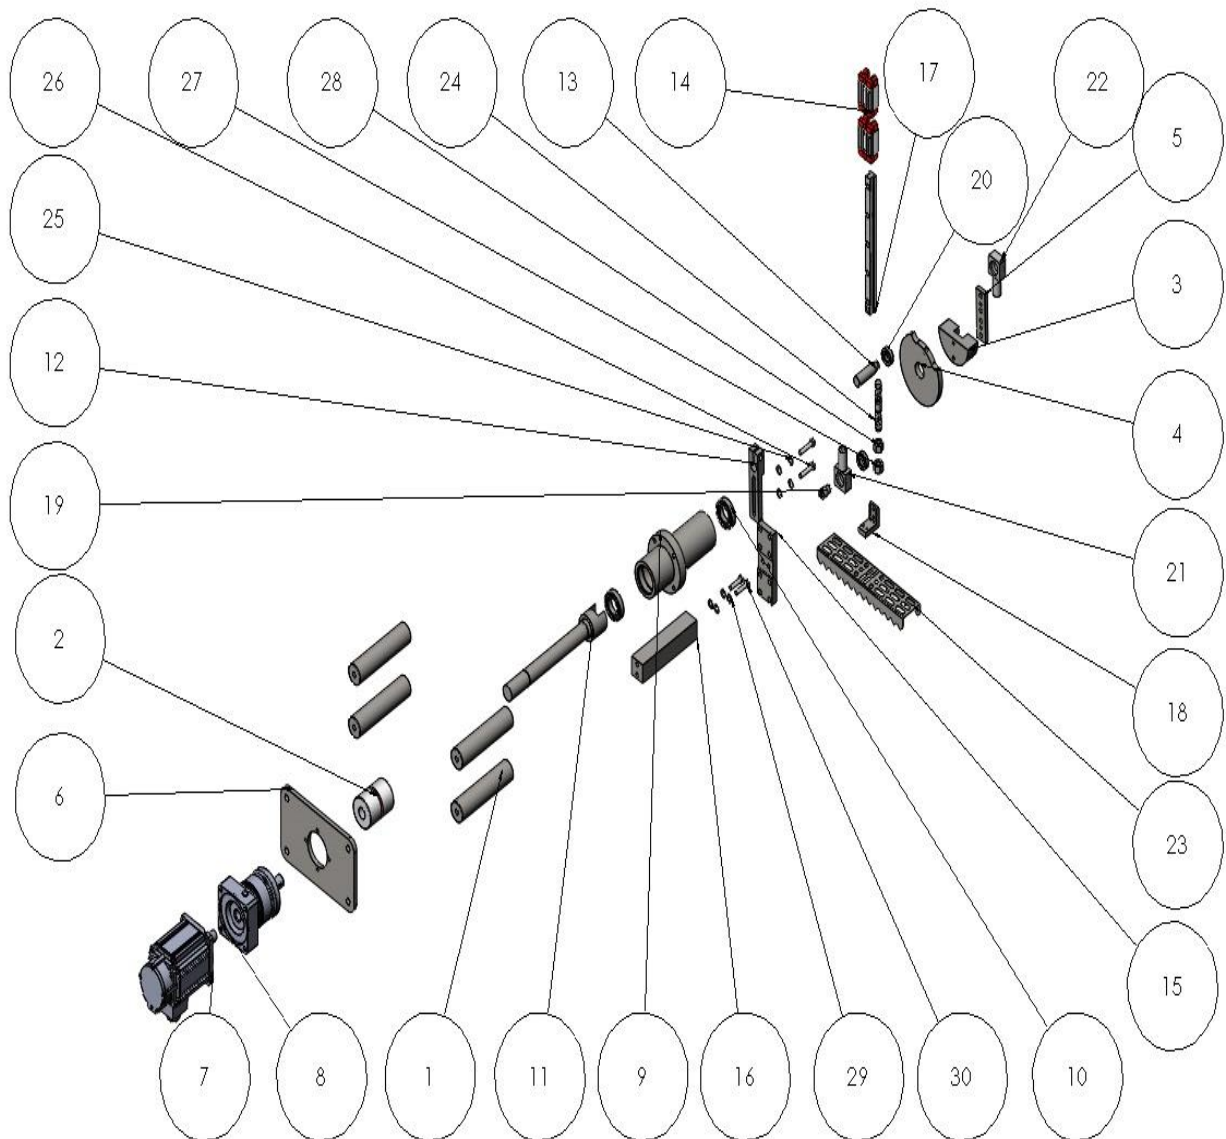

PRODUCT STACKING MODULE

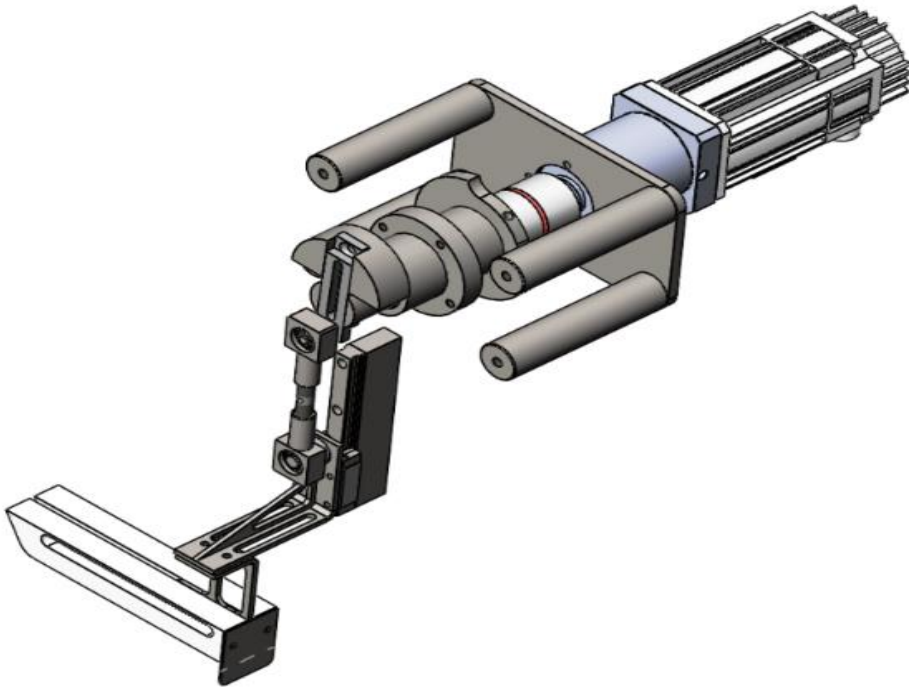


COMPENENT NO	EXPLANATION	QUANTITY
1	TOP STACK SERVO CONNECTION SHAFTS	4
2	KTR-GS 24 COUPLING	1
3	BALANCING WEIGHT	1
4	FLANGE (Ø30)	1
5	LZR 101*30*10mm 304 LOWER CONNECTION PART	1
6	TOP STACK SERVO CONNECTION SHEET	1
7	R88M_K1K530F_S2	1
8	PEII 090-003 OMRON R88MK1K530F	1
9	Ø115*215mm 304 PUNCH KOVANI	1
10	SS 6006 2RS (KROM) RULMAN	2
11	Ø55*321mm 304 PUNCH SLEEVE SHAFT	1


QUICKSTACK 12

12	40*25*145mm 304 PUNCH SHEET CONNECTION PART	1
13	STACK MOVEMENT PIN	1
14	BMWR 20 C G3V1 LINEER CARRIAGE	2
15	55*20*150mm 304 PUNCH CARRIAGE CONNECTION PART	1
16	45*45*191mm 304 PUNCH CARRIAGE MAIN CONNECTION PART	1
17	BMSR 20 ND LINEER SLIDE SCHNEEBERGER PUNCH SLIDE	1
18	50*30*47mm 304 PUNCH SHEET CONNECTION PART	1
19	Ø20*34mm 304 PUNCH OFFSET CONNECTION PIN (SHORT)	1
20	SS6002 ZZ BEARING KROM	2
21	STACK MOVEMENT FLANGE PIN ROLLER BEARING	1
22	STACK MOVEMENT FLANGE PIN ROLLER BEARING	1
23	STACK PALLET SHEET	1
24	PRODUCT STACKING ADJUSTMENT SHAFT	1
25	M8 WASHER	4
26	M8 x 40 HEXAGON SCREW GRADE	2
27	M14 HEXAGONAL NUT 304CR (SOL PASO)	1
28	M14 HEXAGONAL NUT 304CR (SAČ PASO)	1
29	M8 FLAT WASHER	4
30	M8 x 35 HEXAGON SCREW GRADE	2

PRODUCT CUT MODULE

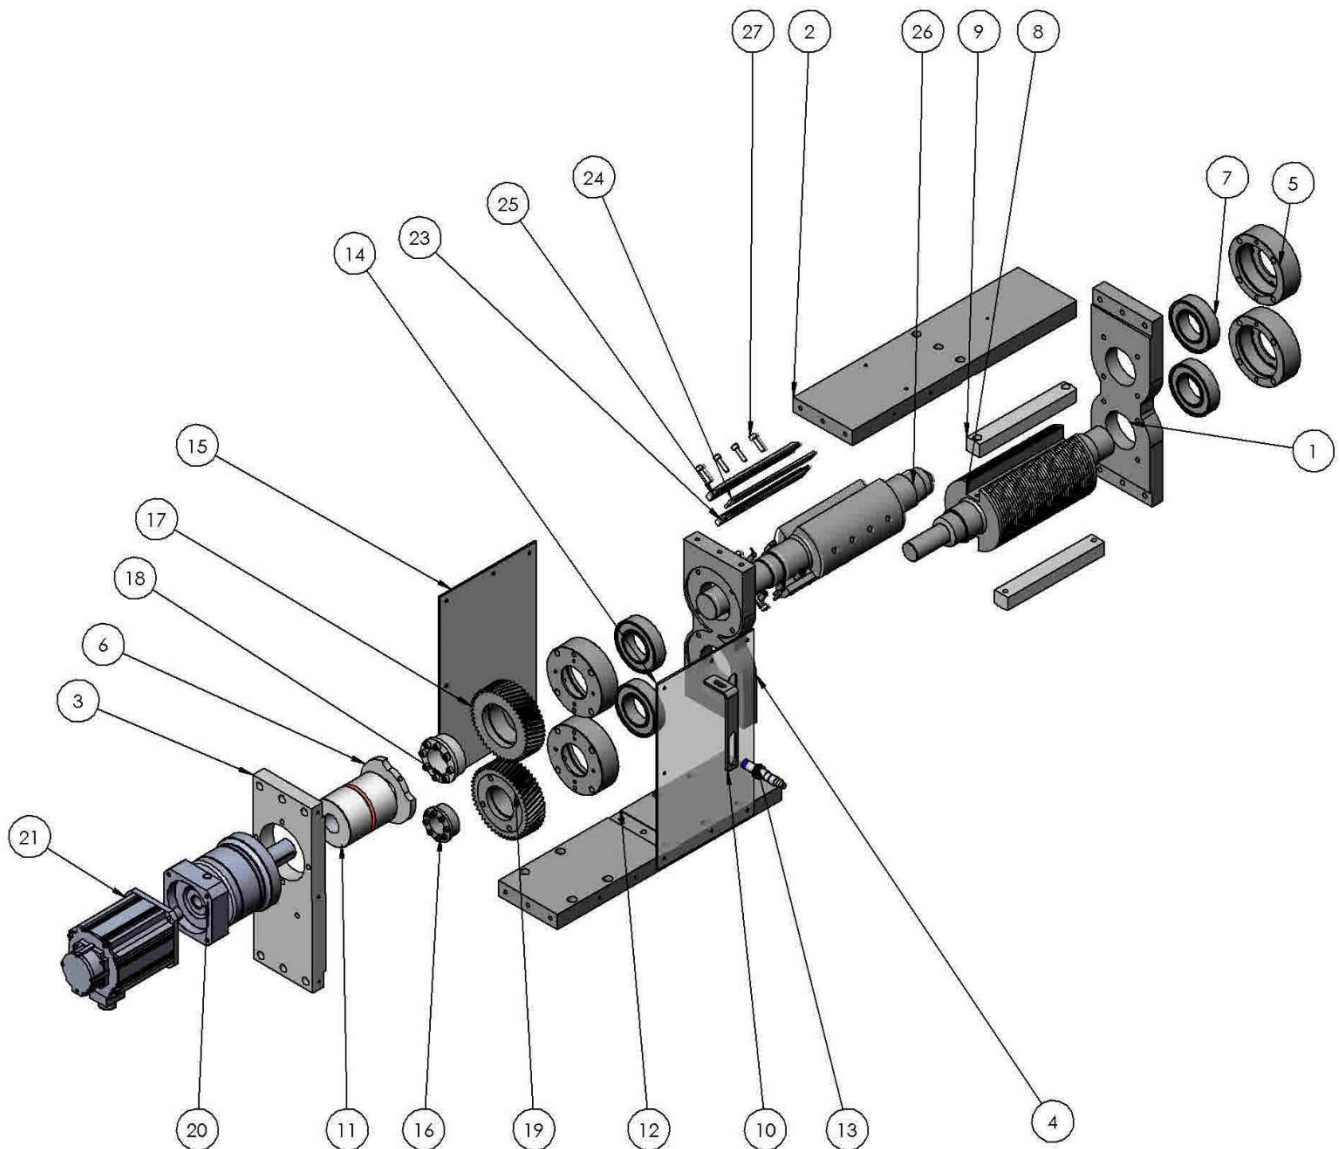

PRODUCT CUT MODULE

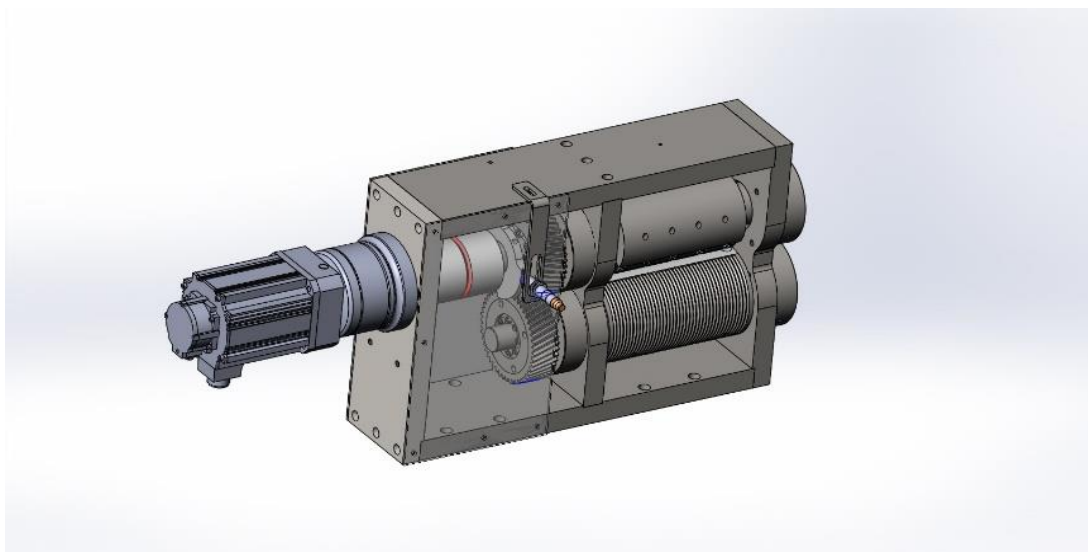


COMPONENT NO	EXPLANATION	QUANTITY
1	CUTTING CASSETTE TOP SHEET	1
2	CUTTING CASSETTE TOP SHEET	1
3	CUTTING CASSETTE REAR SHEET	1
4	188*40*440mm 304 CUTTING CASSETTE FRONT SHEET	1
5	CUTTING ROLL ROLLER BEARING	4
6	22212 E BEARING	4
7	188*40*376mm 304 CUTTING CASSETTE INTERMEDIATE SHEET	1
8	KTR-GS24 COUPLING	1
9	FLANGE	1
10	R88M_K5K020F_S2	1
11	CTL350F-40 TAPER CLAMPING BUSH	1
12	CTL 350F-55 TAPER CLAMPING	1
13	CUTTING UNIT STORAGE SHEET	2
14	CUTTING UNIT STORAGE GLASS	1
15	REDUCER PEI 155-004 (OMRON R88M-K5K020F)	1

QUICKSTACK 12

16	Metric - LH Helical gear 4M 40T 17.75HA 20PA 50FW ---40N75H50L20.0N	1
17	Metric - RH Helical gear 4M 40T 17.75HA 20PA 50FW ---40N75H50L20.0N	1
18	LOWER KNIFE ROLLER DELRIN GEAR CENTER	1
19	Ø170*530mm 304 LOWER CUTTING ROLLER	1
20	LOWER CUTTING PART	2
21	TOP CUTTING ROLLER-RIGHT (Ø168)	1
22	3 DEGREES THE HELICAL BLADE LOWER HOLDER PART	2
23	3 DEGREES THE HELICAL BLADE TOP HOLDER PART	2
24	440M-THE HELICAL VISUAL	2
25	M8 x 20 HEXOGANE SOCKET HEAD STAINLESS	10
26	DIN 6325 Ø3X16 FLAT DEDECTION PIN	6
27	KNIFE BOLT ADJUSTMENT PART	2
28		8
29	M10 HEXAGON NUT	8
30		8
31	M10 WASHER STAINLESS	8
32	M10 SPRING WASHER STAINLESS	8
33	CUTTING CASSETTE STORAGE SHEET	1
34	CUTTING CASSETTE STORAGE SHEET	1
35	CUTTING CASSETTE FLANGE CONNECTION PART	1
36	SICK IME18-05BPOZC0S-Bestell-Nr.10409381	1
37	SICK Mutter M18x1	2
38	DIAMETER 40 x M8 BAKALITE	1


PRODUCT CARRIER CONVEYOR MODULE

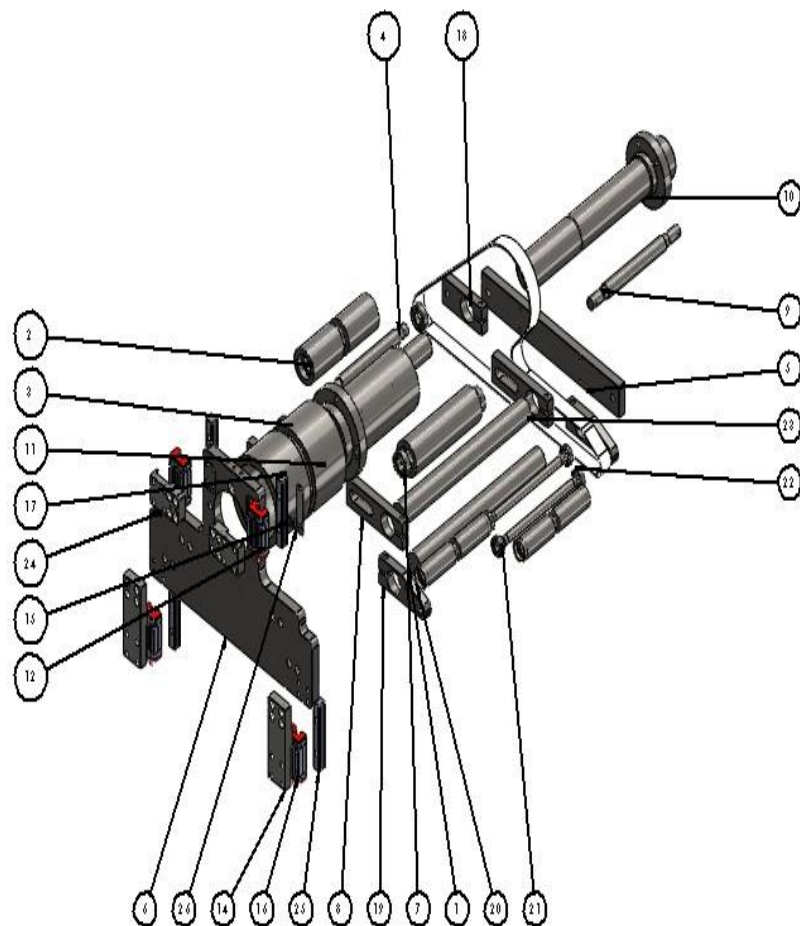

PRODUCT CARRIER CONVEYOR MODULE BOBBIN PART

COMPENENET NO	EXPLANATION	QUANTITY
1	CARRIER CONVEYOR CONNECTION SHAFT	3
2	CARRIER CONVEYOR WANDERER ROLLER	1
3	SS6004 ZZ BEARING CHROME	4
4	CARRIER CONVEYOR WANDERER TENSION SHAFT	1
5	CARRIER CONVEYOR SIDE PART	1
6	TOP CARRIER CONVEYOR CONNECTION SHEET	1
7	CARRIER CONVEYOR WANDERER ROLLER	1
8	CARRIER CONVEYOR WANDERER CLAMP	2
9	CARRIER CONVEYOR WANDERER TENSION SHAFT	1
10	CARRIER ROLLER SHAFT	1
11	CARRIER CONVEYOR ROLLER ROLLER BEARING	1
12	CARRIER CONVEYOR ROLLER	1
13	SS 6012 2RS BEARING	2
14	TOP CARRIER CONVEYOR SLIDE CONNECTION PART	2
15	TOP CARRIER VERTICAL ADJUSTMENT INDICATOR	1
16	HGH 20 CA LINEER CARRIAGE HIWIN	4
17	CARRIER CONVEYOR WANDERER CLAMP	1
18	CARRIER CONVEYOR WANDERER CLAMP	1
19	55*25*153mm 304 CARRIER CONVEYOR SHORT WANDERER CLAMP	2
20	LAST OUTPUT CONVEYOR WANDERER PIPE	2
21	LAST OUTPUT CONVEYOR TENSION WANDERER SHAFT	2
22	SS 6002 ZZ (CHROME) BEARING	4
23	KD2WH1301 30X1523mm FITILLI K10 LOWER MEDIUM CONVEYOR BELTS RULTRANS	1
24	CARRIER CONVEYOR CARRIAGE CONNECTION PART	2
25	HGR 20 LIK LINEER SLIDE HIWIN BOY 120 MM (UC 30 MM)	4
26	87,5*20mm BLACK ANODIZING ALUMINUM STICKER TOP CONVEYOR SCHEDULE	1

BOBBIN MODULE

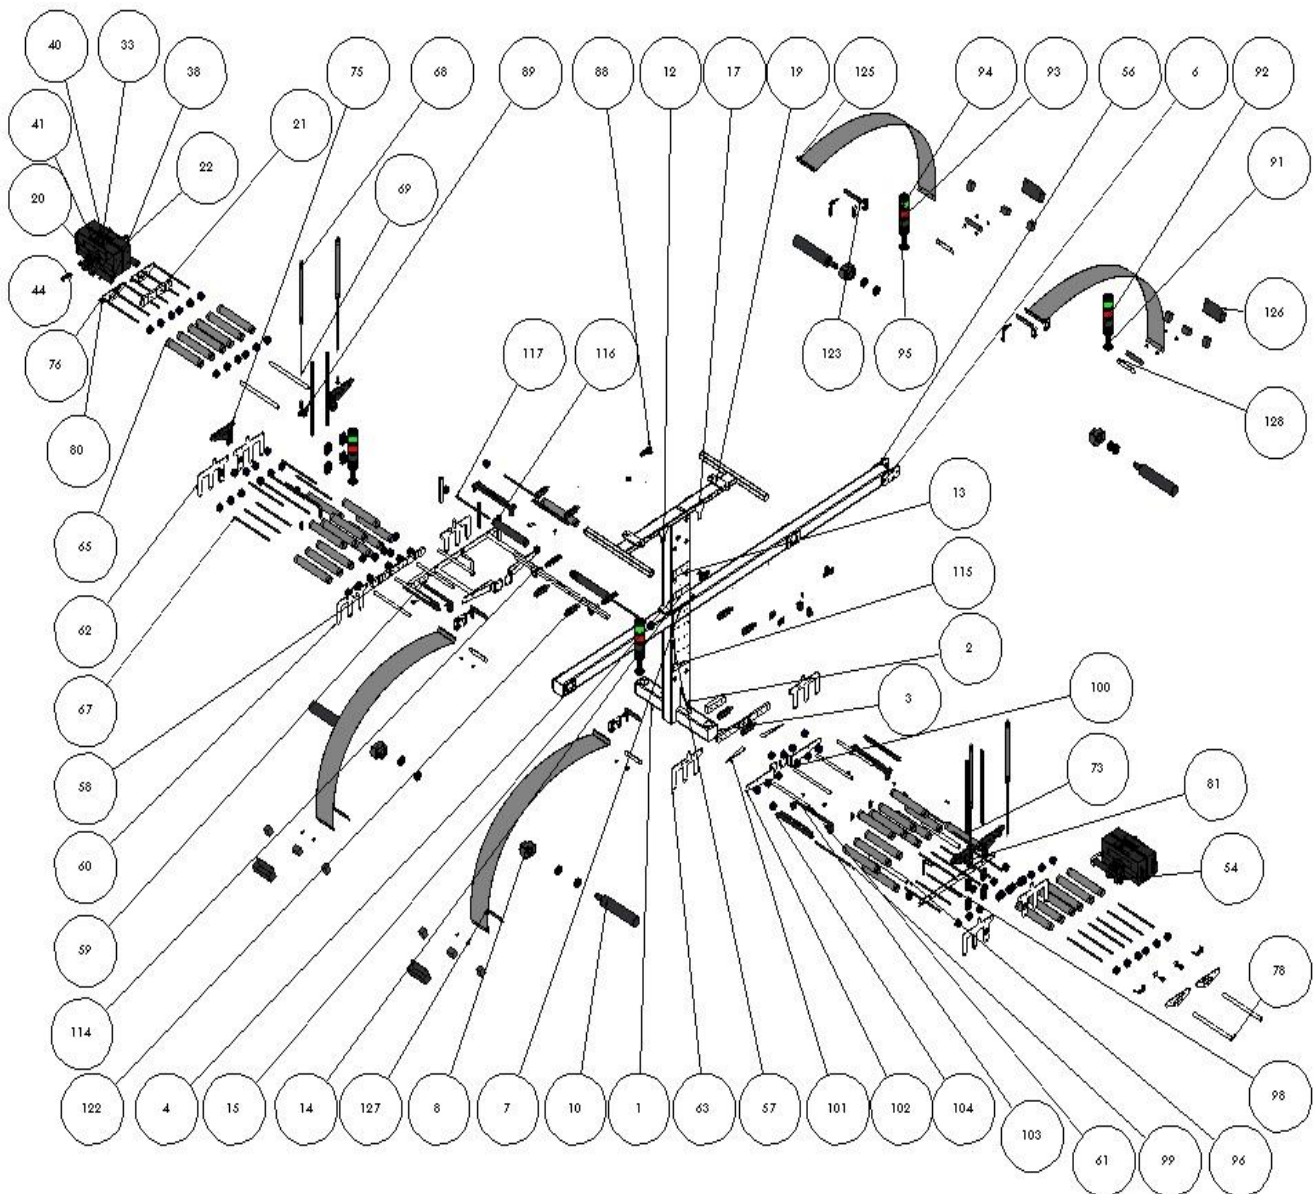

QUICKSTACK 12

ÖĞE NO.	PARÇA NUMARASI	MİKT.
1	REAR BOBBIN MIDDLE STAND CHASSIS	1
2	LZR 120*120*10mm ST37 SENSOR LOWER SUPPORT FLAG	2
3	LZR 92*92*5mm ST37 PROFILE COVER	4
4	LZR 130*84*10mm DKP CHASSIS BOBBIN SHAFT CONNECTION SHEET	4
5	CHASSIS SCALES ADJUSTMENT HEXAGONAL NUG	2
6	LZR 92*84*5mm ST37 BOBBIN STAND CHASSIS WELDING SHEET	2
7	LZR 300*100*5mm ST37 SPLICE CONNECTION PROFILE WELDING PART	1
8	CODI-BOBBIN SHAFT ROLLER BEARING	4
9	6007 2RS BEARING METAL	8
10	BOBBIN SHAFT	4
11	1,8-6 ROTARY ELBOW WITH BEARING (153411) FESTO	4
12	MIDDLE COIL TOP STAND –WITHOUT WELDING	1
13	LZR 184*58*5mm ST37 SPLICE CHASSIS WELDING SHEET	2
14	LZR 184*47*5mm ST37 SPLICE LOWER WENDERING CONNECTION WELDING SHEET	2
15	LZR 300*100*10mm ST37 SPLICE CONNECTION PROFILE SHEET	1
16	LZR 36*36*4mm ST37 PROFILE CLOSING SHEET	4
17	PISTON T CONNECTION PART WITH WELDING	4
18	SPLICE TOP WENDERING CHASSIS WELDING SHEET	1
19	SPLICE TOP COLUMN WELDING SHEET	2
20	Ø45*292mm 304 SPLICE GROUP CONNECTION FIXED SHAFT	4
21	60*25*320mm COLD PULL CHASIS CONNECTION PART	2
22	SPLICE MOVEMENT CONNECTION PART-1	1
23	55*55*50mm ALUMINYUM 6063 T6 SPLICE STOPPER WEDGE	4
24	Ø45*40mm DELRIN SPLICE MOVEMENT WEDGE BEARINGS BUSH	8
25	35*15*65mm 304 SPLICE LOCK CONNECTION WEDGE	4
26	90*85*115mm ALUMINYUM 6063 T6 SPLICE CONNECTION WEDGE 2	2
27	45*15*355mm ALUMINYUM 6063 T6 SPLICE ROLLER CONNECTION	4
28	45*15*76mm ALUMINYUM 6063 T6 SPLICE SIDE CONNECTION WEDGE	8
29	Ø20*350mm ALUMINYUM 6063 T6 SPLICE ROLLER SHAFT	4
30	Ø48*5*335mm 304 OTOMATİK SPLICE TIRE ROLLER	4
31	6203 RADIAL CONTACT BALL	8
32	LZR 150*95,55*1mm 304 SPLICE WIPES COMPRESSION SHEET (Ra 0,8)	8
33	LZR 150*95,55*1mm 304 SPLICE WIPES COMPRESSION SHEET (Ra 0,8)	4
34	Ø5*35mm 304 SPLICE COMPRESSION SHHET PIN	8
35	15*15*25mm 304 SPLICE COMPRESSION SHEET CONNECTION PIN WEDGE RIGHT	4
36	LZR 107*15*5mm 304 SPLICE COVER HANDLE FIXING SHEET	4
37	15*15*25mm 304 SPLICE COMPRESSION SHEET CONNECTION PIN WEDGE LEFT	4
38	LZR 604*292,8*1,5mm 304 SPLICE TOP CLOSING SHEET (LARGE) (Ra 0,8)	4
39	LZR 399*90,5*1,5mm 304 SPLICE LOWER CLOSING SHEET Ra 0,8	4

QUICKSTACK 12

40	LZR 250*50*5mm 304 COVER SHEET SUPPORT WEDGE	4
41	COVER SHEET SUPPORT WEDGE 2-	2
42	SPLICE ROLLER CONNECTION WEDGE SLOTTED(AIRTAC)	2
43	LZR SPLICE COVER SUPPORT SHEET WEDGE	2
44	ELASA GANTER M 443 110 EH 5 (37037)	8
45	M6 1 NO KELEBEK BURCLU BAKALIT	4
46	DISØ:9,5mm TELØ:1,2mm BOY:18,4mm MALZEME:B KALITE YAYLIK TEL	4
47	M6*40 HEXAGON BOLT INOX	4
48	M6 HEXAGON NUT STAINLESS	4
49	_TC-M-25x2020_b	2
50	_TCM-25x20-0_20fp	2
51	rekor1	4
52	PISTON TOP CONNECTION SHEET	2
53	M5 x 10 HEX SOCKET CTSK HEAD STAINLESS	8
54	M5 SPRING WASHER 304	1
55	SPLICE HAREKETLİ BAĞLANTI TAKOZU	1
56	M10 WASHER STAINLESS	1
57	M10 SPRING WASHER	1
58	M10 x 45 HEXAGON SCREW GRADE STAINLESS	1
59	Ø1500-300MM BOBİN	4
60	184*84*10mm ST37 BOBBIN STAND CHASSIS CONNECTION PART	2
61	LZR 471*184*5mm ST37 BOBBIN STAND UNDER SLIDE CHASSIS CONNECTION SHEET	2
62	STORAGE BATTERY GROUP CHASSIS CONNECTION WEDGE	2
63	55*35*190mm ST37 STORAGE BATTERY WANDERING CHASSIS WELDING WEDGE	2
64	STORAGE BATTERY WANDERING CHASSIS CONNECTION SHEET	2
65	STORAGE BATTERY GROUP INTERMEDIATE SHAFT	8
66	STORAGE BATTERY WANDERING CONNECTION SHEET	4
67	STORAGE BATTERY WANDERING CHASSIS CONNECTION SHEET LEFT	2
68	STORAGE BATTERY LOCK PASSING WEDGE	4
69	Ø63*15*360mm PVC SPLICE TOP PASSING WANDERING PIPE	36
70	50*1,5mm BLUE PLASTIC ROLL CAP KTR 3.010.50.1	76
71	Ø12*385mm 304 SPLICE WANDERING SHAFT	20
72	_35193 DSNU-25-400-PPV---(A---0-ZR)	4
73	_35193 DSNU-25-400-PPV---(A---00--0-KS)	4
74	_DIN-439-B - M10x1.25(F)	4
75	SGS M10X1,25 ROD EYE 9261) DANA GOZU FESTO-08.06.18	4
76	PISTON CONNECTION PIN	4
77	HGR 20 LİK LINEER SLIDE HIWIN	4
78	HGH 20 CA LINEER CARRIAGE HIWIN	8
79	STORAGE BATTERY MOVEMENT CARRIAGE CONNECTION PART	2



QUICKSTACK 12

80	STORAGE BATTERY MOVEMENT WANDERING CONNECTION SHEET	4
81	STORAGE BATTERY LOCK WEDGE	4
82	STORAGE BATTERY MOVEMENT GROUP INTERMEDIATE SUPPORT SHAFT	4
83	STORAGE BATTERY PISTON CONNECTION PIN	4
84	STORAGE BATTERY WANDERING SHAFT-1-29.07.19	12
85	STORAGE BATTERY MOVEMENT CARRIAGE CONNECTION WEDGE LEFT	2
86	GRA-1,4-B B90HIZ ADJUSTMENT VALVE FESTO	2
87	153475_HE-3-QS-6	2
88	BUTTON	2
89	58x48x1mm SPLICE BUTTON STICKER	2
90	M5 LENTIL HEAD BOLT	4
91	XB4BD21 switch	4
92	BOBBIN SHAFT BUTTIN STICKER-RIGHT	2
93	BOBBIN SHAFT BUTTIN STICKER-LEFT	2
94	SPLICE STORAGE BATTERY PISTON CONNECTION WASHER	4
95	TELEMECANIQUE XVBZ02	4
96	TELEMECANIQUE XVBC21 24DC	4
97	TELEMECANIQUE XVBC9B 24DC	4
98	TELEMECANIQUE XVBC34 24DC	4
99	TELEMECANIQUE XVBC33 24DC	4
100	Ø30*405mm SOGUK CEKME BOBBIN STAND LOWER WANDERING SHAFT	4
101	244*20*5mm ST37 SPLICE LOWER WANDERING	2
102	BOBBIN STAND LOWER WANDERING SUPPORT	2
103	AFTER SPLICE WANDERING SHAFT	4
104	BOBBIN STAND LOWER WANDERING CONNECTION SHEET-RIGHT	2
105	BOBBIN STAND LOWER WANDERING SHEET	4
106	BOBBIN STAND LOWER WANDERING CONNECTION SHEET LEFT	2
107	BOBBIN STAND SENSOR SHEET FIXED	4
108	BOBBIN STAND SENSOR SHEET MOVEMENT	4
109	30004389 E3Z_LS61	4
110	ÇAP 40 x M8 BAKELITE	20
111	BOBBIN STAND SENSOR SHEET	4
112	_1231865 VUVS-L20-52 HOUSING---(H---0_-)	8
113	_1519974 VUVS-L20-G-COVER52---(H---0_A)	8
114	_1537853 F-M3x35-10.9	32
115	_1670876 VUVS-L20-G-COVER53---(H---0_-)	8
116	HI_1528770 VACS-C-C1-1	8
117	HI_2197345 VACS-C-C1	8
118	SPLICE MIDDLE TOP WANDERING CONNECTION WEDGE	1
119	WANDERING HOLDER WEDGE	4
120	Ø63*15*350mm PVC SPLICE LOWER WANDERING PIPE	2
121	Ø12*375mm 304 SPLICE LOWER WANDERING SHAFT	2

QUICKSTACK 12

122	SENSOR PROTECTION BUSH	2
123	_SICK VTE18-4N4240-Order no.6013254_1	2
124	_SICK VTE18-4N4240-Order no.6013254_2	2
125	SENSOR PROTECTION NUT	4
126	BOBBIN SENSOR CONNECTION SHEET	2
127	180*30*5mm ST37 BOBIN BELT CONNECTION SHEET	4
128	40*40*65mm BOBBIN BREAKING WEIGHT WEDGE	12
129	KD2WH1301 180x1835mm CONVEYOR BELT	4
130	290*206*1,5mm ST37 BOBBIN HOOK SHEET	4
131	LZR 180*30*5mm ST37 BOBIN BELT HOLDER SHEET GUIDE	4
132	180*30*5mm ST37 BOBIN BELT HOLDING PLATE	4
133	50*25*80mm BOBBIN BELT MOVEMENT WEDGE	4
134	30*30*80mm BOBBIN BELT MOVEMENT WEDGE	4
135	M10X50mm BOLTED HANDLE	4
136	QSL-1,4-6 REKOR (153047) FESTO	2
137	30014725-QS-1,4-6 DUZ REKOR (153003) FESTO	2

BOBBIN CONVEYOR DRIVE MODULE

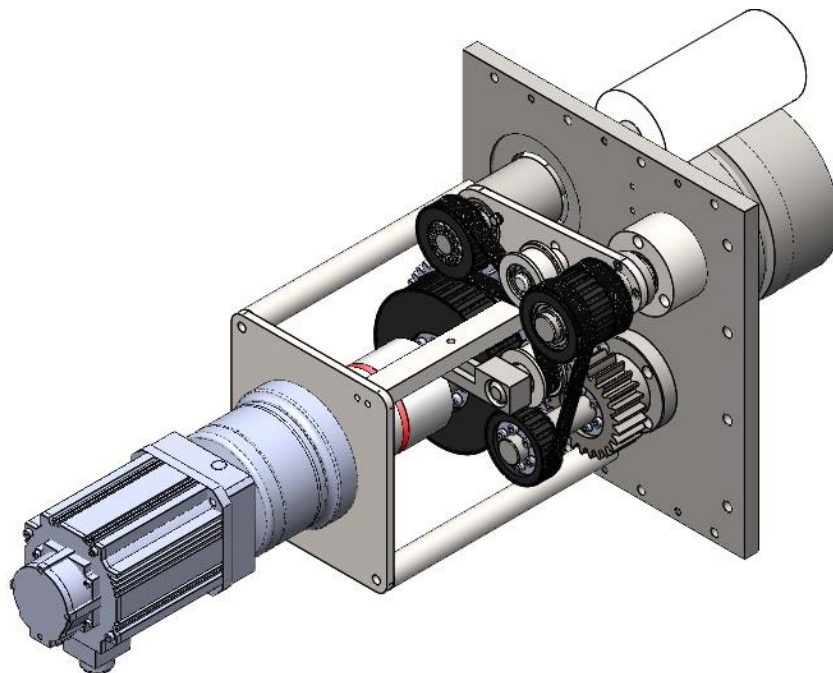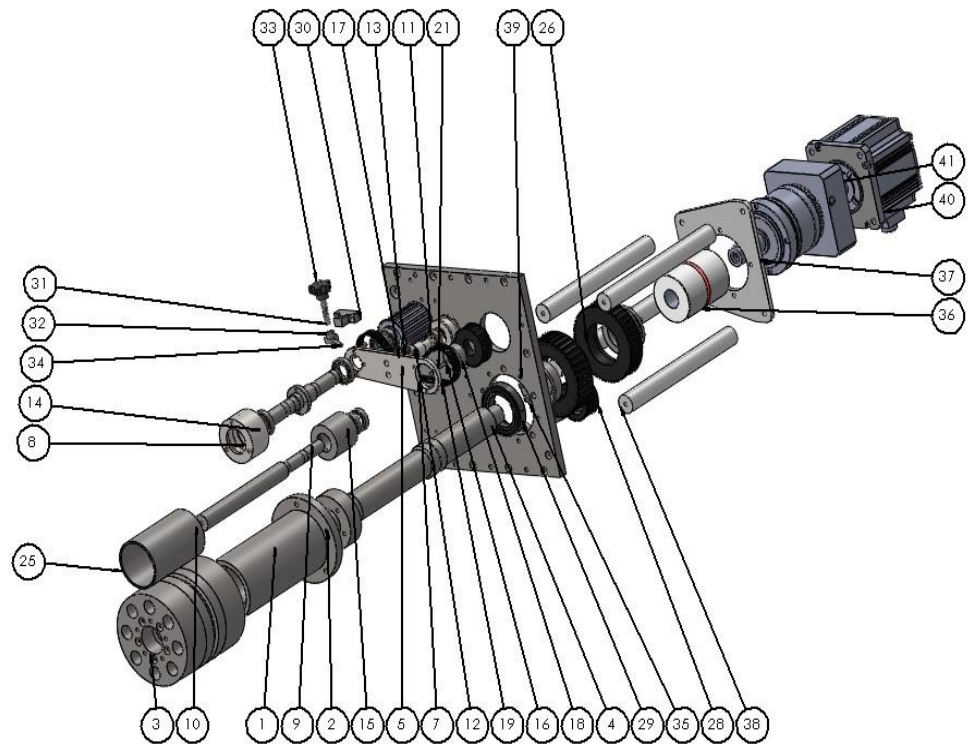


BOBBIN CONVEYOR DRIVE MODULE


COMPONENT NO.	EXPLANATION	QUANTITY
1	Ø190*315mm 304 DRIVE MODULE TOWING ROLLER BUCKET	1
2	MAIN DRIVE MODULE TOWING ROLLER SHAFT	1
3	Ø200*205mm 304 MAIN DRIVE MODULE TOWING ROLLER	1
4	SS6014 2RS BEARING CHROME	2
5	410*25*440mm 304 MAINDRIVE MODULE CONNECTION PART RIGHT	1
6	TOWING ROLLER CONNECTION SHAFT	1
7	FOLDING LOWER TOWING SHEET	1
8	ROLLER BEARINGS	1
9	PRODUCT OUTPUT CONVEYOR BELT STRAP CONNECTION ROLLER ROLLER BEARINGS	1
10	ÇEKİCİ MİLİ	1
11	MOVING TRANSFER BELT TENSION PULLEYS BODDY	1
12	MOVING TRANSFER BELT TENSION PULLEYS SHAFT	1
13	6004 ZZ (METAL) BEARING	2
14	6006 RADIAL CONTACT BALL BEARING	6
15	6005 ZZ RADIAL CONTACT BALL BEARING	2
16	CL 25 CAPTLOCK	1
17	B20 TIMING GEAR	1
18	B20H100F TIMING GEAR	1
19	270HX20 MM TIMING BELT	1
20	M6 x 15 HEXAGON SOCKET HEAD	4
21	M6 x 20 HEXAGON SCREW GRADE	3
22	M6 SPRING WASHER	3
23	M6 WASHER	3
24	STOPPER	1
25	DELTRIN HAUL	1
26	40 COG H MODULE TRIGER GEAR EN 35 CTL 350F CONIC TIGHTTENING	1
27	TENSION ASSEMBLY	1
28	B20 TIMING GEAR	1

QUICKSTACK 12

29	MAIN DRIVE TRIGER CONNCETION WEDGE	1
30	60*20*45mm 304 ATTRACTIVE ROLLER ADJUSTMENT GIGON CONNCETION WEDGE	1
31	ATTRACTIVE ROLLER ADJUSTMENT GIGON	1
32	Ø30*25mm 304 ATTRACTIVE ROLLER ADJUSTMENT GIGON NUT	1
33	VC.192_50 A-6 DISI ELESÁ GANTER	1
34	Ø10*50mm 304 ATTRACTIVE ROLLER FIXED SHAFT	1
35	CTL350F-60 TAPER TIGHTENING	2
36	KTR-GS24 COUPLING	1
37	SERVO FIXED SHEET	1
38	SERVO FIXED CONNECTION	4
39	CARRIER CONVEYOR MOVING TRANSFER GEAR	1
40	R88M_K5K020F_S2	1
41	REDUCER PEII 155-007 OMRON R88M-K5K020F	1

BOBBIN CONVEYOR PNEUMATIC TENSIONER MODULE

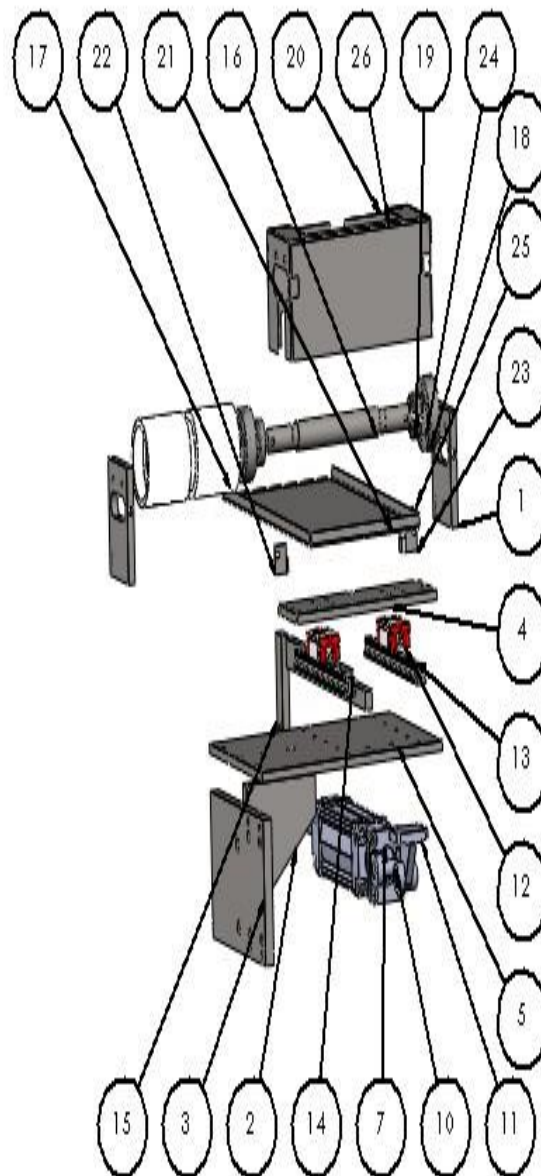

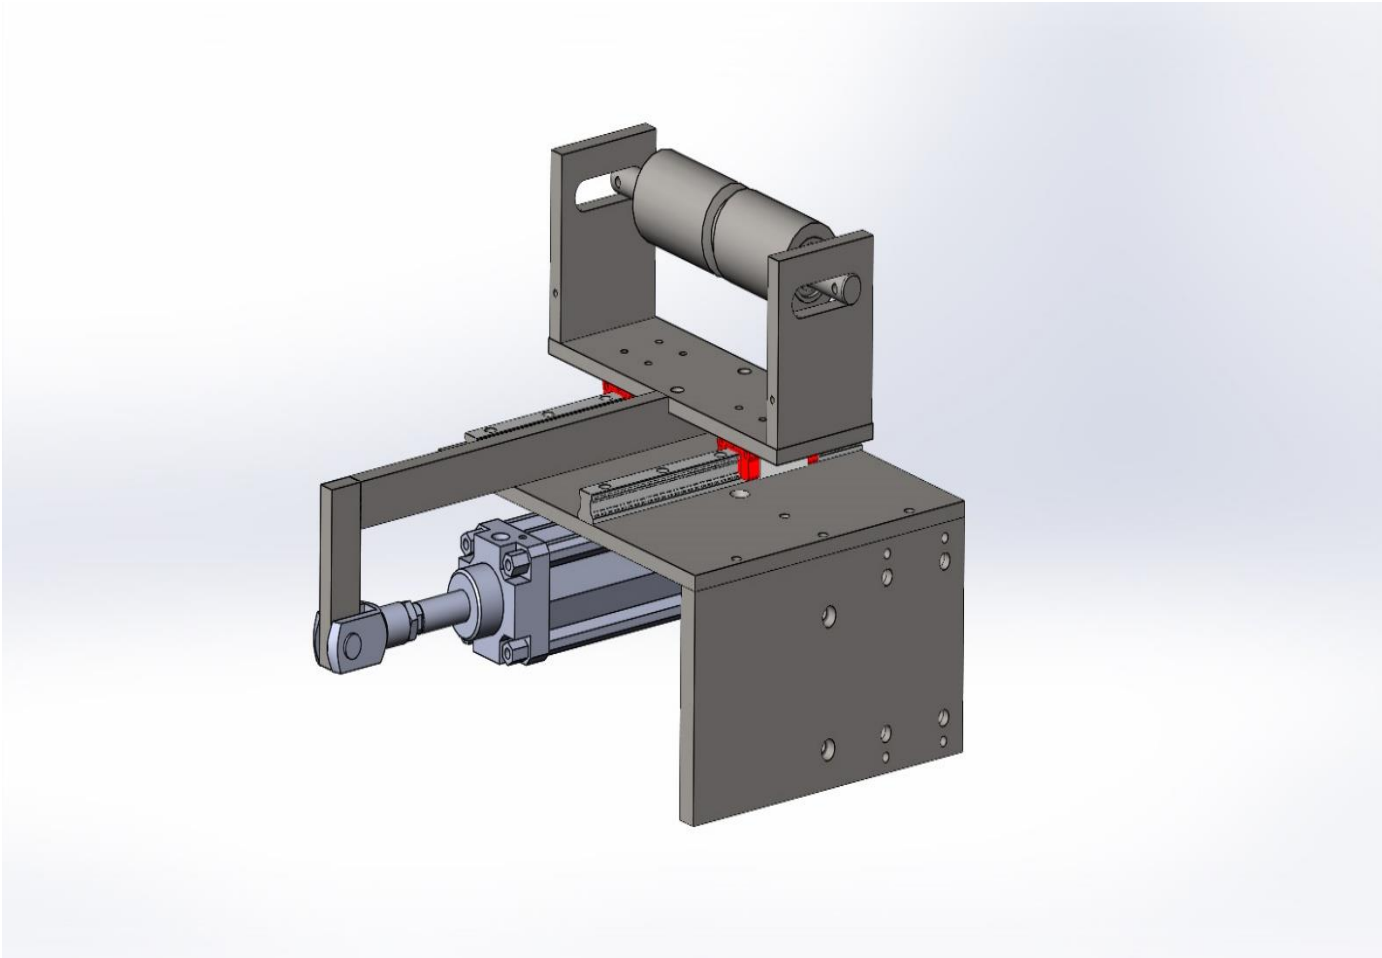


COMPENENT NO	EXPLANATION	QUANTITIY
1	REAR CARRIER BELT WANDERING CONNECTION PART	2
2	PNEUMATIC TENSION LOWER FEDER	1


QUICKSTACK 12

3	PNEUMATIC TENSION CHASSIS CONNECTION SHEET	1
4	REAR CARRIER BANT WANDERING CONNECTION PART	1
5	LZR 393*280*10mm 304 PNEUMATIC TENSION MAIN LOWER SHEET	1
6	CIM02_63_125	1
7	CIM01_63_125	1
8	1320_63_18F	1
9	1320_63_13F	1
10	1320_63_23F(A)	1
11	1320_63_23F(B)	1
12	BMWR 20 C G3V1 LINEER CARRIAGE	2
13	BMSR 20 ND L=1000 LINEER SLIDE SCHNEEBERGER	2
14	30*15*425mm 304 PNEUMATIC TENSION_1	1
15	30*15*120mm 304 PNEUMATIC TENSION_2	1
16	REAR CARRIER BANT WANDERING SHAFT	1
17	Ø100*205mm DELRIN PNEUMATIC TENSION WANDERING	1
18	Ø80*30mm 304 PNEUMATIC TENSION WANDERING COVER	2
19	SS 6005 RADIAL CONTACT BALL BEARING (STAINLESS)	2
20	KUNGH AB- PNEUMATIC TENSION STORAGE SHEET	1
21	LZR 503,1*264*1,5mm 304 TENSION PISTON SEALING SHEET	1
22	LZR 45*30*3mm 304 PNEUMATIC TENSION CONNECTION SHEET RIGHT	1
23	LZR 45*30*3mm 304 PNEUMATIC TENSION CONNECTION SHEET LEFT	1
24	M8 x 40 HEXAGON SCREW GRADE	1
25	M6 x 20 HEXAGON SCREW GRADE STAINLESS	1
26	PNEUMATIC TENSION STORAGE SHEET	1

PRESS MODULE AFTER FOLDING

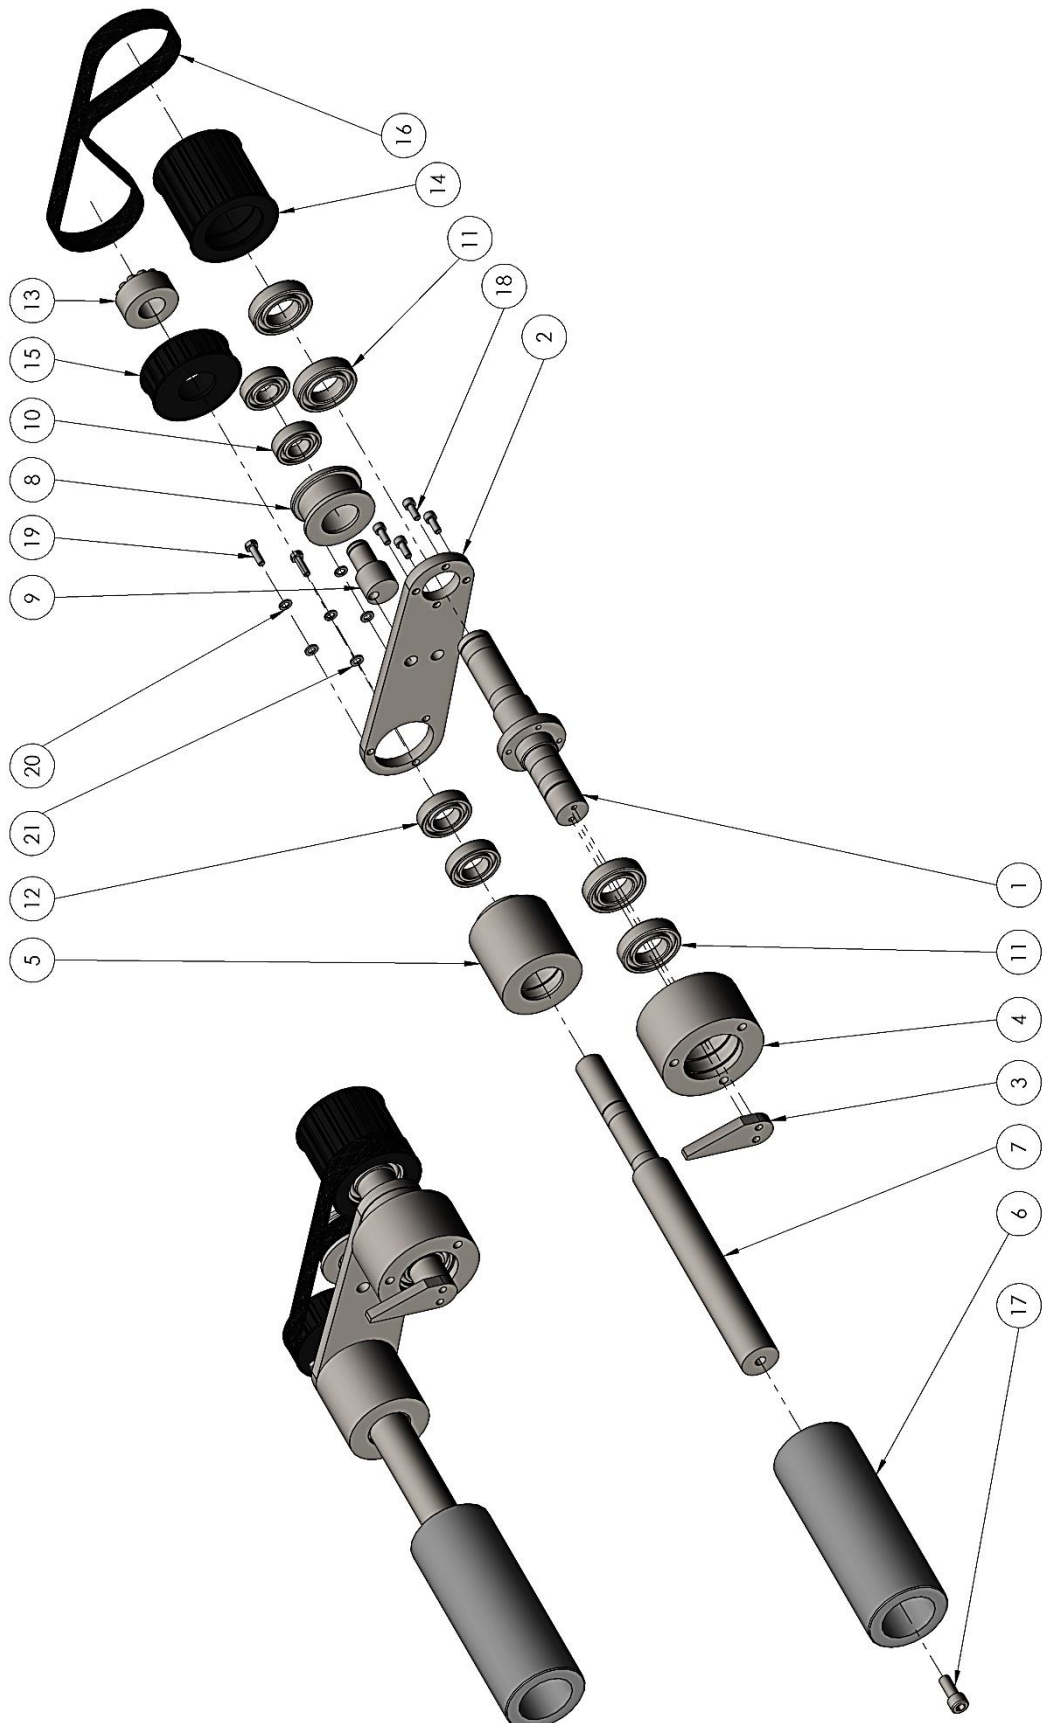


PRESS MODULE AFTER FOLDING

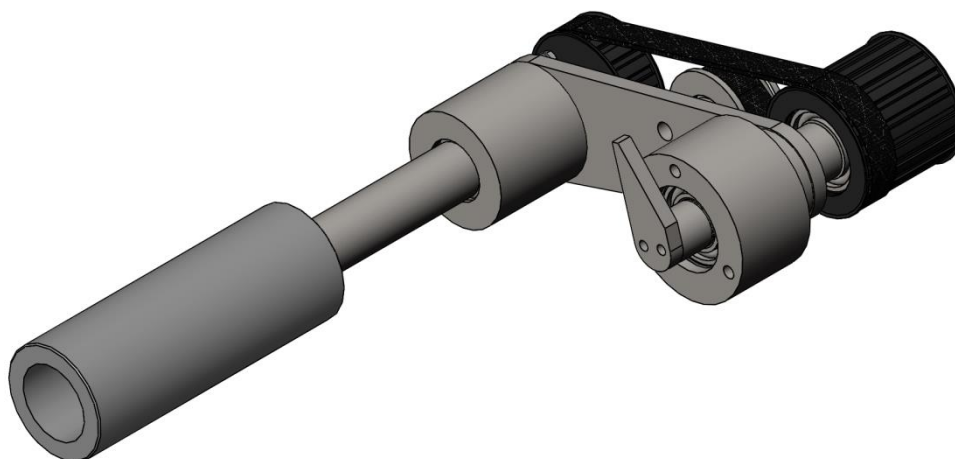


PART NO	DESCRIPTION	QUANTITY
0001	PULLER ROLLING CYLINDER CONNECTION SHAFT	1
0002	PULLING SHEET METAL UNDER FOLDING	1
0003	STOPPER	1
0004	BEARING HOUSE	1
0005	CONVEYOR BAND CONNECTION ROLLING CYLINDER BEARING HOUSE	1
0006	DELFIN PULLER	1
0007	PULLER SHAFT	1
0008	MOVEMENT TRANSFER BELT TENSIONER PULLEY BODY	1
0009	MOVEMENT TRANSFER BELT TENSIONER PULLEY SHAFT	1
0010	6004 ZZ BEARING	2
0011	6006 ZZ BEARING	4
0012	6005 ZZ BEARING	2
0013	CL 25 TAPERING	1
0014	B20 H150F TRIGGER GEAR	1
0015	B20 H100F TRIGGER GEAR	1
0016	270H EN20 TRIGGER GEAR	1
0017	M10 x 25 IMBUS BOLT	1
0018	M6 x 15 IMBUS BOLT	4
0019	M6 x 20 HEXAGON BOLTS	3
0020	M6 SPRING LOCK WASHER	3
0021	M6 WASHER	3

PRE-MOLD PRODUCT TURNING BAR GROUP

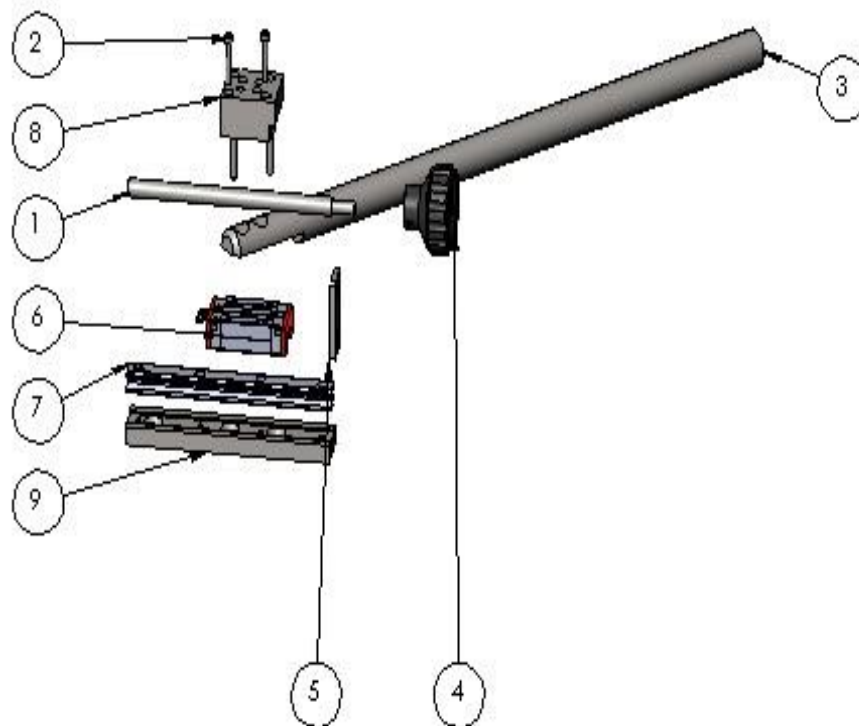

PART NO.	DESCRIPTION	QUANTITY.
1	DEFLECTOR GIGON	1
2	M5 x 35 HEXAGON SOCKET HEAD	4
3	DEFLECTOR SHAFT	1
4	WATCH NUMERATOR LSN3-10-68-25-I (LINPOTEK)	1
5	DEFLECTOR PART	1
6	HGH 20 CA LINEER CARRIAGE HIWIN	1
7	HGR20R2,000C-HiwinCorporation-03-29-2017	1
8	60*40*60mm 304 DEFLECTOR WEDGE	1
9	40*20*205mm 304 DEFLECTOR SLIDE CONNCETION PART	1


KATLAMA KALIBI

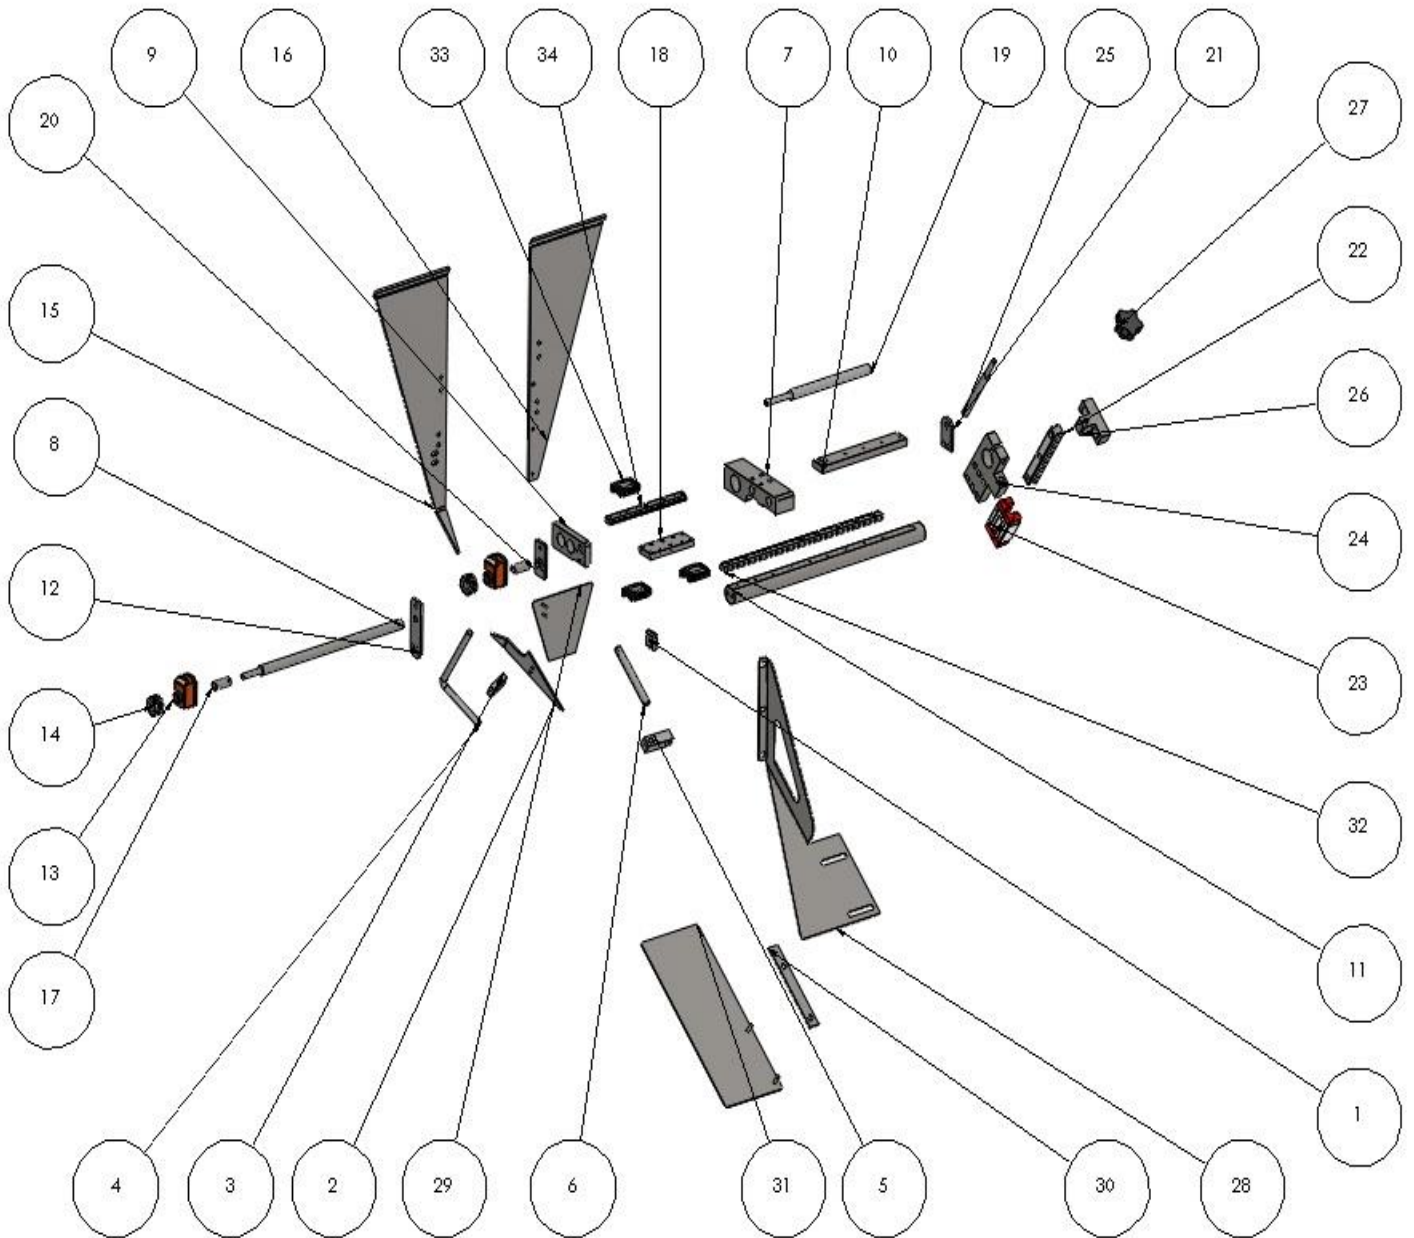

KATLAMA KALIBI

ÖĞE NO.	PARÇA NUMARASI
1	30*15*25mm 304 ANGLED SHEET CONNECTION WEDGE
2	FOLDING APPARATUS SIDE SHEET
3	FOLDING APPARATUS SHAFT CONNECTION PART
4	FOLDING APPARATUS SIDE SHEET PIN
5	FOLDING APPARATUS SHAFT CONNECTION WEDGE
6	FOLDING APPARATUS SIDE CONNECTION SHAFT
7	45*45*160mm 304 FOLDING MOLD MAIN CONNECTION WEDGE
8	MOVING GIGON
9	FOLDING CONNECTION CLAMP
10	FOLDING MOLD SLIDE CONNECTION PART
11	FOLDING MOLD CONNECTION SHAFT
12	FOLDING GIGON SHEET
13	MECHANICAL NUMARATOR
14	CE 85851 TURMETR FLYWHEEL
15	LZR 496,51*160,45*5mm 304 FOLDING MOLD SHEET RIGHT_1
16	LZR 416,31*160,45*5mm 304 FOLDING MOLD SHEET_2
17	Ø15*36mm 304 BAKELITE BUSH
18	40*15*100mm 304 FOLDING CARRIAGE CONNECTION PART
19	FOLDING APPARATUS ADJUSTMENT GIGON
20	FOLDING GIGON SHEET
21	LZR 52*30*5mm 304 MOLD LOWER GIGON STOPPER
22	BMSR 20 ND LINEER SLIDE (SCHNEEBERGER)
23	BMWR 20 C G3V1 LINEER CARRIAGE
24	FOLDING MOLD CARRIAGE CONNECTION WEDGE
25	FOLDING MOLD ADJUSTMENT TO HIGH GIGON
26	50*25*75mm 304 FOLDING MOLD ADJUSTMENT TO HIGH GIGON WEDGE
27	VC.192_50 A-6 DISI ELES A GANTER
28	MOLD ANGLED LOWER SHEET
29	LZR 131,42*111*2mm 304 MOLD SHEET LEFT (80mm KATLAMA)
30	LZR 154*20*3mm 304 MOLD SHEET
31	MOLD SHEET RIGHT
32	MR 15 LIK LINEER SLIDE CPC BOY 348 MM (HOLE AXIS 15-13MM)
33	MR 15 MN LINEER ARABA CPC
34	MR 15 LIK LINEER SLIDE CPC BOY 168 MM (HOLE AXIS 4 MM)

MOLD DIRECTING IDLE

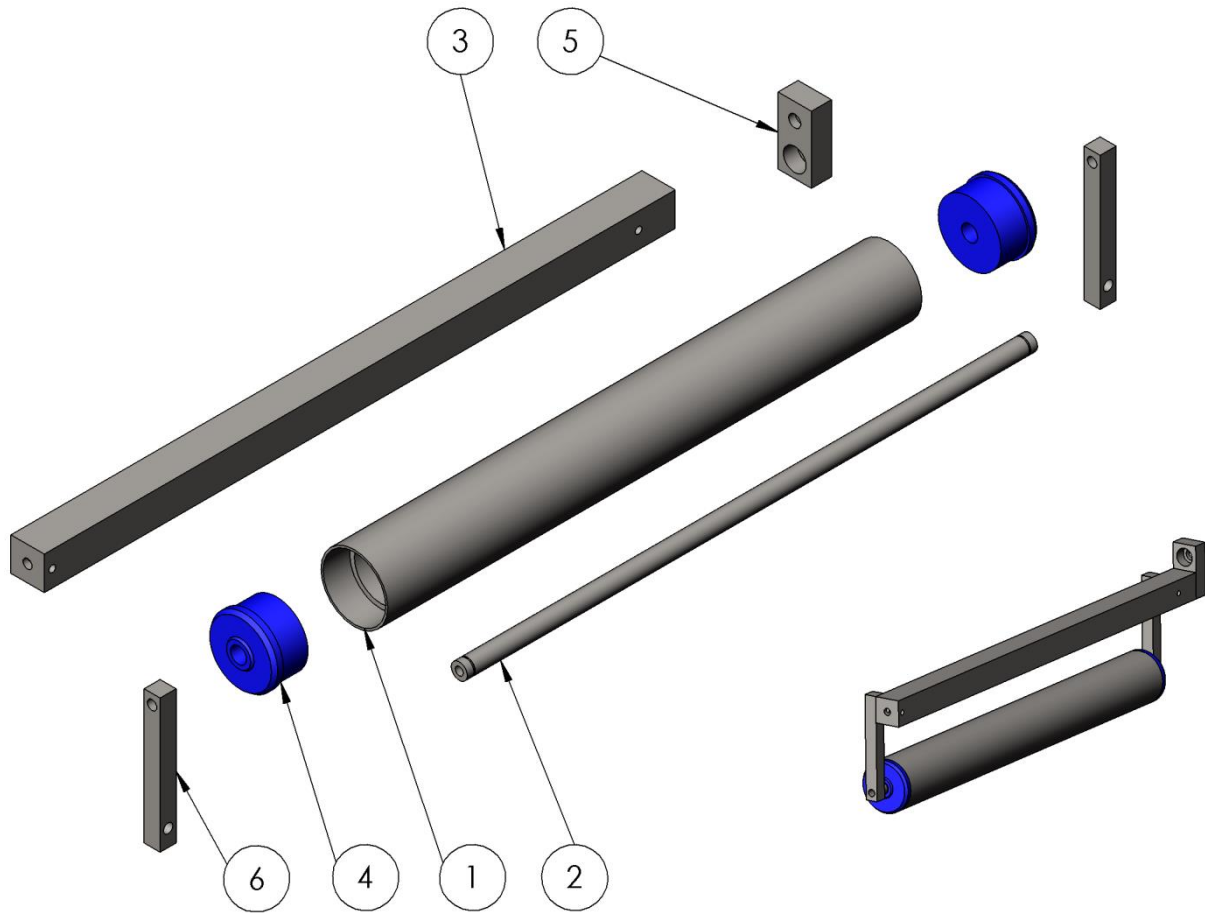

PART NO	EXPLANATION	QUANTITY
0001	FOLDING GROUP IDLE PIPE	1
0002	FOLDING GROUP IDLE SHAFT	1
0003	IDLE GROUP CONNECTING CHOCK	1
0004	KTR 50X1,5 PLASTIC ROLL CAP	2
0005	IDLE GROUP CHASIS CONNECTION COMPONENT	1
0006	IDLE CONNECTION SQUARE	2

QUICKSTACK 12

QUICKSTACK 12



Warning and Symbol Explanations



Compact
solutions
for wet wipe
production

GENERAL SECURITY WARNING

EXPLANATIONS OF WARNING STICKERS



- Warning not to interfere to the sensor.
- Determines the reference point of the sensor, does not go to the correct reference if the setting is broken and prevents the machine working correctly.
- Air hose connection warning.
- Solution hose connection warning.
- Warning indicating danger of hand-tightening.
- The warning that the moving wheels should not be approached.
- The warning indicating that moving rollers should not be approached.
- The warning which indicates trigger gear hand-tightening.
- The warning indicates the compressed air danger.
- Warning indicating danger of hand-tightening.



- It is a warning that during bobbin loading need to be careful.

GENERAL SECURITY WARNING

EXPLANATIONS OF WARNING STICKERS



- The warning indicates that the machine should not be touched during operation.



- The warning indicates that the panel should not be touched when the machine is running.



- The warning indicates there is energy on the line.



- It is a warning that no work should be done without reading the instruction manual.



- It is a warning that the machine should not be touched while it is running.



- It is a warning indicating the danger of collision.



- It is a warning that no work should be done without reading the instruction manual.


- It is a warning indicating the danger of collision.



- Warning indicating danger of hand-tightening between rollers.


GENERAL SECURITY WARNING

WARNING STICKER

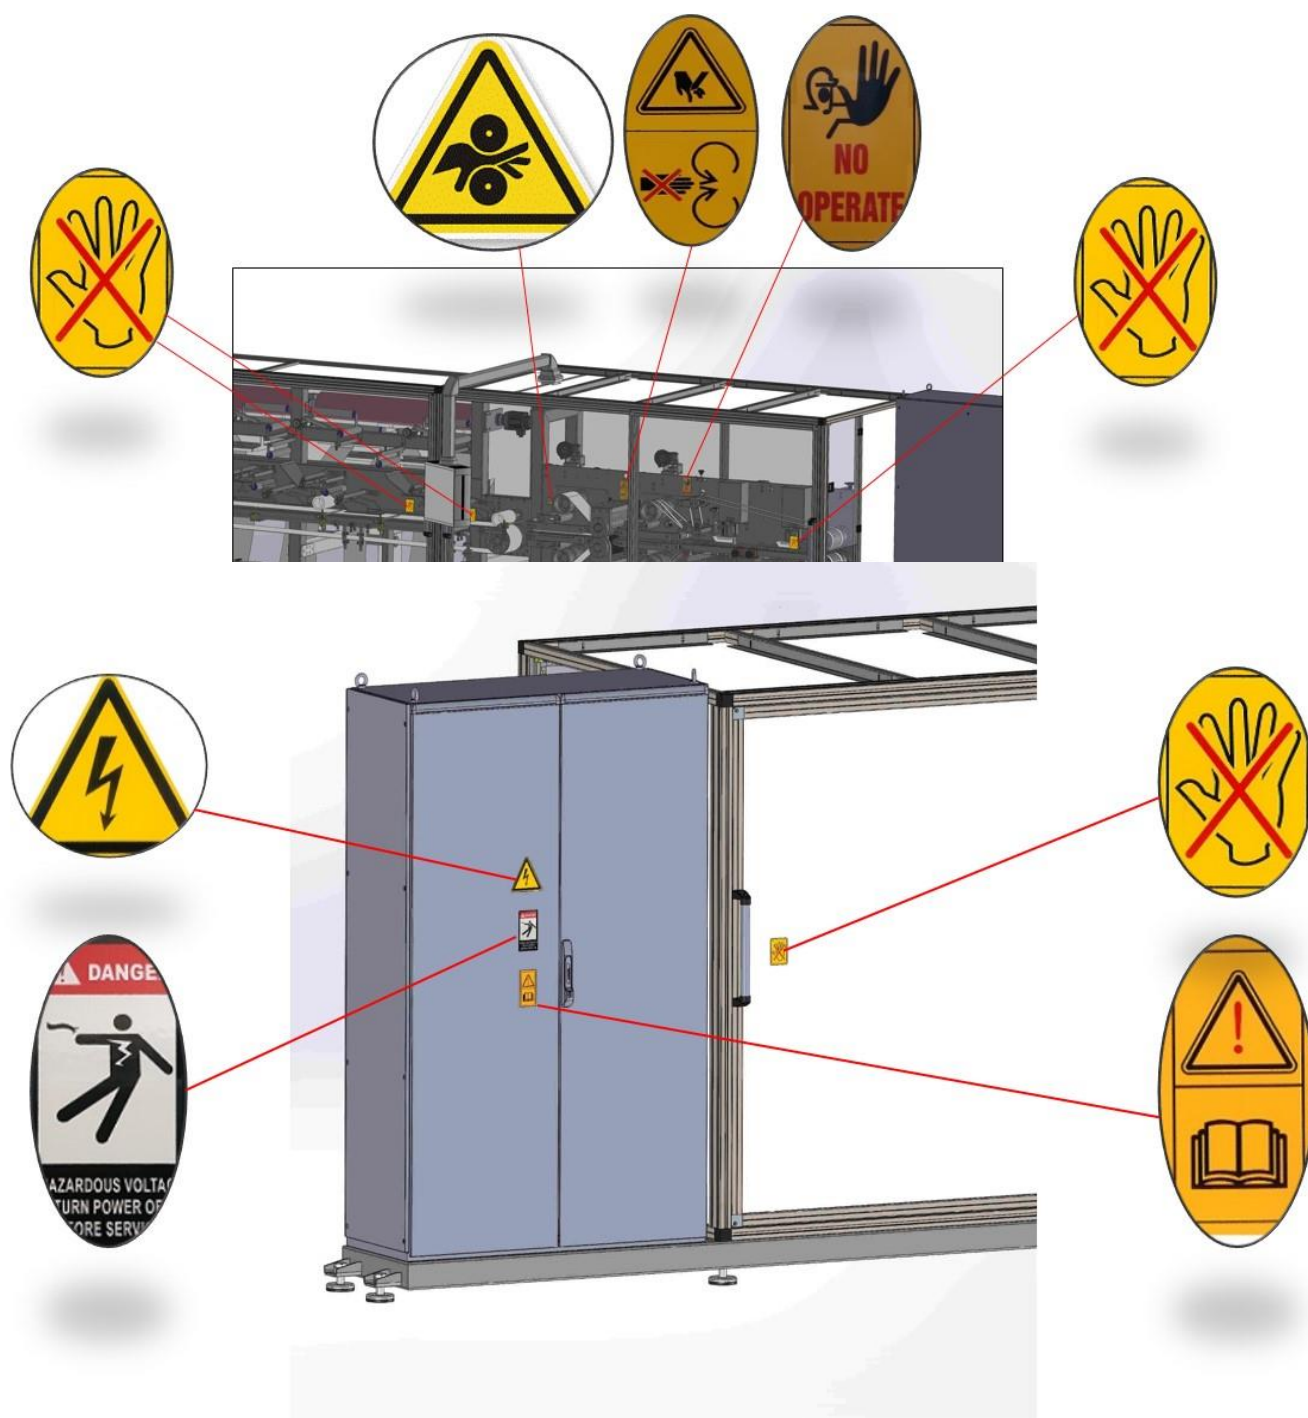

GENERAL SECURITY WARNING

WARNING STICKER

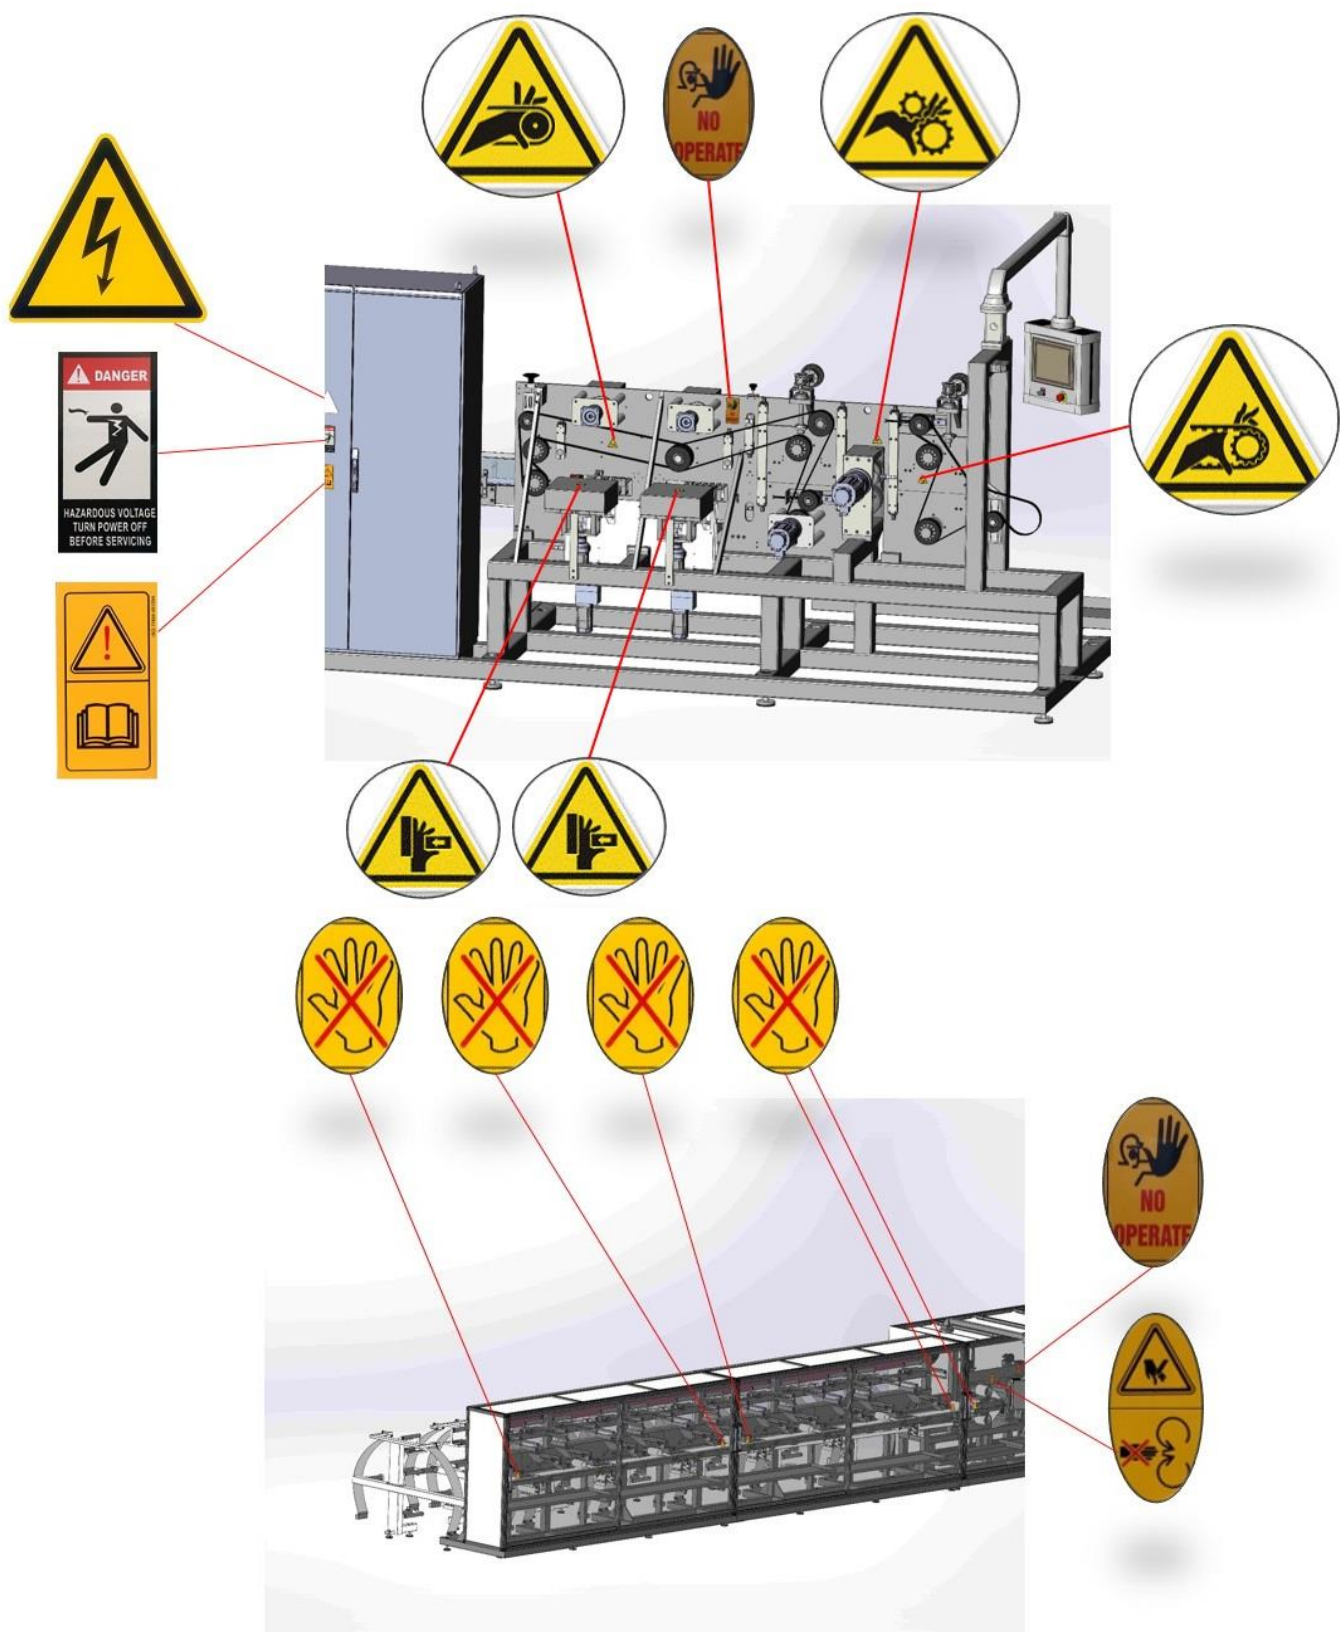

PRECAUTIONS REQUIRED TO TAKE BY OPERATOR



The operator must wear protective goggles before using the machine.



Accessories such as necklaces, rings, watches should not be worn.

It is necessary that the work clothes to be worn are not loose and that ID cards such as name badges can not be worn.

Non-slip footwear and rubber wristband clothes should be worn.



The operator shouldn't definitely use the machine with alcohol.



The operator should not operate the machine when the covers of the machine are open.

Safety switch and emergency stop connections and their locations must not be altered.



The operator must obey the general safety warnings on the machine and in the user manual.



Maintenance and Cleaning Instructions




Compact
solutions
for wet wipe
production

PRECAUTIONS TO BE PERFORMED BEFORE MAINTENANCE

- The operator should take his own safety precautions.
- Accessories such as necklaces, rings, watches should not be worn.
- It is necessary that the work clothes to be worn are not loose and that ID cards such as name badges can not be worn.
- Non-slip footwear and rubber wristband clothes should be worn.
- Air and electricity must be cut to secure the machine.
- All mechanical adjustments must be recorded even if they change during maintenance.
- For maintaining, equipments, suitable for the area, must be selected and intervened.
- If a malfunction is detected during maintenance, contact the authorized personnel or the manufacturer.

BEARING LUBRICATION INSTRUCTIONS

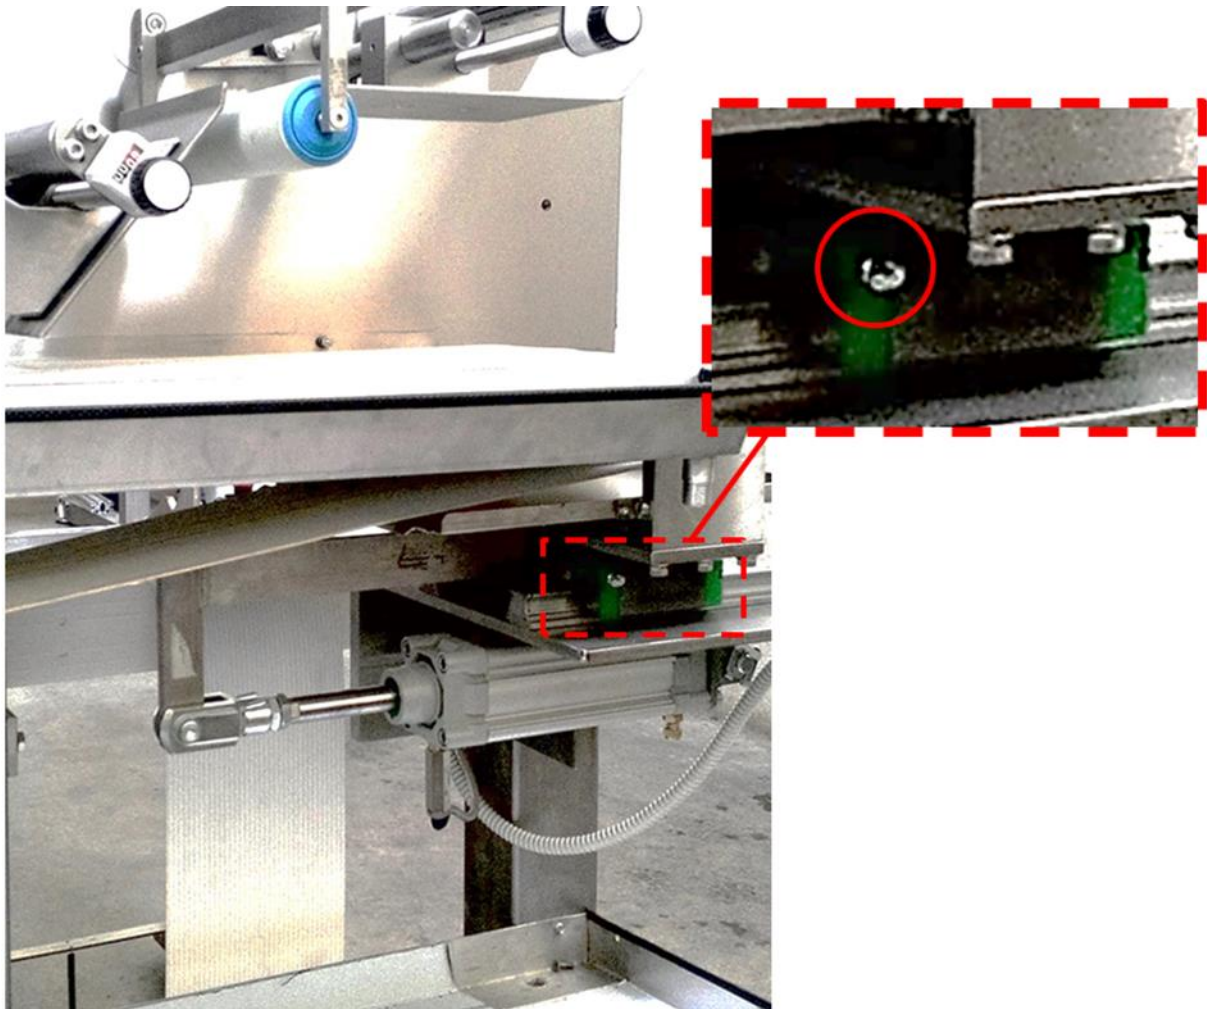


- **BOBBIN GROUP MAIN CONVEYOR BAND TENSIONER MECHANISM LINEAR CARRIAGE**

As you can see in the picture, squeeze grease oil slightly to attached grease fittings of linear carriage, by not blowing up linear carriage. To do this, you have to squeeze the grease pump twice.

You only need to do this once every two months.

BEARING LUBRICATION INSTRUCTIONS

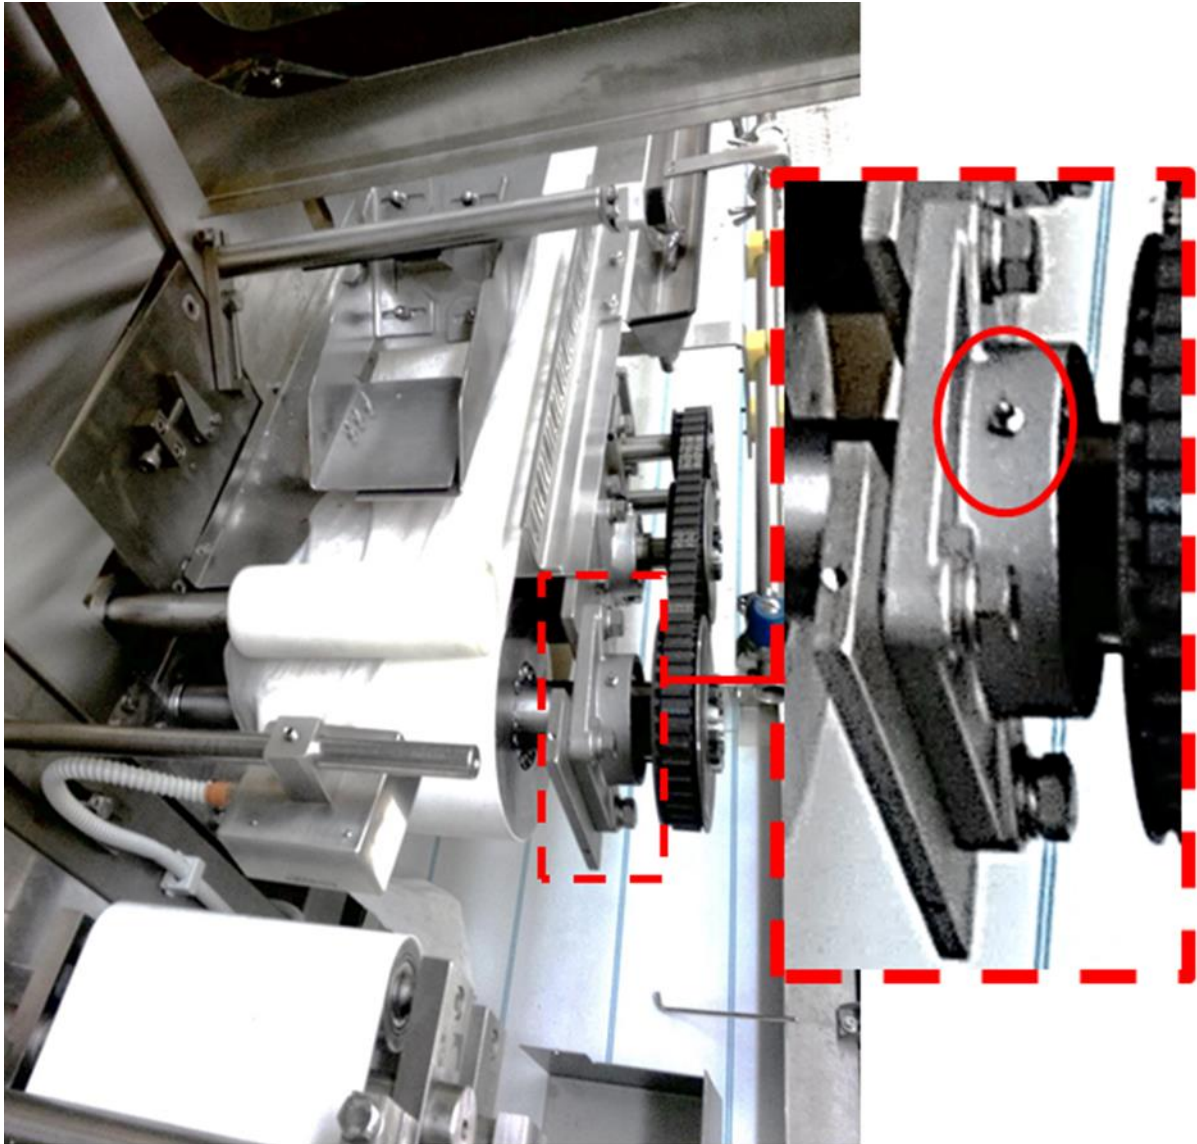


BOBBIN GROUP MAIN CONVEYOR MOVING TRANSFER BEARING

As you can see in the picture, squeeze grease slightly not blowing up bearing attached to grease fittings of housing mounted bearings .

You only need to do this once every two months.

BEARING LUBRICATION INSTRUCTIONS

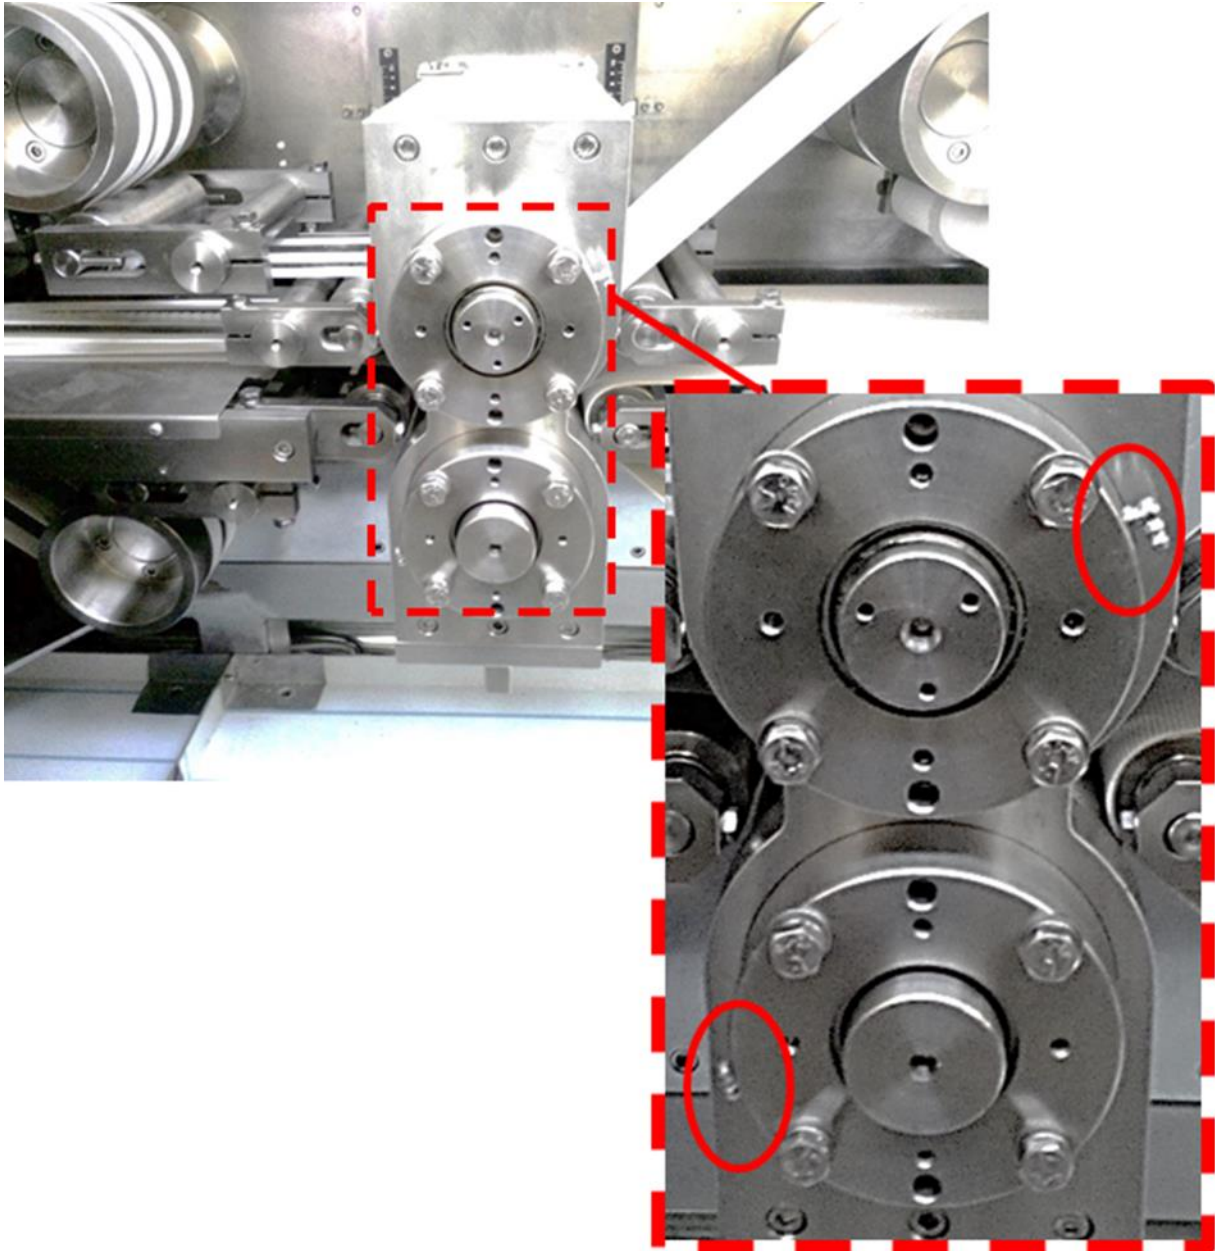


- **HOUSING MOUNTED BEARINGS OF CUTTING GROUP**

As you can see in the picture, squeeze grease slightly not blowing up bearing attached to grease fittings of housing mounted bearings .

You only need to do this once every two months.

BEARING LUBRICATION INSTRUCTIONS

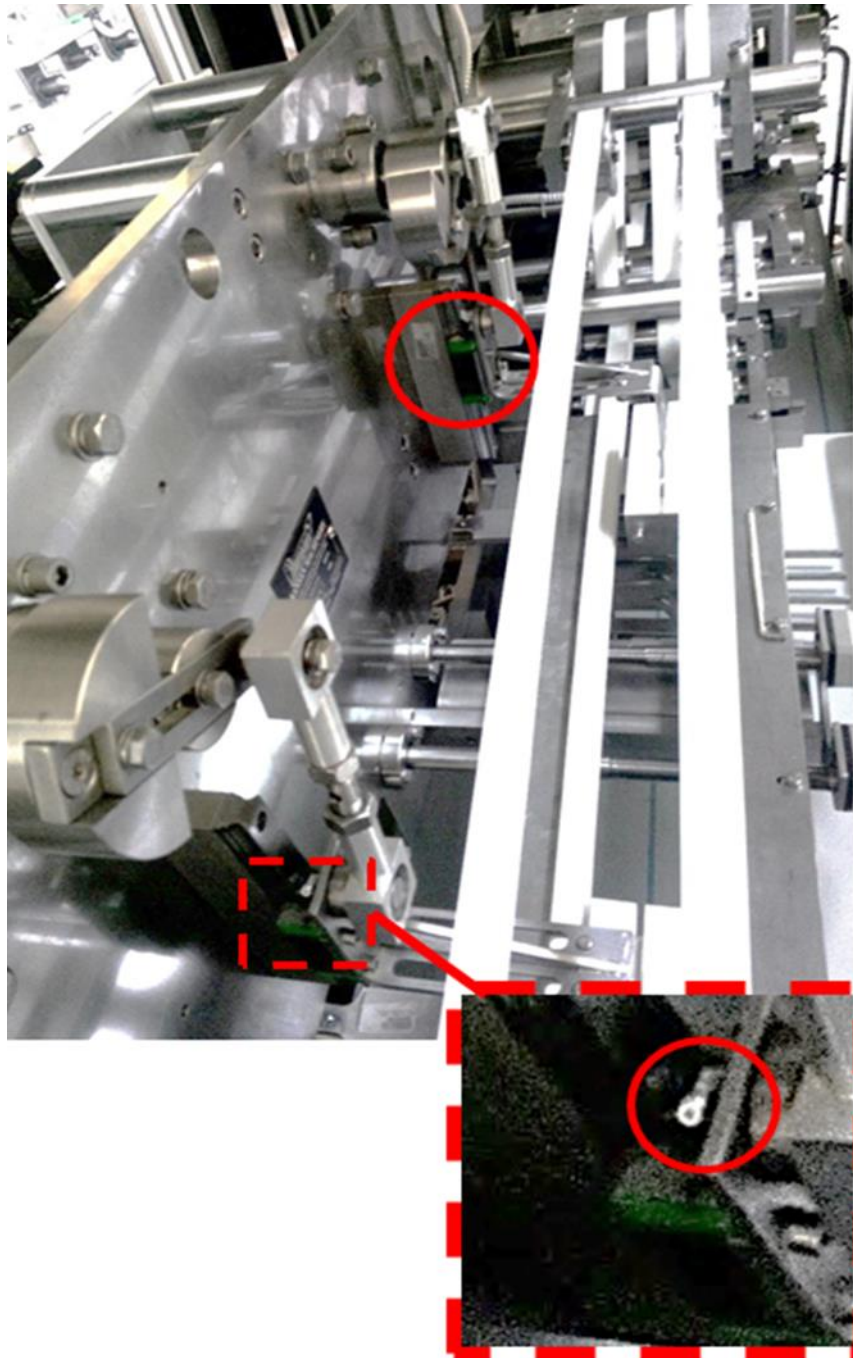


CABIN GROUP PRODUCT STACKING MECHANISM LINEAR CARRIAGES

As you can see in the picture, squeeze grease oil slightly to attached grease fittings of linear carriage, by not blowing up linear carriage. To do this, you have to squeeze the grease pump twice.

You only need to do this once every two months.

BEARING LUBRICATION INSTRUCTIONS

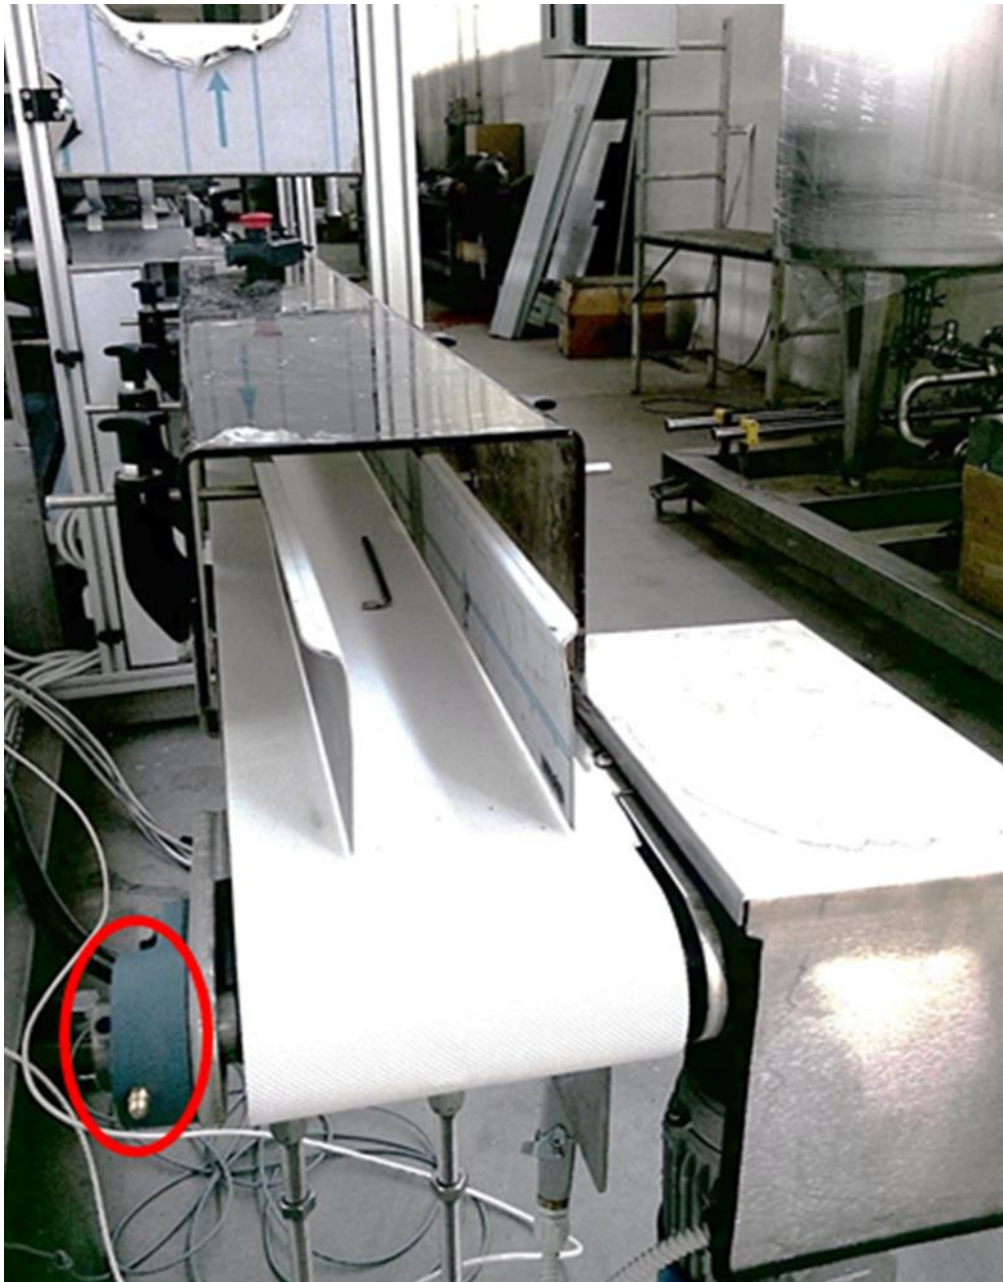


- **LAST EXIT CONVEYOR MAIN DRIVE ENGINE HOUSING MOUNTED BEARING**

As you can see in the picture, squeeze grease oil slightly to attached grease fittings of linear carriage, by not blowing up linear carriage.

You only need to do this once every two months.

BEARING LUBRICATION INSTRUCTIONS

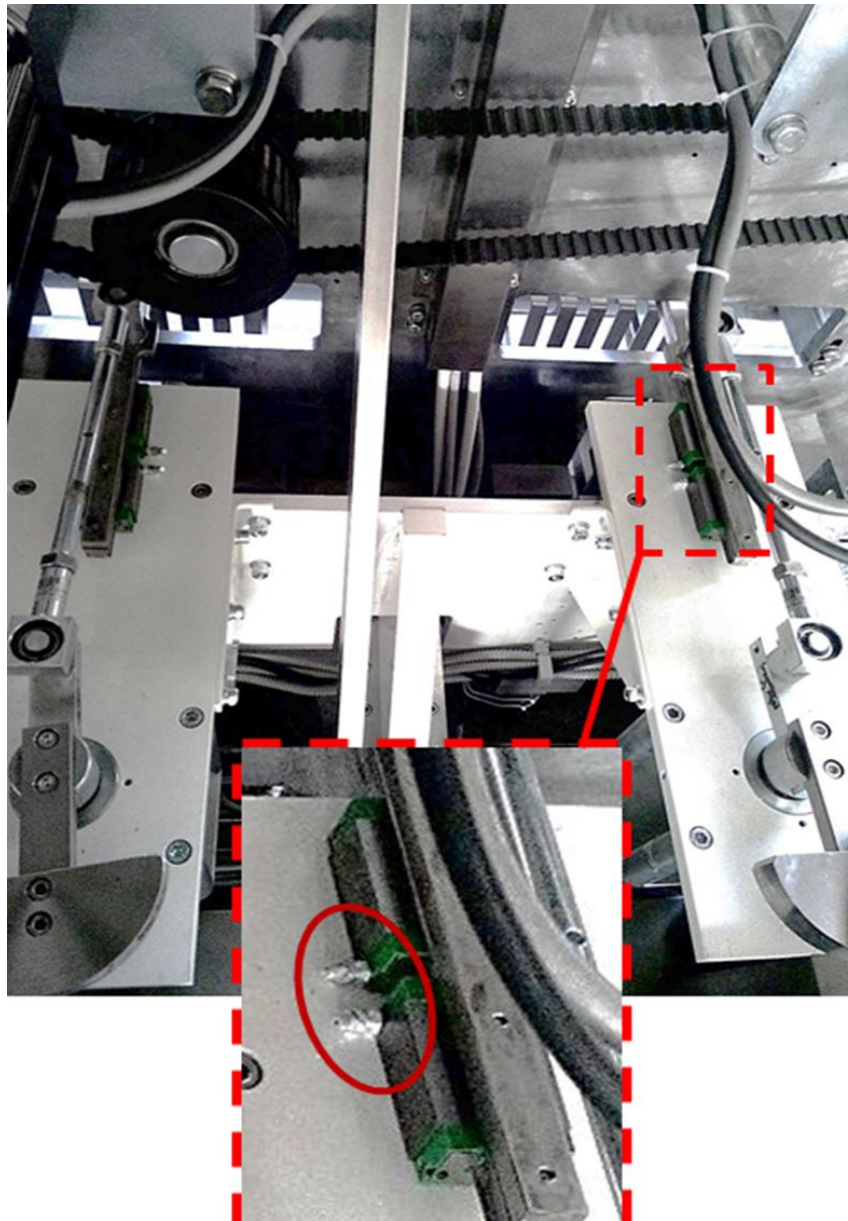


■ CABIN GROUP PUSHER MECHANISM LINEAR CARRIAGES

As you can see in the picture, squeeze grease oil slightly to attached grease fittings of linear carriage, by not blowing up linear carriage. To do this, you have to squeeze the grease pump twice.

You only need to do this once every two months.

BEARING LUBRICATION INSTRUCTIONS

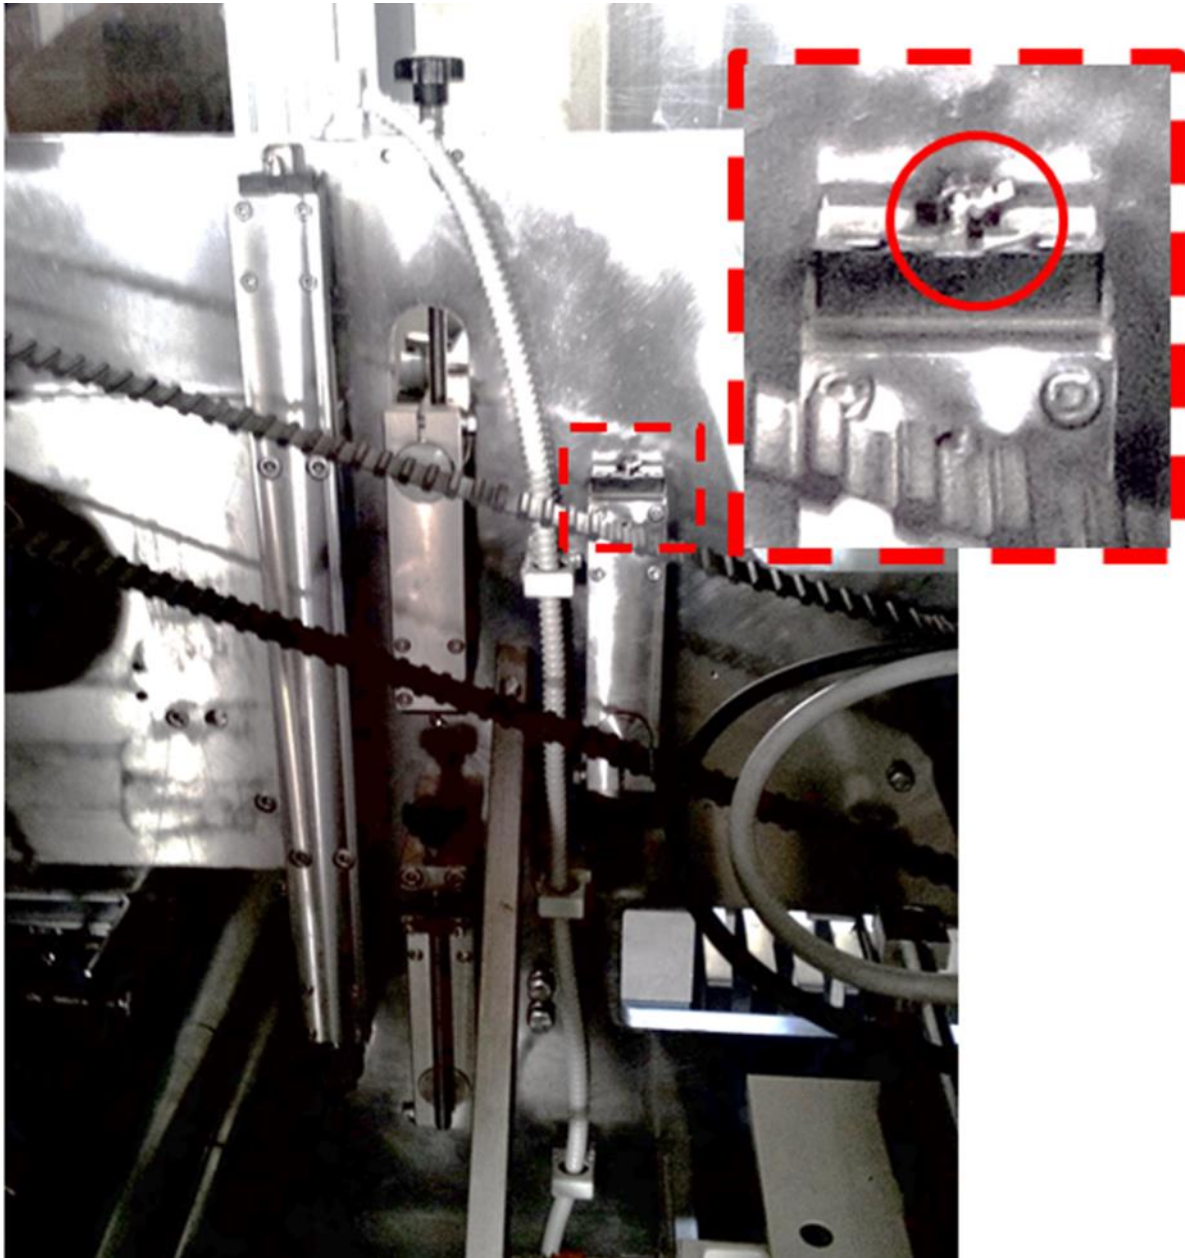


CABIN GROUP STACKING MECHANISM CARRIER TENSIONER LINEAR CARRIAGES

As you can see in the picture, squeeze grease oil slightly to attached grease fittings of linear carriage, by not blowing up linear carriage. To do this, you have to squeeze the grease pump twice.

You only need to do this once every two months.

BEARING LUBRICATION INSTRUCTIONS

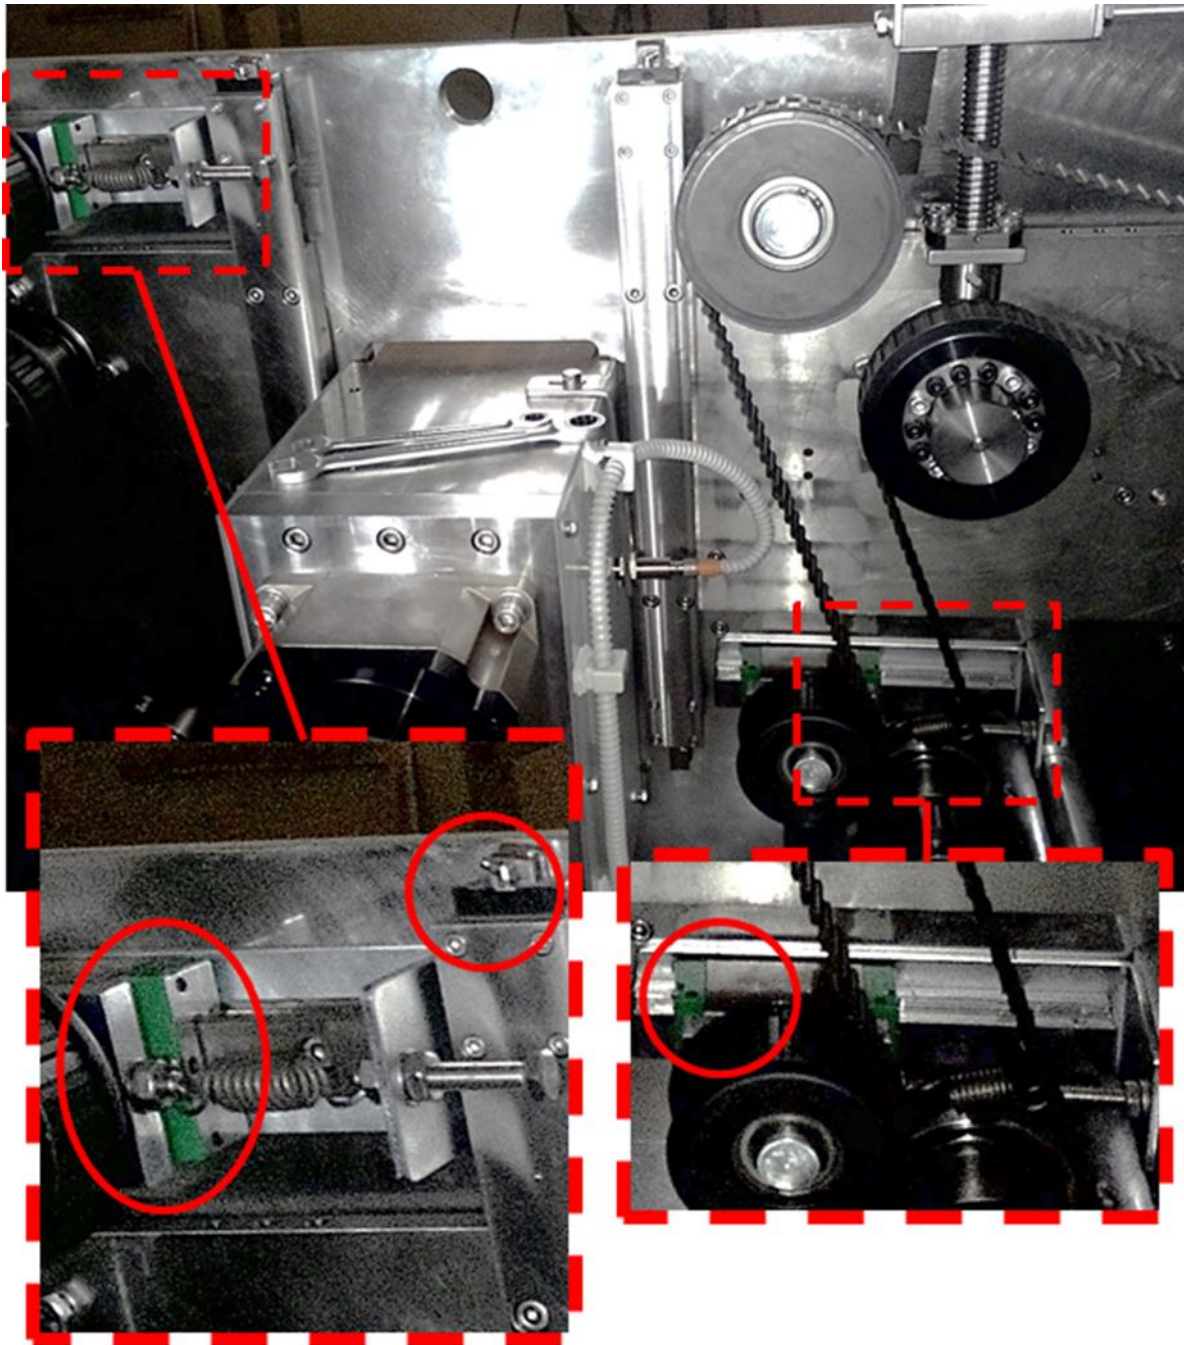


- **CABIN GROUP MOVING TRANSFER TRIGGER BELT TENSIONER LINEAR CARRIAGES**

As you can see in the picture, squeeze grease oil slightly to attached grease fittings of linear carriage, by not blowing up linear carriage. To do this, you have to squeeze the grease pump twice.

You only need to do this once every two months.

BEARING LUBRICATION INSTRUCTIONS

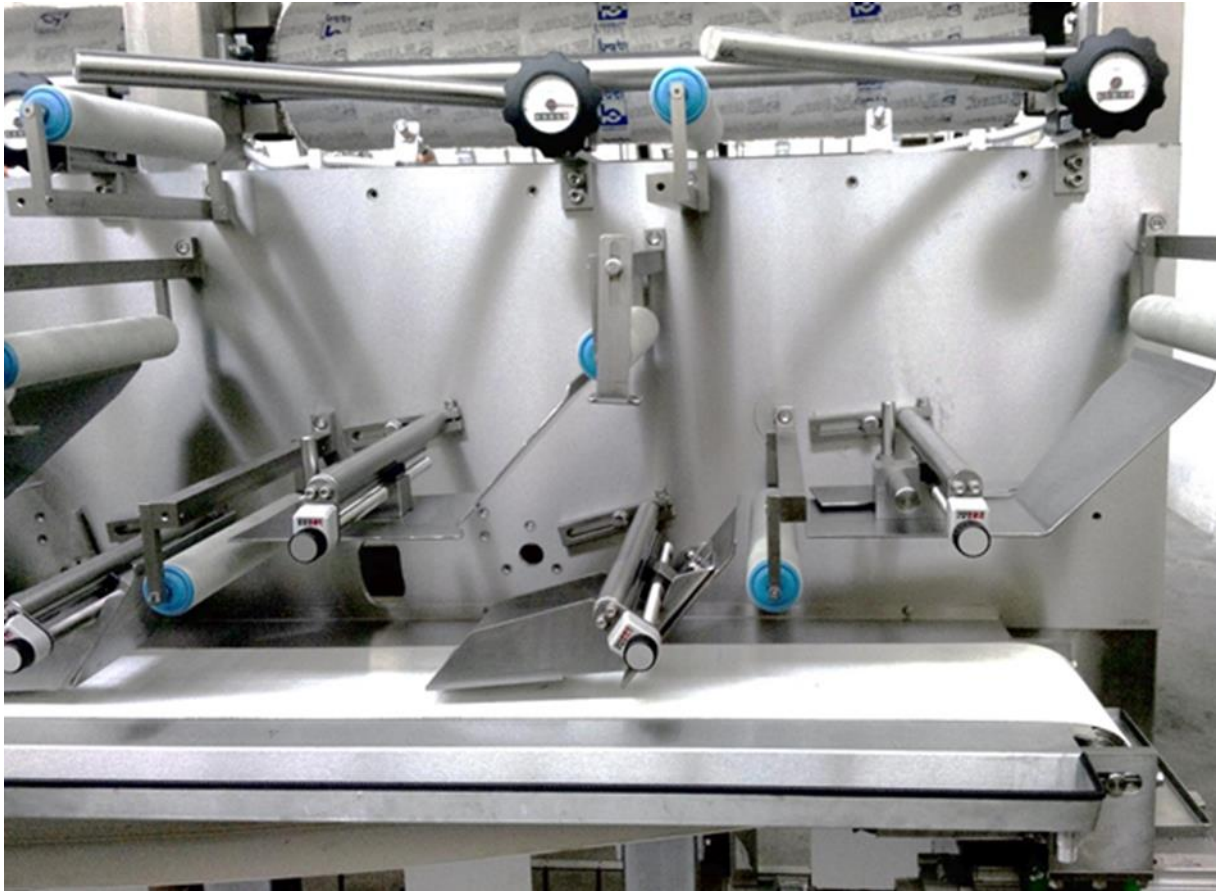

FOLDING GROUP MOLD MOVING LINEAR CARRIAGES

As you can see in the picture, do not lubricate the linear carriage on the mold. Prefer to replace the linear car instead of this.

CLEANING AND PERIODICAL MAINTENANCE INSTRUCTIONS

WEEKLY PERIODIC MAINTENANCE

- Make general cleaning of the machine.
- Clean the filter on the plumbing and tank.
- If necessary, clean the system by pressing the CLEAN button.



According to the CLEANING TIME SET in the time setting, all plumbing and nozzles are filled with liquid and the inside is cleaned.

- Check the tightness of the bolts on the stacking and cutting system.
- Clean the electric panel with a vacuum cleaner.
- Clean the ventilation fan on the electric panel.

Check the strain of all belts. Please make the maintenance. Replace if there is any worn belt.



The belts used on the machine should be firstly ventilated during the periodic maintenance process to remove dust, dirt or small particles. Then maintain the trigger belts wiping with a damp cloth.

- Check all delrin gears. Replace the damaged ones.
- Check the temperatures of reductor.
- Discharge the conditioner drainage water.

CLEANING AND PERIODICAL MAINTENANCE INSTRUCTIONS

MONTHLY PERIODIC MAINTENANCE

- Check the tightness of all visible connecting bolts.
- Remove all machine straps and perform gear, pulley, and bearing checks. Check the mechanics manually for any abnormalities. Change the bearings of non-rotating mechanisms.
- Clean the optical sensors before removing them.

Check the filters of ventilation covers at every month.

- Take care of the strain and visual control of the conveyor bands.



In periodic maintenance, wipe the conveyor belt with a cloth dipped in acetone.

- Clean the rubber rolls with water, and after it is thoroughly dried, powder it.
- Check the conditioner oil.



For the maintenance of the other parts, please read their own MAINTENANCE INSTRUCTIONS booklet.

CLEANING AND PERIODICAL MAINTENANCE INSTRUCTIONS

6 MONTHLY AND YEARLY PERIODIC MAINTENANCES

- Manually turn the mechanisms by unscrewing all the straps on the machine. Change the bearings of non-rotating mechanisms.
- Perform visual inspection of pulling rolls.
- Lubricate all of the other linear slides on the machine.
- Make general cleaning of the machine.
- Clean the electric panel with a vacuum cleaner.
- Check the tightness of the bolts on the stacking and cutting system.
- Clean the filter on the plumbing and boiler.



Problem and Solution instructions



Compact
solutions
for wet wipe
production

PROBLEMS AND SOLUTIONS

PROBLEMS	SOLUTIONS
- In the line, the bobbin is getting wide at the backside during operation.	- Tighten the rear conveyor belt with the help of the belt tensioners. - Please close the distances between pulling rollers of the rear conveyors distances.
- There is excessive noise on the cutting unit.	- The papers are dry, wet them. - Cutting knife blunt, put on a spare blade or send it to whetting. - Extreme pressure on the cutting blade, pull it back.
- Cut is not complete or cutting quality is bad.	- Blade is blunt, please fit the spare part. - Move the cut blade forward.
- The strap that moves the cutting unit is loosening.	- The knife has difficulty in extreme pressure, pull back the knife. - Belt strain pulley loosened, tighten it.
- The size of the finished products is constantly different.	- The conveyor can not pull the product. Close the conveyor distance. - The strain is too much, please decrease it.
- Excessive solution on conveyors.	- Wetting rate is high, reduce the rate on the screen. - Wetting nozzles are not adjusted, correct nozzles. - Extreme pressure on pulling units, give some distances.

QUICKSTACK 12

