

PACKAGING MACHINE

**OPERATOR'S MANUEL
KULLANMA KILAVUZU**

Kansan

1. GENERAL INFORMATION

1.1. ABOUT OPERATOR'S MANUAL

1.1.1. Content

This operator's manual belongs to DYN-WA-120 / Automatic Flowpack Machine. It is written for efficient and safe using of the machine.

Please contact our company if you have a problem which is undefined in Operator's Manual.

1.1.2. Producer

Kansan Paper Converting Machinery Ltd. Co.
Cumhuriyet cad. Balkan sok. Yazıbaşı beldesi
Torbalı İzmir/TÜRKİYE
Tel : +90 232 8539634
Faks : +90 232 8539107
<http://www.kansanmak.com>



1. GENERAL INFORMATION

1.2. SAFETY INSTRUCTIONS

1.2.1. Qualifications

Follow the instructions



WARNING!

Safe and efficient operation of the machine can only be guaranteed if you observe all necessary information.

Product liability and warranty claims can only be asserted if the unit was operated in accordance with the directions in the manual.

- Before operating the unit, read the operating instructions and all other notes carefully
- Observe the additional safety and warning notes on the machine

Keep the product information at hand



- The manual should be kept at the location where the unit is installed and be available to the operator.

- It should always be legible.
- If the machine is sold, the manual should be made available to the new owner.
- The safety and warning notes affixed to the unit itself must be kept clean and legible.

Missing or damaged signs must be replaced

Ensure the required qualifications are met

- Ensure that only trained and authorized personnel operate, configure and service the unit.
- Only allow qualified and well-trained expert personnel or service technicians to perform configurations.
- The responsibilities with regard to operation, configuration and maintenance should be clearly defined and consistently maintained.
- In addition, personnel should also be instructed on a regular basis in matters of occupational safety and environmental protection.

1. GENERAL INFORMATION

1.2. SAFETY INSTRUCTIONS

1.2.2. Operational safety of the machine

**WARNING!**

Improper usage of the machine can cause accidents, property damage and production downtime!

- Only use the unit in accordance with the instructions specified in this manual
- Do not operate the unit without the required safeguards
- While the machine is running, keep unauthorized personnel away.
- Only configure the unit in accordance with this manual and with the required care.
- Only use original accessories
- Do not make any modifications or alterations to the machine

**WARNING!**

The machine operates using mains voltage! Touching live electrical parts may expose you to hazardous electrical currents and may lead to burns

**WARNING!**

The machine electrical panel is not protected against splashing water. Keep it dry.

**WARNING!**

Risk of injury due to moving and rapidly rotating parts!

- Long hair, loose jewellery, long sleeves, and so on are not permissible when using the machine.
- Keep moving parts free from obstructions even when the machine is not switched on, if there is a chance the machine might be turned on.

1. GENERAL INFORMATION

1.2. SAFETY INSTRUCTIONS

1.2.3. Dangers and risk signs




WARNING!

The dangers and risk signs on the machine describe important knowledge about the machine

- Missing or damaged signs must be replaced


HIGH VOLTAGE WARNING

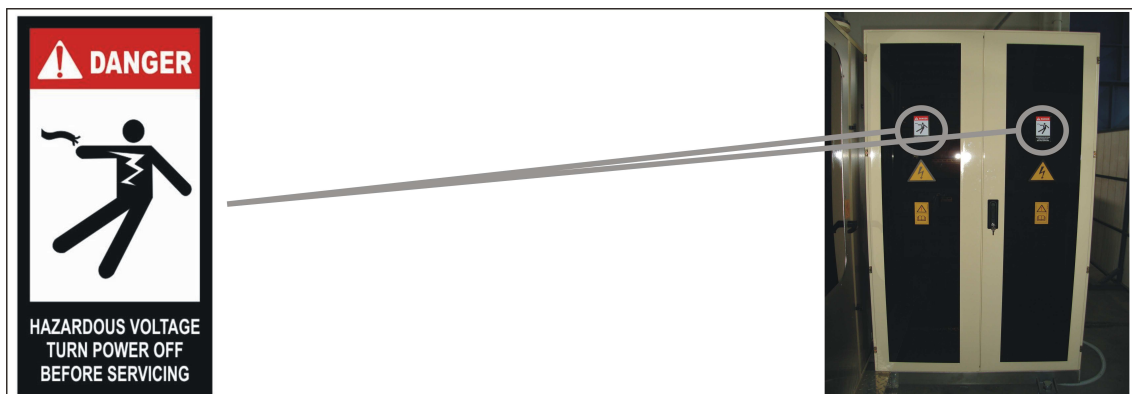

1. GENERAL INFORMATION

1.2. SAFETY INSTRUCTIONS

VOLTAGE WARNING

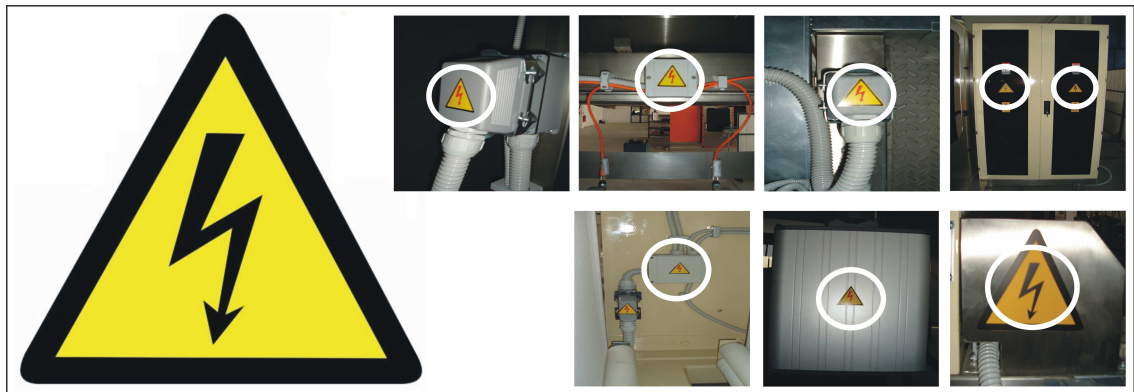


Don't interfere unless you read the manual




1. GENERAL INFORMATION

1.2. SAFETY INSTRUCTIONS

Turning Rollers

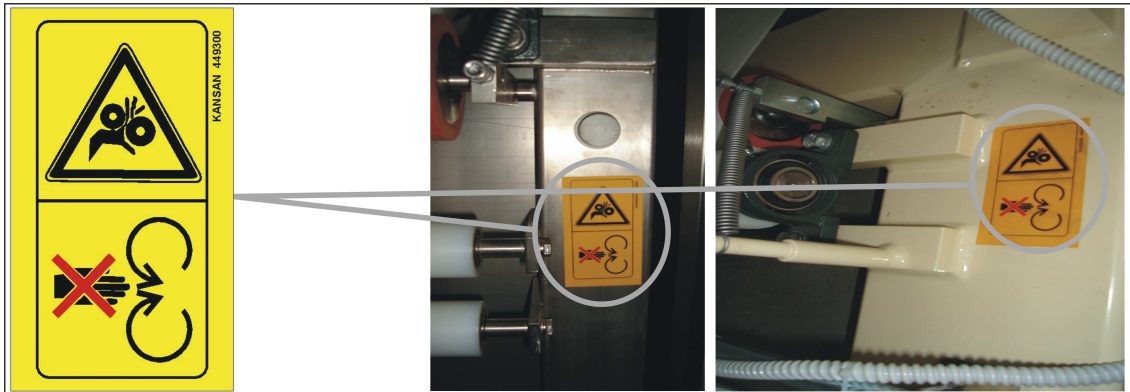


Dangerous Section

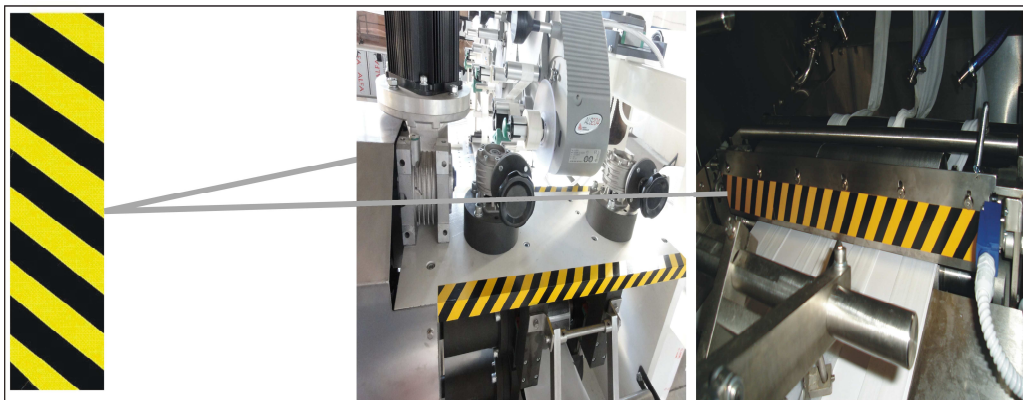


1. GENERAL INFORMATION

1.2. SAFETY INSTRUCTIONS

Air Filter Cleaning Direction

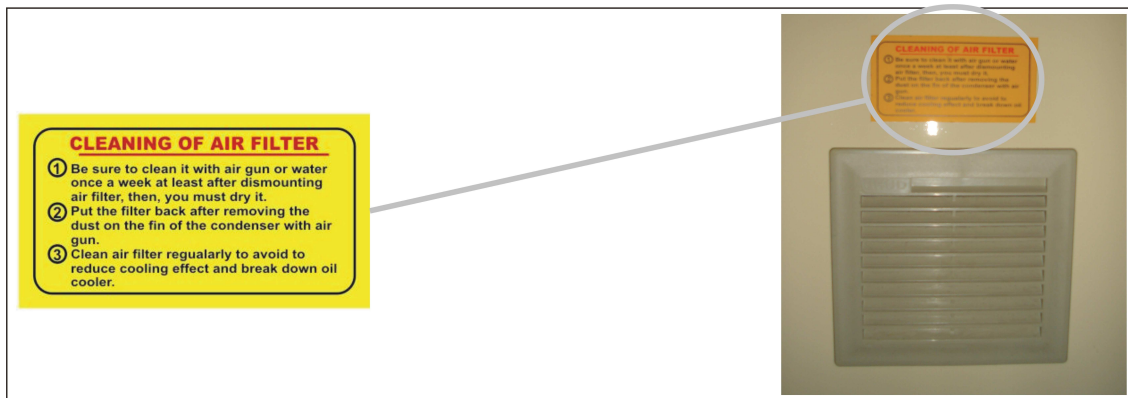


Rotary Gear Section

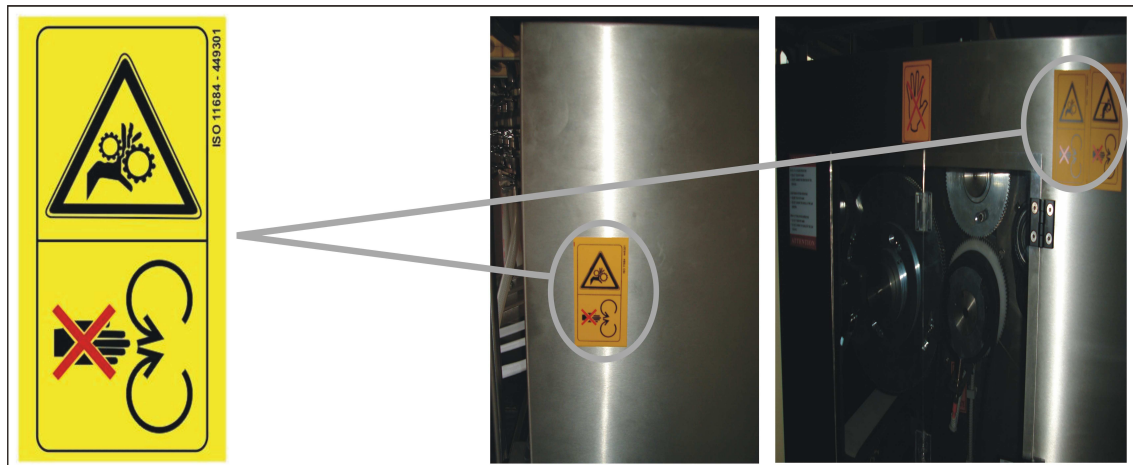


1. GENERAL INFORMATION

1.2. SAFETY INSTRUCTIONS

Moving Belts

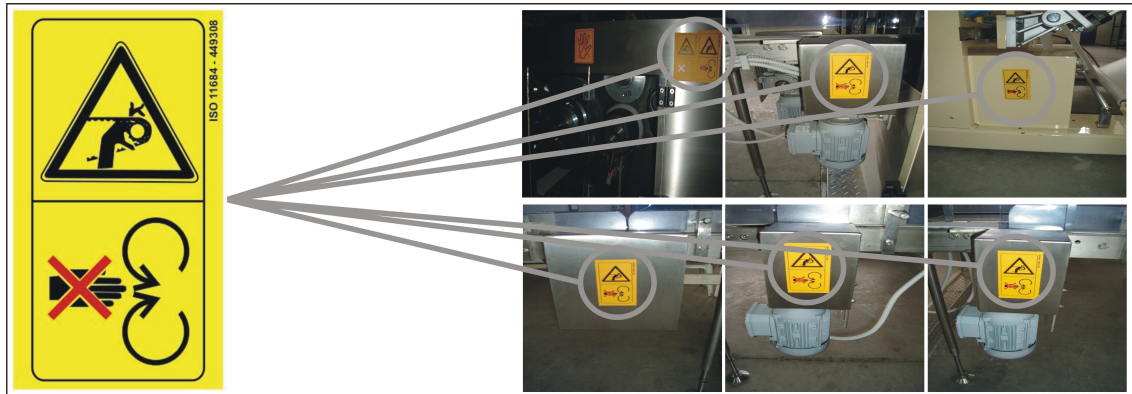


No Operate Areas

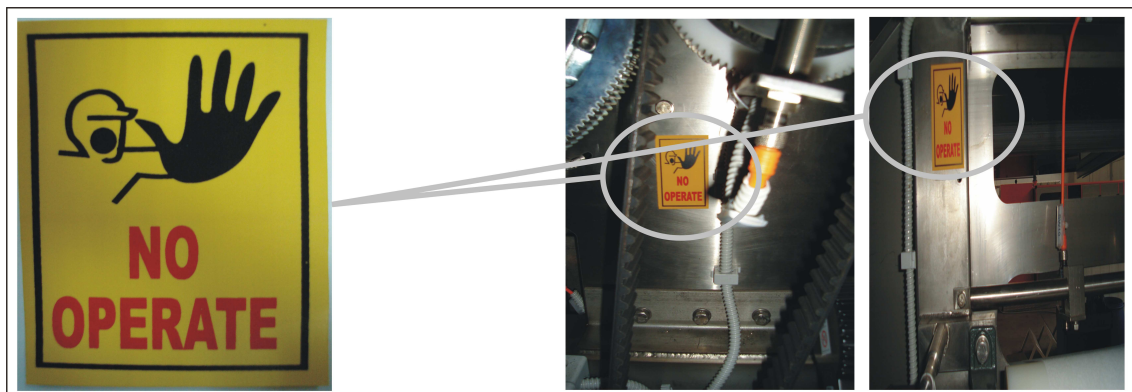


1. GENERAL INFORMATION

1.2. SAFETY INSTRUCTIONS

Don't open while the machine is running.

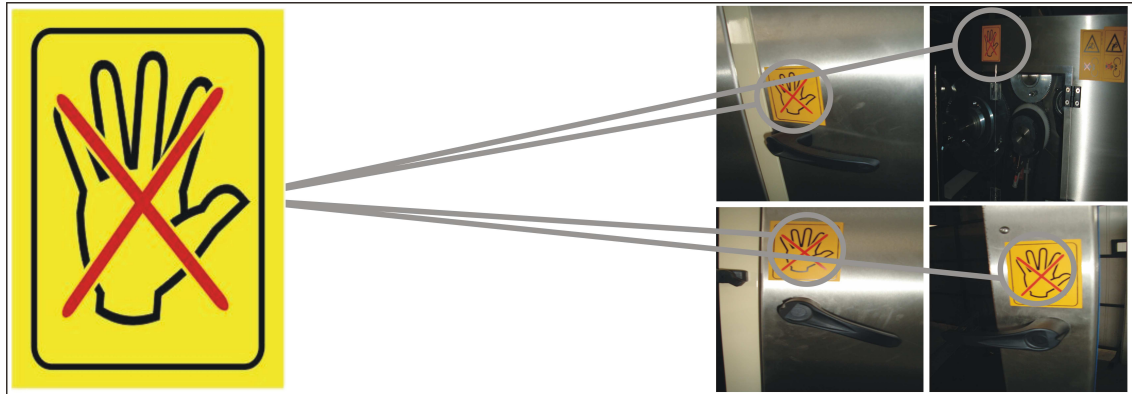

Attention For Moving Parts

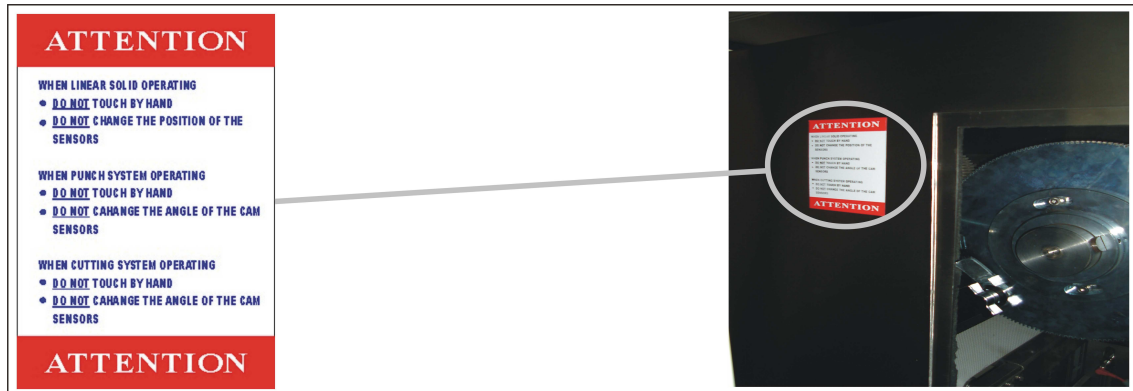


1. GENERAL INFORMATION

1.2. SAFETY INSTRUCTIONS

1.2.4. Running area of The Machine


**WARNING!**

Any unauthorized personal is not allowed to be in the running area

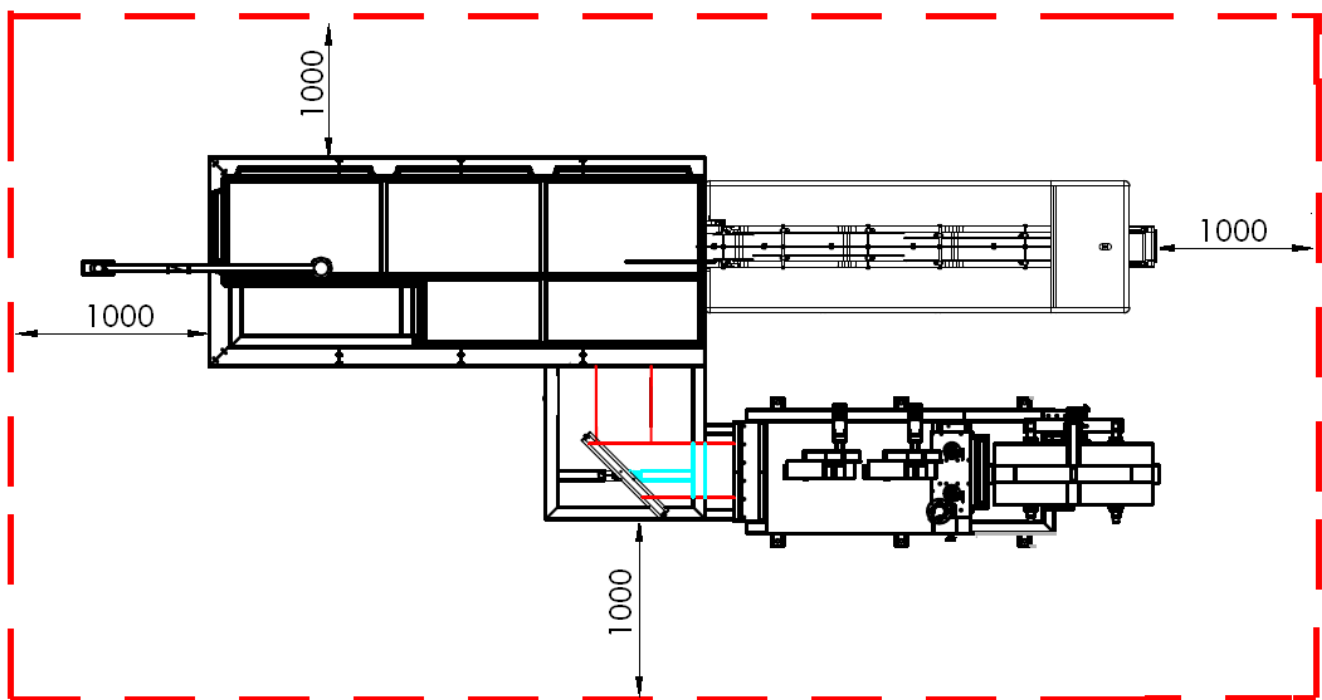


1. GENERAL INFORMATION

2.1. MACHINE OVERVIEW

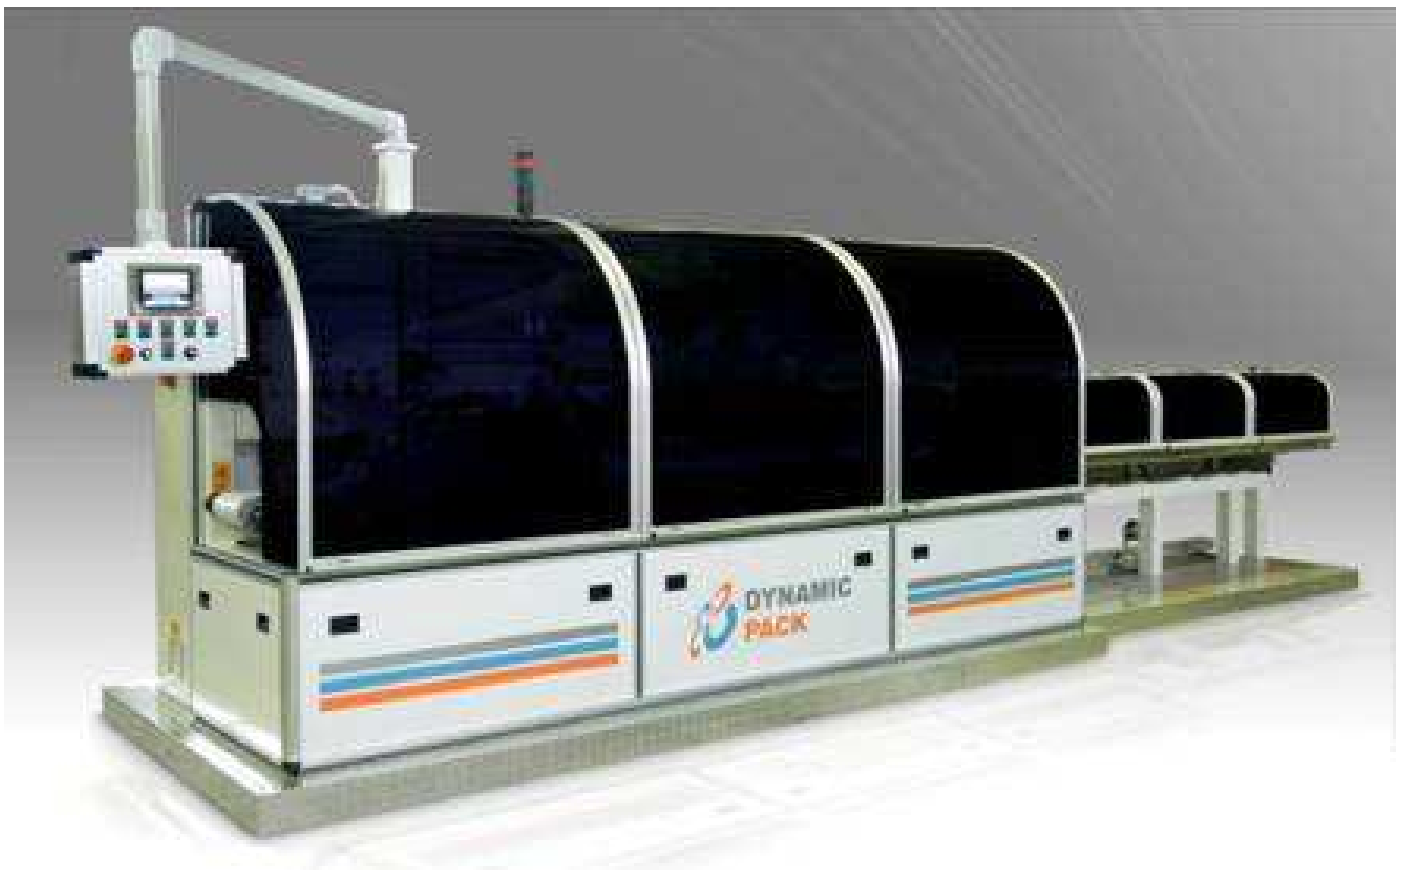

2. EXPLODED VIEWS

2.2.1 MAIN CABINET

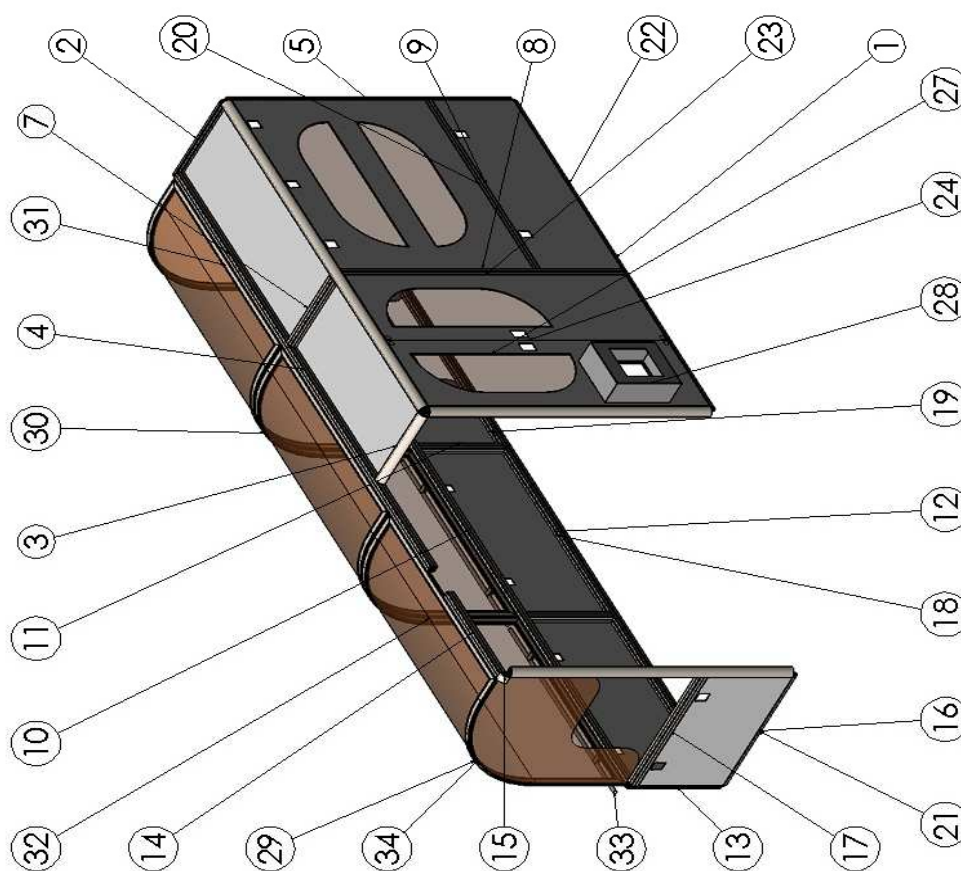


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	-	45X45X2450 ALU RADIUS SIGMA PROFIL	2
2	-	45X45X575 ALU RADIUS SIGMA PROFIL	2
3	-	45X45X535 ALU RADIUS SIGMA PROFIL	1
4	-	45X45X150 ALU KARE PROFIL	3
5	-	45X45X1752 ALU RADIUS SIGMA PROFIL	1
6	-	45X45X335 ALU KARE SIGMA PROFIL	1
7	-	45X45X1752 ALU KARE PROFIL	1
8	-	45X45X1752 ALU KARE SIGMA PROFIL	1
9	-	45X45X4000 ALU KARE PROFIL	2
10	-	45X45X525 ALU KARE SIGMA PROFIL	2
11	-	45X45X4000 ALU RADIUS SIGMA PROFIL	1
12	-	45X45X5655 ALU RADIUS SIGMA PROFIL	2
13	-	45X45X47 ALU RADIUS SIGMA PROFIL	1
14	-	45X45X650 ALU KARE SIGMA PROFIL	1
15	-	45X45X5655 ALU RADIUS SIGMA PROFIL	1
16	-	45X45X5655 ALU RADIUS SIGMA PROFIL	1
17	-	CONNECTION PART	2
18	-	HEAD PLATE	1
19	30005674	BACK PLATE-1	1
20	30005677	BACK PLATE-2	1
21	300056217	BACK PLATE-3	1
22	300056723	BACK PLATE-4	1
23	30005131	BACK PLATE-5	1
24	30005656	BACK PLATE-6	1
25	30005135	FRONT PLATE-1	1
26	30005032	FRONT PLATE-2	4
27	22001813	FRONT PLATE-3	1
28	120-500	FRONT GLASS-1	3
29	30005030	FRONT GLASS-2	1
30	30005029	FRONT GLASS-3	1
31	-	FRONT GLASS-4	1
32	-	FRONT GLASS-5	1
33	-	FRONT GLASS-6	1
34	-	FRONT GLASS-7	1

2. EXPLODED VIEWS

2.2.2 SEALING DISCS UNIT


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	22004547	MAIN BODY	1
2	30007570	6006 SNR 17	4
3	21021014	SEALING DISC SHAFT	2
4	22004400	SEALING DISC	1
5	21021015	DISC CONNECTING CLAMP	2
6	23001366	RESISTANCE CAP	2
7	21020210	Spur gear 4M 30T 20PA 20FW	1
8	30006636	TRAMEC RL32 AB 1:1 RAN	1
9	21021084	RAN GEARBOX MOUNTING PLATE	1
10	22004404	MOVING BEARING HOUSING	1
11	22004399	SEALING DISC	1
12	21020209	Spur gear 4M 30T 20PA 20FW	1
13		GEARBOX OUTPUT SHAFT GEAR	1
14	21020210	Spur gear 4M 30T 20PA 20FW	1
15	21021012	SHAFT CAP	1
16			1
17	21021016	ROTATING DISC STOPER PART	1
18	21021017	DISC RELEASE PISTON CONNECTING PART	1
19	30006901	PRESSURE SPRING	1
20	21021013	SPRING MOVER PART	1
21		M16 x 25 HEXAGON SOCKET HEAD	1
22	30005377	FESTO ADVU-32-10-APA S6156094 V-140 10 bar	1
23	30007761	GFB1420L (L=20)	2
24	22004405	MOVING DISC CONNECTING SHAFT	1
25		ELECTRICAL CONNECTOR CLAMP	2
26	22004512	ELECTRICAL CONNECTOR RING	2
27	21021086	CONNECTOR SUPPORT SHAFT BASE PLATE	1
28	21021090	CONNECTOR SUPPORT SHAFT BASE PLATE 2	1
29	-----	M8 x 30 HEXAGON SCREW GRADE	2
30	-----	M8 SPRING WASHER	2

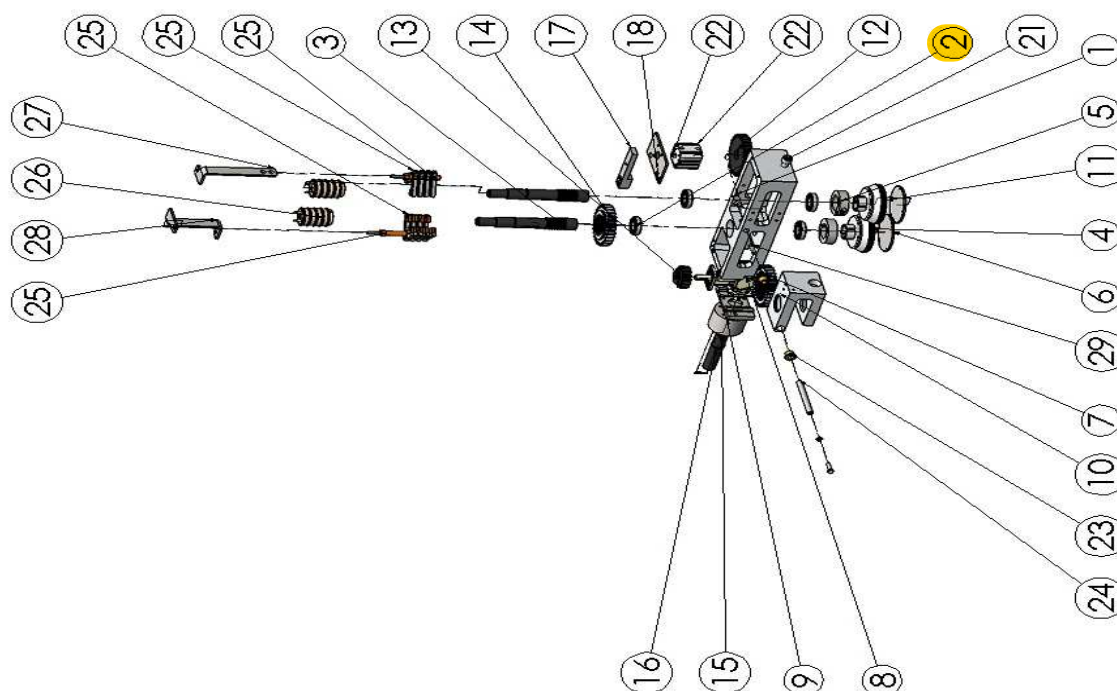

2. EXPLODED VIEWS


2.2.3 SEALING JAW UNIT

FIG. NO.	ITEM NO.	ITEM NAME	QTY
1	1	SEALING JAW UNIT	1
2	2	SEALING JAW UNIT	1
3	3	SEALING JAW UNIT	1
4	4	SEALING JAW UNIT	1
5	5	SEALING JAW UNIT	1
6	6	SEALING JAW UNIT	1
7	7	SEALING JAW UNIT	1
8	8	SEALING JAW UNIT	1
9	9	SEALING JAW UNIT	1
10	10	SEALING JAW UNIT	1
11	11	SEALING JAW UNIT	1
12	12	SEALING JAW UNIT	1
13	13	SEALING JAW UNIT	1
14	14	SEALING JAW UNIT	1
15	15	SEALING JAW UNIT	1
16	16	SEALING JAW UNIT	1
17	17	SEALING JAW UNIT	1
18	18	SEALING JAW UNIT	1
19	19	SEALING JAW UNIT	1
20	20	SEALING JAW UNIT	1
21	21	SEALING JAW UNIT	1
22	22	SEALING JAW UNIT	1
23	23	SEALING JAW UNIT	1
24	24	SEALING JAW UNIT	1
25	25	SEALING JAW UNIT	1
26	26	SEALING JAW UNIT	1
27	27	SEALING JAW UNIT	1
28	28	SEALING JAW UNIT	1
29	29	SEALING JAW UNIT	1
30	30	SEALING JAW UNIT	1
31	31	SEALING JAW UNIT	1
32	32	SEALING JAW UNIT	1
33	33	SEALING JAW UNIT	1
34	34	SEALING JAW UNIT	1
35	35	SEALING JAW UNIT	1
36	36	SEALING JAW UNIT	1
37	37	SEALING JAW UNIT	1
38	38	SEALING JAW UNIT	1
39	39	SEALING JAW UNIT	1
40	40	SEALING JAW UNIT	1
41	41	SEALING JAW UNIT	1
42	42	SEALING JAW UNIT	1
43	43	SEALING JAW UNIT	1
44	44	SEALING JAW UNIT	1
45	45	SEALING JAW UNIT	1
46	46	SEALING JAW UNIT	1
47	47	SEALING JAW UNIT	1
48	48	SEALING JAW UNIT	1
49	49	SEALING JAW UNIT	1
50	50	SEALING JAW UNIT	1
51	51	SEALING JAW UNIT	1
52	52	SEALING JAW UNIT	1
53	53	SEALING JAW UNIT	1
54	54	SEALING JAW UNIT	1
55	55	SEALING JAW UNIT	1
56	56	SEALING JAW UNIT	1
57	57	SEALING JAW UNIT	1
58	58	SEALING JAW UNIT	1
59	59	SEALING JAW UNIT	1
60	60	SEALING JAW UNIT	1
61	61	SEALING JAW UNIT	1
62	62	SEALING JAW UNIT	1
63	63	SEALING JAW UNIT	1
64	64	SEALING JAW UNIT	1
65	65	SEALING JAW UNIT	1
66	66	SEALING JAW UNIT	1
67	67	SEALING JAW UNIT	1
68	68	SEALING JAW UNIT	1
69	69	SEALING JAW UNIT	1
70	70	SEALING JAW UNIT	1
71	71	SEALING JAW UNIT	1
72	72	SEALING JAW UNIT	1
73	73	SEALING JAW UNIT	1
74	74	SEALING JAW UNIT	1
75	75	SEALING JAW UNIT	1
76	76	SEALING JAW UNIT	1
77	77	SEALING JAW UNIT	1
78	78	SEALING JAW UNIT	1
79	79	SEALING JAW UNIT	1
80	80	SEALING JAW UNIT	1
81	81	SEALING JAW UNIT	1
82	82	SEALING JAW UNIT	1
83	83	SEALING JAW UNIT	1
84	84	SEALING JAW UNIT	1
85	85	SEALING JAW UNIT	1
86	86	SEALING JAW UNIT	1
87	87	SEALING JAW UNIT	1
88	88	SEALING JAW UNIT	1
89	89	SEALING JAW UNIT	1
90	90	SEALING JAW UNIT	1
91	91	SEALING JAW UNIT	1
92	92	SEALING JAW UNIT	1
93	93	SEALING JAW UNIT	1
94	94	SEALING JAW UNIT	1
95	95	SEALING JAW UNIT	1
96	96	SEALING JAW UNIT	1
97	97	SEALING JAW UNIT	1
98	98	SEALING JAW UNIT	1
99	99	SEALING JAW UNIT	1
100	100	SEALING JAW UNIT	1
101	101	SEALING JAW UNIT	1
102	102	SEALING JAW UNIT	1
103	103	SEALING JAW UNIT	1
104	104	SEALING JAW UNIT	1
105	105	SEALING JAW UNIT	1
106	106	SEALING JAW UNIT	1
107	107	SEALING JAW UNIT	1
108	108	SEALING JAW UNIT	1
109	109	SEALING JAW UNIT	1
110	110	SEALING JAW UNIT	1
111	111	SEALING JAW UNIT	1
112	112	SEALING JAW UNIT	1

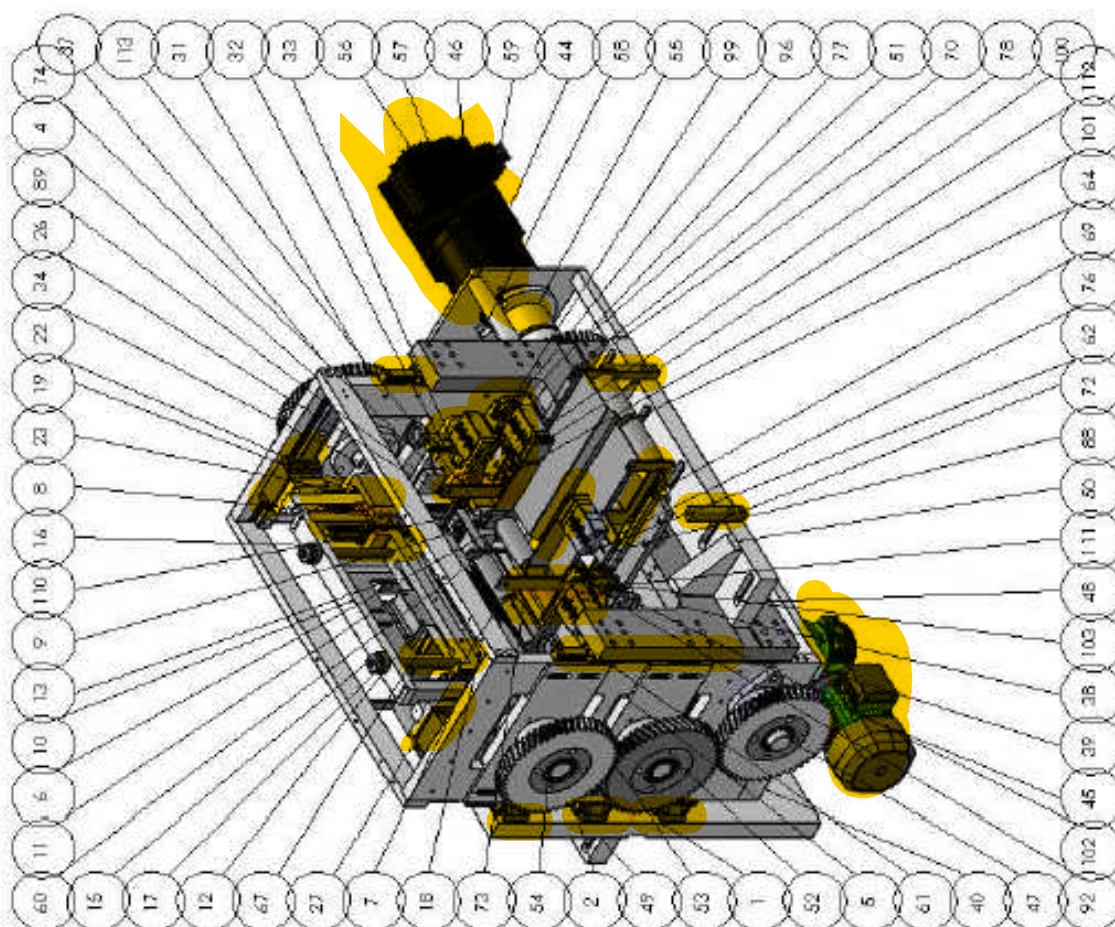

2. EXPLODED VIEWS


2.2.4 INPUT CONVEYOR

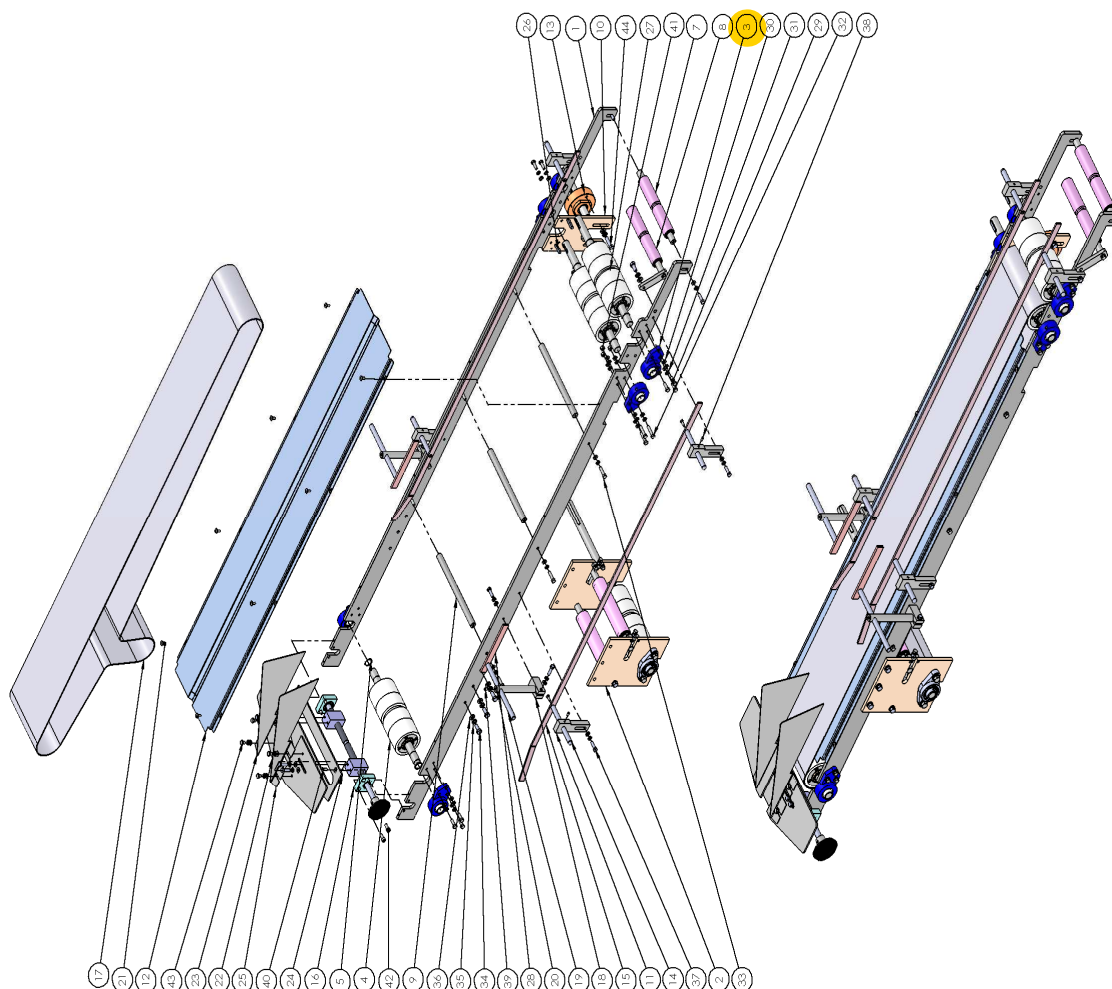

NUM.	PART NUMBER	DESCRIPTION	QTY.
1	PY 07 01 - 23000095	SIDE PLATES	2
2	PY 07 00 06	TENSIONER PART	1
3	UCFL 205 THREE-BOLT FLANGE BRACKET UNITS		6
4	PY 07 00 01	CONVEYOR DRUM	1
5		Ø 25 RETAINING RING	6
6	PY 07 00 02	CONVEYOR PULLER DRUM	1
7	PY 07 00 11	ROLL-1	1
8	PY 07 00 12	ROLL-2	1
9	PY 07 06 - 23000253		3
10	PY 07 15 - 23000100	PLATE	4
11	PY 07 18 - 23000072	CONVEYOR BELT PROTECTION PART	1
12	PY 07 36 - 23000097	CONVEYOR BANT HAREKET AKTARMA MONTAJI	1
13	PY 07 00 07	STOPER ROD	4
14	PY 07 19 - 23000073		2
15	PY 07 21 - 23000075		2
16	PY 07 00 08	FOLDING PLATE MOUNT	1
17	25A1P13W 230x416mm MID. BOTTOM K8 PROFILED CLAMP		2
18	PY 07 38 - 23000263		2
19	PY 07 40 - 23000264		2
20	PY 07 39 - 23000266		2
21		DIN 967 - M6 x 15 - 7 --- 6N	8
22	PY 07 36 - 23000123	FOLDING PART	2
23	PY 07 37 - 23000124		1
24	PY 07 39 - 23000126	FOLDING APPARATUS	1
25	PY 07 28 - 23000125	FOLDING APPARATUS	1
26		8 x 7 x 40 PARALLEL KEY	2
27	PY 07 00 17	OUTPUT CONVEYOR DRUM	1
28	PY 07 41 - 230000816	CONVEYOR BELT DIVERTER	2
29		M8 x 20 HEXAGON SCREW GRADE STAINLESS	14
30		M8 WASHER STAINLESS	47
31		M8 SPRING WASHER STAINLESS	47
32		M8 x 4C HEXAGON SCREW GRADE STAINLESS	3
33		M8 x 3C HEXAGON SCREW GRADE STAINLESS	9
34		M10 x 28 HEXAGON SCREW GRADE STAINLESS	7
35		M10 SPRING WASHER STAINLESS	9
36		M10 WASHER STAINLESS	9
37		M8 x 3C HEXAGON SCREW GRADE STAINLESS	14
38		M6 x 12 SOCKET SET SCREW STAINLESS	4
39		M8 x 10 SOCKET SET SCREW STAINLESS	2
40		M6 x 20 HEX SOCKET CTSK HEAD STAINLESS	8
41		M8 HEXAGON NUT STAINLESS	8
42		M8 x 2C HEXAGON SOCKET HEAD STAINLESS	3
43		M8 x 1C HEXAGON SCREW GRADE STAINLESS	4
44		M10 x 4C HEXAGON SCREW GRADE STAINLESS	2

2. EXPLODED VIEWS

2.2.5 OUTPUT CONVEYOR

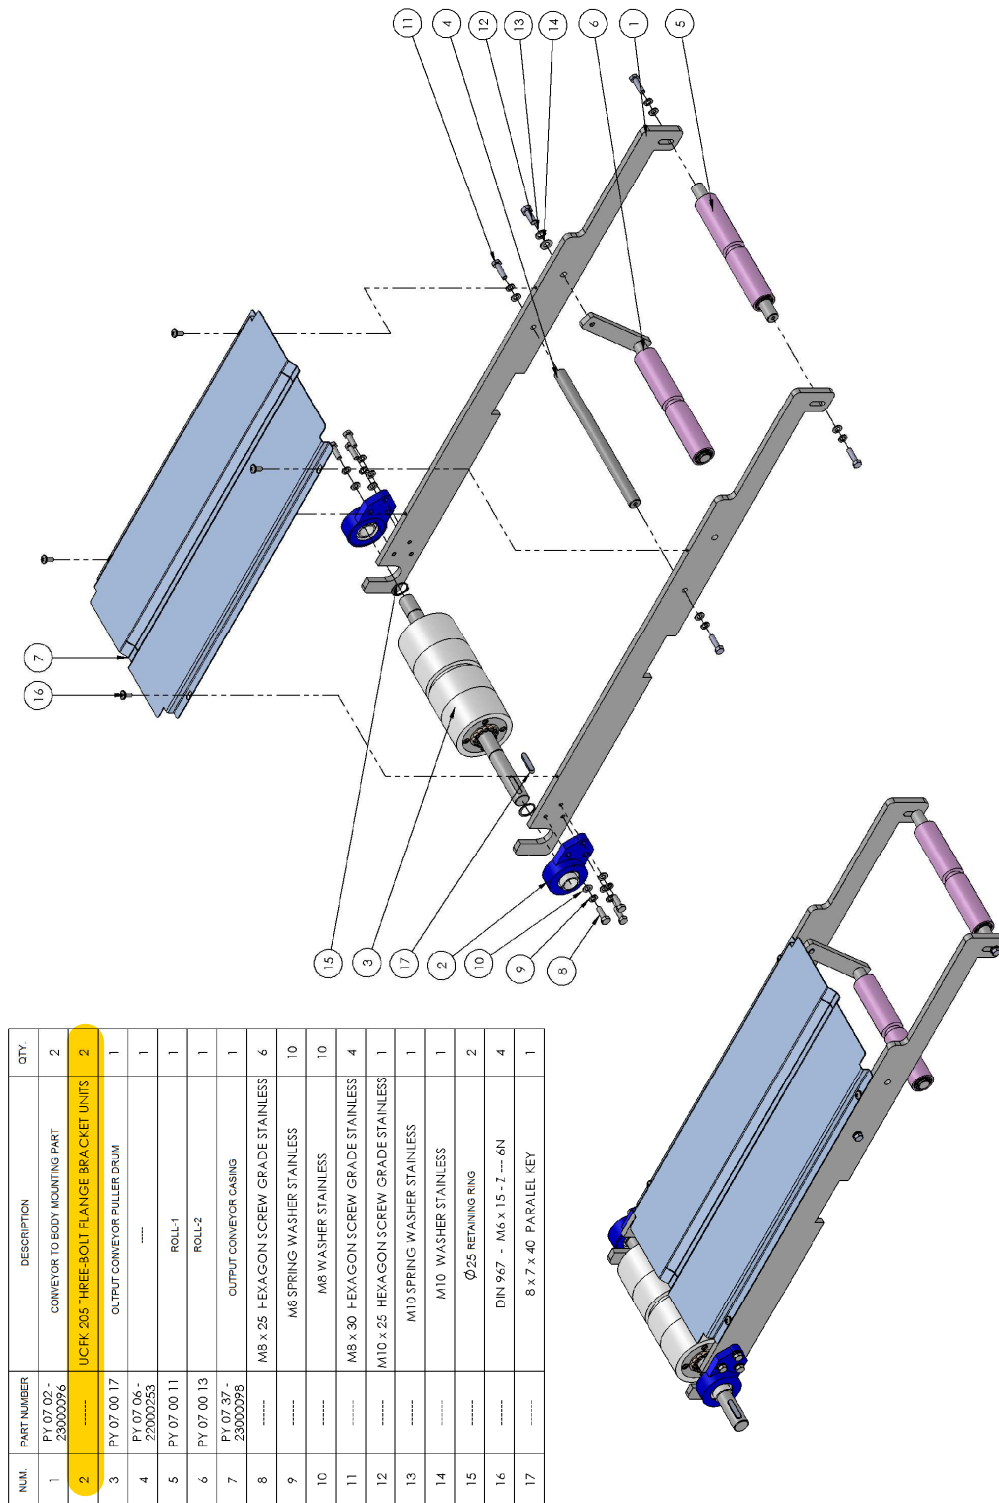


2. EXPLODED VIEWS

BLANK PAGE


2. EXPLODED VIEWS

2.2.7 PULLER UNIT

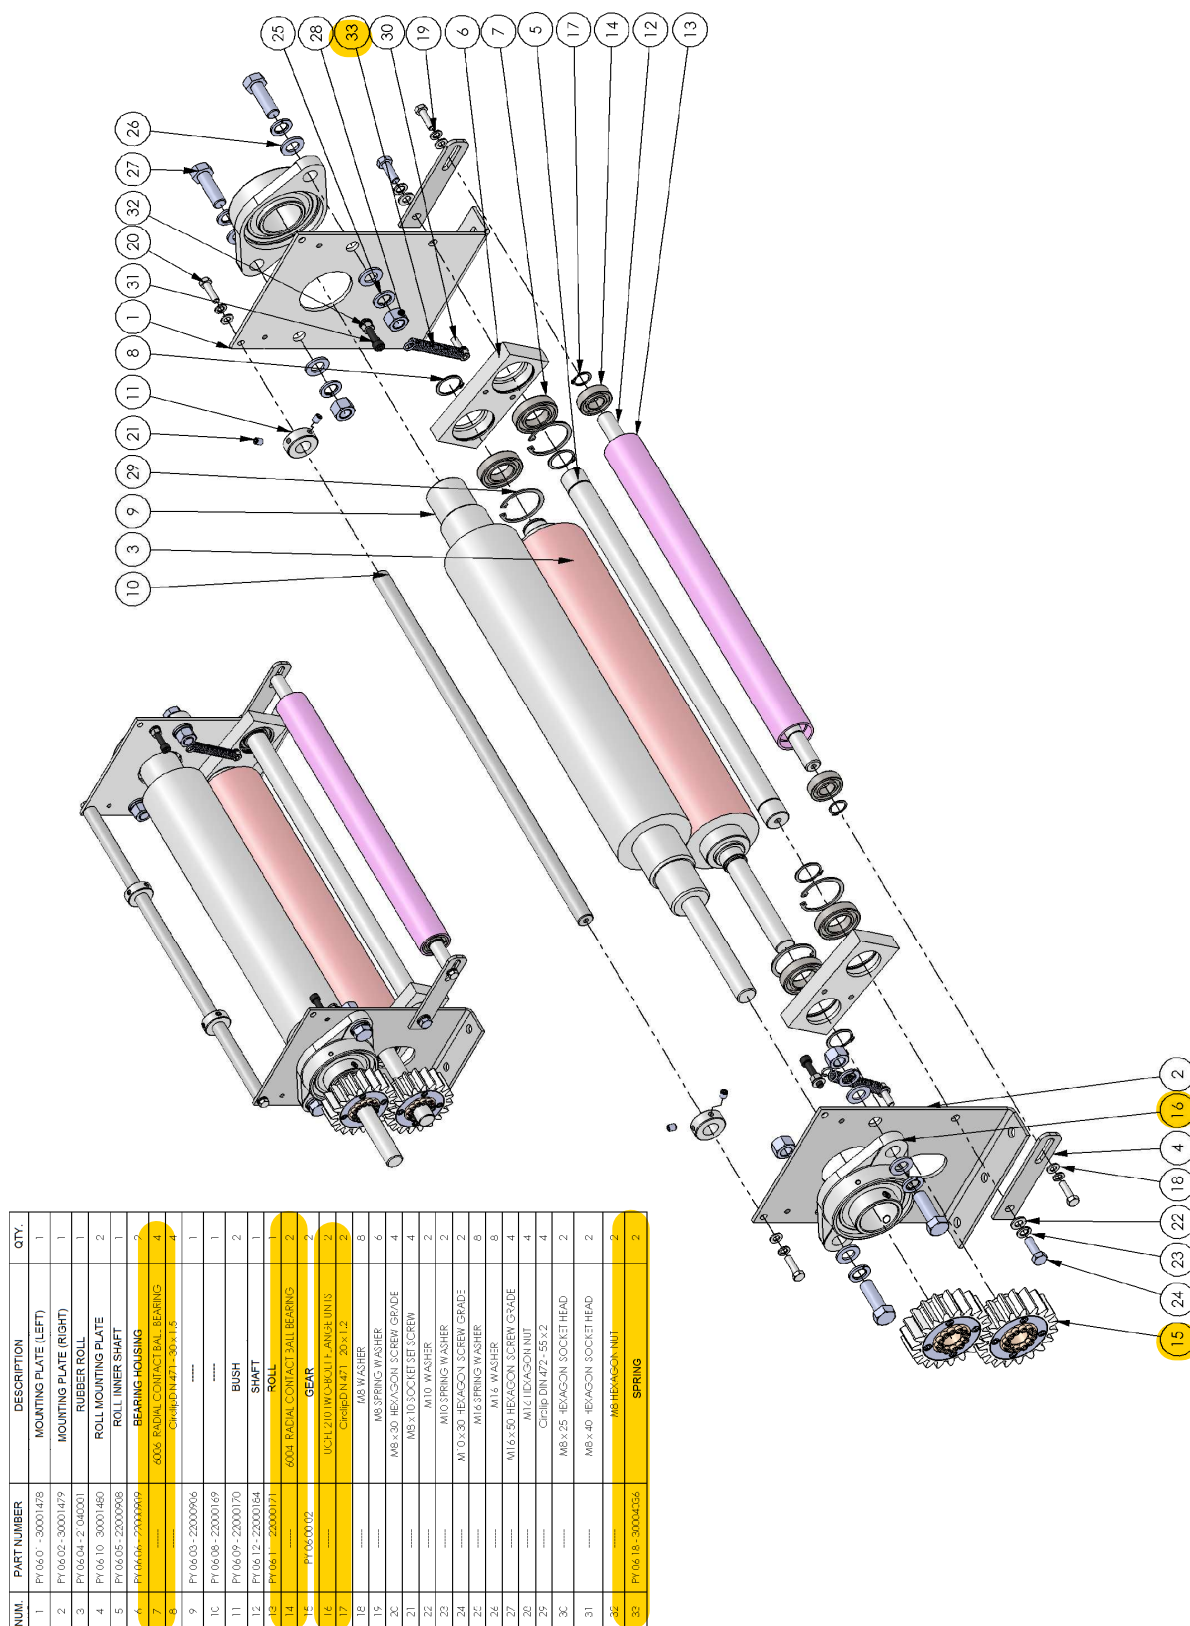

2. EXPLODED VIEWS

2.2.8 TURNING BAR UNIT

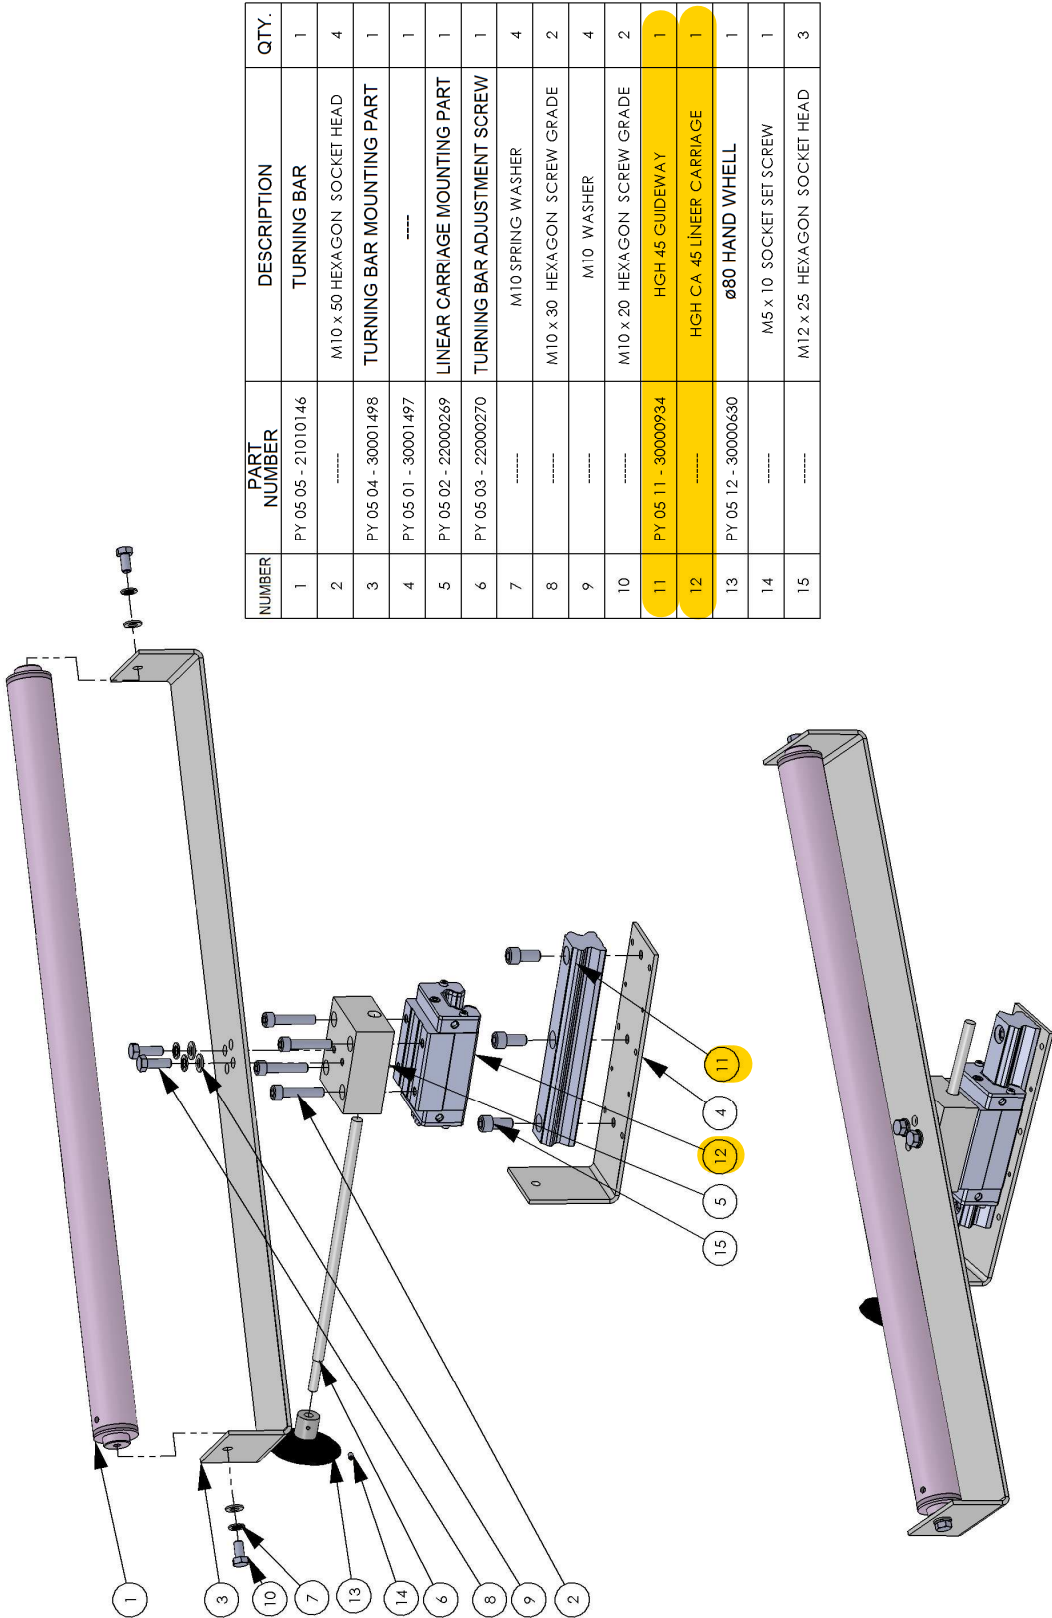


NUMBER	PART NUMBER	DESCRIPTION	QTY.
1	PY 05 05 - 21010146	TURNING BAR	1
2	-----	M10 x 50 HEXAGON SOCKET HEAD	4
3	PY 05 04 - 30001498	TURNING BAR MOUNTING PART	1
4	PY 05 01 - 30001497	-----	1
5	PY 05 02 - 22000269	LINEAR CARRIAGE MOUNTING PART	1
6	PY 05 03 - 22000270	TURNING BAR ADJUSTMENT SCREW	1
7	-----	M10 SPRING WASHER	4
8	-----	M10 x 30 HEXAGON SCREW GRADE	2
9	-----	M10 WASHER	4
10	-----	M10 x 20 HEXAGON SCREW GRADE	2
11	PY 05 11 - 30000934	HGH 45 GUIDEWAY	1
12	-----	HGH CA 45 LINEER CARRIAGE ø80 HAND WHEEL	1
13	PY 05 12 - 30000630	-----	1
14	-----	M5 x 10 SOCKET SET SCREW	1
15	-----	M12 x 25 HEXAGON SOCKET HEAD	3

2. EXPLODED VIEWS

2.2.10 DIE CUT UNIT


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
2	PY02 05	PUNCH COVER SHEET	8
3	PY02 12	ROBBIN ADJUSTMENT WEDGE	2
4	PY02 08	PUNCH UNIT SHEET	2
5	PY02 09	PUNCH SIDE SHEET	2
6	PY02 07	PUNCH UPPER SHEET	2
7	PY02 10	PUNCH LOWER SHEET	2
8	PY02 11	PUNCH INLET ROLLER CONNECTION SHEET	2
9	PY02 14	DIRECTION SHAF	1
10	PY02 15	600 TADAL COIL SET BALL BEARING	2
11	PY02 16	600 TADAL COIL SET BALL BEARING	2
12	PY02 17	600 TADAL COIL SET BALL BEARING	2
13	PY02 18	600 TADAL COIL SET BALL BEARING	2
14	PY02 19	600 TADAL COIL SET BALL BEARING	2
15	PY02 20	600 TADAL COIL SET BALL BEARING	2
16	PY02 21	600 TADAL COIL SET BALL BEARING	2
17	PY02 22	600 TADAL COIL SET BALL BEARING	2
18	PY02 23	600 TADAL COIL SET BALL BEARING	2
19	PY02 24	600 TADAL COIL SET BALL BEARING	2
20	PY02 25	600 TADAL COIL SET BALL BEARING	2
21	PY02 26	600 TADAL COIL SET BALL BEARING	2
22	PY02 27	600 TADAL COIL SET BALL BEARING	2
23	PY02 28	600 TADAL COIL SET BALL BEARING	2
24	PY02 29	600 TADAL COIL SET BALL BEARING	2
25	PY02 30	600 TADAL COIL SET BALL BEARING	2
26	PY02 31	600 TADAL COIL SET BALL BEARING	2
27	PY02 32	600 TADAL COIL SET BALL BEARING	2
28	PY02 33	600 TADAL COIL SET BALL BEARING	2
29	PY02 34	600 TADAL COIL SET BALL BEARING	2
30	PY02 35	600 TADAL COIL SET BALL BEARING	2
31	PY02 36	600 TADAL COIL SET BALL BEARING	2
32	PY02 37	600 TADAL COIL SET BALL BEARING	2
33	PY02 38	600 TADAL COIL SET BALL BEARING	2
34	PY02 39	600 TADAL COIL SET BALL BEARING	2
35	PY02 40	600 TADAL COIL SET BALL BEARING	2
36	PY02 41	600 TADAL COIL SET BALL BEARING	2
37	PY02 42	600 TADAL COIL SET BALL BEARING	2
38	PY02 43	600 TADAL COIL SET BALL BEARING	2
39	PY02 44	600 TADAL COIL SET BALL BEARING	2
40	PY02 45	600 TADAL COIL SET BALL BEARING	2
41	PY02 46	600 TADAL COIL SET BALL BEARING	2
42	PY02 47	600 TADAL COIL SET BALL BEARING	2
43	PY02 48	600 TADAL COIL SET BALL BEARING	2
44	PY02 49	600 TADAL COIL SET BALL BEARING	2
45	PY02 50	600 TADAL COIL SET BALL BEARING	2
46	PY02 51	600 TADAL COIL SET BALL BEARING	2
47	PY02 52	600 TADAL COIL SET BALL BEARING	2
48	PY02 53	600 TADAL COIL SET BALL BEARING	2
49	PY02 54	600 TADAL COIL SET BALL BEARING	2
50	PY02 55	600 TADAL COIL SET BALL BEARING	2
51	PY02 56	600 TADAL COIL SET BALL BEARING	2
52	PY02 57	600 TADAL COIL SET BALL BEARING	2
53	PY02 58	600 TADAL COIL SET BALL BEARING	2
54	PY02 59	600 TADAL COIL SET BALL BEARING	2
55	PY02 60	600 TADAL COIL SET BALL BEARING	2
56	PY02 61	600 TADAL COIL SET BALL BEARING	2
57	PY02 62	600 TADAL COIL SET BALL BEARING	2
58	PY02 63	600 TADAL COIL SET BALL BEARING	2
59	PY02 64	600 TADAL COIL SET BALL BEARING	2
60	PY02 65	600 TADAL COIL SET BALL BEARING	2
61	PY02 66	600 TADAL COIL SET BALL BEARING	2
62	PY02 67	600 TADAL COIL SET BALL BEARING	2
63	PY02 68	600 TADAL COIL SET BALL BEARING	2
64	PY02 69	600 TADAL COIL SET BALL BEARING	2
65	PY02 70	600 TADAL COIL SET BALL BEARING	2
66	PY02 71	600 TADAL COIL SET BALL BEARING	2
67	PY02 72	600 TADAL COIL SET BALL BEARING	2
68	PY02 73	600 TADAL COIL SET BALL BEARING	2
69	PY02 74	600 TADAL COIL SET BALL BEARING	2
70	PY02 75	600 TADAL COIL SET BALL BEARING	2
71	PY02 76	600 TADAL COIL SET BALL BEARING	2
72	PY02 77	600 TADAL COIL SET BALL BEARING	2
73	PY02 78	600 TADAL COIL SET BALL BEARING	2
74	PY02 79	600 TADAL COIL SET BALL BEARING	2
75	PY02 80	600 TADAL COIL SET BALL BEARING	2
76	PY02 81	600 TADAL COIL SET BALL BEARING	2
77	PY02 82	600 TADAL COIL SET BALL BEARING	2
78	PY02 83	600 TADAL COIL SET BALL BEARING	2
79	PY02 84	600 TADAL COIL SET BALL BEARING	2
80	PY02 85	600 TADAL COIL SET BALL BEARING	2
81	PY02 86	600 TADAL COIL SET BALL BEARING	2
82	PY02 87	600 TADAL COIL SET BALL BEARING	2
83	PY02 88	600 TADAL COIL SET BALL BEARING	2

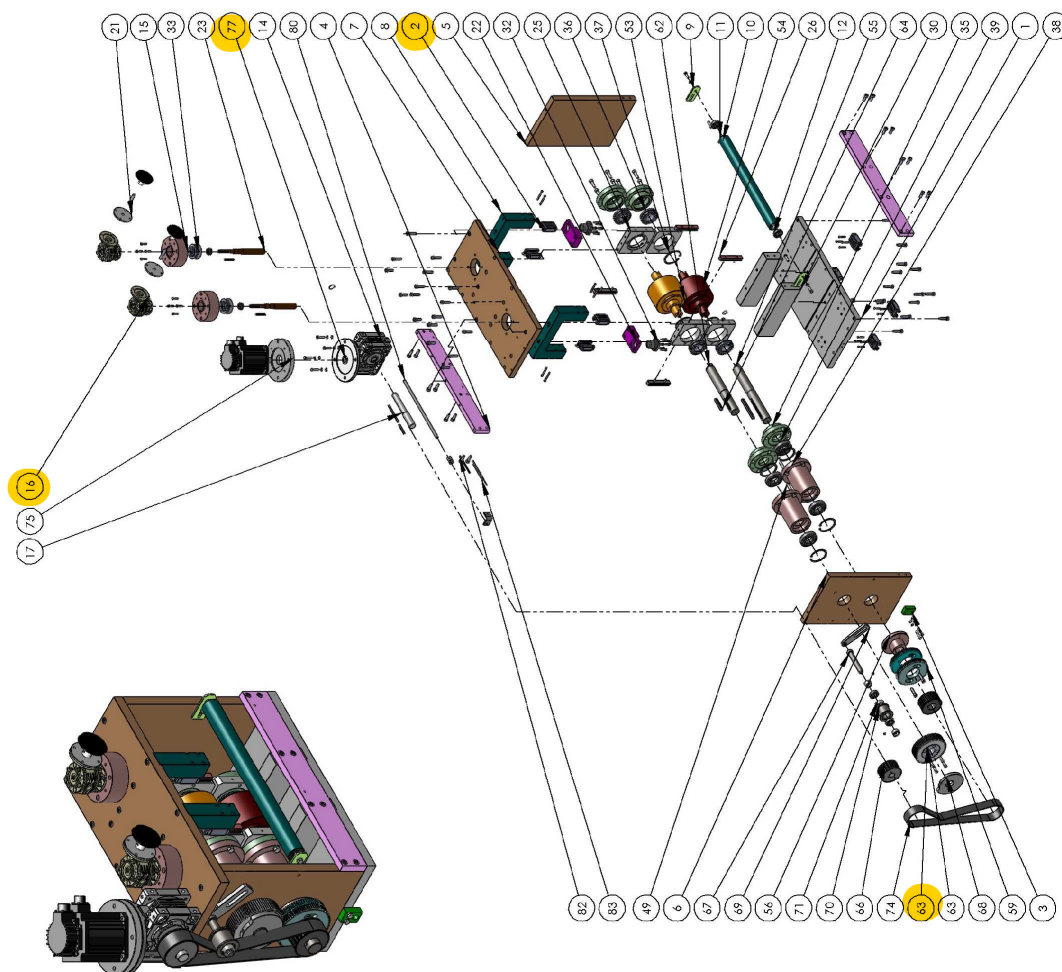

2. EXPLODED VIEWS


2.2.11 LABELLER UNIT

NUM.	DESCRIPTION	QTY.
1	AVERY DENNISON ALS 104 LABELLER UNIT	1
2	HOLDER PLATE	1
3	BASE PLATE FOR GUIDEWAY	1
4	INA TKVD40 GUIDEWAY	1
5	INA KWVE40 BALL CARRIAGE	1
6	SHAFT	1
7	END PLATES	2
8	M6 SCREW	1
9	HOLDER PLATE BASE PART	1
10	COUNTER NUT	1
11	SHAFT CLAMP	1

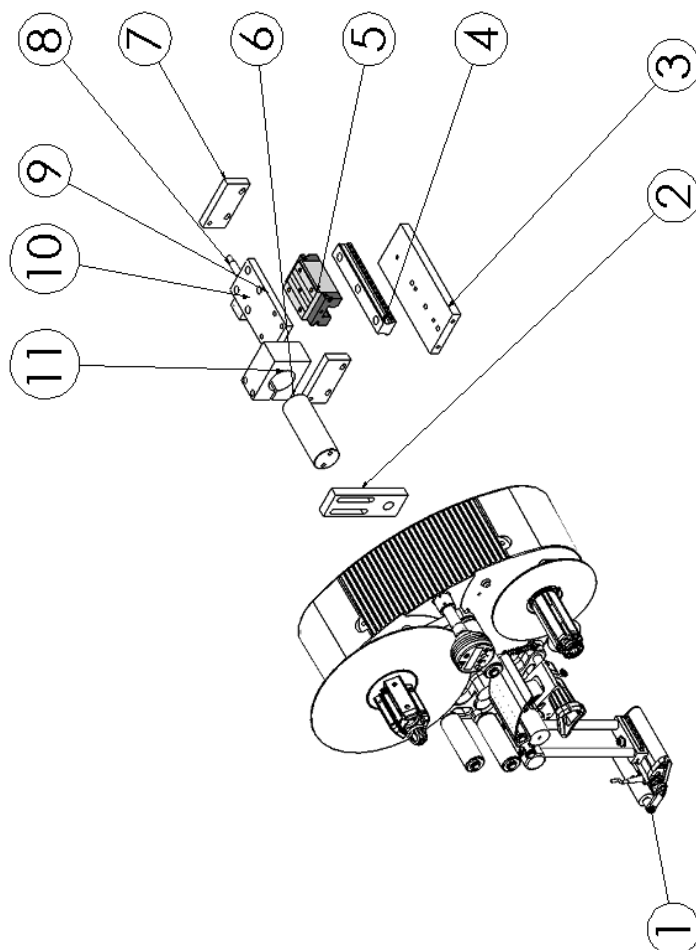


2. EXPLODED VIEWS

2.2.12 EQUALIZER CONVEYOR

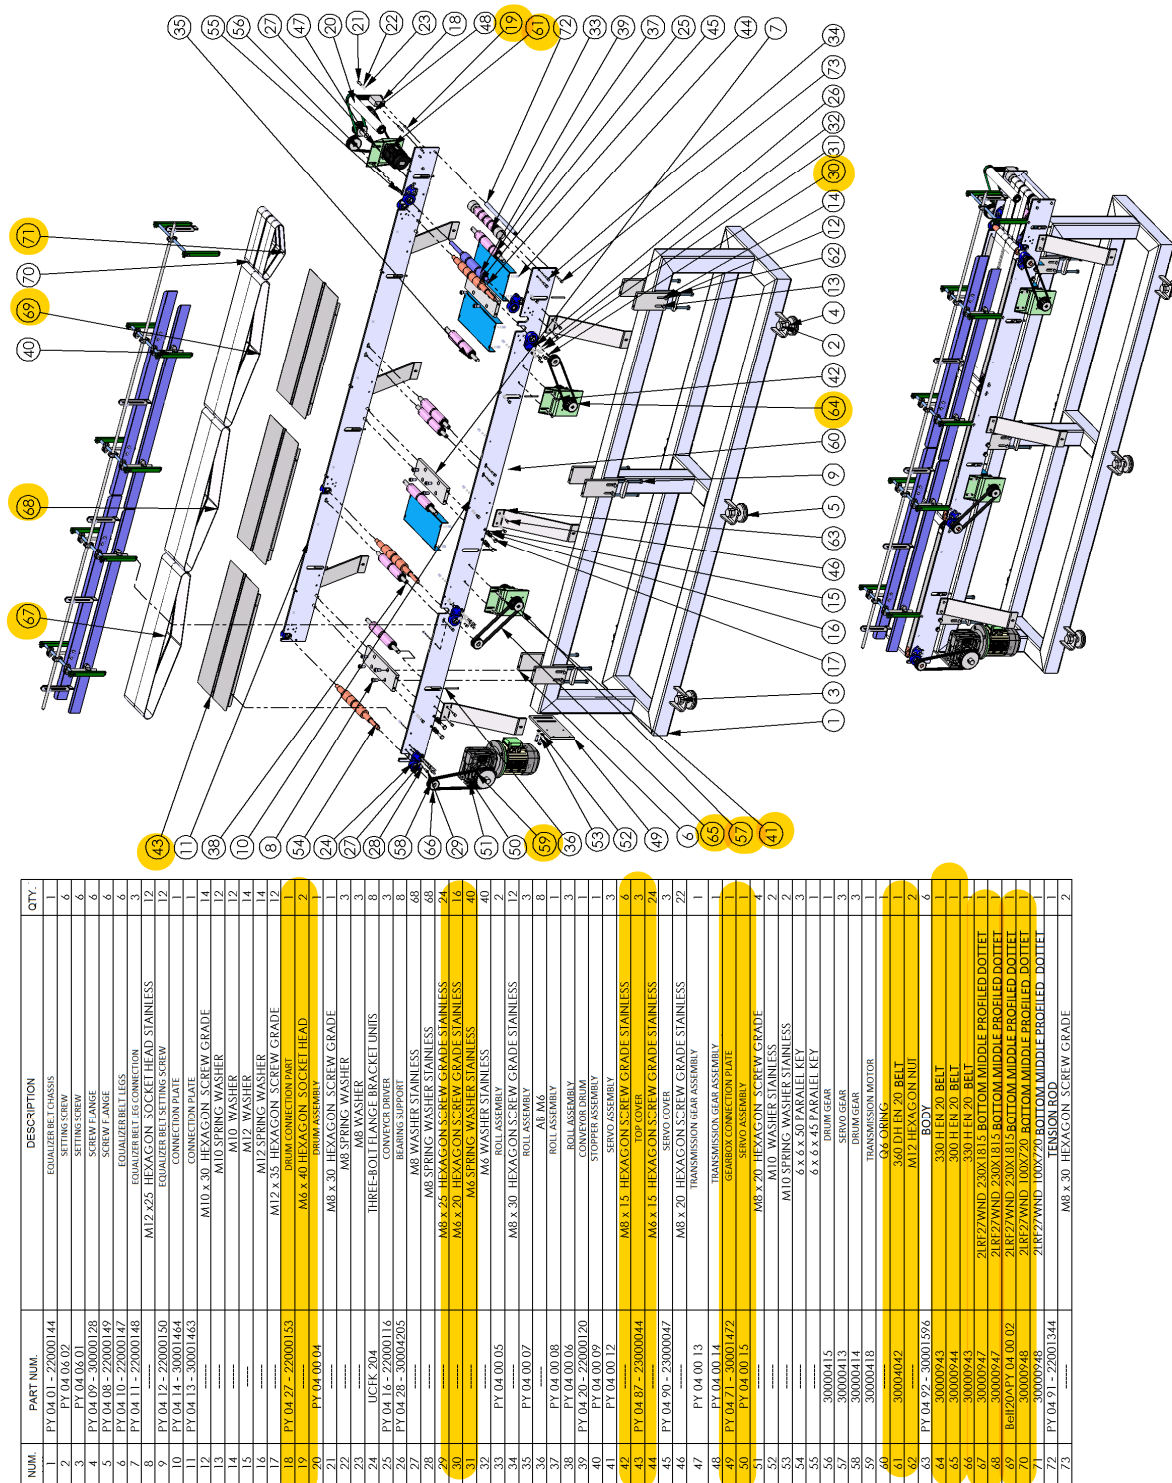


2. EXPLODED VIEWS

2.2.13 EQUALIZER CONVEYOR INPUT PART

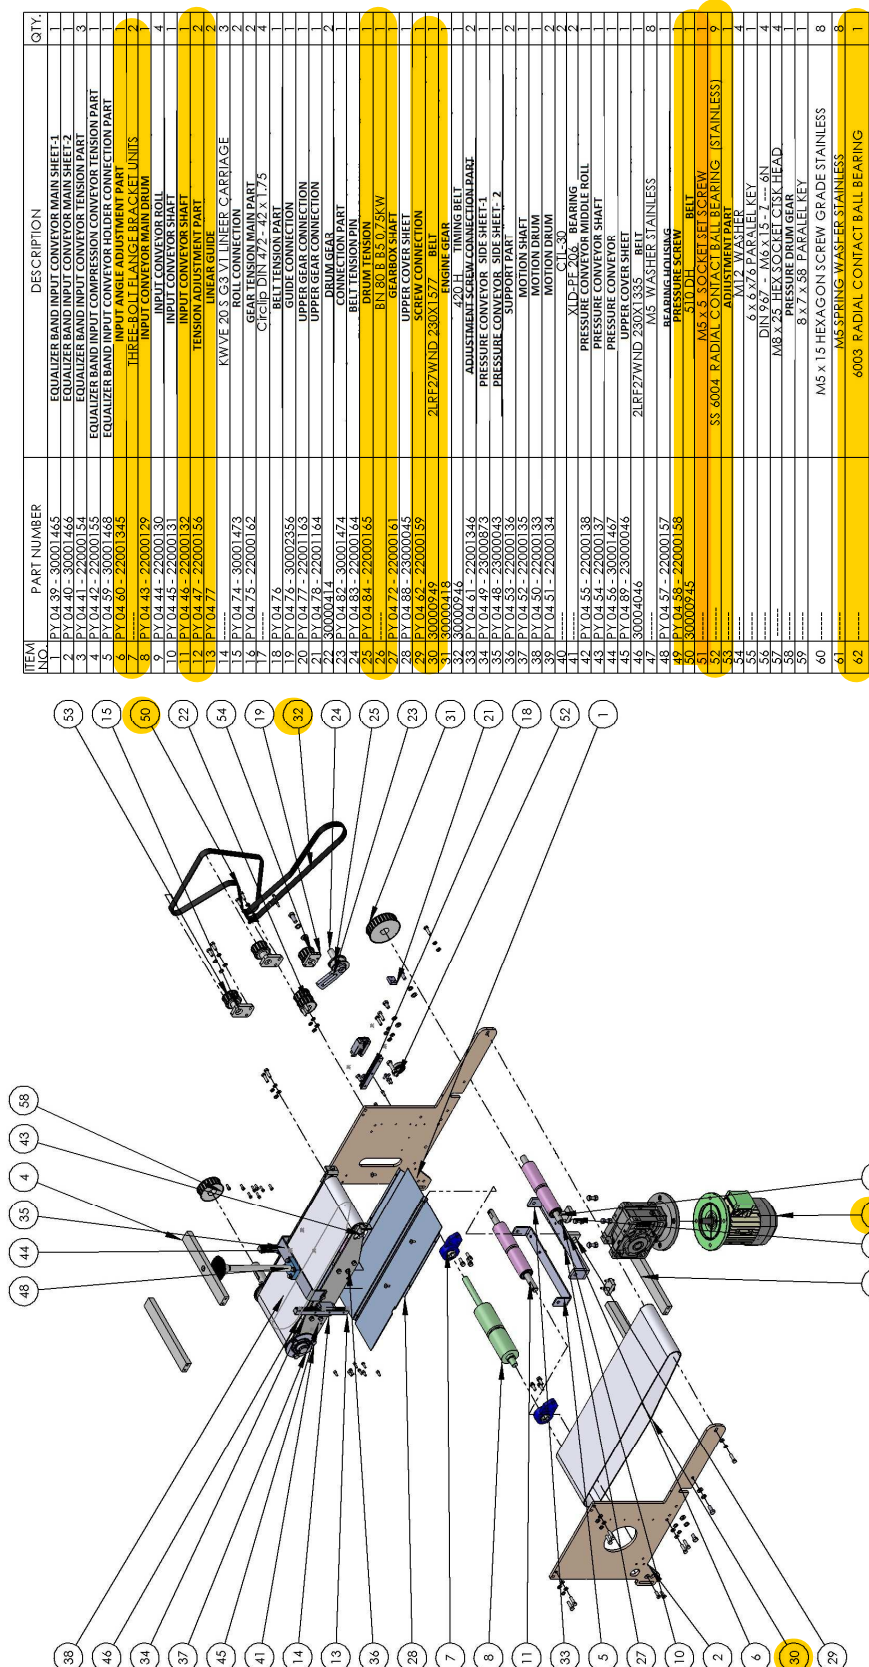

2. EXPLODED VIEWS

2.2.14 HMI PANEL & LIGHTNING COLUMN

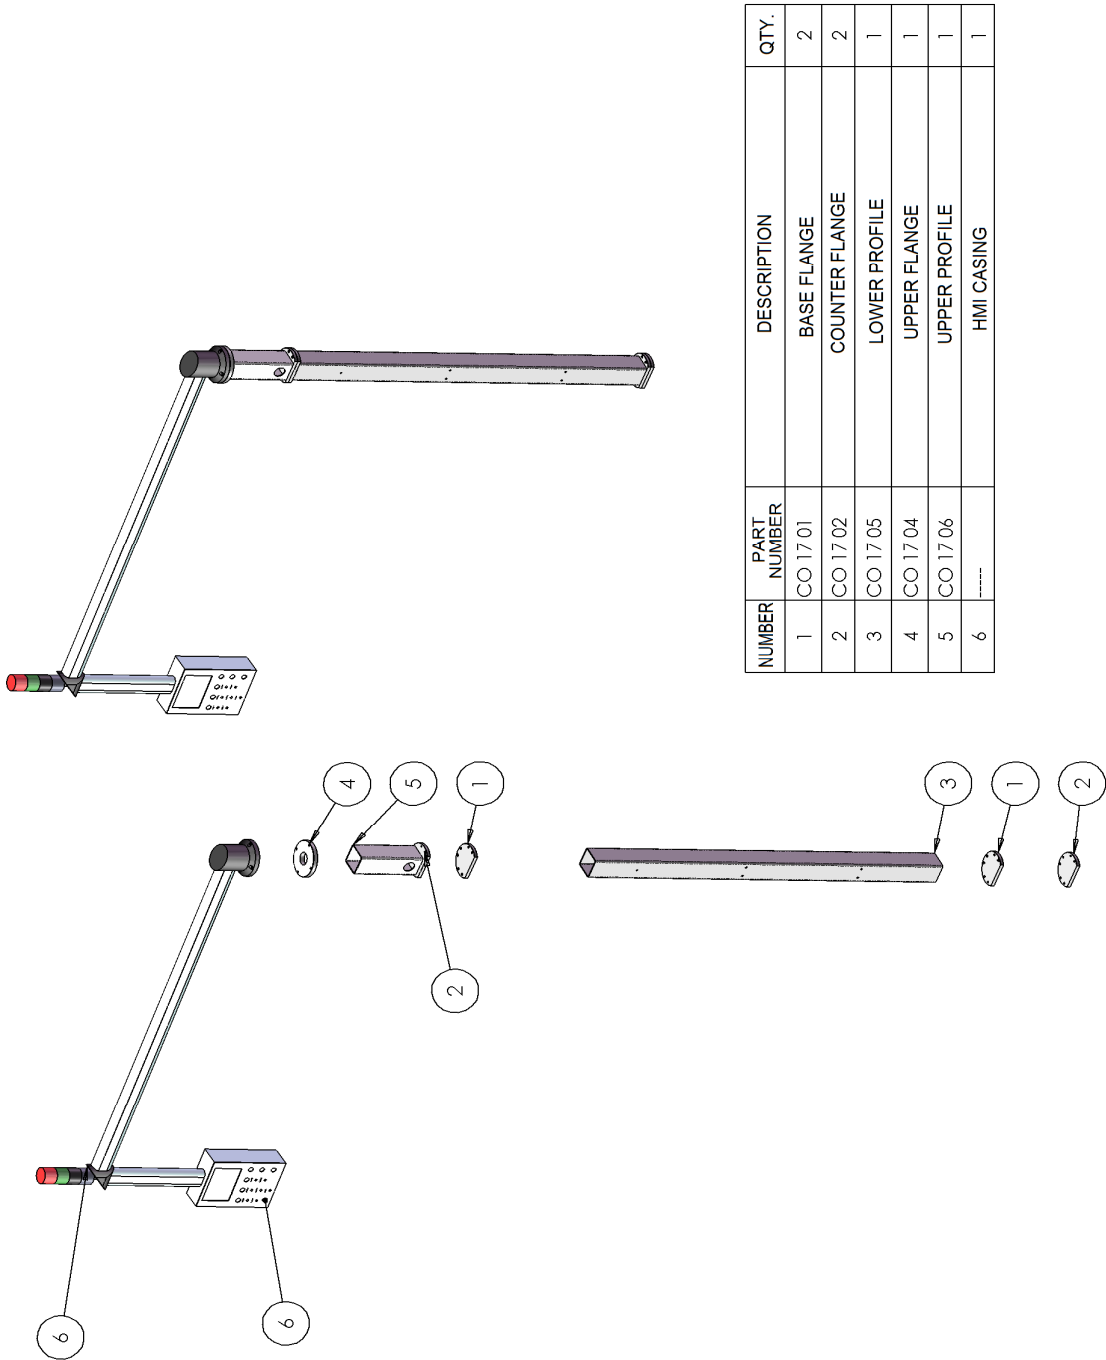


2. EXPLODED VIEWS

BLANK PAGE

3. INSTALLATION

3.1. MACHINE LAYOUT

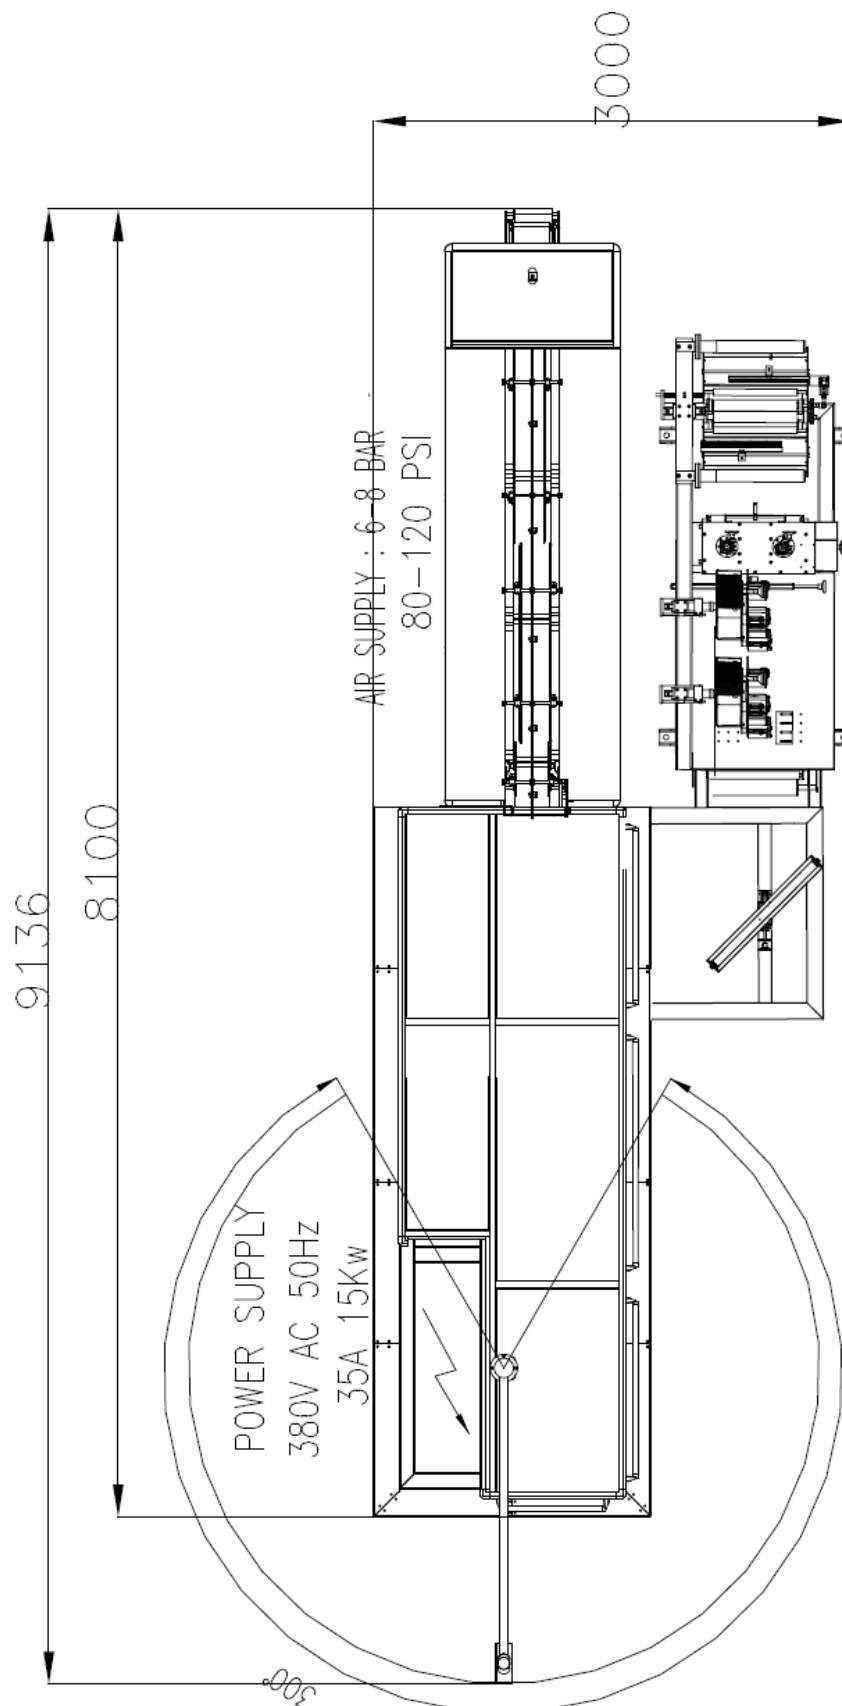

4. OPERATING THE MACHINE

4.1 OPENING PAGE



- Enter the Main Page through Enter Button
- You can change the language by pushing flags.

4. OPERATING THE MACHINE

4.2 MAIN MENU



- You can see the set and real values of Machine Speed (pack/min) and Package Length (mm) on the upper part of this page.
- You can see the situations of conveyor bands and roll puller servo motors on the right side of the page.
- You can change the language by pushing flags.
- You can enter the pages which you want by pushing the buttons as Production, Manual, Jaws, Recipe, Operator Authorization, Heating Group, Control, Monitoring Shortcut, Setting and Alarm.
- You can run the machine by pushing Machine Start button.
- On the lower side of the page, the value you enter by pushing the blue box shows the package quantity per minute.

4. OPERATING THE MACHINE

4.3 SETTINGS



- You can enter the SETTING-2 page by pushing SETTING-2 button.
- You can enter the SETTING-3 page by pushing SETTING-3 button.
- You can adjust the Package Length in terms of mm through PACKAGE LENGTH setting.
- You can adjust the Product Length in terms of mm through PRODUCT LENGTH setting.
- You can adjust the positions of spots on packaging foil in terms of mm through COLOUR PHOTOCELL OFFSET setting.
- You can adjust the entering position of product into package on feeding conveyor band through BAND-1 OFFSET setting (mm).
- You can adjust the speed of sealing discs in terms of % through DISC SPEED setting.

4. OPERATING THE MACHINE

4.3.1 SETTINGS-2



- You can enter SETTING-1 and SETTING-2 pages by pushing related buttons.
- You can adjust the speed of feeding conveyor motor in terms of % through FEEDING CONVEYOR BAND SPEED % setting.
- GUSSET Setting;
 - o You can adjust the time in which PISTON of gusset presses on packaging foil through START% setting.
 - o STOP% SETTINGSıyla, çenelerin hareketinin hangi evresinde körük PISTONunun ambalajdan ayrılacağını belirtebilirsiniz. You can determine the time in which PISTON of gusset leaves from packaging foil through STOP% setting.
- KNIFE setting,
 - o You can adjust the time in which knife PISTON pushes the knife through START% setting.
 - o You can adjust the time in which knife PISTON draws back the knife through STOP% setting.
- AIR TAKING setting,
 - o You can adjust the time in which jaws push the air taking PISTON through START% setting
 - o You can adjust the time in which jaws draws back the air taking PISTON through STOP% setting.
- EURO SLOT setting,
 - o You can adjust the time in which euro slot PISTON is pushed through START% setting.
 - o You can adjust the time in which euro slot PISTON is drawn back through STOP% setting.

4. OPERATING THE MACHINE

4.3.2 SETTINGS-3



- You can enter SETTINGS-1 ve SETTINGS-2 pages by pushing related buttons.
- You can adjust the position of punch pressing in terms of mm through PUNCH OFFSET SETTINGS.
- You can adjust the position of stickers while sealing in terms of mm through STICKER-1 ve STICKER-2 SETTINGS.
- You can adjust the position of printing in terms of mm through PRINTER OFFSET SETTINGS.
- You can adjust the splice point of rolls in terms of mm through BOBBIN SPLICE OFFSET SETTINGS

4. OPERATING THE MACHINE

4.4.1 HEATING GROUP-1



- You can adjust the upper jaw working heat through UPPER JAW °C SETTINGS and see the real working heat of jaw through REAL section.
- You can adjust the lower jaw working heat through LOWER JAW °C SETTINGS and see the real working heat of jaw through REAL section.
- You can adjust the heat of first disc through DISC-1 °C SETTINGS and see the real working heat of disc through REAL section.
- You can adjust the heat of second disc through DISC-2 °C SETTINGS and see the real working heat of disc through REAL section
- You can adjust highest heat which jaws and discs are allowed to reach until through ALARM LIMIT °C SETTINGS.

4. OPERATING THE MACHINE

4.4.2 HEATING GROUP-2



- You can adjust the heat of preheating discs through PREHEATING – 1 °C and PREHEATING – 2 SETTINGS and see the real working heat through REAL section.
- You can adjust the heat of substitute discs through SUBSTITUTE – 1 °C and SUBSTITUTE – 2 SETTINGS and see the real working heat through REAL section.
- You can adjust highest heat which jaws and discs are allowed to reach until through ALARM LIMIT °C SETTINGS.

4. OPERATING THE MACHINE

4.4.3 PRODUCTION



- You can monitor the total production, total production hours, production per shift, total production hour per shift through PRODUCTION page.
- You can enter the quantity of products you intend to produce through SETTING section and monitor the real production quantity through REAL box on the lower section of the page.

4. OPERATING THE MACHINE

4.5 RECIPE



- You can save the recipe by entering the SAVE RECIPE after entering number and name on RECIPE NO and RECIPE NAME.
- You can load the recipe by pushing RECIPE LOAD button.
- You can monitor the list of recipes by entering RECIPE LIST button.
- You can monitor the specialities of recipe by pushing RECIPE CONTENT button.

t

4. OPERATING THE MACHINE

4.6.1 CONTROL-1



- You can open and close the servo which gives linear movement to jaws through JAW LINEAR OPEN-CLOSE button.
- You can open and close the servo of punch through PUNCH OPEN-CLOSE button.
- You can open and close the servo of sticker 1 through STICKER-1 AÇIK OPEN-CLOSE
- You can open and close the servo of sticker 2 through STICKER-2 AÇIK OPEN-CLOSE
- AUTOMATIC SPEED SETTINGS OPEN - CLOSE
- You can open and close of the servo of jaw's opening and closing through JAW SEALING OPEN-CLOSE button.
- You can open and close the sensor on conveyor band through PHOTOCELL OPEN-CLOSE button.
- You can open and close the conveyor motors through BANDS OPEN-CLOSE button.
- You can open and close the servo motors of discs through DISC SERVO OPEN-CLOSE button.
- You can activate or deactivate the auto roll changing through AUTO BOBBIN CHANGE OPEN-CLOSE button.
- You can activate or deactivate the auto sticker changing through STICKER AUTO CHANGE OPEN-CLOSE button.
- You can open and close the use of bands manually through BANDS MANUAL button.
- You can open and close the puller servos through PULLER SERVO OPEN-CLOSE button.
- You can open and close the Bobin-1 motor through BOBBIN-1 ACTIVE-PASSIVE button.
- You can reference the machine by pushing MACHINE REFERENCE button.
- You can get the CONTROL-2 page through CONTROL-2 button.

4. OPERATING THE MACHINE

4.6.2 CONTROL-2



- You can open and close the PISTON of knife through KNIFE OPEN-CLOSE button.
- You can open and close the printer through PRINTER OPEN-CLOSE button.
- You can open and close the PISTONS of gussets through GUSSET OPEN-CLOSE button
- You can activate and deactivate the sensors which gives warning in case doors are open through DOOR CONTROL OPEN-CLOSE button.
- You can activate and deactivate the PISTONS of air taking through AIR TAKING OPEN-CLOSE button.
- You can activate and deactivate the bobbin end sensors through BOBBIN END CONTROL OPEN-CLOSE button.
- You can activate and deactivate the PISTON of euro slot through EURO SLOT OPEN-CLOSE button.
- You can reference the machine by pushing MACHINE REFERENCE button.

4. OPERATING THE MACHINE

4.7 MANUAL



- DISC-1 PISTON OPEN
- DISC-2 PISTON OPEN
- DISC-3 PISTON OPEN
- BOBBIN CHANGE PISTON

4. OPERATING THE MACHINE

4.8 ALARM HISTORY



- You can monitor the past alarm history through ALARM HISTORY page.

4. OPERATING THE MACHINE

4.9 ALARM MONITORING



- You can check the explanations of the alarms seen on the screen through ALARM MONITORING page.

4. OPERATING THE MACHINE

4.10 SENSOR MONITORING



- You can see the band and machine sensors through SENSOR MONITORING page.

4. OPERATING THE MACHINE

4.11.1 SERVO MONITORING-1



- LINEAR JAWS,
 - o You can monitor the speed of jaw linear movement servo in terms m/min.
 - o You can monitor the speed of jaw linear movement servo in terms rpm.
 - o You can monitor the torque of jaw linear movement servo in terms %.
- JAW SEALING,
 - o You can monitor the speed of jaw sealing servo in terms of m/min.
 - o You can monitor the speed of jaw sealing servo in terms of rpm.
 - o You can monitor the torque of jaw sealing servo in terms %.
- DISC,
 - o You can monitor the speed of disc servo in terms m/min.
 - o You can monitor the speed of disc servo in terms rpm.
 - o You can monitor the torque of disc servo in terms %.
- PULLER,
 - o You can monitor the speed of puller servo in terms m/min.
 - o You can monitor the speed of puller servo in terms rpm.
 - o You can monitor the torque of puller servo in terms %.

4. OPERATING THE MACHINE

4.11.2 SERVO MONITORING-2



- PUNCH,
 - o You can monitor the speed of punch servo in terms m/min.
 - o You can monitor the speed of punch servo in terms rpm.
 - o You can monitor the torque of punch servo in terms %.
- BAND-1, BAND-2, BAND-3,
 - o You can monitor the speed of band servo in terms m/min.
 - o You can monitor the speed of band servo in terms rpm.
 - o You can monitor the torque of band servo in terms %.

4. OPERATING THE MACHINE

4.12.1 OPERATOR AUTHORIZATION-1

AUTHORIZATION-1		UK	TURKEY	DP DYNAMIC PLUS
HEATINGS SET	☐	STICKER-2 OFFSET SET	☐	OPERATOR RESTRICTED AUTHORIZED
PACK LENGTH SET	☐	PRINTER OFFSET SET	☐	
PRODUCT LENGTH SET	☐	BELLOWS START&STOP SET	☐	
COLOR P.CELL OFFSET SET	☐	KNIFE START&STOP SET	☐	
BAND-1 OFFSET SET	☐	PRES START&STOP SET	☐	
DISC SPEED % SET	☐	EUROSLOT START&STOP SET	☐	
PUNCH OFFSET SET	☐	RESERVE	☐	
STICKER-1 OFFSET SET	☐	RESERVE	☐	
				OPERATOR AUTHORIZATION-2
				MAIN MENU

- You can authorize your operator through OPERATOR AUTHORIZATION-1 page.

4. OPERATING THE MACHINE

4.12.2 OPERATOR AUTHORIZATION-2



- You can authorize your operator in terms of settings through OPERATOR AUTHORIZATION-2 page.

4. OPERATING THE MACHINE

4.13.1 PACKAGE LENGTH GRAPH



- You can monitor the intended product length and real length in terms of mm on the lower section of PACKAGE LENGTH page.
- On the upper section of the page, you can monitor the time graph of intended and real values.

4. OPERATING THE MACHINE

4.13.2 PACKAGE SPEED GRAPH



- You can monitor the intended package speed on SETTINGS box while you can monitor real speed on REAL box in terms of Pack/min. through lower section of PACKAGE SPEED page.
- On the upper section of the page, you can monitor the time graph of intended and real values.

4. OPERATING THE MACHINE

4.13.3 UPPER JAW HEAT GRAPH



- On the lower section of UPPER JAW page; you can monitor the intended jaw heat on SETTINGS box while you can monitor real heat on REAL box in terms of °C.
- On the upper section of the page, you can monitor the time graph of intended and real values.

4. OPERATING THE MACHINE

4.13.4 LOWER JAW HEAT GRAPH



- On the lower section of LOWER JAW page; you can monitor the intended jaw heat on SETTINGS box while you can monitor real heat on REAL box in terms of °C.
- On the upper section of the page, you can monitor the time graph of intended and real values.

4. OPERATING THE MACHINE

4.13.5 DISC-1 HEAT GRAPH



- On the lower section of DISC-1 page; you can monitor the intended disc heat on SETTINGS box while you can monitor real heat on REAL box in terms of °C.
- On the upper section of the page, you can monitor the time graph of intended and real values.

4. OPERATING THE MACHINE


4.13.6 DISC-2 HEAT GRAPH



- On the lower section of DISC-2 page; you can monitor the intended disc heat on SETTINGS box while you can monitor real heat on REAL box in terms of °C.
- On the upper section of the page, you can monitor the time graph of intended and real values.

4. OPERATING THE MACHINE

4.14 ALARM&NOTIFICATION MESSAGES

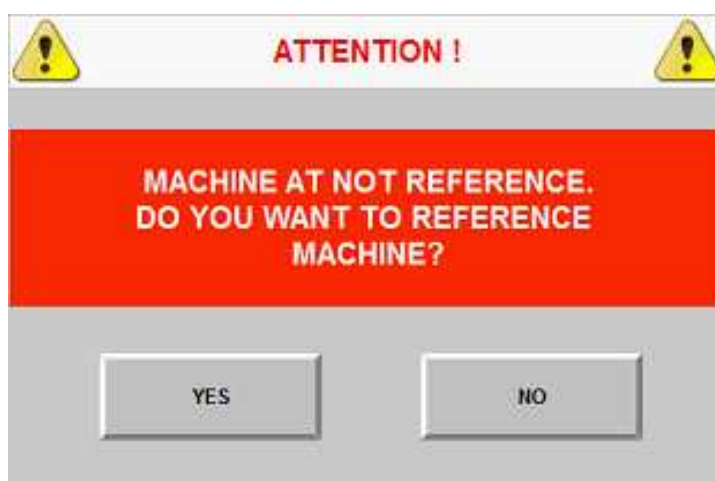

4. OPERATING THE MACHINE

4.15 SERVICE MENU



- You can reach the pages which you want by pushing buttons of Service, Settings, System Setup, Heating and Autotuning.
- You can reset the total production records by TOTAL PRODUCTION RESET button.
- ÇALIŞMA SAATİ RESET buttonuna basarak çalışma saati bilgisini sıfırlayabilirsiniz. You can reset the working hour records by pushing WORKING HOUR RESET button.

4. OPERATING THE MACHINE

4.15.1 SERVICE SETTINGS – AUTOTUNING-1



- It enables you to adjust upper jaw, lower jaw, disc-1, disc-2 automatically.
- You can enter the intended working heat on settings box.
- You can monitor the momentary heat.
- You can open and close the automatic heating adjustment through AUTOTUNING STOP button.

4. OPERATING THE MACHINE

4.15.2 SERVICE SETTINGS – AUTOTUNING-2



- It enables you to adjust preheating-1, preheating-2, substitute-1, substitute-2 discs automatically.
- You can enter the intended working heat on settings box.
- You can monitor the momentary heat.
- You can open and close the automatic heating adjustment through AUTOTUNING STOP button.

4. OPERATING THE MACHINE

4.15.3 SERVICE SETTINGS-1

SERVICE SETUP-1				
SIREN ON TIME sec	0000			
DISC CYLINDER WAITING DURATION sec	0000			
DISC CYLINDER OFF DELAY TIME sec	0000			
ROLL FINISHED MACHINE STOP TIME sec	0000			
STICKER ALARM DELAY TIME sec	0000			
ROLL APPEND TIME sec	0000			
PHOTOCELL ALARM PACKET PIECE	999	SERVICE SHORTCUT MAIN MENU 		

- You can adjust the length of jaws' linear movement in terms of % package length through JAW LINEAR FORWARD SYNCHRON.
- You can adjust the distance from stopping to working speed in terms of % package length during the linear movement of jaws through JAW LINEAR FORWARD ACCELERATION.
- You can adjust the distance from working speed to stopping in terms of % package length during the linear movement of jaws through JAW LINEAR FORWARD SLOW DOWN.

4. OPERATING THE MACHINE

4.15.4 SERVICE SETTINGS-2



- You can adjust the distance from stopping to working speed in terms of % package length while jaws are closing through JAW CLOSING ACCELERATION.
- You can adjust the distance from working speed to stopping in terms of % package length while jaws are closing through JAW CLOSING SLOW DOWN setting.
- You can adjust the working speed of jaws in terms of % through JAWS OPENING SPEED setting.
- You can adjust the time from stopping to working speed in terms of ms while jaws are opening through JAW OPENING ACCELERATION RAMP setting.
- You can adjust the time from working speed to stopping in terms of ms while jaws are opening through JAW OPENING SLOW DOWN RAMP setting.
- You can adjust the activation time, in terms of ms, of alarm in case jaw opening-closing servo is under torque limit through JAW TORQUE ALARM DELAY TIME setting.
- You can determine the lowest working torque in terms of % of jaws opening-closing servo which makes alarm activate through JAWS TORQUE ALARM LIMIT setting.

4. OPERATING THE MACHINE

4.15.5 SERVICE SETTINGS-3

SERVICE SETUP-3				
MACHINE AUTOMATIC START DELAY sec	0000			
MACHINE AUTOMATIC STOP DELAY sec	0000			
BAND AUTOMATIC STOP DELAY sec	0000			
MACHINE AUTO ACCELERATION DELAY s	000			
MACHINE AUTO DECELERATION DELAY s	000			
MACHINE AUTO SPEED TOLERANCE +/- P/min	999			
POSITON STOP SPEED P/min	999	SERVICE SHORTCUT MAIN MENU 		

- You can enter the time for delaying auto start of machine in terms of second through MACHINE AUTO START DELAY setting.
- You can enter the time for delaying auto stop of machine in terms of second through MACHINE AUTO STOP DELAY setting.
- You can enter the time for delaying auto stop of bands in terms of second through BANDS AUTO STOP DELAY setting.
- You can enter the time for delaying auto acceleration of machine in terms of second through MACHINE AUTO ACCELERATION DELAY setting.
- You can enter the time for delaying auto slowing down of machine in terms of second through MACHINE AUTO SLOW DOWN DELAY.
- MACHINE AUTO SPEED CHANGE (Pack/min)

4. OPERATING THE MACHINE

4.15.6 SERVICE SETTINGS-4

SERVICE SETUP-4				
BAND-3 JOG SPEED %	999			
BAND-3 ACCELERATION RAMP ms	9999			
BAND-3 DECELERATION RAMP ms	9999			
BAND-4 SYNCRONE SPEED %	9999			
BAND-4 JOG SPEED %	9999			
UNWINDER INVERTER SYNCRONE SPEED %	9999			
		SERVICE SHORTCUT MAIN MENU 		

- BAND-3 JOG SPEED % SETTINGS
- BAND-3 ACCELERATION RAMP(ms) SETTINGS
- BAND-3 SLOWING DOWN RAMP(ms) SETTINGS
- BAND-4 SYNCHRON SPEED %
- BAND-4 JOG SPEED %

4. OPERATING THE MACHINE

4.15.7 SERVICE SETTINGS-5



- WARNING TIME(sn) SETTINGS
- DISC CYKINDERS WAITING TIME (sn)
- BOBBIN END MACHINE STOP TIME (sn) SETTINGS
- STICKER ALARM DELAY TIME (sn)
- BOBBIN CHANGE TIME (sn) SETTINGS
- FOTOSEL ALARM PAKET SAYISI PHOTOCCELL ALARM PACKAGE QUANTITY
- POZİSYON STOP/JOG HIZI(Paket/dk)

4.16.1 RECIPE LIST



4. OPERATING THE MACHINE

4.16.2 RECIPE CONTENT-2

RECIPE CONTENTS-2		23 01 12		OP DYNAMIC PLUS	
LOADED RECIPE	00	14:30:51			
KNIFE START %	999	BELLOWS START %	999		
KNIFE STOP %	999	BELLOWS STOP %	999		
PRESS START %	999	PRINTER OFFSET mm	-999		
PRESS STOP %	999	ROLL APPEND OFFSET Pcs	999		
EURO SLOT START %	999	ROLL APPEND OFFSET mm	-999		
EURO SLOT STOP %	999				
PUNCH OFFSET mm	999				
STICKER-1 OFFSET mm	-999				
STICKER-2 OFFSET mm	-999				
				<<< OK	

- You can see the content of recipe through Recipe Content-1

4. OPERATING THE MACHINE

4.17.1 PACKAGE LENGTH



- You can enter the package length in terms of mm on PACKAGE LENGTH box.

4. OPERATING THE MACHINE

4.17.2 PRODUCT LENGTH



- You can enter the product length in terms of mm on PRODUCT LENGTH box.

4. OPERATING THE MACHINE


4.17.3 BAND-1 OFFSET



- BAND-1 OFFSET(mm) SETTINGS

4. OPERATING THE MACHINE

4.17.4 DISC SPEED

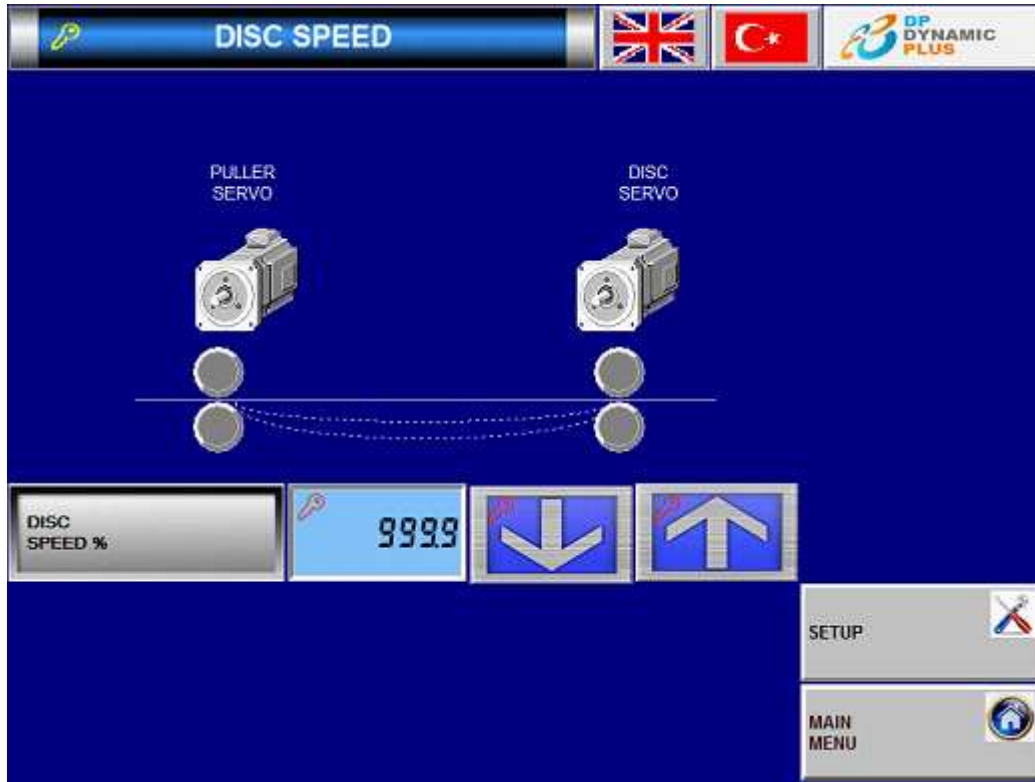

- In order to synchronize the speed of line and disc speed, you can enter the value in terms of % through DISC SPEED setting.

4. OPERATING THE MACHINE

4.17.5 GUSSET



- You can adjust the time, in terms of %, in which gusset piston presses on packaging foil through START % setting.
- You can adjust the time in which gusset piston leaves from foil through STOP % setting.

4. OPERATING THE MACHINE

4.17.6 KNIFE



- You can adjust the time of knife pushing by knife piston through START % setting.
- You can adjust the time of knife draw back by knife piston through STOP % setting.

4. OPERATING THE MACHINE


4.17.7 EURO SLOT



- You can adjust the time in which euro slot piston is pushed through START% setting
- You can adjust the time in which euro slot PISTON is drawn back through STOP% setting.

4. OPERATING THE MACHINE

4.17.8 PUNCH

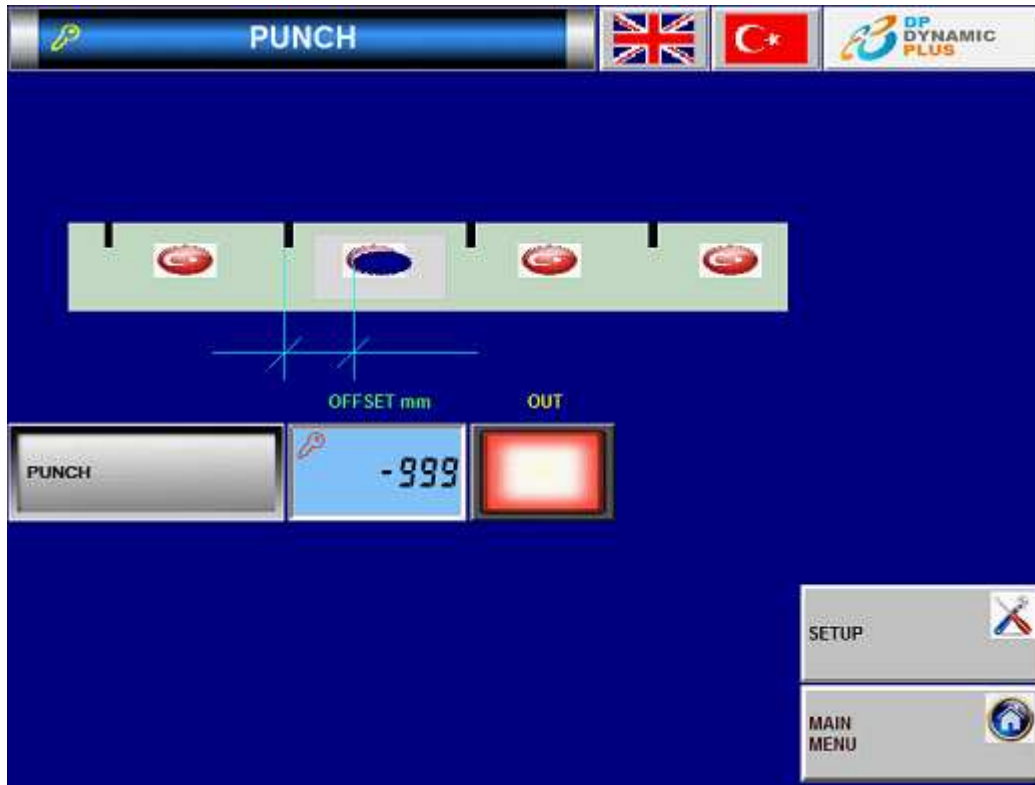

- You can adjust the position of punch through PUNCH OFFSET setting.

4. OPERATING THE MACHINE


4.17.9 STICKER-1



- You can adjust the position of sticker in terms of mm through STICKER-1 setting.

4. OPERATING THE MACHINE


4.17.10 STICKER-2

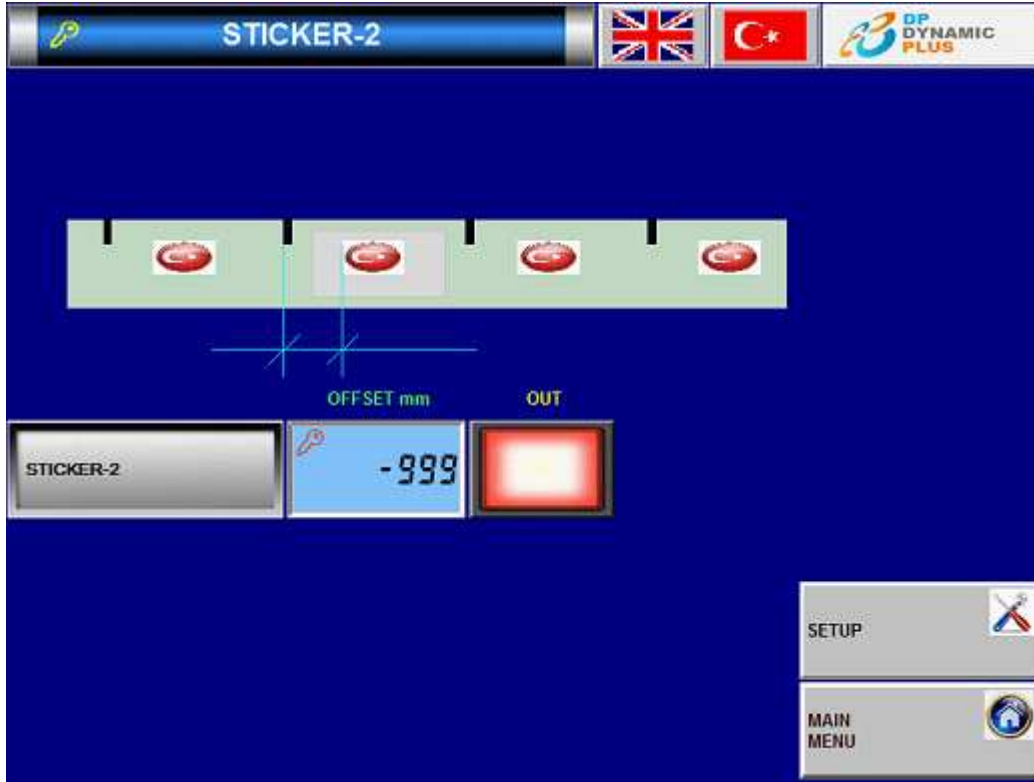

- You can adjust the position of sticker in terms of mm through STICKER-2 setting.

4. OPERATING THE MACHINE


4.17.11 PRINTER

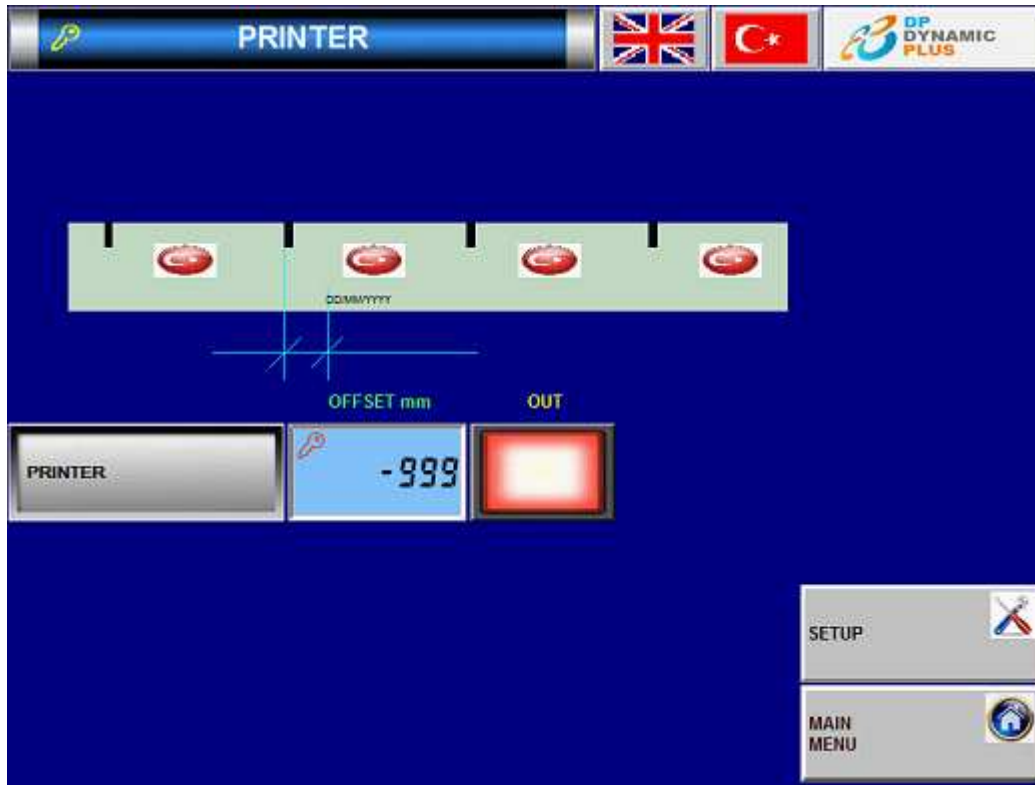

- You can adjust the position of printer in terms of mm through PRINTER OFFSET setting.

4. OPERATING THE MACHINE

4.17.12 BOBBIN CHANGE OFFSET

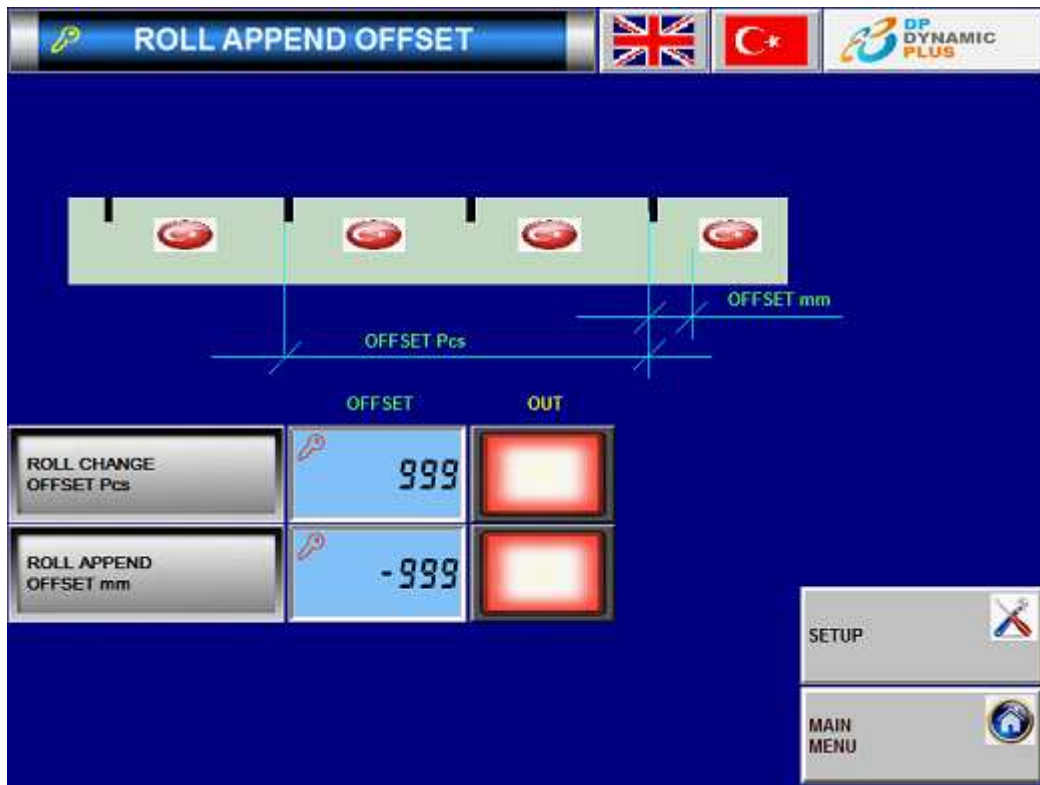

You can adjust the position of splice in terms of mm through through BOBBIN CHANGE OFFSET setting

5. MAINTENANCE & CLEANING

➤ *Cleaning*

- Make general cleaning of machine.
- Clean finwheels and sealing jaws with wirebrush.

WEEKLY

DAILY

➤ *Connections Part*

- Control the screws tightenings.
- Control the Dcam modules screws tightenings.

MONTHLY

WEEKLY

➤ *Bearings*

- Fill the bearings greaser part.
- Remove the all belts from the machines and control the bearings and parts by eyes. Turn or move all the installed mechanisms manually. If some mechanism doesn't turn replace the bearings.

240 h

MONTHLY

5. MAINTENANCE & CLEANING

➤ *Electric*

- Clean the optical sensors lenses but don't change the sensorr positions during the cleaning.
- Clean the dust from the electrical cabinet with vaccuum cleaner.
- Clean the electrical cabinets fan filters..
- Check every ventilation caps filter.

MONTHLY

WEEKLY

WEEKLY

➤ *Power transmission parts*

- Check the all belts tensions. If some belts damaged change with the new ones.



Before the belt checking process, clean the belts with the pressurized air and remove the dusts than clean the belts with wet wipe.

Control the gears, replace the damaged gears.

- Check the conveyor belts lookings and damage levels.

MONTHLY



In periodical maintenances use fabrics with the acetone.

5. MAINTENANCE & CLEANING

➤ *Linear Guideway*

- Reoil the lineer carriages.
- Reoil the linear guideways surface.

750 h

5000 h

➤ *Gearbox*

- Check the gearbos temperatures.

WEEKLY

➤ *Rubber Cylinders*

- Clean rubber cylinders with water than dry them and coat with the talk powder.

MONTHLY

➤ *Pneumatics*

- Check the air preparator oil level.
- Drain the airpreparator water.

WEEKLY

WEEKLY

➤ *Punch*

- Remove the gear backlashes.
- Control the punch knives by eyes.

MONTHLY

WEEKLY

➤ *Wastage Cutting*

- Check the rotary pneumatic blade.
- Check the inside of the wastage pipe surface.

WEEKLY

WEEKLY

5. MAINTENANCE & CLEANING

WEEKLY

- Make the general cleaning of the machine.
- Clean the electrical cabinet with the vaccuum cleaner.
- Dcam modülü üzerindeki civataların sıkılık kontrolünü yapınız.
- Check the belt tensions.

MONTLY

- Clean the rubber drums with water, coat with the talk powder.
- Check the bearings by eyes and ears.
- Check all the plastic gears.
- Check the all transmission belts tension, change the damaged belts.
- Check the conveyor belts tension, replace the damaged conveyor belts.
- Clean the optical sensors without any position changes.
- Fill the greasers with grease oil.
- Check the punch knife and wastage blade by eyes.
- Check all screw and bolts tightenings..
- Check the gearboxes casing temperature.

EVERY HALF YEAR

- Remove the all belts from the machine and turn,move mechanism by hand , if some mechanism doesnt turn by hands replace their bearings.
- Control the puller drums by eyes.



Not: Use the oem parts user manuels for the oem devices periodical maintenance.

6. ALARM& NOTIFICATION MESSAGES

6.1. ALARM&NOTIFICATION MESSAGES

