Data Managers

JUNE 22, 2026



CLASSIFICATION: FOR PUBLIC USE

Contents

Overview 6
Active Versus Active In EasyNet 7
Assignment Profiles 8
Consumables Category 9
Contract Coverage Types 10
Contract Status 11
Contract Type 12
Cost Centers 13
General Information 14
Hours of Operation 15
Risk Setup 15
Accounts 16
Rates 16
Expansion 16
Employee Settings 18
Rates 20
Employee Teams 21
Employees 22
General Information 22
Rates 24
Assignments 24
Work Order Messaging 25
Expansion 25
End of Support 26
Equipment Classification 27
Equipment Condition 28
Equipment Library 29
Equipment Status 30
Equipment Type 31
General Information 31
Risk Setup 32
Scheduled Events 32

Warranty 36
Documentation Center 36
Rates 38
Troubleshooting Guide 38
Expansion 38
Failure 39
Job Types 40
General Information 40
Procedure 40
Library Classification 41
Model/Type 41
Documentation Center 41
Library Requesters 43
Loan Request 44
Loan Status 44
Loan Type 45
Operating System 45
Ownership 46
Part Category 46
Priorities 47
Procedures 48
General Information 48
Comment 48
Tasks 49
Documentation Center 50
Purchase Order Status 51
Purchase Request Priority 52
Purchase Request Status 53
Purchasing Bill To/Ship To 54
Purchasing Credit Memo Status 55
Purchasing Invoice Status 56
Purchase Invoice Type 57
Purchasing Pricing Method 58

Purchasing Ship Via 59
Report Group 60
Response 61
Service Departments 63
General Information 63
Area Assignment 63
Assignments 63
Print Options 64
Other Settings 65
Tasks 67
Technology Committee 69
Trade 70
UOM – Consumables 71
UOM – Parts 72
UOM – Task 73
Vendor 74
General Information 74
Additional Details 74
Notes 75
Rates 75
Models 76
Risk Setup 77
Scheduled Events 77
Warranty 80
Documentation Center 81
End of Support 82
Expansion 82
Warehouse 84
Warranty Coverage Options 85
Work Order Common Problem 86
Work Order Status 87
Work Order Type 88
Conclusion 90

Appendix 91

Overview

Data Managers are a way of setting static entries for fields, many of which are required. Providing these static entries allows for standardization and reporting. In addition, many of these Data Manager codes may be the same across multiple software applications and workflows. For example, a Cost Center number and name in AIMS 3 should be the same as it is in purchasing software and how it is called throughout the organization.
Data Managers should be controlled by system Administrators and should be changed only as needed. Since they contribute to standardization and reporting, the Data Managers should remain as consistent as possible. This allows the users to work in a stable and expected environment.

Data Managers all have the same controls in the upper right of the frame:



- Save
- Add New
- Duplicate
- Delete
- Undo
- Export
- Merge Data Manager


These options allow the Administrators to affect elements of each dropdown. While it may be tempting to add an unlimited number of entries, too many elements may confuse users and negatively affect reporting. Some Data Managers my offer the ability to Delete but may not allow the Administrator to delete the element. This may be because the current element is currently in use in the database. In these cases, unchecking the “Active” checkbox will hide the element from future records. Exporting the various codes is useful when codifying workflows and policies.

Note: System Administrators can create Data Managers. If a Data Manager exists in your AIMS 3 but is not listed here or the purpose is different than described, consult your System Administrator for current documentation and/or more information.
Should you require additional help creating, updating, or deleting elements and/or data managers, Phoenix Data Systems offers a full array of consulting to meet your needs!

Note: This document contains all Data Managers offered by AIMS 3. Some Organizations may have not purchased specific components. Therefore, it is not necessary to create a Data Manager for a component which is not available. If an organization plans to add components to their current AIMS 3 instance, Administrators can create Data Managers in anticipation of their use.

Active Versus Active In EasyNet

Many Data Managers include two Active checkboxes:

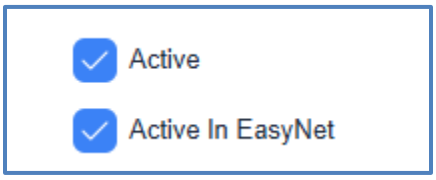

- Active
- Active In EasyNet


If you inactivate a Data Manager using the Active checkbox, the Data Manager will no longer be able to be used in AIMS 3 or EasyNet.

If you inactivate a Data Manager using the Active In EasyNet checkbox, the Data Manager will no longer be able to be used to create EasyNet Work Orders but can be used elsewhere in AIMS 3.

Case Use: While the "Closed" status would be used in AIMS 3, a Work Order should not be entered into the system from EasyNet as "Closed". Therefore, the "Closed" status should be "Active," but not "Active In EasyNet."

Assignment Profiles

Assignment Profiles are a way to limit what different users see in each dropdown list in AIMS 3. Instead of filtering only by the Service Department, this will give additional options so subsets of a service department will also be able to see a subset of data. As demonstrated by the picture to the right, users can be restricted to a Service Department, Trade, etc. This allows Administrators to declare one, some, or all elements of a dropdown.

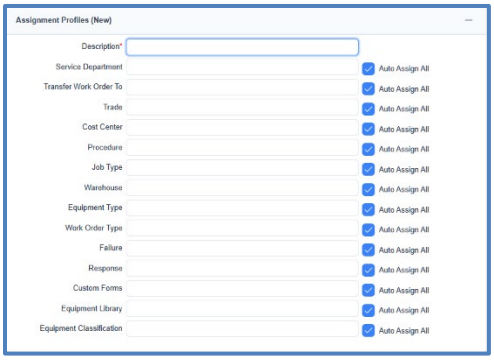


Case Use: Two employees are responsible for all Carpentry work orders and do not address any other type of work order. There are no Preventative Maintenance work orders in the system, and all their work orders are reactive in nature. Therefore, the Administrator can create an Assignment Profile to show them only the information they need to see and omit everything else. This makes it easier for the users who no longer must sift through information which does not apply to them.

Note: Assignment Profiles are not mandatory! Users with no profile will have full access to everything, which may be advantageous for customers who cannot find a need to set one up. Once an Assignment Profile is assigned to a user, that user will only have access to data managers assigned to that profile. Administrators will always have full access to everything.

Note: Before the first Assignment Profile record is added the screen will be blank. Administrators must click the New button to see the available options.

Consumables Category

Just as Equipment is categorized by Equipment Type, Consumables can be categorized into a group, making it easier to locate the desired Consumable either in AIMS 3 or on the EasyNet page. How specific or general the Administrator determines the category.

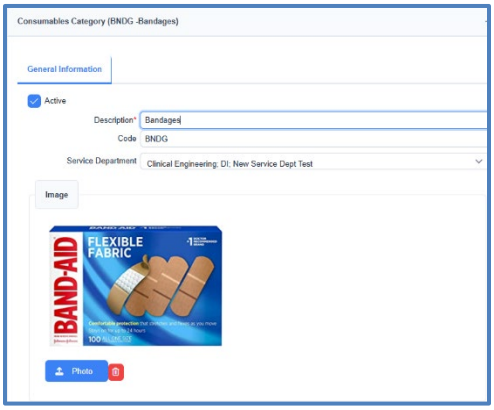

It is recommended that an organization sets guidelines on creating categories to ensure that categories are standardized.

CLASSIFICATION: FOR PUBLIC USE

Contract Coverage Types

Contract Coverage Types allow Administrators to set several types of contract coverage set by the vendor. Setting several types will inform the user if the coverage is “Full” or applies to specific scopes of time or components.

The Contract Coverage Type Codes only consist of the code and Description. Like other Data Managers, the user may not be able to delete elements if they are in use on recordsTo hide an element, uncheck the “Active” checkbox.



CLASSIFICATION: FOR PUBLIC USE

Contract Status


The Contract Status allows users to easily determine whether the Contract is active or not. AIMS 3 was designed to use at least three Contract Statuses or their equivalent:

Upcoming – Since Contracts are rarely entered on the day they go active; the Upcoming status informs Users the Contract was entered but not available for use. When a Contract has reached the Effective Date, the status automatically changed to the Active status.

Active – When a Contract is on or beyond the Effective Date and has not reached the Termination Date, it will be set as Active. If a Contract is Active, Costs can be applied to it.

Expired – When a Contract reaches the Termination Date, the status automatically changes to Expired. Depending on the settings set in System Setup->Contract Options, Costs can be applied to an Expired Contract.


Note: To allow full functionality of the Contract Statuses, Administrators need to set the options in System Setup->Contract Options.

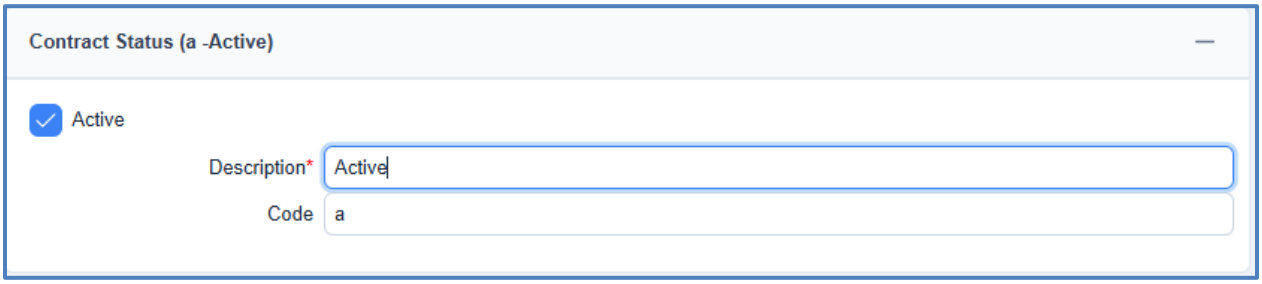

CLASSIFICATION: FOR PUBLIC USE

Contract Type

Contracts can be categorized in many ways, depending on the Organization and use. Therefore, a field has been provided to allow Organizations to freely classify Contracts as they need. The Contract Type field is set by the Organization and does not need to be used if there is not a use for it.

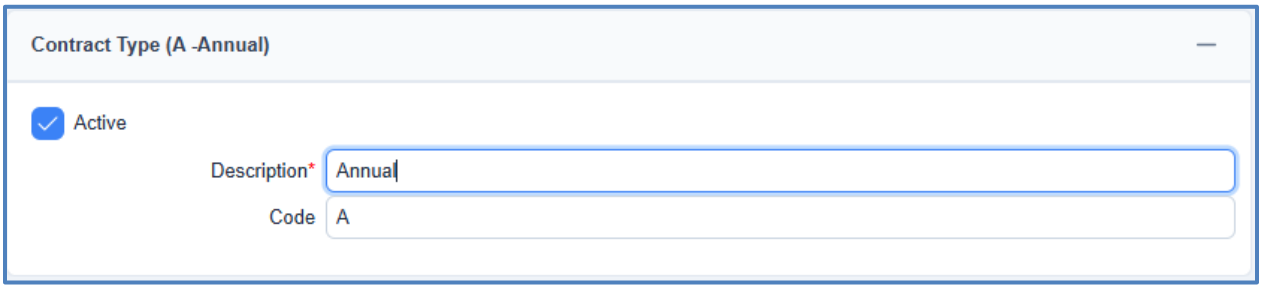

Examples include:

Time – Annual, Bi-Annual, etc.

Purpose – Imaging, Respiratory, etc.


Sensitivity – Government, Minority Owned, etc.

CLASSIFICATION: FOR PUBLIC USE

Cost Centers

Cost Centers refer to areas of the organization and can be referred to as Department, Area, Organization, etc. They may share the same name across many/all facilities, but each one has its own unique code. This helps Administrators know which Department in which hospital gets the cost of goods/services just by the code.


The Cost Centers Data Manager is one of the more complex managers. It can contain a lot of information over several tabs. All tabs should be reviewed periodically to ensure the information has not changed.

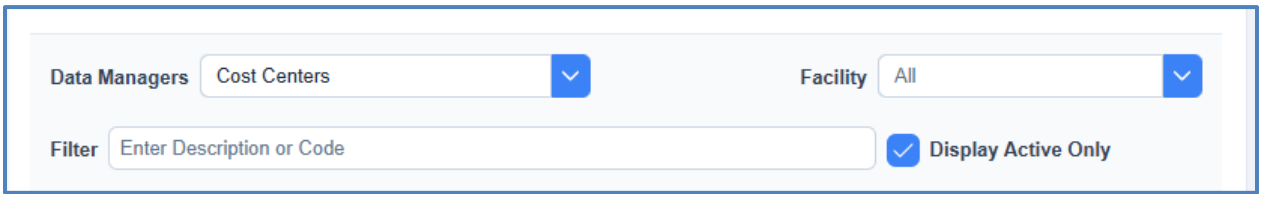

Because all Cost Centers for all facilities are visible in the same list, navigating the list can be difficult for customers with medium to substantial number of facilities. If twenty facilities have an Emergency Room Cost Center, that description would appear in the list twenty times in a row, each with a different code. AIMS 3 includes a search bar at the top of the Cost Centers frame. The user can also select to view Cost Centers of a specific Facility using the Facility picker on the left side of the frame.


On the right side of the screen, Administrators can set the settings of each Cost Center. This includes six tabs:

- General Information
- Hours of Operation
- Risk Setup
- Accounts
- Rates
- Expansion



Administrators may have to use the arrow on the right side of the ribbon to view additional tabs.

General Information

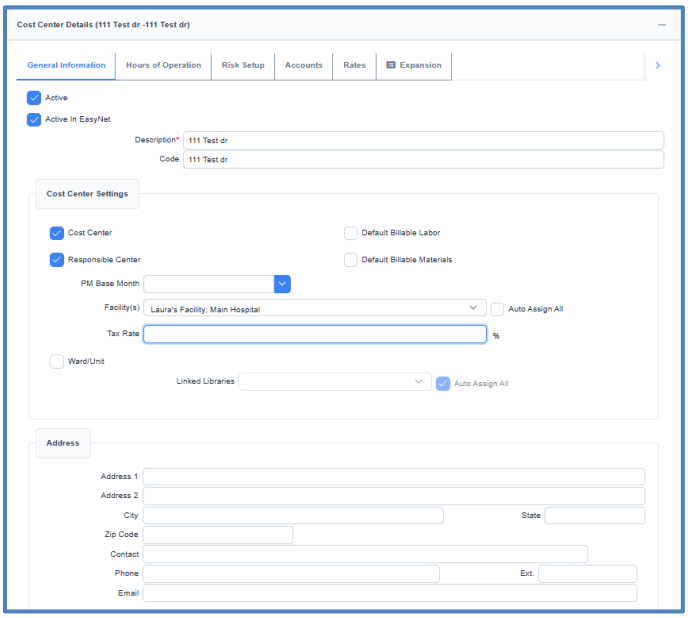

Under the General Information tab, Administrators set the Code and the Description of the Cost Center. They can also set the Cost Center Settings beneath. This allows the Administrators to set the Cost Center as a:

- Cost Center
- Responsible Center

Example: The hospital owns a portable X-ray machine purchased by the Radiology Department but kept in the Emergency Room. Since Radiology purchased the machine, the Cost Center has been set to them. The Emergency Room is the Responsible Center because the machine permanently resides in there and will follow the PM Base Month set in the record.

It also allows the Cost Center to use Default Billable Labor and Default Billable Materials. This means that by default all Costs on Work Orders will appear as billable but can be changed by the User.

PM Base Month – This setting aligns all Scheduled Events for the Cost/Responsible Center to a specific month. As Equipment is entered into AIMS 3, the Scheduled Event will be set according to the PM Basse Month, if set.

Note: PM Base Month only aligns the scheduled Events on *NEW* Equipment!


Facility(s) – Assigns the Cost Center to a specific Facility or Facilities.

Note: Cost Centers assigned as "Auto Assigned All" will be visible in all Facilities and cannot be reassigned using System Setup->Assignments!

Underneath the Cost Center Settings is the Cost Center's physical address and Contact information.


Hours of Operation


Under the Hours of Operation tab, Administrators can set the days and hours in which Cost Centers are open. This information will be visible from both the Equipment and Work Order records by the User.

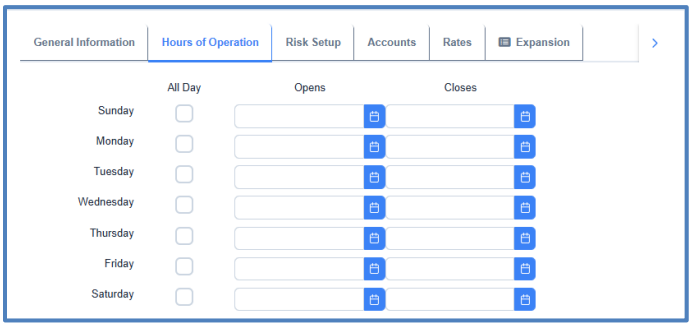

Risk Setup

Risk Setup is set to override the Risk score depending on the sensitivity of the Cost Center. Since Risk is not predefined, there is not a one-size-fits-all setting. This allows the Risk Score to be changed automatically as Equipment moves throughout the Organization and not rely on human interactionIf more than one Risk Strategy exists, a score can be set for each one, but is not mandatory.

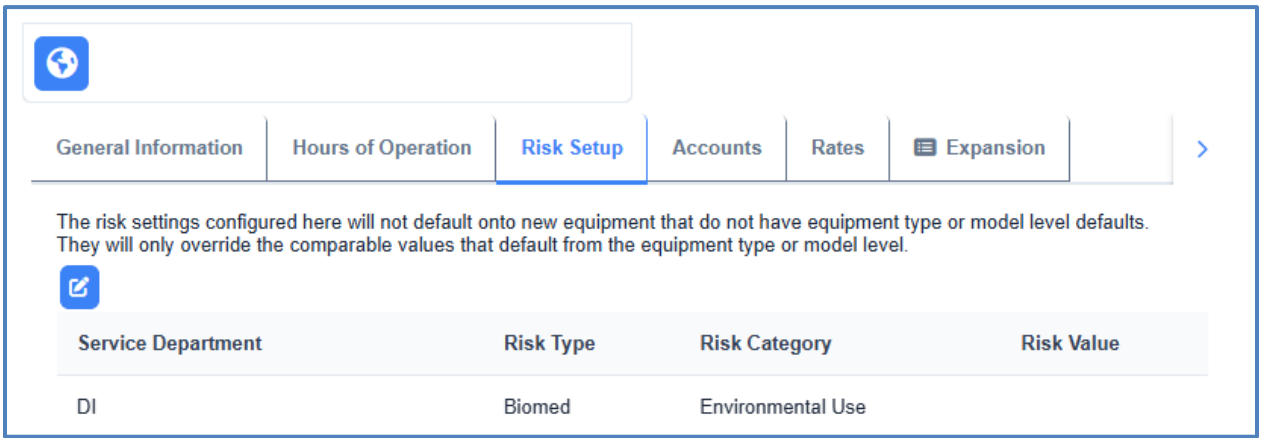

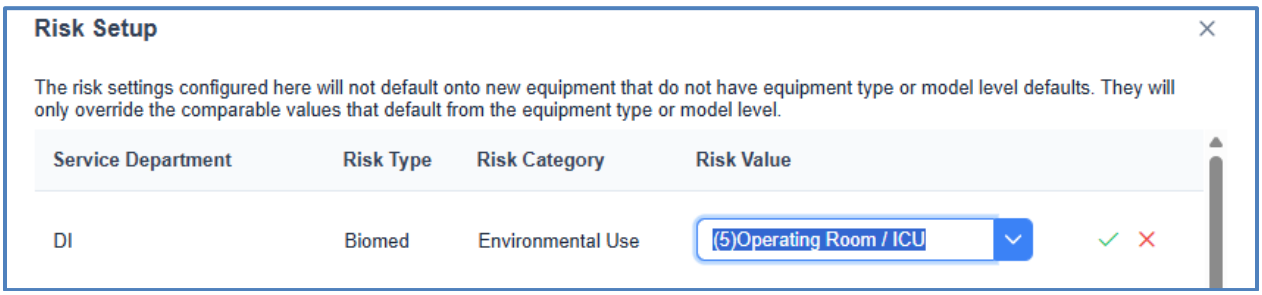

CLASSIFICATION: FOR PUBLIC USE

Accounts




To create an Account for a Cost Center, they must be entered into the Accounts tabEach account **MUST** contain a Code and Description.

To edit an existing account, an Edit button has been provided.

To delete an account, a red Delete button has been provided.



Rates

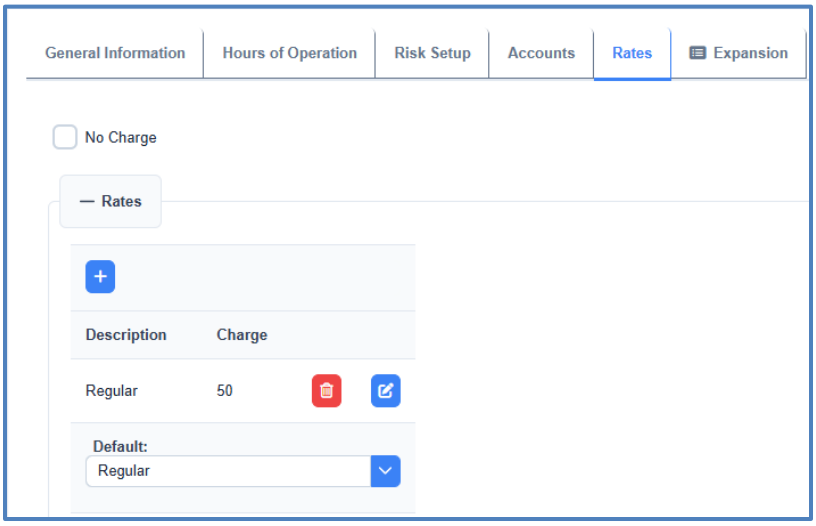

If a Cost Center incurs a specific Rate, they can be set on the Rates tab. Rates are setup as they are elsewhere in AIMS 3.

No Charge – If a Cost Center is to not be charged a Cost, this checkbox will clear out the Charge field on a Work Order.

Setting an Employee's Rates monetizes the Employee's labor on Work Orders. After clicking the plus sign, Administrators are presented with a popup screen to enter a Rate's description, amount, and designate the charge as "Labor" or "Travel." Rates can be added and deleted as needed. Finally, at the bottom of the screen, Administrators should declare a default Rate. These are based on the Rates already entered.

Note: While "Default" is not a required field, setting a default will aide Users when entering Labor Lines. If a default is not set, they must set their Rate on every Labor Line.

Expansion


No CMMS comes with the precise fields to meet every organization's needs. Therefore, the Expansion tab allows for the addition of custom fieldsets and fields. However, these fields do not have to live in the Expansion tab. Fields can be moved to the Work Order Header as needed.

CLASSIFICATION: FOR PUBLIC USE

a. **Create a Fieldset** - Right-Click within blue screen below the Tab Bar. You will see the +Add Fieldset icon. Click on +Add Fieldset icon and populate the Field name you want to create and click OK.
b. **Customize Fieldset** – Once the Field has been created, Right Clicking on the Field displays Fieldset or +Add Field icons. Clicking Fieldset allows users to either Rename or Delete the custom field. Clicking on +Add Field allows users to choose the format of the customize fieldRight Clicking inside the custom field displays either the Edit or Delete icons.
c. **Required/Add Field to Nameplate** – By editing the field, Administrators can delare the field required and/or Add to HeaderOnce in the header, fields can be rearranged to suit the need of the organization.

Employee Settings

Employee Settings allow Administrators to set specific permissions and then apply them to Data Managers->Employees. Administrators may create as many Employee Setting records as needed.

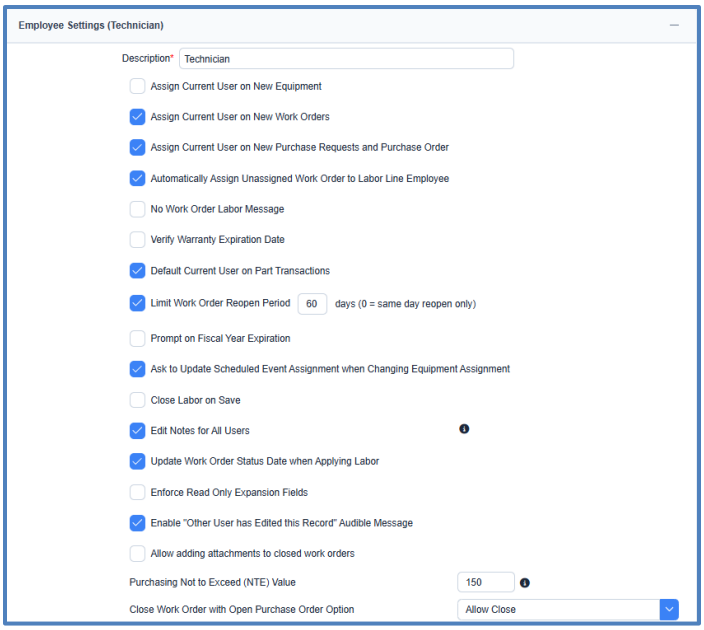

Assigning Current User on New Equipment
Assigns all Equipment created by the current user in AIMS 3 to the Employee of the logged in user.

Assigning Current User on New Work Orders
Assign all Work Orders created by the current user to the Employee of the logged in user.

Assigning Current User on New Purchase Requests and Purchase Order
This option will assign all Purchasing records created by the current user to the Employee of the logged in user.

Automatically Assign Unassigned Work Order to Labor Line Employee
Assigns an unassigned Work Order to the Employee logged in when a Labor Line is added to the record.

No Work Order Labor Message
This setting will disable the message to warn users they did not apply labor to the work order.

Verify Warranty Expiration Date
When Equipment that has an inherited Warranty is entered into AIMS 3, this will prompt the User to verify the Warranty Start and End Dates.

Default Current User on Part Transactions
This will automatically set the logged in User as the Employee when Parts are Received, Transferred, and Adjusted on the Warehouses tab of the Part record.

Limit Work Order Reopen Period
This option prevents users from reopening work orders after a set number of days. Setting this option at "0" will give users the current day only to reopen work orders.

CLASSIFICATION: FOR PUBLIC USE

Prompt on Fiscal Year Expiration
When the new Fiscal Year starts, Users will be notified to update the Fiscal Year in System Setup-Other Settings.

Ask to Update Scheduled Event Assignment when Changing Equipment Assignment
When an assignment is changed to Equipment, the User will be prompted if they want the Scheduled Events assignment to be changed also.

Close Labor on Save
This will close the Labor Line when it is saved. If a User enters Test Equipment often, they will want the Labor Line to stay open. Users who rarely enter Test Equipment would want the window to close.

Edit Notes for All Users
This option will allow the User to edit notes regardless of who entered them.

Note: Edit Security needed along with this option to edit notes in each component!

Update Work Order Status Date when Applying Labor
This will change the Work Order Status Date when Labor is entered, regardless of whether the Status of the Work Order has changed.

Enforce Read Only Expansion Fields
If an Expansion Field has been declared “Read Only” by an Administrator, the User can only read the data in the field and not change it.

Enable "Other User has Edited this Record" Audible Message
Disables the voice in System Setup->Language to notify the User on record changes.

Allow adding attachments to closed work orders
Allow the User to add attachments when a Work Order is Closed.


Purchasing Not to Exceed (NTE) Value
Sets a “Not to Exceed” value for the User.

Note: If approval is required only when “Exceeding NTE” any request or PO for an employee with a blank NTE value will not need to be approved!

Close Work Order with Open Purchase Order Option
Will allow or not allow the User to close a Work Order if the Purchase Order attached to the Work Order is still Open.

CLASSIFICATION: FOR PUBLIC USE

Rates

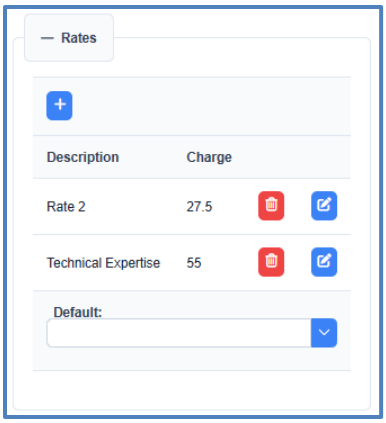

Setting an Employee's Rates monetizes the Employee's labor on Work Orders. After clicking the plus sign, Administrators are presented with a popup screen to enter a Rate's description, amount, and designate the charge as "Labor" or "Travel." Rates can be added and deleted as needed. Finally, at the bottom of the screen, Administrators should declare a default Rate. These are based on the Rates already entered.

Note: While "Default" is not a required field, setting a default will aide Users when entering Labor Lines. If a default is not set, they must set their Rate on every Labor Line.


Note: Before the first Employee Settings record is added the screen will be blank. Administrators must click the New button to see the available options.

CLASSIFICATION: FOR PUBLIC USE

Employee Teams

This Data Manager gives Administrators the ability to create a team of employees and assign it throughout the software the same as employees. This includes equipment, scheduled events, work orders, and Area Assignment. If messaging a work order to a team, it would send the email/text message to all team members.
Administrators must provide a name, code, email address, and list of employees via multi-select dropdown.

Employee Teams are listed in all employee lists except when choosing employees for a new team. Administrators cannot nest teams together. Teams cannot be set as a Contract Reviewer, or applying labor (Update tab, batch update tool, or non-work order activity).

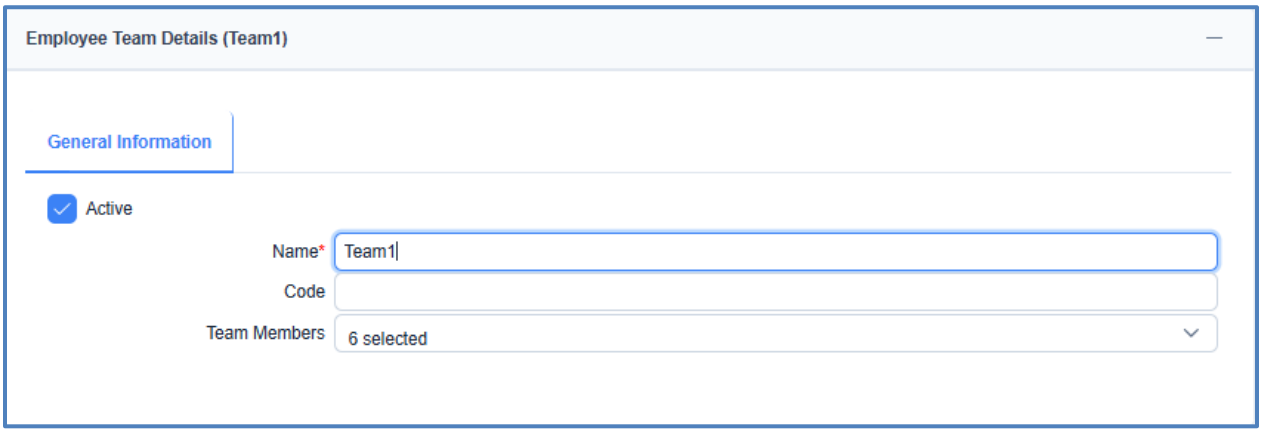

CLASSIFICATION: FOR PUBLIC USE


Employees

While several CMMS instances separate their users from their employees, AIMS 3 manages them as a single Data Manager. This allows for a single point of control making it easier for Administrators. It is encouraged to have the following information ready before creating an Employee in AIMS 3:

- Their full name,
- Their preferred username,
- Their initial password,
- Their access level,
- If they are a manager, a list of their direct reports,
- Their photo (optional),
- Their charge rate(s),
- Their assigned locations, Assignment Profile, and Employee Settings, and their contact information.

Having this information in advance will save the Administrator unnecessary time and effort.

General Information

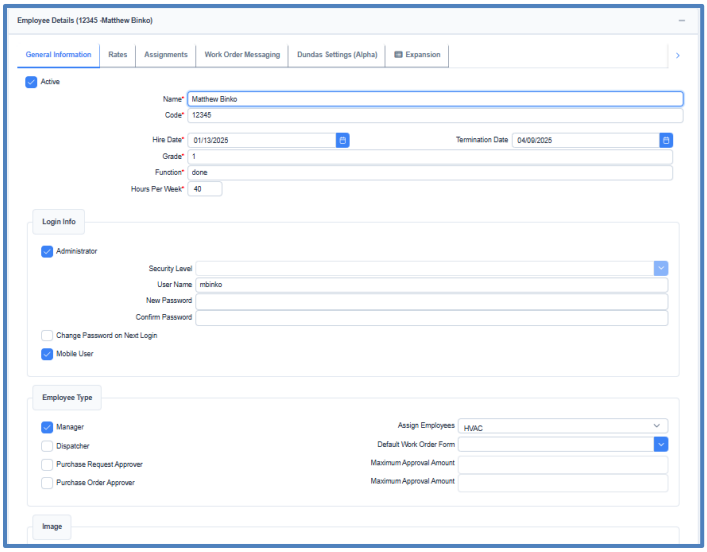

This tab contains the initial administration information regarding the Employee. This tab contains the Employee's name, login information, and photo. In addition, Administrators can designate Employees as "Administrator" and/or "Manager." If designated as an Administrator, Employees will have full access to the CMMS. Designating Employees as a manager allows Employees to be assigned direct reports individually or as a team.

Completing the General Information tab is the minimum amount of information needed to set up an Employee as a user; however, it is recommended to at least review the other tabs to complete the Employee setup.

Name – The full name of the Employee.

CLASSIFICATION: FOR PUBLIC USE

Code – Codes are defined by the Organization and can vary between the Employee's number or initials. It is recommended to use a Code which cannot be repeated between Employees.

Hire Date – When the Employee was hired. This will automatically set when the Employee record is entered but can be changed.
Termination Date – When the Employee left the Organization. Administrators will be prompted to set this when an Employee is inactivated.

Grade – Which level of expertise gained by the Employee.

Function – The function or skill of the Employee.

Hours Per Week – The anticipated workload of the Employee.

Administrator – This will give the Employee full rights to AIMS 3 and all Facilities. This setting should be used only for the true Administrators of AIMS 3.

Security Level – A Security Level set in System Setup-Security must be set if the Employee is not an Administrator.

User Name – This must be a unique value and is used by the Employee to log in when not using Active Directory.

New Password – This is completed when setting or changing a Password for an Employee.

Confirm Password – This is completed when setting or changing a Password for an Employee.

Change Password on Next Login – This will for the User to change their Password the next time they log into AIMS 3.

Note: This does not include Active Directory passwords!!!

Mobile User – This will allow the User to use the AIMS 3 mobile application and will consume a license while checked.


Manager – Enables the Manager function on the Home Screen. When activated, other Employees can be assigned to the Employee as direct reports. An Employee can only be assigned to one Manager at a time.

Dispatcher – Assigns the role of Dispatcher and allows for the assignment of a default Custom Form. These are created in System Setup->Custom Forms.
Purchase Request Approver/Maximum Approval Amount – Assigns the role of Purchase Request Approver and sets a maximum amount they can approve.

Purchase Order Approver/Maximum Approval Amount – Assigns the role of Purchase Order Approver and sets a maximum amount they can approve.

Image – Sets an image for the Employee which will be seen in their User Menu in the Title Bar.

Rates

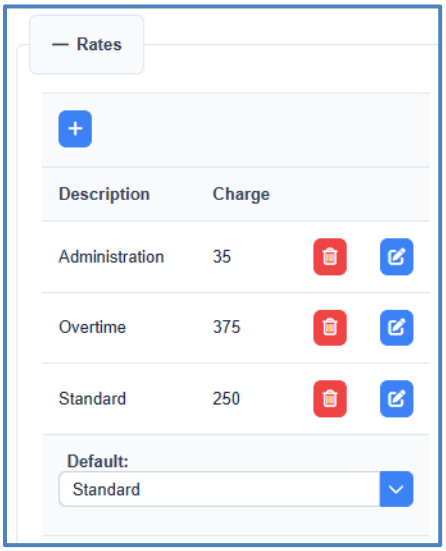


Setting an Employee's Rates monetizes the Employee's labor on Work Orders. After clicking the plus sign, Administrators are presented with a popup screen to enter a Rate's description, amount, and designate the charge as "Labor" or "Travel." Rates can be added and deleted as needed. Finally, at the bottom of the screen, Administrators should declare a default Rate. These are based on the Rates already entered.

Note: While "Default" is not a required field, setting a default will aide Users when entering Labor Lines. If a default is not set, they must set their Rate on every Labor Line.

Assignments

The Assignments tab allows Administrators the ability to assign Employees to specific Facilities and Building to all of them. In addition, Administrators can set Assignment Profiles and Employee Settings.

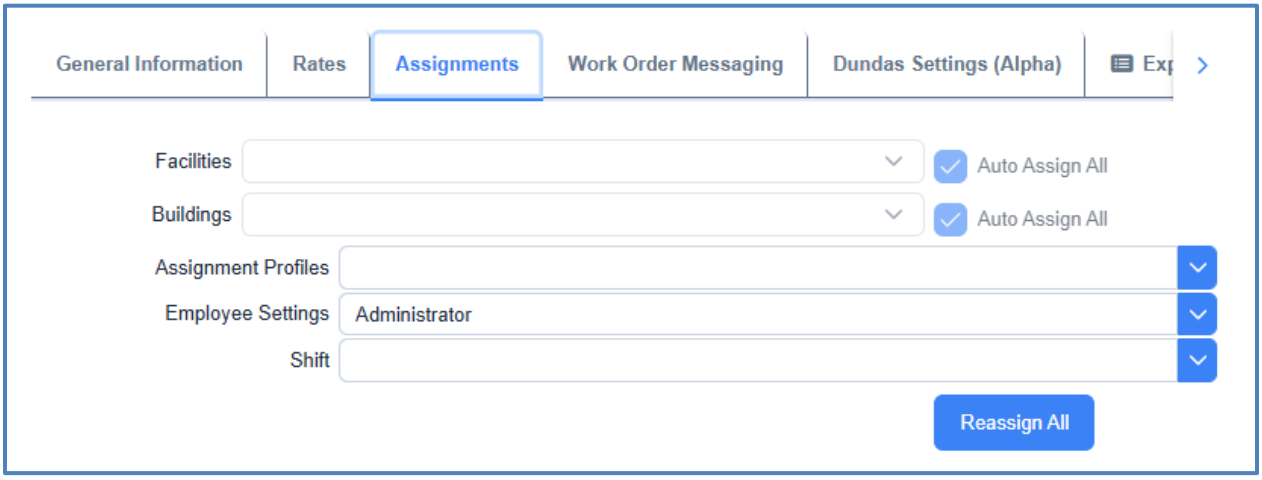

Note: Assignment Profiles and Employee Settings are separate Data Managers and should be set up before creating Employees!

CLASSIFICATION: FOR PUBLIC USE

If a new Employee is going to replace an existing Employee, Administrators can use the "Reassign All" button to transfer all assignments from the existing Employee to the new Employee.


Work Order Messaging

The Work Order Messaging tab allows Administrators to set methods to contact the Employee. In the Devices fieldset, clicking on the plus sign activates a popup to enter:

- Mobile Devices,
- Email Addresses,
- Internet Pagers, and
- Pagers.

The fields are masked to the corresponding data (i.e., Email Addresses must have a username, "@," and domain). Beneath the entered Devices, a default method of communication must be entered.

In the Work Order Fields fieldset, static information is set for communication sent to the Employee.

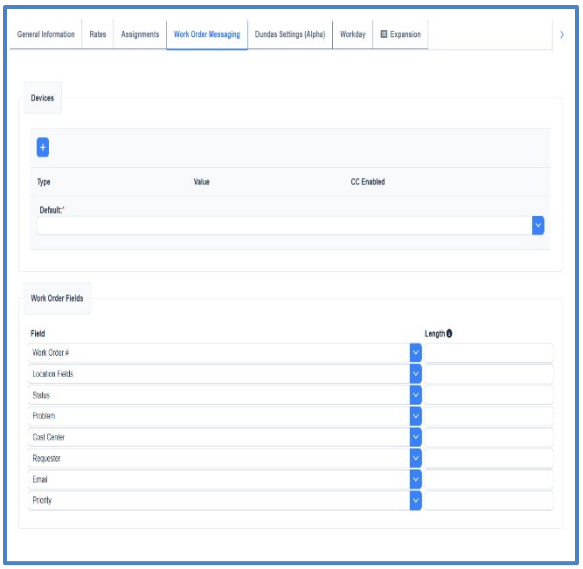

Note: While it is not mandatory to set and of the Work Order Fields, it is highly advisable!

Expansion

No CMMS comes with the precise fields to meet every organization's needs. Therefore, the Expansion tab allows for the addition of custom fieldsets and fields. However, these fields do not have to live in the Expansion tab. Fields can be moved to the Work Order Header as needed.


a. **Create a Fieldset** - Right-Click within blue screen below the Tab Bar. You will see the +Add Fieldset icon. Click on +Add Fieldset icon and populate the Field name you want to create and click OK.
b. **Customize Fieldset** – Once the Field has been created, Right Clicking on the Field displays Fieldset or +Add Field icons. Clicking Fieldset allows users to either Rename or Delete the custom field. Clicking on +Add Field allows users to choose the format of the customize fieldRight Clicking inside the custom field displays either the Edit or Delete icons.
c. **Required/Add Field to Nameplate** – By editing the field, Administrators can delare the field required and/or Add to HeaderOnce in the header, fields can be rearranged to suit the need of the organization.

CLASSIFICATION: FOR PUBLIC USE

End of Support


End of Support only requires a Description. This is to allow Administrators to enter what will be affected when the support ends at a specific date, such as Labor or Parts.

Note: End of Support Descriptions cannot be deleted if they are used on a model or equipment record!

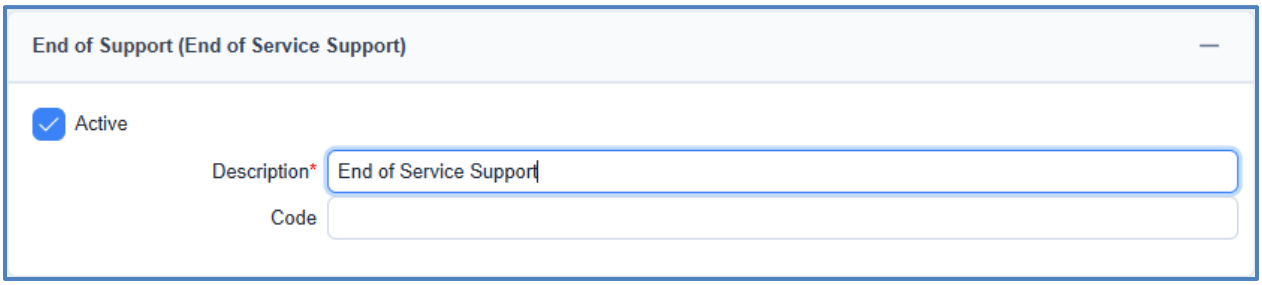

Equipment Classification

Some Organizations need to categorize Equipment higher than Equipment Type. Equipment Classification allows Administrators to have a broad group of Equipment Types. This field is completely customizable by the Organization.

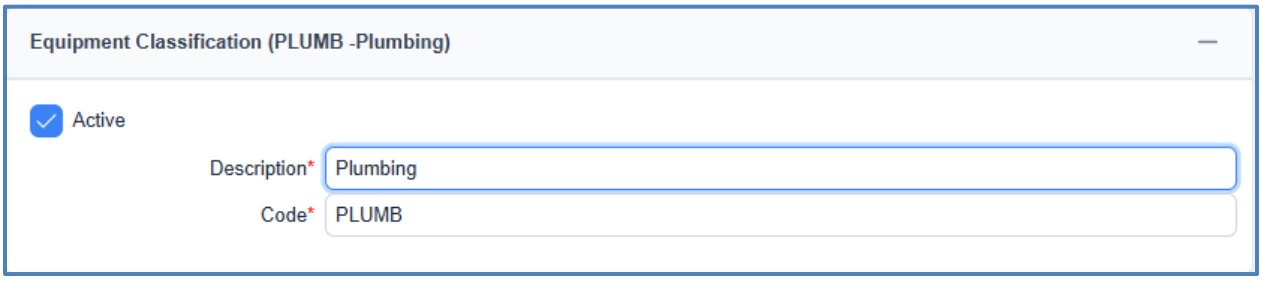

CLASSIFICATION: FOR PUBLIC USE

Equipment Condition


This section contains codes and descriptions regarding the condition of equipment in the database. For example, there may be a code of EXCEL and a description of Excellent. Currently, there is no other functionality for this Data Manager.



CLASSIFICATION: FOR PUBLIC USE

Equipment Library

The Equipment Library is a central repository of Equipment to be loaned out. Libraries are defined like Warehouses. If your organization does not have the Library functionality in their license, there is no need to define this Data Manager.

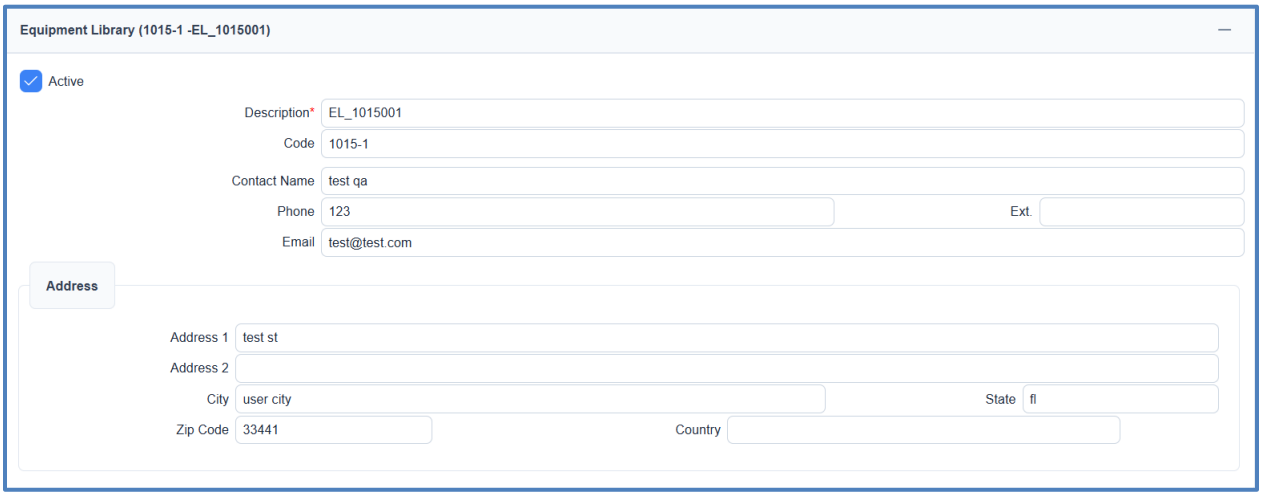


This Data Manager allows the Administrator to declare the Library's Contact information and address.

CLASSIFICATION: FOR PUBLIC USE

Equipment Status

Equipment Status is a method to show if Equipment is in use or not. Administrators must enter a description, and they can optionally enter a code. These codes can also be programmed to hold scheduled events using the checkbox under the status.

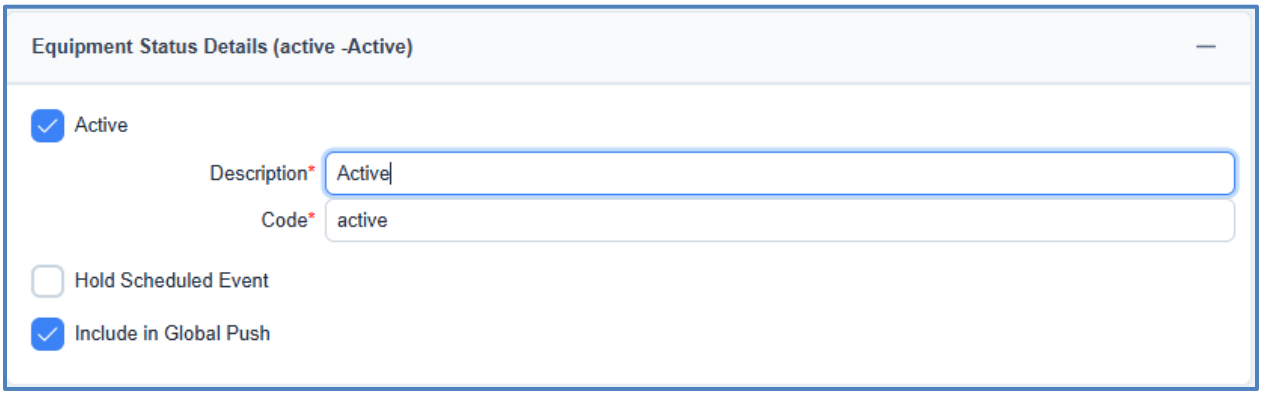

Hold Scheduled Event - These events will be held until the status is changed to a status with this box unchecked.

Include in Global Push – When checked, all Equipment of this status will be included in Equipment Type and Model global pushes. When unchecked, the Equipment will be unaffected.


CLASSIFICATION: FOR PUBLIC USE

Equipment Type

Equipment Types are designed to allow Administrators to categorize Equipment in groups. These groups can be as broad or granular as needed. For example, if an Administrator wanted to group all their HVAC equipment, they could simply use HVAC. However, they may find it helpful to use more specific descriptors, such as:

- Air Handling Unit
- Fan Coil Unit
- Exhaust Fan

General Information

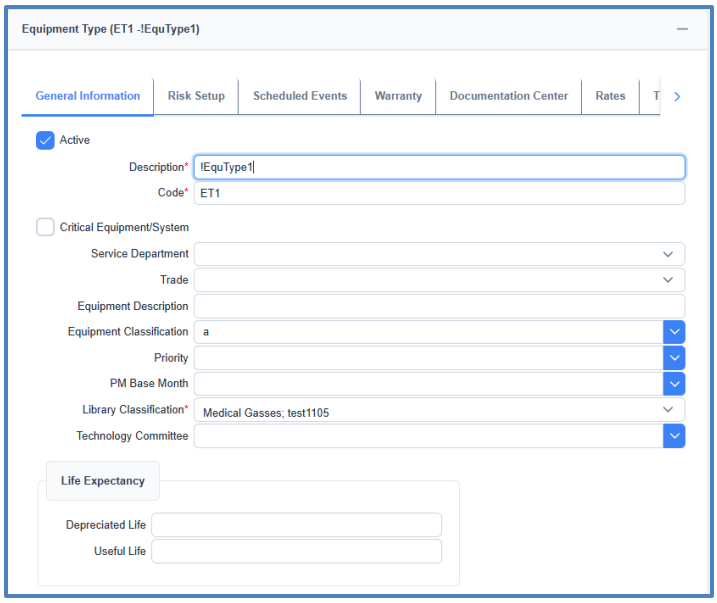

This tab contains the initial administration information regarding the Equipment Type. This tab contains the Equipment Type's Description, Code, assigned Service Department, Trade, Equipment Description, and Priority. The Description is the only required field. This section also contains two checkboxes:

- **Active** – Denotes whether Administrators are using this Equipment Type or not. Types cannot be deleted from the system when in use; therefore to "remove" them, Administrators can hide them by unchecking this box.
- **Critical Equipment/System** – When checked, this box automatically categorizes Equipment as critical. Users will see a custom message at the top of the Equipment and Work Order screens when working with Critical Equipment.

Service Department – Allows specific Service Departments to use the Equipment Type.

Trade – Assigns a Trade to the Equipment Type. Trade is a separate Data Manager.

Equipment Description – This is inherited by the Equipment when created.

Equipment Classification – Adds the Equipment Type to an Equipment Classification. Equipment Classification is a separate Data Manager.

Priority – Automatically assigns the Priority on all Work Orders. Priority is a separate Data Manager.

CLASSIFICATION: FOR PUBLIC USE

PM Base Month – This setting aligns all Scheduled Events for the Equipment Type to a specific month. As Equipment is entered into AIMS 3, the Scheduled Event will be set according to the PM Basse Month, if set.

Note: PM Base Month only aligns the scheduled Events on *NEW* Equipment.

Library Classification – Sets the Library Classification. Library Classification is a separate Data Manager.


Technology Committee – Sets the Technology Committee which approved the Equipment Type. The Technology Committee is a separate Data Manager.

Depreciated Life – Sets how the Equipment will be depreciated over its lifespan.

Useful Life – Sets how long the Equipment will be in use.

Risk Setup

This tab contains the Risk Classification, Risk Type, and Risk Number calculation fields. Rather than set the risk for individual pieces of equipment, Administrators can calculate the risk in this tab and all Equipment under this tab will inherit the risk values. Individual values can be changed on Equipment, should they require specific numbers/classifications.

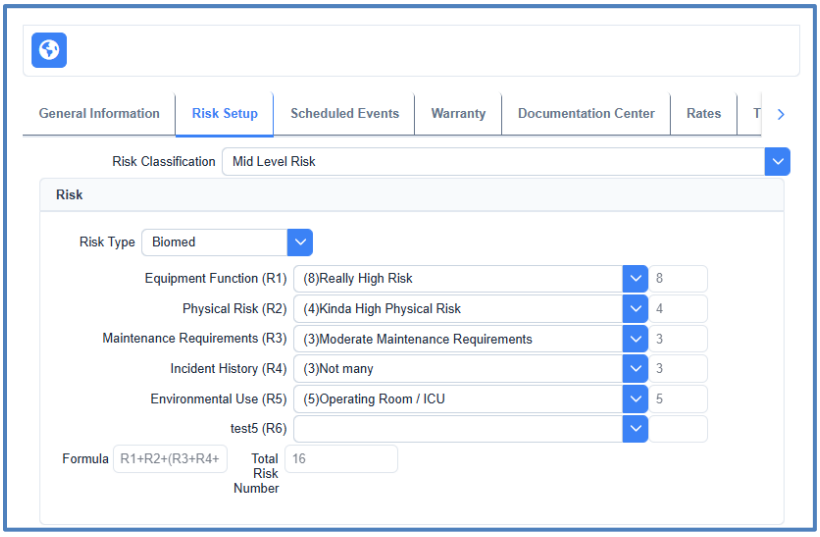


Scheduled Events


The Scheduled Events tab displays and enables users to assign Preventative Maintenance Procedures, Frequencies, Intervals for specific Equipment. It is more efficient to assign scheduling at a lower level, such as Model since Scheduled Events are usually unique at this level. However, for some Equipment (Exit Signs, Battery Powered lights), the Equipment Type level is ideal for Scheduled Events. This area is provided to allow users to change or add schedules for specific pieces of Equipment.

CLASSIFICATION: FOR PUBLIC USE

Note: Scheduled Events will not be inherited by Equipment already in the system. To push the Scheduled Events to the Equipment, users may click the Global Push button. All future Equipment will inherit the Scheduled Event.

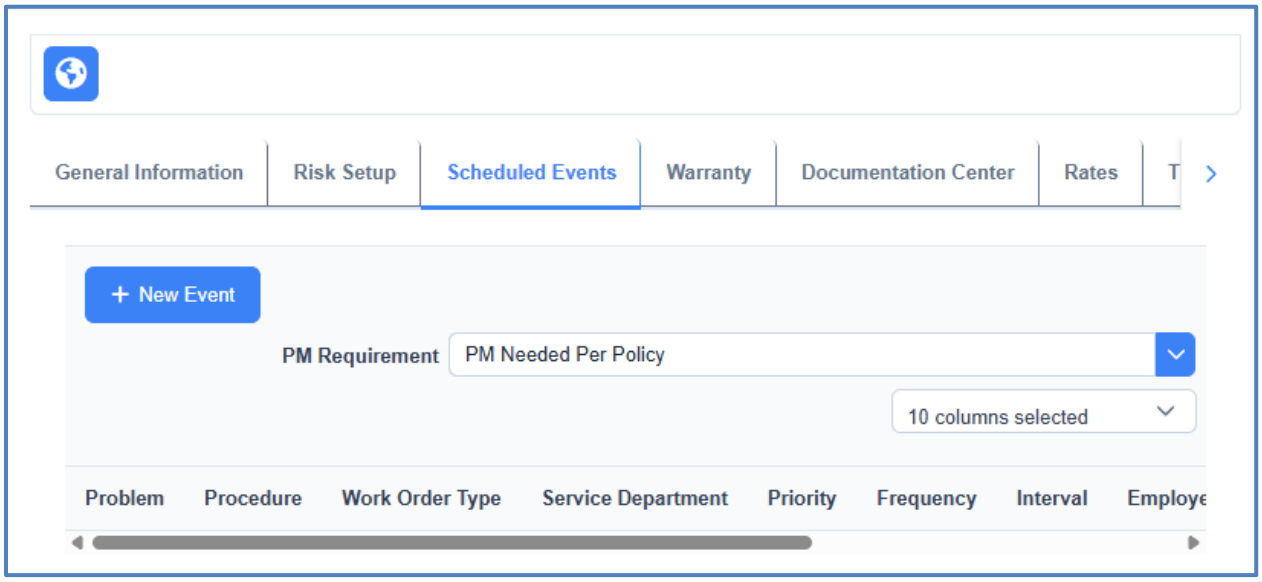

Clicking on the icon in the upper left-hand corner opens the Scheduled Event screen which allows the user to configure specific fields regarding scheduling an Equipment.

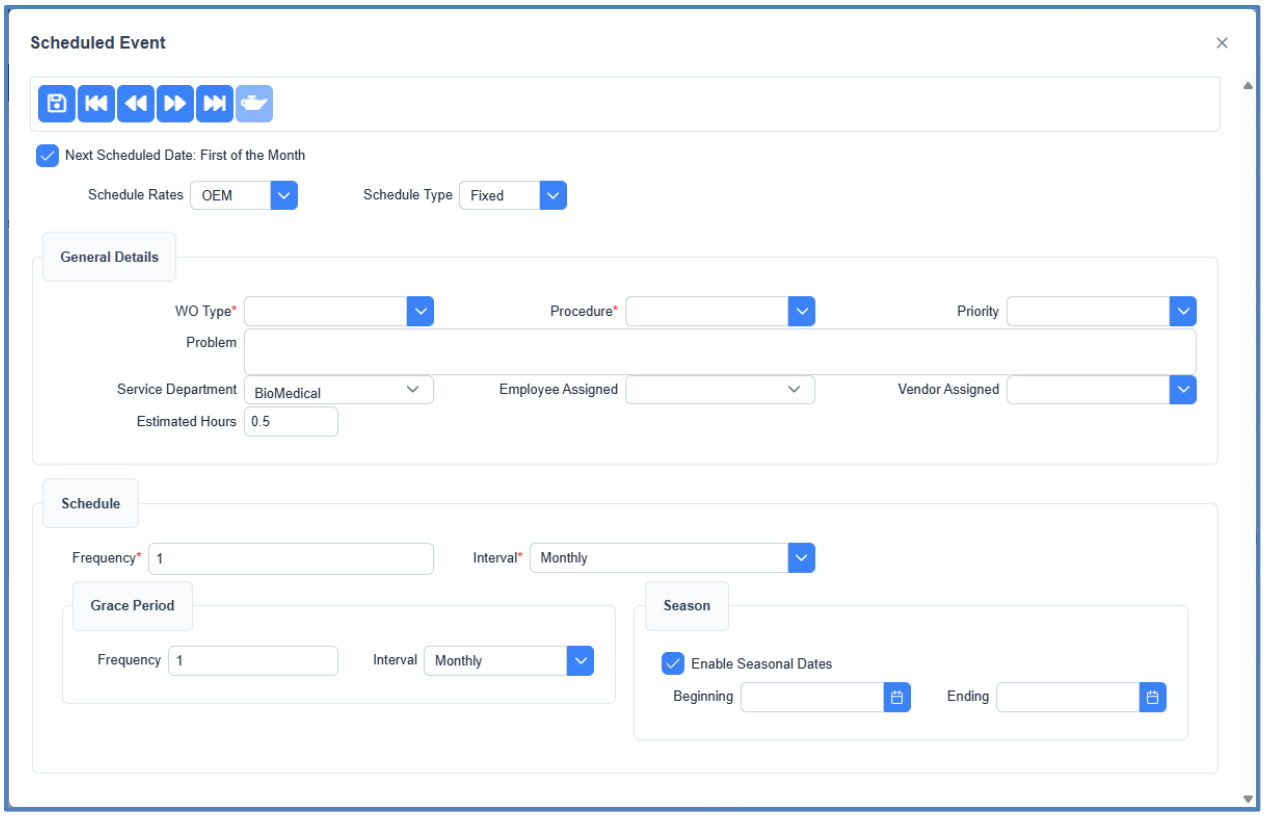

Note: Red asterisks indicate a required field to Save!

Alternative Equipment Maintenance – A checkbox that indicates whether the Equipment is scheduled as a part of an AEM program.

Active – Indicates if the PM schedule is Active or Inactive.

General Details – Provides the default settings for Work Order creation.

Tag Number – Control number associated with the specific Equipment. Populating the Tag Number field will auto-populate the Model and Type fields as well.

Model – The Model associated with the Equipment.

Type – Type associated with the Equipment.

WO Type – The specific type of Work Order that will be created when it is generated.

Procedure – The pre-configured Procedure that will be associated with the Work Order.

Assigned To – The users/teams who will be assigned to the Work Order once it is generated.

Problem – Allows user to add specific notes that will be populated on the Work Order once its generated.

Service Department – The Service Department(s) assigned to the Work Order.

Priority – Priority ranking associated with the Work Order.

Estimated Hours – Estimated Labor time it will take to complete the Work Order.

Schedule – Provides the frequency and next date for the Schedule.

Frequency – Number associated with how often a Work Order will be generated for this specific Equipment. This field is directly tied to the Interval field.

Interval – Pre-configured intervals indicating how often the specific Equipment will generate a Work Order.

Next Even Date Time – The Date and Time the next Work Order will be generated.

Grace Period – Establishes the number of days the work order will be available for completion and be counted as On Time.
Frequency – The Date Part allowed before Work Order is considered Overdue.


Interval – Grace Period Interval**.**

Season – Allows the user to set a beginning and end date for seasonal equipment.
Beginning – Date when Work Order will begin generating for a specific Equipment.
Ending – Date Work Order will stop generating for a specific Equipment.

Ad Hoc Event – A checkbox indicating this is a one-time Work Order for a specific Equipment.

Floating Event – A checkbox indicating whether the specific Equipment is on a Floating Schedule. Floating Events allow for the dates of the Schedule to be pushed based on the completion date of the previous Work Order.

Warranty

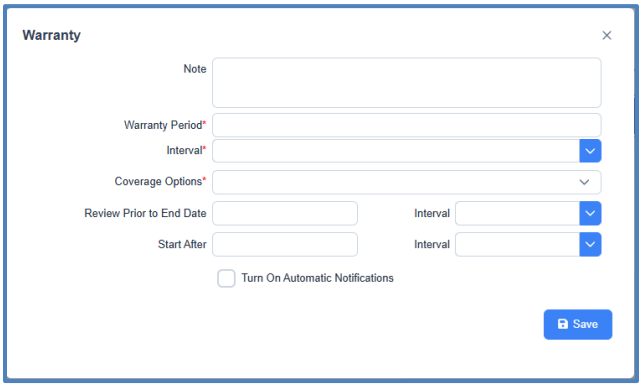

This area allows users to enter warranty information for the Equipment. Clicking on the New Warranty icon opens the Warranty screen. This allows the user to enter the Warranty data for the Equipment.

Vendor – The Vendor supplying the warranty.

Start Date – The start date of the Warranty.

End Date – The end date of the Warranty.

Note – Any additional details regarding the Warranty not covered by the other included fields.

Coverage Options – This multi-select dropdown allows the users to declare what is covered by the Warranty.

Response Time (Hours) – States what the average response time is by the Vendor.

Review Date – This date is when the Warranty should be reviewed before expiration. On this date, the Reviewer (next field) will receive an email reminding them to review the contract.

Reviewer – The person or persons responsible for renewing the contract.
Turn On Automatic Notifications – Allows for automatic emails to the Reviewers regarding this contract.


Service Hours – Provides the service hours of the Vendor.

Documentation Center

The Documentation Center contains all files and photos pertaining to this Equipment Type. Much like Scheduled Events, it is more common to have items at the Model level than at this level. Click the New button to add a new file. Under File Details, click the Browse button and locate the file to be added. Administrators can add an optional description. If it is an image file, it can be selected as the default image under the list of files.
Finally, Administrators can choose where the file will be seen:

CLASSIFICATION: FOR PUBLIC USE

- Non-PM Work Orders
- PM Work Orders
- Equipment
- EasyNet
- Model

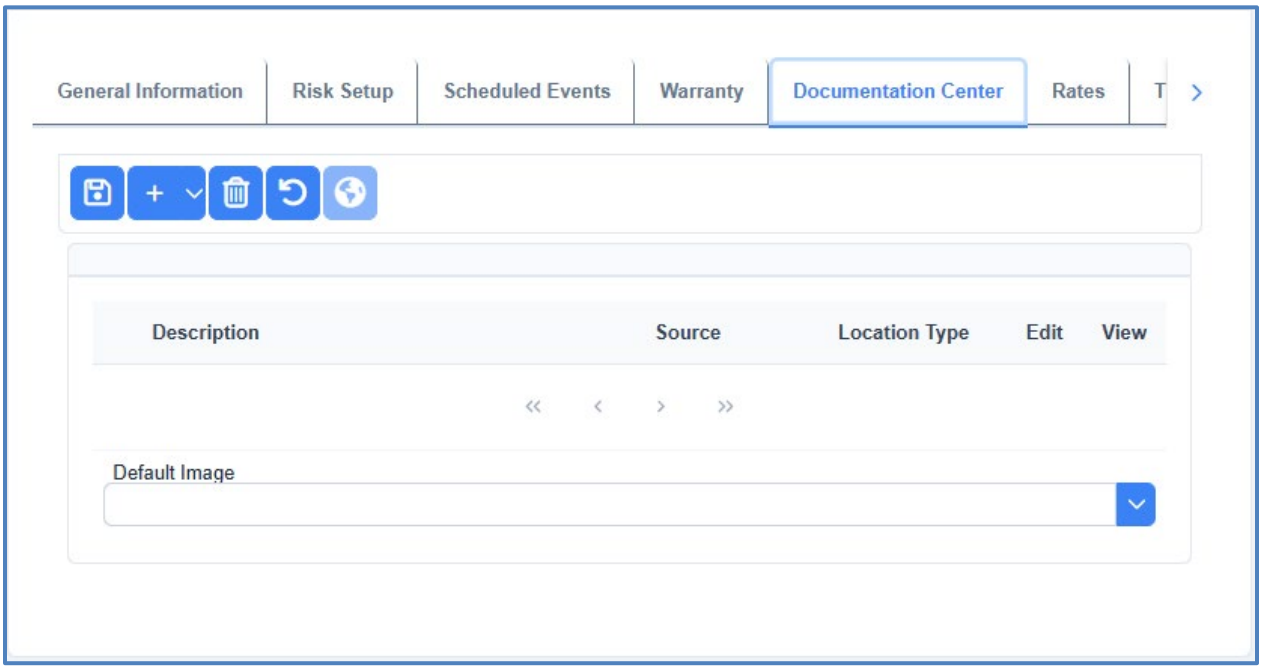




Save – Saves the attachment.




New – Adds a new attachment. When the plus is clicked the window will include a section on the right side to "Browse" for the file or Users can drag and drop the file in the "File Details" section.

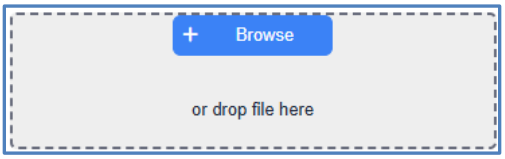

Note: On mobile devices, browsing files will present the user with three options: taking a photo, selecting a photo from the Photo Library, or accessing the devices files application.

Rates

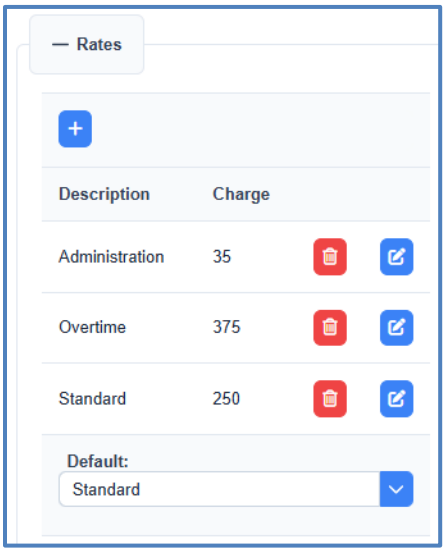

Setting an Employee's Rates monetizes the Employee's labor on Work Orders. After clicking the plus sign, Administrators are presented with a popup screen to enter a Rate's description, amount, and designate the charge as "Labor" or "Travel." Rates can be added and deleted as needed. Finally, at the bottom of the screen, Administrators should declare a default Rate. These are based on the Rates already entered.

Note: While "Default" is not a required field, setting a default will aide Users when entering Labor Lines. If a default is not set, they must set their Rate on every Labor Line.

Troubleshooting Guide

Allow Administrators to add a guide for Users to troubleshoot this Equipment Type. This is available on Equipment when completed.

Expansion


No CMMS comes with the precise fields to meet every organization's needs. Therefore, the Expansion tab allows for the addition of custom fieldsets and fields. However, these fields do not have to live in the Expansion tab. Fields can be moved to the Work Order Header as needed.

a. **Create a Fieldset** – Right-Click within blue screen below the Tab Bar. You will see the +Add Fieldset icon. Click on +Add Fieldset icon and populate the Field name you want to create and click OK.
b. **Customize Fieldset** – Once the Field has been created, Right Clicking on the Field displays Fieldset or +Add Field icons. Clicking Fieldset allows users to either Rename or Delete the custom field. Clicking on +Add Field allows users to choose the format of the customize field. Right Clicking inside the custom field displays either the Edit or Delete icons.
c. **Required/Add Field to Nameplate** – By editing the field, Administrators can delare the field required and/or Add to HeaderOnce in the header, fields can be rearranged to suit the need of the organization.

Note: Equipment Type Expansion Fields will also be found within the Tools Menu on the individual Tag Number in the Equipment Component.

Failure

This section contains codes and descriptions regarding the Failure responses on Work Orders. The Active checkbox Denotes whether Administrators are using this Failure or not. Failures cannot be deleted from the system when in use; therefore to “remove” them, Administrators can hide them by unchecking this box.
Currently, there is no other functionality for this Data Manager.

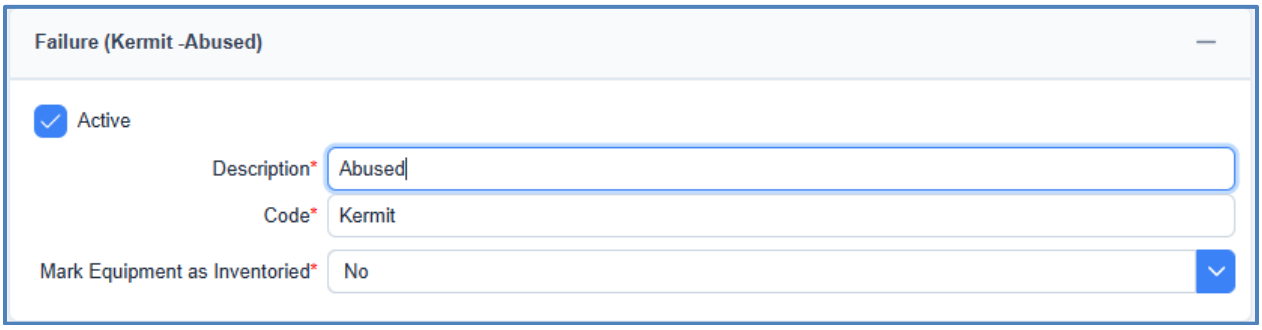

Administrators can declare if the Equipment was inventoried based off the Failure chosen. Once a Failure is selected the Equipment will be inventoried, will not be inventoried, or the User will be prompted to state if the Equipment was inventoried or not.


CLASSIFICATION: FOR PUBLIC USE

Job Types

Specific Job Types can be added which assist with Estimating Hours and automatically assigning Procedures. They can also be used for reporting purposes to ensure non-Scheduled Events are being completed.


General Information

This tab contains an Active checkbox, a required description, an optional code, and Estimated Hours for the Job Type. It is important to give each Job Type a unique description and code (if used).

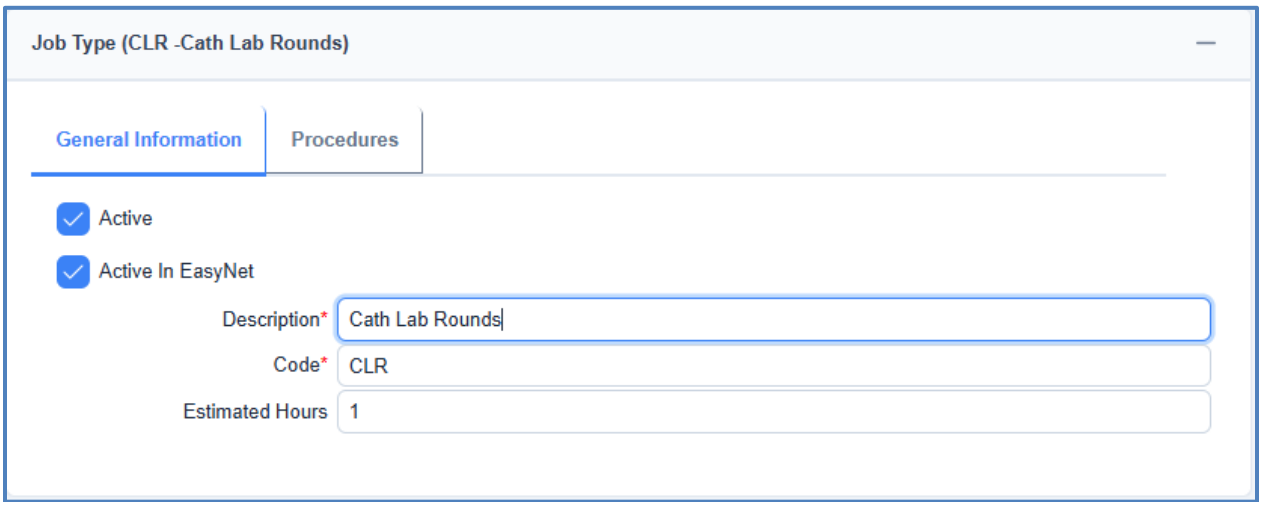


Procedure

With this tab, Administrators can add one or multiple procedures to the Job Type. These procedures will be added to all work orders containing this Job Type. Job Type is **not** a required field for Work Orders.

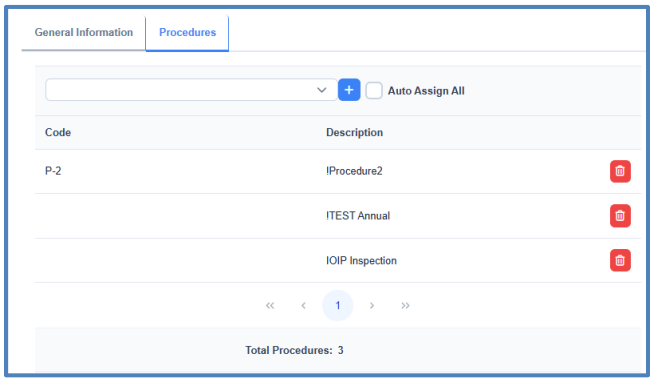


Library Classification

Allows Administrators to classify what kind of Equipment Library it is.

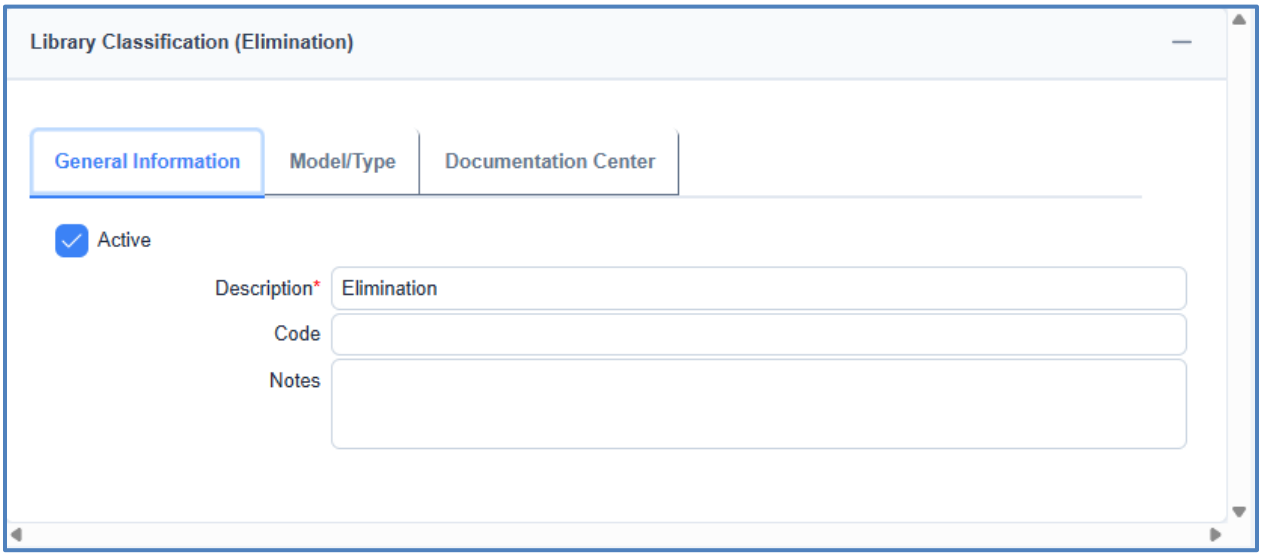

Model/Type

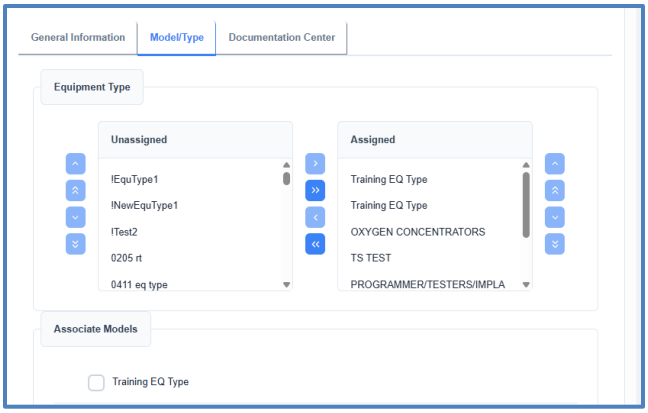


Allows Administrators to align Models and Equipment Types with the Library.

Documentation Center

The Document Center contains all files and photos pertaining to this Library Classification. Click the New button to add a new file. Under File Details, click the Browse button and locate the file to be addedAdministrators can add an optional descriptionIf it is an image file, it can be selected as the default image under the list of files.

CLASSIFICATION: FOR PUBLIC USE

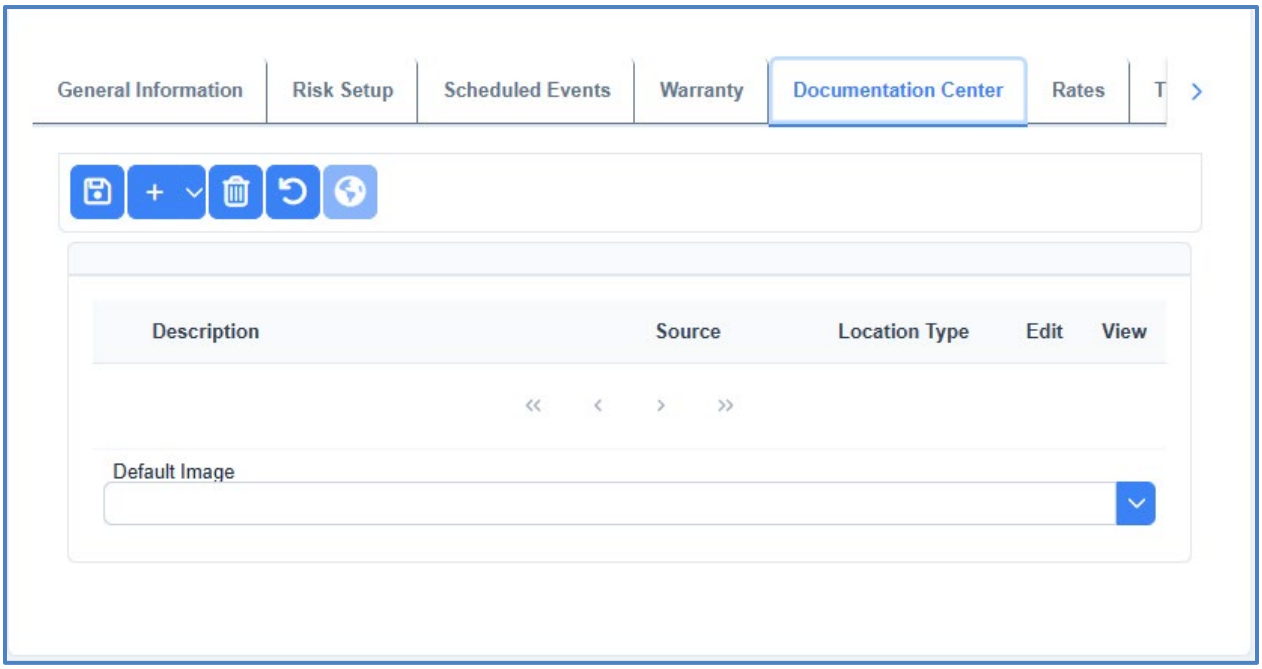




Save - Saves the attachment.




New – Adds a new attachment. When the plus is clicked the window will include a section on the right side to "Browse" for the file or Users can drag and drop the file in the "File Details" section.

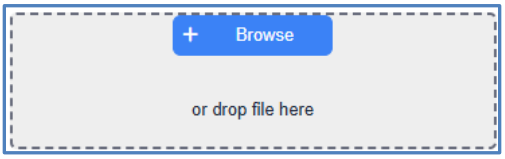

Note: On mobile devices, browsing files will present the user with three options: taking a photo, selecting a photo from the Photo Library, or accessing the devices files application.

Library Requesters


This sets who can request Equipment from Libraries.

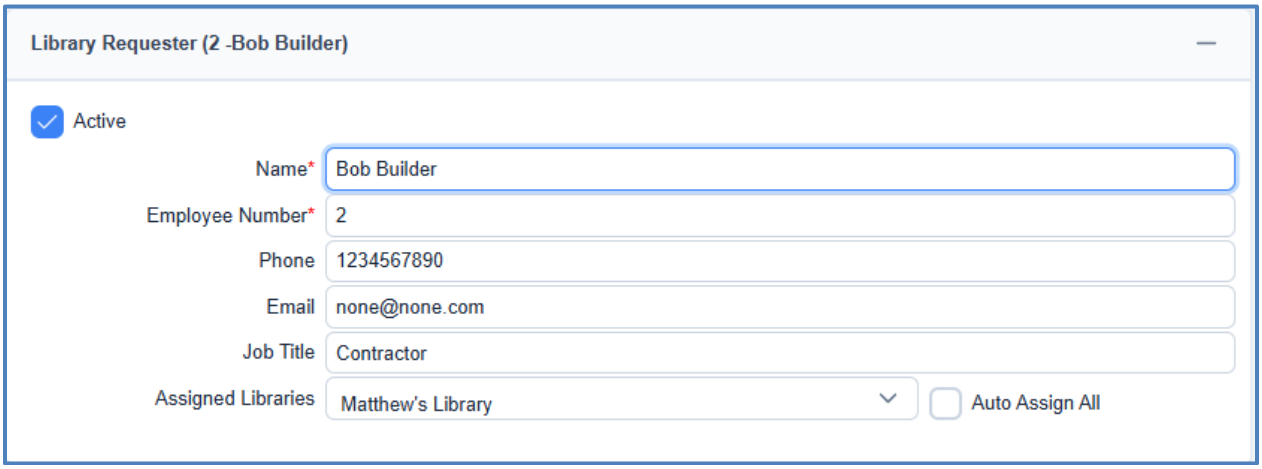

CLASSIFICATION: FOR PUBLIC USE


Loan Request

This denotes what type of request is made from an Equipment Library.

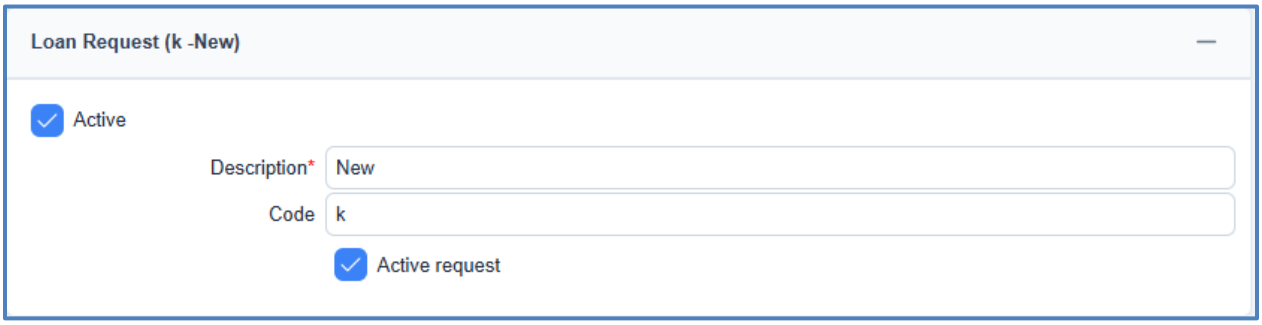

Loan Status

This denotes the status of a Loan from an Equipment Library.

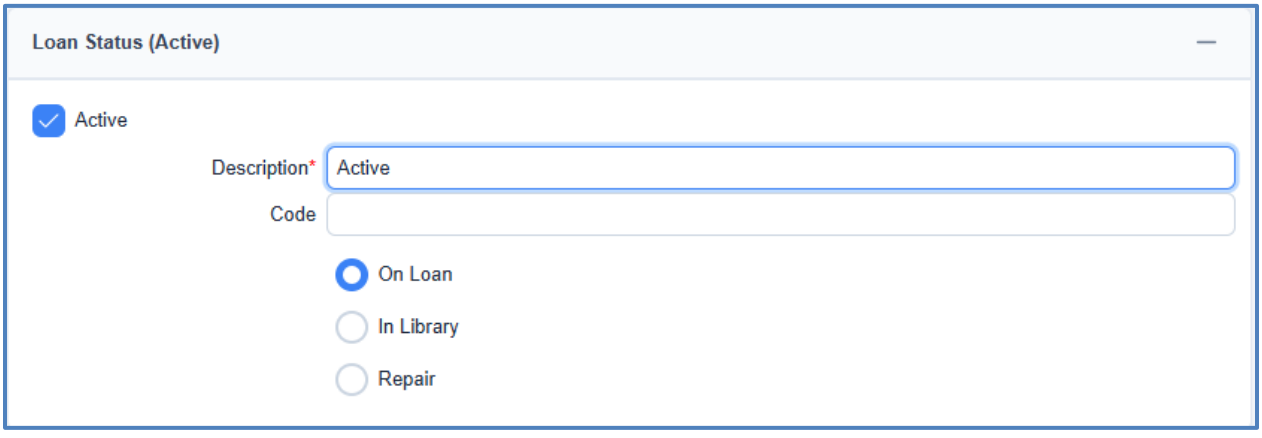

CLASSIFICATION: FOR PUBLIC USE


Loan Type

This denotes the type of Loan from an Equipment Library and the number of days of the Loan.



Operating System


Allows Administrators to set the Operating Systems utilized in the Information Services tab on Equipment.

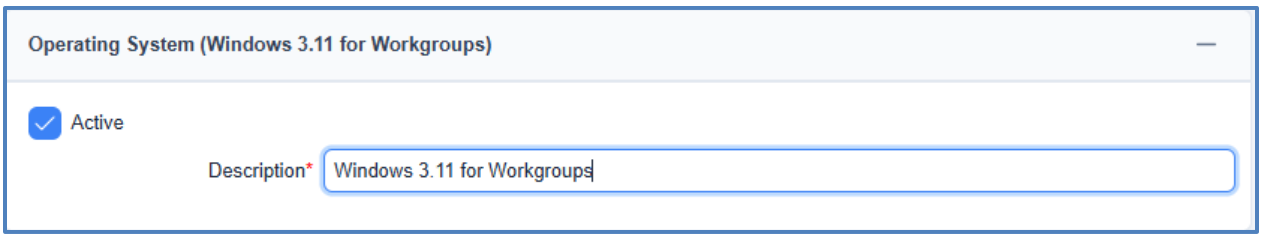

CLASSIFICATION: FOR PUBLIC USE

Ownership


This section contains codes and descriptions regarding the Ownership of Equipment. The Active checkbox Denotes whether Administrators are using this Ownership or not. Ownerships cannot be deleted from the system when in use; therefore to "remove" them, Administrators can hide them by unchecking this box.
Currently, there is no other functionality for this Data Manager.

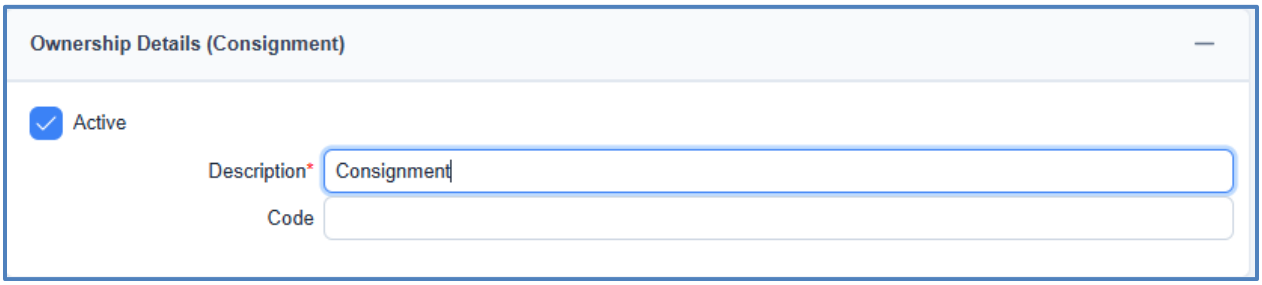

Part Category


Much like Equipment Types, Part Category allows Administrators to group their parts into specific categories. This aids in reporting but is not a required field in the Parts module. Example Part Categories include:

- Batteries
- Belts
- Bulbs
- Filters

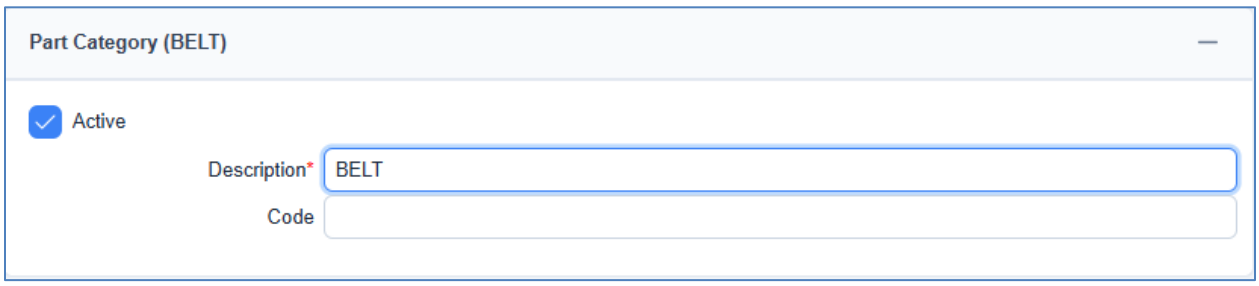

Priorities


This section contains codes and descriptions regarding the Priority of Work Orders. Priorities are especially important when reporting on Work Orders and informing users which Work Orders should be completed first. The Active checkbox Denotes whether Administrators are using this Priority or not. Priorities cannot be deleted from the system when in use; therefore to "remove" them, Administrators can hide them by unchecking this box.

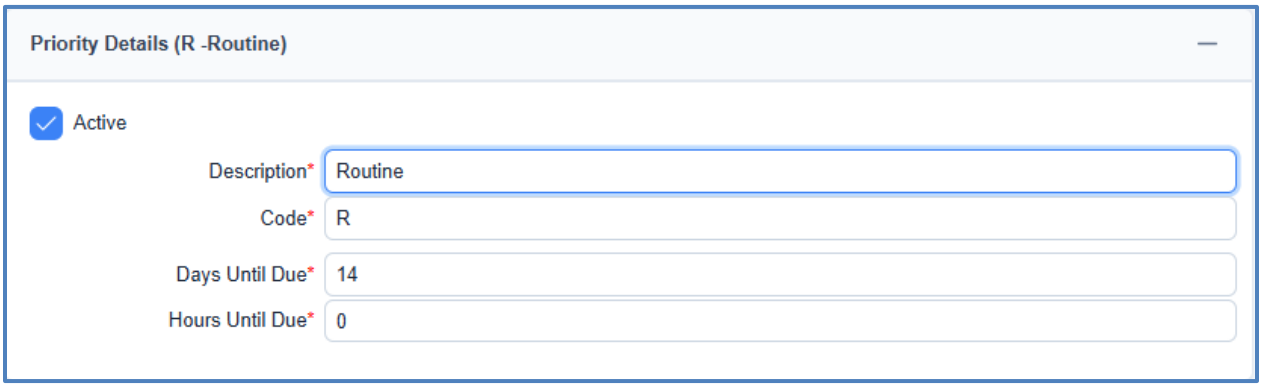

Days/Hours Until Due – This will set the Work Order Due Date from the Request Date. The fields can be used individually or in tandem.

Procedures

A Procedure is general instructions and can include a list of Tasks which are then placed onto either Job Types or Scheduled Events.

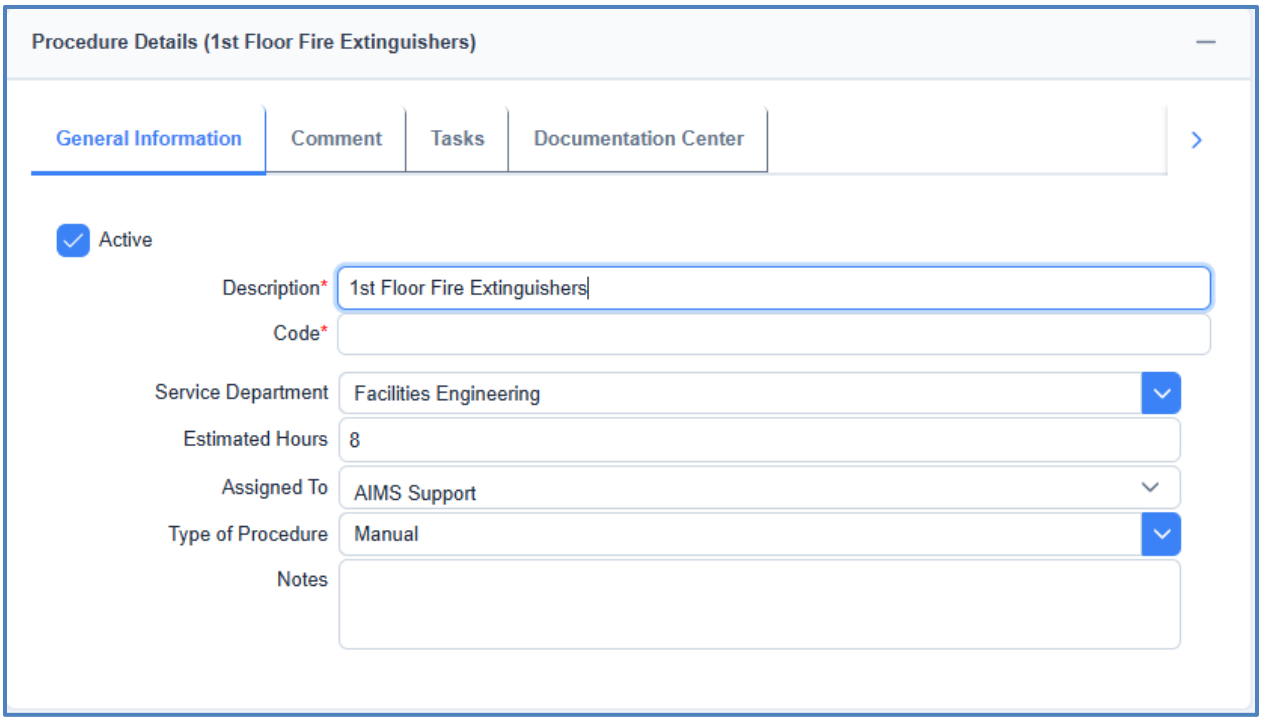

General Information

This tab, as with other Data Managers, includes an Active checkbox and a required Description. The Code is optional. Also optional, the Administrator can set:


- **Service Department** – This is the department responsible for conducting the work on the Procedure.
- **Estimated Hours** – How long the Procedure should take.
- **Assigned To** – Procedures can be assigned to individuals or teams.
- **Comment** – Internal comments regarding the Procedure.
- **Notes** – Notes/Instructions for the Procedure visible on the Work Order.

Comment

This tab includes the narrative on how to complete the Procedure.


CLASSIFICATION: FOR PUBLIC USE

Tasks

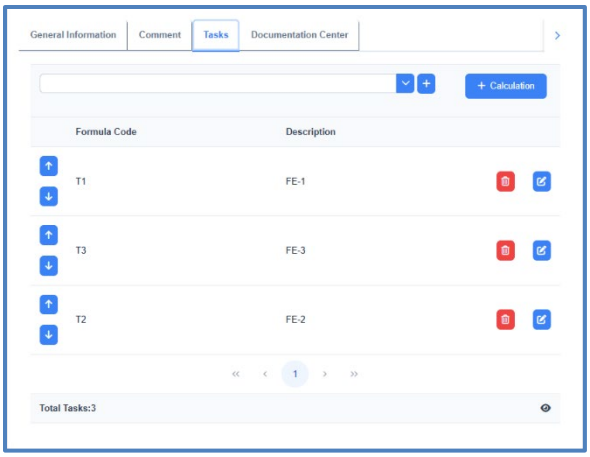


Tasks are assigned to the Procedure using this tab. Please note Tasks are their own Data Manager. Administrators can select the task from the dropdown list and click the Add Task button to add the Task to the Procedure. In addition, using the Calculation button Administrators can calculate Task scores together.

Once a Task has been added to a Procedure, Administrators can edit the task to set Pass/Fail criteria. These include:

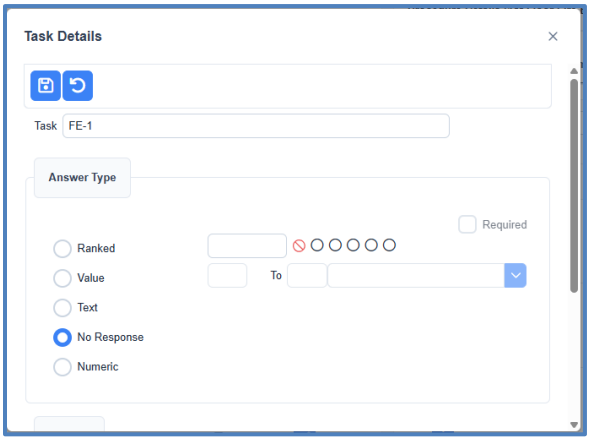


- **Ranked –** Using the circles to the right, users can rank the reading from zero to five circles.
- **Value –** Users can enter a numeric value, such as an electrical reading. Values outside of the low and high values can fail the Procedure.
- **Text –** This allows the user to enter free text, as needed.
- **Numeric –** Allows the user to enter a numeric value.
- **Include –** Administrators can include a Pass/Fail or Yes/No reading and then make it required using the accompanying checkbox.
- **Allow Close if Fail/No –** Allows users to close the Work Order if Fail or No is selected.
- **Generate Default Work Order Type on Failure –** If the Procedure fails, this allows the system to generate a Work order based on the default work order type setup under System Setup->Defaults. If multiple Tasks fail, they will all be included on a single work order.

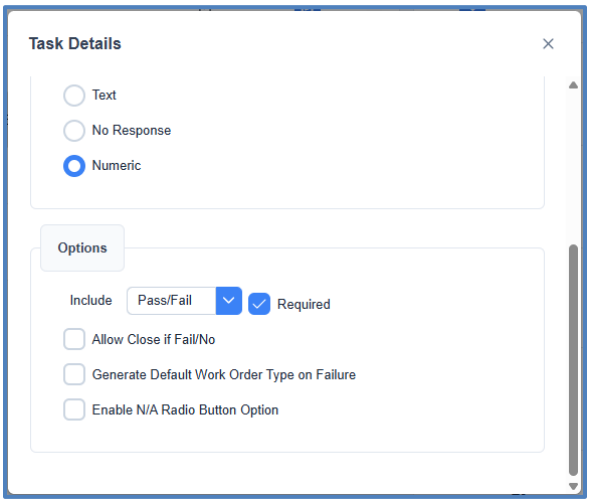

CLASSIFICATION: FOR PUBLIC USE

Documentation Center

The Documentation Center contains all files and photos pertaining to this Procedure. Click the New button to add a new file. Under File Details, click the Browse button and locate the file to be addedAdministrators can add an optional descriptionIf it is an image file, it can be selected as the default image under the list of files.

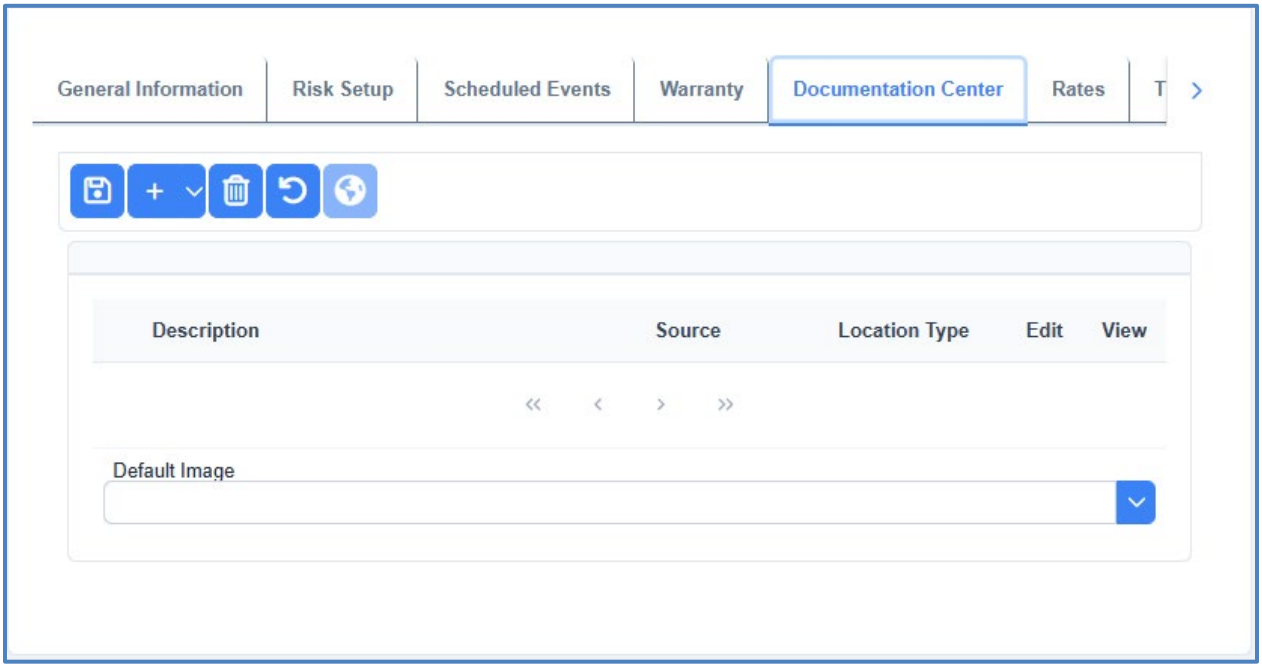




Save - Saves the attachment.




New – Adds a new attachment. When the plus is clicked the window will include a section on the right side to “Browse” for the file or Users can drag and drop the file in the “File Details” section.

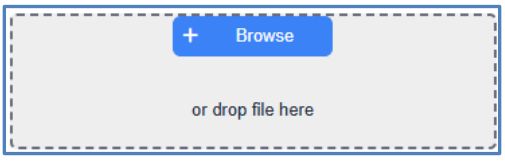

Note: On mobile devices, browsing files will present the user with three options: taking a photo, selecting a photo from the Photo Library, or accessing the devices files application.

Purchase Order Status

The Purchase Order Status states whether a Purchase Order is open or closed. Therefore, each Organization needs to have at least one open status and one closed status.

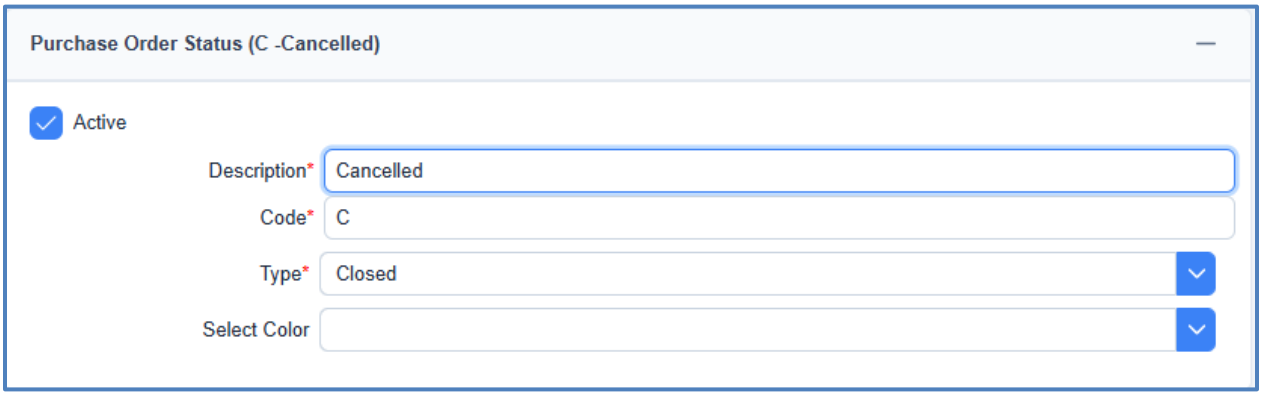

The Select Color is to color the statuses for the Home Screen Purchasing widgets.

CLASSIFICATION: FOR PUBLIC USE

Purchase Request Priority


The purchase request priority denotes how important a purchase request is. Just like the work order priority, it allows Administrators to set a “Days Until Needed” or an “Hours Until Needed.” These fields can be used independently or in tandem.



CLASSIFICATION: FOR PUBLIC USE

Purchase Request Status


The Purchase Request Status denotes whether a Purchase Request is open or closed. Using the PO Ready checkbox, Administrators can state whether the status can be used to show if the request is Purchase Order ready. The “Select Color” field colors the status on the Home Screen’s Purchasing widgets.

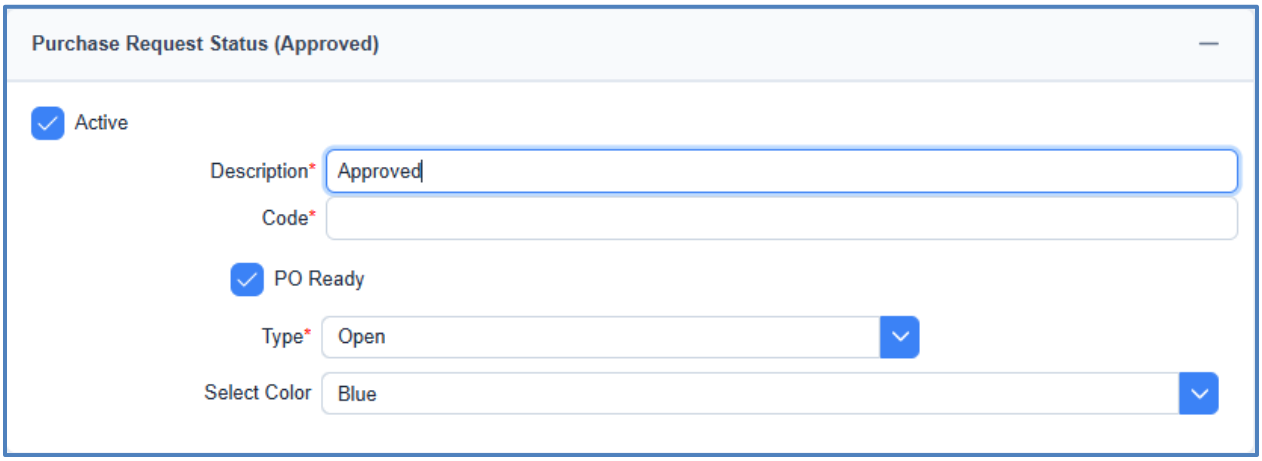

CLASSIFICATION: FOR PUBLIC USE

Purchasing Bill To/Ship To


This Data Manager creates static addresses to use in either the Bill To or the Ship To fields on Purchase Orders.

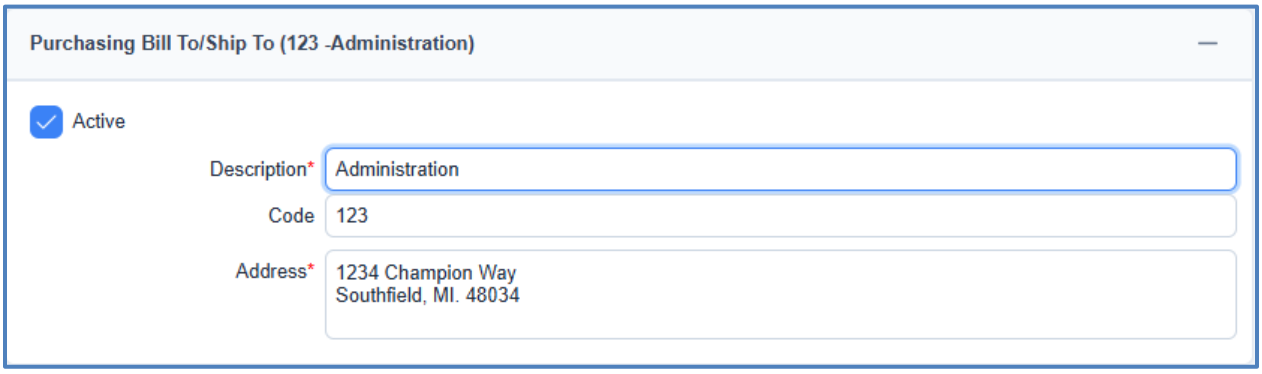

CLASSIFICATION: FOR PUBLIC USE

Purchasing Credit Memo Status


The Purchasing Credit Memo Status shows whether Credit Memos are open or closed. Therefore, it is recommended that Administrators create at least one open and one closed status.

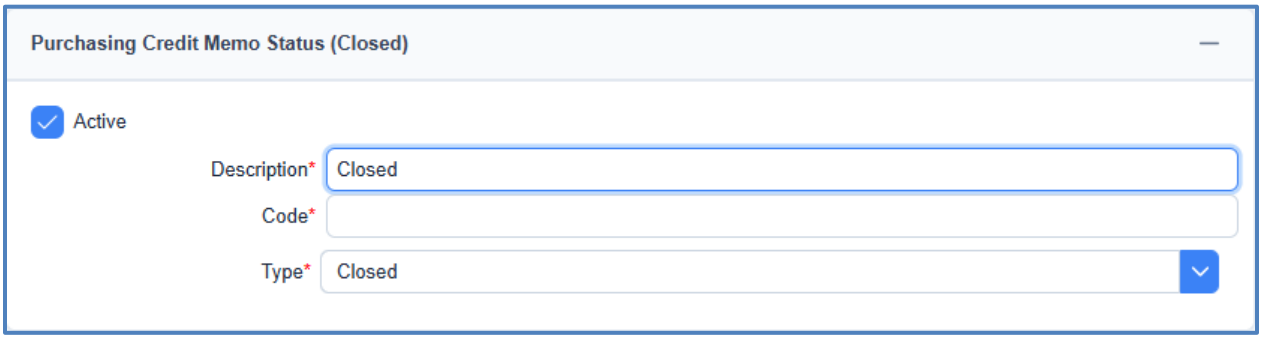

CLASSIFICATION: FOR PUBLIC USE

Purchasing Invoice Status


The Purchasing Invoice Status shows whether Invoices are open or closed. Therefore, it is recommended that Administrators create at least one open and one closed status.

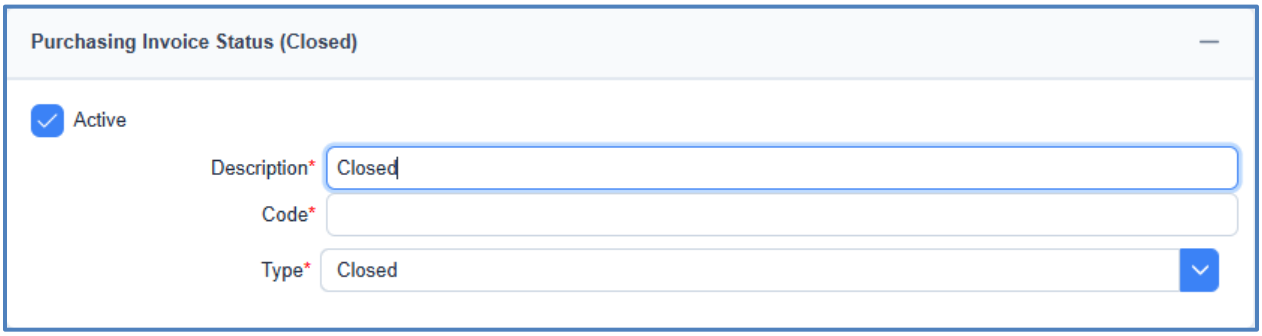

CLASSIFICATION: FOR PUBLIC USE

Purchase Invoice Type


This Data Manager allows Administrators to create Invoice Types to use as they need.

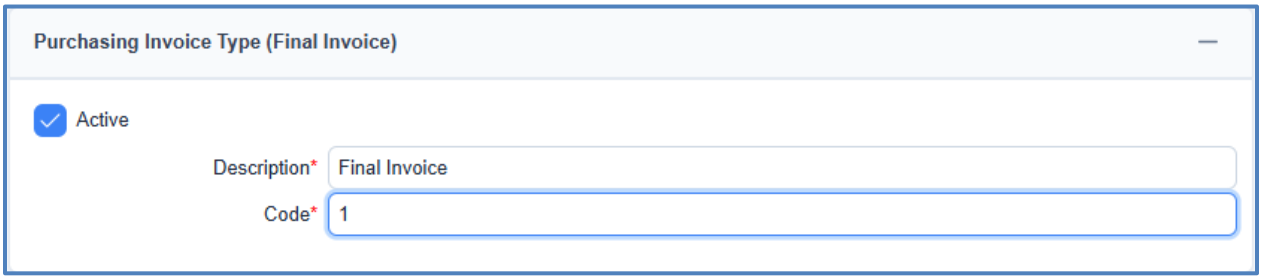

CLASSIFICATION: FOR PUBLIC USE

Purchasing Pricing Method


This Data Manager allows Administrators to create Pricing Methods to use as they need.

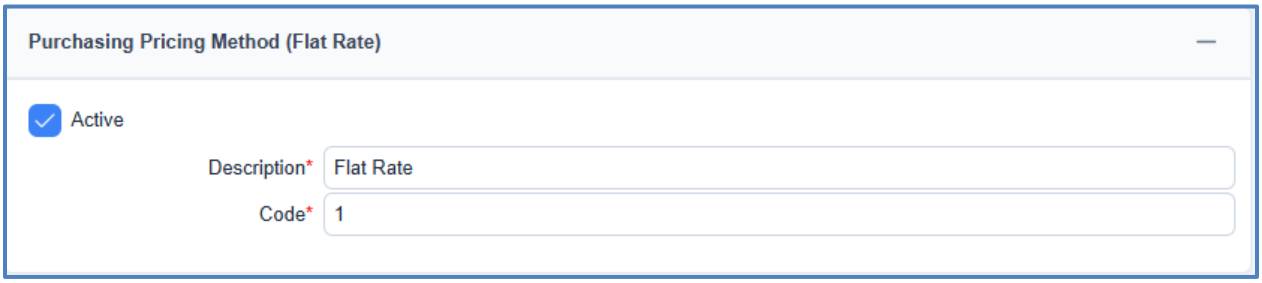

CLASSIFICATION: FOR PUBLIC USE

Purchasing Ship Via


This Data Manager allows Administrators to select from several types of ship via methods to use as they need.

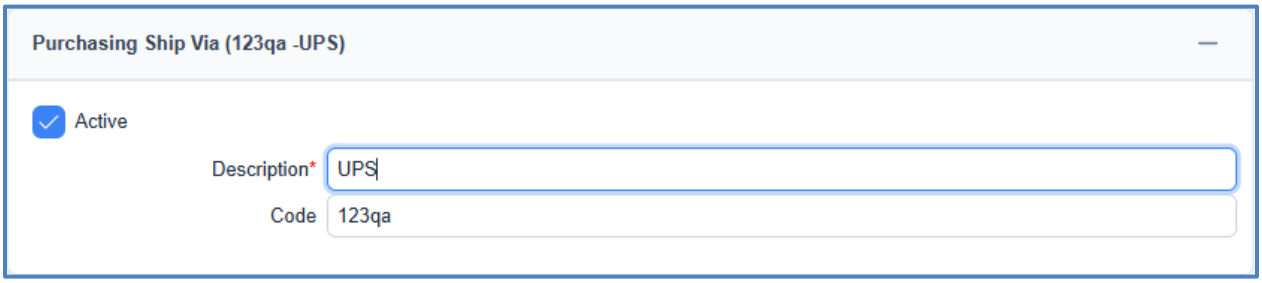

CLASSIFICATION: FOR PUBLIC USE

Report Group

In the Facility Data Manager, Facilities can be set to a Report Group. This allows for easy filtering by Facility when running Reports.

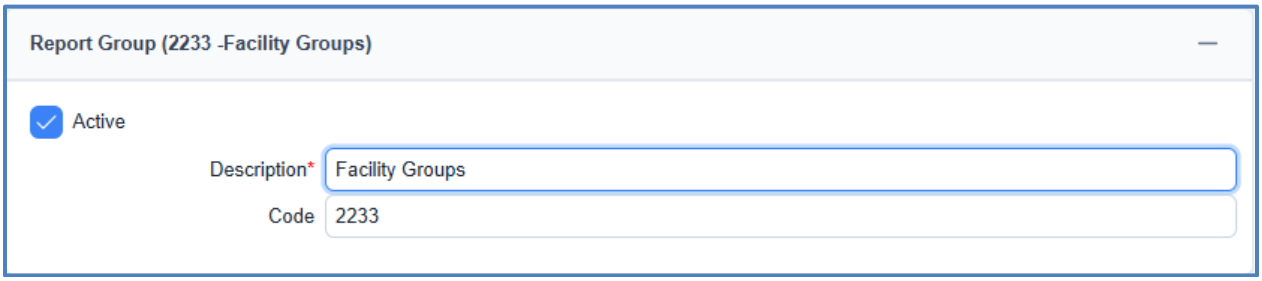


CLASSIFICATION: FOR PUBLIC USE

Response

Responses are added to Labor Lines to allow a custom selection of Responses from the technician to state how they responded to that labor line. Responses are classified into three primary areas:

- Administrative
- Preventative Maintenance
- Non-Preventative Maintenance

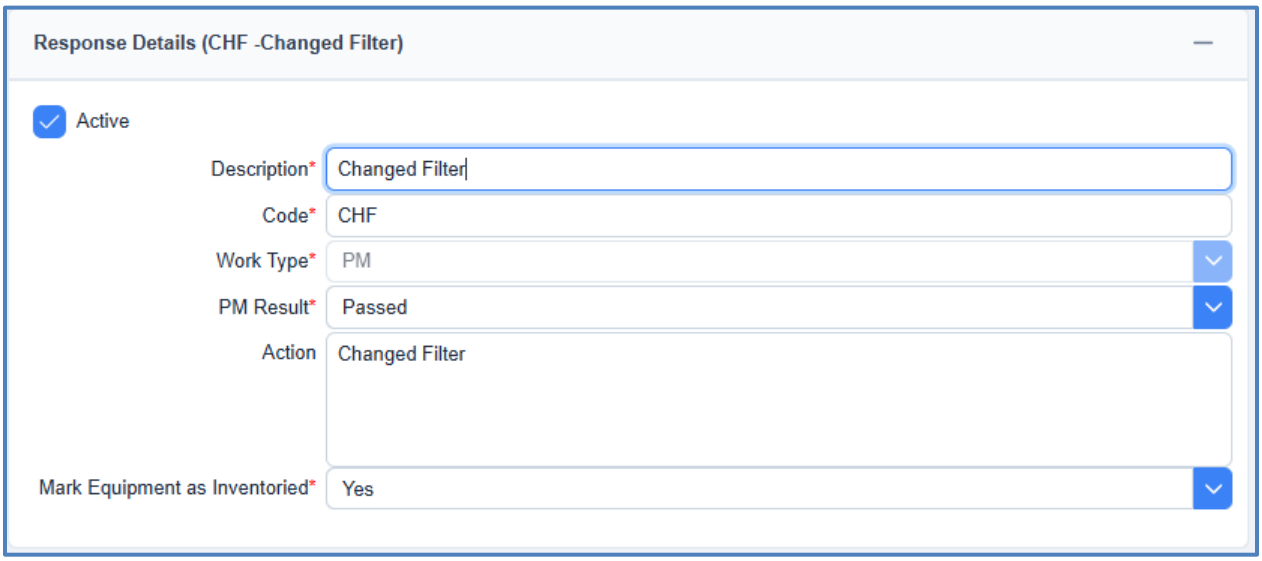

To create a Response, Administrators must be able to define:

- Description
- Code (optional)
- A Work Type of:
  - Administrative
  - Non-PM
  - PM
  - Paid Time Off
  - Travel
- PM Performed (If the Work Order is a Work Type of PM)

The Administrative, Paid Time Off, and Travel are used for Non-Work Order Activity, which is recorded under the User Menu in the Title Bar.

Non-PM Responses can only be selected on Work Orders with a Work Order Type with the PM Type checkbox unchecked.

A PM Response will require the Administrator to select a PM Performed selection. This selection helps to determine if the PM could be completed. If it could be completed, did it pass or did it fail? These selections are important with reporting.

Optionally, Administrators can enter a custom Action based on the Response selected. This action can be as long or as short as needed.

Finally, Administrators can declare if the Equipment was inventoried based on the Response chosen. Once a Response is selected the Equipment will be inventoried, will not be inventoried, or the User will be prompted to state if the Equipment was inventoried or not.

If a Response is currently being used, it cannot be deleted. To not show a specific response, simply uncheck the Active checkbox in the Response's settings.

Service Departments

Service Departments allow organizations to assign Equipment, Work Orders, and other elements to a specific department. For example, if you wanted the HVAC equipment only to be seen and worked on by Facilities employees, a Facilities Service Department should be created. This would ensure Biomed, EVS, and Security would not be able to see the Equipment or Work Orders. This also aids in reporting estimated hours and PM completion numbers.

General Information

This tab includes an Active checkbox, a required Description field, an optional Code field, and a field to set Warranty Reviewers.



Area Assignment

This tab allows Administrators to assign a hierarchy for Area Assignment for the Service Department. These include:


- Building
- Cost Center
- Equipment Type
- Job Type

Assignments

The Assignments tab is for setting Risk Types and Consumable Categories for the selected Service Department. To set the Risk Types, the Types must be moved from the Unassigned column to the Assigned column. To assign Consumable Categories, they must be selected

CLASSIFICATION: FOR PUBLIC USE

from the dropdown list. Once completed, the Administrator **MUST** click the Save button at the bottom of the grid.

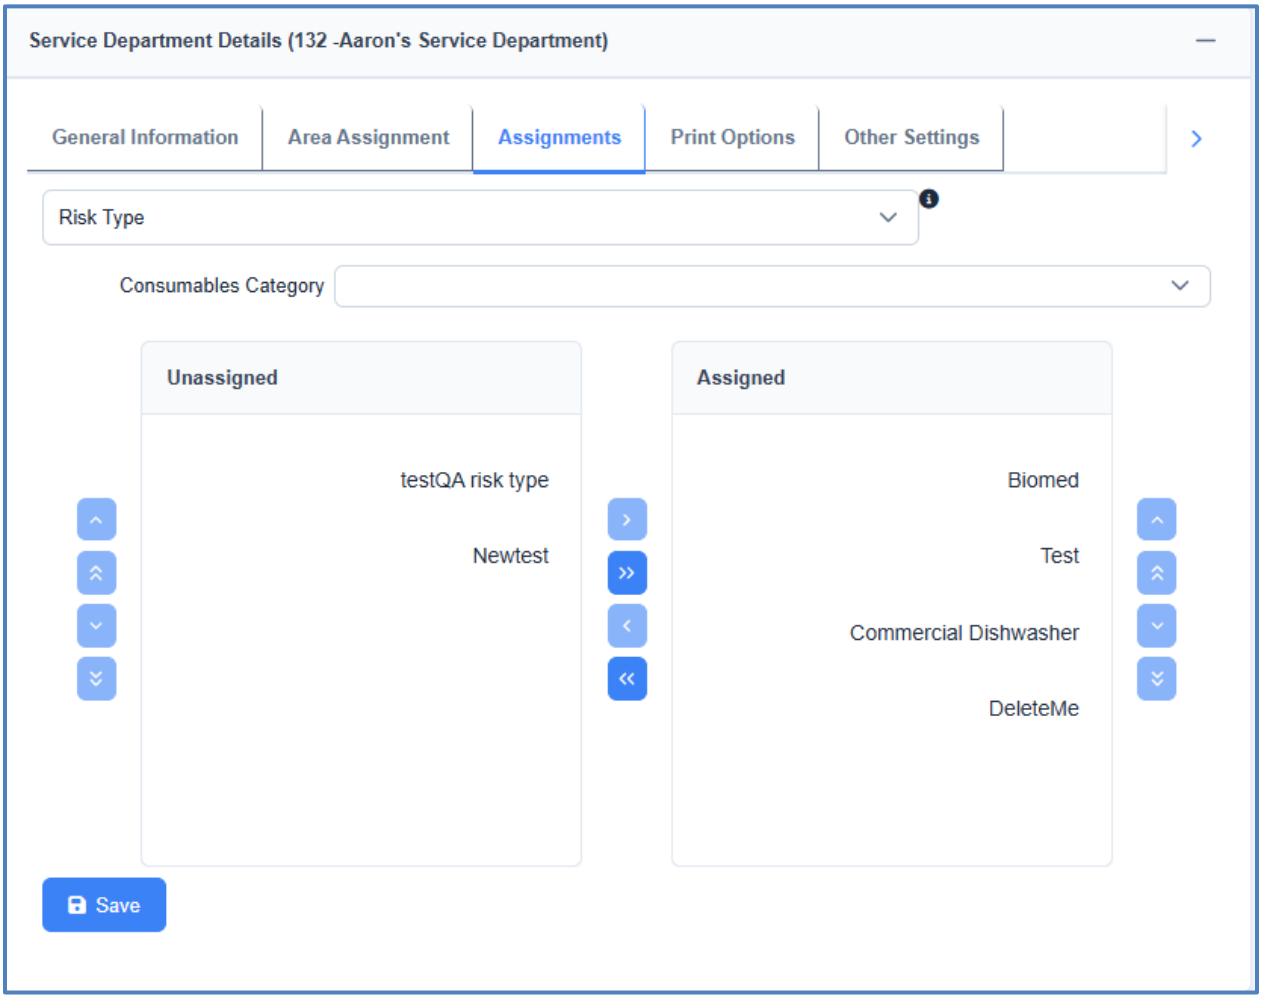


Print Options

To enable automatic printing of Work Orders, the print settings of each Building must be set. The printings can be separated by three types of Work Orders:


- Non-PM Work Orders
- PM Work Orders
- EasyNet Work Orders

CLASSIFICATION: FOR PUBLIC USE

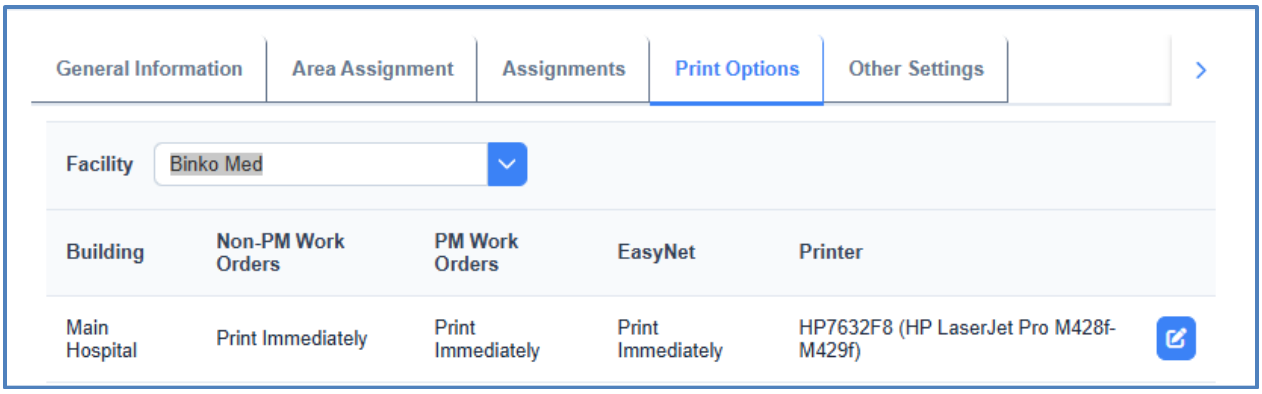

The Print Options for each include:


- Paperless (This option will not print)
- Hold For Printing (Currently not programmed)
- Print Immediately

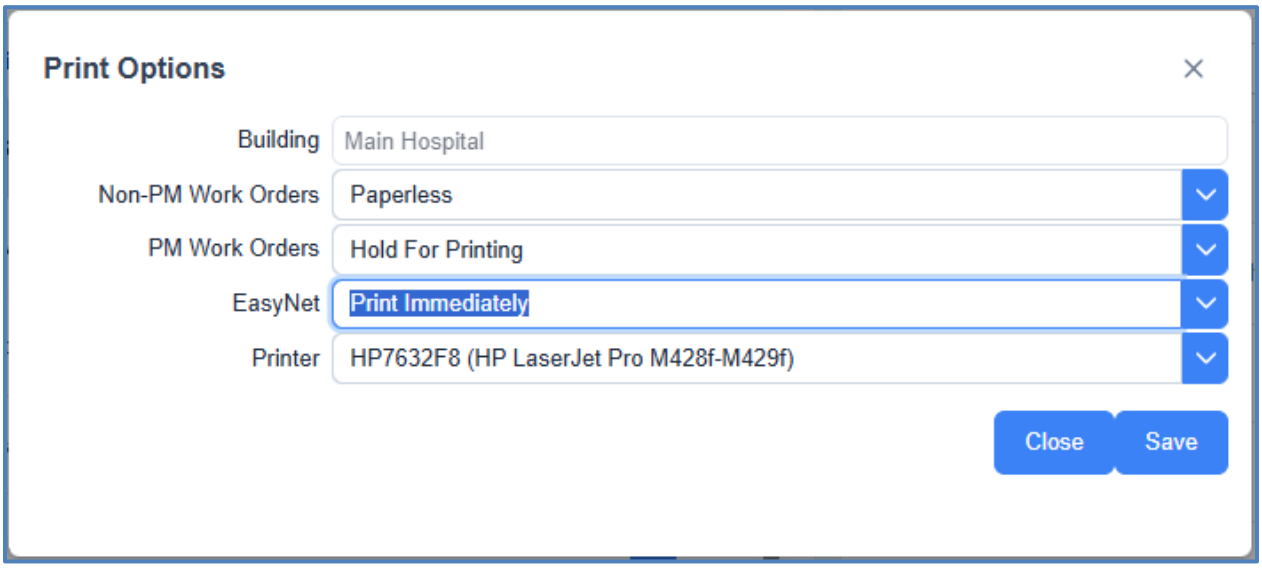

To associate a printer with a Building the Organization needs to install the AIMS 3 Print Server and set the options. This can be obtained through the Project Manager or Technical Support.

Other Settings

The Other Settings tab was created for Service Department-specific settings and will contain additional settings as the come available.

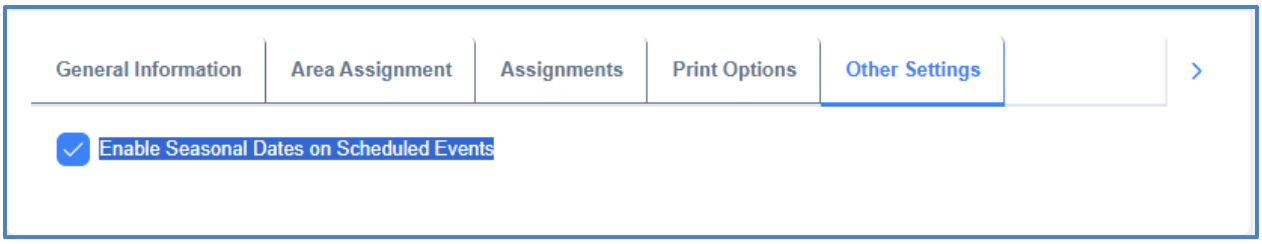


Enable Seasonal Dates on Scheduled Events – Unchecking this box will disable all seasonal Scheduled Events for the Service Department.

Tasks

Tasks are what make up Procedures. The Active checkbox denotes whether Administrators are using this Task or not. Tasks cannot be deleted from the system when in use; therefore to "remove" them, Administrators can hide them by unchecking this box.

To set the Pass/Fail criteria for Tasks, Administrators must use the Procedures Data Manager.

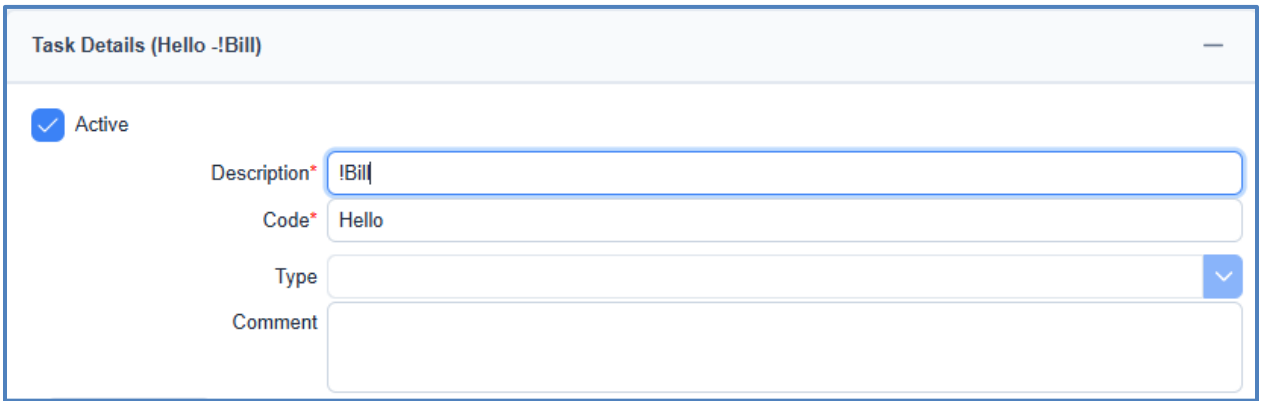


Type – This refers to whether the Task is an Ansur task or manually created. According to the Fluke website, "Ansur Test Automation Software pairs with Fluke Biomedical analyzers to automate testing via standardized and customizable test templates. Ansur is the premier digital solution for hospital quality assurance (QA) professionals to maximize productivity, increase profitability, mitigate risk, and manage regulatory compliance. For more information, visit http://wwwflukebiomedical.com.

Comment – This is a comment for the specific Task. When completing a Procedure on a Work Order, the Task will contain an "i" next to the Task. Clicking on the "i" will show the comment.

Task Details – Administrators can set the Task to set Pass/Fail criteria by default.

These include:

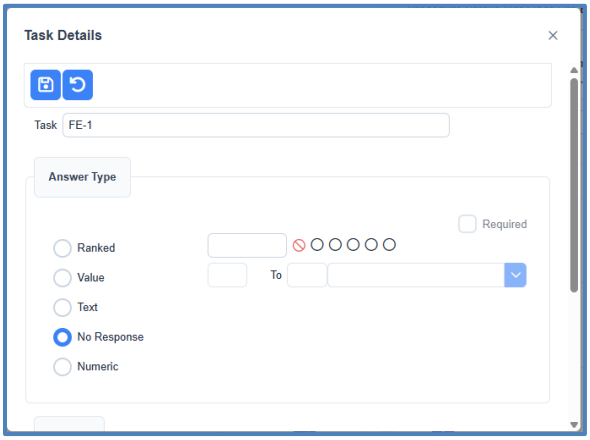


- **Required –** Requires the Task to be completed to complete the Work Order.
- **Ranked –** Using the circles to the right, users can rank the reading from zero to five circles.
- **Value –** Users can enter a numeric value, such as an electrical reading. Values outside of the low and high values can fail the Procedure. Additional units of measure are created in Data Managers->UOM – Task.
- **Text –** This allows the user to enter free text, as needed.
- **Numeric –** Allows the user to enter a numeric value.
- **Include/Required –** Administrators can include a Pass/Fail or Yes/No reading and then make it required using the accompanying checkbox.
- **Allow Close if Fail/No –** Allows users to close the Work Order if Fail or No is selected.
- **Generate Default Work Order Type on Failure –** If the Procedure fails, this allows the system to generate a Work order based on the default work order type setup under System Setup->Defaults. If multiple Tasks fail, they will all be included on a single work order.
- **Enable N/A Radio Button Option –** Adds "N/A" to the "Pass/Fail" and "Yes/No" options.

Note: Changing the defaults of the Task will change the way the Task is set on all existing Procedures in future Work Orders!

Technology Committee


Many Equipment Types require approval from a Technology Committee to be used within an organization. This Data Manager defines the different Technology Committees.

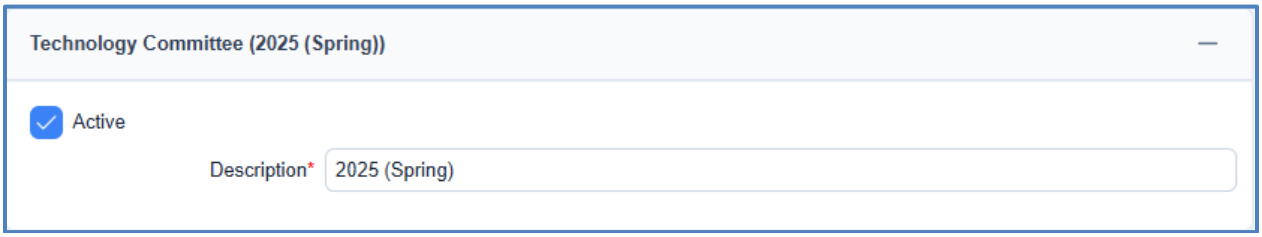

Trade

This section contains codes and descriptions regarding Trades. Trades are akin to Skills and Skill Levels. These are used to show a certain Trade is required for the assigned Work Order. The Active checkbox denotes whether Administrators are using this Trade or not. Trades cannot be deleted from the system when in use; therefore to “remove” them, Administrators can hide them by unchecking this box.


Currently, there is no other functionality for this Data Manager.

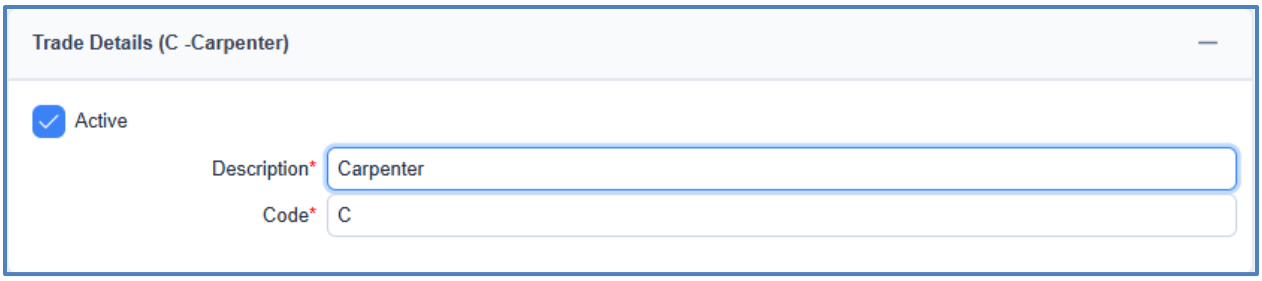

CLASSIFICATION: FOR PUBLIC USE

UOM – Consumables


When setting a how Consumables are ordered or distributed, Administrators need to set a description of the value. For example, are they issued “each” or “by the box”? The Active checkbox denotes whether Administrators are using this UOM - Consumables - or not.

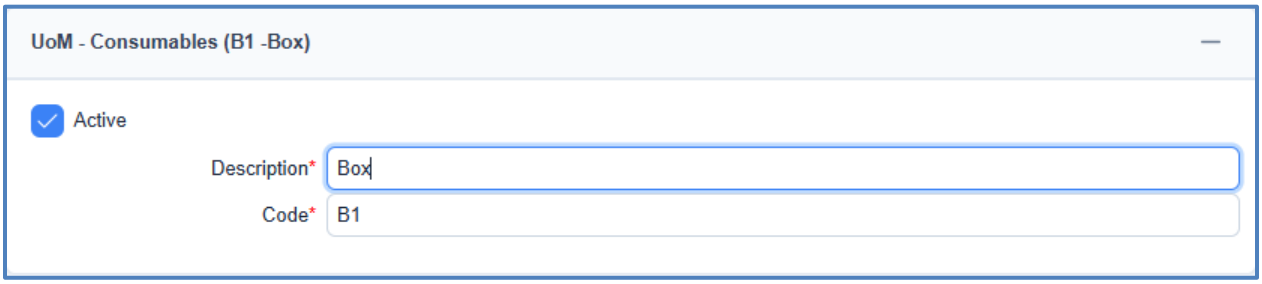

CLASSIFICATION: FOR PUBLIC USE

UOM – Parts


When setting how Parts are ordered or distributed, Administrators need to set a description of the value. For example, are they issued “each” or “by the box”? The Active checkbox denotes whether Administrators are using this UOM - Parts or not.

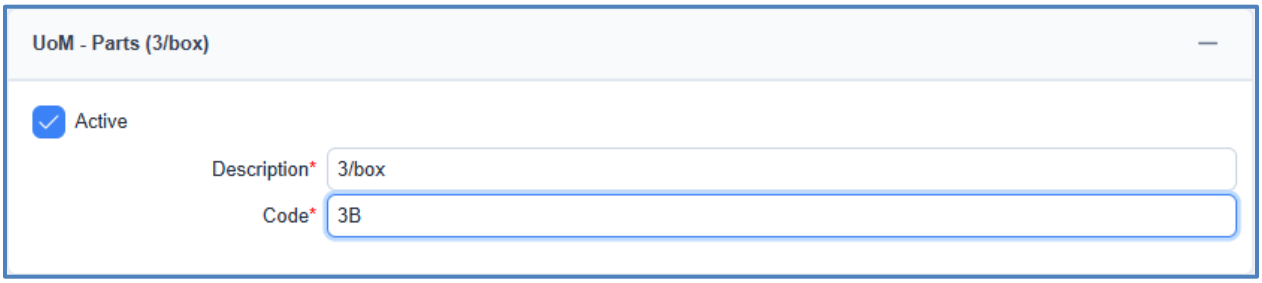

CLASSIFICATION: FOR PUBLIC USE

UOM – Task

When setting a Value of a Task in the Procedures Data Manager, Administrators need to set a description of the value. Those descriptors are set in the UOM – Task Data Manager. The Active checkbox denotes whether Administrators are using this UOM - Task or not. UOM - Tasks cannot be deleted from the system when in use; therefore to “remove” them, Administrators can hide them by unchecking this box.

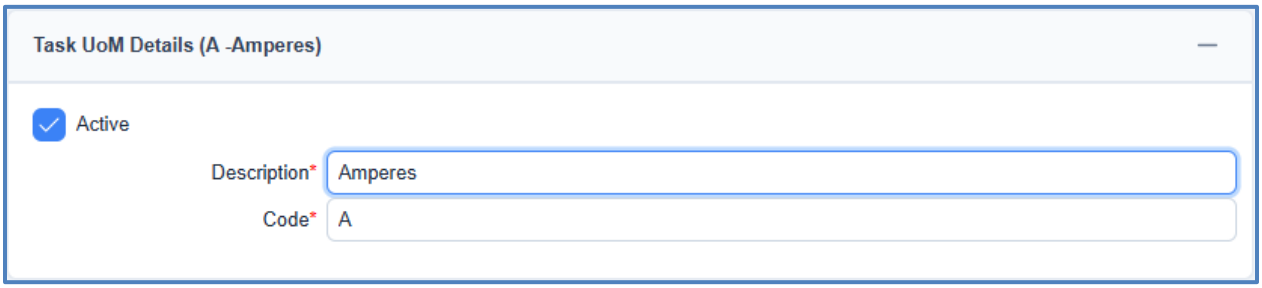


CLASSIFICATION: FOR PUBLIC USE

Vendor

Vendors conduct a myriad of tasks in AIMS 3. They can manufacture, supply, and service Equipment. They can manufacture and supply parts and they can be part of Contracts and Purchase Requests. Setting up Vendors correctly in AIMS 3 will contribute to complete information and streamlined workflows.

General Information

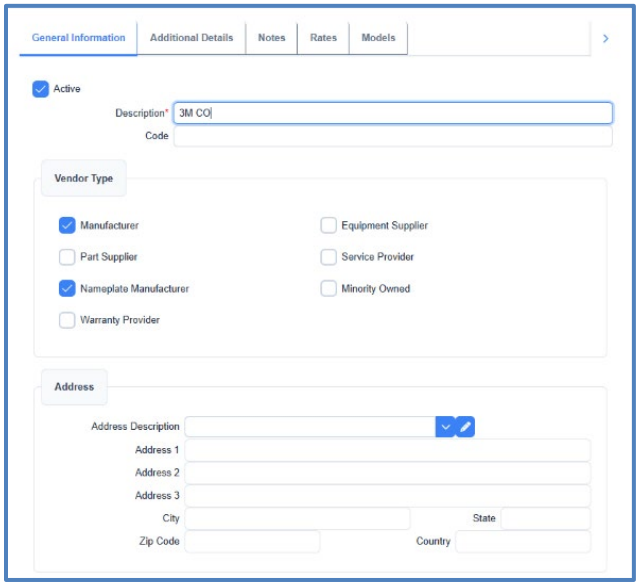


This tab includes an Active checkbox, a required Description field, and an optional Code field. Under Vendor Type, Administrators can designate as:

- Manufacturer
- Equipment Supplier
- Part Supplier
- Service Provider
- Nameplate Manufacturer
- Minority Owned

Each of these must be set to use the Vendor in the respective capacity. If a User cannot assign a Vendor as the Equipment's Manufacturer, it means the checkbox is not checked under the Vendor Data Manager.

The Address section allows Administrators to add multiple addresses for the Vendor. Examples include Physical, Shipping, Mailing, etc.

Additional Details

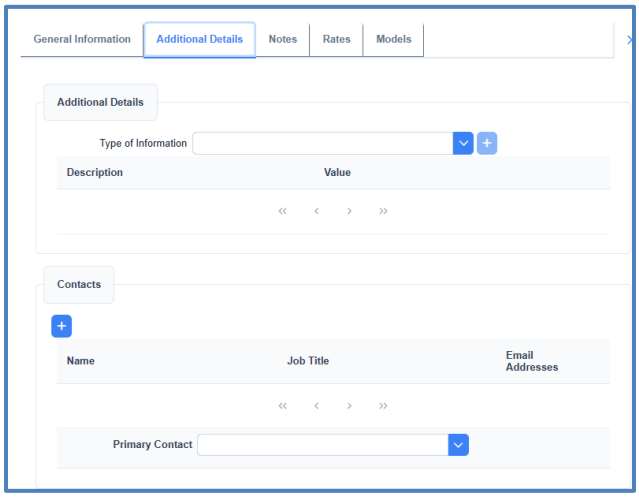


This tab allows for the entry of:

- Account Numbers
- Email Addresses
- Phone Numbers
- Websites

CLASSIFICATION: FOR PUBLIC USE

Notes


This tab allows Administrators to enter free-text notes about the Vendor. The size of the field can be altered by dragging the two lines in the bottom right corner.

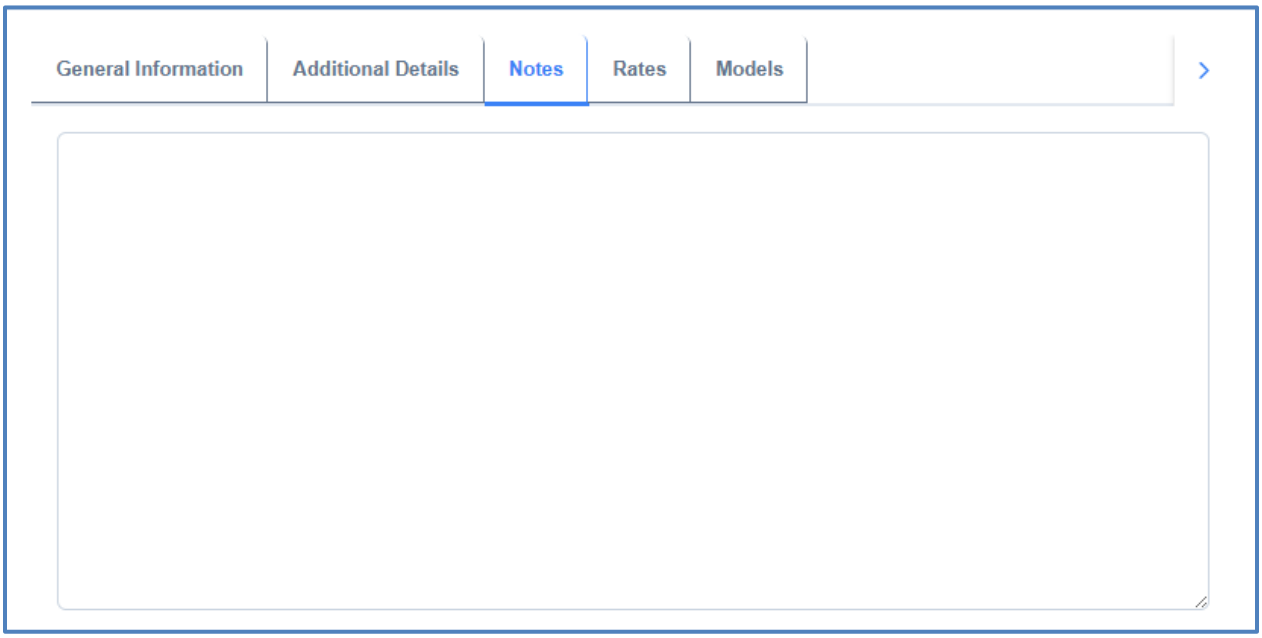


Rates

This tab sets the rates for Labor and Travel for the Vendor. Other settings include:

- Flat Fee
- Variable
- Included in Contract

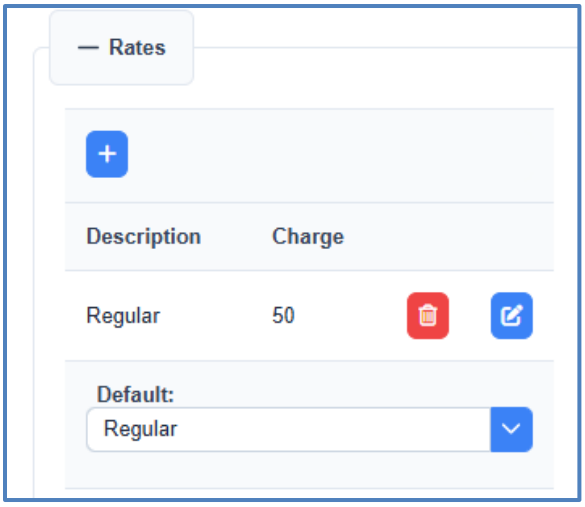


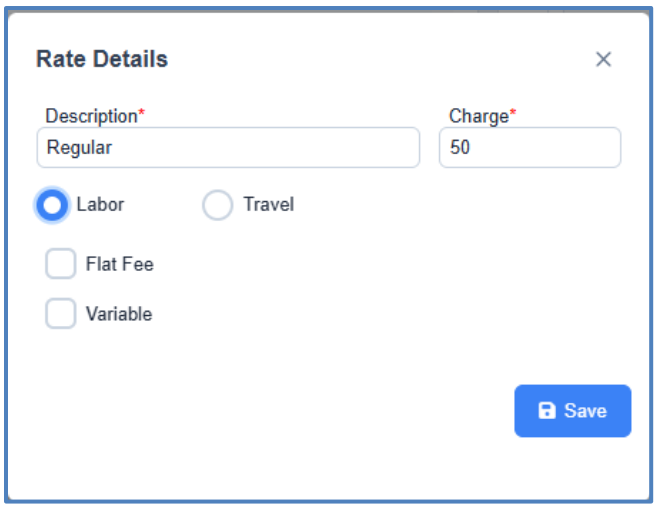

Models

This tab allows for the entry of Models for Vendors who are set as Manufacturers and Nameplate Manufacturers. When setting up or editing a Model, there are several attributes which can be set which can then be inherited by Equipment of the same model.

Model Detail

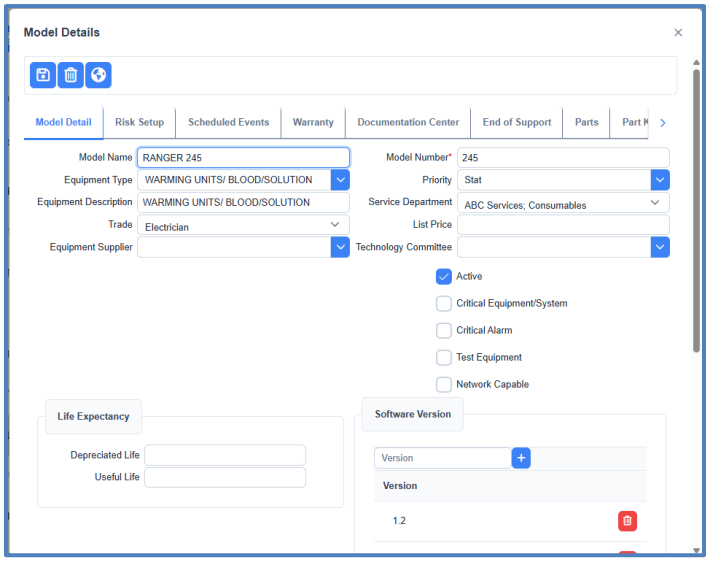

Model Detail contains general information about the model, including:


- Model Name
- Equipment Type
- Equipment Description
- Trade
- Equipment Supplier
- Model Number
- Priority
- Service Department
- List Price
- Technology Committee

Administrators can also declare the Model:

- Active
- Critical Equipment/Alarm
- Critical Alarm
- Test Equipment
- Network Capable


Like Equipment Type, Models can hold Depreciated Life and Useful Life. If set in the Equipment Type, the Model will inherit them.

Administrators can add software versions and declare one as the Default. This is used in conjunction with System Setup->Custom Critical Messages to notify Users when the wrong Software is installed.

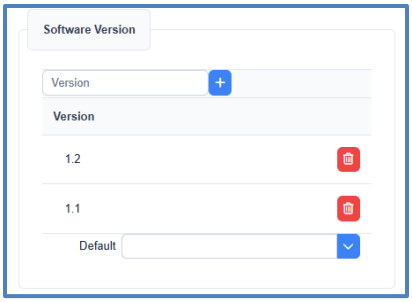


CLASSIFICATION: FOR PUBLIC USE

Finally, Administrators can set the HIPAA/IIHI values for the Model.

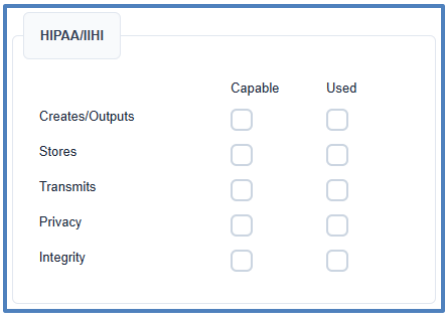


Risk Setup

The Risk Setup tab allows users to assign a pre-configured Risk Type to a specific Equipment. It is the most efficient to set Risk Numbers at the Model level or higher. However, the user can set specific Risk changes should the individual Equipment necessitate it at the Equipment Level. Risk Types are set up in Data Managers and **must** be assigned to Service Departments.

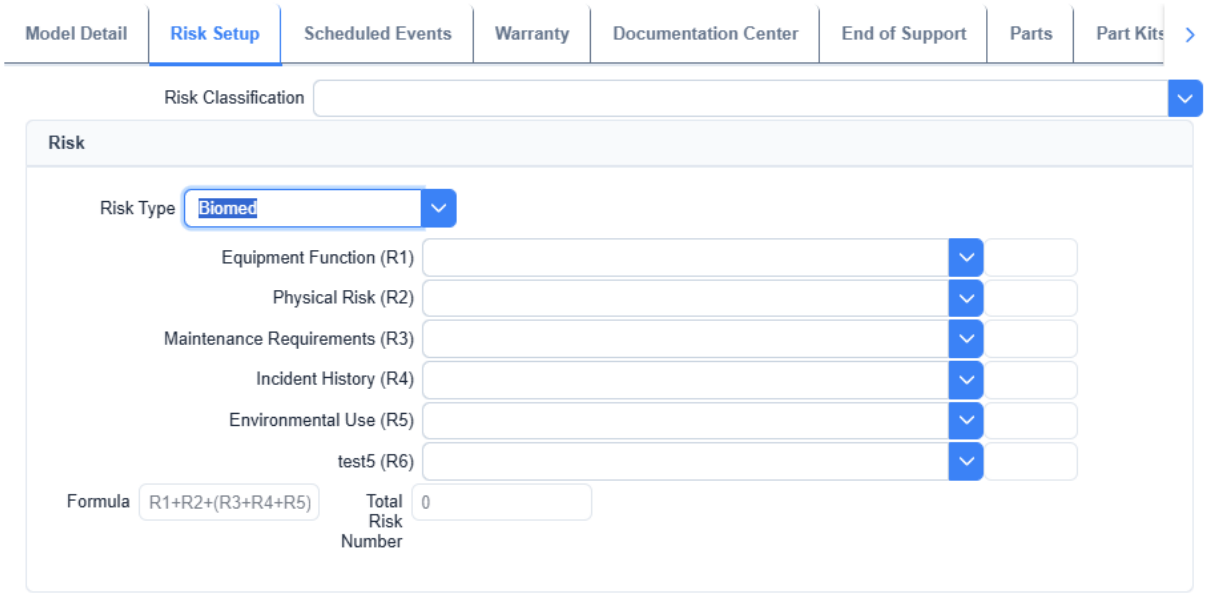


Scheduled Events

The Scheduled Events tab displays and enables users to assign Preventative Maintenance Procedures, Frequencies, Intervals for specific Equipment. It is more efficient to assign scheduling at the Model since Scheduled Events are usually unique at this level. However, for some Equipment (Exit Signs, Battery Powered lights), the Equipment Type level is ideal for Scheduled Events. This area is provided to allow users to change or add schedules for specific pieces of Equipment.

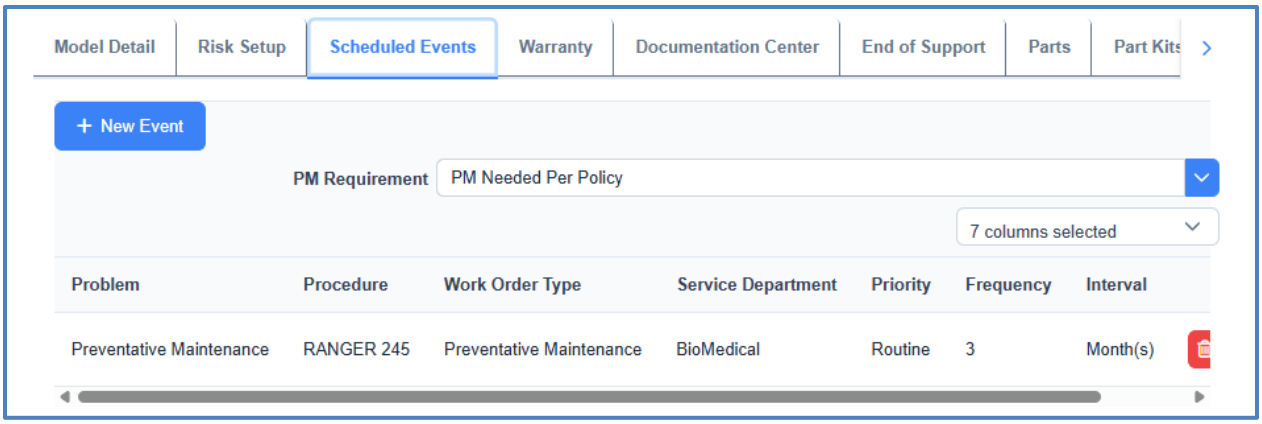

Note: Scheduled Events will not be inherited by Equipment already in the system. To push the Scheduled Events to the Equipment, users may click the Global Push button. All future Equipment will inherit the Scheduled Event.

Clicking on the New Event icon in the upper left-hand corner opens the Scheduled Event screen which allows the user to configure specific fields regarding scheduling and Equipment.

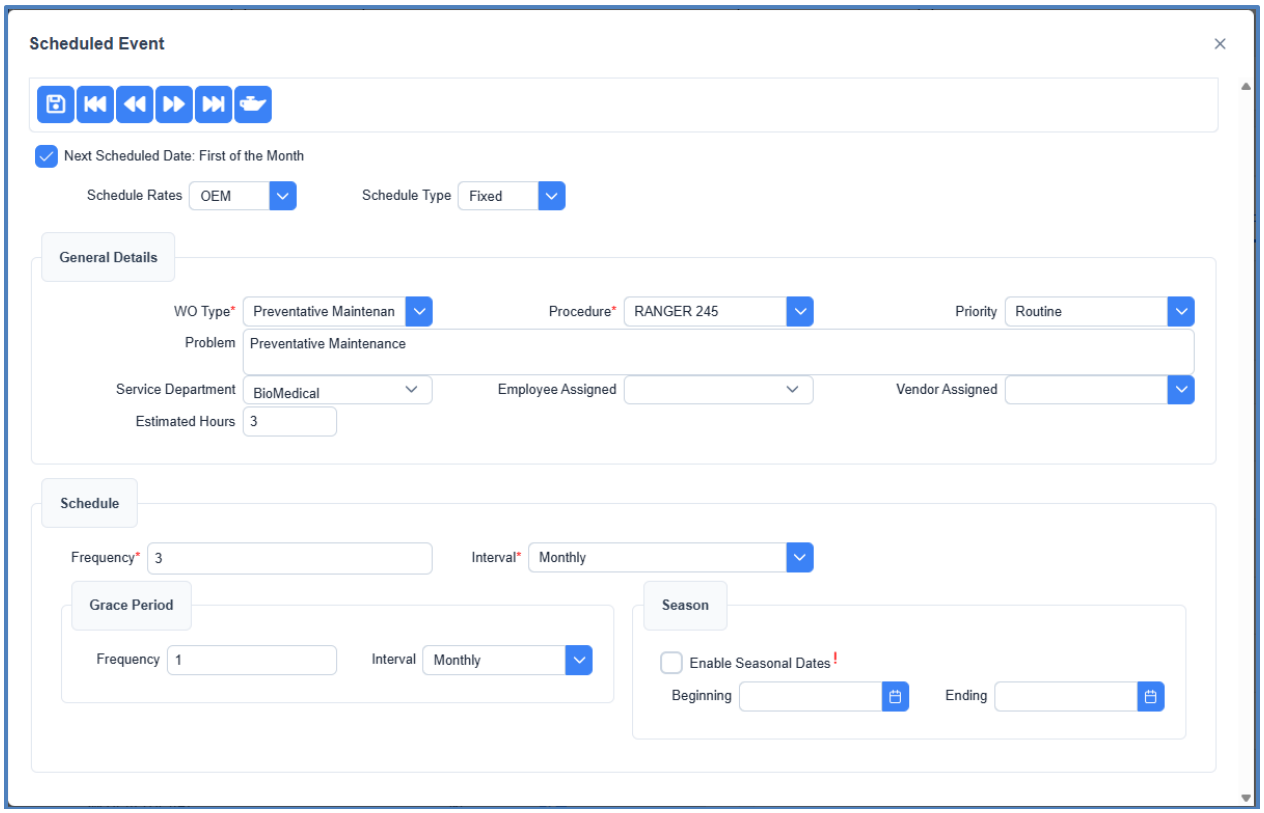

Note: Red asterisks indicate a required field to Save!

CLASSIFICATION: FOR PUBLIC USE

Next Scheduled Date: First of the Month – Aligns the Scheduled Event for new Equipment to the first of the month they are due.

Schedule Reason – Categorizes the Scheduled Event as either OEM or AEM.

Schedule Type – This field has two options:

- Fixed – The Scheduled Event will occur on the same frequency and interval.
- Floating – The next Scheduled Event will occur depending on when the last Scheduled Event was closed.

General Details – Provides the default settings for Work Order creation.

WO Type – The specific type of Work Order that will be created when it is generated.

Procedure – The pre-configured Procedure that will be associated with the Work Order.

Priority – Priority ranking associated with the Work Order.

Problem – Allows user to add specific notes that will be populated on the Work Order once its generated.

Service Department – The Service Department(s) assigned to the Work Order.

Employee Assigned – The Users/Teams who will be assigned to the Work Order once it is generated.

Vendor Assigned – The Vendor who will be assigned to the Work Order once it is generated.

Estimated Hours – Estimated Labor time it will take to complete the Work Order.

Schedule – Provides the frequency and next date for the Schedule.

Frequency – Number associated with how often a Work Order will be generated for this specific Equipment. This field is directly tied to the Interval field.

Interval – Pre-configured intervals indicating how often the specific Equipment will generate a Work Order.

Grace Period – Establishes the number of days the work order will be available for completion and be counted as On Time.

Frequency – The Date Part allowed before Work Order is considered Overdue.


Interval – Grace Period Interval**.**

Season – Allows the user to set a beginning and end date for seasonal equipment. If a red exclamation point is seen next to this field, seasonal dates are active in the Service Department Data Manager.

Beginning – Date when Work Order will begin generating for a specific Equipment.


Ending – Date Work Order will stop generating for a specific Equipment.

The Oil Can button assigns Parts or Part Kits directly to the Scheduled Event for reporting and forecasting. If the Part Number is known, it can be entered in the Part field; otherwise, a Find button has been provided. A quantity is required.

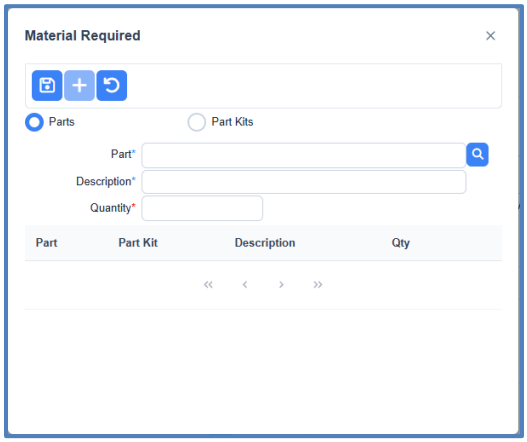

Warranty

This area allows users to enter warranty information for the Equipment. Clicking on the New Warranty icon opens the Warranty screen. This allows the user to enter the Warranty data for the Equipment.

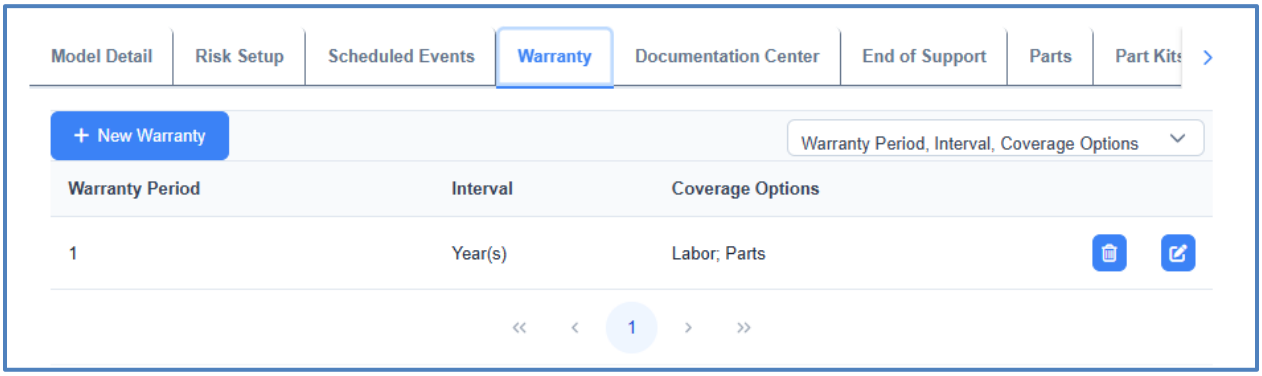

CLASSIFICATION: FOR PUBLIC USE


Note – Any additional details regarding the Warranty not covered by the other included fields.

Warranty Period – A number used in conjunction with the Interval.

Interval – The unit of measure of how long the Warranty will be.

Coverage Options – This multi-select dropdown allows the users to declare what is covered by the Warranty.

Response Time (Hours) – States what the average response time is by the Vendor.

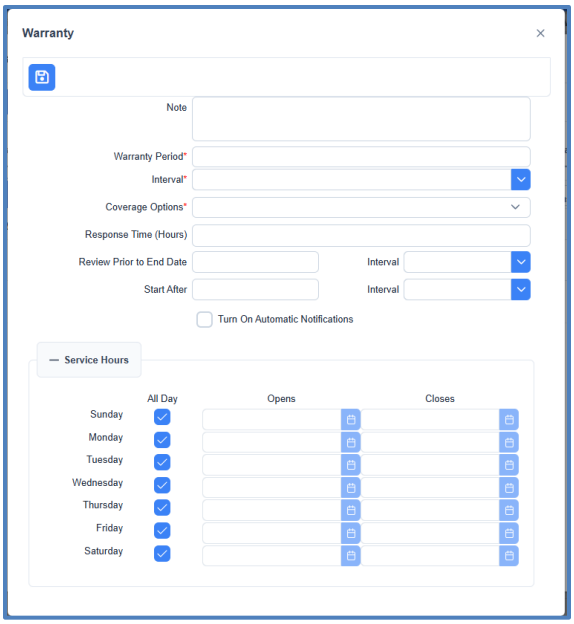

Review Prior to the End Date – The frequency and interval to review the Warranty before it expires. On this date, the Reviewer (set in the Service Department or on the Equipment) will receive an email reminding them to review the contract.

Start After – The frequency and interval the Warranty begins after the Equipment is added to AIMS 3.


Turn On Automatic Notifications – Allows for automatic emails to the Reviewers about this contract.

Service Hours – Provides the service hours of the Vendor.


Documentation Center

The Documentation Center contains all files and photos pertaining to the Equipment Type. Much like Scheduled Events, it is more common to have items at the Model level than at this level. Click the New button to add a new file. Under File Details, click the Browse button and locate the file to be addedAdministrators can add an optional descriptionIf it is an image file, it can be selected as the default image under the list of files.

CLASSIFICATION: FOR PUBLIC USE

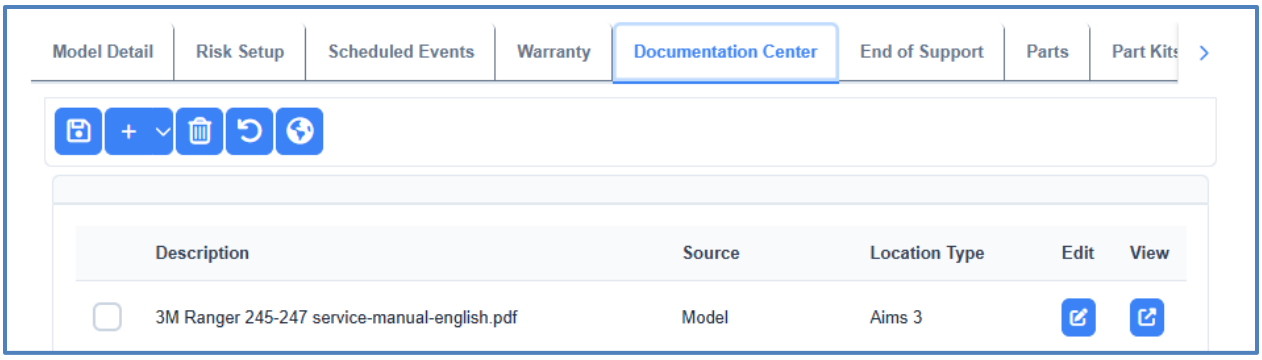


Finally, Administrators can choose where the file will be seen:

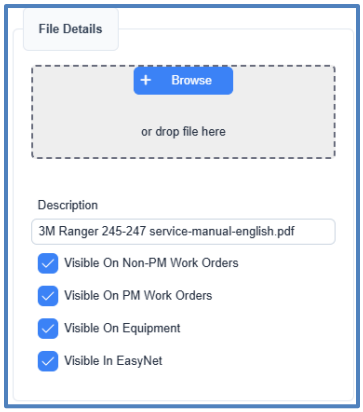

- Non-PM Work Orders
- PM Work Orders
- Equipment
- EasyNet

End of Support

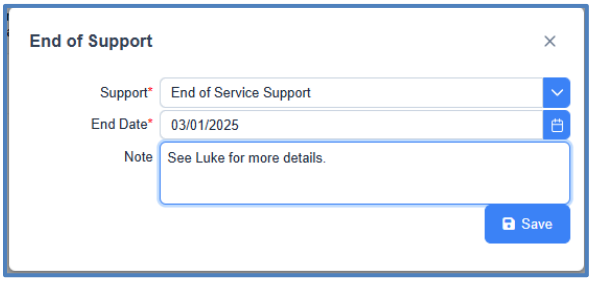

This tab allows Administrators to enter an End of Support date for the Model. This includes the ability to declare what type of support is ending and optional Notes. This will appear on the Equipment record but will not be inherited like other Data Managers. It is only referenced.

Expansion

No CMMS comes with the precise fields to meet every organization's needs. Therefore, the Expansion tab allows for the addition of custom fieldsets and fields. However, these fields do not have to live in the Expansion tab. Fields can be moved to the Work Order Header as needed.

a. **Create a Fieldset** - Right-Click within blue screen below the Tab Bar. You will see the +Add Fieldset icon. Click on +Add Fieldset icon and populate the Field name you want to create and click OK.
b. **Customize Fieldset** – Once the Field has been created, Right Clicking on the Field displays Fieldset or +Add Field icons. Clicking Fieldset allows users to either

CLASSIFICATION: FOR PUBLIC USE


Rename or Delete the custom field. Clicking on +Add Field allows users to choose the format of the customize fieldRight Clicking inside the custom field displays either the Edit or Delete icons.

c. **Required/Add Field to Nameplate** – By editing the field, Administrators can delare the field required and/or Add to HeaderOnce in the header, fields can be rearranged to suit the need of the organization.

Warehouse

This section contains codes and descriptions regarding Warehouses. Warehouses are where parts are stored. The Active checkbox denotes whether Administrators are using a warehouse. Warehouses cannot be deleted from the system when in use; therefore to "remove" them, Administrators can hide them by unchecking this box.

Locations within the Warehouse can be added in System Setup->Location Fields and are addressed in the System Setup document.

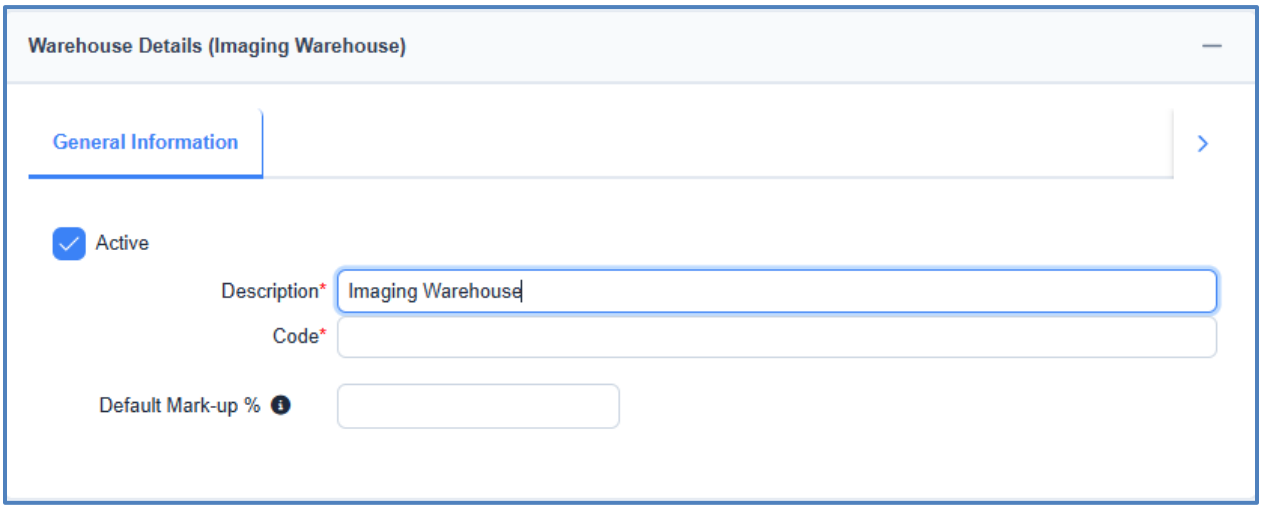


CLASSIFICATION: FOR PUBLIC USE

Warranty Coverage Options

When creating a Warranty, Users must declare what is covered under the Warranty. Administrators are free to create as many Coverage Options as they like, but the two most common are:

- Parts
- Labor

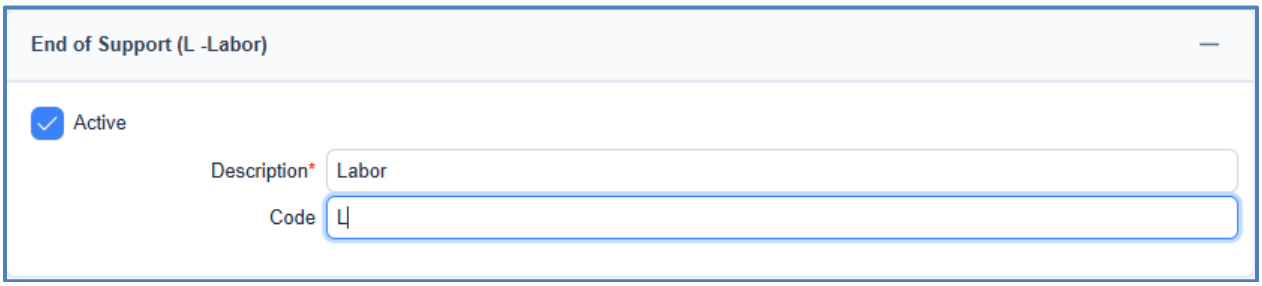

CLASSIFICATION: FOR PUBLIC USE

Work Order Common Problem

Many Organizations prefer to classify their Work Orders under Common Problems. This can be used in conjunction with the EasyNet page to easily group Work Orders by what is needed. When added the Work Order Common Problem field appears above the Problem field on Work Orders.

To view the field, it must be added in System Setup->Other Settings.




CLASSIFICATION: FOR PUBLIC USE

Work Order Status

Work Order Statuses are used to denote which state the work order is in. In addition, the Type field for each code denotes whether the status is used to say the work order is "Open" or "Closed." This is important since it is used often in reporting. Examples of statuses include:

Open	**Closed**
Working On	Work Completed
Awaiting Parts	Closed
Parts Received	Cancelled
Assigned to Vendor	

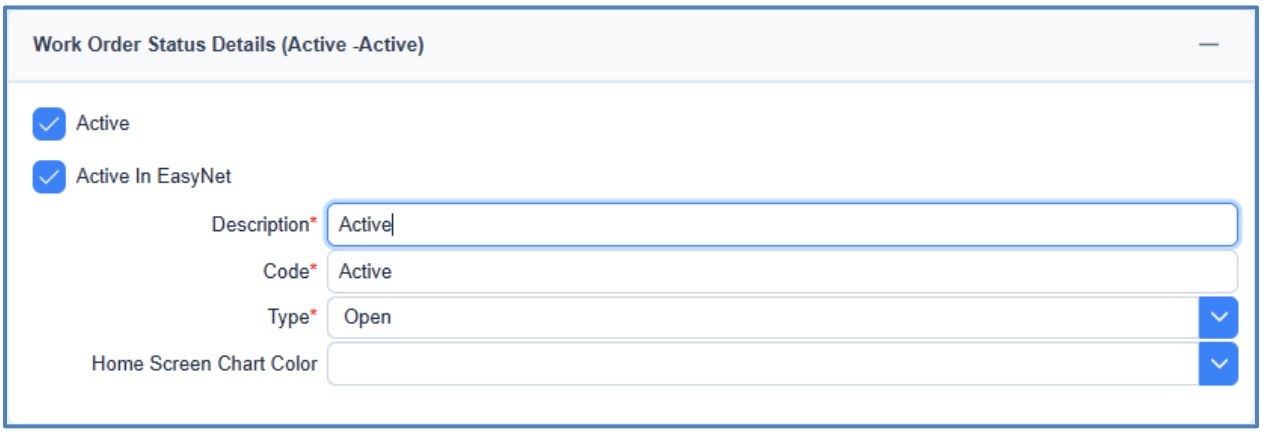

The Home Screen Chart Color will color the status in the Purchasing widgets.

CLASSIFICATION: FOR PUBLIC USE

Work Order Type

The Work Order Type is to define the purpose of the Work Order. Organizations can use several Work Order Types for many purposes. For example:

Preventative Maintenance – This type is used for all scheduled maintenance for Equipment regardless of if the Work Order was created manually or by the system.

Corrective Maintenance – This type is used for work created from a failed Preventative Maintenance Work Order or any work which has been self-identified by the department personnel.


EasyNet or Request – These Work Orders are created from the EasyNet or are requested person-to-person from a source outside of the Service Department.

Planned Event – Planned Events are non-Equipment-based Scheduled Events. These include EoC Inspections, Fire Drills, Fire Extinguisher Training, and other activities.

Project – Projects are long-term Work Orders.

Recall/Alert – This type of Work Order is used to remove items from service to be repaired or discarded.

While this is not an all-inclusive list, they are some of the most used Work Order Types.

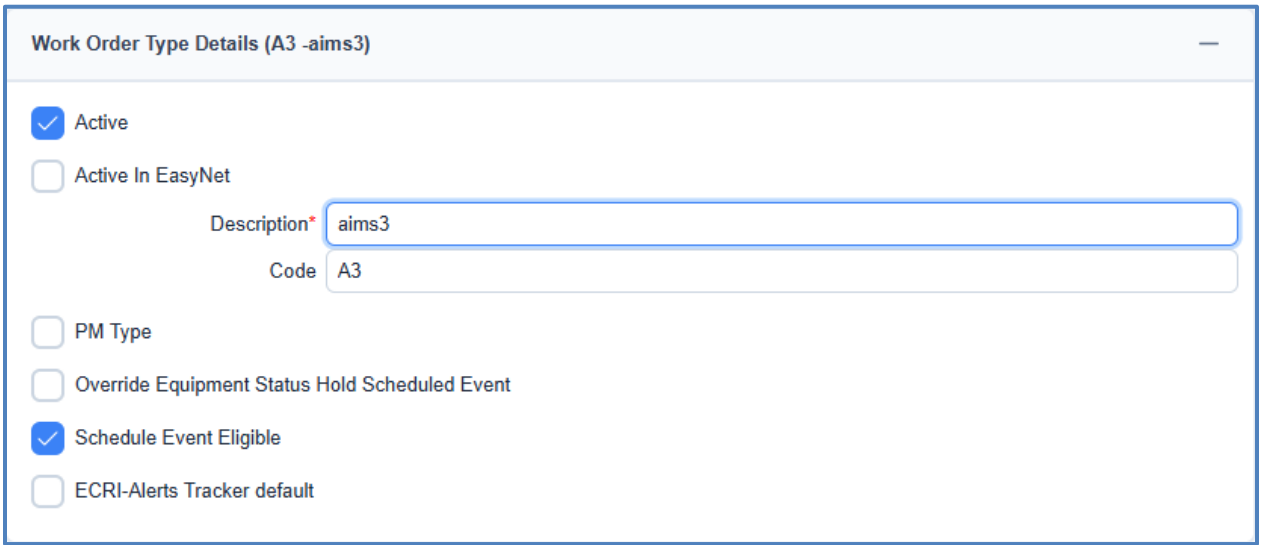

PM Type - Using the checkbox for PM Type will report as a Preventative Maintenance type Work Order for compliance purposes.

Override Equipment Status Hold Scheduled Event – Selecting this option will hold Scheduled Events while this type of work order is open and will also override the Equipment Status so the Equipment can be placed on a work order.

Schedule Event Eligible – This option allows this Work Order Type to be used when creating Scheduled Events. A Scheduled Event is anything scheduled and is not always a PM. For example, a Corrective Maintenance Work Order Type should never be used as a Scheduled Event.

ECRI-Alerts Tracker Default – This is the Work Order Type to be used as an ECRI Alert.

CLASSIFICATION: FOR PUBLIC USE

Conclusion

Data Managers are essential for the use of AIMS 3. When utilized properly, they can ease with the use of AIMS 3 and reporting. While some Data Managers are industry standards, others can be difficult to define and may change. The ease of adding, editing, and removing Data Managers will allow Administrators to effectively standardize AIMS 3 and streamline workflows.

If Administrators require additional consulting or training, Phoenix Data Systems is available to assist at any level. Please contact our Sales Department or Project Managers for more information.

Appendix

To support your learning, we have created a How-To Guide in video format that walks you through each step visually. Simply click the link to be taken directly to our YouTube page, where you can watch the full set of tutorials at your own pace. This is a great way to follow along, revisit key actions, and get comfortable with the workflow.

Data Manager Component