System Setup

JULY 31, 2026



Contents

Overview 6
Inheritance 7
Settings 8
Assignments 8
Base Date Hierarchy 9
Customize Fields 10
Custom Work Order Forms 10
Setup Information Services 13
Email 14
Language 15
Label Alignment 15
Voice 15
System Language 15
Label Change 15
Location Fields 16
Lowest Location 16
Show Free Text Location Field 16
Disable Region/Organization 16
Model Defaults 17
Enforce Model Defaults – 17
Model Mismatch Alert – 17
On Call Setup 17
Other Settings 19
Allow Close if Equipment Down 19
Update Scheduled Event Service Departments when Updating Equipment Service Departments - 19
Allow Duplicate MAC Addresses – 19
Show Equipment Customized Nameplate on Work Order 19
Filter Equipment and Work Orders by User Assignment Profile 19
Do Not Allow Future Close Dates 19
Require Labor on Non-PM Work Orders 19

Require Labor on PM Work Orders 19
Show Labor Start Date and Time 19
Limit Response by Work Order Type 20
Enable Work Order Decontamination Form 20
Default Labor Date/Time to Last Labor Line 20
Default Close Date/Time to Last Labor Line 20
Enable PM Compliance Dates – 20
Hide Empty Sections from All Reports – 20
Enable Work Order Common Problem Field – 20
Warn on Duplicate Equipment – 20
Enable Shift Settings – 20
Auto Save Records – 20
Auto Calculate Replacement Date on Equipment – 20
Allow Negative Part Inventory Levels – 20
Auto Refresh List Views (0=off) “x” Minutes 21
Fiscal Year End Date – 21
Default Equipment Duplicate Options – 21
PartsSource Lite 21
Password Settings 22
Minimum Password Length 22
Account Locking 22
Automatically Unlock User Account/After XX Minutes 22
Enforce Password Special Characters 22
Maximum Password Age 23
Minimum Password Age 23
Enforce Password History/Remember Last “x” Passwords 23
Active Directory – 23
Purchasing Options 23
Enable Sequential Purchase Requests/Orders 23
Prefix 23
Last Request/Order Number 23
Suffix 23
Purchase Request Defaults 24

CLASSIFICATION: FOR PUBLIC USE

Purchase Order Defaults 24
Invoice/Credit Memo Defaults 25
Global Defaults 26
Work Order Defaults 26
Other Settings 26
RTLS Options 27
Scheduled Event Options 27
Shift Setup 28
Work Order Messaging 28
Allow Additional Instructions 28
Enable Batch Open Work Orders Messaging 28
Autosend AIMS 28
Autosend Easynet Work Orders 28
Use On Call Settings – 29
Default Format 29
System Setup Submenu 30
Security 30
Security Level 30
Description 30
Custom Header Fields 30
Filter 30
Area Assignment 32
Risk Setup 32
Risk Classification 33
Custom Critical Messages 34
Select Type 34
Select Value 34
Select Color 34
Display Message 34
Visible in EasyNet – 34
AIMS Message – 34
EasyNet Message – 35
Edit 35

CLASSIFICATION: FOR PUBLIC USE


Delete 35
Required Fields 35
Defaults 36
Equipment Status 36
Equipment Condition 36
Work Order Type 36
Work Order Priority 36
Work Order Status 36
Action 36
Work Order Estimated Hours 36
Work Order Labor Hours 36
Service Department 36
Warranty Reviewers 36
Contract Coverage Type- The Default Coverage type for your equipment under contract. 36
Enable/Disable Code 37
Automation 37
The Toolbar 38
Trigger 38
Condition 39
Action 39
Interfaces 42
User Manager 42
Auto Logoff Idle Users After (minutes)/Value 42
Conclusion 43
Appendix 44

Overview

System Setup in AIMS 3 helps organizations to customize the software to fit the organization. System Setup affects several distinct aspects of the software from Automation to Work Order Messaging and more. While AIMS 3 offers the flexibility to change these settings as needed, it is not advisable to change them often. This would affect workflows and reporting.

As workflows become increasingly refined, it is important to ensure System Setup settings support and enhance these workflows.

Clicking the System Setup control opens settings in the right pane and includes a submenu of additional options. Administrators should ensure to review all areas of System Setup to ensure the software fully supports the organization.

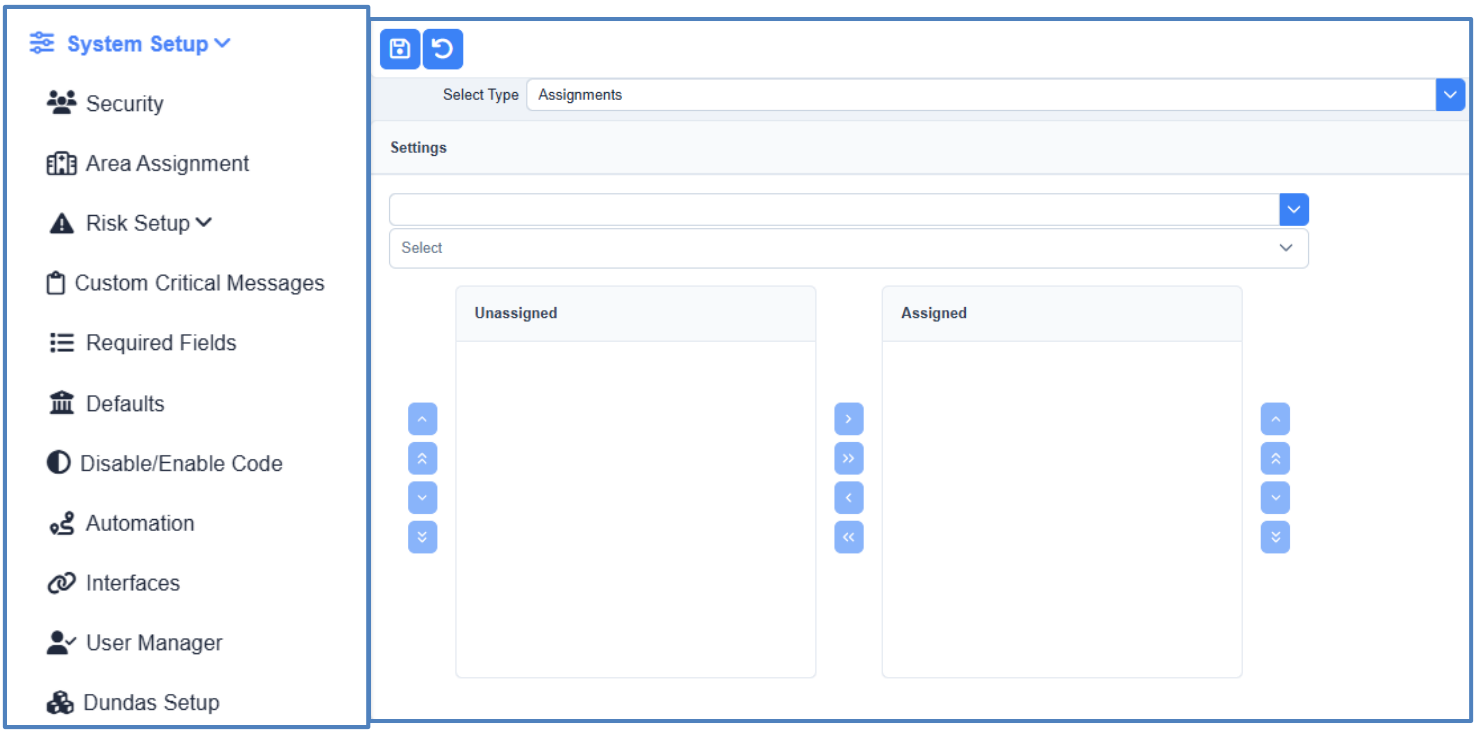

Inheritance

AIMS 3 uses a function which allows records to “inherit” settings from other records. For example, if a user creates Schedule templates on the “Model” record, all equipment will “inherit” those Schedules. It is not necessary to add files to individual assets. It is recommended to use this function as much as possible to save time and labor.

In addition, settings should be placed as high as possible and still be effective. An example would be if all Equipment of the same Equipment Type will require an Incoming Inspection. This Schedule should be placed at the Equipment Type and not the Model. If every piece of Equipment added to the system will need an Incoming Inspection, it would be best to set it up through Automation.

If Administrators require additional consulting or training, Phoenix Data Systems is available to assist at any level. Please contact our sales Department or Project Managers for more information.

Settings



After clicking the System Setup control, the right pane fills with the Settings portion of System Setup. A Save and Undo button is included with each setting. Under these buttons is a dropdown to select which setting the Administrator would like to set up. These settings include:

- Assignments
- Base Date Hierarchy
- Charge Rate Priority
- Contract Options
- Customize Fields
- Customize Work Order Forms
- Email
- Setup Information Services
- Language
- Location Fields
- Model Defaults
- On Call Setup
- Other Settings
- PartsSource Lite
- Password Settings
- Purchasing Options
- RTLS Option
- Scheduled Event Options
- Shift Setup
- Work Order Messaging

Administrators should familiarize themselves with all the settings in System Setup to ensure they are receiving the full value of AIMS 3.

Assignments


Assignments allow for Cost Centers and Employees to be assigned to various facilities. If there is only one Facility, these will automatically be assigned to the lone Facility. However, there will be times when organizations have multiple Facilities with unique Cost Centers or the need for only certain Employees to be assigned to them.

Facilities are selected in the first dropdown. In the second dropdown, either Cost Center or Employee is selected. The “Unassigned” block contains all values currently not assigned to the Facility. Administrators can click a single value or multiple values by using the [CNTRL] or [SHIFT] keys. The Up/Down arrows allow values to be reordered. Using the single arrow will

CLASSIFICATION: FOR PUBLIC USE

move the value of a single space. Using double arrows will move the value to the top. The Left/Right arrows will move the values between the "Unassigned" and "Assigned" blocks. The single arrow will move the values selected. The double arrows will move all values in the block.

Clicking Save will make the changes effective. Undo will revert the settings to the previous setting. If there is confusion about what changes were made, surfing to a different area of the software will negate the changes.

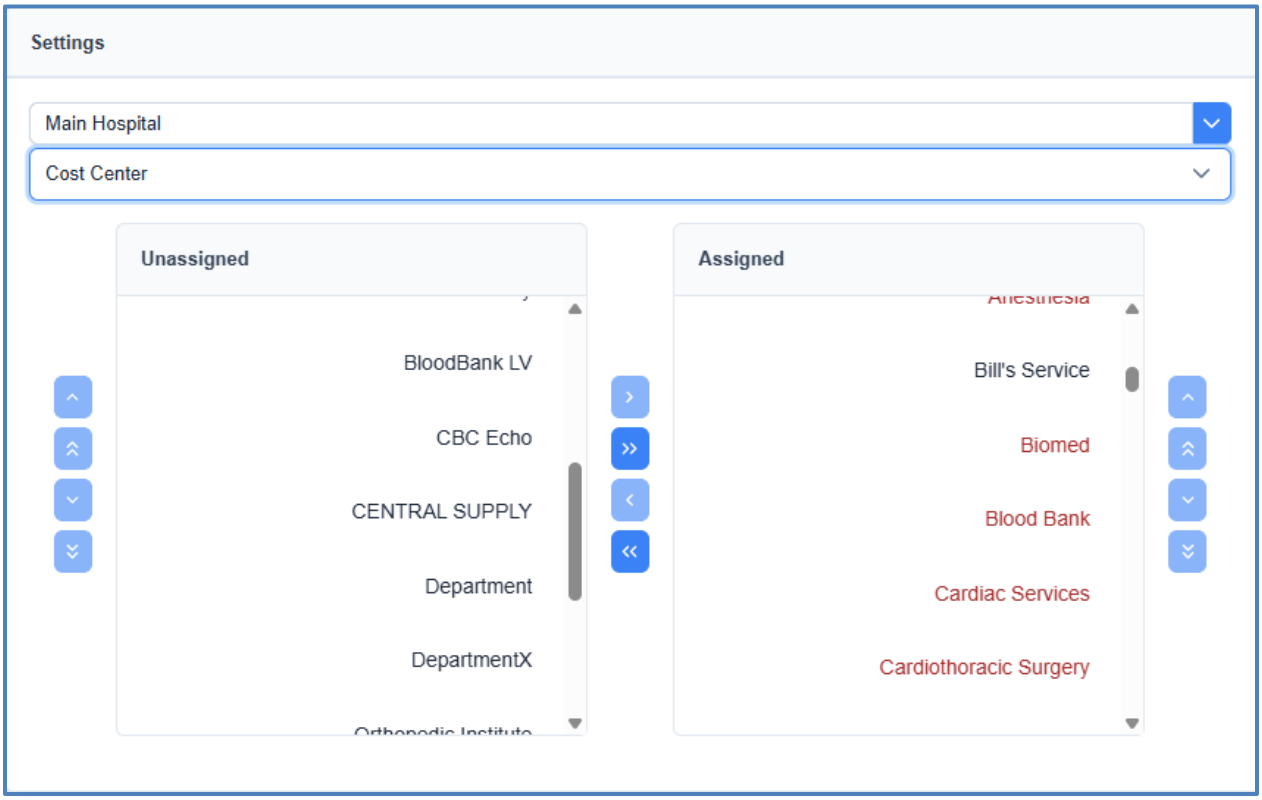


Note: Red entries in the Assigned column have the "Auto Assign All" checkbox checked in the Data Manager and cannot be unassigned!

Base Date Hierarchy

In the Cost Center and Building Data Managers, Administrators can set a Base Date for Scheduled Events. In some cases, these dates may conflict. The Base Date Hierarchy allows Administrators to choose which Base Date takes priority when a conflict occurs. While this setup is optional, it is recommended to help prevent scheduling conflicts.



Customize Fields

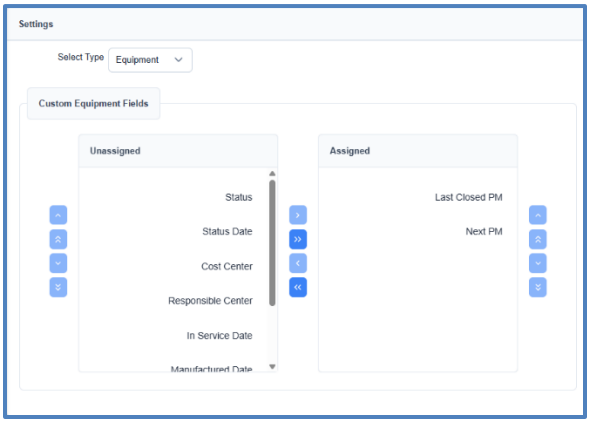

Customize Fields allows Administrators to customize the Nameplate section of Equipment and the Request Information section of Work Orders. This allows fields which organizations deem more important to be copied to the top of the screen.

Administrators can use the dropdown to choose whether they want to customize the Equipment or Work Orders header. Then, using the Custom Equipment Fields controls values can be moved much like Assignments. Administrators can click a single value or multiple values by using the [CNTRL] or [SHIFT] keys. The Up/Down arrows allow values to be reordered. Using the single arrow will move the value of a single space. Using double arrows will move the value to the top. The Left/Right arrows will move the values between the “Unassigned” and “Assigned” blocks. The single arrow will move the values selected. The double arrows will move all values in the block.


Clicking Save will make the changes effective. Undo will revert the settings to the previous setting. If there is confusion about what changes were made, surfing to a different area of the software will negate the changes.

This is a global change! To customize the fields for a specific Security Level, view the Security portion of this document.

Custom Work Order Forms

Custom Work Order Forms can be created to meet an organization's, Facility’s, or Service Department’s needs. In System Setup->Customize Work Order Forms, Administrators can create Easynet pages with the fields they want, enter default values to fields, and hide fields from the end user. This function does not exclusively create EasyNet pages, it also creates Work Order forms to be used within the Work Order component. These pages can be suppressed from certain user’s view by using Data Managers->Assignment Profiles. This functionality does not replace the URL Generator. It is simply a separate way to create custom pages.

After clicking the “New” button in the toolbar, the user will be presented with a popup to design the new custom Work Order form. On this form is an abbreviated toolbar with the “Save,” “Delete,” and “Undo” buttons.

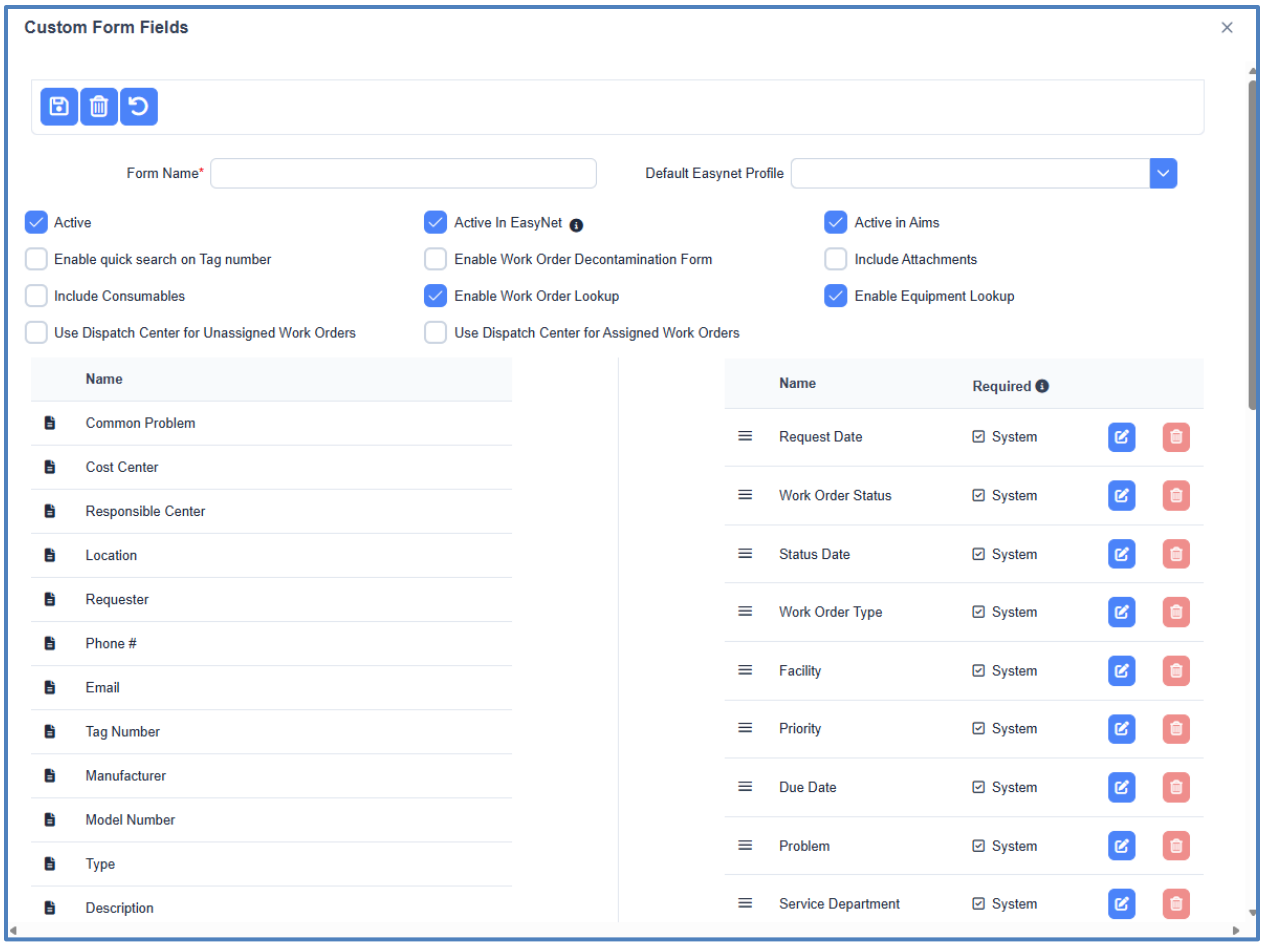

The Form Name is required and must be unique. Directly below this field are nine checkboxes:

- Active – Allows the form to be seen and used.
- Active in Easynet – Allows the form to be used as an EasyNet page.
- Active in AIMS – Allows the forms to be used in the Work Order component.
- Enable Quick Search on Tag Number – Allows the EasyNet user to enter Equipment by using either the Tag or Serial Numbers.
- Enable Work Order Decontamination Form – Includes the Decontamination Form at the bottom of the page. For more information on this functionality, see the How-To "Work Orders."
- Include Attachments – Allows the EasyNet user to add attachments to the form.
- Include Consumables – Allows the EasyNet user to add Consumables to a Work Order. For more information on this functionality, see the How-To "Consumables."
- Use Dispatch Center for Unassigned Work Orders – This option is available only to users licensed for the Dispatch Queue. When enabled, dispatchers can assign personnel to Work Orders that do not already have an Assignment.
- Use Dispatch Center for Assigned Work Orders – This option is available only to users licensed for the Dispatch Queue. When enabled, dispatchers can reassign personnel on Work Orders that already have an Assignment.

The fields on the left side of the divider are available for use but are not currently included in the form. The fields on the right side are active on the form and may include both system-required fields and fields marked as required through System Setup > Required Fields. These fields display a checkbox to indicate whether they are required, along with Edit and Delete buttons.


Administrators can move fields from the left side to the right side to make them available on the form. Some options represent a group of related fields. For example, selecting Location will make all enabled Location fields available. These include:

- Building
- Wing
- Floor
- Room
- Location
- Spot
- Free Text Location

The fields which are not needed can be removed.

Note: Only fields not marked as required can be removed from the right side of the divider line!

To customize a field, the Administrator must click the "Edit" button to the right of the field name. The Administrator will be presented with an "Edit" popup.

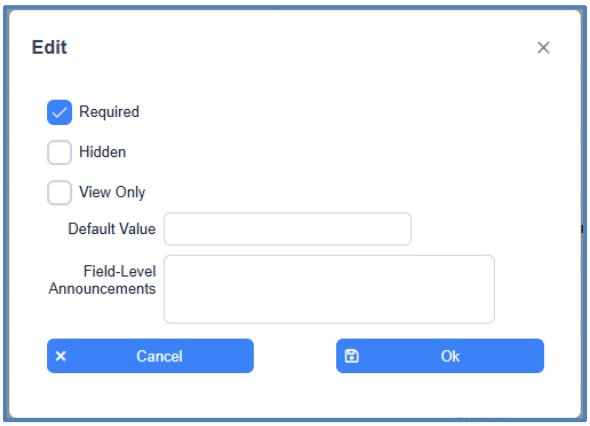

Note: Some fields cannot be edited without setting other fields first, due to dependency. For example, Cost Centers depend on the Facility to be set. Therefore, a Cost Center cannot be defaulted unless the Facility is defaulted first!

The Required checkbox allows the Administrator to declare the field as required or not required on the form. System-required fields cannot be unchecked.


The Hidden checkbox allows the Administrator to hide the field on the form. If the field is to be hidden, a default value must be entered. The only exception is for date fields.

The View Only checkbox will show the field on the page, but the data will not be editable by the end user.

The Default Value field allows Administrators to have data prepopulated in the field. Some examples are:

- Work Order Type
- Work Order Status
- Priority
- Facility
- Service Department


This functionality is used often with the Hidden and View Only checkboxes.




Field Level Announcements allow the Administrator to show instructions with the end user clicks into a field. For example, an announcement can request a full name or an official email. This field does accept HTML commands to highlight certain announcements.

Administrators can rearrange the fields by using the three lines on the left side of each field. It is important to arrange fields in a logical order to help with the ease of use of the form.

To make creating multiple pages easier, a "Duplicate" button has been added to the list of forms.

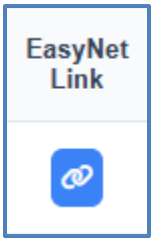

After the form is complete and the Active in EasyNet checkbox is checked, a "Copy URL" button will be visible in the list of custom forms in the "EasyNet Link" column. Clicking this button will copy the URL to the computer's clipboard. This can be pasted anywhere to disseminate the address accordingly.

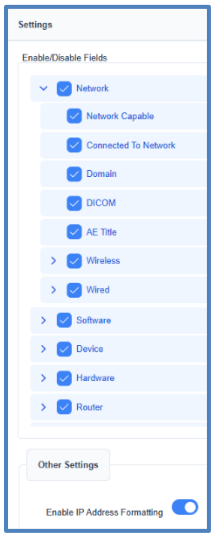

Setup Information Services


This section enables Administrators to choose which Information Services fields are visible and not visible. This can help Administrators show which fields should be filled.

Using the "Enable IP Address Formatting" slider will require Users to enter the complete octets when entering an IP Address. This includes entering all zeros in the address.

Email

The Email section is for Administrators to set up the email server settings so AIMS 3 can send messages. This includes:

- Automatic notifications of a Work Order to Employees
- Automatic updates to Requesters
- Morning News

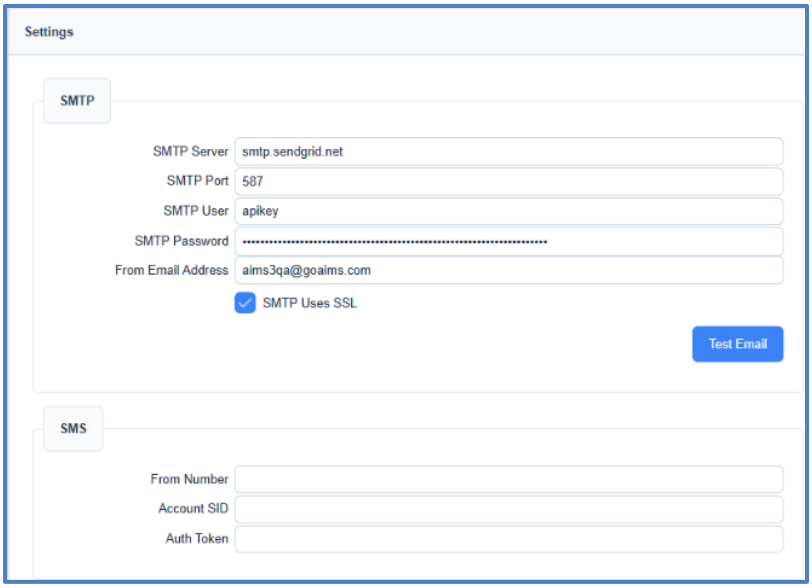

If the organization hosts the software, these settings are typically provided by the internal IT Department. If Phoenix Data Systems hosts the software, the Trainer or Consultant will configure these settings during Go-Live.


To verify the settings are working correctly, click the Test Email button. Enter an email address and select Send. AIMS 3 will send a test email to confirm that email functionality is active and working properly.

Note: After the settings are saved and confirmed as working, do not adjust these settings!

If the need arises, separate SMS can be entered into AIMS 3. Please consult with Technical Support or the Trainer/Consultant before entering or modifying these settings.

Language

Language Settings allow Administrators to select the primary language used throughout AIMS 3 and control how labels are displayed. Administrators can also customize field labels to match the organization's preferred terminology, making the software easier for users to understand and navigate.

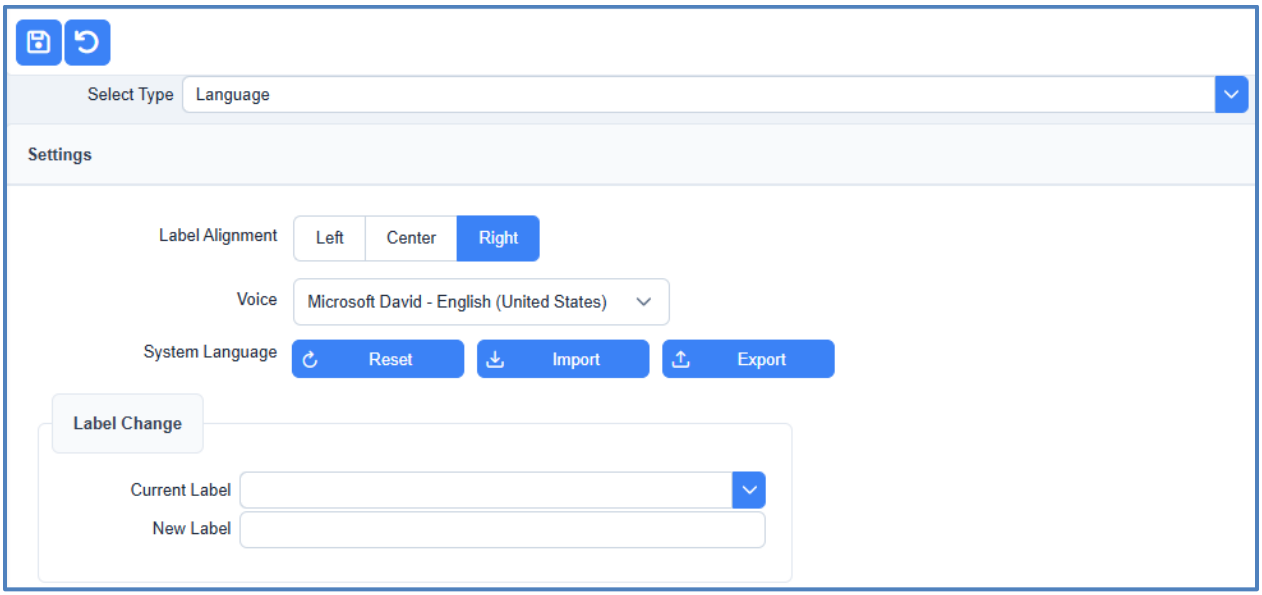

Label Alignment – This setting will change where the Label appears with fields throughout the program. The three settings are Left, Center, and Right.

Voice – This is the voice used when voice prompts/accessibility setting are used.


System Language – Administrators can import, or export languages used within AIMS 3. Reset will return the language to the AIMS 3 default.

Label Change – If Administrators would like to change the Label of certain fields (for example, if the word "Skill" is preferred to "Trade").

Note: Phoenix Data Systems is constantly adding functionality to the software. If an Administrator changes a Label to change the field's functionality, it may be affected by these future changes!

Location Fields

Phoenix Data Systems understands that organizations may require different numbers of Location levels. This setting allows Administrators to define the lowest Location level used in the system and choose which Location fields are shown or disabled. Administrators can also define the number of Warehouse levels to match their organization's structure.

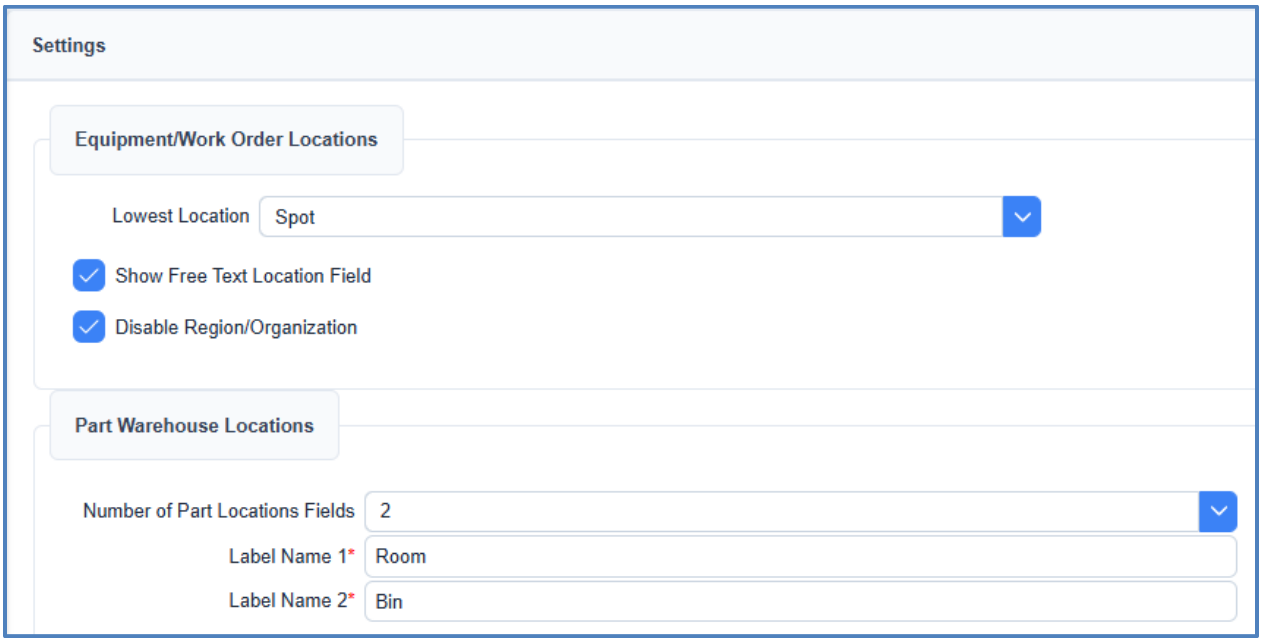

Lowest Location – This allows Administrators to choose which location level will be the lowest one they intend to use. The location levels are:

- Building
- Wing
- Floor
- Room
- Location
- Spot


Note: Organizations using RTLS will need to use all location levels.

Show Free Text Location Field – This will enable/disable a text box to allow users to enter in specific locations using free text.

Disable Region/Organization – Enables/disables the Region and Organization levels.
Number of Parts Locations Fields – Will add "x" number of free test location boxes to Warehouses. This **DOES NOT** add Warehouses, only levels within Warehouses. All Warehouses will have the same number of levels.

Model Defaults

Model Defaults is a tool to help Administrators standardize Model information when entering and editing Equipment records.

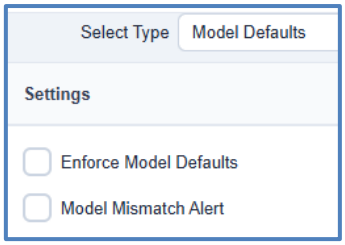

Enforce Model Defaults – Administrators have the option to make up to six standard fields "read-only" for all Users of AIMS 3, including Administrators. These six fields are:

- Equipment Type
- Model Name
- Description
- Service Department
- Trade
- Critical Equipment/System

This information will be inherited from the Model Data Manager and cannot be changed unless changed in the Model Data Manager!




Model Mismatch Alert – This provides an exclamation point next to any of the six fields mentioned above to show the information does not match the information in the Model Data Manager.


On Call Setup

This feature allows Administrators to create an on-call schedule for either an Employee or a designated device. Since organizations manage after-hours requests differently, AIMS 3 supports both workflows. During the scheduled on-call period, Work Orders can be automatically assigned to the on-call Employee, or notifications can be sent to a specific device.


On-call schedules are configured by Service Department and Facility. After selecting these values, click Add to create the on-call schedule.

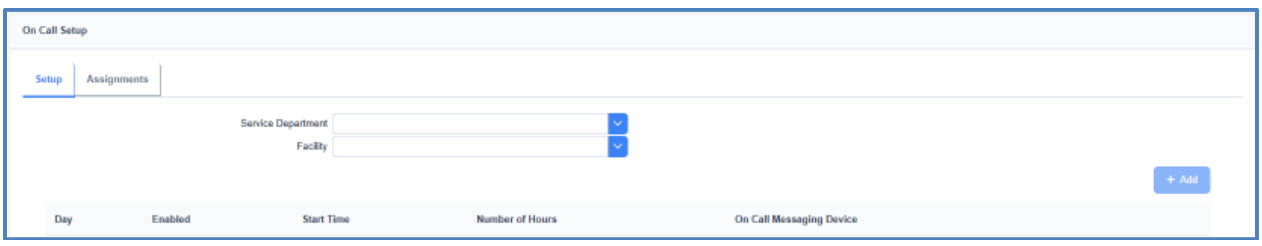

After clicking Add, a popup window will open to create the schedule. Select the day of the week, start time, and duration of the on-call period. An Enabled checkbox can be used to turn the schedule on or off. The On-Call Messaging Device option allows notifications to be sent to a device instead of reassigning Work Orders to an Employee.

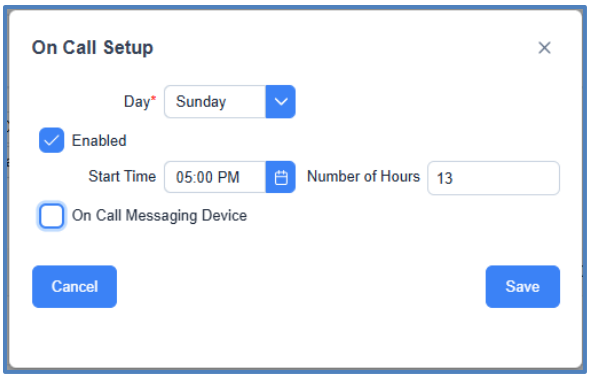


After clicking Save, the schedule will appear below the Service Department and Facility fields. Edit and Delete buttons are available to manage existing schedules. If using an on-call messaging device, click the paper airplane icon to enter the device information and select which fields will be included in the notification. Up to eight fields can be configured.

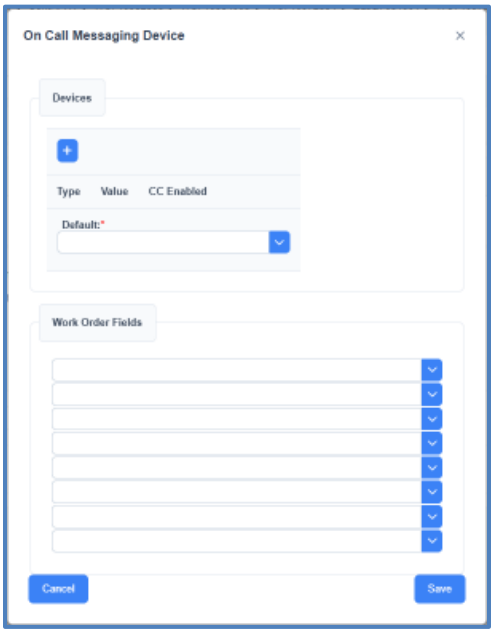

On the Assignments tab, Employees or Teams can be associated with the schedule. Click the pencil icon next to a schedule to select one or more active Employees or Teams in AIMS 3. Even when using an on-call messaging device, assigned Employees will still receive notifications.

The Popout View makes it easier to assign multiple schedules at once. Expand the schedules, select the desired entries, choose the Employee in the Employee Assigned field, and click Save. The schedule list can also be exported by clicking the Export button.

Other Settings

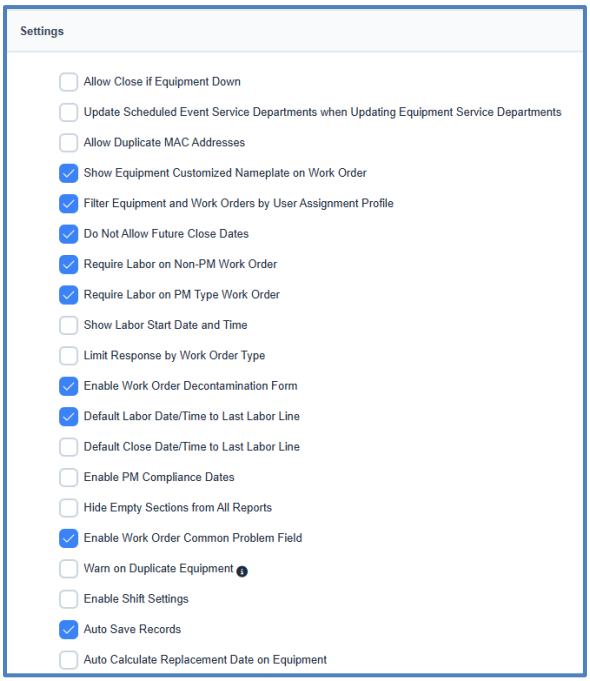

Other Settings control various settings in AIMS 3. All Facilities and Service Departments should take into consideration how these are set.

Note: All these settings are global and will be the same for all Facilities and Service Departments!

Allow Close if Equipment Down – Enabling this allows Work Orders to be closed if the Equipment is still down after work is completed.

Update Scheduled Event Service Departments when Updating Equipment Service Departments - Updates the Service Department of the associated Scheduled Events for Equipment when the Service Department for the Equipment is updated.

Allow Duplicate MAC Addresses – Will allow Users to enter in a MAC Address even if it has been entered on another Equipment record.

Show Equipment Customized Nameplate on Work Order – If the Equipment Nameplate is customized through "Customized Fields" in System Setup or Security, it will retain its customized values on Work Orders.

Filter Equipment and Work Orders by User Assignment Profile – Will only show Equipment and Work Orders for users if set by Facility and Service Department.

Do Not Allow Future Close Dates – Does not allow users to close Work Orders with Close Dates in the future.

Require Labor on Non-PM Work Orders – This will require at least one Labor Line when completing Non-PM Work Orders. Please see "Data Managers – Work Order Types" for more information on setting Work Order Types as "PM" and "Non-PM."

Require Labor on PM Work Orders – This will require at least one Labor Line when completing PM Work Orders. Please see "Data Managers – Work Order Types" for more information on setting Work Order Types as "PM" and "Non-PM."

Show Labor Start Date and Time – By default, AIMS 3 only shows the date on labor lines. This will enable time as well.

CLASSIFICATION: FOR PUBLIC USE

Limit Response by Work Order Type – Allows separate Responses for "PM," Non-PM," and "Administrative" Work Order Types. Please see "Data Managers – Work Order Types" for more information on setting Work Order Types as "PM" and "Non-PM." Please see "Data Manager – Responses" for the various Responses.

Enable Work Order Decontamination Form – Enables Decontamination information throughout the software, including EasyNet.

Default Labor Date/Time to Last Labor Line – This will set a new Labor Line's Date/Time based on the previous Date/Time entered on the same Work Order.

Default Close Date/Time to Last Labor Line – This will set the Status Date of a closed Work Order based on the most recent Labor Line on the record.

Enable PM Compliance Dates – This will enable two dates in the Dispatch section of the Work Order:



This informs the User when the PM-Type Work Order can be started and when it must be completed.

Hide Empty Sections from All Reports – Hide sections on Reports which contain no information.

Enable Work Order Common Problem Field – Activates a field which shows above the Problem field in the Request Information section of a Work Order. Common problems must be added to AIMS 3 in the Data Managers component.

Warn on Duplicate Equipment – This will warn the User if they add a new piece of Equipment with the same Manufacturer, Model Number, and Serial Number as another piece of Equipment. This will check all Facilities, even if the user entering the Equipment does not have access to those Facilities.

Enable Shift Settings – This enables the use of shifts as mentioned below in this document.

Auto Save Records – Saves records as the User navigates away from the record.

Auto Calculate Replacement Date on Equipment – This will automatically fill in the Replacement Date on the Lifecycle Tab on the Equipment record. It will automatically calculate the Replacement Date by using the Inservice Date and the Useful Life fields.

Allow Negative Part Inventory Levels – This will allow Users to use a Part on a Work Order, even if it is not in stock. Conversely, it will not allow them to use the Part if this is unchecked.


Auto Refresh List Views (0=off) "x" Minutes – Allows all List Views to be refreshed on a set number of minutes.

Fiscal Year End Date – Allows Administrators to enter the end of the organization's fiscal year. Using the "Automatically Update" checkbox will automatically update the year each year.

Default Equipment Duplicate Options – Allows Administrators to define defaults for duplicating Equipment. When duplicating Equipment, Users can adjust these settings, if needed.

PartsSource Lite


This houses the setting for PartsSource Preferred Search (if purchased). This will be set by Phoenix Data Systems and should not be changed.

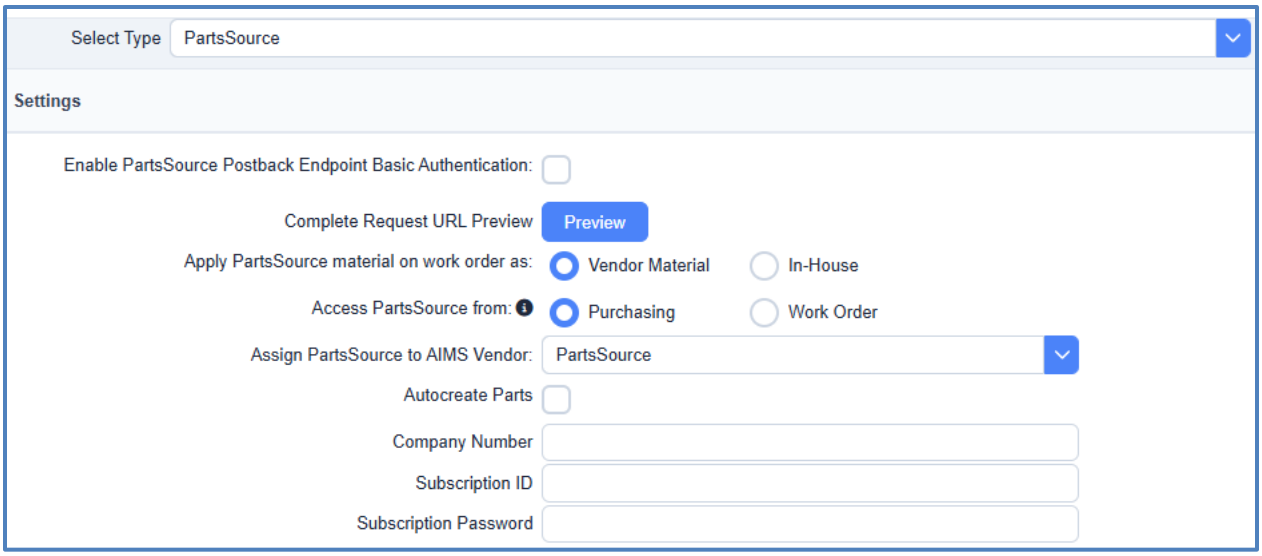

CLASSIFICATION: FOR PUBLIC USE

Password Settings

Administrators who want to customize how passwords are used within AIMS 3 can use the settings in this section. These also include account locking and enforcement settings.

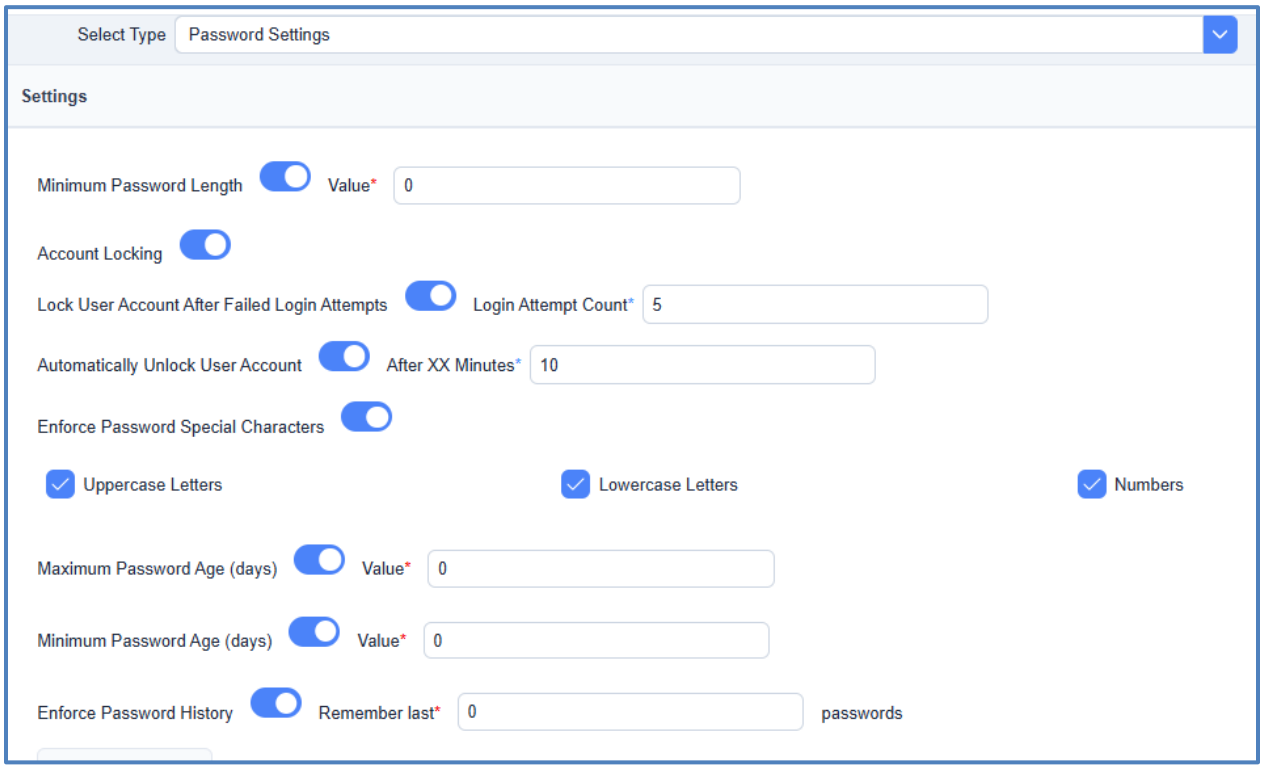

Minimum Password Length – All passwords must be at least "x" characters when this is set.

Account Locking – Allows account locking.

Lock User Account After Failed Login Attempts – Will automatically lock accounts after "x" failed attempts.

Login Attempt Count – The number of failed attempts to lock the account.

Automatically Unlock User Account/After XX Minutes – This will allow the system to automatically unlock accounts after "x" minutes. If the user tries to log in early, the home screen will give the user the exact time they can try to log back in.

Enforce Password Special Characters – Enforces which character are required in each password. These include:

- Uppercase Letters
- Lowercase Letters
- Numbers
- Special Characters

Maximum Password Age – Enforces how old a password can be.

Minimum Password Age – Enforces a minimum password age to ensure users do not reset there passwords quickly to avoid the password history.


Enforce Password History/Remember Last "x" Passwords – Enforces the reuse of the same password.

Active Directory – These settings will be set by the Trainer/Consultant/IT during go live and it is strongly recommended not to change these settings without the assistance of Phoenix Data Systems.

Purchasing Options

The Purchasing Component is highly customizable and integrated with the Work Order component. Administrators can use this section to customize Request numbers and how Purchasing interacts with Work Orders.

Enable Sequential Purchase Requests/Orders – This enables AIMS 3 to automatically number Requests and or Orders with a customizable number.

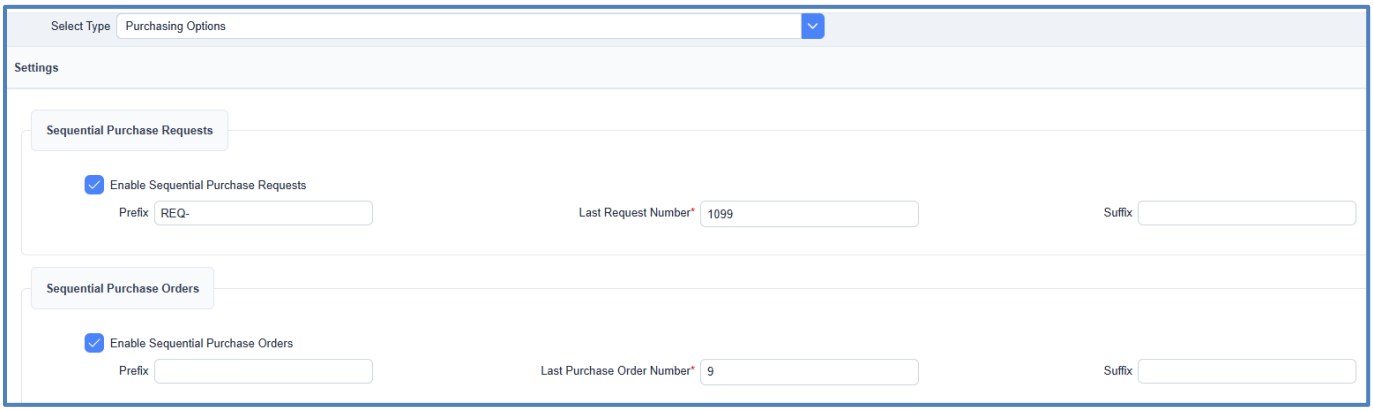


Prefix – This is how each number will start.

Last Request/Order Number – This is the last number which has been used by the software. To start with the number "1", "0" should be entered in the field.

Suffix – This is how each Request/Order number will end.

Purchase Request Defaults

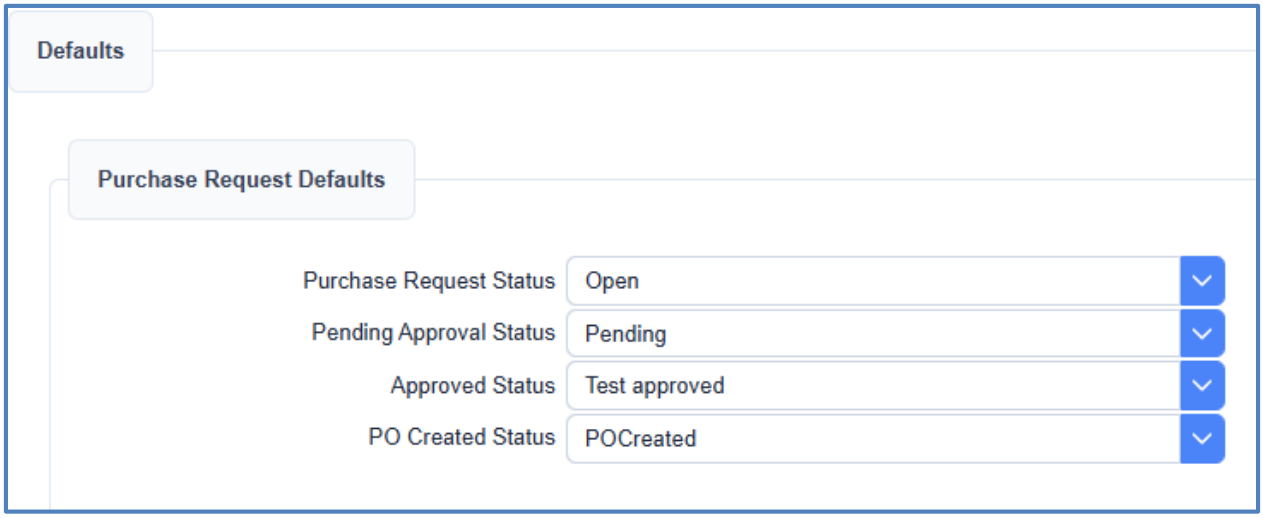


Purchase Request Status – Each Request will default to this Status when created.

Purchase Order Status – Each Order will default to this Status when created.

PO Created Status – The Purchase Request Status will change to this Status when a Purchase Order is created.

Purchase Order Defaults

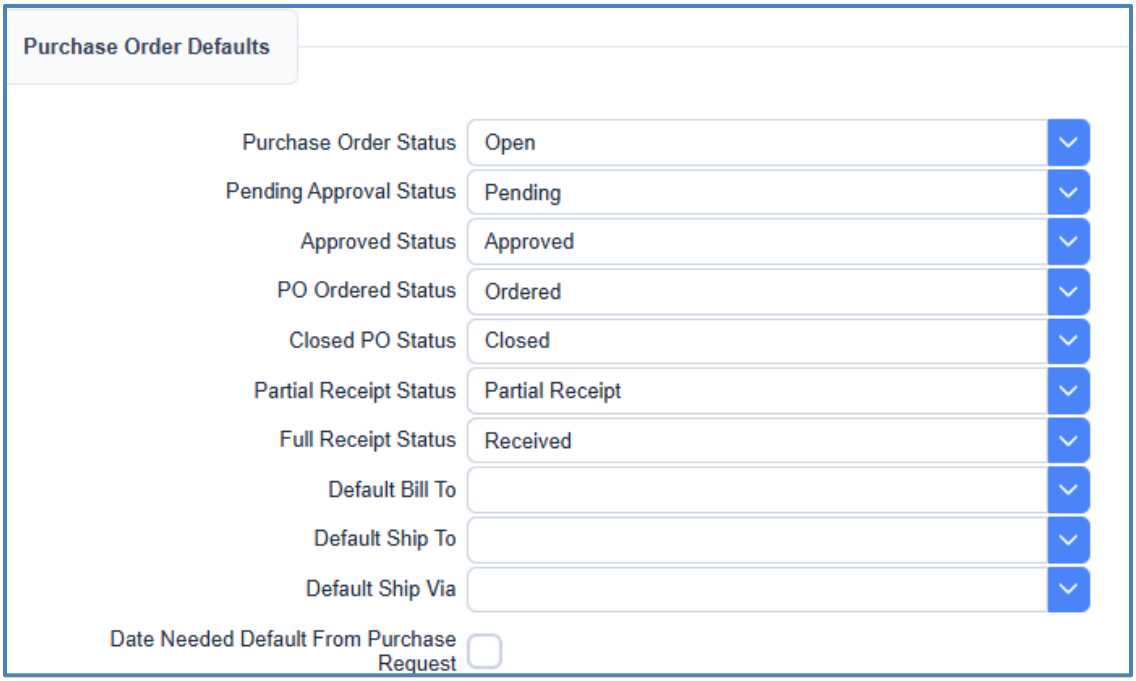

Purchase Order Status – Each Order will default to this Status when created.

Pending Approval Status – Each Order will default to this Status when an approval is needed.

Approved Status - Each Order will default to this Status when approval is granted.

PO Ordered Status - The Purchase Order Status will change to this Status when a Purchase Order has been ordered.

Closed PO Status - The Purchase Order Status will change to this Status when a Purchase Order is closed.


Full Receipt Status - The Purchase Order Status will change to this Status when a Purchase Order is fully received.

Default Bill To – Each Purchase Order will default to the Bill To set in this field.

Default Ship To – Each Purchase Order will default to the Ship To set in this field.

Default Ship Via – Each Purchase Order will default to the Ship Via set in this field.

Invoice/Credit Memo Defaults

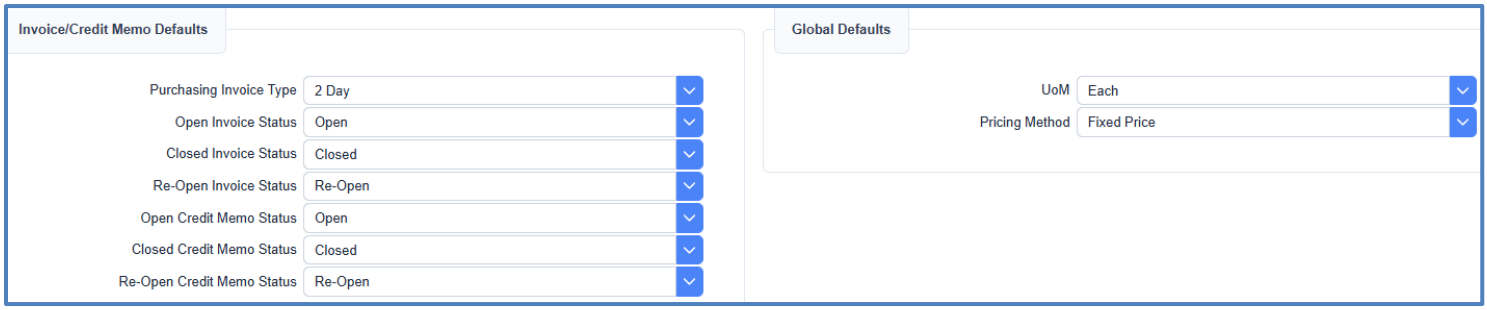

Purchase Invoice Type – The default Invoice Type.

Open Invoice Status – The default Invoice Status when an Invoice is created.

Closed Invoice Status - The default Invoice Status when an Invoice is closed.

Re-Open Invoice Status – The default Invoice Status when an Invoice is reopened.

Open Credit Memo Status – The default Credit Memo Status when a Credit Memo is created.

Closed Credit Memo Status - The default Credit Memo Status when a Credit Memo is closed.

Re-Open Credit Memo Status – The default Credit Memo Status when a Credit Memo is reopened.


CLASSIFICATION: FOR PUBLIC USE

Global Defaults

UoM – The default Unit of Measure for all Purchasing records.

Pricing Method – The default Pricing Method for all Purchasing records.


Work Order Defaults

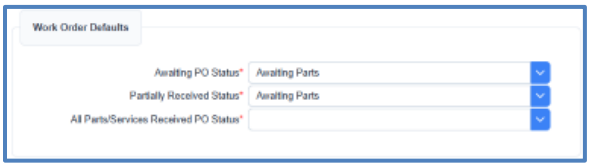

Awaiting PO Status - The Work Order Status will change to this Status when a Purchase Order is created.

Partially Received Status - The Work Order Status will change to this Status when a Purchase Order is partially received.

All Parts/Service Received PO Status - The Work Order Status will change to this Status when a Purchase Order is fully received.

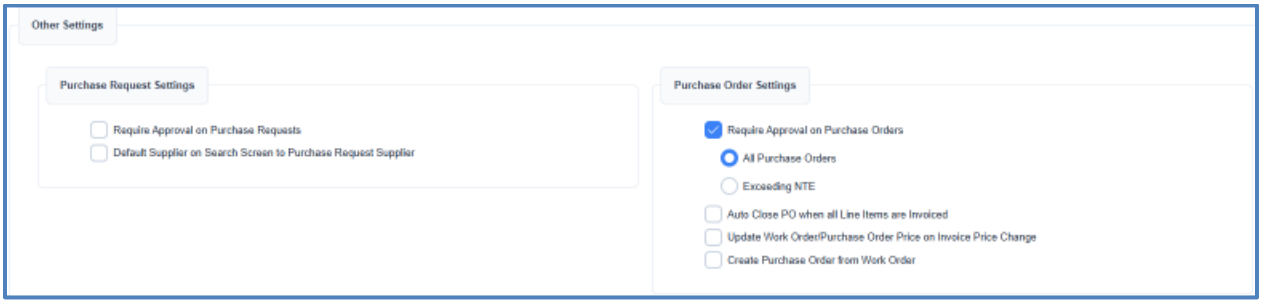

Other Settings

Require Approval on Purchase Requests – This requires an approval on all Purchase Requests, regardless of the Not to Exceed.

Default Supplier on Search Screen to Purchase Request Supplier – Defaults the Supplier in the Find screen in Purchase Requests.


Require Approval on Purchase Orders – This requires an approval on all Purchase Orders, regardless of the Not to Exceed.

Auto Close PO when all Line Items are Invoiced – Will close a Purchase Order when all Line Items are Invoiced.

Update Work Order/Purchase Order Price on Invoice Price Change – Will update Part Line Items on both the Work Order and Purchase Order when the price changes on the Invoice.

Create Purchase Order from Work Order – When utilizing the Purchasing button in the Work Order, instead of creating a Purchase Request, it creates a Purchase Order.

RTLS Options

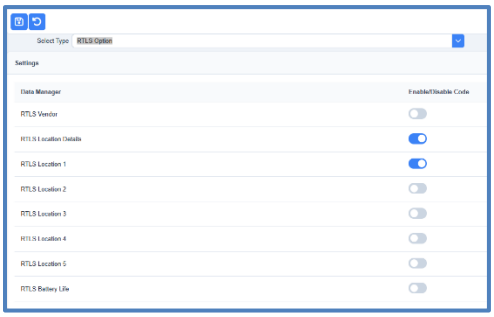

Turns on RTLS for use in the Equipment component.

Scheduled Event Options

Administrators can customize how Scheduled Events are created. This includes a custom Problem, custom dates, and automatically creating the events.

Generated WO Problem Field Options – This will autofill the Problem field for all Scheduled Events. These fields can be used in any order. The fields available are:

- AEM Status
- Procedure Name
- Frequency and Interval
- Next Event Date and Time


Default Work Order Request Date from Scheduled Event Date – When clicked, the Request Date on the Work Order will be the Next Event Date/Time from Scheduled Event. When unchecked, the Request Date on the Work Order will be the date the Work Order was created.

Generate Only the Least Frequent Scheduled Event – When multiple Schedules are due at the same time for the same piece of Equipment, it will only produce the Schedule which is due the least frequent. For example, a generator has Weekly, Monthly, Quarterly, Semi-Annual, Annual, and 3-Year Load Test Schedules due on the same date. Using this feature will only create the 3-Year Load Test Schedule. Therefore, the other Schedules must be built into the 3-Year Load Test to ensure they are completed.

Use Cost Center Contact & Email when Generating Scheduled Events – This will attach the contact information of the Cost Center on all Schedules. For more information on Cost Center Contacts, please see “Data Managers – Cost Centers.”

Skip Next Floating Schedule if Prior Work Order is Still Open – When using floating Scheduled Events, if a Work Order is still open from a previous floating Scheduled Event, then the next Work Order will not generate until it is closed.


Shift Setup

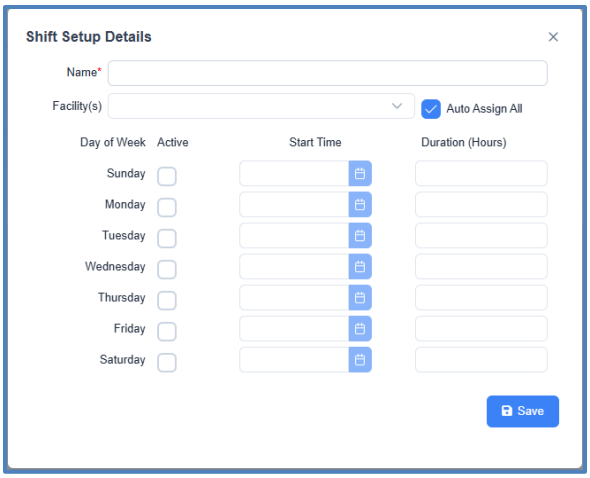

This allows organizations to set shifts for their Facilities, such as "Day Shift" or "Evening Shift." In the Employee Data Manager, Employees can then be assigned to a shift in the Assignments tab.

Work Order Messaging

This sets global settings for messaging for Work Orders. Since Work Orders can have several different sources, it is important to review these settings on a regular basis to ensure they are meeting workflow standards.

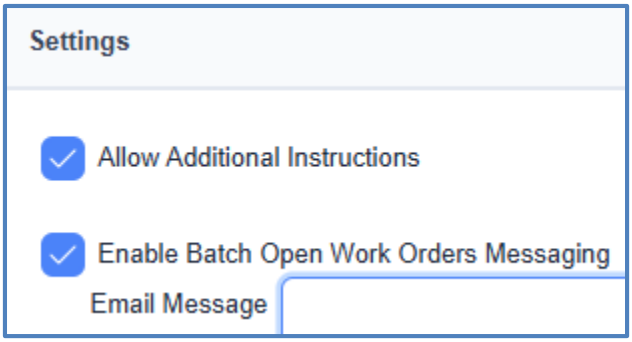

Allow Additional Instructions – Allows the additional instructions from Work Orders in Messages.

Enable Batch Open Work Orders Messaging – Normally, during Batch Work Order creation, Messaging is disabled. This will ensure Messaging occurs during this process. The message will include "X number of Work Order have been created and are assigned to you."

Work Orders can be set to automatically notify Employees based off the source of the Work Order and the Priority. Clicking the Edit button next to each Priority will allow Administrators to declare:



Autosend AIMS – This will send Messages from Work Orders created using the "New" button in the Work Orders component.

Autosend Easynet Work Orders – This will send Messages from Work Orders created using EasyNet.

Use On Call Settings – Will use the On Call settings when set.

Default Format – This area, when established, will default fields on a NEW employee's Work Order Messaging Field. However, these fields can be changed in the Employee Record found inside of Data Managers.



System Setup Submenu

Security



The Security Submenu item allows Administrators to create additional Security Levels for those who will not be Administrators. The Security area has a toolbar with the following buttons:

- Save – Saves the current settings for the selected Security Level.
- New – Creates a new Security Level.
- Duplicate – Duplicates the current Security Level. This is useful if the Administrator wants to create a similar Security Level and does not start from scratch.
- Delete – Deletes the current Security Level.
- Undo – Reverse the earlier action.

Hovering over each button will tell you what the button does.

Security Level – Selects which Security Level to view/change.

Description – Allows the Administrator to view/change the Security Level Description.


Note: Security Level Description must be unique!!!

Custom Header Fields – This area allows Administrators to customize and lock header fields for specific Security Levels on both Equipment and Work Orders. Fields can be moved and reordered to control what users see and edit.

Administrators can select one or multiple fields using the [CTRL] or [SHIFT] keys. The Up and Down arrows change the order of the selected fields. Single arrows will move each field at one position at a time, while the double arrows move directly to the top or bottom of the list. The Left and Right arrows move selected fields between the Unassigned and Assigned lists, while the double arrows move all fields in the selected list.




Filter – This option allows Administrators to search for a specific field within AIMS 3. After entering a value in the filter text box and clicking the Filter button, AIMS 3 searches all available components for matching results. This makes it easier to quickly locate and update specific fields throughout the database when needed.

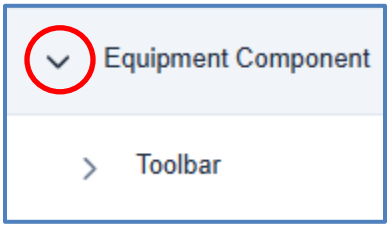

Clicking Save will make the changes effective. Undo will revert the settings to the previous setting. If there is confusion about what changes were made, surfing to a different area of the software will negate the changes.

Security Level Grid – This area has all components and fields in AIMS 3. In addition, there are four values for each item:

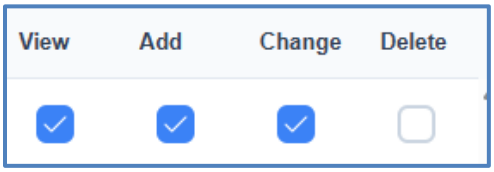

- View – Allows the Security Level to view the data in the field.
- Add – Allows the Security Level to add data in the field.
- Change – Allows the Security Level to change the data in the field.
- Delete – Allows the Security Level to delete the data in the field.

Note: Permitting the Security Level to either "Add" or "Delete" will automatically grant the Level to "Change" data as well.


Security Levels should be reviewed regularly to ensure they continue to support current workflows. Granting too much access can lead to inconsistent or inaccurate data, while granting too little access can limit users' ability to work efficiently. Regular reviews help maintain the right balance between data integrity and productivity.


Area Assignment


This area allows Administrators the ability to assign a combination of Service Department Facility, Employee, Cost Center, and many other variables. Therefore, if an Administrator wanted an Employee to be assigned to all Air Handlers in a certain Facility, they could do that here.



If an Areas Assignment needs to be changed, the Administrator must look up the original values, then check the checkbox next to the Area Assignment to change. After clicking the "Reassign" button, the Administrator will be prompted to change the assignment, and any non-closed Work Orders as well.

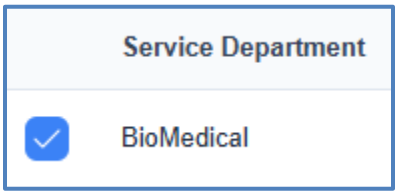



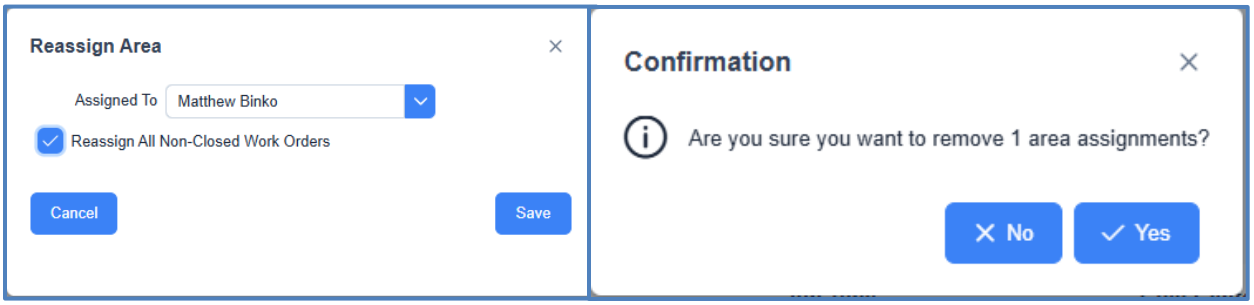

Risk Setup

Risk Setup is used to create Risk Profiles for Equipment. A Service Department can have one or more Risk Profiles, each containing a Name, Formula, and multiple Risk Categories. Risk Categories include a Name, Formula Code, and Risk Value. Risk Profiles can also include a Risk Range (Classification) Override.

For example, a Risk Profile called Clinical Equipment may use formula A + B + C. In this case, Risk Categories A, B, and C must be defined. Category A may represent the Equipment's function, with values ranging from 10 for Life Support equipment to 1 for Non-Patient Related equipment. Categories B and C can be used for factors such as Physical Risk and Maintenance


Requirements, each with their own scoring scale. The total score is then used to determine the Equipment's Risk Classification.

Note: It is encouraged to review the How-To "Risk" for a full explanation of the Risk feature.

Risk Classification


Risk Classification is used to assign a label to the final score calculated from a Risk Profile. For example, a score of 21–30 may be classified as High Risk, while a score of 1–20 may be classified as Low Risk.

In the Risk Classification area, Administrators can create and manage these classifications by defining whether the classification is Active, entering a Description, and setting the From and to score range that determines when the classification applies.

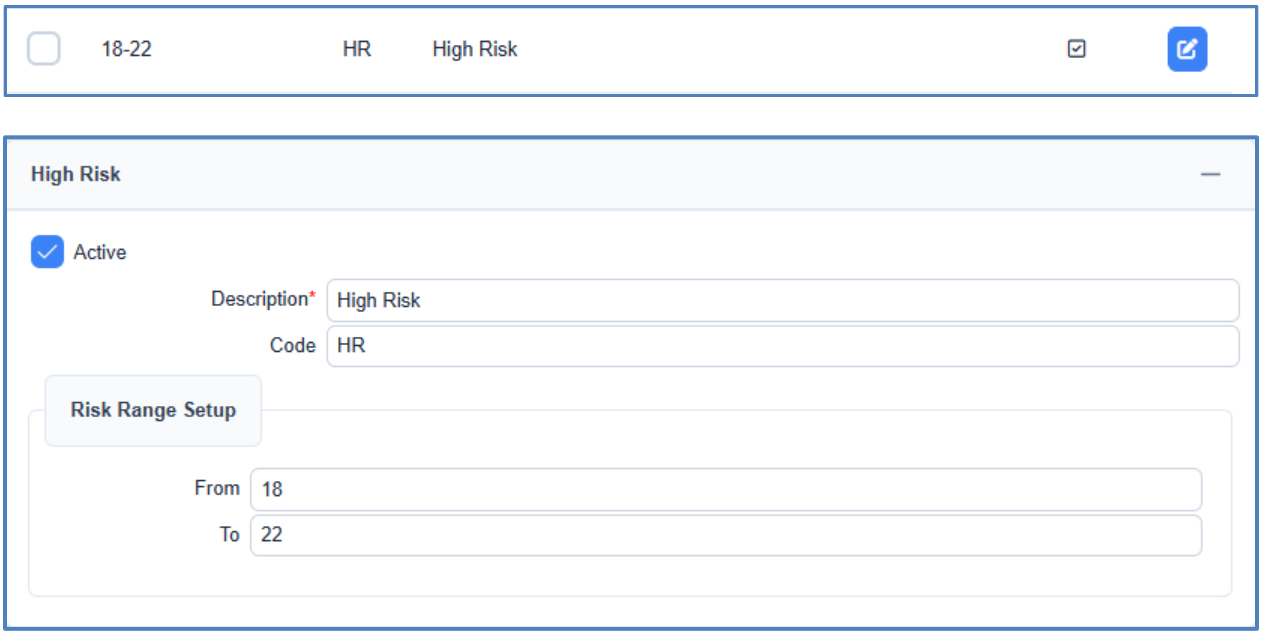

Custom Critical Messages

Custom Critical Messages appear at the top of records to alert users to valuable information, such as Warranty, Contract, or other key details. AIMS 3 includes several built-in critical messages, including notifications for Equipment marked as Critical. Administrators can also create their own custom messages to highlight information that is important to their organization's workflows.

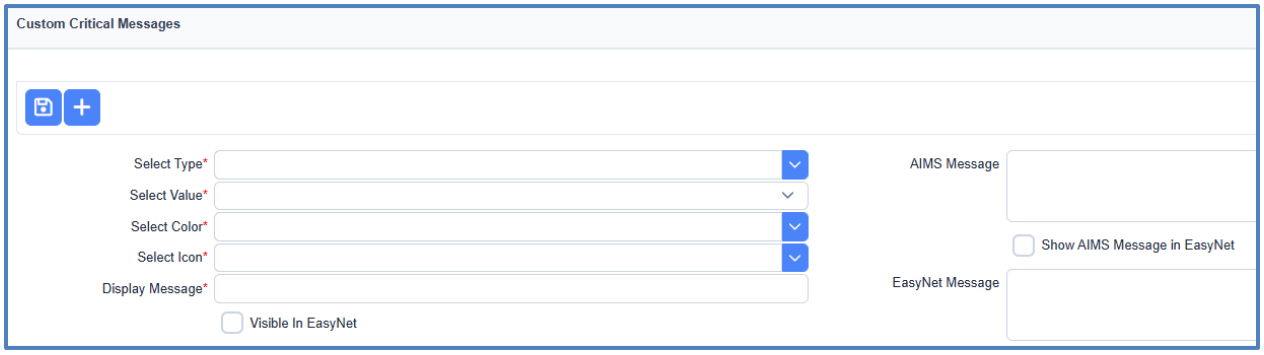

Select Type – Shows which fields may trigger a message. These include:

- Equipment Status
- Equipment Condition
- Work Order Status
- Work Order Priority
- Decontamination Form
- Software Version Check
- Risk Classification
- Ownership
- Last PM Result
- Cost Center
- Building
- Job Type
- PM Requirement Validation

Select Value – This will be values found in the Type selected.

Select Color – The available colors for messages.

Display Message – A free text field so Administrators can choose their own message.

Visible in EasyNet – Should the message display in EasyNet for the requesters to see.

AIMS Message – Enable a clickable message to show additional information within AIMS 3.

EasyNet Message – Enable a clickable message to show additional information on the EasyNet page.


Edit – Adds the message to the list of Custom Critical Messages.

Delete – Removes selected messages.

Required Fields

While AIMS 3 includes many built-in required fields, Administrators may choose to make additional fields required to support their organization's workflows. This area is organized by component, allowing required fields to be configured for specific areas of the software. Before making fields permanently required, Administrators should review and evaluate the workflow to ensure the changes support users without creating unnecessary restrictions.


The Component dropdown allows Administrators to select the area of AIMS 3 they want to review or configure required fields for. Once a component is selected, the available fields for that area can be viewed and adjusted as needed to support the organization's workflows and data requirements.

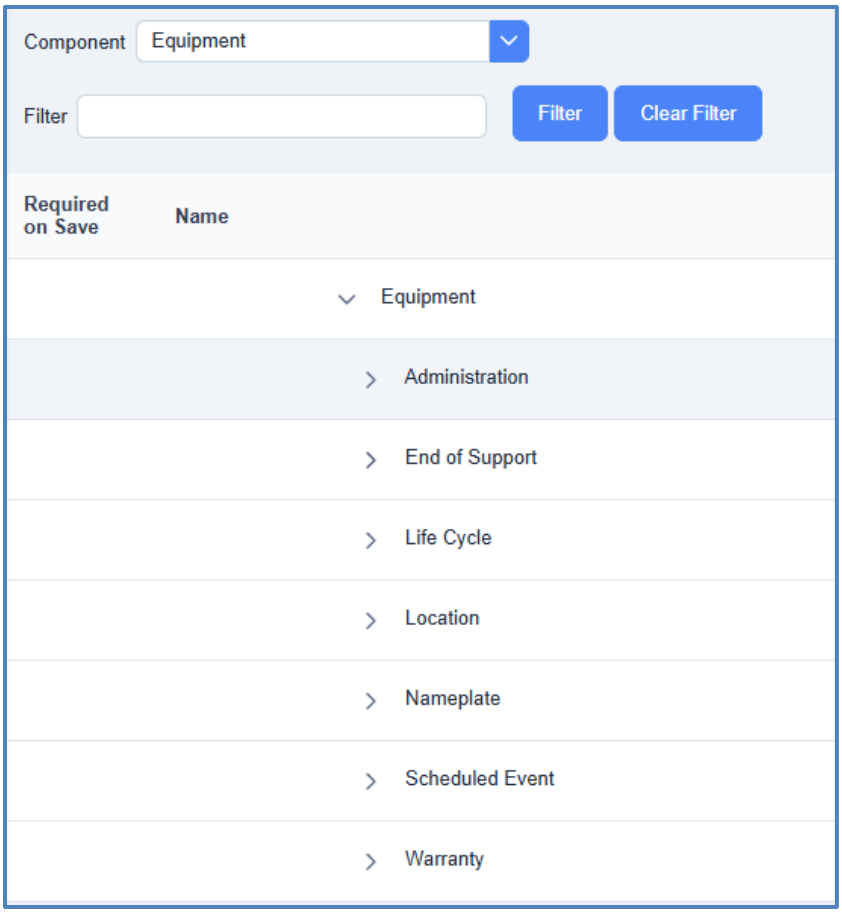

CLASSIFICATION: FOR PUBLIC USE

Defaults

Defaults allow the Administrator to set default values to certain fields as actions occur.

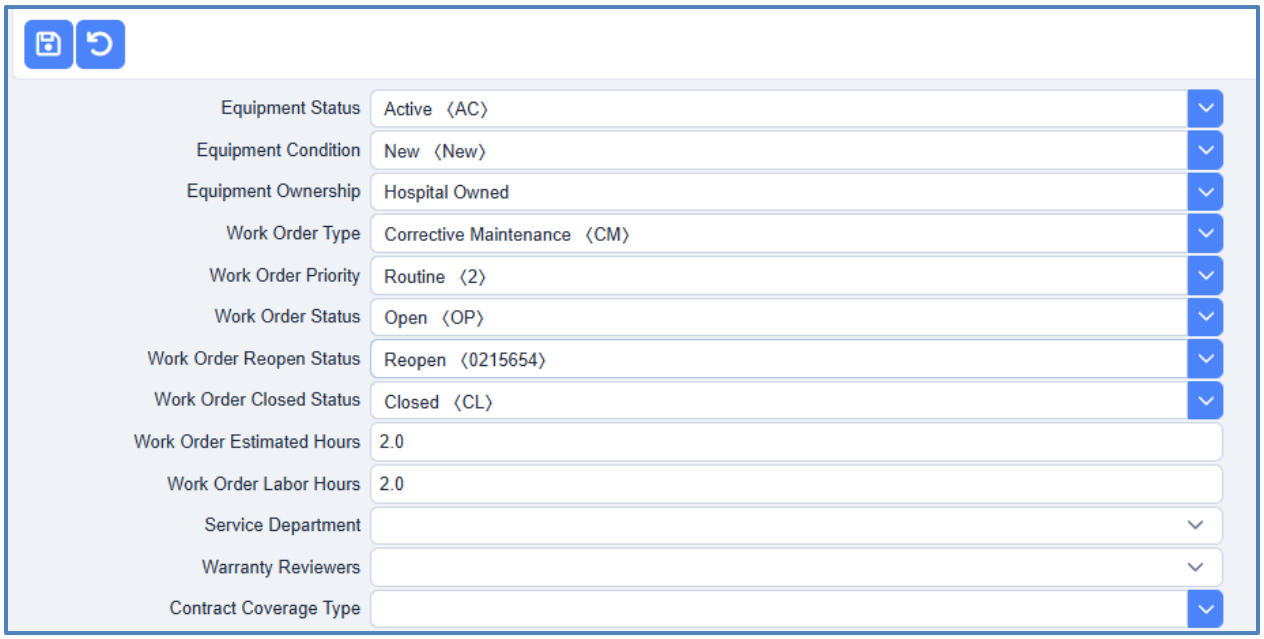

Equipment Status – This will be the Status for all new Equipment.

Equipment Condition – This will be the Condition for all new Equipment.

Work Order Type – This will be the Type for all new Work Orders.

Work Order Priority – This will be the Priority for all new Work Orders.

Work Order Status – This will be the Status for all new Work Orders.

Action – The default Status when Closing Work Orders.

Work Order Estimated Hours – This will be the Estimated Hours for all new Work Orders.

Work Order Labor Hours – This will be the Hours set for all new Work Orders.


Service Department – The Service Department for all new Work Orders.

Warranty Reviewers– The only Employees to review Warranties.

Contract Coverage Type- The Default Coverage type for your equipment under contract.

Enable/Disable Code

This allows Administrators to show the code on certain (or all) fields in the system. This area has a list of the fields which contain code and a toggle switch to either show or disable the codes.

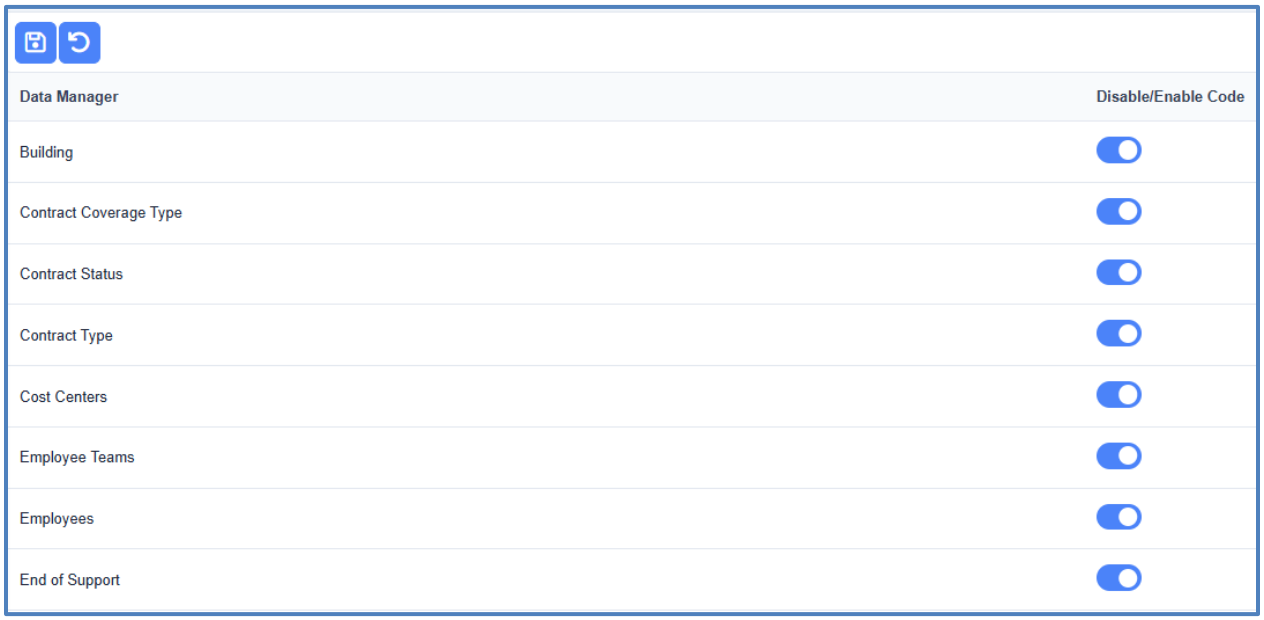

Automation

Automation puts the power in Administrators' hands to produce actions automatically when another action occurs. These additional actions can update records, create new records, and notify personnel of an action. To create Automation, Administrators need to declare three items:

- The Trigger
- The Conditions which must be present
- The Action to take

AIMS 3 also gives Administrators the ability to import and export Automations to share with other AIMS 3 databases.

This guide is going to use the example of retiring Equipment from the Labor Line. When users determine through a Labor Line Response the Equipment will be "Removed from Service," the need arises to change the Equipment's Status to "Retired." If this is a given it will happen every time, there is no need for the user to manually perform the action when AIMS 3 can do it automatically. The guide will also explore what other Automations can be used in addition to the original Automation. If a piece of Equipment is retired, then all open Work Orders for the Equipment should be cancelled. Automation can take care of that as well.

Note: This example requires a Labor Line Response of "Removed from Service" or one similar. If one does not exist, it will need to be created in the Response Data Manager.

The Toolbar




The Toolbar allows for the following four actions:

- Save – Saves the current Automation.
- New – Creates a new Automation.
- Undo – Undoes the previous action.
- Imports an Automation.

Hovering over each button will tell you what the button does.

To create a new Automation, click the New button and enter a unique name for the Automation. For the guide's example, use the title "Removed from Service to Retired Equipment."



Trigger

The Trigger is what will cause this Automation to fire. This would be an action taken by a user. There are three areas to produce a Trigger:

- Equipment
- Labor Line
- Work Order


In addition, there are three actions to Trigger an action:

- Field Value Change
- Is Created
- Is Created

Administrators must name which component the Trigger will come from and when with a set of criteria. If using the "Field Value Change," the Administrator must choose which field is to be used. The system can detect when a field is changed from a certain value, a blank value, or any value. The system can also detect when a field is changed to a certain value, a blank value, or any value. If the field used is a Checkbox, the options will be "Yes" and "No." In addition, the From and To field offer the opportunity to select more than one option.

Using the example above, the Trigger is when a Labor Line includes the Response of "Removed From Service" or a similar Response unique to the database. However, Administrators would

not want this Action to occur with every time someone simply uses this Response. There may be multiple Labor Lines on a Work Order with this Response. It should only Trigger when a certain Condition is met, such as when the Work Order is closed`.




Condition

The Condition is what must be true for the Automation to occur. Condition is additional criteria which must be met to create the Action. There are three areas to create a Condition:

- Equipment
- Labor Line
- Work Order

In addition, the condition of one of the above-mentioned areas must change to allow the Action. A field in one of the three areas must equal or not equal a Value. The Value field also allows for multiple options to be selected.

As mentioned above, an Administrator would only want this as the last action of the Work Order. Therefore, for the guide's example, the Condition is the Work Order Status must be Equal to "Closed."

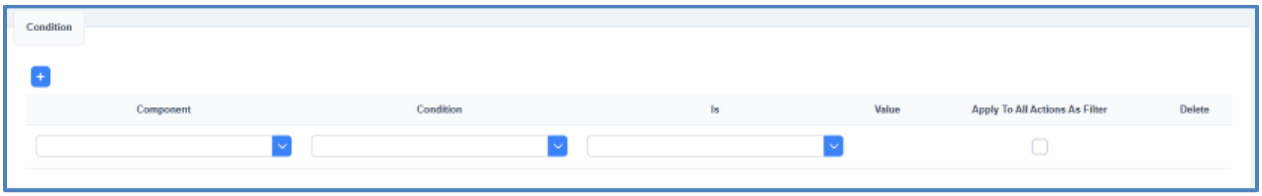

In this example, could the Trigger and Condition be flipped? Absolutely! Administrators will find some arguments work better as Triggers while others work better as Conditions. Administrators should always review the Automations and ensure they work best for the organization.

Note: An add button is in the Condition area, since there can be more than one of each!

Action

This part of Automation is powerful. You can change a single field, notify personnel, or create a separate new Work Order. There are three areas to create an Action:


- Equipment
- Labor Line
- Work Order

Note: When selecting either "Labor Line" or "Work Order," Administrators will be presented with a warning to ensure their Action(s) will not conflict with the original record. If an Administrator is unsure of the product the Automation will produce, DO NOT CREATE THE AUTOMATION! Please contact Phoenix Data Systems Technical Support for assistance!

All areas allow for the ability to:

- Update the record
- Notify personnel

Work Orders allow for the option to Create another Work Order.

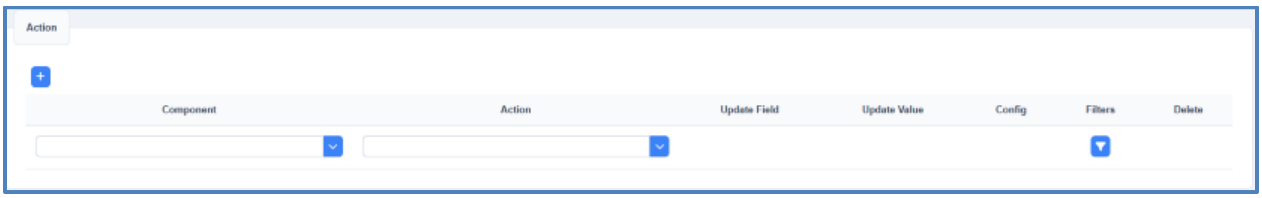


Update

Updating the record allows for a single field to be changed. If more than one field needs to be changed, clicking the "Add" button will add another Action.


Notification

With this option selected, Administrators can notify Assigned Employees or Managers through their default Messaging Devices (see Data Managers->Employees) or Other Contacts through email. When a Notification has been set, a message "Notification Configuration Saved" will appear.

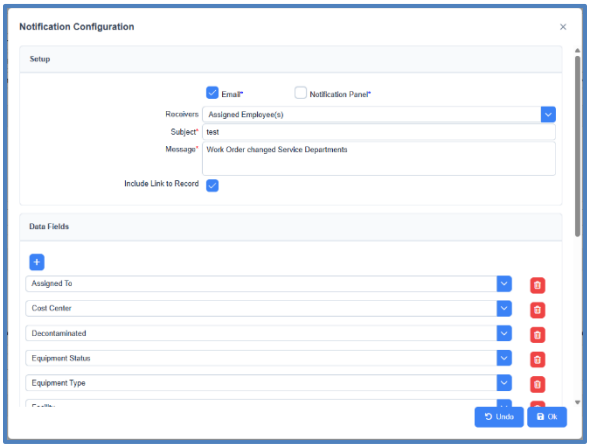

In the guide's example, Administrators can retire the Equipment then notify Management of the removal of the Equipment.

Create

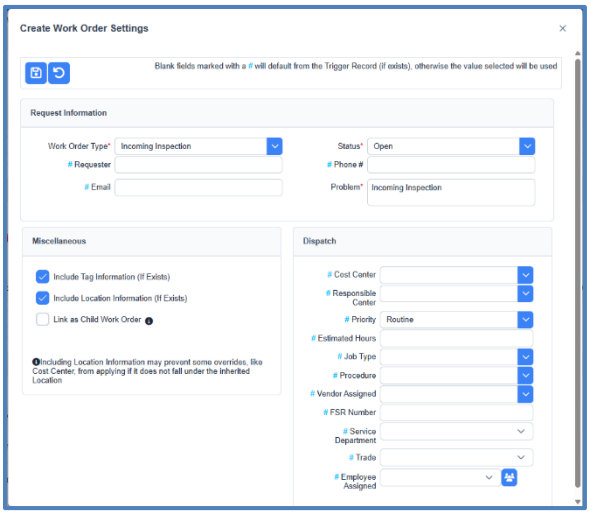

When creating a new Work Order, a blue pound sign (#) next to a field means the new Work Order will retain all information from the previous Work Order, unless specified. All required fields are marked with a red asterisk (*) and must be completed to save the configuration. The Miscellaneous section offers the ability to:

- Include Tag Information (if exists)
- Include Location Information (if exists)
- Link as Child Work Order

Note: The new Work Order is <u>NOT</u> automatically a Child Work Order of the previous Work Order!


In the example above, the Trigger of changing the Response and the Condition of closing the Work Order have been met. Two Actions are added to retire the Equipment and notify management of the status.

Note: A add button is in the Action area, since there can be more than one of each!

While Administrators would like to have everything contained in a single Automation, there may be times to separate some Actions. For example, now that the Equipment is retired, all open Work Orders for the Equipment should be cancelled. This could be done with a new Automation. Keeping them separate may make it easier to troubleshoot and update in the future.


Interfaces

This area includes all the Interfaces currently added to the system. It also contains a “New Interface” button to create additional Interfaces. When clicked, the Administrator is provided with an Active checkbox, the ability to name the interface, and a unique API key. To Edit or Delete any Interface, buttons have been provided next to each one. For further information about the AIMS 3 APIs, a Documentation button is in the upper-left corner of the screen.

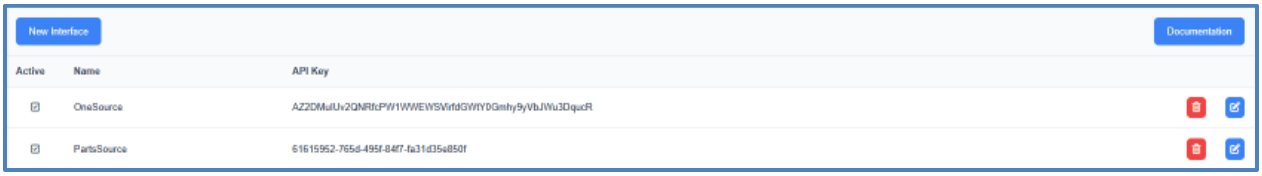

User Manager

Allow Administrators to view and manage logins.

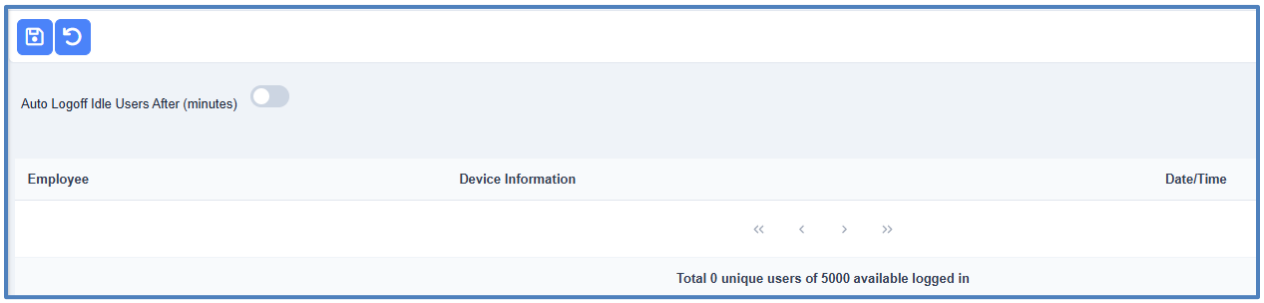

Auto Logoff Idle Users After (minutes)/Value – This will logoff any user which is idle for the value set in minutes.

If there are users listed in the grid, clicking the “End” button will log them off the software.

Conclusion

System Setup plays a significant role in supporting organizational workflows and helping organizations get the most value from AIMS 3. Settings should be reviewed regularly to ensure they continue to support current processes and to identify any options that may need adjustment. Even small setting changes can improve efficiency and save time.

If Administrators require additional consulting or training, Phoenix Data Systems is available to assist at any level. Please contact our sales Department or Project Managers for more information.

Appendix

To support your learning, we have created a step-by-step video guide that visually walks you through the entire process. Simply click the link below to visit our YouTube channel, where you can watch the full System Setup Course of tutorials at your own pace. This is a great way to follow along, review key steps, and build confidence with the workflow as you learn.

System Setup Course