


Document Title	Specification of Module Secure Onboard Communication
Document Owner	AUTOSAR
Document Responsibility	AUTOSAR
Document Identification No	654
Document Classification	Standard

Document Status	Final
Part of AUTOSAR Standard	Classic Platform
Part of Standard Release	4.3.0

Document Change History					
Date	Release	Changed by	Change Description		
2016-11-30	4.3.0	AUTOSAR Release Management	 Handle freshness in external freshness manager New feature to send authenticator in an additional message Secured diagnostic communication Increase minimum value of parameter AuthInfoTxLength to 1 Changed the type of the parameter keyID of the interface SecOC_AssociateKey() to uint16 		
2015-07-31	4.2.2	AUTOSAR Release Management AUTOSAR Release Management	 Minor corrections / clarifications / editorial changes; For details please refer to the ChangeDocumentation Initial Release 		





Disclaimer

This specification and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the specification.

The material contained in this specification is protected by copyright and other types of Intellectual Property Rights. The commercial exploitation of the material contained in this specification requires a license to such Intellectual Property Rights.

This specification may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the specification may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The AUTOSAR specifications have been developed for automotive applications only. They have neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

Advice for users

AUTOSAR specifications may contain exemplary items (exemplary reference models, "use cases", and/or references to exemplary technical solutions, devices, processes or software).

Any such exemplary items are contained in the specifications for illustration purposes only, and they themselves are not part of the AUTOSAR Standard. Neither their presence in such specifications, nor any later documentation of AUTOSAR conformance of products actually implementing such exemplary items, imply that intellectual property rights covering such exemplary items are licensed under the same rules as applicable to the AUTOSAR Standard.



Table of contents

1	I	Introduction and functional overview	. 6
2	A	Acronyms, abbreviations and definitions	. 8
	2.1	Acronyms and abbreviations	
	2.2	Definitions	. 8
3	F	Related documentation	10
	3.1	Input documents	10
	3.2	Related standards and norms	
	3.3	Related specification	11
4	(Constraints and assumptions	12
	4.1	Applicability to car domains	12
5	[Dependencies to other modules	13
	5.1	Dependencies to PduR	13
	5.2	Dependencies to CSM	
	5.3	Dependencies to the RTE	
	5.4	File structure	
	5.4	4.1 Header file structure	14
6	F	Requirements traceability	16
7	F	Functional specification2	28
	7.1	Specification of the security solution	
		1.1 Basic entities of the security solution	
		1.2 Authentication of I-PDUs	
		1.3 Verification of I-PDUs	
		1.4 Adaptation in case of asymmetric approach	
	7.2	Relationship to PduR	
	7.3	Initialization	
	7.4	Authentication of outgoing PDUs	
		4.1 Authentication during direct transmission	
		4.2 Authentication during triggered transmission	
	7.4		
		4.4 Error handling and cancelation of transmission	
	7.5		
	7.5		
		5.2 Verification during transport protocol reception	
	7.5	5	
	7.6	Gateway functionality	
	7.7	Development Errors	
	7.8	Error detection	
	7.9	Error notification	
	7.10		
		10.1 Overview of security profiles	
		10.2 SecOC Profile 1 (or 24Bit-CMAC-8Bit-FV)	
	7.1	10.3 SecOC Profile 2 (or 24Bit-CMAC-No-FV)	ა9



	7.10.4	SecOC Profile 3 (or JASPAR)	59
3	API s	specification	61
	8.1 lmp	ported types	61
		pe definitions	
	8.2.1	SecOC_ConfigType	61
	8.2.2	SecOC_StateType	
	8.3 Fur	nction definitions	
	8.3.1	SecOC_Init	61
	8.3.2	SecOC_DeInit	62
	8.3.3	SecOC_GetVersionInfo	
	8.3.4	SecOC_IfTransmit	63
	8.3.5	SecOC_TpTransmit	63
	8.3.6	SecOC_CancelReceive	64
	8.3.7	SecOC_lfCancelTransmit	64
	8.3.8	SecOC_TpCancelTransmit	65
	8.3.9	SecOC_ChangeParameter	65
	8.3.10	SecOC_AssociateKey	66
	8.3.11	SecOC_FreshnessValueRead	66
	8.3.12	SecOC_FreshnessValueWrite	66
	8.3.13	Optional Interfaces	67
	8.4 Cal	I-back notifications	68
	8.4.1	SecOC_RxIndication	68
	8.4.2	SecOC_TpRxIndication	68
	8.4.3	SecOC_TxConfirmation	69
	8.4.4	SecOC_TpTxConfirmation	
	8.4.5	SecOC_TriggerTransmit	. 70
	8.4.6	SecOC_CopyRxData	
	8.4.7	SecOC_CopyTxData	
	8.4.8	SecOC_StartOfReception	
	8.4.9	CSM callback interfaces	
		lout Definitions	
		SecOC_GetRxFreshness	. 73
	8.5.2	SecOC_GetRxFreshnessAuthData	
	8.5.3	SecOC_GetTxFreshness	
	8.5.4	SecOC_GetTxFreshnessTruncData	
	8.5.5	SecOC_SPduTxConfirmation	
		neduled functions	
	8.6.1	SecOC_MainFunctionRx	
	8.6.2	SecOC_MainFunctionTx	
	•	pected Interfaces	
	8.7.1	Mandatory Interfaces	
	8.7.2	Optional Interfaces	
	8.7.3	Configurable Interfaces	
		vice Interfaces	
	8.8.1	Overview	
	8.8.2	Sender Receiver Interfaces	
	8.8.3	Client Server Interfaces	
	8.8.4	Ports	
	8.8.5	Implementation Data Types	ďΥ



9	Sequer	nce diagrams	92
	9.1 Authe	entication of outgoing PDUs	93
		uthentication during direct transmission	
		uthentication during triggered transmission	
		uthentication during transport protocol transmission	
		cation of incoming PDUs	
		erification during direct reception	
		erification during transport protocol reception	
		uthentication Gateway	
		ness Handling	
1(0 Configu	uration specification	101
	10.1 Cor	ntainers and configuration parameters	101
	10.1.1	SecOC	
	10.1.2	SecOCGeneral	106
	10.1.3	SecOCSameBufferPduCollection	108
	10.1.4	SecOCRxPduProcessing	109
	10.1.5	SecOCRxSecuredPduLayer	113
	10.1.6	SecOCRxSecuredPdu	114
	10.1.7	SecOCRxSecuredPduCollection	114
	10.1.8	SecOCRxCryptographicPdu	115
	10.1.9	SecOCRxAuthenticPduLayer	
	10.1.10	SecOCRxAuthenticPdu	
	10.1.11	SecOCTxPduProcessing	117
	10.1.12	SecOCTxAuthenticPduLayer	120
	10.1.13	SecOCTxSecuredPduLayer	121
	10.1.14	SecOCTxSecuredPdu	
	10.1.15	SecOCTxSecuredPduCollection	
	10.1.16	SecOCTxAuthenticPdu	122
	10.1.17	SecOCTxCryptographicPdu	123
	10.1.18	SecOCUseMessageLink	124
	10.2 Pub	olished Information	124
1	1 Annex	A: Application hints for the development of SW-C Freshness Value	
		ər	125
	11.1 Ove	erview of freshness value construction	125



1 Introduction and functional overview

This specification is the AUTOSAR Secure Onboard Communication (SecOC) module Software Specification. It is based on AUTOSAR SecOC [5] and specifies how the requirements of the AUTOSAR SecOC SRS shall be realized. It describes the basic security features, the functionality and the API of the AUTOSAR SecOC module.

The SecOC module aims for resource-efficient and practicable authentication mechanisms for critical data on the level of PDUs. The authentication mechanisms shall be seamlessly integrated with the current AUTOSAR communication systems. The impact with respect to resource consumption should be as small as possible in order to allow protection as add-on for legacy systems. The specification is based on the assumption that mainly symmetric authentication approaches with message authentication codes (MACs) are used. They achieve the same level of security with much smaller keys than asymmetric approaches and can be implemented compactly and efficiently in software and in hardware. However, the specification provides the necessary level of abstraction so that both, symmetric approaches as well as asymmetric authentication approaches can be used.

The SecOC module integrates on the level of the AUTOSAR PduR. Figure 1 shows the integration of the SecOC module as part of the Autosar communication stack.

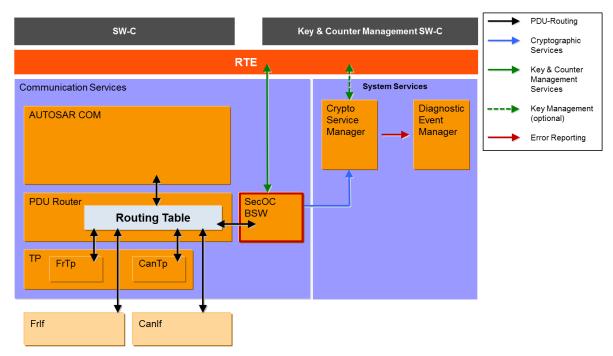


Figure 1: Integration of the SecOC BSW

In this setting, PduR is responsible to route incoming and outgoing security related I-PDUs to the SecOC module. The SecOC module shall then add or process the security relevant information and shall propagate the results in the form of an I-PDU back to the PduR. PduR is then responsible to further route the I-PDUs. Moreover, the SecOC module makes use of the cryptographic services provided by the CSM and interacts with the Rte to allow key and counter management. The SecOC



module shall support all kind of communication paradigms and principles that are supported by PduR, especially Multicast communications, Transport Protocols and the PduR Gateway. The following sections provide a detailed specification of SecOC interfaces, functionality and configuration.



2 Acronyms, abbreviations and definitions

2.1 Acronyms and abbreviations

Abbreviation / Acronym:	Description:
CSM	The AUTOSAR Crypto Service Manager
SecOC	Secure Onboard Communication
MAC	Message Authentication Code
FV	Freshness Value
FM	Freshness Manager

2.2 Definitions

For this document the definitions of data integrity, authentication, entity authentication, data origin, message authentication and transaction authentication from [14] are used:

Term:	Description:
Authentic I-PDU	An Authentic I-PDU is an arbitrary AUTOSAR I-PDU that is completely secured during network transmission by means of the Secured I-PDU
Authentication	Authentication is a service related to identification. This function applies to both entities and information itself. Two parties entering into a communication should identify each other. Information delivered over a channel should be authenticated as to origin, date of origin, data content, time sent, etc. For these reasons, this aspect of cryptography is usually subdivided into two major classes: entity authentication and data origin authentication. Data origin authentication implicitly provides data integrity (for if a message is modified, the source has changed).
Authentication Information	The Authentication Information consists of a Freshness Value (or a part thereof) and an Authenticator (or a part thereof). Authentication Information are the additional pieces of information that are added by SecOC to realize the Secured I-PDU
Authenticator	Authenticator is data that is used to provide message authentication. In general, the term Message Authentication Code (MAC) is used for symmetric approaches while the term Signature or Digital Signature refers to asymmetric approaches having different properties and constraints.
Data integrity	Data integrity is the property whereby data has not been altered in an unauthorized manner since the time it was created, transmitted, or stored by an authorized source. To assure data integrity, one should have the ability to detect data manipulation by unauthorized parties. Data manipulation includes such things as insertion, deletion, and substitution.




Data origin authentication	Data origin authentication is a type of authentication whereby a party is corroborated as the (original) source of specified data created at some (typically unspecified) time in the past. By definition, data origin authentication includes data integrity.
Distinction unilateral/ bilateral authentication	In unilateral authentication, one side proves identity. The requesting side is not even authenticated to the extent of proving that it is allowed to request authentication. In bilateral authentication, the requester is also authenticated at least (see below) to prove the privilege of requesting. There is an efficient and more secure way to authenticate both endpoints, based on the bilateral authentication described above. Along with the authentication (in the second message) requested initially by the receiver (in the first message), the sender also requests an authentication. The receiver sends a third message providing the authentication requested by the sender. This is only three messages (in contrast to four with two unilateral messages).
Entity authentication	Entity authentication is the process whereby one party is assured (through acquisition of corroborative evidence) of the identity of a second party involved in a protocol, and that the second has actually participated (i.e., is active at, or immediately prior to, the time the evidence is acquired).
	Note: Entity authentication means to prove presence and operational readiness of a communication endpoint. This is for example often done by proving access to a cryptographic key and knowledge of a secret. It is necessary to do this without disclosing either key or secret. Entity authentication can be used to prevent record-and-replay attacks. Freshness of messages only complicates them by the need to record a lifetime and corrupt either senders or receivers (real-time) clock. Entity authentication is triggered by the receiver, i.e. the one to be convinced, while the sender has to react by convincing.
	Record and replay attacks on entity authentication are usually prevented by allowing the receiver some control over the authentication process. In order to prevent the receiver from using this control for steering the sender to malicious purposes or from determining a key or a secret ("oracle attack"), the sender can add more randomness. If not only access to a key (implying membership to a privileged group) but also individuality is to be proven, the sender additionally adds and authenticates its unique identification.
Message authentication	Message authentication is a term used analogously with data origin authentication. It provides data origin authentication with respect to the original message source (and data integrity, but no uniqueness and timeliness guarantees).
Secured I-PDU	A Secured I-PDU is an AUTOSAR I-PDU that contains Payload of an Authentic I-PDU supplemented by additional Authentication Information.
Transaction authentication	Transaction authentication denotes message authentication augmented to additionally provide uniqueness and timeliness guarantees on data (thus preventing undetectable message replay).



3 Related documentation

3.1 Input documents

- [1] AUTOSAR Layered Software Architecture AUTOSAR_EXP_LayeredSoftwareArchitecture.pdf
- [2] AUTOSAR General Requirements on Basic Software Modules AUTOSAR_SRS_BSWGeneral.pdf
- [3] AUTOSAR General Specification for Basic Software Modules AUTOSAR_SWS_BSWGeneral.pdf
- [4] Specification of Communication AUTOSAR_SWS_COM - Specification of Communication
- [5] AUTOSAR SecOC Software Requirements Specification AUTOSAR_SRS_SecureOnboardCommunication.pdf
- [6] Specification of I-PDU Multiplexer AUTOSAR_SWS_I-PDUMultiplexer.pdf
- [7] Specification of PDU Router AUTOSAR_SWS_PduRouter.pdf
- [8] Specification of Crypt Service Manager AUTOSAR_SWS_CryptoServiceManager.pdf
- [9] System Template, https://svn3.autosar.org/repos2/work/24 Sources/branches/R4.0/TPS SystemTemplate.pdf
- [10] Software Component Template, https://svn3.autosar.org/repos2/work/24_Sources/branches/R4.0/TPS_SoftwareComponentTemplate 062/AUTOSAR TPS SoftwareComponentTemplate.pdf
- [11] Koscher et al: Experimental Security Analysis of a Modern Automobile, 2010 IEEE Symposium on Security and Privacy
- [12] Checkoway et al: Comprehensive Experimental Analyses of Automotive Attack Surfaces, USENIX Security 2011
- [13] Auguste Kerckhoffs, 'La cryptographie militaire', Journal des sciences militaires, vol. IX, pp. 5–38, Jan. 1883, pp. 161–191, Feb. 1883.
- [14] A. J. Menezes, P. C. van Oorschot, and S. A. Vanstone. Handbook of Applied Cryptography. CRC Press, 1996.





- [15] Danny Dolev and Andrew C. Yao: On the security of public key protocols, In Foundations of Computer Science, SFCS 1981
- [16] M. Dworkin: Recommendation for Block Cipher Modes of Operation: The CMAC Mode for Authentication, U.S. Department of Commerce, Information Technology Laboratory (ITL), National Institute of Standards and Technology (NIST), Gaithersburg, MD, USA, NIST Special Publication 800-38B, 2005

3.2 Related standards and norms

- [17] IEC 7498-1 The Basic Model, IEC Norm, 1994
- [18] National Institute of Standards and Technology (NIST): FIPS-180-4, Secure Hash Standard (SHS), March 2012, available electronically at http://csrc.nist.gov/publications/fips/fips180-4/fips-180-4.pdf
- [19] FIPS Pub 197: Advanced Encryption Standard (AES), U.S. Department of Commerce, Information Technology Laboratory (ITL), National Institute of Standards and Technology (NIST), Gaithersburg, MD, USA, Federal Information Processing Standards Publication, 2001, electronically available at http://csrc.nist.gov/publications/fips/fips197/fips-197.pdf

3.3 Related specification

AUTOSAR provides a General Specification on Basic Software (SWS BSW General) [3], which is also valid for SecOC module

Thus, the SWS BSW General specification [3] shall be considered as an additional set of requirements for the AUTOSAR SecOC module.



4 Constraints and assumptions

This document is applicable for AUTOSAR release 4.3.

4.1 Applicability to car domains

The SecOC module is used in all ECUs where secure communication is necessary.

The SecOC module has not been specified to work with MOST and LIN communication networks. With MOST not being specifically supported, the applicability to multimedia and telematic car domains may be limited.



5 Dependencies to other modules

This chapter lists all the features from other modules that are used by the AUTOSAR SecOC module and functionalities that are provided by the AUTOSAR SecOC module to other modules. Because the SecOC module deals with I-PDUs that are either sourced or sunk by other modules, care should be taken that shared configuration items are consistent between the modules.

5.1 Dependencies to PduR

The SecOC module depends on the API and capabilities of the PduR. It provides the upper and lower layer API functions required by the PDU Router, namely

- the API of the communication interface modules,
- the API of the Transport Protocol Modules,
- the API of the upper layer modules which use transport protocol modules,
- the API of the upper layer modules which process I-PDUs originating from communication interface modules.

To serve the PduR with the results of the security processing, the SecOC module requires the respective API function of the PduR.

5.2 Dependencies to CSM

The SecOC module depends on cryptographic algorithms that are provided in AUTOSAR by the CSM module. The SecOC module requires API functions to generate and verify Cryptographic Signatures or Message Authentication Codes, namely

- the MAC-generate interface (Csm MacGenerate),
- the MAC-verify interface (Csm_MacVerify),
- the Signature-generate interface (Csm_SignatureGenerate),
- the Signature-verify interface (Csm_SignatureVerify),
- the key management Interface (Csm_KeyElementSet and Csm_KeySetValid)

5.3 Dependencies to the RTE

The SecOC module provides an API with management functions. This API contains the following API functions that are provided as Service Interfaces by the RTE.

- SecOC AssociateKey,
- SecOC_VerificationStatus,
- SecOC VerifyStatusOverride.

The API functions are specified in more detail in Section 8.

The Rte includes the BSW-Scheduler. The SecOC module relies on the BSW-scheduler calling the functions SecOC_MainFunctionRx and



SecOC_MainFunctionTx at a period as configured in SecOCMainFunctionPeriodRx and SecOCMainFunctionPeriodTx.

5.4 File structure

5.4.1 Header file structure

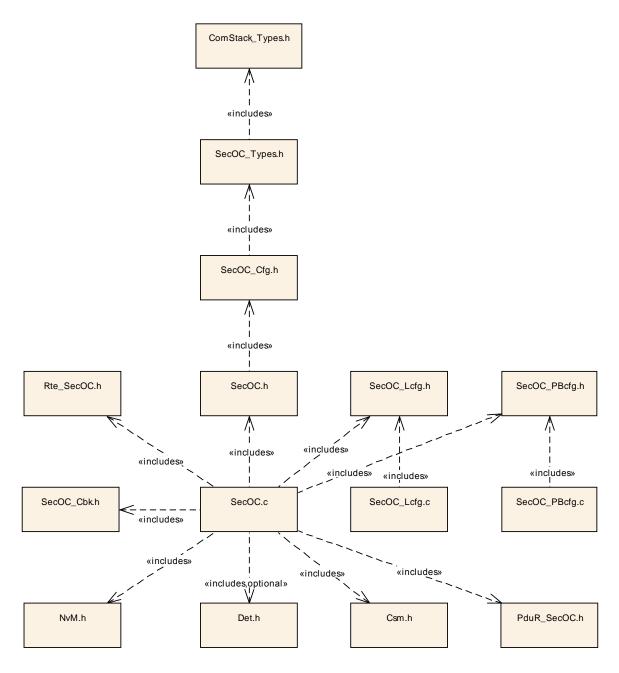


Figure 2: SecOC header file structure

[SWS_SecOC_00001][

General SecOC module definitions shall be defined in SecOC.h.



| (SRS_BSW_00348, SRS_BSW_00353, SRS_BSW_00381, SRS_BSW_00415)

[SWS_SecOC_00002][

Type definitions of the SecOC module shall be defined in SecOC_Types.h. J (SRS_BSW_00348, SRS_BSW_00353, SRS_BSW_00381, SRS_BSW_00415)



6 Requirements traceability

The following table references the requirements specified in [3] and [5] and links to the fulfillment of these.

Requirement	Description	Satisfied by
SRS_BSW_00003	All software modules shall provide version and identification information	SWS_SecOC_00107
SRS_BSW_00004	All Basic SW Modules shall perform a pre-processor check of the versions of all imported include files	SWS_SecOC_00999
SRS_BSW_00005	Modules of the μC Abstraction Layer (MCAL) may not have hard coded horizontal interfaces	SWS_SecOC_00999
SRS_BSW_00006	The source code of software modules above the μ C Abstraction Layer (MCAL) shall not be processor and compiler dependent.	SWS_SecOC_00999
SRS_BSW_00007	All Basic SW Modules written in C language shall conform to the MISRA C 2012 Standard.	SWS_SecOC_00999
SRS_BSW_00009	All Basic SW Modules shall be documented according to a common standard.	SWS_SecOC_00999
SRS_BSW_00010	The memory consumption of all Basic SW Modules shall be documented for a defined configuration for all supported platforms.	SWS_SecOC_00999
SRS_BSW_00101	The Basic Software Module shall be able to initialize variables and hardware in a separate initialization function	SWS_SecOC_00106
SRS_BSW_00158	All modules of the AUTOSAR Basic Software shall strictly separate configuration from implementation	SWS_SecOC_00999
SRS_BSW_00160	Configuration files of AUTOSAR Basic SW module shall be readable for human beings	SWS_SecOC_00999
SRS_BSW_00161	The AUTOSAR Basic Software shall provide a microcontroller abstraction layer which provides a standardized interface to higher software layers	SWS_SecOC_00999
SRS_BSW_00162	The AUTOSAR Basic Software shall provide a hardware abstraction layer	SWS_SecOC_00999
SRS_BSW_00164	The Implementation of interrupt service routines shall be done by the Operating System, complex drivers or modules	SWS_SecOC_00999
SRS_BSW_00167	All AUTOSAR Basic Software Modules shall provide configuration rules and constraints to enable plausibility checks	SWS_SecOC_00999
SRS_BSW_00168	SW components shall be tested by a function defined in a common API in the Basis-SW	SWS_SecOC_00999
SRS_BSW_00170	The AUTOSAR SW Components shall provide information about their dependency from faults, signal qualities, driver demands	SWS_SecOC_00999
SRS_BSW_00171	Optional functionality of a Basic-SW component that is not required in the ECU shall be configurable at precompile-time	SWS_SecOC_00153
SRS_BSW_00172	The scheduling strategy that is built inside the Basic	SWS_SecOC_00999



	Software Modules shall be compatible with the strategy used in the system	
SRS_BSW_00300	All AUTOSAR Basic Software Modules shall be identified by an unambiguous name	SWS_SecOC_00999
SRS_BSW_00301	All AUTOSAR Basic Software Modules shall only import the necessary information	SWS_SecOC_00103
SRS_BSW_00302	All AUTOSAR Basic Software Modules shall only export information needed by other modules	SWS_SecOC_00999
SRS_BSW_00304	All AUTOSAR Basic Software Modules shall use the following data types instead of native C data types	SWS_SecOC_00999
SRS_BSW_00305	Data types naming convention	SWS_SecOC_00999
SRS_BSW_00306	AUTOSAR Basic Software Modules shall be compiler and platform independent	SWS_SecOC_00999
SRS_BSW_00307	Global variables naming convention	SWS_SecOC_00999
SRS_BSW_00308	AUTOSAR Basic Software Modules shall not define global data in their header files, but in the C file	SWS_SecOC_00999
SRS_BSW_00309	All AUTOSAR Basic Software Modules shall indicate all global data with read-only purposes by explicitly assigning the const keyword	SWS_SecOC_00999
SRS_BSW_00310	API naming convention	SWS_SecOC_00999
SRS_BSW_00312	Shared code shall be reentrant	SWS_SecOC_00999
SRS_BSW_00314	All internal driver modules shall separate the interrupt frame definition from the service routine	SWS_SecOC_00999
SRS_BSW_00318	Each AUTOSAR Basic Software Module file shall provide version numbers in the header file	SWS_SecOC_00999
SRS_BSW_00321	The version numbers of AUTOSAR Basic Software Modules shall be enumerated according specific rules	SWS_SecOC_00999
SRS_BSW_00323	All AUTOSAR Basic Software Modules shall check passed API parameters for validity	SWS_SecOC_00106, SWS_SecOC_00107, SWS_SecOC_00112, SWS_SecOC_00113, SWS_SecOC_00116, SWS_SecOC_00117, SWS_SecOC_00118, SWS_SecOC_00122, SWS_SecOC_00124, SWS_SecOC_00125, SWS_SecOC_00125, SWS_SecOC_00126, SWS_SecOC_00127, SWS_SecOC_00127, SWS_SecOC_00128, SWS_SecOC_00129, SWS_SecOC_00152, SWS_SecOC_00152, SWS_SecOC_00157, SWS_SecOC_00161, SWS_SecOC_91008, SWS_SecOC_91009
SRS_BSW_00325	The runtime of interrupt service routines and functions that are running in interrupt context shall be kept short	SWS_SecOC_00999
SRS_BSW_00327	Error values naming convention	SWS_SecOC_00999



CDC DOW COOO	All ALITOCAD Dagie Cofficers Madulas aball social dis	CMC COC 00000
SRS_BSW_00328	All AUTOSAR Basic Software Modules shall avoid the duplication of code	SWS_SecOC_00999
SRS_BSW_00330	It shall be allowed to use macros instead of functions where source code is used and runtime is critical	SWS_SecOC_00999
SRS_BSW_00331	All Basic Software Modules shall strictly separate error and status information	SWS_SecOC_00999
SRS_BSW_00333	For each callback function it shall be specified if it is called from interrupt context or not	SWS_SecOC_00999
SRS_BSW_00334	All Basic Software Modules shall provide an XML file that contains the meta data	SWS_SecOC_00999
SRS_BSW_00335	Status values naming convention	SWS_SecOC_00999
SRS_BSW_00336	Basic SW module shall be able to shutdown	SWS_SecOC_00999
SRS_BSW_00337	Classification of development errors	SWS_SecOC_00101, SWS_SecOC_00102, SWS_SecOC_00164, SWS_SecOC_00166
SRS_BSW_00339	Reporting of production relevant error status	SWS_SecOC_00999
SRS_BSW_00341	Module documentation shall contains all needed informations	SWS_SecOC_00999
SRS_BSW_00342	It shall be possible to create an AUTOSAR ECU out of modules provided as source code and modules provided as object code, even mixed	SWS_SecOC_00999
SRS_BSW_00343	The unit of time for specification and configuration of Basic SW modules shall be preferably in physical time unit	SWS_SecOC_00999
SRS_BSW_00346	All AUTOSAR Basic Software Modules shall provide at least a basic set of module files	SWS_SecOC_00999
SRS_BSW_00347	A Naming seperation of different instances of BSW drivers shall be in place	SWS_SecOC_00999
SRS_BSW_00348	All AUTOSAR standard types and constants shall be placed and organized in a standard type header file	SWS_SecOC_00001, SWS_SecOC_00002
SRS_BSW_00350	All AUTOSAR Basic Software Modules shall allow the enabling/disabling of detection and reporting of development errors.	SWS_SecOC_00102, SWS_SecOC_00164, SWS_SecOC_00166
SRS_BSW_00353	All integer type definitions of target and compiler specific scope shall be placed and organized in a single type header	SWS_SecOC_00001, SWS_SecOC_00002
SRS_BSW_00357	For success/failure of an API call a standard return type shall be defined	SWS_SecOC_00112, SWS_SecOC_00113, SWS_SecOC_00116, SWS_SecOC_00117, SWS_SecOC_00118, SWS_SecOC_00122, SWS_SecOC_00127, SWS_SecOC_00128, SWS_SecOC_00129, SWS_SecOC_00130, SWS_SecOC_91008, SWS_SecOC_91009
SRS_BSW_00358	The return type of init() functions implemented by	SWS_SecOC_00106



	AUTOSAR Basic Software Modules shall be void	
SRS_BSW_00359	All AUTOSAR Basic Software Modules callback functions shall avoid return types other than void if possible	SWS_SecOC_00106, SWS_SecOC_00107, SWS_SecOC_00119, SWS_SecOC_00124, SWS_SecOC_00125, SWS_SecOC_00126, SWS_SecOC_00152, SWS_SecOC_00161
SRS_BSW_00360	AUTOSAR Basic Software Modules callback functions are allowed to have parameters	SWS_SecOC_00999
SRS_BSW_00361	All mappings of not standardized keywords of compiler specific scope shall be placed and organized in a compiler specific type and keyword header	SWS_SecOC_00999
SRS_BSW_00369	All AUTOSAR Basic Software Modules shall not return specific development error codes via the API	SWS_SecOC_00107, SWS_SecOC_00112, SWS_SecOC_91008
SRS_BSW_00371	The passing of function pointers as API parameter is forbidden for all AUTOSAR Basic Software Modules	SWS_SecOC_00999
SRS_BSW_00373	The main processing function of each AUTOSAR Basic Software Module shall be named according the defined convention	SWS_SecOC_00171, SWS_SecOC_00176
SRS_BSW_00374	All Basic Software Modules shall provide a readable module vendor identification	SWS_SecOC_00999
SRS_BSW_00375	Basic Software Modules shall report wake-up reasons	SWS_SecOC_00999
SRS_BSW_00377	A Basic Software Module can return a module specific types	SWS_SecOC_00999
SRS_BSW_00378	AUTOSAR shall provide a boolean type	SWS_SecOC_00999
SRS_BSW_00379	All software modules shall provide a module identifier in the header file and in the module XML description file.	SWS_SecOC_00999
SRS_BSW_00380	Configuration parameters being stored in memory shall be placed into separate c-files	SWS_SecOC_00999
SRS_BSW_00381	The pre-compile time parameters shall be placed into a separate configuration header file	SWS_SecOC_00001, SWS_SecOC_00002
SRS_BSW_00383	The Basic Software Module specifications shall specify which other configuration files from other modules they use at least in the description	SWS_SecOC_00999
SRS_BSW_00384	The Basic Software Module specifications shall specify at least in the description which other modules they require	SWS_SecOC_00137, SWS_SecOC_00138
SRS_BSW_00385	List possible error notifications	SWS_SecOC_00077, SWS_SecOC_00089, SWS_SecOC_00101, SWS_SecOC_00102, SWS_SecOC_00108, SWS_SecOC_00121, SWS_SecOC_00151, SWS_SecOC_00155, SWS_SecOC_00164,



	1	
	SWS_SecOC_00166, SWS_SecOC_00213	
The BSW shall specify the configuration for detecting an error		
Containers shall be used to group configuration parameters that are defined for the same object	SWS_SecOC_00999	
Containers shall have names	SWS_SecOC_00999	
Parameter content shall be unique within the module	SWS_SecOC_00999	
Parameters shall have a type	SWS_SecOC_00999	
Parameters shall have a range	SWS_SecOC_00999	
The Basic Software Module specifications shall specify the scope of the configuration parameters	SWS_SecOC_00999	
The Basic Software Module specifications shall list all configuration parameter dependencies	SWS_SecOC_00999	
The Basic Software Module specifications shall specify the supported configuration classes for changing values and multiplicities for each parameter/container	SWS_SecOC_00999	
The configuration parameters in pre-compile time are fixed before compilation starts	SWS_SecOC_00999	
The link-time configuration is achieved on object code basis in the stage after compiling and before linking	SWS_SecOC_00999	
Parameter-sets shall be located in a separate segment and shall be loaded after the code	SWS_SecOC_00999	
Parameter shall be selected from multiple sets of parameters after code has been loaded and started	SWS_SecOC_00999	
Documentation of multiple instances of configuration parameters shall be available	SWS_SecOC_00999	
Each module shall provide version information	SWS_SecOC_00107	
BSW Modules shall support multiple configuration sets	SWS_SecOC_00999	
A static status variable denoting if a BSW module is initialized shall be initialized with value 0 before any APIs of the BSW module is called	SWS_SecOC_00999	
Each BSW module shall provide a function to read out the version information of a dedicated module implementation	SWS_SecOC_00107	
All AUTOSAR Basic Software Modules configuration parameters shall be named according to a specific naming rule	SWS_SecOC_00999	
All production code error ID symbols are defined by the Dem module and shall be retrieved by the other BSW modules from Dem configuration	SWS_SecOC_00999	
Compiler switches shall have defined values	SWS_SecOC_00999	
All AUTOSAR Basic Software Modules shall apply a naming rule for enabling/disabling the existence of the API	SWS_SecOC_00999	
References to c-configuration parameters shall be placed into a separate h-file	SWS_SecOC_00999	
	an error Containers shall be used to group configuration parameters that are defined for the same object Containers shall have names Parameter content shall be unique within the module Parameters shall have a type Parameters shall have a range The Basic Software Module specifications shall specify the scope of the configuration parameters The Basic Software Module specifications shall list all configuration parameter dependencies The Basic Software Module specifications shall specify the supported configuration classes for changing values and multiplicities for each parameter/container The configuration parameters in pre-compile time are fixed before compilation starts The link-time configuration is achieved on object code basis in the stage after compiling and before linking Parameter-sets shall be located in a separate segment and shall be loaded after the code Parameter shall be selected from multiple sets of parameters after code has been loaded and started Documentation of multiple instances of configuration parameters shall be available Each module shall provide version information BSW Modules shall support multiple configuration sets A static status variable denoting if a BSW module is initialized shall be initialized with value 0 before any APIs of the BSW module is called Each BSW module shall provide a function to read out the version information All AUTOSAR Basic Software Modules configuration parameters shall be named according to a specific naming rule All production code error ID symbols are defined by the Dem module and shall be retrieved by the other BSW modules from Dem configuration Compiler switches shall have defined values All AUTOSAR Basic Software Modules shall apply a naming rule for enabling/disabling the existence of the API References to c-configuration parameters shall be	




An index-based accessing of the instances of BSW modules shall be done	SWS_SecOC_00999	
Init functions shall have a pointer to a configuration structure as single parameter	on SWS_SecOC_00106	
Interfaces which are provided exclusively for one module shall be separated into a dedicated header file	SWS_SecOC_00001, SWS_SecOC_00002	
The sequence of modules to be initialized shall be configurable SWS_SecO		
Software which is not part of the SW-C shall report error events only after the DEM is fully operational.	SWS_SecOC_00999	
If a pre-compile time configuration parameter is implemented as "const" it should be placed into a separate c-file	SWS_SecOC_00999	
Pre-de-bouncing of error status information is done within the DEM	SWS_SecOC_00999	
BSW modules with AUTOSAR interfaces shall be describable with the means of the SW-C Template	SWS_SecOC_00999	
BSW module main processing functions shall not be allowed to enter a wait state	SWS_SecOC_00999	
The BSW module description template shall provide means to model the defined trigger conditions of schedulable objects	SWS_SecOC_00171, SWS_SecOC_00176	
BSW Modules shall ensure data consistency of data which is shared between BSW modules	SWS_SecOC_00110, SWS_SecOC_00111	
ISR functions shall be defined and documented in the BSW module description template	SWS_SecOC_00999	
A BSW module shall state if its main processing function(s) has to be executed in a specific order or sequence	SWS_SecOC_00999	
BSW modules shall be only allowed to use OS objects and/or related OS services	SWS_SecOC_00999	
Modules should have separate main processing functions for read/receive and write/transmit data path	SWS_SecOC_00999	
Main processing functions are only allowed to be called from task bodies provided by the BSW Scheduler	SWS_SecOC_00999	
Memory mapping shall provide the possibility to define RAM segments which are not to be initialized during startup	SWS_SecOC_00999	
Configuration data shall be defined in a structure	SWS_SecOC_00999	
Enable BSW modules to handle interrupts	SWS_SecOC_00999	
The callback function invocation by the BSW module shall follow the signature provided by RTE to invoke servers via Rte_Call API	SWS_SecOC_00999	
Naming convention for type, macro and function	SWS_SecOC_00999	
Standardizing Include file structure of BSW Modules Implementing Autosar Service	SWS_SecOC_00999	
Module SWS shall not contain requirements from Other	SWS_SecOC_00999	
	Init functions shall have a pointer to a configuration structure as single parameter Interfaces which are provided exclusively for one module shall be separated into a dedicated header file. The sequence of modules to be initialized shall be configurable Software which is not part of the SW-C shall report error events only after the DEM is fully operational. If a pre-compile time configuration parameter is implemented as "const" it should be placed into a separate c-file Pre-de-bouncing of error status information is done within the DEM BSW modules with AUTOSAR interfaces shall be describable with the means of the SW-C Template BSW module main processing functions shall not be allowed to enter a wait state The BSW module description template shall provide means to model the defined trigger conditions of schedulable objects BSW Modules shall ensure data consistency of data which is shared between BSW modules ISR functions shall be defined and documented in the BSW module description template A BSW module shall state if its main processing function(s) has to be executed in a specific order or sequence BSW modules shall be only allowed to use OS objects and/or related OS services Modules should have separate main processing functions for read/receive and write/transmit data path Main processing functions are only allowed to be called from task bodies provided by the BSW Scheduler Memory mapping shall provide the possibility to define RAM segments which are not to be initialized during startup Configuration data shall be defined in a structure Enable BSW modules to handle interrupts The callback function invocation by the BSW module shall follow the signature provided by RTE to invoke servers via Rte_Call API Naming convention for type, macro and function Standardizing Include file structure of BSW Modules Implementing Autosar Service	



SRS_BSW_00449	BSW Service APIs used by Autosar Application	SWS_SecOC_00112,
	Software shall return a Std_ReturnType	SWS_SecOC_00113,
		SWS_SecOC_00116, SWS_SecOC_00117,
		SWS_SecOC_00118,
		SWS_SecOC_00122,
		SWS_SecOC_00125,
		SWS_SecOC_00127,
		SWS_SecOC_00152, SWS_SecOC_91008,
		SWS_SecOC_91009
SRS_BSW_00450	A Main function of a un-initialized module shall return immediately	SWS_SecOC_00102
SRS_BSW_00451	Hardware registers shall be protected if concurrent access to these registers occur	SWS_SecOC_00999
SRS_BSW_00452	Classification of runtime errors	SWS_SecOC_00999
SRS_BSW_00453	BSW Modules shall be harmonized	SWS_SecOC_00999
SRS_BSW_00454	An alternative interface without a parameter of category DATA_REFERENCE shall be available.	SWS_SecOC_00999
SRS_BSW_00456	- A Header file shall be defined in order to harmonize BSW Modules	SWS_SecOC_00999
SRS_BSW_00457	- Callback functions of Application software components shall be invoked by the Basis SW	SWS_SecOC_00012
SRS_BSW_00458	Classification of production errors	SWS_SecOC_00999
SRS_BSW_00459	It shall be possible to concurrently execute a service offered by a BSW module in different partitions	SWS_SecOC_00999
SRS_BSW_00460	Reentrancy Levels	SWS_SecOC_00999
SRS_BSW_00461	Modules called by generic modules shall satisfy all interfaces requested by the generic module	SWS_SecOC_00999
SRS_BSW_00462	All Standardized Autosar Interfaces shall have unique requirement Id / number	SWS_SecOC_00999
SRS_BSW_00463	Naming convention of callout prototypes	SWS_SecOC_00999
SRS_BSW_00464	File names shall be considered case sensitive regardless of the filesystem in which they are used	SWS_SecOC_00999
SRS_BSW_00465	It shall not be allowed to name any two files so that they only differ by the cases of their letters	SWS_SecOC_00999
SRS_BSW_00466	Classification of extended production errors	SWS_SecOC_00999
SRS_BSW_00467	The init / deinit services shall only be called by BswM or EcuM	SWS_SecOC_00999
SRS_BSW_00469	Fault detection and healing of production errors and extended production errors	SWS_SecOC_00999
SRS_BSW_00470	Execution frequency of production error detection	SWS_SecOC_00999
SRS_BSW_00471	Do not cause dead-locks on detection of production errors - the ability to heal from previously detected production errors	SWS_SecOC_00999
SRS_BSW_00472	Avoid detection of two production errors with the same root cause.	SWS_SecOC_00999
SRS_SecOC_00001	Selection of Authentic I-PDU	SWS_SecOC_00104




	[open/proposed/conflicts/approved/rejected]	
SRS_SECOC_00002	-	SWS_SecOC_91005
SRS_SecOC_00002	Range of verification retry by the receiver [open/proposed/conflicts/approved/rejected]	SWS_SecOC_00047, SWS_SecOC_00049, SWS_SecOC_00094, SWS_SecOC_00117, SWS_SecOC_00118, SWS_SecOC_00140, SWS_SecOC_00232, SWS_SecOC_00233
SRS_SECOC_00003	-	SWS_SecOC_91001, SWS_SecOC_91002, SWS_SecOC_91003, SWS_SecOC_91004, SWS_SecOC_91005, SWS_SecOC_91006, SWS_SecOC_91007, SWS_SecOC_91012
SRS_SecOC_00003	Configuration of different security properties / requirements [open/proposed/conflicts/approved/rejected]	SWS_SecOC_00012, SWS_SecOC_00104, SWS_SecOC_00116, SWS_SecOC_00139, SWS_SecOC_00190, SWS_SecOC_00191, SWS_SecOC_00192, SWS_SecOC_00193, SWS_SecOC_00194, SWS_SecOC_00230, SWS_SecOC_00231, SWS_SecOC_00231, SWS_SecOC_00244, SWS_SecOC_00244, SWS_SecOC_00245, SWS_SecOC_00246, SWS_SecOC_00247, SWS_SecOC_00249, SWS_SecOC_00250
SRS_SecOC_00005	Initialisation of security information [open/proposed/conflicts/approved/rejected]	SWS_SecOC_00054, SWS_SecOC_00105, SWS_SecOC_00154, SWS_SecOC_00162, SWS_SecOC_00172, SWS_SecOC_00177, SWS_SecOC_00226, SWS_SecOC_00235
SRS_SECOC_00006	-	SWS_SecOC_91003, SWS_SecOC_91004
SRS_SecOC_00006	Creation of a Secured I-PDU from an Authentic I-PDU [open/proposed/conflicts/approved/rejected]	SWS_SecOC_00011, SWS_SecOC_00031, SWS_SecOC_00033, SWS_SecOC_00034, SWS_SecOC_00035, SWS_SecOC_00036, SWS_SecOC_00037, SWS_SecOC_00040, SWS_SecOC_00042, SWS_SecOC_00046,





		SWS_SecOC_00057, SWS_SecOC_00058, SWS_SecOC_00106, SWS_SecOC_00146, SWS_SecOC_00157, SWS_SecOC_00161, SWS_SecOC_00219, SWS_SecOC_00230, SWS_SecOC_00231, SWS_SecOC_00243
SRS_SecOC_00007	Verification retry by the receiver [open/proposed/conflicts/approved/rejected]	SWS_SecOC_00047, SWS_SecOC_00049, SWS_SecOC_00094, SWS_SecOC_00234, SWS_SecOC_00235, SWS_SecOC_00236, SWS_SecOC_00237, SWS_SecOC_00238, SWS_SecOC_00239, SWS_SecOC_00240, SWS_SecOC_00241, SWS_SecOC_00242, SWS_SecOC_00243
SRS_SecOC_00010	Communication security is available for all communication paradigms of AUTOSAR [open/proposed/conflicts/approved/rejected]	SWS_SecOC_00060, SWS_SecOC_00061, SWS_SecOC_00062, SWS_SecOC_00063, SWS_SecOC_00064, SWS_SecOC_00065, SWS_SecOC_00066, SWS_SecOC_00066, SWS_SecOC_00068, SWS_SecOC_00069, SWS_SecOC_00070, SWS_SecOC_00071, SWS_SecOC_00071, SWS_SecOC_00072, SWS_SecOC_00073, SWS_SecOC_00074, SWS_SecOC_00075, SWS_SecOC_00075, SWS_SecOC_00078, SWS_SecOC_00078, SWS_SecOC_00078, SWS_SecOC_00080, SWS_SecOC_00081, SWS_SecOC_00081, SWS_SecOC_00082, SWS_SecOC_00083, SWS_SecOC_00084, SWS_SecOC_00086, SWS_SecOC_00086, SWS_SecOC_00088, SWS_SecOC_00150
SRS_SecOC_00012	Support of Automotive BUS Systems [open/proposed/conflicts/approved/rejected]	SWS_SecOC_00060, SWS_SecOC_00061, SWS_SecOC_00062, SWS_SecOC_00063, SWS_SecOC_00064, SWS_SecOC_00065, SWS_SecOC_00066, SWS_SecOC_00067,





SRS_SecOC_00013	Support for end-to-end and point-to-point protection	SWS_SecOC_00068, SWS_SecOC_00069, SWS_SecOC_00070, SWS_SecOC_00071, SWS_SecOC_00072, SWS_SecOC_00073, SWS_SecOC_00074, SWS_SecOC_00074, SWS_SecOC_00075, SWS_SecOC_00078, SWS_SecOC_00079, SWS_SecOC_00080, SWS_SecOC_00081, SWS_SecOC_00081, SWS_SecOC_00083, SWS_SecOC_00084, SWS_SecOC_00084, SWS_SecOC_00085, SWS_SecOC_00086, SWS_SecOC_00124, SWS_SecOC_00124, SWS_SecOC_00125, SWS_SecOC_00125, SWS_SecOC_00125, SWS_SecOC_00126, SWS_SecOC_00127, SWS_SecOC_00128, SWS_SecOC_00128, SWS_SecOC_00129, SWS_SecOC_00150, SWS_SecOC_00150, SWS_SecOC_00150, SWS_SecOC_00150, SWS_SecOC_00150, SWS_SecOC_00161, SWS_SecOC_00164, SWS_SecOC_00164, SWS_SecOC_00066, SWS_SecOC_00066, SWS_SecOC_00067, SWS_SecOC_00067, SWS_SecOC_00067, SWS_SecOC_00067, SWS_SecOC_00068, SWS_SecOC_00071, SWS_SecOC_00072, SWS_SecOC_00073, SWS_SecOC_00074, SWS_SecOC_00075, SWS_SecOC_00077, SWS_SecOC_00081, SWS_SecOC_00081, SWS_SecOC_00083, SWS_SecOC_00083, SWS_SecOC_00084, SWS_SecOC_00083, SWS_SecOC_00084, SWS_SecOC_00084, SWS_SecOC_00083, SWS_SecOC_00083, SWS_SecOC_00084, SWS_SecOC_00084, SWS_SecOC_00088, SWS_SE
SRS_SecOC_00017	PDU security information override [open/proposed/conflicts/approved/rejected]	SWS_SecOC_00085, SWS_SecOC_00086, SWS_SecOC_00150 SWS_SecOC_00119, SWS_SecOC_00122, SWS_SecOC_00142



	<u> </u>	
SRS_SecOC_00020	Security operational information persistency[open/proposed/conflicts/approved/rejected]	SWS_SecOC_00161
SRS_SECOC_00021	-	SWS_SecOC_91002, SWS_SecOC_91012
SRS_SecOC_00021	Transmitted PDU authentication failure handling [open/proposed/conflicts/approved/rejected]	SWS_SecOC_00076, SWS_SecOC_00087, SWS_SecOC_00151, SWS_SecOC_00214, SWS_SecOC_00215, SWS_SecOC_00216, SWS_SecOC_00217, SWS_SecOC_00218, SWS_SecOC_00225, SWS_SecOC_00225, SWS_SecOC_00227, SWS_SecOC_00228, SWS_SecOC_00229
SRS_SECOC_00022	-	SWS_SecOC_91002, SWS_SecOC_91012
SRS_SecOC_00022	Received PDU verification failure handling[open/proposed/conflicts/approved/rejected]	SWS_SecOC_00047, SWS_SecOC_00048, SWS_SecOC_00050, SWS_SecOC_00087, SWS_SecOC_00121, SWS_SecOC_00141, SWS_SecOC_00148, SWS_SecOC_00149, SWS_SecOC_00160, SWS_SecOC_00214, SWS_SecOC_00215, SWS_SecOC_00216, SWS_SecOC_00236, SWS_SecOC_00237, SWS_SecOC_00238, SWS_SecOC_00238, SWS_SecOC_00239, SWS_SecOC_00240, SWS_SecOC_00241, SWS_SecOC_00241, SWS_SecOC_00251
SRS_SecOC_00025	Authentication and verification processing time [open/proposed/conflicts/approved/rejected]	SWS_SecOC_00173, SWS_SecOC_00174, SWS_SecOC_00175, SWS_SecOC_00178, SWS_SecOC_00179, SWS_SecOC_00180
SRS_SecOC_00026	Capability to transmit data and authentication information separately	SWS_SecOC_00201, SWS_SecOC_00202, SWS_SecOC_00203, SWS_SecOC_00204, SWS_SecOC_00205, SWS_SecOC_00206, SWS_SecOC_00207, SWS_SecOC_00208
SRS_SecOC_00028	Properly match up data and authentication information when verifying	SWS_SecOC_00203, SWS_SecOC_00209, SWS_SecOC_00210,



		SWS_SecOC_00211
SRS_SecOC_00029	Flexible freshness construction [open/proposed/conflicts/approved/rejected]	SWS_SecOC_00219, SWS_SecOC_00220, SWS_SecOC_00221, SWS_SecOC_00222, SWS_SecOC_00223, SWS_SecOC_00224, SWS_SecOC_00224, SWS_SecOC_00225, SWS_SecOC_00226, SWS_SecOC_00227, SWS_SecOC_00228, SWS_SecOC_00228, SWS_SecOC_00229, SWS_SecOC_00230, SWS_SecOC_00231, SWS_SecOC_00231, SWS_SecOC_00232, SWS_SecOC_00233, SWS_SecOC_00234, SWS_SecOC_00235, SWS_SecOC_00236, SWS_SecOC_00237, SWS_SecOC_00237, SWS_SecOC_00238, SWS_SecOC_00238, SWS_SecOC_00241, SWS_SecOC_00241, SWS_SecOC_00242, SWS_SecOC_00244, SWS_SecOC_00244, SWS_SecOC_00244, SWS_SecOC_00244, SWS_SecOC_00244, SWS_SecOC_00244, SWS_SecOC_00244, SWS_SecOC_00244, SWS_SecOC_00244, SWS_SecOC_00246, SWS_SecOC_00247, SWS_SecOC_00248, SWS_SecOC_00249, SWS_SecOC_00250, SWS_SecOC_00251
SWS_BSW_00242	Access to Meta Data	SWS_SecOC_00212



7 Functional specification

Authentication and integrity protection of sensitive data is necessary to protect correct and safe functionality of the vehicle systems – this ensures that received data comes from the right ECU and has the correct value.

The SecOC module aims for resource-efficient and practicable authentication mechanisms of sensitive data on the level of PDUs. The approach proposed in this specification generally supports the use of symmetric and asymmetric methods for authenticity and integrity protection. Both methods roughly aim at the same goal and show major similarities in the concept, but there are also some differences due to differing technical properties of the underlying primitives. In addition, the commonly used terms for Authenticator are different. In general, the term Message Authentication Code (MAC) is used for symmetric approaches while the term signature or digital signature refers to asymmetric approaches having different properties and constraints.

In order to ease presentation and improve legibility, the following approach is taken: The subsequent section describes the technical approach using symmetric mechanisms in some detail. Here also the common terms for symmetric primitives are used. The adaptations that need to be done in case of an asymmetric approach are separately given in section 7.1.4.

7.1 Specification of the security solution

The SecOC module as described in this document provides functionality necessary to verify the authenticity and freshness of PDU based communication between ECUs within the vehicle architecture. The approach requires both the sending ECU and the receiving ECU to implement a SecOC module. Both SecOC modules are integrated providing the upper and lower layer PduR APIs on the sender and receiver side. The SecOC modules on both sides generally interact with the PduR module.

To provide message freshness, the SecOC module on the sending and receiving side get freshness from an external Freshness Manager for each uniquely identifiable Secured I-PDU, i.e. for each secured communication link.

On the sender side, the SecOC module creates a Secured I-PDU by adding authentication information to the outgoing Authentic I-PDU. The authentication information comprises of an Authenticator (e.g. Message Authentication Code) and optionally a Freshness Value. Regardless if the Freshness Value is or is not included in the Secure I-PDU payload, the Freshness Value is considered during generation of the Authenticator. When using a Freshness Counter instead of a Timestamp, the Freshness Counter should be incremented by the Freshness Manager prior to providing the authentication information to the receiver side.

On the receiver side, the SecOC module checks the freshness and authenticity of the Authentic I-PDU by verifying the authentication information that has been appended by the sending side SecOC module. To verify the authenticity and freshness of an Authentic I-PDU, the Secured I-PDU provided to the receiving side SecOC should be



the same Secured I-PDU provided by the sending side SecOC and the receiving side SecOC should have knowledge of the Freshness Value used by the sending side SecOC during creation of the Authenticator.

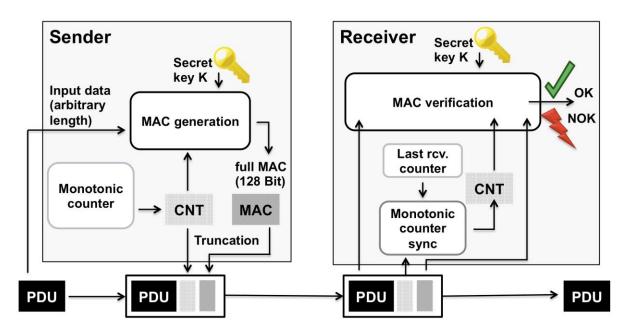


Figure 3: Message Authentication and Freshness Verification

The main purpose of the SecOC module is the realization of the security functionality described throughout this specification.

7.1.1 Basic entities of the security solution

7.1.1.1 Authentic I-PDU and Secured I-PDU

The term Authentic I-PDU refers to an AUTOSAR I-PDU that requires protection against unauthorized manipulation and replay attacks.

The payload of a Secured I-PDU consists of the Authentic I-PDU and an Authenticator (e.g. Message Authentication Code). The payload of a Secured I-PDU may optionally include the Freshness Value used to create the Authenticator (e.g. MAC). The order in which the contents are structured in the Secured I-PDU is compliant with Figure 4.

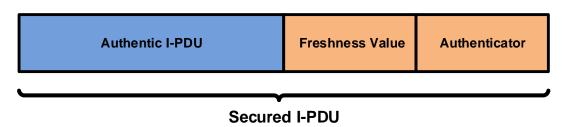


Figure 4: Secured I-PDU contents



The length of the Authentic I-PDU, the Freshness Value and the Authenticator within a Secured I-PDU may vary from one uniquely indefinable Secured I-PDU to another.

The Authenticator (e.g. MAC) refers to a unique authentication data string generated using a Key, Data Identifier of the Secured I-PDU, Authentic Payload, and Freshness Value. The Authenticator provides a high level of confidence that the data in an Authentic I-PDU is generated by a legitimate source and is provided to the receiving ECU at the time in which it is intended for.

Depending on the authentication algorithm (parameter SecOCTxAuthServiceConfigRef or SecOCRxAuthServiceConfigRef) used to generate the Authenticator, it may be possible to truncate the resulting Authenticator (e.g. in case of a MAC) generated by the authentication algorithm. Truncation may be desired when the message payload is limited in length and does not have sufficient space to include the full Authenticator.

The Authenticator length contained in a Secured I-PDU (parameter SecOCAuthInfoTxLength) is specific to a uniquely identifiable Secured I-PDU. This allows provision of flexibility across the system (i.e. two independent unique Secured I-PDUs may have different Authenticator lengths included in the payload of the Secure I-PDU) by providing fine grain configuration of the MAC truncation length for each Secured I-PDU.

If truncation is possible, the Authenticator should only be truncated down to the most significant bits of the resulting Authenticator generated by the authentication algorithm. Figure 5 shows the truncation of the Authenticator and the Freshness Values respecting the parameter SecOCFreshnessValueTxLength and SecOCAuthInfoTxLength.

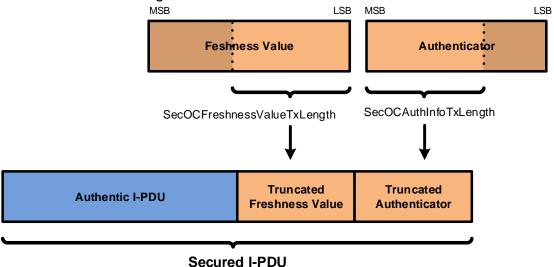


Figure 5: Secured I-PDU contents with truncated Freshness Counter and truncated Authenticator

Note: For the resource constraint embedded use case with static participants, we propose using Message Authentication Codes (MACs) as a basis for authentication (e.g. a CMAC [16] based on AES [19] with an adequate key length).



Note: In case a MAC is used, it is possible to transmit and compare only parts of the MAC. This is known as MAC truncation. However, this results in a lower security level at least for forgery of single MACs. While we propose to always use a key length of at least 128 bit, a MAC truncation can be beneficial. Of course, the actual length of the MAC for each use case has to be chosen carefully. For some guidance, we refer to appendix A of [16]. In general, MAC sizes of 64 bit and above are considered to provide sufficient protection against guessing attacks by NIST. Depending on the use case, different MAC sizes can be appropriate, but this requires careful judgment by a security expert.

[SWS_SecOC_00011][

All SecOC data (i.e. Freshness Value, Authenticator, Data Identifier) that is directly or indirectly transmitted to the other side of a communication link shall be encoded in Big Endian byte order so that each SecOC module interprets the data in the same way.

| (SRS_SecOC_00006)

7.1.1.2 Data covered by Authenticator

The data that the Authenticator is calculated on consists of the Data Identifier of the Secured I-PDU (parameter SecOCDataId), Authentic I-PDU data, and the Complete Freshness Value. The Data Identifier of the Secured I-PDU (parameter SecOCDataId), the complete Authentic I-PDU, and the complete Freshness Value are concatenated together respectively to make up the bit array that is passed into the authentication algorithm for Authenticator generation/verification.

DataToAuthenticator = Data Identifier | Authentic I-PDU | Complete Freshness Value

Note: "|" denotes concatenation

7.1.1.3 Freshness Values

Each Secured I-PDU is configured with at least one Freshness Value. The Freshness Value refers to a monotonic counter that is used to ensure freshness of the Secured I-PDU. Such a monotonic counter could be realized by means of individual message counters, called Freshness Counter, or by a time stamp value called Freshness Timestamp. Freshness Values are to be derived from a Freshness Manager.

[SWS_SecOC_00094][

If the parameter <code>SecOCFreshnessValueTxLength</code> is configured to a smaller length than the actual freshness value, <code>SecOC</code> shall include only the least significant bits of the freshness value up to <code>SecOCFreshnessValueTxLength</code> within the secured I-PDU.

If the parameter SecocFreshnessValueTxLength is configured to 0, the freshness value shall not be included in the secured I-PDU.

I (SRS SecOC 00002, SRS SecOC 00007)

Note: The larger number of bits of the complete Freshness Value included in the authenticated message payload results in a larger window where the receiver remains synchronized with the transmitters Freshness Value without executing a synchronization strategy.

Note: When including part of the Freshness Value in the authenticated message payload, the Freshness Value is referred to as two parts, the most significant bits and the least significant bits. The part of the counter included in the Secured I-PDU payload is referred to as the least significant bits of



the Freshness Value and the remaining part of the counter is referred to as the most significant bits of the Freshness Value.

[SWS_SecOC_00219][

If SecOCUseAuthDataFreshness is set to TRUE, SecOC shall use a part of the Authentic I-PDU as freshness. In this case, SecOCAuthDataFreshnessStartPosition determines the start position in bits of the freshness inside the Authentic I-PDU and SecOCAuthDataFreshnessLen determines its length in bits.

(SRS_SecOC_00006, SRS_SecOC_00029)

Note: This allows reusing existing freshness values from the payload which are guaranteed to be unique within the validity period of a Freshness Timestamp, e.g. a 4 bit E2E counter. In this case SecOC does not need to generate any additional counter values.

Example:

If SecOCUseAuthDataFreshness is set to TRUE, SecOCAuthDataFreshnessStartPosition is set to '11' and SecOCAuthDataFreshnessLen is set to '4', the following part of the PDU would be extracted:

Byte index of the PDU		f the PDU	0	1	
Start	bit	numbering	01234567	8 9 10 <mark>11 12 13 14</mark> 15	
scheme					

For a PDU "AB CD" (hex), the authentic data freshness would be "0110" (bin).

[SWS_SecOC_00220][

The Freshness Manager provides or receives freshness information in interface functions as byte arrays. The freshness is always aligned to the MSB of the first byte in the array. The 8th bit of the freshness is the MSB of the 2nd byte and so on. Unused bits of the freshness array must be set to 0. The associated length information must be given in bits.

| (SRS SecOC 00029)

Example:

The 10-bit freshness "001101011" (bin) can be located in a 2 byte array and corresponds to the value: "35 80" (hex). The length value is 10.


[SWS SecOC 00221][

If SecOCQueryFreshnessValue = CFUNC AND SecOCProvideTxTruncatedFreshnessValue = TRUE for a PDU configuration, the SecOC calls the interface function SecOC_GetTxFreshnessTruncData whenever the DataToAuthenticator is constructed for the respective PDU. | (SRS SecOC 00029)

[SWS_SecOC_00222][

If SecOCQueryFreshnessValue = CFUNC AND SecOCProvideTxTruncatedFreshnessValue = FALSE for a PDU configuration, the SecOC calls the interface function SecOC_GetTxFreshness whenever the DataToAuthenticator is constructed for the respective PDU.

] (SRS_SecOC_00029)





[SWS_SecOC_00223][

If SecOCQueryFreshnessValue = RTE AND SecOCProvideTxTruncatedFreshnessValue = TRUE for a PDU configuration, the SecOC calls the service operation FreshnessManagement_GetTxFreshnessTruncData whenever the DataToAuthenticator is constructed for the respective PDU.

I (SRS SecOC 00029)

[SWS_SecOC_00224][

If SecOCQueryFreshnessValue = RTE AND SecOCProvideTxTruncatedFreshnessValue = FALSE for a PDU configuration, the SecOC calls the service operation FreshnessManagement_GetTxFreshness whenever the DataToAuthenticator is constructed for the respective PDU. | (SRS_SecOC_00029)

[SWS_SecOC_00225][

For every transmission request that is queued to SecOC an authentication build counter shall be maintained.

J (SRS_SecOC_00021, SRS_SecOC_00029)

[SWS SecOC 00226][

Upon the initial processing of a transmission request of a secured I-PDU SecOC shall set the authentication build counter to 0.

| (SRS SecOC 00005, SRS SecOC 00021, SRS SecOC 00029)

[SWS_SecOC_00227][

If either the query of the freshness function (e.g. SecOC_GetTxFreshness()) returns E_BUSY or the calculation of the authenticator (e.g. Csm_MacGenerate()) returns E_BUSY, QUEUE_FULL or any other recoverable error, the authentication build counter shall be incremented.

(SRS_SecOC_00021, SRS_SecOC_00029)

Note: The return value $\mathbb E \ \ \mathtt{NOT} \ \ \mathtt{OK}$ is not considered as a recoverable error.

[SWS SecOC 00228][

If building the authentication has failed and the authentication build counter has not yet reached the configuration value <code>SecOCAuthenticationBuildAttempts</code>, the freshness attempt and authenticator calculation shall be retried in the next call to the Tx main function.

(SRS_SecOC_00021, SRS_SecOC_00029)

[SWS_SecOC_00229][

If the authentication build counter has reached the configuration value ${\tt SecOCAuthenticationBuildAttempts}$, or the query of the freshness function returns ${\tt E_NOT_OK}$ or the calculation of the authenticator has returned a non-recoverable error such as returning ${\tt E_NOT_OK}$ or ${\tt KEY_FAILURE}$, the SecOC module



shall remove the Authentic I-PDU from its internal buffer and cancel the transmission request.

] (SRS_SecOC_00021, SRS_SecOC_00029)

[SWS_SecOC_00230][

If SecOCQueryFreshnessValue = CFUNC AND

SecOCProvideTxTruncatedFreshnessValue = TRUE for a PDU configuration, SecOC calls a function named SecOC_GetTxFreshnessTruncData, to get the current freshness for TX messages.

] (SRS_SecOC_00003, SRS_SecOC_00006, SRS_SecOC_00029)

[SWS SecOC 00231][

If SecOCQueryFreshnessValue = CFUNC AND

SecocProvideTxTruncatedFreshnessValue = FALSE for a PDU configuration, SecOC calls a function named Secoc_GetTxFreshness, to get the current freshness for TX messages.

(SRS_SecOC_00003, SRS_SecOC_00006, SRS_SecOC_00029)

[SWS_SecOC_00232][

If SecOCQueryFreshnessValue = CFUNC for a PDU configuration, SecOC calls a function with the signature described in SWS_SecOC_91005 to indicate that the Secured I-PDU has been successfully initiated for transmission.

(SRS_SecOC_00002, SRS_SecOC_00003, SRS_SecOC_00029)

Note: It is not intended, that this function is called after the message has appeared on the bus. It is considered to be more secure calling this function after the successful transmission request to the PduR.

[SWS SecOC 00233][

If SecOCQueryFreshnessValue = RTE for a PDU configuration, SecOC calls the service operation FreshnessManagement_SPduTxConfirmation to indicate that the Secured I-PDU has been successfully initiated for transmission.

I (SRS SecOC 00002, SRS SecOC 00029)

[SWS SecOC 00234][

For every processed secured I-PDU within SecOC an authentication build counter and an authentication verify attempt counter shall be maintained.

(SRS SecOC 00007, SRS SecOC 00029)

[SWS SecOC 00235][

Upon the initial processing of a received secured I-PDU, the authentication build counter and the authentication verify attempt counter shall be set to 0.

(SRS_SecOC_00005, SRS_SecOC_00007, SRS_SecOC_00029)

ISWS SecOC 002361[

If the query of the freshness function (e.g. $Secoc_GetRxFreshness()$) returns E_BUSY the authentication build counter shall be incremented and no attempt for verification of authentication shall be executed.



| (SRS_SecOC_00007, SRS_SecOC_00022, SRS_SecOC_00029)

[SWS_SecOC_00237][

If the verification of the authenticator (e.g. $Csm_MacVerify()$) returns E_BUSY , $QUEUE_FULL$ or any other recoverable error, the authentication build counter shall be incremented.

| (SRS_SecOC_00007, SRS_SecOC_00022, SRS_SecOC_00029)

Note: The return value ${\tt E}\ {\tt NOT}\ {\tt OK}$ is not considered as a recoverable error.

[SWS_SecOC_00238][

If the authentication build attempts have failed and the authentication build counter has not yet reached the configuration value SecOCAuthenticationBuildAttempts, the freshness attempt and the authenticator verification shall be retried in the next call to the Rx main function.

| (SRS_SecOC_00007, SRS_SecOC_00022, SRS_SecOC_00029)

[SWS_SecOC_00239][

If the verification of the authenticator could be successfully executed but the verification failed (e.g. the MAC verification has failed or the key was invalid), the authentication verify attempt counter shall be incremented and the authentication build counter shall be set to 0.

] (SRS_SecOC_00007, SRS_SecOC_00022, SRS_SecOC_00029)

Note: Resetting the authentication build counter shall prevent to drop the authentication process too early even though authentication verify attempts are still possible.

[SWS SecOC 00240][

If the authentication build counter has reached the configuration value SecOCAuthenticationBuildAttempts or the query of the freshness function returns E NOT OK the SecOC module shall remove the Authentic I-PDU from its buffer internal and shall drop the received message. The shall VerificationResultType be set to SECOC AUTHENTICATIONBUILDFAILURE.

(SRS SecOC 00007, SRS SecOC 00022, SRS SecOC 00029)

[SWS_SecOC_00241][

If the authentication verify attempt counter has reached the configuration value <code>SecOCAuthenticationVerifyAttempts</code> or the verification of the authenticator has returned a non-recoverable error such as returning <code>E_NOT_OK</code> or <code>KEY_FAILURE</code>, the <code>SecOC</code> module shall remove the Authentic I-PDU from its internal buffer and shall drop the received message. The <code>VerificationResultType</code> shall be set to <code>SECOC VERIFICATIONFAILURE</code>.

(SRS_SecOC_00007, SRS_SecOC_00022, SRS_SecOC_00029)

Note: The sequence diagram in 9.4 illustrates this behavior.

[SWS_SecOC_00242][



If the verification of the authenticator was successful, the VerificationResultType shall be set to SECOC_VERIFICATIONSUCCESS. | (SRS_SecOC_00007, SRS_SecOC_00029)

[SWS_SecOC_00243][

The Freshness Management shall use the verification status callout function (SWS_SECOC_00119) to get the result of the verification of a secured I-PDU. This notification can be used as example to synchronize additional freshness attempts or can be used for counter increments.

J (SRS_SecOC_00006, SRS_SecOC_00007, SRS_SecOC_00029)

Note: SecOC allows to overwrite the status (see SWS_SECOC_00142). Therefore, care must be taken if the Freshness Management relies on the status callout while status overwrite function is also used. This can lead to conflicts in the Freshness Management and may lead to incorrect freshness values

[SWS_SecOC_00244][

If SecOCQueryFreshnessValue = RTE AND SecOCUseAuthDataFreshness = TRUE for a PDU configuration and the secured PDU is received completely, the SecOC calls the Rte service FreshnessManagement_GetRxFreshnessAuthData to query the current freshness. A part of the received PDU data are passed to this service operation as configured by the configuration SecOCAuthDataFreshnessStartPosition and SecOCAuthDataFreshnessLen.

| (SRS_SecOC_00003, SRS_SecOC_00029)

[SWS_SecOC_00245][

If SecOCQueryFreshnessValue = RTE AND SecOCUseAuthDataFreshness = FALSE for a PDU configuration and the secured PDU is received completely, the SecOC calls the Rte service FreshnessManagement_GetRxFreshness to query the current freshness.

(SRS_SecOC_00003, SRS_SecOC_00029)

[SWS_SecOC_00246][

If SecOCQueryFreshnessValue = CFUNC AND SecOCUseAuthDataFreshness = TRUE for a PDU configuration and the secured PDU is received completely, the SecOC calls the interface function SecOC_GetRxFreshnessAuthData to query the current freshness. A part of the received PDU data are passed to this function as configured by the configuration SecOCAuthDataFreshnessStartPosition and SecOCAuthDataFreshnessLen.

(SRS_SecOC_00003, SRS_SecOC_00029)

[SWS SecOC 00247][

If SecOCQueryFreshnessValue = CFUNC AND SecOCUseAuthDataFreshness = FALSE for a PDU configuration and the secured PDU is received completely, the SecOC calls the interface function SecOC_GetRxFreshness to query the current freshness.

J (SRS_SecOC_00003, SRS_SecOC_00029)



[SWS_SecOC_00248][

If the Rx freshness request function returns E_NOT_OK , the verification of an Authentic I-PDU is considered to be failed and the authentication retry counter for this PDU shall be incremented. If the number of authentication attempts has reached SecocauthenticationVerifyAttempts, the Secoc module shall remove the Authentic I-PDU from its internal buffer. The failure SECOC_E_FRESHNESS_FAILURE shall be reported to the DET module.

(SRS SecOC 00022, SRS SecOC 00029)

[SWS_SecOC_00249][

If SecOCQueryFreshnessValue = CFUNC AND SecOCUseAuthDataFreshness = TRUE for a PDU configuration, SecOC queries a function named SecOC_GetRxFreshnessAuthData, to get the current freshness for RX messages. | (SRS_SecOC_00003, SRS_SecOC_00029)

[SWS_SecOC_00250][

If SecOCQueryFreshnessValue = CFUNC AND SecOCUseAuthDataFreshness = FALSE for a PDU configuration, SecOC queries a function named SecOC_GetRxFreshness, to get the current freshness for RX messages.

[(SRS_SecOC_00003, SRS_SecOC_00029)

7.1.2 Authentication of I-PDUs

[SWS_SecOC_00031][

The creation of a Secured I-PDU and thus the authentication of an Authentic I-PDU consists of the following six steps:

- 1. Prepare Secured I-PDU
- 2. Construct Data for Authenticator
- 3. Generate Authenticator
- 4. Construct Secured I-PDU
- 5. Increment Freshness Counter
- 6. Broadcast Secured I-PDU

| (SRS_SecOC_00006)

[SWS_SecOC_00033][

The SecOC module shall prepare the Secured I-PDU. During preparation, SecOC shall allocate the necessary buffers to hold the intermediate and final results of the authentication process.

] (SRS_SecOC_00006)

[SWS SecOC 00034][

The SecOC module shall construct the <code>DataToAuthenticator</code>, i.e. the data that is used to calculate the Authenticator. <code>DataToAuthenticator</code> is formed by concatenating the full 16 bit representation of the Data Id (parameter <code>SecOCDataId</code>), the complete Authentic I-PDU and the complete Freshness Value corresponding to <code>SecOCFreshnessValueID</code> in the given order. The Data Id and the Freshness Value shall be encoded in Big Endian byte order for that purpose.



| (SRS_SecOC_00006)

[SWS_SecOC_00035][

The SecOC module shall generate the Authenticator by passing

DataToAuthenticator, length of DataToAuthenticator into the Authentication Algorithm corresponding to SecOCTxAuthServiceConfigRef.

] (SRS_SecOC_00006)

[SWS_SecOC_00036][

The SecOC module shall truncate the resulting Authenticator down to the number of bits specified by SecOCAuthInfoTxLength.

| (SRS_SecOC_00006)

[SWS_SecOC_00037][

The SecOC module shall construct the Secured I-PDU by adding the Freshness Value and the Authenticator to the Authentic I-PDU.

| (SRS SecOC 00006)

Note: The Freshness Counter and the Authenticator included as part of the Secured I-PDU may be truncated per configuration specific to the identifier of the Secured I-PDU. The scheme for the Secured I-PDU looks as follows:

SecuredPDU =
AuthenticIPDU
| FreshnessValue [SecOCFreshnessValueTxLength]
| Authenticator [SecOCAuthInfoTxLength]

7.1.3 Verification of I-PDUs

[SWS SecOC 00040][

The verification of a Secured I-PDU consists of the following six steps:

- Parse Authentic I-PDU, Freshness Value and Authenticator
- Get Freshness Value from Freshness Manager
- Construct Data to Authentication
- Verify Authentication Information
- Send Confirmation to Freshness Manager
- Pass Authentic I-PDU to upper layer

I (SRS SecOC 00006)

[SWS SecOC 00203][

If SecOCTxSecuredPduCollection is used then SecOC shall not perform any verification until it has received both the Authentic I-PDU and Cryptographic I-PDU which make up the Secured I-PDU. Only after both have been received SecOC shall attempt to verify the resulting Secure I-PDU.

SRS_SecOC_00026, SRS_SecOC_00028)



Note: This applies to all instances when a Secured I-PDU is received by SecOC from the PduR, which happens in parts as described above when <code>SecOCTxSecuredPduCollection</code> is used. There is no further distinction made throughout this document to avoid duplication and clutter.

[SWS_SecOC_00211][

If SecOCTxSecuredPduCollection is used then SecOC shall not attempt to verify the Secured I-PDU until it has received and buffered an Authentic I-PDU and Cryptographic I-PDU with matching Message Linker values.

] (SRS_SecOC_00028)

Note: If SecoCUseMessageLink has 0 multiplicity, it means SecoCMessageLinkLen is 0 and that Message Linker Values are always matching.

[SWS_SecOC_00042][

Upon reception of a secured I-PDU, SecOC shall parse the Authentic I-PDU, the Freshness Value and the Authenticator from it.

I (SRS SecOC 00006)

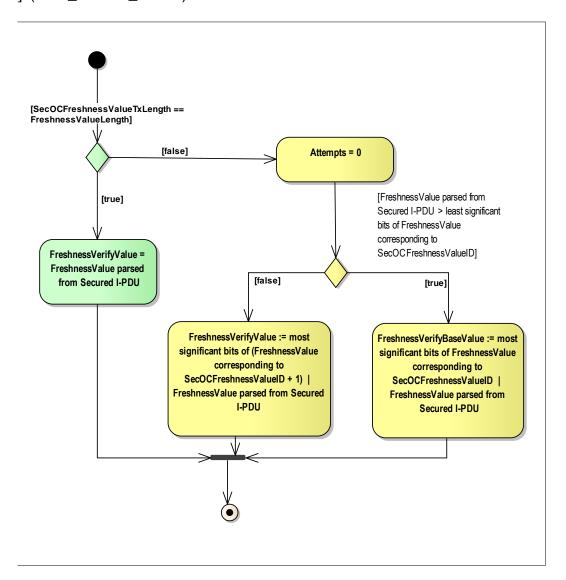


Figure 6: Construction of Freshness Value



[SWS_SecOC_00046][

The SecOC module shall construct the data that is used to calculate the Authenticator (DataToAuthenticator) on the receiver side. This data is comprised of SecOCDataId | AuthenticIPDU | FreshnessVerifyValue | (SRS_SecOC_00006)

[SWS_SecOC_00047][

The SecOC module shall verify the Authenticator by passing
DataToAuthenticator, length of DataToAuthenticator, the
Authenticator parsed from Secured I-PDU, and SecOCAuthInfoTxLength into
the authentication algorithm corresponding to SecOCRxAuthServiceConfigRef.
The verification process is repeated as outlined in chapter 9.4.

[(SRS_SecOC_00002, SRS_SecOC_00007, SRS_SecOC_00022)

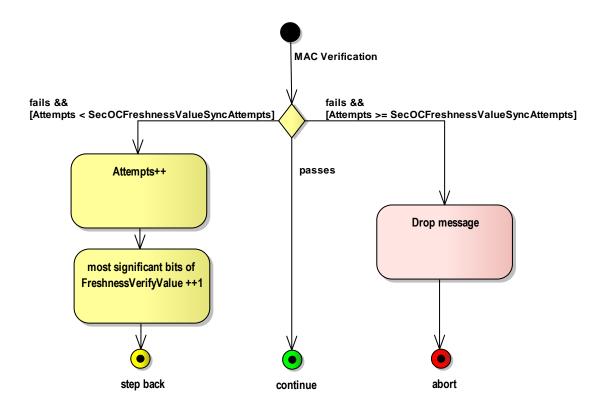


Figure 7: Verification of MAC

[SWS SecOC 00048][

The SecOC module shall report each individual verification status (the final one as well as all intermediate ones) by serving the call out function

SecOC_VerificationStatusCallout and the SecOC_VerificationStatus interface according to its current configuration (see parameter SecOCVerificationStatusPropagationMode).

J (SRS_SecOC_00022)

7.1.3.1 Successful verification of I-PDUs



[SWS_SecOC_00049][

If the verification of a Secured I-PDU was successful, the SecOC module shall pass the information to the Freshness Manager using the Tx-Confirmation functions. | (SRS_SecOC_00002, SRS_SecOC_00007)

[SWS_SecOC_00050][

Only if the verification of a Secured I-PDU was successful, the SecOC module shall pass the Authentic I-PDU to the upper layer communication modules using the lower layer interfaces of the PduR.

| (SRS_SecOC_00022)

Note: In case the verification has eventually failed, the SecOC module must not pass the Authentic I-PDU to the PduR for further routing.

7.1.4 Adaptation in case of asymmetric approach

Although this document consequently uses the terms and concepts from symmetric cryptography, the SecOC module can be configured to use both, symmetric as well as asymmetric cryptographic algorithms. In case of an asymmetric approach using digital signatures instead of the MAC-approach described throughout the whole document, some adaptations have to be made:

- 1. Instead of a shared secret between sender and (all) receivers, a key pair consisting of public key and secret key is used. The secret (or private) key is used by the sender to generate the signature, the corresponding public keys is used by (all) receiver(s) to verify the signature. The private key must not be feasibly computable from the public key and it shall not be assessable by the receivers.
- 2. In order to verify a message, the receiver needs access to the complete signature /output of the signature generation algorithm. Therefore, a truncation of the signature as proposed in the MAC case is NOT possible. The parameter SecocauthInfoTxLength has to be set to the complete length of the signature.
- 3. The signature verification uses a different algorithm then the signature generation. So instead of "rebuilding" the MAC on receiver side and comparing it with the received (truncated) MAC as given above, the receiver / verifier performs the verification algorithm using the DataToAuthenticator (including full counter) and the signature as inputs and getting a Boolean value as output, determining whether the verification passed or failed.

7.2 Relationship to PduR

The SecOC module is arranged next to the PDU-Router in the layered architecture of AUTOSAR; see Figure 8.



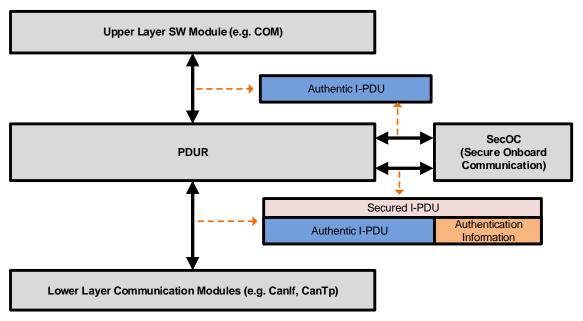


Figure 8: Transformation of an Authentic I-PDU in a Secured I-PDU by SecOC

[SWS_SecOC_00153][

The SecOC module shall be implemented so that no other modules depend on it and that it is possible to build a system without the SecOC module if it is not needed. J (SRS_BSW_00171)

[SWS_SecOC_00212][

SecOC shall forward MetaData received in an authentic PDU unchanged to the corresponding secured PDU, and vice versa.

[(SWS_BSW_00242)

7.3 Initialization

The SecOC module provides an initialization function (SecOC_Init) as defined in SWS_SecOC_00106. This function initializes all internal global variables and the buffers to store the SecOC I-PDUs and all intermediate results. The environment of the SecOC shall call SecOC_Init before calling any other function of the SecOC module except SecOC_GetVersionInfo. The implementer has to ensure that SecOC_E_UNINIT is returned in development mode in case an API function is called before the module is initialized.

For the I-PDU data transmission pathway through the SecOC module, a buffer is allocated inside the SecOC module. This buffer needs to be initialized because it might be transmitted before it has been fully populated with data by the upper layer of lower layer communication modules.

[SWS_SecOC_00054][

Within Secoc_Init, the module shall initialize all internal global variables and the buffers of the SecOC I-PDUs.



| (SRS_SecOC_00005)

7.4 Authentication of outgoing PDUs

The term authentication describes the creation of a Secured I-PDU by adding Authentication Information to an Authentic I-PDU. This process is described in general terms in Section 7.1.2. This section refines the general description with respect to requirements arising from the integration with the PduR module considering different bus interfaces and transport protocols. In general, the interaction with the PduR module and the authentication of Authentic I-PDUs are organized according to the following scheme:

- 1. For each transmission request of an Authentic I-PDU, the upper layer communication module shall call the PduR module through PduR <Up>Transmit.
- 2. The PduR routes this request to the SecOC module and calls SecOC [If|Tp]Transmit.
- 3. The SecOC module copies the Authentic I-PDU to its own memory and returns.
- 4. During the next scheduled call of its main function, the SecOC module creates the Secured I-PDU by calculating the Authentication Information and initiates the transmission of the Secured I-PDU by notifying the respective lower layer module via the PduR module.
- 5. Thereafter, the SecOC module takes the role of an upper layer communication module and thus serves all lower layer requests to provide information on or to copy data of the Secured I-PDU.
- 6. Finally, the confirmation of the successful or unsuccessful transmission of the Secured I-PDU are provided to the upper layer communication module as confirmation of the successful or unsuccessful transmission of the Authentic I-PDU

Note: For each Authentic I-PDU, the upper layer communication module shall be configured in such a way that it calls the PduR module as it normally does for a direct transmission request. In this case, the upper layer is decoupled from TriggerTransmit and TP behavior by means of the SecOC module.

The SecOC module decouples the interaction between upper layer modules and lower layer modules. It gets all transmission relevant information to be transmitted and thus could manage the interaction with lower layer module on its own and without affecting the upper layer module. An exception is diagnostic communication where every part of the message is passed through to the lower layer without storing the whole message.

To initiate the transmission of an Authentic I-PDU, the upper layer module always (and independent of the bus interface that is used for the concrete transmission) calls the PduR module through PduR_<Up>Transmit. The PduR routes this request to the SecOC module so that the SecOC module has immediate access to the Authentic I-PDU in the buffer of the upper layer communication module.

[SWS_SecOC_00201][

If SecOCTxSecuredPduCollection is used, then SecOC shall transmit the Secured I-PDU as two messages: The original Authentic I-PDU and a separate Cryptographic I-PDU. The Cryptographic I-PDU shall contain all Authentication Information of the



Secured I-PDU, so that the Authentic I-PDU and the Cryptographic I-PDU contain all information necessary to reconstruct the Secured I-PDU. I(SRS_SecOC_00026)

Note: This applies to all instances when a Secured I-PDU is transmitted by SecOC to the PduR. There is no further distinction made throughout this document to avoid duplication and clutter.

[SWS SecOC 002021]

SecOC shall transmit an Authentic I-PDU and its corresponding Cryptographic I-PDU within the same main function cycle. I(SRS_SecOC_00026)

[SWS SecOC 00209][

If SecOCTxSecuredPduCollection is used then SecOC shall repeat a part of the Authentic I-PDU inside the Cryptographic I-PDU as Message Linker and the Cryptographic I-PDU shall be constructed as

Cryptographic I-PDU = Authentication Data | Message Linker |(SRS SecOC 00028)

Note: "|" denotes concatenation.

[SWS SecOC 00210][

If SecOCUseMessageLink is used then SecOC shall use the value at bit position SecOCMessageLinkPos of length SecOCMessageLinkLen bits inside the Authentic I-PDU as the Message Linker. I(SRS SecOC 00028)

[SWS_SecOC_00057][

The SecOC module shall provide sufficient buffer capacities to store the incoming Authentic I-PDU, the outgoing Secured I-PDU and all intermediate data of the authentication process according to the process described in SWS_SecOC_00031. | (SRS_SecOC_00006)

[SWS_SecOC_00146][

The SecOC module shall provide separate buffers for the Authentic I-PDU and the Secured I-PDU.

| (SRS_SecOC_00006)

[SWS_SecOC_00110][

Any transmission request from the upper layer communication module shall overwrite the buffer that contains the Authentic I-PDU without affecting the buffer of the respective Secured I-PDU.

| (SRS_BSW_00426)

Thus, upper layer updates for Authentic I-PDUs could be processed without affecting ongoing transmission activities of Secured I-PDUs with the lower layer communication module.



7.4.1 Authentication during direct transmission

For transmission of an Authentic I-PDU using bus interfaces that allow ad-hoc transmission (e.g. CanIf), the PDU Router module triggers the transmit operation of the SecOC module for an Authentic I-PDU. In this case, the SecOC module prepares the creation of a Secured I-PDU on basis of the Authentic I-PDU by allocating internal buffer capacities and by copying the Authentic I-PDU to a local buffer location. Afterwards it returns from SecOC [If|Tp]Transmit.

[SWS_SecOC_00058][

The SecOC module shall allocate internal buffer capacities to store the Authentic I-PDU and the Authentication Information in a consecutive memory location. | (SRS_SecOC_00006)

The actual creation of the Secured I-PDU is processed during the next subsequent call of the scheduled main function. This includes calculating the Authentication Information according to SWS_SecOC_00031 and adding the Authentication Information (i.e. the Authenticator and the possibly truncated Freshness Value) consecutively to the buffer location directly behind the Authentic I-PDU. Thereafter, SecOC module triggers the transmission of the Secured I-PDU to the destination lower layer module by calling PduR Secoctransmit at the PduR.

[SWS_SecOC_00060][

For transmission of Authentic I-PDUs using bus interfaces that allow ad-hoc transmission (e.g. Canlf), the SecOC module shall calculate the Authenticator in the scheduled main function according to the overall approach specified in SWS_SecOC_00031.

| (SRS_SecOC_00010, SRS_SecOC_00012, SRS_SecOC_00013)

[SWS_SecOC_00061][

For transmission of Authentic I-PDUs using bus interfaces that allow ad-hoc communication (e.g. Canlf), the SecOC module shall create the Secured I-PDU in the scheduled main function.

| (SRS_SecOC_00010, SRS_SecOC_00012, SRS_SecOC_00013)

[SWS SecOC 00062][

The SecOC module shall provide the complete Secured I-PDU for further transmission to the destination lower layer module by triggering

PduR SecOCTransmit.

| (SRS SecOC 00010, SRS SecOC 00012, SRS SecOC 00013)

[SWS_SecOC_00063][

If the PDU Router module notifies the SecOC module that the destination lower layer module has either confirmed the transmission of the Secured I-PDU or reported an error during transmission by calling $SecOC_[If|Tp]TxConfirmation$, the SecOC module shall pass the received result of the respective Authentic I-PDU to the upper layer module by calling $PduR_SecOC[IfTp]TxConfirmation$.

| (SRS SecOC 00010, SRS SecOC 00012, SRS SecOC 00013)

[SWS_SecOC_00064][



For transmission of Authentic I-PDUs using bus interfaces that allow ad-hoc communication (e.g. Canlf), the SecOC module shall free the buffer that contains the Secured I-PDU if SecOC_TxConfirmation is called for the Secured I-PDU. | (SRS_SecOC_00010, SRS_SecOC_00012, SRS_SecOC_00013)

7.4.2 Authentication during triggered transmission

For transmission of an Authentic I-PDU using bus interfaces that allow triggered transmission (e.g. Frlf), the upper layer is configured in such a way that it calls the PduR module like it normally does for a direct transmission. Thus, the upper layer module immediately provides access to the Authentic I-PDU by providing the required buffer information through PduR_<Up>Transmit. The PduR forwards this transmission request to the SecOC module by calling SecOC TriggerTransmit.

Note: Authentication for triggered transmission is only supported, if the upper layer initiates the transmission by explicitly calling $PduR_{\tiny \mbox{Up>Transmit}}$ in before. Triggered transmission in mode AlwaysTransmit shall not be used.

In turn, the SecOC module allocates sufficient buffer capacities to store the Authentic I-PDU, the Secured I-PDU and all intermediate data of the authentication process. The SecOC module copies the Authentic I-PDU into its own buffer and returns (see SWS_SecOC_00057, SWS_SecOC_00058, SWS_SecOC_00059).

The actual creation of the Secured I-PDU is processed during the subsequent call of the scheduled main function. This includes calculating the Authentication Information according to SWS_SecOC_00031 and adding the Authentication Information (i.e. the Authenticator and the possibly truncated Freshness Value) consecutively to the buffer location directly behind the Authentic I-PDU. Thereafter, SecOC module triggers the transmission of the Secured I-PDU to the destination lower layer module by calling PduR SecOCTransmit at the PduR.

[SWS_SecOC_00065][

For transmission of Authentic I-PDUs using bus interfaces that allow triggered transmission (e.g. Frlf), the SecOC module shall calculate the Authenticator in the scheduled main function according to the overall approach specified in SWS SecOC 00031.

| (SRS_SecOC_00010, SRS_SecOC_00012, SRS_SecOC_00013)

[SWS SecOC 00066][

For transmission of Authentic I-PDUs using bus interfaces that allow triggered transmission (e.g. FrIf), the SecOC module shall create the Secured I-PDU in the scheduled main function.

| (SRS_SecOC_00010, SRS_SecOC_00012, SRS_SecOC_00013)

In the following, the SecOC module serves as a data provider for the subsequent transmission request from the lower layer module. Thus, the SecOC module holds the complete Secured I-PDU and acts as the upper layer module. The upper layer module does not expect any further call back that request the copying of the Authentic I-PDU to the lower layer module.



[SWS SecOC 00067][

For transmission of Authentic I-PDUs using bus interfaces that allow triggered transmission (e.g. FrIf), the SecOC module shall indicate the transmission request for the complete Secured I-PDU by triggering PduR_SecOCTransmit at the PduR. The PduR is responsible to further process the request and to notify the respective lower layer module.

| (SRS_SecOC_00010, SRS_SecOC_00012, SRS_SecOC_00013)

The destination lower layer module calls PduR_<Lo>TriggerTransmit when it is ready to transmit the Secured I-PDU. PduR forwards this request to the SecOC module and the SecOC module copies the complete Secured I-PDU to the lower layer. Afterwards it returns.

Note: The SecOc module must not forward the trigger transmit call to the upper layer but takes itself the role of the upper layer and copies the complete Secured I-PDU to the lower layer.

[SWS_SecOC_00068][

When SecoC_TriggerTransmit is called by the PduR module, the SecOC module shall copy the Secured I-PDU to the lower layer destination module. | (SRS_SecOC_00010, SRS_SecOC_00012, SRS_SecOC_00013)

[SWS SecOC 00150][

When SecOC_TriggerTransmit is called by the PduR module and the SecOC module is not able to provide a Secured I-PDU to the lower layer (no Secured I-PDU available), the SecOC module shall return the call with E_NOT_OK . | (SRS_SecOC_00010, SRS_SecOC_00012, SRS_SecOC_00013)

Finally, when the lower layer confirms the processing of the Secured I-PDU via $PduR_<Lo>TxConfirmation$ (the result can be positive, if the PDU was successfully sent or negative if a transmission was not possible), the confirmation is forwarded to the SecOC module by calling $SecOC_TxConfirmation$. In turn, the SecOC module passes the result of the transmission process of the Authentic I-PDU at the PduR module so that the PduR module could forward the result via $<Up>_TxConfirmation$ to the upper layer module which was the source of the original I-PDU (see SWS_SecOC_00063).

During triggered transmission, the update rates of the upper layer modules and the lower layer modules might be different. Thus, the lower layer module might request a new transmission of a Secured I-PDU while the upper layer has not updated the Authentic I-PDU. In this case, the SecOC module supports the repeated transmission of the Authentic I-PDU by means of an updated Secure I-PDU. Thus, it has to preserve the Authentic I-PDU until the Secured I-PDU has been sent and its transmission has been confirmed by a means of SecOC_TxConfirmation. In this case, the SecOC module treats the existing Authentic I-PDU as new and reauthenticates it during the subsequent call to the SecOC_MainFunctionTx.

[SWS SecOC 00069][

For transmission of Authentic I-PDUs using bus interfaces that allow triggered transmission (e.g. FrIf) and after having successfully sent the Secured I-PDU, the SecOC module shall free the buffer that contain Authentication Information and



preserve the buffer that contain the Authentic I-PDU. The Authentic I-PDU shall be treated as if it has been set by the upper layer and thus shall undergo a new authentication procedure with the subsequent call of the SecOC_MainFunctionTx.
] (SRS_SecOC_00010, SRS_SecOC_00012, SRS_SecOC_00013)

7.4.3 Authentication during transport protocol transmission

For transmission of an Authentic I-PDU using transport protocol transmission (e.g. CanTP, FrTp), the PDU Router module triggers the transmit operation of the SecOC module for an Authentic I-PDU. In this case, the SecOC module prepares the creation of a Secured I-PDU on basis of the Authentic I-PDU by allocation internal buffer capacities and by copying the Authentic I-PDU to a local buffer location. Afterwards it returns from SecOC [If|Tp]Transmit.

The actual creation of the Secured I-PDU is processed during the next following call of the scheduled main function. This includes calculating the Authentication Information according to SWS_SecOC_00031 and adding the Authentication Information (i.e. the Authenticator and the possibly truncated Freshness Value) consecutively to the buffer location directly behind the Authentic I-PDU.

[SWS_SecOC_00070][

For transmission of Authentic I-PDUs using transport protocol, the SecOC module shall calculate the Authenticator in the scheduled main function according to the overall approach specified in SWS_SecOC_00031. In case <code>SecOCPduType</code> is configured to <code>SECOC_TPPDU</code> the freshness value shall be retrieved as late as possible i.e. just in time when this part of the message will transmitted next to the bus.

] (SRS_SecOC_00010, SRS_SecOC_00012, SRS_SecOC_00013) Note: The late freshness value retrieval is necessary to have an up-to-date value for the case that the TP transmission took a while

[SWS_SecOC_00071][

For transmission of Authentic I-PDUs using transport protocol, the SecOC module shall create the Secured I-PDU in the scheduled main function.

[(SRS_SecOC_00010, SRS_SecOC_00012, SRS_SecOC_00013)

Thereafter, SecOC module triggers the transmission of the Secured I-PDU to the destination lower layer module by calling PduR_SecOCStartOfReception at the PduR. Thus, it notifies the lower level module about its transmission request for the Secured I-PDU.

ISWS SecOC 000721

For transmission of Authentic I-PDUs using transport protocol, the SecOC module shall indicate the transmission request for the complete Secured I-PDU by triggering PduR_SecOCTransmit at the PduR. The PduR is responsible to further process the request and to notify the respective lower layer module.

| (SRS_SecOC_00010, SRS_SecOC_00012, SRS_SecOC_00013)

In the following, the SecOC module serves as a data provider for the subsequent transmission request from the lower layer module. Thus, the SecOC module holds



the complete Secured I-PDU and acts as the upper layer module. The upper layer module does not expect any further call back that request the copying of the Authentic I-PDU to the lower layer module.

When the PduR iteratively polls the SecOC module by means of SecOC_CopyTxData to effectively transmit the Secured I-PDU to a lower layer module, the SecOC module copies the NPDUs for the Secured I-PDU to the lower layer transport protocol module.

[SWS_SecOC_00073][

For transmission of Authentic I-PDUs using transport protocol, the SecOC module shall copy the NPDUs addressed by SecOC_CopyTxData into the buffer of the transport protocol module. After each copy process, it returns from SecOC CopyTxData.

] (SRS_SecOC_00010, SRS_SecOC_00012, SRS_SecOC_00013)

Finally, when the lower layer confirms the processing of the Secured I-PDU via PduR_<Lo>TxConfirmation (the result can be positive, if the PDU was successfully sent or negative if a transmission was not possible), the result is forwarded to the SecOC module and the SecOC module in turn confirms the processing of the Authentic I-PDU, so that the PduR module could forward the result via <Up> TxConfirmation to the upper layer.

[SWS_SecOC_00074][

For transmission of Authentic I-PDUs using transport protocol and when the lower layer either confirms the transmission of the Secured I-PDU or signals an error during transmission by calling Secoc_TpTxConfirmation, the SecOC module shall in turn pass the received result of the Authentic I-PDU either by

PduR_SecOCIfTxConfirmation in case SecOCPduType is configured to SECOC_IFPDU or by PduR_SecOCTpTxConfirmation in case SecOCPduType is configured to SECOC TPPDU.

(SRS_SecOC_00010, SRS_SecOC_00012, SRS_SecOC_00013)

[SWS SecOC 00075][

For transmission of Authentic I-PDUs using transport protocol, the SecOC module shall free the buffer that contains the Secured I-PDU only, if SecOC_TpTxConfirmation is called for the Secured I-PDU.

[(SRS_SecOC_00010, SRS_SecOC_00012, SRS_SecOC_00013)

7.4.4 Error handling and cancelation of transmission

[SWS SecOC 00076][

If the upper layer module requests a cancelation of an ongoing transmission of the Authentic I-PDU by calling SecOC_[If|Tp]CancelTransmit, the SecOC module shall immediately inform the lower layer transport protocol module to cancel the ongoing transmission of the Secured I-PDU, stop all internal actions related to the Authentic I-PDU, and free all related buffers.

I (SRS SecOC 00021)



[SWS SecOC 00077][

If the lower layer transport protocol module reports an error during transmission of a Secured I-PDU using the return value E_NOT_OK , the SecOC module shall not perform any error handling other than skipping the confirmation of the transmission request for the corresponding Authentic I-PDU to the upper layer module. | (SRS_BSW_00385)

[SWS_SecOC_00151][

If the CSM module reports an error during authentication of an Authentic I-PDU (authentication attempt returns E_NOT_OK), the SecOC module shall not provide a Secured I-PDU to the lower layer. It shall keep that Authentic I-PDU (if not overwritten by an incoming Authentic I-PDU of the same type) to start the authentication with the next call of the scheduled main function until the number of additional authentication attempts for that Authentic I-PDU has reached its limits. I (SRS_SecOC_00021, SRS_BSW_00385)

[SWS_SecOC_00155][

If the number of attempts for an Authentic I-PDU has reached the limits of either SecOCAuthenticationBuildAttempts or the maximum number of freshness values provided by the freshness manager is reached, the SecOC module shall remove the Authentic I-PDU from its internal buffer and shall report SECOC_E_CRYPTO_FAILURE to the DET module.

[(SRS_BSW_00385)

[SWS_SecOC_00108][

If the SecOC module is not able to serve any upper layer or lower layer request during transmission of an Authentic I-PDU due to an arbitrary internal error, it shall return this request with E_NOT_OK . | (SRS_BSW_00385)

[SWS_SecOC_00217][

If the upper layer module requests a cancelation of an ongoing reception of the Authentic I-PDU by calling <code>SecOC_CancelReceive</code>, the SecOC module shall immediately inform the lower layer transport protocol module to cancel the ongoing reception of the Secured I-PDU, stop all internal actions related to the Authentic I-PDU, and free all related buffers.

| (SRS SecOC 00021)


[SWS_SecOC_00218][

If the upper layer module requests a change of parameters of the Authentic I-PDU by calling SecoC_ChangeParameter, the SecOC module shall immediately inform the lower layer transport protocol module.

] (SRS_SecOC_00021)

7.5 Verification of incoming PDUs

The term verification describes the process of comparing the Authentication Information contained in a Secured I-PDU with the Authentication Information





calculated on basis of the local Data Identifier, the local Freshness Value and the Authentic I-PDU contained in the Secured I-PDU.

The process of verifying incoming Secured I-PDUs is described in general terms in Section 7.1.3. This section refines the general description with respect to requirements arising from the integration with the PduR module considering different bus interfaces and transport protocols. The overall interaction with the PduR module and the verification of Secured I-PDUs is organized as described in the following scheme:

- For each indication of an incoming Secured I-PDU from a lower layer bus interface or transport protocol module, the SecOC module takes the role of an upper layer communication module and thus serves all lower layer requests that are necessary to receive the complete Secured I-PDU.
- 2. The SecOC module copies the Secured I-PDU into its own memory.
- 3. Thereafter, when the complete Secured I-PDU is available and during the next scheduled call of its main function, the SecOC module verifies the contents of the Secured I-PDU according to SWS_SecOC_00040.
- 4. If the verification fails and the parameter SecOcIgnoreVerificationResult is configured to FALSE, the SecOC module drops the Secured I-PDU.
- 5. If the verification succeeds or the verification fails and the parameter SecOcIgnoreVerificationResult is configured to TRUE, the SecOC module takes the role of a lower layer communication module and calls PduR SecOC[If|Tp]RxIndication for the Authentic I-PDU.
- 6. The SecOC reports the verification results according to SWS SecOC 00048.

Thus, SecOC decouples the interaction between upper layer modules and lower layer modules. The SecOC module manages the interaction with lower layer module until it has copied the complete Secured I-PDU into its own buffer. It does so without affecting the upper layer module. Thereafter, it verifies the contents of the Secured I-PDU and, dependent on the verification results, initiates the transmission of the Authentic I-PDU to the upper layer communication module.

[SWS SecOC 00111][

Any reception process initiated from the lower layer communication module shall overwrite the buffer that contains the Secured I-PDU without affecting the buffer of the respective Authentic I-PDU.

(SRS_BSW_00426)

Thus, lower layer updates of Secured I-PDUs could be processed without affecting ongoing deliveries of an Authentic I-PDU to the upper layer communication modules.

[SWS_SecOC_00204][

SecOC shall provide separate buffers for the incoming Authentic I-PDU, Cryptographic I-PDU and the resulting Secured I-PDU. [(SRS_SecOC_00026)]



For each Secured I-PDU SecOC shall buffer only the last Authentic I-PDU and Cryptographic I-PDU it has received. If a buffer has already been filled with a previous I-PDU, the previous I-PDU is overwritten. I(SRS SecOC 00026)

Note: An Authentic I-PDU and its corresponding Cryptographic I-PDU must be received in direct succession but their order does not matter. This can be realized for example via priority handling dependent on the underlying bus system.

[SWS SecOC 00206][

SecOC shall construct and the Secured I-PDU immediately after it has received both the respective Authentic I-PDU and Cryptographic I-PDU. I(SRS SecOC 00026)

[SWS_SecOC_00207][

If the subsequent verification of the resulting Secured I-PDU is successful, then SecOC shall clear the buffers of both the Authentic and Cryptographic I-PDU.](SRS_SecOC_00026)

7.5.1 Verification during bus interface reception

When a Secured I-PDU is received by means of a lower layer bus interface (e.g. CanIf, FrIf), the PduR module calls Secoc_RxIndication to inform the SecOC module for each incoming Secured I-PDU. During the processing of Secoc_RxIndication, the SecOC module copies the Authentic I-PDU to its own buffer.

[SWS SecOC 00078][

During reception of a Secured I-PDU that is received by means of a lower layer bus interface and when <code>SecOC_RxIndication</code> has been called, the SecOC module shall copy the complete Secured I-PDU into its own buffer. Afterwards it returns from <code>SecOC_RxIndication</code>.

| (SRS_SecOC_00010, SRS_SecOC_00012, SRS_SecOC_00013)

Thereafter, the actual verification of an incoming Secured I-PDU is initiated during the next call of the scheduled main function. The SecOC module extracts the Authentic I-PDU, the Authentication Information from the Secured I-PDU. The SecOC module verifies the authenticity and freshness of the Authentic I-PDU according to SecOC_SWS_0040. If the verification is successful, the SecOC indicates the reception of the Authentic I-PDU by calling PduR_SecOC[If|Tp]RxIndication for the Authentic I-PDU. If the verification fails, the SecOC drops the PDU and does not call PduR_SecOC[If|Tp]RxIndication.

[SWS SecOC 00079][

During reception of a Secured I-PDU that is received by means of a lower layer bus interface, the SecOC module shall verify the Authenticator according to the overall approach specified in SWS_SecOC_00040. The verification shall be processed in the scheduled main function.

] (SRS_SecOC_00010, SRS_SecOC_00012, SRS_SecOC_00013)



[SWS_SecOC_00080][

During reception of a Secured I-PDU that is received by means of a lower layer bus interface and if the verification eventually succeeds, the SecOC module shall call PduR_SecOC[If|Tp]RxIndication referencing the Authentic I-PDU that is contained in the Secured I-PDU.

| (SRS SecOC 00010, SRS SecOC 00012, SRS SecOC 00013)

[SWS_SecOC_00081][

During reception of a Secured I-PDU that is received by means of a lower layer bus interface and if the verification fails and the SecOcIgnoreVerificationResult is configured to TRUE, the SecOC module shall call

 $PduR_SecOC[If|Tp]RxIndication$ referencing the Authentic I-PDU that is contained in the Secured I-PDU.

J(SRS_SecOC_00010, SRS_SecOC_00012, SRS_SecOC_00013)

Note: if the verification eventually fails, the SecOC module does not call $PduR_SecOC[If|Tp]RxIndication for$ the Authentic I-PDU that is contained in the Secured I-PDU.

7.5.2 Verification during transport protocol reception

When a Secured I-PDU is received by means of a lower layer transport protocol interface (e.g. CanTp, FrTp), the PduR module calls <code>SecOC_StartOfReception</code> to notify the SecOC module that the reception process of the respective Secured I-PDU will start.

[SWS_SecOC_00082][

During reception of a Secured I-PDU that is received by means of a lower layer transport protocol interface and when SecOC_StartOfReception is called, the SecOC

module shall provide buffer capacities to store the complete Secured I-PDU. Further it shall forward the Secoc StartOfReception call by calling

PduR_SecOCStartOfReception in case SecOCPduType is configured to SECOC TPPDU.

I (SRS SecOC 00010, SRS SecOC 00012, SRS SecOC 00013)

Note: In case the upper layer does not accept the reception, SecOC should not accept the reception as well.

When the lower layer iteratively indicates the reception of the individual NPDUs that constitute the Secured I-PDU (i.e. when <code>SecOC_CopyRxData</code> is called), the SecOC module copies the NPDUs to its own buffer.

[SWS SecOC 00083][

During reception of a Secured I-PDU that is received by means of a lower layer transport protocol interface and when <code>SecOC_CopyRxData</code> is called, the SecOC module shall copy the NPDUs addressed by <code>SecOC_CopyRxData</code> into its own buffers. Finally, it returns from <code>SecOC_CopyRxData</code>.



| (SRS_SecOC_00010, SRS_SecOC_00012, SRS_SecOC_00013)

Finally, when the lower layer confirms the complete reception of the Secured I-PDU via Secoc_TpRxIndication and thus the complete Secured I-PDU is available in the buffer of the SecOC module for further processing, the SecOC module starts the verification of the Authentication Information according to Section 7.1.3 during its next scheduled call of its main function.

[SWS_SecOC_00084][

During reception of a Secured I-PDU that is received by means of a lower layer transport protocol interface and when <code>SecOC_TpRxIndication</code> is called, the <code>SecOC</code> module shall returns <code>SecOC_TpRxIndication</code> without any further processing.

(SRS_SecOC_00010, SRS_SecOC_00012, SRS_SecOC_00013)

[SWS_SecOC_00085][

During reception of a Secured I-PDU that is received by means of a lower layer transport protocol interface and when <code>SecOC_TpRxIndication</code> has been called, the SecOC module shall verify the contents of the Secured I-PDU according to the process described in Section 7.1.3.

| (SRS_SecOC_00010, SRS_SecOC_00012, SRS_SecOC_00013)

[SWS_SecOC_00086][

During reception of a Secured I-PDU that is received by means of a lower layer transport protocol interface and when the verification eventually succeeds, the SecOC module shall call PduR_SecOCIfRxIndication with references to the Authentic I-PDU contained in the Secured I-PDU in case SecOCPduType is configured to SECOC IFPDU.

In case <code>SecOCPduType</code> is configured to <code>SECOC_TPPDU</code> SecOC shall forward in advance all data to the upper layer by first calling <code>PduR_SecOCTpCopyRxData</code> and afterwards <code>PduR_SecOCTpRxIndication</code> with references to the Authentic I-PDU contained in the Secured I-PDU.

| (SRS_SecOC_00010, SRS_SecOC_00012, SRS_SecOC_00013)

ISWS SecOC 000881[

During reception of a Secured I-PDU that is received by means of a lower layer transport protocol interface and when the verification fails and the SecOcIgnoreVerificationResult is configured to TRUE, the SecOC module shall call

 $\label{lem:pduR_Secoc} $$\operatorname{PduR_Secoc}[If|\operatorname{Tp}]$ RxIndication with references to the Authentic I-PDU contained in the $$\operatorname{PDU}(A)$ and $\operatorname{PDU}(A)$ are sufficiently contained in the $$\operatorname{PDU}(A)$ and $\operatorname{PDU}(A)$ are sufficiently contained in the $$\operatorname{PDU}(A)$ and $\operatorname{PDU}(A)$ are sufficiently contained in the $$\operatorname{PDU}(A)$ are sufficiently contained in the $$\operatorname{PDU}(A)$ are sufficiently contained in the $\operatorname{PDU}(A)$ are sufficiently con$

Secured I-PDU in case <code>SecOCPduType</code> is configured to <code>SECOC_IFPDU</code>. In case <code>SecOCPduType</code> is configured to <code>SECOC_TPPDU</code> SecOC shall forward in advance all data to the upper layer by first calling <code>PduR_SecOCTpCopyRxData</code> and afterwards <code>PduR_SecOCTpRxIndication</code> with references to the Authentic I-PDU contained in the Secured I-PDU.

[(SRS_SecOC_00010, SRS_SecOC_00012, SRS_SecOC_00013)



[SWS_SecOC_00213][

In case the SecOC frees buffers related to a Secured I-PDU (see SWS_SecOC_00087) and SecOCPduType is configured to SECOC_TPPDU the SecOC shall cancel the reception in the upper layer (negative PduR_SecOCTpRxIndication).

[(SRS_BSW_00385)

[SWS SecOC 000871]

The SecOC module shall free all buffer related to a Secured I-PDU either if

- 1. it has passed the respective authenticated I-PDU to the PduR via
 PduR SecOCIfRxIndication or PduR SecOCTpRxIndication,
- 2. the verification of a Secured I-PDU eventually failed,
- 3. the transmission of a Secured I-PDU has been canceled by the upper or lower layer.

| (SRS SecOC 00021, SRS SecOC 00022)

[SWS_SecOC_00214][

In case the SecOCReceptionOverflowStrategy is set to REPLACE, the SecOC module shall free all buffer related to a Secured I-PDU if the reception of a Secured I-PDU with the same Pdu Identifier has been initiated via SecOC StartOfReception.

| (SRS_SecOC_00021, SRS_SecOC_00022)

[SWS_SecOC_00215][

In case the SecocreceptionOverflowStrategy is set to REJECT and SecOC is currently busy with the same Secured I-PDU, the SecOC module shall reject any subsequent call of SecOC_StartOfReception.

| (SRS_SecOC_00021, SRS_SecOC_00022)

[SWS_SecOC_00216][

In case the SecocReceptionOverflowStrategy is set to QUEUE and SecOC is currently busy with the same Secured I-PDU, the SecOC module shall additionally receive the Secured I-PDU and queue them for a subsequent processing after the currently processed Secured I-PDU is finalized. In case the limit which is given by SecOCReceptionQueueSize is reach any further reception shall be rejected.

[(SRS SecOC 00021, SRS SecOC 00022)

7.5.3 Error handling and cancelation of transmission

[SWS_SecOC_00089][

If the lower layer transport protocol module reports an error by returning something else than $\mathbb{E}_{-} \cap \mathbb{K}_{+}$ during reception of a Secured I-PDU using

SecOC_TpRxIndication, the SecOC module shall drop the Secured I-PDU and free all corresponding buffers.

(SRS_BSW_00385)



[SWS_SecOC_00121][

If the CSM module reports an error during verification (verification attempt returns E_NOT_OK) of a Secured I-PDU, the SecOC module shall not provide the Authentic I-PDU. It shall keep the Secured I-PDU (if not overwritten by an incoming Secured I-PDU of the same type) and start the verification with the next call of the scheduled main function.

| (SRS_SecOC_00022, SRS_BSW_00385)

[SWS_SecOC_00208][

If SecOC has received both an Authentic I-PDU and a Cryptographic PDU and the verification of the resulting Secured I-PDU fails, both the Authentic and Cryptographic I-PDU shall remain buffered and verification shall be reattempted each time new data for any of them is received.

[(SRS_SecOC_00026)

Note: This and the above requirement ensure that even if either an Authentic I-PDU or a Cryptographic I-PDU is lost in transit, SecOC will still function as expected as soon as an Authentic I-PDU and its corresponding Cryptographic I-PDU are received in direct succession.

[SWS_SecOC_00109][

If the SecOC module is not able to serve any upper layer or lower layer request during reception of A Secured I-PDU due to an arbitrary internal error, it shall return this request with E_NOT_OK .

(SRS_BSW_00385)

7.6 Gateway functionality

The SecOC module supports authentication and verification for I-PDUs that are routed from one source bus to one or more destination busses. This allows for the realization of re-authentication gateways that can be used to realize networks with different security zones or properties. The actions necessary to support the required gateway functionality can be simply derived from the authentication and verification scenarios in Sections 7.4 and 7.5. Each authentication or verification process for a given I-PDU need to be configured separately. This functionality includes:

- authentication of outgoing I-PDUs,
- verification of incoming I-PDUs,
- re-authentication gateways, i.e. the verification of incoming I-PDUs in combination of their immediate re-authentication, when the I-PDU is routed to another lower layer module.

Note: "Gatewaying-on-the-fly" is not supported by SecOC

7.7 Development Errors

[SWS_SecOC_00101] Development Error Types

The following errors and exceptions shall be detectable by the SecOC module depending on its build version (development/production mode):



Type or error	Related error code	Value [hex]
An API service was	SECOC_E_PARAM_POINTER	0x01
called with a NULL		
pointer		
API service used	SECOC_E_UNINIT	0x02
without module		
initialization		
Invalid I-PDU	SECOC_E_INVALID_PDU_SDU_ID	0x03
identifier		
Crypto service failed	SECOC_E_CRYPTO_FAILURE	0x04
initialization of	SECCOC_E_INIT_FAILED	0x07
SecOC failed		

| (SRS_BSW_00337, SRS_BSW_00385, SRS_BSW_00386)

7.8 Error detection

The detection of development errors is configurable (see Section 10.2, SecOcDevErrorDetect).

7.9 Error notification

The SecOC module checks the initialization state when one of its API functions is called, and reports the DET error <code>SECOC_E_UNINIT</code> in case an API call other than <code>SecOC_Init</code> or <code>SecOC_GetVersionInfo</code> occurs. If the initialization of the <code>SecOC</code> failed, the <code>SecOC</code> module reports the DET error <code>SECCOC_E_INIT_FAILED</code>. Besides this, the <code>SecOC</code> module performs parameter checks for all called APIs. It reports the <code>DET</code> error <code>SECOC_E_PARAM_POINTER</code> when a call provides a <code>NULL</code> pointer and <code>SECOC_E_INVALID_PDU_SDU_ID</code> when a check of a I-PDU ID fails. It reports <code>SECOC_E_CRYPTO_FAILURE</code> when the use of CSM function finally lead to a situation that PDUs can't be authenticated or.

[SWS_SecOC_00102][

If DET reporting is enabled via SecocDevErrorDetect and if the SecOC module has not been initialized, all functions except SecoC_Init and SecoC_GetVersionInfo shall report the error SECOC_E_UNINIT.

| (SRS_BSW_00337, SRS_BSW_00350, SRS_BSW_00385, SRS_BSW_00450)

[SWS_SecOC_00164][

If DET reporting is enabled via SecocdevErrorDetect, the SecOC module shall check the I-PDU Id parameters of its API functions against its configuration and shall report the DET error SECOC_E_INVALID_PDU_SDU_ID when an unknown I-PDU Id is referenced by the call.

(SRS_BSW_00337, SRS_BSW_00350, SRS_BSW_00385)

[SWS_SecOC_00166][



If DET reporting is enabled via SecocDevErrorDetect, the SecOC module shall report the DET error SECOC_E_CRYPTO_FAILURE when it is finally not able to get the required security services for authentication/verification from the CSM. J (SRS_BSW_00337, SRS_BSW_00350, SRS_BSW_00385)

[SWS_SecOC_00251][

If DET reporting is enabled via <code>SecOCDevErrorDetect</code>, the SecOC module shall report the DET error <code>SECOC_E_FRESHNESS_FAILURE</code> when it is finally not able to get the required freshness services for authentication/verification from the Freshness Manager.

| (SRS SecOC 00022, SRS SecOC 00029)

7.10 Security Profiles

7.10.1 Overview of security profiles

The specification of the module Secure Onboard Communication allows different configurations for which cryptographic algorithms and modes to use for the MAC calculation and how the truncation of the MAC and freshness value (if applicable) shall be done. The security profiles provide a consistent set of values for a subset of configuration parameters that are relevant for the configuration of Secure Onboard Communication.

[SWS SecOC 00190][

Each Security Profile shall provide the configuration values for the authentication algorithm (parameter authAlgorithm), length of freshness Value, if applicable (parameter SecOCFreshnessValueLength), length of truncated Freshness Value (parameter SecOCFreshnessValueTxLength), length of truncated MAC (parameter SecOCAuthInfoTxLength), and a description of the profile. I(SRS_SecOC_00003)

[SWS SecOC 00191][

A security profile shall be defined by the following mandatory parameters in the System Template:

- + authAlgorithm :String [0..1]
- + authInfoTxLength :PositiveInteger
- + freshnessValueLength :PositiveInteger
- + freshnessValueTxLength :PositiveInteger

[(SRS_SecOC_00003)

7.10.2 SecOC Profile 1 (or 24Bit-CMAC-8Bit-FV)

[SWS SecOC 00192][



Using the CMAC algorithm based on AES-128 according to NIST SP 800-38B to calculate the MAC, use the eight least significant bit of the freshness value as truncated freshness value and use the 24 most significant bits of the MAC as truncated MAC.

J(SRS_SecOC_00003)

Parameter	Configuration value
Algorithm	CMAC/AES-128
Length of Freshness Value (parameter	Not Specified
SecOCFreshnessValueLength)	
length of truncated Freshness Value (parameter	8 bits
SecOCFreshnessValueTxLength	
length of truncated MAC (parameter	24 bits
SecOCAuthInfoTxLength)	

7.10.3 SecOC Profile 2 (or 24Bit-CMAC-No-FV)

[SWS_SecOC_00193][

Using the CMAC algorithm based on AES-128 according to NIST SP 800-38B to calculate the MAC, don't use any freshness value at all and use the 24 most significant bits of the MAC as truncated MAC.

The profile shall only be used if no synchronized freshness value is established. There is no restriction to a special bus.

[(SRS_SecOC_00003)

Parameter	Configuration value
Algorithm	CMAC/AES-128
Length of Freshness Value (parameter	0
SecOCFreshnessValueLength)SecOC	
length of truncated Freshness Value (parameter	0 bits
SecOCFreshnessValueTxLength	
length of truncated MAC (parameter	24 bits
SecOCAuthInfoTxLength)	

7.10.4 SecOC Profile 3 (or JASPAR)

[SWS SecOC 00194][

This profile depicts one configuration and usage of the JasPar counter base FV with Master-Slave Synchronization method.

It uses the CMAC algorithm based on AES-128 according to NIST SP 800-38B Appendix-A to calculate the MAC. Use the 4 least significant bits of the freshness value as truncated freshness value, and use the 28 most significant bits of the MAC as truncated MAC.

Freshness Value provided to SecOC shall be constructed as described in the [UC_xxx3]. The profile shall be used for CAN. I(SRS_SecOC_00003)

Parameter Configuration value



Algorithm	CMAC/AES-128
Length of Freshness Value (parameter	64 bits
SecOCFreshnessValueLength)	
length of truncated Freshness Value (parameter	4 bits
SecOCFreshnessValueTxLength	
length of truncated MAC (parameter	28 bits
SecOCAuthInfoTxLength)	



8 API specification

8.1 Imported types

In this chapter, all types included from the following files are listed:

[SWS_SecOC_00103] [

-	
Module	Imported Type
ComStack_Types	BufReq_ReturnType
	PduldType
	PduInfoType
	PduLengthType
	RetryInfoType
	TPParameterType
Std_Types	Std_ReturnType
	Std_VersionInfoType

(SRS_BSW_00301)

8.2 Type definitions

8.2.1 SecOC_ConfigType

[SWS_SecOC_00104] [

Name:	SecOC_ConfigType	
Туре:	Structure	
Range:		The content of the configuration data structure is implementation specific.
Description:	Configuration data structure of SecOC module	

| (SRS_SecOC_00001, SRS_SecOC_00003)

8.2.2 SecOC_StateType

[SWS_SecOC_00162] [

Name:	SecOC_StateType		
Туре:	Enumeration		
Range:	SECOC_UNINIT		SecOC module is not initialized
	SECOC_INIT		SecOC module is initialized
Description:	States of the SecOC module		

(SRS_SecOC_00005)

8.3 Function definitions

8.3.1 SecOC_Init

[SWS_SecOC_00106] [



Service name:	SecOC_Init			
Syntax:	void SecOC Init(
	const SecOC_ConfigType* config			
)			
Service ID[hex]:	0x01			
Sync/Async:	Synchronous			
Reentrancy:	Non Reentrant			
Parameters (in):	config Pointer to a selected configuration structure			
Parameters	None			
(inout):				
Parameters (out):	None			
Return value:	None			
Description:	Initializes the the SecOC module. Successful initialization leads to state			
	SecOC_INIT.			

J (SRS_BSW_00101, SRS_BSW_00323, SRS_BSW_00358, SRS_BSW_00359, SRS_BSW_00414, , SRS_SecOC_00006)

8.3.2 SecOC_DeInit

[SWS_SecOC_00161] [

Service name:	SecOC_Delnit
Syntax:	void SecOC_DeInit(
	void
)
Service ID[hex]:	0x05
Sync/Async:	Synchronous
Reentrancy:	Non Reentrant
Parameters (in):	None
Parameters	None
(inout):	
Parameters (out):	None
Return value:	None
Description:	This service stops the secure onboard communication. All buffered I-PDU are
	removed and have to be obtained again, if needed, after SecOC_Init has been
	called.
	By a call to SecOC_DeInit the AUTOSAR SecOC module is put into a not
	initialized state (SecOC_UNINIT).

] (SRS_BSW_00323, SRS_BSW_00359, SRS_SecOC_00006, SRS_SecOC_00020)

[SWS_SecOC_00157][

Within $SecOC_DeInit$ the module shall clear all internal global variables and the buffers of the $SecOC\ I-PDUs$.

] (SRS_BSW_00323, SRS_SecOC_00006)

8.3.3 SecOC_GetVersionInfo

[SWS_SecOC_00107] [

	1
Service name:	SecOC_GetVersionInfo
Syntax:	<pre>void SecOC_GetVersionInfo(Std_VersionInfoType* versioninfo)</pre>



Service ID[hex]:	0x02			
Sync/Async:	Synchronous			
Reentrancy:	Reentrant			
Parameters (in):	None			
Parameters	None			
(inout):				
Parameters (out):	versioninfo Pointer to where to store the version information of this module.			
Return value:	None			
Description:	Returns the version information of this module.			

J (SRS_BSW_00323, SRS_BSW_00359, SRS_BSW_00407, SRS_BSW_00369, SRS_BSW_00003, SRS_BSW_00402)

8.3.4 SecOC_IfTransmit

[SWS_SecOC_00112] [

5W3_3ec3C_00112]			
Service name:	SecOC_IfTransmit		
Syntax:	Std_ReturnTyp	Std ReturnType SecOC IfTransmit(
	PduIdType	e TxPduId,	
	const Pdı	ıInfoType* PduInfoPtr	
)		
Service ID[hex]:	0x49		
Sync/Async:	Synchronous		
Reentrancy:	Reentrant for diff	Reentrant for different Pdulds. Non reentrant for the same Pduld.	
Parameters (in):	TxPduld	Identifier of the PDU to be transmitted	
r ai airietei 3 (iii).	PduInfoPtr	Length of and pointer to the PDU data and pointer to MetaData.	
Parameters	None		
(inout):			
Parameters (out):	None		
Return value:	Std_ReturnType	E_OK: Transmit request has been accepted.	
Return value:		E_NOT_OK: Transmit request has not been accepted.	
Description:	Requests transm	ission of a PDU.	

J (SRS_BSW_00323, SRS_BSW_00357, SRS_BSW_00369, SRS_BSW_00449) For detailed description, see Section 7.4.

8.3.5 SecOC_TpTransmit

[SWS_SecOC_91008] [

Service name:	SecOC_TpTransmit		
Syntax:	<pre>Std_ReturnType SecOC_TpTransmit(PduIdType TxPduId, const PduInfoType* PduInfoPtr)</pre>		
Service ID[hex]:	0x49		
Sync/Async:	Synchronous		
Reentrancy:	Reentrant for different Pdulds. Non reentrant for the same Pduld.		
Paramatara (in)	TxPduld Identifier of the PDU to be transmitted		
Parameters (in):	PduInfoPtr Length of and pointer to the PDU data and pointer to MetaData.		
Parameters (inout):	None		



Parameters (out):	None	
Return value:	Std_ReturnType E_OK: Transmit request has been accepted. E_NOT_OK: Transmit request has not been accepted.	
Description:	Requests transmission of a PDU.	

[(SRS_BSW_00323, SRS_BSW_00357, SRS_BSW_00369, SRS_BSW_00449) For detailed description, see Section 7.4.

8.3.6 SecOC_CancelReceive

[SWS_SecOC_91010] [

,0110_0000 _0			
Service name:	SecOC_CancelReceive		
Syntax:	Std ReturnType SecOC CancelReceive(
	PduIdType	RxPduId	
)		
Service ID[hex]:	0x4c		
Sync/Async:	Synchronous		
Reentrancy:	Non Reentrant		
Parameters (in):	RxPduld Identification of the PDU to be cancelled.		
Parameters	None		
(inout):			
Parameters (out):	None		
	Std_ReturnType	E_OK: Cancellation was executed successfully by the	
Dotum volue	destination module. E_NOT_OK: Cancellation was rejected by the destination		
Return value:			
		module.	
Description:	Requests cancellation of an ongoing reception of a PDU in a lower layer transport		
	protocol module.		
•			

]()

8.3.7 SecOC_IfCancelTransmit

[SWS_SecOC_00113] [

Service name:	SecOC_lfCancelT	ransmit	
Syntax:		e SecOC_IfCancelTransmit(
	PduIdType	TxPduId	
Comica IDIhavi	0.40		
Service ID[hex]:	0x4a		
Sync/Async:	Synchronous		
Reentrancy:	Reentrant for different Pdulds. Non reentrant for the same Pduld.		
Parameters (in):	TxPduld Identification of the PDU to be cancelled.		
Parameters	None		
(inout):			
Parameters (out):	None		
Return value:		E_OK: Cancellation was executed successfully by the destination module. E_NOT_OK: Cancellation was rejected by the destination module.	



Description:	Requests cancellation of an ongoing transmission of a PDU in a lower layer
	communication module.

[(SRS_BSW_00323, SRS_BSW_00357, SRS_BSW_00449, SRS_SecOC_00012)

8.3.8 SecOC_TpCancelTransmit

[SWS_SecOC_91009] [

<u>[0110_00000_</u>			
Service name:	SecOC_TpCancelTransmit		
Syntax:	<pre>Std_ReturnType SecOC_TpCancelTransmit(PduIdType TxPduId)</pre>		
Service ID[hex]:	0x4a		
Sync/Async:	Synchronous		
Reentrancy:	Reentrant for different Pdulds. Non reentrant for the same Pduld.		
Parameters (in):	TxPduld Identification of the PDU to be cancelled.		
Parameters (inout):	None		
Parameters (out):	None		
Return value:	Std_ReturnType E_OK: Cancellation was executed successfully by the destination module. E_NOT_OK: Cancellation was rejected by the destination module.		
Description:	Requests cancellation of an ongoing transmission of a PDU in a lower layer communication module.		

(SRS_BSW_00323, SRS_BSW_00357, SRS_BSW_00449, SRS_SecOC_00012)

8.3.9 SecOC_ChangeParameter

[SWS_SecOC_91011] [

346_5666_51611]		
Service name:	SecOC_ChangeParameter	
Syntax:	Std_ReturnType SecOC_ChangeParameter(PduIdType id, TPParameterType parameter, uint16 value)	
Service ID[hex]:	0x4b	
Sync/Async:	Synchronous	
Reentrancy:	Non Reentrant	
Parameters (in):	id Identification of the PDU which the parameter change shall affe parameter ID of the parameter that shall be changed. Value The new value of the parameter.	
Parameters (inout):	None	
Parameters (out):	None	
Return value:	Std_ReturnType E_OK: The parameter was changed successfully. E_NOT_OK: The parameter change was rejected.	
Description:	Request to chan	ge a specific transport protocol parameter (e.g. block size).

]()



8.3.10 SecOC_AssociateKey

[SWS_SecOC_00116] [

<u> 0110_0000_0</u>		
Service name:	SecOC_AssociateKey (obsolete)	
Syntax:	<pre>Std_ReturnType SecOC_AssociateKey(uint16 keyID, const SecOC_KeyType* keyPtr</pre>	
Service ID[hex]:	0x07	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant	
Parameters (in):	keyID keyPtr	Identifier of a local key slot This element points to the key data or a key handle
Parameters (inout):	None	
Parameters (out):	None	
Return value:	Std_ReturnType E_OK: request successful E_NOT_OK: request failed	
Description:	E_NOT_OK: request failed Service associates a given key value to a given key id (see also parameter SecOCKeyID). Tags: atp.Status=obsolete	

| (SRS_BSW_00323, SRS_BSW_00357, SRS_BSW_00449, SRS_SecOC_00003)

8.3.11 SecOC_FreshnessValueRead

[SWS_SecOC_00117] [

Service name:	•	and (absolute)	
	SecOC_FreshnessValueRead (obsolete)		
Syntax:		C_FreshnessValueRead(
	uint16 freshness	sValueID,	
	uint64* counterV	Value	
)		
Service ID[hex]:	0x08		
Sync/Async:	Synchronous		
Reentrancy:	Non Reentrant for the sam	e FreshnessValueID. Reentrant for different	
	FreshnessValueIDs	FreshnessValueIDs	
Parameters (in):	freshnessValueID	Identifier of a specific Freshness Value	
Parameters	None		
(inout):			
Parameters (out):	counterValue	Holds the current value of the counter	
Determent	Std_ReturnType	E_OK: request successful	
Return value:	_	E_NOT_OK: request failed	
Description:	This service is used to read a specific Freshness Value value residing in the		
	SecOC module.		
	Tags:		
	atp.Status=obsolete		

| (SRS_BSW_00323, SRS_BSW_00357, SRS_BSW_00449, SRS_SecOC_00002)

8.3.12 SecOC_FreshnessValueWrite

[SWS_SecOC_00118] [

Service name:	SecOC_FreshnessValueWrite (obsolete)
Syntax:	Std_ReturnType SecOC_FreshnessValueWrite(



	uint16 freshnessValueID,		
	uint64 counterValue		
)		
Service ID[hex]:	0x09		
Sync/Async:	Synchronous		
Reentrancy:	Non Reentrant for the same FreshnessValueID. Reentrant for different FreshnessValueIDs		
Doromotoro (in):	freshnessValueID	Identifier of a specific Freshness Value	
Parameters (in):	counterValue	Holds the counter value to be written	
Parameters (inout):	None		
Parameters (out):	None		
Return value:	Std_ReturnType	E_OK: request successful E_NOT_OK: request failed	
Description:	This service is used to write a specific Freshness Value residing in the SecOC		
	module.		
	Tags:		
	atp.Status=obsolete		

| (SRS_BSW_00323, SRS_BSW_00357, SRS_BSW_00449, SRS_SecOC_00002)

8.3.13 Optional Interfaces

This chapter defines all external interfaces that are required to fulfil an optional functionality of the module.

[SWS_SecOC_00122] [

Service nemer				
Service name:	SecOC_VerifyStatusOverride			
Syntax:	Std_ReturnType SecOC_VerifyStatusOverride(
		uint16 freshnessValueID,		
	uint8 overrideStatus	·		
	uint8 numberOfMessag	ges'l'oOverride		
)			
Service ID[hex]:	0x0b			
Sync/Async:	Synchronous			
Reentrancy:	Non Reentrant for the same Fre	shnessValueID. Reentrant for different		
	FreshnessValueIDs			
	freshnessValueID	ID of the Freshness Value which when used to authenticate data, results in SecOC_VerifyStatus equal to OverrideStatus independent of the actual authentication status.		
Parameters (in):	overrideStatus	0 = Override VerifyStatus to "Fail" until further notice 1 = Override VerifyStatus to "Fail" until NumberOfMessagesToOverride is reached 2 = Cancel Override of VerifyStatus 41 = Override VerifyStatus to "Pass" until NumberOfMessagesToOverride is reached; only available if SecOCEnableForcedPassOverride is set to TRUE		
	numberOfMessagesToOverride	Number of sequential VerifyStatus to override when using a specific counter for authentication verification. This is only considered when OverrideStatus is equal to 1 or 41.		
Parameters (inout):	None			



Parameters (out):	None	
Return value:		E_OK: request successful E_NOT_OK: request failed
	when using a specific Freshness I-PDU. Using this interface, Veri 1. Indefinitely for received I-PDL authentication verification 2. For a number of sequentially Value for authentication verificat Note: When overriding the Verify	Js which use the specific Freshness Value for received I-PDUs which use the specific Freshness

| (SRS_BSW_00323, SRS_BSW_00357, SRS_BSW_00449, SRS_SecOC_00017)

8.4 Call-back notifications

8.4.1 SecOC_RxIndication

[SWS_SecOC_00124] [

Service name:	SecOC_RxIndication		
Syntax:	void SecOC_RxIndication(PduIdType RxPduId, const PduInfoType* PduInfoPtr)		
Service ID[hex]:	0x42		
Sync/Async:	Synchronous		
Reentrancy:	Reentrant for different Pdulds. Non reentrant for the same Pduld.		
	RxPduId ID of the received PDU.		
Parameters (in):	PduInfoPtr Contains the length (SduLength) of the received PDU, a pointer to a buffer (SduDataPtr) containing the PDU, and the MetaData related to this PDU.		
Parameters (inout):	None		
Parameters (out):	None		
Return value:	None		
Description:	Indication of a received PDU from a lower layer communication interface module.		

| (SRS_BSW_00323, SRS_BSW_00359, SRS_SecOC_00012)

8.4.2 SecOC_TpRxIndication

[SWS_SecOC_00125] [

Service name:	SecOC_TpRxIndication		
Syntax:	<pre>void SecOC_TpRxIndication(PduIdType id, Std_ReturnType result)</pre>		
Service ID[hex]:	0x45	0x45	
Sync/Async:	Synchronou	Synchronous	
Reentrancy:	Reentrant		
Parameters (in):	id Identification of the received I-PDU.		
raiailleters (III).	result Result of the reception.		
Parameters	None		



(inout):	
Parameters (out):	None
Return value:	None
•	Called after an I-PDU has been received via the TP API, the result indicates whether the transmission was successful or not.

| (SRS_BSW_00323, SRS_BSW_00359, SRS_BSW_00449, SRS_SecOC_00012)

8.4.3 SecOC_TxConfirmation

[SWS_SecOC_00126] [

<u>[0110_00000_0</u>			
Service name:	SecOC_TxCor	SecOC_TxConfirmation	
Syntax:	<pre>void SecOC_TxConfirmation(PduIdType TxPduId, Std_ReturnType result)</pre>		
Service ID[hex]:	0x40		
Sync/Async:	Synchronous		
Reentrancy:	Reentrant for different Pdulds. Non reentrant for the same Pduld.		
	TxPduld	ID of the PDU that has been transmitted.	
Parameters (in):	result	E_OK: The PDU was transmitted. E_NOT_OK: Transmission of the PDU failed.	
Parameters (inout):	None		
Parameters (out):	None		
Return value:	None		
Description:	The lower layer communication interface module confirms the transmission of a PDU, or the failure to transmit a PDU.		

| (SRS_BSW_00323, SRS_BSW_00359, SRS_SecOC_00012)

8.4.4 SecOC_TpTxConfirmation

[SWS_SecOC_00152] [

Service name:	SecOC_Tp	SecOC_TpTxConfirmation	
Syntax:	<pre>void SecOC_TpTxConfirmation(PduIdType id, Std_ReturnType result)</pre>		
Service ID[hex]:	0x48		
Sync/Async:	Synchronou	JS	
Reentrancy:	Reentrant	Reentrant	
Parameters (in):	id	Identification of the transmitted I-PDU.	
Parameters (m).	result	Result of the transmission of the I-PDU.	
Parameters	None		
(inout):			
Parameters (out):	None		
Return value:	None		
Description:	This function is called after the I-PDU has been transmitted on its network, the result indicates whether the transmission was successful or not.		

| (SRS_BSW_00323, SRS_BSW_00359, SRS_BSW_00449, SRS_SecOC_00012)



8.4.5 SecOC_TriggerTransmit

[SWS_SecOC_00127] [

Service name:	SecOC_TriggerT	ransmit
Syntax:	Std_ReturnTy PduIdTyp	pe SecOC_TriggerTransmit(e TxPduId, ype* PduInfoPtr
Service ID[hex]:	0x41	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant for diff	ferent Pdulds. Non reentrant for the same Pduld.
Parameters (in):	TxPduld	ID of the SDU that is requested to be transmitted.
Parameters (inout):	PduInfoPtr	Contains a pointer to a buffer (SduDataPtr) to where the SDU data shall be copied, and the available buffer size in SduLengh. On return, the service will indicate the length of the copied SDU data in SduLength.
Parameters (out):	None	
Return value:		E_OK: SDU has been copied and SduLength indicates the number of copied bytes. E_NOT_OK: No SDU data has been copied. PduInfoPtr must not be used since it may contain a NULL pointer or point to invalid data.
Description:	available data fits If it fits, it shall co and update the lo If not, it returns E	he upper layer module (called module) shall check whether the s into the buffer size reported by PduInfoPtr->SduLength. ppy its data into the buffer provided by PduInfoPtr->SduDataPtr ength of the actual copied data in PduInfoPtr->SduLength. E_NOT_OK without changing PduInfoPtr.

(SRS_BSW_00323, SRS_BSW_00357, SRS_BSW_00449, SRS_SecOC_00012)

8.4.6 SecOC_CopyRxData

[SWS_SecOC_00128] [

Service name:	SecOC_CopyRxData	
Syntax:	BufReq_ReturnType SecOC_CopyRxData(PduIdType id, const PduInfoType* info, PduLengthType* bufferSizePtr)	
Service ID[hex]:	0x44	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant	
	id	Identification of the received I-PDU.
Parameters (in):		Provides the source buffer (SduDataPtr) and the number of bytes to be copied (SduLength). An SduLength of 0 can be used to query the current amount of available buffer in the upper layer module. In this case, the SduDataPtr may be a NULL_PTR.
Parameters (inout):	None	
Parameters (out):	bufferSizePtr	Available receive buffer after data has been copied.
Return value:		BUFREQ_OK: Data copied successfully BUFREQ_E_NOT_OK: Data was not copied because an error occurred.
Description:	This function is called to the upper layer.	d to provide the received data of an I-PDU segment (N-PDU)



Each call to this function provides the next part of the I-PDU data.
The size of the remaining data is written to the position indicated by bufferSizePtr.

J (SRS_BSW_00323, SRS_BSW_00357, SRS_SecOC_00012)

8.4.7 SecOC_CopyTxData

[SWS_SecOC_00129] [

Service name:	SecOC_CopyTxData		
Syntax:	BufReq ReturnType SecOC CopyTxData(
Зупах.	PduIdType id,		
	const PduInfoType* info,		
	RetryInfoType* retry,		
	PduLengthType* availableDataPtr		
)		
Service ID[hex]:	0x43		
Sync/Async:	Synchronous		
Reentrancy:	Reentrant		
	id	Identification of the transmitted I-PDU.	
	info	Provides the destination buffer (SduDataPtr) and the number	
		of bytes to be copied (SduLength).	
		If not enough transmit data is available, no data is copied by	
		the upper layer module and BUFREQ_E_BUSY is returned.	
		The lower layer module may retry the call.	
		An SduLength of 0 can be used to indicate state changes in	
		the retry parameter or to query the current amount of	
		available data in the upper layer module. In this case, the	
		SduDataPtr may be a NULL_PTR.	
	retry	This parameter is used to acknowledge transmitted data or	
		to retransmit data after transmission problems.	
		If the retry parameter is a NULL_PTR, it indicates that the	
Parameters (in):		transmit data can be removed from the buffer immediately	
		after it has been copied. Otherwise, the retry parameter	
		must point to a valid RetryInfoType element.	
		,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	
		If TpDataState indicates TP_CONFPENDING, the previously	
		copied data must remain in the TP buffer to be available for	
		error recovery.	
		TP_DATACONF indicates that all data that has been copied	
		before this call is confirmed and can be removed from the	
		TP buffer. Data copied by this API call is excluded and will	
		be confirmed later.	
		TP_DATARETRY indicates that this API call shall copy	
		previously copied data in order to recover from an error. In this case TxTpDataCnt specifies the offset in bytes from the	
		current data copy position.	
Parameters Parameters	None	parton data copy position.	
(inout):			
	availableDataPtr	Indicates the remaining number of bytes that are available in	
Parameters (out):		the upper layer module's Tx buffer. availableDataPtr can be	
arameters (out).		used by TP modules that support dynamic payload lengths	
		(e.g. FrIsoTp) to determine the size of the following CFs.	
	BufReq_ReturnType	BUFREQ_OK: Data has been copied to the transmit buffer	
		completely as requested.	
Return value:		BUFREQ_E_BUSY: Request could not be fulfilled, because	
		the required amount of Tx data is not available. The lower	
		layer module may retry this call later on. No data has been	



	copied. BUFREQ_E_NOT_OK: Data has not been copied. Request failed.
·	This function is called to acquire the transmit data of an I-PDU segment (N-PDU). Each call to this function provides the next part of the I-PDU data unless retry- >TpDataState is TP_DATARETRY. In this case the function restarts to copy the data beginning at the offset from the current position indicated by retry- >TxTpDataCnt. The size of the remaining data is written to the position indicated by availableDataPtr.

] (SRS_BSW_00323, SRS_BSW_00357, SRS_SecOC_00012)

8.4.8 SecOC_StartOfReception

[SWS_SecOC_00130] [

[SWS_Secoc_0	0130]	
Service name:	SecOC_StartOfReception	
Syntax:	BufReq_ReturnType SecOC_StartOfReception(PduIdType id, const PduInfoType* info, PduLengthType TpSduLength, PduLengthType* bufferSizePtr)	
Service ID[hex]:	0x46	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant	
	id	Identification of the I-PDU.
Parameters (in):	info	Pointer to a PduInfoType structure containing the payload data (without protocol information) and payload length of the first frame or single frame of a transport protocol I-PDU reception, and the MetaData related to this PDU. If neither first/single frame data nor MetaData are available, this parameter is set to NULL_PTR.
	TpSduLength	Total length of the N-SDU to be received.
Parameters (inout):	None	
Parameters (out):	bufferSizePtr	Available receive buffer in the receiving module. This parameter will be used to compute the Block Size (BS) in the transport protocol module.
Return value:	BufReq_ReturnType	BUFREQ_OK: Connection has been accepted. bufferSizePtr indicates the available receive buffer; reception is continued. If no buffer of the requested size is available, a receive buffer size of 0 shall be indicated by bufferSizePtr. BUFREQ_E_NOT_OK: Connection has been rejected; reception is aborted. bufferSizePtr remains unchanged. BUFREQ_E_OVFL: No buffer of the required length can be provided; reception is aborted. bufferSizePtr remains unchanged.
Description:	This function is called at the start of receiving an N-SDU. The N-SDU might be fragmented into multiple N-PDUs (FF with one or more following CFs) or might consist of a single N-PDU (SF). The service shall provide the currently available maximum buffer size when invoked with TpSduLength equal to 0.	

(SRS_BSW_00323, SRS_BSW_00357, SRS_SecOC_00012)

[SWS_SecOC_00181] [

In case $\texttt{SecOC_StartOfReception}$ is called with TpSduLength equal to 0, the SecOC module shall return BUFREQ E NOT OK and no further action shall be taken.

| ()

8.4.9 CSM callback interfaces

[SWS_SecOC_00012] [

If the SecOC module uses the Csm module asynchronously to calculate or verify the authenticator, SecOC shall provide callback functions according to Csm CallbackType.

| (SRS_BSW_00457, SRS_SecOC_00003)

8.5 Callout Definitions

Callouts are pieces of code that have to be added to the SecOC during ECU integration. The content of most callouts is hand-written code.

8.5.1 SecOC_GetRxFreshness

ISWS SecOC 910071

Service name:	SecOC GetRxFreshness	
Syntax:	Std_ReturnType SecOC_GetRxFreshness(uint16 SecOCFreshnessValueID, const uint8* SecOCTruncatedFreshnessValue, uint32 SecOCTruncatedFreshnessValueLength, uint16 SecOCAuthVerifyAttempts, uint8* SecOCFreshnessValue, uint32* SecOCFreshnessValueLength)	
Service ID[hex]:	0x4f	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant	
	SecOCFreshnessValueID	Holds the identifier of the freshness value.
	SecOCTruncatedFreshnessValue	Holds the truncated freshness value that was contained in the Secured I-PDU.
Parameters (in):	SecOCTruncatedFreshnessValueLength	Holds the length in bits of the truncated freshness value.
	SecOCAuthVerifyAttempts	Holds the number of authentication verify attempts of this PDU since the last reception. The value is 0 for the first attempt and incremented on every unsuccessful verification attempt.
Parameters (inout):	SecOCFreshnessValueLength	Holds the length in bits of the freshness value.
Parameters (out):	SecOCFreshnessValue	Holds the freshness value to be used for the calculation of the authenticator.
Return value:	Std_ReturnType E_OK: request successful E_NOT_OK: request failed, a freshne value cannot be provided due to gene issues for freshness or this FreshnessValueId. E_BUSY: The freshness information of temporarily not be provided.	
Description:	This interface is used by the SecOC to obtain the current freshness value.	



| (SRS_SECOC_00003)

8.5.2 SecOC_GetRxFreshnessAuthData

[SWS_SecOC_91006] [

3VV3_3eCOC_9			
Service name:	SecOC_GetRxFreshnessAuthData		
Syntax:	<pre>Std_ReturnType SecOC_GetRxFreshnessAuthData(uint16 SecOCFreshnessValueID, const uint8* SecOCTruncatedFreshnessValue, uint32 SecOCTruncatedFreshnessValueLength, const uint8* SecOCAuthDataFreshnessValue, uint16 SecOCAuthDataFreshnessValueLength, uint16 SecOCAuthVerifyAttempts, uint8* SecOCFreshnessValue, uint32* SecOCFreshnessValueLength)</pre>		
Service ID[hex]:	0x4e		
Sync/Async:	Synchronous		
Reentrancy:	Reentrant		
	SecOCFreshnessValueID	Holds the identifier of the freshness value.	
	SecOCTruncatedFreshnessValue	Holds the truncated freshness value that was contained in the Secured I-PDU.	
	SecOCTruncatedFreshnessValueLength	freshness value.	
Parameters (in):	SecOCAuthDataFreshnessValue	The parameter holds a part of the received, not yet authenticated PDU. The parameter is optional (see description)	
	SecOCAuthDataFreshnessValueLength	This is the length value in bits that holds the freshness from the authentic PDU. The parameter is optional (see description).	
	SecOCAuthVerifyAttempts	Holds the number of authentication verify attempts of this PDU since the last reception. The value is 0 for the first attempt and incremented on every unsuccessful verification attempt.	
Parameters (inout):	SecOCFreshnessValueLength Holds the length in bits of the freshness value.		
Parameters (out):	SecOCFreshnessValue Holds the freshness value to be used the calculation of the authenticator.		
Return value:	Std_ReturnType E_OK: request successful E_NOT_OK: request failed, a freshness value cannot be provided due to general issues for freshness or this FreshnessValueId. E_BUSY: The freshness information can temporarily not be provided.		
Description:	This interface is used by the SecOC to ol	btain the current freshness value.	

J (SRS_SECOC_00003)



8.5.3 SecOC_GetTxFreshness

[SWS_SecOC_91004] [

Service name:	SecOC_GetTxFreshness		
Syntax:	Std_ReturnType SecOC_GetTxFreshness(uint16 SecOCFreshnessValueID, uint8* SecOCFreshnessValue, uint32* SecOCFreshnessValueLength)		
Service ID[hex]:	0x52		
Sync/Async:	Synchronous		
Reentrancy:	Reentrant		
Parameters (in):	SecOCFreshnessValueID Holds the identifier of the freshness value.		
Parameters (inout):	SecOCFreshnessValueLength	Holds the length of the provided freshness in bits.	
Parameters (out):	SecOCFreshnessValue	Holds the current freshness value	
Return value:	Std_ReturnType	E_OK: request successful E_NOT_OK: request failed, a freshness value cannot be provided due to general issues for freshness or this FreshnessValueld. E_BUSY: The freshness information can temporarily not be provided.	
Description:	This interface is used by the So	This interface is used by the SecOC to obtain the current freshness value.	

(SRS_SECOC_00003, SRS_SECOC_00006)

8.5.4 SecOC_GetTxFreshnessTruncData

[SWS_SecOC_91003] [

Service name:	SecOC_GetTxFreshnessTruncData		
Syntax:	Std_ReturnType SecOC_GetTxFreshnessTruncData(uint16 SecOCFreshnessValueID, uint8* SecOCFreshnessValue, uint32* SecOCFreshnessValueLength, uint8* SecOCTruncatedFreshnessValue, uint32* SecOCTruncatedFreshnessValueLength)		
Service ID[hex]:	0x51		
Sync/Async:	Synchronous		
Reentrancy:	Reentrant		
Parameters (in):	SecOCFreshnessValueID	Holds the identifier of the freshness value.	
Doromotoro	SecOCFreshnessValueLength	Holds the length of the provided freshness in bits.	
Parameters (inout):	SecOCTruncatedFreshnessValue	Holds the truncated freshness to be included into the Secured I-PDU. The parameter is optional.	
	SecOCFreshnessValue	Holds the current freshness value.	
Parameters (out):	SecOCTruncatedFreshnessValueLength	Provides the truncated freshness length configured for this freshness. The function may adapt the value if needed or can leave it unchanged if the configured length and provided length is the same.	
Return value:	Std_ReturnType E_OK: request successful E_NOT_OK: request failed, a freshnes		



		value cannot be provided due to general issues for freshness or this FreshnessValueId. E_BUSY: The freshness information can temporarily not be provided.
•	This interface is used by the SecOC to olinterface function provides also the truncal-PDU.	otain the current freshness value. The ated freshness transmitted in the secured

(SRS_SECOC_00003, SRS_SECOC_00006)

8.5.5 SecOC_SPduTxConfirmation

[SWS_SecOC_91005] [

Service name:	SecOC_SPduTxConfirmation	
Syntax:	<pre>void SecOC SPduTxConfirmation(</pre>	
	uint16 SecOCFreshnessValueID	
Service ID[hex]:	0x4d	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant	
Parameters (in):	SecOCFreshnessValueID Holds the identifier of the freshness value.	
Parameters	None	
(inout):		
Parameters (out):	None	
Return value:	None	
Description:	This interface is used by the SecOC to indicate that the Secured I-PDU has been initiated for transmission.	

| (SRS_SECOC_00002, SRS_SECOC_00003)

8.6 Scheduled functions

8.6.1 SecOC_MainFunctionRx

[SWS_SecOC_00171] [

Service name:	SecOC_MainFunctionRx	
Syntax:	<pre>void SecOC_MainFunctionRx(</pre>	
	void	
Service ID[hex]:	0x06	
Description:	This function performs the processing of the SecOC module's authentication and	
	verification processing for the Rx path.	

(SRS_BSW_00373, SRS_BSW_00425)

[SWS_SecOC_00172] [

If the SecOC module was not previously initialized with a call to SecOC_Init, then a call to SecOC_MainFunctionRx shall simply return. | (SRS_SecOC_00005)

[SWS_SecOC_00173] [



The cycle time of the SecOC_MainFunctionRx is configured by the parameter SecOCMainFunctionPeriodRx.

| (SRS_SecOC_00025)

[SWS_SecOC_00174] [

If Secoc_MainFunctionRx is scheduled, the SecOC shall firstly check if there are new Secured I-PDUs to be verified. If yes the SecOC module shall process the verification of each of the IPDUs identified as new subsequently in the very same main function call.

| (SRS_SecOC_00025)

[SWS SecOC 00175] [

For each newly successfully verified Secured I-PDU, the SecOC module shall immediately pass the Authentic I-PDU to the upper layer communication module by calling PduR_SecOC[If|Tp]RxIndication for the Authentic I-PDU. I (SRS SecOC 00025)

8.6.2 SecOC_MainFunctionTx

[SWS_SecOC_00176] [

Service name:	SecOC_MainFunctionTx	
Syntax:	void SecOC MainFunctionTx(
	void	
)	
Service ID[hex]:	0x03	
Description:	This function performs the processing of the SecOC module's authentication and	
	verification processing for the Tx path.	

(SRS BSW 00373, SRS BSW 00425)

[SWS_SecOC_00177] [

If the SecOC module was not previously initialized with a call to $SecOC_Init$, then a call to $SecOC_MainFunctionTx$ shall simply return.

| (SRS_SecOC_00005)

[SWS_SecOC_00178] [

The cycle time of the SecOC_MainFunctionTx is configured by the parameter SecOCMainFunctionPeriodTx.

(SRS_SecOC_00025)

[SWS_SecOC_00179] [

If SecOC_MainFunctionTx is scheduled, the SecOC shall firstly check if there are new Authentic I-PDUs to be authenticated. If yes the SecOC module shall process the authentication of each of the IPDUs identified as new subsequently in the very same main function call.

| (SRS_SecOC_00025)

[SWS_SecOC_00180] [

For each newly authenticated Authentic I-PDU, the SecOC module shall immediately trigger the transmission of the Secured I-PDU at the lower layer module by calling the



PduR. J (SRS_SecOC_00025)

8.7 Expected Interfaces

8.7.1 Mandatory Interfaces

This chapter defines all external interfaces that are required to fulfill the core functionality of the module.

[SWS_SecOC_00137] [

0110_00000_00101]		
API function	Description	
	Requests cancellation of an ongoing transmission of a PDU in a lower layer communication module.	
	Indication of a received PDU from a lower layer communication interface module.	
	The lower layer communication interface module confirms the transmission of a PDU, or the failure to transmit a PDU.	
PduR_SecOCTransmit	Requests transmission of a PDU.	

(SRS_BSW_00384)

8.7.2 Optional Interfaces

[SWS_SecOC_00138] [

API function	Description
Det_ReportError	Service to report development errors.
PduR_SecOCCancelReceive	Requests cancellation of an ongoing reception of a PDU in a lower layer transport protocol module.
PduR_SecOCChangeParameter	Request to change a specific transport protocol parameter (e.g. block size).
PduR_SecOCCopyRxData	This function is called to provide the received data of an I-PDU segment (N-PDU) to the upper layer. Each call to this function provides the next part of the I-PDU data. The size of the remaining data is written to the position indicated by bufferSizePtr.
PduR_SecOCCopyTxData	This function is called to acquire the transmit data of an I-PDU segment (N-PDU). Each call to this function provides the next part of the I-PDU data unless retry->TpDataState is TP_DATARETRY. In this case the function restarts to copy the data beginning at the offset from the current position indicated by retry->TxTpDataCnt. The size of the remaining data is written to the position indicated by availableDataPtr.
PduR_SecOCStartOfReception	This function is called at the start of receiving an N-SDU. The N-SDU might be fragmented into multiple N-PDUs (FF with one or more following CFs) or might consist of a single N-PDU (SF). The service shall provide the currently available maximum buffer size when invoked with TpSduLength equal to 0.
PduR_SecOCTpRxIndication	Called after an I-PDU has been received via the TP API, the result indicates whether the transmission was successful or not.
PduR_SecOCTpTxConfirmation	This function is called after the I-PDU has been transmitted on its network, the result indicates whether the transmission was successful or not.



| (SRS_BSW_00384)

8.7.3 Configurable Interfaces

8.7.3.1 SecOC VerificationStatusCallout

If configured by SecOCVerificationStatusCallout (see ECUC_SecOC_00004), the SecOC module shall invoke a callout function to notify other modules on the verification status of the most recently received Secured I-PDU.

[SWS_SecOC_00119] [

Service name:	SecOC_VerificationStatusCallout	
Syntax:	<pre>void SecOC_VerificationStatusCallout(SecOC_VerificationStatusType verificationStatus)</pre>	
Service ID[hex]:	0x50	
Sync/Async:	Synchronous	
Reentrancy:	Non Reentrant for the same FreshnessValueID. Reentrant for different FreshnessValueIDs	
Parameters (in):	verificationStatus Data structure to bundle the status of a verification attempt for a specific Freshness Value and Data ID	
Parameters (inout):	None	
Parameters (out):	None	
Return value:	None	
Description:	Service is used to propagate the status of each verification attempt from the SecOC module to other modules. This service can be configured such that: - Only: "False" Verification Status is propagated to modules - Both: "True" and "False" Verification Status are propagated to modules - None: No Verification Status is propagated	

(SRS_BSW_00359, SRS_SecOC_00017)

Note: The argument freshnessValueID allows for unambiguously identifying the Secured I-PDU that was subject of the verification attempt. Since each Secured I-PDU has at least one but possibly two related Freshness Value IDs (i.e. a Secured I-PDU may have a Secondary Freshness Value ID), Secoc_VerificationStatusCallout is able to indicate for which of the freshness values the verification attempt has been carried out.

Note: Any module that is configured to be notified by the means of

SecOC_VerificationStatusCallout has to implement a target function that is conforming to the above signature. The name of the target function listed above are not fixed. The name could be configured by means of the parameter SecOCVerificationStatusCallout.

8.8 Service Interfaces

This chapter defines the AUTOSAR Interfaces of the SecOC Service (<MA>).

The definitions in this section are interpreted to be in ARPackage AUTOSAR/Services/<MA>.



8.8.1 Overview

This chapter is an addition to the specification of the SecOC module. Whereas the other parts of the specification define the behavior and the C-interfaces of the corresponding basic software module, this chapter formally specifies the corresponding AUTOSAR service in terms of the SWC template. The interfaces described here will be visible on the VFB and are used to generate the Rte between application software and the SecOC module.

8.8.2 Sender Receiver Interfaces

8.8.2.1 Verification Status Service

[SWS SecOC 00141] [

Name	VerificationStatus	
Comment	This service realizes a notification service that is used to propagate the status of each authentication attempt from the SecOC module to the application layer. This service can be configured such that: - Only "False" Verification Status is propagated to the application layer - Both "True" and "False" Verification Status are propagated to the application layer - No Verification Status is propagated to the application layer	
IsService	true	
Variation		
	verificationStatus	
Data Elements	Туре	SecOC_VerificationStatusType
	Variation	

| (SRS_SecOC_00022)

Note: The Secoc_VerificationStatusService is used to propagate the status of each verification attempt from the SecOC module to an arbitrary number of application software components. It can be used to continuously monitor the number of failed verification attempts and would allow setting up a security management system/intrusion detection system that is able to detect an attack flood and react with adequate dynamic countermeasures.

[SWS_SecOC_00148][

SecOC shall define a provide port for the <code>SecOC_VerificationStatusService</code> interface and call the generated Rte function as configured by the parameter <code>SecOCVerificationStatusPropagationMode</code>. The sender/receiver interface shall be defined as standard interface.

J(SRS_SecOC_00022)



8.8.3 Client Server Interfaces

8.8.3.1 Verification Status Configuration Service [SWS_SecOC_00142] [

Name	VerifyStatusConfiguration		VerifyStatusConfiguration	
Comment	Verify Status Configuration Service of SecOC			
IsService	true			
Variation				
Descible Errore	0	E_OK		
Possible Errors	1	E_NOT_OK		

VerifyStatus(VerifyStatusOverride			
Comments	This service provides the ability to override the VerifyStatus with "Fail" or "Pass" when using a specific Freshness Value to verify authenticity of data making up an I-PDU. Using this interface, VerifyStatus may be overridden 1. Indefinitely for received I-PDUs which use the specific Freshness Value for authentication verification 2. For a number of sequentially received I-PDUs which use the specific Freshness Value for authentication verification. Note: When overriding the VerifyStatus, the CSM shall still be used to validate authentication of the data making up an I-PDU. This service is optional.			
Variation				
	freshnessValueId	Comment	Identifier of the Freshness Value which resulted in the AuthenticationStatus	
		Туре	uint16	
		Variation		
		Direction	IN	
Parameters	overrideStatus	Comment	0 = Override VerifyStatus to "Fail" until further notice 1 = Override VerifyStatus to "Fail" until NumberOfMessagesToOverride is reached 2 = Cancel Override of VerifyStatus 41 = Override VerifyStatus to "Pass" until NumberOfMessagesToOverride is reached; only available if SecOCEnableForcedPassOverride is set to TRUE	
		Туре	uint8	
		Variation		
		Direction	IN	



	numberOfMessagesToOverride		Number of sequential VerifyStatus to override when using a specific counter for authentication verification. This is only considered when OverrideStatus is equal to 1 or 41.
	number Onviessages i oovernide	Туре	uint8
		Variation	
		Direction	IN
Possible	E_OK	Operation successful	
Errors	E_NOT_OK		

J (SRS_SecOC_00017)

8.8.3.2 CounterManagement

[SWS_SecOC_00140] [

	-			
Name	CounterManagement (obsolete)			
Comment	Counter Management Service of SecOC Tags: atp.Status=obsolete			
IsService	true			
Variation				
Doggible Errore	0	E_OK		
Possible Errors	1	E_NOT_OK		

FreshnessValueRead				
Comments	This service is used to read a specific Freshness Value value residing in the SecOC module.			
Variation				
		Comment	Identifier of a specific Freshness Value	
	freshnessValueId	Туре	uint16	
		Variation		
Parameters		Direction	IN	
Parameters	counterValue	Comment	Holds the current value of the counter	
		Туре	uint64	
		Variation		
		Direction	OUT	



Possible	E_OK	Operation successful			
Errors	E_NOT_OK				
FreshnessValue	eWrite				
Comments	This service is used to module.	write a specific	Freshness Value residing in the SecOC		
Variation					
	freshnessValueId	Comment	Identifier of a specific Freshness Value		
		Туре	uint16		
		Variation			
Doromotoro		Direction	IN		
Parameters		Comment	Holds the counter value to be written		
	counterValue	Туре	uint64		
		Variation			
		Direction	IN		
Possible	E_OK	Operation suc	ccessful		
Errors	E_NOT_OK				

J (SRS_SecOC_00002)

8.8.3.3 FreshnessManagement

[SWS_SecOC_91002] [

Name	FreshnessManagement			
Comment	Freshness M	Freshness Management for SecOC		
IsService	true	true		
Variation				
	0 E_OK			
Possible Errors	1 E_NOT_OK			
	2 E_BUSY			

GetRxFresh	ness
Comments	This interface is used by the SecOC to obtain the current freshness value. This operation provides also a part of the Authentic-PDU data if configured.



Variation	({ecuc(SecOC/SecOCRxPduProcessin	g/SecOCUse	eAuthDataFreshness)} == FALSE)
		Comment	Identifier of the freshness
		Туре	uint16
	freshnessValueId	Variation	
		Direction	IN
		Comment	The truncated freshness value from the received Secured-IPDU
	truncatedFreshnessValue	Туре	SecOC_FreshnessArrayType
		Variation	
		Direction	IN
		Comment	Length in bits of the truncated freshness value
	truncatedFreshnessValueLength	Туре	uint32
	· ·	Variation	
		Direction	IN
Parameters	authVerifyAttempts	Comment	The number of authentication verify attempts for the current PDU
		Туре	uint16
		Variation	
		Direction	IN
	freshnessValue	Comment	The freshness value for this PDU
		Туре	SecOC_FreshnessArrayType
		Variation	
		Direction	ОИТ
		Comment	The freshness value length in bits.
	freshnessValueLength	Туре	uint32
		Variation	
		Direction	INOUT
	E_OK	Operation s	successful
Possible	E_NOT_OK		
Errors	E_BUSY	Operation temporary failed, a freshness cannot be provided at the moment.	



GetRxFreshr	nessAuthData			
Comments	This interface is used by the SecOC to obtain the current freshness value. This operation provides also a part of the Authentic-PDU data if configured.			
Variation	({ecuc(SecOC/SecOCRxPduProcessing/SecOCUseAuthDataFreshness)} == TRUE)			
		Comment	Identifier of the freshness	
	for also a call also also	Туре	uint16	
	freshnessValueId	Variation		
		Direction	IN	
		Comment	The truncated freshness value from the received Secured-IPDU	
	truncatedFreshnessValue	Туре	SecOC_FreshnessArrayType	
		Variation		
		Direction	IN	
	truncatedFreshnessValueLength	Comment	Length in bits of the truncated freshness value	
		Туре	uint32	
		Variation		
		Direction	IN	
Parameters	authenticDataFreshnessValue	Comment	The selected part of the authentic data.	
		Туре	SecOC_FreshnessArrayType	
		Variation		
		Direction	IN	
		Comment	The length in bits of the authentic data part.	
	authenticDataFreshnessValueLength	Туре	uint16	
		Variation		
		Direction	IN	
		Comment	The number of authentication verify attempts for this PDU	
	authVerifyAttempts	Туре	uint16	
		Variation		
		Direction	IN	



		Comment	The freshness value for this PDU
	freshnessValue	Туре	SecOC_FreshnessArrayType
		Variation	
		Direction	ОИТ
		Comment	The freshness value length in bits.
	freshnessValueLength	Туре	uint32
		Variation	
		Direction	INOUT
	E_OK	Operation s	successful
Possible	E_NOT_OK		
Errors	E_BUSY		emporary failed, a freshness provided at the moment.
GetTxFreshn	ess		
Comments	This operation is used by the SecOC to freshnessValueId.	obtain the fr	eshness that corresponds to the
Variation	({ecuc(SecOC/SecOCTxPduProcessing == FALSE)	g/SecOCProv	videTxTruncatedFreshnessValue)}
		Comment	Identifier of the freshness
	freshnessValueId	Туре	uint16
		Variation	
		Direction	IN
	frachnoss)/alus	Direction	IN
Parameters	freshnessValue	Direction Comment	IN Freshness value
Parameters	freshnessValue	Direction Comment Type	IN Freshness value SecOC_FreshnessArrayType
Parameters	freshnessValue	Direction Comment Type Variation	IN Freshness value SecOC_FreshnessArrayType
Parameters	freshnessValue freshnessValueLength	Direction Comment Type Variation Direction	IN Freshness value SecOC_FreshnessArrayType OUT Length in bits of the freshness
Parameters		Direction Comment Type Variation Direction Comment	IN Freshness value SecOC_FreshnessArrayType OUT Length in bits of the freshness value
Parameters		Direction Comment Type Variation Direction Comment Type	IN Freshness value SecOC_FreshnessArrayType OUT Length in bits of the freshness value uint32



Errors	E_NOT_OK				
	E_BUSY		emporary failed, a freshness provided at the moment.		
GetTxFreshr	nessTruncData				
Comments	This operation is used by the SecOC to obtain the freshness that corresponds to the freshness Valueld. The operation provides the freshness and also the truncated freshness that shall be placed into the Secured-IPDU.				
Variation	({ecuc(SecOC/SecOCTxPduProcessing == TRUE)	g/SecOCProv	videTxTruncatedFreshnessValue)}		
		Comment	Identifier of the freshness		
	frach a cal Valual d	Туре	uint16		
	freshnessValueId	Variation			
		Direction	IN		
	freshnessValue	Comment	Freshness value		
		Туре	SecOC_FreshnessArrayType		
		Variation			
		Direction	OUT		
	freshnessValueLength	Comment	Length in bits of the freshness value		
		Туре	uint32		
Parameters		Variation			
		Direction	INOUT		
		Comment	The truncated freshness value that has to be placed into the Secured-IPDU		
	truncatedFreshnessValue	Туре	SecOC_FreshnessArrayType		
		Variation			
		Direction	OUT		
		Comment	The length in bits for the truncated freshness.		
	truncatedFreshnessValueLength	Туре	uint32		
		Variation			
		Direction	INOUT		
Possible	E_OK	Operation s	successful		



Errors	E_NOT_OK		
	E_BUSY	Operation temporary failed, a freshness cannot be provided at the moment.	
SPduTxConf	irmation		
Comments	This operation is used by the SecOC to indicate that the Secured I-PDU has been initiated for transmission.		
Variation			
		Comment	Identifier of the freshness
Doromotoro	frachnood/aluald	Туре	uint16
Parameters	freshnessValueId	Variation	
		Direction	IN
Possible Errors	E_OK	Operation successful	

[(SRS_SECOC_00003, SRS_SECOC_00021, SRS_SECOC_00022)

8.8.3.4 KeyManagement [SWS_SecOC_00139] [

Name	KeyManagement (obsolete)		
Comment	Key Management Service of SecOC Tags: atp.Status=obsolete		
IsService	true		
Variation			
Possible Errors	0	E_OK	
Possible Effors	1	E_NOT_OK	

AssociateKey				
Comments	Associates a	Associates a given key value to a given key id (see also parameter SecOCKeyID).		
Variation				
	keyld	Comment	Identifier of a local key slot	
Dovovostovo		Туре	uint16	
Parameters		Variation		
		Direction	IN	



		Comment	Comment This element points to the key data or a key handle
	keyPtr	Туре	SecOC_KeyType
		Variation	
		Direction	IN
Possible Errors E_OK Operation successful E_NOT_OK		successful	

] (SRS_SecOC_00003)

8.8.4 Ports

8.8.4.1 Freshness Management [SWS_SecOC_91001] [

Name	FreshnessManagement			
Kind	RequiredPort Interface FreshnessManagement			
Description	Port for the provision of freshness for SecOC.			
Variation	({ecuc(SecOC/SecOCGeneral/SecOCQueryFreshnessValue)} == RTE)			

] (SRS_SECOC_00003)

8.8.5 Implementation Data Types

8.8.5.1 SecOC_AlignType [SWS SecOC 00154] [

[0.1.0]	,00_0010 1]		
Name	SecOC_AlignType (obsolete)		
Kind	Туре		
Derived from	<maxalignscalartype></maxalignscalartype>		
Description	A scalar type which has maximum alignment restrictions on the given platform. This value is configured by "SecOCMaxAlignScalarType". <maxalignscalartype> can be e.g. uint8, uint16 or uint32. This type shall be consistent with Csm_AlignType (if CSM is used) or Cal_AlignType (if CAL is used). Tags: atp.Status=obsolete</maxalignscalartype>		
Variation			



| (SRS_SecOC_00005)

8.8.5.2 SecOC_KeyType [SWS_SecOC_00105] [

Name	SecOC_KeyType (obsolete)			
Kind	Structure			
	length uint32 This element contains the length of in element 'data'.		This element contains the length of the key stored in element 'data'.	
Elements	data	Array of SecOC_AlignType	This element contains the key data or a key handle.	
	Size	Size	SECOC_KEY_MAX_SIZE	
Description	Data structure to refer to key data or a key handle. Tags: atp.Status=obsolete			
Variation				

] (SRS_SecOC_00005)

8.8.5.3 SecOC_FreshnessArrayType

ISWS SecOC 910121

[0.1.0_00000_0.0.1]			
Name	SecOC_FreshnessArrayType		
Kind	Array Element type uint8		
Size	SECOC_MAX_FRESHNESS_SIZE Elements		
Description			
Variation			

| (SRS_SECOC_00003, SRS_SECOC_00021, SRS_SECOC_00022)

8.8.5.4 SecOC_VerificationResultType

[SWS_SecOC_00149] [

Name	SecOC_VerificationResultType			
Kind	Enumeration			
	SECOC_VERIFICATIONSUCCESS Verification successful			
Range	SECOC_VERIFICATIONFAILURE		Verification not successful	
J	SECOC_FRESHNESSFAILURE Verification not successful because of wrong freshness value.			
Description	Enumeration to indicate verification results.			
Variation				

| (SRS_SecOC_00022)



Note: ${\tt SECOC_FRESHNESSFAILURE}$ is only applicable if the complete freshness value has been transmitted.

8.8.5.5 SecOC_VerificationStatusType ISWS_SecOC_001601 [

Name	SecOC_VerificationStatusType				
Kind	Structure				
	freshnessValuel D	uint16	Identifier of the Freshness Value which resulted in the Verification Status		
Elements	verificationStatus	SecOC_VerificationResultType	Result of verification attempt: SECOC_VERIFICATIONSUCCES S = Verification successful SECOC_VERIFICATIONFAILURE = Verification not successful SECOC_FRESHNESSFAILURE = Verification not successful because of wrong freshness value		
	secOCDatald	uint16	Data ID of SecOCDataId		
Descriptio n	Data structure to bundle the status of a verification attempt for a specific Freshness Value and Data ID				
Variation					

] (SRS_SecOC_00022)



9 Sequence diagrams

The sequence diagrams in the following sections show interactions between the SecOC module, the PduR and the upper layer and lower layer communication modules. These sequences serve as examples to express the different kinds of interactions that are served by the SecOC module for authentication and verification.

Note: The examples show the interaction with distinct bus interface (e.g Frlf), transport protocol module (e.g. CanTp) or upper layer communication module (e.g. COM) only. However, they are valid for other bus interfaces, transport protocol modules and upper layer communication modules as well.



9.1 Authentication of outgoing PDUs

9.1.1 Authentication during direct transmission

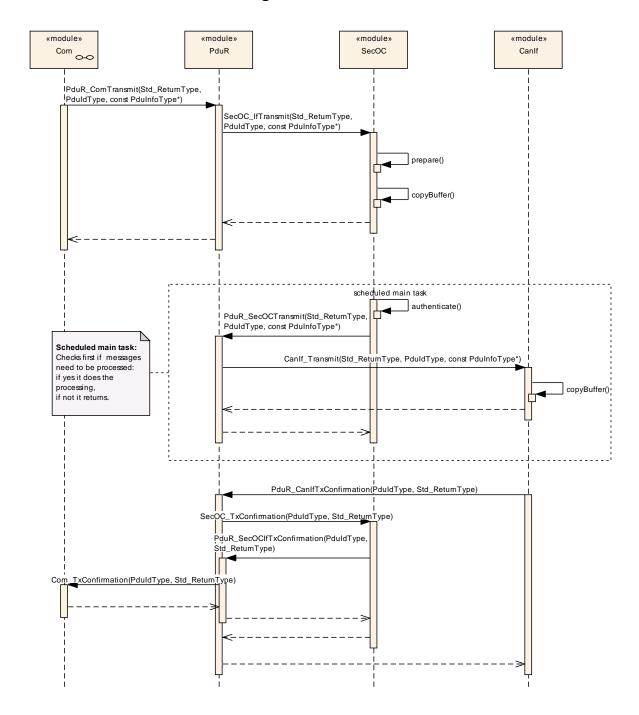


Figure 9: Authentication during direct transmission



9.1.2 Authentication during triggered transmission


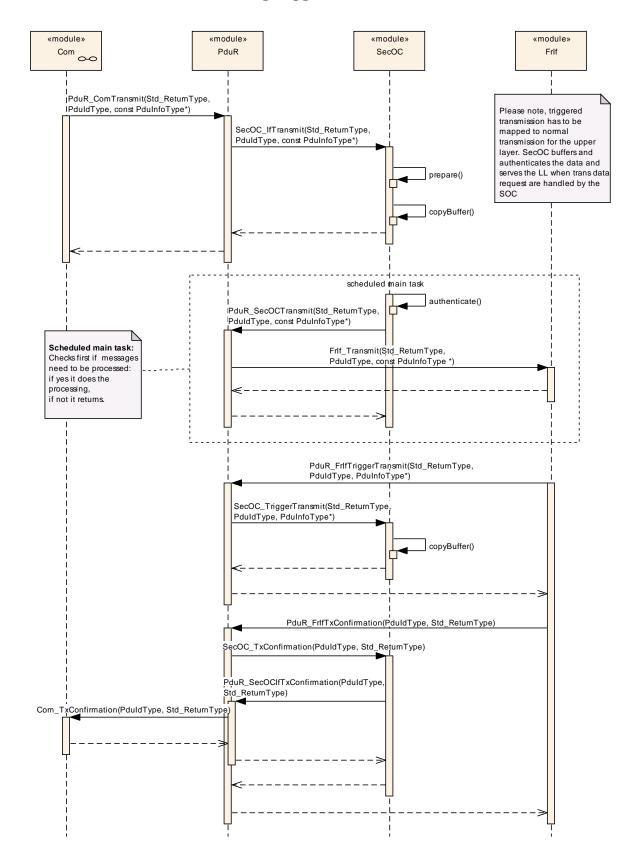


Figure 10: Authentication during Triggered Transmission





9.1.3 Authentication during transport protocol transmission



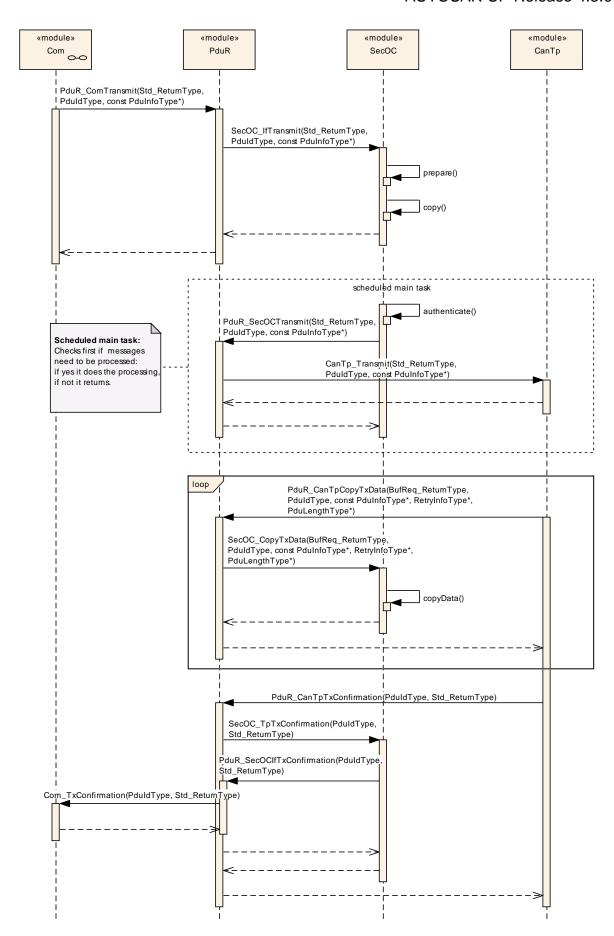




Figure 11: Authentication during TP transmission

9.2 Verification of incoming PDUs

9.2.1 Verification during direct reception

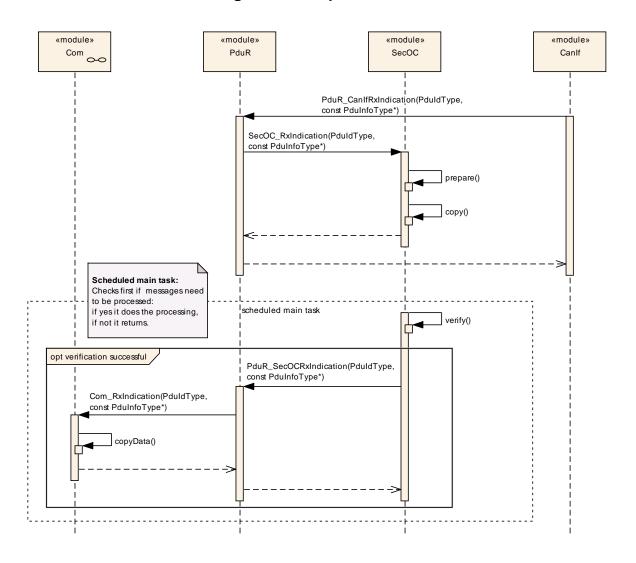


Figure 12: Verification during direct reception



9.2.2 Verification during transport protocol reception

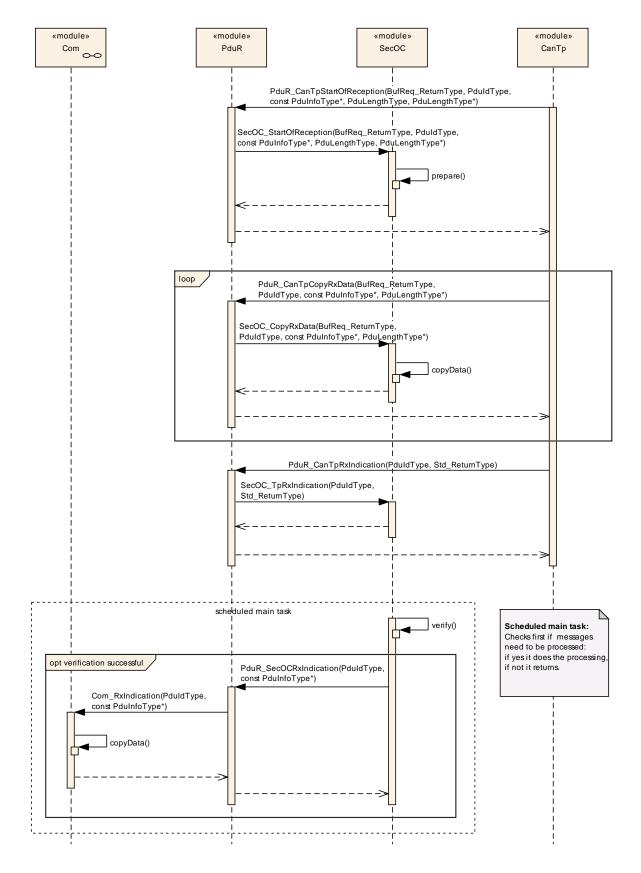


Figure 13: Verification during transport protocol reception



9.3 Re-authentication Gateway

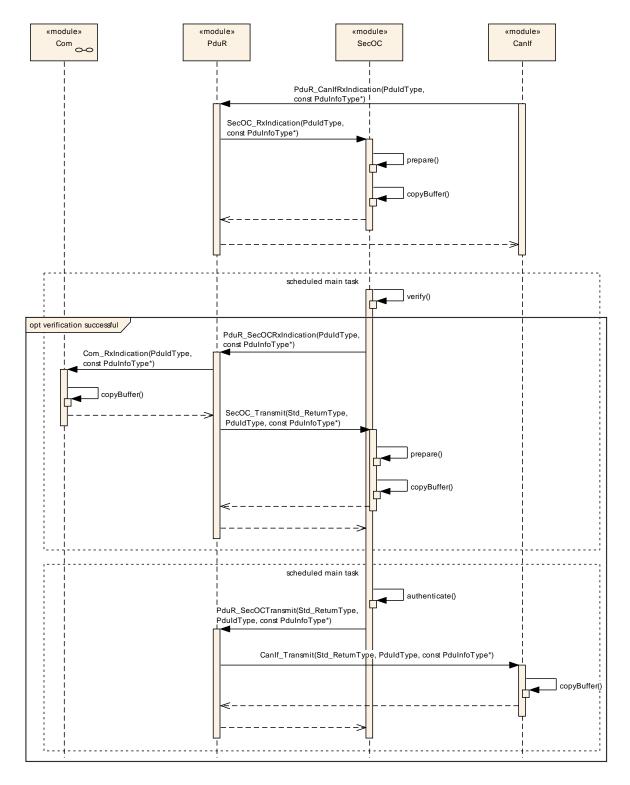


Figure 14: Verification and authentication in a gateway situation



9.4 Freshness Handling

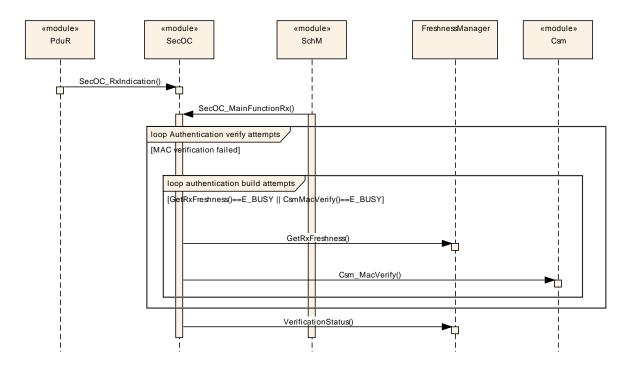


Figure 15: Freshness Handling



10 Configuration specification

The following chapters summarize all configuration parameters. The detailed meanings of the parameters are described in the Chapters below.

10.1 Containers and configuration parameters

For an overview of the AUTOSAR SecOC module's configuration, see

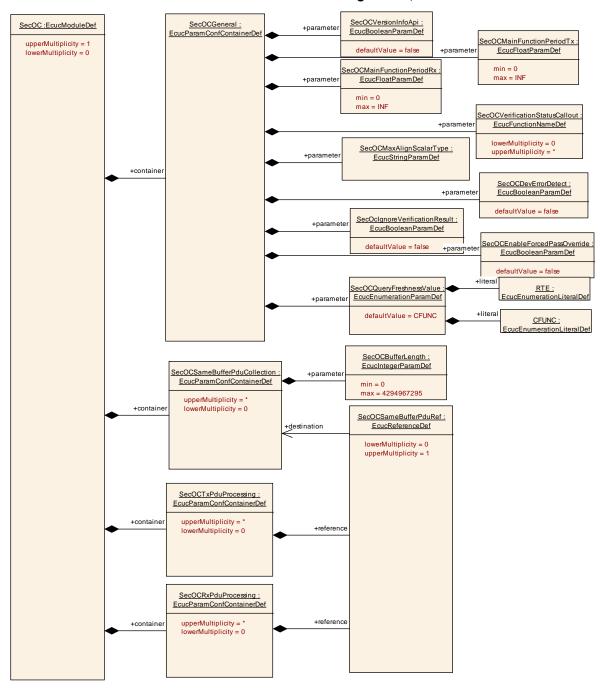


Figure 16.



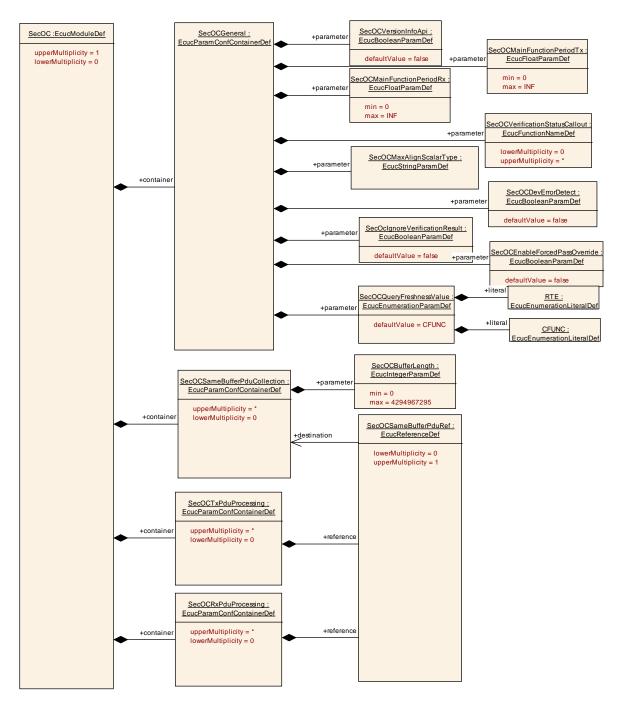


Figure 16: The AUTOSAR SecOC module's Configuration Overview



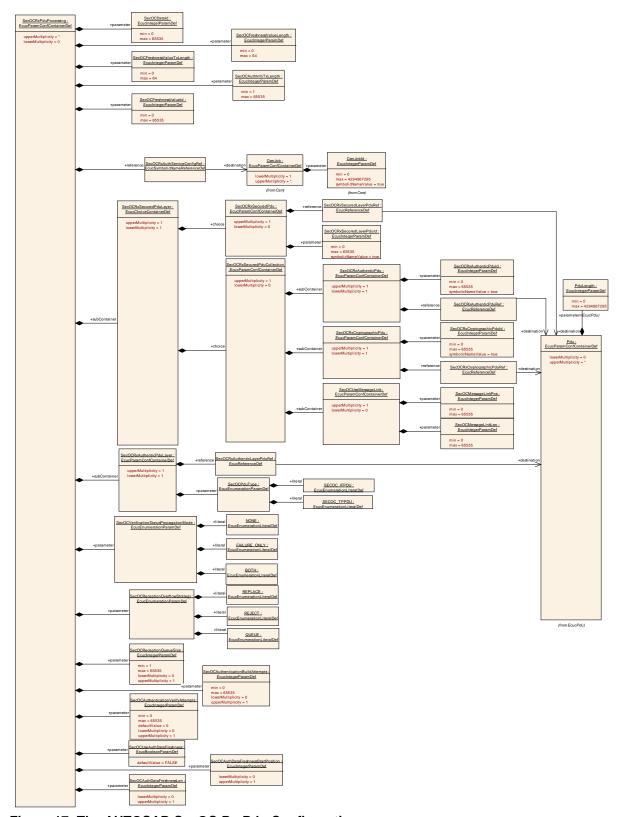


Figure 17: The AUTOSAR SecOC Rx Pdu Configuration



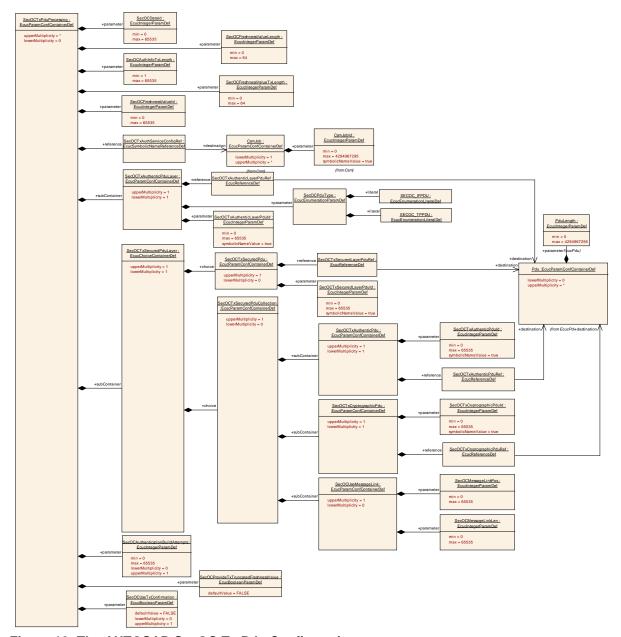


Figure 18: The AUTOSAR SecOC Tx Pdu Configuration

10.1.1 SecOC

SWS Item	ECUC_SecOC_00001:
Module Name	SecOC
Module Description	Configuration of the SecOC (SecureOnboardCommunication) module.
Post-Build Variant Support	true
Supported Config Variants	VARIANT-LINK-TIME, VARIANT-POST-BUILD, VARIANT-PRE-COMPILE

Included Containers				
Container Name	Multiplicity	Scope / Dependency		
SecOCGeneral	i i	Contains the general configuration parameters of the SecOC module.		
SecOCRxPduProcessing	0*	Contains the parameters to configure the RxPdus to be		



		verified by the SecOC module.
SecOCSameBufferPduCollection	0*	SecOCBuffer configuration that may be used by a collection of Pdus.
SecOCTxPduProcessing	0*	Contains the parameters to configure the TxPdus to be secured by the SecOC module.



10.1.2 SecOCGeneral

SWS Item	ECUC_SecOC_00002:
Container Name	SecOCGeneral
Description	Contains the general configuration parameters of the SecOC module.
Configuration Parameters	

SWS Item	ECUC_SecOC_00007:			
Name	SecOCDevErrorDetect			
Description	Switches the development error detection and notification on or off.			
	 true: detection and notification is enabled. false: detection and notification is disabled. 			
Multiplicity	1			
Туре	EcucBooleanParamDef			
Default value	false			
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time X All Variants			
_	Link time			
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC_SecOC_00051:			
Name	SecOCEnableForcedPassC	SecOCEnableForcedPassOverride		
Description	When this configuration option is set to TRUE then the functionality inside the function SecOC_VerifyStatusOverride to forcibly override the VerifyStatus to "Pass" is enabled.			
Multiplicity	1			
Туре	EcucBooleanParamDef			
Default value	false			
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time X All Variants			
	Link time			
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC_SecOC_00052 :				
Name	SecOcIgnoreVerificationResult				
Description	The result of the authentication process (e.g. MAC Verify) is ignored after the first try and the SecOC proceeds like the result was a success. The calculation of the authenticator is still done, only its result will be ignored. - true: enabled (verification result is ignored). - false: disabled (verification result is NOT ignored).				
Multiplicity	1	1			
Туре	EcucBooleanParamDef				
Default value	false				
Post-Build Variant Value	false				
Value Configuration Class	Pre-compile time	Pre-compile time X All Variants			
	Link time				
	Post-build time				
Scope / Dependency	scope: local				



SWS Item	ECUC_SecOC_00053:			
Name	SecOCMainFunctionPeriodRx			
Description	Allows to configure the time for the MainFunction of the Rx path (as float in seconds).			
Multiplicity	1			
Туре	EcucFloatParamDef			
Range]0 INF[
Default value				
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time	Χ	All Variants	
	Link time			
	Post-build time			
Scope / Dependency	scope: ECU			

SWS Item	ECUC_SecOC_00054:			
Name	SecOCMainFunctionPeriodTx			
Description	Allows to configure the time for the MainFunction of the Tx path (as float in seconds).			
Multiplicity	1			
Туре	EcucFloatParamDef			
Range]0 INF[
Default value				
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time	Х	All Variants	
	Link time			
	Post-build time			
Scope / Dependency	scope: ECU			

SWS Item	ECUC_SecOC_00047:				
Name	SecOCMaxAlignScalarType	SecOCMaxAlignScalarType			
Description	The scalar type which has the maximum alignment restrictions on the given platform. This type can be e.g. uint8, uint16 or uint32.				
Multiplicity	1	1			
Туре	EcucStringParamDef				
Default value					
maxLength					
minLength					
regularExpression					
Post-Build Variant Value	false				
Value Configuration Class	Pre-compile time X All Variants				
	Link time				
	Post-build time				
Scope / Dependency	scope: local				

SWS Item	ECUC_SecOC_00078:			
Name	SecOCQueryFreshnessVa	SecOCQueryFreshnessValue		
Description		This parameter specifies if the freshness value shall be determined through a C-function (CD) or a software component (SW-C).		
Multiplicity	1	1		
Туре	EcucEnumerationParamDe	EcucEnumerationParamDef		
Range	CFUNC	CFUNC The SecOC queries the freshness for every PDU to process using C function API		
	RTE	The SecOC queries the freshness for every PDU to process using the Rte service port FreshnessManagement		
Default value	CFUNC			



Post-Build Variant Value	false		
Value	Pre-compile time	Χ	All Variants
Configuration	Link time		
Class	Post-build time		
Scope /			
Dependency			

SWS Item	ECUC_SecOC_00004:			
Name	SecOCVerificationStatusCallout			
Description	Entry address of the customer specific call out routine which shall be invoked in case of a verification attempt.			
Multiplicity	0*			
Туре	EcucFunctionNameDef			
Default value				
maxLength				
minLength				
regularExpression				
Post-Build Variant Multiplicity	false			
Post-Build Variant Value	false			
Multiplicity Configuration	Pre-compile time	Χ	All Variants	
Class	Link time			
	Post-build time	ł		
Value Configuration Class	Pre-compile time X All Variants			
	Link time			
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC_SecOC_00003:				
Name	SecOCVersionInfoApi	SecOCVersionInfoApi			
Description	If true the SecOC_GetVersion	If true the SecOC_GetVersionInfo API is available.			
Multiplicity	1				
Туре	EcucBooleanParamDef				
Default value	false				
Post-Build Variant Value	false				
Value Configuration Class	Pre-compile time	Χ	All Variants		
	Link time				
	Post-build time				
Scope / Dependency	scope: local				

No Included Containers

10.1.3 SecOCSameBufferPduCollection

SWS Item	ECUC_SecOC_00009:
Container Name	SecOCSameBufferPduCollection
Description	SecOCBuffer configuration that may be used by a collection of Pdus.
Configuration Parameters	

SWS Item	ECUC_SecOC_00008:
Name	SecOCBufferLength
Description	This parameter defines the Buffer in bytes that is used by the SecOC



	module.		
Multiplicity	1		
Туре	EcucIntegerParamDef		
Range	0 4294967295		
Default value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	Χ	All Variants
	Link time		
	Post-build time		
Scope / Dependency	scope: local		

No Included Containers

10.1.4 SecOCRxPduProcessing

SWS Item	ECUC_SecOC_00011:
Container Name	SecOCRxPduProcessing
Description	Contains the parameters to configure the RxPdus to be verified by the SecOC module.
Configuration Parameters	

SWS Item	ECUC_SecOC_00082:			
Name	SecOCAuthDataFreshnessLen			
Description	The length of the external au	ıthenti	c PDU data in bits (uint16).	
Multiplicity	01			
Туре	EcucIntegerParamDef			
Range	0 18446744073709551615			
Default value				
Post-Build Variant Value	false	false		
Value Configuration Class	Pre-compile time	Χ	All Variants	
	Link time			
	Post-build time			
Scope / Dependency	scope: ECU	•		

SWS Item	ECUC_SecOC_00081:			
Name	SecOCAuthDataFreshnessStartPosition			
Description	This value determines the start position in bits (uint16) of the Authentic PDU that shall be passed on to the Freshness SWC. The bit position starts counting from the MSB of the first byte of the PDU.			
Multiplicity	01			
Туре	EcucIntegerParamDef			
Range	0 18446744073709551615			
Default value				
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time	Χ	All Variants	
	Link time	-		
	Post-build time	-		
Scope / Dependency	scope: ECU			

SWS Item	ECUC_SecOC_00079:
Name	SecOCAuthenticationBuildAttempts



Description	This parameter specifies the number of authentication build attempts.		
Multiplicity	01		
Type	EcucIntegerParamDef		
Range	0 65535		
Default value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time X All Variants		
	Link time		
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_SecOC_00080:			
Name	SecOCAuthenticationVerifyA	ttemp	ots	
Description	This parameter specifies the number of authentication verify attempts that are to be carried out when the verification of the authentication information failed for a given Secured I-PDU. If zero is set, then only one authentication verification attempt is done.			
Multiplicity	01	01		
Туре	EcucIntegerParamDef			
Range	0 65535			
Default value	0			
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time X All Variants			
	Link time			
	Post-build time	-		
Scope / Dependency	scope: local			

SWS Item	ECUC_SecOC_00034:				
Name	SecOCAuthInfoTxLength	SecOCAuthInfoTxLength			
Description	This parameter defines the length in bits of the authentication code to be included in the payload of the Secured I-PDU.				
Multiplicity	1				
Туре	EcucIntegerParamDef				
Range	1 65535				
Default value					
Post-Build Variant Value	true				
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE		
	Link time	Χ	VARIANT-LINK-TIME		
	Post-build time	Χ	VARIANT-POST-BUILD		
Scope / Dependency	scope: local				

SWS Item	ECUC_SecOC_00030:		
Name	SecOCDatald		
Description	This parameter defines a unique numerical identifier for the Secured I-PDU.		
Multiplicity	1		
Туре	EcucIntegerParamDef		
Range	0 65535		
Default value			
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Scope / Dependency	scope: local	•	

SWS Item	ECUC_SecOC_00038:



Name	SecOCFreshnessValueId			
Description	This parameter defines the Id of the Freshness Value.			
	The Freshness Value might	The Freshness Value might be a normal counter or a time value.		
Multiplicity	1			
Туре	EcucIntegerParamDef			
Range	0 65535			
Default value				
Post-Build Variant Value	true			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency	scope: local			

SWS Item	ECUC_SecOC_00031:				
Name	SecOCFreshnessValueLeng	jth			
Description	This parameter defines the complete length in bits of the Freshness Value. As long as the key doesn't change the counter shall not overflow. The length of the counter shall be determined based on the expected life time of the corresponding key and frequency of usage of the counter.				
Multiplicity	1				
Туре	EcucIntegerParamDef				
Range	0 64				
Default value					
Post-Build Variant Value	true				
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE				
	Link time X VARIANT-LINK-TIME				
	Post-build time X VARIANT-POST-BUILD				
Scope / Dependency	scope: local				

SWS Item	ECUC_SecOC_00032:			
Name	SecOCFreshnessValueTxLength			
Description	This parameter defines the length in bits of the Freshness Value to be included in the payload of the Secured I-PDU. This length is specific to the least significant bits of the complete Freshness Counter. If the parameter is 0 no Freshness Value is included in the Secured I-PDU.			
Multiplicity	1			
Туре	EcucIntegerParamDef			
Range	0 64			
Default value				
Post-Build Variant Value	true			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time X VARIANT-LINK-TIME			
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency	scope: local dependency: SecOCFreshnessCounterTxLength ≤ SecOCFreshnessCounterLength			

SWS Item	ECUC_SecOC_00076:			
Name	SecOCReceptionOverflowS	Strategy		
Description	This parameter defines the	overflow strategy for receiving PDUs		
Multiplicity	1	1		
Туре	EcucEnumerationParamDe	ef		
Range	QUEUE	Subsequent received message will be queued		
	REJECT	Subsequent received message will be discarded		



		repla	sequent received message will ace the currently processed sage
Post-Build Variant Value	false		
Value	Pre-compile time	Χ	All Variants
•	Link time		
Class	Post-build time	-	
Scope / Dependency	scope: local		

SWS Item	ECUC_SecOC_00077:		
Name	SecOCReceptionQueueSize)	
Description	This parameter defines the queue size in case the overflow strategy for receiving PDUs is set to QUEUE.		
Multiplicity	01		
Туре	EcucIntegerParamDef		
Range	1 65535		
Default value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	Χ	All Variants
	Link time	1	
	Post-build time		
Scope / Dependency	scope: local	•	

SWS Item	ECUC_SecOC_00083:			
Name	SecOCUseAuthDataFreshne	ess		
Description	A Boolean value that indicates if a part of the Authentic-PDU shall be passed on to the SWC that verifies and generates the Freshness. If it is set to TRUE, the values SecOCAuthDataFreshnessStartPosition and SecOCAuthDataFreshnessLen must be set to specify the bit position and length within the Authentic-PDU.			
Multiplicity	1	1		
Туре	EcucBooleanParamDef			
Default value	false			
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time X All Variants			
	Link time			
	Post-build time			
Scope / Dependency	scope: ECU			

SWS Item	ECUC_SecOC_00046:		
Name	SecOCVerificationStatusPropagationMode		
	This parameter is used to describe the propagation of the status of each verification attempt from the SecOC module to SWCs.		
Multiplicity	1		
Туре	EcucEnumerationParamDef		
Range	вотн	Both "True" and "False" AuthenticationStatus is propagated to SWC	
	FAILURE_ONLY	Only "False" AuthenticationStatus is propagated to SWC	
		No AuthenticationStatus is propagated to SWC	
Post-Build Variant Value	true		
Value	Pre-compile time	X VARIANT-PRE-COMPILE	
	<u> </u>		



Configuration	Link time	Χ	VARIANT-LINK-TIME
Class	Post-build time	Χ	VARIANT-POST-BUILD
Scope /	scope: local		
Dependency			

SWS Item	ECUC_SecOC_00048:
Name	SecOCRxAuthServiceConfigRef
Description	This reference is used to define which crypto service function is called for authentication.
Multiplicity	1
Туре	Symbolic name reference to [CsmJob]
Post-Build Variant Value	false
Scope / Dependency	

SWS Item	ECUC_SecOC_00049:	ECUC_SecOC_00049:		
Name	SecOCSameBufferPduRef	SecOCSameBufferPduRef		
Description	This reference is used to collect Pdus that are using the same SecOC buffer.			
Multiplicity	01			
Туре	Reference to [SecOCSame	Buffer	PduCollection]	
Post-Build Variant Multiplicity	false			
Post-Build Variant Value	false	false		
Multiplicity Configuration	Pre-compile time X All Variants			
Class	Link time			
	Post-build time			
Value Configuration Class	Pre-compile time	Х	All Variants	
_	Link time			
	Post-build time			
Scope / Dependency	scope: local			

Included Containers		
Container Name	Multiplicity	Scope / Dependency
SecOCRxAuthenticPduLayer		This container specifies the Pdu that is transmitted by the SecOC module to the PduR after the Mac was verified.
SecOCRxSecuredPduLayer	1	This container specifies the Pdu that is received by the SecOC module from the PduR. For this Pdu the Mac verification is provided.

10.1.5 SecOCRxSecuredPduLayer

SWS Item	ECUC_SecOC_00041:
Choice container Name	SecOCRxSecuredPduLayer
II JASCRINTIAN	This container specifies the Pdu that is received by the SecOC module from the PduR. For this Pdu the Mac verification is provided.

Container Choices			
Container Name	Multiplicity	Scope / Dependency	
SecOCRxSecuredPdu	01	This container specifies the Pdu that is received by the SecOC module from the PduR. For this Pdu the Mac verification is provided.	
SecOCRxSecuredPduCollection	1 () 1	This container specifies two Pdus that are received by the SecOC module from the PduR and a message linking	



between them.
SecOCRxAuthenticPdu contains the original Authentic I-
PDU, i.e. the secured data, and the
SecOCRxCryptographicPdu contains the Authenticator, i.e.
the actual Authentication Information.

10.1.6 SecOCRxSecuredPdu

SWS Item	ECUC_SecOC_00069:
Container Name	SecOCRxSecuredPdu
	This container specifies the Pdu that is received by the SecOC module from the PduR. For this Pdu the Mac verification is provided.
Configuration Parameters	

SWS Item	ECUC_SecOC_00043:		
Name	SecOCRxSecuredLayerPduld		
Description	PDU identifier assigned by SecOC module. Used by PduR for SecOC_PduRRxIndication.		
Multiplicity	1		
Туре	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 65535		
Default value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	Х	All Variants
	Link time		
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_SecOC_00042:		
Name	SecOCRxSecuredLayerPduRef		
Description	Reference to the global Pdu.		
Multiplicity	1		
Туре	Reference to [Pdu]		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time X VARIANT-LINK-TIME		
	Post-build time X VARIANT-POST-BUILD		
Scope / Dependency	scope: local		

No Included Containers

10.1.7 SecOCRxSecuredPduCollection

SWS Item	ECUC_SecOC_00067:
Container Name	SecOCRxSecuredPduCollection
	This container specifies two Pdus that are received by the SecOC module from the PduR and a message linking between them.
Description	SecOCRxAuthenticPdu contains the original Authentic I-PDU, i.e. the secured data, and the SecOCRxCryptographicPdu contains the Authenticator, i.e. the actual Authentication Information.



Configuration Parameters

Included Containers				
Container Name	Multiplicity	Scope / Dependency		
SecOCRxAuthenticPdu		This container specifies the Authetic Pdu that is received by the SecOC module from the PduR.		
SecOCRxCryptographicPdu		This container specifies the Cryptographic Pdu that is received by the SecOC module from the PduR.		
SecOCUseMessageLink	01	SecOC links an Authentic I-PDU and Cryptographic I-PDU together by repeating a specific part (Message Linker) of the Authentic I-PDU in the Cryptographic I-PDU.		

10.1.8 SecOCRxCryptographicPdu

SWS Item	ECUC_SecOC_00064:
Container Name	SecOCRxCryptographicPdu
	This container specifies the Cryptographic Pdu that is received by the SecOC module from the PduR.
Configuration Parameters	

SWS Item	ECUC_SecOC_00065:		
Name	SecOCRxCryptographicPduId		
Description	PDU identifier of the Cryptographic I-PDU assigned by SecOC module. Used by PduR for SecOC_PduRRxIndication.		
Multiplicity	1		
Туре	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 65535		
Default value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	Χ	All Variants
	Link time		
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_SecOC_00066:		
Name	SecOCRxCryptographicPduRef		
Description	Reference to the global Pdu.		
Multiplicity	1		
Туре	Reference to [Pdu]		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time X VARIANT-LINK-TIME		
	Post-build time X VARIANT-POST-BUILD		
Scope / Dependency	scope: local		

No Included Containers

10.1.9 SecOCRxAuthenticPduLayer

SWS Item	ECUC_SecOC_00044:
Container Name	SecOCRxAuthenticPduLayer



II IASCRINTIAN	This container specifies the Pdu that is transmitted by the SecOC modu to the PduR after the Mac was verified.	
Configuration Parameters		

SWS Item	ECUC_SecOC_00075 :		
Name	SecOCPduType		
Description	This parameter defines API Type to use for	or communication with PduR.	
Multiplicity	1		
Туре	EcucEnumerationParamDef		
Range		SECOC_IFPDU Interface communication API	
	SECOC_TPPDU	SECOC_TPPDU Transport Protocol communication API	
Post-Build Variant Value	false		
Value	Pre-compile time	X All Variants	
Configuration	Link time		
Class	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_SecOC_00045:			
Name	SecOCRxAuthenticLayerPduRef			
Description	Reference to the global Pdu.	Reference to the global Pdu.		
Multiplicity	1	1		
Туре	Reference to [Pdu]	Reference to [Pdu]		
Post-Build Variant Value	true			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency	scope: local			

No Included Containers

10.1.10 SecOCRxAuthenticPdu

SWS Item	ECUC_SecOC_00061:
Container Name	SecOCRxAuthenticPdu
Description	This container specifies the Authetic Pdu that is received by the SecOC module from the PduR.
Configuration Parameters	

SWS Item	ECUC_SecOC_00062:		
Name	SecOCRxAuthenticPduId		
	PDU identifier of the Authentic I-PDU assigned by SecOC module. Used by PduR for SecOC_PduRRxIndication.		
Multiplicity	1		
Туре	EcucIntegerParamDef (Syml	oolic 1	Name generated for this parameter)
Range	0 65535		
Default value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time X All Variants		
	Link time		



	Post-build time	1	
Scope / Dependency	scope: local		
	- -		

SWS Item	ECUC_SecOC_00063:			
Name	SecOCRxAuthenticPduRef	SecOCRxAuthenticPduRef		
Description	Reference to the global Pdu.	Reference to the global Pdu.		
Multiplicity	1	1		
Туре	Reference to [Pdu]	Reference to [Pdu]		
Post-Build Variant Value	true			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Link time X VARIANT-LINK-TIME		
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency	scope: local	•		

	_			-
NΩ	Incl	lude	d Coi	ntainers

10.1.11 SecOCTxPduProcessing

SWS Item	ECUC_SecOC_00012:
Container Name	SecOCTxPduProcessing
Description	Contains the parameters to configure the TxPdus to be secured by the SecOC module.
Configuration Parameters	

SWS Item	ECUC_SecOC_00079:			
Name	SecOCAuthenticationBuildAt	SecOCAuthenticationBuildAttempts		
Description	This parameter specifies the	numb	per of authentication build attempts.	
Multiplicity	01			
Туре	EcucIntegerParamDef	EcucIntegerParamDef		
Range	0 65535			
Default value				
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time	Χ	All Variants	
	Link time			
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC_SecOC_00018:				
Name	SecOCAuthInfoTxLength	SecOCAuthInfoTxLength			
Description	This parameter defines the length in bits of the authentication code to be included in the payload of the Secured I-PDU.				
Multiplicity	1				
Туре	EcucIntegerParamDef				
Range	1 65535				
Default value					
Post-Build Variant Value	true				
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE		
	Link time	Χ	VARIANT-LINK-TIME		
	Post-build time	Χ	VARIANT-POST-BUILD		
Scope / Dependency	scope: local				



SWS Item	ECUC_SecOC_00014:		
Name	SecOCDataId		
Description	This parameter defines a unique numerical identifier for the Secured I-PDU.		
Multiplicity	1		
Туре	EcucIntegerParamDef		
Range	0 65535		
Default value			
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_SecOC_00021:			
Name	SecOCFreshnessValueId			
Description	This parameter defines the Id of the Freshness Value. The Freshness Value might be a normal counter or a time value.			
Multiplicity	1			
Туре	EcucIntegerParamDef			
Range	0 65535			
Default value				
Post-Build Variant Value	true			
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time	Х	VARIANT-LINK-TIME	
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency	scope: local			

SWS Item	ECUC_SecOC_00015:				
Name	SecOCFreshnessValueLeng	SecOCFreshnessValueLength			
Description	This parameter defines the complete length in bits of the Freshness Value. As long as the key doesn't change the counter shall not overflow. The length of the counter shall be determined based on the expected life time of the corresponding key and frequency of usage of the counter.				
Multiplicity	1				
Type	EcucIntegerParamDef				
Range	0 64				
Default value					
Post-Build Variant Value	true				
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE		
	Link time X VARIANT-LINK-TIME				
	Post-build time X VARIANT-POST-BUILD				
Scope / Dependency	scope: local				

SWS Item	ECUC_SecOC_00016:		
Name	SecOCFreshnessValueTxLength		
	This parameter defines the length in bits of the Freshness Value to be included in the payload of the Secured I-PDU. This length is specific to the least significant bits of the complete Freshness Counter. If the parameter is 0 no Freshness Value is included in the Secured I-PDU.		
Multiplicity	1		
Туре	EcucIntegerParamDef		
Range	0 64		
Default value			
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X VARIANT-PRE-COMPILE	



	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Scope / Dependency	scope: local		
	dependency: SecOCFreshnessCounterTxLength ≤		
	SecOCFreshnessCounterLength		

SWS Item	ECUC_SecOC_00084:			
Name	SecOCProvideTxTruncatedl	reshr	nessValue	
Description	This parameter specifies if the Tx query freshness function provides the truncated freshness info instead of generating this by SecOC In this case, SecOC shall add this data to the Authentic PDU instead of truncating the freshness value.			
Multiplicity	1			
Туре	EcucBooleanParamDef			
Default value	false			
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time X All Variants			
	Link time			
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC_SecOC_00085:		
Name	SecOCUseTxConfirmation		
Description	A Boolean value that indicates if the function SecOC_SPduTxConfirmation shall be called for this PDU.		
Multiplicity	01		
Туре	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time X All Variants		
	Link time		
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_SecOC_00010:		
Name	SecOCSameBufferPduRef		
Description	This reference is used to collect Pdus that are using the same SecOC buffer.		
Multiplicity	01		
Туре	Reference to [SecOCSamel	3uffer	PduCollection]
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time X All Variants		
Class	Link time		
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	All Variants
	Link time		
	Post-build time		
Scope / Dependency	scope: local	<u> </u>	

SWS Item	ECUC_SecOC_00013:
Name	SecOCTxAuthServiceConfigRef
Description	This reference is used to define which crypto service function is called for authentication.
Multiplicity	1



Туре	Symbolic name reference to [CsmJob]
Post-Build Variant Value	false
Scope / Dependency	

Included Containers				
Container Name	Multiplicity	Scope / Dependency		
SecOCTxAuthenticPduLayer	1	This container specifies the Pdu that is received by the SecOC module from the PduR. For this Pdu the Mac generation is provided.		
SecOCTxSecuredPduLayer		This container specifies the Pdu that is transmitted by the SecOC module to the PduR after the Mac was generated.		

10.1.12 SecOCTxAuthenticPduLayer

SWS Item	ECUC_SecOC_00023:
Container Name	SecOCTxAuthenticPduLayer
	This container specifies the Pdu that is received by the SecOC module from the PduR. For this Pdu the Mac generation is provided.
Configuration Parameters	

SWS Item	ECUC_SecOC_00075 :		
Name	SecOCPduType		
Description	This parameter defines API Type to use for	or co	mmunication with PduR.
Multiplicity	1		
Туре	EcucEnumerationParamDef		
Range	SECOC_IFPDU	SECOC_IFPDU Interface communicatio API	
	SECOC_TPPDU SECOC_TPPDU Tra		COC_TPPDU Transport Protocol munication API
Post-Build Variant Value	false		
Value	Pre-compile time	Х	All Variants
Configuration	Link time		
Class	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_SecOC_00026:				
Name	SecOCTxAuthenticLayerPduId				
Description	PDU identifier assigned by SecOC module. Used by PduR for SecOC_PduRTransmit.				
Multiplicity	1				
Туре	EcucIntegerParamDef (Symbolic Name generated for this parameter)				
Range	0 65535				
Default value					
Post-Build Variant Value	false				
Value Configuration Class	Pre-compile time	Χ	All Variants		
	Link time				
	Post-build time				
Scope / Dependency	scope: local				

SWS Item	ECUC_SecOC_00025:
Name	SecOCTxAuthenticLayerPduRef



Description	Reference to the global Pdu.		
Multiplicity	1		
Туре	Reference to [Pdu]		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE		
	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

ı	A/ -	Include	-1 0 4	_ !
ı	IIVO .	mcnne	a Com	ainers

10.1.13 SecOCTxSecuredPduLayer

SWS Item	ECUC_SecOC_00024:
Choice container Name	SecOCTxSecuredPduLayer
II IDSCRIPTION	This container specifies the Pdu that is transmitted by the SecOC module to the PduR after the Mac was generated.

Container Choices		
Container Name	Multiplicity	Scope / Dependency
SecOCTxSecuredPdu	01	This container specifies one Pdu that is transmitted by the SecOC module to the PduR after the Mac was generated. This Pdu contains the cryptographic information.
SecOCTxSecuredPduCollection	01	This container specifies the Pdu that is transmitted by the SecOC module to the PduR after the Mac was generated. Two separate Pdus are transmitted to the PduR: Authentic I-PDU and Cryptographic I-PDU.

10.1.14 SecOCTxSecuredPdu

SWS Item	ECUC_SecOC_00070:
Container Name	SecOCTxSecuredPdu
Description	This container specifies one Pdu that is transmitted by the SecOC module to the PduR after the Mac was generated. This Pdu contains the cryptographic information.
Configuration Parameters	

SWS Item	ECUC_SecOC_00028:		
Name	SecOCTxSecuredLayerPduld		
Description	PDU identifier assigned by SecOC module. Used by PduR for confirmation (SecOC_PduRTxConfirmation) and for TriggerTransmit.		
Multiplicity	1		
Туре	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 65535		
Default value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	Χ	All Variants
	Link time		
	Post-build time		
Scope / Dependency	scope: local		



SWS Item	ECUC_SecOC_00027:			
Name	SecOCTxSecuredLayerPduRef			
Description	Reference to the global Pdu.	Reference to the global Pdu.		
Multiplicity	1	1		
Туре	Reference to [Pdu]			
Post-Build Variant Value	true			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time X VARIANT-LINK-TIME			
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency	scope: local			

Ma	Incli	ıdod	Con	tainers

10.1.15 SecOCTxSecuredPduCollection

SWS Item	ECUC_SecOC_00071:
Container Name	SecOCTxSecuredPduCollection
Description	This container specifies the Pdu that is transmitted by the SecOC module to the PduR after the Mac was generated. Two separate Pdus are transmitted to the PduR: Authentic I-PDU and Cryptographic I-PDU.
Configuration Parameters	

Included Containers			
Container Name	Multiplicity	Scope / Dependency	
SecOCTxAuthenticPdu		This container specifies the Authetic Pdu that is transmitted by the SecOC module to the PduR after the Mac was generated.	
SecOCTxCryptographicPdu	1	This container specifies the Cryptographic Pdu that is transmitted by the SecOC module to the PduR after the Mac was generated.	
SecOCUseMessageLink	01	SecOC links an Authentic I-PDU and Cryptographic I-PDU together by repeating a specific part (Message Linker) of the Authentic I-PDU in the Cryptographic I-PDU.	

10.1.16 SecOCTxAuthenticPdu

SWS Item	ECUC_SecOC_00072:
Container Name	SecOCTxAuthenticPdu
II JASCRINTIAN	This container specifies the Authetic Pdu that is transmitted by the SecOC module to the PduR after the Mac was generated.
Configuration Parameters	

SWS Item	ECUC_SecOC_00055:
Name	SecOCTxAuthenticPduld
	PDU identifier of the Authentic I-PDU assigned by SecOC module. Used by PduR for confirmation (SecOC_PduRTxConfirmation) and for TriggerTransmit.
Multiplicity	1
Туре	EcucIntegerParamDef (Symbolic Name generated for this parameter)



Range	0 65535		
Default value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	Χ	All Variants
	Link time		
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_SecOC_00056:			
Name	SecOCTxAuthenticPduRef			
Description	Reference to the global Pdu.	Reference to the global Pdu.		
Multiplicity	1			
Туре	Reference to [Pdu]	Reference to [Pdu]		
Post-Build Variant Value	true			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time X VARIANT-LINK-TIME			
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency	scope: local			

No Included Containers

10.1.17 SecOCTxCryptographicPdu

SWS Item	ECUC_SecOC_00073:
Container Name	SecOCTxCryptographicPdu
	This container specifies the Cryptographic Pdu that is transmitted by the SecOC module to the PduR after the Mac was generated.
Configuration Parameters	

SWS Item	ECUC_SecOC_00057:				
Name	SecOCTxCryptographicPdu	SecOCTxCryptographicPduld			
Description	PDU identifier of the Cryptographic I-PDU assigned by SecOC module. Used by PduR for confirmation (SecOC_PduRTxConfirmation) and for TriggerTransmit.				
Multiplicity	1				
Туре	EcucIntegerParamDef (Sym	EcucIntegerParamDef (Symbolic Name generated for this parameter)			
Range	0 65535				
Default value					
Post-Build Variant Value	false	false			
Value Configuration Class	Pre-compile time X All Variants				
	Link time				
	Post-build time				
Scope / Dependency	scope: local				

SWS Item	ECUC_SecOC_00058:			
Name	SecOCTxCryptographicPduRef			
Description	Reference to the global Pdu.	Reference to the global Pdu.		
Multiplicity	1	1		
Туре	Reference to [Pdu]			
Post-Build Variant Value	true			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time X VARIANT-LINK-TIME			
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency	scope: local			



No Included Containers

10.1.18 SecOCUseMessageLink

SWS Item	ECUC_SecOC_00074:
Container Name	SecOCUseMessageLink
Description	SecOC links an Authentic I-PDU and Cryptographic I-PDU together by repeating a specific part (Message Linker) of the Authentic I-PDU in the Cryptographic I-PDU.
Configuration Parameters	

SWS Item	ECUC_SecOC_00060:			
Name	SecOCMessageLinkLen			
Description	Length of the Message Linke	er insi	de the Authentic I-PDU in bits.	
Multiplicity	1			
Туре	EcucIntegerParamDef			
Range	0 65535			
Default value				
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time X All Variants			
	Link time			
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC_SecOC_00059:			
Name	SecOCMessageLinkPos			
Description	The position of the Message	Linke	er inside the Authentic I-PDU in bits.	
Multiplicity	1			
Туре	EcucIntegerParamDef	EcucIntegerParamDef		
Range	0 65535			
Default value				
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time	Χ	All Variants	
	Link time			
	Post-build time			
Scope / Dependency	scope: local			

No Included Containers

10.2 Published Information

For details, refer to the chapter 10.3 "Published Information" in SWS_BSWGeneral.



11 Annex A: Application hints for the development of SW-C Freshness Value Manager

11.1 Overview of freshness value construction

The freshness value is provided to SecOC either by a SW-C or CD. SecOC specification provides the required interfaces to request the freshness value either for transmission or for reception of a Secured I-PDU and the required interfaces to propagate the information of a failed or successful transmission or reception. There are many ways how the freshness value can be constructed and synchronized across ECUs. The purpose of this chapter is to provide use cases to describe different ways how a freshness value shall be constructed.

[UC_SecOC_00200] [

The Software Component Freshness Value Manager (FVM) shall provide the Freshness Value (FV) to SecOC.

The FV construction is based on Freshness Counters and maps the concept described (primarily) in Chapter 7.1.1.3 of the specification of module Secure Onboard Communication in

AUTOSAR Release 4.2.2 ("AUTOSAR_SWS_SecureOnboardCommunication.pdf").

The FVM shall provide a Freshness Counter for each configured Freshness Value ID (parameter SecOCFreshness ValueId and SecOCSecondary Freshness ValueId).

Construction

When using a Freshness Counter instead of a Timestamp, the Freshness Counter is incremented prior to providing the authentication information to SecOC on the receiver side.

To properly ensure freshness, the Freshness Counter on both sides of the communication channel should be incremented synchronically.

The Freshness Counter has to be incremented for each outgoing message that is intended to be recognized as an individual incoming message on the receiver side. On the receiver side, the MAC verification of each received message including the counter update shall be performed exactly once.

The FVM shall increment the Freshness Counter corresponding to SecOCFreshnessValueID by 1 (CNT ++) only if SecOC has started the transmission of the Secured I-PDU by calling the PduR for further routing. If the transmission of the Secured I-PDU has been cancelled before, FVM should not increment the Freshness Counter corresponding to SecOCFreshnessValueID.

Please note that when Freshness Counters are used as a FV, the FVM may allow the usage of second Freshness Values.



Verification of I-PDUs

The FVM module shall construct Freshness Verify Value (i.e. the Freshness Value to be used for Verification) and provide it to SecOC. In the event the complete Freshness Value is transmitted in the secured I-PDU, it needs to be verified that the constructed Freshness Verify Value is larger than the last stored notion of the Freshness Value. If it is not larger than the last stored notion of the Freshness Value, the FVM shall stop the verification and drop the Secured I-PDU. Otherwise, constructing the Authentication Verify Counter is defined as outlined by the following pseudo code.

[UC SecOC 00201] [

The Software Component Freshness Value Manager (FVM) shall provide the Freshness Value (FV) to SecOC.

The FV construction is based on Freshness Timestamps (or Timers) and maps the concept described (primarily) in Chapter 7.1.1.3 of the specification of module Secure Onboard Communication in

AUTOSAR Release 4.2.2 ("AUTOSAR_SWS_SecureOnboardCommunication.pdf").] ()

Source of global time values

As base for the Freshness Timestamp, the global synchronized time can be used. As this global synchronized time will have the same value at the sender and all receivers, its value can be used as Freshness Value with the advantage that it does not necessarily need to be transmitted within the Secured PDU itself and it does not need to be transmitted for every sender and receiver individually.

Resolution and precision of global time values

The FVM has to consider the resolution and precision of the used global time values.

Please note that when Freshness Timestamps are used as a FV, the FVM may allow the usage of an Acceptance Window mechanism.

Verification of I-PDUs



the SecOC module shall construct Freshness Verify Value (i.e. the Freshness Value to be used for Verification) and provide it to SecOC. In case of complete Freshness Value transmission, it needs to be verified that the constructed FreshnessVerifyValue is within the acceptance window defined by SecOCRxAcceptanceWindow. If it is not in that window, the SecOC module shall stop the verification and drop the Secured I-PDU.

Otherwise, constructing the Authentication Verify Value is defined as outlined by the following pseudo code.

```
If (SecOCFreshnessValueTxLength = FreshnessValueLength)
  FreshnessVerifyValue = FreshnessValue parsed from Secured I-PDU;
Else
     ((most significant bits of FreshnessValue corresponding to SecOCFreshnessValueID |
       FreshnessValue parsed from Secured I-PDU) < (max(0: (most significant bits of
       FreshnessValue corresponding to SecOCFreshnessValueID | least significant bits of
       FreshnessValue corresponding to SecOCFreshnessValueID) - SecOCRxAcceptanceWindow)))
  {
    Attempts = 0;
    FreshnessVerifyBaseValue = most significant bits of FreshnessValue corresponding to
    SecOCFreshnessValueID + 1;
  Else
    Attempts = 0;
    FreshnessVerifyBaseValue = most significant bits of FreshnessValue corresponding to
    SecOCFreshnessValueID;
  FreshnessVerifyValue = FreshnessVerifyUpperValue = FreshnessVerifyLowerValue =
  FreshnessVerifyBaseValue | FreshnessValue parsed from Secured I-PDU;
```

[UC_SecOC_00202] [

Construction of Freshness value from decoupled counters.

Freshness Value Manager (FVM) (SW-C orCDD) shall provide the Freshness Value (FV) to SecOC. FVM shall support a master / slave synchronization mechanism for the FV.

I()

The figure below illustrates the relationship between FVMaster and (slave) Sender / Receiver ECUs.

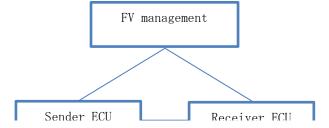


Figure 19: FVMaster Relationship Sender/Receiver ECU

Entity Description



Sender ECU (Sender)	A Slave ECU that implements an instance of FVM. It shall be able to receive synchronization messages (TripResetSyncMsg) from FVMaster and construct the freshness Value required for transmission of a Secured I-PDU.
Receiver ECU (Receiver)	A Slave ECU that implements an instance of FVM. It shall be able to receive TripResetSyncMsg from FVMaster and construct the freshness Value required for the verification of a received Secured I-PDU.
FV management master [FvMaster]	Master ECU responsible for handling and transmission of TripResetSyncMsg to all Sender ECUs and Receiver ECUs.

Table 1 - FVMaster Relationship Sender/Receiver ECU

Software Component FVM shall provide the FV to SecOC constructed from decoupled counters with the following structure:

Trip	Reset	Message Cour	Reset Flag	
Counter	Counter	MsgCntUpper	MsgCntUpper MsgCntLower	

Figure 20: Structure of FreshnessValue

Data	Description
Trip Counter	Counter to be incremented by the FvMaster with each trip.
(TripCnt)	FvMaster will send the new TripCnt to Sender and Receiver ECUs
	as a synchronization message that can be either
	TripResetSyncMsg. All Sender and Receiver ECUs shall store this value.
Reset	Counter to be incremented periodically by the FvMaster with the
counter	periodicity configured by on ResetCycle. FvMaster shall send the
(ResetCnt)	new ResetCnt to Sender and Receiver ECUs as a synchronization
	message that can be either TripResetSyncMsg. All Sender and
	Receiver ECUs shall store this value.
Message	Counter maintained by Sender ECU for each message to be
counter	secured. The MsgCnt shall be incremented by Sender on every
(MsgCnt)	message transmission. When Message counter is reset by Reset
	counter, receiver ECU is informed via reverted / toggled Reset Flag
Reset Flag	Rolling counter (e.g., 1 bit) that is maintained by Sender ECU that
(ResetFlag)	is incremented every time an updated Trip Counter TripCnt or
	Reset Counter ResetCnt was used for the construction of FV.
	Based on Reset Flag ResetFlag value, the Receiver ECU Receiver
	will construct the FV for verification

Table 2 - Structure of Freshness Value

Counter	Increment condition	Reset condition	Counter
			length



Trip counter (TripCnt)	-If power source state change as IG-OFF -> IG-ON or Sleep -> WakeUp, increment by 1. -If ECU reset is detected independent from IG state either IG-ON or IG-OFF.	N/A	Max 24 bit
Reset counter (ResetCnt)	Increment by 1 for each configured ResetCycle	Trip counter increment	Max 48 bit
Message counter (MsgCnt)	Increment 1 value for each message transmission	successful receipt of a synchronization message (increment of reset counter)	Max 16 bit

Table 3 - Behavior of counters used to construct freshness value

Note: The Length of Freshness Value (parameter SecOCFreshnessValueLength) cannot exceed 64 bits, so the lengths of each of the three counters (Trip Counter, Reset Counter Message Counter) must be adopted individually, to match this requirement.

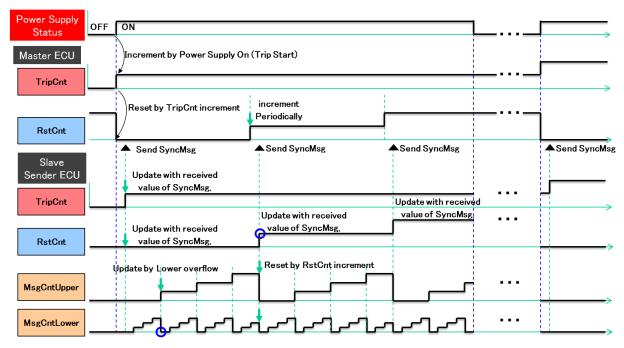


Figure 21: Behavior example of freshness value (trip, reset, message)

Software Component Freshness Value Manager [FVM] shall implement and store the following design values for counters:

Design Value	Description	Initial value	Update condition
Trip Counter (TripCnt)	Latest Trip Counter value received successfully from FV management master [FvMaster].	0	Successful reception of [TripResetSyncMsg]
Reset Counter (ResetCnt)	Latest Reset Counter value received successfully from	0	Successful reception of [TripResetSyncMsg]



	FV management master [FvMaster].		
Freshness Value (FV)	Freshness Value maintained for each message to be secured. The structure of FV is according to Fig. XX1. For Tx messages: Before a transmission of a secured I-PDU (a request from SecOC to provide the FV) it holds the value used for previous transmission of a secured I-PDU. After the transmission (SecOC indication that the Secured I-PDU has been initiated for transmission.) it holds the value provided to SecOC for transmission. For Rx messages: Before a reception of a secured I-PDU (a request from SecOC to provide the FV) it holds the value used for the verification of previous received secured I-PDU. After the reception (SecOC notification of successful MAC verification) it holds the value provided to SecOC for reception.	0	SecOC indication that the Secured I-PDU has been initiated for transmission. Or SecOC notification of successful MAC verification

The Freshness Value shall be provided to SecOC for Transmission or Reception. On SecOC request, the FVM shall provide the freshness value for transmission based on: Trip and Reset counters received from [FvMaster], Trip and Reset counter from Freshness Value already stored and Reset Flag as described in Table 2 - Structure of Freshness ValueTable 2.

On SecOC request, the FVM shall provide the freshness value for reception-based on:

Reset Flag received as part of truncated MAC, Message Counter received as part of truncated MAC, Trip and Reset counters received from [FvMaster], and Trip and Reset counter from Freshness Value already stored as described in Table 3.

Explanation:

 Latest Trip Counter or Reset Counter refers to the values received from [FvMaster]

 Previous Reset Counter, Message Counter and Reset Flag refers to the values from each Freshness Value used for previous authentication generation or verification.

 Received Reset Flag or Message Counter refers to truncated freshness value used by SecOC to build the Authentication Information as described by Autosar specification.

Trip Counter and Reset Counter provided by [FvMaster] and stored by [FVM]

Trip Counter	Reset Counter
[TripCnt]	[ResetCnt]
Latest	Latest

Figure 22: Trip Counter and Reset Counter

Freshness Value for each secured I-PDU that is provided to SecOC by [FVM] and is composed by Trip Counter, Reset Counter, Message Counter, Reset Flag.

	Reset Counter [ResetCntPdu] Previous		Reset Flag [ResetFlag] Previous				
Freshness Value [FV] For each secured message. It holds the value used for previous transmission or reception of a secured I-PDU.							

Table 4 - Freshness Value for each secured message

Trip Counter	Freshness Value for Transmission				
Reset Counter	Trip	Reset	Reset Flag (1bit)		
comparison (*1)	Counter	Counter	Counter		
Latest <=	Previous	Previous	Previous+1	Previous	
Previous					
Latest > Previous	Latest	Latest	Init Value(0) +1	Previous +1 (rolling counter 0 or 1)	

^{*1 -} Trip Counter [TripCnt] Latest | Reset Counter [ResetCnt] Latest is compared with Trip Counter [TripCntPdu] Previous | Reset Counter [ResetCntPdu] Previous. The symbol "|" represents concatenation.

Table 5 - Construction of Freshness Value (FV) for Tx



Condition			Freshness Value for Reception					
Reset Flag comparison (1)	Trip and Reset counter comparison	Message counter(lower) comparison (2)	Trip Counter	Reset Counter	Message Counter (Upper) MsgCntUpper	Message Counter (Lower) MsgCntLower	Reset Flag (1bit)	
Previous = Received	-	Previous < Received (no carry)	Previous	Previous	Previous	Received	Received	
	-	Previous >= Received (carry)	Previous	Previous	Previous+1	Received	Received	
Previous ≠ Received	Latest <= Previous	-	Previous	Previous+1	0	Received	Received	
	Latest > Previous	-	Latest	Latest	0	Received	Received	

Table 6 - Construction of Freshness Value (FV) for Rx

- (1) Reset flag received as part of truncated freshness value is compared to Reset Flag from Freshness Value used for previous authentication verification.
- (2) Message counter received as part of truncated freshness value is compared to lower part of Message Counter used for previous authentication verification.

 The porpoise is to determine if a carry operation occurred.

Start-up Sequence

Sender and receiver ECU shall perform following procedure as preparation of freshness value usage

- Retrieve trip counter value out of non-volatile memory and set to latest and previous value
- Initialize latest and previous reset counter value with "0"
- Initialize message counter with "0"
- Initialize all reset flag with "low" except sync message

(Ref) In non-volatile memory, only trip counter latest value shall be stored and set stored value with latest trip counter and previous trip counter. Previous value in this context is previously sent value in case of sender ECU and previously received value in case of receiver ECU.



A Not applicable requirements

[SWS SecOC 00999][These requirements are not applicable to this specification. I(SRS BSW 00004, SRS BSW 00005, SRS BSW 00006, SRS BSW 00007, SRS BSW 00009, SRS BSW 00010, SRS BSW 00158, SRS BSW 00160. SRS BSW 00161, SRS BSW 00162, SRS BSW 00164, SRS BSW 00167, SRS_BSW_00168, SRS_BSW_00170, SRS_BSW_00172, SRS_BSW_00300, SRS BSW 00302, SRS BSW 00304, SRS BSW 00305, SRS BSW 00306. SRS BSW 00307, SRS BSW 00308, SRS BSW 00309, SRS BSW 00310, SRS_BSW_00312, SRS_BSW_00314, SRS_BSW_00318, SRS_BSW_00321, SRS_BSW_00325, SRS_BSW_00327, SRS_BSW_00328, SRS_BSW_00330, SRS BSW 00331, SRS BSW 00333, SRS BSW 00334, SRS BSW 00335, SRS BSW 00336, SRS BSW 00339, SRS BSW 00341, SRS BSW 00342, SRS BSW 00343, SRS BSW 00346, SRS BSW 00347, SRS BSW 00360, SRS BSW 00361, SRS BSW 00371, SRS BSW 00374, SRS BSW 00375, SRS BSW 00377, SRS BSW 00378, SRS BSW 00379, SRS BSW 00380, SRS BSW 00383, SRS BSW 00388, SRS BSW 00389, SRS BSW 00390, SRS_BSW_00392, SRS_BSW_00393, SRS_BSW_00394, SRS_BSW_00395, SRS_BSW_00396, SRS_BSW_00397, SRS_BSW_00398, SRS_BSW_00399, SRS BSW 00400, SRS BSW 00401, SRS BSW 00405, SRS BSW 00406. SRS_BSW_00408, SRS_BSW_00409, SRS_BSW_00410, SRS_BSW_00411, SRS BSW 00412, SRS BSW 00413, SRS BSW 00416, SRS BSW 00417, SRS_BSW_00419, SRS_BSW_00422, SRS_BSW_00423, SRS_BSW_00424, SRS BSW 00427. SRS BSW 00428. SRS BSW 00429. SRS BSW 00432. SRS_BSW_00433, SRS_BSW_00437, SRS_BSW_00438, SRS_BSW_00439, SRS BSW 00440. SRS BSW 00441. SRS BSW 00447. SRS BSW 00448. SRS BSW 00451, SRS BSW 00452, SRS BSW 00453, SRS BSW 00454, SRS BSW 00456, SRS BSW 00458, SRS BSW 00459, SRS BSW 00460. SRS BSW 00461, SRS BSW 00462, SRS BSW 00463, SRS BSW 00464, SRS_BSW_00465, SRS_BSW_00466, SRS_BSW_00467, SRS_BSW_00469, SRS BSW 00470, SRS BSW 00471, SRS BSW 00472)