

PrintDeck

USER MANUAL

Navigation, setup and everyday printer control



CONTENTS

Meet PrintDeck	3	Hi Esp!	31
PrintDeck Case Designs	4	Add a resin printer	32
Configuration & Updates	5	Add TinyMaker	33
AMOLED 1.75 navigation	6	Resin reactions	34
LCD 1.54 navigation	7	Resin printer status	35
Resin on your display	8	Print Details	36
Screen Reference	10	Layer Cycle	37
Web Configuration Panel	11	Temperature and resin feeder	38
My Printers - resin	12	Printer status	39
Printer Animations	18	Compact	40
Wi-Fi and time zone	22	Custom reactions on SD	41
Live View	23	PrintDeck Camera	42
Device Live View	24	MQTT and Home Assistant	43
Backup & Restore	25	Add OctoPrint	45
Connect a Prusa	26	PrintDeck Cloud	46
Page appearance	27	Printer details and motion	47
Connect an Elegoo	28	Screen Saver	51
Camera and full-screen view	29	Support	53
Firmware updates	30		

Meet PrintDeck

POCKET-SIZED PRINTER COMPANION

Your printers. One glance away.

PrintDeck brings live printer status and camera views into one lightweight device you can keep exactly where you need it. Move between multiple printers, follow long jobs and stay informed without opening another dashboard.



01 POCKET-SIZED

Light and compact enough to move from the desk to the workshop.

02 QI WIRELESS CHARGING

Recharge on a compatible Qi pad - no cable routine required.

03 MAGNETIC BY DESIGN

Strong mounting for steel surfaces such as a refrigerator or printer enclosure.

04 ADVANCED MONITORING

Live status, controls, cameras and saved printers in one touch-first interface.

05 CAMERA VIEWS

Check supported local printer cameras directly from PrintDeck.

06 LONG-RUN BATTERY

A large battery is designed to stay with even extended print sessions.

PrintDeck Case Designs

Three purpose-built forms for PrintDeck - designed to be printed, adapted and made your own.



01 THE RIVERSTONE

A pocket-sized round case with MagSafe-compatible Qi charging and integrated magnets for refrigerators, tool cabinets and other metal surfaces.



AUTHOR / CREDIT

Design: kitek



02 THE SCUTTLE

A low, sculpted round enclosure with a clean white shell and contrasting ring and button that can be printed in your own color.




AUTHOR / CREDIT

Design: Gulios



03 SNAPMAKER U1 MONITOR

A miniature companion to the tool-changing Snapmaker U1. Its square PrintDeck screen becomes the dedicated status console the printer was always meant to have.

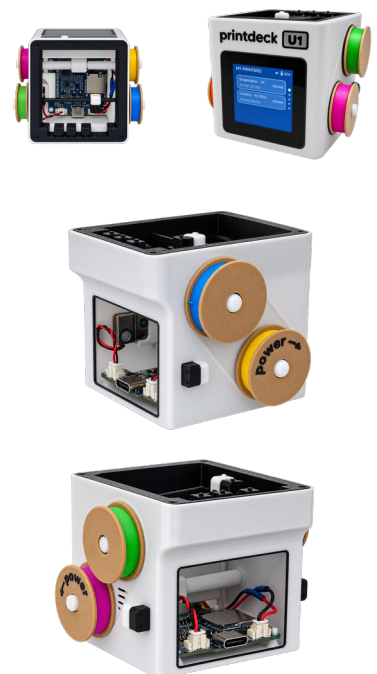

AUTHOR / CREDIT

Design: kitek

Configuration, Updates and Factory Reset

A guided first start takes only a few minutes. Keep PrintDeck, your phone or computer and every printer on the same local Wi-Fi network.

PrintDeck Web Installer

<https://printdeck.xyz/firmware/>

01 OPEN INSTALLER

On a PC or Mac, open the installer in desktop Google Chrome or Microsoft Edge. Mobile browsers, Safari and Firefox cannot access the USB serial port.

02 CHOOSE & INSTALL

Select the latest release and the correct display. Connect a USB-C data cable, choose First installation / Factory reset, select the ESP32 serial device and wait for 100%.

03 JOIN PRINTDECK WI-FI

After restart, scan the QR code or join the unique open PrintDeck-XXXXXX network shown on the display. No password is required. A no-internet warning is normal during setup.

04 OPEN WI-FI SETUP

The Wi-Fi setup page should open after you connect. If it does not, stay connected and open <http://printdeck.local>. Use <http://192.168.4.1> only as the fallback address.

05 JOIN YOUR NETWORK

Choose Scan networks, select your usual Wi-Fi and enter its password. Choose Check & save Wi-Fi. PrintDeck keeps setup open and stores the details only after the network supplies an IP address.

06 ADD YOUR PRINTERS

Reconnect to normal Wi-Fi. Open PrintDeck's Web Config address and add your printer. Choose Bambu Lab or Other printers. Enter a local address to detect the connection, or choose a network scanner result to open its connection details.

UPDATE WITHOUT LOSING SETTINGS

Open Web Config > Firmware > Check for updates or tap the device version. A compatible update preserves settings and custom images. A partition change instead shows the required USB factory version, with no Update now action. Back up your configuration before continuing. Keep PrintDeck powered throughout installation.

FACTORY RESET


For a required USB factory installation, open printdeck.xyz/firmware/, select your hardware and the version shown by PrintDeck, then First installation / Factory reset. This erases settings and custom images. Restore a compatible backup after setup, then check for later updates. Resetting settings inside Web Config does not change partitions.

AMOLED 1.75 - navigation

Main screens


Selected FDM printer

Tap an online printer

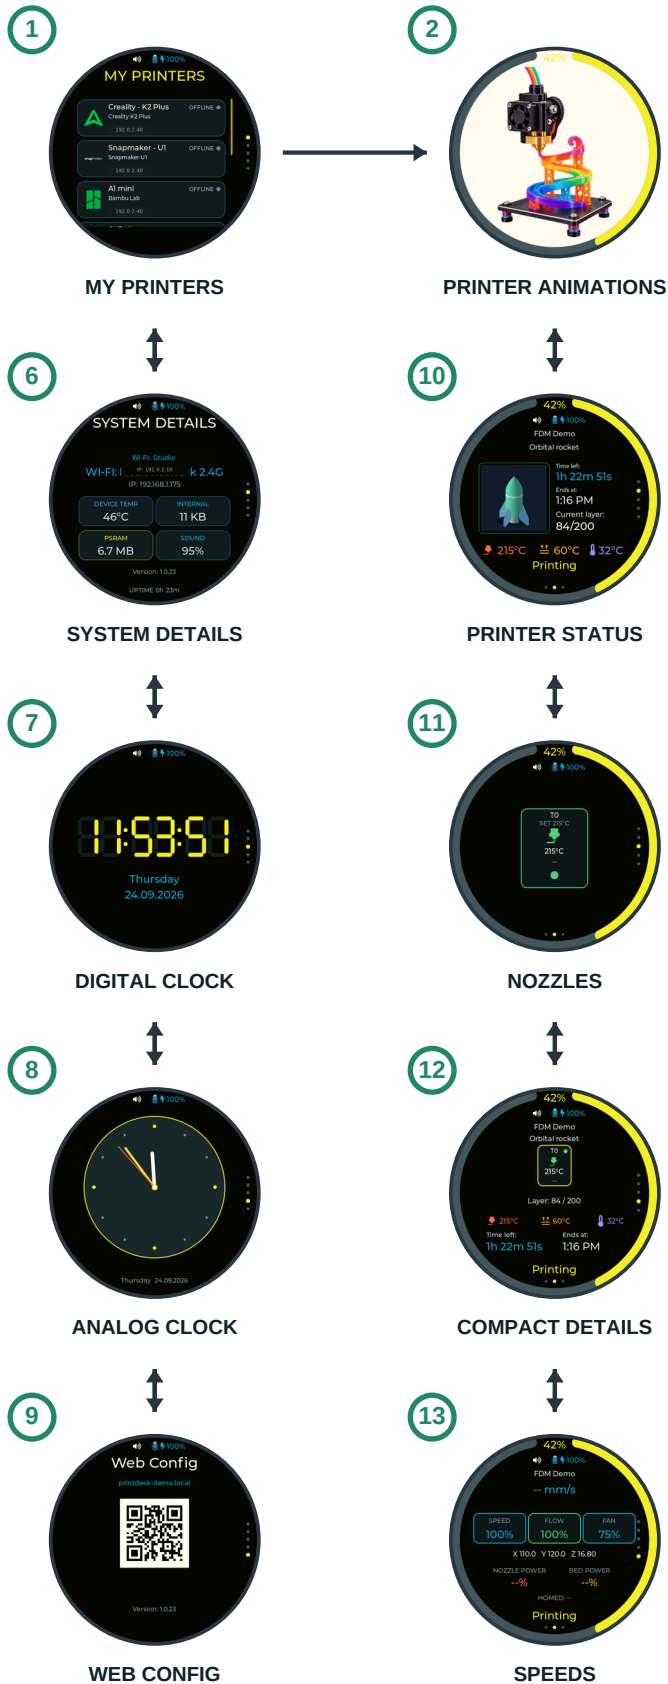

LONG PRESS

From any screen

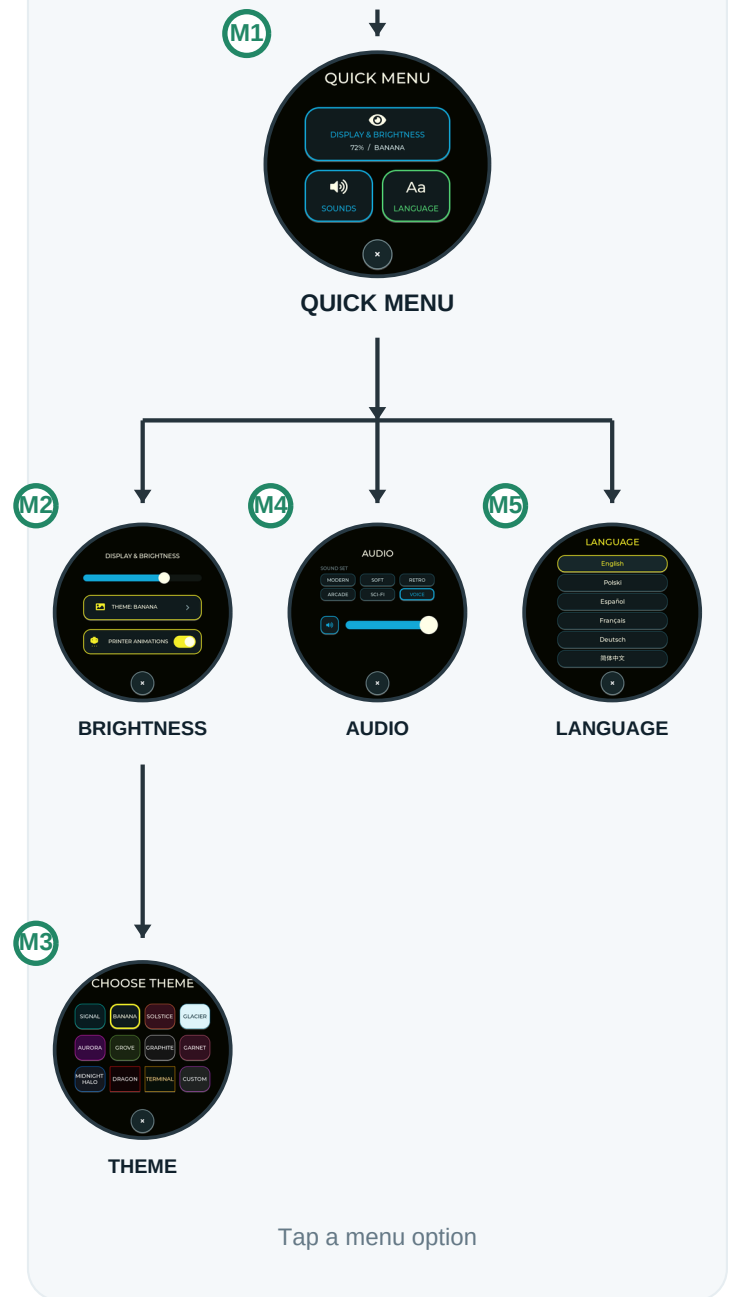


With Reactions enabled. Other printer pages depend on its available features.

LCD 1.54 - navigation

Main screens


Selected FDM printer

Tap an online printer

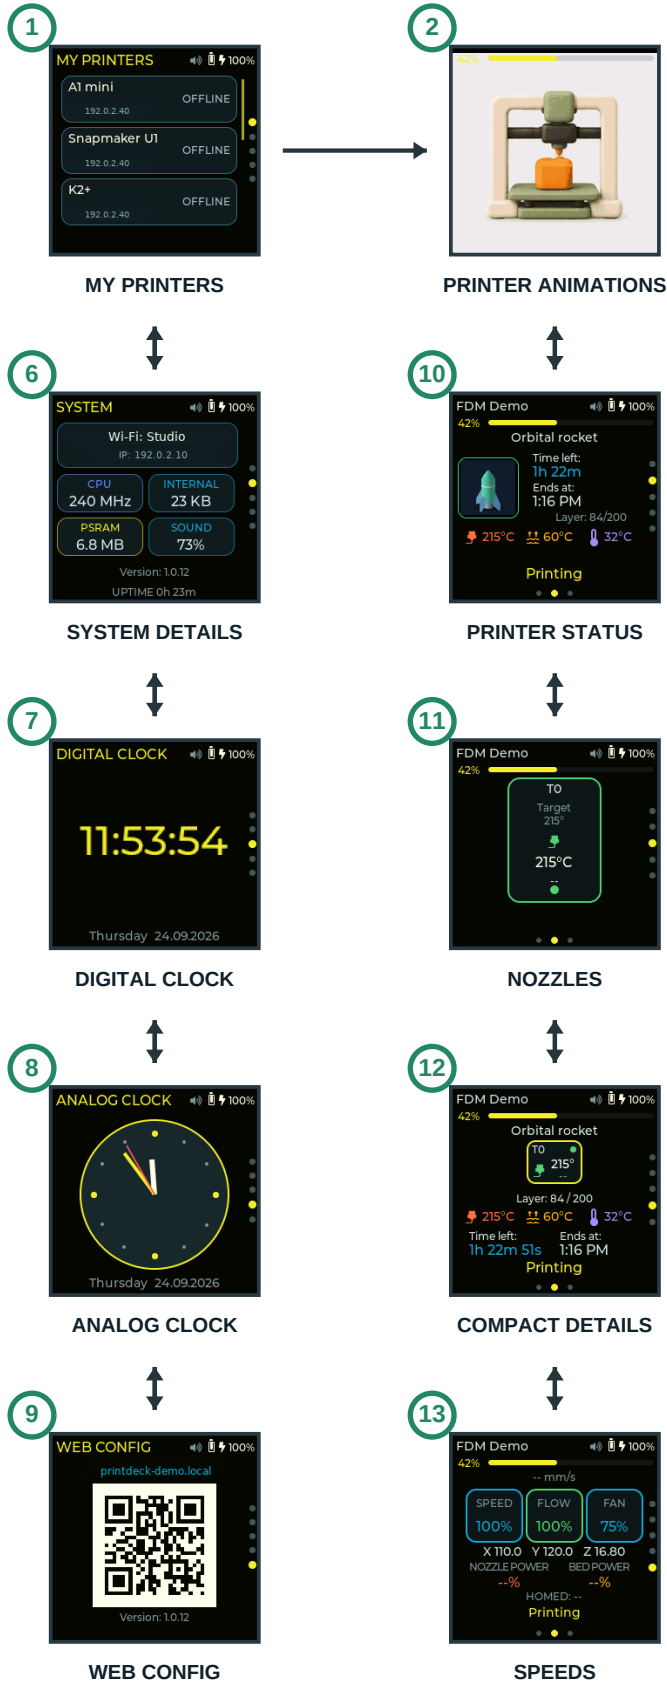

LONG PRESS

From any screen

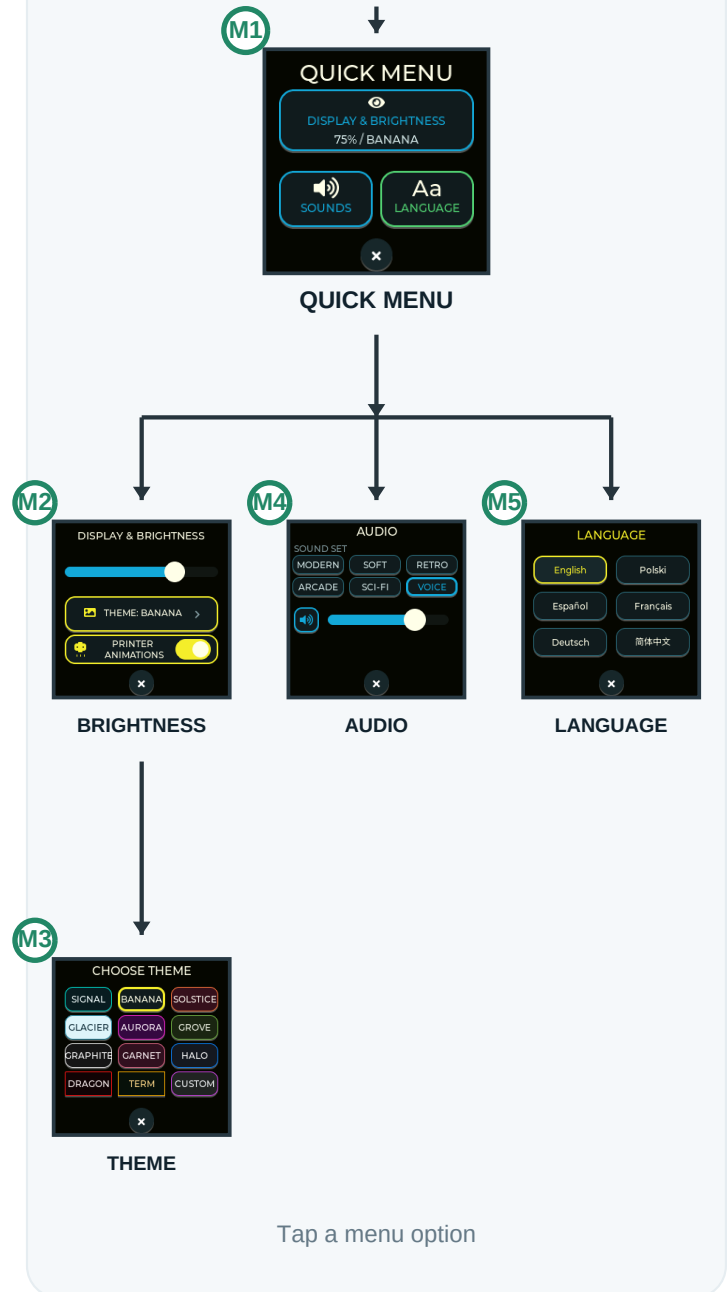


With Reactions enabled. Other printer pages depend on its available features.

Resin on your display




Resin reactions

AMOLED 1.75

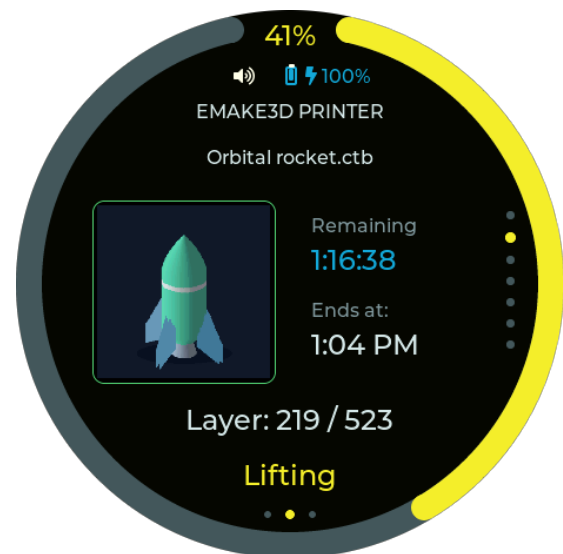


Model and print status

AMOLED 1.75

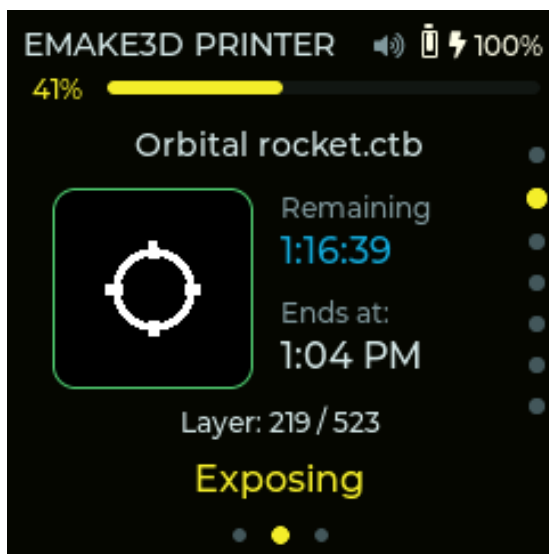

Current layer during exposure

LCD 1.54

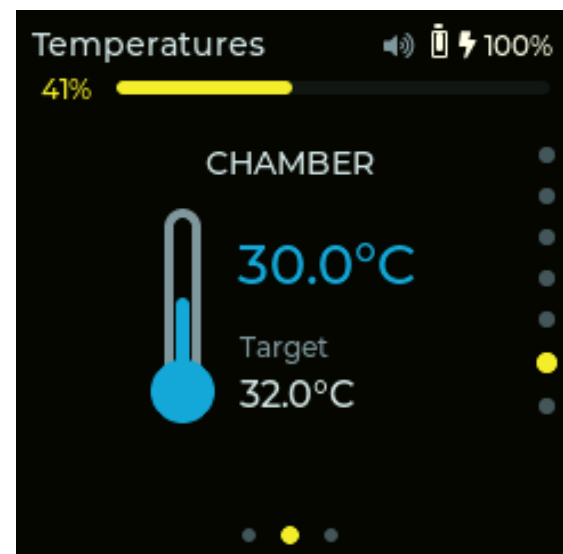


Chamber temperature

LCD 1.54


Screens and readings follow the selected printer. Swipe up or down to move through its resin dashboard.

Resin - layer settings and material

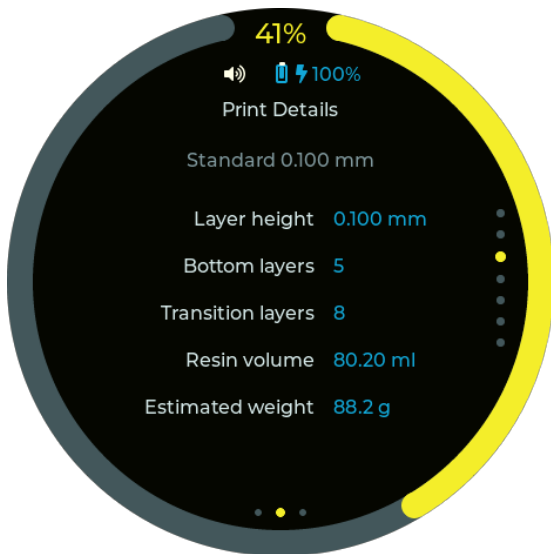


Print details

AMOLED 1.75

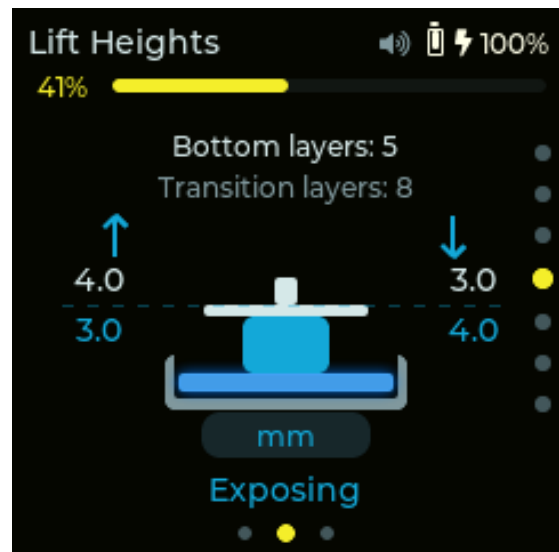

Bottom layers

LCD 1.54

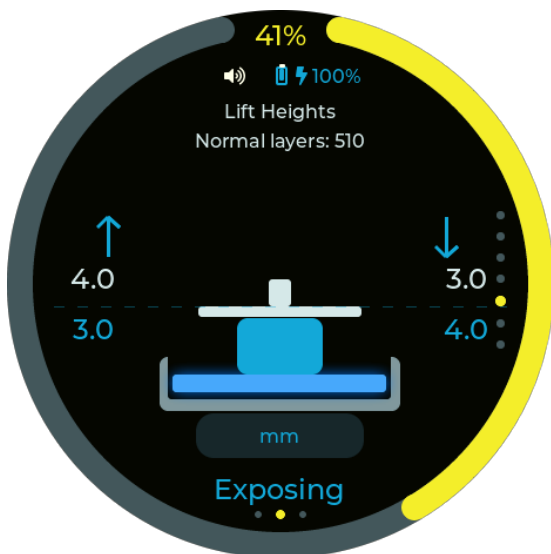

Normal layers

AMOLED 1.75



Resin level and refill

LCD 1.54

Screens and readings follow the selected printer. Swipe up or down to move through its resin dashboard.

SCREEN REFERENCE

SCREEN NAVIGATION

- 1 MY PRINTERS**
Your starting point for saved printers. Check availability at a glance and open a ready printer with one tap.
- 2 PRINTER ANIMATIONS**
Animations follow printer activity without a status caption. Activity details appear in Printer Status and Compact Status.
- 3 AMS LITE**
A clear overview of loaded materials and feeder positions whenever a compatible Bambu system is available.
- 4 LOCAL CAMERA**
A local live view from the printer camera for a quick visual check without leaving PrintDeck.
- 5 PRINTER LIGHT**
See and change the printer's chamber or work light from a focused control screen.
- 6 SYSTEM DETAILS**
Review connectivity, power, memory, temperature and firmware information when checking device health.
- 7 DIGITAL CLOCK**
A clean full-screen clock for the desk, with the current day and date always visible.


LONG-PRESS NAVIGATION

- M1 QUICK MENU**
Long-press any regular screen to open fast access to everyday display and sound settings.
- M3 THEME**
Choose the visual theme that best matches your setup.
- M5 LANGUAGE**
Choose the interface language used by the device.

- 8 ANALOG CLOCK**
A calm analog time view that turns PrintDeck into a useful ambient desktop display.
- 9 WEB CONFIG**
Open PrintDeck settings from a phone or computer using the shown local address or QR code.
- 10 PRINTER STATUS**
Follow progress, temperatures, remaining time and printer state. AMOLED also shows estimated finish or elapsed print time, plus current/total layers.
- 11 NOZZLES**
Monitor the active tool and available nozzles, including current and target temperatures.
- 12 COMPACT DETAILS**
Toolheads, layers and temperatures with Time left. Ends at alternates with Printing for every 10 seconds; without an estimate, the elapsed duration remains visible.
- 13 SPEEDS**
Track speed, flow, fan, position and heater output while the printer is working.

Web Configuration Panel

Configure PrintDeck from a phone, tablet or computer on the same Wi-Fi network. The panel runs locally on the device and does not require a cloud account.

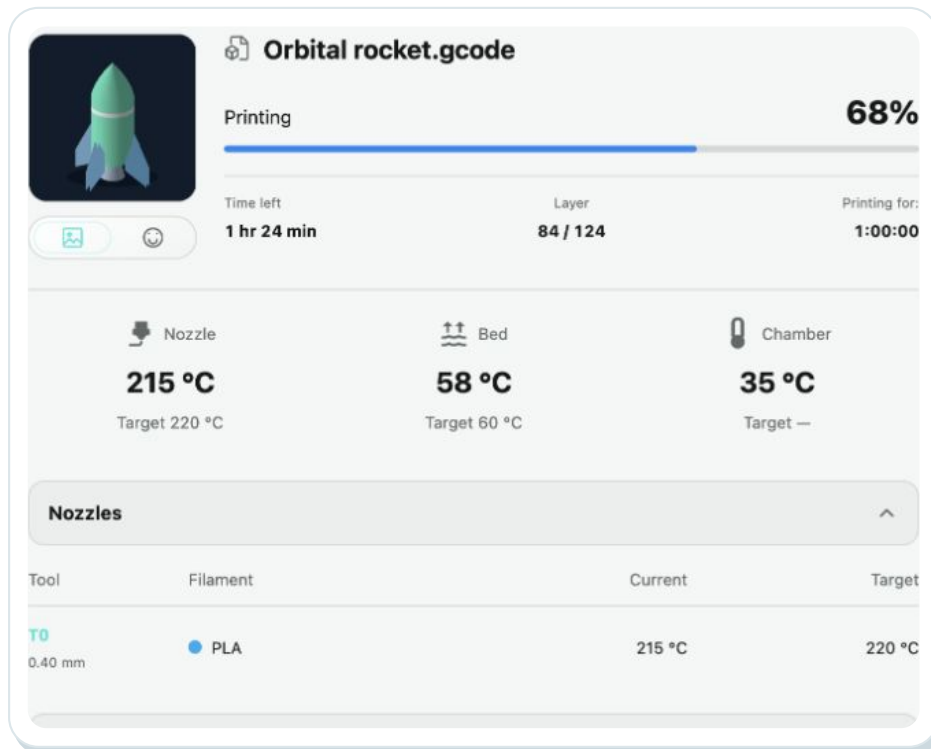

9



WEB CONFIG

OPEN THE PANEL

Use the address or QR code on screen (9)

Open WEB CONFIG on PrintDeck. Scan its QR code, or enter the displayed printdeck.local address in your browser. The IP address in System Details remains available as a fallback. Your browser device and PrintDeck must be connected to the same local Wi-Fi.

INSTANT FEEDBACK

Changes appear on PrintDeck


Open Settings > Live View to see and control the physical PrintDeck screen over local Wi-Fi. Tap, hold or swipe the image, use the four navigation arrows and choose a one-to-five-second refresh rate. USB is not required.

LOCAL BY DESIGN

Your network stays in control

The panel is served by PrintDeck on your LAN. Monitoring uses each supported printer family's local connection. No printer cloud account is required and printer telemetry is not uploaded. Elegoo Carbon families are experimental.

My Printers - resin

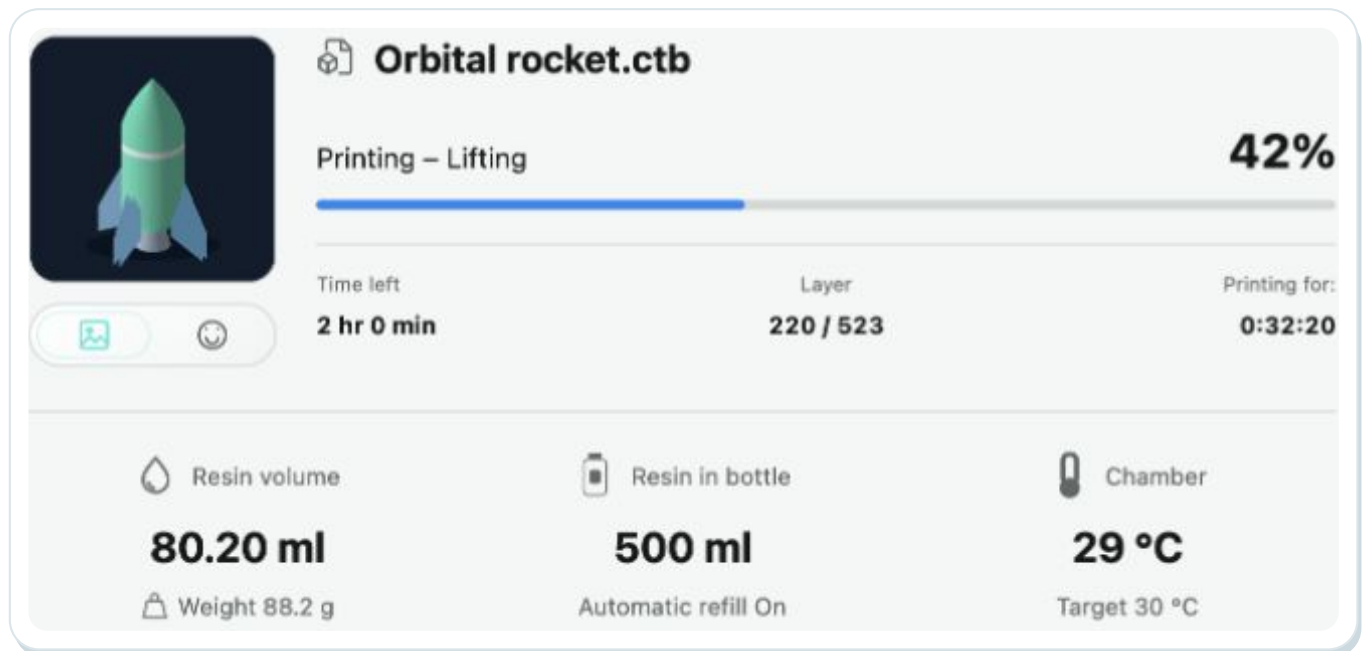


A dashboard made for resin

The resin dashboard replaces FDM nozzle and bed readings with resin volume, estimated weight, bottle level, automatic refill and chamber temperature. Available readings depend on the printer.

Model and current layer


Click the thumbnail to enlarge it. On supported resin printers, the current layer appears during exposure and briefly afterward. Switch to Reactions to follow the printing phase.

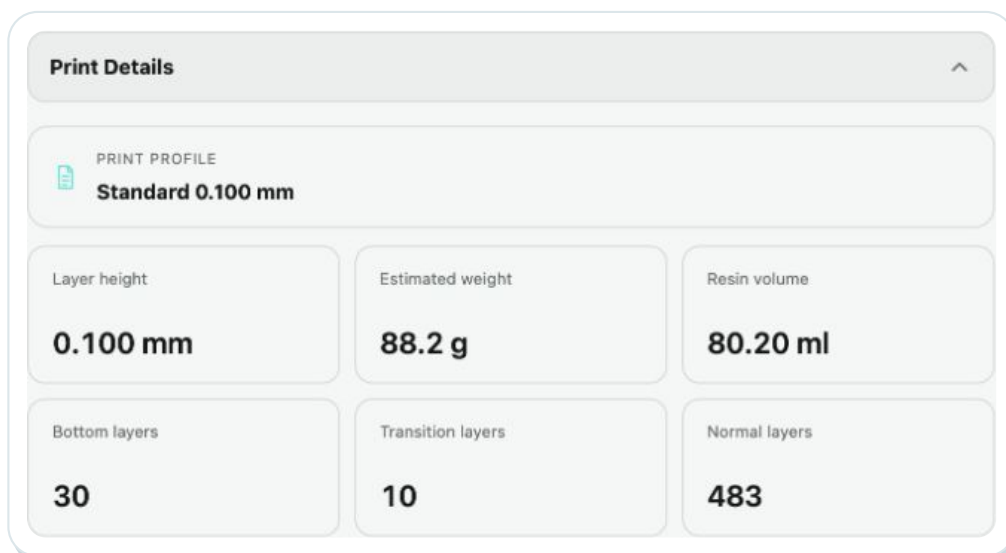

Print Details

See the print profile, layer height, bottom and transition layers. Open Lift speeds & heights to compare the bottom and normal layer settings.

Explore the print in 3D

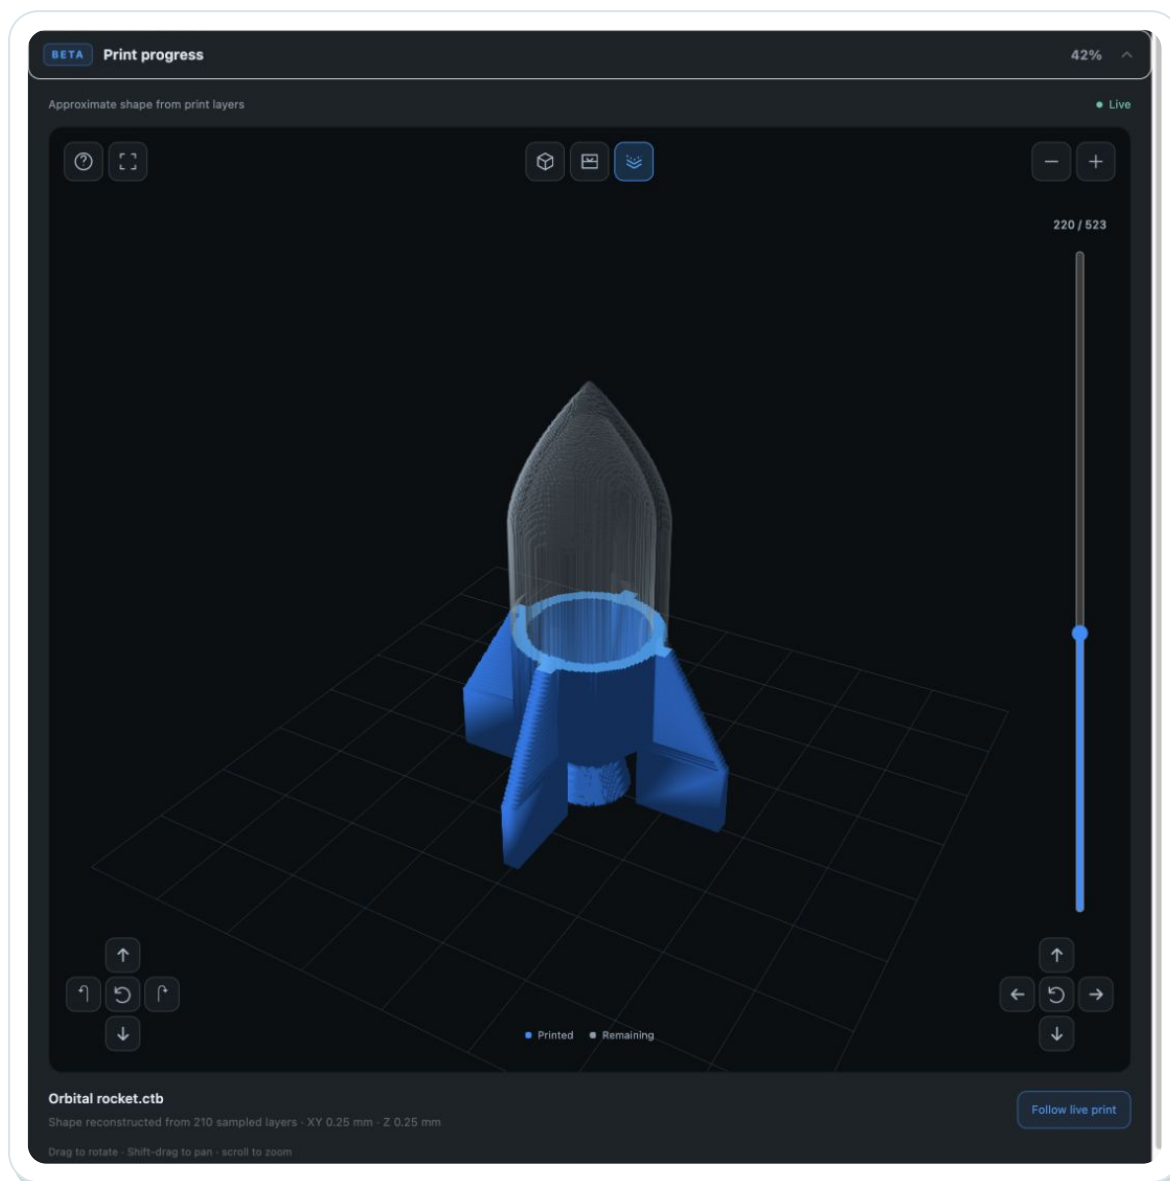

Print progress


The 3D view reconstructs an approximate shape from sampled print layers. Blue marks the printed part; the remaining part stays visible. It is a visual guide, not a measured scan of the finished print.

Look around

Drag to rotate, use the zoom buttons or scroll, and move the layer slider to inspect the shape. Follow live print returns the view to the current layer.

Web Config - My Printers: Scanner

The fastest way to add a printer is to let PrintDeck identify compatible devices on your current local network.

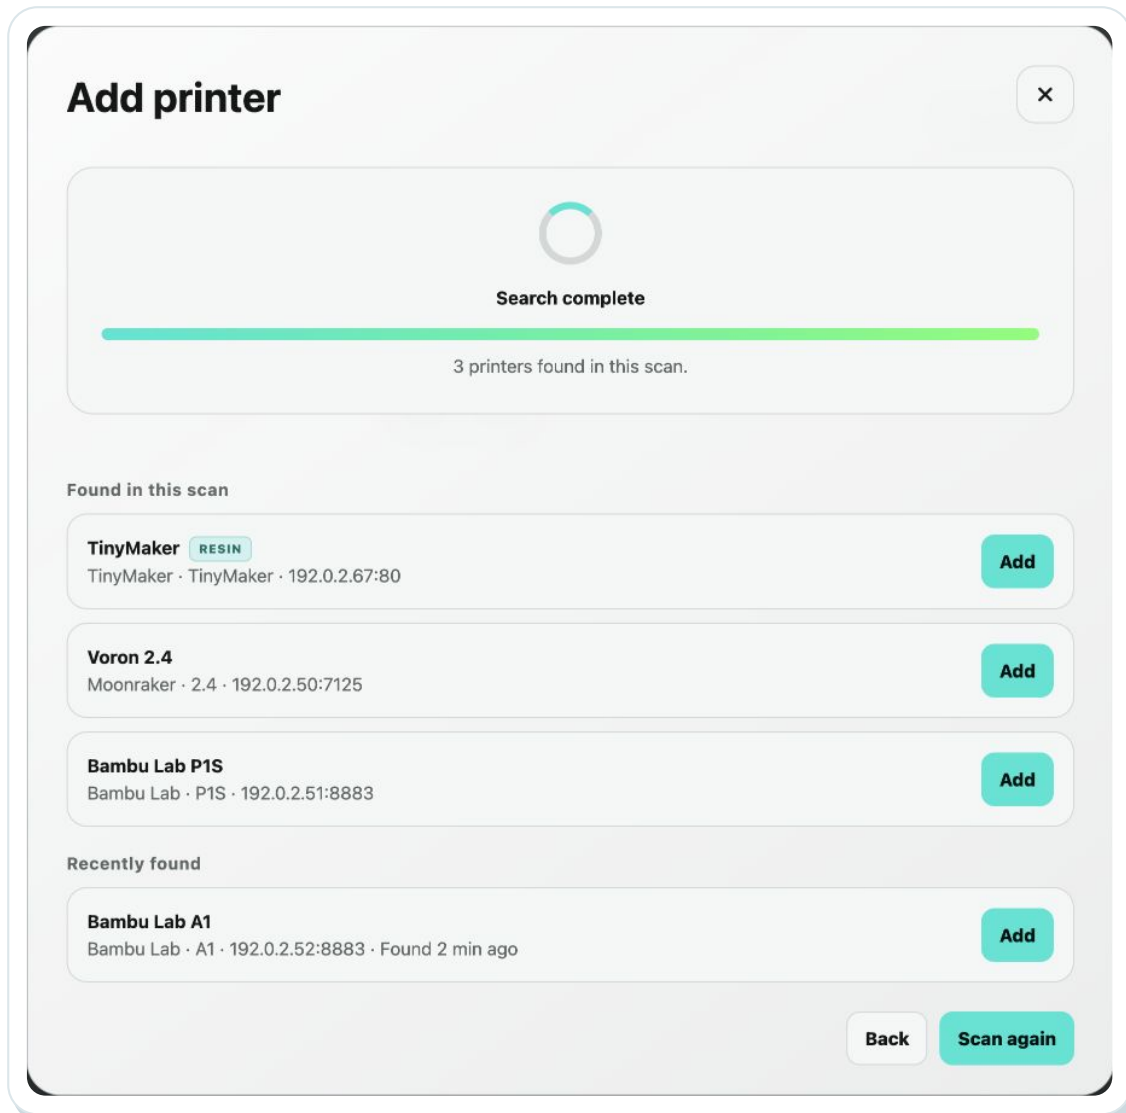

FIND MY PRINTER ON NETWORK

How the scanner works

Open My Printers, choose Add printer, then select Find my printer on network. PrintDeck immediately shows results found during the last five minutes while starting a fresh scan of the current local subnet. New matches appear under Found in this scan; cached matches remain under Recently found with their age. A scan never adds, edits or selects a printer by itself.

AFTER A MATCH

Verify and add several printers

Choose Add beside a result. Review its family and connection details. Moonraker, Bambu Lab, Prusa and supported Elegoo families use their own checks. Carbon 2 requires LAN Mode and its access code. Only a successful Check & add saves the profile. PrintDeck then marks the result Added. Manual entry remains available when discovery cannot find a service.

Web Config - Moonraker Printer

Connect Klipper-based printers directly through the Moonraker HTTP API available on your local network.

Add printer

✓ Printer address

02 Connection



Creality K2 Plus
192.0.2.60:7125
Klipper / Moonraker

Change address

Printer name

Creality K2 Plus

API key (optional)

Optional on a trusted LAN

Show

► Printer details

Review the details, then check the connection to add your printer.

Back

Check & add

CONNECTION FIELDS

Address the Moonraker service

Printer name is the friendly label shown throughout PrintDeck. Other printers first asks for the local IP address or hostname and an optional port. Detect printer opens the matching connection form; 7125 is the usual Moonraker port. An API key is optional on a trusted LAN and is needed only when your Moonraker configuration requires one.

PRINTER IDENTITY

Detect, review and connect

Detect printer reads Moonraker information and printer.cfg without changing the printer. When recognized, it suggests the manufacturer and model; both fields remain editable. Check & add verifies the current address and API key before saving. When adding from a scan, PrintDeck returns to the result list so more printers can be added without losing the recent matches.

Web Config - Bambu Lab Printer

Bambu Lab printers connect directly over the local MQTT/TLS service. No Bambu cloud account is used.

Add Bambu Lab printer

Local-only MQTT connection; no cloud account is used.

Printer name

Bambu Lab IP address or hostname

Printer serial number

LAN access code

Show

To find this code, open the LAN Only Mode or Developer Mode screen on the printer and copy the code shown there. You do not need to enable either option.

No Bambu Lab account or cloud connection is used. MQTT TLS stays inside your local network.

LOCAL LAN CONNECTION

Collect three values from the printer

Enter the printer IP address or hostname and its serial number. To find the LAN access code, open the LAN Only Mode or Developer Mode screen on the printer and copy the code shown there; neither option needs to be enabled. Check & add requires one authenticated MQTT/TLS report before the profile is saved. The code remains on PrintDeck and is never sent to an external service.

OPTIONAL COMPATIBILITY REPORT

Help improve PrintDeck

The report records the fields exposed by the printer and how their values are formatted. Model and firmware differences can introduce new fields or safe numeric ranges, so sharing it helps PrintDeck support more Bambu Lab printers. The report excludes connection details, access codes and print names. It stays on your device: nothing is uploaded or sent automatically. Download the report and email it to us only if you choose to share it.

Send the downloaded report to support@printdeck.xyz

Web Config - Display & Brightness

Shape the PrintDeck interface and see brightness, orientation and theme choices reflected on the device immediately.

Screen Settings

Set everyday brightness and choose automatic or fixed orientation.

Screen brightness

72%

Screen orientation

Rotate automatically

Choose a Theme

Each theme transforms the complete PrintDeck interface.



Signal

Pure black with electric teal and signal-green accents.



Banana

Deep charcoal with banana yellow and crisp cyan highlights.



Solstice

Warm coral and amber over deep aubergine.

THEMES

Choose a visual system

Theme cards preview printer data and status colours before you choose one. Custom lets you edit and save the complete palette.

SCREEN SETTINGS


Brightness & orientation

Screen Settings appears above the theme cards. Set everyday brightness and choose automatic orientation or lock the screen to a fixed rotation.

Reactions




Reactions add a first printer page whose animation follows the current activity. Web Config has three independent visibility switches: Reactions, progress ring or bar, and percentage. Reactions, the ring or bar and percentage are on by default. A previously saved OFF setting is preserved. Round displays use a ring; square displays use a bar. FDM animations have no status caption; activity details appear in Printer Status

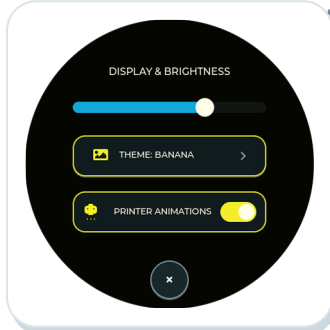

ON PRINTDECK

Long-press a regular screen, open Display & Brightness and use the Reactions switch.

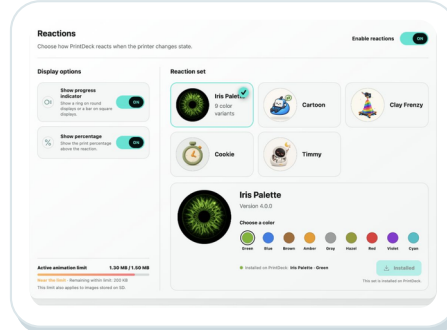

IN WEB CONFIG

Enable reactions at the top. Display options and animation storage are on the left. Select a color beside the eye to preview a set, then choose Install and confirm. Previewing keeps the installed set and event images unchanged. With reactions off, installation and event editing are disabled. Below, customize individual events by uploading an image, switching an event off or resetting it to the installed set default. Custom images stay active when you install another set.



WHAT EACH REACTION MEANS


Captured from a physical round PrintDeck

STANDBY The printer is online and ready for a new job.	PREPARING A job is starting or setup work is in progress.	HEATING NOZZLE The hotend is warming toward its target.	LOADING FILAMENT Material is being fed through the filament path.
PRINTING The selected job is actively being printed.	PAUSED The job is paused and waiting to continue.	COMPLETE The printer reports that the job finished.	FAILED The job stopped because the printer reported an error.

Set downloads are validated before activation. Custom image overrides stay active across set changes and are removed only with Reset to set default.

Custom reaction images

Choose Upload / Replace image on a reaction card, or drag a file directly onto that card. PrintDeck opens this review window before anything is sent to the device.

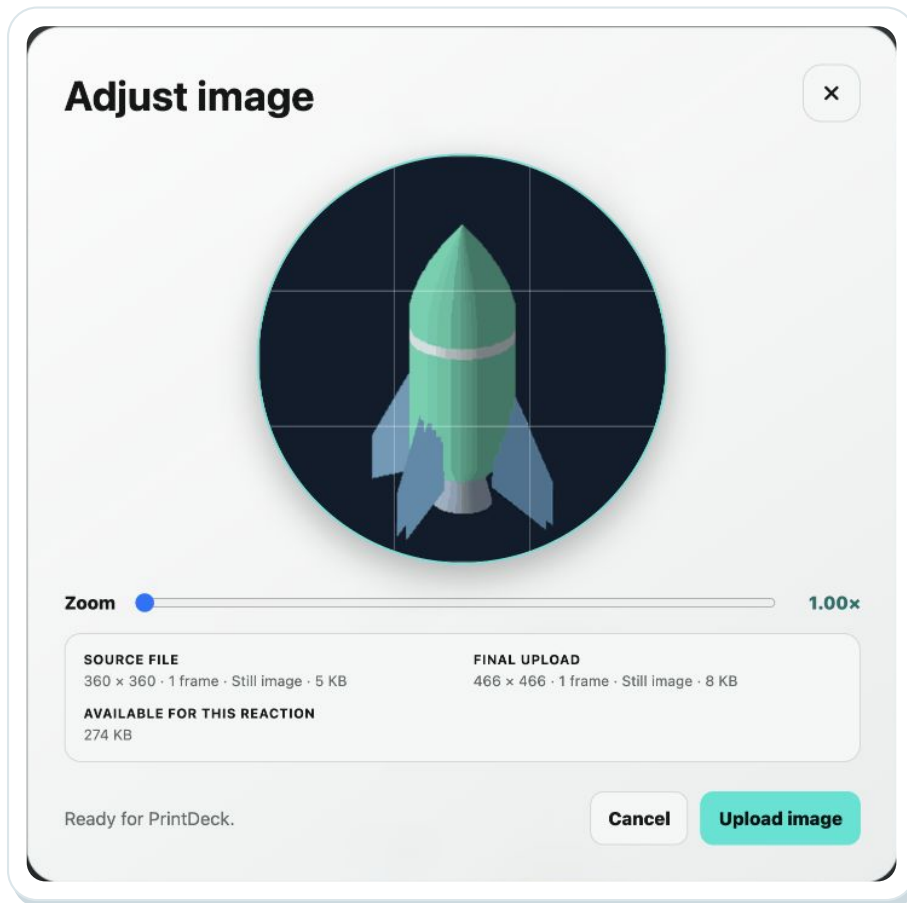

POSITION & ZOOM

Frame the image

Drag the preview to choose the visible area. Use the Zoom slider or mouse wheel to fill the display without unwanted bars. Static images stop here: they do not show animation controls.

ANIMATED FILES

Choose the useful moment

Select a clip length from 1 to 5 seconds. Drag the outlined window left or right to choose the source range; the preview loops that exact selection. Short files use their available duration.

01 / OPEN

Choose or drop

Use GIF, PNG, JPEG, WebP, AVIF or BMP. HEIC and HEIF work when the browser can decode them.

02 / REVIEW

Check the result

Source and final dimensions, frame count, duration and estimated upload size are shown before upload.

03 / UPLOAD

Confirm the change

Choose Upload image, then wait for the spinner to finish. The card is marked Custom after a successful save.

Cancel or close leaves the current reaction unchanged. Reset to set default removes a saved custom image later.

Web Config - Sounds

Choose how PrintDeck confirms actions and announces important printer events in your workspace.

Sound Effects

Choose a notification sound style and volume. Every preset uses the same PrintDeck startup tune.

Sound preset

Modern
Layered interface effects with a polished, expressive sound.

Soft
Gentle tones for a quieter workspace.

Retro
Classic, simple digital beeps.

Arcade
Bright game-style tones with energetic rises and zaps.

Sci-Fi
Futuristic lasers, force fields and mechanical cues.

Voice notifications
Multilingual spoken messages for supported events, with clean tones for frequent interface cues.

Sound volume



68%

Notification sounds

Mute any event you do not want to hear. Test sound always plays a preview, even when that event is muted.

SOUND PRESET

Six distinct sound sets

Choose Modern, Soft, Retro, Arcade, Sci-Fi or Voice Notifications. Voice Notifications speaks supported events in the selected language and uses clean tones for frequent interface cues.

VOLUME & MUTE

Match the room

Set the master volume or mute sound completely. Individual notification events can also be muted without disabling all feedback.

TEST SOUND

Preview before you finish

Use Test sound beside an event to hear the selected preset and volume. Testing plays a preview only and does not change saved event settings.

Web Config - Device & System Settings

Review the current PrintDeck hardware state, then use the remaining tabs to manage idle behaviour, local connectivity, camera preferences, time zone and firmware.

Device

Live system information from this PrintDeck. Values update automatically.

Device name

Give this PrintDeck a name you will recognize. Its permanent address stays available.

Name

e.g. Workshop

Save name

Local address: `printdeck-a1b2c3.local`

IP address: `192.168.50.10`

MAC address: `02:00:00:A1:B2:C3`

CURRENT DEVICE

Waveshare ESP32-S3 Touch AMOLED 1.75

Firmware `PrintDeck preview` Uptime `2 hours · 5 minutes`

CPU

ESP32-S3

2 cores · 240 MHz

Internal RAM

175 KB / 320 KB

55% used · 145 KB free · lowest free 119 KB

PSRAM

2.35 MB / 8.00 MB

29% used · 5.65 MB free

Flash

16.0 MB

Firmware partition · 5.00 MB

Storage

4.38 MB

Content partition

Network

Connected

Signal -48 dBm · Channel 6

DEVICE

Current state, never history

See the hardware model, firmware, uptime, CPU, current RAM and PSRAM use, Flash capacity, network signal, display and system version. Values refresh only while Device is open and are not stored. Device restart below these details asks for confirmation, preserves settings and waits for reconnection. The printer keeps printing.

SCREEN & NETWORK

Idle safely and stay local

Open the settings gear, then Wi-Fi directly below Device, or click the Wi-Fi badge in the header. Connect PrintDeck to the same local network as your printers. Screen Saver controls dimming, screen saver animations, screen-off timers and wake behaviour; recovery remains available if Wi-Fi cannot be reached.

CAMERA, TIME & UPDATES

Tune the remaining device settings

Choose the camera refresh mode, set the time zone used by clocks and install validated PrintDeck firmware. Keep the device powered while an update is validated and restarted.

PrintDeck User Manual

21

EN

Wi-Fi and time zone

Wi-Fi

Connect PrintDeck to the same local network as your printers.

Connected to: **PrintDeck Preview** Signal -48 dBm

Detected networks • 3

Choose a Wi-Fi network

Wi-Fi password

Check & save Wi-Fi

Keep PrintDeck and your printers on the same local network. Choose a Wi-Fi network, enter its password and save. Use the address shown on PrintDeck to reopen Web Config after reconnecting.

Time Zone

Choose the local time used for clocks and on-screen estimates. The current UTC offset is shown beside each city.


Time zone

Warsaw (UTC+2)

Save time zone

Choose the time zone for the device clocks and estimated finish times. Check the displayed local time after saving.


Live View

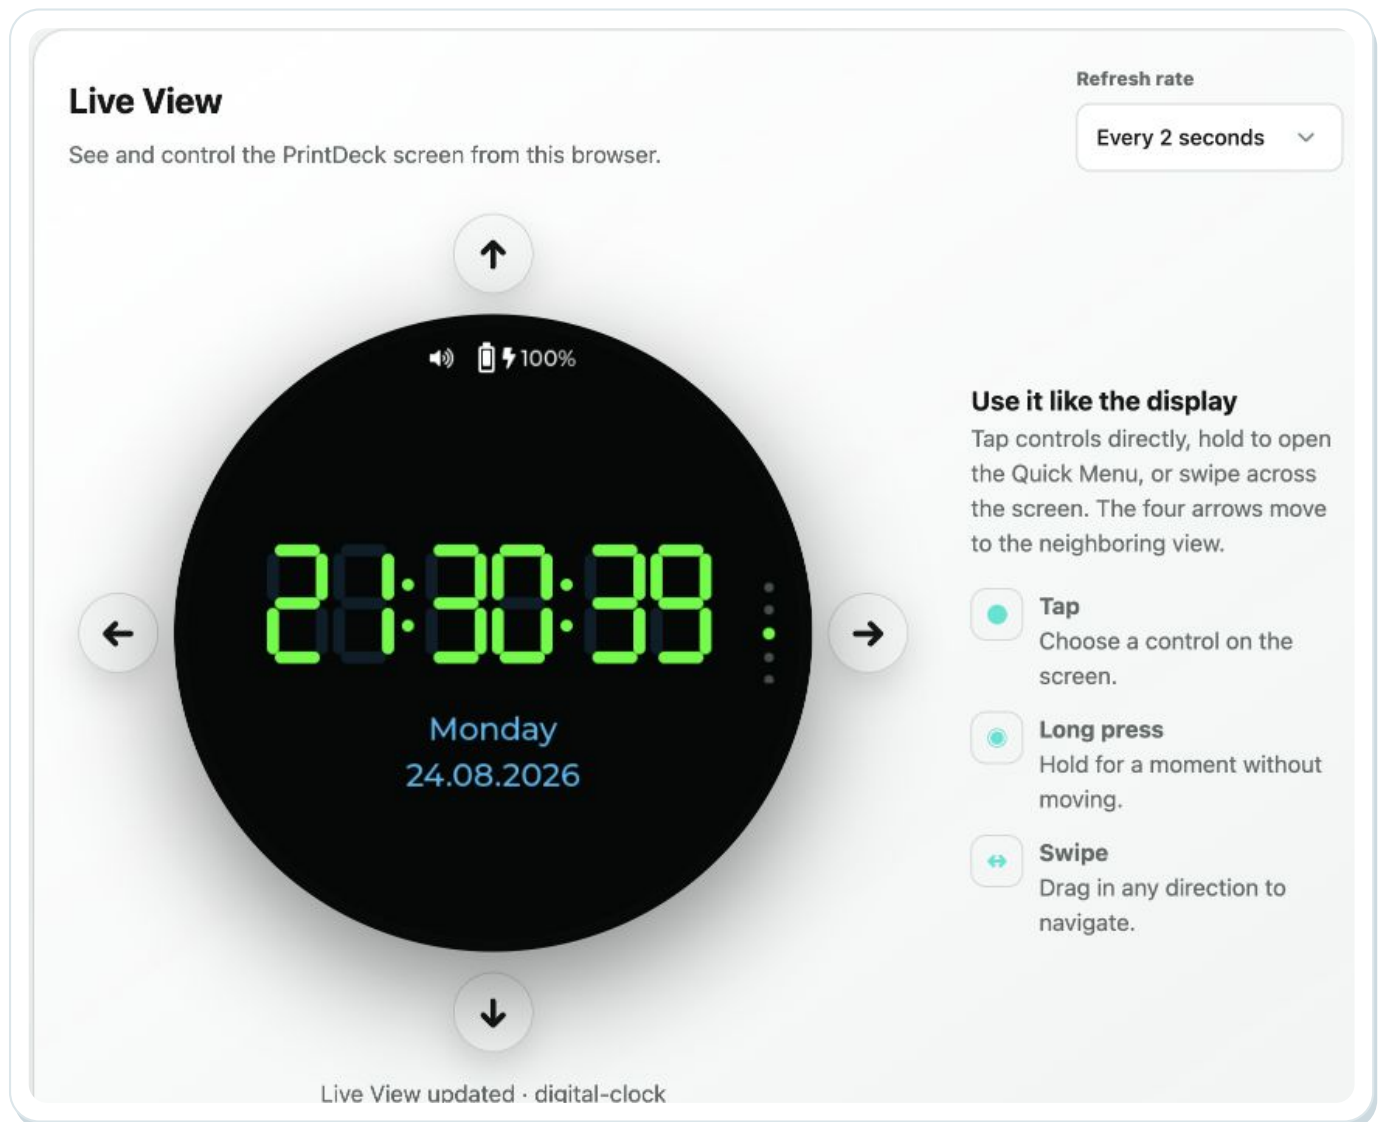

Open Device Settings > Live View to see the actual PrintDeck display. Choose a refresh interval, then tap, hold or swipe the image; the arrow buttons offer the same navigation.

Live View works over local Wi-Fi without USB. Remote navigation does not wake a sleeping physical display.

Device Live View

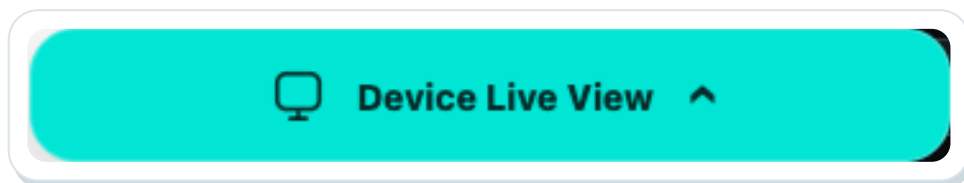

1. Always within reach

In Settings → Live View, Show Live View bar controls the bottom bar on every page of Web Config, the app and Cloud. This setting is saved on your PrintDeck and synchronizes across browsers. It defaults to ON for Panda KNOMI and OFF for other models. Click Device Live View to open the panel upwards on a computer, tablet or phone, even above open dialogs.

2. Control the screen

Tap, hold or swipe the screen image, use the arrows, or choose Quick Menu. While the panel is open, the page behind it stays in place. On a short display, scroll inside the panel outside the screen image. Close with the bar, the cross or Escape; the underlying dialog stays open.

3. One active view

Opening starts the view. Closing, changing pages or hiding the browser stops it. In Cloud, selecting another device also ends the old session. The full Live View page and this panel share one view, so opening the panel never starts a second stream.

4. Hide the bar on Panda Knomi

Panda Knomi has no touchscreen, so hiding the bar requires confirmation. Live View is the only way to change its screens; it remains available in Settings after hiding the bar. Cancel keeps the bar visible. Other models do not ask for confirmation. Pages and dialogs leave room below their controls so the bar does not cover the last buttons.

Web Config - Backup & Restore

Save the complete PrintDeck setup before an update, reset or device replacement, then restore it on the same compatible PrintDeck hardware.

Backup & Restore

Move your complete PrintDeck setup to a safe encrypted file and restore it on compatible PrintDeck hardware.

Private by design. Encryption and decryption happen locally between this browser and PrintDeck. Nothing is uploaded to a cloud service. Store the password somewhere safe—without it, the backup cannot be opened or recovered.

Create backup

Includes Wi-Fi, printer profiles and credentials, display and sound settings, reactions, and your custom GIF animations.

Backup password

Confirm backup password

Create & download encrypted backup

Restore backup

Choose a .pdeck file and enter its password. PrintDeck checks compatibility and space before anything changes.

PrintDeck backup file

No file chosen

Backup password

Check backup

PASSWORDS CANNOT BE RECOVERED

Keep the .pdeck file and its password somewhere safe. Without that exact password, neither PrintDeck nor support can open or restore the backup.

CREATE A BACKUP

One encrypted .pdeck file

Open Device Settings, then Backup & Restore. Enter a password of at least 3 characters twice and choose Create & download encrypted backup. The filename includes the device name or ID and a timestamp. The backup saves the device name, Wi-Fi and printer credentials, profiles, display and sound settings, reactions and custom GIFs. Save the password separately from the file.


RESTORE SAFELY

Check first, change second

Choose the .pdeck file, enter its password and select Check backup. Review the hardware, printer count, custom-animation count and file size before restoring. Keep current Wi-Fi settings selected when using your normal network so the page can reconnect after restart. PrintDeck restores custom GIFs one at a time, validates the same per-file and total storage limits, saves configuration last and then restarts.

Credentials, settings and custom GIF content are protected by AES-256-GCM. The key is derived locally from the password; only compatibility and size metadata remain readable. Nothing is uploaded.

Connect a Prusa

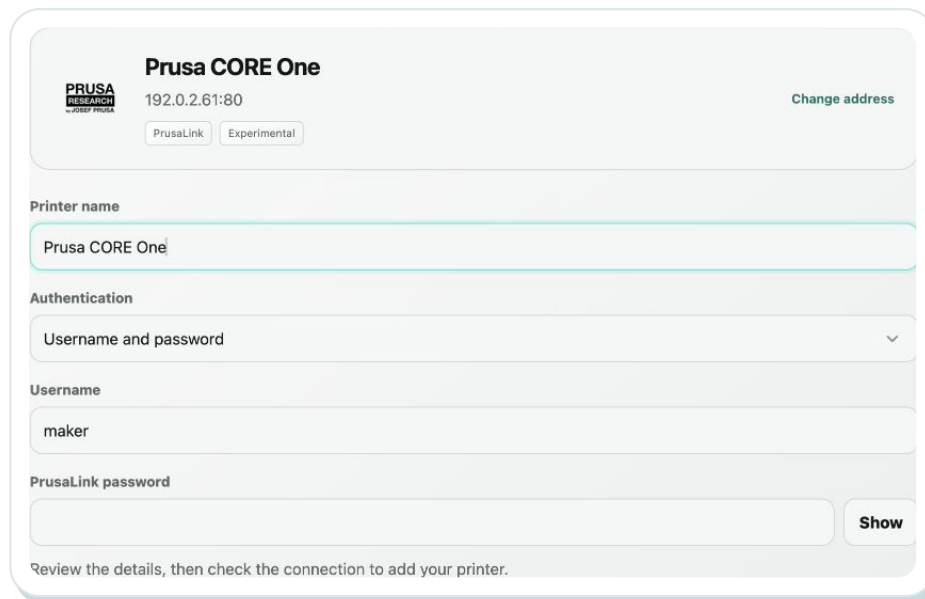

The screenshot shows a web form for connecting a Prusa CORE One printer. At the top, there's a header with the Prusa Research logo, the printer name 'Prusa CORE One', its IP address '192.0.2.61:80', and a 'Change address' link. Below this are two tabs: 'PrusaLink' (selected) and 'Experimental'. The form is divided into sections: 'Printer name' with a text field containing 'Prusa CORE One'; 'Authentication' with a dropdown menu set to 'Username and password'; 'Username' with a text field containing 'maker'; and 'PrusaLink password' with a text field and a 'Show' button. At the bottom, a note says 'Review the details, then check the connection to add your printer.'

1. Detect the connection

Open Add printer > Other printers. Enter the local address and optional port, then choose Detect printer. PrintDeck opens the PrusaLink form when recognized; a scanner result goes directly to that form. If needed, expand Connection type and select PrusaLink.

2. Use your PrusaLink credentials

Choose Username and password, or API key if your PrusaLink provides one. Copy the details from your printer's PrusaLink settings. The username can be changed; maker is only the default. No cloud account is needed.

3. Check and add

PrintDeck checks identity, credentials and live status before saving. This check only reads data and cannot start or stop a print. If discovery finds nothing, enter the address manually, including a custom port when needed.

4. Monitor and edit

Select the online printer to see its status, progress, temperatures and available job image. Missing values show placeholders. An unchanged saved connection can retain a blank password or key field; after changing its address, username or authentication method, enter the credentials again.

Page appearance



1. Follow your system

Web Config follows your phone or computer's light or dark appearance by default. The highlighted sun or moon shows the appearance currently in use.

2. Choose light or dark

Select the sun for light appearance or the moon for dark appearance. Your browser remembers the choice; selecting the same icon again keeps that appearance.

3. Return to automatic

After a manual choice, a monitor with arrows appears beside the sun and moon. Select it to follow your system again. The monitor icon then disappears, and later system changes update the page automatically.

4. Browser appearance only

These controls are available in the footer and during first-time Wi-Fi setup. The choice is shared between tabs for the same Web Config address. It does not change the physical PrintDeck display theme.

Connect an Elegoo

**ELEGOO Centauri Carbon**

192.0.2.62:3030

SDCP

Experimental

Change address

Printer name

ELEGOO Centauri Carbon

Printer identifier

PREVIEWSERIAL01

Leave blank to read the identifier from the printer.

Review the details, then check the connection to add your printer.

1. Detect your printer

Choose Add printer > Other printers, enter the local address and optional port, then Detect printer. PrintDeck selects the connection from the response: Moonraker for Neptune 4, or the separate Centauri Carbon / Carbon 2 forms. Scanner results go directly to connection details.

2. Enter the local details

Neptune 4 uses the Moonraker form. For Carbon or Carbon 2, enter a name and local address; the identifier can be read automatically. Carbon 2 also needs LAN mode and the access code shown by the printer. No cloud account or extra computer is required.

3. Check and add

PrintDeck verifies identity and current status before saving. Discovery is started only on request; manual entry remains available. If local identity discovery is blocked, check network isolation. No print, movement, heating or filament commands are sent.

4. Monitoring and availability

Choose the online printer to see status, progress, temperatures and available timing. Missing data stays unknown. Carbon camera, thumbnails and CANVAS pages are not yet enabled. Experimental is not a claim that every firmware version has been tested.

Camera and full-screen view



1. Open the camera

Select an online printer and swipe to its camera page. PrintDeck connects directly over your local network while the camera page is visible.

2. Choose live video

For a Snapmaker U1 with the PAXX camera service, PrintDeck detects the local stream automatically. Select Live for continuous video, or Snapshots for periodic still images. Frame rate depends on the printer, Wi-Fi and display hardware. Other camera services keep their supported viewing mode.


3. Tap to fill the screen

Tap the camera image to fill the entire display and hide the headings, controls and navigation dots. The picture keeps its proportions; its sides are cropped to fit. Tap again to return to the normal view. Drag from inside the enlarged image to move the cropped view. Movement is limited to the image edges.

4. Leave the view

In full-screen view, start a swipe at the display edge to change pages. A stationary long press opens Quick Menu. Leaving the camera page or turning the display fully off stops camera reception. Returning to the page starts a fresh view.

Firmware updates

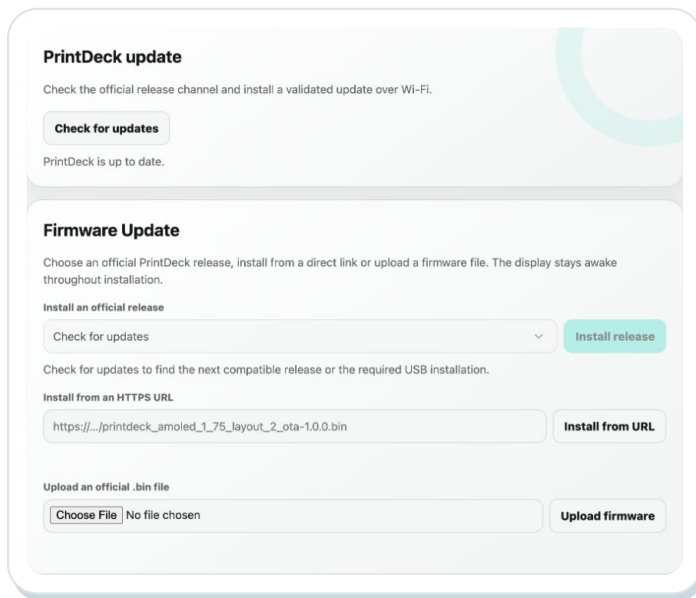

PrintDeck update

Check the official release channel and install a validated update over Wi-Fi.

Check for updates

PrintDeck is up to date.

Firmware Update

Choose an official PrintDeck release, install from a direct link or upload a firmware file. The display stays awake throughout installation.

Install an official release

Check for updates

Check for updates to find the next compatible release or the required USB installation.

Install from an HTTPS URL

Upload an official .bin file

No file chosen



1. Check the next step

Open Firmware in Web Config or tap the version on the device. A compatible update offers Install update and keeps settings and custom images.

2. Back up before a factory installation

If a USB factory installation is required, back up your configuration. The device shows the required version and only a Cancel button. Web Config links directly to the installer.


3. Install the required version over USB

Open printdeck.xyz/firmware/ in desktop Chrome or Edge. Select your hardware and the required version, then First installation / Factory reset. This erases saved settings and custom images. Restore your compatible backup after setup.

4. Check again after installation

If 1.2 and 1.4 changed the layout and the latest is 1.6, an older device is directed to factory-install 1.4, then update to 1.6. The screen shows an example version. Reset to factory settings inside Web Config does not change partitions.

HI ESP!

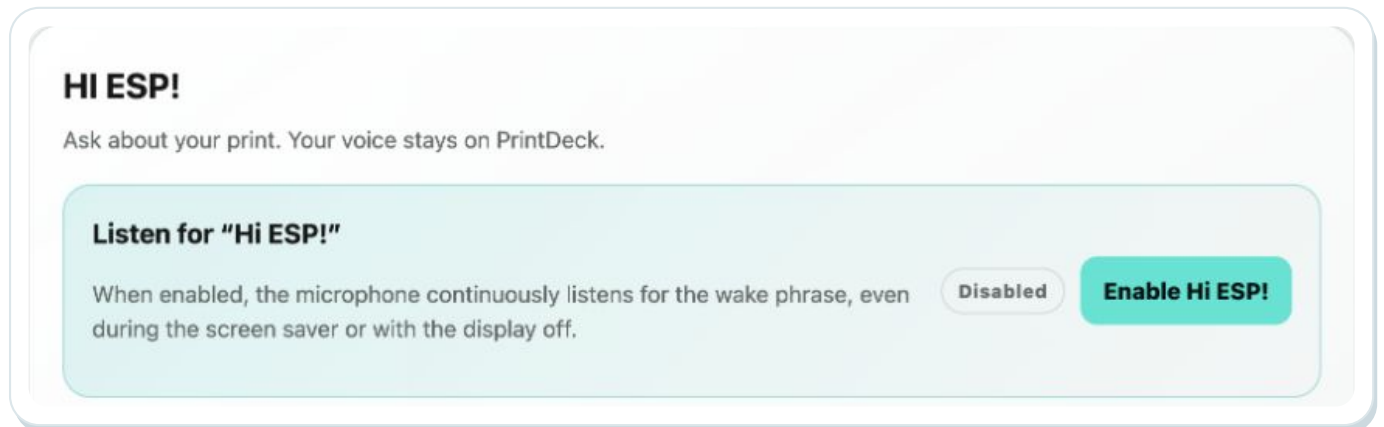

1. Enable Hi ESP!

When enabled, the microphone continuously listens for the wake phrase, even during the screen saver or with the display off. Hi ESP! requires a supported microphone. It is not available on KNOMI2. Hi ESP! pauses while the camera is open and resumes when you leave it. Print notifications remain active.

2. How it works

Say **Hi ESP!** . PrintDeck wakes the display and restarts the screen saver countdown. Wait for **Yes** . Then say a command in English within 7 seconds.


3. What you can ask

Answers use the active/selected printer. **Print status** : Reports print progress as a percentage. **Time left** : Reports the estimated remaining time. **When will it finish** : Reports the estimated finish time in your time zone.

4. Private by design

Speech is processed only on this device. No audio recordings are saved, sent or shared. No cloud service or account is used. Disabled by default. Turning it off stops microphone listening. Keep sound enabled and the volume above zero to hear **Yes** and spoken answers.

Add a resin printer

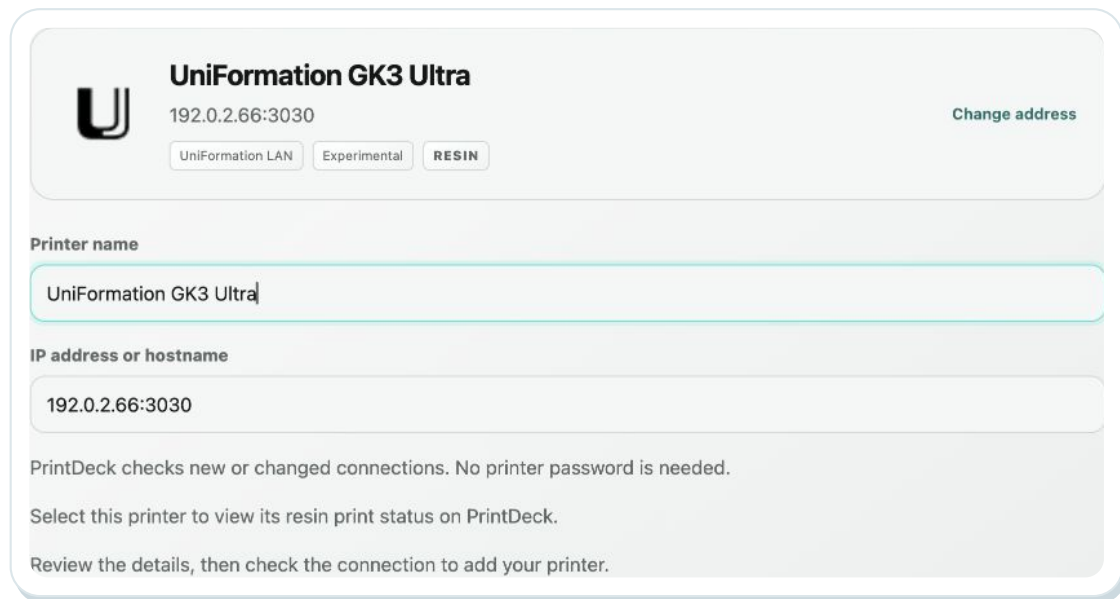

The screenshot shows a configuration window for a UniFormation GK3 Ultra printer. At the top, there is a logo, the printer name 'UniFormation GK3 Ultra', and its IP address '192.0.2.66:3030'. A 'Change address' link is on the right. Below this, there are three tabs: 'UniFormation LAN', 'Experimental', and 'RESIN'. The 'Printer name' field contains 'UniFormation GK3 Ultra'. The 'IP address or hostname' field contains '192.0.2.66:3030'. At the bottom, there is a note: 'PrintDeck checks new or changed connections. No printer password is needed. Select this printer to view its resin print status on PrintDeck. Review the details, then check the connection to add your printer.'

1. Find GK3 Ultra

Connect PrintDeck and the UniFormation GK3 Ultra to the same local network. Choose Add printer and start the network search, or choose Other printers and enter its IP address. Select UniFormation GK3 Ultra manually if automatic recognition is unavailable.

2. Check and save

The form shows the UniFormation logo and RESIN badge. Choose a name, confirm the address and select Check & add. PrintDeck reads the model and current status before saving. No printer password, Samba account or cloud account is needed.

3. Manage the saved profile

The printer appears in My Printers with its resin badge. Use the gear to edit or delete it. Select the online printer to open its resin status screen, with job preview, filename, timers, layers and the current print stage. Renaming changes only the saved PrintDeck profile and does not contact the printer.

Add TinyMaker



TinyMaker
192.0.2.67:80

[Change address](#)

TinyMaker

Experimental

RESIN

Printer name
TinyMaker|

Monitor TinyMaker over your local network. No password is needed.

Printer address
192.0.2.67:80

Review the details, then check the connection to add your printer.

1. Find the printer

Connect TinyMaker and PrintDeck to the same local network. Choose Add printer and scan the network, or choose Other printers and enter its address. TinyMaker is a separate connection type.

2. Check and save

Enter a name and confirm the address, then choose Check & add. PrintDeck verifies the printer identity and status before saving. No password or cloud account is needed.

3. Read the resin status

Select the online printer to see its name, layers, progress, time and print stage. Resin level shows estimated resin remaining and consumption; layer screens show the reported lift and exposure settings. Print Details and temperatures are hidden for TinyMaker. Monitoring is read-only.

Completion requires an observed final lift; after a missed transition or disconnection, the outcome may be unavailable.

Resin reactions



1. Show the optional first page

Enable Reactions in Web Config or Quick Menu. The resin reaction page appears before Printer Status. Disabling reactions removes it and keeps the other resin pages available.


2. Follow the printer

The large readout rotates between remaining time, layer, estimated finish and elapsed time. The colored status bar fills with print progress. The platform animation shows the current phase; during exposure, a countdown appears when the printer supplies timing data. Movement is illustrative, and connection delays can affect the countdown.

3. Keep normal navigation

Swipe to navigate and hold still to open Quick Menu. Standby and missing estimates show a placeholder; completion shows zero. Paused time remains the printer's reported estimate. The artwork stops when the page is hidden.

Resin printer status

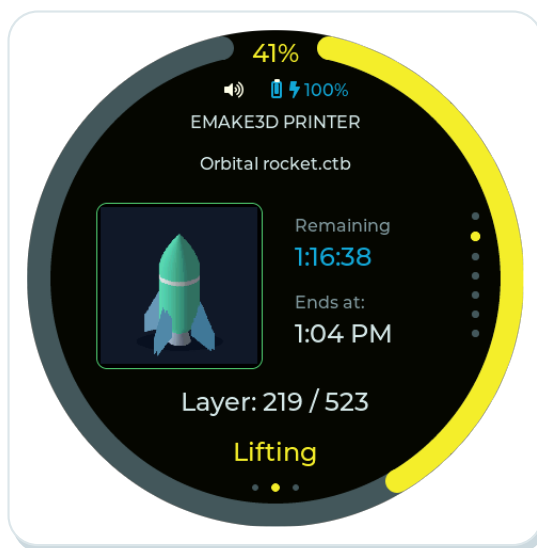

1. Open the resin screen

Select an online GK3 Ultra in My Printers. If Reactions is enabled, swipe vertically from Reactions to Status; otherwise Status opens directly. Swipe horizontally back to My Printers.

2. Read the current job

Status shows the thumbnail, filename, layers and progress. Time left remains visible. As in FDM, Ends at and Printing for alternate every 10 seconds, starting with the finish when both are available. The finish uses the latest corrected estimate and configured time zone. Paused prints or a missing clock/estimate show Printing for; without elapsed time, a valid finish stays fixed. Completed or stopped jobs show Print time. Missing timing leaves the field empty; a missing thumbnail uses the manufacturer logo. New jobs clear the old image and name.


3. Follow the layer cycle

The stage follows homing, lowering, exposure, lifting, pause and completion. During exposure, an available CTB layer image replaces the model and stays for two extra seconds afterward. Pausing restores the model immediately; slow downloads leave it visible. The image is a slice from the print file, not a UV measurement. The next horizontal levels are Cameras, Pause/Resume and Stop, in that order. After the final layer, Finishing means the printer is still completing its sequence. The remaining time is unknown; only confirmed completion shows zero.

4. Full-screen preview

Tap the thumbnail to zoom, drag inside to pan and tap again to return. Model/layer changes update the open zoom. A new job closes it. Hold still for Quick Menu; swipe from an edge to navigate. FDM previews work the same way.

Print Details

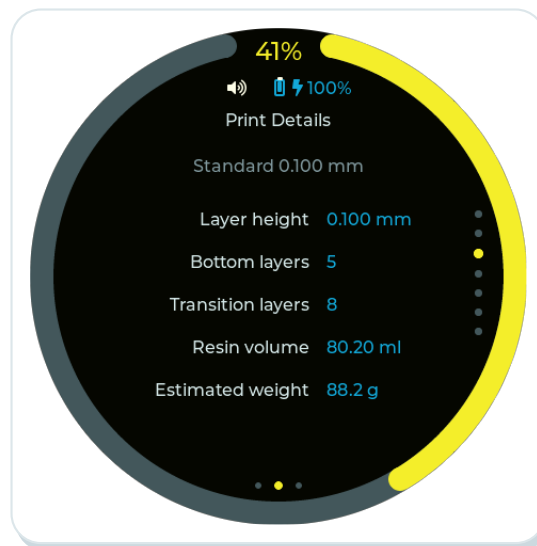



1. Saved settings

This page shows the profile, layer height, bottom and transition layer counts, estimated resin volume and weight saved with the current task. Missing values remain blank placeholders.

2. A separate resin screen set

Swipe vertically between optional Reactions, Status, Print Details, Bottom Layers, Normal Layers, Temperatures and Resin Feeder. Labels align right and values left in two columns. Swipe back horizontally to My Printers.

Layer Cycle

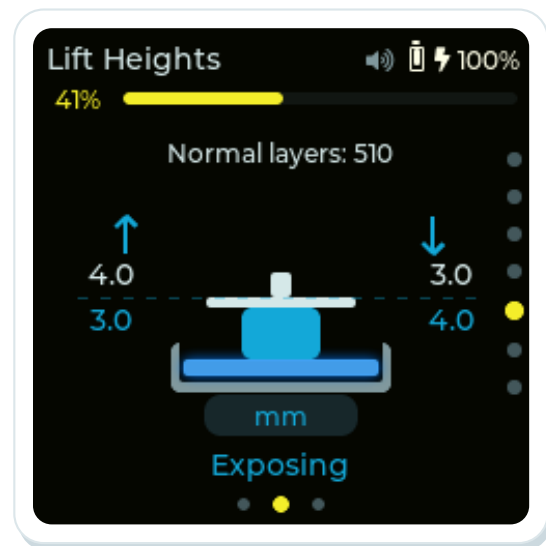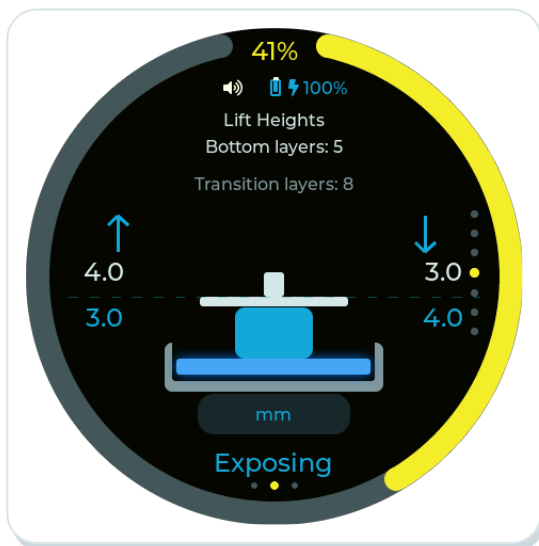


1. Two movement stages

A subtle dashed line separates the values for stages 1 and 2. Stage 1 is below the line and stage 2 above it. Tap anywhere to switch between Lift Heights (mm) and Lift Speeds (mm/min). Swipes and long presses retain navigation and Quick Menu. Bottom and transition layer counts appear on the first page; the next shows the normal layer count. A spinner immediately acknowledges a tap and remains until the new units and values appear.

2. An illustration of saved settings

Bottom Layers is followed by Normal Layers. Both pages illustrate the current lowering, exposure or lifting phase, using their own saved distances and speeds. Blue light indicates exposure. Motion is a schematic, not a measured Z position. Changes during printing may differ from saved settings. Missing values remain placeholders.

Temperature & resin feeder

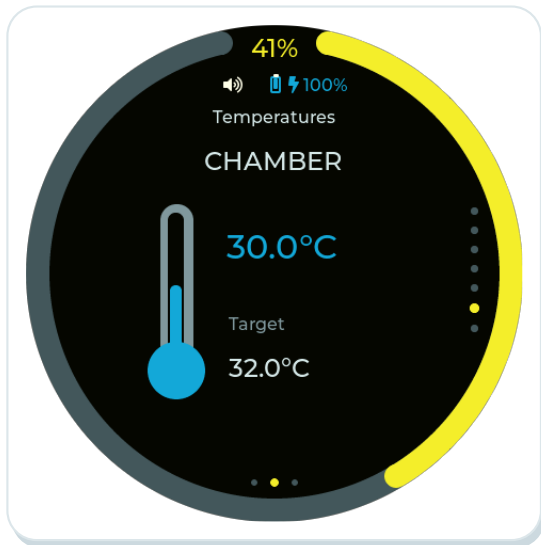

1. Chamber temperature


Temperatures shows the chamber sensor reading and target. It does not add an assumed calibration offset. A printer display that applies its own compensation may show a different value.

2. Resin supply


Resin Feeder shows the reported bottle amount, the current task's estimated resin use, and whether automatic refill is enabled. These are read-only values. Bottle amount excludes resin already in the vat, so it is not a guarantee that the task has enough resin. Unknown values remain placeholders.

Printer status

AMOLED

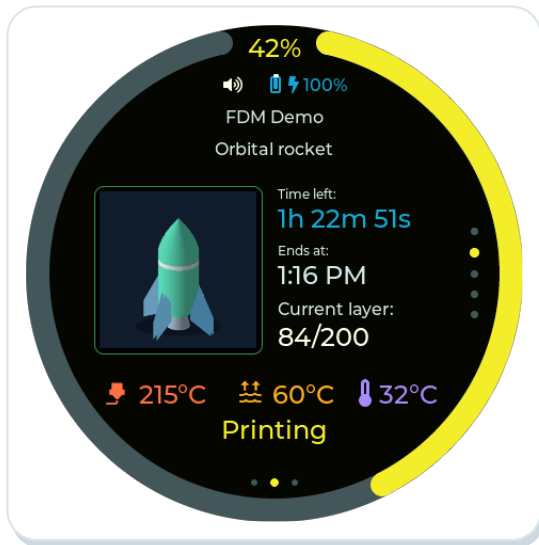

LCD 1.54

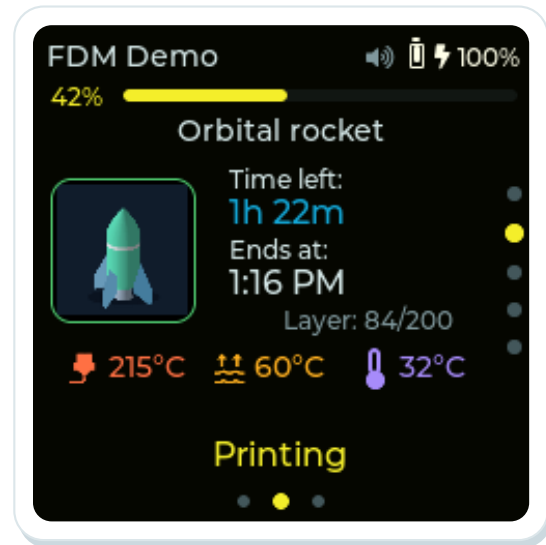

1. Read the times

Time left shows the remaining duration, for example 15h 32m 43s. Ends at shows the estimated finish in the configured time zone, using AM/PM; a date appears for another day. Estimates use printer data and may change. On KNOMI2, durations of 100 hours or more omit seconds to fit. In FDM and resin views, the secondary field alternates every 10 seconds between Ends at and Printing for (the duration since the start). Opening a screen starts with Ends at when both values are available. The remaining duration stays visible and the finish uses the latest corrected estimate.

2. When a finish cannot be calculated


While paused, or when the clock or remaining estimate is unavailable, Printing for shows the reported duration since the start. If that duration is missing, a valid Ends at stays visible without alternating. When neither value is available, the field stays empty. Completed or stopped jobs use Print time; idle printers show no active-job time.

3. Read layers and open the preview


Current layer (Layer on KNOMI2) appears above the current/total layer count. Long numbers use a smaller font to stay on one line. Tap the thumbnail to enlarge it; tap again to return. Temperatures and printer state remain below the job information.

Compact

AMOLED

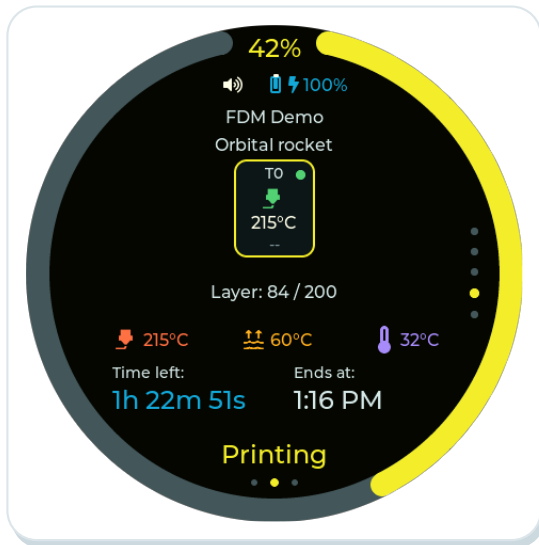

LCD 1.54

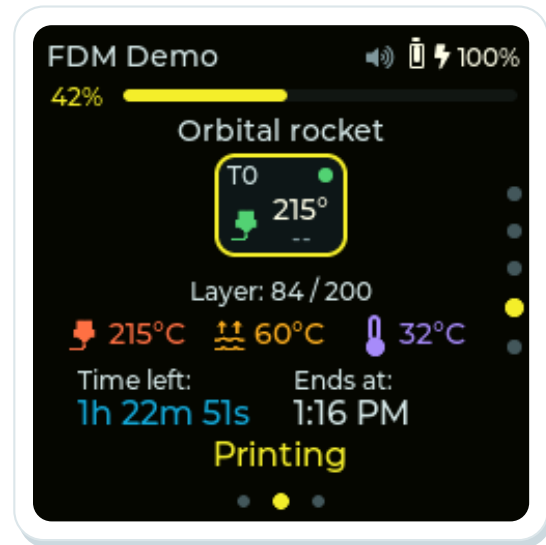

1. Two useful times

Time left shows the remaining duration. Ends at shows the estimated finish in the configured time zone, using AM/PM. A date appears when the print ends on another day. The two fields are aligned, without a clock icon or separate PRINT and TOTAL counters. If a Moonraker print outlasts its original estimate, PrintDeck recalculates the remaining duration from unfinished layers, or valid progress when layers are unavailable. In FDM and resin views, the secondary field alternates every 10 seconds between Ends at and Printing for (the duration since the start). Opening a screen starts with Ends at when both values are available. The remaining duration stays visible and the finish uses the latest corrected estimate.


2. When an estimate is unavailable

While paused or without a remaining estimate, only Printing for shows the duration since the start. If the device clock is unavailable but both durations are known, Time left and Printing for remain visible together. A valid finish stays fixed if elapsed time is missing. Completed or stopped jobs use Print time. Idle printers and missing timing data leave the section empty.

3. Read the complete summary

Toolheads, layer count, temperatures and printer state remain visible. Short durations omit zero hours. Long values use a smaller font to stay on one line; on small screens, durations of 100 hours or more omit seconds when both fields are shown. Swipe vertically to reach the neighboring printer pages.

Custom reactions on SD

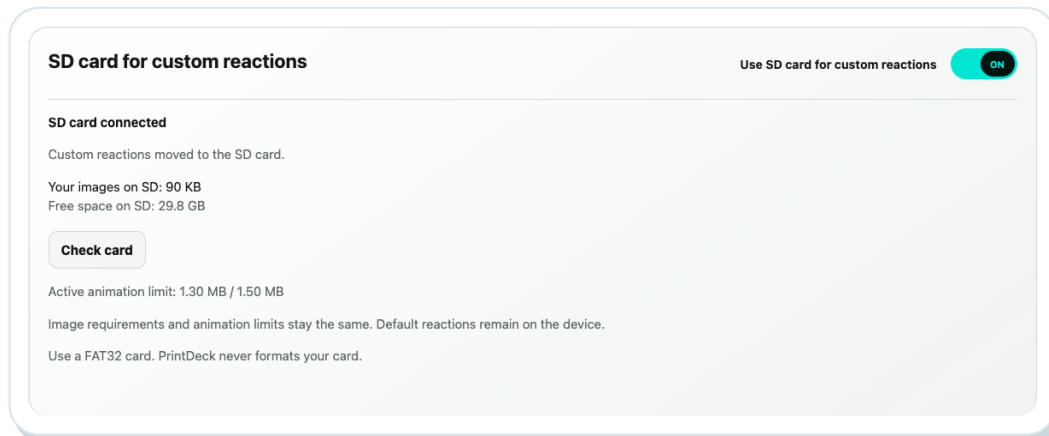

1. Choose storage

Insert a FAT32 microSD card. PrintDeck checks for a card at startup and every two minutes. Use Check card for an immediate refresh, then choose SD with ON/OFF. KNOMI2 has no SD controls.

2. Move existing images

If the device holds custom images, confirm the migration to SD or choose Later. Files are copied and checked before internal copies are removed. A failed move keeps the existing images.

3. When the card is missing

Cached images keep playing until a check or file operation detects removal. Missing images then use defaults and uploads stop. Reinsert the card and use Check card, or wait up to two minutes. OK keeps SD selected.

4. Turn SD off

PrintDeck checks whether the images fit in device storage before offering to copy them. Otherwise, choose defaults. Files on SD remain untouched. OFF also works while the card is missing.



5. Resolve matching reactions

If you upload an internal Completed image while SD is OFF, then turn SD on, a matching SD image wins. The confirmation lists affected reactions; the internal copies are removed.

6. Keep the same image requirements

Image size, dimensions and animation limits are unchanged. SD image usage and free card space are shown separately. Insert all required SD images before an encrypted backup. PrintDeck never formats the card.

PrintDeck Camera

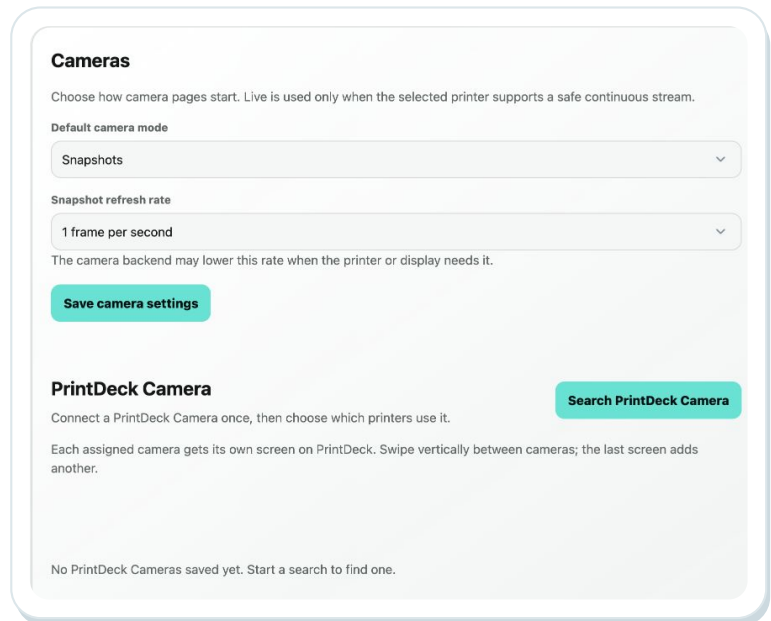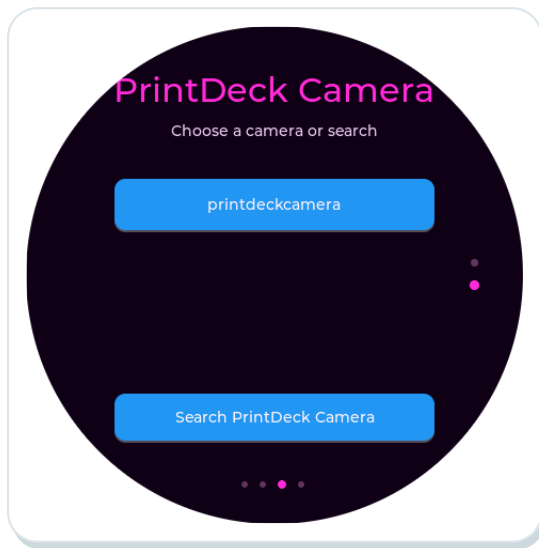

1. Add a camera on the device

Select an online printer and open its camera group. Swipe vertically to the last page and choose Search PrintDeck Camera. Known cameras are available immediately; new results appear while the search continues. Select a camera to assign it to this printer.

2. Move between cameras

The printer camera comes first when available, followed by each assigned PrintDeck Camera and the page for adding another. Vertical dots show your position. Tap an image to enlarge it and tap again to return. PrintDeck Camera uses periodic snapshots.

3. Use one Cameras page

In Web Config, open Device Settings > Cameras. Set the default viewing mode and snapshot refresh rate, then save the settings. Below, search for PrintDeck Camera and assign it to one or more saved printers. The camera icon beside a printer's settings gear opens this page.

4. Manage assignments

Unpair removes the camera from one printer and keeps it available for reuse. Forget camera removes it from all printers after confirmation. Open camera settings opens that camera's own local panel. These actions do not change the printer's built-in camera.

Home Assistant with MQTT

MQTT

OFF

Send printer data to your local MQTT broker, such as Mosquitto.

[Set up your broker](#)

Enable MQTT to make this PrintDeck available to the PrintDeck integration in Home Assistant. HTTP access remains independent.

MQTT topic root

printdeck/preview-amoled/v1

Broker address

192.0.2.20

Broker port

1883

Broker username

Broker password

Show password

If your broker requires a password, enter it here.

Connection security

Local connection without TLS

Save & connect Cancel

1. Prepare Mosquitto

Install the Mosquitto broker app in Home Assistant, or use your existing local broker. Configure the MQTT integration in Home Assistant and create broker credentials for PrintDeck. Both must connect to the same broker.

2. Connect PrintDeck

Open Web Config > Device Settings > Unified API. MQTT ON/OFF saves immediately after the broker is configured; OFF asks for confirmation. For first setup, select ON, enter the broker address, port and credentials, then Save & connect. Use an address reachable from PrintDeck. Save broker settings applies later field edits. OFF hides the fields but keeps saved credentials. REST API has its own switch and hides its token and endpoints when off.

Home Assistant with MQTT

3. Choose one Home Assistant path

Discovery is a separate section and requires MQTT. Turn it ON for Home Assistant's built-in MQTT integration. Keep it OFF for the PrintDeck HACS integration. Its switch saves immediately; OFF warns that automatically created entities will be removed. Keep MQTT connected during cleanup. HACS proposes devices only when MQTT is on and standard Discovery is off; REST API alone does not trigger a proposal. Discovered devices supply the topic automatically. Only manual setup needs the topic root.

4. Use the same automations

Select state and progress entities in the print-finished and progress-milestone blueprints. Reconfigure an existing PrintDeck HACS entry to switch HTTP and MQTT while preserving entity identities. When moving between generic MQTT Discovery and HACS, select the new entities in dashboards and automations.

5. Factory reset and MQTT

Before a factory reset, disable Discovery and wait for cleanup. If the broker is unreachable, the reset dialog offers an unchecked option to proceed without cleanup. Select it only if you will manually remove PrintDeck's retained Discovery configuration from the old broker and its MQTT entities from Home Assistant afterwards.

Add OctoPrint

Add printer

✓ Printer address 02 Connection

CONNECTION SELECTED

OctoPrint
192.0.2.68:80
OctoPrint Change address

Printer name
My Printer

Monitor the printer connected to OctoPrint over your local network. Each OctoPrint instance is added separately.

OctoPrint API key
Show

Create an application API key in OctoPrint with permission to read printer status and job information. PrintDeck only reads these values.

Review the details, then check the connection to add your printer.

Back Check & add

1. Choose the connection

Keep OctoPrint and PrintDeck on the same local network. In Add printer, open Other printers, enter the OctoPrint host and port, then select OctoPrint under Connection type. Each instance becomes one printer profile.

2. Check and add

Enter a name and an OctoPrint API key whose user can read printer status and job information. Choose Check & add. OctoPrint must also be connected to its printer; the check only reads data.

3. Monitor the print

Select the online profile to see the job, progress, elapsed and remaining time, and reported nozzle and bed temperatures. Missing values stay unavailable. This connection does not supply camera images, thumbnails or printer controls.

4. Edit safely

Leave the key blank to keep the saved key at the same address. Enter it again after changing the address. Keep the OctoPrint computer running; a reachable OctoPrint with a disconnected printer is not an online printer.

Pair PrintDeck with your cloud account

Beta feature — testing in progress

PrintDeck Cloud is not ready for general use

PrintDeck Cloud

Connect this PrintDeck to your account. Sign in securely on the cloud website.

PrintDeck shares printer status and supports available remote controls with the connected account.

No cloud account connected.

Connect account

1. Start in Web Config

Beta feature: testing is in progress and PrintDeck Cloud is not ready for general use. Open Settings > Cloud and select Connect account. Open PrintDeck Cloud. Sign in only on the cloud website using an account with a confirmed email address.

2. Approve the matching device

Compare the code on both pages and approve the connection. Return to Web Config and wait for Connected. Pairing expires after ten minutes; start again if necessary.


3. Manage access

The device appears in Integrations > API keys. Its token stays on PrintDeck across restarts. You can revoke it in the panel or select Disconnect account in Web Config. A temporary internet outage preserves pairing; disconnection waits for cloud confirmation.

4. Data and development mode

The connected account receives printer status and available remote controls. In development builds, DEVELOPER MODE works before pairing: ON selects the displayed local API, OFF selects production. Pair each environment separately. Both accounts and the selected mode survive restart. Keep the local server running on the same network. Credentials stay out of backups.

Printers and Wi-Fi

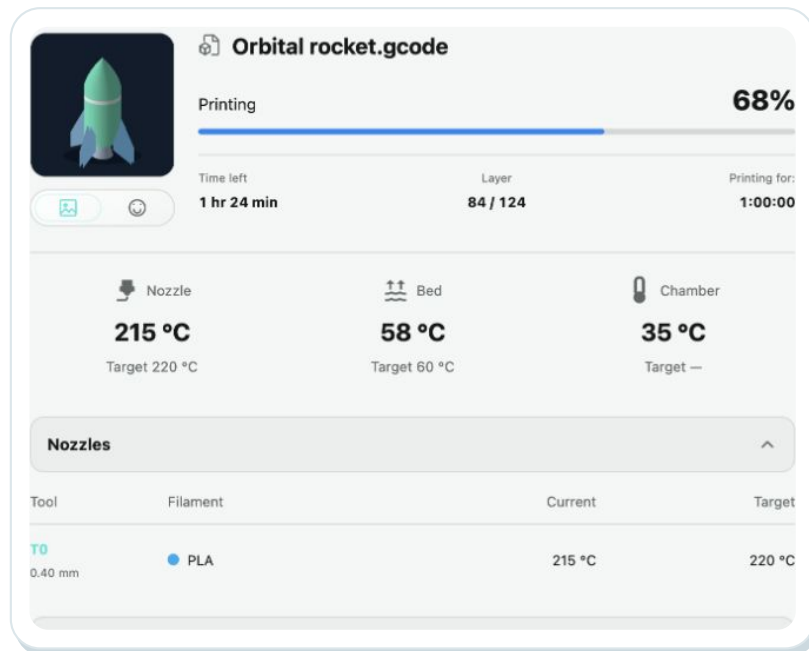

1. Choose a printer

Click its card in My Printers. The checkmark identifies the active printer. Model photos load in your browser when available; the manufacturer icon remains if a photo cannot load. Offline printers cannot be selected. A loading indicator appears while PrintDeck connects and waits for printer data.

2. Follow the job

The active printer shows the filename, progress, remaining time and layers when available. Ends at and Printing for alternate every 10 seconds. Long names are shortened on screen. Other printers show their last periodic reading.

3. Open print previews

Click the model thumbnail to enlarge it. The model stays cached. For resin, the current layer appears during exposure and for 2 seconds afterward; the state also shows the exposure countdown. Click the round resin animation to enlarge its live screen. FDM reactions still open Reactions settings.

4. Read printer details

FDM shows actual nozzle, bed and chamber temperatures and up to 12 tools with targets, diameter and filament. Resin shows the file's volume and weight, bottle level, automatic refill and chamber temperature. Print Details adds profile, layer height, bottom and transition layers. Missing readings show a dash.

5. Manage connections

Open the three-dot menu on a printer card to edit its connection or delete it from PrintDeck. Deletion requires confirmation. Add printer offers Bambu Lab, Other printers and a network scanner.

6. Open Wi-Fi settings

Open the settings gear and choose Wi-Fi below Device, or click the Wi-Fi badge in the header.

Motion and layer settings

Speed & power				
Speed	Flow	Part fan	Nozzle power	Bed power
100 %	100 %	80 %	67 %	38 %
X	Y		Z	
125.4 mm	98.2 mm		71.20 mm	

1. Read FDM telemetry

Speed & power shows the reported speed and flow percentages, part fan, active nozzle power, bed power and X/Y/Z position. Missing measurements remain dashes. These readings do not control the printer.

2. Compare resin layer groups

Lift speeds & heights shows bottom and transition layers on the left and normal layers on the right. The static diagrams match PrintDeck: the upward arrow is lift, the downward arrow is retract; stage 1 is below the dashed line and stage 2 above it.


3. Switch height and speed

Use the ruler for heights in mm or the speedometer for speeds in mm/min. Both diagrams switch together. The choice stays in this browser and does not change the printer or PrintDeck settings.

4. Count normal layers

Print Details lists normal layers after transition layers. Normal layers equal the total minus bottom and transition layers. If a count is missing or inconsistent, the result is a dash.

Arrange your printers

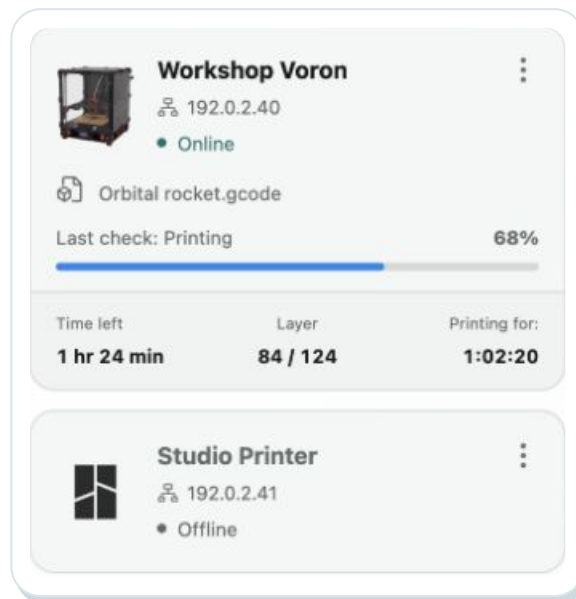

1. Grab the handle

In My Printers, hover over a card and drag the four-line handle in its top-left corner. It works in both list and gallery views, including offline printers.

2. Drop to save

Drop the card in its new position. PrintDeck saves the order and synchronizes open browser views. The active printer and current device screen stay unchanged.


3. Touch and keyboard

On touchscreens the handle is always visible. With a keyboard, focus the handle, press Space, use the arrows, then Enter to save. Escape cancels.

4. If saving fails

The saved order returns and an error appears. If another browser changed the list, try moving the printer again.

Printer controls and filament

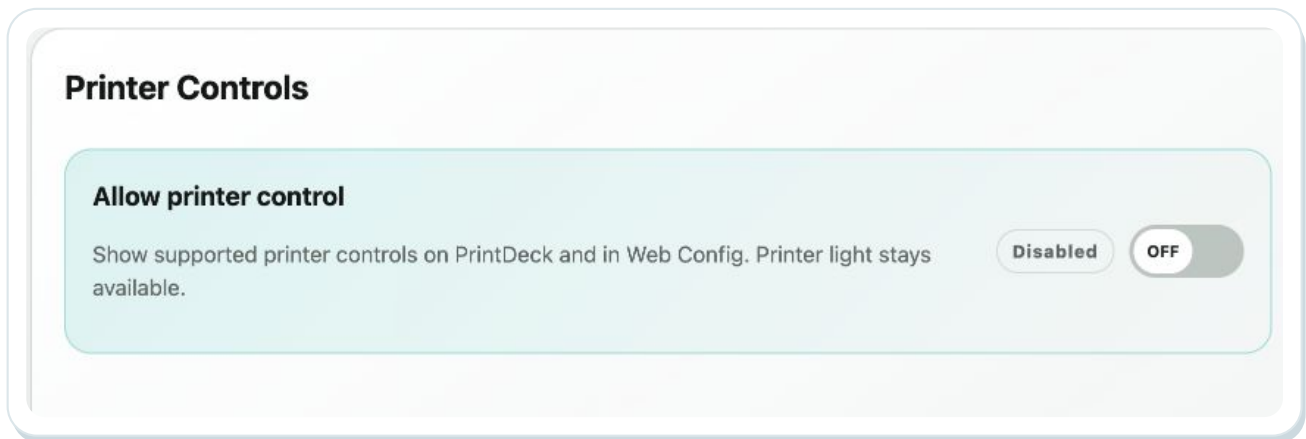

1. Choose whether to allow control

In Settings Printer Controls, Allow printer control is off by default. Turn it on to permit supported print and movement actions. Unsupported actions remain unavailable. When off, the Controls section and the device's Pause/Resume and Stop screens are hidden.


2. Light is independent

Printer light is outside Controls and does not require this permission. It remains available when the connected printer supports it.

3. Read your AMS

Expand Filament to see AMS slots, material types and colours. Active marks the slot currently feeding the printer. External spools appear separately. Stale data never shows an active slot; a dash means unknown data. This view cannot change slots.

Screen Saver

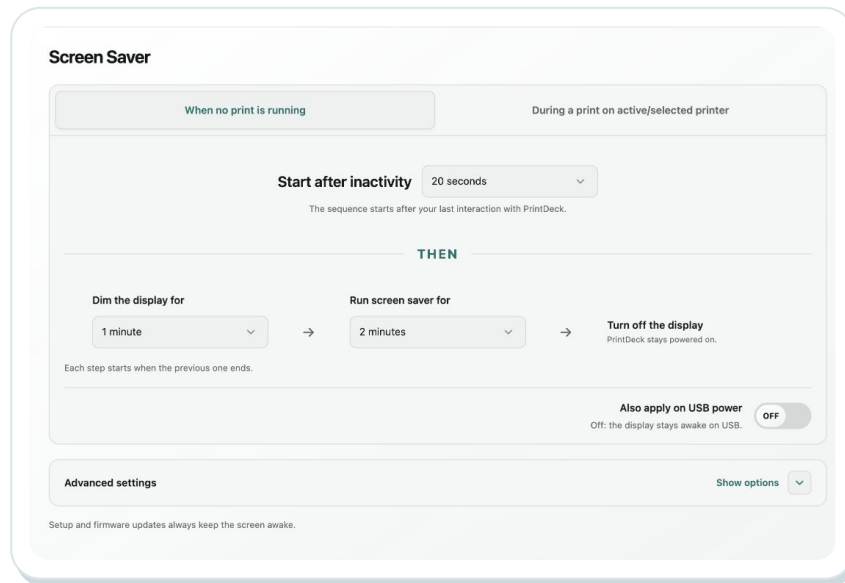

1. Wait, then run each step

Choose an inactivity delay, a dim duration and an animation duration. Each step starts after the previous one. Defaults: wait 20 seconds, dim for 1 minute, animate for 2 minutes, then turn off at 3 minutes 20 seconds. Skip omits a stage. Never on the start delay disables the sequence. Until wake-up keeps the animation running without turning off.

2. Printing and USB power

The top tabs separate idle and active/selected-printer print settings, including paused prints. Printing uses the same default sequence: wait 20 seconds, dim for 1 minute, animate for 2 minutes, then turn off. A shared USB switch below both tabs defaults to off. KNOMI2 always applies the sequence and hides this switch.

3. A quiet screen

Select a preview card: Circles, Going to sleep (default), Starfield, Fireflies or Aquarium. The filled checkmark shows the saved choice. Stars drift outward, fireflies glow softly, and fish swim past bubbles. All scenes move on black. Previews run only while visible in the browser. Camera work and reaction animations pause under the screen saver and resume when visible again.

Screen Saver

4. Advanced settings

Choose shared dimmed brightness, also used by the animation. Sound is relative to normal volume: 80% while dimmed or showing the screen saver, 20% with the display off. Battery-only shutdown counts from screen-off, defaults to Never and cannot run during a print. Shutdown choices extend to 2, 3, 5 and 7 days. The last sequence step names shutdown and shows its delay when enabled.

5. Wake and exceptions

Wake-up resets the sequence. Touch wakes by default and is always available on KNOMI2. The first gesture only wakes. Orientation requires automatic rotation; Power wakes on supported hardware. Setup and firmware updates keep the screen awake. Updates convert old thresholds to durations.


6. Power shortcut on the 1.75-inch AMOLED

Press Power twice quickly to start the screen saver immediately. Double-click again at any later time while the screen saver is visible to turn off only the display. If the animation stage is set to Skip for the current idle or printing settings, the first double-click turns the display off. Otherwise, the animation follows its configured duration. This shortcut also works on USB when automatic USB screen saving is disabled. A single Power press wakes the display. While the display is awake, a single press returns to the printer list after a brief wait for a possible second click. Holding Power still switches off the device. Routine heating, tool-change and printing animation updates do not cancel manual sleep. During this manual sleep, touch, orientation changes and voice do not wake the display, even if enabled. Use Power to wake it; important print events can also wake it. These include print start and completion, reaching 100%, and enabled pause, failure or cancellation reactions. Automatically started screen saving keeps its normal wake settings. From a dark display, double-click to return to the screen saver; if its animation stage is set to Skip, double-click wakes the normal view instead.

Support

Whether you are checking a new printer, choosing compatible third-party components or building your own PrintDeck display, support starts with a direct conversation.

HELP IMPROVE PRINTDECK

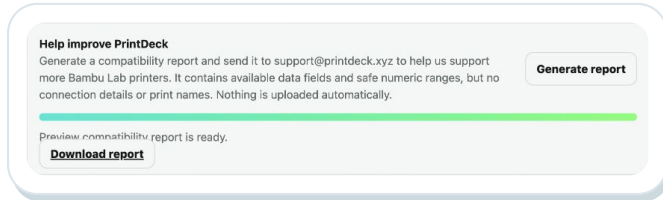

DOWNLOAD THE REPORT

Generate locally, then share it yourself

In Web Config open My Printers, choose Add printer, select Bambu Lab and fill in the local connection details. Choose Generate report, review the result and download it. PrintDeck never uploads or sends it automatically. Email the downloaded file to us only when you decide to share it.

LAN-ONLY PRIVACY

Printer credentials and compatibility data remain on PrintDeck and your local network. The report excludes access codes and other connection secrets; you control if and when it leaves your LAN.

COMPONENT GUIDANCE

Planning your own build?

Ask for help choosing a compatible third-party display, cables and optional parts for your own PrintDeck build. PrintDeck is firmware and does not offer a branded ready-to-use device.

INDIVIDUAL ASSEMBLY HELP

Need help putting it together?


Ask about individual help assembling and configuring components for your personal build. Parts remain third-party products and are documented separately from the assembly service; no boxed PrintDeck hardware set is offered.

QUESTIONS & COLLABORATION

Tell us what you want to build

For compatibility reports, component guidance, individual assembly help, general questions or collaboration, write to support@printdeck.xyz. Include your printer model and the kind of help you need so we can respond with the right next step.

support@printdeck.xyz

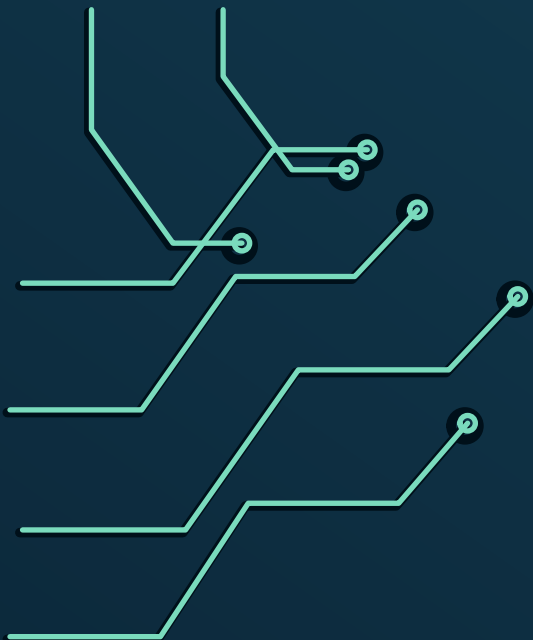

PrintDeck

PRINT SMARTER. STAY PRESENT.

A local-first printer companion for the displays you can keep exactly where you need them.



START HERE

Manual, installer and case designs

Scan to open the PrintDeck website, then choose the path that matches your device and build.

<https://printdeck.xyz/>
support@printdeck.xyz



AMOLED + LCD

LOCAL BY DESIGN