

PREFACE

Thank you for selecting a Hero MotoCorp **ACHIEVER**. We wish you many miles of continued riding pleasure in the years ahead.

We, at Hero MotoCorp, are committed to demonstrate excellence in our environment performance on a continual basis, as an intrinsic element of our corporate philosophy. To achieve this we commit ourselves to continue product innovations to improve environment compatibility, comply with all applicable legislation including environment legislation and strengthen the green supply chain.

Your motorcycle is conforming to latest (Bharat stage-III norms) regulation for emission, safety & noise levels. We are also using non asbestos brake shoes / pads and engine gaskets which are environment friendly in nature.

This booklet is your guide to the basic operation and maintenance of your new Hero MotoCorp **ACHIEVER**. Please take time to read it carefully. As with any fine machine, proper care and maintenance are essential for trouble-free operation and optimum performance.

Your Authorised Hero MotoCorp dealer will be glad to provide further information or assistance and is equipped to handle your future service needs.

Let us make this world a safer, healthier and more environment friendly place.

NOTE

ALL INFORMATION, ILLUSTRATION, PHOTOGRAPH, DIRECTIONS, SPECIFICATIONS AND OTHER CONTENTS COVERED IN THIS OWNER'S MANUAL ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF ITS PRINTING APPROVAL, AND THE ACCURACY OR CORRECTNESS OF THE SAME IS NOT UNDERTAKEN OR GUARANTEED. Hero MotoCorp Limited RESERVES THE RIGHT TO MAKE CHANGES IN ITS CONTENTS AT ANY TIME WITHOUT NOTICE AND/OR INCURRING ANY OBLIGATION, WHATSOEVER. NO ONE IS ALLOWED TO REPRODUCE ANY PART OF THIS PUBLICATION WITHOUT OBTAINING PRIOR WRITTEN PERMISSION FROM Hero MotoCorp Limited

CONTENTS

	Pg. No.		Pg. No.
MOTORCYCLE IDENTIFICATION	1	SAFETY PRECAUTION	25
PRODUCT SPECIFICATION	2	• MAINTENANCE SCHEDULE	26
SAFE RIDING TIPS	4	• OIL SCREEN FILTER/ CENTRIFUGAL FILTER	28
TIPS FOR HEALTHY ENVIRONMENT	5	• SPARK PLUG	29
MOTORCYCLE VIEWS	6	• AIR CLEANER	30
PARTS FUNCTION	9	• THROTTLE OPERATION	31
• INSTRUMENTS & INDICATORS	9	• VALVE CLEARANCE	32
• IGNITION SWITCH	10	• CARBURETOR	34
• LEFT HANDLEBAR CONTROLS	11	• CLUTCH	35
• RIGHT HANDLEBAR CONTROLS	12	• DRIVE CHAIN	36
• STEERING LOCK	12	• FRONT BRAKE	38
• FUEL VALVE	12	• REAR BRAKE	40
• FUEL TANK	13	• BATTERY	41
• SEAT LOCK / HELMET HANGER	14	• STOP LAMP SWITCH	44
AIR CLEANER DRAIN TUBE	15	• HEADLAMP ADJUSTMENT	44
ENGINE OIL	15	• SUSPENSION	45
ENGINE OIL TOP UP PROCESS	15	• FRONT WHEEL REMOVAL	46
ENGINE OIL REPLACEMENT PROCESS	16	• REAR WHEEL REMOVAL	46
TYRES	17	• WASHING THE MOTORCYCLE	47
PRE-RIDE INSPECTION	19	• CATALYTIC CONVERTER	48
STARTING THE ENGINE	20	• AIR SUCTION VALVE	48
RIDING	21	BASIC TROUBLE SHOOTING	49
BRAKING / PARKING	22	ROAD SIGNS	53
TOOL KIT / FIRST AID KIT	23	WARRANTY DETAILS	
MAINTENANCE	24	HERO GENUINE PARTS	

MOTORCYCLE IDENTIFICATION



Vehicle Identification Number (VIN)


Location : Stamped on the right side of the steering head tube.

VIN: MBLXXXXETYZXYYYYY

MBL	XXXXET	Y	Z	X	YYYYY
Manufacturer Code	Vehicle Description	Year of Mfg.	Assembly Plant	Month of Mfg.	Serial Number

Model Code.:

Model	VIN	Engine
Achiever (Kick - Disc / Cast Wheel)	ES	EE
Achiever (Electric - Disc / Cast Wheel)	ET	EF

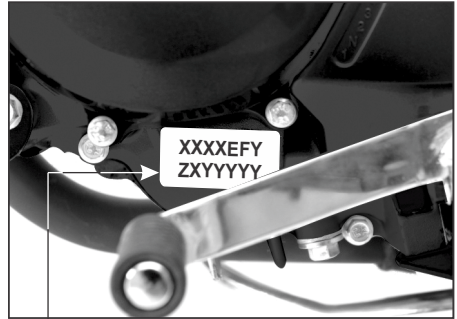

Engine No.

Location: Stamped on the lower side of the left Crankcase.

Engine No.: XXXXEFY ZXYYYYY

XXXXEF	Y	Z	X	YYYYY
Engine Description	Year of Mfg.	Assembly Plant	Month of Mfg.	Serial Number

VIN and Engine No. may be required:

1. During registration of the motorcycle.
2. For dealing with Legal & Insurance Departments.

PRODUCT SPECIFICATION

ITEM	SPECIFICATIONS
DIMENSIONS	
Overall Length	2040 mm
Overall Width	760 mm
Overall Height	1120 mm
Wheelbase	1290 mm
Ground Clearance	160 mm
WEIGHT	
Kerb Weight	134 kg (Kick)/138 kg (Electric Start)
CAPACITIES	
Engine Oil	1.2 litres 1 litre at draining
Fuel Tank	12.5 litres (Minimum)
Fuel Reserve Capacity	2.3 litres (Usable Reserve)
Front Fork Oil at Disassembly	150 ml
Hydraulic Brake Fluid	Castrol Q Stop - DoT 3 / DoT 4
ENGINE	
Maximum Power	10 KW (13.4 BHP) @ 8000 r/min
Maximum Torque	12.80 N-m @ 5000 r/min
Bore and Stroke	57.3 x 57.8 mm
Compression Ratio	9.1:1
Displacement	149.1 cm ³
Spark Plug	NGK-CPR 8 EA 9, CHAMPION-RG 6 YC
Spark Plug Gap	0.8-0.9 mm
Valve Clearance (cold condition)	IN : 0.08 mm EX : 0.12 mm
Idle Speed	1400 $\pm$ 100 r/min

ITEM		SPECIFICATIONS
CHASSIS AND SUSPENSION		
Front Suspension		Telescopic Hydraulic Shock Absorber
Rear Suspension		Swingarm with Adjustable Hydraulic Shock Absorber
Caster		26°
Trail		89 mm
Tyre size, front		2.75 x 18-42P / 4PR
Tyre size, rear		3.00 x 18-52P / 6 PR
Front Brake	Disc Type	Dia 240 mm
Rear Brake	Drum Type	Dia 130 mm
TRANSMISSION		
Primary reduction		3.3500
Final reduction		2.8000
Gear ratio,	1st	3.0769
	2nd	1.7895
	3rd	1.3043
	4th	1.0909
	5th	0.9375
ELECTRICAL		
Battery		12V 2.5 Ah (Kick) / 7Ah (Electric Start)
Alternator		85 W
Starting System		Kick / Electric Start (Optional)
Headlamp (High/Low)		12V 35/35W Halogen Bulb, MFR*
Tail/Stop lamp		12V 5/21W - MFR*
Turn signal lamp		12V 10W x 4 MFR*
Meter Illumination		12V 1.7W x 3
Neutral indicator		12V 1.7W
Turn signal indicator		12V 3.0W x 2
Position lamp		12V 3W
Hi Beam Indicator		12V 1.7W
FUSE	Kick / Electric Start	10A, 15A / 15A, 20A

* MFR stands for Multi-focal Reflector

SAFE RIDING TIPS

Do's:

1. Always conduct simple pre-ride inspection (ref. page no 19).
2. Always wear a helmet (ISI marked) with chinstrap securely fastened and insist on a helmet for your pillion rider.
3. While riding, sit in a comfortable position with your legs close to fuel tank.
4. Ride defensively and at a steady speed (between 40-50 km/hr).
5. For stopping motorcycle, use both brakes simultaneously, keeping throttle in the close position.
6. Respect road signs and obey traffic rules for your own safety and that of others on the road (ref. page no.53-54).
7. During night time, dip headlamps of your motorcycle for oncoming traffic, or when following another vehicle.
8. Give way to others on the road and signal before you make a turn.
9. To make yourself more visible, wear bright reflective clothing that fits well.
10. Take care of loose / hanging clothes while solo / pillion riding.
11. Get your motorcycle serviced regularly by the Authorised Hero MotoCorp. workshop.

Don'ts:


1. Never use cell phone while riding the motorcycle.
2. Avoid sudden acceleration, braking and turning of your motorcycle.
3. Never shift gears without disengaging the clutch and closing the throttle.
4. Never touch any part of the hot exhaust system like muffler.
5. Never ride under the influence of alcohol or drugs.
6. Concentrate on the road and avoid talking to the pillion rider or others on the road.
7. Do not litter the road.
8. Do not cross the continuous white/yellow line in the centre of the road, while overtaking.
9. Do not attach large or heavy items to the handlebars, front forks, or fenders.
10. Never take your hands off the steering handle while riding.

SOME TIPS FOR HEALTHY ENVIRONMENT

The following tips shall ensure a healthy motorcycle, healthy environment, and a healthy you.

1. **Healthy engine:** The engine is the lifeline of every vehicle. To keep it healthy, it should be tuned regularly, which will also help reduce pollution and improve vehicle performance & fuel efficiency.
2. **Regular Servicing:** Get your motorcycle serviced at an Authorised Hero MotoCorp workshop, as per the service schedule, for an optimum performance and keep the emission level under check.
3. **Genuine Spares:** Always insist on Hero MotoCorp genuine parts as spurious or incompatible spares and accessories can upset or deteriorate your motorcycle's running condition.
4. **Genuine Engine Oil:** Hero 4T Plus SAE 10W 30 SL grade (JASO MA2) engine oil recommended by Hero MotoCorp and make sure you change it every 6000 kms. (with top up every 3000 kilometres) to keep the engine fit and environment healthy.
5. **Noise Pollution :** Noise beyond a certain decibel is pollution. Whether it is from horns or defective mufflers, excessive noise will cause headaches and discomfort.
6. **Emission Pollution :** Get emission of your motorcycle checked by Authorised agencies atleast once every 3 months or as notified by the government from time to time.
7. **Fuel Saving & Reduce Pollution :** Switch "OFF" the engine while waiting at traffic signal points to save fuel and reduce pollution, if the waiting period is long.

FRONT TOP VIEW

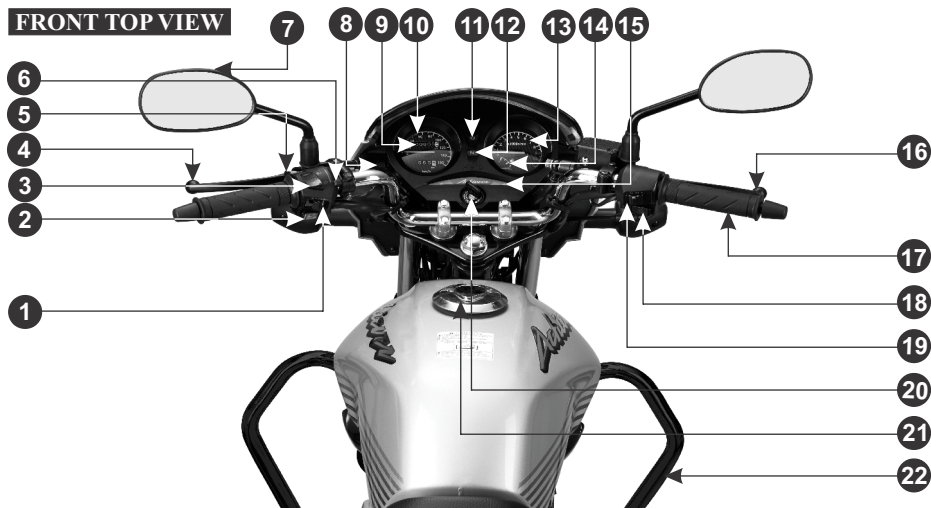


- (1) Turn signal switch
- (2) Horn switch
- (3) Headlamp dimmer switch
- (4) Clutch lever
- (5) Pass lamp switch
- (6) Choke lever
- (7) Rear view mirror
- (8) Tripmeter knob
- (9) Odometer
- (10) Speedometer
- (11) High beam indicator

- (12) Neutral indicator
- (13) Tachometer
- (14) Fuel gauge
- (15) Turn signal indicator
- (16) Front brake lever
- (17) Throttle grip
- (18) Starter switch
- (19) Headlamp switch
- (20) Ignition switch with steering lock
- (21) Fuel tank cap
- (22) Leg guard

***Accessories and features shown may not be part of standard fitment.**

LEFT SIDE VIEW

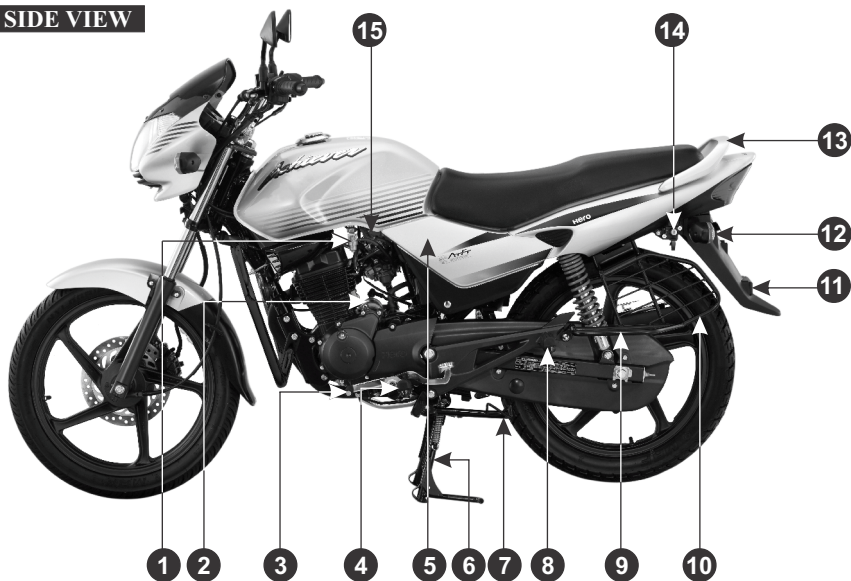

- | | | |
|----------------------|------------------------|----------------------------|
| (1) Fuel valve | (6) Main stand | (11) Rear reflex reflector |
| (2) Starter motor | (7) Side stand | (12) Rear turn signal lamp |
| (3) Gear shift pedal | (8) Pillion foot rest | (13) Rear grip |
| (4) Rider foot rest | (9) Women pillion step | (14) Helmet hanger |
| (5) Side cover left | (10) Saree guard | (15) Air suction valve |

***Accessories and features shown may not be part of standard fitment.**

RIGHT SIDE VIEW




- | | | |
|----------------------------------|-----------------------------|----------------------|
| (1) Pillion foot rest | (6) Kick starter pedal | (11) Headlamp |
| (2) Battery compartment (inside) | (7) Brake pedal | (12) Visor |
| (3) Carburetor | (8) Caliper Assembly | (13) Master cylinder |
| (4) Oil level dipstick | (9) Disc | (14) Seat |
| (5) Rider foot rest | (10) Front turn signal lamp | (15) Tail/Stop lamp |

***Accessories and features shown may not be part of standard fitment.**

PARTS FUNCTION



Instruments and Indicators

The indicators are in the speedometer panel above the headlamp. The functions are as below.

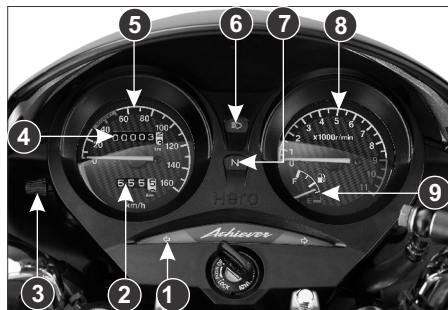

Sl. No.	Description	Function
(1)	Turn signal indicators	Flashes when turn signal switch is operated
(2)	Tripmeter	Shows the distance travelled during a trip (after setting to zero)
(3)	Tripmeter knob	Rotate knob anti-clockwise to set zero before a trip
(4)	Odometer	Shows accumulated mileage
(5)	Speedometer	Indicates driving speed
(6)	High beam indicator	Indicator glows when H/L is in Hi Beam
(7)	Neutral indicator	Indicator glows when vehicle is in neutral gear
(8)	Tachometer	Indicates engine r/min
(9)	Fuel gauge	Indicates approximate fuel quantity


IGNITION SWITCH

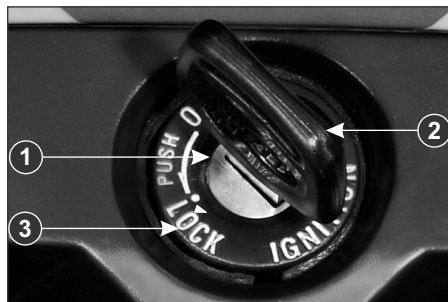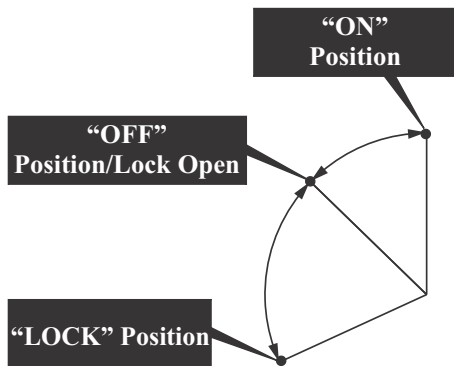

1. Ignition key
2. Lock position
3. "OFF" position

Key Position	Function	Key Removal
"ON"	The engine can be started. Turn signal lamps, Horn, Tail / Stop lamp, Fuel gauge, Pass lamp, Neutral indicator will be functional.	Key cannot be removed
"OFF"	Engine cannot be started and no electrical system will be functional.	Key can be removed
"LOCK"	Steering can be locked	Key can be removed

LEFT HANDLEBAR CONTROLS

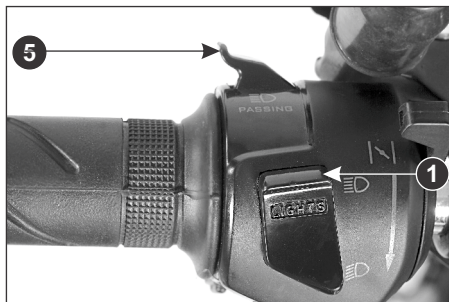

1. Headlamp Dimmer Switch

Press the switch upwards for High Beam and downwards for Low Beam.

2. Turn Signal Switch

Shift the turn signal switch sideways for Right/Left indications and leave it to come back to its normal position on its own.

IMPORTANT : To switch “OFF” the turn signal after completing the turn, gently push the switch inside as directed on the switch.

3. Horn Switch

Press the switch to operate the horn.



4. Choke Lever

To apply choke, pull the lever downwards, towards the rider, as directed on the switch.

NOTE

Do not accelerate during starting when the choke is on.

5. Pass Lamp Switch

Press the pass switch to operate the pass lamp. The pass switch will function while the lamp is in low beam.

6. Clutch Switch (Electric start model)

There is a clutch switch provided for the safety of the rider. The motorcycle cannot be started by electric starter switch until the clutch lever is operated when the vehicle is engaged in gear.

RIGHT HANDLEBAR CONTROLS



1. Headlamp Switch

The switch has three positions.

“☀”, “ ” and “ ” marked by Red dot.

Position	Action
	"OFF"
	"Following is "ON" • Position lamp • Tail/Stop lamp • Fuel gauge lamp • Meter illumination
	Headlamp “ON”


2. Starter Switch (Electric start model)

Ensure starter switch (2) is operated when the vehicle is in neutral gear. If the vehicle is engaged in gear press the clutch lever before operating the starter switch. Release starter switch after the engine has started.

CAUTION

Never hold starter switch continuously for more than 5 seconds as continuous cranking of engine will drain the battery.

Steering Lock

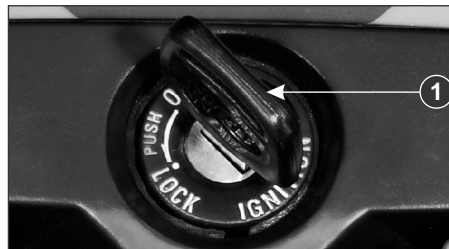

Steering lock with the ignition switch, turn the key (1) to 'OFF' position & turn the handle bar towards left or right & push the key downwards & turn towards "Lock" position. After locking take out the key.

FUEL VALVE

The three way fuel valve is on the left side of the carburetor.

1. OFF

At “OFF”, fuel cannot flow from the tank to the carburetor. Turn the valve “OFF” whenever the motorcycle is not in use.


2. ON

At “ON”, fuel will flow from the main fuel supply from the fuel tank to the carburetor.

3. RES

At “RES”, fuel will flow from the reserve fuel supply from the fuel tank to the carburetor. Use the reserve fuel only when the main supply has stopped.

Refill the tank as soon as possible after switching to “RES”. The usable reserve fuel supply is 2.3 litres.

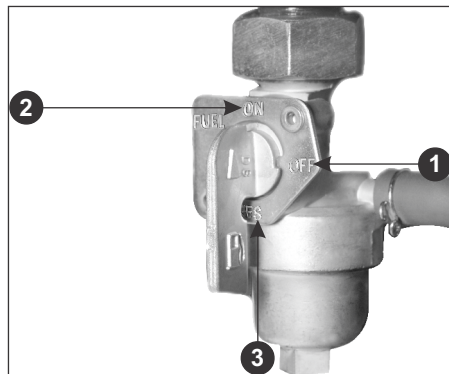

1. Fuel valve


NOTE

- Do not operate the machine with the fuel valve in the “RES” position after refilling. You may run out of fuel, with no reserve.
- Do not keep the fuel valve between “ON” and “OFF” position while riding, since this may drain reserve fuel from the tank.


FUEL TANK

Fuel tank capacity is 12.5 litres (minimum) including usable reserve supply of 2.3 litres.

1. To unlock fuel tank cap slide the key hole cover, insert key turn it clockwise and remove the cap.
2. Do not overfill the tank. There should be no fuel in filler neck (4). Fill the tank with fuel (5).
3. To lock fuel tank cap - Position the cap back on the opening and press gently. The key springs back to the normal position and cap gets locked.
4. Remove the key and slide back the key hole cover.

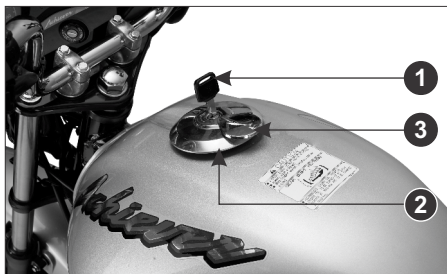

- (1) Ignition key (2) Fuel tank cap
(3) Key hole cover.

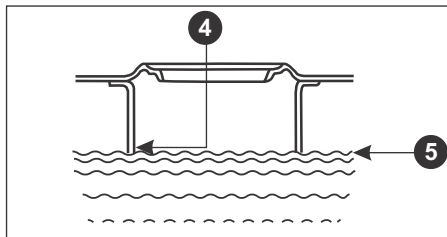

- (4) Filler Neck
(5) Fuel

CAUTION

- Do not park the motorcycle under direct sunlight as it causes evaporation of petrol due to heat and deterioration of paint gloss due to ultra violet rays.

⚠ WARNING

Petrol is extremely flammable and is explosive under certain conditions. Refill in a well ventilated area with the engine stopped. Do not smoke or allow flames or sparks in the area where the motorcycle is refilled or where petrol is stored.


SEAT LOCK

Location : On the rear left side of the seat, below the rear cowl.


Operation : Insert the key and turn it clockwise. Pull the knob downwards to release the seat. To install, engage the hook on the underside of the seat with the frame and slide the seat to the front until the lock clicks.

HELMET HANGER

The helmet can be hung and locked on the hook provided with the seat by rotating the key.

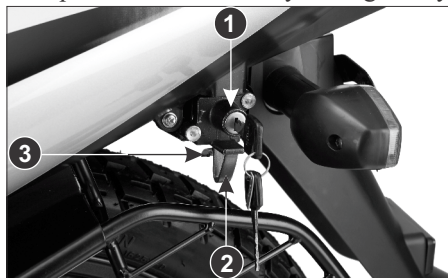

- (1) Seat lock (2) Helmet hanger (3) Knob

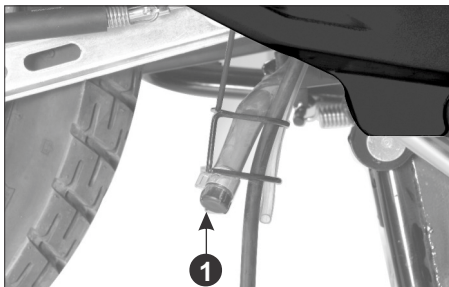

(1) Drain tube plug

AIR CLEANER DRAIN TUBE

Remove the drain tube plug (1) from the tube and drain the deposit into a suitable container. Reinstall the drain tube plug. Follow the above process more frequently when riding in rain or at full throttle.

NOTE

Always ensure to reinstall the drain tube plug after draining the deposit.

ENGINE OIL

Use hero genuine engine oil or recommended grade oil.

BRAND: Hero 4T plus

**GRADE: SAE 10W 30 SL Grade
(JASO MA2).**

Manufactured by :


1. Tide Water Oil Co. (India) Ltd.
2. Savita Oil Technologies Limited.
3. Bharat Petroleum Corporation Limited.

OIL CAPACITY : 1.2 litres

ENGINE OIL TOP UP PROCESS

Check engine oil level each day before operating the motorcycle.

1. Start the engine & let it idle for 3-5 minutes.
2. Stop the engine & park the motorcycle on its main stand on level ground.
3. Remove the oil level dipstick (1), wipe it clean and insert the oil level dipstick without screwing it in.
4. The oil level should be between upper and lower level mark on the oil level dipstick.

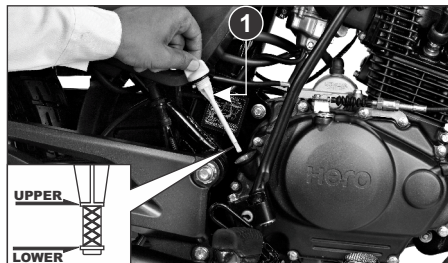

5. Do top up if oil level reaches towards the lower level mark or on every 3000 kms whichever is earlier.


6. Fill the crankcase with the recommended engine oil through the filler hole. Insert the oil level dipstick and check the oil level. Do not overfill above the UPPER level mark.
7. Reinstall the oil level dipstick & check for oil leaks.

ENGINE OIL REPLACEMENT PROCESS

Replace engine oil once in every 6000 kms/ 6 months whichever is earlier.

Drain engine oil with the engine warm and the motorcycle on its main stand.

1. To drain the oil, remove the oil level dipstick and drain bolt (1).
2. After the oil has completely drained, reinstall the drain bolt with new sealing washer(2).
3. Fill the crankcase through the oil level dipstick opening with approximately 1 litre (when clutch cover is not removed) of the recommended grade engine oil.
4. Reinstall the oil level dipstick with new O-ring..
5. Start the engine and allow it to idle for few minutes.
6. Stop the engine.

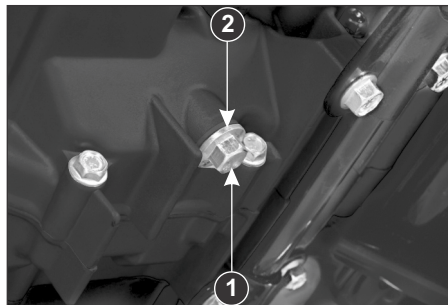

(1) Drain bolt

(2) Sealing washer

CAUTION

- Running the engine with insufficient oil can cause serious engine damage.
- Running the engine with excessive oil can cause spark plug fouling & loss in performance
- Engine oil is a major factor affecting the performance and service life of the engine. Non-detergent, vegetable, or castor based racing oils are not recommended.

TYRES

The tyres that are fitted on your motorcycle are designed to match the performance capabilities of your motorcycle and provide the best combination of handling, braking, durability and comfort.

NOTE

The imported tyre(s) if fitted without ISI mark; are in compliance of BIS standard and Central Motor Vehicle Rules 1989, as declared by the Tyre manufacturer.

To safely operate your motorcycle, the tyres must be of recommended type and size, in good condition with adequate tread, and correctly inflated. The recommended tyres size is:

Front	2.75 x 18 - 4PR/42P
Rear	3.00 x 18 - 6PR/52P

Air Pressure

Properly inflated tyres provide the best combination of handling, tread life, and riding comfort. Generally, under inflated tyres wear unevenly, adversely affect handling, and are more likely to fail from being overheated. Under inflated tyres can also cause wheel damage in rocky terrain. Over inflated tyres make your motorcycle ride more harshly, are more prone to damage from surface hazards and wear unevenly.



(1) Air Pressure Gauge

Make sure the valve stem caps are secure. If necessary, install a new cap.

The recommended “cold” tyre pressures are:

	Rider only	Rider and Pillion
Front	1.75 kg/cm ² (25 psi)	1.75 kg/cm ² (25 psi)
Rear	2.25 kg/cm ² (33 psi)	2.80 kg/cm ² (41 psi)

CAUTION

- Over inflation / Under inflation will affect the performance.



Tread Wear

Replace tyres immediately when the wear indicator (1) appears on the tyre. The tread limits are :

Minimum tread depth Front: 1.5 mm

Rear: 2.0 mm

Check the tread wear indicator for tyre wear.

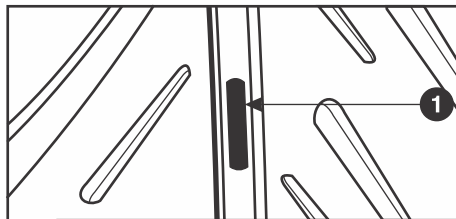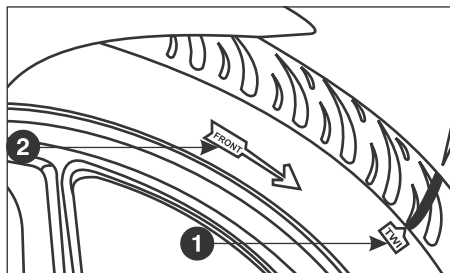

Unidirectional Tyres

Ensure the arrow mark (2) on the tyre is in the same direction as that of forward rotation of the wheel, whenever the tyre is removed and put back in case of puncture.

⚠ WARNING

- Using tyres that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt and killed.
- Operation with excessively worn tyres is hazardous and will adversely affect traction and handling.
- Follow all instructions in this owner's manual regarding tyre inflation and maintenance.
- Under-inflation may result in the tyre slipping on, or tyre coming off the rim.

PRE-RIDE INSPECTION


You should conduct pre ride inspection before riding the motorcycle to enhance riding comfort and safety.

Clean your motorcycle regularly. It protects the surface finish. Avoid cleaning with products that are not specifically designed for motorcycle surfaces.

Inspect your motorcycle every day before you start the engine. The items listed here will only take a few minutes, and in the long run they can save time, expense, and possibly your life. Please follow the tips as given below:

1. **Engine oil level** - check and top up engine oil if required (page 15). Check for leaks.
2. **Fuel level** - ensure sufficient fuel is available in your fuel tank for your journey (page 13). Check for leaks.
3. **Front Brakes** - check for correct brake fluid level in the master cylinder (pages 38-39).
4. **Rear Brakes** - check operation. Adjust free play if necessary (pages 40-41).
5. **Tyres** - check condition and pressure (pages 17-18).
6. **Clutch** - check for smooth operation. Adjust free play (pages 35).
7. **Drive Chain** - check condition and slackness (pages 31-32). Adjust and lubricate if necessary.
8. **Throttle** - check for smooth opening and closing in all steering positions (page 34-35)
9. **Lamps and Horn** - check that headlamp, tail/stop lamp, turn signal lamps, indicators and horn function properly.
10. **Rear View Mirror** - ensure that the rear view mirror gives a good rear view when you are sitting on the motorcycle.
11. **Air Suction Valve** - make sure all tube connections are secured properly (page 48).
12. **Fitting & Fasteners** - check & tighten if necessary.
13. **Battery & Fuse** - check electrolyte level & replace fuse (pages 41-44).
14. **Steering** - check for smooth action for easy maneuverability.

STARTING THE ENGINE

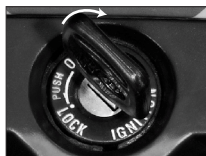

1. Turn the ignition switch “ON”.



4. Pull the choke lever downwards as indicated (Use choke during cold conditions).

2. Turn the fuel valve “ON”.



5. Keeping the throttle closed, kick start the engine or press the starter switch in case of electric start model.



3. Find neutral position & check  indicator glows on instrument cluster with ignition “ON”.



6. Push the choke lever upwards as indicated, after warming up the engine for few seconds. Continue warming of the engine

until it runs smoothly and responds to the throttle when the choke lever is fully upwards to "OFF" position.

Note : To start the engine in any gear position, press the clutch lever and push the starter switch or alternatively kick start pedal can be used.

⚠ WARNING Never run the engine in a closed area, the exhaust contains poisonous gases.

Flooded Engine

If the engine fails to start after repeated attempts, it may be flooded with excess fuel. To clear a flooded engine, turn the ignition switch "OFF" and move choke lever fully upwards to "OFF". Open the throttle fully and crank the engine several times with the kick starter. Turn the ignition switch "ON" and open the throttle slightly, start engine without using choke.

Running In


Help assure your motorcycle's future reliability and performance by paying extra attention to how you ride during the first 500 kms.

During this period, avoid full-throttle starts and rapid acceleration.

RIDING

1. After the engine has been warmed up, the motorcycle is ready for riding.
2. While the engine is idling, press the clutch lever and depress the gearshift pedal downwards using the toe to shift into 1st gear.

3. Slowly release the clutch lever and at the same time, gradually increase engine speed by opening the throttle. Coordination of the throttle and clutch lever will assure a smooth positive start.
4. When the motorcycle attains a moderate speed, close the throttle, press the clutch lever and shift to 2nd gear by depressing the gear pedal downwards using the heel.
5. This sequence is repeated progressively to shift to 3rd, 4th and 5th gear.

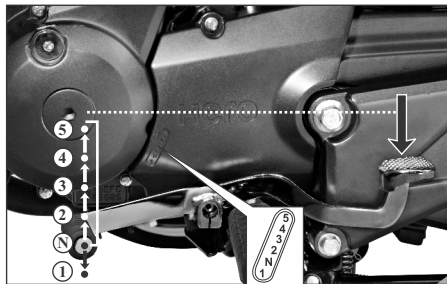

CAUTION

- Do not shift gears without operating clutch and without closing the throttle otherwise this would lead to damage of gears.

BRAKING

1. For normal braking, close the throttle and gradually apply both front and rear brakes simultaneously while shifting down gears to suit your roads speed.
2. For maximum deceleration/quick stopping, close the throttle and apply the front and rear brakes simultaneously.

⚠ WARNING

- Independent use of only the front or rear brake increases stopping distance.
- Extreme braking may cause wheel locking and reduce control over the motorcycle.
- Wherever possible, reduce speed or apply brake before entering turn: closing the throttle or braking in mid-turn may cause wheel slip. Wheel slip will reduce control over the motorcycle.
- When riding in wet or rainy conditions, or on loose surfaces the ability to stop the motorcycle reduces.

⚠ WARNING

- All your actions should be smooth under these conditions. Sudden acceleration, braking or turning may cause loss of control. For your safety, exercise extreme caution when braking, accelerating or turning.
- When descending a long steep slope use engine braking (power) by changing to lower gears, with intermittent use of both brakes. Continuous brake application can overheat the brakes and reduce their effectiveness.

PARKING

After stopping the motorcycle, shift the transmission into neutral, turn the fuel valve "OFF", turn the ignition switch "OFF", park the motorcycle on main stand, lock the steering and remove the key.

CAUTION

- Park the motorcycle on firm level ground to prevent overturning.
- While parking on side stand engage the first gear.

TOOL KIT

The tool kit (1) is located below the seat in the rear. Some emergency repairs, minor adjustments and parts replacement can be performed with the tools contained in the kit.

Kit consists of following tool:

- Tool Bag- 1 No.
- +, - No. 2 driver- 1 No.
- Grip- 1 No.
- Box wrench P 16 X 14- 1 No.
- Pin spanner- 1 No.



FIRST AID KIT

The first aid kit (2) is located below the seat in the rear. For some emergency first aid can be performed by medicine contained in the kit.

Kit contains the following items :

- 1) Antiseptic Cream - 1 No.
- 2) Sterilised Dressing - 1 No.
- 3) Water Proof Plaster - 1 No.
- 4) Elastic Bandage - 1 No.
- 5) Gauze (Rolled Bandage) - 1 No.
- 6) Sterilised Elastic Plaster - 1 No.
- 7) First Aid Bag - 1 No.

ANTI-THEFT TIPS

1. Always lock the steering and never leave the key in the ignition switch .
2. Park your motorcycle in a locked garage whenever possible.
3. Use an additional anti-theft device of good quality.
4. Put your name, address and phone number in this Owner's Manual and keep it in your motorcycle at all times.

Many times stolen motorcycles are identified by information in the Owner's Manuals that are still with them.

NAME : _____

ADDRESS : _____

PHONE NO : _____

MAINTENANCE

Importance of Maintenance

A well-maintained motorcycle is essential for safe economical and trouble-free riding. It will also help reduce air pollution.

To help you, take proper care of your motorcycle, the following pages include a Maintenance Schedule and a Maintenance Record for regular scheduled maintenance.

These instructions are based on the assumption that the motorcycle will be used exclusively for its designed purpose. Sustained high speed operation or operation in unusually wet or dusty conditions will require more frequent service than specified in the Maintenance Schedule.

Consult your Authorised Hero MotoCorp workshop for recommendation applicable to your individual needs and use.

WARNING

- Improperly maintained motorcycle or failing to correct a problem before you ride can cause a crash in which you can be seriously hurt or killed.
- Always follow the inspection and maintenance recommendations and schedules in this owner's manual.

SAFETY PRECAUTION

- Make sure the engine is "OFF" before you begin any maintenance or repairs. This will help to eliminate several potential hazards :

- * **Carbon monoxide poisoning from engine exhaust.**

Be sure there is adequate ventilation whenever you operate the engine.

- * **Burns from hot parts.**

Let the engine and exhaust system cool before touching.

- * **Injury from moving parts.**

Do not run the engine unless instructed to do so.

- Read the instruction before you begin, and make sure you have the tools and skills required.

- To help prevent the motorcycle from falling over, park it on a firm, level surface on the mainstand.
- To reduce the possibility of a fire or explosion, be careful when working around petrol or batteries. Use only nonflammable solvent, not petrol, to clean parts. Keep cigarettes, sparks and flames away from the battery and all fuel-related parts.

Remember that your authorised Hero MotoCorp dealer knows your motorcycle best and is fully equipped to maintain and repair it.

To ensure best quality and reliability, it is recommended to use Hero MotoCorp genuine parts for repair and replacement.

MAINTENANCE SCHEDULE

Dear Customer,

We would strongly recommend the following schedule, to keep your motorcycle in perfect running condition and healthy environment. Motorcycle subjected to severe use or ridden in dusty area will require more frequent servicing.

ITEMS	WHICHEVER COMES FIRST	DURING FREE SERVICE PERIOD						AFTER FREE SERVICE ONCE IN EVERY				
	SERVICE	1st	2nd	3rd	4th	5th	6th					
	DAYS	1st 60	Next 100	Next 100	Next 100	Next 100	Next 100					
	KMS.	500-750	3000-3500	6000-6500	9000-9500	12000-12500	15000-15500	3000	6000	9000	12000	15000
Fuel Line		I	I	I	I	I	I	I				
Throttle Operation		I,A	I,A	I,A	I,A	I,A	I,A	I,A				
Carburetor		C,A	A	C,A	A	C,A	A	A	C,A			
Air Cleaner*		C	C	C	C	R	C	C			R	
Spark Plug		I,C,A	I,C,A	I,C,A	I,C,A	R	I,C,A	I,C,A			R	
Valve Clearance		I,A	I,A	I,A	I,A	I,A	I,A	I,A				
Engine Oil**		O	I,T	O	I,T	O	I,T	I,T	O			
Engine Oil Strainer Screen		C		C		C			C			
Engine Oil Centrifugal Filter		C		C		C			C			
Electric Starter		I	I	I	I	I	I	I				
Oil Circulation		I	I	I	I	I	I	I				
Drive Chain @		I,C,L,A at every 2000 kms						I,C,L,A at every 2000 kms				
Battery		I	I	I	I	I	I	I				
Brake Shoe / Pads Wear		I,A	I,A	I,A	I,A	I,A	I,A	I,A				

ITEMS	WHICHEVER COMES FIRST	DURING FREE SERVICE PERIOD						AFTER FREE SERVICE ONCE IN EVERY				
	SERVICE	1st	2nd	3rd	4th	5th	6th					
	DAYS	1st 60	Next 100	Next 100	Next 100	Next 100	Next 100					
	KMS.	500-750	3000-3500	6000-6500	9000-9500	12000-12500	15000-15500	3000	6000	9000	12000	15000
Brake Fluid ***		I	I	I	I	I	I	I				
Brake System (Brake Cam & Brake Pedal)			C,L		C,L		C,L		C,L			
Stop Lamp Switch		I,A	I,A	I,A	I,A	I,A	I,A	I,A				
Headlamp Focus		I,A	I,A	I,A	I,A	I,A	I,A	I,A				
Clutch		I,A	I,A	I,A	I,A	I,A	I,A	I,A				
Side Stand		L	L	L	L	L	L	L				
Fasteners****		I	I	I	I	I	I	I				
Wheels/Tyres		I	I	I	I	I	I	I				
Steering Head Bearing		I	I,A	I	I,A	I,L,A	I,A	I	I,A		I,L,A	
Front Suspension/Oil***		I	I	I	I	I	I	I				
Secondary Air Injection				I		I			I			
Muffler (Catalytic Converter)				I,E		I,E			I,E			

* More frequent cleaning may be required when riding in dusty areas.

** Replace engine oil once in every 6000 kms. Top up if the oil level is at or near the lower level mark.

*** Replace once in every two years or 30000 kms. whichever is earlier.

**** Inspect & maintain specified torque.

@ Visit Authorised Hero MotoCorp workshop for inspection, cleaning, lubrication and adjustment of drive chain at every 2000 kms.


● Check idle CO emission along with idle r/min / idle CO adjustment (if required).

NOTE:- Always wipe the water from the motorcycle after washing. Use clean soft cloth or pressurised air for completely drying the water.

I: INSPECT R: REPLACE C: CLEAN L: LUBRICATE A: ADJUST IF REQUIRED O: OIL CHANGE T: TOP UP E: EMISSION CHECK

OIL FILTER SCREEN & CENTRIFUGAL FILTER

1. Drain the engine oil thoroughly.
2. Remove the rider foot rest (1), kick starter pedal (2), disconnect the clutch cable (3). Remove the right crankcase cover (4).
3. Remove the oil filter screen (5) and wash it in clean non flammable or high flash point solvent (kerosene).
4. Reinstall the filter screen.

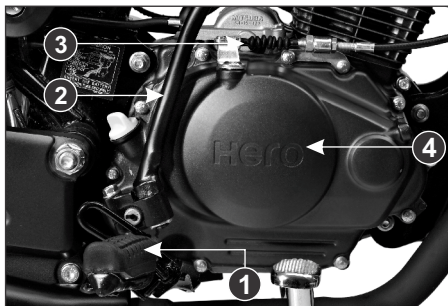


- (1) Rider foot rest
- (2) Kick starter pedal
- (3) Clutch cable


5. Remove centrifugal filter cover (6) & clean the centrifugal filter (7) with non flammable or high flash point solvent (kerosene).
6. Reinstall the centrifugal filter cover, right crankcase cover, rider foot rest, muffler & kick starter pedal.
7. Fill the crankcase with clean engine oil (page 16).

NOTE :

Clean filters as specified in the maintenance schedule.

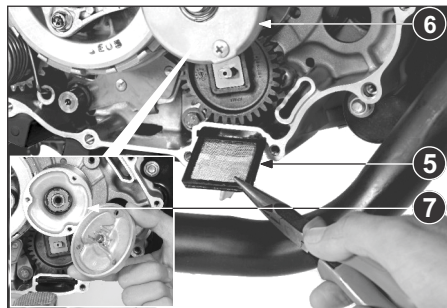

- (4) Right crankcase cover
- (5) Oil filter screen
- (6) Centrifugal filter cover
- (7) Centrifugal filter

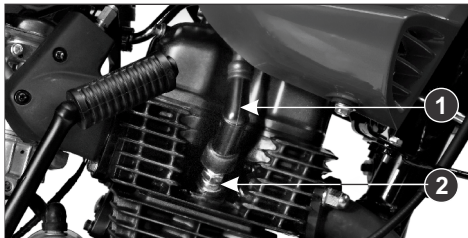


(1) Noise suppressor cap (2) Spark plug

SPARK PLUG

Recommended plug : NGK-CPR 8 EA9, CHAMPION-RG 6YC

For most riding conditions this spark plug heat range number is satisfactory. However, if the motorcycle is going to be operated for extended periods at high speeds or near maximum power in hot climates, the spark plug should be changed to a cold heat range number, consult Authorised Hero MotoCorp workshop on this if required.

1. Clean dirt around the spark plug base.
2. Disconnect the noise suppressor cap (1) and remove the spark plug (2) with the help of spark plug wrench provided in the tool bag.

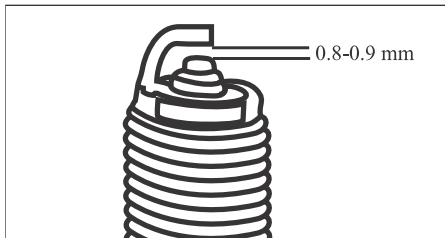

3. Visually inspect the spark plug electrodes for wear. The centre electrode should have square edges and the side electrode should not be eroded. Discard the spark plug if there is apparent wear or if the insulator is cracked or chipped.
4. Make sure that the spark plug gap is 0.8-0.9 mm using a wire-type feeler gauge. If adjustment is necessary bend the side electrode carefully. Make sure the plug washer is in good condition.
5. With the plug washer attached, thread the spark plug in by hand to prevent cross-threading.
6. Tighten a new spark-plug 1/2 turn after the plug seats, with a spark plug wrench to compress the washer. If you are reusing a plug, it should only take 1/8-1/4 turn after the plug seats.


AIR CLEANER

The air cleaner should be serviced at regular intervals (page 26). When riding in dusty areas, more frequent service may be necessary.


1. Remove the seat assembly (page 14).
2. Remove the side cover (1) by removing side cover screws (2).
3. Remove the air cleaner cover screws (3) and the cover (4).
4. Remove the element air cleaner screws (5) and remove the element air cleaner (6).



(1) Side cover (2) Side Cover screws

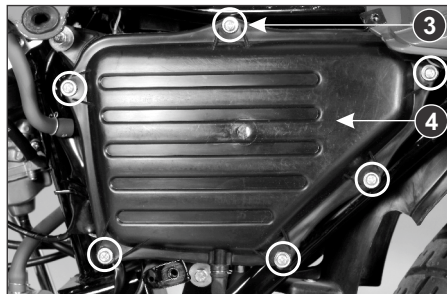


(3) Air cleaner cover screws
(4) Air cleaner cover

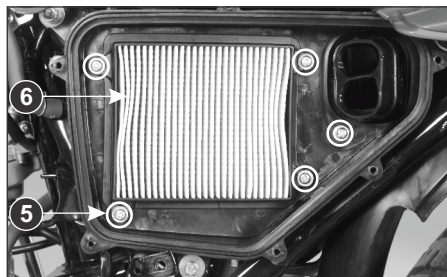

(5) Element air cleaner screws
(6) Element air cleaner

5. Air Cleaner Cleaning


- Remove the air cleaner element (6).

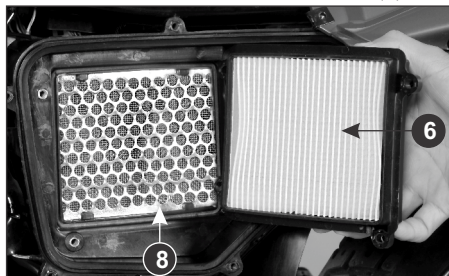

- Clean the element by tapping it lightly to loosen dust.
- Blow away the remaining dust by forcing compressed air through the air nozzle (7) from the housing side (8) of the air cleaner.
- Replace the air cleaner if it is excessively dirty, torn or damaged.

6. Install the air cleaner element.

7. Install the removed parts in the reverse order of removal.

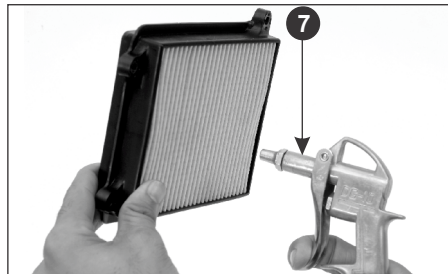

CAUTION

Never wash the paper filter. Only blow clean dry filtered air in the paper filter for cleaning dust, as explained. Replace paper filter element every 12000 kms.


Replace it earlier if it becomes very dirty, damaged on surface or on the sealing area.

THROTTLE OPERATION

Cable Inspection

Check for smooth rotation of the throttle grip from the fully open to the fully closed position. Check at full left and full right steering positions. Inspect the condition of the throttle cable from the throttle grip down to the carburetor. If the cable is

kinked, chafed or improperly routed, it should be replaced or rerouted. Standard throttle grip free play (1) is approximately 2-6 mm of grip rotation.

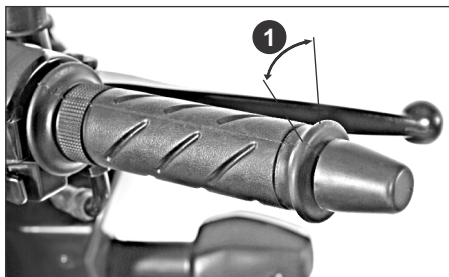


(1) Free play

Free Play Adjustment

slide the grommet (2), loosen the lock nut (3) and turn the adjuster (4).

Direction A - to decrease the free play

Direction B - to increase the free play

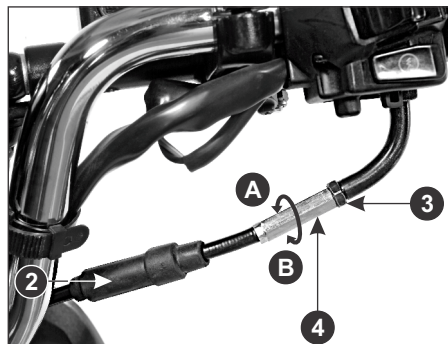

(3) Lock nut

(4) Adjuster

(A) Decrease free play


(B) Increase free play

VALVE CLEARANCE

Excessive valve clearance will cause noise, and little or no clearance will prevent the valve from closing and cause valve damage and power loss. Check valve clearance at the specified intervals (page 26).

NOTE

The checking or adjusting of valve clearance should be performed while the engine is cold. The clearance will change as the engine temperature rises.

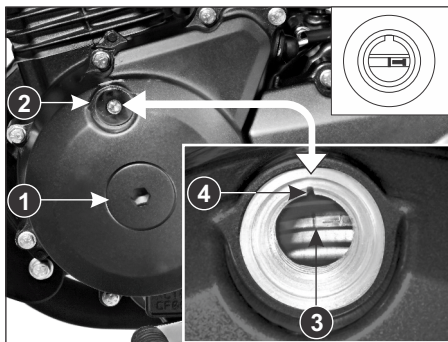


1. Remove the crankshaft hole cap (1) and timing hole cap (2).

2. Remove the cylinder head cover.

3. Rotate the flywheel anticlockwise until the 'T' mark (3) on the flywheel coincides with the index mark (4) on the left crank case cover. In this position the piston will either be on the compression or exhaust stroke.

The adjustment must be made when the piston is at Top Dead Center and both the inlet and exhaust valves are closed. This condition can be determined by moving the rocker arms. If they are free it is an indication that the valves

are closed and the piston is in compression stroke. If they are tight the valves are open, rotate the flywheel 360° anticlockwise and re-align the 'T' mark with the index mark.

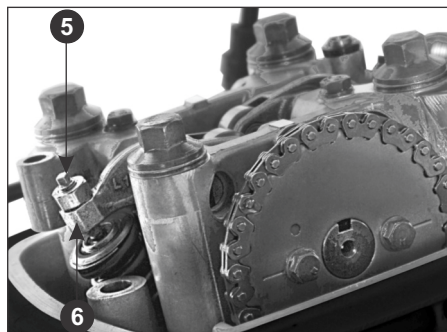

(5) Adjusting screw (6) Lock nut

4. Check the clearance by inserting the feeler gauge (7) between the adjusting screw (5) and valve stem.



Standard clearance (cold condition)

IN. 0.08 mm EX. 0.12 mm

If adjustment is required, adjust by loosening the lock nut (6) and turning the adjusting screw (5) until there is a slight drag on the feeler gauge (7).

After tightening the lock nut (6), check the clearance again.

5. Install all parts in the reverse order of disassembly.

NOTE

Before inserting the feeler gauge, smear a bit of engine oil on the feeler gauge to avoid damage to the feeler gauge.

CARBURETOR

Idle speed

The carburetor is factory pre-set in order

to achieve optimum performance and meet emission standards.


However in case of specific requirement of tuning due to engine stalling in idle speed, please follow the instructions given hereunder:

1. Warm up the engine and park the motorcycle on its main stand.
2. Adjust idle speed with the throttle stop screw (1).

IDLE SPEED: 1400 ± 100 R/MIN

CAUTION

Do not attempt to compensate for faults in other systems by adjusting idle speed. Visit your Authorised Hero MotoCorp workshop for scheduled carburetor adjustment.

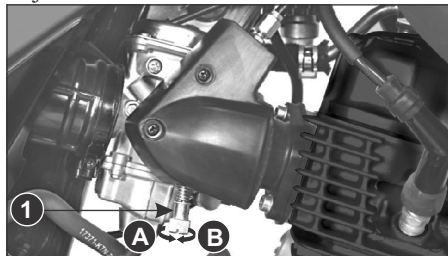


- (1) Throttle stop screw (A) Increase rpm
(B) Decrease rpm

CLUTCH

Clutch adjustment may be required if the motorcycle stalls when shifting into gear or tends to creep or if the clutch slips, causing acceleration to lag behind engine speed. Normal clutch lever free play (1) is 10-20 mm at the lever (2).

1. To adjust the free play, loosen the lock nut (3). Turn the adjusting nut (4) to obtain the specified free play.

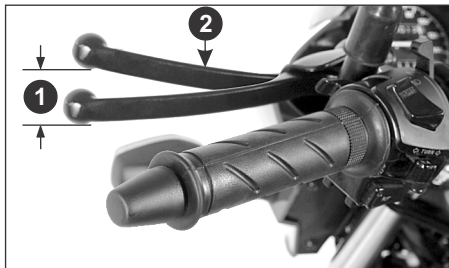


- (1) Free play (2) Clutch lever
Tighten the lock nut and check the adjustment.

2. Start the engine, press the clutch lever and shift into gear. Make sure the engine does not stall, and the motorcycle does not creep. Gradually release the clutch

lever and open the throttle. The motorcycle should start smoothly and accelerate.

NOTE

Check that the clutch cable routing is correct.

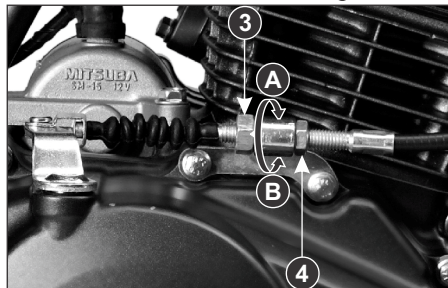

- (3) Lock nut (4) Clutch cable adjusting nut
(A) Decrease free play (B) Increase free play

NOTE

If proper adjustment cannot be obtained or the clutch does not work correctly, visit your Authorised Hero MotoCorp workshop.

Other Checks

- Check the clutch cable for kinks or signs or wear that could cause sticking or failure.
- Check for clutch cable model. Use genuine clutch cables.
- Check for clutch cable routing.

DRIVE CHAIN


The service life of the drive chain is dependent upon proper lubrication and adjustment. Poor maintenance can cause premature wear or damage to the drive chain and sprockets. The drive chain (1) should be checked and lubricated as part of the Pre-ride Inspection (page 19). Under severe usage, or when the motorcycle is ridden in unusually dusty areas, more frequent maintenance will be necessary.

Inspection

1. Turn the engine "OFF", park the motorcycle on its main stand and shift the transmission into neutral. Remove hole cap (2).
2. Drive chain slack (3) should be adjusted to allow approximately 20-30 mm vertical movement by hand.


Rotate the wheel and check drive chain slack as the wheel rotates. Drive chain slack should remain constant as the wheel rotates.

If the chain is slack in one section and tight in another, some links are kinked and binding. Binding can be eliminated by frequently lubrication.

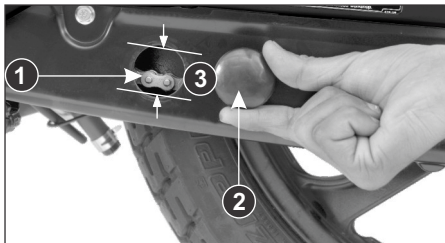


- (1) Drive chain (3) Drive chain slack
(2) Hole cap

3. Turn the chain to view chain lock plate (1) inside the hole. Ensure that the chain lock plate open end (2) is installed in the opposite direction of the chain rotation.
4. Inspect the sprocket teeth for wear or damage.

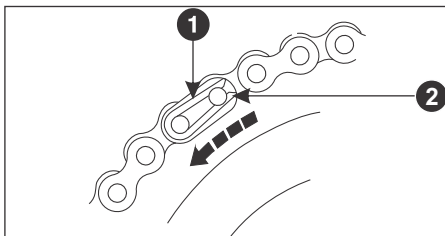

- (1) Chain lock plate (2) Open end

5. If the drive chain or sprockets are excessively worn or damaged, they should be replaced. Never use a new chain with worn out sprockets since this will result in rapid chain wear.

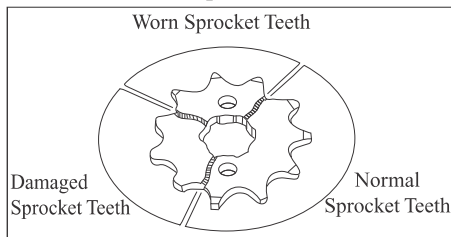


Adjustment

- Park the motorcycle on its main stand with the transmission in neutral and the ignition switch "OFF" position.
- Loosen the rear axle nut (1) and sleeve nut (2).
- Loosen the drive chain lock nut (3).
- Turn both the adjusting nuts (4) in an equal number of turns until the correct drive chain slack is obtained. Turn the adjusting nut clockwise to decrease the

slack or anticlockwise to increase the slack of the chain.

- Align the chain adjuster index mark (5) with the rear edge (6) of the adjusting slots on both sides of the swing arm equally.
- If the drive chain slack is excessive when the rear axle is moved to the furthest limit of adjustment, the drive chain is worn and must be replaced.
- Tighten the rear axle nut and sleeve nut.
- Check the drive chain slack again.



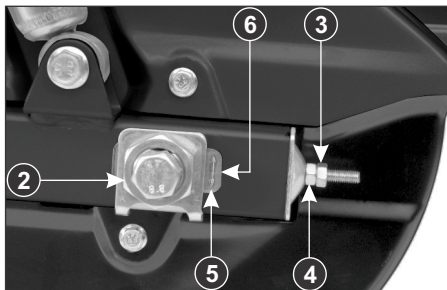

- | | |
|---------------------------------|-------------------------------|
| (1) Rear axle nut | (2) Sleeve nut |
| (3) Drive chain lock nut | (4) Drive chain adjusting nut |
| | (5) Index mark |
| (6) Rear edge of adjusting slot | |

- Rear brake pedal free play is affected when repositioning the rear wheel to adjust drive chain slack. Check rear brake pedal free play and adjust as necessary (page 40).

Lubrication

1. Turn the engine "OFF", park the motorcycle on its main stand and shift the transmission into neutral.
2. Lubricate the drive chain by applying liberal amount of SAE-90 oil or chain lubricant.

CAUTION

Regular adjustment and lubrication as per the maintenance schedule would ensure high performance and longer life.

NOTE :

Visit Authorised Hero MotoCorp workshop for inspection, cleaning, lubrication and adjustment of drive chain at every 2000 kms.

FRONT BRAKE


Master Cylinder/Reservoir.

Location : Right handle bar.

Brake fluid recommended:


Castrol Q Stop - DoT 3 / DoT 4

Fluid level - Ensure that the brake fluid level does not fall below "MIN" mark (1) on the master cylinder, when checked with the master cylinder parallel to the ground. The level decreases gradually due to piston movement to compensate pads wear. If the level decreases abruptly, check for the leakages in the brake system and consult your Authorised Hero MotoCorp workshop.

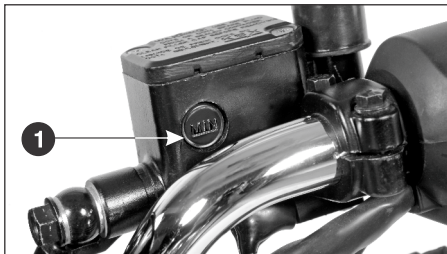

NOTE : Clean the dirt and mud accumulation between the brake pads (1), caliper (2) and the disc (3) by using a water jet.

Always contact your Authorised Hero MotoCorp workshop for refilling of master cylinder when necessary. Do not mix DoT 3 and DoT 4 brake fluid.

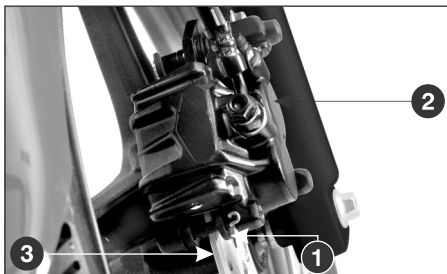


Brake Pad Wear

Brake pad wear depends upon the severity of usage, the type of riding & road conditions. Generally, the pads will wear faster on wet & dirty roads. Inspect the pads at each regular maintenance interval.

- Check the brake pads for wear by examining the wear limit groove (1) on each pad.
- If either pad is worn to the bottom of the grooves replace both pads as a set. Visit your Authorised Hero MotoCorp workshop for this service.

⚠ WARNING

Always apply front and rear brakes simultaneously to avoid skidding of vehicle.

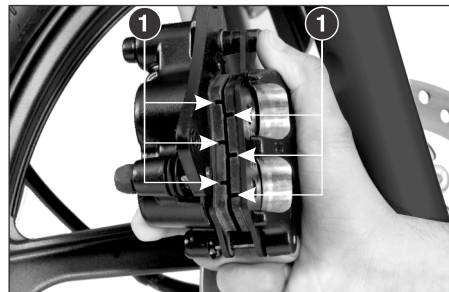



(1) Wear Indicator Grooves

REAR BRAKE

Adjustment

1. Park the motorcycle on its main stand.
2. Measure the brake pedal (1) free play before the brake starts to take hold. Free play (2) should be 20-30 mm.
3. If adjustment is necessary, turn the rear brake adjusting nut (3).

Make sure that the cut-out on the adjusting nut is seated on the brake arm pin (4) after the final adjustment has been made.

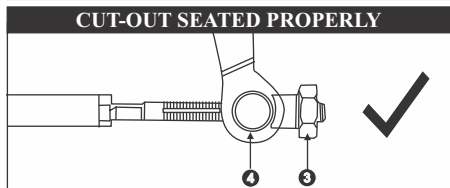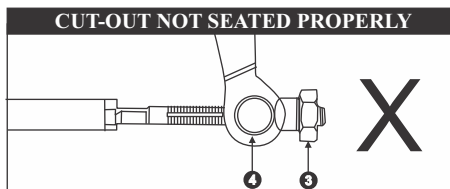

(3) Adjusting nut

(4) Brake arm pin




(1) Rear brake pedal (2) Free play

4. Apply the brake several times and check for free wheel rotation when released.

NOTE

If proper adjustment cannot be obtained by this method, visit your Authorised Hero MotoCorp workshop.

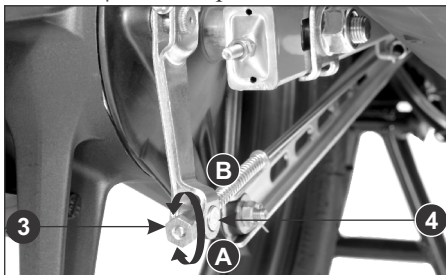

(3) Adjusting nut

(4) Brake arm pin


(A) Decrease free play (Clockwise)

(B) Increase free play (Anti-Clockwise)

BRAKE WEAR INDICATORS

When the brake is applied, an arrow (3), fixed to the brake arm (4), moves towards a reference mark (2) on the brake panel (1). If the arrow aligns with the reference mark on full application of the brake, the brake shoes must be replaced.

Rear Brake Wear Indication

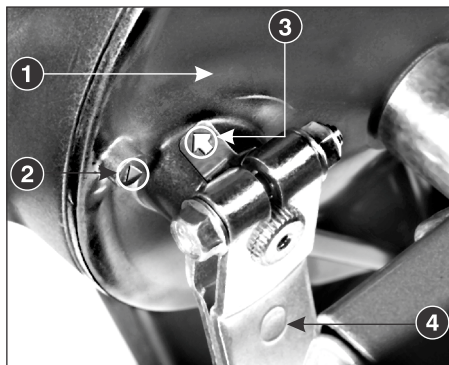


- (1) Brake panel (3) Arrow
(2) Reference mark (4) Brake arm

BATTERY Location

The battery (1) is located behind the right side cover.

Specification

Kick Start Model -12V-2.5Ah

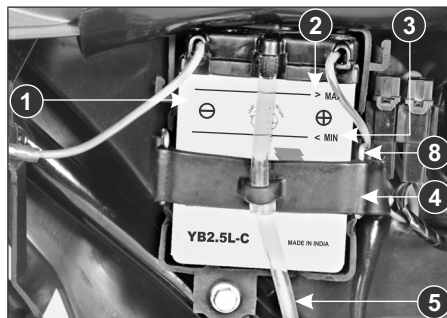

- (1) Battery (6) Bracket
(2) Upper level mark (7) Bolt
(3) Lower level mark (8) Hook
(4) Battery band
(5) Battery vent tube

Electric Start Model-12V-7Ah



Maintenance

Check the battery electrolyte. The electrolyte level must be maintained between the upper (2) and lower (3) level marks on the side of battery. If the electrolyte level is low, remove the bolt (7) / hook (8) and remove the bracket (6) / band (4) for access to the battery.

Remove the battery filler caps. Carefully add distilled water to the upper level mark using a small plastic funnel.


NOTE

- Use only distilled water in the battery. Tap water may shorten the service life of the battery.
- Dispose off used/old battery to authorised dealer only. Insufficient electrolyte results in sulphation & plate damage.

Fuse Replacement


Kick Start Model

The fuse holder (1) is placed adjacent to the battery which consists of a 15A fuse (2) and 10A(3).

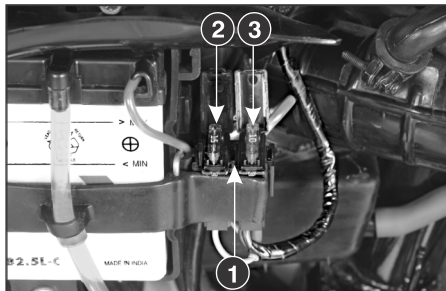

(1) Fuse Holder, (2) Fuse 15A,
(3) Fuse 10A


The spare fuse 15A (5) and 10A (4) are located to the left side of the battery under the rear cowl.

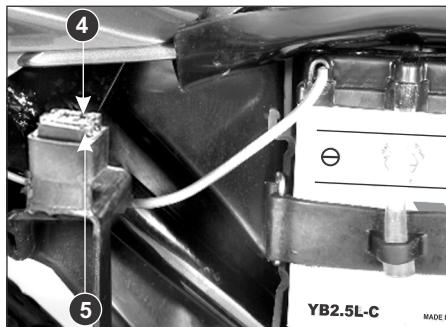

(4) Spare fuse 10 A (5) Spare fuse 15 A.


Electric Start Model

The fuse holder (1) is placed below the seat. The specified fuse is 15A (2) with a spare fuse (3).

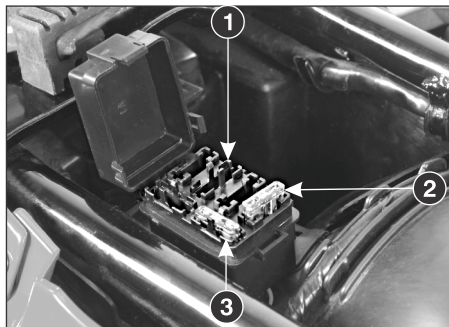

- (1) Fuse holder (2) Fuse 15A
(3) Spare fuse 15A

The main fuse 20A (2) with a spare fuse (3) is located in the starter magnetic relay switch (1) under the right side cover.

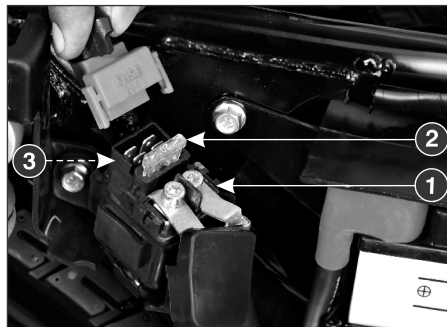

- (1) Starter Magnetic relay switch
(2) Fuse 20A
(3) Spare fuse 20A

⚠ WARNING

- Never use a fuse with a different rating from that specified. It may lead to serious damage to the electrical system or a fire due to short circuit.
- Battery gives off explosive gases. Keep sparks, flames & cigarettes away.

CAUTION


- When checking battery electrolyte level or adding distilled water, make sure the breather tube is connected to the battery breather outlet.
- Do not attempt to start or drive the motorcycle without a charged battery, it can cause fusing of the bulbs and permanent damage to certain electrical components.
- Turn the ignition switch “OFF” before checking or replacing the fuse to prevent accidental short-circuiting.

STOP LAMP SWITCH

The stop lamp switch (1) must be adjusted so that stop lamp glows when rear brake is applied. Rear brake free play (page 40) should be adjusted before performing stop lamp switch adjustment. The procedure for adjusting stop lamp switch is as follows:

1. Turn the ignition switch to the “ON” position.

2. Turn the adjusting nut (2) to position stop lamp switch at a point where the stop lamp glows just before the brake pedal is depressed to the limit of its free play. Turn the adjusting nut in direction (A) to advance switch timing or in direction (B) to retard switch timing.

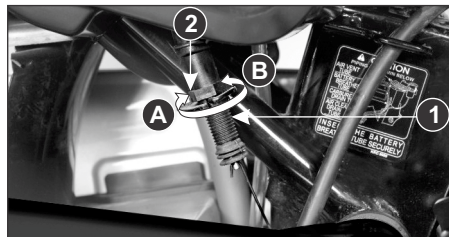


- (1) Stop lamp switch (A) Advance
(2) Adjusting nut (B) Retard

HEADLAMP ADJUSTMENT

Headlamp is preset. However in case of adjustment required, please follow the steps as given below:

1. Headlamp adjustment is done by the loosening the bolt (1) located below the headlamp.
2. Park the motorcycle on level ground.

3. Adjust the headlamp beam by loosening the bolt (1) and moving the headlamp unit forward and backward for correct focus adjustment.
4. Tighten the bolt after adjustment.

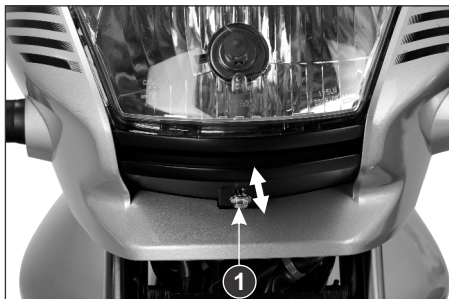

⚠ WARNING

- An improperly adjusted headlamp may blind oncoming rider/driver or it may fail to light the road for a safe distance.

SUSPENSION

Inspection

- Check the front forks by locking the front brake and pumping the front fork up and down vigorously. The suspension action should be smooth and there should be no oil leakage.
- Check the rear shock absorber by pushing hard downwards on rear grip while the motorcycle is not parked on stand. The suspension action should be smooth and there should be no oil leakage.



Front



Rear


Rear shock absorber adjustment

Rear shock absorber adjustment can be made according to the load/road conditions.

- In direction A stiffer.
- In direction B softer

NOTE

Always adjust both the rear shock absorber to the same position. Use the rear shock absorber adjustment tool (1) available in the tool kit.

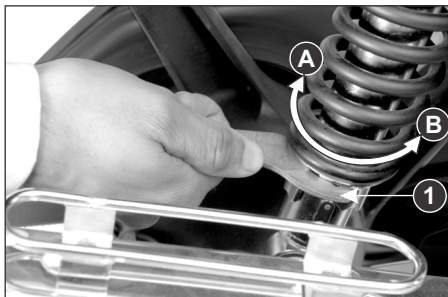


(1) Shock absorber adjustment tool

FRONT WHEEL REMOVAL

- Raise the front wheel off the ground.
- Remove the speedometer cable by pressing the tab (1) and pulling cable out from the speedometer gearbox.
- Remove the front axle nut (2).

- Remove the axle and the wheel.
- Assemble in the reverse order of removal.

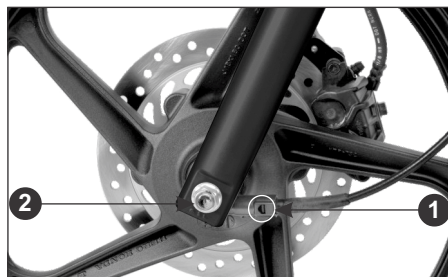


(1) Tab (2) Axle Nut

Caution :

- Axle nut torque 6.3 kgf-m.
- Do not operate front brake lever when the wheel is removed.

REAR WHEEL REMOVAL

1. Raise the rear wheel off the ground.
2. Remove the rear brake adjusting nut (1) and disconnect the brake rod (2) from the brake arm (3) by pushing down the brake pedal. Disconnect the brake stopper arm (4) from the brake panel (5) by removing split pin (6) and lock nut (7).
3. Remove the axle nut (8) and pull out the axle (9). Remove the wheel.

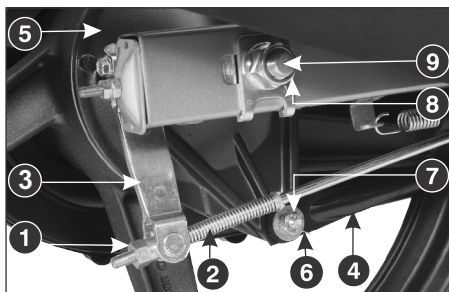

(1) Rear brake adjusting nut, (2) Rear brake rod, (3) Brake arm, (4) Brake stopper arm, (5) Brake panel, (6) Split pin (7) Lock nut, (8) Axle nut, (9) Axle

Installation Notes

- Reverse the removal procedure
- Axle nut torque
6.8 kgf-m
Brake stopper arm nut torque
2.2 kgf-m
- Adjust the brake (page 40).
- After installing the wheel, apply the brake several times and check for free wheel rotation when released.

CAUTION

Always replace used split pins with new ones.

WASHING THE MOTORCYCLE

Follow the below mentioned steps for washing the motorcycle.

1. Wet the motorcycle with light water spray. Avoid directing water to muffler outlets and electrical parts.
2. Clean the headlamp lens and other plastic parts using a cloth or sponge dampened with a solution of mild detergent and water. Rub the soiled area gently rinsing it frequently with fresh water.
3. After cleaning spray water thoroughly.
4. Dry the motorcycle by wiping with dry soft cloth.

NOTE

- Our authorised dealership take all above mentioned precautions like recommended detergents and usage of muffler caps/plugs during wash to ensure quality wash.
- Do not use high pressure water or air. It can damage certain parts of the motorcycle.

CATALYTIC CONVERTER

This motorcycle is equipped with a catalytic converter in the silencer (muffler) to meet the emission norms.


The catalytic converter contains noble metals that serve as catalyst, promoting chemical reactions to convert CO and HC in the exhaust to CO₂ and H₂O (water vapour).

A defective catalytic converter contributes to air pollution and can impair your engine's performance.

Follow these guidelines to protect your motorcycle's catalytic converter.

- Always use unleaded petrol. Even a small amount of leaded petrol can contaminate the catalyst metals, making the catalytic converter ineffective.
- Keep the engine tuned up.

AIR SUCTION VALVE

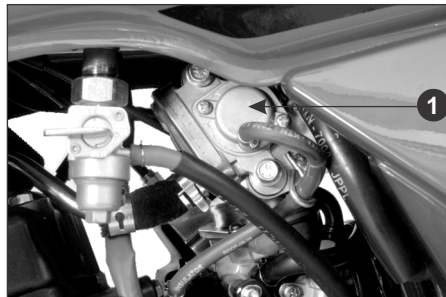

(1) Air Suction Valve


Further to meet emission standards this motorcycle is provided with the air suction valve.

Air Suction Valve (1) supplies fresh air from the air filter to the exhaust manifold to convert carbon monoxide to carbon dioxide. This reduces the CO% in the vehicle's exhaust.

BASIC TROUBLE SHOOTING


1. STARTING TROUBLE - ENGINE DOES NOT START

A. FUEL SYSTEM

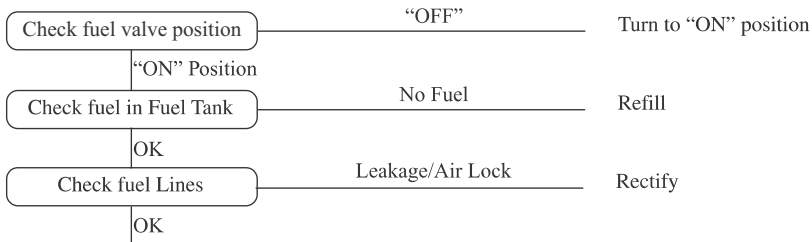


Consult Authorised Hero MotoCorp Workshop

B. ELECTRIC-STARTER NOT WORKING (Electric Start Model Only)

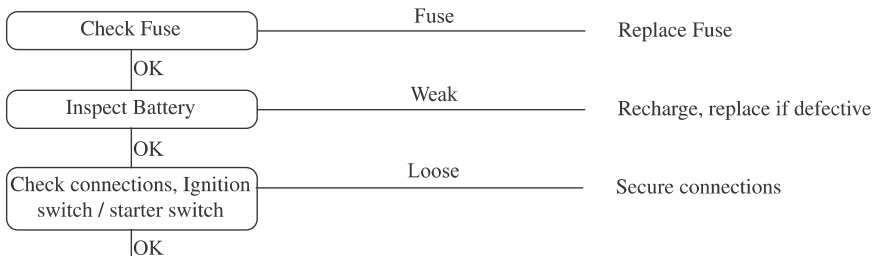

Consult Authorised Hero MotoCorp Workshop


C. NO SPARK AT SPARK PLUG

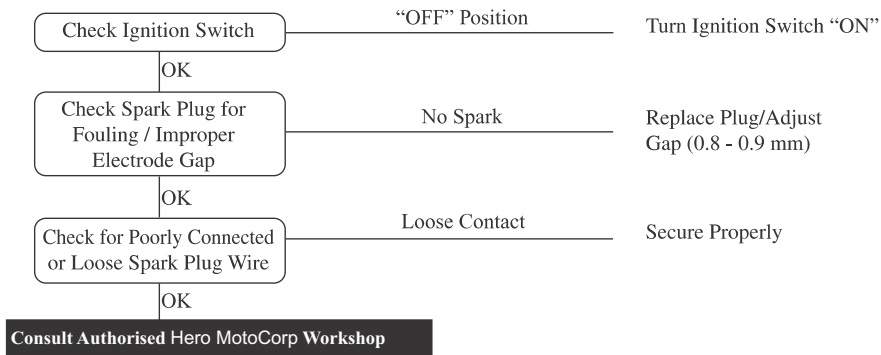

2. ENGINE STARTS BUT STALLS




3. POOR PICK-UP

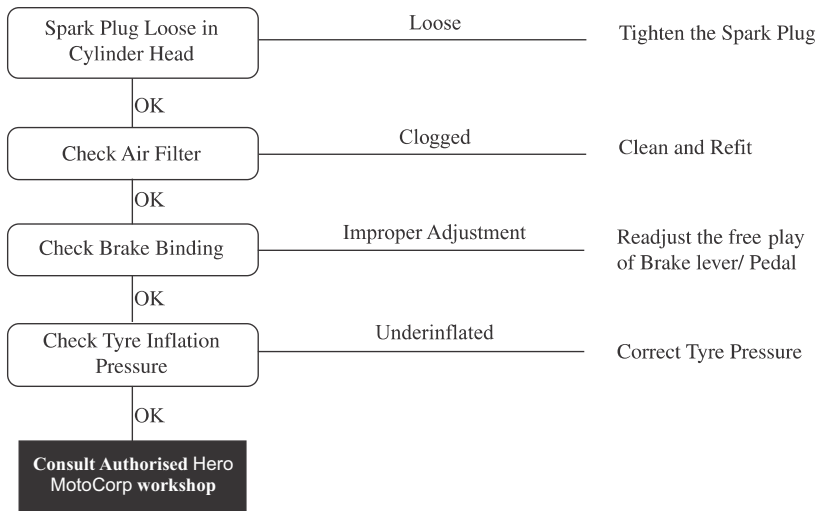

4. ELECTRICAL SYSTEM

Feeble Horn Sound or No Light

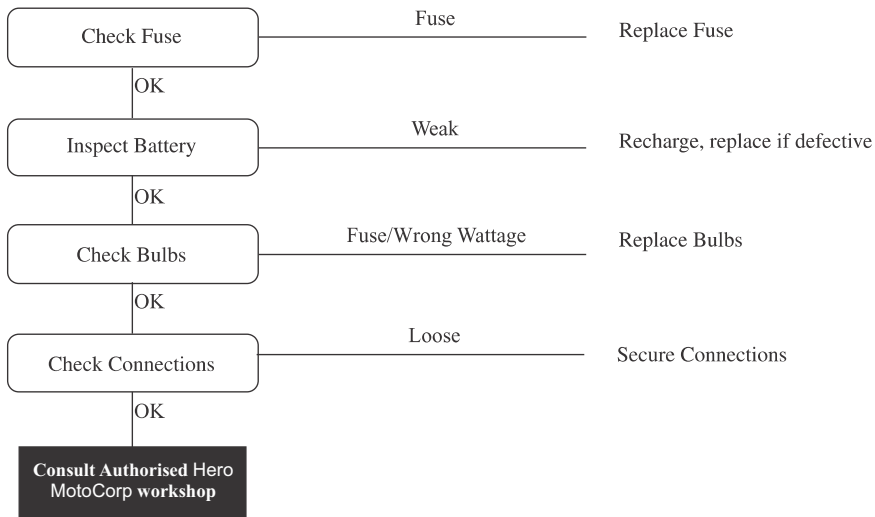

ROAD SIGNS



Mandatory signs: These road signs inform drivers/riders of the traffic rules that apply on a certain stretch of road, thereby instructing them on how to drive/ride. Mandatory signs are distinguished by the bright red circle with black and blue markings. It is imperative that all riders follow these signs as they help avoid accidents. Their violation can be penalised under the Motor Vehicle Act.

Mandatory



Stop



Give way



One way



No horn



No bicycles



No automobiles



No hand cart



No pedestrians



No right turn



No 'U' turn



Overtaking prohibited



Speed limit



No stopping or standing



No parking



Length limit



Height limit



Restriction ends



Compulsory-ahead only



Compulsory-turn left



Compulsory-right ahead



Compulsory-ahead or turn right



Compulsory-keep left



Compulsory-bicycle track



Compulsory-sound horn



Cautionary

Cautionary Signs: These signs inform the driver/rider of the road conditions ahead. Cautionary signs therefore serve as a warning. They are usually in a red triangle with black pictures on a white background. Illustrations, diagrams and symbols are used to forewarn about dangers ahead. Cautionary road signs are as important as mandatory signs. However, the violation of cautionary signs does not attract a penalty.



Right hand curve



Right reverse bend



Incline ahead



Narrow road ahead



Narrow bridge



Pedestrian crossing



School ahead



Gap in median



Cross road



Men at work



Roundabout




Hump Road



Informatory

Informatory Signs : These are facility signs that provide important information about road directions or maps of specific destinations. On highways, they provide information about the location of public telephones, restaurants, hospitals, parking, petrol pumps, resting-places and more. These signs are usually rectangular, with black or white pictures on a blue background.



Re-assurance sign



Public Telephone



Petrol Pump



Hospital




First Aid Post



Eating Place



Light Refreshment



Destination Sign



Place identification sign



Resting place



No through road



No through side road



Park this side



Parking both sides



Towstand

Signs and Signals are language of the road. Learn them, respect them.



Hero MotoCorp Ltd.

WARRANTY

SCOPE OF WARRANTY

Hero MotoCorp Ltd. (hereinafter called 'Hero MotoCorp') warrants its **Achiever** vehicles, assembled/manufactured in its Plants and sold through its channel partners, to be free from any defect-both in material and workmanship, under normal use and conditions, subject to the following terms & conditions.

Terms & conditions

- a) **Achiever** vehicle is warranted for a period of **5 years or 70000 Km**, whichever is earlier, from the date of purchase.
- b) It is advised that the purchaser avails all free and paid services from the Hero MotoCorp's authorized workshop as per the recommended schedule, to be eligible for warranty benefits. Each paid service should be availed within 90 days from the date of previous service or as per the recommended schedule, whichever is earlier.
- c) If any problem is observed in **Achiever** vehicle, Hero MotoCorp's only obligation/ liability is to repair or replace that part/those parts which is/are considered to be the cause of such problem, provided however that such problem has not resulted due to misuse/improper handling etc. of the vehicle. Any **Achiever** vehicle needing repair should be brought along with owner's manual to Hero MotoCorp's authorized workshop for necessary inspection and carrying rectification job.



Hero MotoCorp Ltd.

LIMITATIONS OF WARRANTY

THE WARRANTY SHALL NOT APPLY—

- (1) If all free services/paid services/oil top-ups are not availed as per the recommended schedule at Hero MotoCorp's authorized workshop.
- (2) If any other engine oil which is non compatible with product is used other than SAE 10W30 SL Grade (JASO MA2).
- (3) To normal wear & tear components including (but not limited to) brake shoes/pads, clutch plates, drive chain & sprockets, bulbs, electrical wiring, filter, spark plug, fasteners, shims, washers, oil seals, gaskets, rubber parts, bush, rubber bellows, plastic parts breakage and wheel rim for misalignment/bend.
- (4) If additional wheel(s) is/are fitted and/or any other modification carried out/unauthorized accessories fitted which shall be responsible for malfunction/deterioration of the vehicle.
- (5) If **Achiever** vehicle has been used in any competitive events like races or rallies or for any commercial purposes as taxi etc.
- (6) To any damage on vehicle's painted surface cropping due to industrial pollution or other external factors.
- (7) For normal phenomena like noise vibration, oil seepage etc., which do not affect the performance of the vehicle.
- (8) To any damage caused due to usage of improper oil/grease, non-genuine parts.
- (9) If any defect crops or repairs needed as a result of using adulterated fuel.
- (10) If any maintenance/repairs required due to bad road conditions or misuse of **Achiever** vehicle.
- (11) If any defect crops or repairs needed as a result of **Achiever** vehicle meeting to some accident.
- (12) For consumables like oil, grease, gasket etc to be used during free services and/or warranty repairs.
- (13) To any part of the **Achiever** vehicle which has been tampered or repaired in such a manner which has resulted in malfunction of the vehicle.
- (14) For **Achiever** vehicle not used in accordance with the guidelines given in this Owner's Manual.
- (15) To proprietary items like Tyres, Tubes, Batteries etc, as they are subjected to the warranty terms & conditions of respective manufacturers and directly handled by them only.
- (16) Any defect(s) developing on account of external factors such as environmental factors; including but not limited to fading/peeling/rusting of paint and/or stripes and/or plated parts, seat leather tearing & cracking, aluminium parts oxidation and cracking & discoloring of control switches etc.

Decision regarding warranty settlement shall be taken by Hero MotoCorp and the same shall be final and binding on all concern.

Subject to DELHI JURISDICTION only.



Hero MotoCorp Ltd.

EMISSION WARRANTY

Scope of warranty

Hero MotoCorp Ltd. Warrants all its vehicles, assembled/manufactured at its various Plants and sold through its Authorised dealers, to comply with emission standards as specified in S.No. 5 of table in item(i) of sub rule (2) of Rule 115 of Central Motor Vehicles Rules, 1989, which stipulates that "Idle CO (Carbon monoxide) emission limit for all two wheeled petrol driven vehicles shall not exceed 3.0 percent by volume and HC (Hydro Carbon) 3000 ppm, subject to following terms & conditions.

Terms & conditions

- a) The emission warranty shall be applicable in India and shall remain valid for a period of 3 years or 30000 kms, whichever occurs earlier, from the date of vehicle purchase.
- b) In case any defect is observed in any emission-related component, Hero MotoCorp only obligation/liability shall be to repair and/or replace those part (s) which is/are considered to be the cause of non-compliance with the emission standards.
- c) The emission warranty shall be applicable only to those vehicles, which are being regularly maintained at Hero MotoCorp Authorised Dealers/Service Points in accordance with the maintenance schedule provided in the owner's manual.
- d) The customer should follow the recommended parts replacement as per the maintenance schedule in order to avail the emission warranty.
- e) If any part (s) related to emission characteristics of the vehicles is/are tampered and/or repaired by unauthorised person/workshops etc, then the emission warranty shall stand cancelled.
- f) Any part (s) suffering wear and tear under the normal course of running shall not be covered under the emission warranty. Therefore, all such parts should be replaced by the customer from time to time, on payment basis, as per the maintenance schedule provided in owner's manual and dealer's advice.
- g) It is recommended to avail the services as per the recommended schedule to be eligible for the emission warranty benefits. Please ensure that each paid service is availed within 90 days from the date of previous services or as per the recommended schedule, whichever is earlier. All service details should be completely filled by the dealer, in the **Service Record Sheet** given in the owner's manual.
- h) It is mandatory to obtain a PUC certificate from the Authorised PUC center. In case of non-compliance with the emission standards please contact the channel partner/authorised workshop immediately alongwith the previous OK certificate, for the necessary rectification. The manufacturer or the dealer is not responsible for any penalty levied on you on account of non-compliance with the emission standards.
- i) All decisions regarding emission warranty settlement shall be taken by Hero MotoCorp Ltd. and shall be final binding on all concerned.

Subjected to Delhi jurisdiction only.



WHAT ARE THE BENEFITS OF HERO MOTOCORP GENUINE SPARE PARTS ?

- ▶ **Assures long life**
- ▶ **Ensures economy for a long time**
- ▶ **Safety of vehicle and rider**
- ▶ **Peace of mind**
- ▶ **Value for money**
- ▶ **Assured quality**



CONSEQUENTIAL DAMAGES ON USING NON-GENUINE PARTS

Clutch Plate	▶ Material used is inferior ▶ Damages other parts of clutch like, clutch center and outer clutch ▶ Affects fuel efficiency ▶ Poor acceleration
Cam Chain Kit	▶ Poor performance ▶ Reduced life
Gasket Cylinder Head	▶ Improper sealing ▶ Engine knocking ▶ Leads to leakage and smoky exhaust ▶ Higher emission level



CONSEQUENTIAL DAMAGES ON USING NON-GENUINE PARTS

Element Air Cleaner	▶ Improper air filtration resulting in premature engine failure ▶ Affects fuel efficiency ▶ Poor engine performance
Spark Plug	▶ Frequent stalling of engine ▶ Higher emission level ▶ Poor engine performance ▶ Affects fuel efficiency
Brake Pads / Shoes	▶ Poor braking efficiency ▶ Rider safety - an issue ▶ Discs / Drum wear out, resulting in subsequent repair cost
Chain Sprocket Kit	▶ Noisy Operation ▶ Failure of chain can cause fatal accident

ZONAL/REGIONAL/AREA OFFICES

For any of your service related query/requirements you may contact the respective Zonal/Regional/Area Offices

CENTRAL ZONE

Hero MotoCorp Ltd., No. 209-210, Ganpati Plaza, M.I. Road, Jaipur-302001, (Rajasthan).

Tel: +91 141 2389031, +91 141 2389156, E-mail: jaipur@heromotocorp.com

Hero MotoCorp Ltd., Office No. 705-706, 7th Floor, Fun Square, Durga Nursery Road, Udaipur -313001 (Rajasthan).

Tel: +91 0294-2980578, 79, E-mail: udaipur@heromotocorp.com

Hero MotoCorp Ltd., Office. No.401, 4th Floor, Offizo, Magneto Mall, Labhandi, G.E. Road, Raipur -492 001, (Chhattisgarh)

Tel: +91-771-4034749, E-mail: raipur@heromotocorp.com

Hero MotoCorp Ltd., Third Floor, Alankar Palace, Plot No. 11, Zone II, M.P. Nagar Bhopal-462011, India.

Tel: +91-755-4203160, 2553697, 4272429, 2550086, E-mail: bhopal@heromotocorp.com

Hero MotoCorp Ltd., Maloo-01, 601-602, 6th Floor, Plot No. 26C, Scheme No. 94, Ring Road, Indore, M.P.-452010,

Tel: +91-731-4978269, 70, E-mail: indore@heromotocorp.com

EAST ZONE

Hero MotoCorp Ltd., Flat No: 1002. 10th Floor, Martin Burn Business Park, BP3, Salt Lake, Sector-V, Kolkata-700091,

West Bengal, India. Tel: +91-33-44026841, +91-33-44026830, E-mail: kolkata@heromotocorp.com

Hero MotoCorp Ltd., Odysa Business Centre, Plot no. 30, 30/982, 172/1030, 4th Floor Cuttack, Bhubaneswar highway road,

Rasulgarh, Bhubaneswar-751010, Odisha, India. Tel: +91-674-2581161, 62, 63, 64, E-mail: bhubaneswar@heromotocorp.com

Hero MotoCorp Ltd., Yash Heights, 1st Floor Bariatu Road, Above Basudeb Tata Showroom Ranchi-834009, Jharkhand,

India. Tel: +91-651-2542222, 2542224, 2542225, E-mail: ranchi@heromotocorp.com

Hero MotoCorp Ltd., Sai Corporate Park, A Block, 6th Floor, Rukanpura, Bailey Road Patna, Bihar - 800014

Tel: +919334280555/7004569648 E-mail: patna@heromotocorp.com

NORTH ZONE

Hero MotoCorp Ltd., 3rd Floor, Tower-A, DLF Centre Court, Sector-42, Golf Course Road, DLF Phase 5,

Gurgaon -122002, Haryana, India. Tel: 0124-4754800, E-mail: delhi@heromotocorp.com

Hero MotoCorp Ltd., 602, 6th Floor, Office Tower-1, Plot No BW58, Logix City Center, Sector-32, Noida - 201301.

Tel: 0120-4631000, E-mail: noida@heromotocorp.com

Hero MotoCorp Ltd., S.C.O-367-368, First Floor, Sector-34A, Chandigarh-160022, India.

Tel: +91-172-2623773, 2623774, 2623775, E-mail: chandigarh@heromotocorp.com

Hero MotoCorp Ltd., Kapoor Towers, Plot No- 284, 15-B, Rajpur Road, Dehradun-248001, India.

Tel: 0135-2714661, 2713662, 2714663, E-mail: dehradun@heromotocorp.com

ZONAL/REGIONAL/AREA OFFICES

NORTH ZONE

Hero MotoCorp Ltd., Summit Building (10th Floor) Plot No TCG 3/3 Vibhuti Khand, Gomti Nagar Lucknow – 226010, India. Tel: 0522-4006594, E-mail: lucknow@heromotocorp.com

Hero MotoCorp Ltd., C-19/134-B, Third Floor I.P Grand, Lallapura, Sgra, Varanasi, Uttar Pradesh – 221010, India. Tel: +91-0542- 2390949, 2390241, E-mail: varanasi@heromotocorp.com

SOUTH ZONE

Hero MotoCorp Ltd., SKAV 909, 3rd Floor, 9/1, Lavelle Road, Bangalore-560001, India. Tel: +91-80- 46881000, E-mail: bangalore@heromotocorp.com

Hero MotoCorp Ltd., 3-6-289, 3rd Floor, Kareem Manzil, Hyderguda, Hyderabad-500029, India. Tel: +91-40-23223735, 23223727, 23223570, E-mail: hyderabad@heromotocorp.com

Hero MotoCorp Ltd., 9th Floor Seshachalam Centre No.636/1, Anna Salai, Nandanam, Chennai-600035, India. Tel: +91-44- 24340974, 24340977, 24340978, E-mail: chennai@heromotocorp.com

Hero MotoCorp Ltd., 6-A, DD Trade Tower, (6th Floor), Kaloor-Kadavanthra Road, Kaloor-682 017, Kochi-682017, India. Tel: +91-0484- 4039646 -7, E-mail: cochin@heromotocorp.com

Hero MotoCorp Ltd., No 1547, 2nd Floor Classic Towers, Trichy Road, Coimbatore – 641018 Tel: +91-422-2200058, 2200061, E-mail: coimbatore@heromotocorp.com

Hero MotoCorp Ltd., First Floor VA Kalburgi Mahalakshmi Mansion, Mandakini Hospital Road, New Cotton Market, Hubli-580029, India. Tel: 0836-2269717, 2361038, E-mail: hubli@heromotocorp.com

Hero MotoCorp Ltd., D.NO. 54-11-18 E, 2nd Floor, Sai Odessey Building, Opp Executive Club, Near NH-5, Vijayawada-520008, Andhra Pradesh, India. Tel: +91-866-2546859, 2546860, E-mail: vijayawada@heromotocorp.com

WEST ZONE

Hero MotoCorp Ltd., Chrome Building, Sr. No. 33, Hissa-A-1/1/2, Plot – 2, Viman Nagar Avenue 2, Nagar Road, Pune-411014, India. Tel: +91-020-71903500, E-mail: pune@heromotocorp.com

Hero MotoCorp Ltd., 603-604, Gunjan Tower, Off Alembic Gorwa Road, Baroda-390023, India. Tel: +91-265-2286569/2286570, E-mail: baroda@heromotocorp.com

Hero MotoCorp Ltd., Ground Floor, Block No.2, Vishnu Vaibhav Complex, 222, Palm Road, Civil Lines, Nagpur-440001, India. Tel: +91-712-2545990-91, E-mail: nagpur@heromotocorp.com

Hero MotoCorp Ltd., Astarc House-Third Floor, 76/79, Makwana Lane, Off. Andheri-Kurla Road, Andheri (East), Mumbai-400059, India. Tel: +91-22-28562071, E-mail: mumbai@heromotocorp.com

Hero MotoCorp Ltd., 604, Kings Plaza, Astron Chowk, Rajkot, Gujarat – 360001 Tel: 0281-2460622, 2460623, E-mail: rajkot@heromotocorp.com