
PROVIEWSIGNAGE

TV APP GUIDE

Your screens, set up and running

Step-by-step instructions for installing, pairing and looking after the PROVIEW SIGNAGE app on Android TV, Google TV and Fire TV.

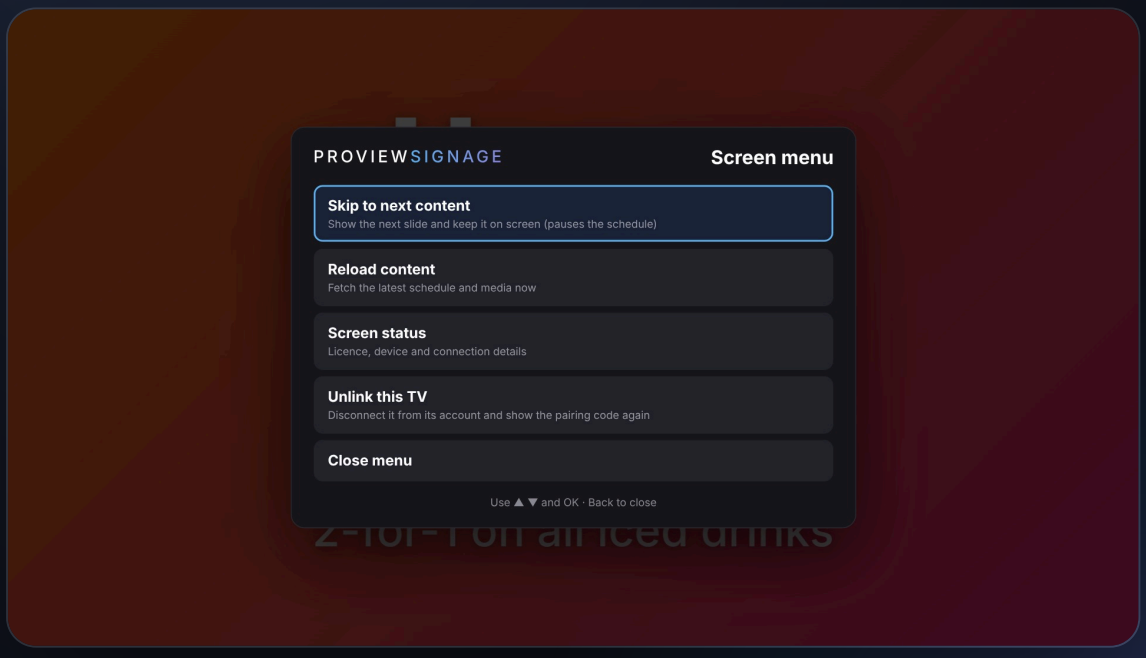

www.proviewsignage.co.uk · app.proviewsignage.co.uk

Support **020 8935 5495** · November 2026 (updated 10 Nov)

Contents

Everything you need to set up the TV app and use the screen menu with the remote.

01	Set up a new TV	Get the PROVIEW SIGNAGE app running on an Android TV, Google TV or Fire TV stick.
02	What the TV does on its own	Once paired, the TV needs no attention.
03	Open the TV menu with the remote	The screen menu lets staff fix common problems without a computer.
04	TV menu options	What each item in the screen menu does.
05	No internet on the TV	If the TV cannot reach the internet when it starts.
06	Portrait (sideways) TVs	For TVs mounted on their side.
07	Sleep hours on the TV	What the TV does when its sleep hours start and end.
08	Updating the TV app	Keep TVs on the newest version.


How to use this guide. Each section is a set of numbered steps. Words in **bold** are the buttons and menu names you will see on screen. Yellow boxes are tips. The pictures show example content.

1 Set up a new TV

Get the PROVIEW SIGNAGE app running on an Android TV, Google TV or Fire TV stick.



The pairing screen on the TV

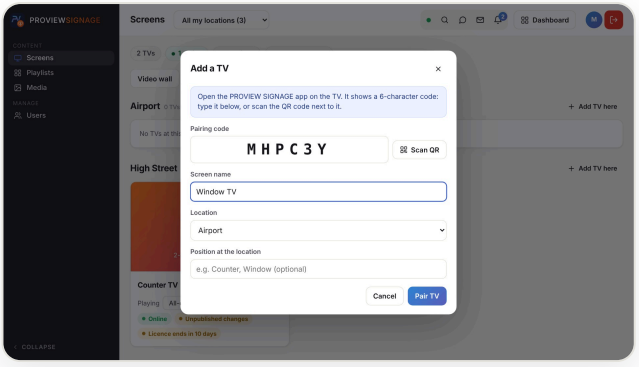

Screens → Add a TV in the dashboard

1. Connect the TV or TV stick to the internet (Wi-Fi or cable).
2. Install the PROVIEW SIGNAGE TV app. On the TV, install the free **Downloader** app (Fire TV: search for it on the home screen; Android TV: Google Play Store).
3. Fire TV only: go to **Settings** → **My Fire TV** → **Developer options** → **Install unknown apps** and turn on Downloader.
4. Open Downloader, type **app.proviewsignage.co.uk/tv.apk**, press **Go**, then **Install** and **Open**.
5. Open the app. It goes full screen and shows **Pair this screen** with a 6-character code.
6. On your phone or computer, sign in to the dashboard and go to **Screens** → **Add a TV**.
7. Type the code from the TV (or press **Scan QR**), give the TV a name (e.g. “Counter TV”), then press **Pair TV**.
8. Within a few seconds the TV shows “paired”. It plays as soon as you publish a playlist to it.

Tip: A brand-new TV gets a free 3-day trial licence when it is first paired.

Tip: The code changes every hour while the TV is waiting, so always use the one on screen now.

2 What the TV does on its own

Once paired, the TV needs no attention.




A paired TV playing its playlist

1. It starts the player automatically when the TV is switched on.
2. It downloads every picture and video before playing, so nothing freezes. A loading bar shows progress the first time.
3. It keeps a copy of everything, so it carries on playing if the internet drops.
4. It follows your schedule by itself: different playlists at different times and days.
5. It picks up changes as soon as you press **Publish**. Small updates show an “Updating” badge in the corner while new files download.
6. It reports back every few minutes: online or offline, and what is playing.

3 Open the TV menu with the remote

The screen menu lets staff fix common problems without a computer.

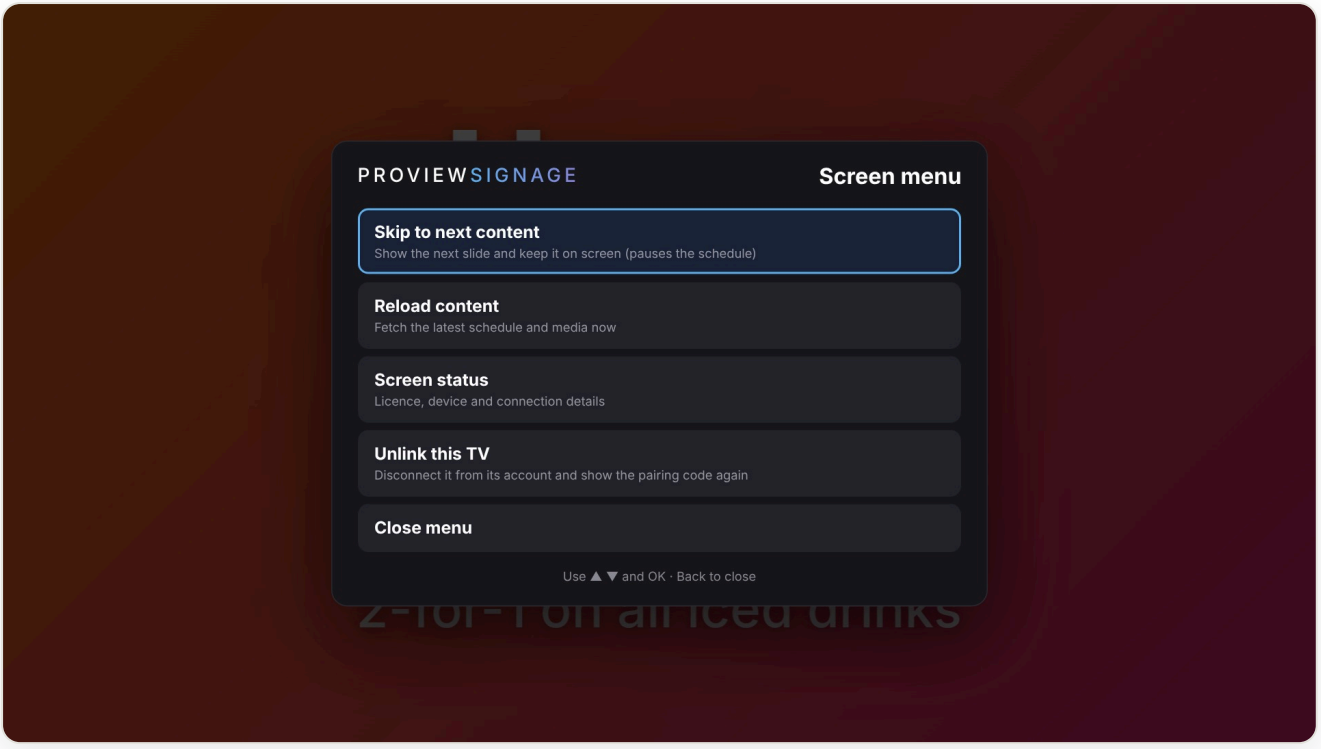


The screen menu


1. Press the **Menu** or **Settings** button on the remote, or press **Back** three times quickly.
2. Use the arrow buttons to move and **OK** to choose. **Back** closes the menu.
3. The menu closes by itself after a minute without a key press.

4 TV menu options

What each item in the screen menu does.

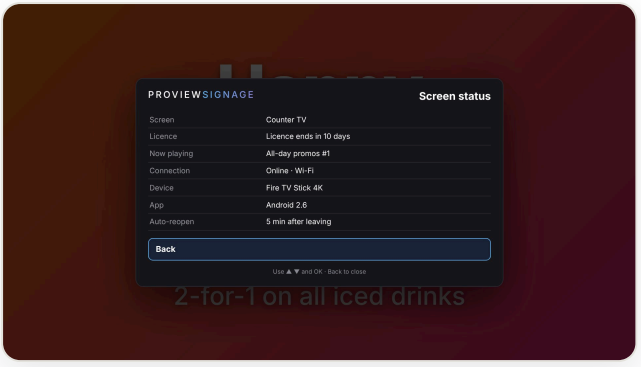

Screen status

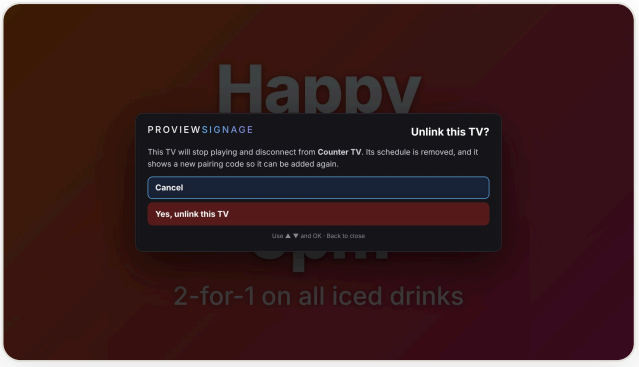

Unlink this TV asks you to confirm

1. **Skip to next content**: show the next slide and keep it on screen: the playlist and schedule pause (every area of a split layout moves on; on a video wall every TV moves on together). Press it again for the slide after. The dashboard shows **Schedule paused on TV**.
2. **Reactivate schedule**: appears after a skip. Goes back to the normal playlist and schedule.
3. **Reload content**: fetch the latest schedule and media now.
4. **Screen status**: the TV's name, licence, what is playing, connection, device and app version.
5. **Wi-Fi & network settings**: opens the TV's network settings to join a different Wi-Fi. The player reopens itself after a few minutes.
6. **Exit to home screen**: leave the player to change other TV settings. It reopens after the set number of minutes.
7. **Exit until next restart**: close the player until the TV is switched off and on again.
8. **Check for app update**: install the newest version of the TV app.
9. **Allow automatic reopening**: shown when the TV still needs the "Display over other apps" permission, so the player can reopen itself.
10. **Unlink this TV**: disconnect the TV from its account. Choose **Yes, unlink this TV** to confirm. It goes back to the pairing code page and can be added again.

5 No internet on the TV

If the TV cannot reach the internet when it starts.

1. The app shows an offline message. Content already downloaded keeps playing.
2. Press **OK** on the remote to open the Wi-Fi settings and reconnect.
3. The player comes back on its own once the connection works.

6 Portrait (sideways) TVs

For TVs mounted on their side.

1. Choose **Portrait** for the playlist in the editor (step 1).
2. The app follows the TV's own orientation setting automatically.
3. If the picture still comes out sideways, open the TV in the dashboard, press the pencil next to its name and set **Screen rotation**.

7 Sleep hours on the TV

What the TV does when its sleep hours start and end.

1. At the switch-off time the screen goes black and the content stops.
2. If the TV has allowed it, the app also switches the TV stick off, and most TVs switch off with it. At the switch-on time both wake up and the content starts again.
3. To allow it (once per TV): press **Menu** on the remote, choose **Allow switching the TV off**, then **Activate** / **Allow** on the next screen. Until then the TV shows a black screen during sleep hours.
4. Need the screen during sleep hours? Press **OK** on the remote: it wakes for 1 hour, then goes back to sleep.
5. If someone switches the TV on during sleep hours and presses nothing, it goes back to sleep after a minute.

Tip: Some TVs don't switch themselves off or on with the TV stick (HDMI-CEC, often called Anynet+, SimpLink, Bravia Sync or CEC in the TV's settings). Turn that setting on in the TV for the best result.

Tip: Fire TV sticks may not allow apps to switch them off. They use the black screen instead.

8 Updating the TV app

Keep TVs on the newest version.

1. When a new version is available, the TV's page in the dashboard shows **Update app to ...** (and **App x.x** ✓ when it is up to date).
2. Press it and the TV downloads and installs the update. Some TVs ask for a one-time OK on screen.
3. You can also choose **Check for app update** in the TV menu.

PROVIEWSIGNAGE

Need a hand?

Our team is happy to help with setup, content and anything else.
The Help page in the dashboard has these guides too, with search.

☎ 020 8935 5495 **www.proviewsignage.co.uk**