

Drawing and model handover spec

What the CAD and SketchUp team prepares so the interactive presentation can be built from the real drawings: file formats, layer and tag set-up, export settings, file names and checks.

PREPARED BY
Officebanao design team


FOR
CAD, 3D and visualisation team

VERSION
1.0 · 6 October 2026


STATUS
For action

- 01 How your files are used
- 02 CAD layout (AutoCAD → DXF)
- 03 SketchUp axo exports
- 04 Renders for the click-to-view viewer

- 05 Content and brand
- 06 How the files become the presentation
- 07 Handover and next steps
- A-B Command reference and templates

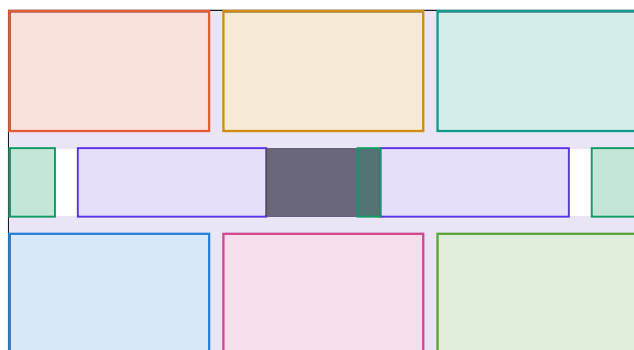

CAD LAYOUT · DXF

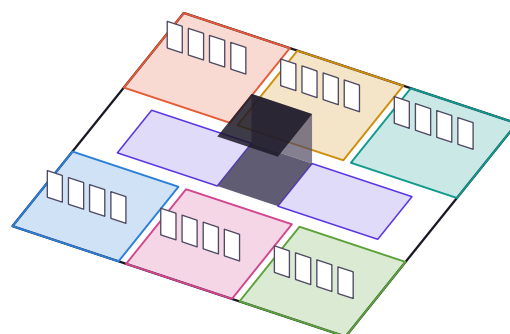

SKETCHUP AXO · PNG SET

AUTOCAD

CAD layout

- Final layout as **DXF** (AutoCAD 2018), mm
- New **PRES-*** layers drawn on it
- PDF plot of the same layout
- Layer sheet and block map

SKETCHUP

Axo image set

- One **parallel-projection** camera
- Hero, layer and zone PNGs
- 6000 px wide, transparent background
- Reference-marker PNG

RENDERS AND CONTENT

Everything else

- **Light + dark** JPG per space type
- Names, teams and colours sheet
- Due-diligence and fire notes
- Acko palette, fonts and logos

01 How your files are used

The presentation is a single interactive HTML page, presented live with a clicker or browsed by the client on their own. It does not paste in screenshots of drawings. It reads your drawing data and builds every view from it.

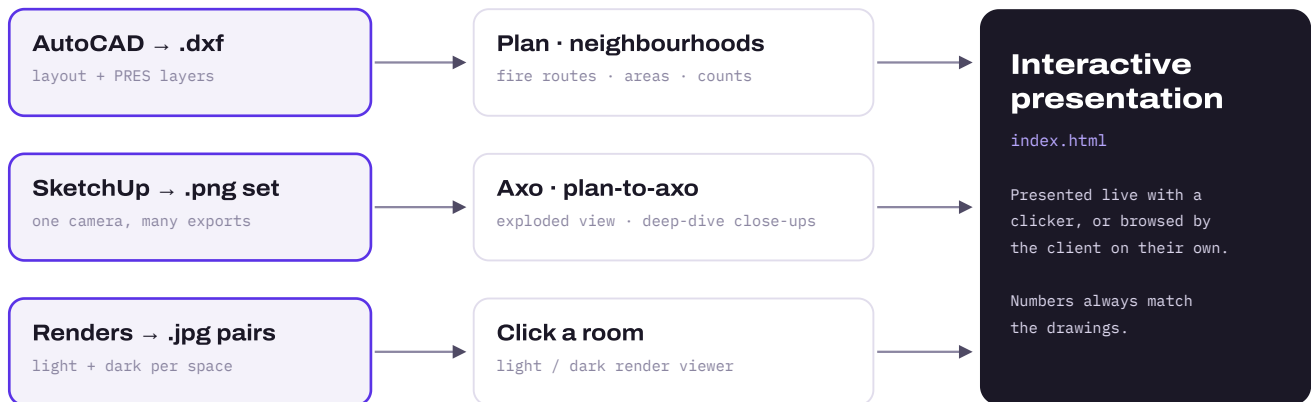


Fig 1 Each input feeds specific parts of the presentation.

Because everything is read from the files, the numbers in the presentation (areas, desk counts, route lengths, seats) always match the drawings. A design change later only needs fresh exports with the same names. The trade-off is that the files need some preparation, which is what this document sets out.

1.1 Delivery folder

Share one folder (zip or drive link) laid out like this. Use these file names exactly: lower case, no spaces. Skip anything marked optional that you don't have.

```
Acko-Presentation-Inputs/
├─ 01-cad/
│   ├── acko-layout.dxf          final layout + PRES layers (section 02)
│   ├── acko-layout.pdf          vector plot of the same layout
│   ├── layer-sheet.xlsx         what each existing layer holds (2.2)
│   └─ block-map.xlsx            furniture block names → items (2.7)
├─ 02-sketchup/
│   ├── axo-full.png             hero axo (section 03)
│   ├── axo-1-shell.png ... axo-5-ceiling.png
│   ├── axo-zone-n1.png ... axo-zone-n6.png, axo-zone-ts.png
│   ├── axo-ref.png              reference markers only
│   ├── top-ref.png              optional check view
│   └─ model.glb or model.dae    optional 3D export
├─ 03-renders/
│   ├── meeting-light.jpg, meeting-dark.jpg, ... section 04
│   └─ n1-huddle-light.jpg, ... optional per-neighbourhood versions
└─ 04-content/
    ├── neighbourhoods.xlsx      IDs, names, teams, colours (05)
    ├── notes.xlsx               due diligence, site, fire
    ├── photos/                  site photos for due-diligence pins
    └─ brand/                    palette, fonts, logos
```

WHO DOES WHAT

The CAD team owns section 02, the SketchUp team owns section 03, the visualisation team owns section 04 and the project lead owns section 05. Sections 06 and 07 are background for everyone.

02 CAD layout (AutoCAD → DXF)

The plan, the neighbourhood boundaries, the fire escape routes, every area and every furniture count come from one DXF file. You keep your drawing as it is and add a few presentation layers on top.

2.1 File format and export

SETTING	WHAT TO DO	IN AUTOCAD
Format	DXF, AutoCAD 2018 version	SAVEAS → Files of type: <i>AutoCAD 2018 DXF (*.dxf)</i>
Content	Model space only, holding just the floor being presented. Paper-space layouts are ignored.	Move other floors or sheets out of model space
Units	Millimetres	UNITS → Insertion scale: Millimeters
Elevation	Everything flat at Z = 0	FLATTEN (Express Tools), select all
Xrefs	Bound into the file. Nothing attached.	XREF palette → right-click → Bind
Clean-up	Purge unused items, fix errors, remove duplicate lines	PURGE (all, nested) · AUDIT (fix: Yes) · OVERKILL
Reference plot	Vector PDF of the same layout, for checking	PLOT → DWG To PDF.pc3, A1 or A0

WHY DXF AND NOT DWG

We read the drawing with an open DXF reader. DWG is a closed format that we can't open directly. A DXF carries the same geometry, layers and blocks.

2.2 Your existing layers

Keep your working layers exactly as they are. We restyle the drawing layer by layer so it matches the presentation's look in both its light and dark themes, so we need to know what each layer holds. Fill in `layer-sheet.xlsx` for every layer that has geometry on it:

LAYER NAME	CONTENTS	CATEGORY (walls · glazing · doors · columns · furniture · ceiling · finishes · text · hide)
A-WALL-FULL	Full-height walls	walls
A-GLAZ-PART	Glass partitions	glazing
I-FURN-WS	Workstation blocks	furniture
S-COLS	Structural columns	columns
A-DIMS	Dimensions	hide

Example rows only; use your own layer names. Dimensions, hatches, grids and title blocks can stay in the file. Mark them *hide*.

2.3 New presentation layers (PRES-*)

Add these layers on top of the layout. They hold simple closed polylines and text that tell the presentation where things are. Colour, line type and line weight don't matter; we restyle everything.

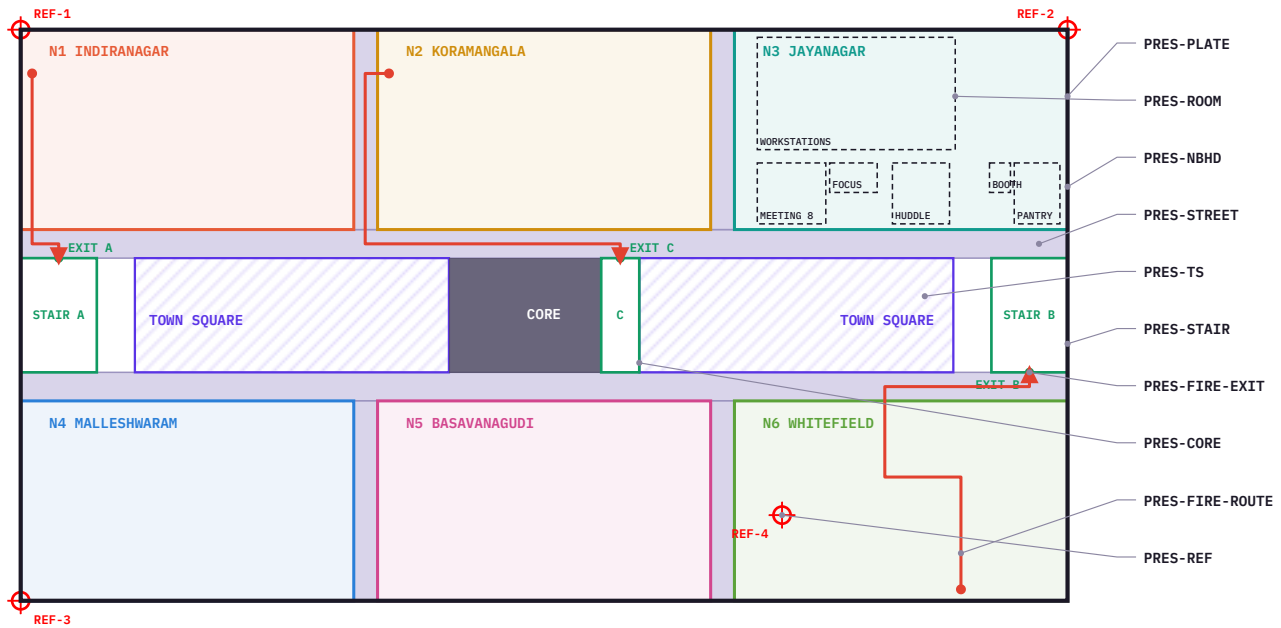


Fig 2 What the PRES layers look like on a floor plate (sample geometry). Each colour here is a separate layer.

LAYER	DRAW	TEXT INSIDE	USED FOR	
PRES-PLATE	1 closed polyline: usable floor edge (inside face of façade)	–	Plate outline, total area	REQUIRED
PRES-CORE	Closed polylines: core, lift banks, toilets, shafts, AHU rooms	CORE, LIFTS, WC, SHAFT, AHU	Shell drawing, core area	REQUIRED
PRES-STAIR	1 closed polyline per fire stair	STAIR A, STAIR B ...	Exits, distance rings	REQUIRED
PRES-FIRE-EXIT	Text with its insertion point at the centre of each exit door	EXIT A, EXIT B ...	Exit tags, route end points	REQUIRED
PRES-FIRE-ROUTE	1 open polyline per escape route, from the far point to the exit door (see 2.6)	Optional zone name near the start	Animated arrows, measured lengths	REQUIRED
PRES-STREET	Closed polylines for Main Street and each lane	MAIN STREET, LANE	"Routes become streets" step, circulation area	REQUIRED
PRES-NBHD	1 closed polyline per neighbourhood	ID and name: N1 INDIRANAGAR	Colour zones, labels, areas, counts	REQUIRED
PRES-TS	Closed polyline(s) for the Town Square	TOWN SQUARE	Town Square highlight and area	REQUIRED
PRES-ROOM	1 closed polyline per room or space (see 2.8 for keywords)	Keyword + seats: MEETING 8	Click areas for renders, kit lists	REQUIRED
PRES-REF	4 small circles at the reference points (see 3.5)	REF-1 ... REF-4	Locking the plan onto the axo	REQUIRED
PRES-DD	Text number at each due-diligence finding	1, 2, 3 ...	Numbered pins on the plan	OPTIONAL
PRES-SITE	A north line (drawn from south to north) and short notes at views, noise, arrival	NORTH, VIEW, ROAD, ARRIVAL	Site-understanding overlays	OPTIONAL

2.4 Drawing rules for every PRES layer

1. **Closed means closed.** Draw with `PLINE` and finish with **C** (Close), or set `Closed = Yes` in Properties. A polyline whose last point only touches its first point is not closed. Check with `LIST`; it must say "Closed".
2. **Polylines only** (LWPOLYLINE). No splines, regions, hatches or lines joined by eye. Arcs inside boundary polylines are fine; fire routes use straight segments only.
3. **One label per shape, inside the shape.** The text's insertion point must sit inside its polyline. We match each label to the polygon that contains it.
4. **No blocks.** Draw PRES geometry loose in model space, never inside blocks or groups.
5. **No overlaps** between shapes on the same layer.
6. **Fastest way to trace:** `BOUNDARY` (`B0`) with Object type = Polyline creates a closed polyline when you click inside an enclosed area. Then move the result to the PRES layer.

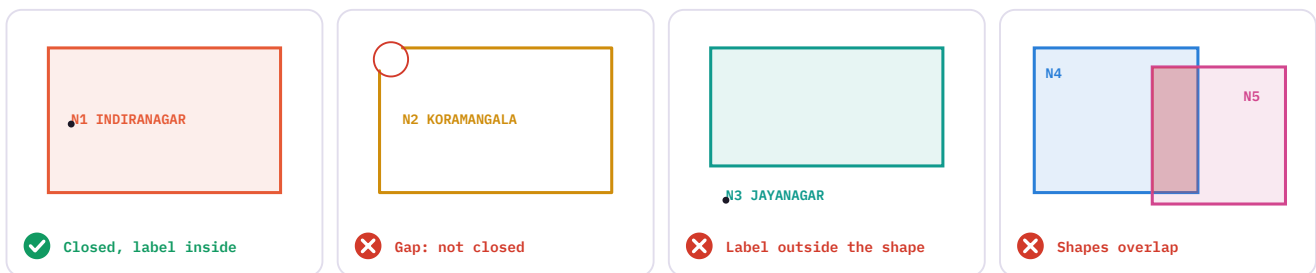


Fig 3 The four most common problems. Only the first will be read correctly.

2.5 Neighbourhood boundaries and areas

The neighbourhood, Town Square, street, core and stair polygons together tile the floor plate. Draw them so every part of the plate is covered once:

- Neighbourhood edges run along the **edge** of a street, not its centre line. Streets are polygons of their own.
- Polygons may share edges. They must not overlap.
- Small gaps such as wall thicknesses are fine. We report what's left as "walls and other".

From these polygons the presentation calculates each neighbourhood's area in sq ft, the area split (neighbourhoods, Town Square, streets, core), and which furniture and rooms belong to which neighbourhood.

IF THE BOUNDARIES AREN'T FINAL YET

Draw only `PRES-STREET`, `PRES-CORE`, `PRES-STAIR` and `PRES-TS`. We derive the neighbourhoods as the parcels left between them, which is the story the presentation tells, and send you a marked-up plan to confirm names and edges.

2.6 Fire escape routes

Each polyline on `PRES-FIRE-ROUTE` becomes an animated escape route. The line draws itself from its start, keeps flowing towards the exit, and ends in an arrowhead at the door. Its length is measured from the drawing and shown in metres at the start point, with a check against the permitted travel distance.

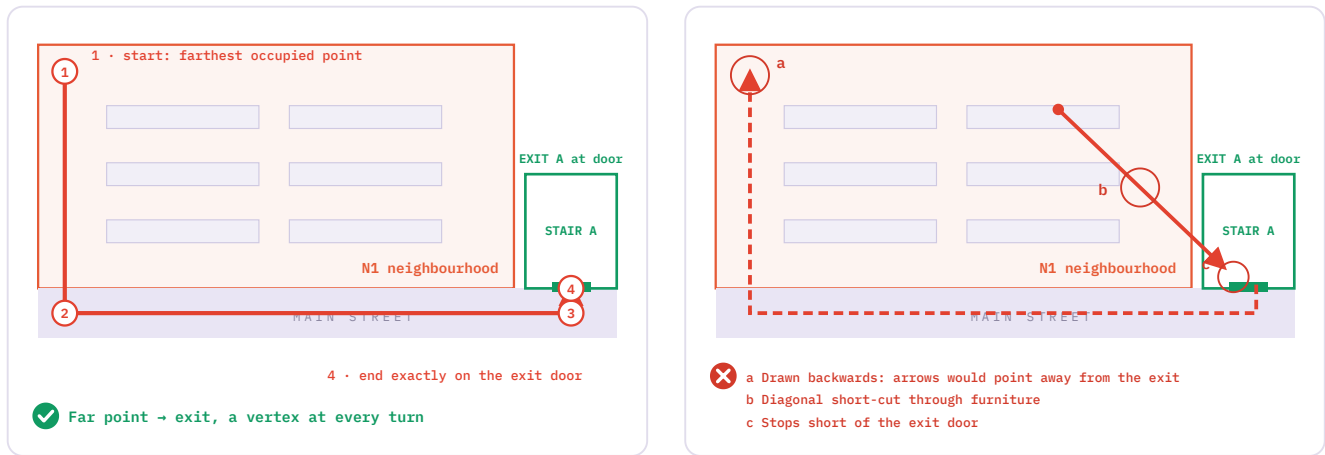


Fig 4 The drawing order sets the arrow direction. Left: correct. Right: three mistakes to avoid.

1. **Draw from the far point to the exit.** The first vertex is the farthest occupied point of the zone. The last vertex sits exactly on the exit door, at the same point as the **EXIT** text.
2. **Follow the real clear path** along aisles, lanes and Main Street. Put a vertex at every turn. No diagonal short-cuts through furniture or walls.
3. **At least one route per zone:** the longest route for each neighbourhood and for the Town Square. Add more if the fire plan shows them.
4. **Straight segments only.**
5. **Tell us the limit:** the permitted travel distance and its basis (for example NBC 2016 Part 4, and whether the floor is sprinklered). Each route is checked against it.

ALSO SEND

The fire consultant's egress plan as a PDF, if one exists. We cross-check the routes against it.

2.7 Furniture blocks and counts

Keep furniture as blocks. Don't explode them. The presentation counts block insertions inside each neighbourhood polygon, so the kit lists ("72 workstations, 6 focus pods...") and the totals come straight from the drawing. Send `block-map.xlsx` listing every furniture block:

BLOCK NAME	ITEM	COUNT IT?
WS-1200x600	Workstation	Yes
CAB-DESK-1800	Team lead desk	Yes
PB-1P	Phone booth	Yes
POD-FOCUS	Focus pod	Yes
LKR-6	Locker column, 6 lockers	Yes (counts as 6)
CH-TASK	Task chair	No

Example rows only. Dynamic blocks are fine; we read their base name. If one block represents several items (a 6-locker column), say how many.

2.8 Room keywords for PRES-ROOM

Start each room label with one of these keywords. Add the seat count after it where it applies (**MEETING 8**).

The keyword decides which render opens when the room is clicked.

KEYWORD	SPACE	RENDER KEY (SECTION 04)
WORKSTATIONS	Desk benches: one polygon per cluster, or one around the whole desk area	desk
CABIN	Team lead cabin	cabin
TOUCHDOWN	Touchdown or high bench	touch
FOCUS	Focus pod or quiet room	focus
BOOTH	Phone booth	booth
MEETING	Meeting room (add seats)	meeting
HUDDLE	Team huddle or lounge	huddle
PANTRY	Pantry point	pantry
RECEPTION	Reception and waiting	reception
TOWNHALL	Town hall or multi-purpose	townhall
BOARDROOM	Boardroom	board
CAFE	Café	cafe
WELLNESS	Wellness, first aid or parents' room	wellness

Other names (STORE, SERVER, IT) are allowed. They show on the plan but have no renders unless you send some.

2.9 CAD checklist

- ☐ Saved as AutoCAD 2018 DXF, units millimetres
- ☐ Model space holds only this floor, all at Z = 0
- ☐ Xrefs bound; PURGE, AUDIT and OVERKILL run
- ☐ All required PRES layers present
- ☐ Every PRES shape closed (LIST shows "Closed")
- ☐ One label inside every neighbourhood, Town Square and room polygon
- ☐ Neighbourhood IDs N1–N6 match the names sheet
- ☐ Fire routes run from the far point to the exit door
- ☐ Travel-distance limit and basis noted
- ☐ REF-1 to REF-4 placed, identical to SketchUp
- ☐ Furniture still in blocks; block map filled in
- ☐ Layer sheet filled in; PDF plot included

03 SketchUp axo exports

The axo is shown as a set of images from one fixed camera. Each export has different tags switched on. Because every image lines up exactly, the presentation can stack them, build the axo up layer by layer, pull the layers apart for the exploded view, and highlight one neighbourhood at a time.

WHY IMAGES AND NOT THE .SKP FILE

SketchUp files can't be opened outside SketchUp. Images from a fixed camera look exactly like your model, stay light enough for a laptop, and line up perfectly with each other. A 3D export is an optional extra (3.7).

3.1 Model set-up and tags

If the model was built on the imported CAD at the same origin and scale, keep it that way; it makes the alignment exact. Organise the model as groups with **two kinds of tags**: a **zone tag** on each zone group, and a **category tag** on the groups inside it.

Model		
└ Shell	group · tag SHELL	slab, columns, core, façade
└ N1 Indiranagar	group · tag NB-N1	
├ └ floor finishes	group · tag FLOOR	carpet, rugs, raised areas (optional)
├ └ partitions and glass	group · tag WALLS	walls, glass, doors, booths' shells
├ └ furniture	group · tag FURNITURE	all loose and fixed furniture, planters
├ └ ceiling	group · tag CEILING	rafts, baffles, lights (optional)
└ N2 ... N6	same pattern · tags NB-N2 ... NB-N6	
└ Town Square	group · tag TS	same four sub-groups
└ Streets	group · tag STREET	circulation floor finish (optional)
└ Reference markers	group · tag REF	4 red markers at floor level (3.5)

- Tag groups and components. Keep raw edges and faces **Untagged**.
- Nothing loose inside a zone group: every item sits in its FLOOR, WALLS, FURNITURE or CEILING sub-group.
- SketchUp hides an object when its own tag **or any parent's tag** is hidden. That is what lets one model give every export in 3.4 just by switching tags.

3.2 Camera and style

SETTING	VALUE	WHERE IN SKETCHUP
Projection	Parallel Projection. Mandatory.	Camera → Parallel Projection
View	Your chosen axo angle. Vertical edges stay vertical (orbit only, no roll).	Camera → Standard Views → Iso, then Orbit
Scene	Save the view as scene PRES-AXO . After this, never orbit, pan or zoom.	Window → Scenes → Add scene
Window	Keep the SketchUp window and trays the same size for every export	Don't open, close or resize trays between exports
Background	Sky and ground off	Styles → Edit → Background settings
Fog	Off	View → Fog
Shadows	On for axo-full.png only. Off for every other export.	Window → Shadows
Section cut	If the axo is a cutaway, keep the same section plane active in every export	View → Section Planes / Section Cuts

SETTING	VALUE	WHERE IN SKETCHUP
Style	The same style for every export	Window → Styles

WHY PARALLEL PROJECTION

A perspective camera distorts each part of the image differently, so separate layer images and CAD overlays could never line up. Parallel projection keeps every floor point in a fixed spot and keeps verticals vertical. That makes the stacking, the plan-to-axo move and the exploded view exact.

THE MOST COMMON MISTAKE

The export height follows the window's shape. Opening a tray or resizing the window between exports changes the framing, and the images no longer line up. Check that every PNG has exactly the same pixel size.

3.3 PNG export settings

FILE → EXPORT → 2D GRAPHIC → OPTIONS	VALUE
File type	PNG
Use view size	Off
Width	6000 px (height follows)
Anti-alias	On
Transparent background	On

TIP: ONE SCENE PER EXPORT

Create scenes `PRES-AXO-SHELL`, `PRES-AXO-WALLS` and so on from `PRES-AXO`, changing only the visible tags. Re-exporting after a design change then takes a few clicks. In each scene's properties, keep *Camera Location* and *Visible Tag* ticked.

3.4 Export list

All exports use scene `PRES-AXO`'s camera. ● means the tag is visible. Zone tags are NB-N1 to NB-N6 and TS.

FILE	SHELL	FLOOR	WALLS	FURN.	CEIL.	STREET	ZONE TAGS	REF	SHAD.	USED FOR
axo-full.png	●	●	●	●	opt.	●	all	–	●	Hero view, end of build-up
axo-1-shell.png	●	–	–	–	–	–	all	–	–	Base layer
axo-2-floor.png	–	●	–	–	–	●	all	–	–	Finishes layer (optional)
axo-3-walls.png	–	–	●	–	–	–	all	–	–	Walls rising
axo-4-furniture.png	–	–	–	●	–	–	all	–	–	Fit-out layer
axo-5-ceiling.png	–	–	–	–	●	–	all	–	–	Ceiling layer (optional)
axo-zone-n1.png	–	●	●	●	–	–	NB-N1 only	–	–	Highlight + deep dive
axo-zone-n2 ... n6	–	●	●	●	–	–	that zone only	–	–	Highlight + deep dive
axo-zone-ts.png	–	●	●	●	–	–	TS only	–	–	Town Square highlight
axo-ref.png	–	–	–	–	–	–	none	●	–	Alignment (3.5)

FILE	SHELL	FLOOR	WALLS	FURN.	CEIL.	STREET	ZONE TAGS	REF	SHAD.	USED FOR
top-ref.png	●	–	–	–	–	–	none	●	–	Optional check, Top view

`top-ref.png` is the only export with a different camera: Camera → Standard Views → Top, still in parallel projection, same width.

3.5 Reference markers (alignment)

For the plan-to-axo animation, the CAD plan has to land exactly on the axo floor, carrying the neighbourhood colours, fire routes, room click areas and labels with it. Four markers make that exact.

1. In CAD, place `REF-1` to `REF-4` on `PRES-REF`: three at outer corners of the floor plate and one at a column far from them. The four must not lie on one line.
2. In SketchUp, at the same four points, place a small marker (a 300 mm disc or cube, pure red `#FF0000`, at floor level) on tag `REF`. If the model sits on the CAD at the same origin, snap to the same points.
3. Export `axo-ref.png` with only `REF` visible, shadows off.

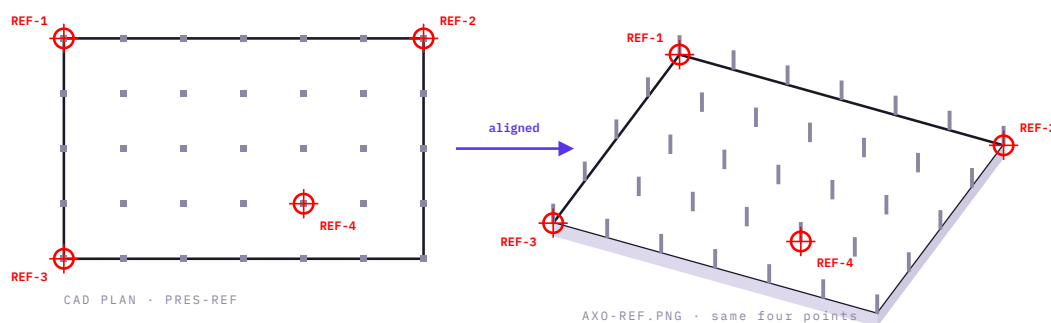


Fig 5 The same four points in the CAD plan and in the axo export.

WHY FOUR POINTS

In a parallel projection, the floor plan and its image in the axo are related by one fixed stretch, skew and shift. Three known points pin that relationship down; the fourth confirms it. With it, anything drawn on the CAD plan lands in the right place in the axo.

3.6 Neighbourhood close-ups for the deep dives

Each deep dive shows a neighbourhood's plan next to its axo. We crop the `axo-zone-*` images, which is why the exports are 6000 px wide: a single neighbourhood cropped out still stays sharp on a large screen. If you prefer a closer camera per neighbourhood, export each from its own scene with its own reference image, following the same rules: `axo-n1-close.png` and `axo-n1-close-ref.png`, and so on.

3.7 Optional: 3D model

For a version the client can orbit, also export the model as COLLADA (`.dae`) through File → Export → 3D Model, or as `.glb` through a glTF exporter extension. Keep the same tags, embed textures and aim for under 50 MB. This is an add-on; the image set above is the main deliverable.

3.8 SketchUp checklist

- ☐ Camera set to Parallel Projection
- ☐ Scene PRES-AXO saved; camera never moved after
- ☐ Tags: SHELL, FLOOR, WALLS, FURNITURE, CEILING, STREET, NB-N1...N6, TS, REF
- ☐ Nothing loose inside zone groups
- ☐ Sky, ground and fog off; same style throughout
- ☐ Shadows on for axo-full only
- ☐ All PNGs 6000 px wide, same height, transparent
- ☐ REF markers at the same points as in CAD
- ☐ File names exactly as in 3.4
- ☐ Window and trays unchanged between exports

04 Renders for the click-to-view viewer

Clicking a room in the plan, the axo or a deep dive opens its renders. Each space has a light and a dark version, with a toggle and a slider that wipes from one to the other. The two versions have to line up exactly for the slider to work.

4.1 Render rules

1. **Same camera for light and dark:** same position, lens and crop. Only materials and lighting change. Save the camera as a view in your render tool (Enscape, V-Ray, D5 or Lumion) and render both versions from it.
2. **Same size for every render:** 2400 to 3000 px wide, all in one aspect ratio (16:9 or 16:10).
3. **JPG**, quality 85–90, sRGB colour profile.
4. **No text, logos or watermarks** baked into the images.
5. **Shared or per neighbourhood:** `meeting-light.jpg` is used by every neighbourhood. To show a different meeting room in one neighbourhood only, add `n1-meeting-light.jpg` and `n1-meeting-dark.jpg`.

4.2 Render list and file names

KEY	SPACE	FILES	WHERE
desk	Workstations	<code>desk-light.jpg</code> · <code>desk-dark.jpg</code>	Neighbourhoods
cabin	Team lead cabin	<code>cabin-light.jpg</code> · <code>cabin-dark.jpg</code>	Neighbourhoods
touch	Touchdown bench	<code>touch-light.jpg</code> · <code>touch-dark.jpg</code>	Neighbourhoods
focus	Focus pod	<code>focus-light.jpg</code> · <code>focus-dark.jpg</code>	Neighbourhoods
booth	Phone booth	<code>booth-light.jpg</code> · <code>booth-dark.jpg</code>	Neighbourhoods
meeting	Meeting room	<code>meeting-light.jpg</code> · <code>meeting-dark.jpg</code>	Neighbourhoods
huddle	Team huddle	<code>huddle-light.jpg</code> · <code>huddle-dark.jpg</code>	Neighbourhoods
pantry	Pantry point	<code>pantry-light.jpg</code> · <code>pantry-dark.jpg</code>	Neighbourhoods
reception	Reception	<code>reception-light.jpg</code> · <code>reception-dark.jpg</code>	Town Square
townhall	Town hall	<code>townhall-light.jpg</code> · <code>townhall-dark.jpg</code>	Town Square
board	Boardroom	<code>board-light.jpg</code> · <code>board-dark.jpg</code>	Town Square
cafe	Café	<code>cafe-light.jpg</code> · <code>cafe-dark.jpg</code>	Town Square
wellness	Wellness room	<code>wellness-light.jpg</code> · <code>wellness-dark.jpg</code>	Town Square

Per-neighbourhood versions use the neighbourhood ID as a prefix: `n3-huddle-dark.jpg`. Spaces without renders show a sample image until real ones arrive.

05 Content and brand

The words, names and brand the presentation needs alongside the drawings. Spreadsheets can be XLSX or CSV.

ITEM	CONTENTS	NOTES
Neighbourhoods sheet	ID, name, team, headcount, colour (hex)	IDs N1-N6 must match the PRES-NBHD labels. Colours from the Acko palette.
Area statement	Areas per neighbourhood and common area	We calculate areas from the DXF; yours lets us reconcile the two.
Due-diligence notes	Number, title, one or two lines, photo file name	Numbers match PRES-DD . Photos in 04-content/photos/ .
Site notes	North, views, noise, arrival, floor-to-floor and clear height	Or draw them on PRES-SITE .
Fire notes	Travel-distance limit and basis, exits, sprinkler status	Plus the consultant's egress plan if available.
Concept note	Three to five sentences in your words	Opens the story.
Acko brand	Palette (hex), typefaces, logo	Fonts as WOFF2 or OTF with a licence that allows web embedding. Logo as SVG.
Officebanao brand	Logo	SVG.

06 How the files become the presentation

Background for the whole team: what happens to each file, so it's clear why the set-up rules matter.

6.1 Plan, neighbourhoods and numbers

The DXF is converted into clean vector layers in the presentation's own line weights and colours, readable in both light and dark themes. The PRES polygons become the coloured neighbourhoods, the Town Square and the streets. Areas, the area split, desk and room counts, and each neighbourhood's kit list are calculated from the polygons and the furniture blocks.

6.2 Fire escape routes

Each route polyline draws itself in from its first vertex and then keeps flowing towards its last, ending in an arrowhead at the exit door. Its length is measured along the polyline in metres and checked against the travel-distance limit. In the next step, the routes widen into the Main Street and lane polygons to show the escape routes becoming the plan's circulation.

6.3 Plan to axo, and the exploded view

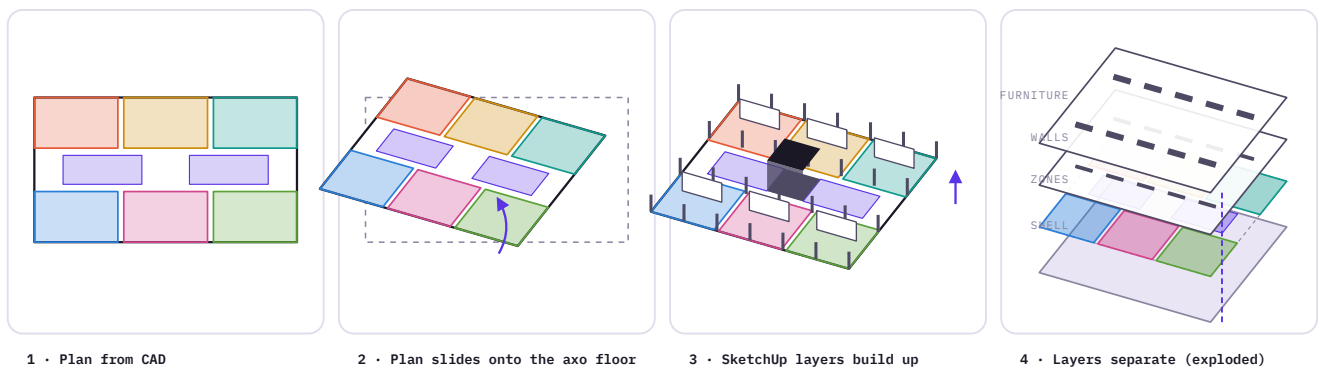


Fig 6 The four stages of the 3D sequence.

1. **Plan.** The CAD plan with its coloured neighbourhoods, as in the earlier steps.
2. **Onto the axo floor.** Using the four reference points, the plan stretches, skews and slides until it sits exactly on the axo's floor. Colours, routes and labels move with it.
3. **Build-up.** The SketchUp layers appear in order (shell, floor, walls, furniture) and the hero image `axo-full.png` settles in.
4. **Exploded.** In a parallel projection, lifting a layer in 3D is the same as sliding its image straight up the screen. The layer images separate vertically, with the neighbourhood colours on their own level and a label beside each layer.

Hovering a neighbourhood in the axo dims the others, using its `axo-zone-*` image. Clicking it opens that neighbourhood's deep dive.

6.4 Deep dives and renders

Each deep dive shows the neighbourhood's plan beside its cropped `axo-zone` image. Numbered markers for each kit item are placed on both from the CAD positions, through the same alignment. Clicking a room (from its `PRES-ROOM` polygon) or a marker opens the light and dark renders for that room's keyword.

07 Handover and next steps

What happens after the files are shared.

1. **Share** the folder laid out as in 1.1, as a zip or a drive link.
2. **Automatic checks.** We test the DXF (closed shapes, labels inside shapes, overlaps, route end points on exit doors, units) and the PNGs (identical sizes, transparency, reference markers found).
3. **Alignment check.** We send back one page showing your CAD plan, with neighbourhoods and routes, laid over your axo, plus a short list of anything missing or unclear.
4. **Build.** Once you confirm, the real drawings replace the sample data in the presentation.
5. **Changes later.** Re-export with the same file names and settings, and the presentation picks up the changes.

QUICK SELF-CHECK BEFORE SENDING

Open `acko-layout.dxf` in DWG TrueView or AutoCAD and confirm the PRES layers show. Open any two PNG exports side by side and confirm they have the same pixel size and that a column sits on exactly the same pixel in both.

A–B Appendix

Command reference and sheet templates.

A Command reference

AUTOCAD	USE	SKETCHUP	USE
SAVEAS	Save as AutoCAD 2018 DXF	Camera → Parallel Projection	Required projection
UNITS	Insertion scale: Millimeters	Camera → Standard Views	Iso for the axo, Top for top-ref
FLATTEN	Set everything to Z = 0	Window → Scenes	Save PRES-AXO and export scenes
XREF → Bind	Bind external references	Window → Tags	Create tags, switch visibility
PURGE · AUDIT	Remove unused items, fix errors	Entity Info → Tag	Assign a tag to a group
OVERKILL	Delete duplicate and overlapping lines	Window → Styles	Background, sky, ground, edges
LAYER	Create the PRES-* layers	Window → Shadows	On for axo-full only
PLINE ... C	Draw a closed polyline	View → Fog	Off
BOUNDARY (BO)	Closed polyline from an enclosed area	File → Export → 2D Graphic	PNG, 6000 px, transparent
PEDIT → Close	Close an existing polyline	File → Export → 3D Model	Optional .dae
LIST	Check a polyline says "Closed"		
QSELECT	Select by layer to check counts		

B Sheet templates

Column headers for the three spreadsheets. One row per item.

SHEET	COLUMNS
layer-sheet.xlsx	Layer name · Contents · Category (walls, glazing, doors, columns, furniture, ceiling, finishes, text, hide)
block-map.xlsx	Block name · Item · Count it? (Yes/No) · Items per block (default 1)
neighbourhoods.xlsx	ID (N1–N6, TS) · Name · Team · Headcount · Colour hex · One-line description
notes.xlsx · due diligence	Number · Title · Note (one or two lines) · Photo file name
notes.xlsx · site and fire	Topic · Note · Value (for example: Travel distance limit · NBC 2016 Part 4, sprinklered · 45 m)