USER MANUAL

AGRIMATE®
APNALO MUNAFA BADALO

USER MANUAL

AGRIMATE BRUSH CUTTER

AM-4035K-BC-4S-MS+



AN ISO 9001 : 2015 CERTIFIED COMPANY

INTRODUCTION

Dear Sir/ Madam,

Thank you for choosing Agrimate product. You are the proud owner of high technology & durable machine. Trust that our Franchisee/Dealer installed the product & installed the product and explained you about the usage & service instrcuctions. Please visit our autorised dealer for your future requirement of our other equipments, genuine spares, accessories and services. Service coupons are attached with this manual and you can avail free service to keep your machine fit always to use on demand.


About Ratnagiri,
We import and market of high quality of agriculture wide range of equipments which we are selling through our authorised franchisee or dealer network. We are in this field from past years service the farmer. community. For further details, Please visit our website www.agrimart.in. & Give a missed call to 7393 938 938.

TECHNICAL SPECIFICATIONS

MODEL	AM-4035K-BC-4S-MS+
ENGINE TYPE	4S
POWER	1KW/9000RPM
DISPLACEMENT	35.8CC
FUEL TANK CAPACITY	0.63L
ENGINE OILCAPACITY	0.1L

AGRIMATE AGRIMATE AGRIMATE

SHAFT DIAGRAM & SPARE PARTS LIST OF AM-4035K-BC-2S-MS+ BRUSH CUTTER

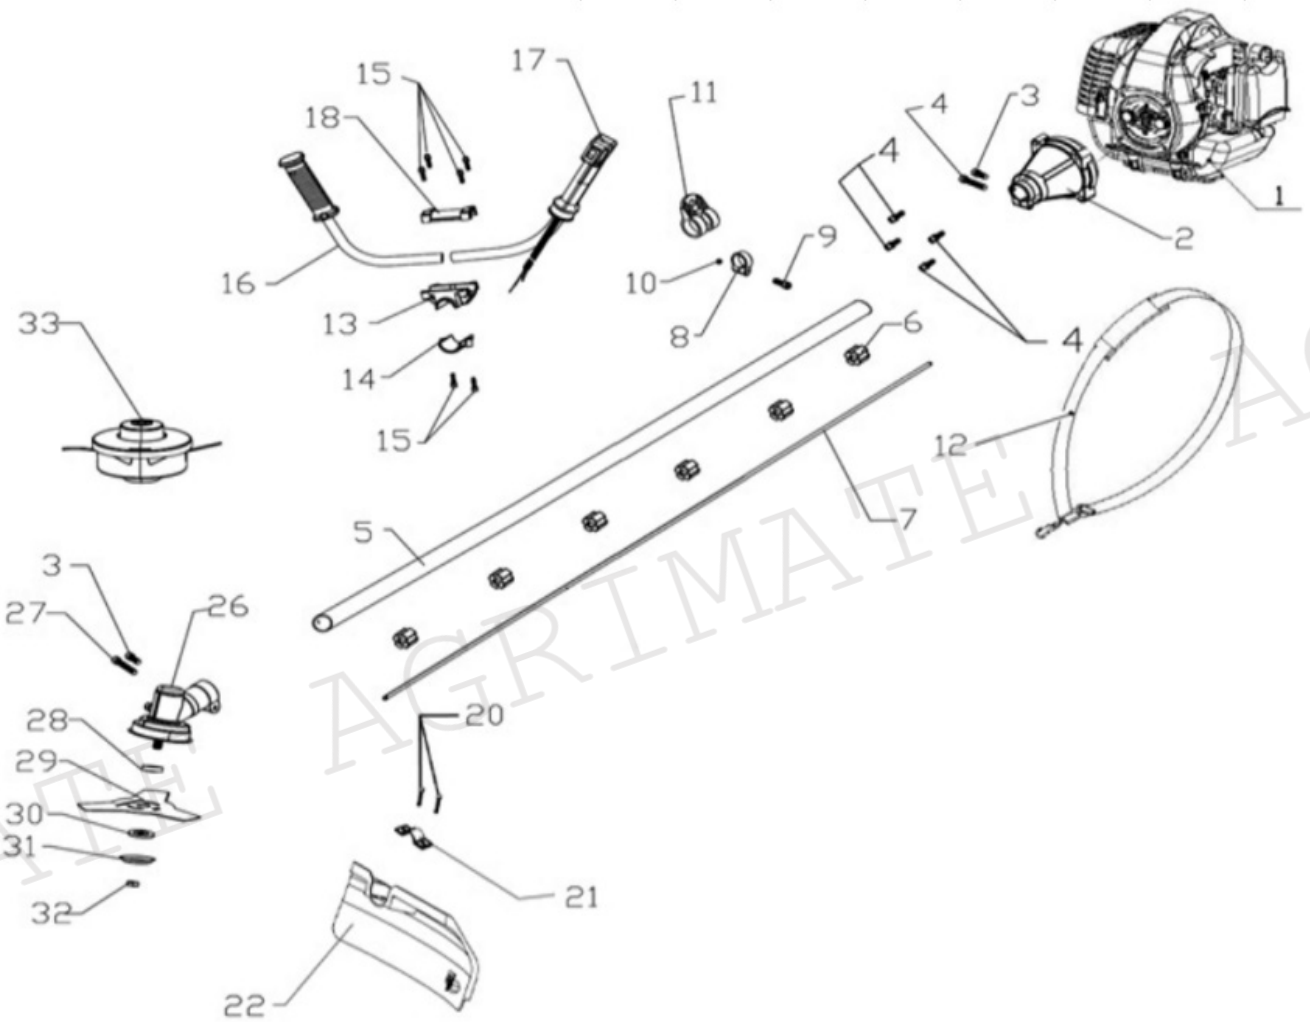


AGRIMATE AGRIMATE AGRIMATE

SL NO.	PART NO.	DESCRIPTION	SL NO.	PART NO.	DESCRIPTION
1	AM-4035K-BC-T01	Gasoline engine	18	AM-4035K-BC-T18	Handle Holder set
2	AM-4035K-BC-T02	Engine Connector	20	AM-4035K-BC-T20	Interior six-angled Screw
3	AM-4035K-BC-T03	Interior six-angled Screw	21	AM-4035K-BC-T21	Grass Shield Fix Seat
4	AM-4035K-BC-T04	Interior six-angled Screw	22	AM-4035K-BC-T22	Grass Shield
5	AM-4035K-BC-T05	Aluminum tube	26	AM-4035K-BC-T26	Gearbox
6	AM-4035K-BC-T06	Oil bearing	27	AM-4035K-BC-T27	Interior six-angled Screw
7	AM-4035K-BC-T07	Transmission shaft	28	AM-4035K-BC-T28	Up Plate
8	AM-4035K-BC-T08	Locating ring	29	AM-4035K-BC-T29	3T Blade
9	AM-4035K-BC-T09	Interior six-angled Screw	30	AM-4035K-BC-T30	Down Plate
10	AM-4035K-BC-T10	Locknut	31	AM-4035K-BC-T31	Al. Protect Cover
11	AM-4035K-BC-T11	Rings	32	AM-4035K-BC-T32	Nut
12	AM-4035K-BC-T12	Straps	33	AM-4035K-BC-T33	PP trimmer head
13	AM-4035K-BC-T13	Hand holder set			
14	AM-4035K-BC-T14	Hand holder set			
15	AM-4035K-BC-T15	Interior six-angled Screw			
16	AM-4035K-BC-T16	left handle components			
17	AM-4035K-BC-T17	right handle components			

AGRIMATE AGRIMATE AGRIMATE

ENGINE DIAGRAM & SPARE PARTS LIST BRUSH CUTTER

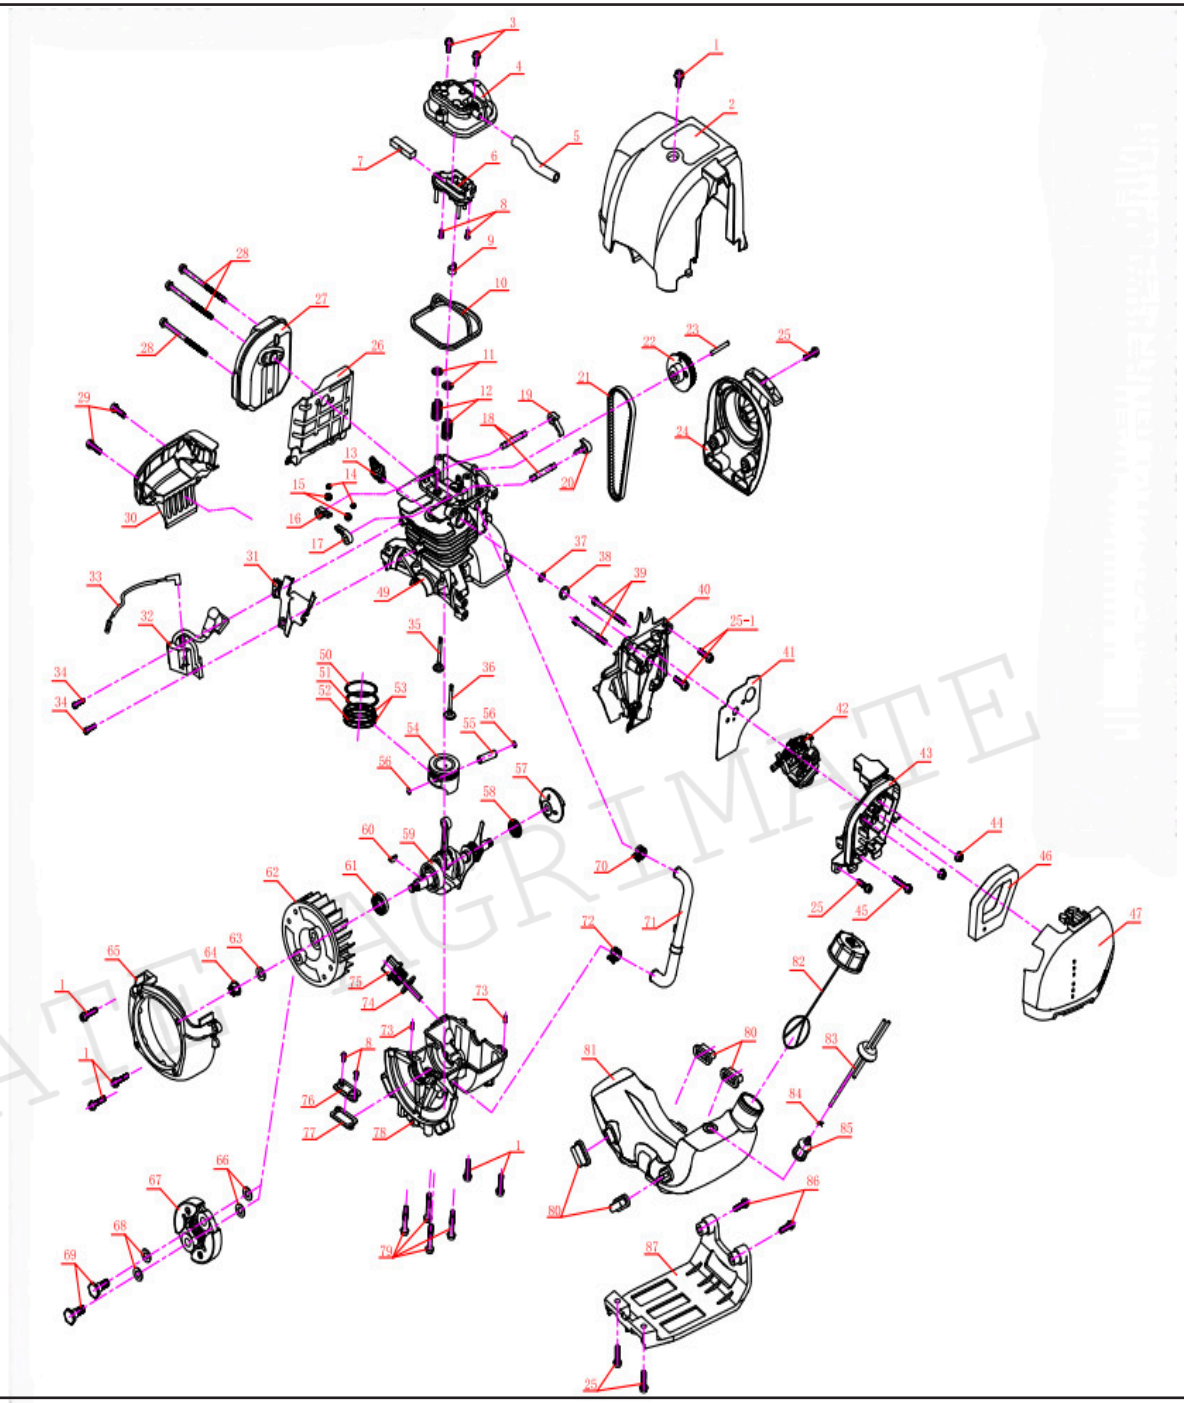

AGRIMATE AGRIMATE AGRIMATE

SL NO.	PART NO.	DESCRIPTION	SL NO.	PART NO.	DESCRIPTION
1	AM-AX35-E01	Screw	17	AM-AX35-E17	Intake Rocker Arm
2	AM-AX35-E02	Engine Cover	18	AM-AX35-E18	Rocker Arm Pin
3	AM-AX35-E03	Screw	19	AM-AX35-E19	Exhaust Cam Arm
4	AM-AX35-E04	Up Cover	20	AM-AX35-E20	Intake Cam Arm
5	AM-AX35-E05	S Return Oil Pipe	21	AM-AX35-E21	Timing Belt
6	AM-AX35-E06	Return Oil Plate	22	AM-AX35-E22	Cam
7	AM-AX35-E07	Return Oil Plate Filter	23	AM-AX35-E23	Pin
8	AM-AX35-E08	Screw	24	AM-AX35-E24	Starter
9	AM-AX35-E09	Grommet, Head Cove	25	AM-AX35-E25	Screw
10	AM-AX35-E10	Cylinder Head Gasket	26	AM-AX35-E26	Insulation Cover
11	AM-AX35-E11	Valve-Spring Retainer	27	AM-AX35-E27	Muffler
12	AM-AX35-E12	Valve Spring	28	AM-AX35-E28	Screw
13	AM-AX35-E13	Spark Plug	29	AM-AX35-E29	Screw
14	AM-AX35-E14	Valve Adjustment Screw	30	AM-AX35-E30	Lower Baffle Plate
15	AM-AX35-E15	Valve Adjustment Nut	31	AM-AX35-E31	Ignition Insulation Plate
16	AM-AX35-E16	Exhaust Rocker Arm	32	AM-AX35-E32	Ignitional Coil

AGRIMATE AGRIMATE AGRIMA

SL NO.	PART NO.	DESCRIPTION	SL NO.	PART NO.	DESCRIPTION
33	AM-AX35-E33	Ignition Shut-Off Line	49	AM-AX35-E49	Up Crankcase
34	AM-AX35-E34	Screw	50	AM-AX35-E50	Ring
35	AM-AX35-E35	Exhaust Valve Assembly	51	AM-AX35-E51	Ring
36	AM-AX35-E36	Intake Valve Assembly	52	AM-AX35-E52	Cushion Spring
37	AM-AX35-E37	Gasket	53	AM-AX35-E53	Doctor-Bar
38	AM-AX35-E38	O Ring	54	AM-AX35-E54	Piston
39	AM-AX35-E39	Screw	55	AM-AX35-E55	Piston Pin
40	AM-AX35-E40	Intake Pipe	56	AM-AX35-E56	Piston Pin Circlip
41	AM-AX35-E41	Carburetor Gasket	57	AM-AX35-E57	Pully
42	AM-AX35-E42	Carburetor	58	AM-AX35-E58	Oil Seal
43	AM-AX35-E43	Air Filer Inner Cover	59	AM-AX35-E59	Crankshaft
44	AM-AX35-E44	Nut	60	AM-AX35-E60	Woodruff Key
45	AM-AX35-E45	Screw	61	AM-AX35-E61	Oil Seal
46	AM-AX35-E46	Filter Sponge	62	AM-AX35-E62	Fly Wheel
47	AM-AX35-E47	Filter Outer Cover	63	AM-AX35-E63	Flywheel Back Washer
48	AM-AX35-E48	Na	64	AM-AX35-E64	Nut

AGRIMATE AGRIMATE AGRIMATE

SL NO.	PART NO.	DESCRIPTION	SL NO.	PART NO.	DESCRIPTION
65	AM-AX35-E65	Side Cover	81	AM-AX35-E81	Fuel Tank
66	AM-AX35-E66	Gasket	82	AM-AX35-E82	Cap
67	AM-AX35-E67	Clutch	83	AM-AX35-E83	Fuel Pipe Assy
68	AM-AX35-E68	Flat Gasket	84	AM-AX35-E84	Clip, Pipe
69	AM-AX35-E69	Screw	85	AM-AX35-E85	Fuel Filter
70	AM-AX35-E70	Hose Clamp	86	AM-AX35-E86	Bolt
71	AM-AX35-E71	U Return Oil Pipe	87	AM-AX35-E87	Tank Supporter
72	AM-AX35-E72	Clamp, Tube			
73	AM-AX35-E73	Cylinder Pin			
74	AM-AX35-E74	Oil Dipstick Gasket			
75	AM-AX35-E75	Oil Gauge			
76	AM-AX35-E76	Leaf Valve			
77	AM-AX35-E77	Valve Sealing Gasket			
78	AM-AX35-E78	Down Crankcase			
79	AM-AX35-E79	Screw			
80	AM-AX35-E80	Tankshock-Absorbing Pad			

AGRIMATE AGRIMATE AGRIMATE

INSPECTION & MAINTAINANCE

For safety use, make sure the machine is cleaned every three months. Before working, make sure to inspect the filter and the nozzel and ensure there is no imurity. After working, make sure there is no water in the pump and the hose.

If the machine needs to be repaired in the guarantee period, please return the machine to the shop. You need to provide the certificate of purchase on order to repair or get the substitute.

Before packing, the machine should be cleaned, then use closed packaging, packaging should be firm. Store the machine in dry place.

For transportation safety. The machine should comply with ISTA.

Do not dispose of electrical machines as unsorted mucnipal waste, use seperate collection facilities.

If electrical machines are disposed of in landfills or dumps, hazaardous substances can leak into the ground water and get into the food chain, damaging your health and well being.

When replacing old machines with new ones, the retailer is legally obligated to take back your old machine for disposals at least free of charge.

AGRIMATE AGRIMATE AGRIMATE

1.LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser

WARRANTY null & void if

(i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.

4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.
WARRANTY null & void if
(i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.
WARRANTY null & void if
(i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1st service coupon

ISO 9001 : 2015 CERTIFIED COMPANY

FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER

MODEL AM-4035K-BC-4S BRUSH CUTTER

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

OPERATIONS

1. Check and test the fuel mixture
2. check and clean the air filter
3.Check , clean and adjust the spark plug
4. Check and adjust the carburetor tuning
5. Check and sparken the cutting tools
6.Product familirisation on usage
7. Start and check the noise, vibration, loosen etc..
8. Routine maintenance and shortage.

FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER

MODEL AM-4035K-BC-4S BRUSH CUTTER

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

OPERATIONS

1. Check and test the fuel mixture
2. check and clean the air filter
3.Check , clean and adjust the spark plug
4. Check and adjust the carburetor tuning
5. Check and sparken the cutting tools
6.Product familirisation on usage
7. Start and check the noise, vibration, loosen etc..
8. Routine maintenance and shortage.

FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER

MODEL AM-4035K-BC-4S BRUSH CUTTER

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

OPERATIONS

1. Check and test the fuel mixture
2. check and clean the air filter
3.Check , clean and adjust the spark plug
4. Check and adjust the carburetor tuning
5. Check and sparken the cutting tools
6.Product familirisation on usage
7. Start and check the noise, vibration, loosen etc..
8. Routine maintenance and shortage.

DOS & DONTS

1. Always read the instruction manual supplied along with the equipments and understand the correct installation and operating procedures before attempting to use the equipments.

2. It is important to use the personal protection equipments such as head helmet with visor, ear defenders, goggles, safety gloves, cut resistant shoes, trousers and jackets while operating potentially dangerous machines

3. Avoid untrained persons using the equipments. Children must not be allowed to handle these equipments

4. Always use genuine spares and accessories in repairs and usage to derive maximum life of the equipments.

5. Always keep the equipments in good working condition to minimize loss of output as well as to reduce the pollution and save the environment

6.Do not use the machine within range of persons unless they wear protective clothing

7. Do not operate the machine when fatigued or under the influence of alcohol or drugs

8. When the machine is running, please maintain a constant water supply. Without water circulation will damage the sealing rings of the machine.

9. For more query kindly contact for our Service Center/Dealer/ franchise

AGRIMATE AGRIMATE AGRIMATE AGRIMA

AGRIMATE MULTI PURPOSE EQUIPMENT
ANYWHERE - ANYTIME - ANY CROP

























ratnagiri impex
BRINGING YOU THE FUTURE... NOW

IMPORTED & MARKETED BY,

RATNAGIRI IMPEX PVT., LTD.,
Annapurna House, #1 / 1G, 7th Cross, New Guddadahalli Mysore Road, Bangalore - 560 026
Missed Call : 7393 938 938 Email: ask@agrimart.in

AGRIMATE AGRIMATE AGRIMATE AGRIMATE