USER MANUAL

AGRIMATE®
APNALO MUNAFA BADALO

INTERCULTIVATOR / POWER WEEDER


ENGINE DIAGRAM - AM-186F-MAX

AM-MPT-1100-9D-DGB-E (5.00×12)



ENGINE DIAGRAM & PART LIST OF 9D - AM-186F-MAX


Crankcase assembly - A

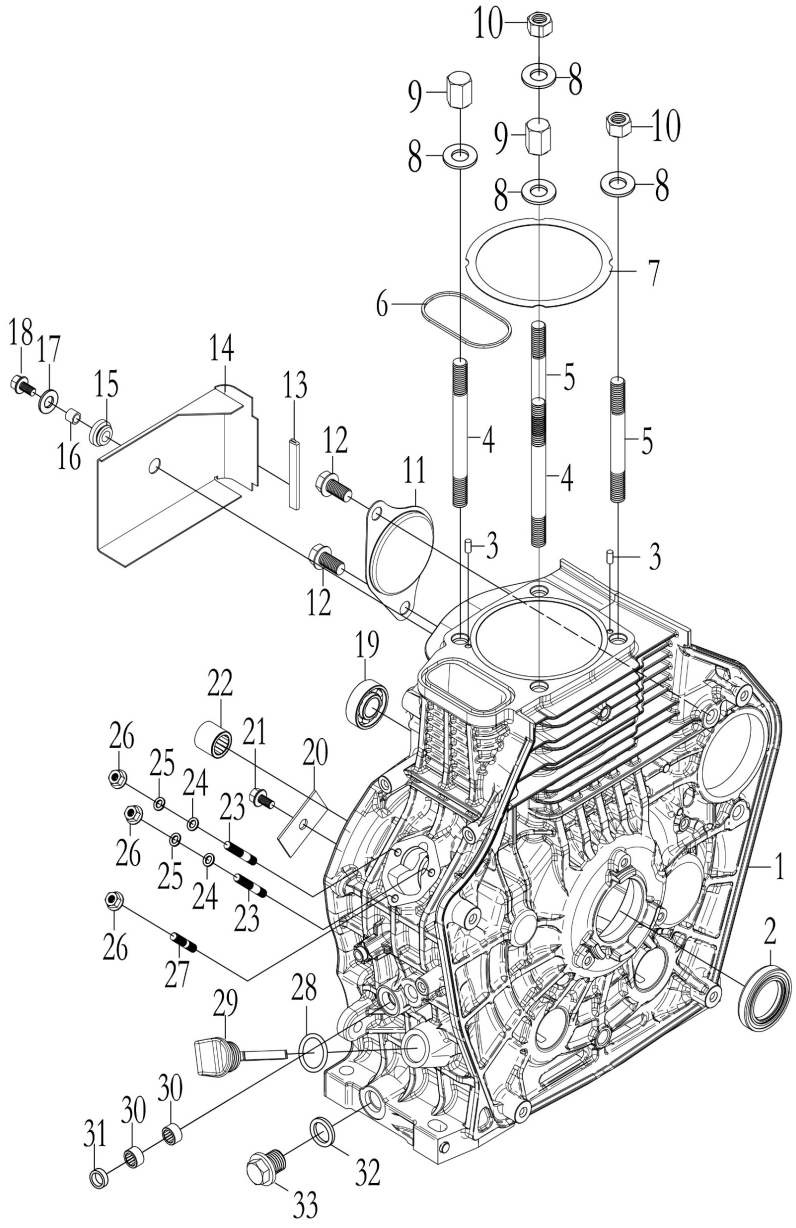

ENGINE DIAGRAM & PART LIST OF 9D - AM-186F-MAX


SL NO.	PART NO.	DESCRIPTION	SL NO.	PART NO.	DESCRIPTION
1	AM-186F-MAX-EA01	Crankcase	18	AM-186F-MAX-EA18	Flange Bolt
2	AM-186F-MAX-EA02	Oil Seal	19	AM-186F-MAX-EA19	Ball Bearing
3	AM-186F-MAX-EA03	Pin	20	AM-186F-MAX-EA20	Retainer
4	AM-186F-MAX-EA04	Cylinder Head Stud	21	AM-186F-MAX-EA21	Flange Bolt
5	AM-186F-MAX-EA05	Cylinder Head Stud	22	AM-186F-MAX-EA22	Needle Bearing
6	AM-186F-MAX-EA06	Rectangle Seal Ring	23	AM-186F-MAX-EA23	Stud
7	AM-186F-MAX-EA07	Cylinder Head gasket, Copper	24	AM-186F-MAX-EA24	Washer
8	AM-186F-MAX-EA08	Washer	25	AM-186F-MAX-EA25	Spring Washer
9	AM-186F-MAX-EA09	Nut,Cylinder Head Thick	26	AM-186F-MAX-EA26	Flange Nut
10	AM-186F-MAX-EA10	Nut,Cylinder Head	27	AM-186F-MAX-EA27	Stud
11	AM-186F-MAX-EA11	Starter Mounting Cover	28	AM-186F-MAX-EA28	O-Sealing Ring
12	AM-186F-MAX-EA12	Flange Bolt	29	AM-186F-MAX-EA29	Oil Dipstick
13	AM-186F-MAX-EA13	Cooling Guide Plate gasket, Plastic	30	AM-186F-MAX-EA30	Needle Bearing
14	AM-186F-MAX-EA14	Cooling Guide Plate	31	AM-186F-MAX-EA31	Oil Seal
15	AM-186F-MAX-EA15	Vibration Isolator,Cooling Guide Plate	32	AM-186F-MAX-EA32	Oil Plug Seal
16	AM-186F-MAX-EA16	Lining	33	AM-186F-MAX-EA33	Flange Bolt
17	AM-186F-MAX-EA17	Large Washer			

Crankcase cover assembly - B

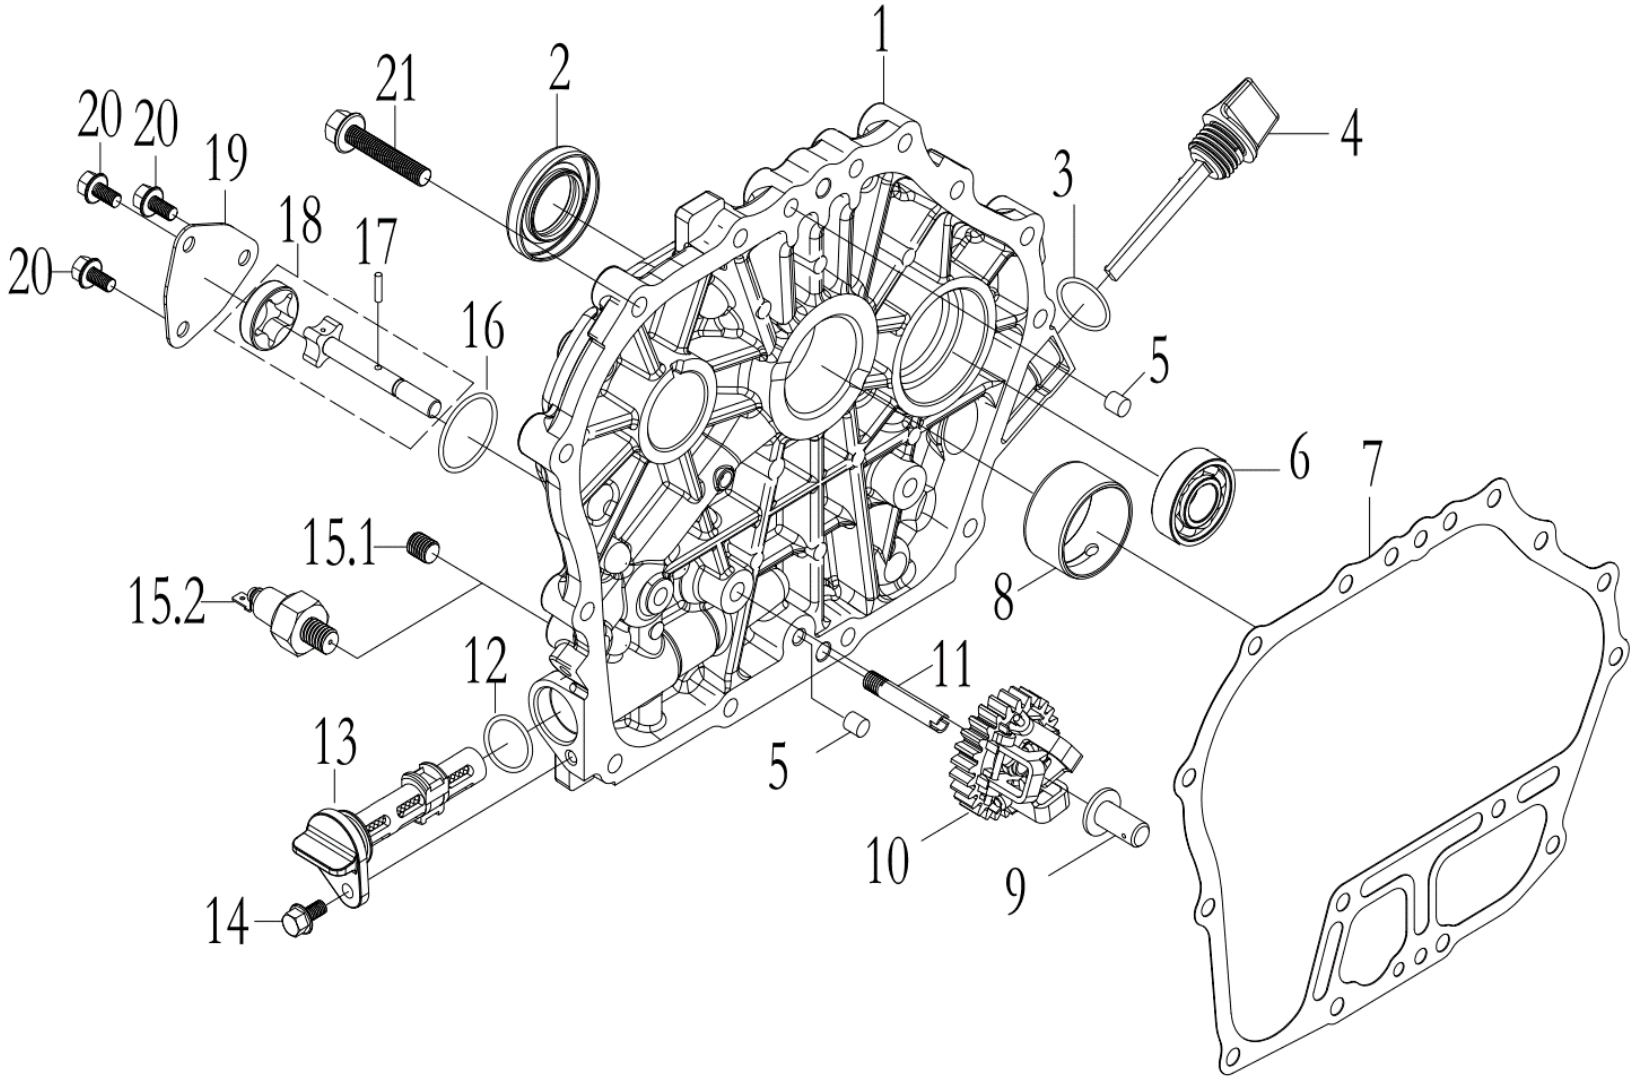


SL NO.	PART NO.	DESCRIPTION	SL NO.	PART NO.	DESCRIPTION
1	AM-186F-MAX-EB01	Cover, Crakcase	17	AM-186F-MAX-EB17	O-Sealing Ring
2	AM-186F-MAX-EB02	Oil Seal	18	AM-186F-MAX-EB18	Pin
3	AM-186F-MAX-EB03	O-Sealing Ring	19	AM-186F-MAX-EB19	Oil Pump Assy
4	AM-186F-MAX-EB04	Oil Dipstick	20	AM-186F-MAX-EB20	Oil Pump Cover
5	AM-186F-MAX-EB05	Pin	21	AM-186F-MAX-EB21	Flange Bolt
6	AM-186F-MAX-EB06	Ball Bearing	22	AM-186F-MAX-EB22	Flange Bolt
7	AM-186F-MAX-EB07	Gasket□Crankcase Cover	23		
8	AM-186F-MAX-EB08	Crankshaft Bushing	24		
9	AM-186F-MAX-EB09	Operate Hand Shank	25		
10	AM-186F-MAX-EB10	Governor Gear Comp	26		
11	AM-186F-MAX-EB11	Oil Duct	27		
12	AM-186F-MAX-EB12	O-Sealing Ring	28		
13	AM-186F-MAX-EB13	Engine Oil Filter Element	29		
14	AM-186F-MAX-EB14	Flange Bolt	30		
15	AM-186F-MAX-EB15	Block□Bolt	31		
16	AM-186F-MAX-EB16	Oil Pressure Sensor	32		

Piston connecting rod assembly - C

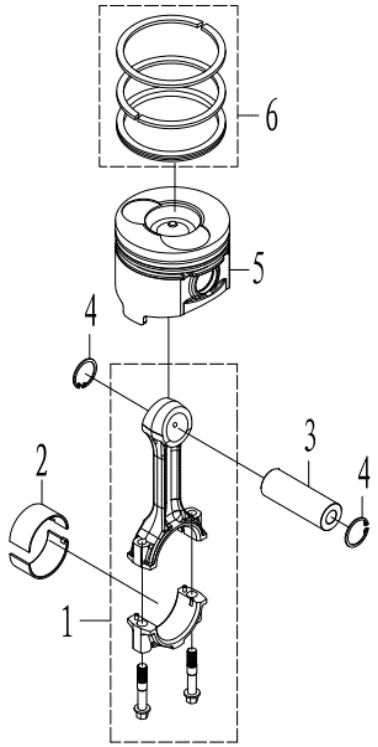


SL NO.	PART NO.	DESCRIPTION
1	AM-186F-MAX-EC01	Connecting Rod Assy
2	AM-186F-MAX-EC02	Bushing, Connect Rod
3	AM-186F-MAX-EC03	Pin□Piston
4	AM-186F-MAX-EC04	Clip□Piston Pin
5	AM-186F-MAX-EC05	Piston
6	AM-186F-MAX-EC06	Piston Ring Assy
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		

Crankshaft flywheel assembly - D

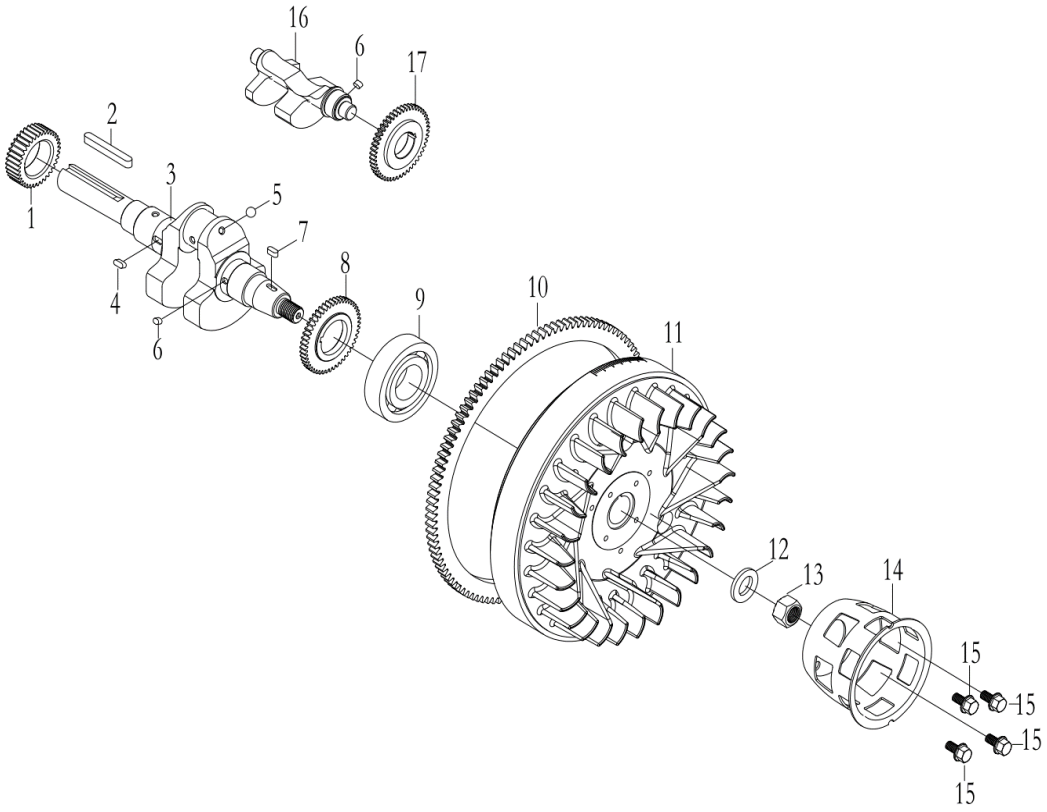


SL NO.	PART NO.	DESCRIPTION
1	AM-186F-MAX-ED01	Timing Gear,Crankshaft
2	AM-186F-MAX-ED02	Flat Key
3	AM-186F-MAX-ED03	Crank Shaft
4	AM-186F-MAX-ED04	Flat Key
5	AM-186F-MAX-ED05	Steel Ball
6	AM-186F-MAX-ED06	Flat Key
7	AM-186F-MAX-ED07	Flat Key
8	AM-186F-MAX-ED08	Drive Gear Of Balance Shaft
9	AM-186F-MAX-ED09	Ball Bearing
10	AM-186F-MAX-ED10	Ring Gear,Flywheel
11	AM-186F-MAX-ED11	Fly Wheel
12	AM-186F-MAX-ED12	Washer
13	AM-186F-MAX-ED13	Flywheel Nut
14	AM-186F-MAX-ED14	Starter Pulley
15	AM-186F-MAX-ED15	Flange Bolt
16	AM-186F-MAX-ED16	Balance Shaft
17	AM-186F-MAX-ED17	Timing Gear Of Balance Shaft

camshaft assembly - E

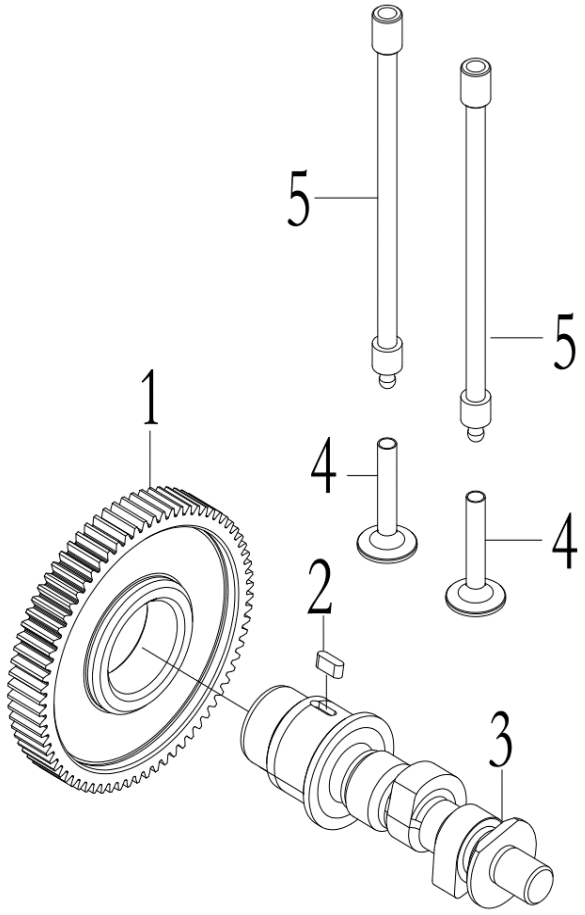


SL NO.	PART NO.	DESCRIPTION
1	AM-186F-MAX-EE01	Camshaft Timing Gear
2	AM-186F-MAX-EE02	Flat Key
3	AM-186F-MAX-EE03	Camshaft
4	AM-186F-MAX-EE04	Valve Tappet
5	AM-186F-MAX-EE05	Push Rod
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		

Cylinder head assembly - F

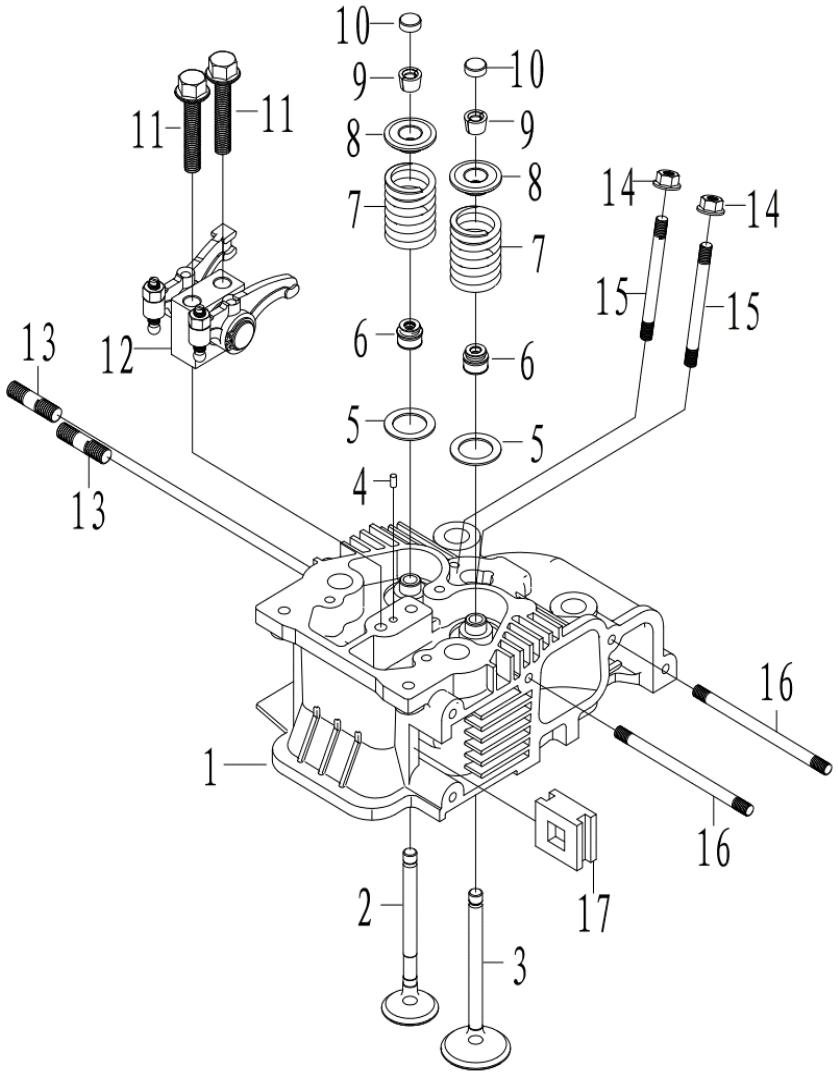


SL NO.	PART NO.	DESCRIPTION
1	AM-186F-MAX-EF01	Cylinder Head
2	AM-186F-MAX-EF02	Exhaust Valve
3	AM-186F-MAX-EF03	Intake Valve
4	AM-186F-MAX-EF04	Pin
5	AM-186F-MAX-EF05	Valve Spring Washer
6	AM-186F-MAX-EF06	Valve Seal
7	AM-186F-MAX-EF07	Valve Spring
8	AM-186F-MAX-EF08	Valve Spring Seat Assy
9	AM-186F-MAX-EF09	Cotter
10	AM-186F-MAX-EF10	Valve Adjusting Plate
11	AM-186F-MAX-EF11	Flange Bolt
12	AM-186F-MAX-EF12	Rock Arm Assy
13	AM-186F-MAX-EF13	Stud
14	AM-186F-MAX-EF14	Flange Nut
15	AM-186F-MAX-EF15	Stud
16	AM-186F-MAX-EF16	Stud
17	AM-186F-MAX-EF17	Block, Cylinder Head.

Cylinder head cover assembly - G

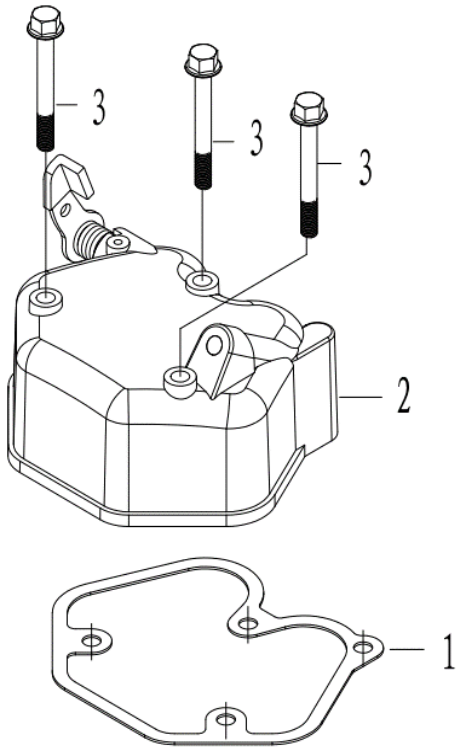


SL NO.	PART NO.	DESCRIPTION
1	AM-186F-MAX-EG01	Valve Cover Gasket
2	AM-186F-MAX-EG02	Valve Cover Assy
3	AM-186F-MAX-EG03	Flange Bolt
4		
5		
6		
7		
8		
9		
10		

Air intake system - H

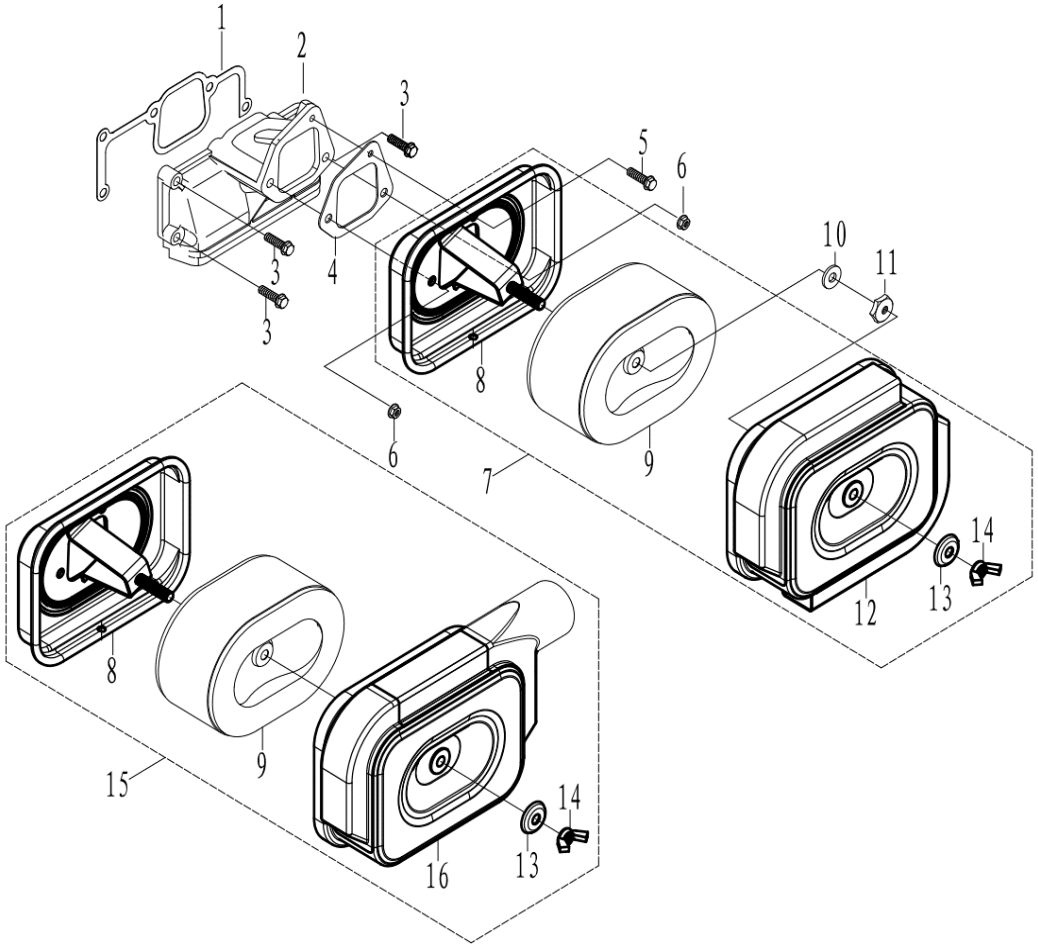


SL NO.	PART NO.	DESCRIPTION
1	AM-186F-MAX-EH01	Air Intake Gasket
2	AM-186F-MAX-EH02	Intake Pipe
3	AM-186F-MAX-EH03	Flange Bolt
4	AM-186F-MAX-EH04	Air Filter Gasket
5	AM-186F-MAX-EH05	Flange Bolt
6	AM-186F-MAX-EH06	Flange Nut
7	AM-186F-MAX-EH07	Air Filter Assy
8	AM-186F-MAX-EH08	Air Filter Housing Assy
9	AM-186F-MAX-EH09	Air Filter
10	AM-186F-MAX-EH10	washer
11	AM-186F-MAX-EH11	Nut
12	AM-186F-MAX-EH12	Air Filter Cover Assy
13	AM-186F-MAX-EH13	Washer, Air Filter Cover
14	AM-186F-MAX-EH14	Butterfly Nut
15	AM-186F-MAX-EH15	Air Filter Assy
16	AM-186F-MAX-EH16	Air Filter Cover Assy

Fuel system - J

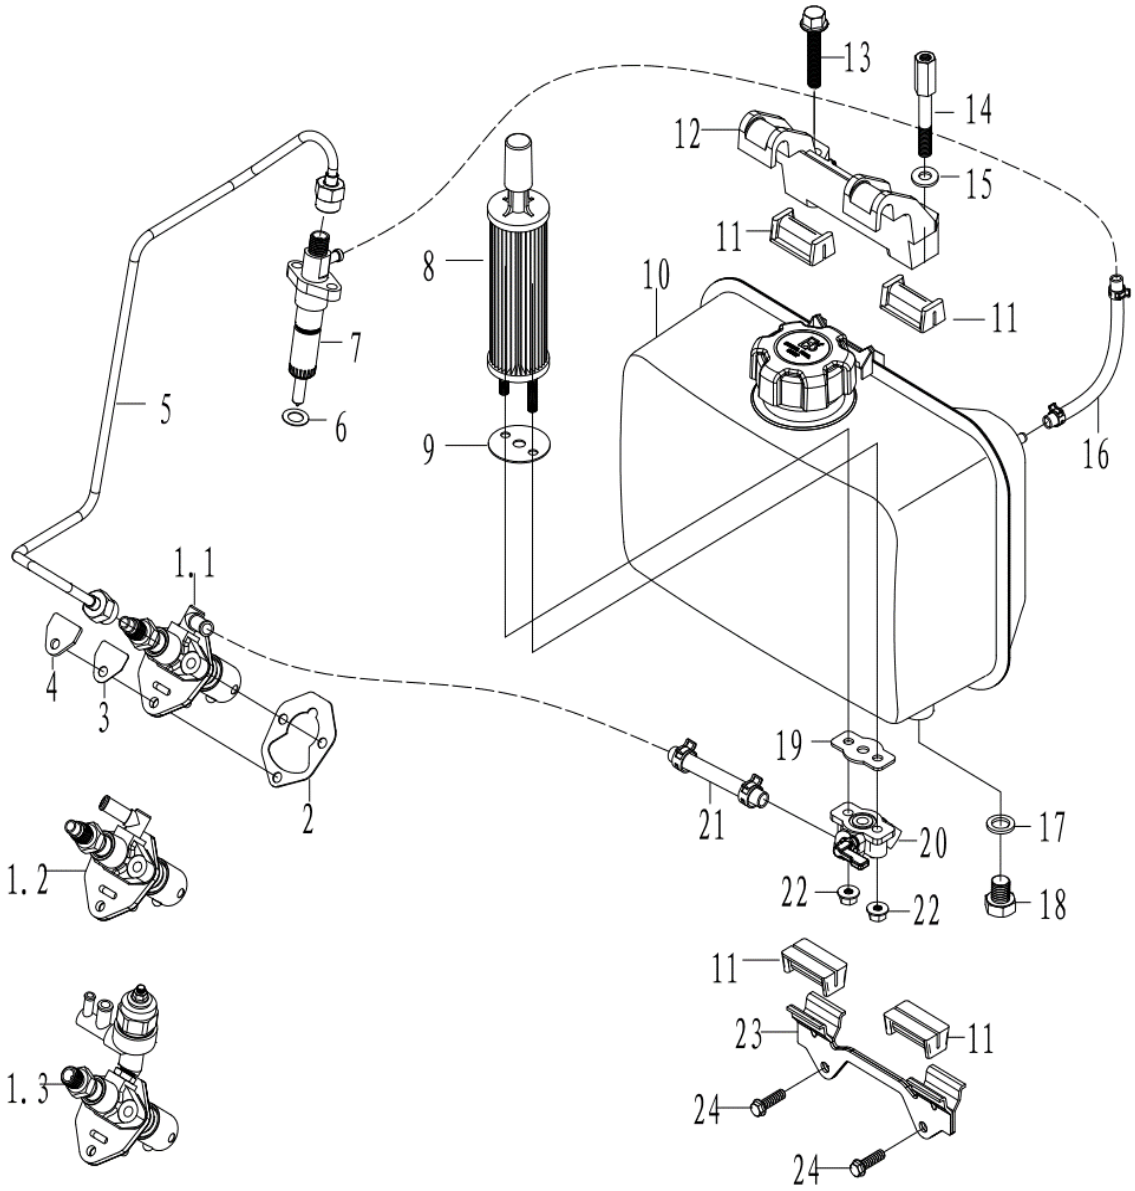


SL NO.	PART NO.	DESCRIPTION	SL NO.	PART NO.	DESCRIPTION
1	AM-186F-MAX-EJ01	Fuel Pump Assy	17	AM-186F-MAX-EJ17	Washer
2	AM-186F-MAX-EJ02	Fuel Pump Assy	18	AM-186F-MAX-EJ18	Fuel Pipe
3	AM-186F-MAX-EJ03	Fuel Pump Assy	19	AM-186F-MAX-EJ19	Fuel Tank Plug Seat
4	AM-186F-MAX-EJ04	Fuel Pump Gasket	20	AM-186F-MAX-EJ20	Bolt
5	AM-186F-MAX-EJ05	Fuel Pump Cover Gasket	21	AM-186F-MAX-EJ21	Fuel Switch Gasket
6	AM-186F-MAX-EJ06	Fuel Pump Cover	22	AM-186F-MAX-EJ22	Fuel Tank Gock Assy
7	AM-186F-MAX-EJ07	Fuel Injection Pipe Assy	23	AM-186F-MAX-EJ23	Fuel Pipe
8	AM-186F-MAX-EJ08	Adjusting Gasket,Fuel Iniection	24	AM-186F-MAX-EJ24	Flange Nut
9	AM-186F-MAX-EJ09	Fuel Iniection Assy	25	AM-186F-MAX-EJ25	Lower Stay
10	AM-186F-MAX-EJ10	Fuel Filter Assy	26	AM-186F-MAX-EJ26	Flange Bolt
11	AM-186F-MAX-EJ11	Fuel Filter Gasket	27		
12	AM-186F-MAX-EJ12	Fuel Tank Assy	28		
13	AM-186F-MAX-EJ13	Fuel Tank Damper	29		
14	AM-186F-MAX-EJ14	Upper Stay	30		
15	AM-186F-MAX-EJ15	Flange Bolt	31		
16	AM-186F-MAX-EJ16	Upper Stay Bolt	32		

Speed control system - K

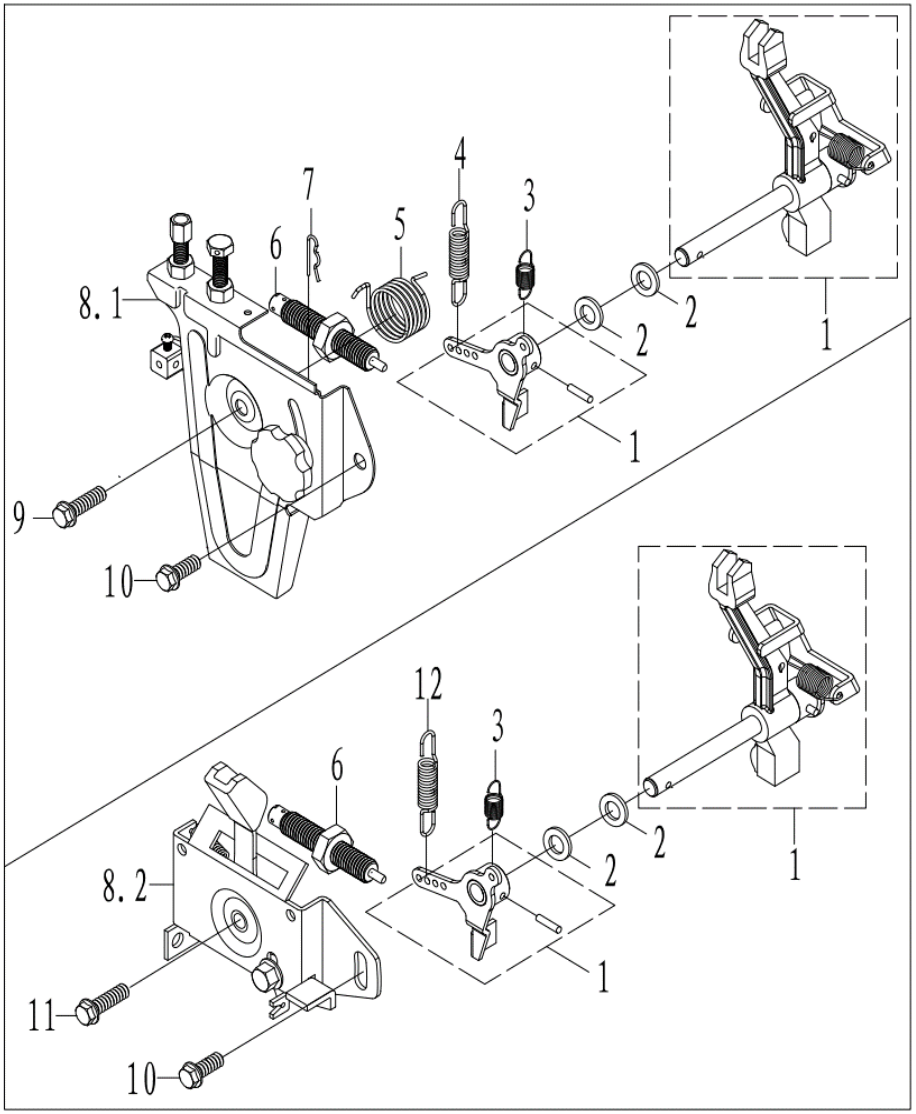


SL NO.	PART NO.	DESCRIPTION
1	AM-186F-MAX-EK01	Fork Lever Assy
2	AM-186F-MAX-EK02	Adjusting Washer
3	AM-186F-MAX-EK03	Fine Tuning Spring
4	AM-186F-MAX-EK04	Governor Spring
5	AM-186F-MAX-EK05	Reset Spring
6	AM-186F-MAX-EK06	Fuel control Part
7	AM-186F-MAX-EK07	Adjusting Rod Clip
8	AM-186F-MAX-EK08	Control Lever Assy
9	AM-186F-MAX-EK09	Control Lever Assy
10	AM-186F-MAX-EK10	Flange Bolt
11	AM-186F-MAX-EK11	Flange Bolt
12	AM-186F-MAX-EK12	Flange Bolt
13	AM-186F-MAX-EK13	Governor Spring
14		
15		
16		

Air Guide Assembly - L

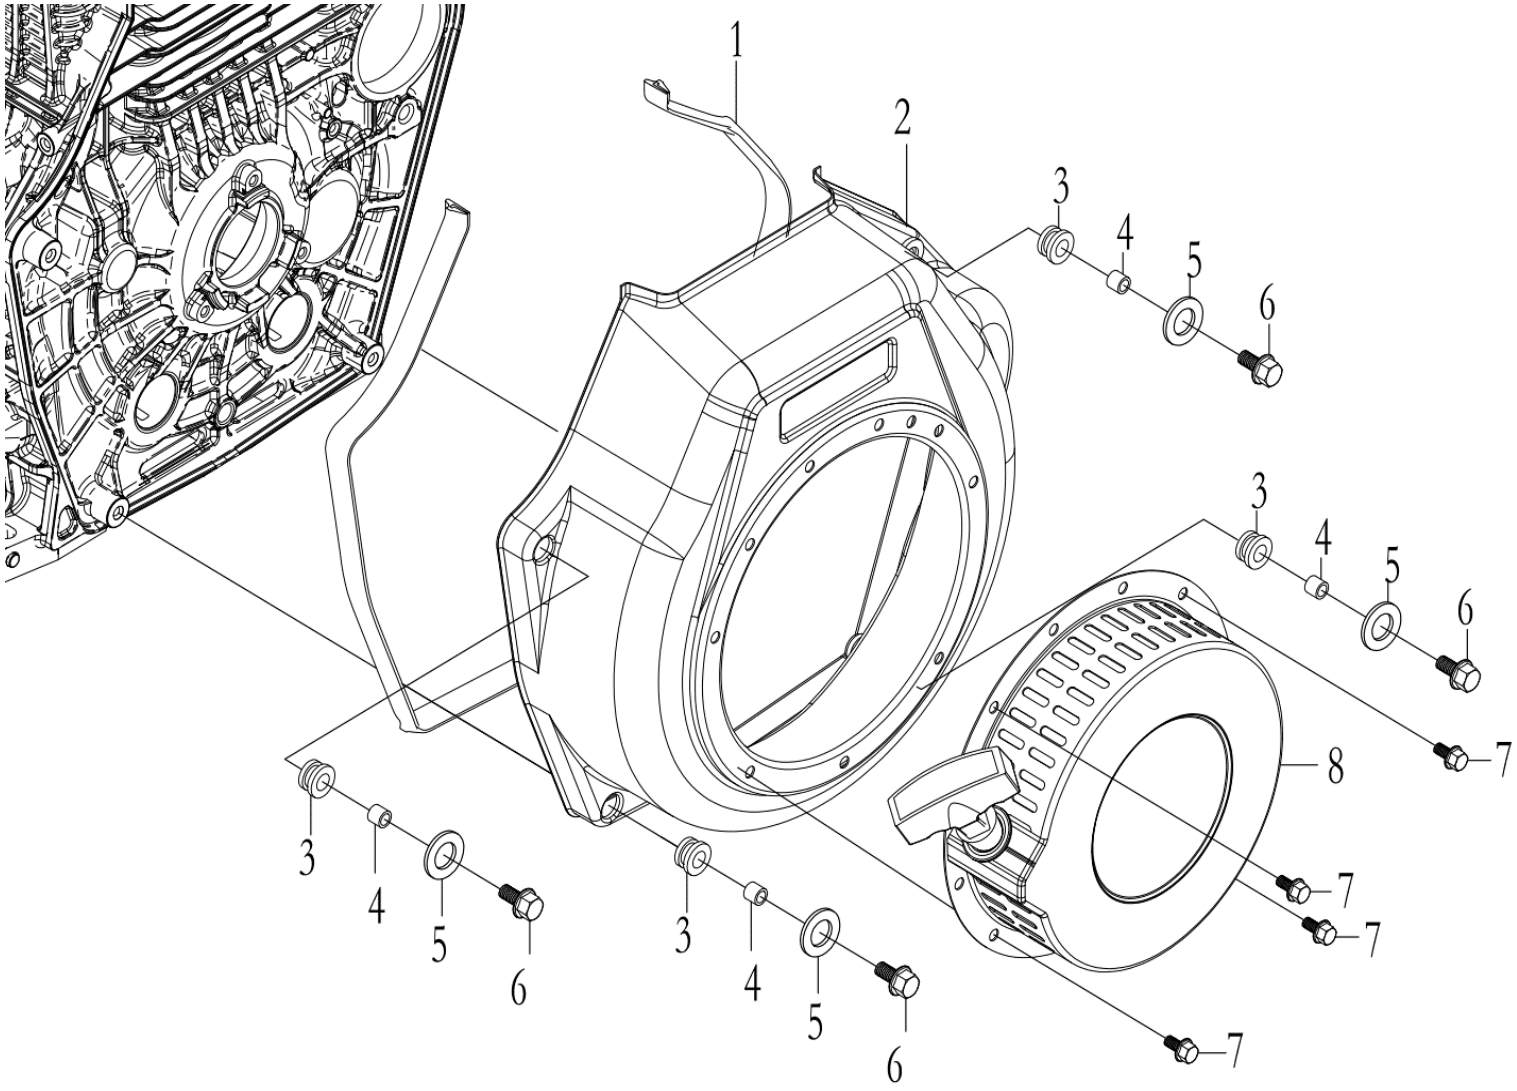


SL NO.	PART NO.	DESCRIPTION	SL NO.	PART NO.	DESCRIPTION
1	AM-186F-MAX-EL01	Shock Absorber Seat			
2	AM-186F-MAX-EL02	Wind Scooper Assy			
3	AM-186F-MAX-EL03	Shock Absorber			
4	AM-186F-MAX-EL04	Collar			
5	AM-186F-MAX-EL05	Large Washer			
6	AM-186F-MAX-EL06	Flange Bolt			
7	AM-186F-MAX-EL07	Flange Bolt			
8	AM-186F-MAX-EL08	Recoil Starter Assy			
9					
10					
11					
12					
13					
14					
15					
16					

Electric starting system - M

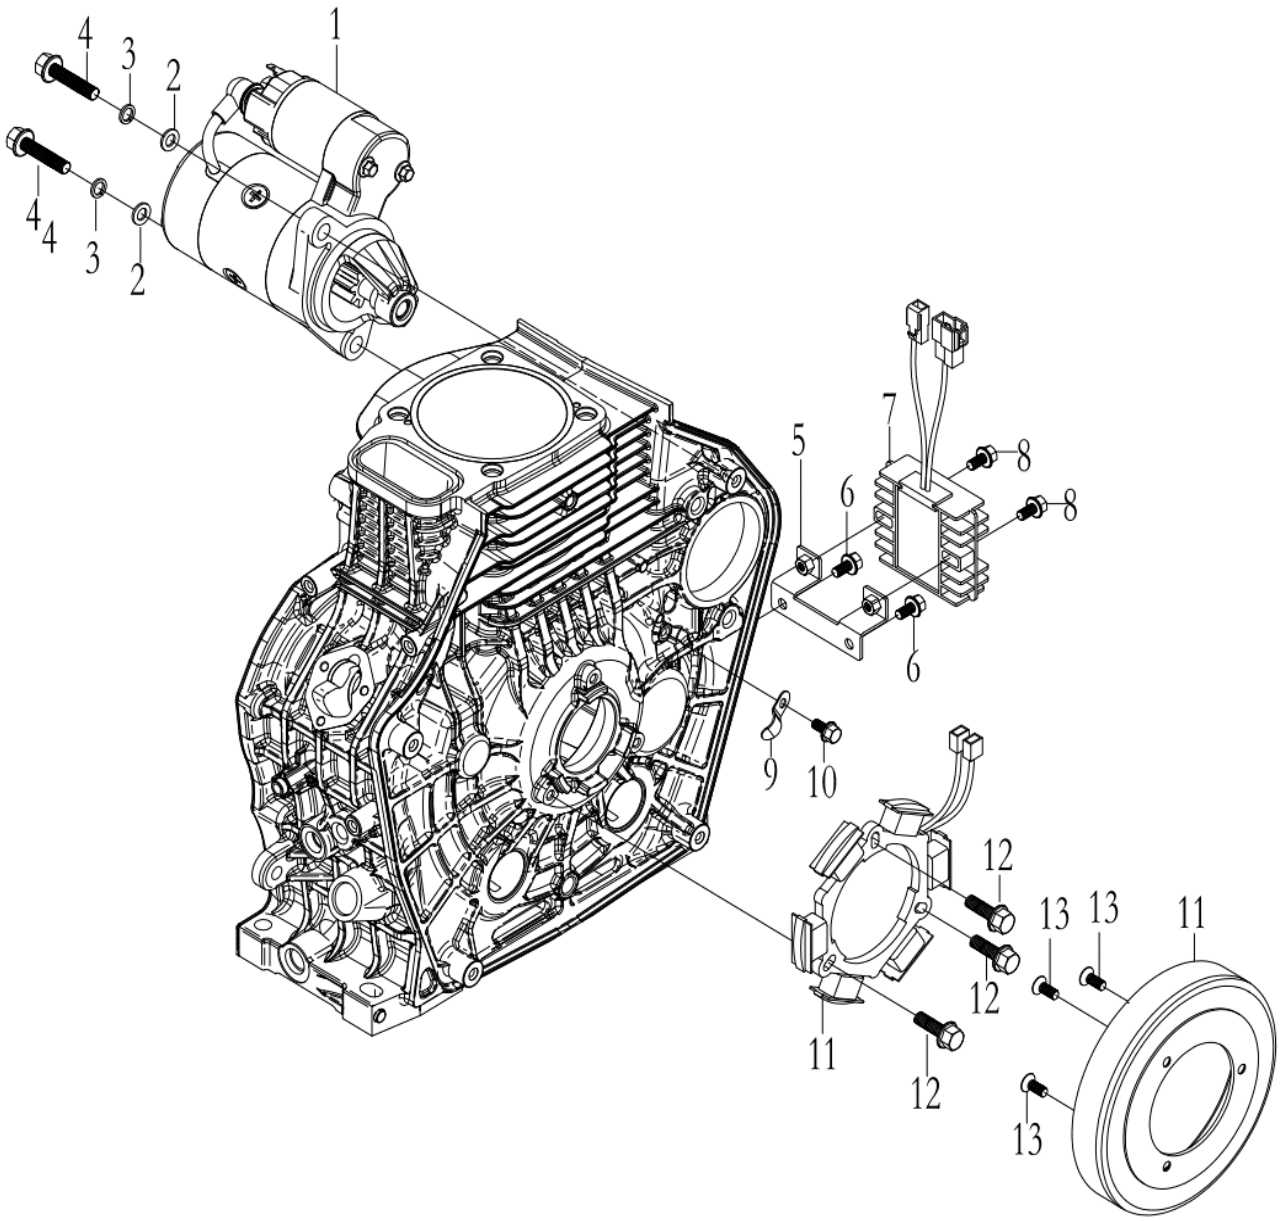

SL NO.	PART NO.	DESCRIPTION	SL NO.	PART NO.	DESCRIPTION
1	AM-186F-MAX-EM01	Starting Motor			
2	AM-186F-MAX-EM02	Washer			
3	AM-186F-MAX-EM03	Spring Washer			
4	AM-186F-MAX-EM04	Bolt			
5	AM-186F-MAX-EM05	Regulator Support			
6	AM-186F-MAX-EM06	Flange Bolt			
7	AM-186F-MAX-EM07	Regulator			
8	AM-186F-MAX-EM08	Flange Bolt			
9	AM-186F-MAX-EM09	Wire Press Plate			
10	AM-186F-MAX-EM10	Bolt			
11	AM-186F-MAX-EM11	Flywheel Alternator			
12	AM-186F-MAX-EM12	Flange Bolt			
13	AM-186F-MAX-EM13	Screw			
14					
15					
16					

Exhaust System - N

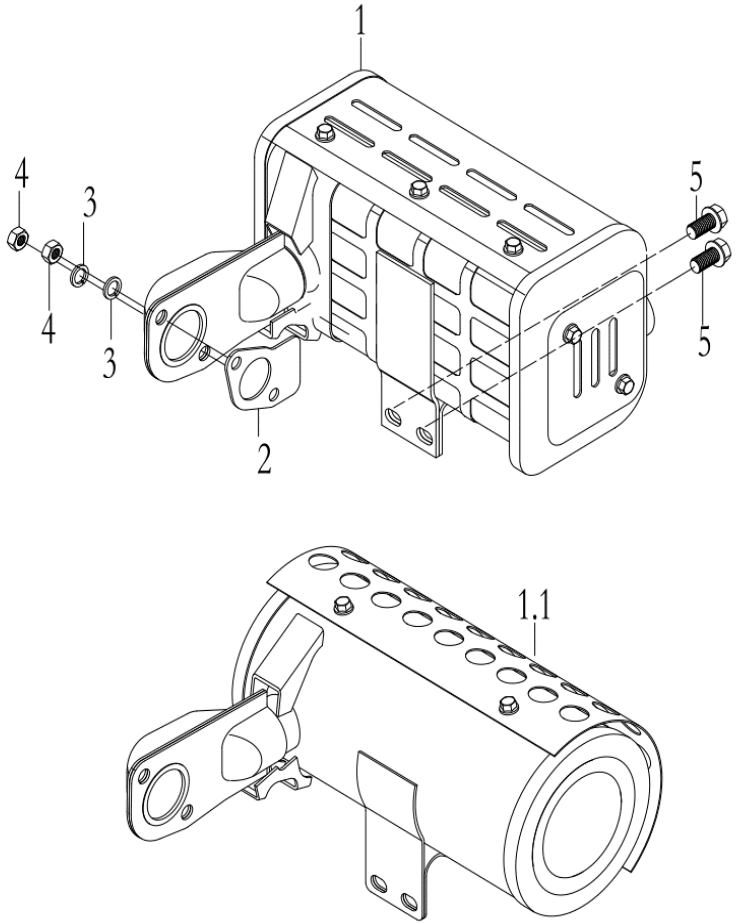

SL NO.	PART NO.	DESCRIPTION
1	AM-186F-MAX-EN01	Silencer Assy
2	AM-186F-MAX-EN02	Silencer Assy
3	AM-186F-MAX-EN03	Silencer Gasket
4	AM-186F-MAX-EN04	Spring Washer
5	AM-186F-MAX-EN05	Flange Nut
6	AM-186F-MAX-EN06	Flange Bolt
7		
8		
9		
10		

INSPECTION & MAINTAINANCE

For safety use, make sure the machine is cleaned every three months. Before working, make sure to inspect the filter and the nozzel and ensure there is no imurity. After working, make sure there is no water in the pump and the hose.

If the machine needs to be repaired in the guarantee period, please return the machine to the shop. You need to provide the certificate of purchase on order to repair or get the substitute.

Before packing, the machine should be cleaned, then use closed packaging, packaging should be firm. Store the machine in dry place.

For transportation safety. The machine should comply with ISTA.

Do not dispose of electrical machines as unsorted mucnipal waste, use seperate collection facilities.

If electrical machines are disposed of in landfills or dumps, hazaardous substances can leak into the ground water and get into the food chain, damaging your health and well being.

When replacing old machines with new ones, the retailer is legally obligated to take back your old machine for disposals at least free of charge.

WARRANTY CARD

CUSTOMER COPY

DATE _____

DATE OF DELIVERY

DEALERS OFFICIAL SEAL

DEALERS SIGN

PURCHASERS NAME & ADDRESS

CUSTOMER SIGN

PRODUCT NAME

PRODUCT SERIAL NO.

INVOICE/DN NO.

I/Will accept the terms and conditions of warranty as in the warranty card

DEALERS COPY

DATE _____

DATE OF DELIVERY

DEALERS OFFICIAL SEAL

DEALERS SIGN

PURCHASERS NAME & ADDRESS

CUSTOMER SIGN

PRODUCT NAME

PRODUCT SERIAL NO.

INVOICE/DN NO.

I/Will accept the terms and conditions of warranty as in the warranty card

COMPANY COPY

DATE _____

DATE OF DELIVERY

DEALERS OFFICIAL SEAL

DEALERS SIGN

PURCHASERS NAME & ADDRESS

CUSTOMER SIGN

PRODUCT NAME

PRODUCT SERIAL NO.

INVOICE/DN NO.

I/Will accept the terms and conditions of warranty as in the warranty card

1.LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser

WARRANTY null & void if

(i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.

4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.
WARRANTY null & void if
(i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.
WARRANTY null & void if
(i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

ISO 9001 : 2015 CERTIFIED COMPANY

FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER

MODEL

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

OPERATIONS

1. Check and test the fuel mixture
2. check and clean the air filter
3. Check , clean and adjust the spark plug
4. Check and adjust the carburetor tuning
5. Check and sparken the cutting tools
6. Product familirisation on usage
7. Start and check the noise, vibration, loosen etc..
8. Routine maintenance and shortage.

FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER

MODEL

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

OPERATIONS

1. Check and test the fuel mixture
2. check and clean the air filter
3. Check , clean and adjust the spark plug
4. Check and adjust the carburetor tuning
5. Check and sparken the cutting tools
6. Product familirisation on usage
7. Start and check the noise, vibration, loosen etc..
8. Routine maintenance and shortage.

FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER

MODEL

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

OPERATIONS

1. Check and test the fuel mixture
2. check and clean the air filter
3. Check , clean and adjust the spark plug
4. Check and adjust the carburetor tuning
5. Check and sparken the cutting tools
6. Product familirisation on usage
7. Start and check the noise, vibration, loosen etc..
8. Routine maintenance and shortage.

DOS & DONTS

1. Always read the instruction manual supplied along with the equipments and understand the correct installation and operating procedures before attempting to use the equipments.

2. It is important to use the personal protection equipments such as head helmet with visor, ear defenders, goggles, safety gloves, cut resistant shoes, trousers and jackets while operating potentially dangerous machines

3. Avoid untrained persons using the equipments. Children must not be allowed to handle these equipments

4. Always use genuine spares and accessories in repairs and usage to derive maximum life of the equipments.

5. Always keep the equipments in good working condition to minimize loss of output as well as to reduce the pollution and save the environment

6.Do not use the machine within range of persons unless they wear protective clothing

7. Do not operate the machine when fatigued or under the influence of alcohol or drugs

8. When the machine is running, please maintain a constant water supply. Without water circulation will damage the sealing rings of the machine.

9. For more query kindly contact for our Service Center/Dealer/ franchise

AGRIMATE MULTI PURPOSE EQUIPMENT
ANYWHERE - ANYTIME - ANY CROP















ratnagiri impex
BRINGING YOU THE FUTURE... NOW

IMPORTED & MARKETED BY,

RATNAGIRI IMPEX PVT., LTD.,
Annapurna House, #1 / 1G, 7th Cross, New Guddadahalli Mysore Road, Bangalore - 560 026
Missed Call : 7393 938 938 Email: ask@agrimart.in