USER MANUAL

AGRIMATE®
APNALO MUNAFA BADALO


USER MANUAL

F TYPE DITCHER ATTACHMENT




AN ISO 9001 : 2015 CERTIFIED COMPANY

MACHINE PARTS

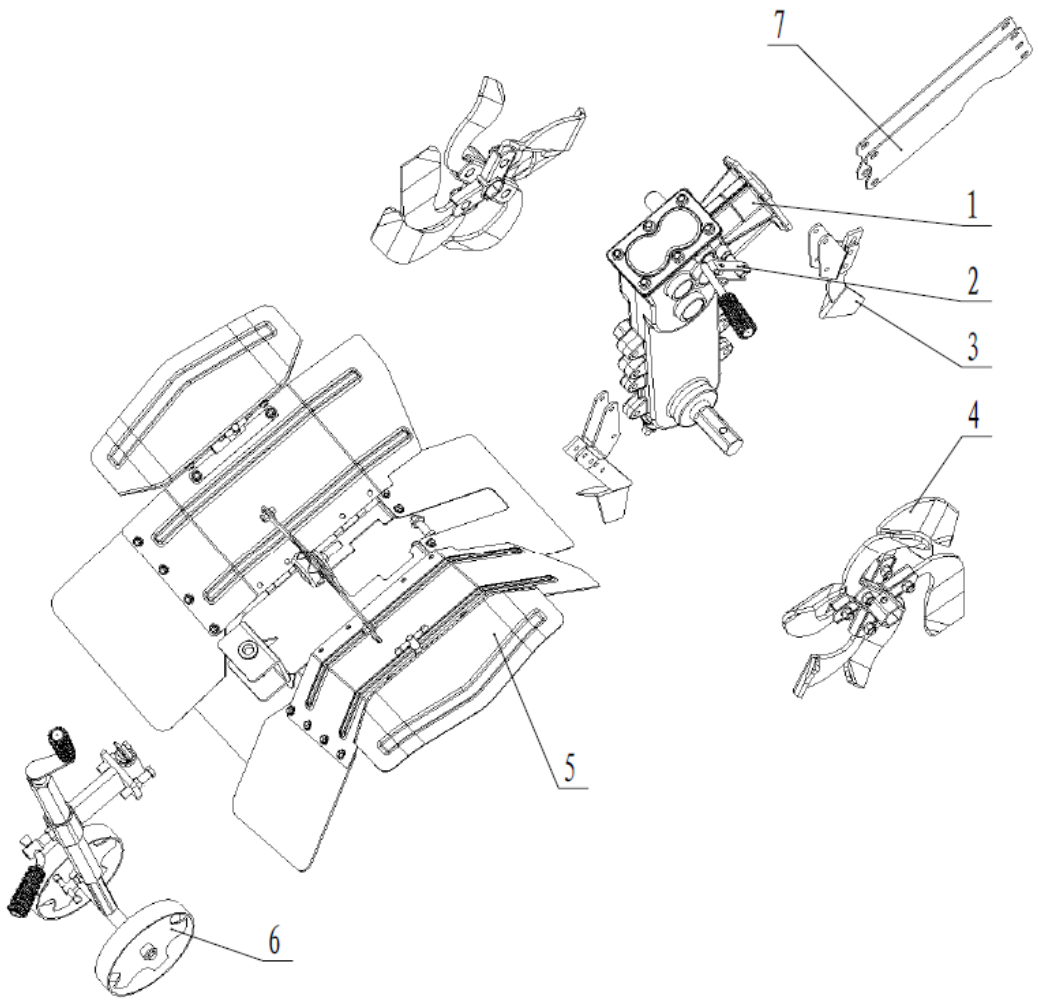

SL NO.	PART NO.	DESCRIPTION
1	AM-FTD-A	Transmission case parts
2	AM-FTD-B	Shift handle parts
3	AM-FTD-C	Breaking Blade Parts
4	AM-FTD-D	Six-piece trenching knife assembly
5	AM-FTD-E	Fender parts
6	AM-FTD-F	Rear wheel parts
7	AM-FTD-G	Box connecting plate parts
8	AM-FTD-H	Eight-piece trenching knife assembly
9	AM-FTD-J	Four-piece three-group rotary tiller blade assembly


Transmission Case Parts - A

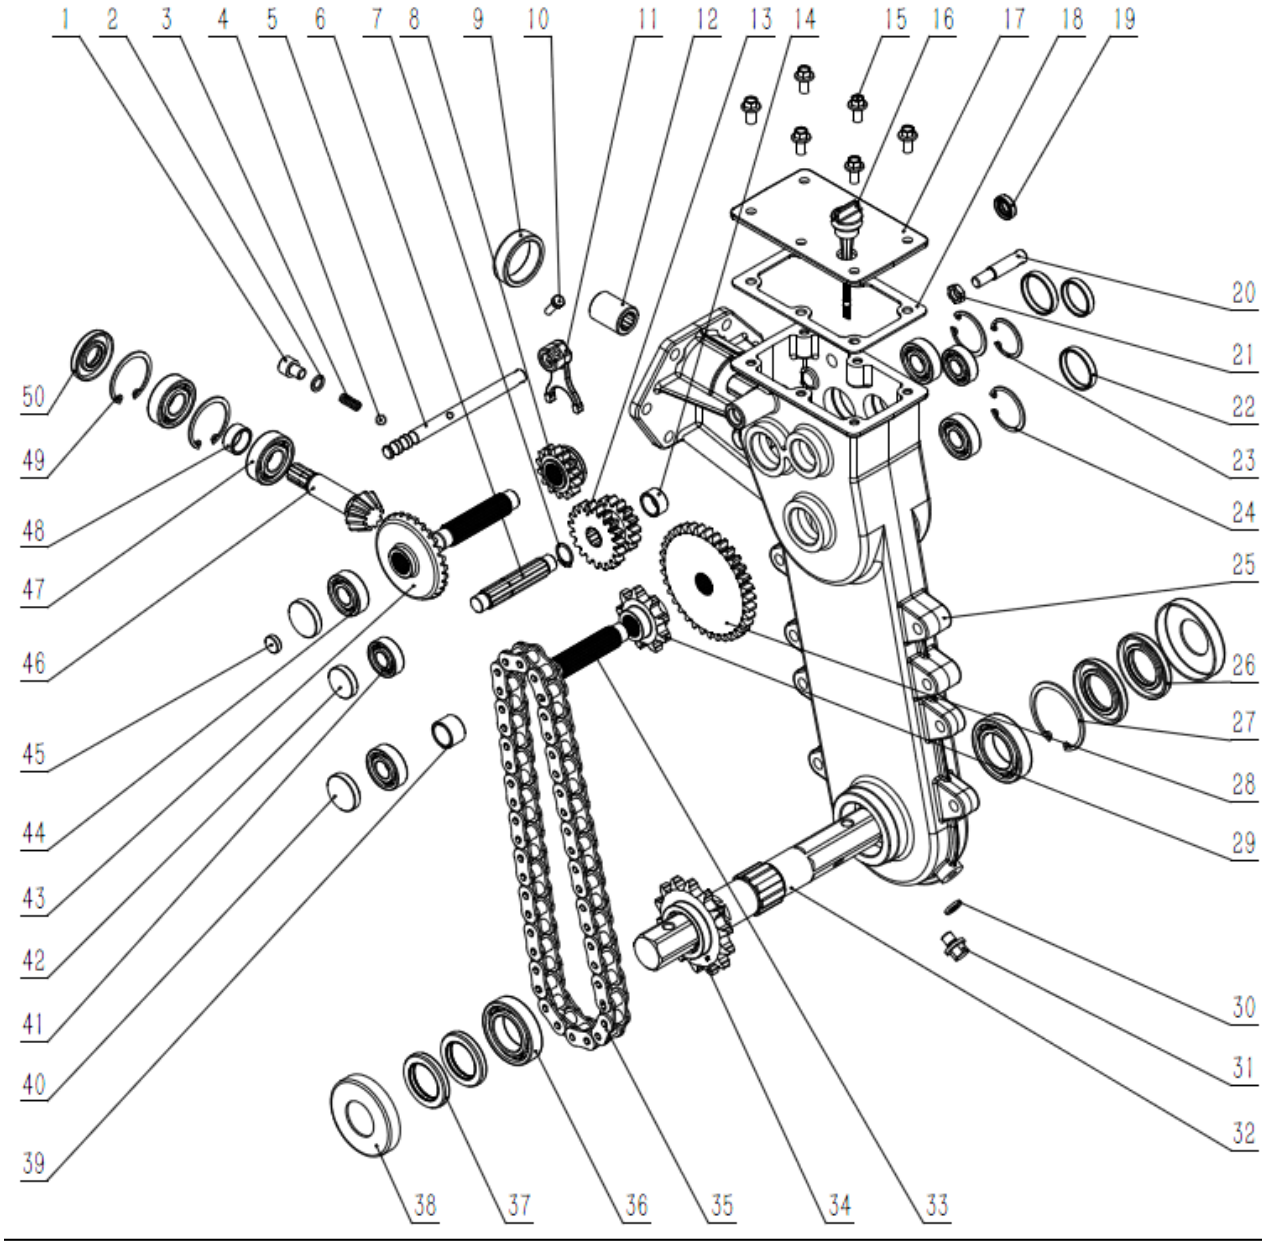

SL NO.	PART NO.	DESCRIPTION	SL NO.	PART NO.	DESCRIPTION
1	AM-FTD-A01	Hexagon socket head screw	17	AM-FTD-A17	Box cover
2	AM-FTD-A02	Aluminum Washer	18	AM-FTD-A18	Cover rubber pad
3	AM-FTD-A03	Gear Position Compression Spring	19	AM-FTD-A19	Non-standard oil seal
4	AM-FTD-A04	Steel Ball	20	AM-FTD-A20	shift arm
5	AM-FTD-A05	Gear Shift Fork Shaft	21	AM-FTD-A21	Hexagon thin nut
6	AM-FTD-A06	Intermediate Shaft	22	AM-FTD-A22	Oil plug
7	AM-FTD-A07	Retaining Ring for Shaft	23	AM-FTD-A23	Circlip for hole 35
8	AM-FTD-A08	Gear Shift Tooth	24	AM-FTD-A24	Circlip for hole 40
9	AM-FTD-A09	Positioning Sleeve	25	AM-FTD-A25	transmission box
10	AM-FTD-A10	Hexagon Head Bolt	26	AM-FTD-A26	Non-standard oil seal
11	AM-FTD-A11	Gear Shift Fork	27	AM-FTD-A27	Hole Circlip
12	AM-FTD-A12	Spline sleeve	28	AM-FTD-A28	driven gear
13	AM-FTD-A13	Double transition gear	29	AM-FTD-A29	Driving sprocket
14	AM-FTD-A14	Bushing	30	AM-FTD-A30	Gasket
15	AM-FTD-A15	Hexagon flange bolt	31	AM-FTD-A31	Oil drain bolt
16	AM-FTD-A16	Oil dipstick/with O-ring	32	AM-FTD-A32	Hexagonal output shaft


SL NO.	PART NO.	DESCRIPTION	SL NO.	PART NO.	DESCRIPTION
33	AM-FTD-A33	transmission shaft	45	AM-FTD-A44	Deep groove ball bearing
34	AM-FTD-A34	Driven sprocket	46	AM-FTD-A45	Oil plug
35	AM-FTD-A35	Chain 12A-44 sections	47	AM-FTD-A46	Driving bevel gear
36	AM-FTD-A36	Deep groove ball bearing	48	AM-FTD-A47	Deep groove ball bearing
37	AM-FTD-A37	Non-standard oil seal	49	AM-FTD-A48	Bushing
38	AM-FTD-A38	Dust cover	50	AM-FTD-A49	Hole circlip
39	AM-FTD-A39	Bushing	51	AM-FTD-A50	Non-standard oil seal
40	AM-FTD-A40	Oil plug			
41	AM-FTD-A41	Deep groove ball bearing			
42	AM-FTD-A42	Oil plug			
43	AM-FTD-A43	Driven bevel gear			


Shift Handle Parts - B

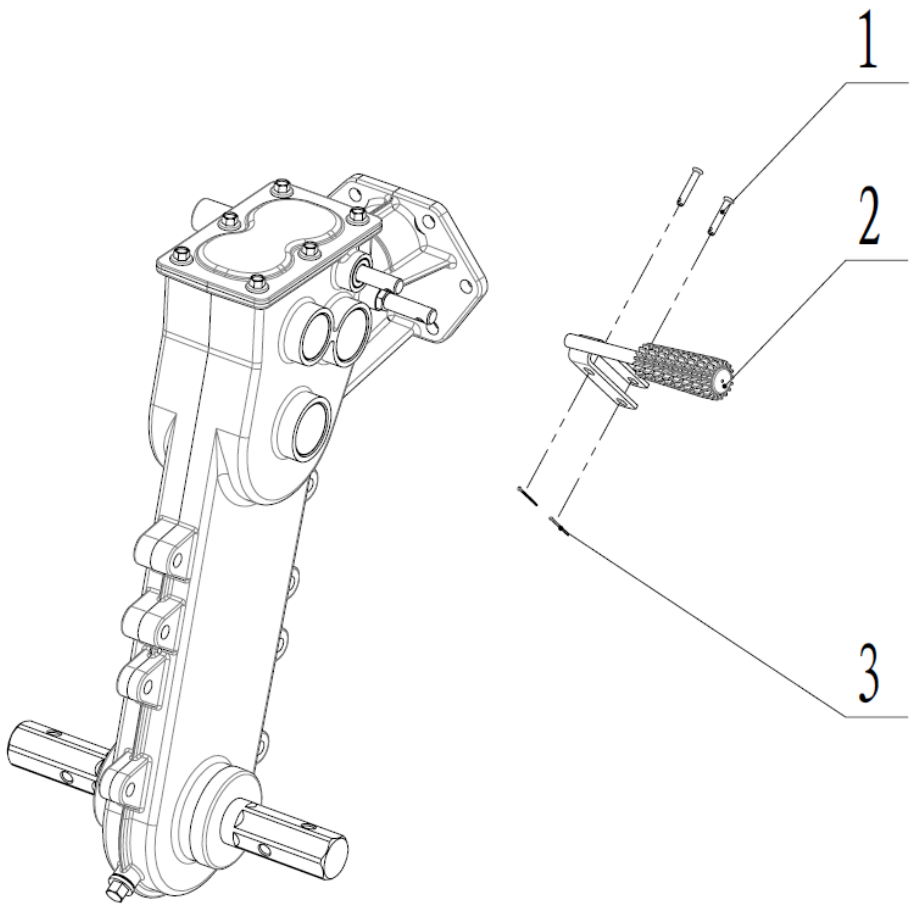

SL NO.	PART NO.	DESCRIPTION
1	AM-FTD-B01	Pin
2	AM-FTD-B02	shift knob
3	AM-FTD-B03	Split pin


Breaking Blade Parts - C

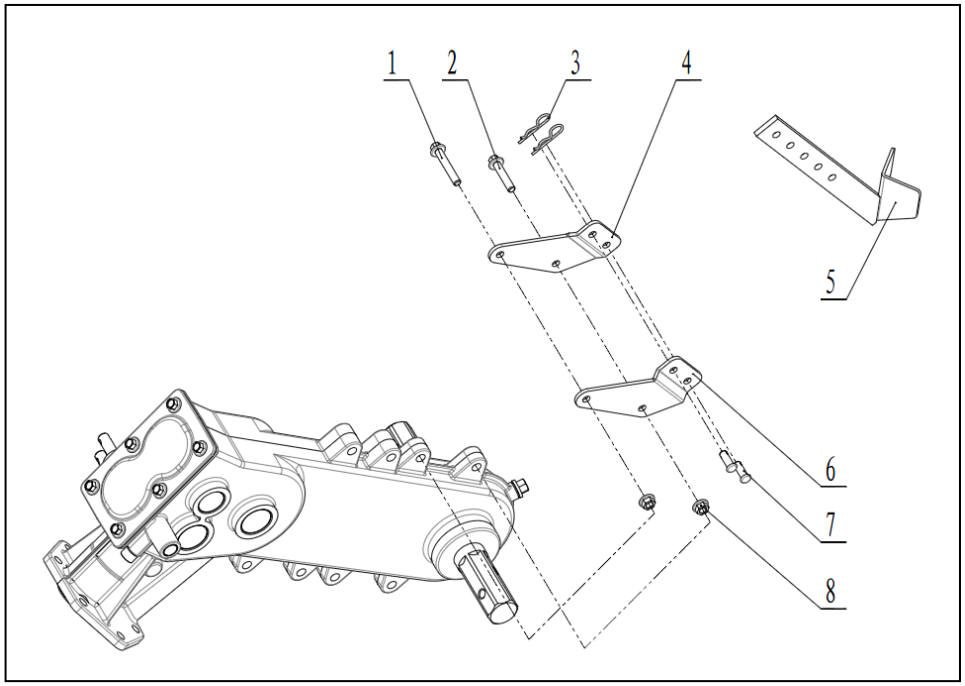

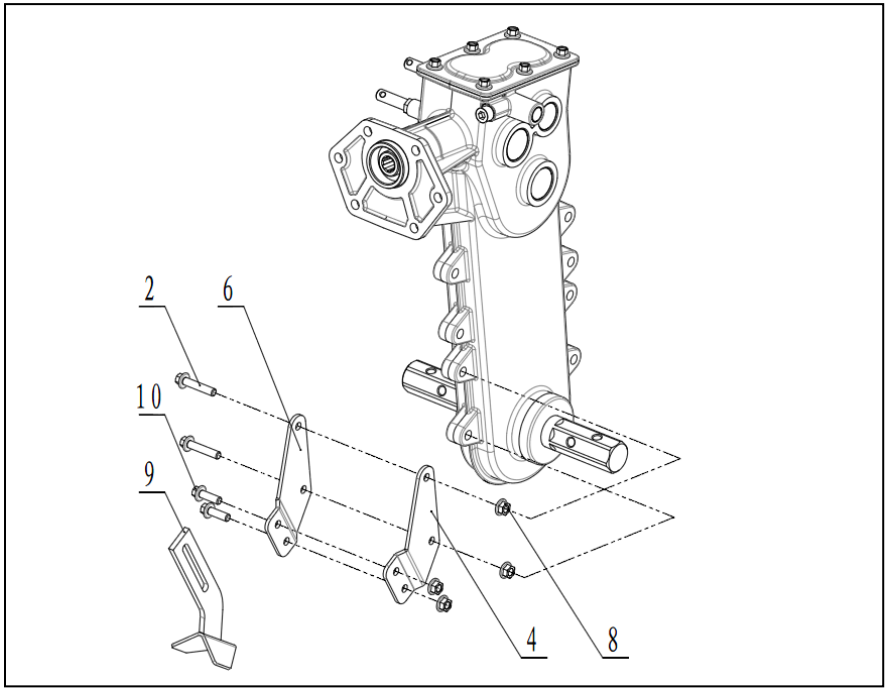


SL NO.	PART NO.	DESCRIPTION	SL NO.	PART NO.	DESCRIPTION
1	AM-FTD-C01	Hexagon flange bolt			
2	AM-FTD-C02	Hexagon flange bolt			
3	AM-FTD-C03	Circling B			
4	AM-FTD-C04	Right side of the shovel connecting plate			
5	AM-FTD-C05	earth breaker shovel			
6	AM-FTD-C06	Breaking shovel connecting plate left			
7	AM-FTD-C07	Pin			
8	AM-FTD-C08	Hexagonal flange nut			
9	AM-FTD-C09	earth breaker shovel			
10	AM-FTD-C10	Hexagon flange bolt			

Six-Piece Trenching Knife Assembly - D

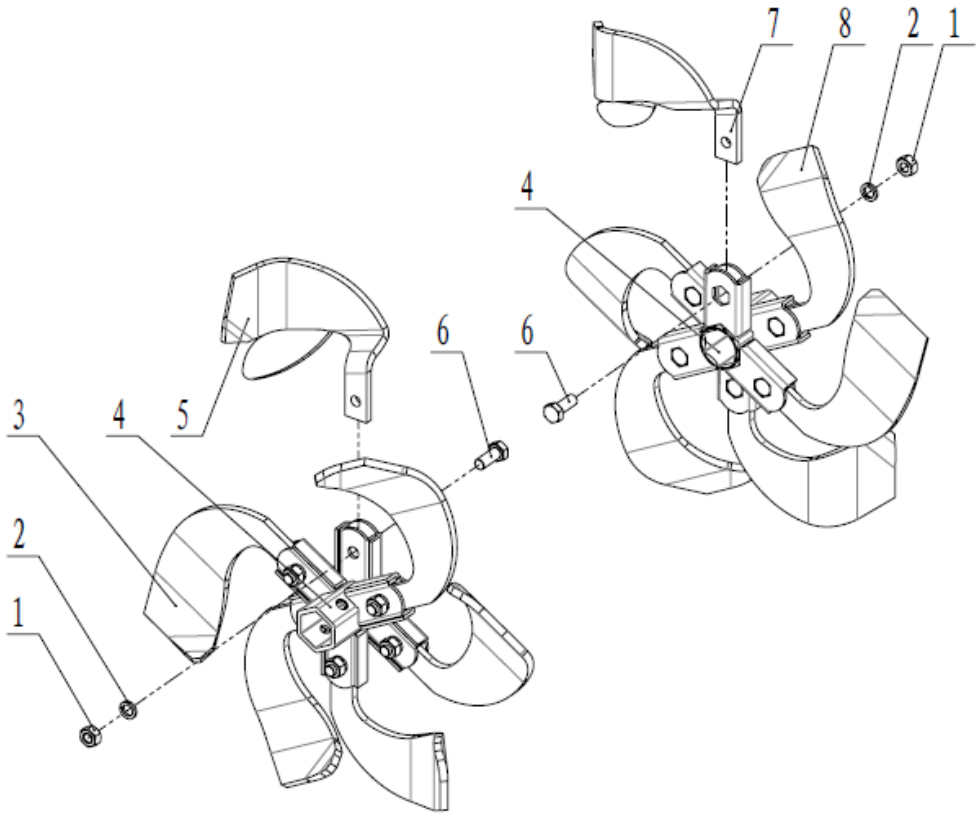


SL NO.	PART NO.	DESCRIPTION
1	AM-FTD-D01	Type 1 hexagonal nut
2	AM-FTD-D02	Standard spring washer
3	AM-FTD-D03	Flat grooving blade/right
4	AM-FTD-D04	Six-piece groove cutter
5	AM-FTD-D05	Eccentric ridging blade/right
6	AM-FTD-D06	Hexagon head bolt
7	AM-FTD-D07	Eccentric ridging blade/left
8	AM-FTD-D08	Flat grooving blade/left

Fender Parts - E

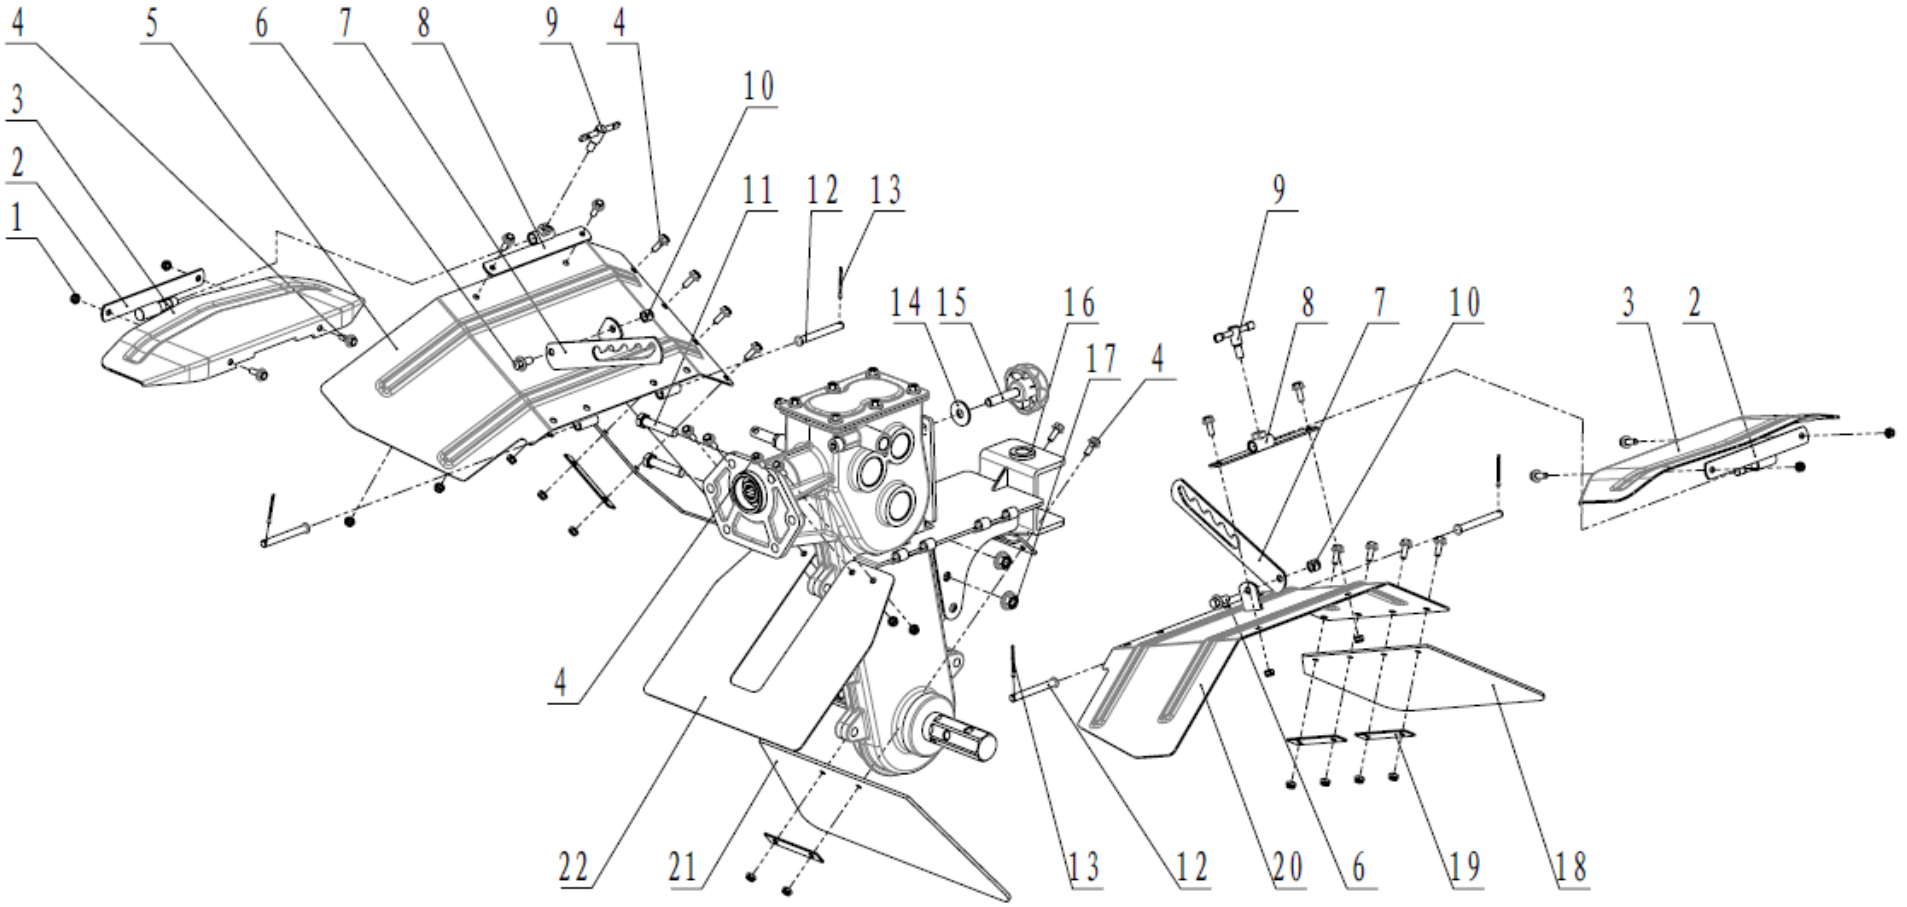


SL NO.	PART NO.	DESCRIPTION	SL NO.	PART NO.	DESCRIPTION
1	AM-FTD-E01	Type-1 non-metallic embedded hex locknut	12	AM-FTD-E12	Pin shaft
2	AM-FTD-E02	Hinge A	13	AM-FTD-E13	Cotter pin
3	AM-FTD-E03	Side fender	14	AM-FTD-E14	Large washer
4	AM-FTD-E04	Hex flange bolt	15	AM-FTD-E15	Adjustment block locking handle
5	AM-FTD-E05	Right fender	16	AM-FTD-E16	Support frame
6	AM-FTD-E06	Hex flange bolt	17	AM-FTD-E17	Hex flange nut
7	AM-FTD-E07	Fender angle adjustment block	18	AM-FTD-E18	Outer mudguard rubber plate
8	AM-FTD-E08	Hinge B	19	AM-FTD-E19	Rubber block pressing strip
9	AM-FTD-E09	Small locking handle	20	AM-FTD-E20	Left fender
10	AM-FTD-E10	Type-1 non-metallic embedded hex locknut	21	AM-FTD-E21	Inner mudguard rubber plate
11	AM-FTD-E11	Hex head bolt	22	AM-FTD-E22	Front fender

Rear wheel Parts - F

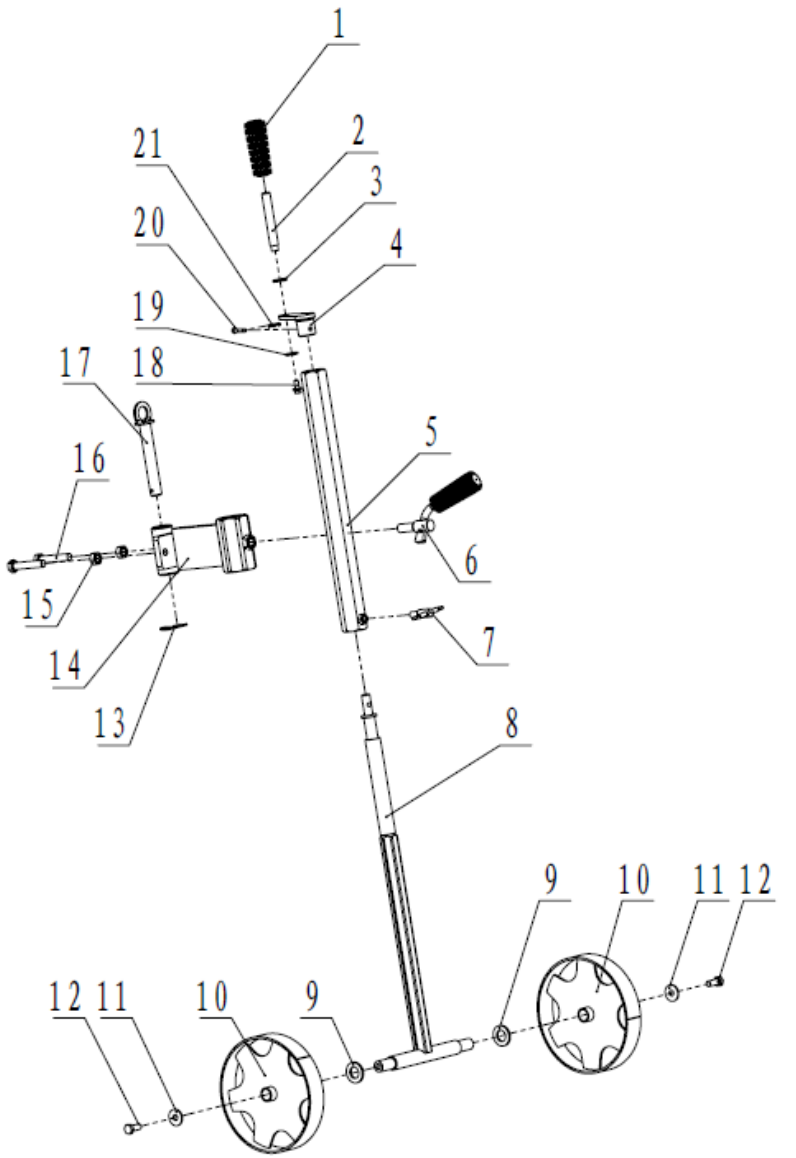


SL NO.	PART NO.	DESCRIPTION
1	AM-FTD-F01	Shock-absorbing handle
2	AM-FTD-F02	Adjustment handle connecting rod
3	AM-FTD-F03	Large washer
4	AM-FTD-F04	Adjustment handle connector block
5	AM-FTD-F05	Extended rear wheel connecting rod
6	AM-FTD-F06	Resistance plow locking handle
7	AM-FTD-F07	Small locking handle
8	AM-FTD-F08	Bracket assembly / width
9	AM-FTD-F09	Flat washer
10	AM-FTD-F10	Rear wheel
11	AM-FTD-F11	Large washer
12	AM-FTD-F12	Hex head bolt
13	AM-FTD-F13	Snap ring B
14	AM-FTD-F14	Plow connecting frame
15	AM-FTD-F15	Hex nut
16	AM-FTD-F16	Hex head bolt
17	AM-FTD-F17	Pin with ring
18	AM-FTD-F18	Hex flange bolt
19	AM-FTD-F19	Large washer
20	AM-FTD-F20	Pin shaft
21	AM-FTD-F21	Snap ring A

Box Connecting Plate Parts - G

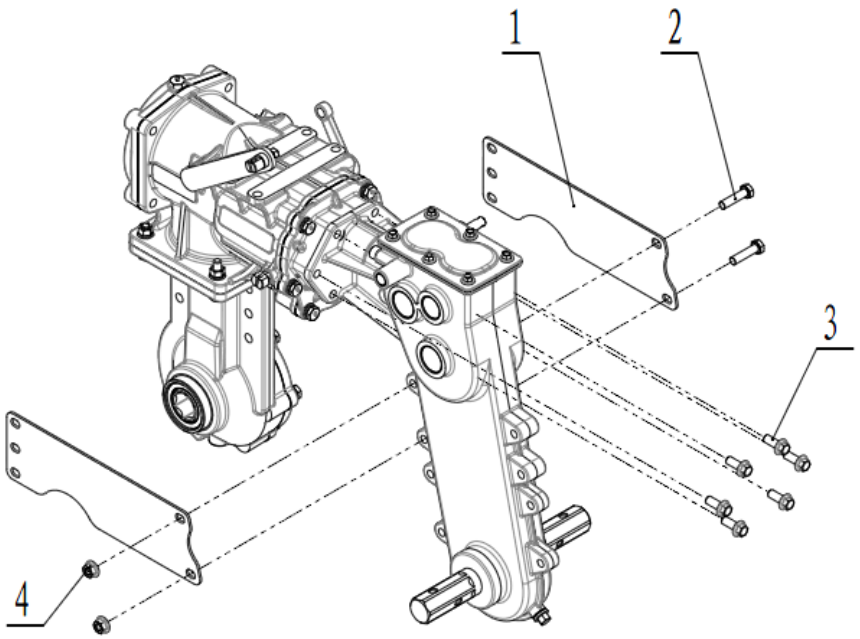


SL NO.	PART NO.	DESCRIPTION
1	AM-FTD-G01	Gearbox connecting plate
2	AM-FTD-G02	Hex head bolt
3	AM-FTD-G03	Hex flange bolt
4	AM-FTD-G04	Hex flange nut

Eight-Piece Trenching Knife Assembly - H

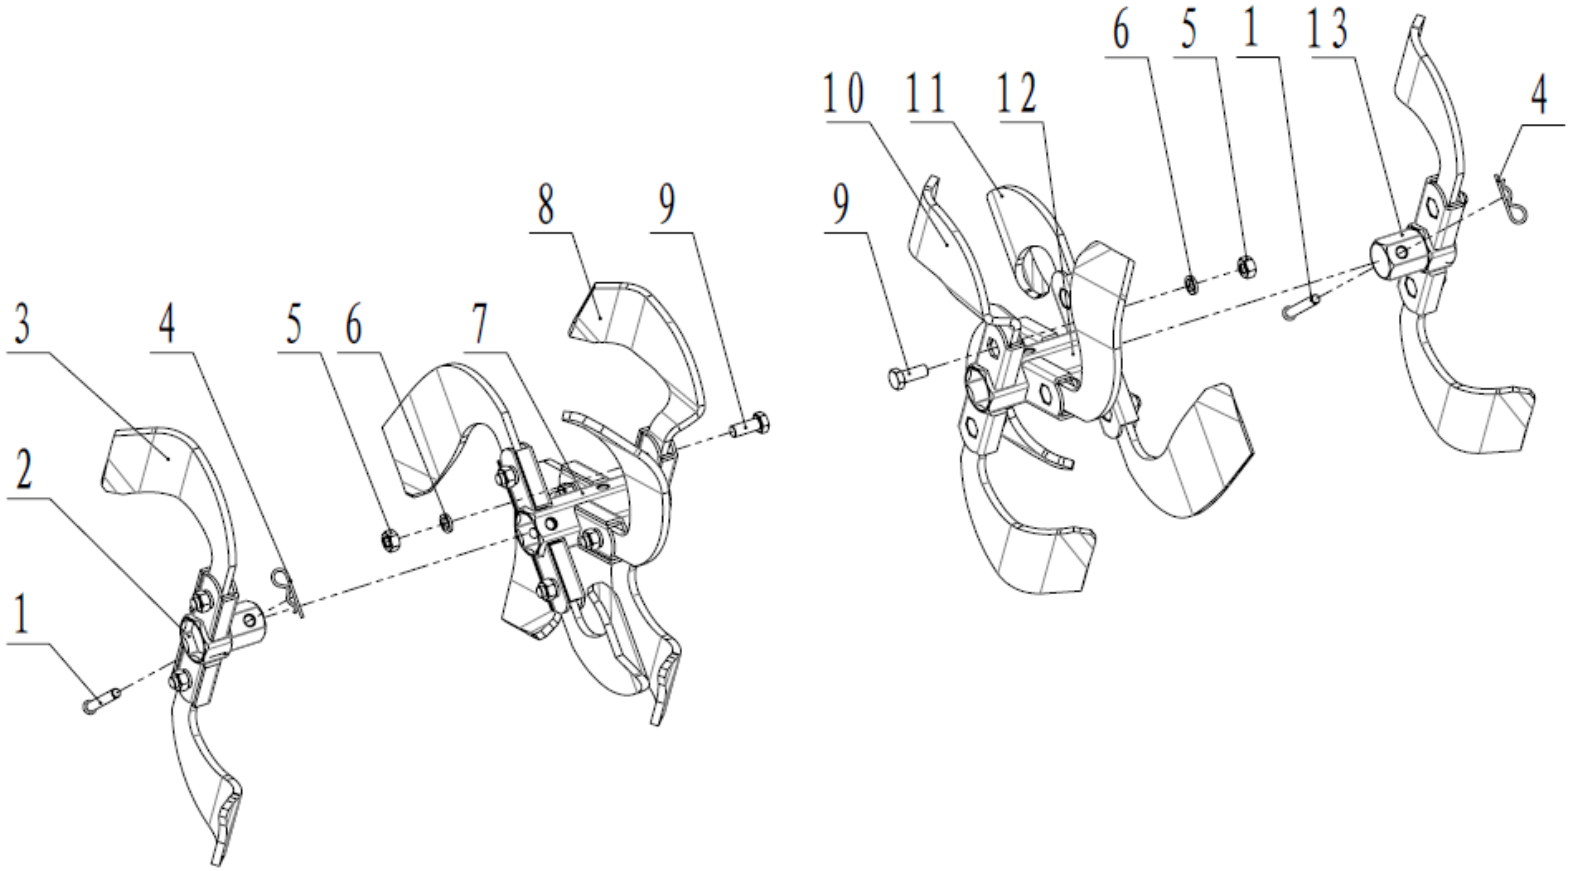

SL NO.	PART NO.	DESCRIPTION	SL NO.	PART NO.	DESCRIPTION
1	AM-FTD-H01	Pin shaft			
2	AM-FTD-H02	8-blade sub trenching knife drum / left			
3	AM-FTD-H03	Flat trenching blade / right			
4	AM-FTD-H04	Snap ring B			
5	AM-FTD-H05	Type-1 hex nut			
6	AM-FTD-H06	Standard spring washer			
7	AM-FTD-H07	8-blade main trenching knife drum / left			
8	AM-FTD-H08	Bowl-shaped trenching blade / right			
9	AM-FTD-H09	Hex head bolt			
10	AM-FTD-H10	Bowl-shaped trenching blade / left			
11	AM-FTD-H11	Flat trenching blade / left			
12	AM-FTD-H12	8-blade main trenching knife drum / right			
13	AM-FTD-H13	8-blade sub trenching knife drum / right			

Four-Piece Three-Group Rotary Riller Rlade Assembly - J

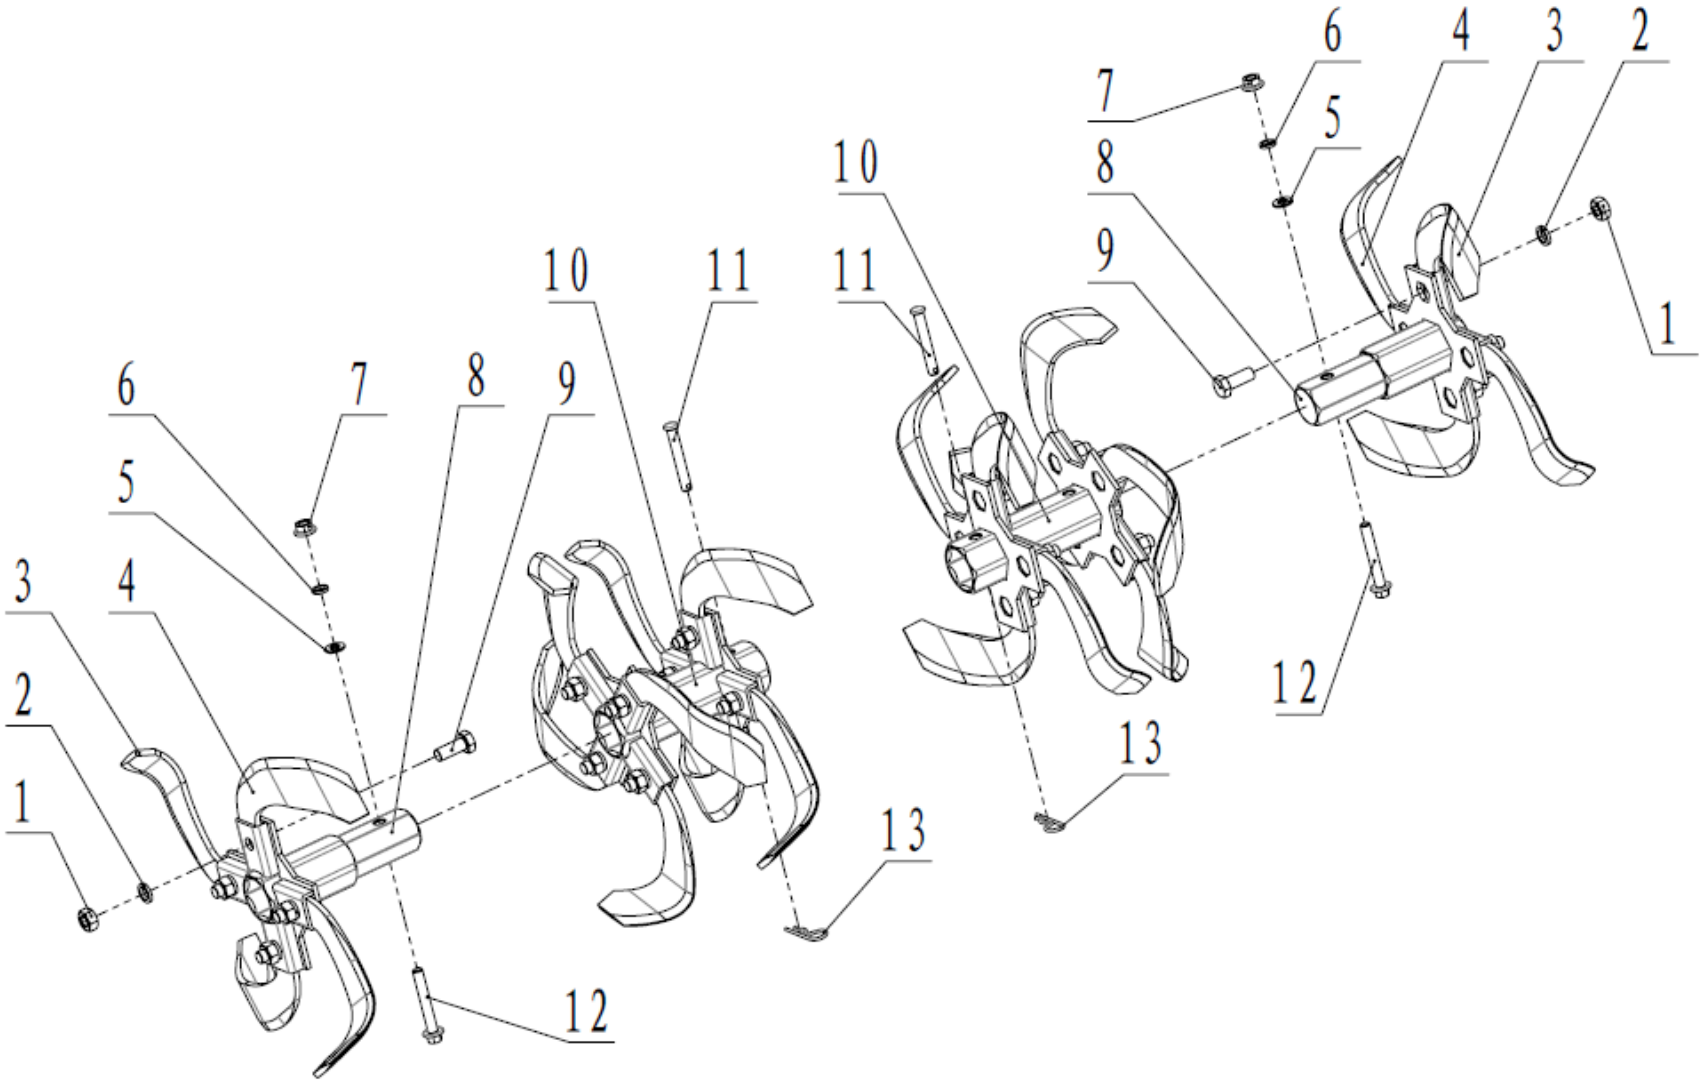

SL NO.	PART NO.	DESCRIPTION	SL NO.	PART NO.	DESCRIPTION
1	AM-FTD-J01	Type-1 hex nut			
2	AM-FTD-J02	Standard spring washer			
3	AM-FTD-J03	Rotary tiller blade / left			
4	AM-FTD-J04	Rotary tiller blade / right			
5	AM-FTD-J05	Flat washer			
6	AM-FTD-J06	Standard spring washer			
7	AM-FTD-J07	Hex flange nut			
8	AM-FTD-J08	Sub blade drum			
9	AM-FTD-J09	Hex head bolt			
10	AM-FTD-J10	Main blade drum			
11	AM-FTD-J11	Pin shaft			
12	AM-FTD-J12	Hex flange bolt			
13	AM-FTD-J13	Snap ring B			

INSPECTION & MAINTAINANCE

For safety use, make sure the machine is cleaned every three months. Before working, make sure to inspect the filter and the nozzel and ensure there is no imurity. After working, make sure there is no water in the pump and the hose.

If the machine needs to be repaired in the guarantee period, please return the machine to the shop. You need to provide the certificate of purchase on order to repair or get the substitute.

Before packing, the machine should be cleaned, then use closed packaging, packaging should be firm. Store the machine in dry place.

For transportation safety. The machine should comply with ISTA.

Do not dispose of electrical machines as unsorted mucnipal waste, use seperate collection facilities.

If electrical machines are disposed of in landfills or dumps, hazaardous substances can leak into the ground water and get into the food chain, damaging your health and well being.

When replacing old machines with new ones, the retailer is legally obligated to take back your old machine for disposals at least free of charge.

WARRANTY CARD

CUSTOMER COPY

DATE _____

DATE OF DELIVERY

DEALERS OFFICIAL SEAL

DEALERS SIGN

PURCHASERS NAME & ADDRESS

CUSTOMER SIGN

PRODUCT NAME

PRODUCT SERIAL NO.

INVOICE/DN NO.

I/Will accept the terms and conditions of warranty as in the warranty card

DEALERS COPY

DATE _____

DATE OF DELIVERY

DEALERS OFFICIAL SEAL

DEALERS SIGN

PURCHASERS NAME & ADDRESS

CUSTOMER SIGN

PRODUCT NAME

PRODUCT SERIAL NO.

INVOICE/DN NO.

I/Will accept the terms and conditions of warranty as in the warranty card

COMPANY COPY

DATE _____

DATE OF DELIVERY

DEALERS OFFICIAL SEAL

DEALERS SIGN

PURCHASERS NAME & ADDRESS

CUSTOMER SIGN

PRODUCT NAME

PRODUCT SERIAL NO.

INVOICE/DN NO.

I/Will accept the terms and conditions of warranty as in the warranty card

1.LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser

WARRANTY null & void if

(i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.

4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.
WARRANTY null & void if
(i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.
WARRANTY null & void if
(i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

ISO 9001 : 2015 CERTIFIED COMPANY

FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER

MODEL

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

OPERATIONS

1. Check and test the fuel mixture
2. check and clean the air filter
3. Check , clean and adjust the spark plug
4. Check and adjust the carburetor tuning
5. Check and sparken the cutting tools
6. Product familirisation on usage
7. Start and check the noise, vibration, loosen etc..
8. Routine maintenance and shortage.

FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER

MODEL

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

OPERATIONS

1. Check and test the fuel mixture
2. check and clean the air filter
3. Check , clean and adjust the spark plug
4. Check and adjust the carburetor tuning
5. Check and sparken the cutting tools
6. Product familirisation on usage
7. Start and check the noise, vibration, loosen etc..
8. Routine maintenance and shortage.

FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER

MODEL

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

OPERATIONS

1. Check and test the fuel mixture
2. check and clean the air filter
3. Check , clean and adjust the spark plug
4. Check and adjust the carburetor tuning
5. Check and sparken the cutting tools
6. Product familirisation on usage
7. Start and check the noise, vibration, loosen etc..
8. Routine maintenance and shortage.

DOS & DONTS

1. Always read the instruction manual supplied along with the equipments and understand the correct installation and operating procedures before attempting to use the equipments.

2. It is important to use the personal protection equipments such as head helmet with visor, ear defenders, goggles, safety gloves, cut resistant shoes, trousers and jackets while operating potentially dangerous machines

3. Avoid untrained persons using the equipments. Children must not be allowed to handle these equipments

4. Always use genuine spares and accessories in repairs and usage to derive maximum life of the equipments.

5. Always keep the equipments in good working condition to minimize loss of output as well as to reduce the pollution and save the environment

6.Do not use the machine within range of persons unless they wear protective clothing

7. Do not operate the machine when fatigued or under the influence of alcohol or drugs

8. When the machine is running, please maintain a constant water supply. Without water circulation will damage the sealing rings of the machine.

9. For more query kindly contact for our Service Center/Dealer/ franchise

AGRIMATE MULTI PURPOSE EQUIPMENT
ANYWHERE - ANYTIME - ANY CROP























ratnagiri impex
BRINGING YOU THE FUTURE... NOW

IMPORTED & MARKETED BY,

RATNAGIRI IMPEX PVT., LTD.,
Annapurna House, #1 / 1G, 7th Cross, New Guddadahalli Mysore Road, Bangalore - 560 026
Missed Call : 7393 938 938 Email: ask@agrimart.in