USER MANUAL

AGRIMATE®
APNALO MUNAFA BADALO

USER MANUAL

AGRICULTURE WATERPUMP-GASOLINE


AM-WP-15-152-NT



AN ISO 9001 : 2015 CERTIFIED COMPANY

AGRIMATE AGRIMATE AGRIMATE

ENGINE DIAGRAM & PART LIST OF AM-WP-15-152-NT AGRICULTURE WATER PUMP GASOLINE

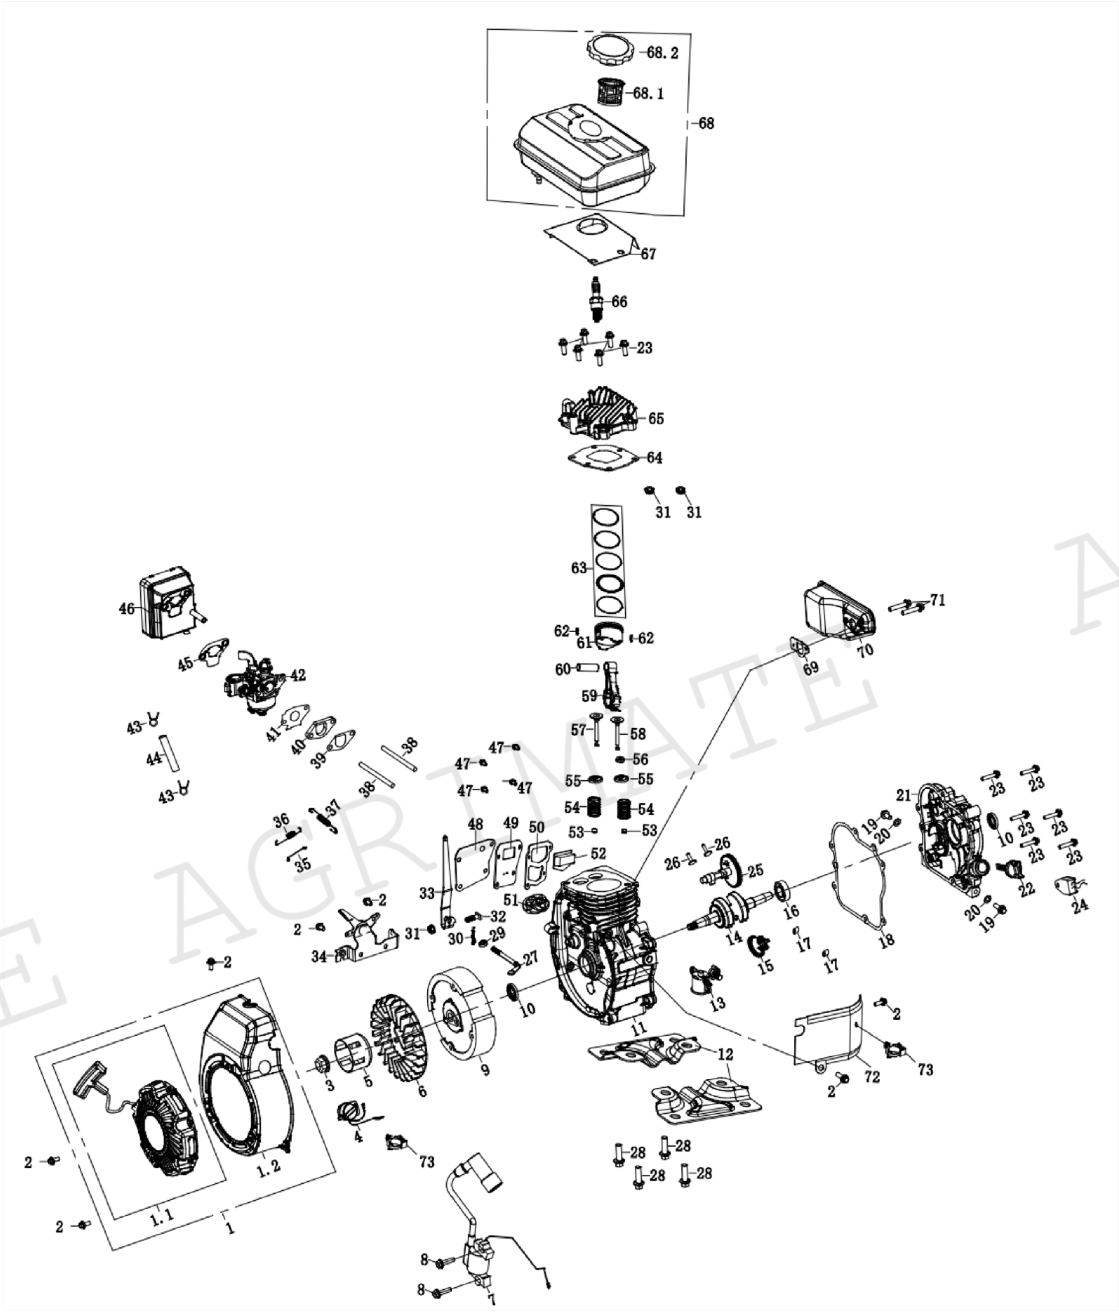

AGRIMATE AGRIMATE AGRIMATE

ENGINE DIAGRAM & PART LIST OF AM-WP-15-152-NT AGRICULTURE WATER PUMP GASOLINE

SL NO.	PART NO.	DESCRITPTION	SL NO.	PART NO.	DESCRITPTION
1	AM-WP-15-152-E01	Starter assembly	15	AM-WP-15-152-E15	Speed-adjusting tooth
1.1	AM-WP-15-152-E1.1	Turntable assembly	16	AM-WP-15-152-E16	Bearing
1.2	AM-WP-15-152-E1.2	Wind scooper	17	AM-WP-15-152-E17	Positioning pin
2	AM-WP-15-152-E02	Bolt	18	AM-WP-15-152-E18	Box mat
3	AM-WP-15-152-E03	Nut	19	AM-WP-15-152-E19	Oil drain bolt
4	AM-WP-15-152-E04	Starter switch	20	AM-WP-15-152-E20	Oil drain bolt gasket dimen-sions
5	AM-WP-15-152-E05	Start-up cup	21	AM-WP-15-152-E21	Tank cover
6	AM-WP-15-152-E06	Impeller	22	AM-WP-15-152-E22	Oil gauge
7	AM-WP-15-152-E07	Flame ignitor	23	AM-WP-15-152-E23	Bolt
8	AM-WP-15-152-E08	Bolt	24	AM-WP-15-152-E24	Isolater
9	AM-WP-15-152-E09	Flywheel	25	AM-WP-15-152-E25	Camshaft
10	AM-WP-15-152-E10	Crankshaft Oil Seal	26	AM-WP-15-152-E26	Supporting column
11	AM-WP-15-152-E11	Box	27	AM-WP-15-152-E27	Pendulum rod
12	AM-WP-15-152-E12	Power floor	28	AM-WP-15-152-E28	Bolt
13	AM-WP-15-152-E13	Oil level alarm	29	AM-WP-15-152-E29	Swing arm oil seal
14	AM-WP-15-152-E14	Crank axle	30	AM-WP-15-152-E30	Opening pin

AGRIMATE AGRIMATE AGRIMA

ENGINE DIAGRAM & PART LIST OF AM-WP-15-152-NT AGRICULTURE WATER PUMP GASOLINE

SL NO.	PART NO.	DESCRITPTION	SL NO.	PART NO.	DESCRITPTION
31	AM-WP-15-152-E31	Nut	44	AM-WP-15-152-E44	YouTube
32	AM-WP-15-152-E32	T-bolt	45	AM-WP-15-152-E45	Air filter pad
33	AM-WP-15-152-E33	Speed-regulating arm	46	AM-WP-15-152-E46	Air filter
34	AM-WP-15-152-E34	Throttle assembly	47	AM-WP-15-152-E47	Bolt
35	AM-WP-15-152-E35	Bar	48	AM-WP-15-152-E48	Valve-chamber cover
36	AM-WP-15-152-E36	Small leaf spring	49	AM-WP-15-152-E49	Composite B pad
37	AM-WP-15-152-E37	Large tension spring	50	AM-WP-15-152-E50	Valve chamber A pad
38	AM-WP-15-152-E38	Dual-head intake bolt	51	AM-WP-15-152-E51	Cleaning ball
39	AM-WP-15-152-E39	Intake port pad	52	AM-WP-15-152-E52	Valve chamber baffle
40	AM-WP-15-152-E40	Insulation block	53	AM-WP-15-152-E53	Hood
41	AM-WP-15-152-E41	Carburetor gasket	54	AM-WP-15-152-E54	Valve spring
42	AM-WP-15-152-E42	Carburetor	55	AM-WP-15-152-E55	Valve seat
43	AM-WP-15-152-E43	YouTube clip	56	AM-WP-15-152-E56	Oil shield


AGRIMATE AGRIMATE AGRIMATE

ENGINE DIAGRAM & PART LIST OF AM-WP-15-152-NT AGRICULTURE WATER PUMP GASOLINE

SL NO.	PART NO.	DESCRITPTION	SL NO.	PART NO.	DESCRITPTION
57	AM-WP-15-152-E57	Intake valve	68	AM-WP-15-152-E68	Fuel tank
58	AM-WP-15-152-E58	Blast gate	68.1	AM-WP-15-152-E68.1	Rosebox
59	AM-WP-15-152-E59	Connecting rod	68.2	AM-WP-15-152-E68.2	Fuel tank cap
60	AM-WP-15-152-E60	Piston pin	69	AM-WP-15-152-E69	Muffler pad
61	AM-WP-15-152-E61	Piston	70	AM-WP-15-152-E70	Muffler
62	AM-WP-15-152-E62	Piston pin retaining ring	71	AM-WP-15-152-E71	Bolt
63	AM-WP-15-152-E63	Piston ring	72	AM-WP-15-152-E72	Lower guide vane
64	AM-WP-15-152-E64	Cylinder head gasket	73	AM-WP-15-152-E73	Double-clip wire clamp
65	AM-WP-15-152-E65	Cylinder cover			
66	AM-WP-15-152-E66	Spark plug			
67	AM-WP-15-152-E67	Upper guide vane			

AGRIMATE AGRIMATE AGRIMA

PUMP DIAGRAM & PART LIST OF AM-WP-15-152-NT AGRICULTURE WATER PUMP GASOLINE

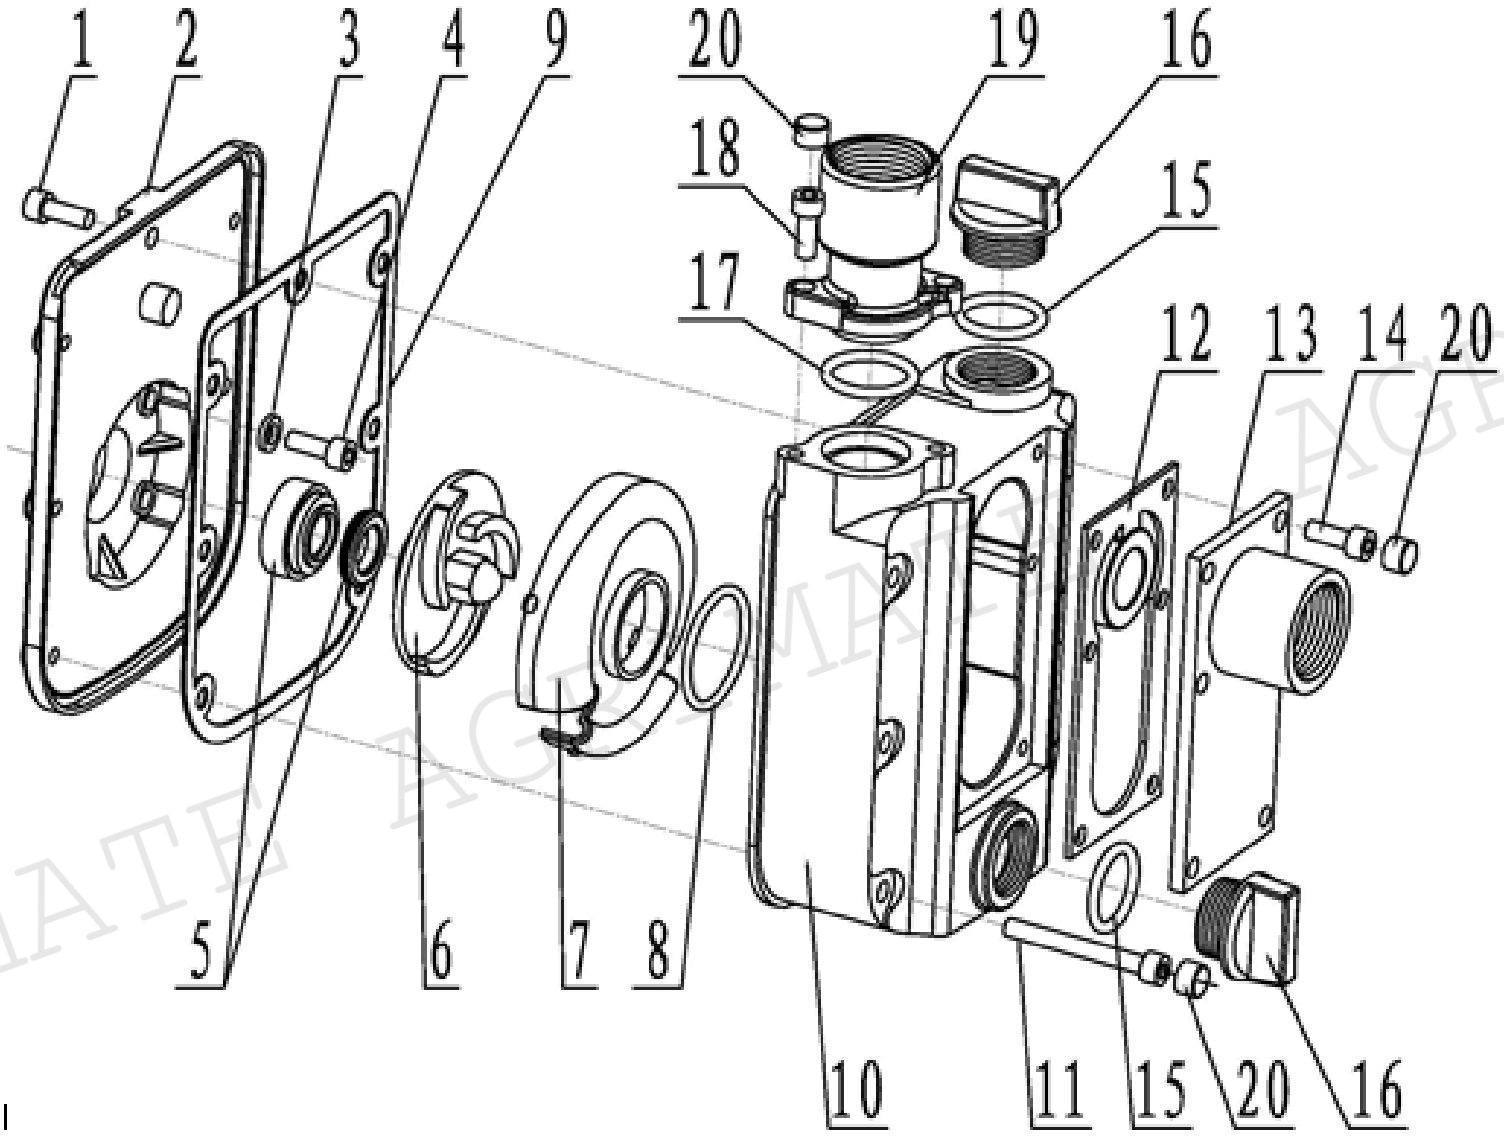

AGRIMATE AGRIMATE AGRIMATE

PUMP DIAGRAM & PART LIST OF AM-WP-15-152-NT AGRICULTURE WATER PUMP GASOLINE

SL NO.	PART NO.	DESCRIPTION	SL NO.	PART NO.	DESCRIPTION
1	AM-WP-15-152-P01	Bolt	11	AM-WP-15-152-P10	Hex Socket Head Cap Screw
2	AM-WP-15-152-P02	Pump Cover	12	AM-WP-15-152-P11	Check Valve
3	AM-WP-15-152-P03	Sealing Washer	13	AM-WP-15-152-P12	Water Inlet
4	AM-WP-15-152-P04	Screw	14	AM-WP-15-152-P13	Hex Socket Head Cap Screw
5	AM-WP-15-152-P05	Mechanical Seal	15	AM-WP-15-152-P14	O-Ring
6	AM-WP-15-152-P06	Impeller	16	AM-WP-15-152-P15	Screw Plug
7	AM-WP-15-152-P07	Guide Vane	17	AM-WP-15-152-P16	O-Ring
8	AM-WP-15-152-P08	O-Ring	18	AM-WP-15-152-P17	Hex Socket Head Cap Screw
9	AM-WP-15-152-P09	Sealing Washer	19	AM-WP-15-152-P18	Water Outlet
10	AM-WP-15-152-P10	Pump Body	20	AM-WP-15-152-P19	Bolt Cap

AGRIMATE AGRIMATE AGRIMA

INSPECTION & MAINTAINANCE

For safety use, make sure the machine is cleaned every three months. Before working, make sure to inspect the filter and the nozzel and ensure there is no imurity. After working, make sure there is no water in the pump and the hose.

If the machine needs to be repaired in the guarantee period, please return the machine to the shop. You need to provide the certificate of purchase on order to repair or get the substitute.

Before packing, the machine should be cleaned, then use closed packaging, packaging should be firm. Store the machine in dry place.

For transportation safety. The machine should comply with ISTA.

Do not dispose of electrical machines as unsorted mucnipal waste, use seperate collection facilities.

If electrical machines are disposed of in landfills or dumps, hazaardous substances can leak into the ground water and get into the food chain, damaging your health and well being.

When replacing old machines with new ones, the retailer is legally obligated to take back your old machine for disposals at least free of charge.

AGRIMATE AGRIMATE AGRIMATE

WARRANTY CARD

CUSTOMER COPY

DATE _____

PURCHASERS NAME & ADDRESS

_____

_____

DATE OF DELIVERY

CUSTOMER SIGN

_____

DEALERS OFFICIAL SEAL

DEALERS SIGN

_____

PRODUCT NAME

AM-WP-15-152-NT

PRODUCT SERIAL NO.

INVOICE/DN NO.

I/Will accept the terms and conditions of warranty as in the warranty card

DEALERS COPY

DATE _____

PURCHASERS NAME & ADDRESS

_____

_____

DATE OF DELIVERY

CUSTOMER SIGN

_____

DEALERS OFFICIAL SEAL

DEALERS SIGN

_____

PRODUCT NAME

AM-WP-15-152-NT

PRODUCT SERIAL NO.

INVOICE/DN NO.

I/Will accept the terms and conditions of warranty as in the warranty card

COMPANY COPY

DATE _____

PURCHASERS NAME & ADDRESS

_____

_____

DATE OF DELIVERY

CUSTOMER SIGN

_____

DEALERS OFFICIAL SEAL

DEALERS SIGN

_____

PRODUCT NAME

AM-WP-15-152-NT

PRODUCT SERIAL NO.

INVOICE/DN NO.

I/Will accept the terms and conditions of warranty as in the warranty card

AGRIMATE AGRIMATE AGRIMA

1.LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser

WARRANTY null & void if

(i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.

4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.
WARRANTY null & void if
(i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.
WARRANTY null & void if
(i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

ISO 9001 : 2015 CERTIFIED COMPANY

FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER

MODEL AM-WP-15-152-NT

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

OPERATIONS

1. Check and test the fuel mixture
2. check and clean the air filter
3.Check , clean and adjust the spark plug
4. Check and adjust the carburetor tuning
5. Check and sparken the cutting tools
6.Product familirisation on usage
7. Start and check the noise, vibration, loosen etc..
8. Routine maintenance and shortage.

FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER

MODEL AM-WP-15-152-NT

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

OPERATIONS

1. Check and test the fuel mixture
2. check and clean the air filter
3.Check , clean and adjust the spark plug
4. Check and adjust the carburetor tuning
5. Check and sparken the cutting tools
6.Product familirisation on usage
7. Start and check the noise, vibration, loosen etc..
8. Routine maintenance and shortage.

FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER

MODEL AM-WP-15-152-NT

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

OPERATIONS

1. Check and test the fuel mixture
2. check and clean the air filter
3.Check , clean and adjust the spark plug
4. Check and adjust the carburetor tuning
5. Check and sparken the cutting tools
6.Product familirisation on usage
7. Start and check the noise, vibration, loosen etc..
8. Routine maintenance and shortage.

DOS & DONTS

1. Always read the instruction manual supplied along with the equipments and understand the correct installation and operating procedures before attempting to use the equipments.

2. It is important to use the personal protection equipments such as head helmet with visor, ear defenders, goggles, safety gloves, cut resistant shoes, trousers and jackets while operating potentially dangerous machines

3. Avoid untrained persons using the equipments. Children must not be allowed to handle these equipments

4. Always use genuine spares and accessories in repairs and usage to derive maximum life of the equipments.

5. Always keep the equipments in good working condition to minimize loss of output as well as to reduce the pollution and save the environment

6.Do not use the machine within range of persons unless they wear protective clothing

7. Do not operate the machine when fatigued or under the influence of alcohol or drugs

8. When the machine is running, please maintain a constant water supply. Without water circulation will damage the sealing rings of the machine.

9. For more query kindly contact for our Service Center/Dealer/ franchise

AGRIMATE AGRIMATE AGRIMATE

AGRIMATE MULTI PURPOSE EQUIPMENT
ANYWHERE - ANYTIME - ANY CROP

























ratnagiri impex
BRINGING YOU THE FUTURE... NOW

IMPORTED & MARKETED BY,

RATNAGIRI IMPEX PVT., LTD.,
Annapurna House, #1 / 1G, 7th Cross, New Guddadahalli Mysore Road, Bangalore - 560 026
Missed Call : 7393 938 938 Email: ask@agrimart.in

AGRIMATE AGRIMATE AGRIMATE AGRIMATE