User Manual

AGRIMATE®

Maximum **Power** - Super **Economy**

AM-425T 4S

Motorised Knacksack Sprayer



BEFORE OPERATING THIS APPLIANCE
PLEASE READ THESE INSTRUCTIONS CAREFULLY

INTRODUCTION

To correctly use the sprayer and prevent accidents, do not start work without having first carefully read this manual. You will find explanations concerning the operation of the various parts plus instructions for necessary checks and relative maintenance.

SAFETY PRECAUTIONS

WARNING: If correctly used, the sprayer is a quick, easy to handle and efficient tool: if used improperly, or without the due precautions it could become a dangerous tool. For pleasant and safe work, always strictly comply with the safety rules that follow and throughout this manual.

1. The sprayer must be used only by adults with knowledge of the operating instructions.
2. Do not use the sprayer when you are physically tired.
3. Wear gloves, protective glassed and ear protection. Wear long trousers; DO NOT WEAR short trousers. Wear non-ship footwear; DO NOT work with open sandals or barefooted.
4. Never allow bystanders to remain within your working area.
5. Always work from a firm-footed and safe position.
6. Transport the sprayer with the engine switched off and the liquid tank empty.
7. Do not attempt to service the sprayer while the engine is running.
8. Fill the tank away from sources of heat and with the engine stopped. Never smoke while filling. Never take the cap off the tank when the engine is running. If fuel spills over while filling, move the sprayer at least 3 meters (10 ft) away before starting.
9. Before starting, make sure that the liquid cock is closed.
10. Check the sprayer each day to ensure that each device, whether for safety or otherwise, is functional.
11. Always follow the manufacturer's instructions for the maintenance operations.
12. Never use a damaged, modified, or improperly repaired or assembled sprayer. Do not remove or damage any of the safety devices.
13. Never carry out operations or repairs on your own that are other than routine maintenance. Call specialized and authorized workshops only.
14. Never use fuel for cleaning operations.
15. Keep the sprayer in a dry place, off the ground with the tanks empty.
16. Wear an approved respirator and protective overalls for protection against toxic liquids.
17. Do not operate the sprayer in explosive atmospheres or near inflammable substances. When spraying in a greenhouse, ensure that the work area is well ventilated.
18. Do not use the sprayer until you have completely understood the specific operating method.


19. It is prohibited to attach a pump or any other implement not supplied by the manufacturer to the power take – off the pump.
20. If your sprayer is no longer usable, dispose of it carefully without damaging the environment by handing it into your local Dealer who will arrange for its correct disposal.
21. Only loan your sprayer to expert users who are completely familiar with sprayer operation and correct use. Give other users the manual with operating instructions, which they should read before using the sprayer.
22. Keep this manual on hand and consult it before each use of the tool.
23. Do not direct the lance and nozzles towards persons or animals.
24. Never start the machine without pump. It will cause serious damages to the engine parts as well as the withdrawal of the warranty.
25. Do not use the sprayer set close to electrical equipment.
26. Take the cap off the spark plug each maintenance time, during cleaning or repair work.
27. The sprayer must always be kept upright to prevent liquid escaping from the tank.
28. Do not use the sprayer with inflammable and / or corrosive substances.
29. Do not assemble the pump on other motors or power transmissions.
30. The engine is 4-stroke. Use automotive unleaded gasoline only. Check engine oil before operating engine.

SPRAYER COMPONENTS



1. Spray gun
2. Regulator
3. Liquid coupling
4. Lance hose
5. Liquid drain plug
6. Fuel tank
7. Fuel filler cap
8. Air filter
9. Liquid tank
10. Liquid filler cap


ASSEMBLY

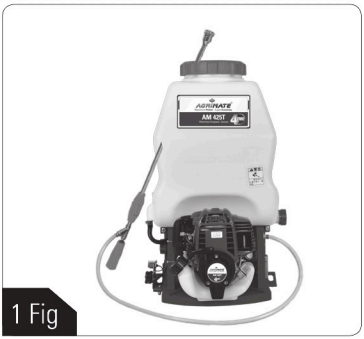

1 Fig


Assembling the lance:

The sprayer is supplied packaged as shown in Fig. 1. To prepare the sprayer for use a few simple operations are required:

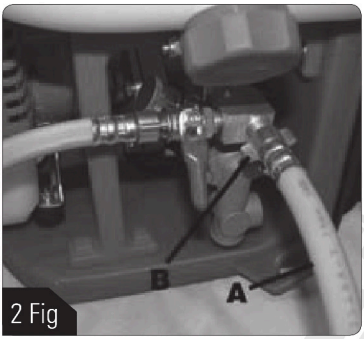

2 Fig

- Connect the high pressure hose (Fig 2-A) to the pump and secure with wing nut (Fig 2-B).
- Screw the jet regulator (Fig 3-C) onto the tip of the handle (Fig 3-D) and high pressure hose (Fig 2-A).
- Screw the lance (Fig 4-E) onto the control valve (Fig 4-F)

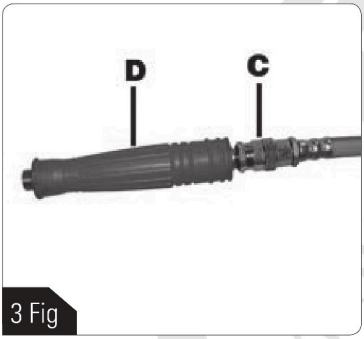


3 Fig

Optional

A range of lances for all operator requirements can be purchased separately (Fig 5)


- Lance with 2 nozzle (Fig 5-G)
- Lance with 3 nozzle (Fig 5-H)
- Lance with 4 nozzle (Fig 5- I)

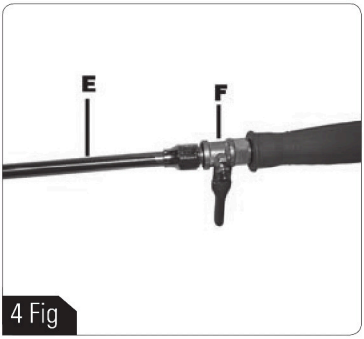

4 Fig

Lance performance:

The standard lance with single nozzle with the regulator fully open (turned counter-clockwise) has a vertical throw of 220cm from the lance tip (Fig 6).

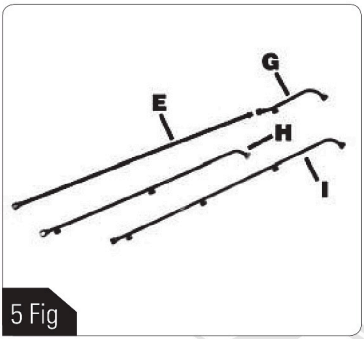


5 Fig



6 Fig

STARTING

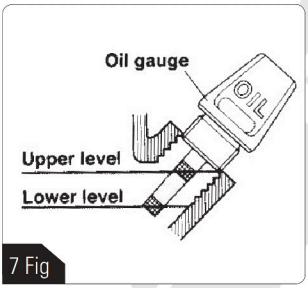


7 Fig

Check Engine Oil :

Before checking or refilling engine oil, be sure the engine is located on a stable, level surface and stopped.

If the oil level is below the lower level line on the dipstick, refill with the proper oil up to the upper level (up to the point of overflowing the filler neck) (Fig 7)

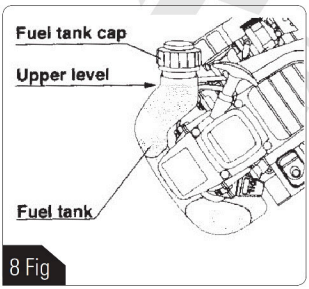

8 Fig


Check Fuel:

Stop the engine and open the cap.

Incline the engine as fuel inlet upward, then refill fuel to the upper level. Do not fill fuel too much.

Use automotive unleaded gasoline only.


This engine is 4-stroke gasoline engine. This engine is certificated to operate on automotive unleaded gasoline. (Fig. 8)

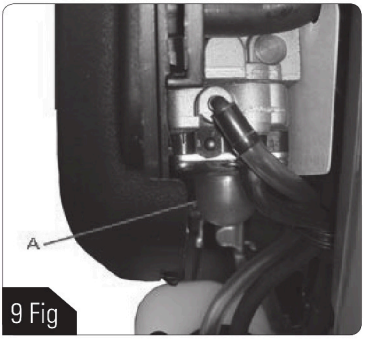

9 Fig

Starting the engine:

Make sure that the throttle lever is in the idle position. Fill the carburetor by pushing the primer bulb (Fig 9-A). Put the choke lever (Fig 10) in the "CLOSE" position. Place the sprayer on the ground in a stable position. Holding the sprayer firmly, pull sharply on the starter cord to start the engine. Wait a few seconds then operate the throttle lever to release the automatic semi-acceleration device. The starter lever should return to its original "OPEN" position.

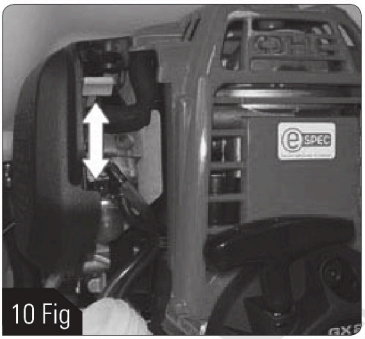
10 Fig


Warning: once the engine is warmed up, do not use choke to start up again.

USE-STOPPING THE ENGINE



11 Fig

USE:


- Fill the liquid tank through the filter provided to prevent the introduction of foreign bodies (Fig 11-A)
- Replace the filler cap (Fig 12-B) making sure it is tightly sealed.
- After starting the engine, adjust the liquid flow by way of the pressure regulator (Fig 13-C). The regulator can be easily operated when the sprayer is on the back of the operator.
- Operate the control valve to control the Spray (Fig 14-D).

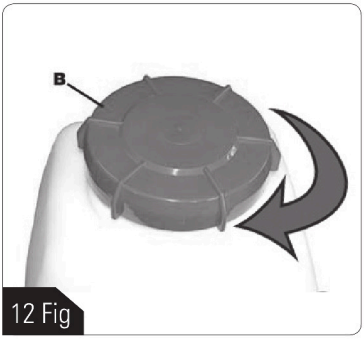

12 Fig

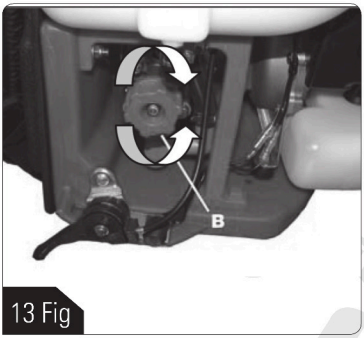

13 Fig

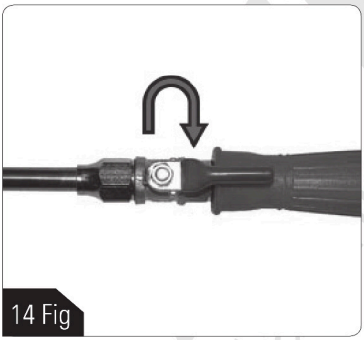

14 Fig

Warning: After starting the sprayer, operate the control valve immediately to allow any residual air trapped inside the pump to escape and to check that the liquid is flowing normally. If the liquid does not flow normally, operate the pressure regulator to eliminate air from the pump. **Never ever operate the pump when the liquid tank is empty.**


Warning: On completion of work, close the liquid valve before stopping the engine.


Stopping the engine:

Set the throttle lever to minimum. Switch off the engine by turning the stop switch to STOP.

Warning: After use of liquid chemicals, flush out the pump immediately by filling the tank with clean water and re-starting the sprayer.

ENGINE MAINTENANCE-STORAGE

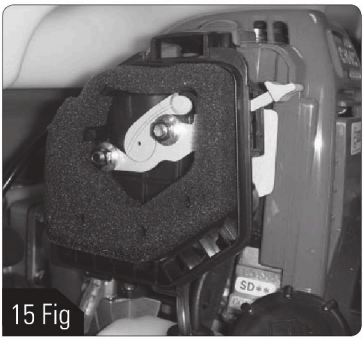
15 Fig

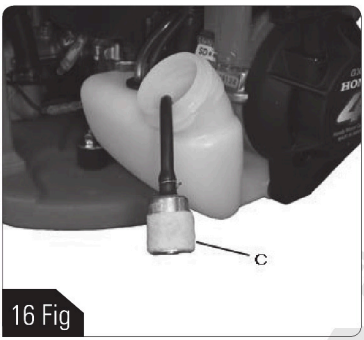

16 Fig



17 Fig

Engine maintenance:

Warning: Always wear protective gloves during maintenance operations. Do not carry out maintenance when the engine is hot.

Air filter: Every 8-10 working hours, take off the Cover. The filter should be cleaned by shaking it Well and with a soft brush (Fig 15).

Fuel filter: Check the fuel filter periodically. Replace it if too dirty (Fig 16).


Engine: Clean the cylinder fans (Fig 17) with compressed air or a brush periodically. Dangerous overheating of engine may occur due to impurities on the cylinder.

Spark plug: Clean the spark pug and check the Electrode gap periodically (Fig 18).


Storage:


- When the mist blower is stored for long intervals, use clean water and run sprayer for few minutes. Dry the sprayer thoroughly, empty the fuel tank and clean the engine.
- Empty the fuel cap and put the cap back on.
- Remove the spark plug; pour a small amount of oil into the cylinder(Fig 19).
- Rotate the crankshaft several times using the starting rope in order to distribute the oil. Put the park plug back in.
- Store the pump in a dry place, preferably not in direct contact with the floor and away from the hear sources.
- Do not lie the sprayer on its side, oil may leak.

Warning: All maintenance operations not reported in this manual must be carried out by an authorized Service Center. To ensure steady and regular sprayer operation, remember that parts must only be replaced with original spares.

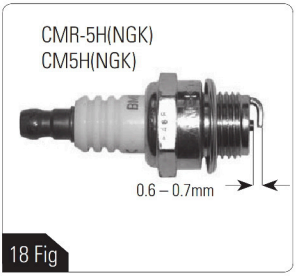


18 Fig

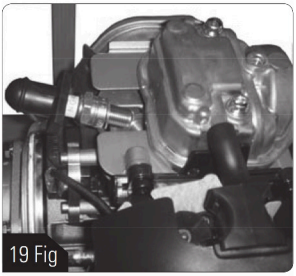

19 Fig

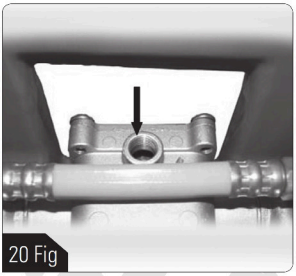

20 Fig



21 Fig

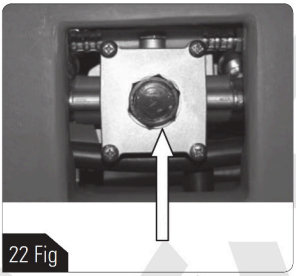

22 Fig

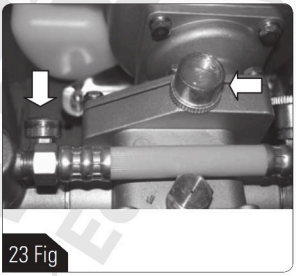
23 Fig

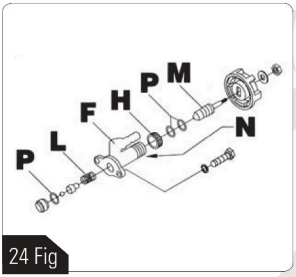

24 Fig


25 Fig

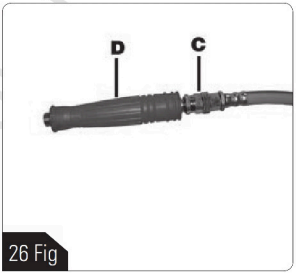

26 Fig

PUMP MAINTENANCE

Oil- To check the oil level, remove the protective rubber cushion (Fig 21) by removing the screws. Change oil firstly after 30 operating hours, then every 100 operating.

1- Unscrew plug (Fig 22-C) and drain oil. Replace and tighten drain plug.

2- Unscrew breather cap (Fig 20) of the oil tank and fill with 120cc of SAE 40 or 20/50 engine oil.

Grease nipples-Apply with grease at each grease nipple (Fig 23-E)

Warning: Screw in the grease nipple two turns every 2 operating hours.

Valve- To remove the valve (Fig 24-F), for cleaning, remove the screws (Fig24-G) and valve cap. Remove any residue from the valve cap. Change the valve spring (fig 24-L) if broken or worn.

If the valve looses pressure:

1- Fit a new valve if the pressure regulator (Fig 24-M) or the valveseat (Fig 24-N) is worn.

2- Remove any residue from the valve seat.

3- Renew the oil seals if worn.


Nozzles – Replace the nozzles if broken or if the y loose pressure (Fig 25).

High pressure hose- Replace the high pressure hose (Fig 26-K) if broken or worn.

TECHNICAL DATA

Engine	Air-cooled 4 stroke OHC single
Maximum Power Output	0.81 kW/7000 rpm
Max. rpm	8000
Min. rpm	2800
Fuel tank capacity	550cc
Electronic ignition	Yes
Anti-vibration system	Yes
Diaphragm carburetor	Yes
Primer carburetor	Yes
Centrifugal clutch Max. vertical liquid range	Yes 2.2 m
Pump reduction ratio	1÷4
Agricultural chemical solutions containing acids	4-9 pH
Prohibited chemical solutions	Sulfuric acid, nitric acid, hydrochloric acid, alkalis, powered & insoluble chemicals
Liquid discharge	7.2 L 1/min
Weight	8.9 Kg
Dimensions	390x330x630 mm
Main tank capacity	23 L
pressure	35

GASOLINE ENGINE DIAGRAM OF AM 425T 4S

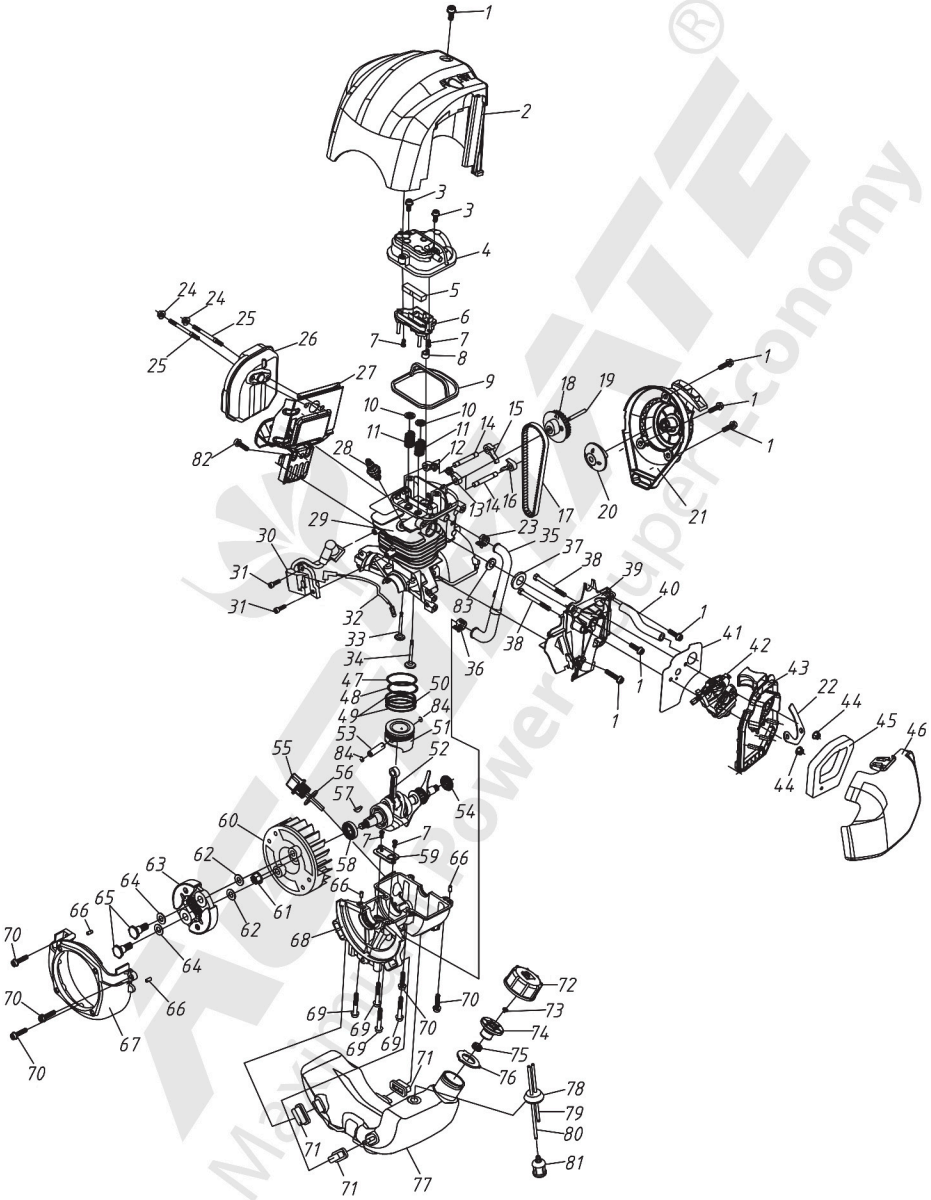


GASOLINE ENGINE SPARE PARTS NO. OF AM 425T 4S

S.N.	Part No.	Description
1	AM 425T E01	SCREW
2	AM 425T E02	CYLINDER COVER
3	AM 425T E03	SCREW
4	AM 425T E04	CYLINDER VALVE COVER
5	AM 425T E05	OIL GAS SEPARATOR
6	AM 425T E06	INSIDE COVER
7	AM 425T E07	SCREW M4X8
8	AM 425T E08	RUBBER CUSHION
9	AM 425T E09	RUBBER CUSHION
10	AM 425T E10	VALVE SPRING SEAT
11	AM 425T E11	VALVE SPRING
12	AM 425T E12	EXHAUST VALVE ROCKER
13	AM 425T E13	INLET VALVE ROCKER
14	AM 425T E14	ROCKER PIN
15	AM 425T E15	EXHAUST ROCKER
16	AM 425T E16	INLET ROCKER
17	AM 425T E17	SYNCHRONUS BELT
18	AM 425T E18	CAM WHEEL
19	AM 425T E19	CAMSHAFT
20	AM 425T E20	START REEL
21	AM 425T E21	STARTER
22	AM 425T E22	BAFFLER
23	AM 425T E23	HOLDING DOWN CLIP
24	AM 425T E24	NUT M5
25	AM 425T E25	DOUBLE EDGED BOLT
26	AM 425T E26	MUFFLER
27	AM 425T E27	MUFFLER BAFFLE
28	AM 425T E28	SPARK PLUG
29	AM 425T E29	CYLINDER
30	AM 425T E30	IGNITION STATOR
31	AM 425T E31	SCREW M4x12
32	AM 425T E32	STOPPING WIRE
33	AM 425T E33	EXHAUST VALVE
34	AM 425T E34	INLET VALVE
35	AM 425T E35	BALANCING PRESSURE PIPE
36	AM 425T E36	HOLDING DOWN CLIP
37	AM 425T E37	O-SEAL RING
38	AM 425T E38	SCREW M5X55
39	AM 425T E39	ADMITTING PIPE
40	AM 425T E40	BLAST PIPE
41	AM 425T E41	GASKET
42	AM 425T E42	CARBURETOR

S.N.	Part No.	Description
43	AM 425T E43	CLEANER INSIDE COVER
44	AM 425T E44	NUT M5
45	AM 425T E45	FILTER NET
46	AM 425T E46	AIR FILTER COVER
47	AM 425T E47	NO.1 PISTON RING
48	AM 425T E48	NO.2 PISTON RING
49	AM 425T E49	OIL SCRAPER RING
50	AM 425T E50	LINER RING
51	AM 425T E51	PISTON
52	AM 425T E52	CRANKSHAFT
53	AM 425T E53	PISTON PIN
54	AM 425T E54	OIL SEAL
55	AM 425T E55	OIL SCALE
56	AM 425T E56	O SEAL RING 14X2.65
57	AM 425T E57	KEY 3X5X13
58	AM 425T E58	OIL SEAL
59	AM 425T E59	REED VALVE
60	AM 425T E60	MAGNETO ROTOR COMP.
61	AM 425T E61	NUT
62	AM 425T E62	WASHER
63	AM 425T E63	CLUTCH
64	AM 425T E64	WASHER
65	AM 425T E65	SCREW PIN
66	AM 425T E66	PIN B4X8
67	AM 425T E67	MAGNETO COVER
68	AM 425T E68	CRANKCASE
69	AM 425T E69	SCREW
70	AM 425T E70	SCREW
71	AM 425T E71	RUBBER CUSHION
72	AM 425T E72	FUEL TANK LID
73	AM 425T E73	AIR ADMISSION VALVE
74	AM 425T E74	INSIDE COVER
75	AM 425T E75	SHELL COVER
76	AM 425T E76	GASKET
77	AM 425T E77	FUEL TANK
78	AM 425T E78	PLUG
79		FUEL RETURN PIPE
80		FUEL SUCTION PIPE
81	AM 425T E81	CLEANER
82	AM 425T E82	SCREW M5X10
83	AM 425T E83	RUBBER PACKING
84	AM 425T E84	RING


TANK DIAGRAM OF AM 425T 4S

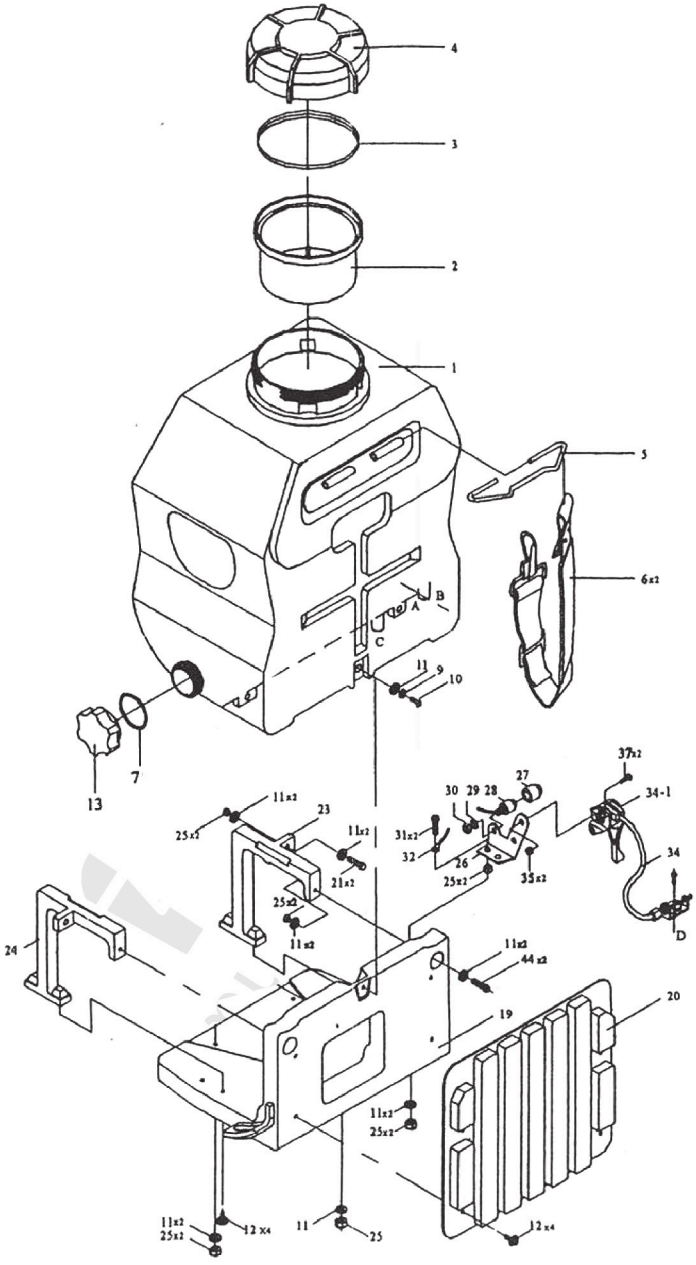

TANK SPARE PARTS LIST DIAGRAM OF AM 425T 4S

S.N.	PART NO.	DESCRIPTION
1	AM-425T-4S-P01	Chemical Container
2	AM-425T-4S-P02	Filter
3	AM-425T-4S-P03	Gasket
4	AM-425T-4S-P04	Container Cover
5	AM-425T-4S-P05	Chain Holder
6	AM-425T-4S-P06	Strap
7	AM-425T-4S-P07	Gasket
8	AM-425T-4S-P08	Screw
9	AM-425T-4S-P09	Spring Washer
10	AM-425T-4S-P10	Screw
11	AM-425T-4S-P11	Washer
12	AM-425T-4S-P12	Screw
13	AM-425T-4S-P13	Drain Cup
14	AM-425T-4S-P19	Frame
15	AM-425T-4S-P20	Pad
16	AM-425T-4S-P23	Right Stand
17	AM-425T-4S-P24	Left Stand
18	AM-425T-4S-P26	Fixed Plate
19	AM-425T-4S-P28	Stop Switch
20	AM-425T-4S-P32	Cord Comp
21	AM-425T-4S-P34	Throttle Wire
22	AM-425T-4S-P34-1	Throttle Lever
23	AM-425T-4S-P39	Engine Stand
24	AM-425T-4S-P46	Joint S
25	AM-425T-4S-P46-1	Joint-L

PUMP DIAGRAM OF AM 425T 4S

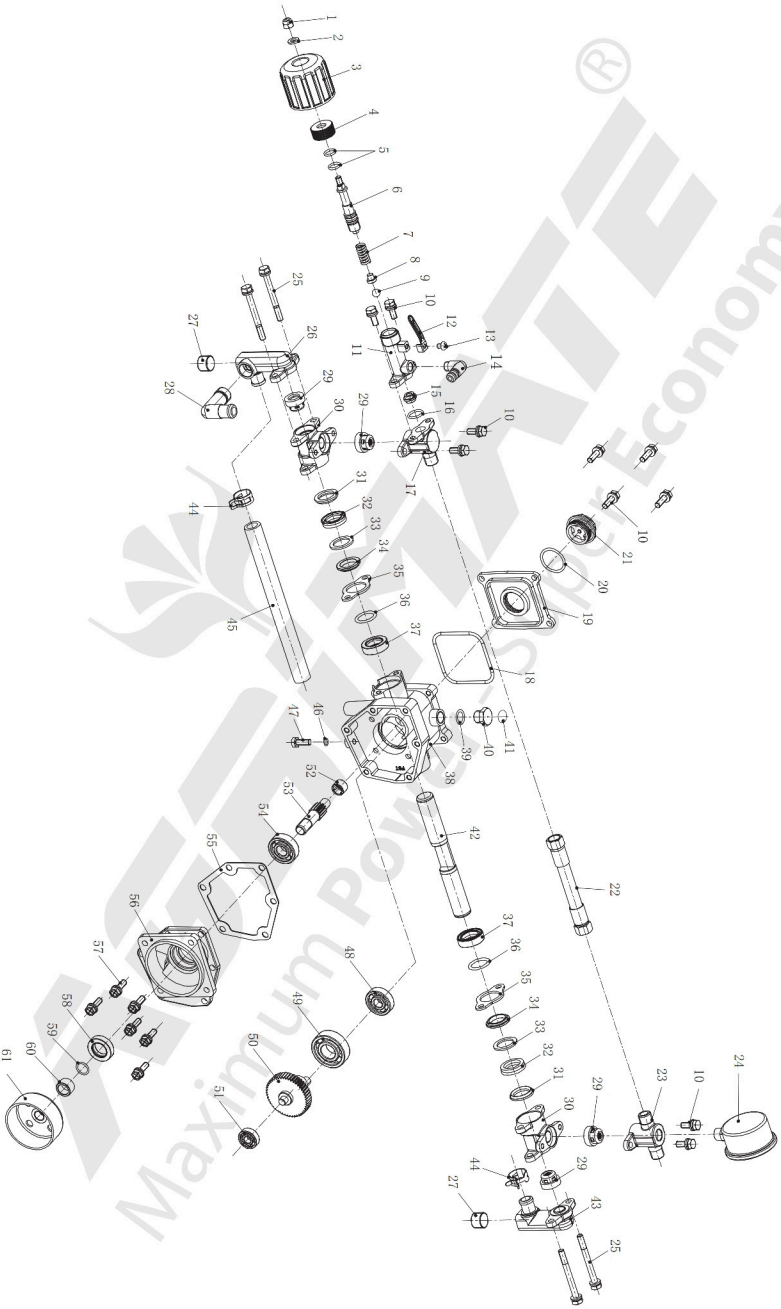

PUMP SPARE PARTS LIST DIAGRAM OF AM 425T 4S

S.N.	PART NO.	PARTICULARS
1	AM-425T-PG-R01	Nut M6
2	AM-425T-PG-R02	Washer D6
3	AM-425T-PG-R03	Pressure wheel
4	AM-425T-PG-R04	Nut
5	AM-425T-PG-R05	O-ring
6	AM-425T-PG-R06	Pressure valve rod
7	AM-425T-PG-R07	Spring
8	AM-425T-PG-R08	Ball seat
9	AM-425T-PG-R09	Steel ball
10	AM-425T-PG-R10	Bolt
11	AM-425T-PG-R11	Relief valve assy
12	AM-425T-PG-R12	Pin
13	AM-425T-PG-R13	Screw M5*6.5
14	AM-425T-PG-R14	Overflow elbow
15	AM-425T-PG-R15	Valve seat
16	AM-425T-PG-R16	o-ring
17	AM-425T-PG-R17	Outlet chamber-L
18	AM-425T-PG-R18	O-ring
19	AM-425T-PG-R19	Crankcase cover
20	AM-425T-PG-R20	O-ring
21	AM-425T-PG-R21	Al. pressure gauge
22	AM-425T-PG-R22	Outlet pressure hose
23	AM-425T-PG-R23	Outlet chamber-R
24	AM-425T-PG-R24	Pressure gauge
25	AM-425T-PG-R25	Bolt M6*60
26	AM-425T-PG-R26	Suction chamber -L
27	AM-425T-PG-R27	Nut
28	AM-425T-PG-R28	Suction elbow
29	AM-425T-PG-R29	Valve assy
30	AM-425T-PG-R30	Cylinder
31	AM-425T-PG-R31	Packing seat

AGRIMATE® Maximum Power - Super Economy

PUMP SPARE PARTS LIST DIAGRAM OF AM 425T 4S

S.N.	PART NO.	PARTICULARS
32	AM-425T-PG-R32	Fabirc V-packing
33	AM-425T-PG-R33	Gasket
34	AM-425T-PG-R34	Grand
35	AM-425T-PG-R35	Fixed seat
36	AM-425T-PG-R36	O-RING
37	AM-425T-PG-R37	Oil Seal 18X28X8
38	AM-425T-PG-R38	Crankcase
39	AM-425T-PG-R39	O-ring
40	AM-425T-PG-R40	Oil inlet bolt
41	AM-425T-PG-R41	Paster
42	AM-425T-PG-R42	Ceramic plunger
43	AM-425T-PG-R43	Suction chamber -R
44	AM-425T-PG-R44	Clip
45	AM-425T-PG-R45	Suction hose
46	AM-425T-PG-R46	O ring
47	AM-425T-PG-R47	Bolt
48	AM-425T-PG-R48	Bearing 6200
49	AM-425T-PG-R49	Bearing 6203
50	AM-425T-PG-R50	Gear
51	AM-425T-PG-R51	Bearing 608
52	AM-425T-PG-R52	Bearing HK1010
53	AM-425T-PG-R53	Gear shaft
54	AM-425T-PG-R54	Bearing 6201
55	AM-425T-PG-R55	Gasket
56	AM-425T-PG-R56	Drum case
57	AM-425T-PG-R57	Bolt M*16
58	AM-425T-PG-R58	Oil seal
59	AM-425T-PG-R59	o-ring
60	AM-425T-PG-R60	Pipe
61	AM-425T-PG-R61	Cluth drum

INSPECTION & MAINTENANCE

For safety use, make sure a three-month clean the machine. Before working, make sure inspect the filter and the nozzle, make sure there is no impurity. After working, make sure there is no water in the pump and the hose.

If the machine need to be repaired in the guarantee period, please return the machine to the shop. You need to provide the certificate of purchase in order to repair or get the substitute.

Before Packaging, The machine should be cleaned, then use closed packaging, packaging should be firm. Storage the machine in dry.

For transportation safety. The machine should comply with ISTA.



Meaning of crossed –out wheeled dustbin:

Do not dispose of electrical machines as unsorted municipal waste, use separate collection facilities.

Contact you local government for information regarding the collection systems available.

If electrical machines are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

When replacing old machines with new ones, the retailer is legally obligated to take back your old machine for disposals at least free of charge.

Warranty Card — CUSTOMER COPY — ISO 9001:2015

Date _____

Purchaser's Name & Address

_____

_____

_____

Product Name

AM-425T 4S Motorised Knacksack Sprayer

Product Serial No.

Invoice / DN No.

Date of Delivery

Dealer's Office Seal

Dealer Sign _____

Customer Sign. _____

I/We accept the terms and conditions of Warranty as in the Warranty Card.

Warranty Card — DEALER'S COPY — ISO 9001:2015

Date _____

Purchaser's Name & Address

_____

_____

_____

Product Name

AM-425T 4S Motorised Knacksack Sprayer

Product Serial No.

Invoice / DN No.

Date of Delivery

Dealer's Office Seal

Dealer Sign _____

Customer Sign. _____

I/We accept the terms and conditions of Warranty as in the Warranty Card.

Warranty Card — COMPANY COPY — ISO 9001:2015

Date _____

Purchaser's Name & Address

_____

_____

_____

Product Name

AM-425T 4S Motorised Knacksack Sprayer

Product Serial No.

Invoice / DN No.

Date of Delivery

Dealer's Office Seal

Dealer Sign _____

Customer Sign. _____

I/We accept the terms and conditions of Warranty as in the Warranty Card.

1. **LIMITED WARRANTY PERIOD** : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

(i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.

4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1. **LIMITED WARRANTY PERIOD** : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

(i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.

4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1. **LIMITED WARRANTY PERIOD** : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

(i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.

4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1st Free Service Coupon

ISO 9001:2015
CERTIFIED COMPANY

FREE SERVICE COUPON (30 Days / 30 hrs (Which ever is earlier)

Model: AM-425T 4S Motorised Knacksack Sprayer

Serial Number:

PDI Date | Service No. | Purchase bill no. | Date

Dealer's Office Seal

Dealer Signature.....

Customer Signature.....

Conditions: Operations listed have been performed to my entire satisfaction without any labour charges. Only consumables were charged.

WARRANTY AND FREE SERVICE COUPON

agriculture | horticulture | sericulture | plantations | forestry | garden | health care

2nd Free Service Coupon

ISO 9001:2015
CERTIFIED COMPANY

FREE SERVICE COUPON 60 Days / 60 hrs (Which ever is earlier)

Model: AM-425T 4S Motorised Knacksack Sprayer

Serial Number:

PDI Date | Service No. | Purchase bill no. | Date

Dealer's Office Seal

Dealer Signature.....

Customer Signature.....

Conditions: Operations listed have been performed to my entire satisfaction without any labour charges. Only consumables were charged.

WARRANTY AND FREE SERVICE COUPON

agriculture | horticulture | sericulture | plantations | forestry | garden | health care

3rd Free Service Coupon

ISO 9001:2015
CERTIFIED COMPANY

FREE SERVCIE COUPON 90 Days / 120 hrs (Which ever is earlier)

Model: AM-425T 4S Motorised Knacksack Sprayer

Serial Number:

PDI Date | Service No. | Purchase bill no. | Date

Dealer's Office Seal

Dealer Signature.....

Customer Signature.....

Conditions: Operations listed have been performed to my entire satisfaction without any labour charges. Only consumables were charged.

WARRANTY AND FREE SERVICE COUPON

agriculture | horticulture | sericulture | plantations | forestry | garden | health care


Small Maintenance. Big Savings.


Small Maintenance. Big Savings.


Small Maintenance. Big Savings.

Do's & Don'ts

- Always read the instruction manual supplied along with the equipments and understand the correct installation and operating procedures before attempting to use the equipments.
- It is important to use the personal protection equipments such as head helmet with visor, ear defenders, goggles, safety gloves, cut resistant shoes, trousers and jackets while operating potentially dangerous machines.
- Avoid untrained persons using the equipments. Children must not be allowed to handle these equipments.
- All the two stroke engines fitted to the equipments have to be run with petrol mixed with 2 T oil. Before using the fuel mix, shake the container well to ensure proper mixing of 2 T oil and the petrol.
- Always use good quality unleaded petrol for the engines with at least 90 octane rating.
- Use recommended lub oil only. Don't use reconditioned oil. Greasing the Machine regularly as mentioned in User Manual is must.
- Clean the air filter every 8 -10 hours of running or earlier, depending on the working condition.
- Identify and use the best suited cutting tool for the job.
- Do not attempt to alter or modify the machine / accessories / cutting attachments.
- The equipments should always be operated with properly sharpened cutting tools.
- Always use genuine spares and accessories in repairs and usage to derive maximum life of the equipments.
- Always keep the equipments in good working condition to minimise loss of output as well as to reduce the pollution and save the environment.

Agrimate Army For Pest Control

ANY WHERE - ANY TIME - ANY CROP



AGRIMATE®

Maximum **Power** - Super **Economy**

Imported & Marketed by:

RATNAGIRI IMPEX PVT LTD

Annapurna House, #1/1G, 7th Cross, New Guddadahalli

Mysore Road, Bangalore-560 026

Customer Care: 1800-425-3036

email: info@ratnagiriimpex.com



Marketed by:

ratnagiri® impex

BRINGING YOU THE FUTURE... NOW

www.ratnagiriimpex.com

AN ISO 9001:2015 CERTIFIED COMPANY