USER MANUAL

AGRIMATE®
APNALO MUNAFA BADALO


# INTERCULTIVATOR / POWER WEEDER

## AM-RT-212



AN ISO 9001 : 2015 CERTIFIED COMPANY

# DIAGRAM & PART LIST OF AM-RT-212 INTERCULTIVATOR / POWER WEEDER

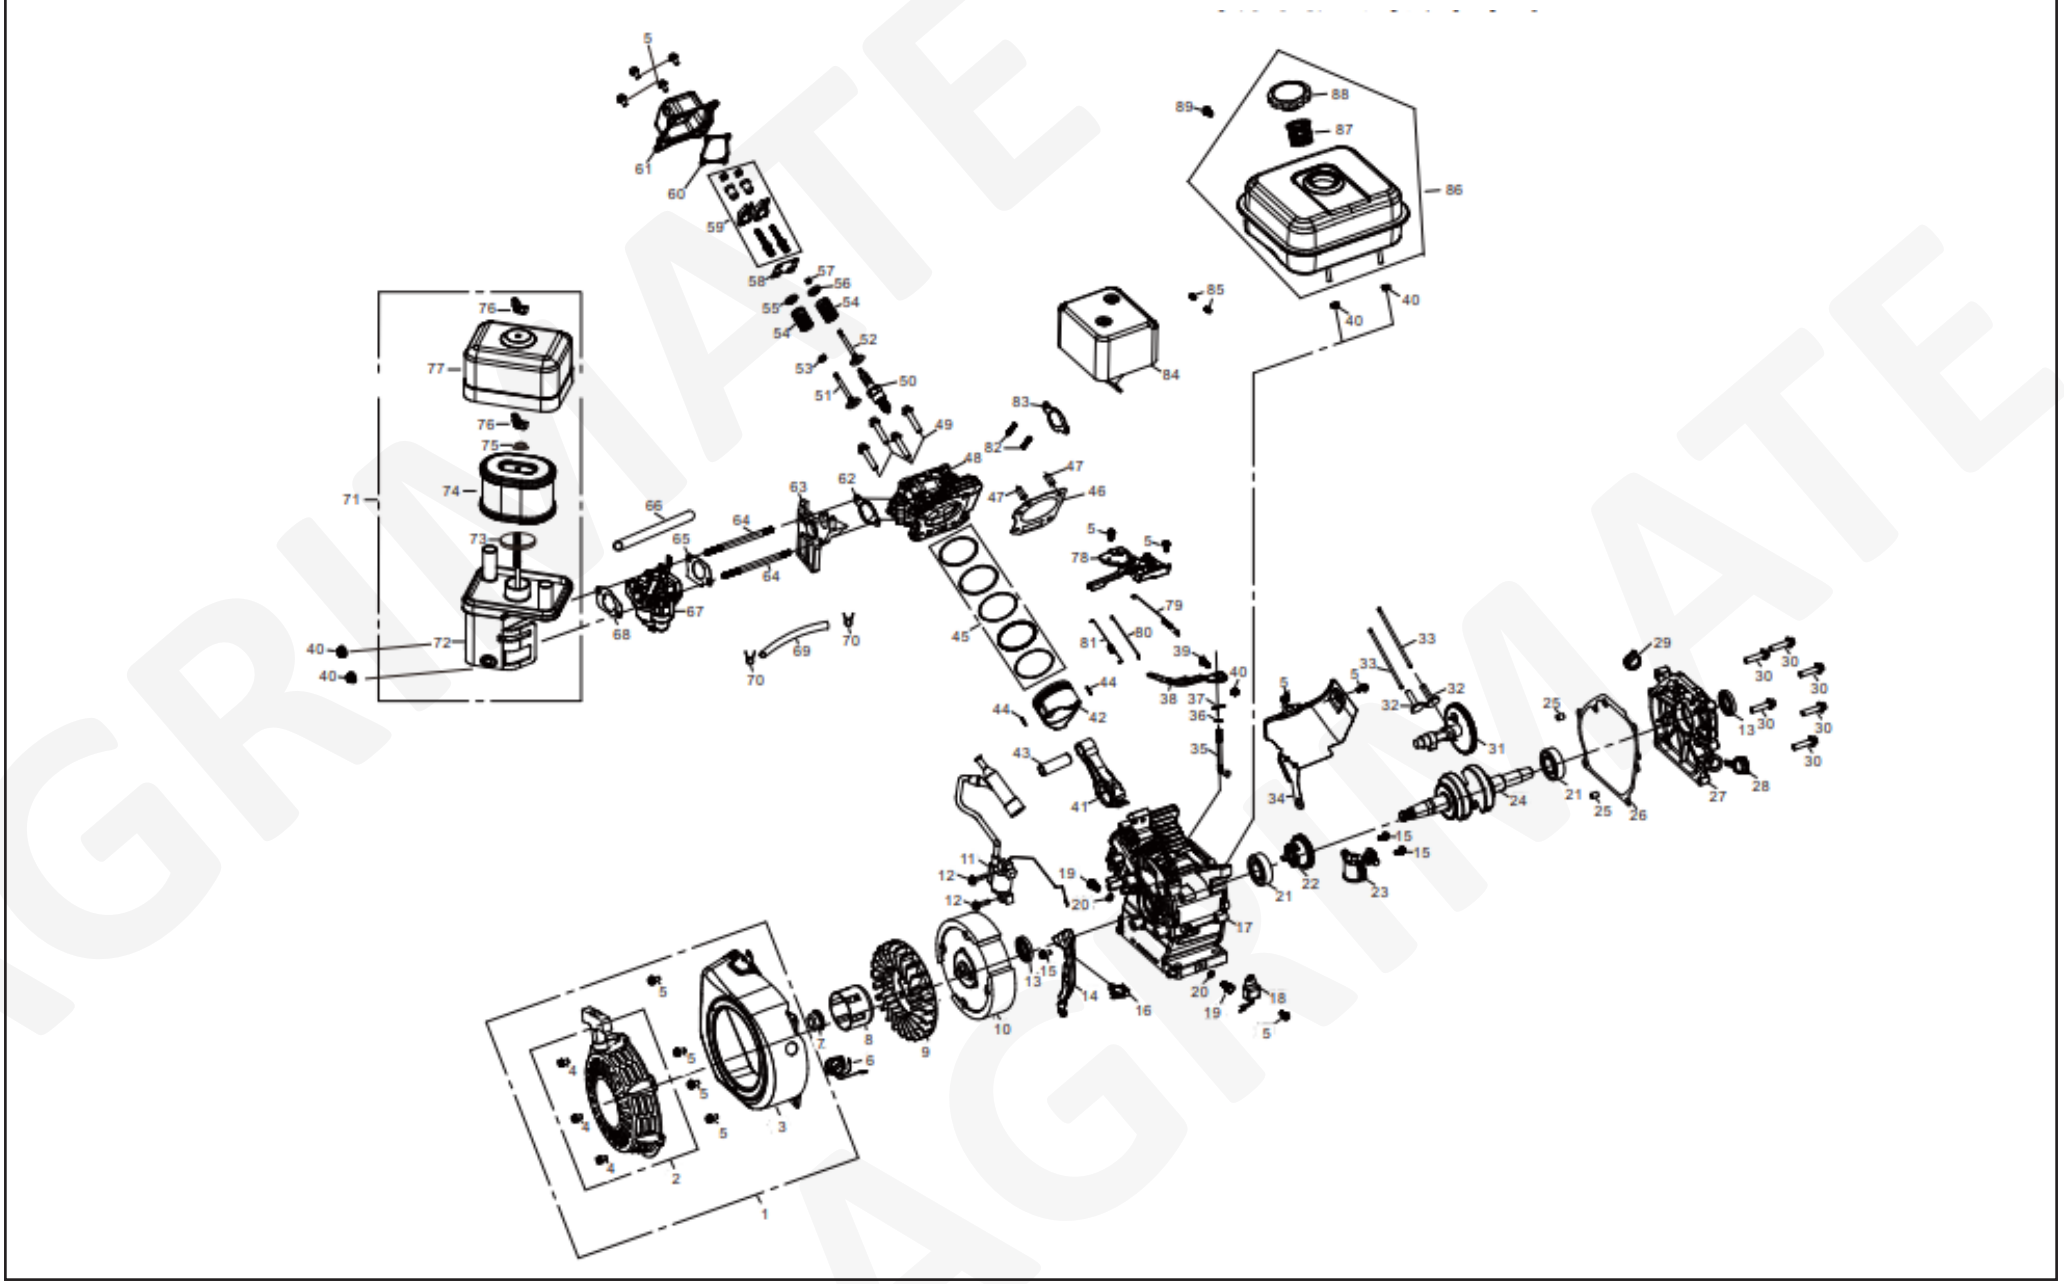

# SPARE PARTS LIST OF AM-RT-212 INTERCULTIVATOR / POWER WEEDER

| SL NO. | PART NO. | DESCRIPTION | SL NO. | PART NO. | DESCRIPTION |
|---|---|---|---|---|---|
| 1 | AM-212FP-EA01 | Kick Starter Assy | 17 | AM-212FP-EA17 | Crankcase |
| 2 | AM-212FP-EA02 | Starter Pull Plate | 18 | AM-212FP-EA18 | Oil Alert Unit |
| 3 | AM-212FP-EA03 | Starting Hood | 19 | AM-212FP-EA19 | Drain Bolt |
| 4 | AM-212FP-EA04 | Bolt | 20 | AM-212FP-EA20 | Double armed bolt |
| 5 | AM-212FP-EA05 | Bolt | 21 | AM-212FP-EA21 | Radial Ball Bearing |
| 6 | AM-212FP-EA06 | Engine Stop Switch | 22 | AM-212FP-EA22 | Governor Gear |
| 7 | AM-212FP-EA07 | Nut | 23 | AM-212FP-EA23 | oiL Sensor |
| 8 | AM-212FP-EA08 | Starter Pulley | 24 | AM-212FP-EA24 | Crankshaft |
| 9 | AM-212FP-EA09 | Fly Wheel Fan | 25 | AM-212FP-EA25 | Set pin |
| 10 | AM-212FP-EA10 | Fly Wheel | 26 | AM-212FP-EA26 | Crankcase Gasket |
| 11 | AM-212FP-EA11 | Ignition Coil Assy | 27 | AM-212FP-EA27 | Crankcase cover Assy |
| 12 | AM-212FP-EA12 | Double armed bolt | 28 | AM-212FP-EA28 | Dipstick |
| 13 | AM-212FP-EA13 | Oil Seal | 29 | AM-212FP-EA29 | Oil Plug |
| 14 | AM-212FP-EA14 | Side Plate Crankcase | 30 | AM-212FP-EA30 | Bolt |
| 15 | AM-212FP-EA15 | Bolt | 31 | AM-212FP-EA31 | Camshaft Assy |
| 16 | AM-212FP-EA16 | Plastic Clip | 32 | AM-212FP-EA32 | Valve Lifter |

# SPARE PARTS LIST OF AM-RT-212 INTERCULTIVATOR / POWER WEEDER

| SL NO. | PART NO. | DESCRIPTION | SL NO. | PART NO. | DESCRIPTION |
|---|---|---|---|---|---|
| 33 | AM-212FP-EA33 | Push Rod | 49 | AM-212FP-EA49 | Bolt |
| 34 | AM-212FP-EA34 | Lead Wind Cover | 50 | AM-212FP-EA50 | Spark Plug |
| 35 | AM-212FP-EA35 | Swinging Rod | 51 | AM-212FP-EA51 | Intake Valve |
| 36 | AM-212FP-EA36 | Washer | 52 | AM-212FP-EA52 | Exhaust Valve |
| 37 | AM-212FP-EA37 | Split clin | 53 | AM-212FP-EA53 | Inlet valve Oil seal |
| 38 | AM-212FP-EA38 | Governor Arm | 54 | AM-212FP-EA54 | Vakve spring |
| 39 | AM-212FP-EA39 | Square head bolt | 55 | AM-212FP-EA55 | Intake valve spring seat |
| 40 | AM-212FP-EA40 | Nut | 56 | AM-212FP-EA56 | exhaust valve spring seat |
| 41 | AM-212FP-EA41 | Connecting Rod Assy | 57 | AM-212FP-EA57 | Exhaust valve cap |
| 42 | AM-212FP-EA42 | Piston | 58 | AM-212FP-EA58 | Push Rod Guide plate |
| 43 | AM-212FP-EA43 | Piston pin | 59 | AM-212FP-EA59 | Rocker Arm Assy |
| 44 | AM-212FP-EA44 | Piston Clip | 60 | AM-212FP-EA60 | Gakst cylinder head gasket |
| 45 | AM-212FP-EA45 | Piston Ring Assy | 61 | AM-212FP-EA61 | Cylinder Head Cover |
| 46 | AM-212FP-EA46 | Gasket, Cylinder Head | 62 | AM-212FP-EA62 | Inlet Gasket |
| 47 | AM-212FP-EA47 | Set pin | 63 | AM-212FP-EA63 | Carburetor insulation |
| 48 | AM-212FP-EA48 | Cylinder Head Comp. | 64 | AM-212FP-EA64 | Double Arm Bolt |

# SPARE PARTS LIST OF AM-RT-212 INTERCULTIVATOR / POWER WEEDER

| SL NO. | PART NO. | DESCRIPTION | SL NO. | PART NO. | DESCRIPTION |
|---|---|---|---|---|---|
| 65 | AM-212FP-EA65 | Carburetor Gasket | 81 | AM-212FP-EA81 | Throttle return Spring |
| 66 | AM-212FP-EA66 | Airclean Pipe | 82 | AM-212FP-EA82 | Double arm bolt |
| 67 | AM-212FP-EA67 | Carburetor | 83 | AM-212FP-EA83 | Gasket muffler pipe |
| 68 | AM-212FP-EA68 | Gasket Air cleaner | 84 | AM-212FP-EA84 | Muffler |
| 69 | AM-212FP-EA69 | Fuel Pipe | 85 | AM-212FP-EA85 | Nut |
| 70 | AM-212FP-EA70 | Pipe Clip | 86 | AM-212FP-EA86 | Fuel Tank |
| 71 | AM-212FP-EA71 | Air cleaner | 87 | AM-212FP-EA87 | Filter Screen of oil tank |
| 72 | AM-212FP-EA72 | NA | 88 | AM-212FP-EA88 | Fuel Tank cap |
| 73 | AM-212FP-EA73 | Air filter Connection seat gasket | 89 | AM-212FP-EA89 | Bolt |
| 74 | AM-212FP-EA74 | Air filter element | | | |
| 75 | AM-212FP-EA75 | NA | | | |
| 76 | AM-212FP-EA76 | Butterfly nut | | | |
| 77 | AM-212FP-EA77 | Upper cover of air filter | | | |
| 78 | AM-212FP-EA78 | Governor Stay | | | |
| 79 | AM-212FP-EA79 | Pulling Rod | | | |
| 80 | AM-212FP-EA80 | Governor Spring | | | |

# INSPECTION & MAINTAINANCE

For safety use, make sure  the machine is cleaned every three months. Before working, make sure to inspect the filter and the nozzel and ensure there is no  imurity. After working, make sure there is no water in the pump and the hose.

If the machine needs to be repaired in the guarantee period, please return the machine to the shop. You need to provide the certificate of purchase on order to repair or get the substitute.

Before packing, the machine should be cleaned, then use closed packaging, packaging should be firm. Store the machine in dry place.

For transportation safety. The machine should comply with ISTA.

Do not dispose of electrical machines as unsorted mucnipal waste, use seperate collection facilities.

If electrical machines are disposed of in landfills or dumps, hazaardous substances can leak into the ground water and get into the food chain, damaging your health and well being.

When replacing old machines with new ones, the retailer is legally obligated to take back your old machine for disposals at least free of charge.

# WARRANTY CARD

**CUSTOMER COPY**

DATE _____

PURCHASERS NAME & ADDRESS

_____

_____

DATE OF DELIVERY

CUSTOMER SIGN

_____

DEALERS OFFICIAL SEAL

DEALERS SIGN

_____

PRODUCT NAME

AM-RT-212

PRODUCT SERIAL NO.

INVOICE/DN NO.

I/Will accept the terms and conditions of warranty as in the warranty card

**DEALERS COPY**

DATE _____

PURCHASERS NAME & ADDRESS

_____

_____

DATE OF DELIVERY

CUSTOMER SIGN

_____

DEALERS OFFICIAL SEAL

DEALERS SIGN

_____

PRODUCT NAME

AM-RT-212

PRODUCT SERIAL NO.

INVOICE/DN NO.

I/Will accept the terms and conditions of warranty as in the warranty card

**COMPANY COPY**

DATE _____

PURCHASERS NAME & ADDRESS

_____

_____

DATE OF DELIVERY

CUSTOMER SIGN

_____

DEALERS OFFICIAL SEAL

DEALERS SIGN

_____

PRODUCT NAME

AM-RT-212

PRODUCT SERIAL NO.

INVOICE/DN NO.

I/Will accept the terms and conditions of warranty as in the warranty card

1.LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser

WARRANTY null & void if

(i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.

4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.
WARRANTY null & void if
(i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.
WARRANTY null & void if
(i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

ISO 9001 : 2015 CERTIFIED COMPANY

## FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER

MODEL AM-RT-212

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

OPERATIONS

1. Check and test the fuel mixture
2. check and clean the air filter
3. Check , clean and adjust the spark plug
4. Check and adjust the carburetor tuning
5. Check and sparken the cutting tools
6. Product familirisation on usage
7. Start and check the noise, vibration, loosen etc..
8. Routine maintenance and shortage.

## FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER

MODEL AM-RT-212

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

OPERATIONS

1. Check and test the fuel mixture
2. check and clean the air filter
3. Check , clean and adjust the spark plug
4. Check and adjust the carburetor tuning
5. Check and sparken the cutting tools
6. Product familirisation on usage
7. Start and check the noise, vibration, loosen etc..
8. Routine maintenance and shortage.

## FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER

MODEL AM-RT-212

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

OPERATIONS

1. Check and test the fuel mixture
2. check and clean the air filter
3. Check , clean and adjust the spark plug
4. Check and adjust the carburetor tuning
5. Check and sparken the cutting tools
6. Product familirisation on usage
7. Start and check the noise, vibration, loosen etc..
8. Routine maintenance and shortage.

# DOS & DONTS

1. Always read the instruction manual supplied along with the equipments and understand the correct installation and operating procedures before attempting to use the equipments.

2. It is important to use the personal protection equipments such as head helmet with visor, ear defenders, goggles, safety gloves, cut resistant shoes, trousers and jackets while operating potentially dangerous machines

3. Avoid untrained persons using the equipments. Children must not be allowed to handle these equipments

4. Always use genuine spares and accessories in repairs and usage to derive maximum life of the equipments.

5. Always keep the equipments in good working condition to minimize loss of output as well as to reduce the pollution and save the environment

6.Do not use the machine within range of persons unless they wear protective clothing

7. Do not operate the machine when fatigued or under the influence of alcohol or drugs

8. When the machine is running, please maintain a constant water supply. Without water circulation will damage the sealing rings of the machine.

9. For more query kindly contact for our Service Center/Dealer/ franchise

# AGRIMATE MULTI PURPOSE EQUIPMENT
## ANYWHERE - ANYTIME - ANY CROP














ratnagiri impex
BRINGING YOU THE FUTURE... NOW

IMPORTED & MARKETED BY,

**RATNAGIRI IMPEX PVT., LTD.,**
**Annapurna House, #1 / 1G, 7th Cross, New Guddadahalli Mysore Road, Bangalore - 560 026**
**Missed Call : 7393 938 938 Email: ask@agrimart.in**