
USER MANUAL

AGRIMATE®
APNALO MUNAFA BADALO

USER MANUAL

CHAFF CUTTER

AM-CCM-CB1200-GT

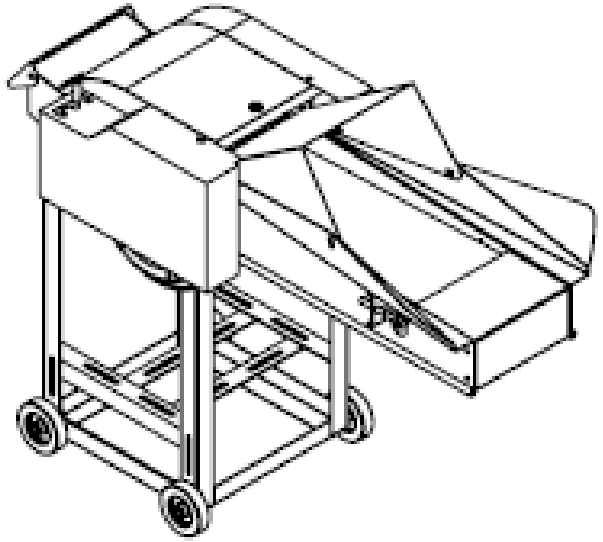


AN ISO 9001 : 2015 CERTIFIED COMPANY

TECHNICAL SPECIFICATIONS

MODEL	AM-CCM-CB1200-GT
Motor	220v, 50HZ
Power	2.2KW/3HP-Copper Winding
Capacity/Hr.	Upto 1000Kg.
No. of Blades	6 BLADES (5 Rotating + 1Fixed)


SPARE PARTS DIAGRAM & PARTS LIST OF CHAFF CUTTER -AM-CCM-CB1200-GT

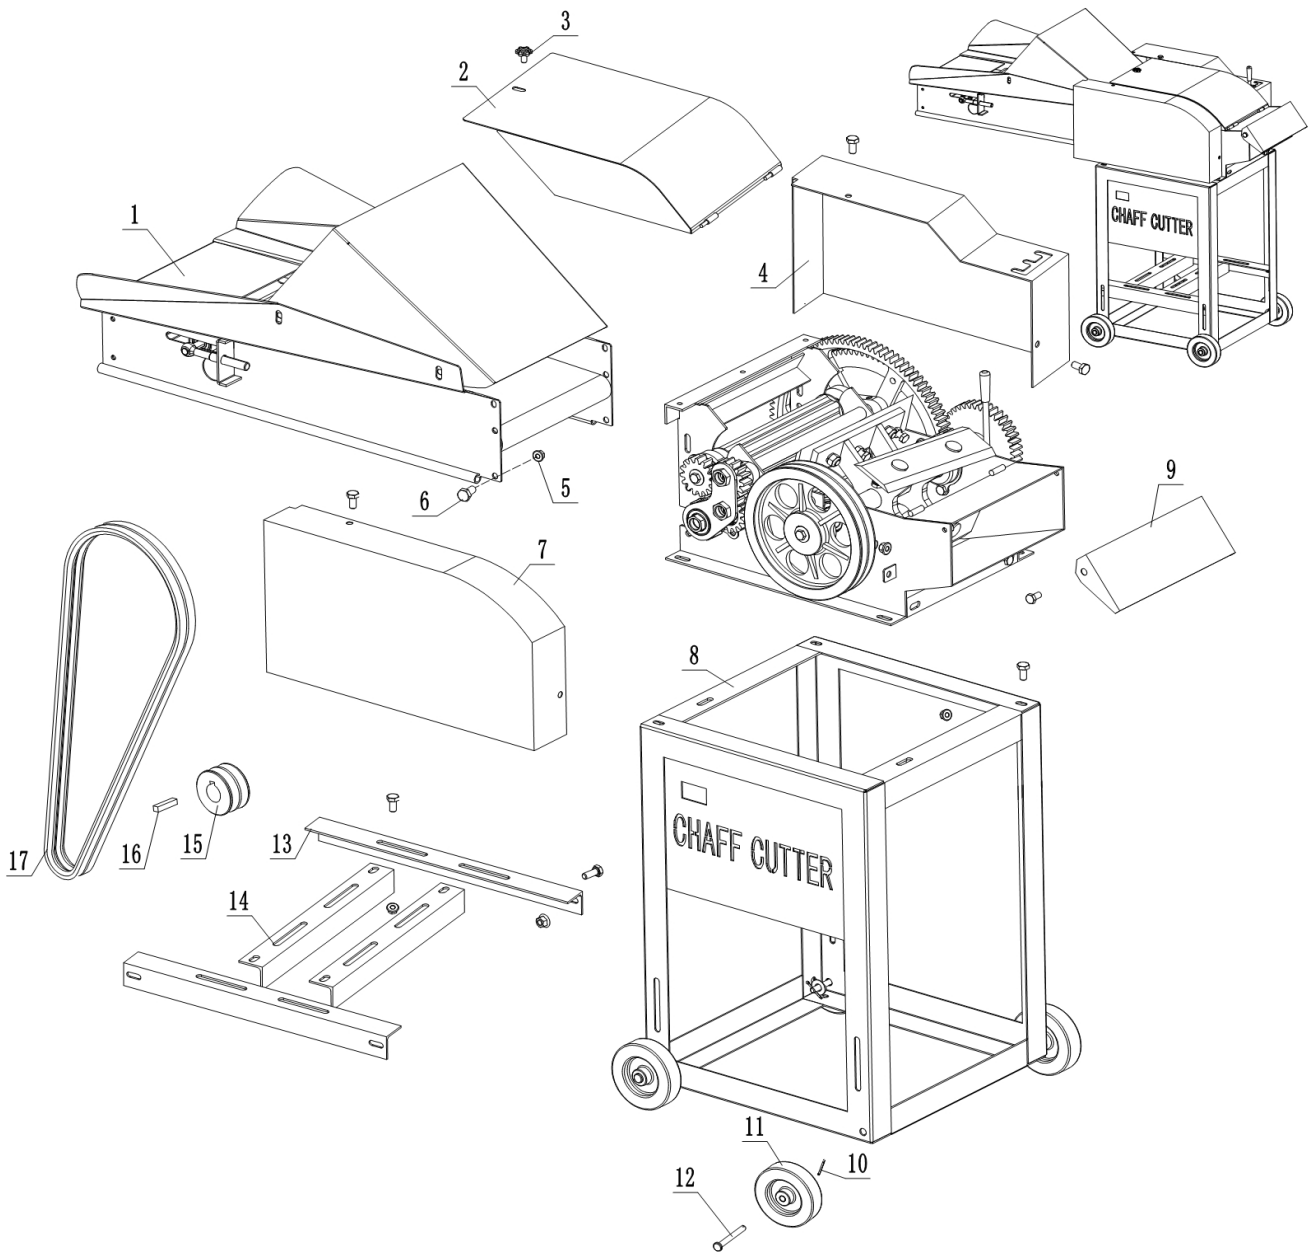

SPARE PARTS DIAGRAM & PARTS LIST OF CHAFF CUTTER -AM-CCM-CB1200-GT

SL NO.	PART NO.	DESCRIPTOIN	SL NO.	PART NO.	DESCRIPTOIN
1	AM-CCM-CB1200-GT-TA01	mounting plate	11	AM-CCM-CB1200-GT-TA11	wheel
2	AM-CCM-CB1200-GT-TA02	welded upper cover	12	AM-CCM-CB1200-GT-TA12	Pin type B
3	AM-CCM-CB1200-GT-TA03	Plum handwheel	13	AM-CCM-CB1200-GT-TA13	Long Angle
4	AM-CCM-CB1200-GT-TA04	Gear cover	14	AM-CCM-CB1200-GT-TA14	Short Angle
5	AM-CCM-CB1200-GT-TA05	Hexagon flange face lock nut	15	AM-CCM-CB1200-GT-TA15	motor pulley
6	AM-CCM-CB1200-GT-TA06	Hexagon head bolt	16	AM-CCM-CB1200-GT-TA16	Flat key - Type
7	AM-CCM-CB1200-GT-TA07	Belt cover	17	AM-CCM-CB1200-GT-TA17	Ordinary V-belt
8	AM-CCM-CB1200-GT-TA08	Frame leg			
9	AM-CCM-CB1200-GT-TA09	Discharge guard			
10	AM-CCM-CB1200-GT-TA10	Cotter pin			


SPARE PARTS DIAGRAM & PARTS LIST OF CHAFF CUTTER -AM-CCM-CB1200-GT

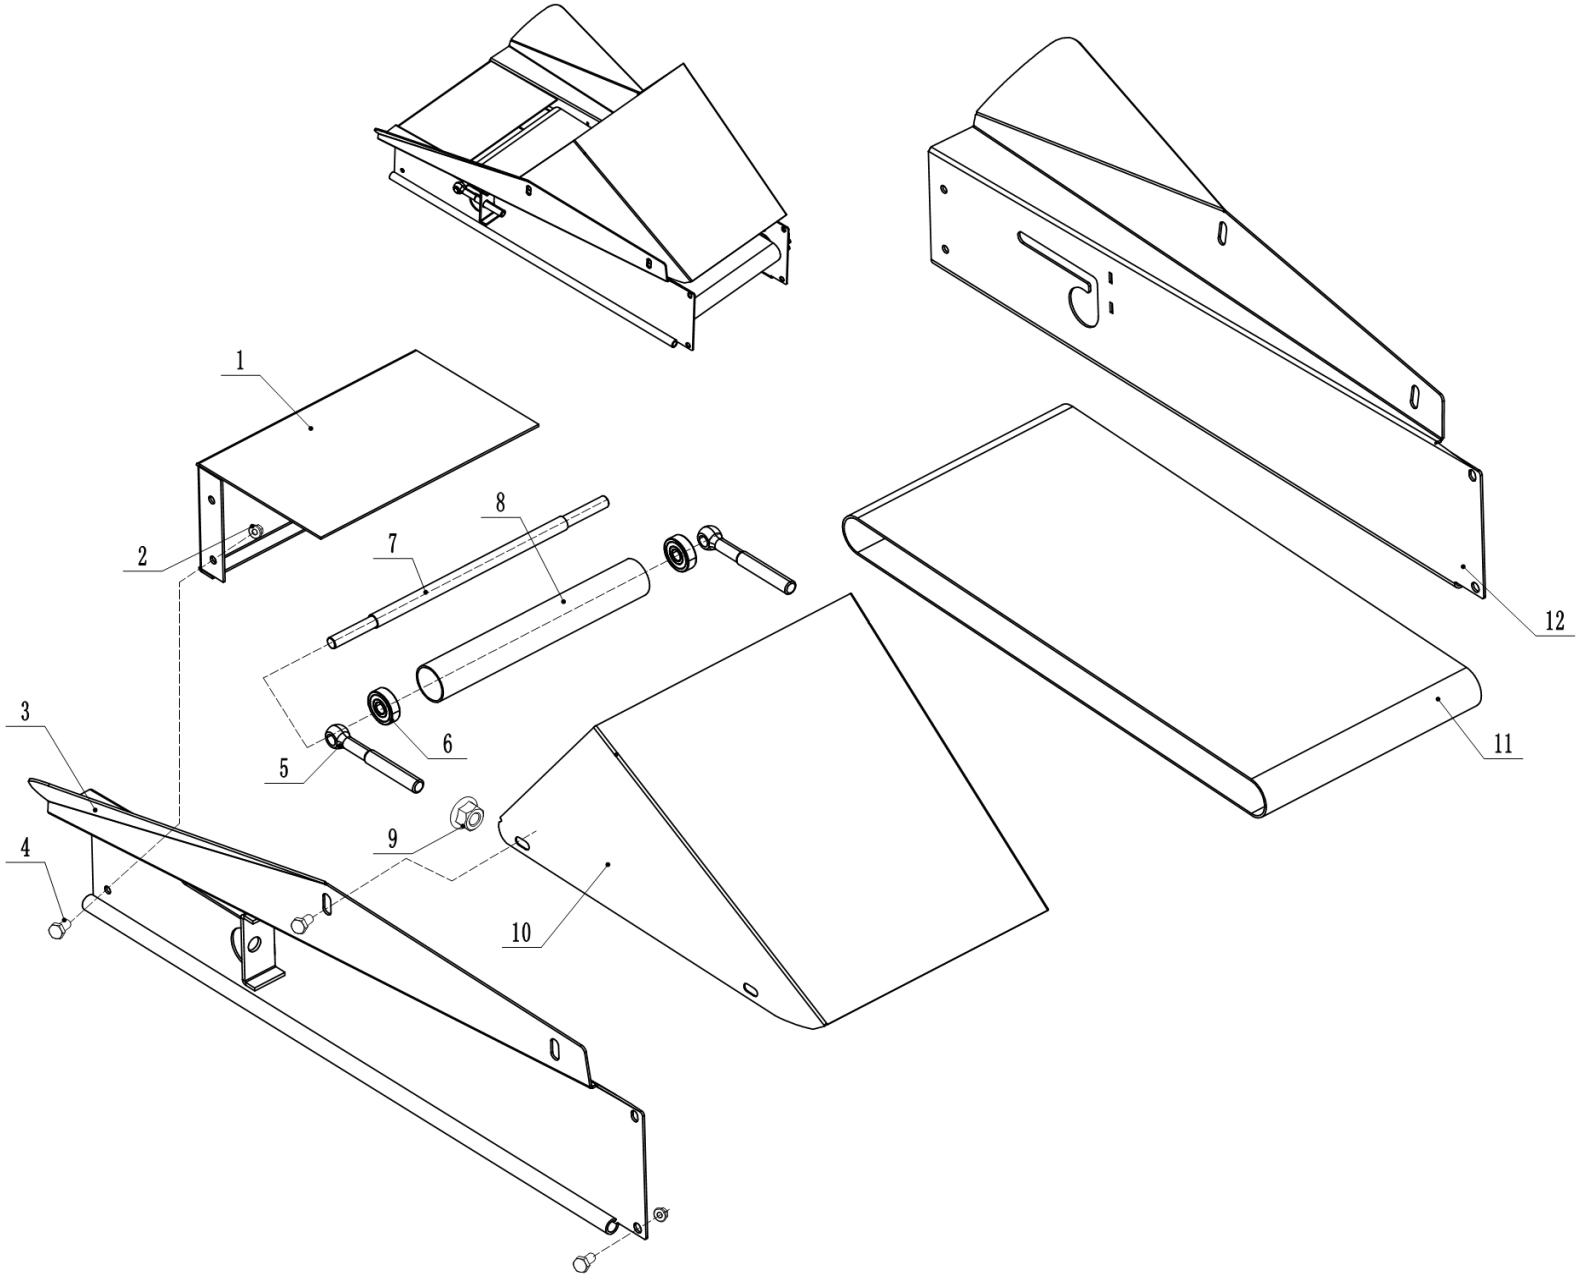

SPARE PARTS DIAGRAM & PARTS LIST OF CHAFF CUTTER -AM-CCM-CB1200-GT

SL NO.	PART NO.	DESCRIPTOIN	SL NO.	PART NO.	DESCRIPTOIN
1	AM-CCM-CB1200-GT-TB01	Mounting Plate	9	AM-CCM-CB1200-GT-TB09	Standard elastic washer
2	AM-CCM-CB1200-GT-TB02	Hexagon flange face lock nut	10	AM-CCM-CB1200-GT-TB10	Feed guard
3	AM-CCM-CB1200-GT-TB03	Left board	11	AM-CCM-CB1200-GT-TB11	Conveyor belt 1200mm long
4	AM-CCM-CB1200-GT-TB04	Hexagon head bolt	12	AM-CCM-CB1200-GT-TB12	RIGH BOARD
5	AM-CCM-CB1200-GT-TB05	Regulating Screw			
6	AM-CCM-CB1200-GT-TB06	Deep groove ball bearing			
7	AM-CCM-CB1200-GT-TB07	Tension shaft			
8	AM-CCM-CB1200-GT-TB08	Tension tube			

SPARE PARTS DIAGRAM & PARTS LIST OF CHAFF CUTTER -AM-CCM-CB1200-GT

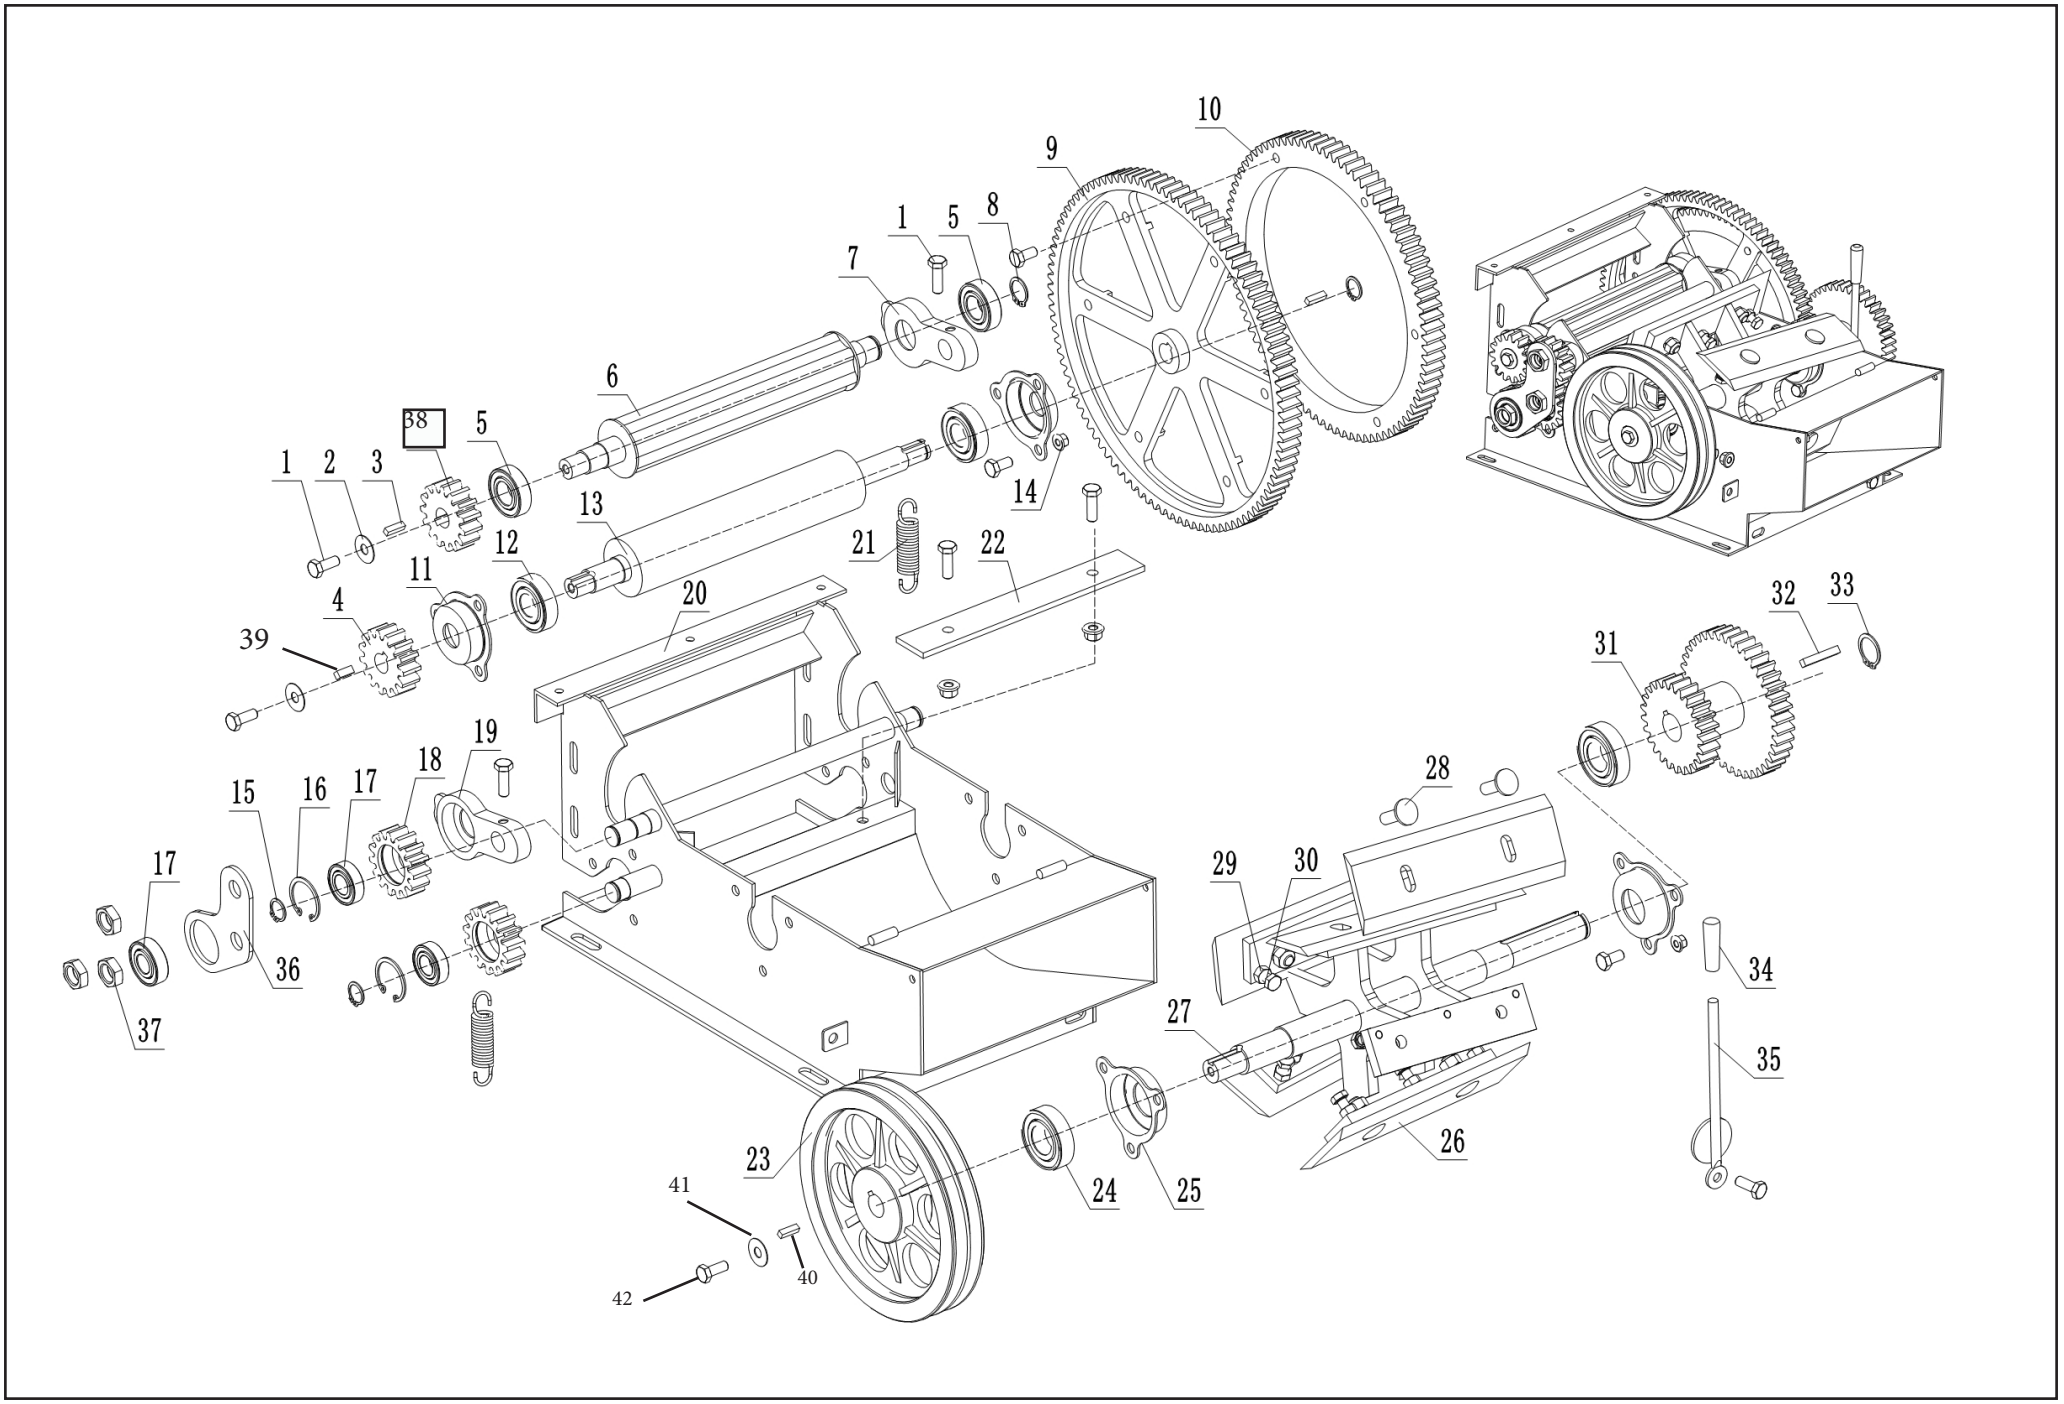

SPARE PARTS DIAGRAM & PARTS LIST OF CHAFF CUTTER -AM-CCM-CB1200-GT

SL NO.	PART NO.	DESCRIPTOIN	SL NO.	PART NO.	DESCRIPTOIN
1	AM-CCM-CB1200-GT-TC01	Toothed flange hexagon head bolt	22	AM-CCM-CB1200-GT-TC22	Stationary knife
2	AM-CCM-CB1200-GT-TC02	Large gasket - Class C	23	AM-CCM-CB1200-GT-TC23	Enter pulley
3	AM-CCM-CB1200-GT-TC03	Plain type flat key - Type B	24	AM-CCM-CB1200-GT-TC24	Deep groove ball bearing
4	AM-CCM-CB1200-GT-TC04	Small gear - ID 24	25	AM-CCM-CB1200-GT-TC25	6205 Bearing block
5	AM-CCM-CB1200-GT-TC05	Deep groove ball bearing	26	AM-CCM-CB1200-GT-TC26	slash
6	AM-CCM-CB1200-GT-TC06	Feed roller	27	AM-CCM-CB1200-GT-TC27	Cutter shaft welding
7	AM-CCM-CB1200-GT-TC07	Right gourd bearing seat	28	AM-CCM-CB1200-GT-TC28	Large half round head square neck bolt
8	AM-CCM-CB1200-GT-TC08	Elastic retainer for shaft	29	AM-CCM-CB1200-GT-TC29	Hexagon nut Class C
9	AM-CCM-CB1200-GT-TC09	Hang the big gear	30	AM-CCM-CB1200-GT-TC30	Standard elastic washer
10	AM-CCM-CB1200-GT-TC10	Stop small gear ring	31	AM-CCM-CB1200-GT-TC31	Sliding coupling
11	AM-CCM-CB1200-GT-TC11	6204 bearing block	32	AM-CCM-CB1200-GT-TC32	Plain flat key - Type
12	AM-CCM-CB1200-GT-TC12	Deep groove ball bearing	33	AM-CCM-CB1200-GT-TC33	Elastic retainer for type A shaft
13	AM-CCM-CB1200-GT-TC13	Feed roller	34	AM-CCM-CB1200-GT-TC34	Handle sleeve
14	AM-CCM-CB1200-GT-TC14	Hexagon flange nut	35	AM-CCM-CB1200-GT-TC35	Gear lever
15	AM-CCM-CB1200-GT-TC15	Elastic retainer for type A shaft	36	AM-CCM-CB1200-GT-TC36	lock plate
16	AM-CCM-CB1200-GT-TC16	Elastic retainer for A-hole	37	AM-CCM-CB1200-GT-TC37	Hexagonal nut - Class C
17	AM-CCM-CB1200-GT-TC17	Deep groove ball bearing	38	AM-CCM-CB1200-GT-TC38	GEAR - ID 19
18	AM-CCM-CB1200-GT-TC18	Reversing gear	39	AM-CCM-CB1200-GT-TC39	SMALL KEY
19	AM-CCM-CB1200-GT-TC19	Left gourd bearing seat	40	AM-CCM-CB1200-GT-TC40	BIG KEY
20	AM-CCM-CB1200-GT-TC20	Case welding	41	AM-CCM-CB1200-GT-TC41	WASHER
21	AM-CCM-CB1200-GT-TC21	spring	42	AM-CCMCB1200-GT-TC42	NUT

INSPECTION & MAINTAINANCE

For safety use, make sure the machine is cleaned every three months. Before working, make sure to inspect the filter and the nozzel and ensure there is no imurity. After working, make sure there is no water in the pump and the hose.

If the machine needs to be repaired in the guarantee period, please return the machine to the shop. You need to provide the certificate of purchase on order to repair or get the substitute.

Before packing, the machine should be cleaned, then use closed packaging, packaging should be firm. Store the machine in dry place.

For transportation safety. The machine should comply with ISTA.

Do not dispose of electrical machines as unsorted mucnipal waste, use seperate collection facilities.

If electrical machines are disposed of in landfills or dumps, hazaardous substances can leak into the ground water and get into the food chain, damaging your health and well being.

When replacing old machines with new ones, the retailer is legally obligated to take back your old machine for disposals at least free of charge.

WARRANTY CARD

CUSTOMER COPY

DATE _____

DATE OF DELIVERY

DEALERS OFFICIAL SEAL

DEALERS SIGN

PURCHASERS NAME & ADDRESS

CUSTOMER SIGN

PRODUCT NAME

PRODUCT SERIAL NO.

INVOICE/DN NO.

I/Will accept the terms and conditions of warranty as in the warranty card

DEALERS COPY

DATE _____

DATE OF DELIVERY

DEALERS OFFICIAL SEAL

DEALERS SIGN

PURCHASERS NAME & ADDRESS

CUSTOMER SIGN

PRODUCT NAME

PRODUCT SERIAL NO.

INVOICE/DN NO.

I/Will accept the terms and conditions of warranty as in the warranty card

COMPANY COPY

DATE _____

DATE OF DELIVERY

DEALERS OFFICIAL SEAL

DEALERS SIGN

PURCHASERS NAME & ADDRESS

CUSTOMER SIGN

PRODUCT NAME

PRODUCT SERIAL NO.

INVOICE/DN NO.

I/Will accept the terms and conditions of warranty as in the warranty card

1.LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser

WARRANTY null & void if

(i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.

4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.
WARRANTY null & void if
(i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.
WARRANTY null & void if
(i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

ISO 9001 : 2015 CERTIFIED COMPANY

FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER

MODEL

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

OPERATIONS

1. Check and test the fuel mixture
2. check and clean the air filter
3. Check , clean and adjust the spark plug
4. Check and adjust the carburetor tuning
5. Check and sparken the cutting tools
6. Product familirisation on usage
7. Start and check the noise, vibration, loosen etc..
8. Routine maintenance and shortage.

FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER

MODEL

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

OPERATIONS

1. Check and test the fuel mixture
2. check and clean the air filter
3. Check , clean and adjust the spark plug
4. Check and adjust the carburetor tuning
5. Check and sparken the cutting tools
6. Product familirisation on usage
7. Start and check the noise, vibration, loosen etc..
8. Routine maintenance and shortage.

FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER

MODEL

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

OPERATIONS

1. Check and test the fuel mixture
2. check and clean the air filter
3. Check , clean and adjust the spark plug
4. Check and adjust the carburetor tuning
5. Check and sparken the cutting tools
6. Product familirisation on usage
7. Start and check the noise, vibration, loosen etc..
8. Routine maintenance and shortage.

DOS & DONTS

1. Always read the instruction manual supplied along with the equipments and understand the correct installation and operating procedures before attempting to use the equipments.

2. It is important to use the personal protection equipments such as head helmet with visor, ear defenders, goggles, safety gloves, cut resistant shoes, trousers and jackets while operating potentially dangerous machines

3. Avoid untrained persons using the equipments. Children must not be allowed to handle these equipments

4. Always use genuine spares and accessories in repairs and usage to derive maximum life of the equipments.

5. Always keep the equipments in good working condition to minimize loss of output as well as to reduce the pollution and save the environment

6.Do not use the machine within range of persons unless they wear protective clothing

7. Do not operate the machine when fatigued or under the influence of alcohol or drugs

8. When the machine is running, please maintain a constant water supply. Without water circulation will damage the sealing rings of the machine.

9. For more query kindly contact for our Service Center/Dealer/ franchise

AGRIMATE MULTI PURPOSE EQUIPMENT
ANYWHERE - ANYTIME - ANY CROP














ratnagiri impex
BRINGING YOU THE FUTURE... NOW

IMPORTED & MARKETED BY,

RATNAGIRI IMPEX PVT., LTD.,
Annapurna House, #1 / 1G, 7th Cross, New Guddadahalli Mysore Road, Bangalore - 560 026
Missed Call : 7393 938 938 Email: ask@agrimart.in