


CNV36JRN201HR cpu/gpuModules™

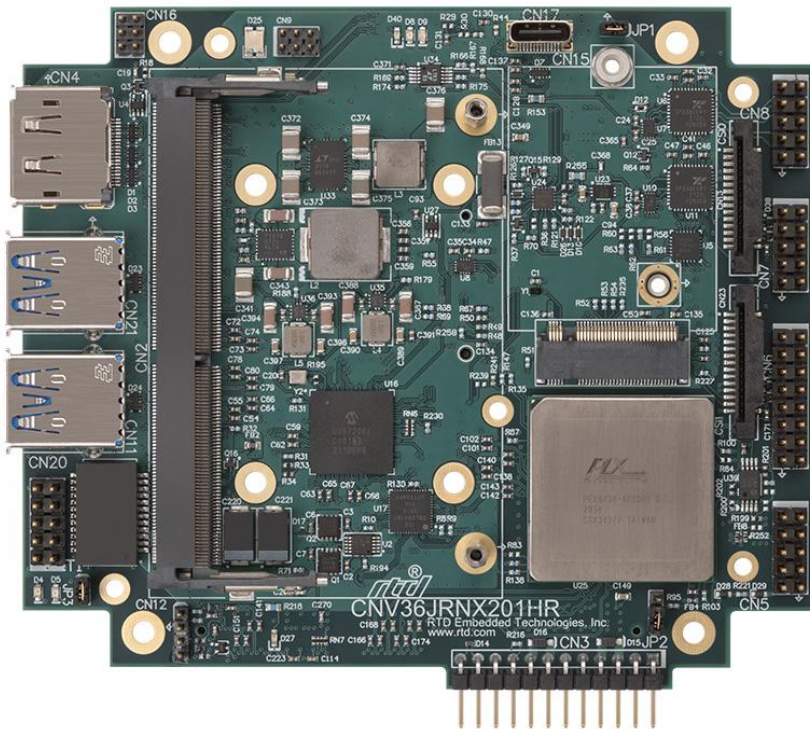

User's Manual

BDM-610000092 Revision B

 **PC/104**

www.rtd.com



rttd®

"Accessing the Analog World"®

CNV36JRN201HR cpu/gpuModules™ User's Manual

RTD Document Number: BDM-610000092 Revision B

Copyright © 2009-2025 RTD Embedded Technologies, Inc. All rights reserved.

Trademarks

Advanced Analog I/O, Advanced Digital I/O, aAIO, aDIO, a2DIO, Autonomous SmartCal, “Catch the Express”, cpuModule, dspFramework, dspModule, expressMate, ExpressPlatform, HiDANplus, “MIL Value for COTS prices”, multiPort, PlatformBus, and PC/104EZ are trademarks, and “Accessing the Analog World”, dataModule, IDAN, HiDAN, RTD, and the RTD logo are registered trademarks of RTD Embedded Technologies, Inc (formerly Real Time Devices, Inc.). PS/2 is a trademark of International Business Machines Inc. PCI, PCI Express, and PCIe are trademarks of PCI-SIG. PC/104, PC/104-Plus, PCI-104, PCIe/104, PCI/104-Express and 104 are trademarks of the PC/104 Embedded Consortium. All other trademarks appearing in this document are the property of their respective owners.

Failure to follow the instructions found in this manual may result in damage to the product described in this manual, or other components of the system. The procedure set forth in this manual shall only be performed by persons qualified to service electronic equipment. Contents and specifications within this manual are given without warranty and are subject to change without notice. RTD Embedded Technologies, Inc. shall not be liable for errors or omissions in this manual, or for any loss, damage, or injury in connection with the use of this manual.

Revision History

Revision	Date	Reason for Change
A	05/1/2025	Initial release
B	9/11/2025	Added Figure 14 and 15 IDAN connector images. Corrected board designator references in Table 24. Updated procedure in <i>Force Recovery Mode</i> .

Table of Contents

Chapter 1 Introduction	5
CNV36JRN201HR cpu/gpuModule	6
Ordering Information.....	8
Board Features	9
Block Diagram.....	11
Specifications	12
Contact Information	16
Chapter 2 Getting Started.....	17
Selecting the Stack Order for the CNV36JRN201HR.....	17
Connecting to the Stack.....	18
Connecting to the Utility Port 2.0.....	18
Power Input Connections.....	18
Booting the CNV36JRN201HR cpu/gpuModule for the First Time.....	18
Chapter 3 Connecting the cpu/gpuModule	19
Proper Grounding Techniques	20
Connector Locations	20
Auxiliary Power (CN3).....	22
Utility Port 2.0 Connector (CN5).....	23
DisplayPort Connector (CN4).....	25
Serial Port 1 (CN7) and Serial Port 2 (CN8)	26
Digital I/O Port (CN6)	29
Ethernet (10/100/1000Base-T) Connector (CN20)	30
MIPI CSI-2 Camera Connectors (CN13, CN23).....	31
PCIe/104 Type 2 Bus (CN1 - Bottom)	32
Reserved (CN16 and CN12)	35
Chapter 4 Using the cpu/gpuModule	36
Operating System Specific Usage	37
Digital I/O	38
CSI Cameras.....	38
Power Management	38
Thermal Management	39
Appendix A Hardware Reference	40
Jumper Settings and Locations.....	41
Onboard PCI/PCIe Devices	42
Physical Dimensions.....	42

Heatsink Dimensions	43
Flat-Heat Spreader Dimensions.....	44
Appendix B Troubleshooting.....	46
Common Problems and Solutions	47
Troubleshooting a PC/104 System.....	48
How to Obtain Technical Support.....	49
Appendix C IDAN™ Dimensions and Pinout.....	50
IDAN Contents	51
IDAN Dimensions.....	52
IDAN Connectors.....	53
External I/O Connections.....	54
Appendix D Additional Information	56
NVIDIA Driver Information.....	56
PC/104 Specifications.....	56
Appendix E Limited Warranty	57

Chapter 1 Introduction

This manual provides comprehensive hardware and software information for users developing with the CNV36JRN201HR PCIe/104 cpu/gpuModule.



Note: Read the specifications beginning on page 12 prior to designing with the cpu/gpuModule.

This manual is organized as follows:

Chapter 1 *Introduction*

Introduces main features and specifications.

Chapter 2 *Getting Started*

Provides abbreviated instructions to get started quickly.

Chapter 3 *Connecting the cpu/gpuModule*

Provides information on connecting the cpu/gpuModule to peripherals.

Chapter 4 *Using the cpu/gpuModule*

Provides information to develop applications for the cpu/gpuModule, including general cpu/gpuModule information, detailed information on storing both applications and system functions, and using utility programs.

Appendix A *Hardware Reference*

Lists jumper locations and settings, physical dimensions, and processor thermal management.

Appendix B *Troubleshooting*

Offers advice on debugging problems with your system.

Appendix C *IDAN™ Dimensions and Pinout*

Provides connector pinouts for the cpu/gpuModule installed in an RTD Intelligent Data Acquisition Node (IDAN) frame.

Appendix D *Additional Information*

Lists sources and websites to support the cpu/gpuModule installation and configuration.

Appendix E *Limited Warranty*

CNV36JRN201HR cpu/gpuModule

RTD's CNV36JRN201HR cpu/gpuModule represents the latest in high performance PCIe/104 embedded controllers with a Type 2 bus. This design is based on the NVIDIA® Jetson Orin NX system-on-module (SOM).

The CNV36JRN201HR carrier utilizes the PLX PEX8734 to bifurcate the Jetson Orin x4 PCIe Gen 3 lane into 4x1 and 2x4 lanes that can be access on the PCIe/104 Type 2 bus. This feature allows the user to access to vast selection of PCIe/104 peripheral cards, this expands the capabilities of the NVIDIA® Jetson Orin SOM.

The carrier also breaks out two additional PCIe lanes from the Jetson Orin SOM. A PCIe x1 lane that connects to a M.2 E-key socket board for wireless modules and PCI x2 lane that connects to a M.2 M-key socket for NVMe SSDs. The Jetson Orin SOM doesn't provide any SATA ports or internal storage so all data must be stored on an external NVMe drive. Due to this limitation the users can expanded storage by using an additional carrier board ([SSD34200/SSD34100](#)). This addon carrier provides one or two addition M.2 B+M-keys, via the PCIe/104 connector. The user may populate these slots with additional NVMe drives.

The Jetson Orin SOM features an xHCI controller that supplies three USB 3.2 connections, each with up to 10 Gb/s data throughput. These ports are connected as follows: debug port (CN17), USB Type A (CN21), and onboard USB hub. The use of a USB hub allows for three additional USB 3.2 ports, though these will share the 10 Gb/s bandwidth. Two of these connections route to the bottom PCIe/104 connector, and one connects to the USB A (CN22) connector. An additional USB 2.0 port is available through the Utility port (CN5), which, when used with the [XK-CM107](#) cable kit, provides two USB ports ideal for connecting a keyboard and mouse.

Other features of the CNV36JRN201HR include two RS-232/422/485 software-configurable serial ports. One of these ports (CN7) is multiplexed with a CAN transceiver, allowing the user to select between serial and CAN communication. RTD provides a simple shell script to configure the ports at runtime. The carrier also features two 15-pin FFC connectors to break out 2-lane MIPI CSI-2 ports provided by the Jetson Orin NX. Additionally, the CNV36JRN201HR offers 14 general-purpose I/O (GPIO) pins, with a shell script available from RTD to demonstrate how to utilize them.

Furthermore, the NVIDIA® Jetson Orin SOM includes both a display controller and an Ethernet interface. The CNV36JRN201HR carrier connects to these interfaces as follows: the display controller connects to a DisplayPort (DP++) connector, providing audio and video, while the Ethernet interface is available through a DIL 0.1" header, with the [XK-CM83](#) offering a standard RJ-45 connector.

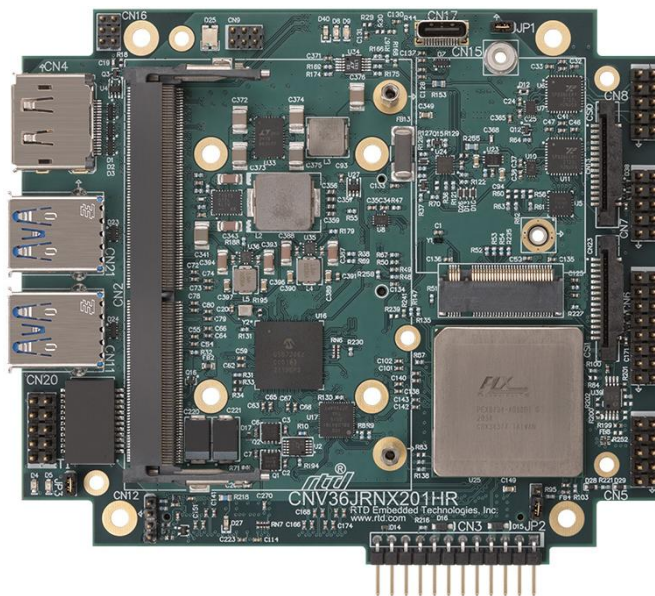


Figure 1 CNV36JRN201HR cpu/gpuModule (top view)

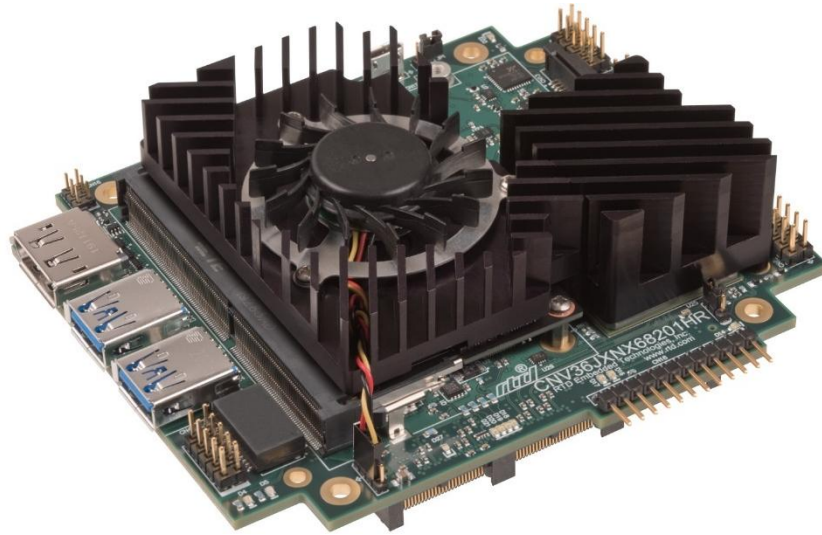


Figure 2 CNV36JRN201HR cpu/gpuModule (With NX and standard heatsink)

You can easily customize the cpu/gpuModule by stacking PCI/104-Express or PCIe/104 modules such as video controllers, Digital Signal Processors, drive carriers, LAN controllers, or analog and digital data acquisition modules. Stacking modules onto the cpu/gpuModule avoids expensive installations of backplanes and card cages and preserves the module's compactness.

RTD provides a Broad Support Package (BSP) for CNV36JRN201HR cpu/gpuModule for Nvidia's Linux for Tegra operating system.

Ordering Information

The CNV36JRN201HR cpu/gpuModule is available with two heatsink solutions: an actively cooled heatsink or a passively cooled flat heat spreader. The cpu/gpuModule can also be purchased as part of an Intelligent Data Acquisition Node (IDAN™) building block, which consists of the cpu/gpuModule and a milled aluminum IDAN frame. The IDAN building block can be used in just about any combination with other IDAN building blocks to create a simple but rugged PC/104 stack.

Refer to [Appendix C IDAN™ Dimensions and Pinout](#), for more information. The CNV36JRN201HR cpu/gpuModule can also be purchased as part of a custom-built RTD HiDAN™ or HiDANplus High Reliability Intelligent Data Acquisition Node. Contact RTD for more information on its high reliability PC/104 systems.

CNV36JRN201HR Model Options

The basic cpu/gpuModule model options are shown below. Refer to the RTD website (www.rtd.com) for more detailed ordering information and any new variations that may be available.

Table 1 CNV36JRN201HR cpu/gpuModule Model Options

Part Number	Description
CNV36JRN201HR-00	NVIDIA® Jetson Orin NX SOM with a standard heat sink (8 CPU, 1024 GPU, 32 Tensor cores, 16GB memory, external storage)
CNV36JRN201HR-10	NVIDIA® Jetson Orin NX SOM with a standard heat sink (6 CPU, 1024 GPU, 32 Tensor cores, 8GB memory, external storage)
CNV36JRN201HR-30	NVIDIA® Jetson Orin Nano SOM a with standard heat sink (6 CPU, 1024 GPU, 32 Tensor cores, 8GB memory, external storage)
CNV36JRN201HR-40	NVIDIA® Jetson Orin Nano SOM a with standard heat sink (6 CPU, 512 GPU, 16 Tensor cores, 4GB memory, external storage)
CNV36JRN201HRF-###	NVIDIA® Jetson Orin NX/Nano SOM listed above with a flat heat spreader
IDAN-CNV36JRN201HR-###	NVIDIA® Jetson Orin NX/Nano SOM listed above in an IDAN frame

Cable Kits and Accessories

For maximum flexibility, RTD does not provide cables with the cpu/gpuModule. You may wish to purchase the CNV36JRN201HR cpu/gpuModule cable kit (XK-CM124), which contains:

- Utility Port 2.0 multi-function cable
 - (2x USB 2.0 ports, battery, reset button, power button, speaker)
- DIO cable (DIL-16 to DSUB-25)
- Two serial port cables (DIL-10 to DSUB-9)
- One Ethernet cable (DIL-10 to RJ-45)

For additional accessories, refer to the RTD website.

Board Features

NVIDIA® Jetson Orin system-on-module Options

Part Number	Cores	Core Frequency	Memory	AI Performance	Nvidia P-Number
CNV36JRN201HR-00	8	2GHz	16GB	157 TOPs	P3767-0000
CNV36JRN201HR-10	6	2GHz	8GB	117 TOPs	P3767-0001
CNV36JRN201HR-30	6	1.7GHz	8GB	67 TOPs	P3767-0003
CNV36JRN201HR-40	6	1.7GHz	4GB	34 TOPs	P3767-0004

I/O

- Networking
 - 10/100/1000 Gigabit Ethernet
- Imaging
 - 4 camera lanes (2x2 lane) MIPI CSI-2 D-PHY 2.1 (2.5 Gb/s per pair, total up to 20 Gbps)
- Display Controller
 - One DisplayPort 1.4a
 - Maximum Resolution
 - NX: (8K) 7680x4320 at 30 Hz
 - Nano: (4K) 3840x2160 at 30 Hz
- Software-configurable RS-232/422/485 serial ports, CAN port
 - 120 Ohm Termination resistors for RS-422/485 through software Configuration
 - Fully jumper-less configuration
 - CN7 Configurable as Serial or CAN
- Digital I/O (DIO)
 - 14-bit programmable GPIO
- PCIe/104 Type 2 bus
 - Four PCI Express x1 Links
 - Two PCI Express x4 Links
 - Two USB 3.2 (10Gb/s, Shares Bandwidth CN11)
- Two USB 3.2 Type A
 - CN11 (10Gb/s, Shares Bandwidth with PCIe/104 USB Ports)
 - CN21 (10Gb/s, Direct Connect)
 - Automatic resettable over-current protection (1A @ 5 Vdc)
- M.2 expansion slots
 - E-key slot for Wi-Fi/Bluetooth connectivity with PCIe, USB2.0 and I2S interfaces (supported card sizes 3030 or 2230)
 - M-key slot for NVMe (supported card sizes 3042 or 2242)
- Utility Port 2.0 Connector
 - 1x USB 2.0 (Universal Serial Bus) Port with 500 mA over-current protection
 - Hardware Reset input
 - Soft Power Button input
 - Battery input for Real Time Clock

- Auxiliary Power Connector
 - Supplies both 5V and 12V to the system. (Only 5V Required)
 - If you plan to power the board through the Auxiliary connector you must connect all pins to ensure enough power is supplied to the board. The power cable should be twisted together and not be more than 2 ft. in length to ensure proper power delivery.
- Advanced Thermal Management
 - Thermal Throttling reduces clock speed to prevent thermal runaway.
 - Auto Fan Control only runs fan when needed.
 - Mini Fan Heatsink with Auto Fan control.
 - Passive Structural Heatsink & Heat pipes in IDAN and HiDAN System Configurations
- Power Management
 - ATX support for “Soft Off”
 - ATX Power signals

Block Diagram

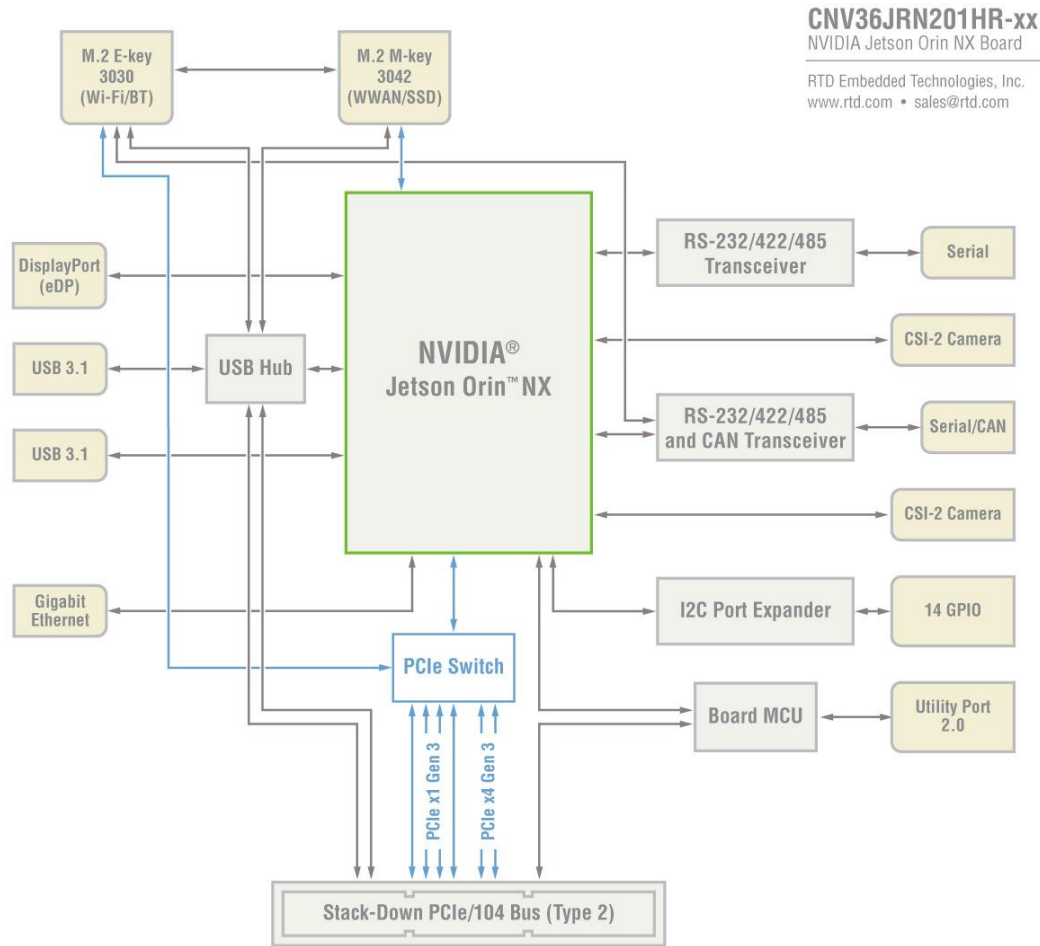


Figure 3 CNV36JRN201HR cpu/gpuModule Simplified Block Diagram

Specifications

Physical Characteristics

Basic dimensions and the weight of the CNV36JRN201HR are listed below. For a more detailed dimensional drawing, refer to the *Physical Characteristics* section.

- Dimensions
 - Board Size (connectors not included)
 - Length (L): 99.06 mm L (3.9")
 - Width (W): 115.57 mm W (4.550")
- Stand-off Height Below the CPU:
 - All versions: 15.24mm (0.6")
- Weight: Approximately 0.248 Kg (0.547 lbs.) with fan Heatsink
- Weight: Approximately 0.210 Kg (0.463 lbs.) with flat Heat spreader
- Weight: Approximately 0.123 Kg (0.271 lbs.)
- IDAN Weight: Approximately 0.771 Kg (1.70 lbs.)

Power Consumption

Exact power consumption depends on the actual application. Power consumption of the CNV36JRN201HR is listed in **Table 2** and **Table 3**.

Table 2 Typical Power Consumption

Part Number	Standard Firmware	Super Firmware
CNV36JRN201HR-00	20 W	24 W
CNV36JRN201HR-10	TBD W	TBD W
CNV36JRN201HR-30	TBD W	TBD W
CNV36JRN201HR-40	TBD W	TBD W

Table 3 Heavy Power Consumption

Part Number	Standard Firmware	Super Firmware
CNV36JRN201HR-00	34 W	39 W
CNV36JRN201HR-10	TBD W	TBD W
CNV36JRN201HR-30	TBD W	TBD W
CNV36JRN201HR-40	TBD W	TBD W



Note: The measurements listed above are intended to represent common usage scenarios. The cpu/gpuModule's power consumption is heavily influenced by the running software and system activity.

Operating Conditions

Table 4 Operating Conditions

Symbol	Parameter	Test Condition	Min.	Max.
V _{CC5}	5V Supply Voltage		4.75V	5.25V
V _{CC12}	12V Supply Voltage		11.4V	12.6V
V _{CCSTBY}	5V Standby Voltage		4.75V	5.25V
I _{CCSTBY}	5V Standby Current		-	800mA
T _a	Ambient Operating Temperature ¹		-25	+70°C
T _s	Storage Temperature		-40	+85°C
R _h	Humidity	Non-Condensing	0	90%
MTBF	Mean Time Before Failure (hours)	CNV36JRN201HR		TBD

1. With supplied heat sink solution. Depending on the CPU usage, performance may degrade as the ambient temperature approaches the maximum. Contact RTD Tech Support for more information.
2. Calculation Model: Telcordia Issue 2; Calculation Method: Method 1 Case 3; Temperature: +30°C; Environment: Ground Benign, Controlled

Electrical Characteristics

The **Table 5** below lists the Electrical Characteristics of the CNV36JRN201HR. Operating outside of these parameters may cause permanent damage to the cpu/gpuModule.

Table 5 Electrical Characteristics

Symbol	Parameter	Test Condition	Min.	Max.
USB Ports				
I _{oc}	Overcurrent Limit	Each Port USB2.0	500 mA	750 mA
I _{oc}	Overcurrent Limit	Each Port USB3.0	1.0 A	1.3 A
Serial Ports - RS-232				
V _I	Input Voltage Range	—	-15 V	+15V
V _O	Output Voltage Swing	R _L = 3k	±5.0 V	±7.0 V
V _{IH}	Input Voltage High	—	1.5 V	2.0 V
V _{IL}	Input Voltage Low	—	0.6 V	1.2 V
Serial Ports - RS-422/485				
V _{OD1}	Differential Output	R _L = 100 Ohm	2.0 V	—
V _{OD2}	Differential Output	R _L = 54 Ohm	1.5 V	—
V _{OC}	Common Mode Output	R _L = 54 or 100 Ohm	—	3.0 V
V _{TH}	Differential Input Threshold	—	-200 mV	-50 mV
V _I	Absolute Max Input Voltage	—	-12 V	-12 V
CAN Bus				
V _{O(D)H}	Bus Output Voltage Dominant CANH	R _L =60Ω	2.45 V	3.3V
V _{O(D)L}	Bus Output Voltage Dominant CANL	R _L =60Ω	0.5 V	1.25V
V _{O(R)}	Bus Output Voltage Recessive	R _L =60Ω	—	1.85 V
V _{OD(D)}	Differential Output Voltage Dominant	R _L =50-65Ω	1.6 V	3V
V _{OD(R)}	Differential Output Voltage Dominant	R _L =60Ω	-120 mV	120 mV
I _{OS(D)}	Output Short Circuit Current Dominant	V _{CANH} =-12V	-200 mA	—
I _{OS(D)}	Output Short Circuit Current Dominant	V _{CANL} =12V	—	200mA
I _{OS(R)}	Output Short Circuit Current Recessive	V _{CANH,CANL} = -12V...+12V	-5 mA	5 mA
V _{TH}	Differential Input Threshold		500 mV	900 mV
V _{CM}	Common Mode Range		-12 V	-12 V

Table 5 Electrical Characteristics

Symbol	Parameter	Test Condition	Min.	Max.
DIO				
I_{OH}	Output Current Source	$V_{OH} = 2.4\text{ V}$	29 mA	
I_{OL}	Output Current Sink	$V_{OL} = 0.5\text{ V}$	17 mA	
V_{IH}	Input Voltage High	—	1.8 V	6 V
V_{IL}	Input Voltage Low	—	-0.3 V	0.8 V
I_{DIOVCC}	Supply current	—		1 A
Utility Port 2.0 Connector (CN5)				
V_{RTC}	Input RTC Voltage ¹	—	2.5 V	3.6 V
I_{RTC}	RTC Battery Current	—		2.2 μA
I_{UTILVCC}	Utility Supply Current	—		1 A

1. Date and time are lost when power is completely removed from the system including the CMOS battery. Date and time are not required for board operation. BIOS will set default values on the next power cycle.

Contact Information

RTD Embedded Technologies, Inc.
103 Innovation Blvd.
State College, PA 16803 USA

Phone: +1-814-234-8087

Fax: +1-814-234-5218

E-mail: sales@rtd.com
techsupport@rtd.com
rma@rtd.com

<https://www.rtd.com>

Chapter 2 Getting Started

For many users, the factory configuration of the CNV36JRN201HR cpu/gpuModule can be used to get a PC/104 system operational. You can get your system up and running quickly by following the simple steps described in this chapter, which are:

1. Before connecting the cpu/gpuModule, the user must be properly grounded to prevent electrostatic discharge (ESD). For more information, refer to [Proper Grounding Techniques](#) on page 20
2. Connect the Utility Port 2.0.
3. Connect a USB keyboard and mouse.
4. Connect a monitor to the DisplayPort.
5. Connect power.
6. Boot

Refer to the remainder of this chapter for details on each of these steps.

Selecting the Stack Order for the CNV36JRN201HR

There are several things to consider when selecting the order of boards in the stack. Before selecting the order, be sure to determine which bus connector on each board is the “Active” bus. Typically, if a peripheral module has both PCIe and PCI bus connectors, only the PCIe is active, and the PCI is pass-through. The following is a list of rules to use to determine the stack order:

1. The PCIe connector is on the bottom of the cpu/gpuModule, therefore it must be the top most card in the stack.
2. The CPU module has no direct SATA links. Any added SSD functionality will consume PCIe resources.
3. Generally, keep higher speed boards closer to the CPU.
4. If using lane repopulation, consume all lanes before making the last lane repopulate, to preserve bandwidth.
5. Keep the power supply as close as possible to the CPU due to the high instantaneous current demands of the CPU.

Connecting to the Stack

The bus connectors of the cpu/gpuModule are simply plugged onto a PC/104 stack to connect to other devices. Follow the procedure below to ensure that stacking of the modules does not damage connectors or electronics.



WARNING: Do not force the module onto the stack! Wiggling the module or applying too much pressure may damage it. If the module does not readily press into place, remove it, check for bent pins or out-of-place keying pins, and try again.

For mechanical dimensions, including board-to-board spacing, see [Physical Dimensions](#).

1. Turn off power to the PC/104 system or stack.
2. Always work at an ESD protected workstation and wear a grounded wrist-strap.
3. Select and install stand-offs to properly position the cpu/gpuModule on the stack.
4. Remove the cpu/gpuModule from its anti-static bag.
5. Check that pins of the bus connector are properly positioned.
6. Check the stacking order; make sure all the busses used by the peripheral cards are connected to the cpu/gpuModule.
7. Hold the cpu/gpuModule by its edges and orient it so the bus connector pins line up with the matching connector on the stack.
8. Gently and evenly press the cpu/gpuModule onto the PC/104 stack.

Connecting to the Utility Port 2.0

The Utility Port 2.0 connector (CN5) implements the following interfaces:

- One USB 2.0 port
- Hardware Reset input
- Battery input for Real Time Clock
- Soft Power Button input

To use these interfaces, you must connect to the Utility Port 2.0 connector (CN5). The Utility Port 2.0 cable from the RTD cable kit provides a small speaker, two USB 2.0 ports for a keyboard and mouse, a push-button for resetting the system, a soft-power button, and a lithium battery to provide backup power for the real time clock.

Refer to [Utility Port 2.0 Connector \(CN5\)](#) on page 23 to connect devices to the Utility Port 2.0 connector.

Power Input Connections

Power to the board must come from the top PCIe/104 Type 2 bus connector (CN1), or the auxiliary power connector (CN3). These connectors provide the required +5V DC and +12V DC voltage rail input to the cpu/gpuModule.

Booting the CNV36JRN201HR cpu/gpuModule for the First Time

You can now apply power to the cpu/gpuModule. The CNV36JRN201HR will be shipped with pre-loaded image of Linux for Tegra (L4T) based on Ubuntu. Upon first boot, the cpu/gpuModule will boot to the Ubuntu software license agreement page. After agreeing to the software license, the user will be prompted to assign a username and password. This will be the root username and password for the system.

Chapter 3 Connecting the cpu/gpuModule

This chapter provides information on all CNV36JRN201HR cpu/gpuModule connectors.

Connector Locations – page 20

Auxiliary Power (CN3) – page 22

Utility Port 2.0 Connector (CN5) – page 23

DisplayPort Connector (CN4) – page 25

Serial Port 1 (CN7) and Serial Port 2 (CN8) – page 26

Ethernet (10/100/1000Base-T) Connector (CN20) – page 30

PCIe/104 Type 2 Bus (CN1 - Bottom) – page 32

Reserved (CN16 and CN12) – page 35

Proper Grounding Techniques

Before removing the CNV36JRN201HR from its static bag, proper grounding techniques must be used to prevent electrostatic discharge (ESD) damage to the cpu/gpuModule. Common grounding procedures include an anti-static mat on a workbench, which may connect to an anti-static wrist strap (also known as an ESD wrist strap) on the wrist of the technician or engineer.

Connector Locations

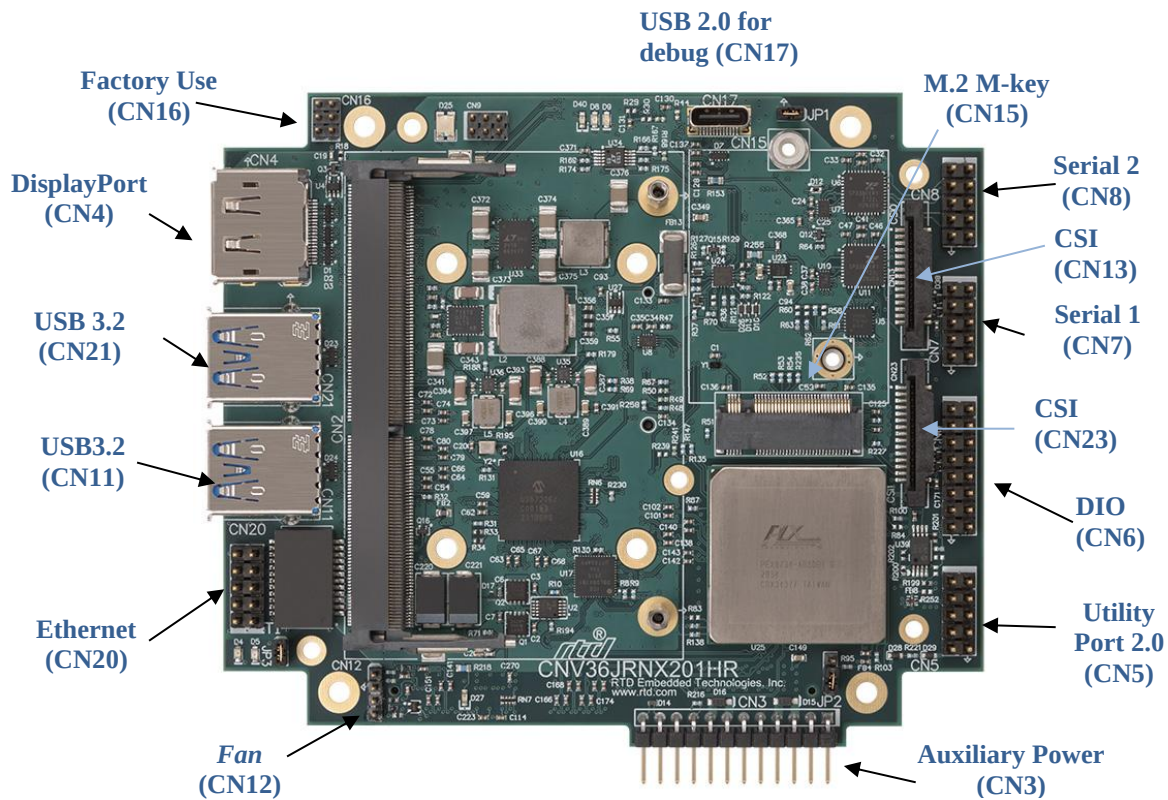


Figure 4 CNV36JRN201HR cpu/gpuModule (top view)



Note Pin 1 of each connector is indicated by a white silk-screened square on the top side of the board and a square solder pad on the bottom side of the board. Pin 1 of the bus connectors match when stacking PC/104 modules.

M.2 E-key
(CN14)

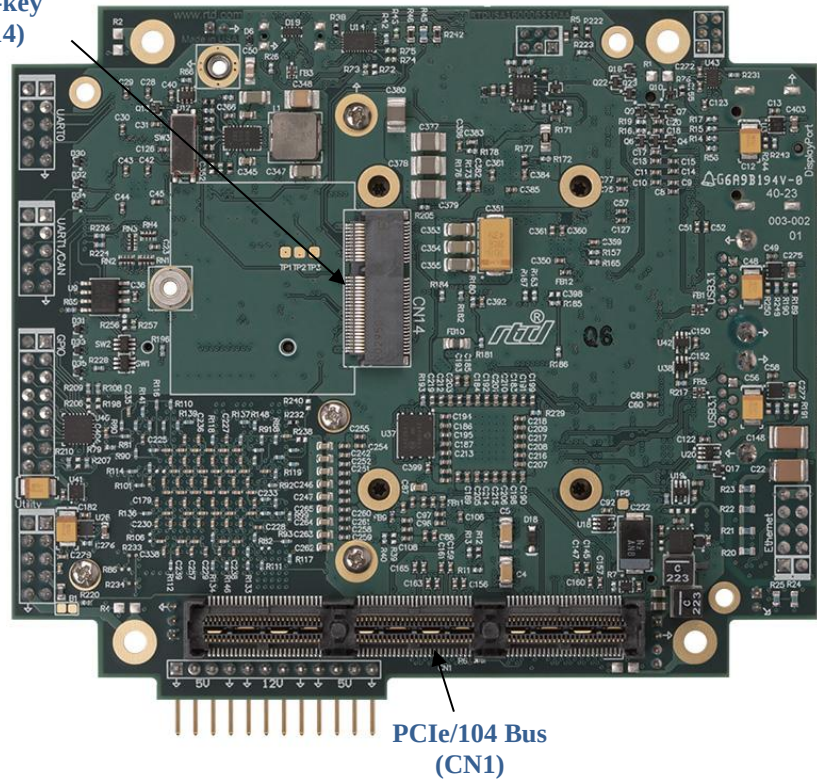


Figure 5 CNV36JRN201HR cpu/gpuModule (bottom view)

Table 6 CNV36JRAGX Basic Connectors

Connector	Function	Size and Pitch	Mating Connector
CN1	PCIe/104 Type 2 Bus	—	Samtec ASP-129637-03
CN3	Auxiliary Power	1x12, 0.1"	FCI 65039-025LF (housing model number)
CN4	DisplayPort	—	—
CN5	Utility Port 2.0	2x5, 0.1"	3M 89110-0001
CN6	Digital I/O	2x8, 0.1"	3M 89116-0001
CN7	Serial Port 1 / CAN	2x5, 0.1"	3M 89110-0001
CN8	Serial Port 2	2x5, 0.1"	3M 89110-0001
CN12	Fan	1x3 2mm	FCI 69305-003LF
CN11	USB 3.2	—	—
CN21	USB 3.2	—	—
CN12	Fan	1x4 2mm	FCI 69305-004LF
CN20	Ethernet	2x5 0.1"	3M 89110-0001
CN14	M.2 E-Key	—	—
CN15	M.2 M-Key	—	—
CN17	USB Debug Port	—	—

Auxiliary Power (CN3)

The Auxiliary Power connector can be used to supply power to devices that are attached to the cpu/gpuModule. These devices include hard drive, front-end boards for data acquisition systems, and other devices.

Power can also be conveyed to the module through the Auxiliary Power connector (CN3). The CNV36JRN201HR cpu/gpuModule requires +5 VDC, +12VDC and ground for operation.



Note: Although it is possible to power the cpu/gpuModule through the Auxiliary Power connector, the preferred method is to power it through the bus connector from a power supply in the stack. The cpu/gpuModule can have large current transients during operation, which make powering it through wires difficult. Powering through the bus eliminates problems such as resistive voltage drop and lead inductance transients.




WARNING: There is no reverse voltage or over-voltage protection on CN3. The user is responsible for any over-voltage and reverse voltage protection that would be necessary to power through CN3. Over-voltage and reverse voltage damage on CN3 will void the warranty.

If using the Auxiliary Power connector to power the system, care must be taken to ensure good power connections. The power and ground leads must be twisted together, or as close together as possible to reduce lead inductance. A separate lead must be used for each of the power pins. All 5V, 12V pins and all ground pins must be connected. Do not use wire smaller than 20 gauge. The power supply solution must be verified by measuring voltage at the Auxiliary Power Connector and verifying that it meets the input voltage specifications. The voltage at the connector should be checked with an oscilloscope while the system is operational.

Table 7 Auxiliary Power Connector (CN3)

Pin	Signal	Function
1	GND	Ground
2	+5 V	+5 Volts DC
3	+5 V	+5 Volts DC
4	GND	Ground
5	GND	Ground
6	+12 V	+12 Volts DC
7	+12 V	+12 Volts DC
8	GND	Ground
9	GND	Ground
10	+5 V	+5 Volts DC
11	+5V	+5 Volts DC
12	GND	Ground

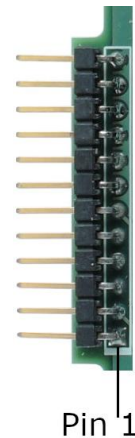

Utility Port 2.0 Connector (CN5)

The Utility Port 2.0 connector implements the following functions:

- USB 2.0 (Universal Serial Bus) Port
- Hardware Reset input
- Soft Power Button input
- Battery input for Real Time Clock

The NVIDIA® Jetson series cpu/gpuModule does not provide speaker functionality, therefore pin 1 is not connected. It is safe to use any device that has speaker connected to pin 1 (eg. ADP076 utility module).



Figure 6 Utility Port 2.0 Accessory Cable XK-CM107

Table 8 provides the pinout of the Utility Port 2.0 connector.

Table 8 Utility Port 2.0 Connector (CN5)

Pin	Signal	Function	In/Out
1	NC	Not Connected	—
2	PWR	+5 V	out
3	RESET#	Manual Push-Button Reset	in
4	DATA-	Bidirectional data line for USB	in/out
5	PWRSW#	Soft Power Button	in
6	DATA+	Bidirectional data line for USB	in/out
7	GND	Ground	out
8	GND	Ground	out
9	BAT	RTC Battery Input	in
10	Shield GND	Shield Ground	out



WARNING: The pinout of the Utility Port 2.0 connector is **not** compatible with some older generations of RTD cpuModules. Attaching a legacy Utility Port harness to the Utility Port 2.0 connector may damage or destroy the cpu/gpuModule.

USB 2.0 Connection

One USB 2.0 compliant connector is available on connector CN5. **Table 8** provides the pinout of the USB connector.

System Reset

Pin 3 of the Utility Port 2.0 connector allows connection of an external push-button to manually reset the system. The push-button is normally open and connected to ground when pushed.

Soft Power Button

Pin 5 of the Utility Port 2.0 connector allows connection of an external push-button to send a soft power signal to the system. The power button can be used to enter [recovery mode](#). When the cpu/gpuModule is turned off, press and hold the power button will enter recovery mode. Details of recovery mode can be found in the *Force Recovery Mode* section on page 37.

For more information on the modes of the Soft Power Button, refer to the *Power Management* section in Chapter 4, *Using the cpu/gpuModule*

Battery

Pin 9 of the Utility Port 2.0 connector is the connection for an external backup battery. This battery is used by the cpu/gpuModule when system power is removed to preserve the date and time of the real time clock (RTC).

Connecting a battery is only required to maintain time when power is completely removed from the cpu/gpuModule. A battery is not required for board operation.

DisplayPort Connector (CN4)

The DisplayPort connector on the CNV36JRN201HR cpu/gpuModule is a standard PC DisplayPort connector completed with latch holes to provide a rugged connecting solution for latching DisplayPort cables.

The DisplayPort supports all mandatory features of the VESA DisplayPort (DP) 1.4 standard and supports audio over the connection. Full bandwidth transmission is supported over a 2-meter cable, with reduced bandwidth transmission supported up to a length of 15 meters.

The DisplayPort connector supports MST (Multi-Stream Transport) therefore multiple monitors may be used with the cpu/gpuModule if they support MST.

The connection can directly output single-link HDMI and DVI signals by using active converter cables. Simple passive cables are not supported.

Table 8 provides the pinout of the DisplayPort connector.

Table 9 DisplayPort Connector (CN4)

Pin	Signal	Standard Function	DVI / HDMI mode ¹	In/Out
1	LN0+	Main Link, Lane 0 (positive)	TMDS Channel 2 (positive)	out
2	GND	Ground	Ground	out
3	LN0-	Main Link, Lane 0 (negative)	TMDS Channel 2 (negative)	out
4	LN1+	Main Link, Lane 1 (positive)	TMDS Channel 1 (positive)	out
5	GND	Ground	Ground	out
6	LN1-	Main Link, Lane 1 (negative)	TMDS Channel 1 (negative)	out
7	LN2+	Main Link, Lane 2 (positive)	TMDS Channel 0 (positive)	out
8	GND	Ground	Ground	out
9	LN2-	Main Link, Lane 2 (negative)	TMDS Channel 0 (negative)	out
10	LN3+	Main Link, Lane 3 (positive)	TMDS Clock (positive)	out
11	GND	Ground	Ground	out
12	LN3-	Main Link, Lane 3 (negative)	TMDS Clock (negative)	out
13	CFG1	Configuration Pin 1	Cable Adapter Detect	out
14	CFG2	Configuration Pin 2	Consumer Electronics Control ²	out
15	AUX+	Auxiliary Channel (positive)	DDC Clock	in/out
16	GND	Ground	Ground	out
17	AUX-	Auxiliary Channel (negative)	DDC Data	in/out
18	HPD	Hot Plug Detect	Hot Plug Detect	in
19	DPG	Return for DPV	Return for DPV	out
20	DPV	+3.3V DC Power	+3.3V DC Power	out

1. Requires special passive adapter.

2. HDMI mode only

3.

Serial Port 1 (CN7) and Serial Port 2 (CN8)

The CNV36JRN201HR carrier module provides serial port transceivers that can be configured using the setup shell script `cnv36jragx_serial.sh` found in SWP-700020072. The serial port transceivers are disabled at power on. The setup script, `cnv36jragx_serial.sh`, must be used to set a mode.

Serial Port 1 (COM1) is implemented on connector CN7, and Serial Port 2 (COM2) is implemented on connector CN8. The serial ports are normally configured as PC compatible full-duplex RS-232 ports, but you may reconfigure these ports as half-duplex RS-422 or full-duplex RS-422 or RS-485. Serial ports can be accessed from Linux according to **Table 10**.

Table 10 Linux Device Serial Ports

Connector	Device file
CN7	/dev/ttyTHS1
CN8	/dev/ttyTHS2

Serial Port UART

NVIDIA's serial ports are implemented with a 16550/16450-compatible UART (Universal Asynchronous Receiver/Transmitter). This UART is capable of baud rates up to 12.5 Mbps. The transceiver when in RS232 is limited to a 1 Mbps. The transceiver in RS422/RS485 mode can be used up to the max speed of 12.5 Mbps. NVIDIA sets the default baud rate as 16450.

Refer to the NVIDIA Jetson AGX Orin datasheet for more information about the serial capabilities.

RS-232 Serial Port

Table 11 provides the serial port connector pinout and shows how to connect to an external DB-25 or DB-9 compatible serial connector. The AGX module does not implement: DCD, DSR, DTR, and RI pins. They are connected to the transceiver; however they are not functional.

Table 11 Serial Port in RS-232 Mode

Pin	Signal	Function	In/Out	DB-25	DB-9
1	—	N/C	—	8	1
2	—	N/C	—	6	6
3	RXD	Receive Data	in	3	2
4	RTS	Request To Send	out	4	7
5	TXD	Transmit Data	out	2	3
6	CTS	Clear To Send	in	5	8
7	—	N/C	—	20	4
8	—	N/C	—	22	9
9	GND	Signal Ground	—	7	5
10	GND	Signal Ground	—	—	—



RS-422 or RS-485 Serial Port

You may use `cnv36jragx_serial.sh` setup shell script to configure the serial ports as RS-422 or RS-485. In this case, you must connect the serial port to an RS-422 or RS-485 compatible device.

When using RS-422 mode, you can use the serial ports in either half-duplex (two-wire) or full-duplex (four-wire) configurations.



Note The `cpu/gpuModule` incorporates a software 120 Ohm termination resistor. Termination is usually necessary on all RS-422 receivers and at the ends of the RS-485 bus. Termination resistors can be enabled using the `cnv36jragx_serial.sh` setup shell script.

When using full-duplex in RS-422 mode, connect the ports as shown in **Table 12**.

Table 12 Full-Duplex Connections

Port 1	Port 2
RXD+	TXD+
TXD+	RXD+
RXD–	TXD–
TXD–	RXD–

In RS-485 mode, the connection of the ports is always half-duplex, as the transceivers' transmitters are connected to the receivers internally.

RS-422 Mode Pinout

Table 13 provides the serial port connector pinout when RS-422 mode is enabled.

Table 13 Serial Port in RS-422 Mode

Pin	Signal	Function	In/Out	DB-9
1	TXD–	Transmit Data (–)	out	1
2	—	Reserved	—	6
3	TXD+	Transmit Data (+)	out	2
4	—	Reserved	—	7
5	RXD+	Receive Data (+)	in	3
6	—	Reserved	—	8
7	RXD–	Receive Data (–)	in	4
8	—	Reserved	—	9
9	GND	Signal Ground	—	5
10	GND	Signal Ground	—	—



WARNING The pinout of the COM ports in RS-422 mode is **not** compatible with some older generations of RTD `cpuModules`.

RS-485 Mode Pinout

Table 14 provides the serial port connector pinout when RS-485 mode is enabled.

Table 14 Serial Port in RS-485 Mode

Pin	Signal	Function	In/Out	DB-9
1	D-	Data (-)	in/out	1
2	—	Reserved	—	6
3	D+	Data (+)	in/out	2
4	—	Reserved	—	7
5	—	Reserved	—	3
6	—	Reserved	—	8
7	—	Reserved	—	4
8	—	Reserved	—	9
9	GND	Signal Ground	—	5
10	GND	Signal Ground	—	—



WARNING The pinout of the COM ports in RS-485 mode is **not** compatible with some older generations of RTD cpuModules.



Note When using the serial port in RS-485 mode, the serial transmitters are enabled and disabled under software control. The transmitters can be enabled by manipulating the Request To Send (RTS*) signal of the serial port controller.

- RTS* = 0, and serial transmitters are disabled
- RTS* = 1, and serial transmitters are enabled

CAN Bus

Using the *cnv36jragx_serial.sh* setup shell script to configure the CN7 for CAN Bus. The CAN transceiver on the CNV36JRN201HR can support data rates up to 5 Mbps.

Table 15 provides the CN7 connector pinout when CAN Bus is enabled.

Table 15 CN7 in CAN Bus Mode

Pin	Signal	Function	In/Out	DB-9
1	—	Reserved	—	1
2	—	Reserved	—	6
3	CANL	Data Low	in/out	2
4	CANH	Data High	in/out	7
5	—	Reserved	—	3
6	—	Reserved	—	8
7	—	Reserved	—	4
8	—	Reserved	—	9
9	GND	Signal Ground	—	5
10	GND	Signal Ground	—	—



Note When using the serial port in CAN Bus mode, you must load the kernel modules. Below are the commands needed to load the kernel modules.



```
modprobe can
modprobe can-raw
modprobe mttcan
```

You can use the Ubuntu network interface to setup the can network. Below is the following command to setup a network with bitrate at 500kbps.

```
ip link set can0 up type can bitrate 500000
```

Digital I/O Port (CN6)

Connector CN6 is configured as a DIO port. DIO is 14 digital bits configured as an 8-bit programmable and 6-bit programmable I/O, providing any combination of inputs and outputs. Refer to [Digital I/O](#) —page 38 for information on programming the DIO.

Table 16 Digital I/O Pinout (CN6)

CN6 Pin	Function	CN6 Pin	Function
1	CN6-1	2	CN6-2
3	CN6-3	4	CN6-4
5	CN6-5	6	CN6-6
7	CN6-7	8	CN6-8
9	CN6-9	10	CN6-10
11	CN6-11	12	CN6-12
13	CN6-13	14	CN6-14
15	GND	16	+5 V



Ethernet (10/100/1000Base-T) Connector (CN20)

This connector provides a 10/100/1000Base-T Ethernet connection. Table 17 provides the pinout of the Ethernet connector. For 1000Base-T, all four pairs are used for transmit and receive. The LED D4 (green LED) indicates the state of the link and D5 (yellow LED) blinks when there is activity on the link.

Table 17 Ethernet Connector (CN20)

RJ-45 Pin	10-Pin DIL Pin	Signal	Function
3	1	B+ (RX+)	Receive+ (10/100)
6	2	B- (RX-)	Receive- (10/100)
4	3	C+	—
5	4	C-	—
1	5	A+ (TX+)	Transmit+ (10/100)
2	6	A- (TX-)	Transmit- (10/100)
7	7	D+	—
8	8	D-	—
—	9	AGND	Ethernet Ground
—	10	AGND	Ethernet Ground



MIPI CSI-2 Camera Connectors (CN13, CN23)

CN13 and CN23 are FFC (Flexible Flat Cable) connectors which can be used to interface cameras to the Jetson Orin NX CPU. This interface is designed for internal connectivity so the maximum signal length can be approximately 1.5 ft.

Table 18 MIPI CSI-2 Camera Connector Pinout

Pin	Name	Description
1	GND	Ground
2	D0-	Data lane 0
3	D0+	
4	GND	Ground
5	D1-	Data lane 1
6	D1+	
7	GND	Ground
8	CLK-	Clock
9	CLK+	
10	GND	Ground
11	PWDN	Power Down
12	MCLK	Master Clock
13	SCL	I ² C interface for control
14	SDA	
15	3.3V	3.3V power for camera

PCIe/104 Type 2 Bus (CN1 - Bottom)

Connector CN1 carries the signals of the PCIe/104 PCIe bus. These signals match definitions found in the **PCI/104-Express & PCIe/104 Specification Version 3.1** from the PC/104 Consortium. **Table 19** lists the pinouts of the PC/104-Express bus connector.



WARNING: Not all PCIe cards are compatible with the PCIe/104 Type 2 connector. Be sure that all boards attached to this bus are compatible before powering the system.

Table 19 **PCIe/104 Type 2 Bus Signal Assignments ¹**

Pin	Signal	Signal	Pin
1	USB_OC#	PE_RST#	2
3	+3.3V2	+3.3V ²	4
5	USB_1p	USB_0p	6
7	USB_1n	USB_0n	8
9	GND	GND	10
11	PEx1_1Tp	PEx1_0Tp	12
13	PEx1_1Tn	PEx1_0Tn	14
15	GND	GND	16
17	PEx1_2Tp	PEx1_3Tp	18
19	PEx1_2Tn	PEx1_3Tn	20
21	GND	GND	22
23	PEx1_1Rp	PEx1_0Rp	24
25	PEx1_1Rn	PEx1_0Rn	26
27	GND	GND	28
29	PEx1_2Rp	PEx1_3Rp	30
31	PEx1_2Rn	PEx1_3Rn	32
33	GND	GND	34
35	PEx1_1Clkp	PEx1_0Clkp	36
37	PEx1_1Clkn	PEx1_0Clkn	38
39	+5V_STBY	+5V_STBY	40
41	PEx1_2Clkp	PEx1_3Clkp	42
43	PEx1_2Clkn	PEx1_3Clkn	44
45	CPU_DIR	PWRGOOD	46
47	Reserved	Reserved	48
49	Reserved	Reserved	50
51	Reserved	PSON#	52

+5 Volts

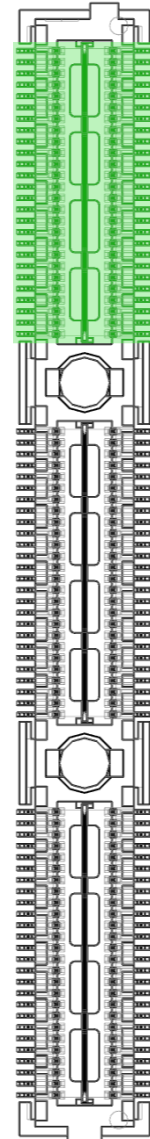


Table 19 PCIe/104 Type 2 Bus Signal Assignments ¹

Pin	Signal	Signal	Pin
53	WAKE#	STK1	54
55	GND	GND	56
57	PEx4_1T(0)P	PEx4_0T(0)P	58
59	PEx4_1T(0)N	PEx4_0T(0)N	60
61	GND	GND	62
63	PEx4_1T(1)P	PEx4_0T(1)P	64
65	PEx4_1T(1)N	PEx4_0T(1)N	66
67	GND	GND	68
69	PEx4_1T(2)P	PEx4_0T(2)P	70
71	PEx4_1T(2)N	PEx4_0T(2)N	72
73	GND	GND	74
75	PEx4_1T(3)P	PEx4_0T(3)P	76
77	PEx4_1T(3)N	PEx4_0T(3)N	78
79	GND	GND	80
81	NC (SATA_T1_P)	NC (SATA_T0_P)	82
83	NC (SATA_T1_N)	NC (SATA_T0_N)	84
85	GND	GND	86
87	USB 3_T1_P	USB 3_T0_P	88
89	USB 3_T1_N	USB 3_T0_N	90
91	GND	GND	92
93	Reserved	Reserved	94
95	Reserved	Reserved	96
97	GND	GND	98
99	Reserved	Reserved	100
101	Reserved	Reserved	102
103	GND	GND	104

+5 Volts


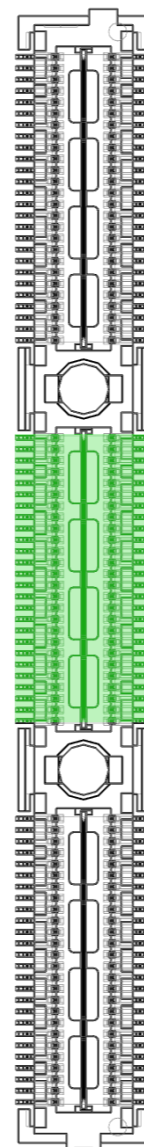


Table 19 PCIe/104 Type 2 Bus Signal Assignments ¹

Pin	Signal	Signal	Pin
105	STK2	Reserved	106
107	GND	GND	108
109	Reserved	Reserved	110
111	Reserved	Reserved	112
113	GND	GND	114
115	Reserved	Reserved	116
117	Reserved	Reserved	118
119	GND	GND	120
121	Reserved	Reserved	122
123	Reserved	Reserved	124
125	GND	GND	126
127	Reserved	Reserved	128
129	Reserved	Reserved	130
131	GND	GND	132
133	Reserved	NC (SATA_0Rp)	134
135	Reserved	NC (SATA_0Rn)	136
137	GND	GND	138
139	Reserved	Reserved	140
141	Reserved	Reserved	142
143	GND	GND	144
145	Reserved	Reserved	146
147	Reserved	Reserved	148
149	GND	GND	150
151	Reserved	Reserved	152
153	Reserved	Reserved	154
155	GND	GND	156

+12 Volts

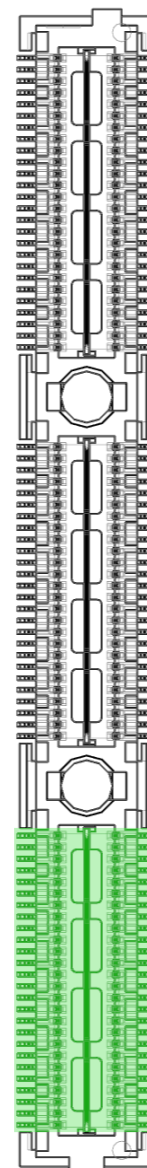

1. Signals marked with (#) are active low.
2. +3.3V is not required for board operation.

PCIe/104 Type 2 Compatibility

The PCIe/104 Type 2 connector is compatible with any PCI/104-Express or PCIe/104 peripheral module that does not use the x16 Link. This includes any card that uses the PCIe x1 or x4 links, USB, or a power supply.

If a card is installed that is not compatible with the Type 2 connector, the CPU will keep the system in soft-off, and the LED D27 will be lit to indicate that there is a Bus Stacking Error.

PCIe Link Configuration

This cpu/gpuModule supports a total of four PCIe x1 links and two PCIe x4 links for system expansion. The PCIe links are routed to CN1.

Reserved (CN16 and CN12)

CN16 is reserved for factory use and should be left unconnected.

CN12 is the fan connector and is for factory use only.

Chapter 4 Using the cpu/gpuModule

This chapter provides information for users who wish to develop their own applications programs for the CNV36JRN201HR cpu/gpuModule.

This chapter includes information on the following topics:

Operating System Specific Usage – page 37

Digital I/O – page 38

Power Management – page 38

Thermal Management – page 39

Operating System Specific Usage

Flashing the OS onto the NVMe Storage

A Linux host computer running at least Ubuntu 20.04 LTS and RTD's included CD is required to flash the OS to the NVIDIA® Jetson Orin™ NX/Nano. The device must be in Force Recovery Mode to flash the OS.

Force Recovery Mode

NVIDIA® Jetson Orin™ NX/Nano must be in Force Recovery Mode to flash the onboard eMMC. To place the NX/Nano in Force Recovery Mode, follow the steps below using the reset button on the Utility Port (CN5).

1. Connect one side of a Type C USB cable to the debug port (CN17) and the other side to the host computer.
2. Power on the board.
3. Place the board into soft off by holding the power button for five seconds.
4. Once in soft off, press and hold the power button for 10 seconds.
5. If the process was successful, the attached host CPU will show a new USB device.



Note: If you are flashing a system that is working Linux OS. The user can issue a reboot into force recovery by using the following command.

sudo reboot --force forced-recovery

Building and Flashing Image

The utility programs to aid in the building and flashing of the NVMe storage can be found on the CD provided by RTD. The Build-RTD-Image script will download and build NVIDIA's kernel while applying RTD's kernel patches. The Flash-RTD-Image script can be used to write the compiled image to the onboard NVMe.

If the process was successful, the NVIDIA® Jetson Orin™ NX/Nano will restart and boot into the OS. Then the host computer should execute the cleaner.sh script also provided by RTD to remove any temporary files used by Build-RTD-Image and Flash-RTD-Image.

Linux for Tegra®

The CNV36JRN201HR is fully supported with Linux for Tegra kernel version 5.15. Earlier versions of the kernel may not contain drivers for all devices and may not work as expected.

At the time of publication, RTD has validated Jetpack 6.2. That the end user to flash the module with either the standard image or the NX/Nano Super image. RTD will be shipping the modules flashed with the standard image version.

See <https://developer.nvidia.com/embedded/jetson-linux-r3643> for NVIDIA® Jetson™ Linux Driver Package.

Digital I/O

This board supports 14 bits of 5V tolerant TTL/CMOS compatible digital I/O (TTL signaling).

When the CPU powers on, all digital I/O lines are programmed as inputs, with 100K pull ups on each line. Meaning that all inputs are known to be logic high at power on or when left floating and set as inputs.

CSI Cameras

This board supports 2 15 pin CSI camera connectors. The CN13 is connected to CSI0 and CN23 is connected to CSI2. This is different than how the Nvidia development is connected so the camera overlays will need to be adjusted to function. RTD provides overlay for the tested cameras as part of the flashing tool. These files are copied in the boot directory, so they will work Nvidia's Jetson-IO python script. They will allow the user to swap the camera overlay without the need to reflash the module.

RTD has tested and verified the functionality of the following cameras:

- Raspberry Pi CSI IMX219
- Raspberry Pi CSI IMX477

Power Management

The CNV36JRN201HR cpu/gpuModule supports powering mechanisms which allow the cpu/gpuModule to change power consumption and temperature and achieve minimal power consumption states. These features include thermal throttling, as well as low power modes. Various wake options are also available to resume normal system power.

Power Management

The cpu/gpuModule supports several different low power modes, including the S3 and S5 sleeping states. These suspend modes are described below:

- **S3 (Suspend to RAM):** When the system wakes from this mode, operating system allow applications to resume where they left off, as the state of the application is preserved in memory.
- **S5 (Soft-Off):** The system is in a soft off state and must be rebooted when it wakes.

Power Button Modes

The soft power button input of the Utility Port 2.0 connector (**CN5**) can be configured by the operating system as a suspend button (transition to S3) or as soft power button (transition to S5). Consult your operating system documentation for information on how to configure it. The power button will always cause a transition to S5 if pressed for 4 seconds or longer, without interaction from the operating system.

The soft power button of the Utility Port 2.0 connector (**CN5**) is the only mechanism to wake the system from S5.

Low-Power Wake Options

The cpu/gpuModule supports several methods of waking from a low power state.

- **Resume from USB:** Operating systems that support S3 permit waking the system from the USB interfaces. Common USB wake methods include insertion of a USB device, a USB keyboard stroke, or movement from another USB device, such as mouse.

AT vs. ATX Power Supplies

Both AT and ATX power supplies may be used with the CNV36JRN201HR cpu/gpuModule, however AT power supplies do not provide any standby power to the cpu/gpuModule.

ATX power supplies do provide a standby power, thus allowing the system to utilize all low power modes supported by the hardware. When an ATX supply is used to power the cpu/gpuModule, lower power modes can be achieved. During these low power modes, the standby power from the ATX power supply provides power to a small circuit on the CPU, which is used to watch for a system wake event.

ATX Power Supply Signals

The PCIe/104 Type 2 Bus connector (CN1) provides two ATX style signals., +5V Standby and PSON#. The +5V Standby rail is used to power certain parts of the cpu/gpuModule when the main power supply is turned off, i.e., during Suspend-to-RAM (S3) or Soft-Off (S5) power modes. The PSON# signal is an active low open-drain output that signals the power supply to turn on.

Thermal Management

The CNV36JRN201HR has an Operating Temperature Range of -40°C to +70°C. Environmental testing was performed using RTD active solution using an environmental chamber. RTD evaluated the functionality of the NX module by running Jetson Benchmarks provided by NVIDIA. All parts, on the CNV36JRN201HR carrier module, are rated for -40°C to +85°C temperature range. It is important to note that the NVIDIA Jetson module has its own temperature ratings separate from the RTD carrier.

For a proper thermal solution, it is the customer's responsibility to maintain the NVIDIA core junctions below the specified temperatures, shown in the Table below.

Table 20 NVIDIA® Jetson™ Orin NX Operating Junction Temperatures

Parameter	Temperature
Orin NX SOC Slowdown Temperature	TJ = 99°C
Orin NX/Nano SOC Shutdown Temperature	TJ = 105°C

Appendix A Hardware Reference

This appendix provides information on CNV36JRN201HR cpu/gpuModule hardware, including:

Jumper Settings and Locations – page 41

Onboard PCI/PCIe Devices – page 42

Physical Dimensions – page 42

Heatsink Dimensions – page 43

Flat-Heat Spreader Dimensions – page 44

Jumper Settings and Locations

Some cpu/gpuModule configuration options are configured by jumpers. Jumpers are labeled on the board as JP followed by a number.

Figure 7 shows the jumper locations that are used to configure the cpu/gpuModule. **Table 21** lists the jumpers and their settings.

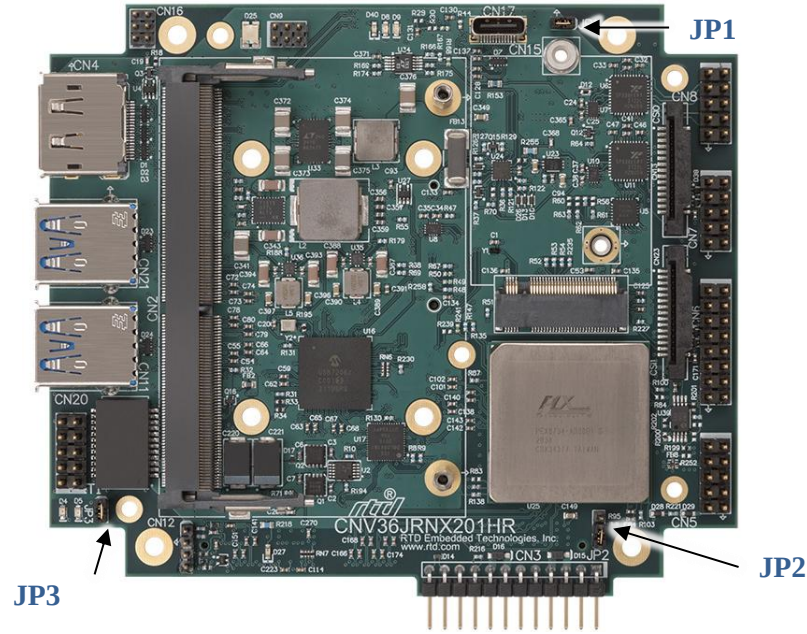


Figure 7 CNV36JRN201HR Jumper Locations (top side)

Table 21 CNV36JXNX Jumpers

Jumper	Pins	Function	Default
JP1	2	W_DISABLE1 signal of the M.2 socket. Used to disable all wireless connection. Short to disable. Open for enable	open
JP2	3	PCI Express switch maximum link speed configuration. Pin 1-2 shorted: Gen 3 (maximum) speed Pins open: Gen 2 speed Pin 2-3 shorted: Gen 1 speed This setting affects all ports and sets the maximum speed that links can use. The actual link speed is always determined by link partners and channel quality (auto negotiated).	1-2 shorted
JP3	2	Stacking error detection is bypassed if this jumper is shorted	open

Onboard PCI/PCIe Devices

The CNV36JRN201HR cpu/gpuModule has several onboard PCIe devices, they are listed in the table below.

Table 22 Onboard PCI/PCIe Devices

Device ID	Vendor ID	Description
8734	10B5	PEX 8-Port PCI Express Switch ¹
1AD0	10DE	NVIDIA Orin NX

1. This device will appear eight times in PCI configuration space.

Physical Dimensions

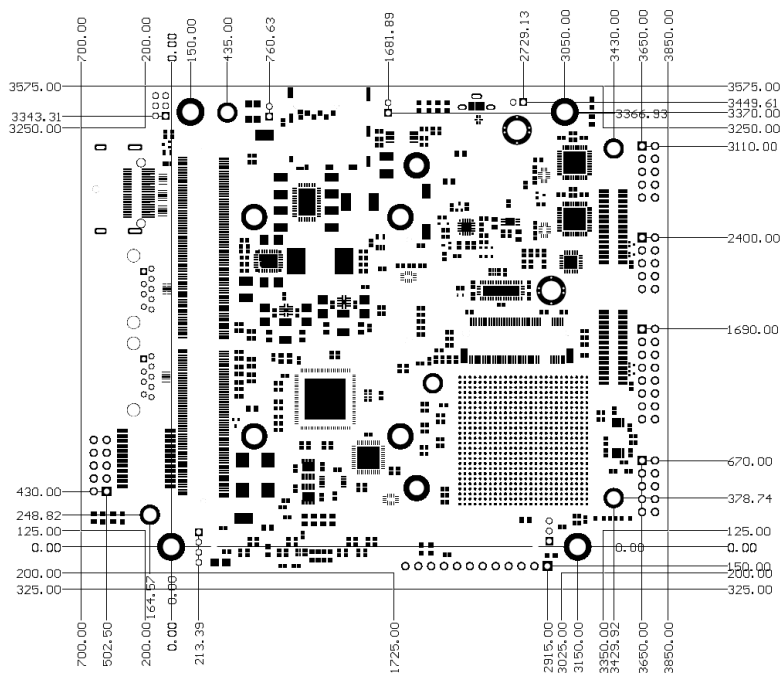


Figure 8 CNV36JRN201HR Physical Dimensions (±0.005 inches)

Heatsink Dimensions

To maximize the thermal performance of the cpu/gpuModule while keeping the total board weight to a minimum, various heatsinks are offered with each ordering part number.

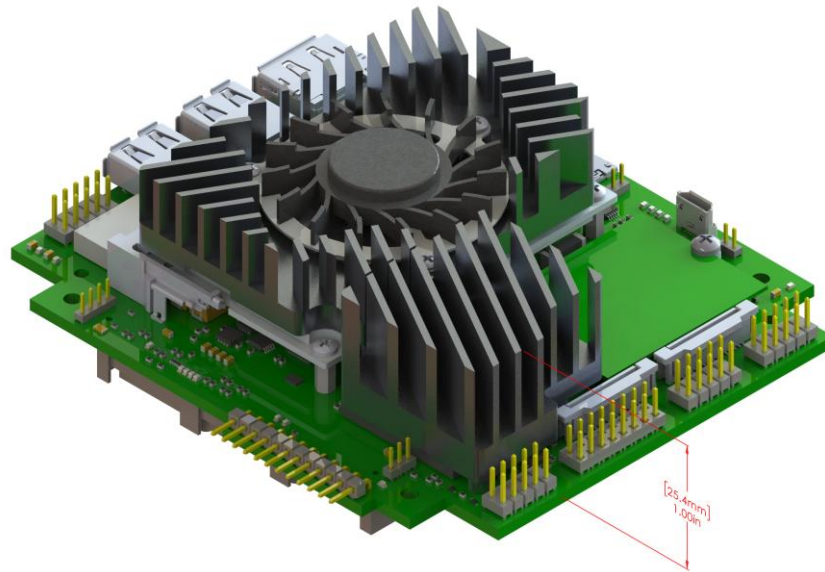


Figure 9 CNV36JXNXD Heatsink with Height from Board

Flat-Heat Spreader Dimensions

For cooling solutions where it is desirable to mount the cpu/gpuModule to a flat surface, the CNV36JRN201HR may be ordered with a flat heat spreader instead of the standard passive heatsink. Each flat heat spreader has ten mounting locations which use 6-32 UNC x 0.138" long threaded insert.

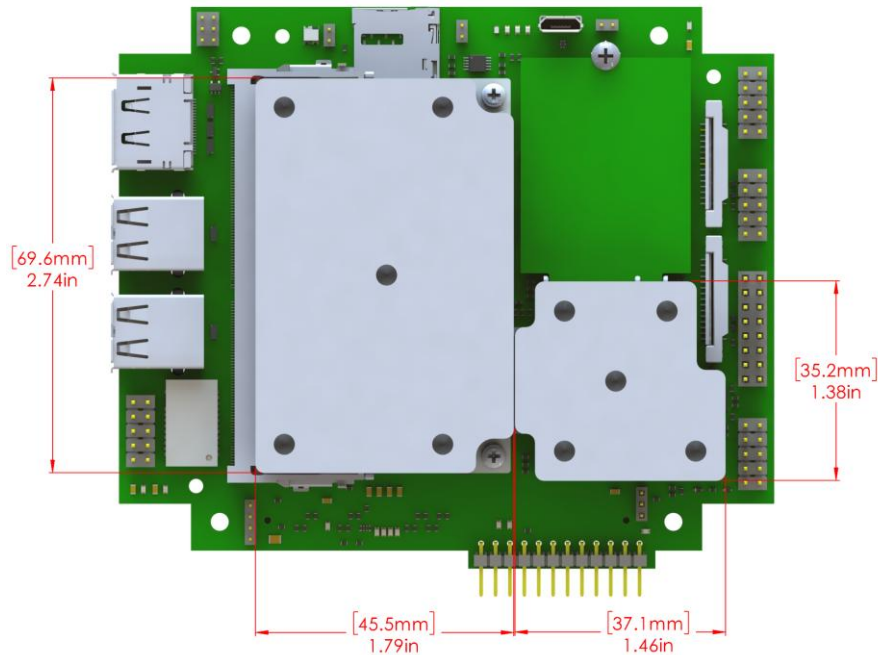


Figure 10 Flat-Heat Spreader Outside Dimensions

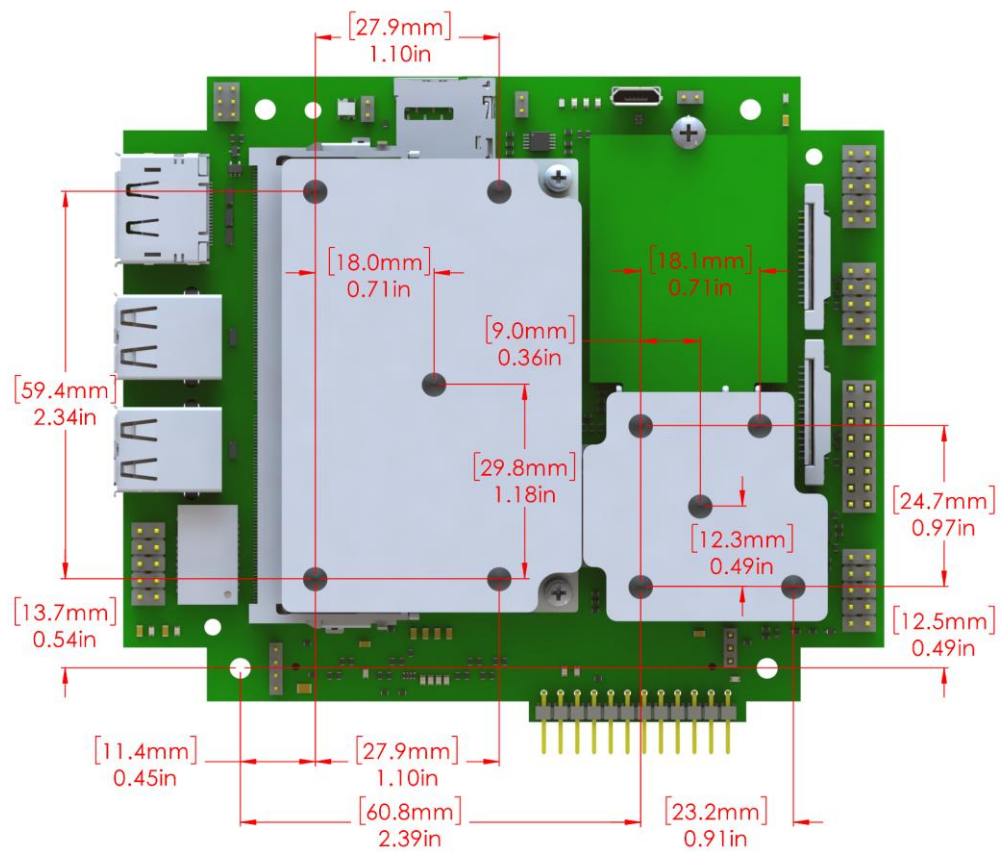


Figure 11 Flat Heat Spreader Hole Placement

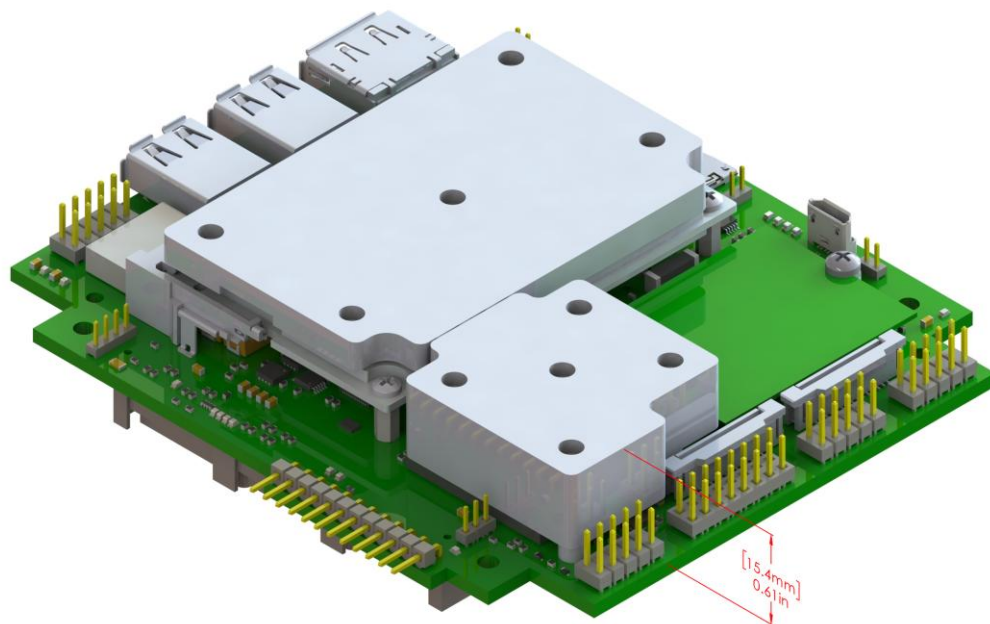


Figure 12 Flat Heat Spreader Height from Board

Appendix B Troubleshooting

Many problems you may encounter with operation of your CNV36JRN201HR cpu/gpuModule are due to common errors. This appendix includes the following sections to help you get your system operating properly.

Common Problems and Solutions – page 47

Troubleshooting a PC/104 System – page 48

How to Obtain Technical Support – page 49

Common Problems and Solutions

Table 23 lists some of the common problems you may encounter while using your CNV36JRN201HR cpu/gpuModule and suggests possible solutions.

If you are having problems with your cpu/gpuModule, review this table before contacting RTD Technical Support.

Table 23 Troubleshooting

Problem	Additional Symptoms	Possible Cause(s)
cpu/gpuModule does not boot (no video output)		Input power is inadequate. Refer to <i>Electrical Characteristics</i> . Verify input voltages are correct. If power is supplied via CN3, check for cabling issues.
		Malfunctioning peripheral card. Remove all peripheral cards from the system.
		cpu/gpuModule is in “Soft Off” due to operating system shutdown. Press power button to wake.
		ATX power supply is not turning on. Check jumpers on power supply. Verify PSON# signal.
cpu/gpuModule reboots unexpectedly		cpu/gpuModule may be booted, but video is not connected properly. Attach a keyboard and verify the operation of the Num Lock and Caps Lock LEDs. If they respond as expected, the cpu/gpuModule is booted. Check the video cable connections.
	cpu/gpuModule is powered via Auxiliary Power Connector (CN3)	Power cabling issues. Verify all pins on CN3 are reliably connected with proper gauge wires.
		Power supply noise or current limiting. Check power pins with an oscilloscope and verify they remain in range.
		Power supply may not respond quickly enough to changes in power consumption. Switch to a different power supply (a PCI Express power supply is recommended)
	Peripheral card(s) installed	Peripheral card(s) may be overloading the power supply. Reduce the system to just the cpu/gpuModule and power supply and see if the problem re-appears. (Note that CN3 is intended for powering the cpu/gpuModule only.)
Date/time not saved when system is off	No RTC battery	A battery must be attached to the Utility Port 2.0 connector (CN5) to maintain date/time when main power is removed.

Troubleshooting a PC/104 System

If you have reviewed the preceding table and still cannot isolate the problem with your CNV36JRN201HR cpu/gpuModule, please try the following troubleshooting steps. Even if the resulting information does not help you find the problem, it will be very helpful if you need to contact technical support.

1. **Simplify the system.** Remove items one at a time and see if one particular item seems to cause the problem.
2. **Swap components.** Try replacing items in the system one-at-a-time with similar items.

How to Obtain Technical Support

If after following the above steps, you still cannot resolve a problem with your CNV36JRN201HR cpu/gpuModule, please gather the following information:

- cpu/gpuModule model, and serial number
- List of all boards in system
- Description of problem
- Circumstances under which problem occurs.

Then contact RTD Technical Support:

Phone: 814-234-8087

Fax: 814-234-5218

E-mail: techsupport@rtd.com

Appendix C IDAN™ Dimensions and Pinout

Like all other PCIe/104 modules, cpu/gpuModules can be packaged in Intelligent Data Acquisition Node (IDAN) frames, which are milled 6061 aluminum frames with integrated heat sinks and heat pipes for fan-less operation. RTD modules installed in IDAN frames are called building blocks. IDAN building blocks maintain the simple but rugged stacking concept of and PCIe/104. Each RTD module is mounted in its own IDAN frame and all I/O connections are brought to the walls of each frame using standard PC connectors.

On the CNV36JRN201HR, no connections are made from module to module internal to the system other than through the PCIe/104 Type 2 bus, enabling quick interchangeability and system expansion without hours of rewiring and board redesign.

This appendix provides the dimensions and pinouts of the CNV36JRN201HR installed in an IDAN frame. Contact RTD for more information on high reliability IDAN systems.



IDAN—Adhering to the PC/PCI-104 and PCIe/104 stacking concept, IDAN allows you to build a customized system with any combination of RTD modules.

IDAN Heat Pipes—Advanced heat pipe technology maximizes heat transfer to heat fins.



HiDANplus—Integrating the modularity of IDAN with the ruggedization of HiDAN, HiDANplus enables connectors on all system frames, with signals running between frames

IDAN Contents

The IDAN-CNV36JRN201HR contains a CNV36JRN201HR cpu/gpuModule.

Also, inside the IDAN-CNV36JRN201HR unit is a CMOS battery which is connected to the battery input connection of the cpu/gpuModule's Utility Port 2.0 connector. The frame of the IDAN-CNV36JRN201HR brings out the cpu/gpuModule's multi-color LED as well as the cpu/gpuModule's reset button.

For additional flexibility, the 25-pin "D" connector which provides connections to the cpu/gpuModule's DIO connector **(CN6)** includes connections to several pins on the Utility Port 2.0 connector, which include the reset button input, power button input, and RTC battery input.

For more information on cpu/gpuModule's battery input and reset button input on the Utility Port 2.0 connector, refer to the Utility Port 2.0 Connector **(CN5)** on page 23.

IDAN Dimensions

The IDAN frame for the CNV36JRN201HR is shown in the figure below:

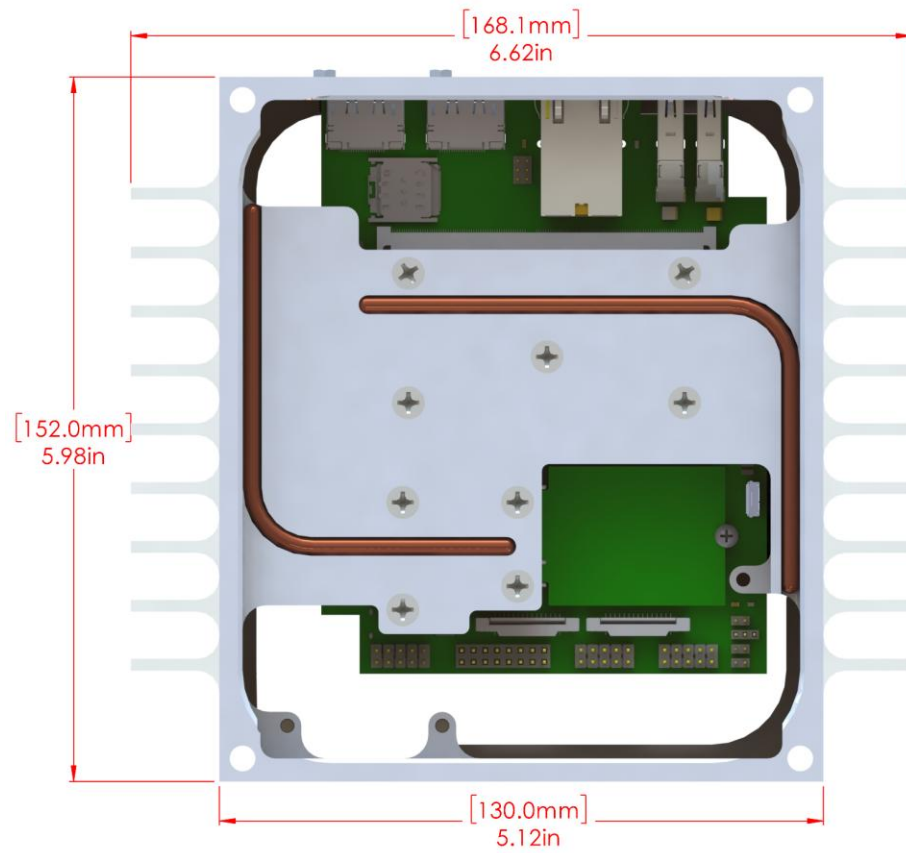


Figure 13 IDAN Frame Outside Dimensions

IDAN Connectors

The figures below show the connector locations for the CNV36JRN201HR as they are brought out on the front and back panels of the IDAN-CNV36JRN201HR. For a full description of each connector on the CNV36JRN201HR, refer to Connecting to the Stack page 18.

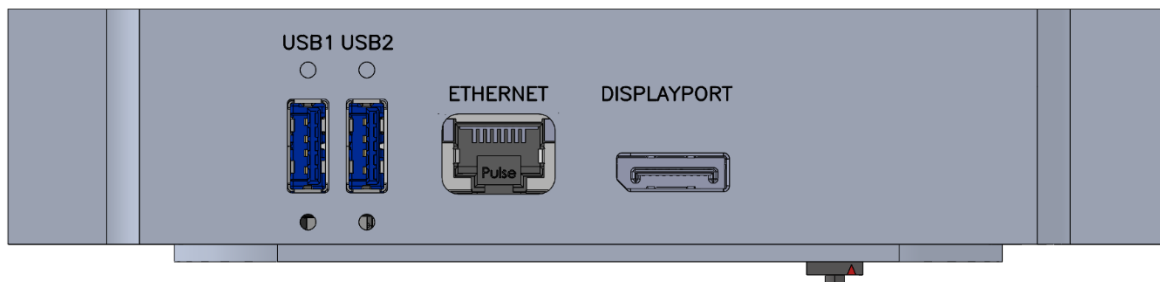


Figure 14 IDAN-CNV36JRN201HR Rear Panel

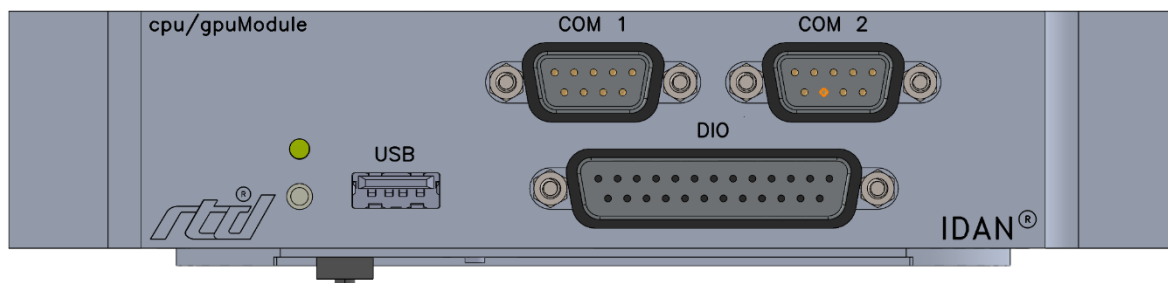


Figure 15 IDAN-CNV36JRN201HR Front Panel

Table 24 IDAN- CNV36JRN201HR Connectors

Board Designator	Function	Connector Description	IDAN® Panel Connector	Mating Connector
CN4	DisplayPort	DisplayPort (female)	—	—
CN5	USB Port (Utility Port 2.0)	USB Type A Receptacle	—	—
CN6	DIO	25-pin D (female)	Adam Tech DB25SD	Adam Tech DB25PD
CN7	Serial Port 1	9-pin D (male)	Adam Tech DE09PD COM1	Adam Tech DE09SD
CN8	Serial Port 2	9-pin D (male)	Adam Tech DE09PD COM2	Adam Tech DE09SD
CN11	USB 3.2	USB Type A Receptacle	—	—
CN21	USB 3.2	USB Type A Receptacle	—	—
CN20	Ethernet	RJ45	—	—

External I/O Connections

Table 25 COM1/COM2 9-Pin D Connector (male)

CPU Pin	IDAN Pin (DB-9)	Single RS-232	Single RS-422	Single RS-485
1	1	—	TXD–	D–
2	6	—	—	—
3	2	RXD	TXD+	D+
4	7	RTS	—	—
5	3	TXD	RXD+	—
6	8	CTS	—	—
7	4	—	RXD–	—
8	9	—	—	—
9	5	GND	GND	GND

Table 26 DIO — 25-Pin D Connector (female)

IDAN Pin #	DIO Port	CPU Pin # (CN6)
1	I/O-00	1
2	I/O-02	3
3	I/O-04	5
4	I/O-06	7
5	I/O-12	9
6	I/O-08	11
7	I/O-10	13
8	GND	15
9	N/C	—
10	N/C	—
11	N/C	—
12	N/C	—
13	N/C	—
14	I/O-01	2
15	I/O-03	4
16	I/O-05	6
17	I/O-07	8
18	I/O-13	10
19	I/O-09	12
20	I/O-11	14
21	+5 V	16
22	N/C	—
23	N/C	—
24	N/C	—
25	N/C	—

Table 27 DisplayPort Connector

Pin	Signal	Standard Function	DVI / HDMI mode ¹	In/Out
1	LN0+	Main Link, Lane 0 (positive)	TMDS Channel 2 (positive)	out
2	GND	Ground	Ground	out
3	LN0-	Main Link, Lane 0 (negative)	TMDS Channel 2 (negative)	out
4	LN1+	Main Link, Lane 1 (positive)	TMDS Channel 1 (positive)	out
5	GND	Ground	Ground	out
6	LN1-	Main Link, Lane 1 (negative)	TMDS Channel 1 (negative)	out
7	LN2+	Main Link, Lane 2 (positive)	TMDS Channel 0 (positive)	out
8	GND	Ground	Ground	out
9	LN2-	Main Link, Lane 2 (negative)	TMDS Channel 0 (negative)	out
10	LN3+	Main Link, Lane 3 (positive)	TMDS Clock (positive)	out
11	GND	Ground	Ground	out
12	LN3-	Main Link, Lane 3 (negative)	TMDS Clock (negative)	out
13	CFG1	Configuration Pin 1	Cable Adapter Detect	out
14	CFG2	Configuration Pin 2	Consumer Electronics Control ²	out
15	AUX+	Auxiliary Channel (positive)	DDC Clock	in/out
16	GND	Ground	Ground	out
17	AUX-	Auxiliary Channel (negative)	DDC Data	in/out
18	HPD	Hot Plug Detect	Hot Plug Detect	in
19	DPG	Return for DPV	Return for DPV	out
20	DPV	+3.3V DC Power	+3.3V DC Power	out

1. Requires special passive adapter

2. HDMI mode only

Table 28 Ethernet RJ45 Connector T568A Color Code

IDAN Pin #	RJ-45 Pin	Signal ¹	CPU Pin #
1	1	A+ (TX+)	1
2	2	A- (TX-)	2
3	3	B+ (RX+)	3
4	4	C+	4
5	5	C-	5
6	6	B- (RX-)	6
7	7	D+	7
8	8	D-	8

Note 1: White stripe indicated in cell fill color.

Appendix D Additional Information

NVIDIA Driver Information

<https://developer.nvidia.com/embedded/jetson-linux-r3643>

PC/104 Specifications

A copy of the latest PC/104 specifications can be found on the webpage for the PC/104 Embedded Consortium:

<http://www.pc104.org>

Appendix E Limited Warranty

RTD Embedded Technologies, Inc. warrants the hardware and software products it manufactures and produces to be free from defects in materials and workmanship for one year following the date of shipment from RTD Embedded Technologies, Inc. This warranty is limited to the original purchaser of product and is not transferable.

During the one-year warranty period, RTD Embedded Technologies will repair or replace, at its option, any defective products, or parts at no additional charge, provided that the product is returned, shipping prepaid, to RTD Embedded Technologies. All replaced parts and products become the property of RTD Embedded Technologies. Before returning any product for repair, customers are required to contact the factory for a Return Material Authorization number.

This limited warranty does not extend to any products which have been damaged as a result of accident, misuse, abuse (such as: use of incorrect input voltages, improper or insufficient ventilation, failure to follow the operating instructions that are provided by RTD Embedded Technologies, “acts of god” or other contingencies beyond the control of RTD Embedded Technologies), or as a result of service or modification by anyone other than RTD Embedded Technologies. Except as expressly set forth above, no other warranties are expressed or implied, including, but not limited to, any implied warranties of merchantability and fitness for a particular purpose, and RTD Embedded Technologies expressly disclaims all warranties not stated herein. All implied warranties, including implied warranties for merchantability and fitness for a particular purpose, are limited to the duration of this warranty. In the event the product is not free from defects as warranted above, the purchaser's sole remedy shall be repair or replacement as provided above. Under no circumstances will RTD Embedded Technologies be liable to the purchaser or any user for any damages, including any incidental or consequential damages, expenses, lost profits, lost savings, or other damages arising out of the use or inability to use the product.

Some states do not allow the exclusion or limitation of incidental or consequential damages for consumer products, and some states do not allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RTD Embedded Technologies, Inc. 103 Innovation Blvd.

State College PA 16803-0906 USA

Website: www.rtd.com

