



# AIRPORT INFORMATION

## TORP AIRPORT - TRF - ENTO

### HRS of operation (LT)

Airport:	06:15-23:00
Customs:	06:15-23:00
Immigration:	06:15-23:00
Fuel services:	06:15-23:00
Met office:	H24
FBO Terminal:	H24
FBO Office:	H24

### FBO contact - Access Oslo AS

Telephone:	+47 91 222 999
E-mail:	ops@accessoslo.no
Freq:	N/A
Address:	VIP-Terminal Hangarveien 11 3241 Sandefjord Norway

### FBO-terminal facilities

Security screening:	N/A
Customs:	Yes
Immigration:	Yes
Check-in service:	Yes
Baggage drop:	No
Lounges:	Yes
Rest rooms:	Yes
Wheelchair:	No
Car parking:	Yes

### FBO facilities

Hangar	New VIP-lounges
Meeting rooms	Weather/NOTAM
Internet access	Briefing rooms

### FBO equipment

Lavatory truck	GPU 28 V
Water truck	


### FBO services

VIP transport	Crew transport	Meeting
Board to board service	Slot coordination	A/C Parking
VIP-catering	Accommodation	Fuelling
Aircraft charter	Flight planning	Cabin cleaning

### Airport facilities

Airport elevation:	131 ft
Fire and rescue:	CAT 7
Fuel type:	Jet A1 / 100 LL
De-ice:	Freq: 119,125 Mhz
Met office:	Tel: +47 64 81 90 00
Runway surfaces:	ASPH
RWY 18/36	2809 x 45 m
Airspace class:	D
Transponder:	SSR compulsory IFR/VFR

### Airport FBO map

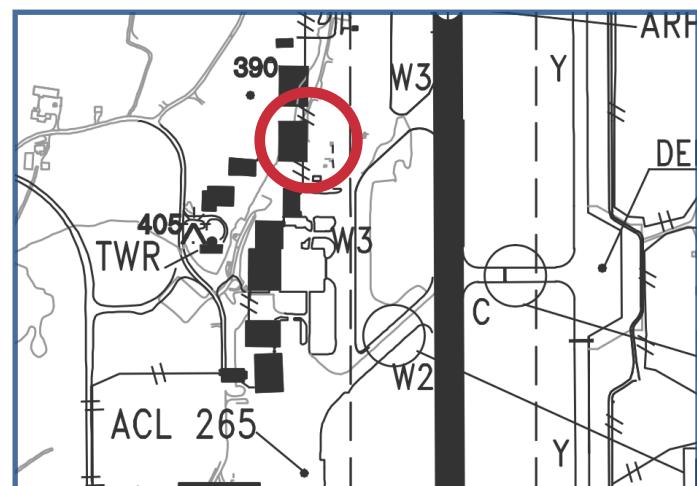



# VIP - TERMINAL TORP AIRPORT - TRF - ENTO

Reception area



Apron



Meeting



VIP-lounge



access  
**OSLO**  
NEWS

Access Oslo opens the new FBO at Torp Airport May 2016  
Brand new VIP and crew lounges at Oslo airport  
New website to be launched October 2016

## How to get there

Hangarveien 11  
3241 Sandefjord

Driving time to  
Oslo centre: 1:15 min

