Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Anreak GW1812-N20-D0310D

Anreak GW1812 N20 DC Worm Gear Motor Instruction Manual

Model: GW1812-N20-D0310D-12-16-2Pcs | Brand: Anreak

Introduction

This manual provides detailed instructions for the Anreak GW1812 N20 DC Worm Gear Motor. It covers product features, technical specifications, setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your motor. The Anreak N20 worm gear motor is engineered with precision craftsmanship, utilizing M0.15 micro-clock gear technology and high-quality steel, ensuring stability and reliability for various applications.



Figure 1: Anreak GW1812 N20 DC Worm Gear Motor, side view.

Setup

Before operating the motor, ensure proper connection and mounting. This motor is designed for DC 3-12V operation.

1. **Power Connection:** Connect the motor to a DC power supply within the specified voltage range (3V to 12V). Observe polarity for desired rotation direction. Reversing the positive and negative poles will reverse the motor's rotation.
2. **Mounting:** Secure the motor using appropriate fasteners through the mounting holes on the gearbox. Ensure the mounting is stable to prevent vibration during operation.
3. **Shaft Connection:** Attach your desired component to the double shaft. The shaft dimensions are Φ3x10mm with a D cut of 2.5x9.2mm.
4. **Encoder Connection (if applicable):** If your motor variant includes an encoder, connect the encoder wire to your control system as per your project requirements.

电机参数表
Motor Parameter Table

型号 Model	GW1812-N20	额定电压 Rated Voltage	DC12V
品名 Product Name	直流有刷减速电机 DC Brush Gear Motor	测试电压 Test Voltage	DC12V

减速比 Reduction Ratio	空载 No-Load		额定负载 Rated Load				堵转 Stall	
	转速 Speed (RPM)	电流 Current (mA)	转速 Speed (RPM)	转矩 Torque (gf.cm)	电流 Current (mA)	功率 Power (W)	转矩 Torque (gf.cm)	电流 Current (mA)
42	381	22	298	21	80	0.065	100	230
79	200	22	158	40	80	0.065	190	230
118	136	22	106	59	80	0.065	280	230
236	68	22	53	118	80	0.065	570	230
302	53	22	41	128	80	0.065	620	230
603	27	22	21	256	80	0.065	1230	230
1030	16	22	12	438	80	0.065	2100	230

Anreak for Amazon

Figure 2: Technical drawing with dimensions for the GW1812-N20-D0310D motor.



Figure 3: Various shaft configurations available for N20 motors.

Operating Instructions

The Anreak GW1812 N20 motor is designed for high torque reduction drive applications. Follow these guidelines for optimal operation:

- **Voltage Range:** Operate the motor within the 3V to 12V DC range. Applying a lower voltage will reduce speed, current, and torque proportionally. Applying a voltage higher than 12V may cause motor burnout.
- **Direction Control:** To change the direction of rotation, simply switch the polarity of the power supply connections to the motor.
- **Avoid Overloading:** Keep the motor within its rated load range. Overloading can lead to excessive current draw, overheating, and potential damage or burning of the motor. The motor features high torque magnets for smooth torque delivery and minimal magnetic decay.

Your browser does not support the video tag.

Video 1: Demonstration of the Anreak GW1812 N20 DC Brushed Motor in operation, showcasing its double shaft and internal gear

mechanism, and connection to a DC power supply.

Maintenance

To ensure the longevity and consistent performance of your Anreak GW1812 N20 DC Worm Gear Motor, follow these simple maintenance guidelines:

- **Keep Clean:** Regularly inspect the motor for dust, dirt, or debris accumulation, especially around the shafts and gearbox. Use a soft, dry cloth or compressed air to clean.
- **Avoid Obstructions:** Ensure that the motor shaft and gears are free from any obstructions that could impede movement or cause undue stress.
- **Proper Storage:** When not in use, store the motor in a dry, cool environment, away from direct sunlight and corrosive substances.
- **Lubrication:** The internal gears are pre-lubricated. Avoid applying additional lubricants unless specifically recommended by the manufacturer, as this could attract dust and impair performance.

Troubleshooting

If you encounter issues with your Anreak GW1812 N20 DC Worm Gear Motor, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Motor does not spin	No power, incorrect wiring, motor jammed, or faulty power supply.	Check power connections and voltage. Ensure wires are correctly connected. Remove any obstructions from the shaft or gears. Test power supply with another device.
Motor spins in wrong direction	Incorrect power polarity.	Reverse the positive and negative power connections to the motor.
Motor runs slowly or with reduced torque	Under-voltage, excessive load, or internal friction.	Verify power supply voltage is within 3-12V. Reduce the load on the motor. Check for any binding in the gears or shaft.
Motor overheats	Overloading, continuous operation at maximum load, or insufficient ventilation.	Reduce the load on the motor. Allow for cooling periods during extended use. Ensure adequate airflow around the motor.

Specifications

Key technical specifications for the Anreak GW1812 N20 DC Worm Gear Motor (12V 16 RPM variant):

Specification	Value
Brand	Anreak
Model Number	GW1812-N20-D0310D-12-16-2Pcs
Speed (Rated)	16 RPM (at 12V)
Voltage	12 Volts (DC)
Horsepower	1 Watts

Specification	Value
Material	Metal
Item Weight	14 Grams (approx. 0.494 ounces)
Product Dimensions	1.38 x 0.47 x 1.18 inches
Shaft Type	Double Shaft (Φ3x10mm, D cut 2.5x9.2mm)

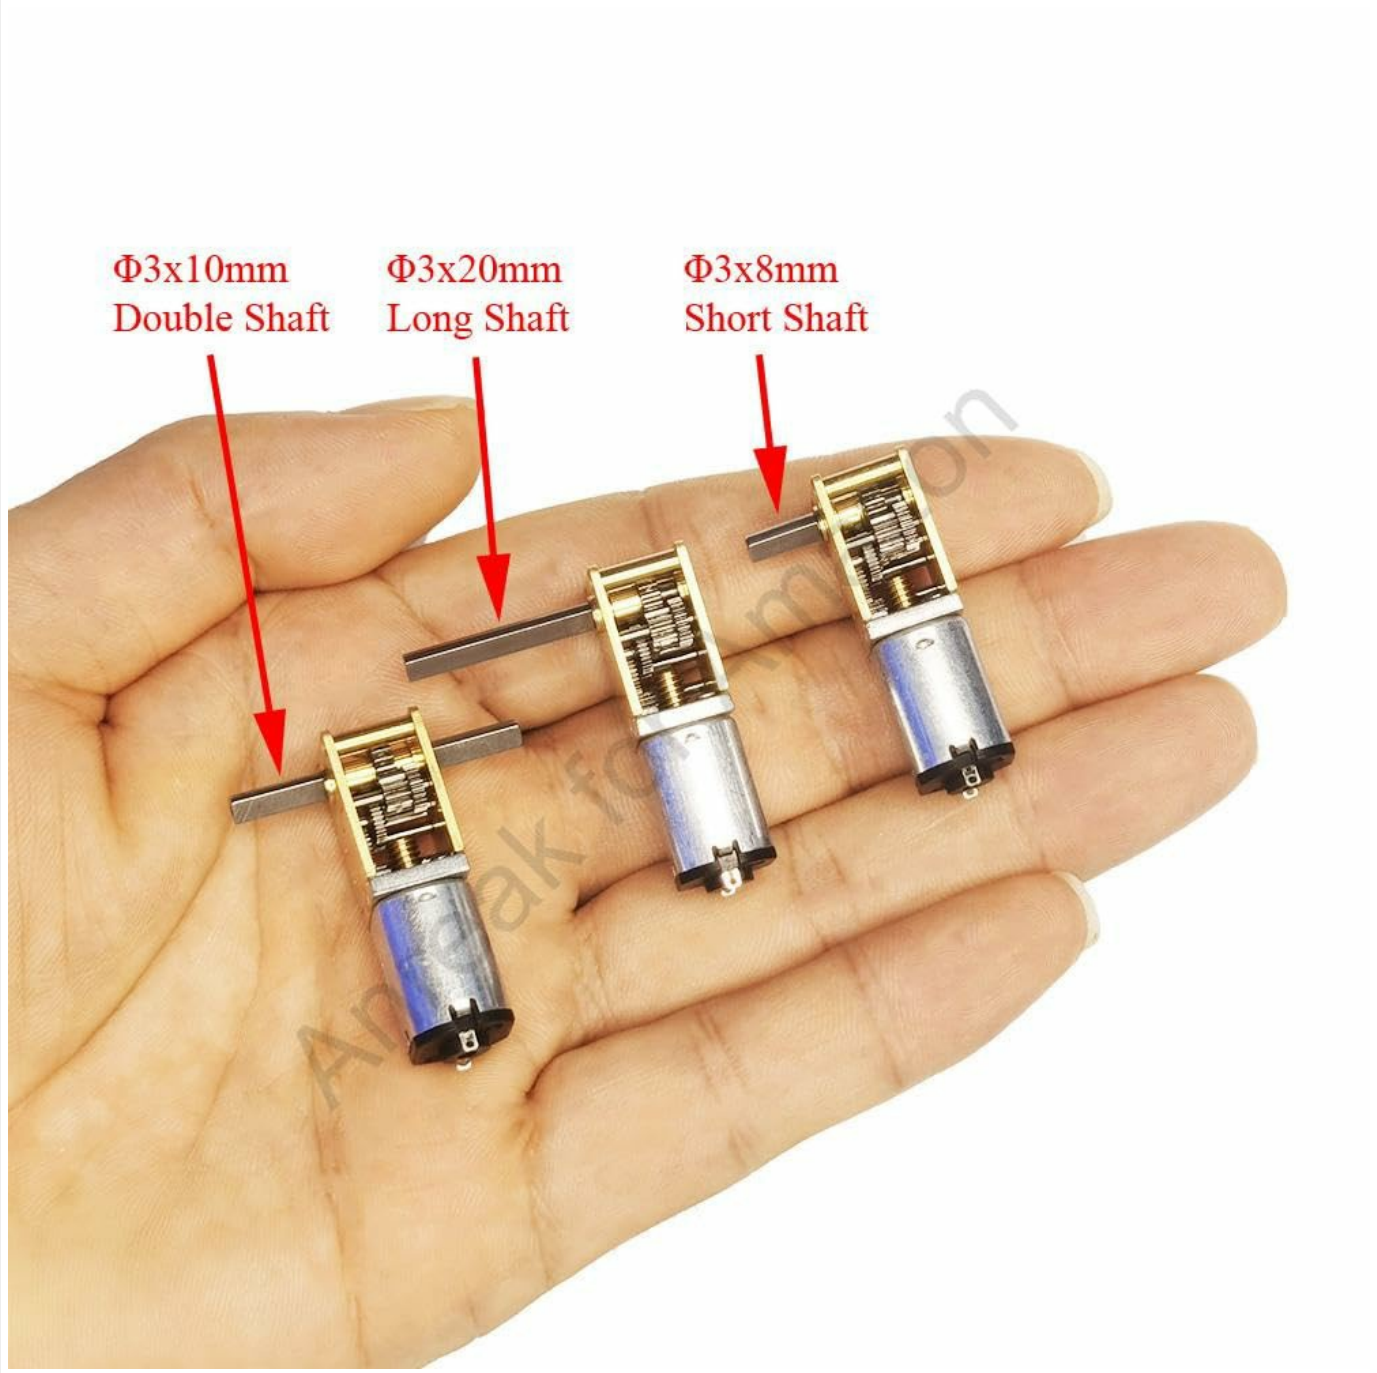


Figure 4: Detailed Motor Parameter Table for GW1812-N20 series.

Warranty Information

Anreak products are backed by experienced and reliable manufacturing processes, ensuring quality. If there are any quality issues with your motor, please contact customer service for assistance.

Support

For technical support, inquiries, or customized requirements, please contact Anreak customer service. Refer to your purchase documentation or the seller's contact information for the most direct support channels.

© 2024 Anreak. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D9NC6C78

More documents and user manuals: **https://manuals.plus/**