55.Bulkhead Wiring Harness (In Compartment)

A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Position	No.	Name
B27	1	Black	D-5		Parking brake switch
B28	4	★	C-1		Rear 12 V accessory relay
B30	25	★	C-1	D1	Front door cord LH
B31	8	Yellow	D-1	AB1	SRS (airbag) harness
B32	3	Black	B-2		Turn signal and hazard unit
B36	28	Blue	B-3	i1	Instrument panel wiring harness (auto A/C model)
B37	25	★	B-3	i2	
B38	24	★	B-3	i3	Instrument panel wiring harness (manual A/C model)
B39	24	Brown	B-3	i4	
B40	16	Black	C-3		Data link connector
B41	2	★	C-1		Power window circuit breaker
B46	4	Green	B-5		Fuel pump relay
B47	6	Brown	B-5		Main relay
B50	4	★	C-1		Blower fan relay
B51	8	Blue	C-1		Fuse & relay box (F/B)
B52	7	★	C-1		
B54	35	★	B-2		TCM (AT model)
B55	35	Gray	B-2		TCM (AT model)
B61	8	★	B-2	F44	Front wiring harness
B62	24	★	B-2	F45	
B65	4	Black	B-2		Stop light and brake light switch
B68	5	Black	C-3		Cruise control sub-switch & horn switch (roll connector)
B69	4	★	C-3		Parking switch
B70	18	★	C-3		Combination switch
B71	17	★	C-3		
B72	4	Blue	B-3		Ignition switch
B75	2	Green	C-2	B76	Test mode connector
B76	2	Green	C-2	B75	
B77	3	★	B-4		Mode actuator (auto A/C model)
B83	8	★	C-5		Shield and sensor ground joint connector
B86	4	Brown	B-4		Blower motor resistor (manual A/C model)
B87	2	★	B-4		Blower motor
B88	4	Brown	B-3		Evaporator thermo switch (manual A/C model)
B90	6	★	B-5	R50	Roof cord

Connector				Connecting to	
No.	Pole	Color	Position	No.	Name
B91	6	Black	B-4		FRESH/RECIRC actuator (auto A/C model)
B95	2	Black	B-4		Diode (daytime running light) (Except for STI model)
	3	★	B-4		Diode (daytime running light) (STI model)
B101	25	★	B-5	D11	Front door cord RH
B102	5	Black	B-5		Daytime running light relay
B103	4	★	B-5		High beam relay (daytime running light)
B106	2	★	B-2		Clutch switch (MT model)
B107	2	Blue	B-2		Cruise clutch switch (MT model)
B108	2	Black	B-1	F46	Front wiring harness
B112	4	Brown	B-3		Diode (front fog light)
B117	6	★	C-4		AT select lever
B118	2	★	B-4		CD player illumination light
B119	4	★	C-4		Front accessory power supply socket
B120	14	★	B-4		Radio
B121	1	Black	B-4		Audio bracket earth
B122	8	★	C-5		Joint connector
B125	1	Green	B-5	B126	Line end connector
B126	1	Green	B-5	B125	
B132	8	Gray	C-1		Headlight beam leveler switch
B134	34	★	B-4		ECM
B135	35	★	B-4		ECM
B136	35	★	B-4		ECM
B137	31	★	C-4		ECM
B141	26	Gray	B-2		Immobilizer control module (turbo and STI model)
B142	2	★	B-3		Antenna (immobilizer) (turbo and STI model)
B152	12	★	C-1		Fuse & relay box (F/B)
B158	10	Gray	C-1		
B160	6	Gray	C-1		Front fog light switch
B168	10	★	C-4		Mode control panel
B169	6	★	C-4		Blower fan switch (manual A/C model)
B176	26	Gray	C-1		Keyless entry control module
B177	2	★	B-1		Wiper deicer

Connector				Connecting to	
No.	Pole	Color	Position	No.	Name
B191	4	★	B-5		Wiper deicer relay
B192	4	★	B-5		Wiper deicer timer
B193	6	★	C-1		Wiper deicer switch
B198	5	★	C-5		Ground joint connector
B200	20	Blue	B-2	F74	Front wiring harness (turbo and STI model)
B208	2	Black	B-5		Glove box light
B225	8	Black	C-2		Fuse (Relay block)
	5	Black	C-2		Ignition relay (relay block)
	5	Black	C-2		Power window relay (relay block)
	5	Black	C-2		Front fog light relay (relay block)
	5	Black	C-2		Starter interlock relay (relay block)
	5	Black	C-2		Mirror heater relay (relay block)
	5	Black	C-2		Blower fan relay (relay block)
B230	6	★	D-5		Yaw rate sensor
B243	6	★	B-3		Security horn relay
B256	2	★	B-4		Evaporator sensor (auto A/C model)
B258	3	★	D-4		Driver's control center differential switch (STI model)
B271	12	Blue	C-1		Fuse & relay box (F/B)
B275	4	★	B-4		Fan control amplifier (auto A/C model)
B280	16	Blue	C-3		Body integrated unit
B281	20	Gray	C-3		
B282	16	Gray	C-4		Auto A/C control module
B283	20	Gray	C-4		
B286	4	★	B-5		Intercooler water spray timer (STI model)
B288	4	Blue	C-1		Driver's control center differential relay (STI model)
B292	3	★	D-5		ABS G sensor
B293	3	★	B-4		Air mix actuator (auto A/C model)
B294	6	★	C-1		Intercooler water spray switch (STI model)
B304	2	★	B-5		ABS condenser
B309	4	Black	B-5		Electronic throttle control relay
B315	6	Black	B-3		Accelerator pedal position sensor
B335	2	Black	D-1	B336	Joint connector (key lock) (turbo model)
B336	2	Black	D-1	B335	

Connector				Connecting to	
No.	Pole	Color	Position	No.	Name
B339	6	Blue	C-4		Auto/Manual switch
B370	6	★	B-3		Ignition starter and steering lock assembly
B371	5	★	C-2		Relay holder
B380	24	Gray	B-3		Driver's control center differential control module (STI model)
B381	24	★	B-3		Driver's control center differential control module (STI model)
B382	6	★	B-3		Ground joint connector
B383	4	Blue	C-1		Seat heater switch LH (STI model)
B420	2	Black	C-2		HID diode
B422	5	Gray	C-4		Starter cut relay
B423	8	★	B-4		Impact sensor
B425	5	Gray	B-5		A/F Oxygen sensor relay
B426	4	★	C-3		Steering angle sensor
B427	2	Yellow	D-5	AB60	SRS (airbag) harness
★: White or natural color					

Connector				Connecting to	
No.	Pole	Color	Position	No.	Name
AB1	8	Yellow	D-1	B31	Bulkhead wiring harness
AB3	28	Yellow	C-4		Airbag control module
AB4	4	Yellow	B-5		Inflator (passenger's seat)
AB13	2	Yellow	B-1	AB14	Airbag wiring harness
AB21	4	Yellow	C-3	AB26	Inflator (driver's seat)

Bulkhead Wiring Harness (In Compartment)

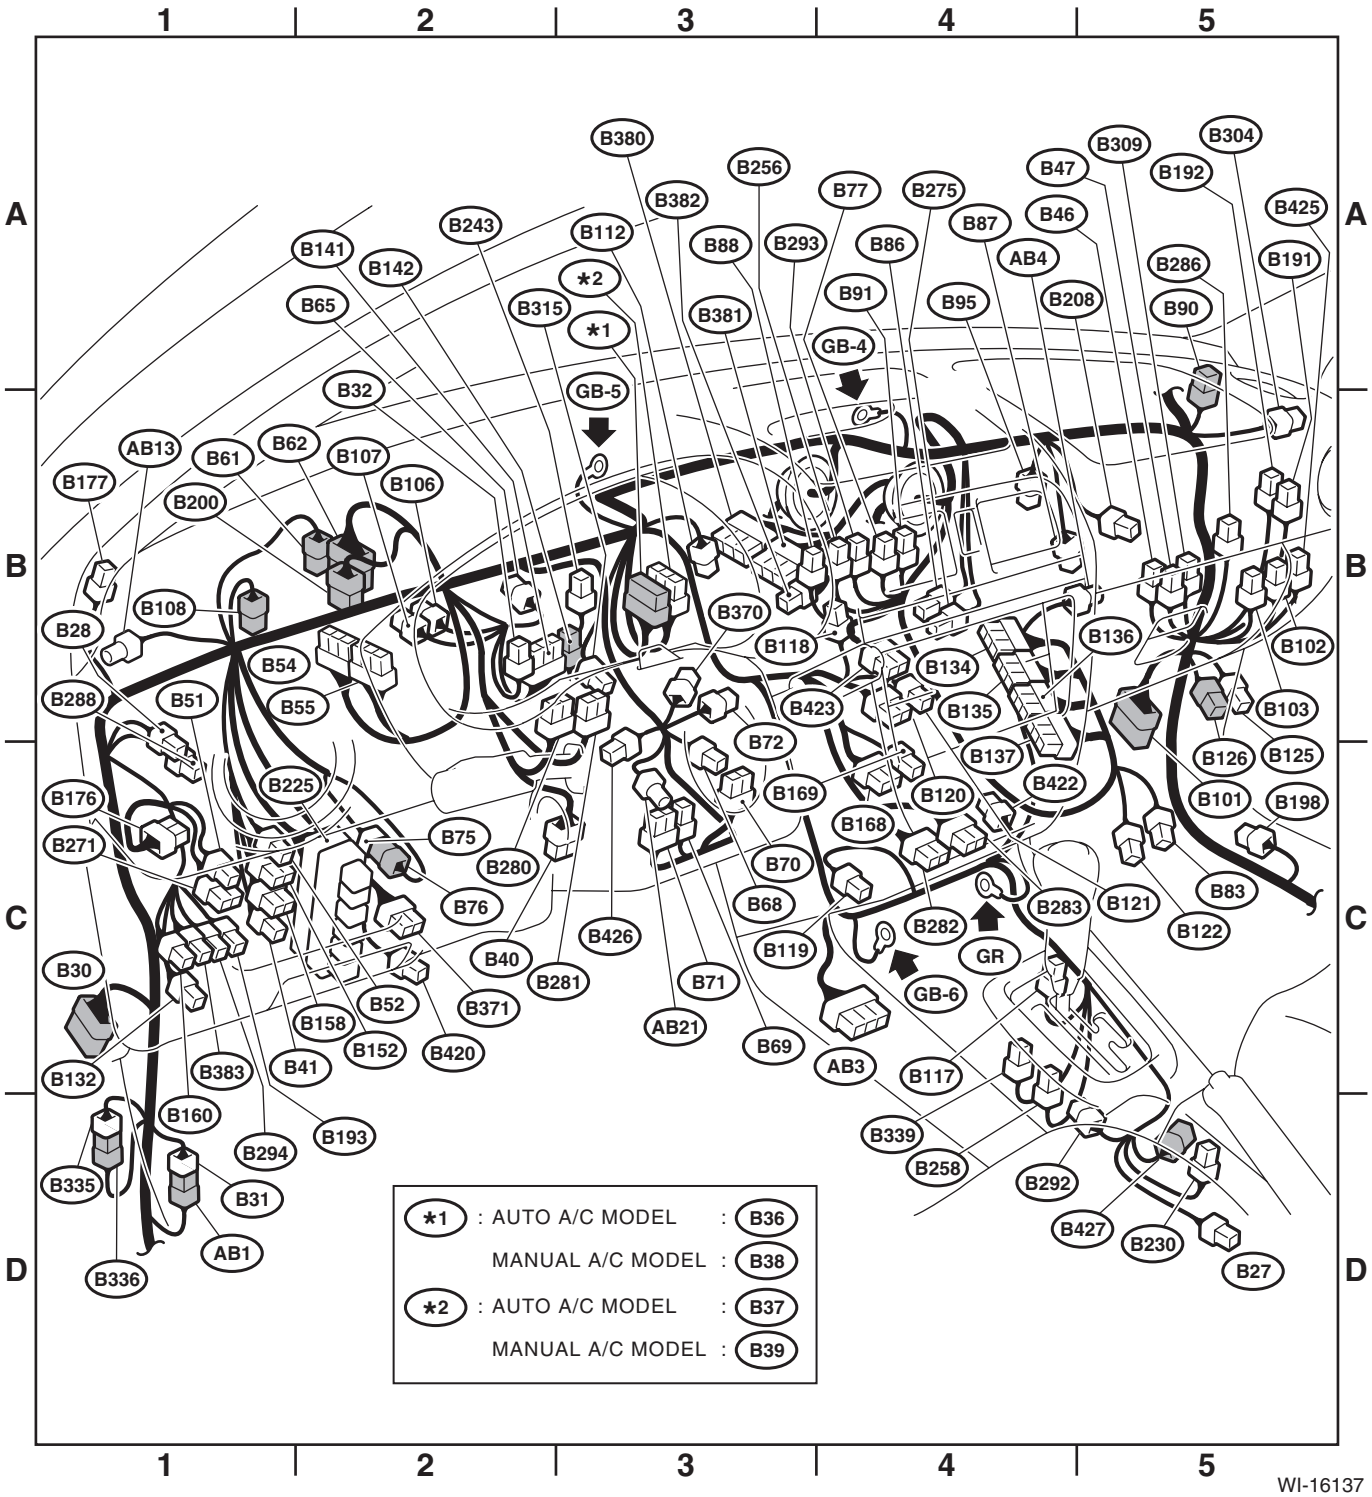

WI-16137