

Package Contents

The package should include the following items. If anything is missing or damaged, please contact the place of purchase immediately.

- 1 x ScreenBar Pro light (with USB-C power cord)
- 1 x AC power adapter
- 1 x Quick Start Guide
- 1 x Warranty card
- 1 x Webcam Accessory



The illustrations in this guide are for your reference only and may look different from the appearance of the actual product.

Safety Warnings

- Only use the provided AC power adapter and connect it to 100-240V AC, 50/60Hz power. Otherwise the light will not work properly and may even cause a fire. If you prefer to connect the light to a USB-C port directly without using the provided AC power adapter, ensure that the USB-C port provides enough power (5V DC, 2A) for optimized performance.
- Do not place or hang any objects on the light to avoid malfunction.
- Route the USB power cord to avoid it being pinched by items placed upon or against it.
- If the light will not be used for an extended time period, unplug the AC power adapter from the power outlet.




CAUTION

- If you encounter the following situations, unplug the power adapter or remove the USB power cord from the USB-C port immediately, and seek support from an authorized service agent or qualified technician:
 - When the casing of this product is damaged
 - When this product emits an abnormal smell
 - When the LED light source flickers abnormally
 - When the power cord is damaged or the wire inside is exposed
- Do not expose this product to humid environments (such as bathrooms/outdoors) to avoid short circuiting and accidents.
- This product is only suitable for indoor use, do not use it outdoors.
- It is strictly prohibited to disassemble any part or component of this product. Otherwise it may cause an accident and invalidate the product warranty.


Installation

1. Extend the clamp of the light as shown in [Figure **A**].
2. Rest the light on the monitor bezel [Figure **B 1**]. It is recommended that you fit the clamp closely against the monitor bezel so there is no visible gap in between.

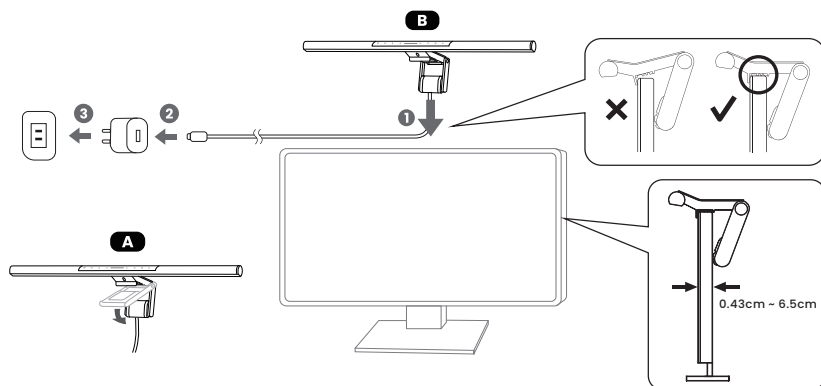


- The applicable range of the monitor bezel thickness is 0.43cm - 6.5cm.
- Refer to the illustrations below for how to install the light on different types of monitors:


Monitor with beveled bezel

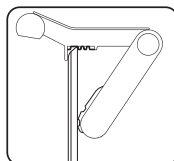


Monitor with round bezel

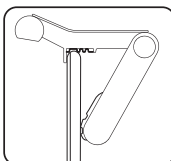

Curved monitor

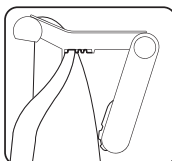


Monitor with bulge on the back

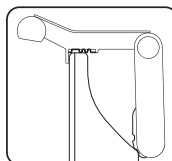


3. Connect the USB-C power cord to the AC power adapter [Figure **B 2**], and then plug the AC power adapter into an AC power outlet [Figure **B 3**]. The light will turn ON automatically.

- If your adapter includes multiple plugs, please refer to the installation instructions below.

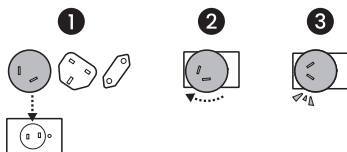

Installing the Webcam Accessory

1. Place the webcam on top of the webcam accessory.
2. Remove the release paper from the adhesive tape on the underside of the webcam accessory.
3. Clean the top surface of the clip and attach the accessory to the flat area in the middle of the clip.

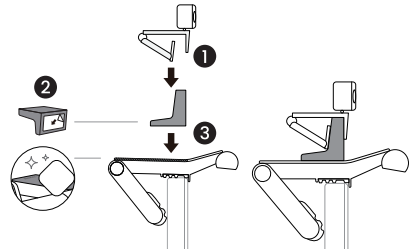


- **To remove the webcam accessory, hold the upper part of the accessory and pull it towards the light tube.**
- **To replace the adhesive tape, remove the current tape and use the spare adhesive tape provided in the box.**

Using the Light

Controls on the Light Head


You can use the touch keys and knob on the light head to perform various operations. Refer to the figure below for the names and position of these controls:

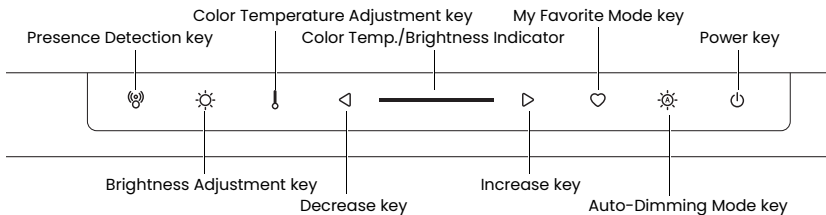

- **When the light is off and the ambient brightness is extremely low, all the indicator lights will go out so as not to disturb the user's sleep at night.**


Turning On/Off the Light and Entering Auto-Dimming Mode

Turning On/Off the Light

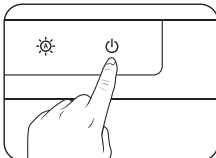


To turn on the light, tap the Power  key. To turn off the light, tap the Power  key again.

Entering Auto-Dimming Mode

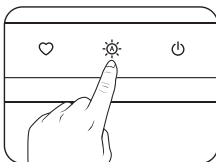


To enter Auto-Dimming Mode, tap the Auto-Dimming Mode  key when the light is on. The Auto-Dimming Mode  indicator will light up. The Auto-Dimming Mode automatically adjusts the light's brightness according to the ambient lighting condition and sets the color temperature setting to 4000K.

- **Do not block the light sensor on the light. Otherwise the Auto-Dimming Mode will not function properly.**
- **If the Auto-Dimming Mode is turned on, the light will monitor the ambient lighting condition and dynamically adjust the brightness.**
- **The Auto-Dimming Mode will exit automatically and the Auto-Dimming Mode indicator will go off when you manually adjust brightness or color temperature.**

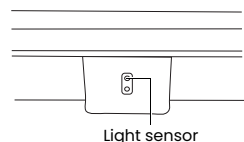

Manually Adjusting Brightness and Color Temperature


Adjusting Brightness

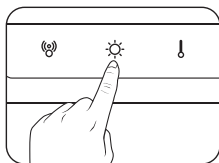

1. Tap the Brightness Adjustment  key when the light is on. The Brightness Adjustment  indicator will light up.

2. Tap the  key to decrease brightness, or tap the  key to increase it. You can select from 16 brightness levels.

- If the power supply capacity is up to 5V 1.5A, only 14 brightness levels are available for adjustment.
- If the power supply capacity is up to 5V 0.9A, only 8 brightness levels are available for adjustment.
- If the power supply capacity is less than 5V 0.9A, the light will not operate properly. Use the provided AC power adapter or connect it to another power supply that meets 5V 2A to optimize the performance of the light.

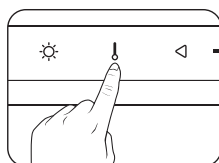


Adjusting Color Temperature

1. Tap the Color Temperature Adjustment  key when the light is on. The Color Temperature Adjustment  indicator will light up.


2. Tap the  key to select a higher color temperature setting, or tap the  key to select a lower one. You can select from 8 color temperature settings: 6500K (daylight), 5700K (cool white), 5000K, 4500K (neutral white), 4000K, 3500K (warm white), 3000K and 2700K (soft white).

- If the power supply is suddenly interrupted, the light will automatically return to its settings before the power outage when the power is restored.
 - If the light was on before the power outage, it will automatically turn on when power is restored, and restore the brightness and color temperature settings before the power outage.
 - If the light was off before the power outage, it will remain off when power is restored.

Turning On/Off the Presence Detection Function

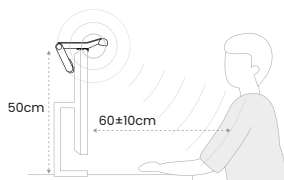

The Presence Detection function allows the light to turn on automatically when the user enters the detection area (as shown in the figure).

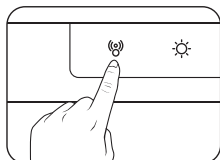


- To turn on the Presence Detection function, tap the Presence Detection  key. The Presence Detection  indicator will light up.
- To turn the function off, tap the Presence Detection  key again. The indicator will go out.


- With its ultrasonic sensor 50 cm above the desktop, it detects at 60 ± 10 cm in front of the screen and has a conical detection shape.
- When the Presence Detection function is on, if the user leaves the detection area for more than 5 minutes, the light will automatically turn off to save power.
- With the Presence Detection function on, if you manually turn off the light, the Presence Detection function will be disabled temporarily and the Presence Detection  indicator will flash for about 30 seconds. When the indicator stops flashing, the

Presence Detection function will resume and the light will turn on if you are still in the detection area.

- **Do not block the ultrasonic sensor on the light. Otherwise the Presence Detection function will not work properly.**
- **Do not insert any object into the ultrasonic sensor to avoid malfunction of it.**
- **The presence detection function operates based on motion tracking. If users maintain a fixed posture in front of the screen for more than 5 minutes, such as when watching videos, it may cause the sensor to detect no movement and subsequently turn off the light.**
- **The ScreenBar Pro light uses an ultrasonic sensor to detect presence and absence by emitting high-frequency sound waves and analyzing reflected signals to determine object distance and movement, enabling automatic light control. However, environmental factors such as temperature changes from heating or cooling devices or frequency vibrations from humidifiers may affect detection accuracy, potentially causing unexpected light activation.**

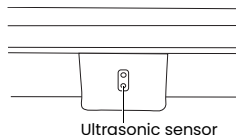

My Favorite Mode

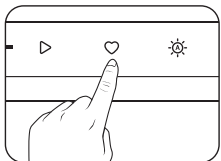

After you manually adjust the light's brightness and color temperature settings, you can use this function to save them as your favorite mode.

1. Adjust the light's brightness and color temperature settings according to your preference.

2. When done, tap and hold the My Favorite Mode key for approximately 3 seconds. The Brightness

Adjustment , Color Temperature Adjustment , Auto-Dimming Mode and My Favorite Mode indicators will flash 3 times simultaneously to indicate that the settings are saved successfully.

To access My Favorite Mode, tap the My Favorite Mode key.


Maintenance and Troubleshooting

- First turn off the light and unplug the light from the AC power adapter or USB port. When cleaning the light, wipe off any smears or dusts using a soft, lint-free cloth lightly moistened with a mild detergent solvent. Do not use alcohol or any other chemical solvents like kerosene, naphtha and so on, as the light's casing may become damaged.
- Do not rinse the light or any of its components directly with water.
- If the light does not turn on, check to make sure that there are no loose connections between the USB power cord, power adapter, and USB-C port.
- If the problem persists, please contact the place of purchase for help.

Light source Model	Power (W)	Luminous flux (lm)	CCT (K)	Dim	Efficiency Class	Weighted energy consumption (Ec) kWh/100 0h	L70B50 lifetime (h)	QR code
Light source-Front	7	900	2700/4000/6500	Yes	E	7	50000	

• This product contains a front light source of energy efficiency class E.

• Light source (LED only) is replaceable by a professional.

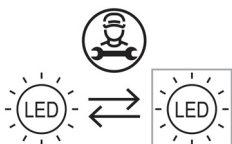

- Manufacturers, importers or authorised representatives of containing products shall provide information about the replaceability or non-replaceability of light sources and control gears by end-users or qualified persons without permanent damage to the containing product.
- Such information shall be available on a free-access website. For products sold directly to end-users, this information shall be on the packaging, at least in the form of a pictogram, and in the user instructions.

Specifications

Model	CR21_C
AC power input	100–240V AC, 50/60Hz (US/JP) 220–240V AC, 50/60Hz (EU/UK)
Max. power consumption	Max. 8.5W
Dimensions (Width x Depth x Height)	50 x 13.5 x 9.2 cm
Power adapter model number	PS15J050K3000UC (US/JP) PS15K050K3000Z (EU/UK) *Only UK plug used for Singapore market.

