



Digital Projector User Manual

BenQ Launcher

V 1.1

Warranty and Copyright information

Copyright

Copyright © 2025 by BenQ Corporation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of BenQ Corporation.

Disclaimer

BenQ Corporation makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Further, BenQ Corporation reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

*DLP, Digital Micromirror Device and DMD are trademarks of Texas Instruments. Others are copyrights of their respective companies or organizations.

Patents

Please go to <http://patmarking.benq.com/> for the details on BenQ projector patent coverage.

Table of Contents

Warranty and Copyright information	2
Before you get started	4
Registering a new account for admin.....	4
AMS Service	6
Binding an AMS administrator account to your projector.....	6
AMS Accounts.....	7
Logging in.....	8
Checking for system update	11
BenQ Launcher	12
The BenQ Launcher home screen	12
Switching to BenQ Launcher from an input source.....	18
Connection	19
Wired connection	19
Wireless connection	21
External storage connection	26
Bluetooth connection	29
Apps	32
AMS Files	33
TeamViewer Meeting	35
BenQ App Store	35
BenQ User Dashboard	36
Broadcast Settings	36
DMS Client	37
InstaShare 2	37
EZWrite 6	38
Floating Tool	38
Notification	39
WPS Office	40
Navigating the Settings Menu	42
About the Settings menu	42
Using the Settings menu	43
General	44
Display settings	50
Preference settings	52

Before you get started

One of the key features for this projector is its use of the Account Management System (AMS) service which allows you to create and manage individual login accounts for the projector. By using the AMS service you will be able to:

- Customize the projector's workspace for each login
- Access files stored in cloud storage accounts (such as Google Drive, Dropbox, and others) directly from the projector
- Manage authorization for each login, including limiting access to various projector functions.

In order to use the AMS service, you need to first register for an AMS administrator account. See [Registering a new account for admin](#) for more information.

For more information on AMS, refer to the AMS user manual.



The images in this document are for reference only. The user interface may be subject to change without prior notice.


Registering a new account for admin

You must have a valid account to access BenQ AMS.

1. Go to BenQ Service website: <https://ams.benq.com>.
2. If you are an administrator, click **Create administrator account** to register an Administrator account for the company. If you are a regular user, ask your company's administrator to create a user account for you.

3. Follow the on-screen instructions to create an administrator account.

4. Fill in the information to register your organization. Click **Submit**. A confirmation email will be sent.

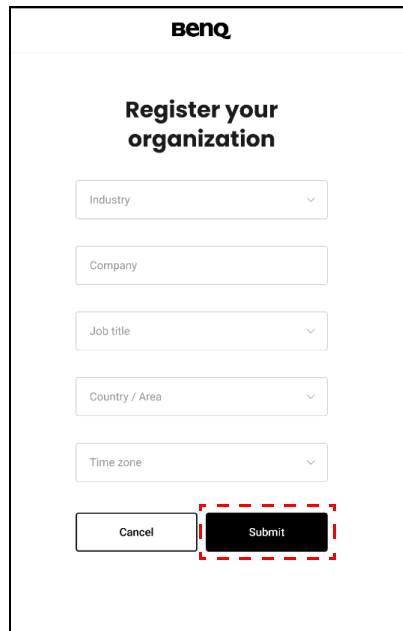

The image shows a web form titled "BenQ" with the heading "Register your organization". The form contains five input fields: "Industry" (a dropdown menu), "Company" (a text field), "Job title" (a dropdown menu), "Country / Area" (a dropdown menu), and "Time zone" (a dropdown menu). At the bottom of the form are two buttons: "Cancel" and "Submit". The "Submit" button is highlighted with a red dashed border.

5. Verify your email address to complete the registration.
6. On BenQ Service website, enter your Email to sign in. You can now create account for your users.

For a full description of the features of the AMS service, including instructions on how to setup and manage accounts, refer to the **AMS User Manual** on [BenQ website](#).

AMS Service

BenQ AMS service allows you to customize the projector's workspace, access files stored in cloud storage accounts directly from the projector, and manage access to various projector functions based on a user's login.

For a full description of the features of the AMS service, including instructions on how to setup and manage accounts, refer to the **AMS User Manual** on [BenQ website](#).

Binding an AMS administrator account to your projector


You need to bind an AMS administrator account to your projector to designate a specific administrator for your projector (i.e. to ensure that only one administrator is authorized to manage the projector).




Before binding an administrator account to your projector, you must first ensure that the following conditions are met for your projector:

- You have successfully registered for an AMS administrator account. See [Before you get started on page 4](#) for more information on registering for an AMS administrator account.
- Your projector is connected to a wireless network with Internet access. See [Connecting the projector to a wireless network on page 21](#) for more information on connecting to a wireless network.

1. Select **AMS Service**.

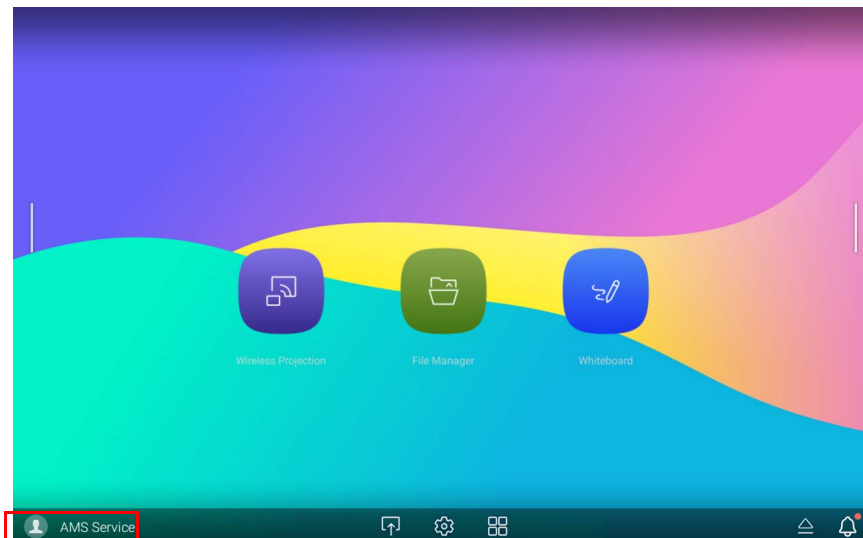

2. In the Password field, type **admin**, and then tap **Send**.

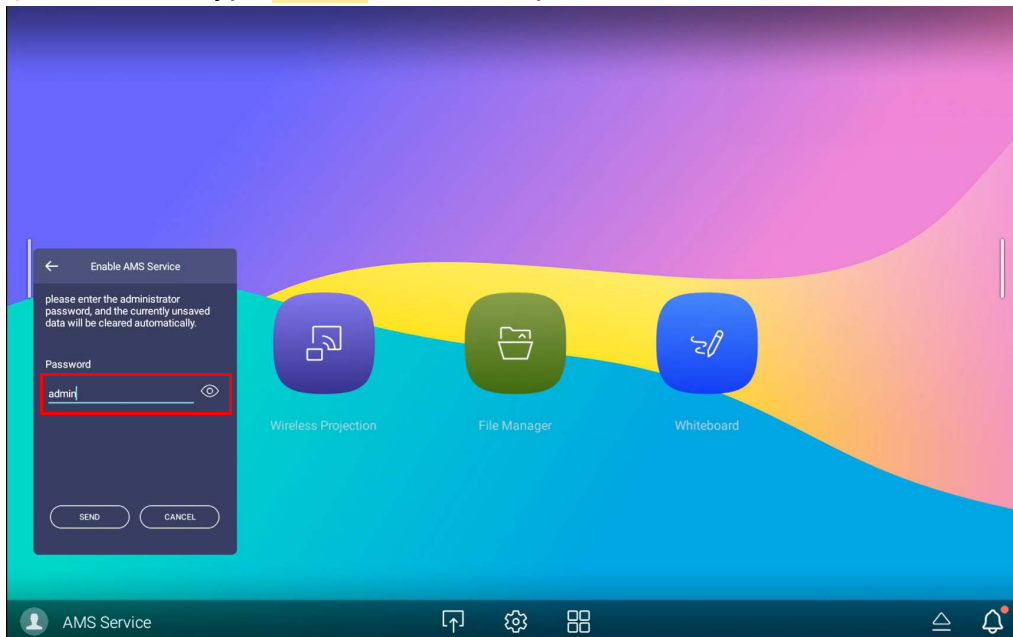

3. Set a new local administrator password and then tap **Send**.



Make sure to set a strong local administrator password to prevent unauthorized access to the projector. This password is different from the administrator credentials that are used to log in to BenQ cloud services such as BenQ DMS, AMS, and the Identity and Access Management (IAM) system.

4. Select Login to finish the binding process. See [Logging in on page 8](#) for more information.

AMS Accounts

The following is a list of the types of logins available for the projector:


Administrator – This account must be created/registered via the AMS website and includes full access to the projector's features and **Settings** menus.

User – This account must be created by the administrator via the AMS website and is allowed access to the projector's features and **Settings** menus based on default authorizations and configurations set by the administrator. Users can customize the interface they view on the projector, such as configuring the app shortcuts or linking to personal cloud accounts, by logging into the AMS website and adjusting their preferences.


Guest – This is the default setting when no account has been logged into the projector. It features limited access to the projector's features and **Settings** menus.

Logging in

1. To log in to the projector using an AMS account, select the login icon on the **BenQ Launcher** home screen and press **OK**.

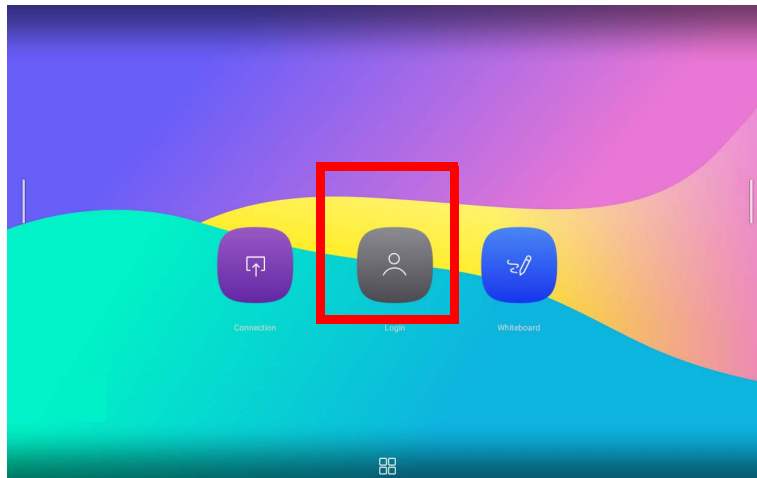

2. Enter your credentials to login.

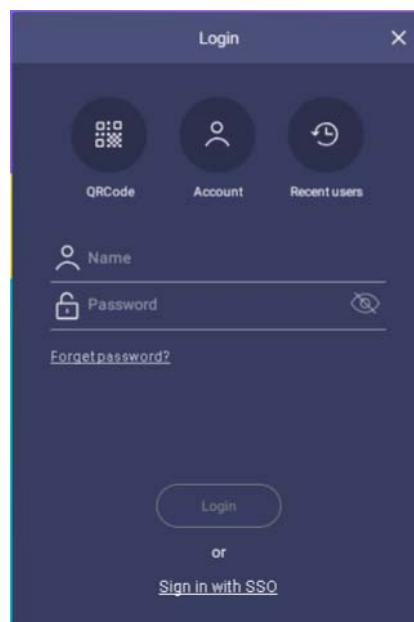

There are two methods to perform this step:


Methods	Actions
Password	1. Enter the AMS account credentials. 2. Tap Log in.
QR code	1. Tap . 2. Scan the QR code. The login page loads on the device's web browser. 3. Enter the AMS account credentials. 4. Tap Log in.  Administrators only need to enter their credentials the first time they log in using a QR code.



- You can select **Recent users** in the **Log in** window and press **OK** to select a **Username** from a list of a recently used logins.
- If your projector is not connected to a wireless network with Internet access, only accounts that are listed in the **Available offline accounts** list of the administrator's account menu will be able to login to AMS. See [The Account Menu on page 9](#), for more information on the account menu.

The Account Menu

When you are logged into the projector using an AMS account, the bottom-left corner of the **BenQ Launcher** home screen will identify the account that is currently logged in. Select the icon for the account name and press **OK** to open a menu of account related options.

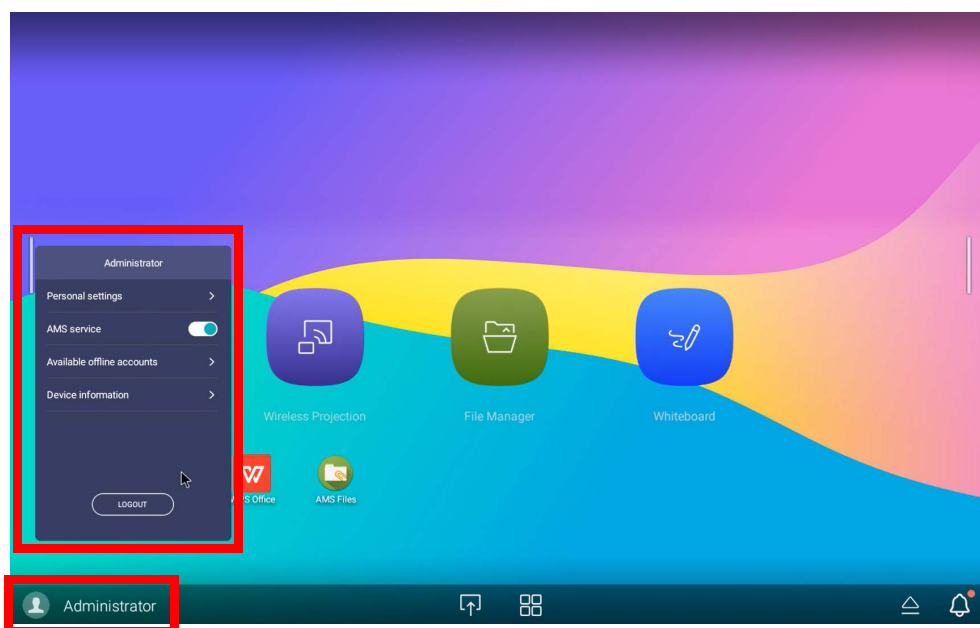

The account menu features the following options:


Item	Description
Personal settings	Allows you to set the amount of idle time before the projector automatically logs you out. The options include 10 minutes, 20 minutes, 30 minutes, 40 minutes, 50 minutes, and 60 minutes.
AMS service	 Allows you to disable AMS service . This option is not available for User accounts.
Available offline accounts	Lists the accounts that are available to login when the projector does not have access to the Internet.
Device information	Lists the information for the administrator account that is bound to the projector, including an option to UNBIND the account from your projector.  The UNBIND option only appears for the administrator.
LOGOUT	Logs your account out of the projector.

Unbinding an administrator account from the projector


In instances when you want to switch an administrator account for the projector, you will have to first unbind the current administrator account from the projector.

To unbind an administrator account:

1. Log in on the projector using the **Username** and **Password** for the current administrator. See [Logging in on page 8](#) for more information on how to log in on the projector.
2. Enter the account menu. See [The Account Menu on page 9](#) for more information on the account menu.
3. Select **Device information** in the account menu and press **OK**.

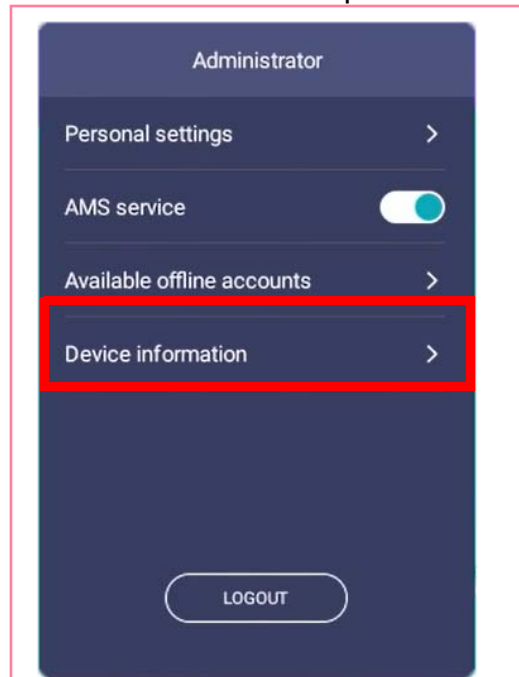


4. Select **UNBIND** and press **OK**.

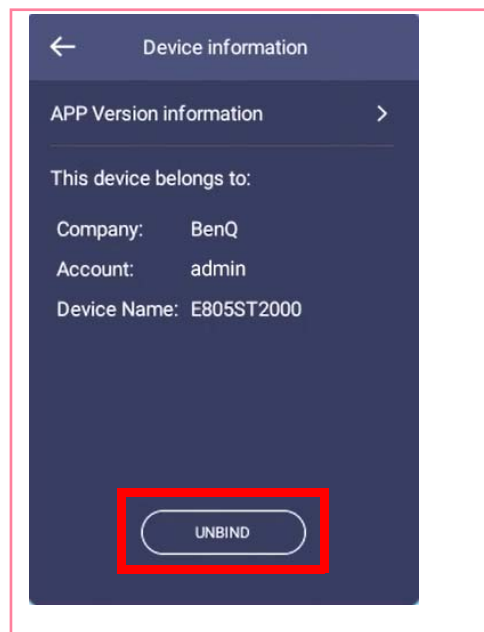

Checking for system update


It is suggested that users regularly update their projector with the latest version of the firmware to optimize the user experience. The projector uses Over-the-Air (OTA) updates to install the update file wirelessly.

When a new version is available on the BenQ OTA server, a message will pop up once the projector is connected to a wireless network. You can find the availability of a new firmware version from the notification icon on the lower-part of the **BenQ Launcher** home screen.

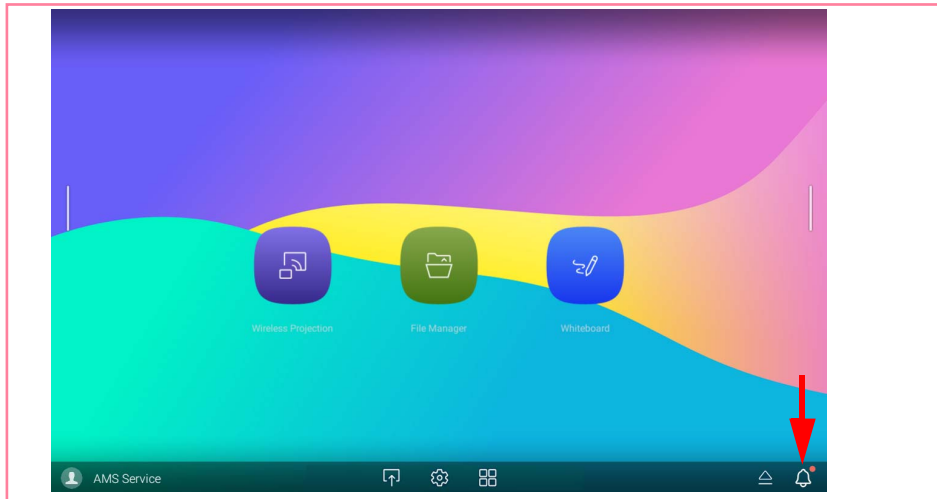


Follow the steps below to begin updating the firmware:

1. Select **DOWNLOAD** to download the update file.

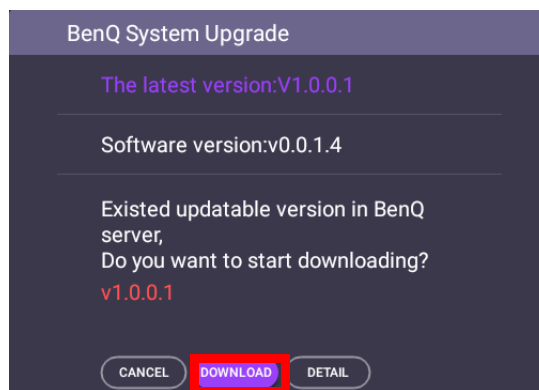

2. Once the download is completed, the projector will restart automatically. Do not turn off or unplug the projector before the projector is finished updating and **BenQ Launcher** reappears on the screen.

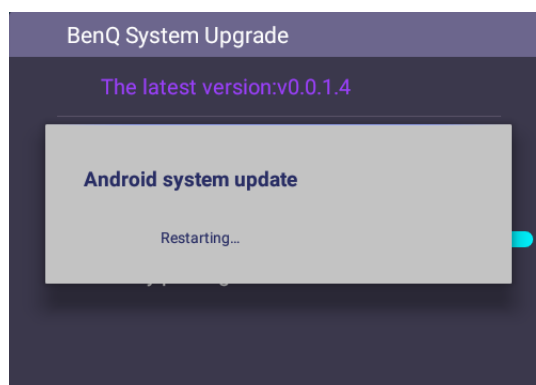

BenQ Launcher


BenQ Launcher is the projector's operating system that allows you to wirelessly cast your device's screen, create video conferences, play files, run apps, as well as adjust projector settings.

 Use the buttons on the projector, the remote control, or connect a USB mouse to the projector's **USB-1**, **USB-2**, or **USB-3** ports to navigate **BenQ Launcher** and operate its functions.

The BenQ Launcher home screen

Upon initial start up or when **BenQ Launcher** is selected in the input source menu, the projector will display **BenQ Launcher**. If the projector is projecting from an input source (e.g. **HDMI** or **PC**), you can return to **BenQ Launcher** mode by pressing the source button  or the **LAUNCHER** button on the remote control and then selecting **BenQ Launcher** in the input source menu.

 When the **Auto Source** function is enabled in the **Settings** menu of the projector's OSD menu, the projector will display the **BenQ Launcher** home screen by default every time it is powered on. If the **Auto Source** function is disabled, the projector will detect if a signal is available from the input source that was last used and switch to that input source if it is available, if a signal is not available or the projector was set to **BenQ Launcher** during the previous session, the projector will enter the **BenQ Launcher** home screen.

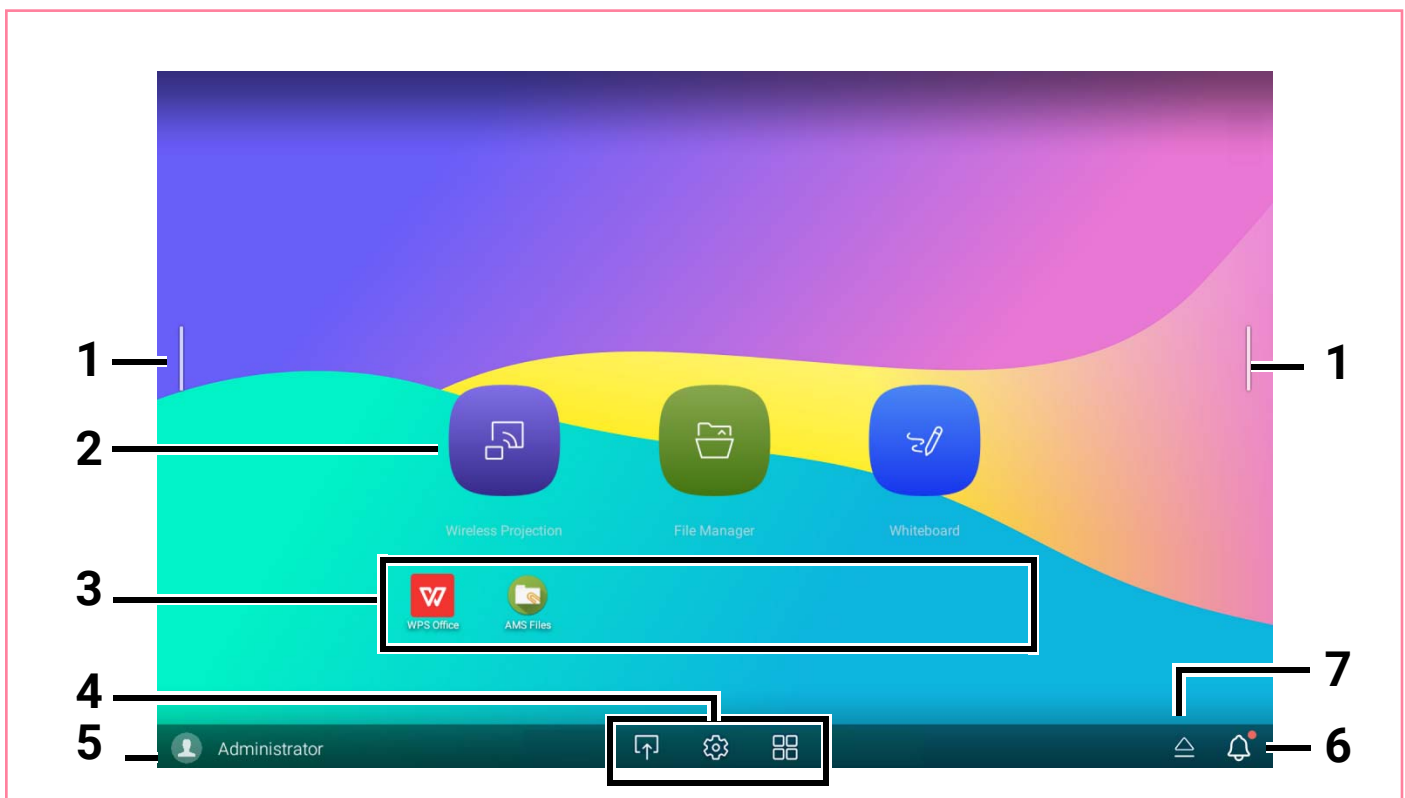

 Actual screen may vary based on your **BenQ Launcher** firmware version.

The **BenQ Launcher** home screen features eight main components:

No.	Component	Description
1	Sidebar	A menu of quick navigation buttons. See Using the sidebar on page 17 for more information.  The sidebar can only be accessed when using a USB mouse connected to the USB-1, USB-2, or USB-3 ports.
2	Main Menu	Shortcuts to the wireless projection, video conferencing, interactive whiteboard and file manager apps. See Using the Main Menu on page 14 for more information.
3	App Shortcuts	A customizable list of shortcuts for installed apps. See Using the App Shortcuts on page 15 for more information.
4	Toolbar	Buttons for the input source, all apps, and Settings menu. See Using the Toolbar on page 15 for more information.
5	AMS Service Menu	Allows you to log into the projector using your AMS Service account. See AMS Service on page 6 for more information.
6	Notifications	Indicates when any push notifications from your installed apps are available. See Notification on page 39 for more information.
7	Eject	Safely ejects any USB flash drives connected to the USB-1 , USB-2 , and/or USB-3 ports.

Navigating the **BenQ Launcher** home screen

1. From the **BenQ Launcher** home screen, press ▲/▼/◀/▶ to select the desired function and press **OK**.
2. Follow on-screen instructions for further operations.

Inputting text

Various menus within **BenQ Launcher** may require that you input text. You may either connect a keyboard to the **USB-1**, **USB-2**, or **USB-3** port at the rear of the projector or follow the steps below:

1. Select the text field where you want to input text.
2. Press **OK** and a full alphanumeric keyboard will appear on screen.
3. Press ▲/▼/◀/▶ to navigate the keyboard, and press **OK** to select the letter/key/symbol you want to enter into the text field.
4. Press the back button ↶ at anytime to exit out of the keyboard.




Actual keyboard types may vary based on your language preference setting. See [Keyboard on page 53](#) for more information.

Using the Main Menu


The Main Menu includes three buttons to access the following functions:

No.	Feature	Description
1	Wireless Projection	Launches the InstaShare 2 app for wireless projection. See Wireless Projection via the InstaShare 2 app on page 22 for details.
2	File Manager	Launches the AMS Files app to access files. See AMS Files on page 33 for details.
3	Video Conference	Launches the TeamViewer Meeting app which allows you to create an online video conference.
	Interactive	Launches the EZWrite 6 app which turns your screen into a digital canvas. See EZWrite 6 on page 38 for details.
* Availability varies by model.		

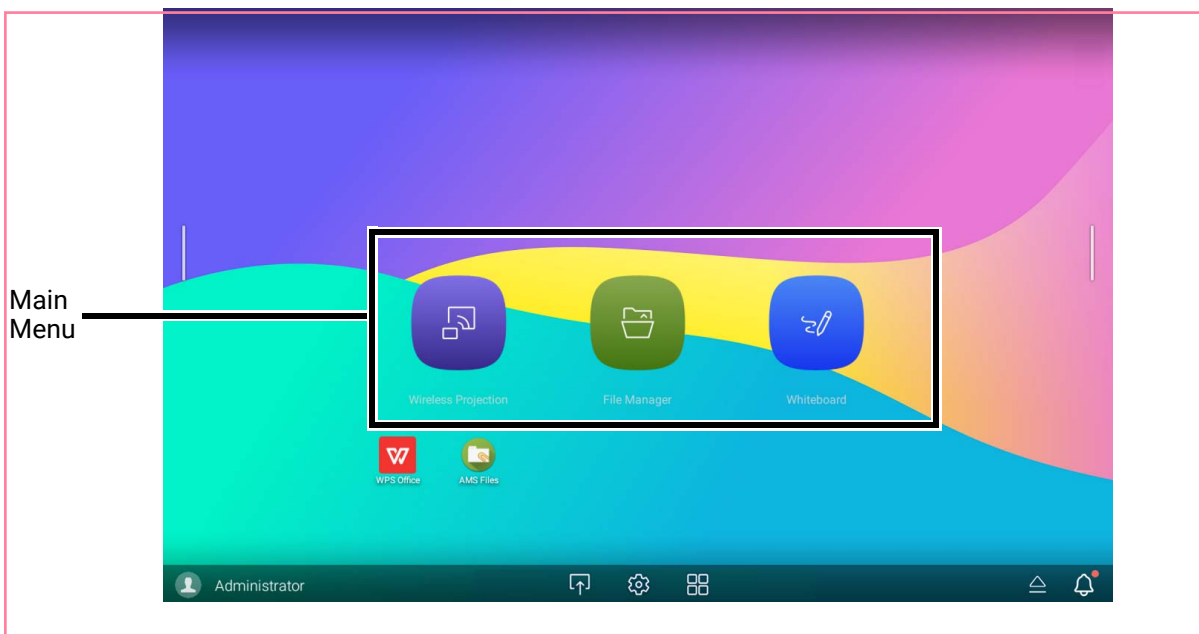

Using the App Shortcuts

The App Shortcuts menu is a list of shortcuts for installed apps which can be customized by the user via either the All Apps icon (☐☐) from the Toolbar or the AMS service website for AMS login accounts. See [Customizing app shortcuts on page 16](#) for details, or refer to the **AMS User Manual**.

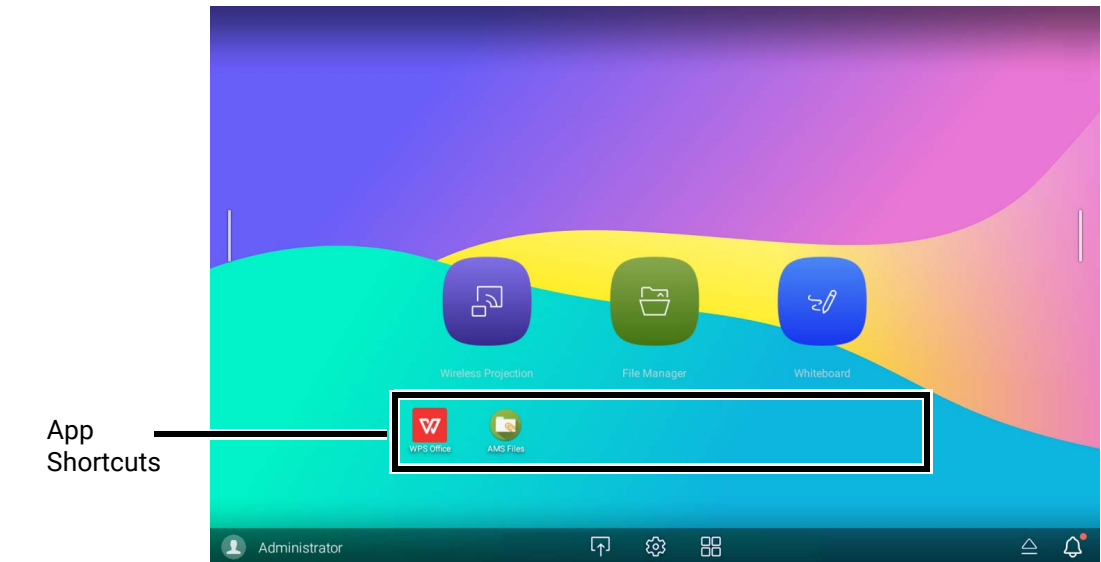

To access all the apps installed on the projector, see [All Apps on page 48](#). For details on how to re-order the shortcuts see [Customizing app shortcuts on page 16](#).

Using the Toolbar

The tool bar features buttons to access the input source menu, the all apps menu, and the **Settings** menu.




Button	Description
	Select to open the input source menu.

Button	Description
	Select to open the Settings menu. See About the Settings menu on page 42 for more information on the Settings menus
	Select to open the apps and widgets menu. See Customizing app shortcuts on page 16 for more details.


The Input Source menu

The input source menu displays the input source options. Select the desired input source and press **OK** to connect to the source.

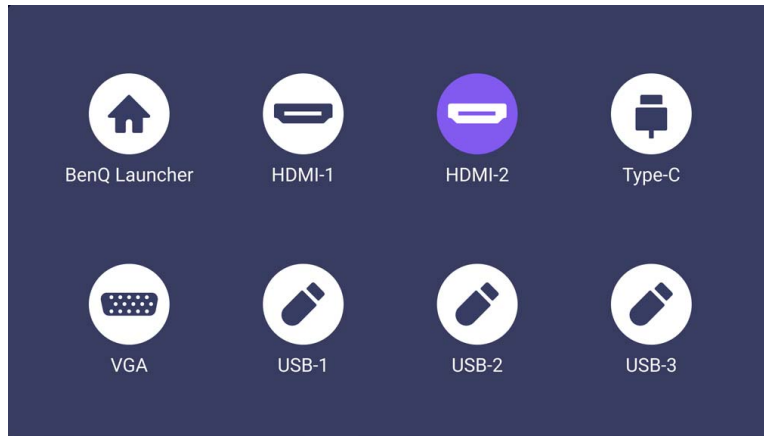

Customizing app shortcuts

1. Select  from the toolbar.
2. Under the **Apps** tab, select **Set Shortcut**.

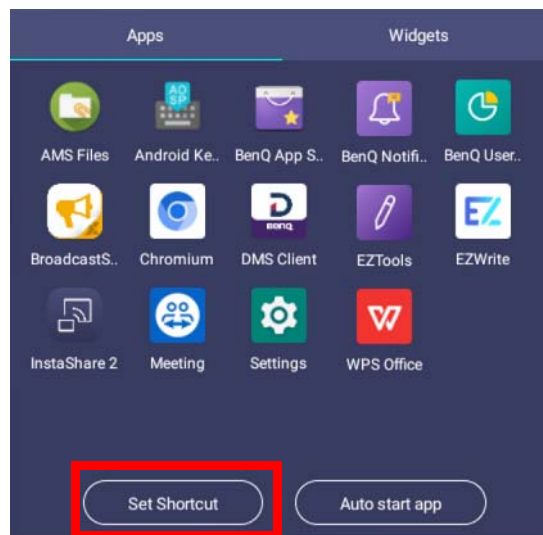


3. Select the apps to add or remove from the home screen. The app dock can hold a maximum of seven apps.

Using the sidebar

For situations where the projector is out of the reach of the user (for example, when the projector is mounted on the ceiling) and as a result the buttons on the projector are not accessible, **BenQ Launcher** features sidebars on both the left and right side of the screen that can be called out at anytime using a USB mouse to access a set of virtual buttons. To call out the sidebar on a screen, click the tabs on the left or right side of the screen.

 An HID-protocol device (e.g. a mouse) must be connected to the projector to be able to use the side bar.

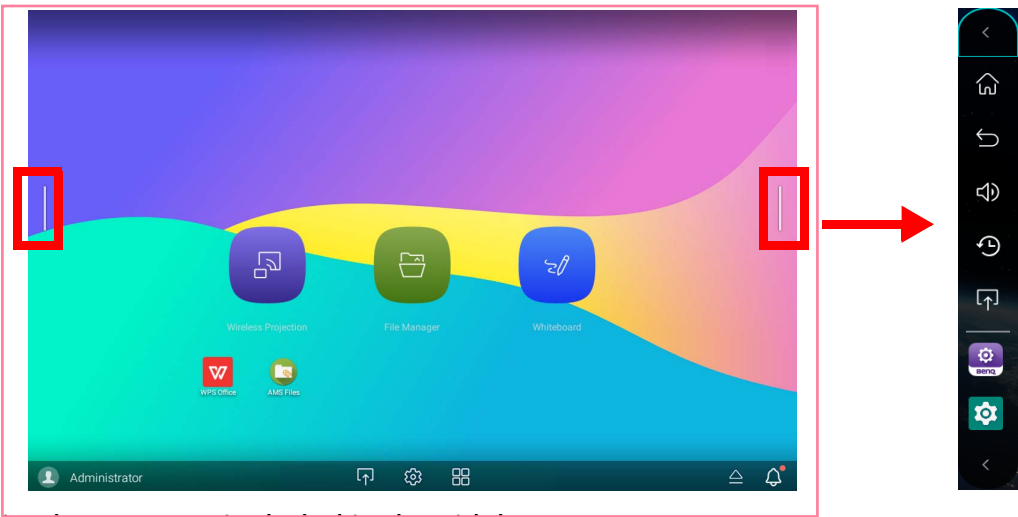

The following buttons are included in the sidebar:

Icon	Description
	Select to return to the BenQ Launcher home screen.
	Select to go back to the previous screen.
	Select to open the volume control menu.
	Select to edit the recently used apps menu.
	Select to open the input source menu


At the bottom of the sidebar there will also be up to three shortcuts to the most recently used apps.

Switching to **BenQ Launcher** from an input source

When **HDMI** or **PC** is selected in the source menu, the projector will exit the **BenQ Launcher** interface to project video from the input source (e.g. a Blu-Ray/DVD player, set-top box, or PC). The projector will remain outside of the **BenQ Launcher** interface as long as the **HDMI** or **PC** input source is selected or (depending on **Auto Source** settings) until the projector is powered off and back on again.

As a result, anytime the user wants to wirelessly cast their device's screen, view media files stored on a flash drive, or run apps, they must return to the **BenQ Launcher** interface. To return to **BenQ Launcher** use one of the following methods:

- Press the **LAUNCHER** button on the remote control.
- Press the source button  and then select **BenQ Launcher** in the source menu.

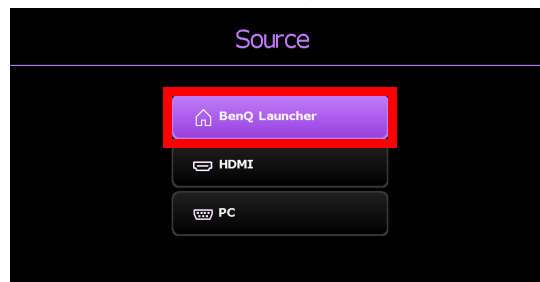


- When the **Auto Source** function is enabled in the **Settings** menu of the projector's OSD menu, the projector will display the **BenQ Launcher** home screen by default once it is powered on. If the **Auto Source** function is disabled, the projector will detect if a signal is available from the input source that was last used and switch to that input source if it is available, if a signal is not available or the projector was set to **BenQ Launcher** during the previous session, the projector will enter the **BenQ Launcher** home screen.
- The **Auto Source** function can only be configured when the projector's input source is set to **HDMI** or **PC**.

Connection


Wired connection

Connecting the projector via Ethernet

1. Connect the projector to an Ethernet LAN or WAN network via a hub, switch or router using a RJ-45 cable.
2. Go to **Settings > General > Ethernet**.
3. Select **Ethernet** and press **OK**. The **Ethernet** switch is set to **On**.

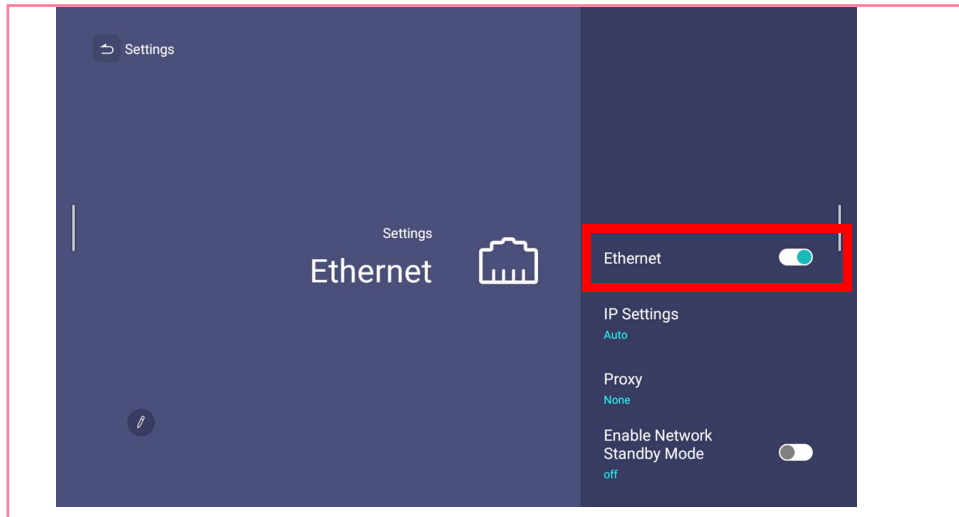

4. Under **IP settings**, choose **Auto** or **Static**.
 - **Auto**: The system detects your IP address automatically.
 - **Static**: Go to **IP settings > Advanced Options** to set the IP address, gateway, etc.

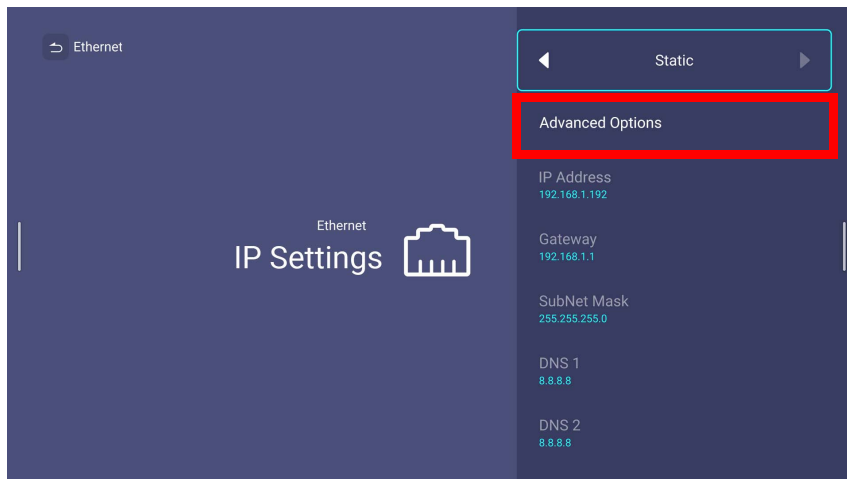


5. For **Proxy** settings, see [Proxy on page 45](#) for more information.

Accessing the projector during **Enable Network Standby Mode** mode

By connecting the projector via Ethernet, you can enable network standby mode, which allows admins to access the projector remotely through BenQ DMS.

1. Go to **Settings > General > Ethernet**.

2. Select **Enable Network Standby Mode** and press **OK**. The **Enable Network Standby Mode** switch is set to **On**.

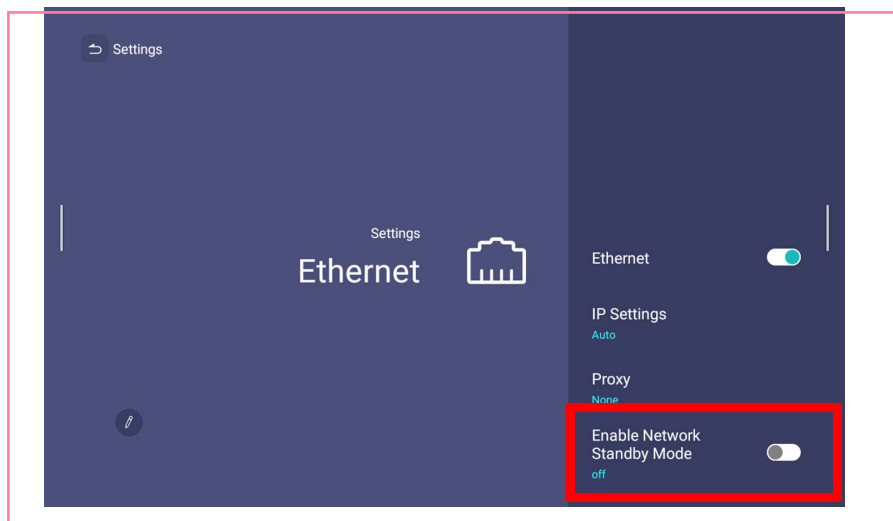

Wireless connection


Connecting the projector to a wireless network

Before you can project wirelessly via the projector, you must first connect the projector to a wireless network. To connect your projector to a wireless network, or to switch wireless networks:




If you have already connected the projector to a wireless network during the setup wizard you may skip the steps in this section.


1. Install the provided wireless dongle into the wireless dongle port.
2. Power on the projector.
3. On the home screen of the **BenQ Launcher** interface select the **Settings** button and press **OK**.

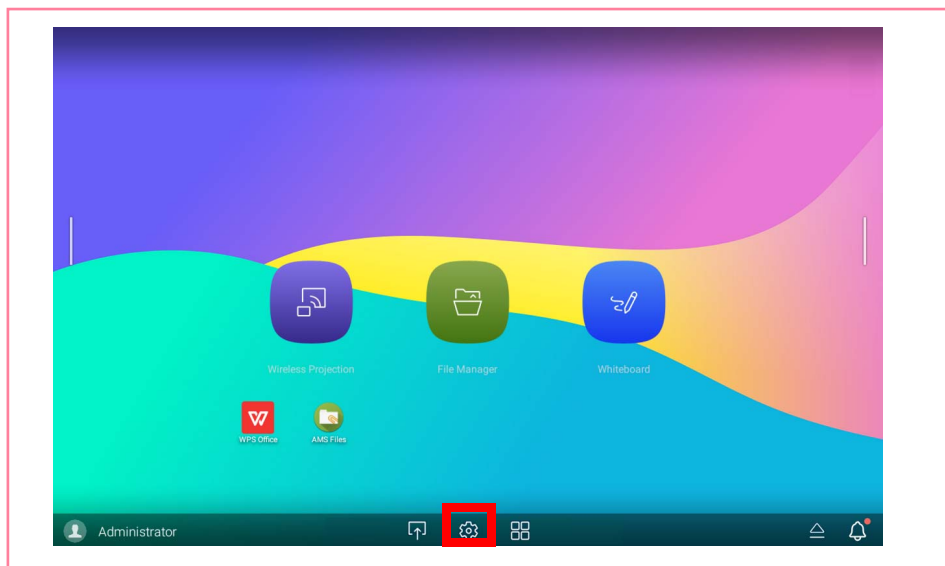


4. Select **Internet** in the **General** section of the **Settings** menu and then press **OK**.

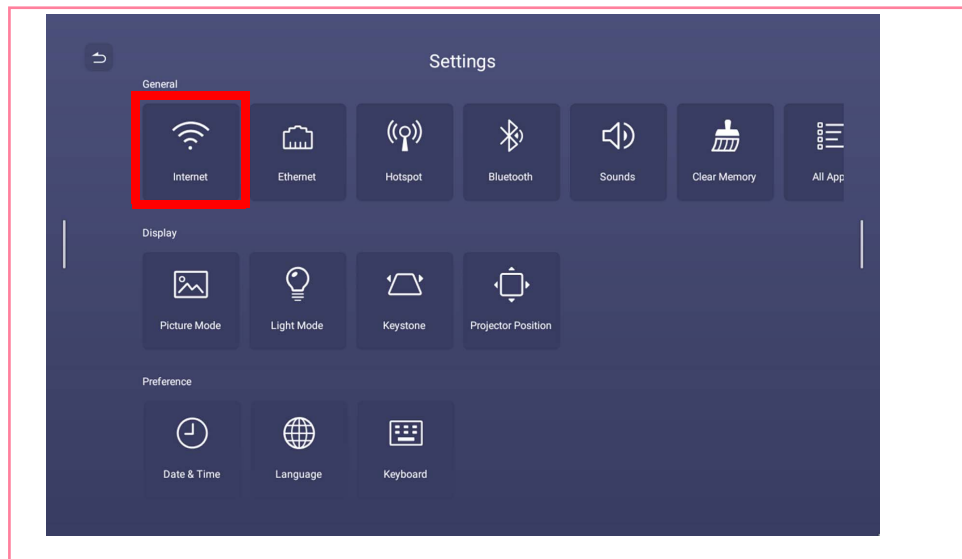

5. Select **WiFi Settings** and press **OK** to enable Wi-Fi.

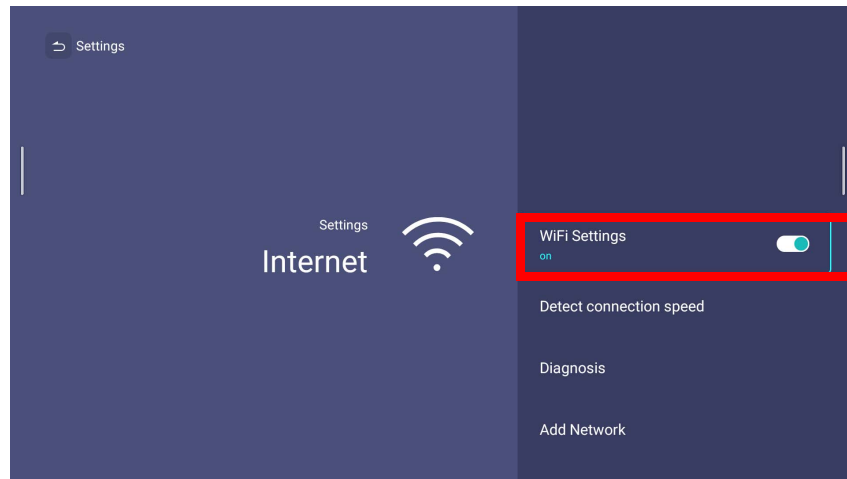

6. Select the SSID for the wireless AP you want to connect to in the **Available Networks** field and press **OK**.

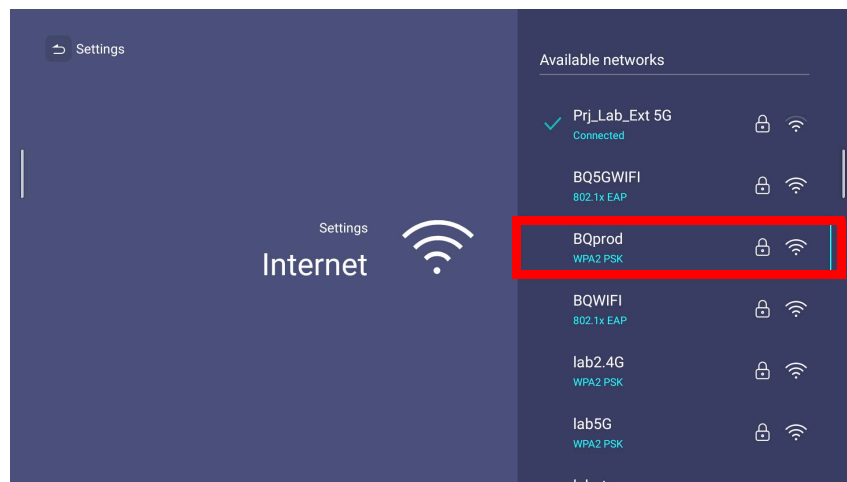

- To connect to a hidden wireless network select **Add Network** and enter the SSID, security setting, and password for the network.
- The list of available wireless networks will be refreshed every 30 seconds. If the desired SSID is not listed please wait for refreshing to complete.

7. If you chose a secured SSID for the first time, a window appears prompting you to enter the appropriate password. Use the virtual keypad to enter the password. After you have entered the password, press **OK** and the projector will automatically connect.



- The password will be stored in the projector's memory. In the future, if you select the same SSID again, you will not be prompted to enter a password unless you delete the SSID from the projector's memory.
- If the password is typed incorrectly, you can select either re-enter the password or press the back button  to return to the list of SSIDs.

8. You can now connect your devices wirelessly to the projector to cast your device's screen.



- If you prefer to rename your projector, you can do so from the **InstaShare 2** app's settings menu.


Wireless Projection via the **InstaShare 2** app

Before a mobile device can project wirelessly on the projector, the device must first download and install the **InstaShare 2** app from their respective app marketplace.


Once the device has installed the **InstaShare 2**, select **Wireless Projection** on the home screen of the **BenQ Launcher** interface and then press **OK**.



Before wirelessly projecting on your projector, you must first ensure that your projector is connected to a wireless network with Internet access. See [Connecting the projector to a wireless network on page 21](#) for more information on connecting to a wireless network.

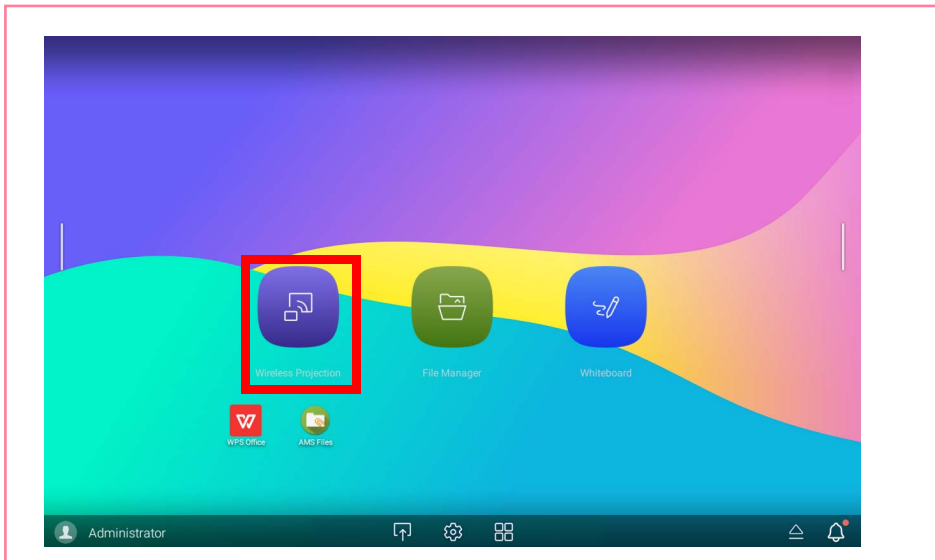

The projector will launch the **InstaShare 2** wireless projection app. Select the type of device you want to project wirelessly on the **InstaShare 2** main page and then follow the on-screen instructions to begin projecting.

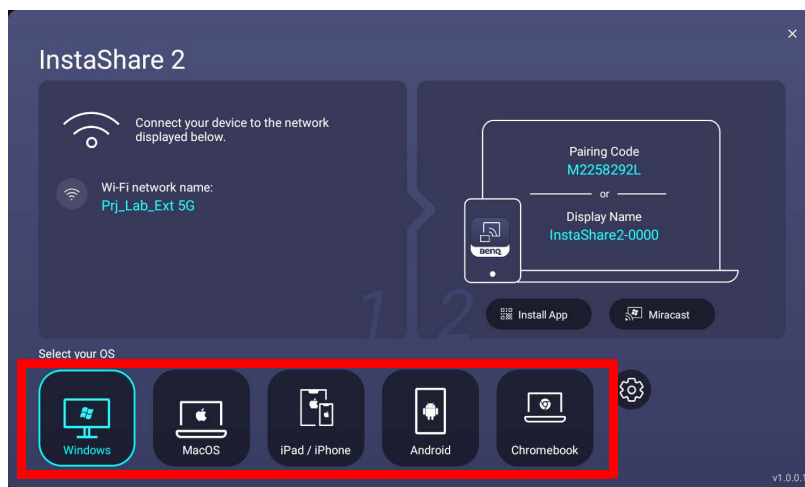

The quality of the wireless projection may depend on the quality of the wireless signal along with the screen mirroring compatibility of the mobile device.

For more information on the **InstaShare 2** wireless projection app, refer to the **InstaShare 2** user guide which you can download at the following URL:

<https://www.benq.com/en-us/business/projector/instashare-2.html>.

YouTube Broadcast

To connect a mobile device to the projector and broadcast your device's YouTube screen:

1. Make sure your projector and the mobile device are connected to the same wireless AP. To connect your projector to a wireless network, see [Connecting the projector to a wireless network on page 21](#).
2. Launch the YouTube app on your mobile device.

3. On the upper-right corner of your YouTube screen, click the  icon.
4. A list of available devices is displayed. Choose to connect to your projector. The YouTube screen is casting to your projector. Note that options and procedures may vary by app version or OS version. Follow the on-screen instructions to select your projector to cast.
5. To end the connection / broadcasting, click the  icon on the upper-right corner of your device's YouTube screen.

Wireless hotspot


In situations where the projector is out-of-range of a wireless network (for example while on a camping trip), you can configure the projector to act as a wireless hotspot to create a closed network for devices to connect directly to the projector via a wireless connection and to project files from their local storage.




The projector will have no access to the Internet while in wireless hotspot mode.

To create a wireless hotspot:


1. Install the provided wireless dongle into the wireless dongle port.
2. Power on the projector.
3. On the home screen of the **BenQ Launcher** interface select the **Settings** button and press **OK**.

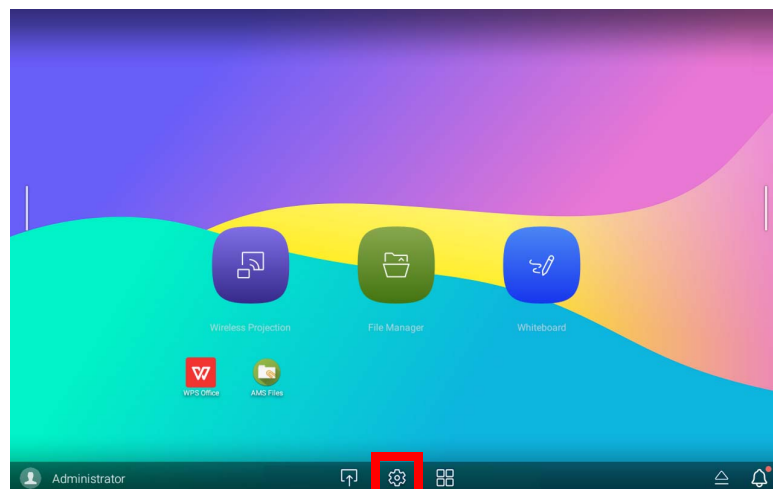

4. Select **Hotspot** and press **OK**.

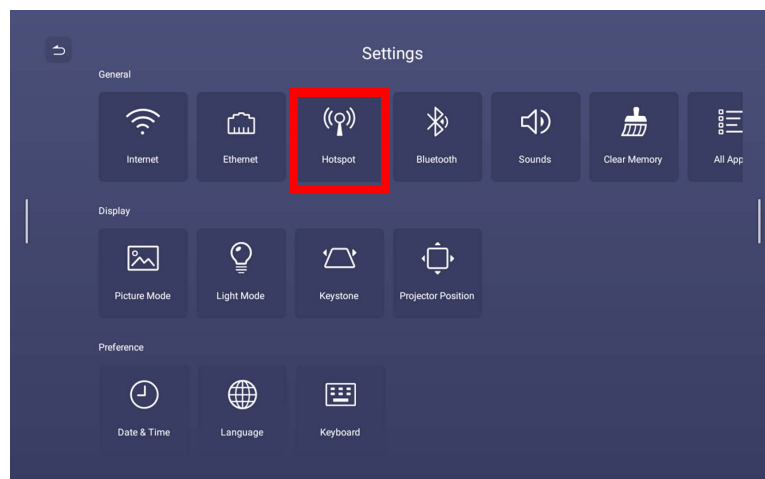


5. (Optional) Select **Hotspot Name** and/or **Hotspot Password** and press **OK** to change the name and/or password of the wireless hotspot.

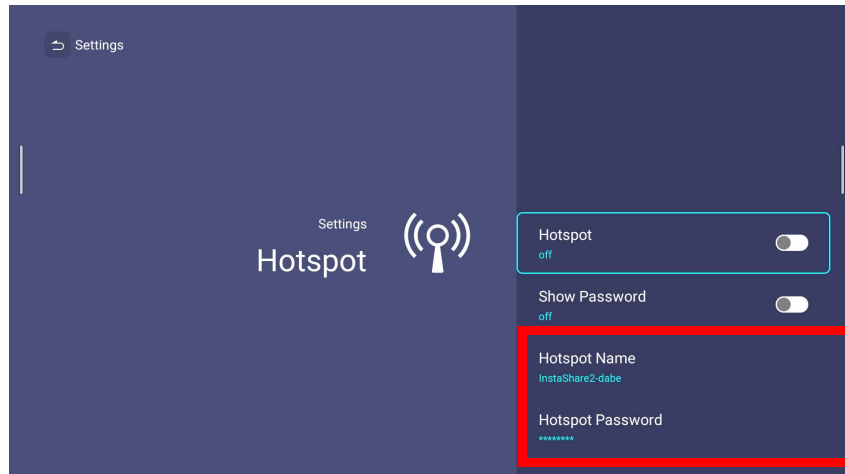

You can only change the **Hotspot Name** and **Hotspot Password** when **Hotspot** is disabled.


6. Select **Hotspot** and press **OK** to enable wireless hotspot.

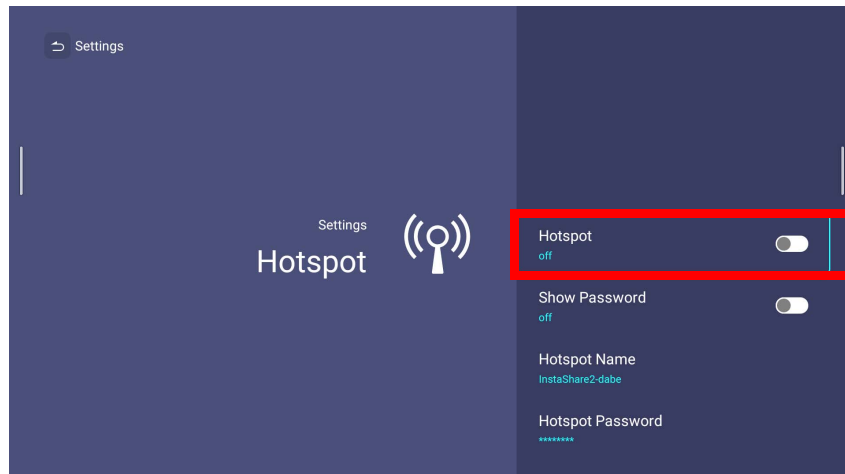

The projector will have no access to the Internet while in wireless hotspot mode.

7. Once wireless hotspot is enabled, use the name shown in the **Hotspot Name** field as the SSID to connect to from your mobile device's wireless menu and use the password entered in the **Hotspot Password** field as the connection password.

8. If the wireless hotspot can not be found by your device, select **Normal (2.4G)** under the **Internet Quality** heading.

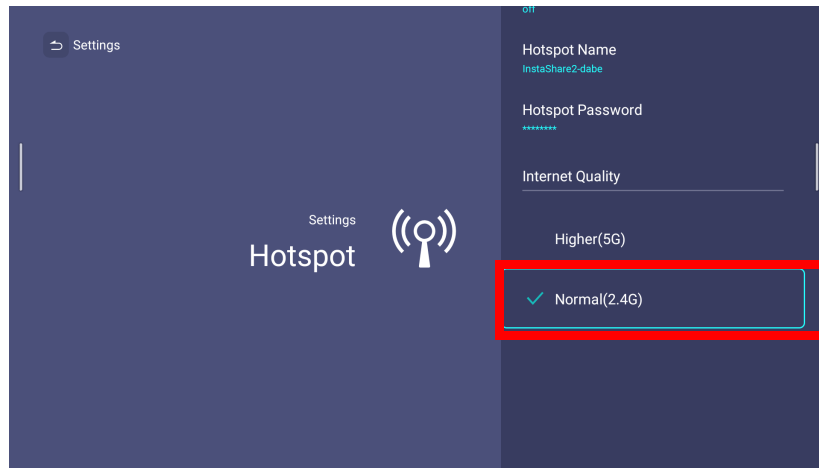

After the wireless hotspot is set up, follow the corresponding connection instructions described in the previous section to connect to the projector directly and cast your device's screen.

External storage connection

Connecting a flash drive

Connect a USB-A flash drive to the **USB-1**, **USB-2**, or **USB-3** port at the rear of the projector to play files stored on the flash drive.




- If you want to play media from a flash drive while the projector is set to the **HDMI** or **PC** input source, you must first return to the **BenQ Launcher** interface by pressing the source button  or the **LAUNCHER** button on the remote control and then selecting **BenQ Launcher**.
- Though each USB port on the projector supports connecting a flash drive the suggested devices to connect for each port is as follows:
 - USB-1:** Webcam
 - USB-2:** USB hub-keyboard / mouse
 - USB-3:** Bluetooth speaker or USB flash drive
- There is a maximum total power consumption limit for the three USB ports. The system will automatically cut off power supply to the USB ports once the power consumption is over 15W. If this happens, remove a device from any of the USB ports to resume power supply. There is no specific port order to be followed.


To play files stored on a flash drive:

1. Connect the USB-A flash drive to the **USB-1**, **USB-2**, or **USB-3** port at the rear of the projector.
2. Choose one of the following options:
 - Press the source button  on the projector or remote control.


- Select the source button on the **BenQ Launcher** home screen and press **OK**.

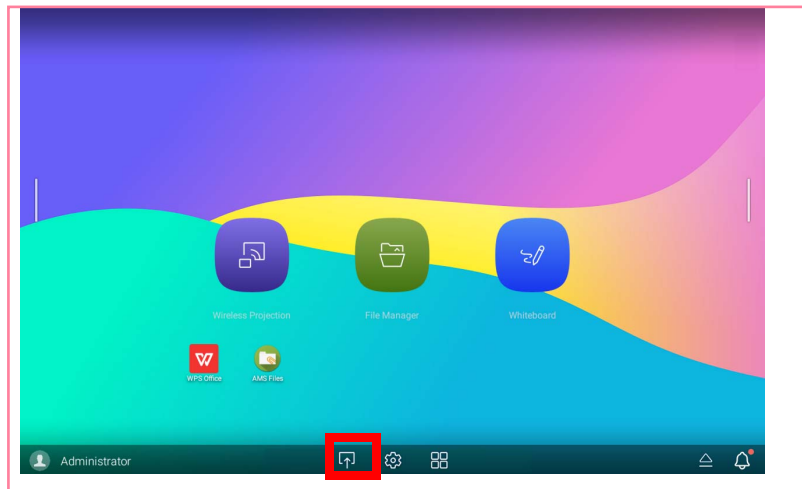


3. Select **USB** in the **Source** menu and press **OK**.

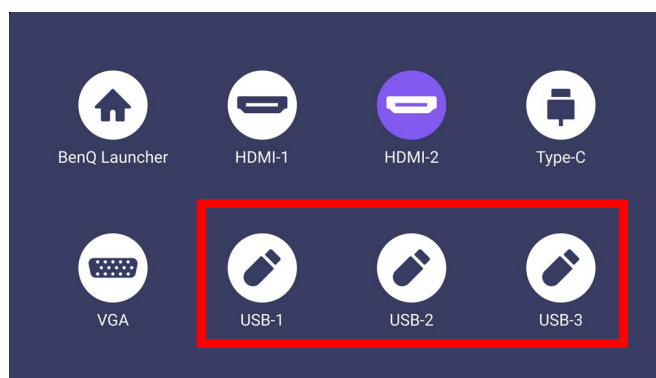


4. The **AMS Files** app will launch. Select the flash drive where the media file you want to play is located in the **Local Device** list and press **OK**.

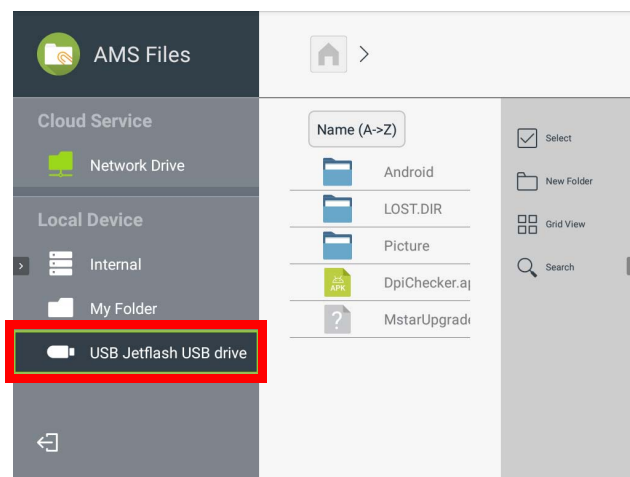

5. Navigate to the folder where the media file you want to play is located and press **OK**.

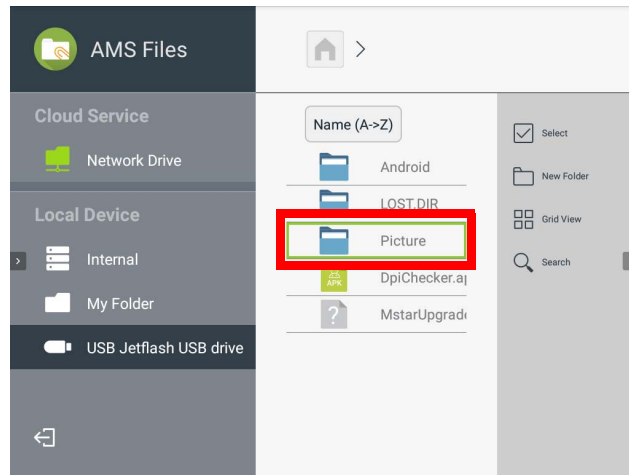

6. Select the media file you want to play and press **OK**.

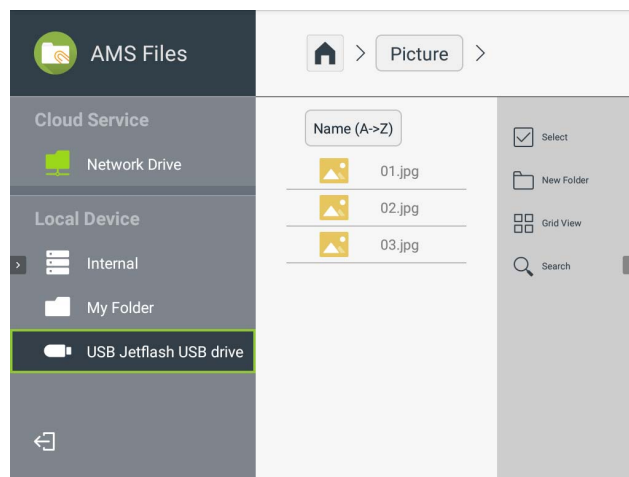

7. The media file will open in the media player app.



To remove a USB flash drive properly, click  from the bottom-right corner of the **BenQ Launcher** home screen and select the flash drive from the list. Follow the on-screen instructions to remove.



Bluetooth connection

When **BenQ Launcher** is selected as the input source, the projector is able to connect to a Bluetooth-enabled speaker or headphones to output audio directly for greater sound, particularly in outdoor settings.




- The projector is only able to output audio via Bluetooth when **BenQ Launcher** is selected as the input source, to output audio to Bluetooth speakers or headphones. For other input sources (**HDMI** or **PC**), connect the Bluetooth speakers or headphones directly to the input source device itself.
- The Bluetooth connection does not support any data transfer as the projector only allows Bluetooth connections for audio output.
- You may not use the projector to broadcast audio from a Bluetooth-enabled mobile device.

Pairing/Connecting to a Bluetooth speaker or headphones


Pairing is the process by which your projector creates a connection to a Bluetooth speaker or headphones for the first time. Once both devices have been successfully paired each device will have the corresponding device's pairing information stored internally and both will be able to connect automatically when they are within an ~5 meter range of each other and Bluetooth is enabled on the projector.

To pair your projector to a Bluetooth speaker or headphones:


1. Install the provided wireless dongle into the wireless dongle port.
2. Power on the projector.
3. On the home screen of the **BenQ Launcher** interface select the **Settings** button and press **OK**.

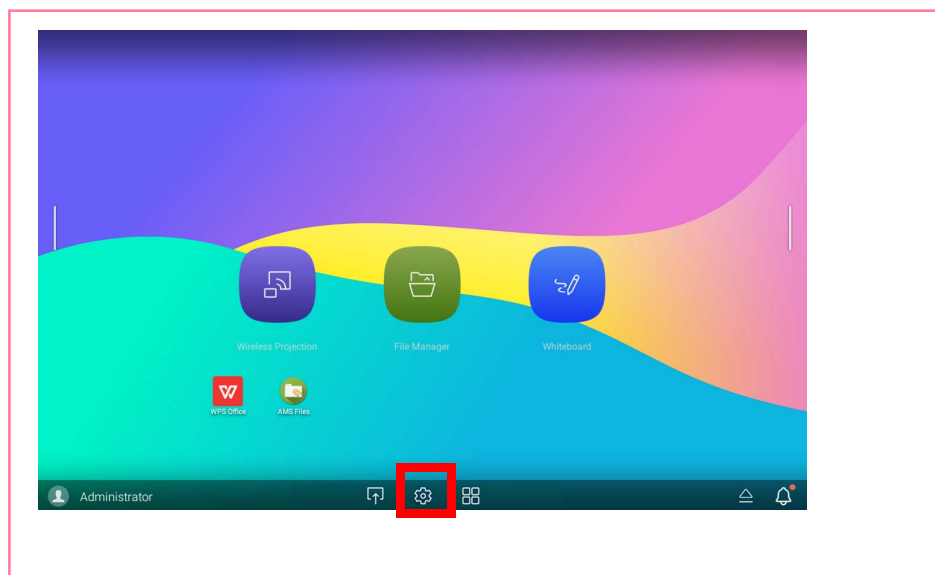


4. Select **Bluetooth** and press **OK**.

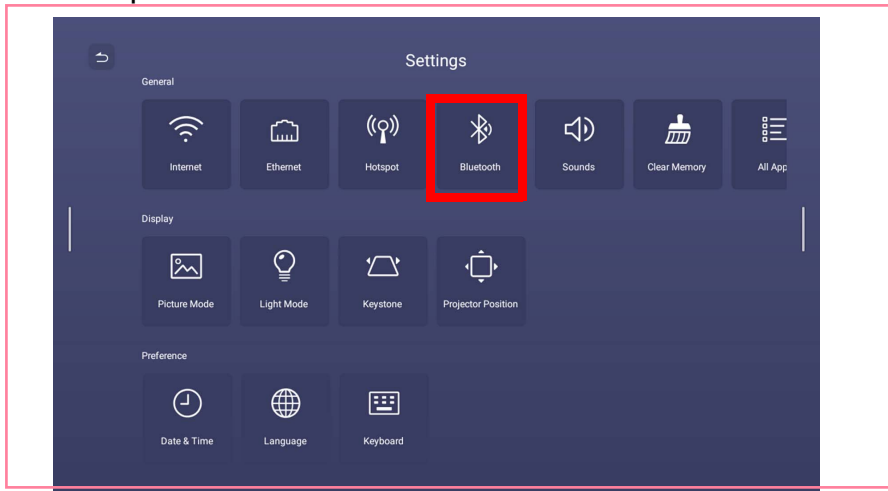

5. Select **Bluetooth** and press **OK** to enable Bluetooth.

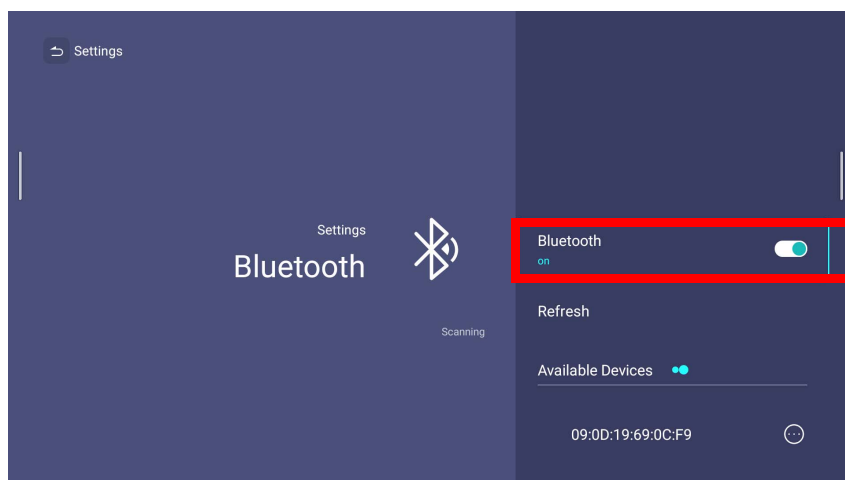

6. Activate Bluetooth-pairing mode on the speaker or headphones.
7. Select the speaker or headphones from the **Available Devices** in the **Bluetooth** setting menu and press **OK**.

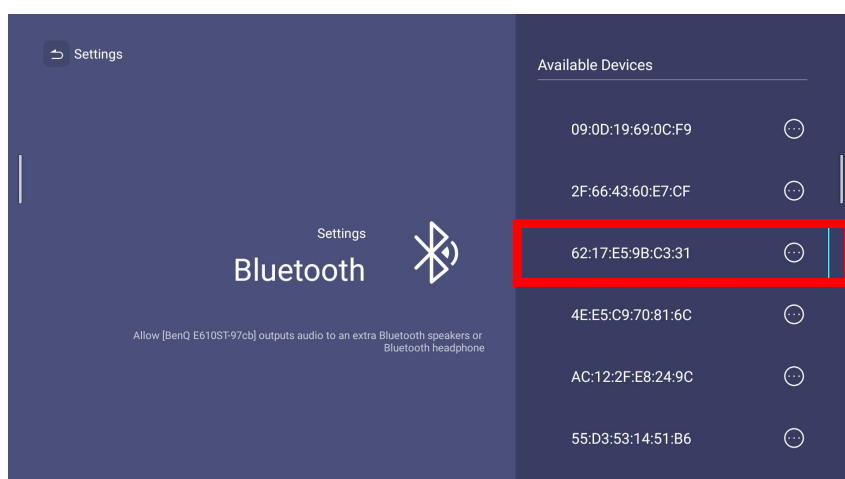

8. When the projector and speaker or headphones have successfully connected, the device listing in the Bluetooth setting menu will be labeled **Connected**. You can now output the audio from the projector to the speaker or headphone.

Once you have successfully paired your projector with the Bluetooth speaker, pairing information will be stored on both devices and a connection will automatically be made when Bluetooth is enabled on both devices and both devices are within range of each other.



- If you replace the wireless dongle on your projector anytime after you have paired your projector with a Bluetooth device you will need to re-pair your projector to the device in order to create a Bluetooth connection.
- The quality of the Bluetooth transmission may depend on the quality of the Bluetooth signal along with the compatibility of the mobile device.

Ending the Bluetooth connection


In cases where you want to disconnect a speaker or headphones from the projector and connect to another speaker or headphones follow the steps below:

1. On the home screen of the **BenQ Launcher** interface select the **Settings** button and press **OK**.
2. Select **Bluetooth** and press **OK**.
3. Select the already connected speaker or headphones from the **My Devices** list in the **Bluetooth** setting menu and press **OK**.
4. Confirm that you want to disconnect the speaker or headphones from the projector.
5. Activate Bluetooth-pairing mode on the new speaker or headphones.
6. Select the new speaker or headphones from the **Available Devices** or **My Devices** list in the **Bluetooth** setting menu and press **OK**.

Deactivating the Bluetooth speaker or headphones


To deactivate Bluetooth on the projector so that it no longer outputs its audio to a separate speaker or headphones:

1. On the home screen of the **BenQ Launcher** interface select the **Settings** button and press **OK**.
2. Select **Bluetooth** and press **OK**.
3. Select **Bluetooth** and press **OK** to disable Bluetooth.

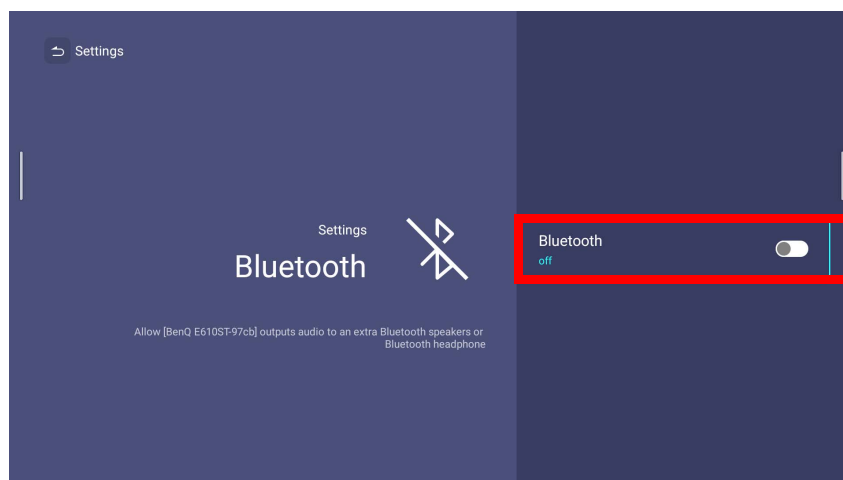

Apps

To access all the apps installed on the projector, select the all apps button in the tool bar section of **BenQ Launcher**.

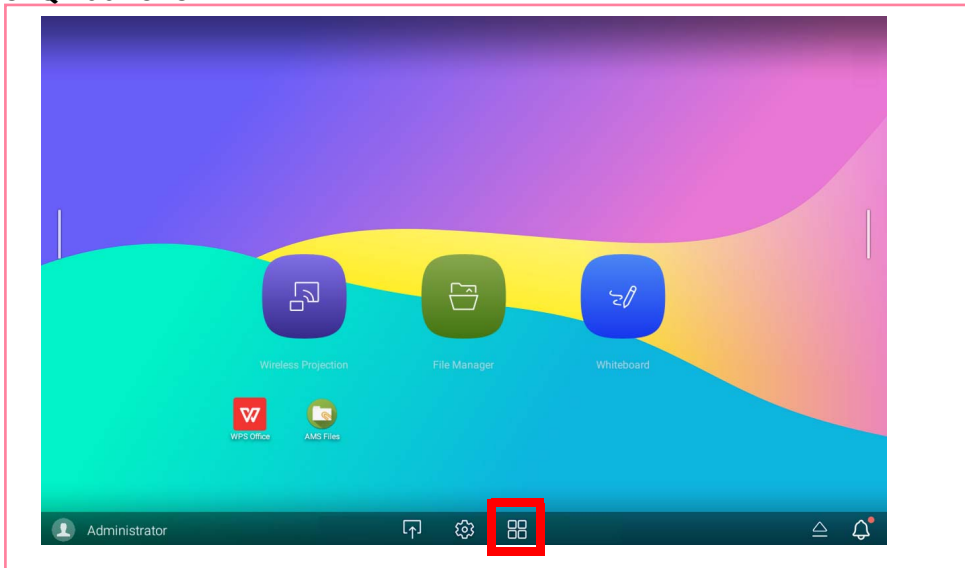

Pre-installed apps vary by models. All available apps are as follows.




Certain apps require the use of a mouse and/or keyboard to operate. It is suggested that you connect a mouse and/or keyboard to the projector before opening any apps from the **Shortcut** section.

- [InstaShare 2](#)
- [TeamViewer Meeting](#)
- [EZWrite 6](#)
- [AMS Files](#)
- [BenQ App Store](#)
- [BenQ User Dashboard](#)
- [Broadcast Settings](#)
- [DMS Client](#)
- [Notification](#)
- [WPS Office](#)

AMS Files

The **AMS Files** app allows you to browse, open, and manage files stored on cloud-based storage drives linked to the corresponding AMS login account, the projector's internal storage, or in connected storage devices (e.g. a USB flash drive).

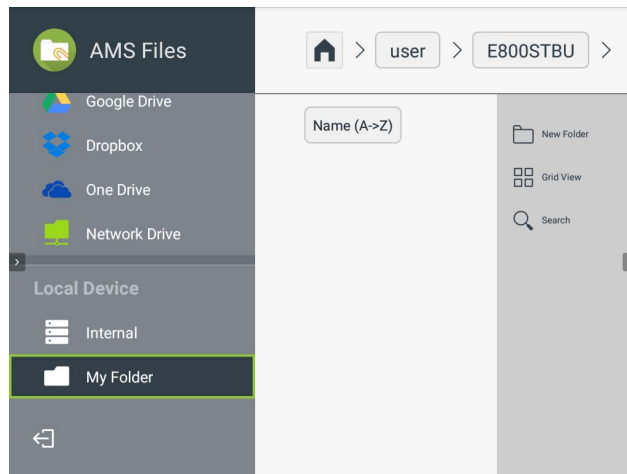

The main menu classifies storage types into three categories:

Cloud Service - Allows you to access files stored on cloud-based storage services (e.g. Google Drive, Dropbox, One Drive, etc.) linked to your AMS login account.



- To access cloud-based files your projector must be connected to a wireless network with Internet access and logged in using an AMS account which has a cloud service linked to it. See [Linking a cloud storage drive to your AMS login on page 33](#) for more details.
- A link icon  next to **Google Drive**, **Dropbox**, or **One Drive** in the **AMS Files** menu indicates that the corresponding cloud storage account has been bound to the current AMS login account.

Network Drive - Allows you to access files stored on a network-based storage space (e.g. a server). In order to link to the network drive you must first obtain information for the server including domain name, IP address, and login information and enter it into the **Network Drive** menu.

Local Device - Allows you to access files stored on the projector's internal drive (either generally or in each AMS login account's personal folder), or on external flash drives connected to the projector's **USB-1**, **USB-2**, or **USB-3**. See [Connecting a flash drive on page 26](#) for details on accessing files on external flash drives.


Linking a cloud storage drive to your AMS login

By linking a cloud-based storage drive to your AMS login, you will be able use **USB** to access any files stored on the drive from any device.


To link a cloud storage drive to your AMS login:

1. Log into the AMS website using the account you want to link a cloud drive to.

2. Click on **Personal Settings** in the sidebar.

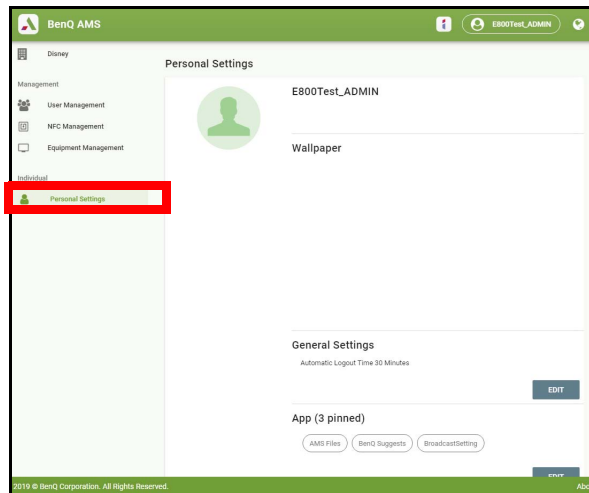

3. Scroll down to the **Cloud Storage** section and click the **LINK** button next to the cloud storage service you want to link to your AMS account.

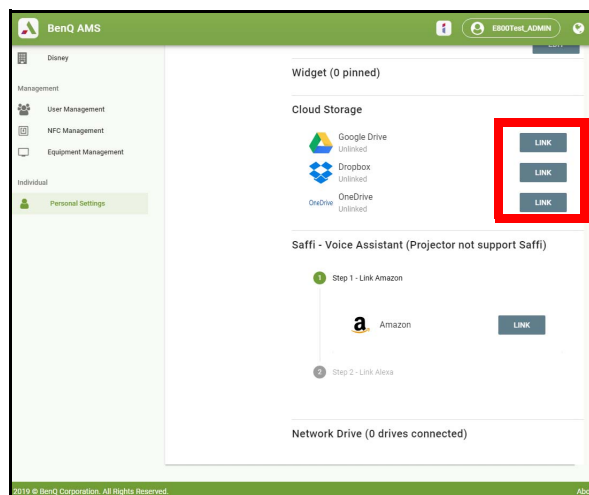


4. Enter the sign-in information for your cloud storage account in the sign-in page that opens. Once a cloud storage drive is linked, you can view any file stored on that drive via the **USB** app after logging into your AMS account on the projector.

For a full description of the features of the AMS service, including instructions on how to setup and manage accounts, refer to the **AMS User Manual** which you can download at the following URL: <https://www.benq.com/en-us/business/index.html> > your Projector Model > **Downloads** > **User Manual**.


TeamViewer Meeting

Select **Video Conference** from the **BenQ Launcher** home screen for quick access of the app. **TeamViewer Meeting** gives you access to instant or scheduled group meetings with any other TeamViewer Meeting users.

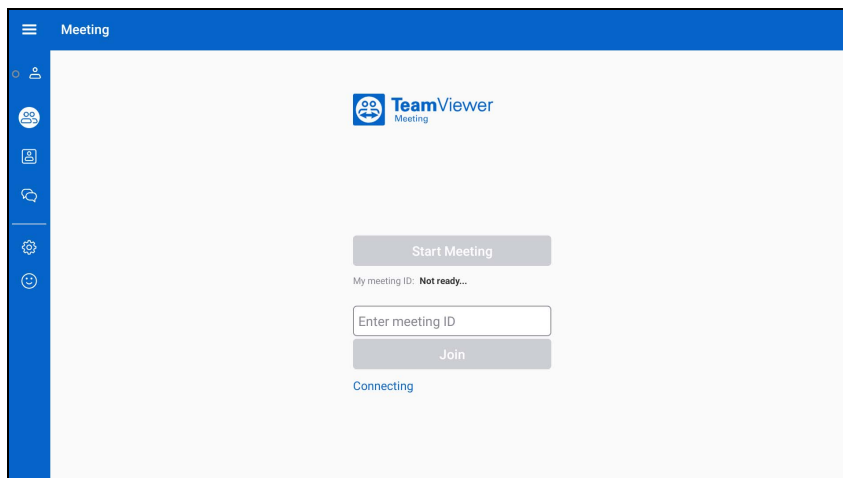

BenQ App Store

BenQ App Store allows you to search for, download, and update apps for your projector.

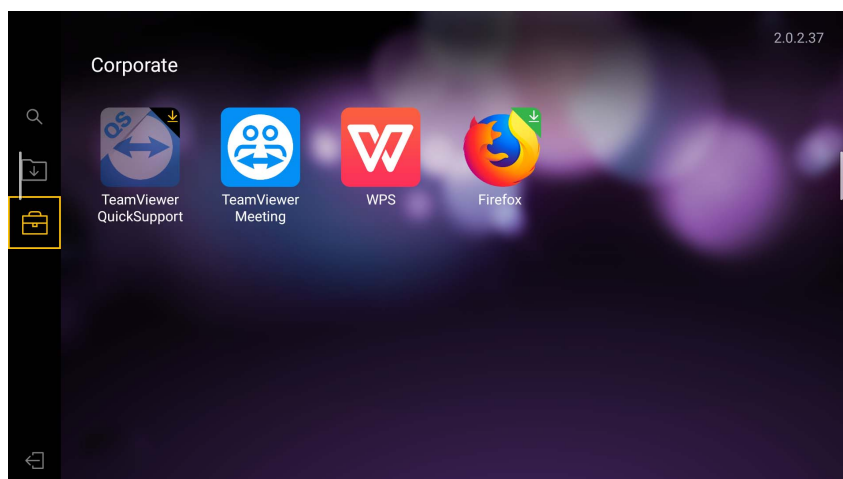

Select one of the icons on the left panel to perform the following functions:


Icon	Description
	Select to use the search bar to search for an app by name.
	• Select to view a list of apps that feature updates. • Select UPDATE ALL to update all apps listed in the menu. • Select an individual app and press OK to update that app only.
	• Select to browse suggested apps based on category. • Select an app from the category and press OK to view a basic description of the app and access the download link



Certain apps require the use of a mouse and/or keyboard to operate. It is suggested that you connect a mouse and/or keyboard to the projector before downloading any apps from **BenQ App Store**.

BenQ User Dashboard

BenQ User Dashboard allows you to view various statistics and details related to the status of the projector.

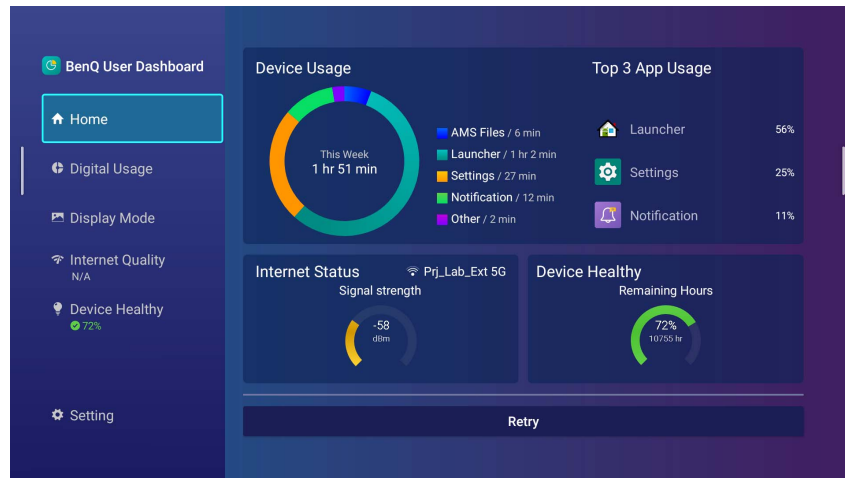


Click on a category in the left panel to view a detailed breakdown:

Home	Displays an overview of the categories below.
Digital Usage	Displays the usage time for all the apps installed on the projector.
Internet Quality	Displays statistics for the performance of the projector's Internet connection, including Signal strength and Internet speed .
Device Health	Displays usage time for the projector's light source.
Settings	Allows you to check for updates to the BenQ User Dashboard app and enable/disable notifications for it.

Broadcast Settings

The projector uses BenQ's DMS app to broadcast announcements or messages. **Broadcast Settings** is an app that helps you get started with the **DMS** app. Use the various QR codes shown in the **Broadcast Settings** screen to either download the **DMS** app or link the projector to a **DMS** account.

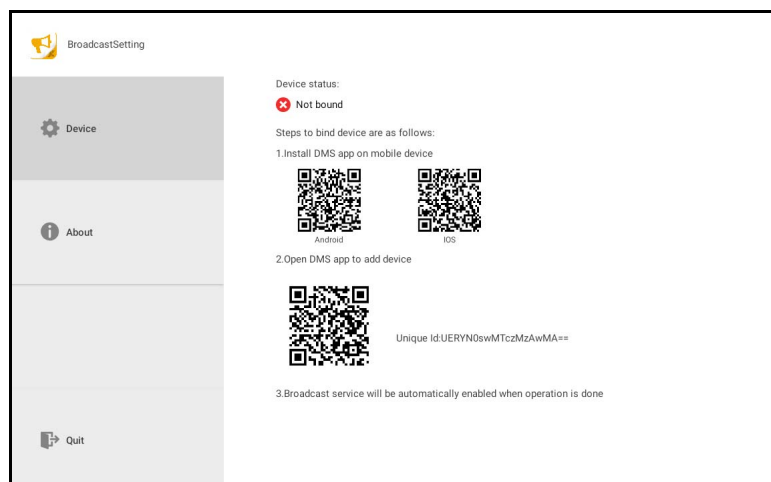


For a full description of the features of the **Broadcast Settings** app, refer to the user manuals which you can download at the following URL:

<https://www.benq.com/en-us/education/software/x-sign-broadcast.html>

DMS Client

DMS Client allows you to pair the projector to a **DMS** account for remote management via the **DMS Cloud** app.

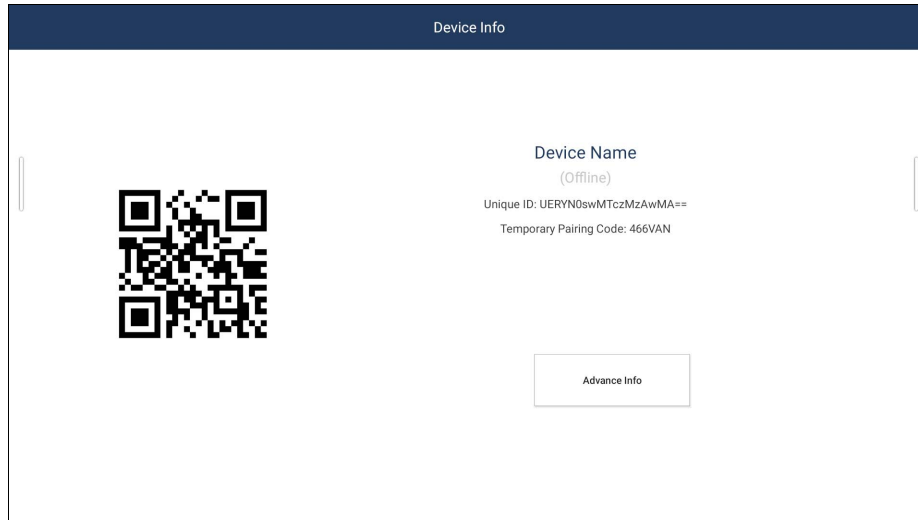

You can use the **Unique ID** displayed on the **DMS Client** screen to pair the projector to a **DMS** account while users with the **DMS Cloud** app installed on their mobile device can also scan the QR code to quickly pair the projector to their account.

For a full description of the features of the **DMS Local** or **DMS Cloud** apps, refer to their respective user manuals which you can download at the following URL:

<https://www.benq.com/en-us/business/projector/display-management.html>

InstaShare 2

The **InstaShare 2** app is the app that allows users with mobile devices or PCs to wirelessly project on the projector.



For more information on how to wirelessly project via **InstaShare 2**, see [Wireless Projection via the InstaShare 2 app on page 22](#) or refer to the **InstaShare 2** user manual which you can download at the following URL:

<https://www.benq.com/en-us/business/projector/instashare-2.html>.


EZWrite 6



- Availability varies by model.
- EZWrite 6 for projector does not support the following feature:
 - Importing Microsoft Office files
 - Gesture control



The **EZWrite 6** app is the app that turns your screen into a digital canvas.

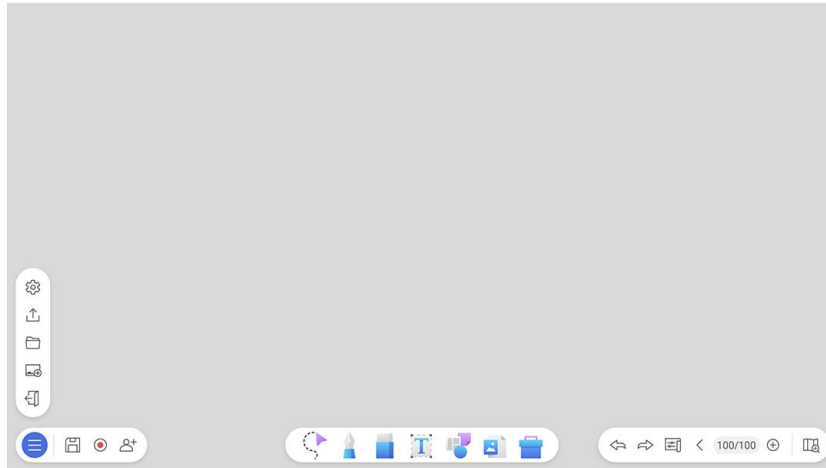

For more information on how to interact via **EZWrite 6**, refer to the user manual which you can download at the following URL:

<https://www.benq.com/en-us/education/software/ezwrite-6-whiteboard.html>

Floating Tool



- Availability varies by model.

The Floating Tool gives you access to different annotation and screen recording tools. You can select  on the screen to expand the Floating Tool. If you can't find the icon from the screen, see [Enabling the always-on Floating Tool on page 38](#) for details.




Enabling the always-on Floating Tool

1. Open EZWrite 6.
2. On the menu bar, tap  > . The EZWrite settings menu appears.
3. Enable **Always-on Floating Tool**.

Icon	Name	Description
	Minimize/Expand	Minimize or expand the Floating Tool.
	Close	Close the Floating Tool.
	Pen	Enable the Pen tool, which allows you to write or draw over any content displayed on screen.
	Highlighter	Enable the highlighter tool, which allows you to highlight any content displayed on screen.
	Laser pointer	Enable the laser pointer.
	Eraser	Erase annotations. Use the finger or strikethrough eraser, or clear all on-screen annotations.
	Toolbox	Open the toolbox to access the calculator, timer, stopwatch, scoreboard, random draw, spotlight, unit converter, and spinner.
	Screen recording	Record the screen including audio and save it as video.
	Screenshot	Select between taking a regular screenshot, which you can save or send to EZWrite, or freezing the screen.
	Touch	Hide all the annotations and operate the screen.

Notification

The **Notification** app allows you to view full versions of all the recent push notifications for the apps installed on the projector.

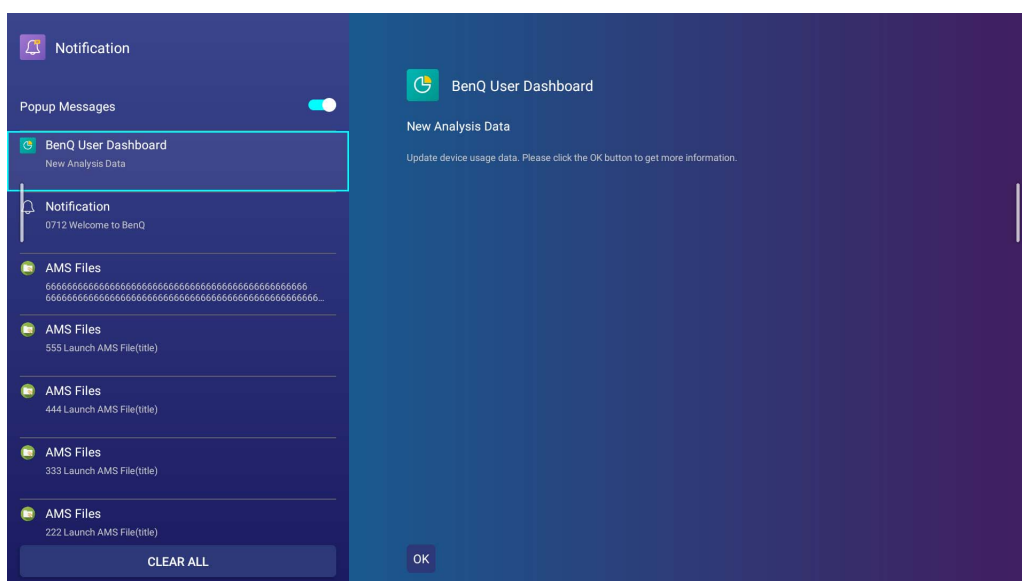


Once the **Notification** app is open you can perform the following actions:

- Select an app in the side menu to view the full notification.
- Select **Popup Message** and press **OK** to turn off push notifications at the notification section of the **BenQ Launcher** home screen.
- Select **CLEAR ALL** to remove all the notifications in the menu.

WPS Office

The **WPS Office** app allows you to open document files including PDFs as well as Microsoft Word, PowerPoint and Excel documents.

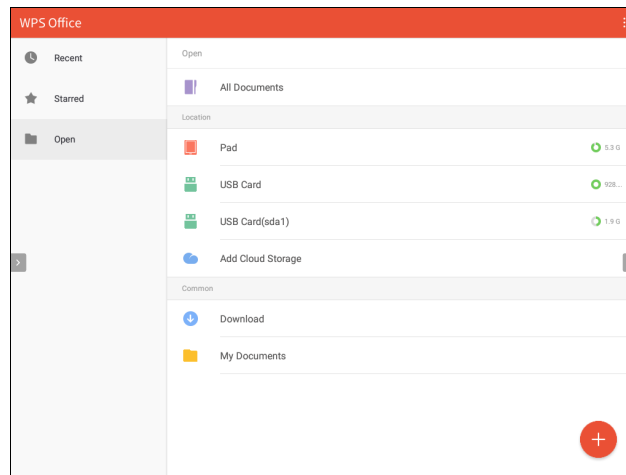


To edit a file with **WPS Office**:

1. Open the file using the steps described in [Connecting a flash drive on page 26](#).
2. Select **Open** () on the left panel to browse and open a file located in either the projector's internal memory or an external storage device.

Select the function menu on the top panel to access the file format's various functions.



The description below is for a PowerPoint file, the function menus for other file formats will vary.

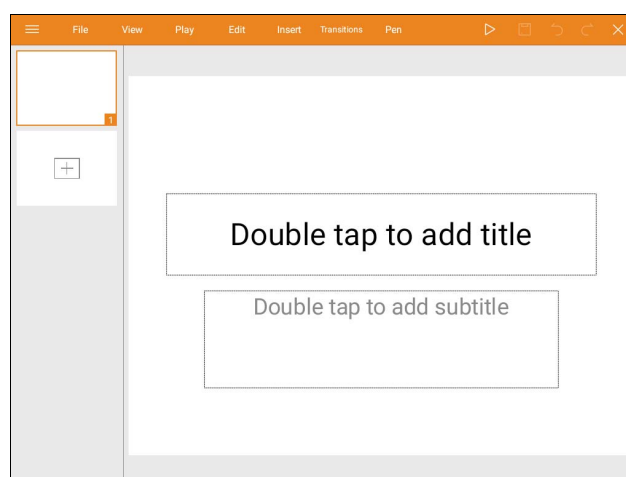

Function	Description
File	Select to open, save, share, print, and manage your presentations.
View	Select to change or edit the presentation views.


Function	Description
Play	Select to start or set up a slide show.
Edit	Select to edit the content or format of the slides.
Insert	Select to insert tables, pictures, charts, comments, video, or audio.
Transitions	Select to apply or adjust the timing of a transition.
Pen	Select to write, draw, paint or sketch to the slides.
Play (▶)	Select to start a slide show.
Save As (📁)	Select to save the presentation file on either the display's internal memory, an external storage device, or cloud storage.
Undo (↶)	Select to undo an action.
Redo (↷)	Select to redo the last action.
Close (✕)	Select to close the presentation file.
Back (←)	Select to return to the previous page.
Next (→)	Select to go to the next page.
Exit (⏏)	Select to exit WPS Office.

Navigating the Settings Menu


About the **Settings** menu

To let you make various adjustments or settings on the projector, its wireless connections, and the projected image, **BenQ Launcher** provides a **Settings** menu. Under the **Settings** menu are sub-menus for various settings.

To access the **Settings** menu, in the **BenQ Launcher** home screen select the **Settings** button.

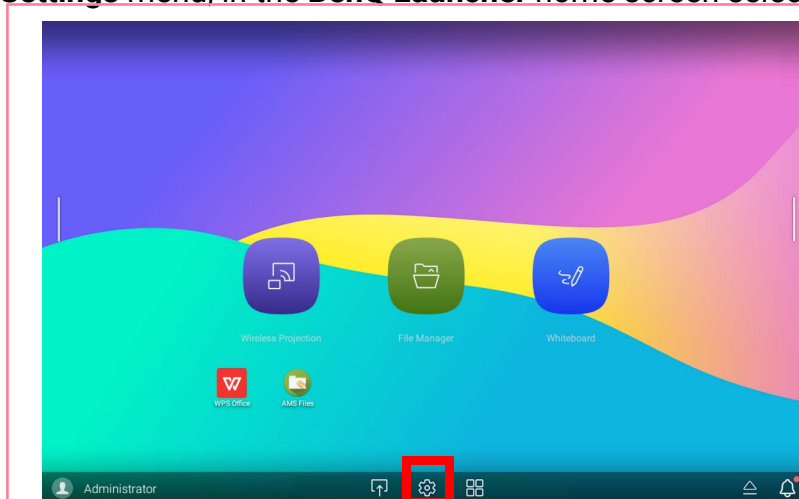

Under the **Settings** menu there are three subcategories: **General**, **Display**, and **Preference**.

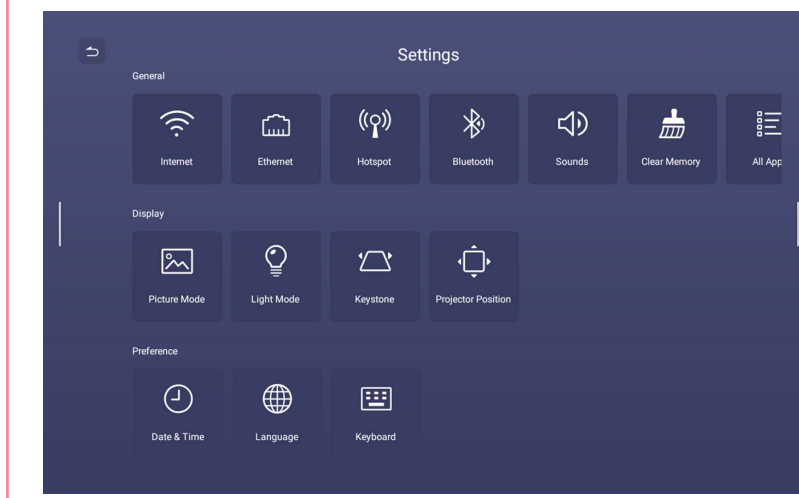

The sub-menus in the **Display** category feature only a partial number of items that adjust your projector's display settings, for a full menu of display related settings enter the OSD settings menu while under the **HDMI** or **PC** input source. See [Display settings on page 50](#) for a listing of the full **Display** settings.

Using the **Settings** menu

To access the various **Settings** menus:

- Use the left and right arrow keys (◀/▶) to move through the main **Settings** menus.
- Use **OK** to select the desired menu.
- When configuring items within a menu:
 - Use the up and down arrow keys (▲/▼) to move to the item you want to configure.
 - Use left and right arrow keys (◀/▶) to toggle through the available options.
 - Use **OK** to enable/disable options or select sub-menu options.
- Use the back button ↶ to return to the main **Settings** menu.
- Use the home button 🏠 to return to the **BenQ Launcher** home screen.




When using a USB mouse to navigate the **Settings** menu you can also click the back icon  on the top left corner of each menu to return to the previous page.




General

Internet

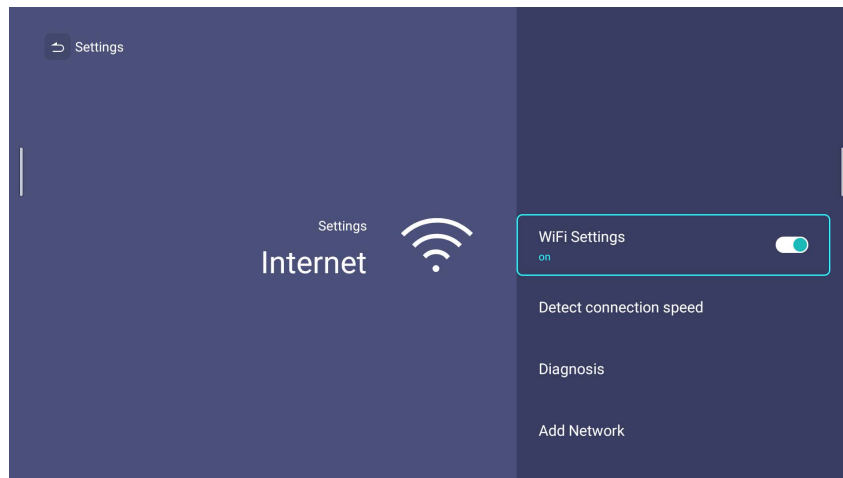


WiFi Settings 	Enables a wireless network connection for the projector. See Connecting the projector to a wireless network on page 21 for details. This function is only available when Hotspot is disabled.
Detect connection speed 	Tests the speed of the projector's Internet connection. This function is only available when WiFi Settings is enabled.
Diagnosis 	Diagnoses the status of the projector's Internet connection. This function is only available when WiFi Settings is enabled.
Add Network 	Allows you to add a specific network that may be hidden or undetected in the Available Networks. Once selected you will be prompted to enter the SSID and security settings for the network. This function is only available when WiFi Settings is enabled.
Available Networks 	Lists the available wireless access points which the projector can connect to. See Connecting the projector to a wireless network on page 21 for details. This function is only available when WiFi Settings is enabled.

Ethernet

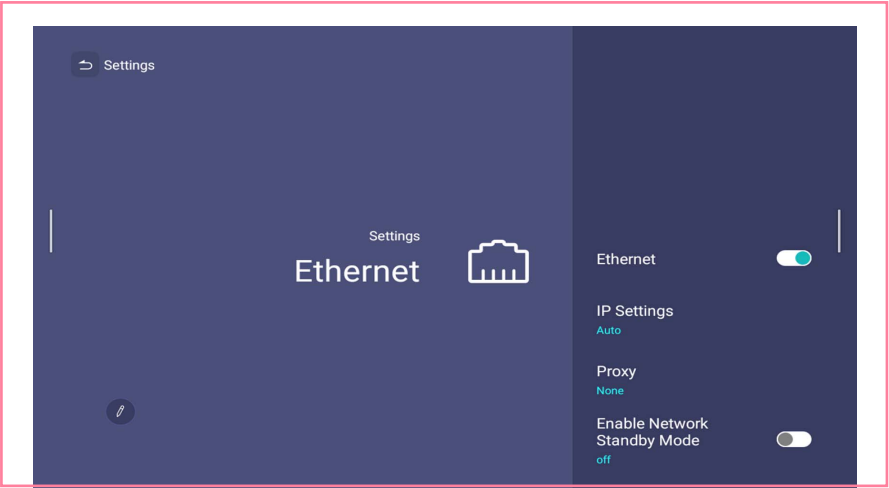

Ethernet	Enables Ethernet connection for the projector. See Connecting the projector via Ethernet on page 19 for details.
IP settings	Sets the IP setting as Auto or Static . Go to IP settings > Advanced Options set the IP address.
Proxy	Sets the Proxy as Auto or Manual . Under Proxy > Advanced Options , you can manually set the proxy hostname and proxy port.
Enable Network Standby Mode	Allows admins to access the projector remotely through BenQ DMS. See Accessing the projector during Enable Network Standby Mode mode on page 19 for more information.  • The function is available when the projector is connected via Ethernet.


Hotspot

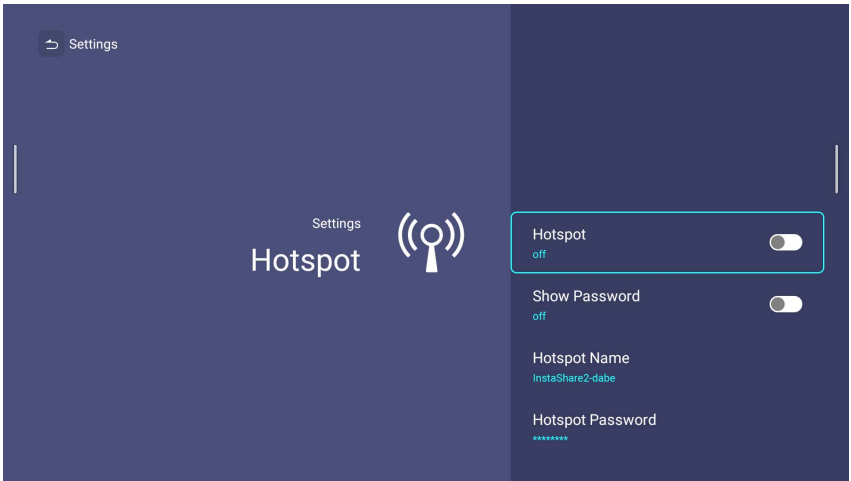

Hotspot	Enables wireless hotspot for the projector, allowing other devices to connect to the projector directly. See Wireless hotspot on page 24 for details.
---------	---

Show Password	Makes the password for the hotspot connection listed in the Hotspot Password visible.  When Show Password is disabled, the Hotspot Password will be listed in the menu as a series of asterisks.
Hotspot Name	Sets the name for the projector's wireless hotspot, which appears in the wireless network list for devices looking to connect directly to the projector.  The default name for the projector's wireless hotspot is "BenQ [Model Name]-xxxx". The final four digits are the last four digits of its MAC Address.
Hotspot Password	Sets the password for the projector's wireless hotspot.  The password needs to be at least 8 characters.
Internet Quality	Sets the frequency for the projector's wireless hotspot signal. Available options include Higher (5G) and Normal (2.4G).


Bluetooth

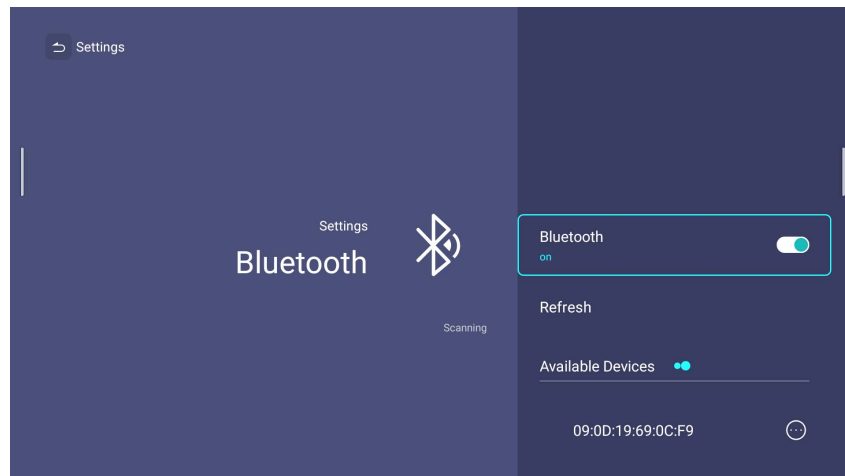

Bluetooth	Enables Bluetooth for the projector, allowing the projector to output its audio to a Bluetooth speaker or headphones.
Refresh	Refreshes the list of devices.  This function is only available when Bluetooth is enabled.
My Devices	Lists of previously paired Bluetooth devices.  This function is only accessible when Bluetooth is enabled.


Available Devices	Lists the available Bluetooth devices which the projector can pair and connect to.  This function is only available when Bluetooth is enabled.
---------------------------------	--

Sounds

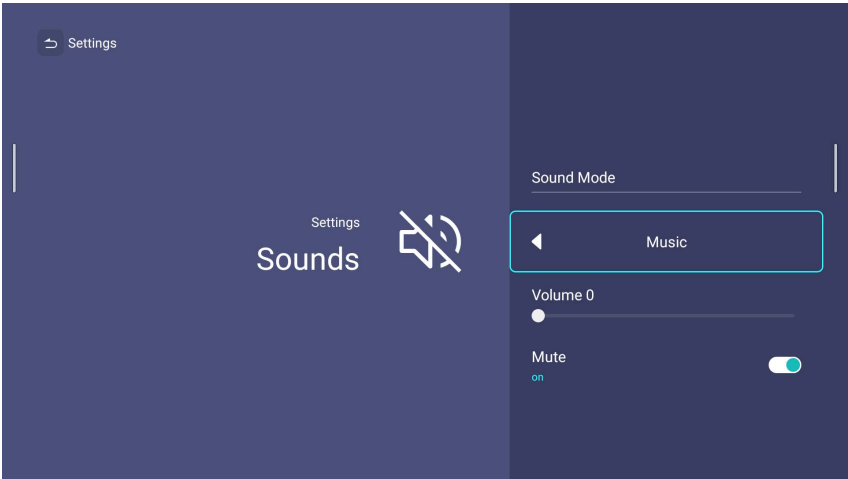


Sound Mode (selected models only)	Allows you to choose from different sound profiles based on the type of content being broadcast. The available options are Cinema, Music, and Vocal.
Volume	Adjusts the sound level for the projector.
Mute	Disables/Enables audio for the projector.

Clear Memory

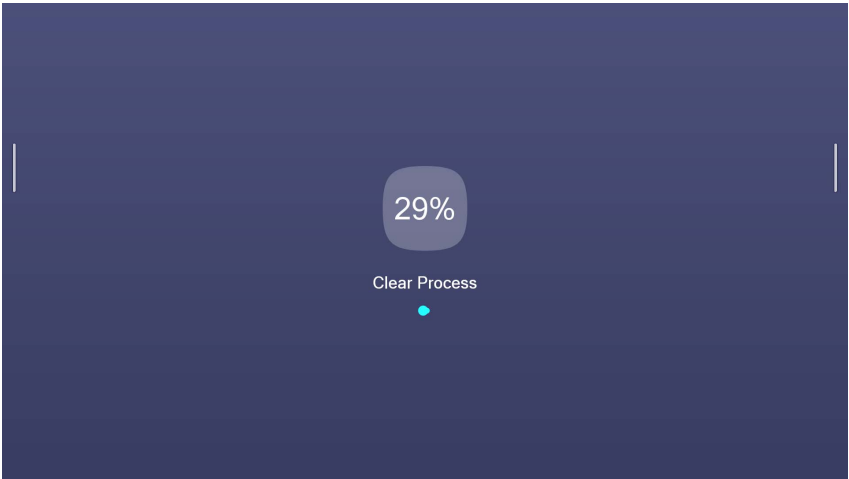

Clears out the memory of unnecessary files and boosts available RAM.

All Apps

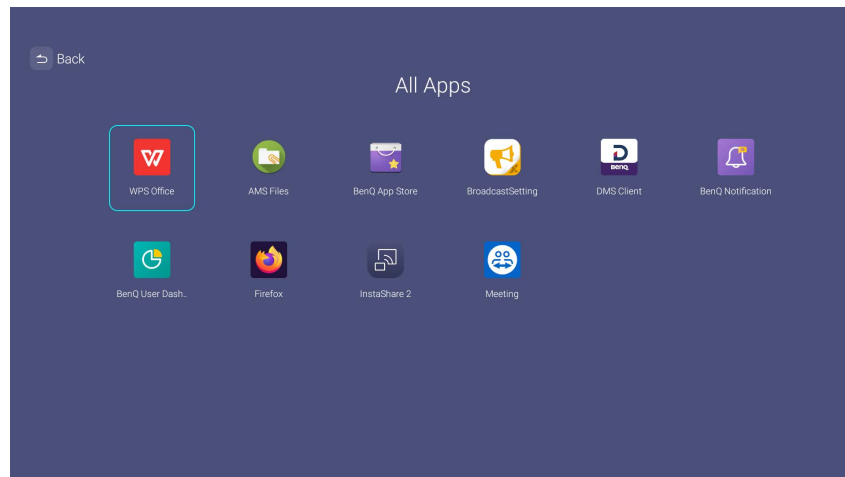

Select the **All Apps** menu to access all the apps that have been installed on the projector. Select an app and press **OK** to open the app edit menu. The app edit menu features the following options:

Open	Launches the respective app.
Permission Settings	Opens the respective app's settings menu where you can configure the hardware access permissions for the app.
Uninstall	Uninstalls the respective app.




When **AMS Service** is enabled, **Guest** AMS accounts will not be allowed to change permission settings or uninstall apps in this menu.

About



When **AMS Service** is enabled, this menu will not be accessible by **Guest** AMS accounts.

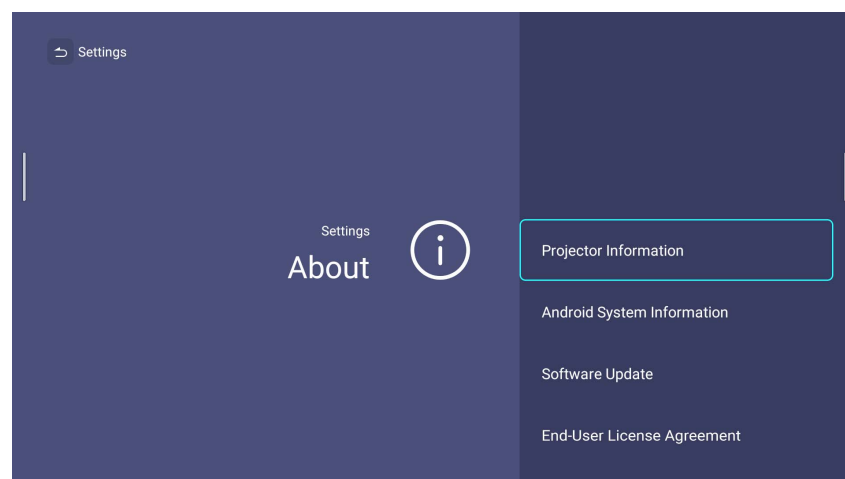


Projector Information	Displays information on the current status of the projector including the current Native Resolution , Picture Mode , Light Mode , Light Usage Time , Firmware Version , and Service Code .
Android System Information	Displays information on the Android operating system including Android Version , RAM , System storage , Internal storage , and MAC address .

Software Update	Allows you to update the Android operating system via an Over-The-Air (OTA) update or a USB flash drive. For more information see Checking for system update on page 11 .
End-User License Agreement	Allows you to view and confirm EULA (End-User License Agreement).
Android System Reset	Returns all settings to the factory preset values.


Display settings

Picture Mode

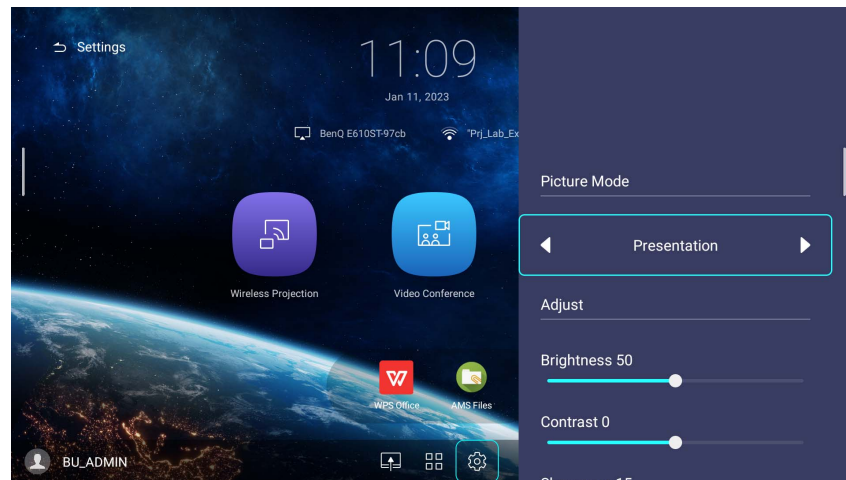

The options available for the **Picture Mode** settings menu are the same as the options available in the OSD menu.

Light Mode

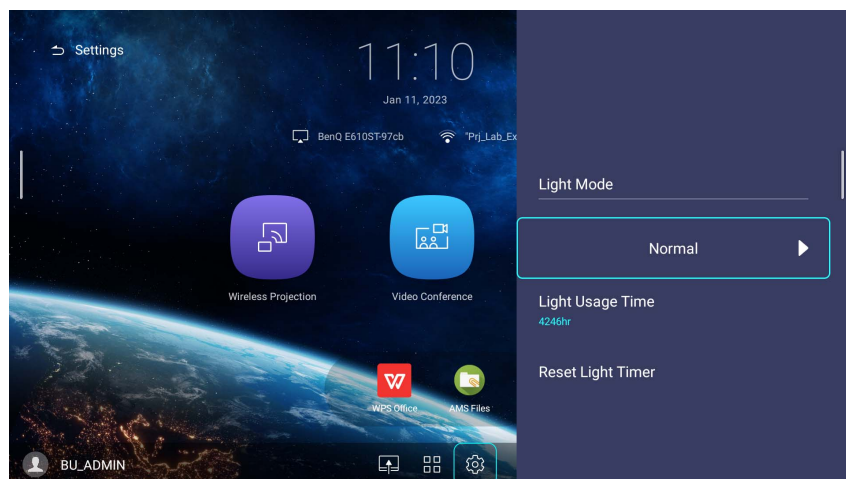


The options available for the **Light Mode** settings menu are the same as the options available in the OSD menu.

Keystone




Function name varies by model.

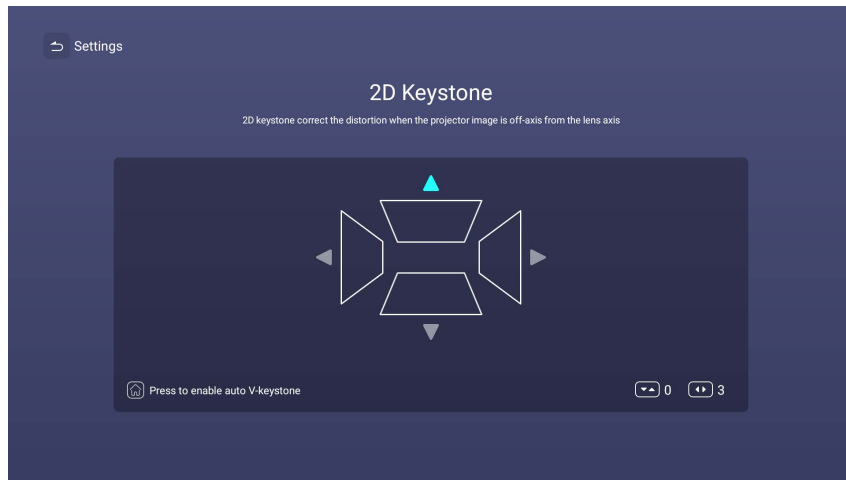

The options available for the **Keystone** settings menu are the same as the options available in the OSD menu.

Projector Position

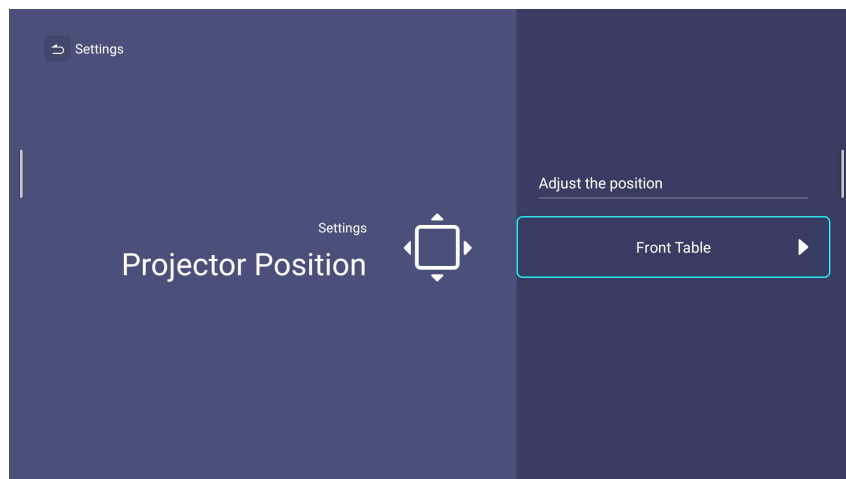


The options available for the **Projector Position** settings menu are the same as the options available in the OSD menu.

Preference settings

Date & Time



- When **AMS Service** is enabled, this menu will not be accessible by **Guest** AMS accounts.
- The projector's date and time information is linked to/synched with the Internet, and cannot be manually set. In instances when the projector does not have access to the Internet, the date and/or time information displayed may be incorrect.

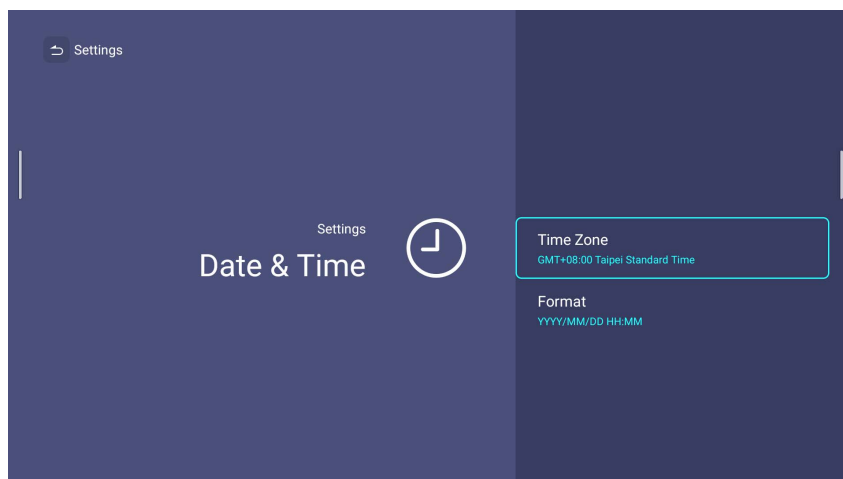


Time Zone	Sets the time zone for the projector  The Time Zone setting must be set to the correct region for the projector in order for the X-Sign Broadcast app to work correctly.
Format	Sets the date and time format as either HH:MM or YYYY/MM/DD HH:MM .

Language




- When **AMS Service** is enabled, this menu will not be accessible by **Guest** AMS accounts.

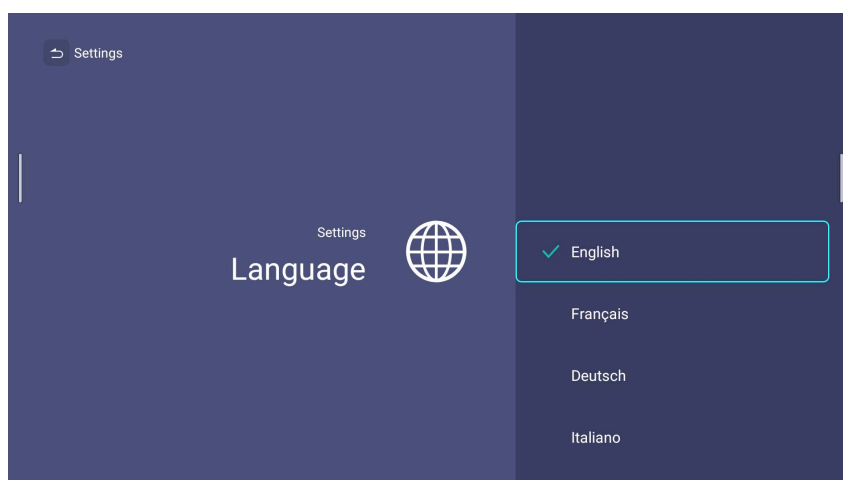

Sets the language for **BenQ Launcher**.

Keyboard

 When **AMS Service** is enabled, this menu will not be accessible by **Guest** AMS accounts.

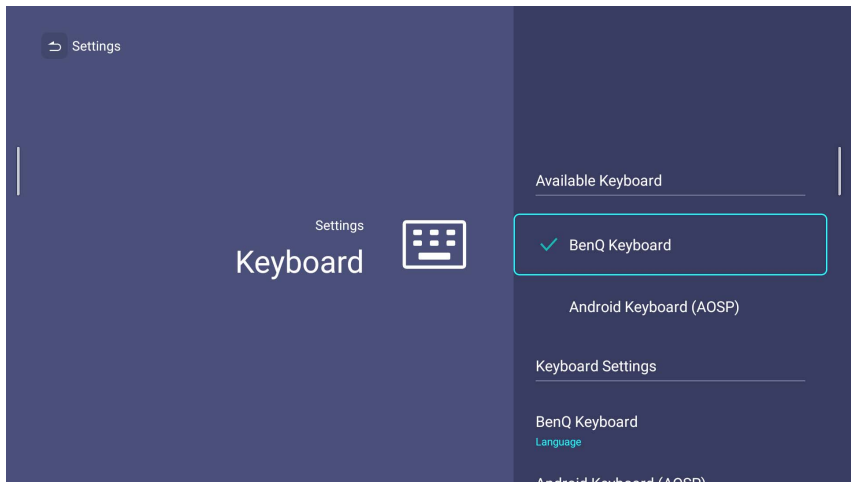

Available Keyboard	Allows you to select from various keyboard interfaces.
Keyboard Settings	Sets the projector’s virtual keyboard for inputting text. The available options are BenQ Keyboard and Android keyboard.  To input Chinese characters, set the language preference to traditional Chinese or simplified Chinese, and set the keyboard to BenQ Keyboard.