



LCD Monitor User Manual

RD280UG (RD280UG-J)

Copyright

Copyright © 2025 by BenQ Corporation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of BenQ Corporation.

Disclaimer

BenQ Corporation makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Further, BenQ Corporation reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation of BenQ Corporation to notify any person of such revision or changes.

BenQ flicker-free technology maintains a stable backlight with a DC dimmer that eliminates the primary cause of monitor flicker, making it easier on the eyes. The performance of flicker-free may be affected by external factors such as poor cable quality, unstable power supply, signal interference, or poor grounding, and not limited to the above mentioned external factors. (Applicable for flicker-free models only.)

Product support

This document aims to provide the most updated and accurate information to customers, and thus all contents may be modified from time to time without prior notice. Please visit the website for the latest version of this document and other product information. Available files vary by model.

1. Make sure your computer is connected to the Internet.
2. Visit the local website from Support.BenQ.com. The website layout and content may vary by region/country.
 - User manual and related document
 - Drivers and applications
 - (EU only) Dismantled information: Available on the user manual download page. This document is provided based on Regulation (EU) 2019/2021 to repair or recycle your product. Always contact the local customer service for servicing within the warranty period. If you wish to repair an out-of-warranty product, you are recommended to go to a qualified service personnel and obtain repair parts from BenQ to ensure compatibility. Do not disassemble the product unless you are aware of the consequences. If you cannot find the dismantled information on your product, contact the local customer service for assistance.

Firmware upgrade

You are recommended to upgrade the product to the latest firmware version (if available) and refer to the most up-to-date user manual to make best use of the product.

To upgrade your monitor, download and install the **Display QuickKit** software from the BenQ website.

- Support.BenQ.com > model name > **Software & Driver** > **Display QuickKit** (available only when your monitor is compatible)
- Support.BenQ.com > **Display QuickKit** (availability may vary by region)

The software utility checks the compatibility of your monitor automatically once launched. Refer to the user manual of the software utility for instructions.

If your monitor is not compatible with **Display QuickKit**, and you wonder if there is an updated firmware version available, please contact BenQ customer service.

Advanced software

Apart from the built-in technologies and features available on this product, you are provided with more software applications to enhance and extend the product functionality. Download the software and its user guide as instructed from the BenQ website.

• Display Pilot 2


Display Pilot 2 is a software utility that allows for quick accurate tuning of the display with the ability to easily save and use monitor configurations that are best suited for you. All adjustments are controlled via software to eliminate the need to use the monitor on-screen displays (OSD).

Safety precautions

Power safety



Please follow these safety instructions for best performance, and long life for your monitor.

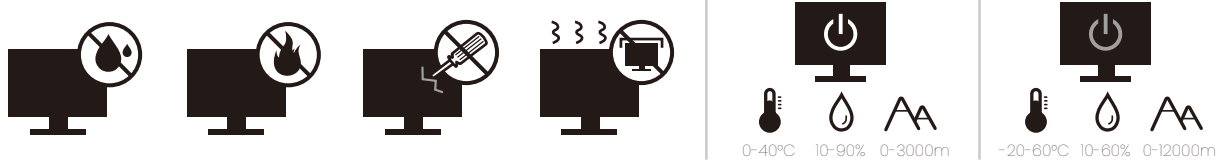

- The AC plug isolates this equipment from the AC supply.
- The power supply cord serves as a power disconnect device for pluggable equipment. The socket outlet should be installed near the equipment and be easily accessible.
- This product should be operated from the type of power indicated on the marked label. If you are not sure of the type of power available, consult your dealer or local power company.
- The Class I pluggable equipment Type A must be connected to protective earth.
- An approved power cord greater or equal to H03VV-F or H05VV-F, 2G or 3G, 0.75mm² must be used.
- Use only the power cord provided by BenQ. Never use a power cord that appears to be damaged or frayed.
- To avoid possible damage to the monitor, do not use it in a region where power supply is unstable.
- Ensure that the power cord is connected to a grounded power outlet before turning on the monitor.
- To avoid possible danger, observe the total electric load when using the monitor with a (multi-outlet) extension cord.
- Always turn off the monitor before unplugging the power cord.

For Germany only:

- (If the weight of the product is less than or equal to 3 kg) An approved power cord greater or equal to H03VV-F, 3G, 0.75mm² must be used.
- (If the weight of the product is more than 3 kg) An approved power cord greater or equal to H05VV-F or H05RR-F, 3G, 0.75mm² must be used.
- (If a remote control is provided) RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

For models with adapter:

- Use only the power adapter supplied with your LCD Monitor. Use of another type of power adapter will result in malfunction and/or danger.
- Allow adequate ventilation around the adapter when using it to operate the device or charge the battery. Do not cover the power adapter with paper or other objects that will reduce cooling. Do not use the power adapter while it is inside a carrying case.
- Connect the power adapter to a proper power source.
- Do not attempt to service the power adapter. There are no service parts inside. Replace the unit if it is damaged or exposed to excess moisture.

Installation

- Do not use your monitor under any of the following environmental conditions:
 - Extremely high or low temperature, or in direct sunlight
 - Dusty places
 - Highly humid, exposed to rain, or close to water
 - Exposed to vibrations or impacts in places such as cars, buses, trains, and other rail vehicles
 - Near heating appliances such as radiators, heaters, fuel stoves, and other heat-generating items (including audio amplifiers)
 - An enclosed place (such as a closet or bookcase) without appropriate ventilation
 - An uneven or sloping surface
 - Exposed to chemical substances or smoke
- Carry the monitor carefully.
- Do not place heavy loads on the monitor to avoid possible personal injury or damage to the monitor.
- Ensure that children do not hang or climb onto the monitor.
- Keep all packing bags out of reach of children.

Operation

- To protect your eyesight, please refer to the user manual to set the optimal screen resolution and the viewing distance.
- To reduce eye fatigue, take a break on a regular basis while using the monitor.
- Avoid taking either one of the following actions for a long time. Otherwise, burn marks may occur.
 - Play images that cannot occupy the screen entirely.
 - Place a still image on the screen.
- To avoid possible damage to the monitor, do not touch the monitor panel by finger tip, pen, or any other sharp objects.
- Excessively frequent plug and unplug of video connectors may cause damage to the monitor.
- This monitor is designed mainly for personal use. If you want to use the monitor in a public place or a harsh environment, contact your nearest BenQ service center for assistance.
- To avoid possible electric shock, do not disassemble or repair the monitor.
- If a bad smell or an abnormal sound appears to come from the monitor, contact your nearest BenQ service center for assistance immediately.

Caution

- The distance between you and the monitor should be 2.5 to 3 times the diagonal width of the screen.
- Looking at the screen for an extended period of time causes eye fatigue and may deteriorate your eyesight. Rest your eyes for 5 ~ 10 minutes for every 1 hour of product use.
- Reduce your eye strain by focusing on objects far away.
- Frequent blinking and eye exercise help keep your eyes from drying out.

Safety notice for remote control (applicable if a remote control is provided)

- Do not put the remote control in the direct heat, humidity, and avoid fire.
- Do not drop the remote control.
- Do not expose the remote control to water or moisture. Failure to do so could result in malfunction.
- Confirm there is no object between the remote control and the remote sensor of the product.
- When the remote control will not be used for an extended period, remove the batteries.

Battery safety notice (applicable if a remote control is provided)

The use of the wrong type of batteries may cause chemical leaks or explosion. Please note the following:

- Always ensure that the batteries are inserted with the positive and negative terminals in the correct direction as shown in the battery compartment.
- Different types of batteries have different characteristics. Do not mix different types.
- Do not mix old and new batteries. Mixing old and new batteries will shorten battery life or cause chemical leaks from the old batteries.
- When batteries fail to function, replace them immediately.
- Chemicals which leak from batteries may cause skin irritation. If any chemical matter seeps out of the batteries, wipe it up immediately using a dry cloth, and replace the batteries as soon as possible.
- Due to varying storage conditions, the battery life for the batteries included with your product may be shortened. Replace them within 3 months or as soon as you can after initial use.
- There may be local restrictions on the disposal or recycling of batteries. Consult your local regulations or waste disposal provider.

If the supplied remote control contains a coin / button cell battery, pay attention to the following notice as well.


- Do not ingest battery. Chemical Burn Hazard.
- The remote control supplied with this product contains a coin / button cell battery. If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Care and cleaning

- Do not place the monitor face down on the floor or a desk surface directly. Otherwise, scratches on the panel surface may occur.
- The equipment is to be secured to the building structure before operation.
- (For models that support wall or ceiling mounting)
 - Install your monitor and monitor mounting kit on a wall with flat surface.

- Ensure that the wall material and the standard wall mount bracket (purchased separately) are stable enough to support the weight of the monitor.
- Turn off the monitor and the power before disconnecting the cables from the LCD monitor.
- Always unplug the product from the power outlet before cleaning. Clean the LCD monitor surface with a lint-free, non-abrasive cloth. Avoid using any liquid, aerosol or glass cleaners.
- Slots and openings on the back or top of the cabinet are for ventilation. They must not be blocked or covered. Your monitor should never be placed near or over a radiator or heat sources, or in a built-in installation unless proper ventilation is provided.
- Do not place heavy loads on the monitor to avoid possible personal injury or damage to the monitor.
- Consider keeping the box and packaging in storage for use in the future when you may need to transport the monitor.
- Refer to the product label for information on model name, power rating, manufacturing date, barcode, serial number, and identification markings. The locations of labels vary by model. See the illustration below for where the labels can be.

Possible label location:

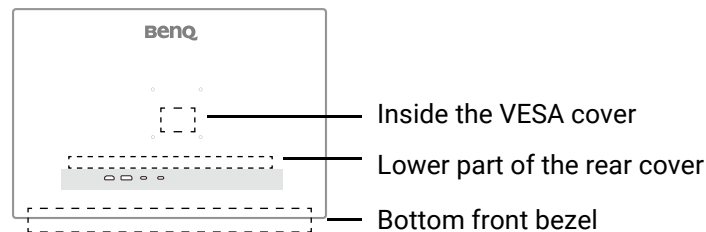

Eye care and flicker-free

- The Low Blue Light/Low Blue Light Plus technology helps decrease the blue light emitted from the display to reduce the risk of blue light exposure to your eyes.
- Use of the "Low Blue Light/Low Blue Light Plus" mode helps decrease the blue light emitted from the display to reduce the risk of blue light exposure to your eyes.
- To enable "Low Blue Light/Low Blue Light Plus" mode, go to Menu > Eye care > Low Blue Light/Low Blue Light Plus. Adjust the Low Blue Light value.
 - Remarks: Low Blue Light Value Level 5 is in compliance with TÜV Rheinland Low Blue Light (Software Solution). (Under User mode)
- Default mode "Coding-Dark Theme" mode is in compliance with TÜV Rheinland Low Blue Light (Hardware Solution).
- Looking at the screen for an extended period of time causes eye fatigue and may deteriorate your eyesight. Rest your eyes for 5 ~ 10 minutes for every 1 hour of product use.
- Reduce your eye strain by focusing on objects far away.
- Frequent blinking and eye exercise help keep your eyes from drying out.
- You should position the monitor and angle the screen to minimize unwanted reflections from other light sources.
- Use of the product for an extended period of time may cause neck tension. You should exercise and stretch properly to reduce neck pain.

Servicing

- Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltages or other risks. If any of the above mentioned misuse or

other accident such as dropping or mishandling occurs, contact qualified service personnel for servicing.

- For replacement of power cord, connection cables, remote control or power adapter, please contact BenQ customer service.
- Contact your place of purchase or visit the local website from Support.BenQ.com for more support.



General warranty information

Note that the monitor warranty may be void if any of the following conditions occurs:

- Documents required for warranty services have been altered by unauthorized use or is illegible.
- The model number or production number on the product has been altered, deleted, removed or made illegible.
- Repairs, modifications, or alterations have been made by unauthorized service organizations or persons.
- Damage caused by improper storage of the monitor (including but not limited to force majeure, direct exposure to sunlight, water, or fire).
- Reception problems occurred due to external signals (such as antenna, Cable TV) outside the monitor.
- Defects caused by abuse or misuse of the monitor.
- Before using the monitor, it is the sole responsibility of the user to check whether the monitor is compatible with local technical standards if the user brings the monitor out of its intended sales area. Failure to do so may cause product breakdown and the user will have to pay the repairing costs.
- It is the sole responsibility of the user if problems (such as data loss and system failure) occurred due to non-factory provided software, parts, and/or non-original accessories.
- Please use the original accessories (e.g. power cable) only with the device to avoid possible dangers such as electric shock and fire.

Typographics

Icon / Symbol	Item	Meaning
	Warning	Information mainly to prevent the damage to components, data, or personal injury caused by misuse and improper operation or behavior.
	Tip	Useful information for completing a task.
	Note	Supplementary information.

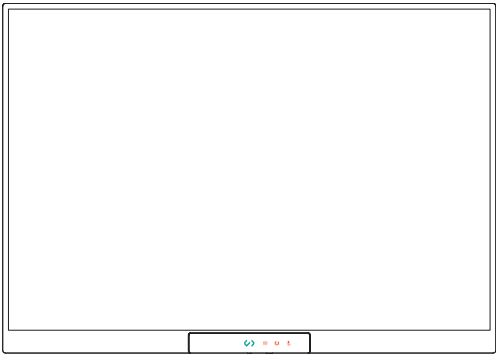
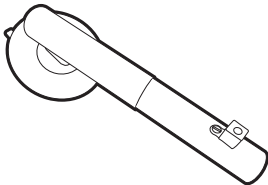
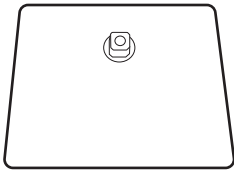
In this document, the steps needed to reach a menu may be shown in condensed form, for example: **Menu > System > Information**.






Table of Contents

Copyright	2
Disclaimer	2
Product support	3
Firmware upgrade	3
Advanced software	3
Safety precautions	4
Power safety	4
Installation	5
Operation	5
Safety notice for remote control (applicable if a remote control is provided)	6
Battery safety notice (applicable if a remote control is provided)	6
Care and cleaning	6
Eye care and flicker-free	7
Servicing	7
General warranty information	8
Getting started	10
Getting to know your monitor	12
Front view	12
Back view	13
Using the monitor wall mounting kit (purchased separately)	15
How to adjust your monitor	16
The function bar	16
5-way controller and basic menu operations	17
Troubleshooting	19
Frequently asked questions (FAQ)	19
Need more help?	21
Adjusting the screen resolution	22
Adjusting the screen refresh rate	22
Preset display modes	23
Video input	31

Getting started

When unpacking please check you have the following items. If any are missing or damaged, please contact the place of purchase for a replacement.

BenQ LCD Monitor	
Monitor Stand	
Monitor Base	
Quick Start Guide	
Safety Instructions	

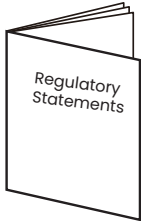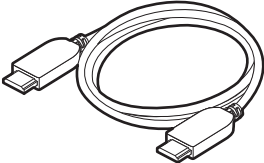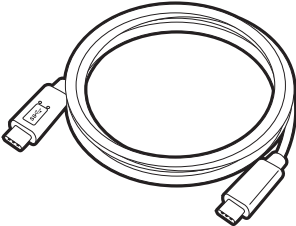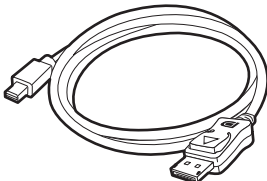Regulatory Statements	
Power Cord (Supplied item may differ by model or region.)	
Video Cable: HDMI	
USB Cable: USB-C™	
USB Cable: USB-B to USB-A	



- Available accessories and the pictures shown here may differ from the actual contents and the product supplied for your region. And the package contents may subject to change without prior notice. For cables that are not supplied with your product, you can purchase them separately.
- Consider keeping the box and packaging in storage for use in the future when you may need to transport the monitor. The fitted foam packing is ideal for protecting the monitor during transport.
- Accessories and cables may be included or sold separately depending on the product supplied for your region.




Always keep the product and accessories out of reach of small children.

Getting to know your monitor

Front view


RD280UG

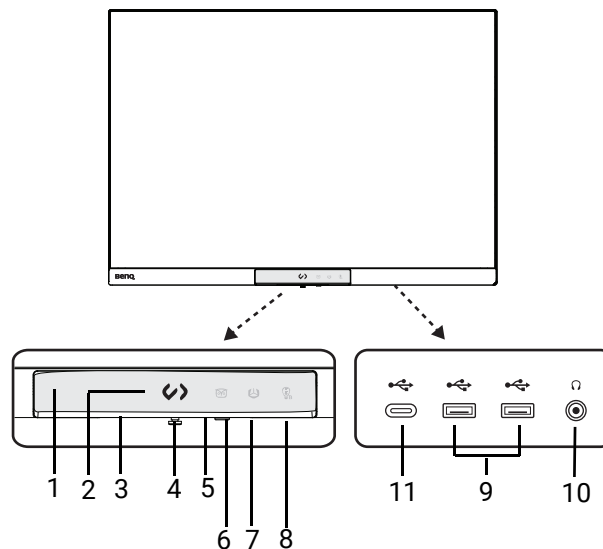

1. Proximity sensor and light sensor
2. Coding hotkey
3. Power button / Power LED indicator
4. 5-way controller
5. Function key
6. Night Hours Protection LED indicator
7. Visual Optimizer LED indicator
8. Low Blue Light Plus LED indicator
9. USB-A ports (downstream; connecting to USB devices)
10. Headphone jack
11. USB-C™ port (downstream; connecting to USB devices)

Back view

RD280UG

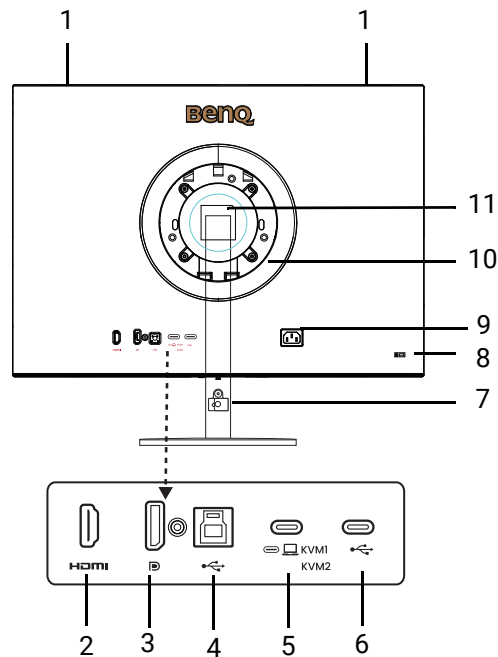

- | | |
|--|--------------------------|
| 1. Speakers | 7. Cable management |
| 2. HDMI socket | 8. Kensington lock slot |
| 3. DisplayPort socket | 9. AC power input jack |
| 4. USB 3.2 Gen2 Type-B port (upstream; connecting to the PC) | 10. MoonHalo - LED light |
| 5. USB-C™ port (for video, data transfer and power delivery up to 90W) | 11. VESA cover |
| 6. USB-C™ port (for data transfer and power delivery up to 15W) | |



- Depending on the product specifications, the supported resolution and timing may vary.
- Above diagram may vary depending on the model.
- Picture may differ from product supplied for your region.
- (Applicable for products with white case) The case of the product may turn yellow in about 3 years due to the photo-oxidation reactions induced by light. This is a normal phenomenon and should not be considered as manufacturing defect.

Power delivery of USB-C™ port on your monitor

With the power delivery function, your monitor helps supply power to the connected USB-C™ devices.

USB-C™ Power Delivery
5V / 3A
9V / 3A
12V / 3A
15V / 3A
20V / 4.5A

- A connected device needs to be equipped with a USB-C™ connector that supports charging function via USB power delivery.
- The connected device can be charged via USB-C™ port even when the monitor is in power saving mode. (*)
- The USB power delivery is up to 90W. If the connected device requires more than 90W for operation or for boot up (when the battery is drained), use the original power adapter that came with the device.
- The information is based on the standard testing criteria and is provided for reference. The compatibility is not guaranteed as the user environments vary. If a separately purchased USB-C™ cable is used, make sure the cable is certified by USB-IF and is full-featured, with power delivery and video / audio / data transfer functions.



*: Charging via USB-C™ in monitor power saving mode is available when the **Standby Charging** function is enabled. Go to **System > Standby Charging** and select **ON**.

Using the monitor wall mounting kit (purchased separately)

The back of your LCD monitor has a VESA standard mount with 100mm pattern, allowing the installation of a wall mount bracket. Before starting to install a monitor wall mounting kit, please read the precautions carefully.

Precautions

- Install your monitor and monitor mounting kit on a wall with flat surface.
- Ensure that the wall material and the standard wall mount bracket (purchased separately) are stable enough to support the weight of the monitor. Refer to the product specifications on the website for weight information.
- Turn off the monitor and the power before disconnecting the cables from the LCD monitor.

1. Remove the monitor stand.

Lay the screen face down on a clean and well-padded surface. Detach the monitor stand.

2. Remove the screws on the back cover.

Use a cross-pointed screwdriver to release the screws on the back cover. The use of a magnetic-head screwdriver is recommended to avoid of losing the screws.



In case you intend to use your monitor on the stand in the future, please keep the monitor base, monitor stand, and screws somewhere safe for future use.


3. Follow the instruction manuals of the wall mount bracket you purchased to complete the installation.



Use four M4 x 10 mm screws to fix a VESA standard wall mount bracket to the monitor. Make sure that all screws are tightened and secured properly. Consult a professional technician or BenQ service for wall mount installation and safety precautions.

How to adjust your monitor


The function bar

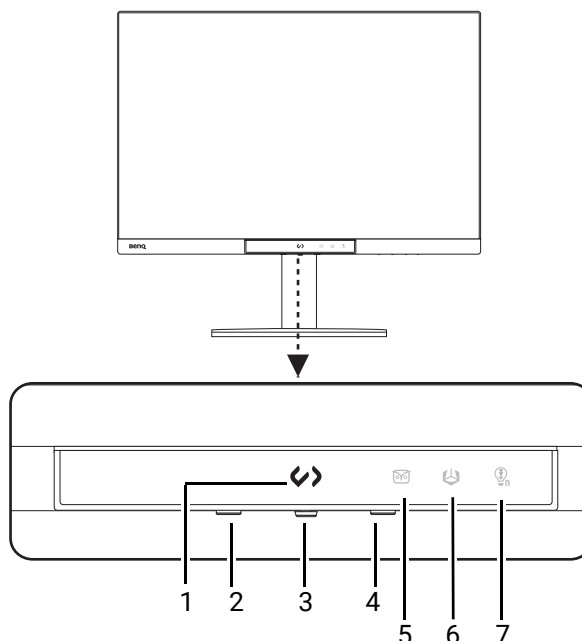

No.	Name	Description
1.	Coding HotKey	• Toggles among different color modes for coding. • Go to Custom > Coding HotKey to access the Coding HotKey setting menu.
2.	Power key	Turns the power on or off.
3.	5-way controller	Accesses the functions or menu items as instructed by the on-screen icons.
4.	Function key	• By default, the key is the hot key for Input. • Go to Custom > Function Key to access the Function Key setting menu.
5.	Night Hours Protection LED indicator	• Lights up if the function is enabled. • Go to Coding Booster > Function Bar > LED Indicator to adjust the LED behavior.
6.	Visual Optimizer LED indicator	
7.	Low Blue Light Plus LED indicator	


5-way controller and basic menu operations

The 5-way controller is located below the lower part of the front bezel. While sitting in front of the monitor, move the controller to the directions instructed by the on-screen icons for menu navigation and operations.

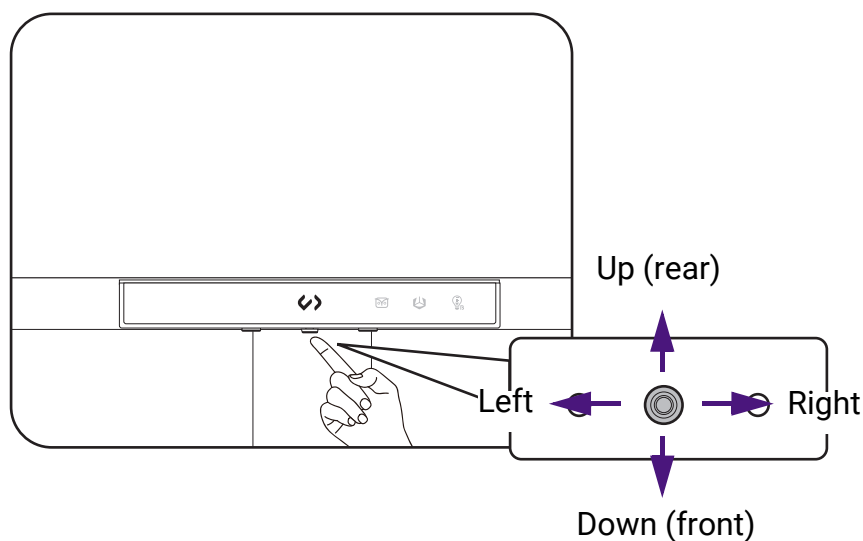

OSD icon	5-way controller operation	Function
(When no menu has been activated)		
N/A	Press the 5-way controller	Activates the main menu.
	Press left/right (Selected models only)	Brings up Quick Menu for MoonHalo .
(When a menu has been activated)		
	Press	Confirms the selection.
	Move to the right	• Enters sub menus. • Confirms the selection.
	Move up	• Goes to the previous menu item. • For up / increase adjustment.
	Move down	• Goes to the next menu item. • For down / decrease adjustment.
	Move to the left	• Returns to the previous menu. • Exits OSD menu.

All OSD (On Screen Display) menus can be accessed by the control keys. You can use the OSD menu to adjust all the settings on your monitor. Available menu options may vary depending on the input sources, functions and settings.

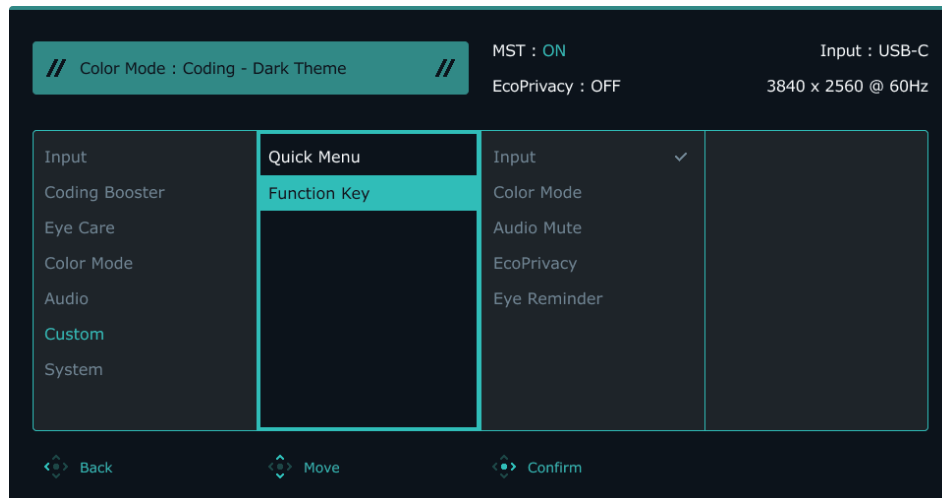

1. Press  to bring up the main menu.
2. On the main menu, follow the on-screen icons on the bottom of the menu to make adjustments or selection.

Troubleshooting

Frequently asked questions (FAQ)

Imaging

-  The image is blurred.
-  • Download **Resolution file** from the website (see [Product support on page 3](#)). Refer to "**Adjusting the Screen Resolution**". And then select the correct resolution, refresh rate and make adjustments based on these instructions.
- If a VGA extension cable is used, remove the extension cable for the test. Is the image now in focus? Download **Resolution file** from the website (see [Product support on page 3](#)). Refer to "**Adjusting the Screen Resolution**". And then select the correct resolution, refresh rate and make adjustments based on these instructions to optimize the image. It is normal for blurring to occur due to conduction losses in extension cables. You can minimize these losses by using an extension cable with better conduction quality or with a built-in booster.
-  Does the blurring only occur at resolutions lower than the native (maximum) resolution?
-  Download **Resolution file** from the website (see [Product support on page 3](#)). Refer to "**Adjusting the Screen Resolution**". Select the native resolution.
-  Pixel errors can be seen.
- One of several pixels is permanently black, one or more pixels are permanently white, one or more pixels are permanently red, green, blue or another color.
-  • Clean the LCD screen.
- Cycle power on-off.
- These are pixels that are permanently on or off and is a natural defect that occurs in LCD technology.
-  The image has a faulty coloration.
-  It has a yellow, blue or pink appearance.
- Go to **Color** and **Reset Color**, and then choose **YES** to reset the color settings to the factory defaults.
- If the image is still not correct and the OSD also has faulty coloration, this means one of the three primary colors is missing in the signal input. Now check the signal cable connectors. If any pin is bent or broken off, please contact your dealer to get necessary support.
-  The image is distorted, flashes or flickers.
-  Download **Resolution file** from the website (see [Product support on page 3](#)). Refer to "**Adjusting the Screen Resolution**". And then select the correct resolution, refresh rate and make adjustments based on these instructions.

- ? You are running the monitor at its native resolution, but the image is still distorted.
- ✓ Images from different input sources may appear distorted or stretched on the monitor running at its native resolution. To have the optimal display performance of each type of input sources, you can use the **Display Mode** function to set a proper aspect ratio for the input sources.
- ? The image is displaced in one direction.
- ✓ Download **Resolution file** from the website (see [Product support on page 3](#)). Refer to "**Adjusting the Screen Resolution**". And then select the correct resolution, refresh rate and make adjustments based on these instructions.
- ? Faint shadow from the static image displayed is visible on the screen.
- ✓
 - Activate the power management function to let your computer and monitor go into a low power "sleep" mode when not actively in use.
 - Use a screensaver to prevent the occurrence of image retention.
- ? What are the supported video timings?
- ✓ Download **Resolution file** from the website (see [Product support on page 3](#)). Refer to "**Preset display modes**" for the supported timings.

Power LED indicator

- ? The LED indicator is solid white or flashing white.
- ✓
 - If the LED lights up in solid white, the monitor is powered on.
 - If the LED is illuminated in white and there is a message **Out of Range** on the screen, this means you are using a display mode that this monitor does not support, please change the setting to one of the supported mode. Download **Resolution file** from the website (see [Product support on page 3](#)). Refer to "**Adjusting the Screen Resolution**". And then select the correct resolution, refresh rate and make adjustments based on these instructions.
 - If the LED is illuminated in flashing white, the power management mode is active. Press any button on the computer keyboard or move the mouse. If that does not help, check the signal cable connectors. If any pin is bent or broken off, please contact your dealer to get necessary support.
 - If the LED is off, check the power supply mains socket, the external power supply and the mains switch.

OSD controls

- ? The OSD controls are inaccessible.
- ✓ To unlock the OSD controls when it is preset to be locked, press and hold any key for 10 seconds.

OSD messages

- ? A message **Out of Range** on the screen during computer boot up process.
- ✓ If there is a message **Out of Range** on the screen during computer boot up process, this means computer compatibility caused by operating system or graphic card. The system will adjust the refresh rate automatically. Just wait until the operating system is launched.

Audio

- ? No sound can be heard from the connected external speakers.
- ✓
 - Remove your headphone (if the headphone is connected to the monitor).
 - Check whether the headphone jack is properly connected.
 - If the external speakers are USB-powered, check whether the USB connection is OK.
 - Increase the volume (volume may be muted or too low) on the external speakers.
 - If USB-C™ connection is established, make sure the appropriate audio output setting on your laptop has been selected. You may look for options similar to "USB headphone".

HDR

- ? There is a message **HDR: Emulated** showing on the screen.
- ✓ This means the input content is not HDR-compatible and the monitor is in HDR-emulated mode.

USB-C™ connection

- ? No video or audio output from the laptop with USB-C™ connection.
- ✓ Check the cable connections and menu settings in the following order:
 - Check if the USB-C™ cable has been connected to the monitor and the laptop properly.
 - Check if the input source has been selected to **USB-C** on **Display > Input**.

Need more help?

If your problems remain after checking this manual, please contact your place of purchase or visit the local website from [Support.BenQ.com](https://support.benq.com) for more support and local customer service.

Adjusting the screen resolution

Due to the nature of liquid crystal display (LCD) technology, the picture resolution is always fixed. For the best display performance, please set the display to its maximum resolution that is the same with the monitor aspect ratio. This is called "Native Resolution" or maximal resolution – that is, the clearest picture. Lower resolutions are displayed on a full screen through an interpolation circuit. Image blurring across pixel boundaries can occur with the interpolated resolution depending upon the image type and its initial resolution.



To find out the monitor aspect ratio and native resolution of the purchased model, please check the Specification on the website.



- To take full advantage of LCD technology you should select the native resolution setting of your PC screen as described below. Be aware that not all PC video cards provide this resolution value. If yours doesn't, check with the video card manufacturer's website for an updated driver for your particular model PC video card which supports this resolution. Software video drivers are often updated and available for new hardware video resolutions. If necessary, you may need to replace and update the PC video card hardware to be able to support the native resolution of the monitor.
- Depending on the operating system on your PC, different procedures should be followed to adjust the screen resolution. Refer to the help document of your operating system for details.

1. Open **Display Properties** and select the **Settings** tab.

You can open **Display Properties** by right-clicking on the Windows desktop and selecting **Properties** from the pop-up menu.

2. Use the slider in the 'Screen area' section to adjust the screen resolution.

Select the recommended resolution (maximum resolution) then click **Apply**.



If you select some other resolution, be aware that this other resolution is interpolated and may not accurately display the screen image as well as it could do at the native resolution setting.

3. Click **OK** then **Yes**.

4. Close the **Display Properties** window.

If your input source does not provide an image which is the same with the monitor aspect ratio, the displayed image may appear stretched or distorted. To maintain the original aspect ratio, image scaling options can be found in the "Display Mode" adjustment. See the user manual for more information.

Adjusting the screen refresh rate

You don't have to choose the highest possible refresh rate on an LCD display, because it is not technically possible for an LCD display to flicker. The best results are obtained by using the factory modes already set in your computer.



Depending on the operating system on your PC, different procedures should be followed to adjust the screen resolution. Refer to the help document of your operating system for details.

1. Double click the **Display** icon in **Control Panel**.
2. From the **Display Properties** window, select the **Settings** tab and click the **Advanced** button.
3. Select the **Adapter** tab, and select an appropriate refresh rate to match one of the applicable factory modes as listed in the specification table.
4. Click **Change**, **OK**, then **Yes**.
5. Close the **Display Properties** window.

Preset display modes

RD280UG EDID Timing Support							
PC/Video Signal Support		PIP / PBP = OFF and PIP Main Window (Support HDR10 / Support FreeSync)			PIP Sub Window (Support HDR10 / No support FreeSync)		
		Input			Input		
Resolution	Frame Frequency	DisplayPort 1.4	HDMI 2.1	USB-C	DisplayPort 1.4	HDMI 2.1	USB-C
640x480	60	V	V	V	V	V	V
640x480	75	V	V	V	V	V	V
720x400	70	V	V	V	V	V	V
720x480	60	V	V	V	V	V	V
720x576	50	V	V	V	V	V	V
800x600	60	V	V	V	V	V	V
800x600	75	V	V	V	V	V	V
832x624	75	V	V	V	V	V	V
960x2560	60						
960x2560	100						
960x2560	120						
1024x768	60	V	V	V	V	V	V
1024x768	75	V	V	V	V	V	V
1024x768	120	V	V	V	V	V	V
1152x870	75	V	V	V	V	V	V
1280x720	50	V	V	V	V	V	V
1280x720	60	V	V	V	V	V	V
1280x720	120				V	V	V
1280x800	60	V	V	V	V	V	V
1280x960	60	V	V	V	V	V	V
1280x1024	60	V	V	V	V	V	V
1280x1024	75	V	V	V	V	V	V
1280x1024	120	V	V	V	V	V	V
1280x2560	60						
1280x2560	100						
1280x2560	120						
1440x900	60	V	V	V	V	V	V
1600x900	60	V	V	V	V	V	V
1680x1050	60	V	V	V	V	V	V
1920x1080	24	V	V	V	V	V	V
1920x1080	25	V	V	V	V	V	V
1920x1080	30	V	V	V	V	V	V

RD280UG EDID Timing Support							
PC/Video Signal Support		PIP / PBP = OFF and PIP Main Window (Support HDR10 / Support FreeSync)			PIP Sub Window (Support HDR10 / No support FreeSync)		
		Input			Input		
Resolution	Frame Frequency	DisplayPort 1.4	HDMI 2.1	USB-C	DisplayPort 1.4	HDMI 2.1	USB-C
1920x1080	50	V	V	V	V	V	V
1920x1080	60	V	V	V	V	V	V
1920x1080	100	V	V	V			
1920x1080	120	V	V	V	V	V	V
1920x1200	60	V	V	V			
1920x2560	60						
1920x2560	100						
1920x2560	120						
2560x1440	60	V	V	V			
2560x1440	120	V	V	V			
2560x1600	60	V	V	V			
2560x2560	60						
2560x2560	100						
2560x2560	120						
2880x2560	60						
2880x2560	100						
2880x2560	120						
3840x2160	24	V	V	V			
3840x2160	25	V	V	V			
3840x2160	30	V	V	V			
3840x2160	50	V	V	V			
3840x2160	60	V	V	V			
3840x2160	120	V	V	V			
3840x2560	50	V	V	V			
3840x2560	60	V	V	V			
3840x2560	100	V	V	V			
3840x2560	120	V	V	V			

RD280UG EDID Timing Support				
PC/Video Signal Support		PBP (1:1) 1920x2560 EDID Timing (Support HDR10 / No support FreeSync)		
		Input		
Resolution	Frame Frequency	DisplayPort 1.4	HDMI 2.1	USB-C
640x480	60	V	V	V
640x480	75	V	V	V
720x400	70	V	V	V
720x480	60	V	V	V
720x576	50	V	V	V
800x600	60	V	V	V
800x600	75	V	V	V
832x624	75	V	V	V
960x2560	60			
960x2560	100			
960x2560	120			
1024x768	60	V	V	V
1024x768	75	V	V	V
1024x768	120	V	V	V
1152x870	75	V	V	V
1280x720	50	V	V	V
1280x720	60	V	V	V
1280x720	120			
1280x800	60	V	V	V
1280x960	60	V	V	V
1280x1024	60	V	V	V
1280x1024	75	V	V	V
1280x1024	120	V	V	V
1280x2560	60			
1280x2560	100			
1280x2560	120			
1440x900	60	V	V	V
1600x900	60	V	V	V
1680x1050	60	V	V	V
1920x1080	24	V	V	V
1920x1080	25	V	V	V
1920x1080	30	V	V	V
1920x1080	50	V	V	V
1920x1080	60	V	V	V

RD280UG EDID Timing Support				
PC/Video Signal Support		PBP (1:1) 1920x2560 EDID Timing (Support HDR10 / No support FreeSync)		
		Input		
Resolution	Frame Frequency	DisplayPort 1.4	HDMI 2.1	USB-C
1920x1080	100	V	V	V
1920x1080	120	V	V	V
1920x1200	60	V	V	V
1920x2560	60	V	V	V
1920x2560	100	V	V	V
1920x2560	120	V	V	V
2560x1440	60			
2560x1440	120			
2560x1600	60			
2560x2560	60			
2560x2560	100			
2560x2560	120			
2880x2560	60			
2880x2560	100			
2880x2560	120			
3840x2160	24			
3840x2160	25			
3840x2160	30			
3840x2160	50			
3840x2160	60			
3840x2160	120			
3840x2560	50			
3840x2560	60			
3840x2560	100			
3840x2560	120			

RD280UG EDID Timing Support							
PC/Video Signal Support		PBP (2:1) 2560x2560 EDID Timing (Support HDR10 / No support FreeSync)			PBP (2:1) 1280x2560 EDID Timing (Support HDR10 / No support FreeSync)		
		Input			Input		
Resolution	Frame Frequency	DisplayPort 1.4	HDMI 2.1	USB-C	DisplayPort 1.4	HDMI 2.1	USB-C
640x480	60	V	V	V	V	V	V
640x480	75	V	V	V	V	V	V
720x400	70	V	V	V	V	V	V
720x480	60	V	V	V	V	V	V
720x576	50	V	V	V	V	V	V
800x600	60	V	V	V	V	V	V
800x600	75	V	V	V	V	V	V
832x624	75	V	V	V	V	V	V
960x2560	60						
960x2560	100						
960x2560	120						
1024x768	60	V	V	V			
1024x768	75	V	V	V			
1024x768	120	V	V	V			
1152x870	75	V	V	V			
1280x720	50	V	V	V			
1280x720	60	V	V	V			
1280x720	120						
1280x800	60	V	V	V			
1280x960	60	V	V	V			
1280x1024	60	V	V	V			
1280x1024	75	V	V	V			
1280x1024	120	V	V	V			
1280x2560	60				V	V	V
1280x2560	100				V	V	V
1280x2560	120				V	V	V
1440x900	60	V	V	V			
1600x900	60	V	V	V			
1680x1050	60	V	V	V			
1920x1080	24	V	V	V			
1920x1080	25	V	V	V			
1920x1080	30	V	V	V			
1920x1080	50	V	V	V			
1920x1080	60	V	V	V			
1920x1080	100	V	V	V			
1920x1080	120	V	V	V			
1920x1200	60	V	V	V			

RD280UG EDID Timing Support							
PC/Video Signal Support		PBP (2:1) 2560x2560 EDID Timing (Support HDR10 / No support FreeSync)			PBP (2:1) 1280x2560 EDID Timing (Support HDR10 / No support FreeSync)		
		Input			Input		
Resolution	Frame Frequency	DisplayPort 1.4	HDMI 2.1	USB-C	DisplayPort 1.4	HDMI 2.1	USB-C
1920x2560	60						
1920x2560	100						
1920x2560	120						
2560x1440	60	V	V	V			
2560x1440	120	V	V	V			
2560x1600	60						
2560x2560	60	V	V	V			
2560x2560	100	V	V	V			
2560x2560	120	V	V	V			
2880x2560	60						
2880x2560	100						
2880x2560	120						
3840x2160	24						
3840x2160	25						
3840x2160	30						
3840x2160	50						
3840x2160	60						
3840x2160	120						
3840x2560	50						
3840x2560	60						
3840x2560	100						
3840x2560	120						

RD280UG EDID Timing Support							
PC/Video Signal Support		PBP (3:1) 2880x2560 EDID Timing (Support HDR10 / No support FreeSync)			PBP (3:1) 960x2560 EDID Timing (Support HDR10 / No support FreeSync)		
		Input			Input		
Resolution	Frame Frequency	DisplayPort 1.4	HDMI 2.1	USB-C	DisplayPort 1.4	HDMI 2.1	USB-C
640x480	60	V	V	V	V	V	V
640x480	75	V	V	V	V	V	V
720x400	70	V	V	V	V	V	V
720x480	60	V	V	V	V	V	V
720x576	50	V	V	V	V	V	V
800x600	60	V	V	V	V	V	V
800x600	75	V	V	V	V	V	V
832x624	75	V	V	V	V	V	V
960x2560	60				V	V	V
960x2560	100				V	V	V
960x2560	120				V	V	V
1024x768	60	V	V	V			
1024x768	75	V	V	V			
1024x768	120	V	V	V			
1152x870	75	V	V	V			
1280x720	50	V	V	V			
1280x720	60	V	V	V			
1280x720	120						
1280x800	60	V	V	V			
1280x960	60	V	V	V			
1280x1024	60	V	V	V			
1280x1024	75	V	V	V			
1280x1024	120	V	V	V			
1280x2560	60						
1280x2560	100						
1280x2560	120						
1440x900	60	V	V	V			
1600x900	60	V	V	V			
1680x1050	60	V	V	V			
1920x1080	24	V	V	V			
1920x1080	25	V	V	V			
1920x1080	30	V	V	V			
1920x1080	50	V	V	V			
1920x1080	60	V	V	V			
1920x1080	100	V	V	V			
1920x1080	120	V	V	V			
1920x1200	60	V	V	V			
1920x2560	60						

RD280UG EDID Timing Support							
PC/Video Signal Support		PBP (3:1) 2880x2560 EDID Timing (Support HDR10 / No support FreeSync)			PBP (3:1) 960x2560 EDID Timing (Support HDR10 / No support FreeSync)		
		Input			Input		
Resolution	Frame Frequency	DisplayPort 1.4	HDMI 2.1	USB-C	DisplayPort 1.4	HDMI 2.1	USB-C
1920x2560	100						
1920x2560	120						
2560x1440	60	V	V	V			
2560x1440	120	V	V	V			
2560x1600	60						
2560x2560	60						
2560x2560	100						
2560x2560	120						
2880x2560	60	V	V	V			
2880x2560	100	V	V	V			
2880x2560	120	V	V	V			
3840x2160	24						
3840x2160	25						
3840x2160	30						
3840x2160	50						
3840x2160	60						
3840x2160	120						
3840x2560	50						
3840x2560	60						
3840x2560	100						
3840x2560	120						



- To obtain the best image quality, refer to the above table to set the timing and the resolution of the input source.
- To make sure the above timing works, check the compatibility and specifications of your graphic card first.
- The timing needs to work with the specified input ports. Available input ports and signals vary by model.

Video input

Color space	YCbCr 4:2:0											
Max. bit	8 bit				10 bit				12 bit			
Frame frequency	24, 25, 30	50, 60	100	120	24, 25, 30	50, 60	100	120	24, 25, 30	50, 60	100	120
HDMI	V	V	V	V	V	V	V	V	V	V	V	V
DisplayPort	V	V	V	V	V	V	V	V	V	V	V	V
USB-C™ (DP Alt mode)	V	V	V	V	V	V	V	V	V	V	V	V

Color space	YCbCr 4:2:2											
Max. bit	8 bit				10 bit				12 bit			
Frame frequency	24, 25, 30	50, 60	100	120	24, 25, 30	50, 60	100	120	24, 25, 30	50, 60	100	120
HDMI	V	V	V	V	V	V	V	V	V	V	V	V
DisplayPort	V	V	V	V	V	V	V	V	V	V	V	V
USB-C™ (DP Alt mode)	V	V	V	V	V	V	V	V	V	V	V	V

Color space	YCbCr 4:4:4 / RGB 4:4:4											
Max. bit	8 bit				10 bit				12 bit			
Frame frequency	24, 25, 30	50, 60	100	120	24, 25, 30	50, 60	100	120	24, 25, 30	50, 60	100	120
HDMI	V	V	V	V	V	V	V	V	V	V	V	V
DisplayPort	V	V	V	V	V	V	V	V	V	V	V	V
USB-C™ (DP Alt mode)	V	V	V	V	V	V	V	V	V	V	V	V



The monitor receives 12-bit data and displays 10-bit colors.

- Video Timing 3840x2160@50/59.94Hz do not support RGB444/YCbCr444 10 bit format.
- Not support for 3840x2560@120Hz.
- Only support for 3840x2160.

2025/09/22
RD280UG

Specifications - RD280UG

Display type	28.2" wide-screen, LED backlight monitor
Panel type	IPS panel
Display area	596.16 x 397.44 mm
Native (maximum) resolution	3840 x 2560
Aspect ratio	3:2
Colors	1.07 billion
Contrast / Brightness	2000:1 / 400 cd/m ² (typical)
Response time	5ms (GTG)
Viewing angle (left/right, up/down)	178, 178 (CR _≥ 10)
Hor. Frequency (KHz)	15 - 326 kHz Multi- frequency monitor
Ver. Frequency (Hz)	12~121Hz (including video timing) 48~120Hz (FreeSync/Adaptive Sync)
Controls	• 2 buttons • Power key • Touch key x 1
Max. power consumption	226 W
Power saving mode	< 0.5 W
Connectivity	• HDMI 2.1 x 1 • DisplayPort 1.4 x 1 • USB-C™ x 1 (Power delivery 90W, Signal Transmission) • USB-C™ x 1 (downstream, for MST/data transfer and power delivery up to 15W) • USB-C™ x 1 (downstream, for data transfer and power delivery up to 7.5W) • USB 3.2 Gen 2 x 2; downstream • USB-B x 1 • Headphone jack
Speaker	3W x 2
Temperature (operating)	0 °C - 40 °C
Air humidity (operating)	10% - 90%
Temperature (storage)	-20 °C - 60 °C
Air humidity (storage)	10% - 60%
Operating voltage	100 - 240 V, 50/60 Hz +/- 3 Hz

Tilt (down/up)	-5° ~ 20°
Swivel (left/right)	15°/15°
Height adjustment	150 mm
Dimensions (H x W x D)	TBD (Highest) TBD (Lowest)
Weight (without stand and base)	TBD kg
Weight	TBD kg



The specifications are subject to change without prior notice.