

BenQ



MOUSE FOR e-SPORTS

Wireless Mouse
EW Version
User Manual

V1.0

Copyright and disclaimer

Copyright

Copyright 2026 BenQ Corporation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of BenQ Corporation.

All other logos, products, or company names mentioned in this manual may be the registered trademarks or copyrights of their respective companies, and are used for informational purposes only.

Disclaimer

BenQ Corporation makes no representations or warranties, either expressed or implied, with respect to the contents of this document. BenQ Corporation reserves the right to revise this publication and to make changes from time to time in the contents thereof without obligation to notify any person of such revision or changes.

It is the sole responsibility of the user if problems (such as data loss and system failure) occurred due to non-factory installed software, parts, and/or non-original accessories.

The screenshots and illustrations in this document are for reference only and may differ from the actual design.

This document aims to provide the most updated and accurate information to customers, and thus all contents may be modified from time to time without prior notice. Please visit the [website](#) for the latest version of this document.

Servicing

Should you have any queries about the software after reading the document, visit the local website from ZOWIESupport.BenQ.com for more support and local customer service.



ZOWIE Support

Table of contents

Copyright and disclaimer.....	2
Compatible models.....	6
Package contents	7
Product overview	9
Connections	12
Wireless connections	12
Wired connection.....	15
Check mouse status	16
Power supply.....	17
Battery power check.....	17
Charge the battery	18
Charge via 8K enhanced receiver	18
Charge via USB cable	18
Charging time and battery time	19
Save power.....	20
Auto standby mode	20
Manual power off	20
Configurations.....	21
Menu operations in settings	21
Change DPI setting.....	22
Adjust polling rate.....	23
Change the Lift Off Distance (LOD)	24
Change click response time.....	24
Enable performance mode.....	25
Enable motion sync	25

Updating firmware26

Care and maintenance.....27

 Cleaning27

 Storage27

Specifications.....29


Compatible models

This user manual is for the following models:

- EC1-EW (EC1-EW-D)
- EC2-EW (EC2-EW-B)
- EC3-EW (EC3-EW-D)
- U2-EW (U2-EW-D)
- FK2-EW (FK2-EW-D)
- ZA13-EW (ZA13-EW-D)

Package contents

When unpacking please check you have the following items. If any are missing or damaged, please contact the place of purchase for a replacement.

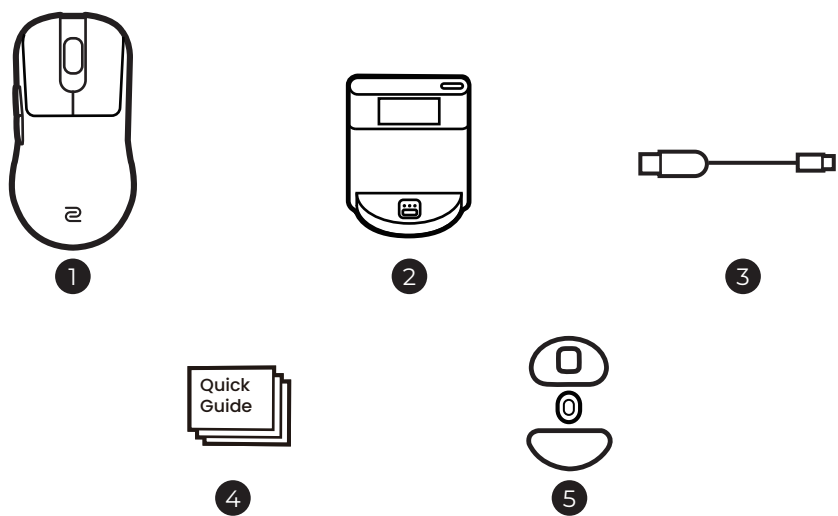


No.	Descriptions
1.	Mouse
2.	8K enhanced receiver
3.	USB cable
4.	User documents • Quick start guide • Regulatory statements • Warranty card
5.	Spare skatez


Note

- Consider keeping the box and packaging in storage for use in the future when you may need to transport the product.
- Always keep the product and accessories out of reach of small children.


Product overview

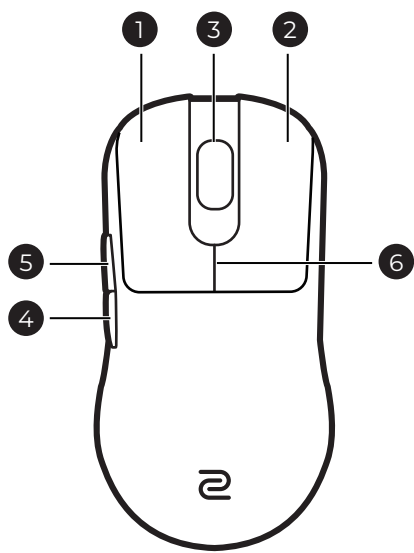

No.	Descriptions
1.	Left button
2.	Right button
3.	Scroll wheel
4.	Backward side button
5.	Front side button
6.	Power LED indicator

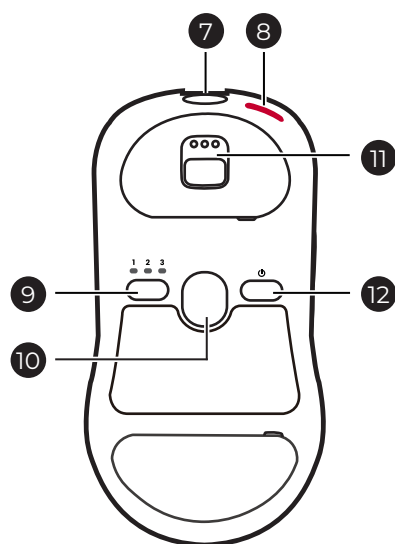

No.	Descriptions
7.	USB-C port • For charging • For connection with USB cable in wired operation
8.	Enhanced antenna
9.	Mode switch
10.	Optical sensor
11.	Pogo pin • For charging • For pairing
12.	Power button

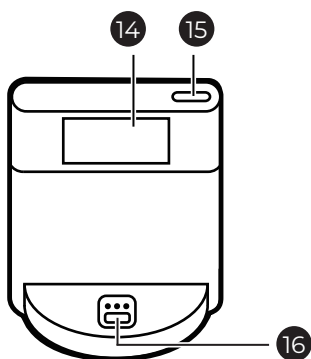

No.	Descriptions
-----	--------------

14.	LCD screen (see page 16)
-----	---


15.	OSD button
-----	------------

16.	Pogo pin (for charging and pairing)
-----	-------------------------------------


Connections

Wireless connections


1. Connect the 8K enhanced receiver to your computer by the supplied USB cable. The LCD screen lights up when it is supplied with power.

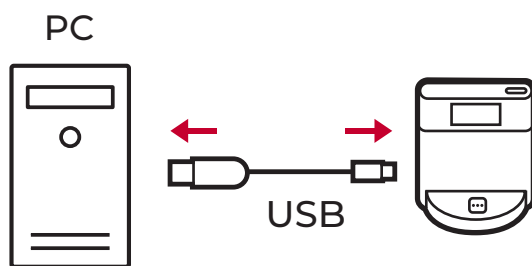

If no compatible mouse is detected, the screen indicates there is no signal.

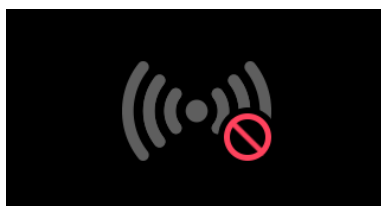


2. Press and hold the power button from the bottom of the mouse.

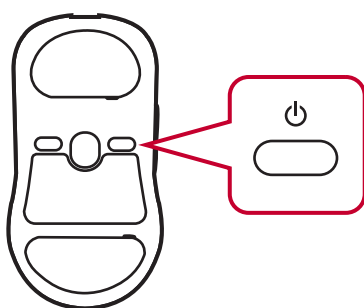


The mouse status is displayed on the screen.

The screen disappears after 60 seconds of inactivity.

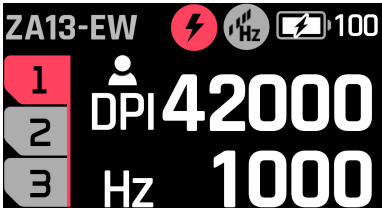


i Tips

- Keep the mouse and the receiver aligned in the center for optimal performance.
- The mouse is disconnected after 10 minutes of inactivity. If your screen displays no signal as a result, simply press any mouse button to reconnect.
- For optimal performance, use the mouse approximately 20 cm away from the receiver at an angle of 50 degrees (left and right). This is for reference only. Check the LED indicator for signal stability.
- Keep the receiver at least 50 cm away from other possible signal interference such wireless routers.

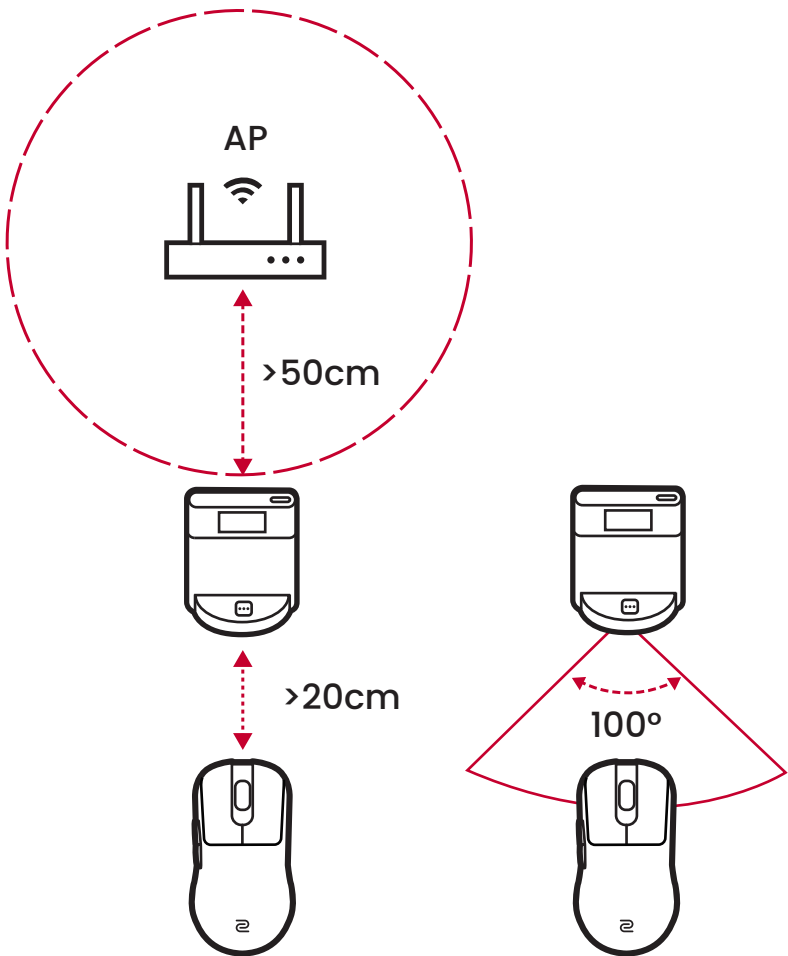


Wired connection

Connect the mouse to your computer using the supplied USB cable.

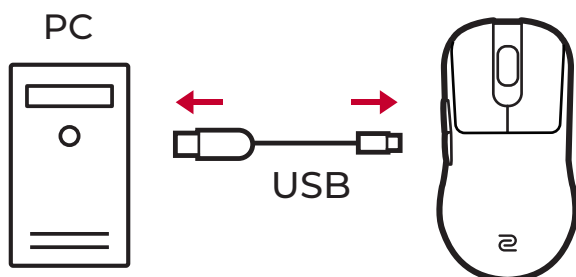

Check mouse status

The mouse status is available via the enhanced receiver's screen. To display the screen manually, press the OSD button.

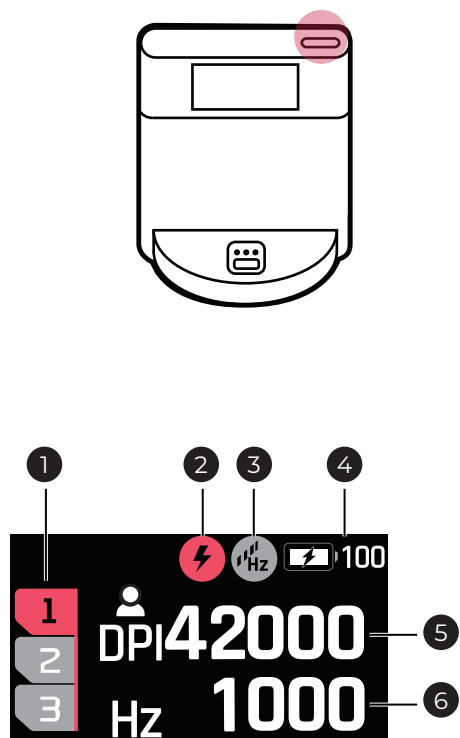

No.	Descriptions
1.	User modes
2.	Performance mode status
3.	High report rate status
4.	Battery status
5.	DPI
6.	Polling rate


Power supply

Battery power check

Press the OSD button to display the mouse status.

Check the battery status from the screen.


You are notified when the battery power is lower than 20%. Charge the mouse soon.

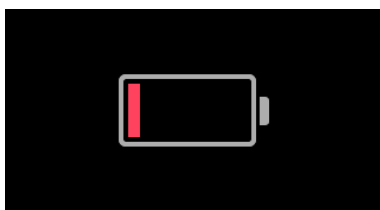

Charge the battery


Charge via 8K enhanced receiver

When the 8K enhanced receiver is connected to PC via the supplied USB cable, place the mouse on the receiver with the pogo pin connectors attached. The power LED indicator flashes white until the battery is fully charged.

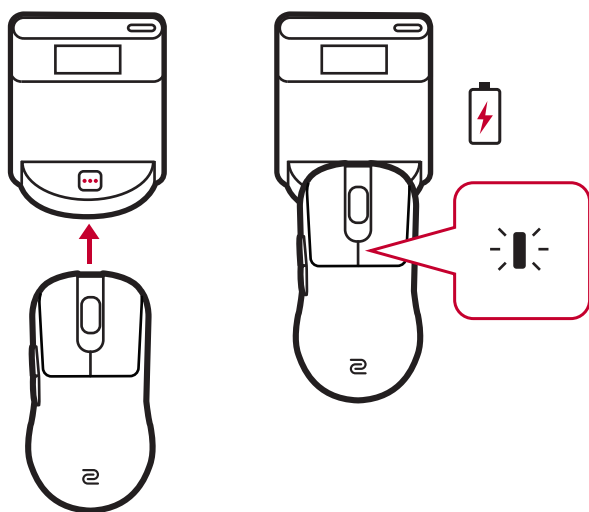

Charge via USB cable

Connect the mouse to PC via the supplied USB cable. The power LED indicator flashes white until the battery is fully charged.

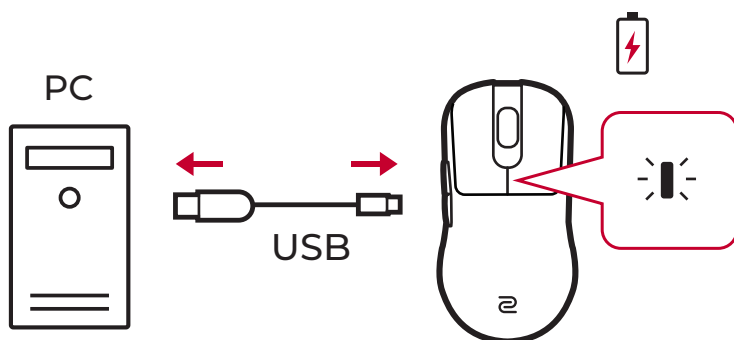

Charging time and battery time

It takes about 3 hours to fully charge the mouse. Battery time of a fully charged mouse varies by polling rate.

Polling rate	Battery time (with constant movement wirelessly)	
	Performance mode disabled	Performance mode enabled
1000 Hz	Up to 80 hours	Up to 30 hours
4000 Hz	Up to 30 hours	Up to 26 hours
8000 Hz	Up to 22 hours	Up to 21 hours

Save power


Auto standby mode

The mouse enters standby mode automatically to save power after 20 minutes of inactivity.

Manual power off

To manually conserve battery power, press and hold the power button from the bottom of the mouse to power off.

As a moving mouse in a bag/suitcase keeps consuming power, you should power off the mouse before packing.

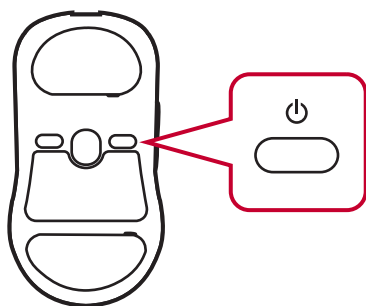

Configurations



Configure the sensitivity of your mouse in wireless mode to meet your preferences in tracking accuracy, input latency, and overall responsiveness.

The significance of each setting is provided for reference. To optimize mouse performance, adjust these settings based on your computer's capabilities and personal preferences.

Menu operations in settings


The configurations can be done from the OSD screen.

1. Press and hold the OSD button for 3 seconds to access the settings.

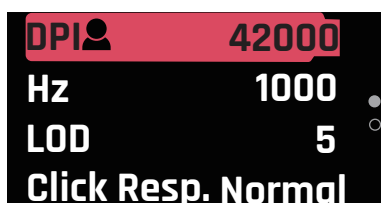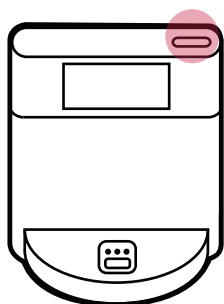


2. Instead of mouse control, the buttons and wheel are used for mouse configurations.


Select

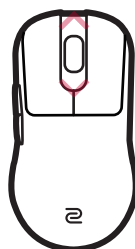

Confirm

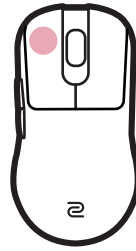

Exit

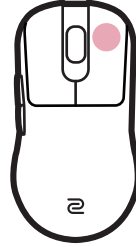

Set and move the mouse in configuration to see if it works as expected. All except polling rate can be tested at this stage.

Change DPI setting

Settings > DPI

Higher DPI indicates faster cursor movement with less hand travel, while lower DPI offers better precision.


Adjust polling rate

Settings > Hz

Higher polling rates result in smoother cursor tracking. Note that more battery power is consumed with a higher polling rate.

When a high polling rate (2000 Hz or higher) is set, the polling rate LED indicator lights up ().

High polling rates increase power consumption. If you see the low power status on the screen, that means the battery will be drained in a few hours. You should charge the mouse soon or switch to a relatively low polling rate.

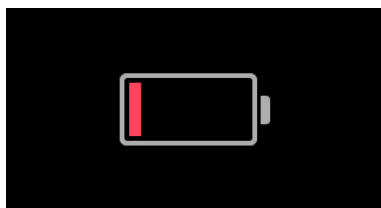

Change the Lift Off Distance (LOD)

Settings > LOD

You might want to change the LOD to work with your preferences or mouse pad properly. A lower LOD ensures that the mouse tracking cuts off instantly the moment the mouse leaves the pad, which helps keep crosshair drift when lifting repositioning the mouse.

Change click response time

Settings > Click Resp.

A fast click response time helps deliver instant shot registration, which eliminates double-clicks.

Enable performance mode

Settings > Performance

Enabling performance mode delivers more responsive tracking experience. This feature is optional and can be enabled based on personal preferences.

ⓘ Note

- With performance mode enabled, the power consumption is increased. See [Charging time and battery time on page 19](#).
- Performance mode is supported in the latest firmware. Make sure your mouse has been updated to the latest firmware version. See [Updating firmware on page 26](#).

Enable motion sync

Settings > Motion Sync

Enabling motion sync helps provide highly consistent and fluid tracking feeling.

Updating firmware

Keep your mouse up to date to ensure optimal performance. Check ZOWIESupport.BenQ.com regularly for firmware updates, and read the included instructions before installation.

Care and maintenance



Cleaning

- Dusts on the optical sensor may keep the mouse from working properly. Use a clean and dry brush to clean the optical sensor.
- Clean the mouse by a clean and dry cleaning cloth.
- Water stains may keep the optical sensor from working properly. Avoid leaving water stains on the mouse.

Storage

A cable connector may be damaged if it is broken or bent. Pack and store the mouse properly for travel or if you will not use the mouse for a long period of time.

1. Press and hold  from the bottom of the mouse to power off.
2. Before packing, remove the USB cable from your PC and mouse/ completely. Use a cable tie to organize the cable.

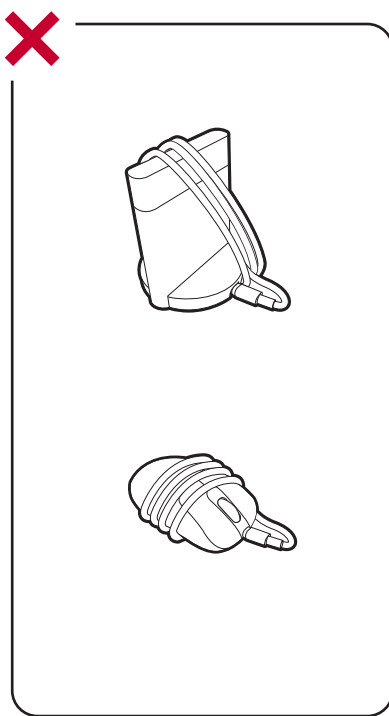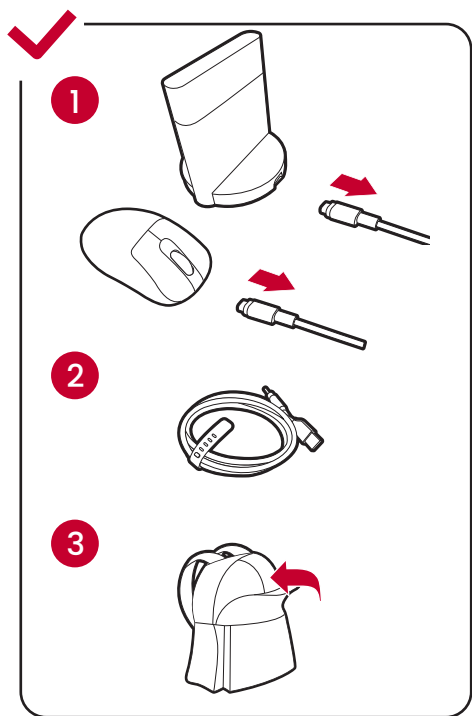

Specifications

Item	Description
Driver	No driver needed.
DPI	400 / 800 / 1000 / 1200 / 1600 / 3200 / Custom
Polling rate	125 / 500 / 1000 / 2000 / 4000 / 8000 Hz
USB	USB2.0 highspeed
Buttons	7 buttons
Click response time	Fast / Normal
Connectivity	• Wireless: 2.4G • Wired: USB Note: The mouse is switched to wired operation when it is connected to PC via the USB cable.
Connectors	• USB-A on a PC • USB-C on a device
Battery life (performance mode disabled)	• 80 hours when polling rate is 1000 Hz (constant movement) • 30 hours when polling rate is 4000 Hz (constant movement) • 22 hours when polling rate is 8000 Hz (constant movement)

Item	Description
Battery life (performance mode enabled)	• 30 hours when polling rate is 1000 Hz (constant movement) • 26 hours when polling rate is 4000 Hz (constant movement) • 21 hours when polling rate is 8000 Hz (constant movement)
Battery charging	Approximately 3 hours to reach a full charge
Cable	USB-A to USB-C (1.8 meters/5.9 feet)

