



BenQ Board User Manual

NE65001, NE75001

Table of contents

Product overview.....	3
About the NE001.....	3
Specifications.....	3
Dimensions	7
Package contents.....	9
Components.....	10
Installation and Configuration.....	14
Unboxing.....	14
Mounting.....	15
Powering on the display	20
External PCs	20
Setting up BenQ Launcher	22
Basic operations.....	24
Power button	24
User interface.....	25
Connections.....	28
Remote control	31
System Settings.....	33
Network Connection.....	33
Personalization.....	36
Date and Language.....	37
Power Onoff Settings.....	38
Device Management	40
Advanced Setting.....	41
Android settings	42
BenQ App Store.....	43
BenQ apps.....	43
ClassroomCare®	45
Eye-Care solutions	45
Germ-resistant solutions.....	45
Supported media	46
Supported input resolutions	46
Troubleshooting	47
Product Support.....	49
Safety warnings and precautions	50
Copyright and disclaimers	53

Product overview

This chapter provides basic information about the BenQ Board NE001 interactive display.

About the NE001

The BenQ Board NE001 is the Google ELDA-certified interactive display by BenQ. It combines the computing power of a 8-core Arm Cortex chipset, Precision IR touch, a full set of ClassroomCare® technologies, and Google Mobile Services. Users of the BenQ Board can utilize the interactive display for effective and engaging learning experiences and workplace collaboration.

Specifications



Important

Modifying the hardware or software of your BenQ product invalidates the warranty. BenQ is not responsible for any damage or data loss caused by the unauthorized modifications to both hardware and software and the installation of third-party add-ons and applications.

Panel

Model	NE65001	NE75001
Screen size	65"	75"
Panel type	IPS	IPS
Resolution	UHD 3840 × 2160 pixels	UHD 3840 × 2160 pixels
Active area	1429.5 × 804.6 mm	1649.6 × 927.9 mm
Response time	8 ms	8 ms
Aspect ratio	16:9	16:9
Orientation	Landscape	Landscape
Contrast ratio	1200:1	1200:1
Dynamic contrast ratio	50,000:1	50,000:1
Color depth	10-bit + FRC	10-bit + FRC
Color gamut	72% NTSC	72% NTSC
Panel brightness (without glass)	400 nits	400 nits
Panel brightness (with glass)	350 nits	350 nits
Backlight life	50,000 hrs	50,000 hrs

Glass

Model	NE65001	NE75001
Hardness	9H tempered	9H tempered
Germ-resistant screen*	Nano-ionic silver	Nano-ionic silver
Anti-glare	Yes	Yes

Touchscreen

Model	NE65001	NE75001
Touch technology	Precision IR	Precision IR
Touch points	Up to 40	Up to 40
Touch response time	≤ 5 ms	≤ 5 ms

System

Model	NE65001	NE75001
CPU	Arm Cortex-A72 × 4 + A53 × 4	Arm Cortex-A72 × 4 + A53 × 4
GPU	Arm Mali-G52 MC3	Arm Mali-G52 MC3
Memory	8 GB	8 GB
Storage	128 GB	128 GB
Operating system	Android 14 (EDLA)	Android 14 (EDLA)

Connectivity

Model	NE65001	NE75001
USB-C	• 1 × 2.0 (PD 65 W) • 1 × 2.0 (PD 15 W)	• 1 × 2.0 (PD 65 W) • 1 × 2.0 (PD 15 W)
	 Note • The side USB-C port supports display, touch, and 15-watt power delivery. • The front USB 2.0 port provides data transfer and up to 65-watt charging.	
USB Type-B (for touch)	2 × 2.0	2 × 2.0
USB Type-A	• 3 × 3.0 • 1 × 2.0	• 3 × 3.0 • 1 × 2.0
HDMI (in out)	3 × HDMI 2.0 *1 × HDMI 2.0	3 × HDMI 2.0 *1 × HDMI 2.0
Audio in	1 × 3.5 mm microphone jack	1 × 3.5 mm microphone jack
Audio out	1 × 3.5 mm audio out jack	1 × 3.5 mm audio out jack
S/PDIF out	1 (optical)	1 (optical)
RS-232	1	1
OPS slot (for slot-in PC)	1	1
Ethernet	Gigabit Ethernet (10M/100M/1000M)	Gigabit Ethernet (10M/100M/1000M)
Wi-Fi	Wi-Fi 6	Wi-Fi 6
Bluetooth®	Bluetooth 5.2	Bluetooth 5.2

Built-in peripherals

Model	NE65001	NE75001
Ambient light sensor	1	1
IR sensor	1	1
Speaker	2 × 20 W (max)	2 × 20 W (max)

Power

Model	NE65001	NE75001
ENERGY STAR®	Yes	Yes
Power	AC 100-240V 50/60 Hz	AC 100-240V 50/60 Hz
Standby power consumption	≤ 0.5 W	≤ 0.5 W
Typical power consumption	63W	68.1W

Physical

Model	NE65001	NE75001
Dimensions (W × H × D)	1483.5 × 891.3 × 100.9 mm (58.4 × 35.1 × 4.0 in)	1704.6 × 1015.7 × 101.1 mm (67.1 × 40.0 × 4.0 in)
Shipping dimensions (W × H × D)	1640 × 1010 × 185 mm (64.6 × 39.8 × 7.3 in)	1860 × 1125 × 185 mm (73.2 × 44.3 × 7.3 in)
Weight (product shipping)	32.0 kg 41.5 kg (70.5 lbs 91.5 lbs)	42.5 kg 55.3 kg (93.7 lbs 121.9 lbs)
Mount (screws)	VESA 400 × 400 mm (4 × M8 × 22L)	VESA 600 × 400 mm (4 × M8 × 22L)

Environment

Model	NE65001	NE75001
Operating temperature	0°C~40°C 32°F~104°F	0°C~40°C 32°F~104°F
Storage temperature	-10°C~60°C 14°F~140°F	-10°C~60°C 14°F~140°F
Storage humidity	10%~80% RH non-condensing	10%~80% RH non-condensing
Operating humidity	20%~80% RH non-condensing	20%~80% RH non-condensing

Software

Model	NE65001	NE75001
Whiteboarding	EZWrite 6	EZWrite 6
Wireless screen sharing	InstaShare 2	InstaShare 2
Device management	DMS	DMS
Quick access tool	Floating Tool	Floating Tool

Accessories

Model	NE65001	NE75001
Cables*	1 × HDMI (3 m 9.8ft) 1 × Touch-USB (3 m 9.8ft)	1 × HDMI (3 m 9.8ft) 1 × Touch-USB (3 m 9.8ft)
Wall mount	1	1
Pen	2	2
Remote control	1	1





Note



- * The type and quantity of cables may differ depending on the region of purchase.
- Specifications and features are subject to change without notice.
- The OPS should be equipped with fire-resistant enclosures.

Dimensions

NE65001

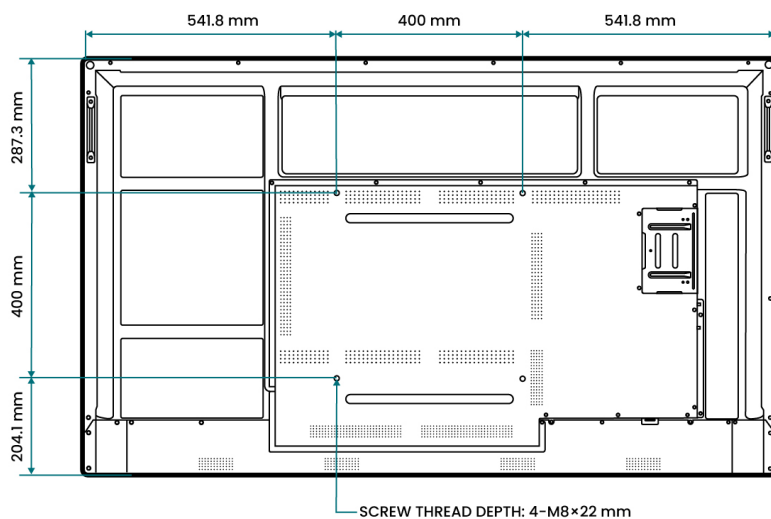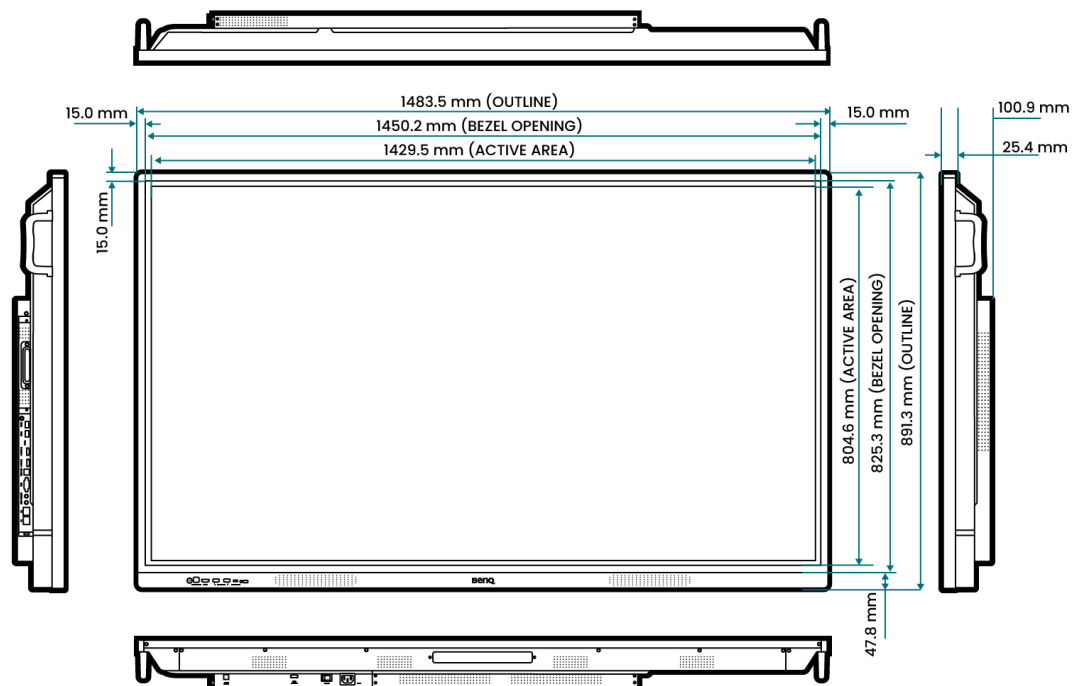

NE75001

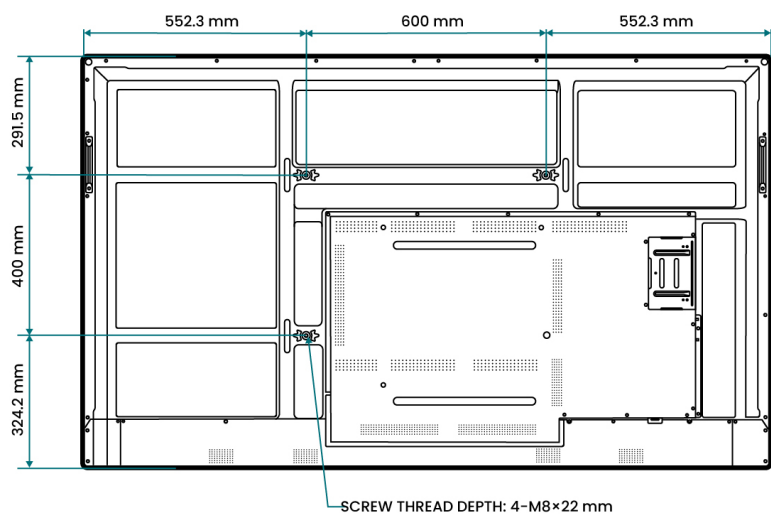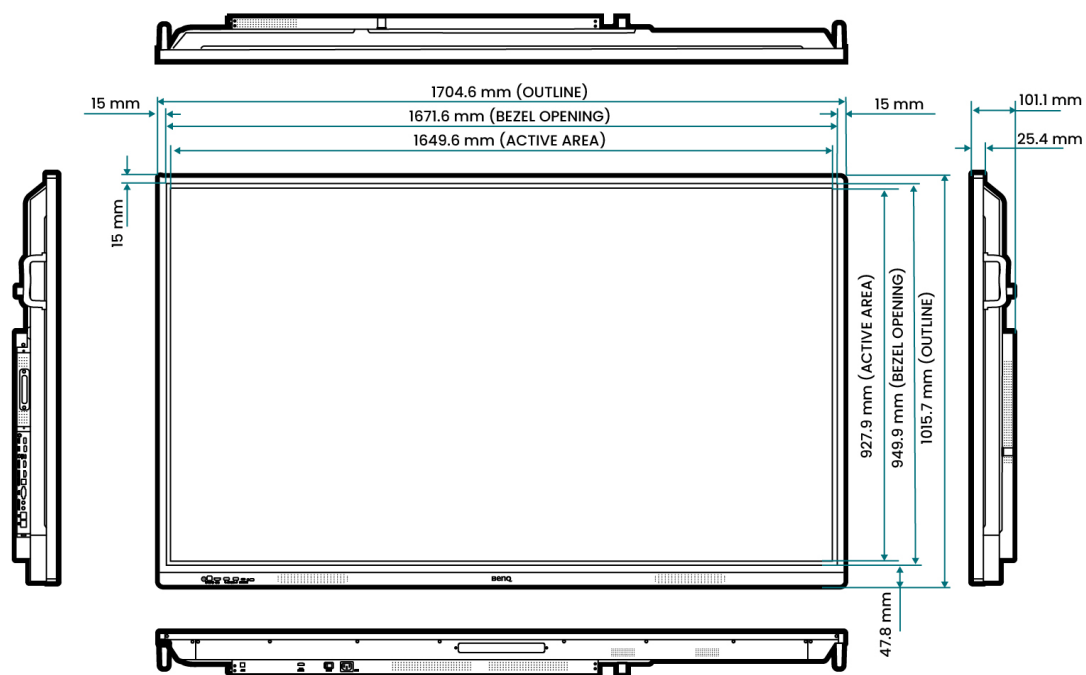

Package contents

Verify all the contents after opening the package. If any item is missing or damaged, please contact your dealer immediately.



LCD display



Pens



Remote control




Touch USB cable



HDMI cable



Wall mount with screws



User documents

- Quick start guide
- Wall mount installation guide
- Regulation sheets



Note

- Available accessories and the pictures shown here may differ from the actual contents and the product supplied for your region. And the package contents may subject to change without prior notice. For cables that are not supplied with your product, you can purchase them separately.




Important

- Ensure that there are no accessories left inside the box before discarding the packaging.
- Do not leave plastic bags within reach of young children or babies.
- Dispose of packaging materials wisely. Consider recycling the cardboard carton or storing the package for future transport of the display.

Components

Front panel

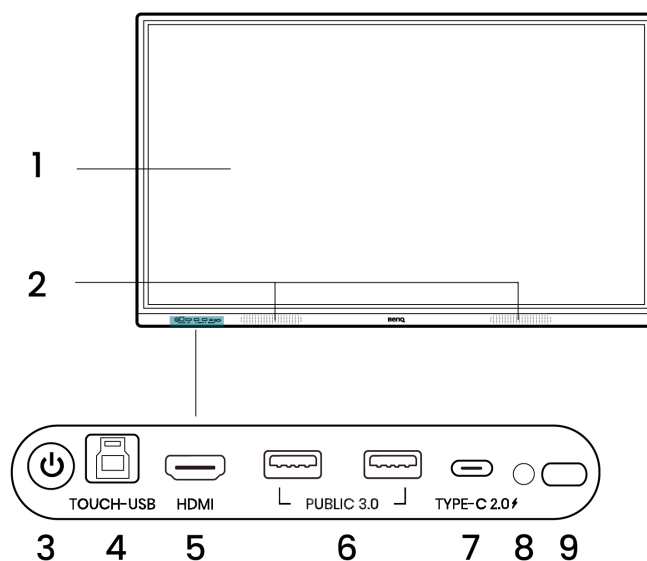

1. Touchscreen
2. Soundbar
3. Power button
4. Touch USB 2.0 Type-B port
5. HDMI in port
6. USB 3.0 Type A ports¹
7. USB 2.0 Type-C port (PD 65 W)²
8. Ambient light sensor
9. IR sensor




Note

¹ The USB 3.0 Type-A ports function as USB passthrough ports. When a laptop is connected to the display as an input source, users can use these as extra data ports for their laptop.

² The multi-purpose USB-C port can be used for data transmission and 65-watt charging.

Left panel

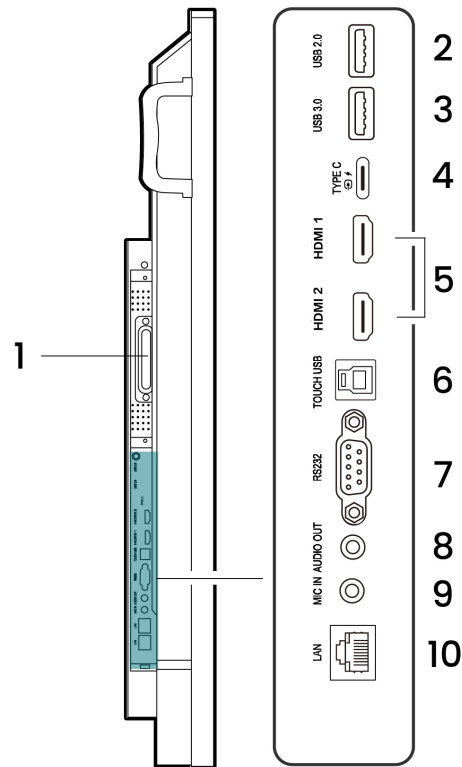

1. OPS slot
2. USB 2.0 Type-A port¹
3. USB 3.0 Type-A port²
4. USB 2.0 Type-C port
5. HDMI in ports
6. Touch USB 2.0 Type-B port
7. RS-232 port
8. 3.5 mm audio out jack³
9. 3.5 mm microphone jack⁴
10. Gigabit Ethernet port⁵

Note

¹ The USB 2.0 Type-A ports function as USB passthrough ports. When a laptop is connected to the display as an input source, users can use these as extra data ports for their laptop.

² The USB 3.0 Type-A ports are dedicated for the Bluetooth Wi-Fi adapter.

³ The 3.5 mm audio out jack does not support audio input, including microphone input from headset devices.

⁴ The 3.5 mm microphone jack only supports 3.5 mm TRS connectors.

⁵ The Gigabit Ethernet port supports data transfer speeds of 10/100/1000 Mbps.


Power delivery of USB and OPS ports

- USB-A 2.0 (at left panel) = 5V $\overline{\sim}$ 500mA
- USB-A 3.0 (at front & left panel) = 5V $\overline{\sim}$ 900mA
- USB-C 2.0 (at left panel) = 5V $\overline{\sim}$ 0.5A
- USB-C 2.0 (at front panel) = 5V $\overline{\sim}$ 3A; 9V $\overline{\sim}$ 3A; 12V $\overline{\sim}$ 3A; 15V $\overline{\sim}$ 3A; 20V $\overline{\sim}$ 3.25A
- OPS = 18V $\overline{\sim}$ 5A; 90W

Note


- $\overline{\sim}$: Direct Current (DC)
- $\sim$: Alternating Current (AC)

Bottom panel

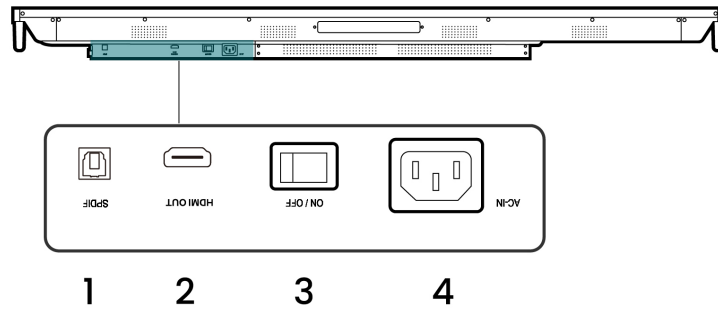

1. S/PDIF port
2. HDMI out port
3. Power switch
4. Power Input


Rear panel

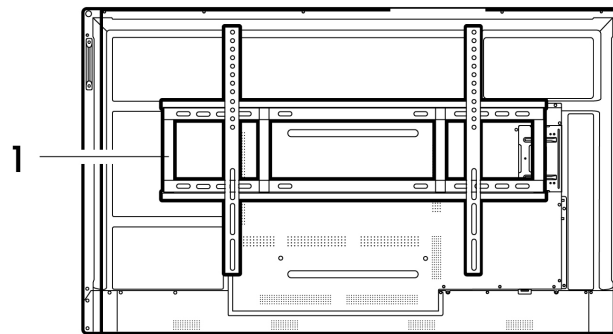

1. Wall mount (pre-installed)

VESA specifications

Screw size: M8 × 22L

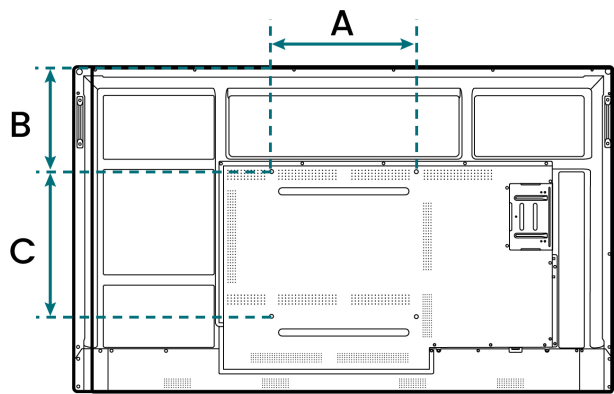

Dimension	65"	75"
A	400 mm	600 mm
B	287.3 mm	291.5 mm
C	400 mm	400 mm

Installation requirement

Category	Item
Environment	• Room temperature: 0 to 40°C (32 to 104°F) • Non-condensing relative humidity: 20 to 80% • Flat, anti-static surface with no exposure to direct sunlight, liquids, and chemicals
Hardware and peripherals	Wireless USB adapter and/or Ethernet cable
Tools	• Scissors • Phillips screwdriver • Padding • Anti-static wrist strap

Installation and Configuration

This chapter provides specific hardware and firmware installation and configuration steps.


Unboxing




Warning

To prevent serious physical injuries and damages to the display, ensure that the display is installed by at least two qualified technicians. BenQ accepts no liability for installations not performed by a professional technician.


1. Place the box in an upright position on a clean, dry, stable surface.
2. Remove the box.
 - a. Cut the box straps.
 - b. Unfasten the clips. Simultaneously pinch the handles together, and then pull it out. The total number of clips varies by model.

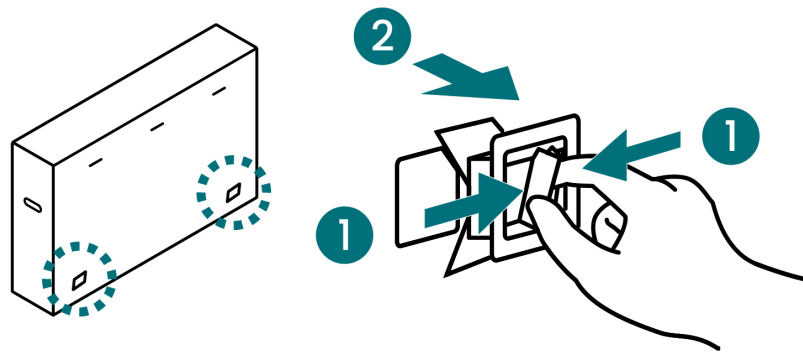

- c. Using the flaps on the side, carefully lift the box off the display.

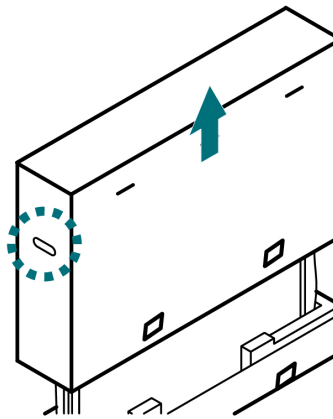

3. Remove the panel protectors.

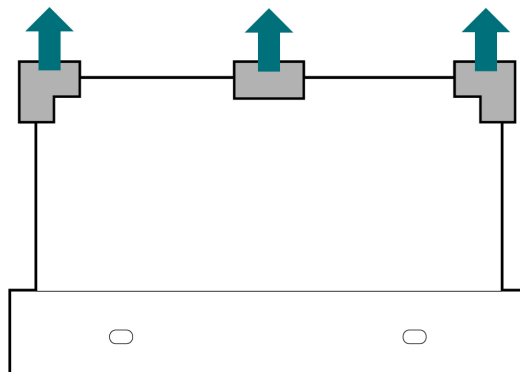

4. Collect all accessories.



Important


Ensure that each box and their contents are accounted for before disposing any of the original packaging. For details, see [Package contents](#).

5. Carefully cut the protective cover.



Tip

For easier removal of the display, cut three sides of the cover.

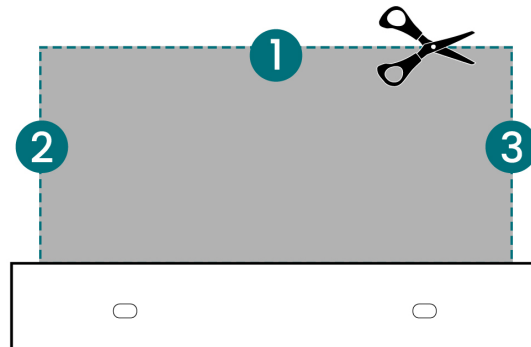

Mounting

The interactive display comes with a preinstalled wall mount that can be replaced with a different mount to meet specific requirements. Refer to the third-party wall mount or trolley mount user guide for the installation instructions.



Warning

To prevent serious physical injuries and damages to the display, ensure the following:

- The display is installed by at least two qualified technicians. BenQ accepts no liability for installations not performed by a professional technician.
- The display is securely mounted in accordance with the installation instructions.

Mounting the display on a wall




Note

The images shown here are for reference only and may differ from the actual appearance of the product.



Important

To maintain proper ventilation, ensure that there is at least 10 mm (0.39 in) of clear space between the back of the display and the wall. Take note of this when installing the wall mount.

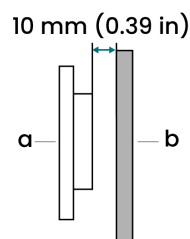


(a) Display
(b) Wall

1. Ensure that the mounting plate is securely attached to the wall.
2. Ensure that the mounting brackets are securely attached to the display.
3. Carefully lift the display to its upright position, and then carry it towards the plate.




Important


- The display should be handled by two people, one person on each side.
- Use both hands to lift the display. Keep one hand on the handle with the other hand supporting the side or bottom corner.

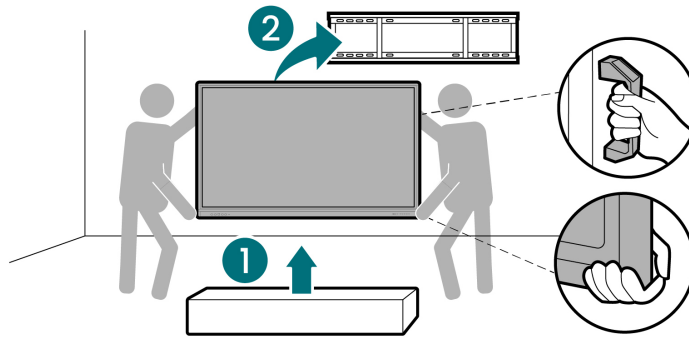

4. Align the bracket hooks with the plate, and then carefully mount the display onto the wall.

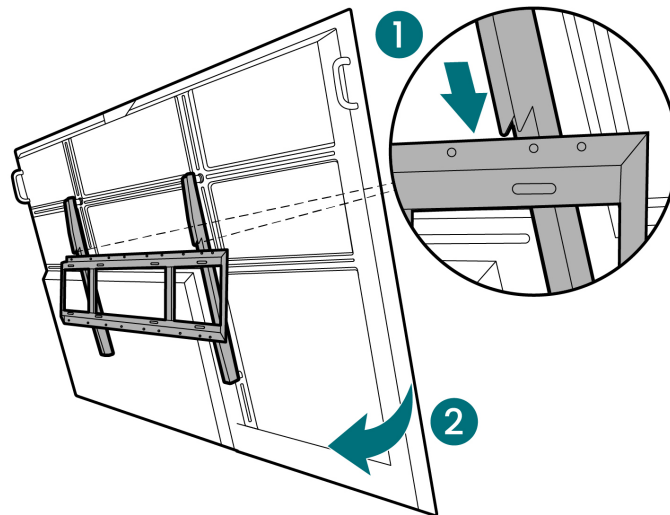


5. Attach the locking screws until they are fully secured to the mount.

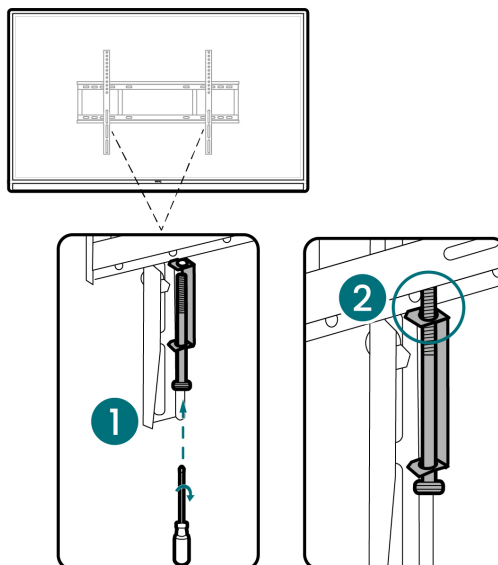

Mounting the display on a trolley

1. Lock all the trolley wheels in place.

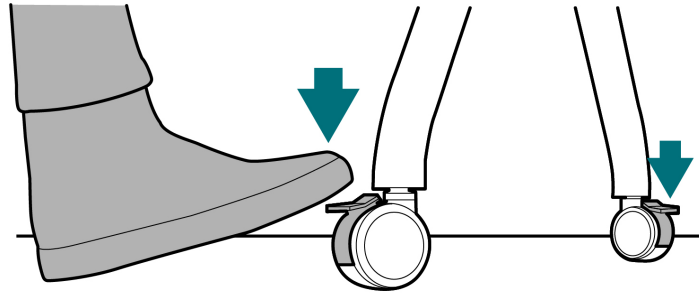


2. Ensure that the mounting brackets are securely attached to the display.
3. Carefully lift the display to its upright position, and then carry it towards the trolley.




Important


- The display should be handled by two people, one person on each side.
- Use both hands to lift the display. Keep one hand on the handle with the other hand supporting the side or bottom corner.

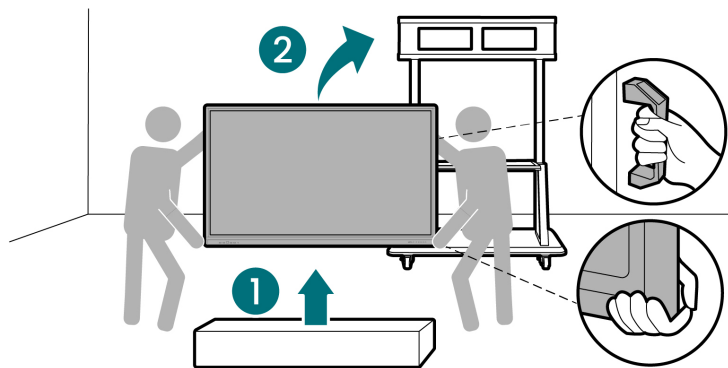

4. Align the bracket hooks with the mounting plate, and then carefully mount the display onto the trolley.

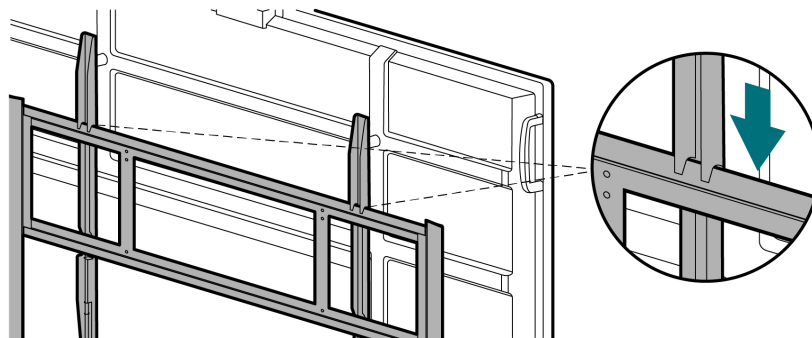

5. Attach the locking screws until they are fully secured to the mount.

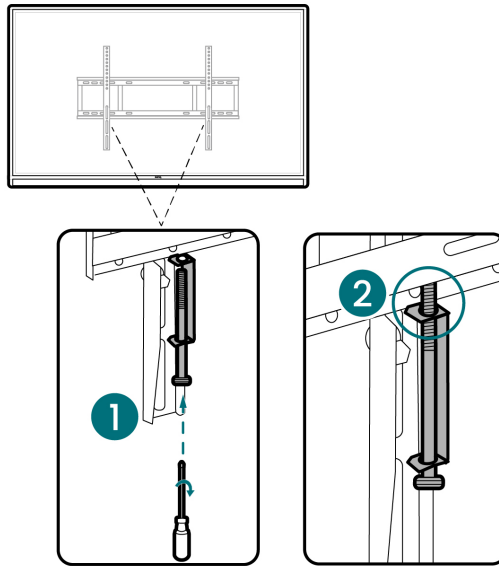

Removing the original wall mount



Note

The images shown here are for reference only and may differ from the actual appearance of the product.

1. Place padding on a flat, horizontal, and object-free surface.



Important

- Ensure that the padding is clean, soft, and dry to prevent leaving marks on the screen.
- Ensure that the size of the padding is larger than the display.


2. Gently lay the display on the padding with the screen facing down.




Warning

To prevent damages to the display, do not step, lean, or put pressure on the display when removing the wall mount.

3. Remove the screws securing the mounting plate.
4. Carefully remove the plate.

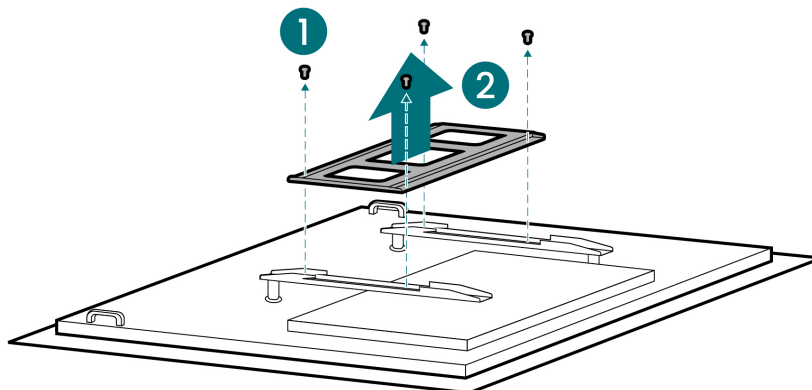

5. (Optional) Remove the mounting brackets.
If the height of the brackets needs to be adjusted or the brackets themselves need to be replaced to match a different wall mount, you can remove the existing brackets.
 - a. Remove the screws securing the mounting brackets.
 - b. Carefully remove the brackets.

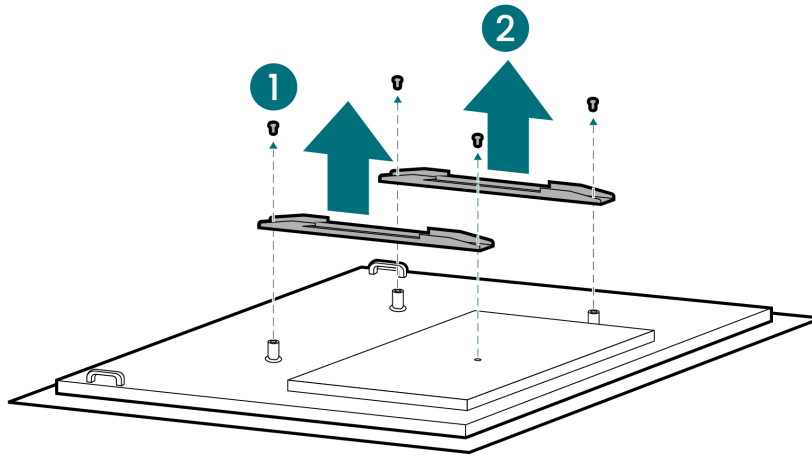

Installing mounting brackets



Note

The images shown here are for reference only and may differ from the actual appearance of the product.

1. Place padding on a flat, horizontal, and object-free surface.



Important

- Ensure that the padding is clean, soft, and dry to prevent leaving marks on the screen.
- Ensure that the size of the padding is larger than the display.


2. Gently lay the display on the padding with the screen facing down.



Warning


To prevent damages to the display, do not step, lean, or put pressure on the display when installing the mounting brackets.

3. Align the holes of the mounting brackets with the holes at the back of the display. Adjust the placement of the brackets depending on the height requirements of the room. For details, see [VESA specifications](#).
4. Attach the screws to secure the brackets in place.

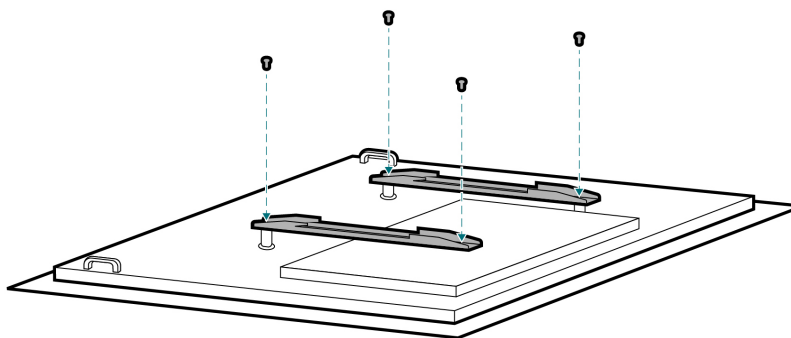

Important

Ensure that all the all screws are securely attached to the brackets. The recommended torque is 470-635 N•cm (41.59-56.20 lb•in).

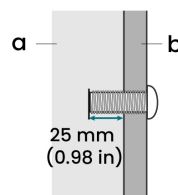

- (a) Display
(b) Wall mount bracket

Powering on the display


1. Ensure that the power cord is connected to the display and a power source.




Important

- The supplied power cord supports 100-240V AC.
- The cord varies depending on the region. Make sure to use the appropriate type.
- Protect the power cord from being snagged, stepped on, or pinched, particularly near the plug and the point where it is connected to the display.
- Be aware of power loading when using extenders or multiple-outlet power boards.

2. Ensure that the power switch is turned on.

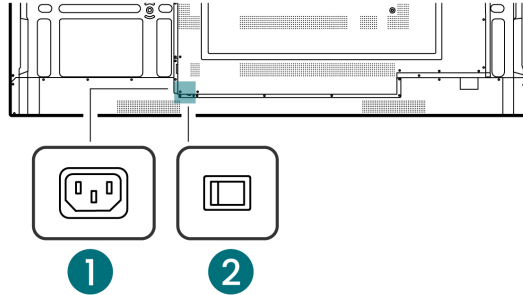

3. Press the Power button on the front control panel or remote control.

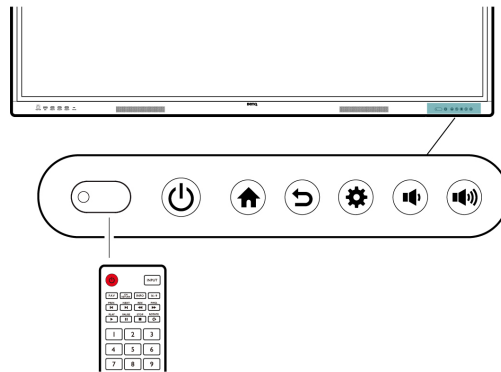

External PCs

Use a different operating system and expand the computing capacity of the BenQ Board by installing an OPS slot-in PC.


Installing an OPS slot-in PC

1. Power off the BenQ Board.
2. Disconnect the power cord from the electrical outlet.
3. Remove the slot cover.
 - a. Locate the OPS slot cover.
 - b. Remove the screws and the cover.




Tip


Store the cover in case there is a need for it in the future.

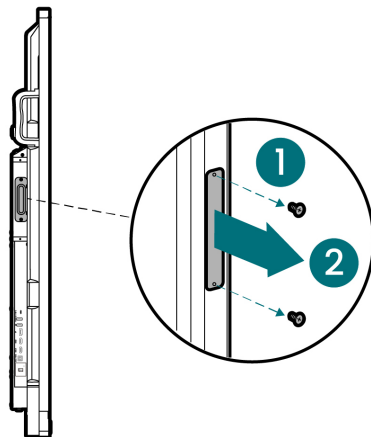

4. Slide the PC into the slot until it locks in place.

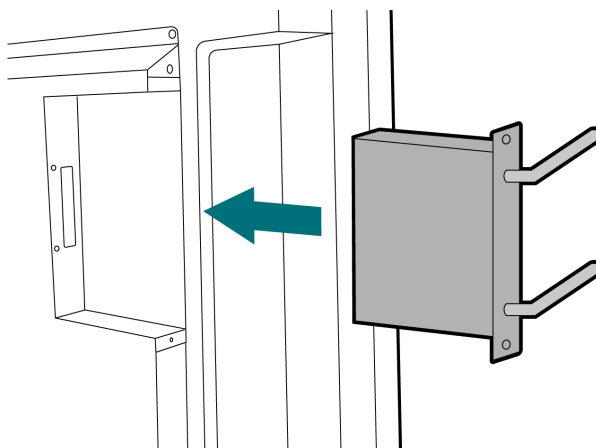

5. Attach the screws.

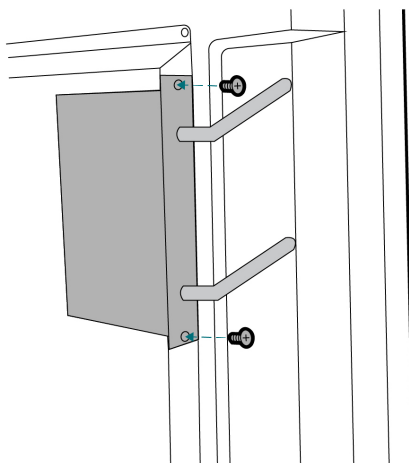


6. Connect the power cord to the electrical outlet.

7. Power on the BenQ Board.

Setting up BenQ Launcher


- 1. Power on the BenQ Board.
- 2. Set the language and vision settings, and then tap **Start**.

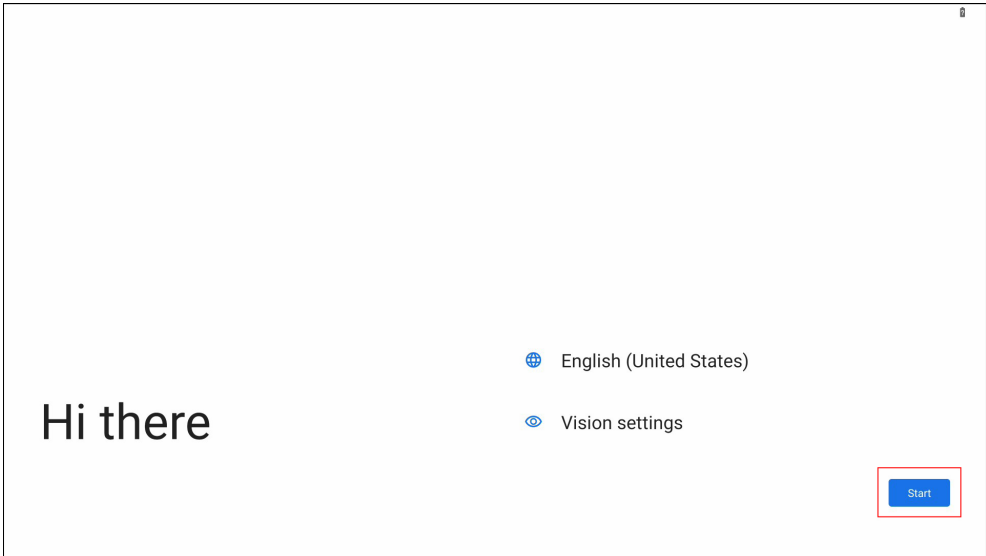


- 3. Perform the steps relevant to your internet connection.

Internet connection	Steps
Wi-Fi	a. Select a network. b. Enter the network credentials. c. Tap Next .
Ethernet	Skip to step 4.
Offline	a. Tap Set up offline . b. Set the date and time. c. Tap Next . d. Skip to step 7.


- 4. Review the permissions, and then tap **Accept**.

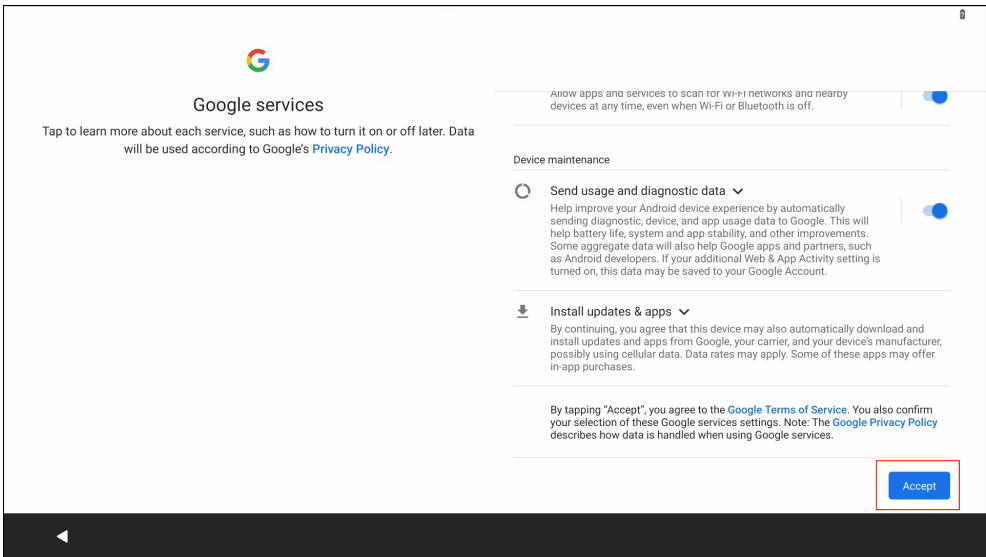


- 5. Tap **Skip**.

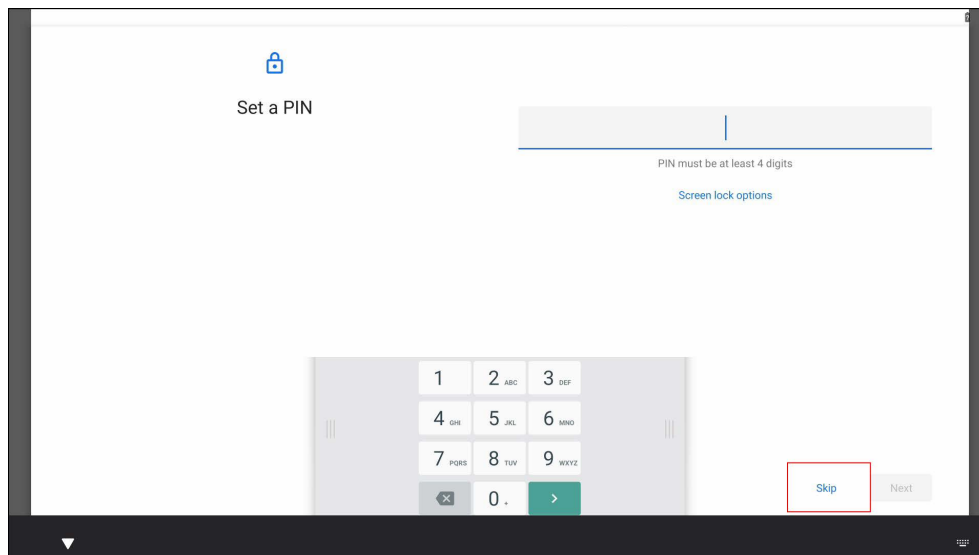

6. Tap **Skip** anyway.

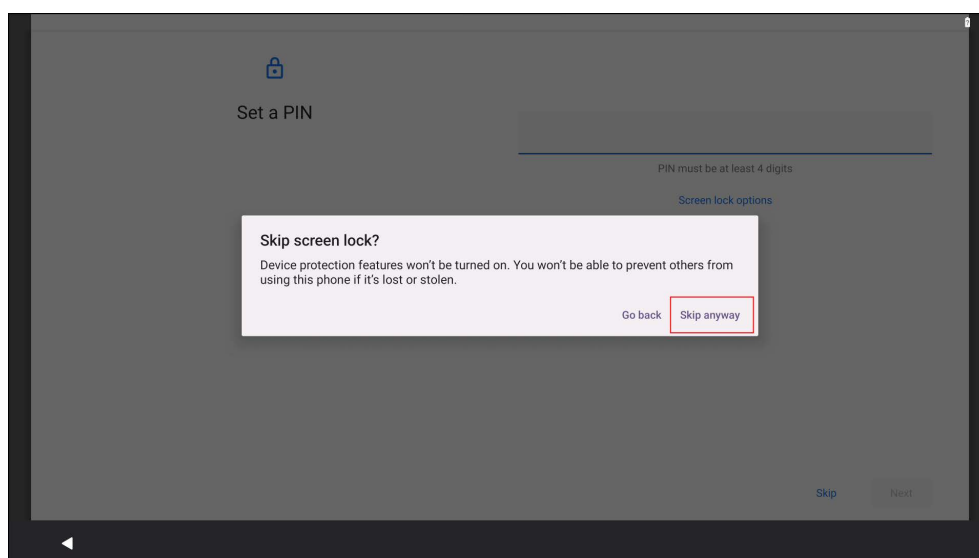

7. Select the theme setting.

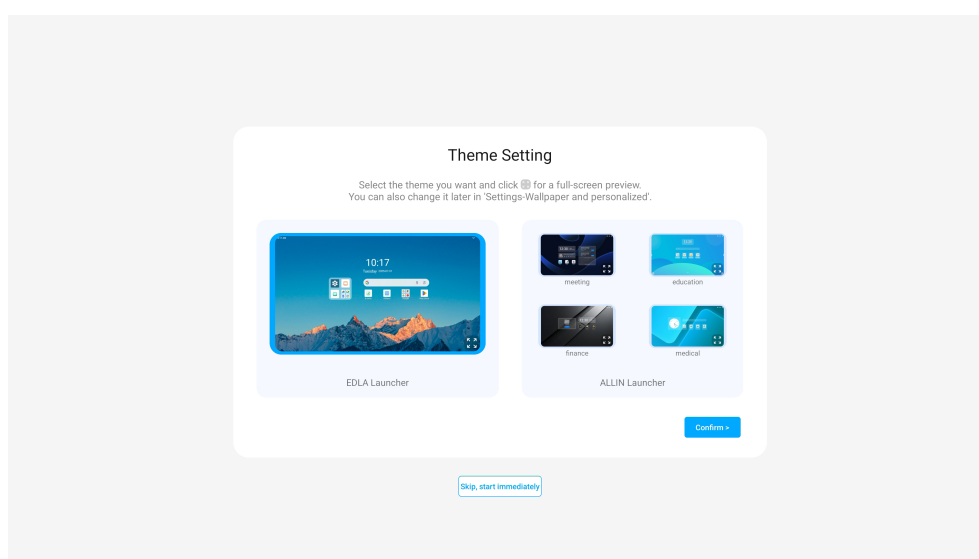

Basic operations

This chapter describes the basic interactive display operations.

Power button

LED status

LED behavior	Display status	Description
 Solid green	On	The display is powered on and awake.
 Blinking red	Asleep	The display is powered on and in sleep mode.
 Solid red	Powered off	The display is powered off, connected to a power source, and the power switch is on.
 Off	Power switch off	The power switch is off or the display is not connected to a power source.


Operations

Operation	User action	Result
Power on	Press the button while the display is powered off.	The displays powers on.
Sleep	Press the button while the display is powered on and active.	The display goes into sleep mode.
Wake up	Press the button while the display is in sleep mode.	The display wakes up.
Power off	Press and hold the power button for three seconds.	A countdown timer appears and powers off the display in 10 seconds.
Force power off	Press and hold the power button for 10 seconds. If this fails, use the power switch at the bottom of the board.	The display shuts down.
 Important: Use this method only when the display is unresponsive.		

User interface

Home screen

After logging into the BenQ Board, users will have access to their own Home screen. Users can personalize this screen by changing their wallpaper, adding their preferred app shortcuts and widgets, and customizing the layout to match their workflow.

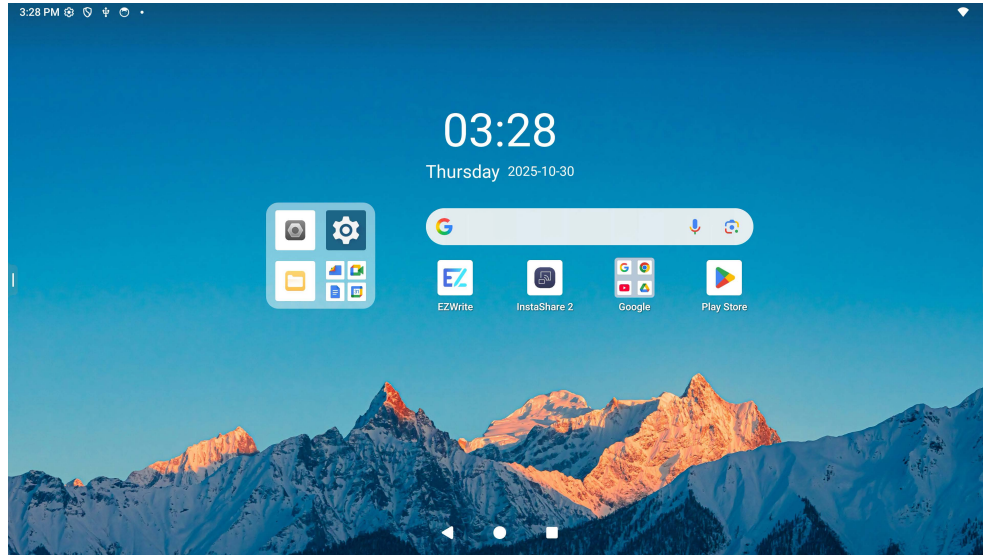

1. ◀ Return
2. ● Home
3. ■ Recent

Changing the wallpaper

1. Click to show the background.
2. Select a wallpaper image.

Adding app shortcuts and widgets


1. Hold to show background applications.
2. Tap Widgets.

Removing apps and widgets

1. Tap and hold the app or widget. The **Remove box** appears.
2. Drag the app or widget to the box.

Managing notifications

Click to go to notification settings.

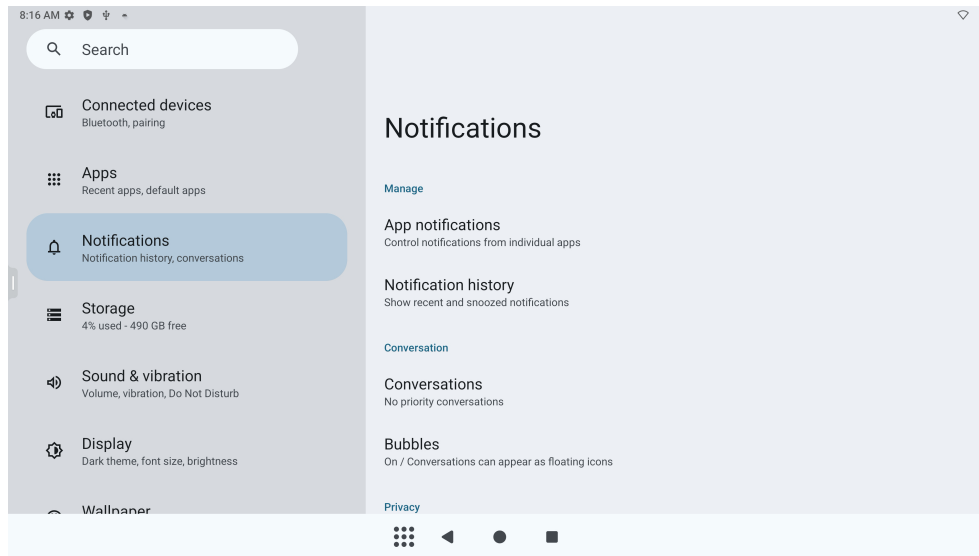

Sidebar

Press the sidebar shortcut key arrow, or slide the edge of the screen inwards(when turn off the touch signal switch) to tune out the sidebar menu that are Return, Homepage, Source Settings, System Settings, Comment, Toolbox.

No.	Icon	UI element	Description
1		Return	Return.
2		Homepage	Switch to Android homepage.
3		Source	Source Settings, Source Preview.
4		System Settings	Network Settings, Device Management, Wallpaper, Date and Time, Language, Power Settings, Security, More Settings, About.
5		Comment	Open comment.
6		Toolbox	Open it to quickly use small tools and control brightness and sound.
7		Half screen pull down	Click to move the plane down half a screen.
8		Multiple Windows	In an application interface that supports the multi-window function, click this button to switch the application to window mode display.

Floating Tool



The Floating Tool gives you access to different annotation and screen recording tools. There are three ways to open the Floating Tool:

1. Sidebar: Tap **Floating Tool**  from the sidebar menu.
2. Gesture: Hold two fingers on the screen for three seconds.
3. Always on: Tap  on the screen to expand the Floating Tool.

Enabling the Floating Tool gesture

1. Press the **Settings** button . The BenQ Board settings menu appears.
2. Tap **Advanced**.
3. Enable **Floating Tool gesture**.

Enabling the always-on Floating Tool

1. Open **EZWrite 6**.
2. On the menu bar, tap  > . The EZWrite settings menu appears.
3. Enable **Always-on Floating Tool**.

Button		Description
 / 	Minimize/Expand	Minimize or expand the Floating Tool.
	Close	Close the Floating Tool.
	Pen	Enable the Pen tool, which allows you to write or draw over any content displayed on screen.
	Highlighter	Enable the highlighter tool, which allows you to highlight any content displayed on screen.
	Laser pointer	Enable the laser pointer.
	Eraser	Erase annotations. Use the finger or strikethrough eraser, or clear all on-screen annotations.
	Toolbox	Open the toolbox to access the calculator, timer, stopwatch, scoreboard, random draw, spotlight, unit converter, and spinner.
	Screen recording	Record the screen including audio and save it as video.
	Screenshot	Select between taking a regular screenshot, which you can save or send to EZWrite, or freezing the screen.
	Touch	Hide all the annotations and operate the screen.

Connections

The BenQ Board has several ports that can be used to input and output data and media.


Use	Description	Ports
Touch	These connections allow users to control their laptops from the BenQ Board touchscreen. For details, see Touch .	• USB-C • USB Type-B with HDMI
Input	These connections allow users to display their device screen and play audio and video content on the BenQ Board. For details, see Input .	• HDMI • 3.5 mm microphone jack
Output	These connections allow users to extend the BenQ Board screen to another device. For details, see Output .	• HDMI-OUT* • S/PDIF • 3.5 mm audio out jack
Device management	This connection allows administrators to configure the BenQ Board settings with their laptop or local management console. For details, see Device Management .	• RS-232

**Important**

BenQ strongly recommends connecting devices directly to the display for optimal performance. The BenQ Board supports a maximum of up to four USB tiers. The use of additional USB hubs, extenders, and faceplate devices, introduce additional tiers and other external factors such as poor cable quality, radio frequency interference, electrical interference, and such that may affect the touchscreen functionality or cause other issues.

Touch


The touch module of the display supports plug-and-play operation. Users do not need to install additional drivers on their device computer. There are two ways to enable touch connections: using the USB-C port and using the Touch USB port.

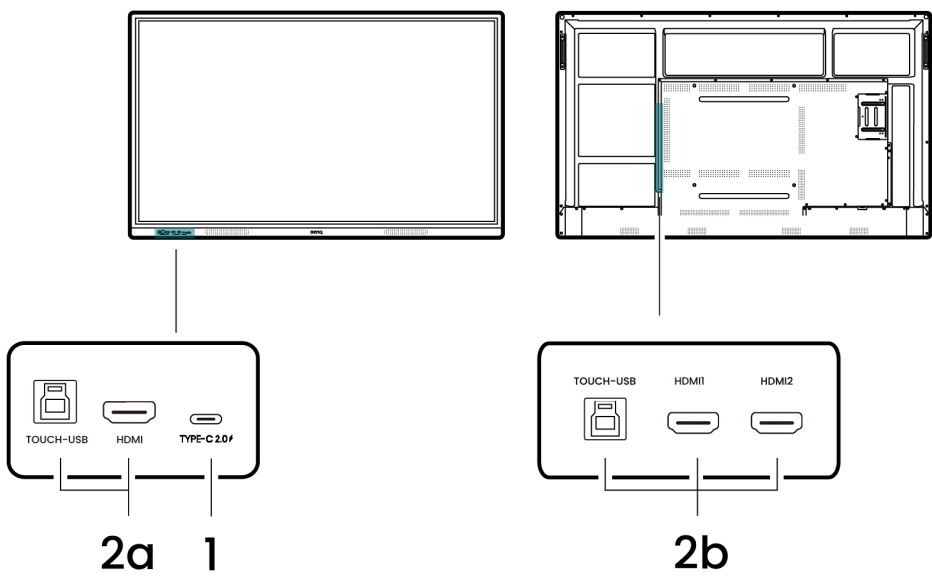

No.	Connection	Configuration
-----	------------	---------------

Connect the input device to the USB-C port on the front panel.


1 USB-C



The display has two Touch USB ports that are assigned their own dedicated media input ports.

- HDMI** must be used with the **TOUCH-USB** port on the front panel.
- HDMI1/HDMI2** must be used with the **TOUCH-USB** port on the left panel.

2 Touch USB

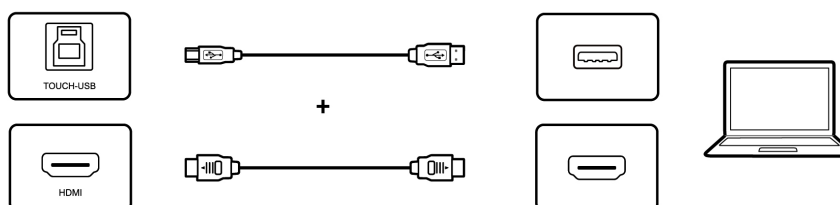

Important


- Avoid blocking the inner sides of the touchscreen frame to ensure a smooth and accurate touch experience.
- If there are issues with the image quality when using a Touch USB connection, use another USB Type-A to Type-B cable.

Input

Connection	Configuration
------------	---------------


Connect the input device to any of the HDMI ports on the front and left panels.

HDMI



Connect the microphone to the 3.5 mm jack on the left panel.

3.5 mm microphone jack






Output

Connection	Configuration
------------	---------------


Connect the output device to the HDMI out port on the bottom panel.

HDMI out



Connection	Configuration	
S/PDIF	Connect the audio output device to the S/PDIF port on the bottom panel. 	
3.5 mm audio out jack	Connect the audio output device to the 3.5 mm audio out jack on the left panel. 	

Device Management

Connection	Configuration	
RS-232	Connect the management console using the RS-232 port on the bottom panel. 	


USB ports

USB connectors

When connecting devices to the any of the display's USB ports, ensure the following:

- The cable length is recommended to be less than 5 m (16.4 ft) for USB 2.0 slots and 3 m (9.8 ft) for USB 3.0 slots.
- The BenQ Board limits the number of USB connections. If all USB slots are occupied and a USB hub is connected to the display, it will not recognize any new USB input devices.

Remote control

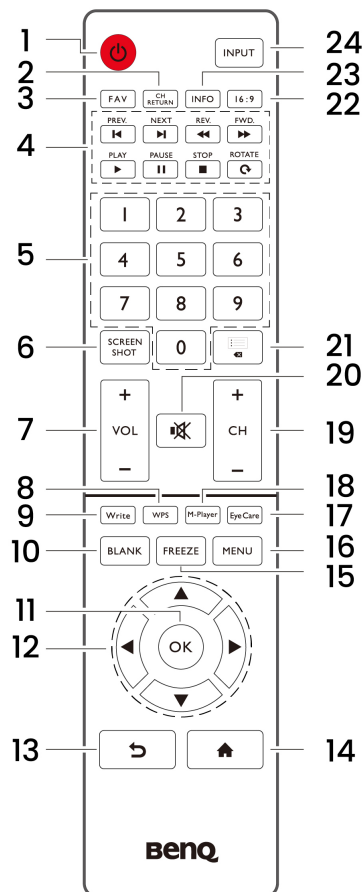

1. Power button
2. Channel return button
3. Favorite program button
4. Multimedia buttons
5. Numeric buttons (0-9)
6. Screenshot button
7. Volume buttons
8. WPS button
9. Write button
10. Blank screen button*
11. OK button
12. Direction buttons
13. Return button
14. Home button
15. Freeze screen button
16. Menu button
17. Eye-care button
18. Media player button
19. Channel selection buttons
20. Mute button
21. Channel list button
22. Meeting mode button
23. Information button
24. Input source button



Note


* The behavior of the blank screen button can be configured in the **Display** settings menu.

Usage guidelines

- Keep the remote control cool and dry at all times. Prolonged exposure to direct heat and humidity may cause it to malfunction.

The following guidelines are only applicable when using the IR sensor.

- Keep the IR sensor away from direct sunlight or a strong light source as this may disrupt the remote control signal. Adjust the room lighting or the placement of the display to ensure proper communication with the IR sensor.
- The maximum remote control distance is 8 m (26.24 ft) from the IR sensor.
- The remote control must be within the horizontal range of 60 degrees and the vertical range of 50 degrees to ensure proper transmission to the IR sensor.

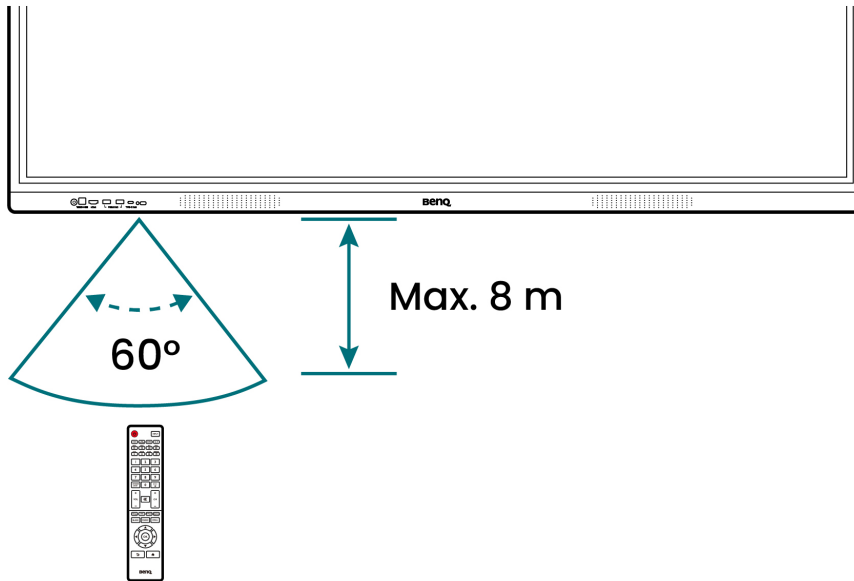


System Settings

Network Connection


Wireless

1. Select sidebar menu > All applications > System Settings > Network and Connection > Wireless.
2. Turn on WIFI switch.
3. Select the network to be connected from Network List, enter the connecting password, and then success to connect the wireless network.
4. If there is no desired network in Network List, it can manually add a network.

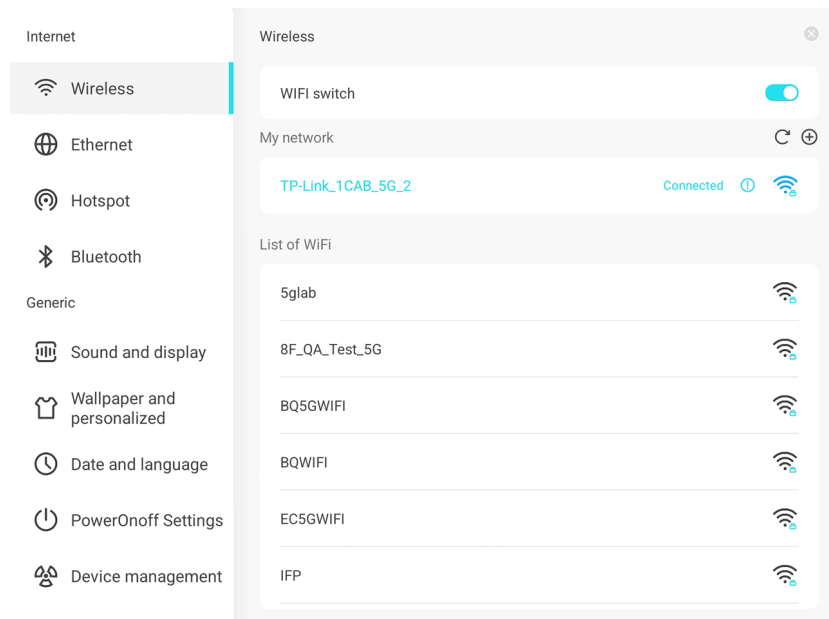

Wired Network

1. Connect one end of the network cable to the network port of this machine before using wired network, and then connect the other end to a router.
2. Select sidebar menu > All applications > Network and Connection > Ethernet.
3. Turn on connecting switch.
4. Select "Auto" in IP settings, and then the machine will automatically obtain an IP address and connect to network.
5. Select "Static" in IP settings, manually input IP address, gateway, network prefix length, DSN address, and then click "Finish" to connect to network.

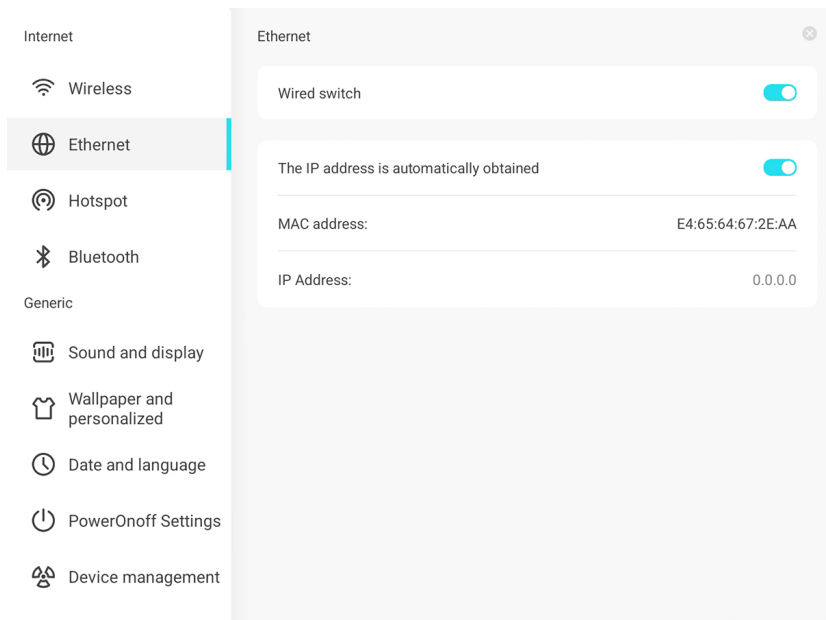


Note

There are two network ports on this machine, either of which can be connected to wired network (choose one of them). When one network port is connected with a router, the other port can be connected with an external device. At this time, the Android system of this machine, OPS (Windows system only) and the external device form a LAN, which can be connected to network at the same time.

Wireless Hotspot


1. Select sidebar menu > All applications > System Settings> Network and Connection > Hotspot.
2. Turn on hotspot switch.
3. Enter the hot spot name in the textbox, and the system defaulted name is "IWB" which is changeable into other name.
4. Select "encrypt or not".
5. After encryption is selected, the system will automatically configure a password or it can also enter a password in the password box.
6. Click "OK" to save setting, and then this network can be found by other WIFI devices within the range when they search WIFI networks.

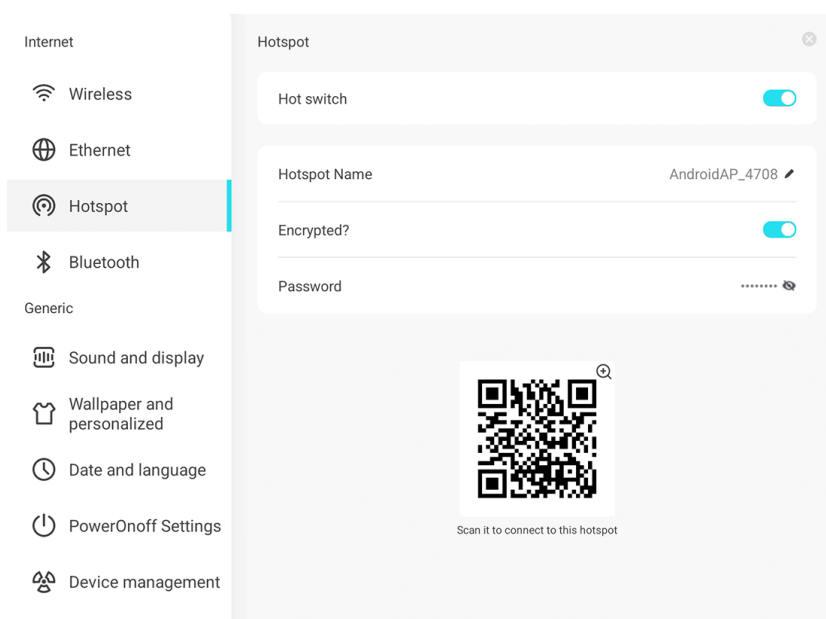

Note: Please set the network password and complicate it as much as possible.

Bluetooth


1. Select sidebar menu > All applications > System Settings > Network and Connection > Bluetooth.
2. Turn on bluetooth switch.
3. Click "search" to find the connected Bluetooth device.
4. Choose the bluetooth device pair to connect.

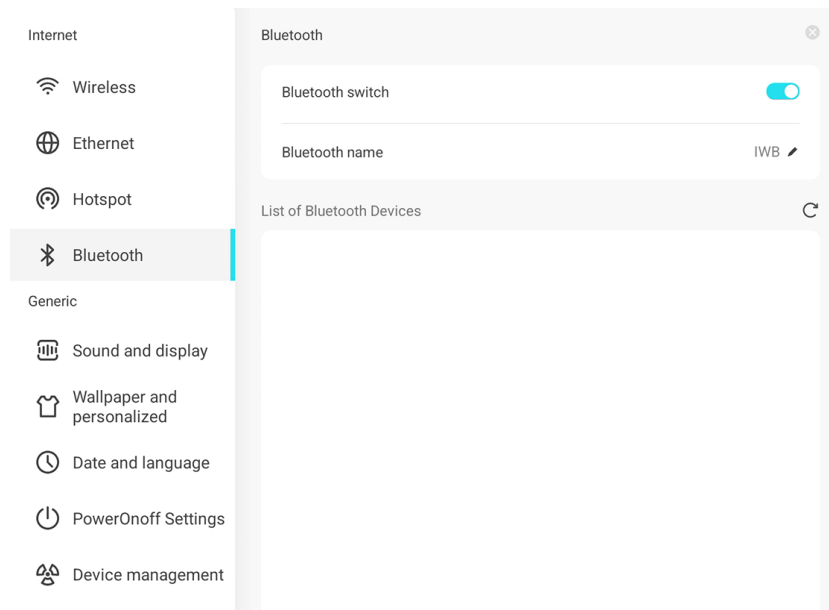

Sound and Display

You can adjust the sound and display effects on this page.

- Image mode: Standard, Vivid, Eye Protection.
- Sound mode: Standard, Music, Cinema, Intelligent sound effects (automatically identify scenes, intelligently adjust sound effects, only supports local players).

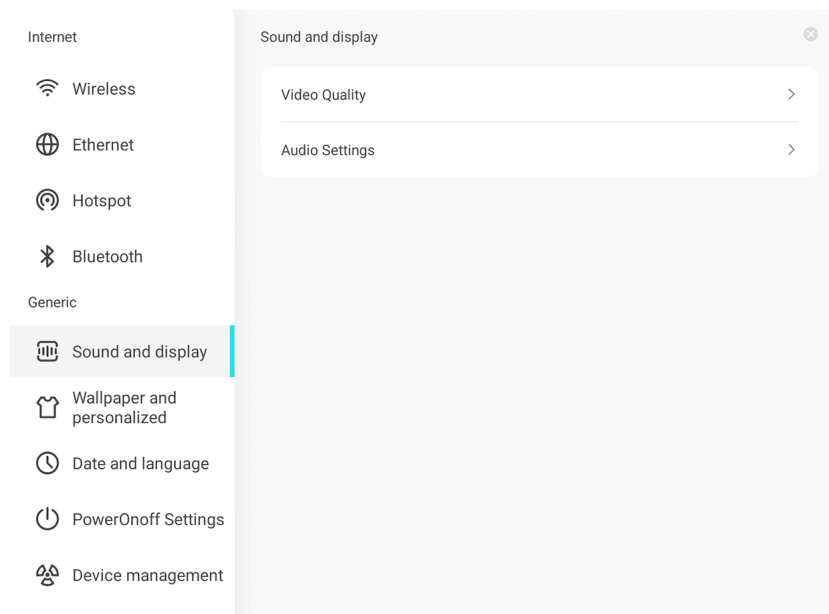

Personalization


You can choose between EDLA theme and AOSP theme.

You can choose the rotation time of wallpaper.


The system comes with 4 wallpapers by default.

Custom wallpaper suggestions:

- Size: 3840*2160
- Format:JPG/PNG
- Size: within 5M

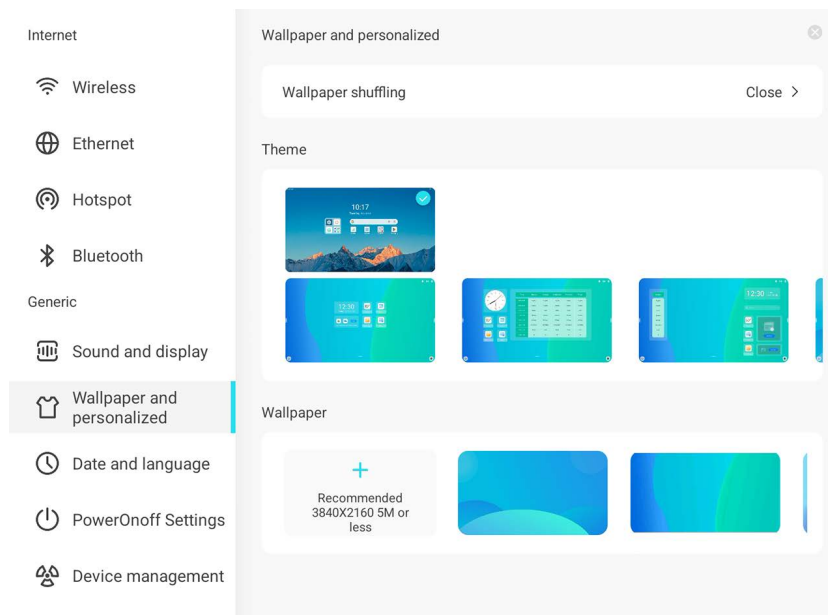

Date and Language

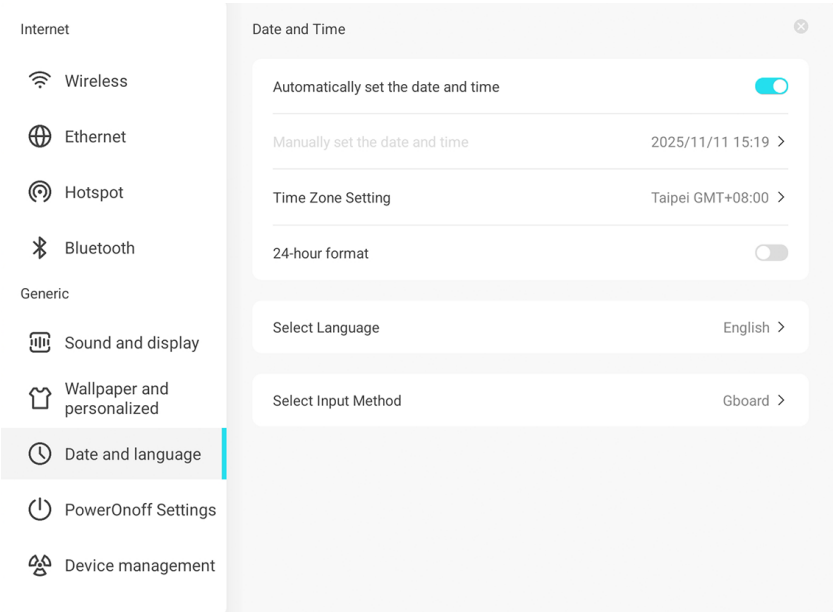


Menu item	Description
Automatic date and time setting	You can automatically obtain the local date and time through the network, including wireless and wired networks.
Manual date and time setting	You need to turn off the automatic setting before you can edit the current date and time. This function takes effect with scheduled power on and off.
Time zone setting	You can adjust the local time zone.
24-hour system	You can choose between 12-hour system and 24-hour system, click to take effect immediately.
Select language	Open the Android settings menu. For details, see Android settings .
Select input method	Switch to the appropriate input method application on this page.

Power Onoff Settings


Schedule startup

- Customizable startup time within a week.
- Supports settings a single time for multiple days.

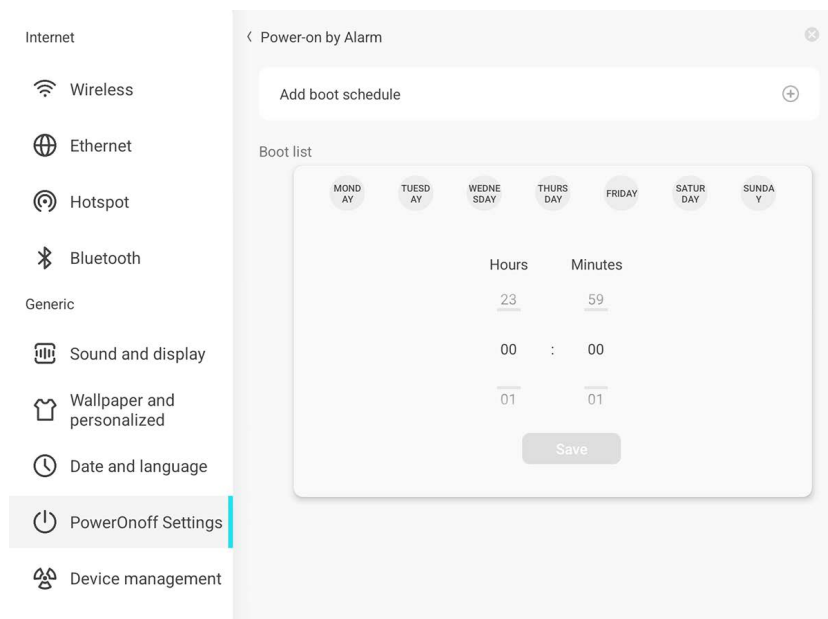

Timer shutdown


- Customizable startup time within a week.
- Supports settings a single time for multiple days.

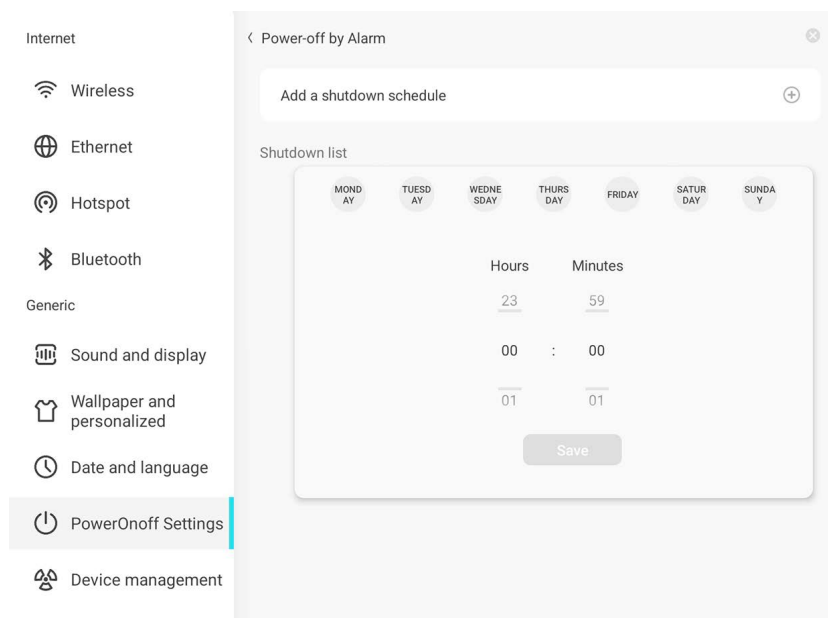

Power Mode

Single selection


- Turn on machine after powering on: after turning on the hard switch, the device is turned on automatically.
- Enter standby mode after powering on: after turning on the hard switch, the device enters standby mode automatically.
- Memory after powering on: the power mode depends on the user's habit, and memorize the last power mode.

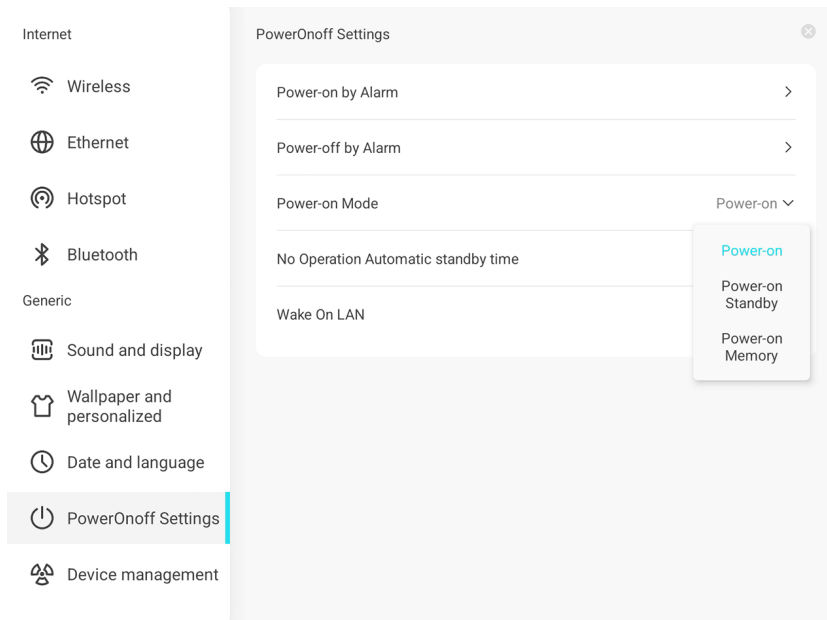

Time for Automatic Standby Without Operation

Single selection

- Non-standby: keep the device in running status.
- 30 minutes / 1 hour / 2 hours / 4 hours: the device will automatically enter standby mode when it reaches the set operating time and there is no operation in the process.

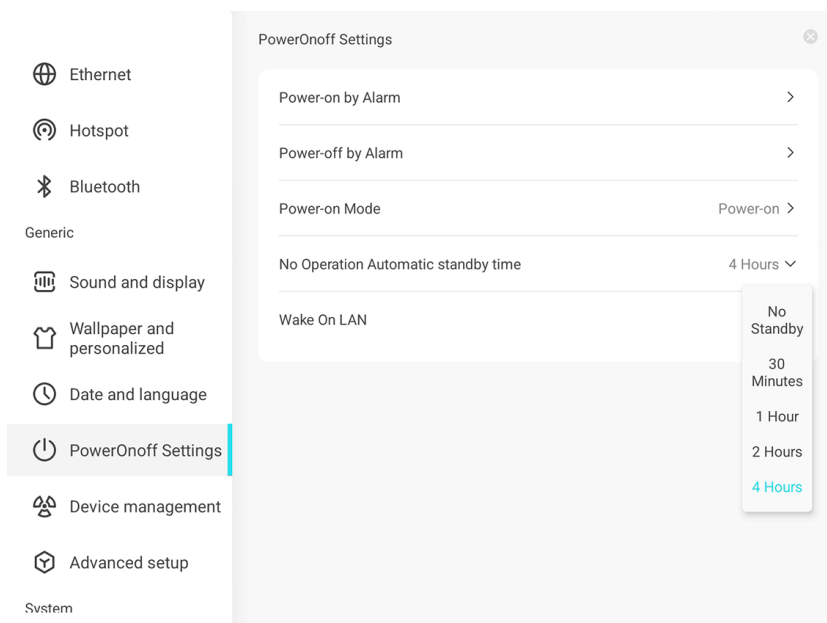



Note

Operation under sources cannot be recognized, a standby prompt pops up when the set time is exceeded.


Wake on LAN

After matching the correct MAC address, the device can be woken up through the network.

Device Management


Microphone

- When the device has a built-in microphone, it will be displayed below.
- Other microphones can be connected and displayed in the list.

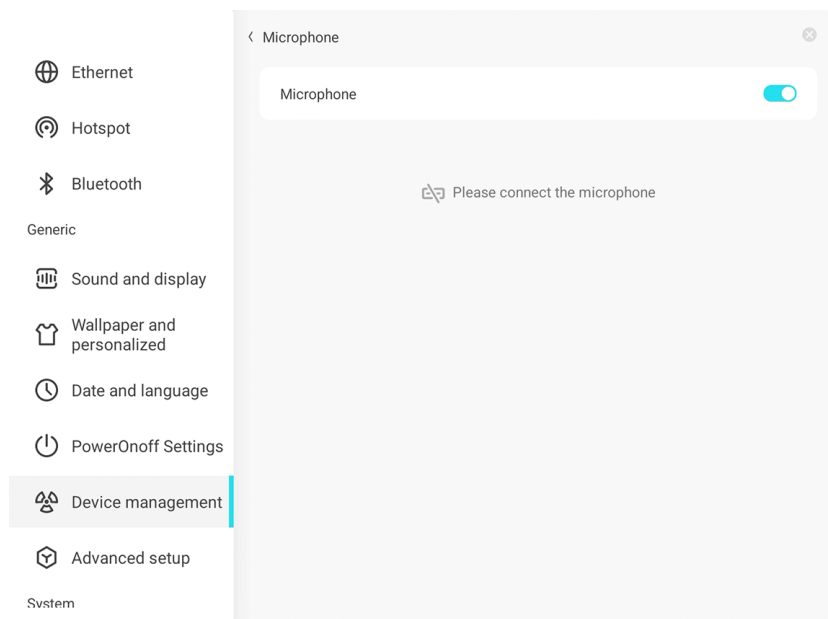


Camera

- If the device has a camera, it will be displayed below.
- Other cameras can be connected and displayed in the list.

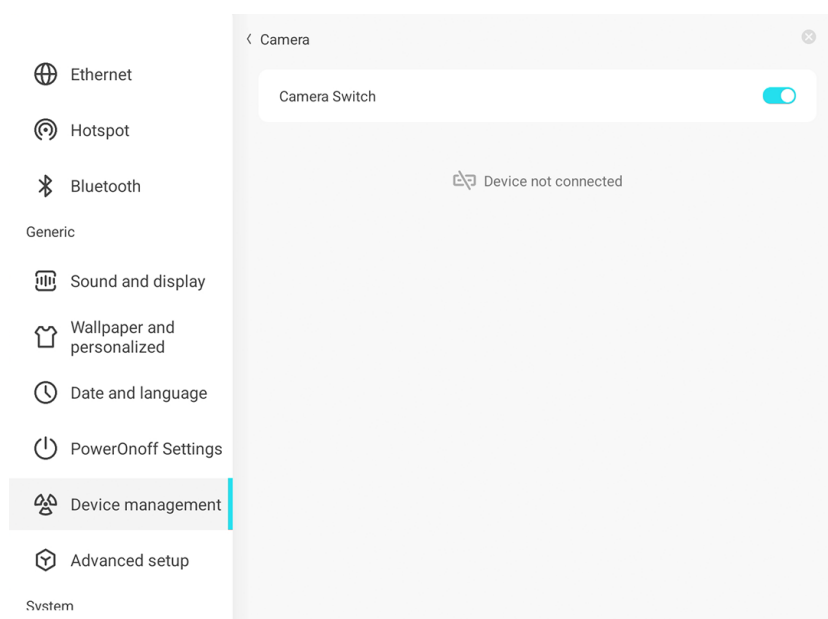


Advanced Setting

You can set gesture operation, global annotation, NFC, floating ball, sidebar gesture switch, voice assistant.

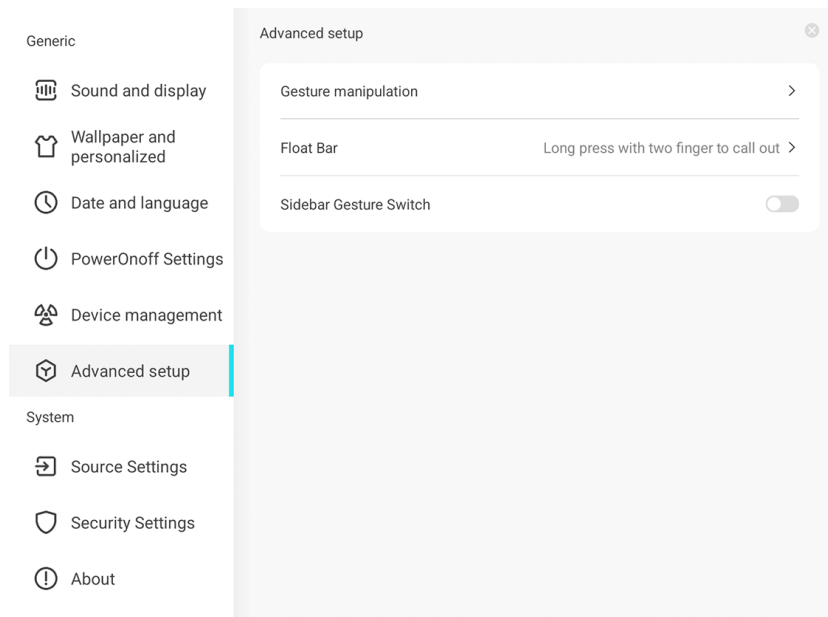

Gestures


- Three-finger swipe down: Swipe down to take a screenshot, you can take a screenshot directly.
- Five-finger pinching: Shrink the application that supports small windows.
- Five-finger swipe up and down: Swipe down with five fingers to pull down half of the screen. In addition to clicking the buttons on both sides of the screen to swipe up, you can swipe up with five fingers again to exit half of the screen.
- Five-finger screen off: The screen will turn off after 3S. The countdown animation needs to follow the hand and edge judgment. After the screen is off, touch it again to wake it up; it supports writing/annotation.
- Single-finger screen flicking: Drag the screen with one finger (the dragging area is the bottom menu bar), flick it out and release it to trigger this function; you can flick the screen left and right, up and down (trigger the two-screen/four-screen split of multiple windows according to the range of the flicking screen).
- Task split screen: Drag the recent task application with one finger to quickly split the screen.

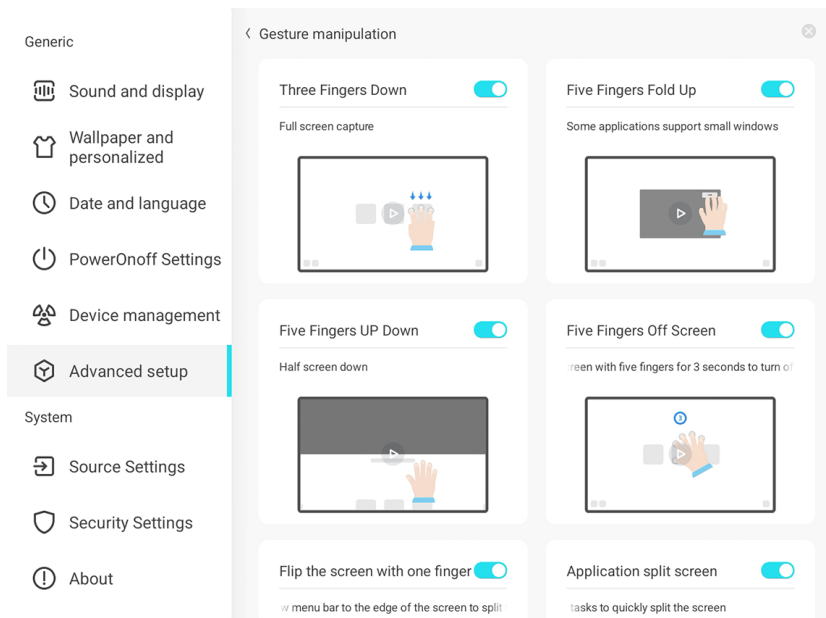

Android settings


The Android settings menu combines all the miscellaneous device settings including factory reset, network and internet, Bluetooth connections, and app permissions.

To access these settings from the Home screen, tap  on the taskbar, and then tap **Settings**

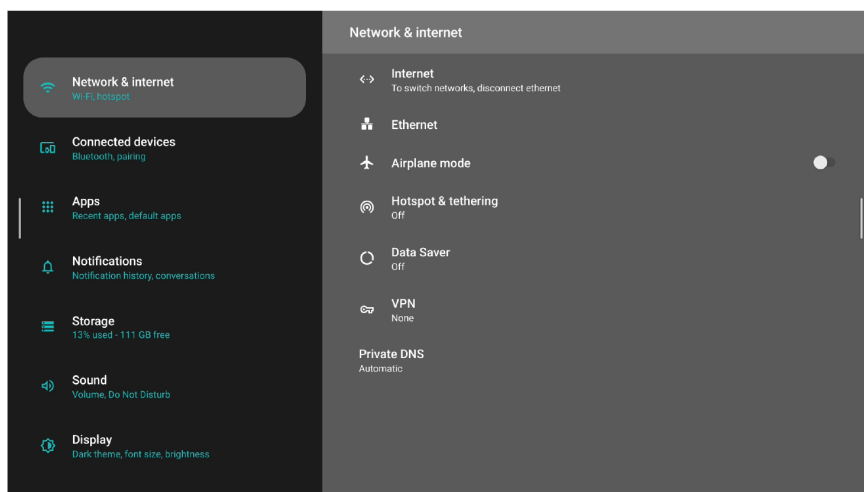

BenQ App Store

The BenQ App Store contains all the BenQ-developed apps as well as third-party partner apps designed for the BenQ Board.

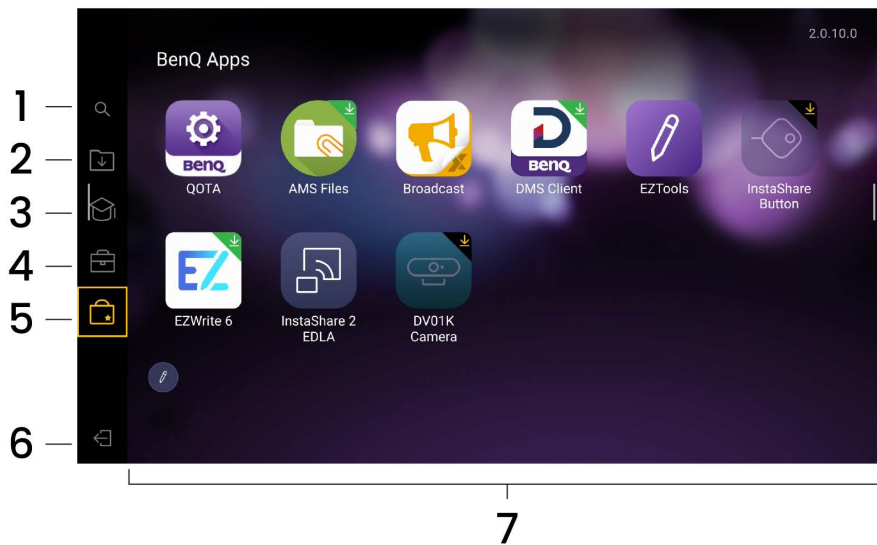

1. Search apps
2. Update center
3. Education partner apps
4. Enterprise partner apps
5. BenQ apps
6. Exit
7. App list

BenQ apps



DMS Client

DMS Client links with DMS Cloud so the BenQ Board can be managed from a single console.



EZWrite 6

EZWrite 6 is a powerful interactive whiteboard that turns the BenQ Board into a limitless canvas for teaching and collaboration.



EZTools

The EZTools library activates all of EZWrite's essential functionalities.



InstaShare 2

Users can wirelessly share content and control other device screens using the InstaShare 2 host app on the BenQ Board.

Installing an app

1. Ensure that the board is connected to the internet.
2. Log in as a local.
3. Tap  on the taskbar.
4. Tap **BenQ App Store**.
5. On the left menu, tap any of the app libraries.
The available apps are listed.
6. Tap the app to download.
7. Tap **Download**. The system automatically downloads and installs the app.
8. Restart the board.

Updating an app

1. Ensure that the board is connected to the internet.
2. Log in as a local.
3. Tap  on the taskbar.
4. Tap **BenQ App Store**.
5. On the left menu, tap any of the app libraries.
6. The available apps are listed.
7. Tap the app to update.
8. Tap **Update**.
9. The system automatically downloads and installs the update.
10. Restart the board.

Updating all apps

1. Ensure that the board is connected to the internet.
2. Log in as a local.
3. Tap  on the taskbar.
4. Tap **BenQ App Store**.
5. On the left menu, tap .
6. Tap **Update All**.
7. The system automatically downloads and installs all available updates.
8. Restart the board.

Rolling back an app to an older version



Note

Only BenQ-developed apps and core Google apps can be rolled back to an older version.

1. Log in as a local administrator.
2. Tap  on the taskbar.
3. Tap **Settings** .
4. Tap **Apps**.
5. Tap the app from the list.
6. Tap  > **Uninstall updates**.

Uninstalling an app



Note

Only third-party apps can be uninstalled from the BenQ Board.

1. Log in as a local administrator.
2. Tap  on the taskbar.
3. Tap **Settings** .
4. Tap **Apps**.
5. Tap the app from the list.
6. Tap **Uninstall**.

ClassroomCare®

Eye-Care solutions

Flicker-free and anti-glare

The BenQ Board Essential NE001 features a TÜV-certified flicker-free and anti-glare screen that is designed to prevent eye strain caused by extended use. The display maintains a stable backlight with a DC dimmer that eliminates the primary cause of flickering. The screen is treated with an anti-glare formula that significantly minimizes reflections and glare. The default display settings meet the TÜV standards.

Germ-resistant solutions

The BenQ Board Essential NE001 touchscreen is treated with nano-ionic silver, an antimicrobial agent that prevents the spread of germs. The screen ensures 99.9% protection against common germs, as certified by TÜV.



Note

The availability of germ-resistant solution may vary per region.

Supported media

Supported input resolutions

Resolution	HDMI 2.0	USB-C
3840 x 2160 @ 60 Hz	V	V
3840 x 2160 @ 50 Hz	V	V
3840 x 2160 @ 30 Hz	V	V
3840 x 2160 @ 25 Hz	V	V
3840 x 2160 @ 24 Hz	V	V
1920 x 1080 @ 60 Hz	V	V
1920 x 1080 @ 50 Hz	V	V
1920 x 1080 @ 30 Hz	V	V
1920 x 1080 @ 25 Hz	V	V
1920 x 1080 @ 24 Hz	V	V
1280 x 720 @60Hz	V	V
1280 x 720 @50Hz	V	V
1024 x 768 @60Hz	V	V
800 x 600 @60Hz	V	V
720 x 576 @ 50 Hz	V	V
720 x 480 @ 60 Hz	V	V
640 x 480 @ 60 Hz	V	V

Troubleshooting

Connection	Configuration
The board is not displaying images.	• Ensure that the board is powered on. For details, see Powering on the display. • If displaying content from a wired input source, ensure the following: - The input device is powered on and is securely connected to the board. - The input resolution is correct. For details, see Supported input resolutions.
The board is not playing audio.	• Ensure that the board is not on mute and that the volume is set to an adequate level. • If playing audio from an input source, ensure that the input device is powered on and securely connected to the board.
The input image is not displaying normally.	• Ensure that the input resolution is correct. For details, see Supported input resolutions. • If using an HDMI connection, optimize the image by performing the following steps: 1. Open the Settings menu. 2. Tap Display > Advanced settings. 3. Under EDID, select EDID 1.4.
The control panel buttons are not working.	Ensure that the keypad lock is disabled.
The remote control is not working.	Ensure the following: • The remote control lock is disabled. • The remote control is pointed at the IR sensor and is within 8 m (26.24 ft) of the display. • The remote control batteries have sufficient charge and are inserted correctly. • There are no obstructions between the remote control and the sensor. • The sensor is away from direct sunlight or strong fluorescent lighting. • There are no infrared devices nearby that may interfere with the remote control signal.
The display has unexpectedly shut down.	• Confirm if there was a power outage. • Confirm if the display is following a power or sleep schedule. For details, see the following topics: - Schedule startup - Timer shutdown - Time for Automatic Standby Without Operation
The colors on the display are incorrect.	• If displaying content from a wired input source, ensure that the device is securely connected to the board. • Adjust the picture mode and color temperature.

Connection	Configuration
The touchscreen is not responding.	Ensure the following: • The touchscreen lock is disabled. • The pen or finger is touching the screen at an appropriate angle. • The appropriate touch driver is installed and enabled on the connected device.
The touch positioning is incorrect.	Ensure the following: • The pen or finger is touching the screen at an appropriate angle. • The appropriate touch driver is installed and enabled on the connected device.
There is image dithering or random lines are appearing on the display.	• If displaying content from a wired input source, ensure that the input device is securely connected to the board. For details, see Connections. • Ensure that there are no other electronic equipment or power tools are placed around the display that may affect the input signal.
The image shown on the display has no color or the color is weak.	• Adjust the brightness and contrast of the display. • If displaying content from a wired input source, ensure that the input device is securely connected to the board. For details, see Connections.
The display is showing images but no sound.	• Ensure that the board is not on mute and that the volume is set to an adequate level. • If displaying content from a wired input source, ensure that the input device is securely connected to the board. For details, see Connections.
The sound coming from the soundbar is not playing evenly.	• Adjust the sound balance. For details, see Sound and Display. • Ensure the following: - The input device is securely connected to the board. - The input device is using one sound channel.
There is no sound coming from the VGA input.	Ensure that there are no other audio output devices or connectors attached to the input device.

Product Support

This document aims to provide the most updated and accurate information to customers, and thus all contents may be modified from time to time without prior notice. Please visit the website for the latest version of this document and other product information. Available files vary by model.



Important

Do not attempt to disassemble the product yourself unless you are fully aware of the consequences. If you cannot find the dismantling information on your product, contact your local customer service representative for assistance.

Safety warnings and precautions

 CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN  CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		THIS EQUIPMENT MUST BE GROUNDED To ensure safe operation, the three-pin plug must be inserted only into a standard three-pin power outlet which is effectively grounded through normal household wiring. Extension cords used with the equipment must have three cores and be correctly wired to provide connection to the ground. Wrongly wired extension cords are a major cause of fatalities. The fact that the equipment operates satisfactorily does not imply that the power outlet is grounded or that the installation is completely safe. For your safety, if you are in any doubt about the effective grounding of the power outlet, please consult a qualified electrician.
	The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.	
	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.	

The mains plug of the power supply cord shall remain readily operable. The AC receptacle (mains socket outlet) shall be installed near the equipment and shall be easily accessible. To completely disconnect this equipment from the AC mains, disconnect the power cord plug from the AC receptacle.

- Do not place this display on an uneven, sloping or unstable surface (such as a trolley) where it may fall and cause damage to itself or others.
- Do not place this display near water, like a spa or pool, or in a position which will allow the splashing or spraying of water onto the display, like in front of an open window where rain water may enter.
- Do not install this display in a confined space without proper ventilation and air circulation, such as in a closed cabinet. Allow proper space around the display for dissipating heat inside. Do not block any openings and vents on the display. Overheating may result in hazards and electric shock.
- Installation of this display should only be performed by a qualified technician. Failure to install this display properly may cause injuries and damages to the personnels and the display itself. Check the installation regularly and maintain the display periodically to ensure the best working condition.
- Use only the accessories approved or recommended by the manufacturer to mount this display. Using wrong or unsuitable accessories may cause the display to fall and result in serious personal injuries. Make sure that the surface and fixing points are strong enough to sustain the weight of the display.
- To reduce the risk of electric shock, do not remove covers. No user serviceable parts inside. Refer servicing to qualified service personnel.
- To prevent personal injuries, mounting the display or installing desktop stands is required before use.

Important safety instructions

1. Do not use the display near water.
2. Do not block any ventilation openings.
3. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
4. Do not alter the polarized or grounding-type plug. A polarized plug has two blades, one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician to replace your obsolete outlet.

5. Protect the power cord from being snagged, stepped on, or pinched, particularly near the plug and the point where they are connected to the display.
6. Only use attachments and accessories specified by the manufacturer.
7. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the display. Use caution when moving the cart and display to prevent accidents and injuries.
8. Unplug the display during lightning storms or when unused for long periods of time.
9. Refer all servicing to qualified service personnel. Servicing is required when the display has been damaged in any way. These instances may include when:
 - The display is dropped or an object is dropped onto the display.
 - The display is exposed to liquid, rain, or excess moisture.
 - Its power supply cord or plug get damaged.
 - The display fails to operate normally..



Notes on this display

- To prevent the risk of physical injuries, do not attempt to lift the display alone.
- Make sure you have four or more people available to help lift the display or a flat cart to transport the display to its final location.
- Keep the display horizontal as much as possible.
- Clear a floor space before unpacking.

Notes on the LCD panel

- The Liquid Crystal Display (LCD) panel of this display has a very thin protective layer of glass which is liable to marking, scratching, or cracking if struck or exposed to pressure. The liquid crystal substrate is also liable to damage under excessive force or extreme temperatures. Please handle with care.
- The response time and brightness of the LCD panel may vary with the ambient temperature.
- Avoid placing the display in direct sunlight or where direct sunlight or spot lighting will shine onto the LCD panel, as the heat may damage the panel and the external casing of the display, and the bright light will make viewing the display more difficult than necessary.
- The LCD panel consists of individual pixels to display images and is manufactured according to the design specifications. While 99.9% of these pixels work normally, 0.01% of the pixels may remain constantly lit (in red, blue, or green) or unlit. This is a technical limitation of the LCD technology and is not a defect.
- LCD screens, like plasma display panels (PDPs) and conventional cathode ray tube (CRT) screens, are also susceptible to screen burn-in or image retention, which can be found on the screen as visible fixed lines and shades. To avoid such damage to the screen, avoid displaying still images (like on-screen display menus, TV station logos, fixed/inactive text or icons) for more than 30 minutes. Change the aspect ratio from time to time. Fill the entire screen with the image and eliminate the black bars whenever possible. Avoid displaying images in 16:9 aspect ratio over a long period of time, otherwise there may be visible burn marks on the screen as two vertical lines.
- Under certain circumstances, condensation may occur on the inner side of the cover glass, it's a natural phenomenon and will not affect the operation of the display. This condensation will usually disappear after around two hours of normal operation.

Notes on cleaning the display

Clean the frame when there is sign of malfunction on the touchscreen.

Cleaning the display screen

1. Before cleaning the screen, make sure the display is powered off and the power cord is unplugged.
2. Remove dust or dirt from the screen with a dry lint-free cloth. Make sure to use minimal

force.



Important

Do not use paper towels or any material that may leave streaks or lint on the screen.

3. Moisten a clean, soft, lint-free cloth with 70% isopropyl alcohol.
-



Warning

- Do not use hazardous chemical or ammonia-based cleaners as this may damage the surface of the screen.
 - Do not spray alcohol directly on the screen.
 - Do not fully soak the cloth in liquid. If possible, spray the alcohol onto the cloth to distribute the moisture.
-

4. Gently wipe down the entire surface of the screen.

Safety notice for remote control

- Do not put the remote control in the direct heat and humidity.
- Do not drop the remote control.
- Do not expose the remote control to water or moisture.
- When using the remote control, ensure that there are no objects between the remote control and the remote sensor.
- If the remote control will not be used for an extended period, remove the batteries.

Copyright and disclaimers

Copyright

Copyright 2026 BenQ Corporation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of BenQ Corporation.

Disclaimer

BenQ Corporation makes no representations or warranties, either expressed or implied, with respect to the contents of this document. BenQ Corporation reserves the right to revise this publication and to make changes from time to time in the contents thereof without obligation to notify any person of such revision or changes.