

BenQ Education

BenQ Board

Interactive Flat Panel

RE6504/RE7504/RE8604/RE6504F/RE7504F/RE8604F/
RE6504FV/RE7504FV/RE8604FV

User Manual

Copyright and disclaimer

Disclaimer

BenQ Corporation makes no representations or warranties, either expressed or implied, with respect to the contents of this document. BenQ Corporation reserves the right to revise this publication and to make changes from time to time in the contents thereof without obligation to notify any person of such revision or changes.

HDMI trademark disclaimer

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade Dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Copyright

Copyright 2024 BenQ Corporation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of BenQ Corporation.

Product Support

This document aims to provide the most updated and accurate information to customers, and thus all contents may be modified from time to time without prior notice. Please visit the website for the latest version of this document and other product information. Available files vary by model.

- Make sure your computer is connected to the Internet.
- Visit the local website from www.BenQ.com. The website layout and content may vary by region/country.
- User manual and related document: www.BenQ.com > Business > SUPPORT > Downloads > model name > User Manual
- (EU only) Dismantled information: Available on the user manual download page. This document is provided based on Regulation (EU) 2019/2021 to repair or recycle your product. Always contact the local customer service for servicing within the warranty period. If you wish to repair an out-of-warranty product, you are recommended to go to a qualified service personnel and obtain repair parts from BenQ to ensure compatibility. Do not disassemble the product unless you are aware of the consequences. If you cannot find the dismantled information on your product, contact the local customer service for assistance.

Table of contents

Copyright and disclaimer	i
Product Support.....	ii
Safety warnings and precautions	1
Important safety instructions	2
Notes on this display	2
Notes on the LCD panel of this display	2
Notes on cleaning the display	3
Safety notice for remote control	3
Battery safety notice	3
BenQ ecoFACTS	3
Package contents	5
Set up the display	6
Install the display on a wall	6
Install external PC	7
Parts of the display and their functions	8
Front panel	8
Rear panel	10
Remote control	12
Connections	15
Connect power	15
Turn the display on or off	15
Connect the touch module	16
Connect the VGA input	17
Connect the digital inputs	17
Connect the video output	18
Connect to serial port	18
Product information	19
Specifications	19
Dimensions (RE6504)	22
Dimensions (RE7504)	23
Dimensions (RE8604)	24
Dimensions (RE6504F)	25
Dimensions (RE7504F)	26
Dimensions (RE8604F)	27
Dimensions (RE6504FV)	28
Dimensions (RE7504FV)	29

Dimensions (RE8604FV)	30
Supported input signal resolution	31
Troubleshooting	32

Safety warnings and precautions

 CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN  CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		THIS EQUIPMENT MUST BE GROUNDED To ensure safe operation, the three-pin plug must be inserted only into a standard three-pin power outlet which is effectively grounded through normal household wiring. Extension cords used with the equipment must have three cores and be correctly wired to provide connection to the ground. Wrongly wired extension cords are a major cause of fatalities. The fact that the equipment operates satisfactorily does not imply that the power outlet is grounded or that the installation is completely safe. For your safety, if you are in any doubt about the effective grounding of the power outlet, please consult a qualified electrician.
	The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.	
	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.	

The mains plug of the power supply cord shall remain readily operable. The AC receptacle (mains socket outlet) shall be installed near the equipment and shall be easily accessible. To completely disconnect this equipment from the AC mains, disconnect the power cord plug from the AC receptacle.

- Do not place this display on an uneven, sloping or unstable surface (such as a trolley) where it may fall and cause damage to itself or others.
- Do not place this display near water, like a spa or pool, or in a position which will allow the splashing or spraying of water onto the display, like in front of an open window where rain water may enter.
- Do not install this display in a confined space without proper ventilation and air circulation, such as in a closed cabinet. Allow proper space around the display for dissipating heat inside. Do not block any openings and vents on the display. Overheating may result in hazards and electric shock.
- Installation of this display should only be performed by a qualified technician. Failure to install this display properly may cause injuries and damages to the personnels and the display itself. Check the installation regularly and maintain the display periodically to ensure the best working condition.
- Use only the accessories approved or recommended by the manufacturer to mount this display. Using wrong or unsuitable accessories may cause the display to fall and result in serious personal injuries. Make sure that the surface and fixing points are strong enough to sustain the weight of the display.
- To reduce the risk of electric shock, do not remove covers. No user serviceable parts inside. Refer servicing to qualified service personnel.
- To prevent personal injuries, mounting the display or installing desktop stands is required before use.

Important safety instructions

1. Do not use this apparatus near water.
2. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
3. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
4. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
5. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
6. Only use attachments/accessories specified by the manufacturer.
7. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. Unplug this apparatus during lightning storms or when unused for long periods of time.
8. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Notes on this display

- To prevent the risk of physical injuries, do not attempt to lift the display alone.
- Make sure you have four or more people available to help lift or a flat cart to transport the display to its final location.
- Keep the display horizontal as much as possible.
- Clear a floor space before unpacking.

Notes on the LCD panel of this display

- The Liquid Crystal Display (LCD) panel of this display has a very thin protective layer of glass which is liable to marking or scratching, and cracking if struck or pressured. The liquid crystal substrate is also liable to damage under excessive force or extreme temperatures. Please handle with care.
- The response time and brightness of the LCD panel may vary with the ambient temperature.
- Avoid placing the display in direct sun or where direct sun or spot lighting will shine onto the LCD panel, as the heat may damage the panel and the external casing of the display, and the bright light will make viewing the display more difficult than necessary.
- The LCD panel consists of individual pixels to display images and is manufactured according to the design specifications. While 99.9% of these pixels work normally, 0.01% of the pixels may remain constantly lit (in red, blue or green) or unlit. This is a technical limitation of the LCD technology and is not a defect.
- LCD screens, like plasma (PDP) and conventional CRT (Cathode Ray Tube) screens, are also susceptible to 'screen burn-in' or 'image retention' which can be found on the screen as visible fixed lines and shades. To avoid such damage to the screen, avoid displaying still images (like On-Screen Display menus, TV station logos, fixed/inactive text or icons) for more than 30 minutes. Change the aspect ratio from time to time. Fill the entire screen with the image and eliminate the black bars whenever possible. Avoid displaying images in 16:9 aspect ratio over a long period of time, otherwise there may be visible burn marks on the screen as two vertical lines.

- Note: Under certain circumstances, condensation may occur on the inner side of the cover glass, it's a natural phenomenon and will not affect the operation of the display. This condensation will usually disappear after around 2 hours of normal operation.
- This product does not offer image retention function. For more information, please refer to installation guide. If a still image is required for a display, it is recommended to enable Pixel shift.
- This product does not support portrait use; portrait use may cause display damage. BenQ warranty will not cover faulty usage.

Notes on cleaning the display

Please clean the frame when there is sign of malfunction on the touch screen.

1. Before you clean the screen, make sure the display is turned off, and unplug the power cord.
2. Remove dust or dirt from the screen with a dry cleaning cloth. Make sure to use minimal force, and don't press hard on the screen.
 - Never use paper towels or anything that could leave streaks or lint on the screen.
3. Moisten a clean soft, lint-free cloth with some cleaning alcohol such as 70% isopropyl. Gently go over the entire screen and wipe it down.
 - Never use hazardous chemicals or ammonia-based cleaners
 - Never fully soak the microfiber cloths in liquid.
 - Never spray liquids directly onto the screen.

Safety notice for remote control

- Do not put the remote control in the direct heat, humidity, and avoid fire.
- Do not drop the remote control.
- Do not expose the remote control to water or moisture. Failure to do so could result in malfunction.
- Confirm there is no object between the remote control and the remote sensor of the product.
- When the remote control will not be used for an extended period, remove the batteries.

Battery safety notice

The use of the wrong type of batteries may cause chemical leaks or explosion. Please note the following:

- Always ensure that the batteries are inserted with the positive and negative terminals in the correct direction as shown in the battery compartment.
- Different types of batteries have different characteristics. Do not mix different types.
- Do not mix old and new batteries. Mixing old and new batteries will shorten battery life or cause chemical leaks from the old batteries.
- When batteries fail to function, replace them immediately.
- Chemicals which leak from batteries may cause skin irritation. If any chemical matter seeps out of the batteries, wipe it up immediately using a dry cloth, and replace the batteries as soon as possible.
- Due to varying storage conditions, the battery life for the batteries included with your product may be shortened. Replace them within 3 months or as soon as you can after initial use.
- There may be local restrictions on the disposal or recycling of batteries. Consult your local regulations or waste disposal provider.

BenQ ecoFACTS


BenQ has been dedicated to the design and development of greener product as part of its aspiration to realize the ideal of the "Bringing Enjoyment 'N Quality to Life" corporate vision with the ultimate goal to achieve a low-carbon society. Besides meeting international regulatory requirement and standards pertaining to environmental management, BenQ has spared no

efforts in pushing our initiatives further to incorporate life cycle design in the aspects of material selection, manufacturing, packaging, transportation, using and disposal of the products. BenQ ecoFACTS label lists key eco-friendly design highlights of each product, hoping to ensure that consumers make informed green choices at purchase. Check out BenQ's CSR Website at <http://csr.BenQ.com/> for more details on BenQ's environmental commitments and achievements.




Package contents


Open the sales package and check the contents. If any item is missing or damaged, please contact your dealer immediately.

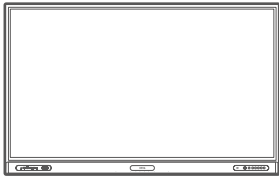

LCD display

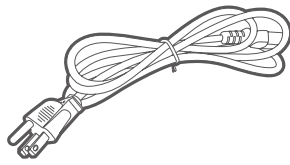


Power cord (by region)

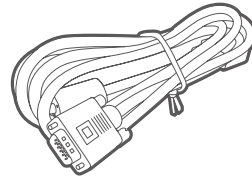


VGA cable x1




Remote control

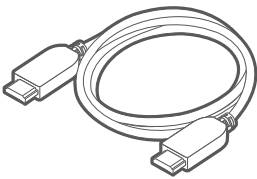


HDMI cable x1

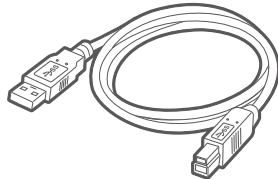

Touch USB cable x1

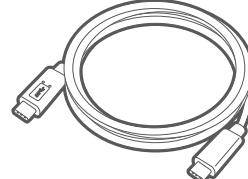


USB Type-C cable x1

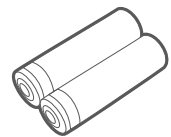


AAA battery x2 *



Touch pen x2

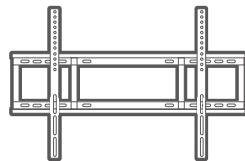

Wall mount (with
installation screws)

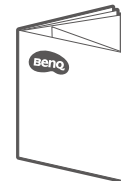

User documents
(Quick start guide, regulation sheets)



- *: Availability may vary. Purchase separately if the accessories are not included in the package.
- The type of power cord supplied may differ from that illustrated depending on your region of purchase.
- Before discarding the package, check that you haven't left any accessories inside the box.
- Dispose of packaging materials wisely. You can recycle the cardboard carton. Consider storing the package (if possible) for future transport of the display.
- Do not leave plastic bags within reach of young children or babies.


Set up the display

- 
- Please pay attention to the following notes during installation:

 - This display should be installed by at least two adult persons. Attempting to install this display by only one person may result in danger and injuries.
 - Refer the installation to qualified technicians. Improper installation may cause the display to fall or malfunction.
 - Stability Hazard: The flat panel may fall, causing serious personal injury or death. To prevent injury, this flat panel must be securely attached to the wall in accordance with the installation instructions.

Install the display on a wall


1. Place a clean, dry and lint-free cloth on a flat, horizontal and object-free surface. Make sure that the size of the cloth is larger than the display.
2. Gently lay the display on the cloth with the LCD screen facing down.
3. Identify the wall mounting screw holes on the back of the display as shown in the illustration.

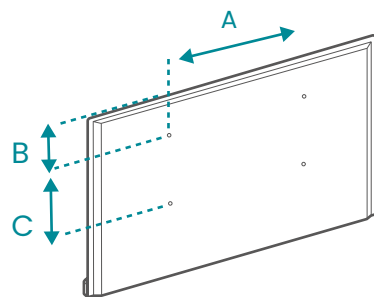


- Screw type: M8 x 25L
- Quantity: 4

Dimension	65"	75"	86"
A	600 mm	800 mm	800 mm
B	244.5 mm	313.2 mm	282.2 mm
C	400 mm	400 mm	600 mm

4. Install the wall mounting bracket on the display and attach the display to the wall according to the mounting bracket's instructions. The length of the screw should exceed the thickness of the wall mounting bracket by at least 25 mm. Make sure that all screws are tightened and secured properly. (Recommended torque: 470 - 635N•cm).

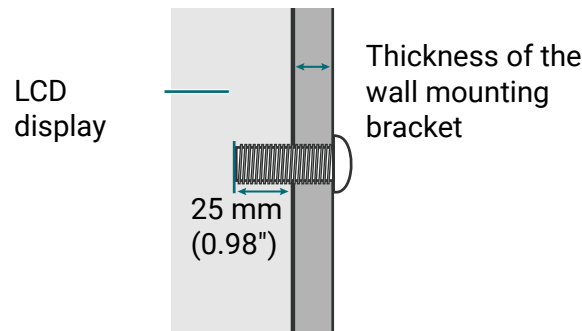

- 
- To maintain proper ventilation, keep at least 10 mm of clear space from the back cover of the display to the wall.
 - Please consult a professional technician for wall mount installations. The manufacturer accepts no liability for installations not performed by a professional technician.




Install external PC



The rear panel illustrations are for your reference only.


The back of the display has four screw holes at its bottom-left side with a dimension of VESA mount 75x75 mm. You can secure the PC onto the display with four screws (maximum torque: 4-5 kgf-cm).

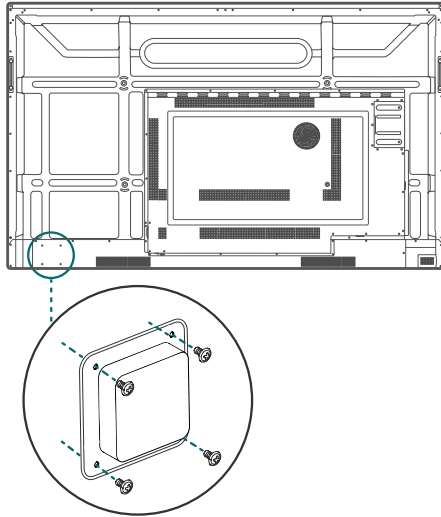


Parts of the display and their functions

Front panel


RE6504/RE7504/RE8604

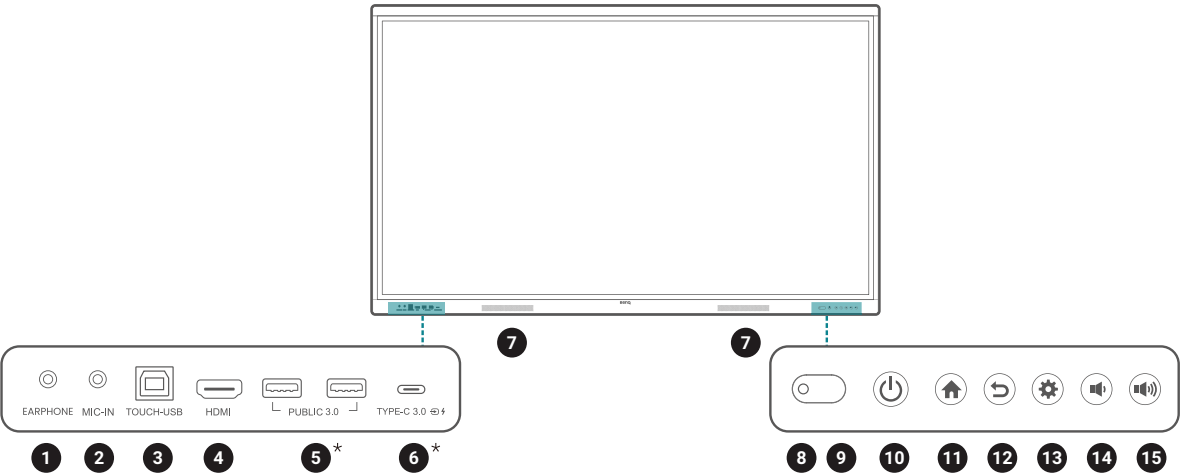

RE6504F/RE7504F/RE8604F

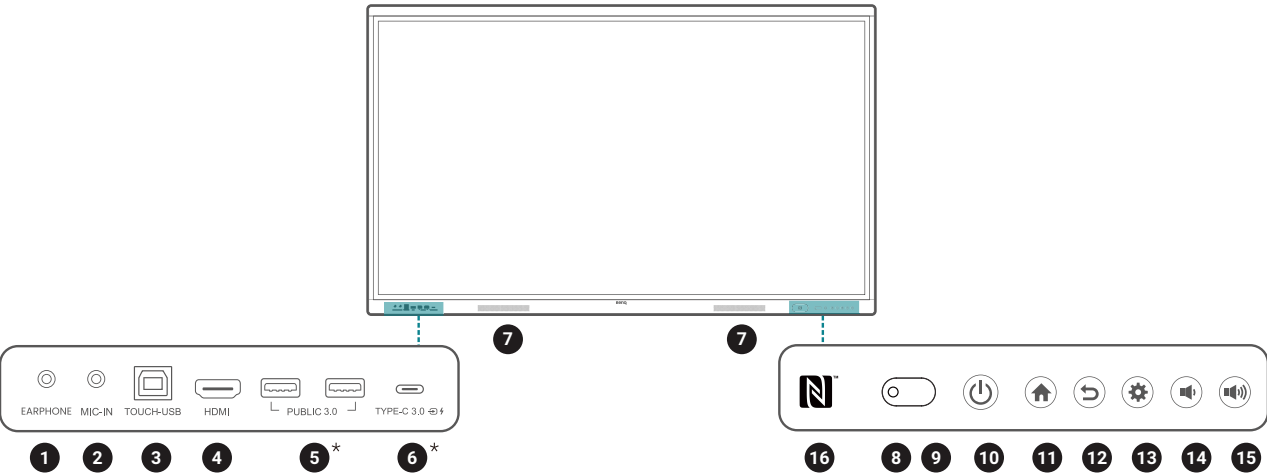

RE6504FV/RE7504FV/RE8604FV

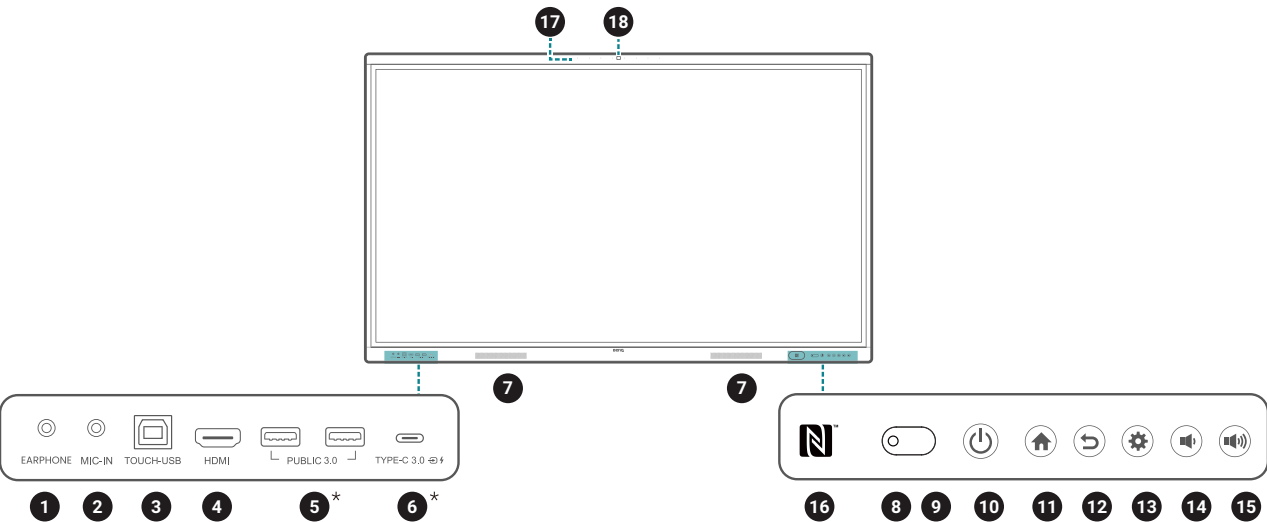

No.	Name	Description
1	EARPHONE	Connects to external speakers or earphones.  This port does not support microphone function.
2	MIC-IN	Connects a microphone to send out amplified audio from the display speaker.  This port only supports 3.5 mm TRS connector (2 rings).
3	TOUCH-USB	Supports touch signal input from an external computer.
4	HDMI	Connects to video sources that support the HDMI interface.
5	PUBLIC 3.0*	Connects USB-A devices such as keyboards, mouse, and USB flash drives.
6	TYPE-C*	Connects to USB-C devices for power delivery and data transfer. Supports the transmission of video, audio, and touch function.
7	Speaker	
8	Ambient light sensor	Detects the ambient light around the display.
9	IR signal receiver	Receives infrared signals from remote control.
10	Power	• Tap to enter energy saving mode. • Press and hold for 4 seconds or more to power off.
11	Home	Returns to the main screen.
12	Return	Returns to the previous menu.
13	Menu	Enters the function menu.
14	Volume down	Decreases the volume.
15	Volume up	Increases the volume.
16	NFC sensor	Tap NFC card for AMS login.
17	Array microphones	Receives and transmits sound from near the display.
18	Camera	Built-in camera for video conferences.




* With these smart ports, a laptop (connected to BenQ Board via USB Type-C or HDMI + Touch USB) can use the USB devices, speakers, and external cameras from BenQ Board to enhance the conference experience. Please note that the built-in array microphone can only be accessed by an OPS source.

Rear panel

See [Connections on page 15](#) for details.



The rear panel illustrations are for your reference only.

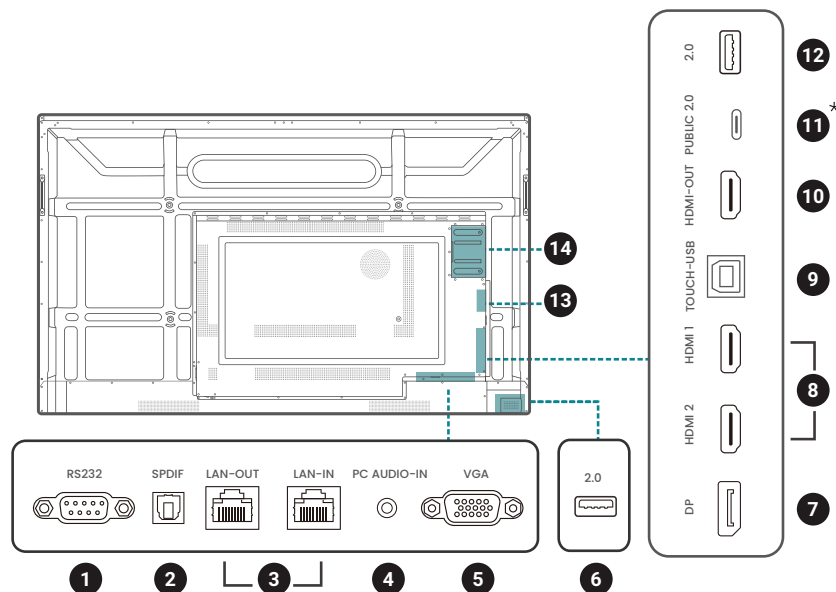


No.	Name	Description
1	RS232	Serial interface, used for mutual transfer of data between devices.
2	SPDIF	Connects the SPDIF cable from external audio devices to the display for audio out.
3	LAN	Supports LAN In & Out, 10/100/1000 Mbps for Android system and OPS.
4	PC AUDIO-IN	Receives audio input from an external device.
5	VGA	Receives video input from an external device (such as a computer).
6	USB 2.0	Unscrew the USB cover to access the USB slot for the wireless USB adapter.
7	DP	Connects a video source to a display device.
8	HDMI 1 / HDMI 2	Connects to video sources that support the HDMI interface.
9	TOUCH-USB	Supports touch signal input from an external computer.
10	HDMI-OUT	Connects to display devices with an HDMI input.
11	PUBLIC 2.0*	Connects to USB-C devices for data transfer.
12	USB 2.0	Connects USB-A devices such as keyboards, mice, and USB flash drives.
13	SD card slot	Supports installation of an SD card.
14	OPS slot	Supports installation of a slot-in PC.



* With these smart ports, a laptop (connected to BenQ Board via USB Type-C or HDMI + Touch USB) can use the USB devices, speakers, and external cameras from BenQ Board to enhance the conference experience. Please note that the built-in array microphone can only be accessed by an OPS source.

- USB 2.0= 5V $\equiv$ 500mA / USB3.0= 5V $\equiv$ 900mA
 - Rear Type-C (data transfer only) = 5V $\equiv$ 0.5A
 - Front Type-C = 5V $\equiv$ 3A; 9V $\equiv$ 3A; 12V $\equiv$ 3A; 15V $\equiv$ 3A; 20V $\equiv$ 3.25A
 - OPS= 18V $\equiv$ 5A; 90W
 - $\equiv$: Direct Current (DC)
 - $\sim$: Alternating Current (AC)
 - The maximum length for the cables to be used with the USB slots are 5m (USB 2.0) and 3m (USB 3.0).
-

Remote control

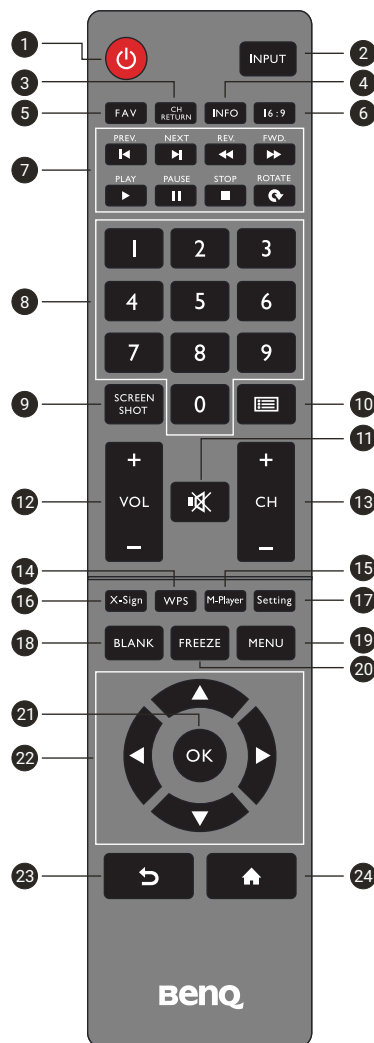

No.	Icon	Description
1	POWER	Turns the display on or off.
2	INPUT	Select the input source.
3	CH RETURN	Channel return Note: It is only working on some specific regions.
4	INFO	Show the information of the current input source.
5	FAV	Favorite program Note: It is only working on some specific regions.
6	Meeting mode	Change the display image to the different mode under non-Android system Mode: Full, 4:3, Film, Subtitle, PC mode.
7	MULTI-MEDIA buttons	The buttons are used to operate the media functions under Multi-Media APP.
8	Numeric buttons (0-9)	Press to enter numbers.
9	SCREEN SHOT	Capture the printed screen and save to the USB drive.
10	CHLIST ()	Delete a character / view program list. Note: It is only working on some specific regions.
11	MUTE	Mute/unmute
12	VOL- / VOL+	Increases or decreases the volume.

No.	Icon	Description
13	CH+ / CH-	Change program channels.
14	WPS	Open the WPS office app in Android
15	M-Player	Open the Media Player app in Android.
16	X-Sign	Open the X-Sign app in Android.
17	Setting	Open the setting function in Android.
18	BLANK	Blank and mute the screen (the screen will turn black) when the OSD menu is off. Press again to resume.
19	MENU	Activate the OSD menu.
20	FREEZE	Freeze the screen.
21	OK	Confirm the selected options or save changes.
22	Cursor keys (◀ / ▶ / ▲ / ▼)	Scroll through settings and options in the OSD menu.
23	BACK	Press this key to return to previous page.
24	HOME	Show the main screen of Android system.


Install remote control batteries

1. Open the remote control battery cover.
2. Insert the supplied batteries, ensuring the positive and negative ends are facing in the correct direction.




The supplied batteries are provided for your convenience so that you can operate the display straight away. You should replace them as soon as possible.

3. Put the cover back on.

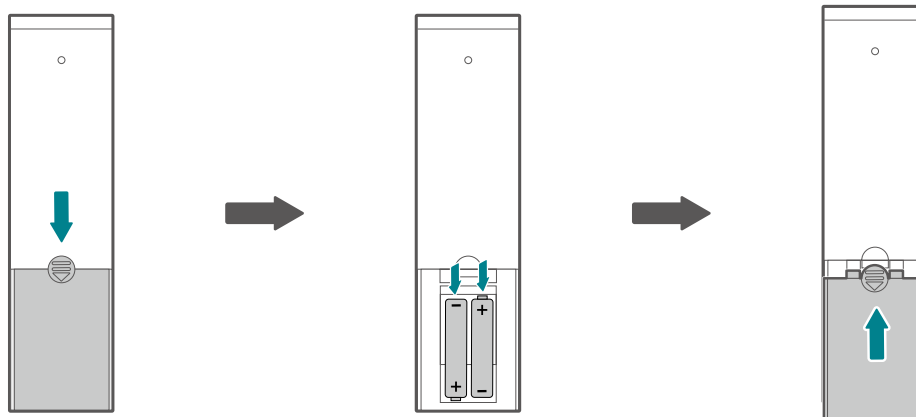

Use BenQ Board by remote control

Aim the remote control at the sensor at the display's bottom-right side within a distance of less than 8m, and a horizontal and vertical angle of less than 60 degrees.

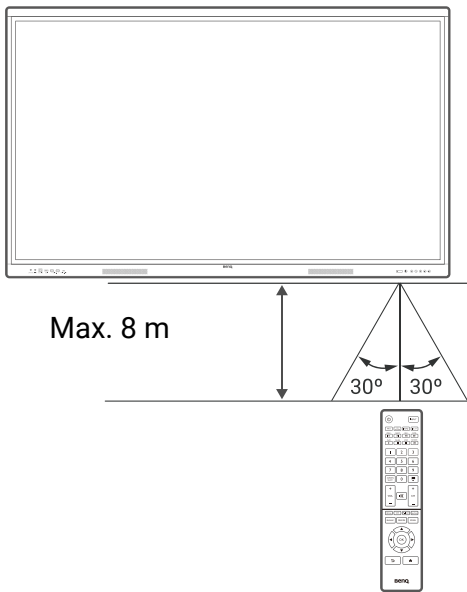

This remote control applies only to a specific model and operating systems. Contact your reseller if you have any question.

Remote control usage tips

- Avoid getting the remote control wet or store it in humid environments (like bathrooms).
- If the display's remote control sensor window is exposed to direct sunlight or strong light, the remote control may not operate properly. In this situation, change the light source, readjust the angle of the display, or operate the remote control from a location closer to display's remote control sensor window.


Connections



The following illustrations are for your reference only.

Connect power


1. Plug one end of the power cord into the power jack on the display and the other end into an appropriate power outlet.
2. Set the power switch to ON (I). The system will enter standby mode.

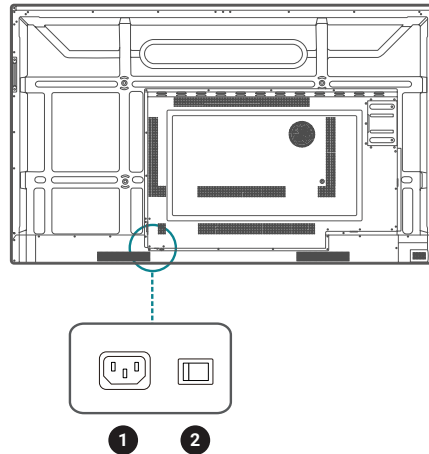

- The supplied power cord is suitable for use with 110-240V AC power only.
- The power cord and outlet illustrated may differ from the ones used in your region.
- Only use an appropriate power cord for your region. Never use a power cord which appears damaged or frayed, or change the plug type on the power cord.
- Be aware of the power loading when you use extension cords or multiple outlet power boards.
- There are no user serviceable parts in this display. Never unscrew or remove any covers. There are dangerous voltages inside the display. Turn off the power and unplug the power cord if you intend to move the display.

Turn the display on or off

- To turn on the display, press the power button on the control panel or on the remote control.
- To turn off the display, press the power button on the control panel. The system will automatically enter standby mode.

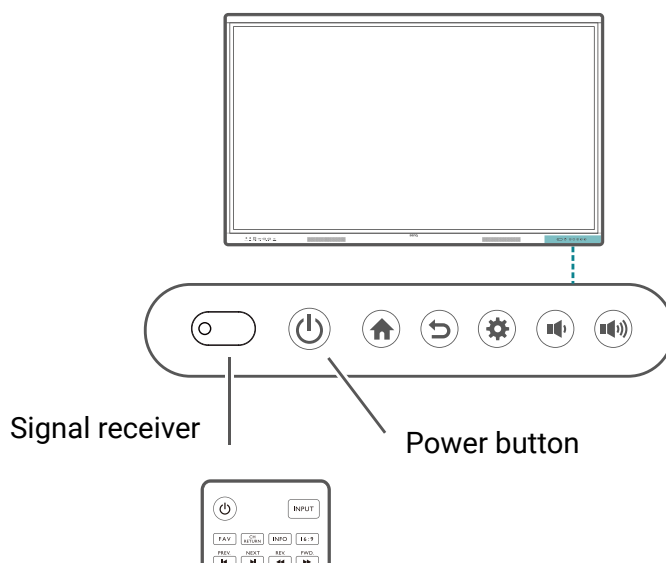


The display's standby mode still consumes power. To completely cut off power supply, set the power switch to OFF (O) and then disconnect the power cord from the power outlet.


Connect the touch module

The touch module of the display supports easy plug-and-play operation. There is no need to install additional drivers on the computer.

Try either method below to set up the video and touch input:

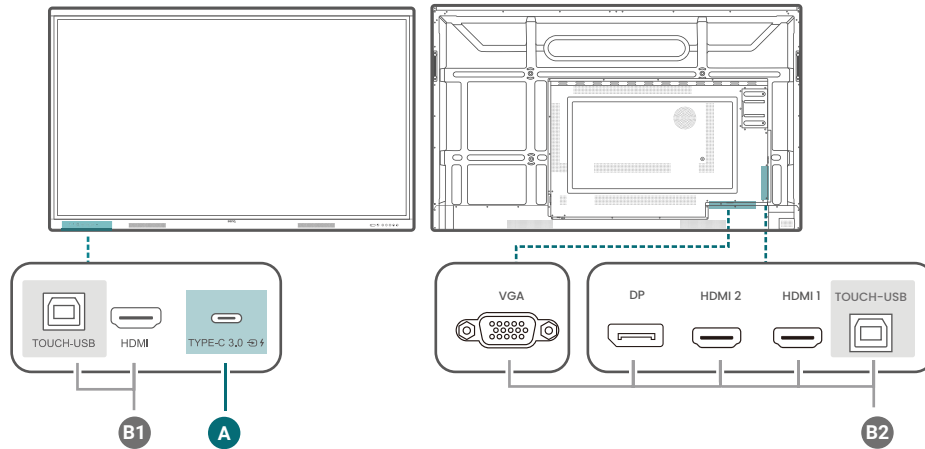


A. Connect the **TYPE-C** port on the display to a USB Type-C port on the computer using the supplied USB Type-C cable.



B. Connect a video cable (**HDMI/DP/VGA**) and the supplied touch USB cable from a computer to the corresponding ports of the display.




- **HDMI** must be used with the **TOUCH-USB** at the front panel.
- **HDMI 1** or **HDMI 2**, **VGA** or **DP** must be used with **TOUCH-USB** at the rear panel.

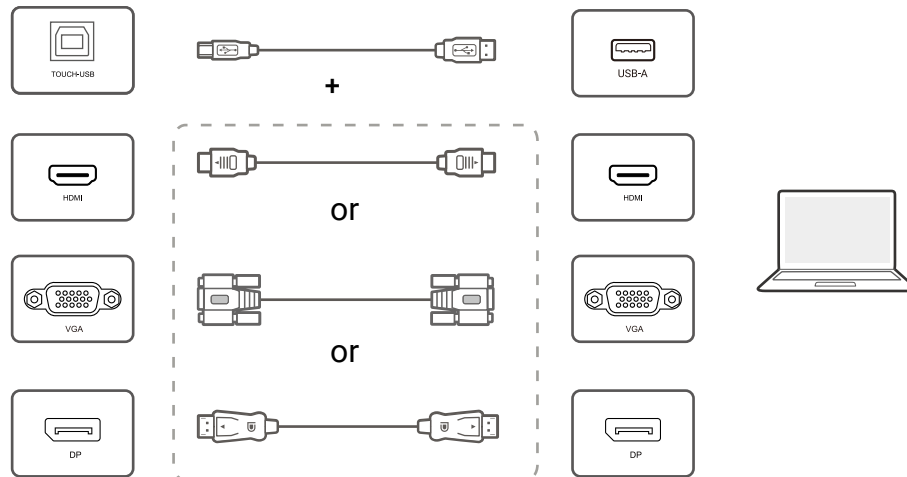

- Avoid blocking the touch screen frame (where sensors are located) when initiating the touch module.
- If any ghost image occurs, please try to un-plug and then re-plug all USB cables. If the failure image still exists, use another USB Type-B to Type-A cable.
- It is highly recommended that you connect the display to the PC or laptop directly. Please be noted that using a faceplate device or an extender may cause failures in touch operations since the display quality can be affected by many uncertainties such as cable grade, cable quality, source and destination equipment, RF and electrical interference, and cable patches.


Connect the VGA input

1. Connect the **VGA** port on the display to the VGA output port on a computer using a D-Sub (15-pin) cable.
2. Connect the computer's audio output port to the **PC AUDIO-IN** jack on the display using a suitable audio cable.

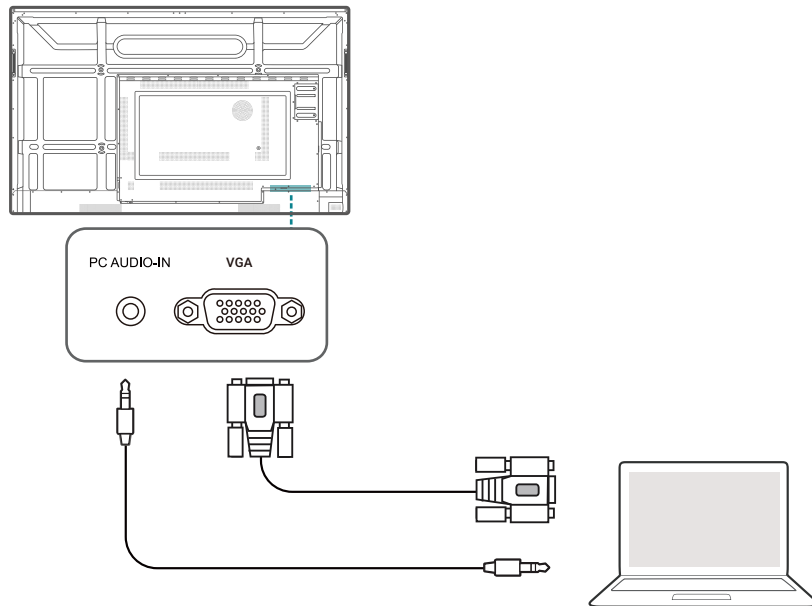


Connect the digital inputs

1. Connect the HDMI or DisplayPort output port of a computer or A/V device (such as a settop box or DVD player) to the **HDMI/HDMI 1/HDMI 2//DP** input port on the display using an HDMI or DisplayPort cable.
2. To view video from this input, press  on the remote control to switch to the respective input source.

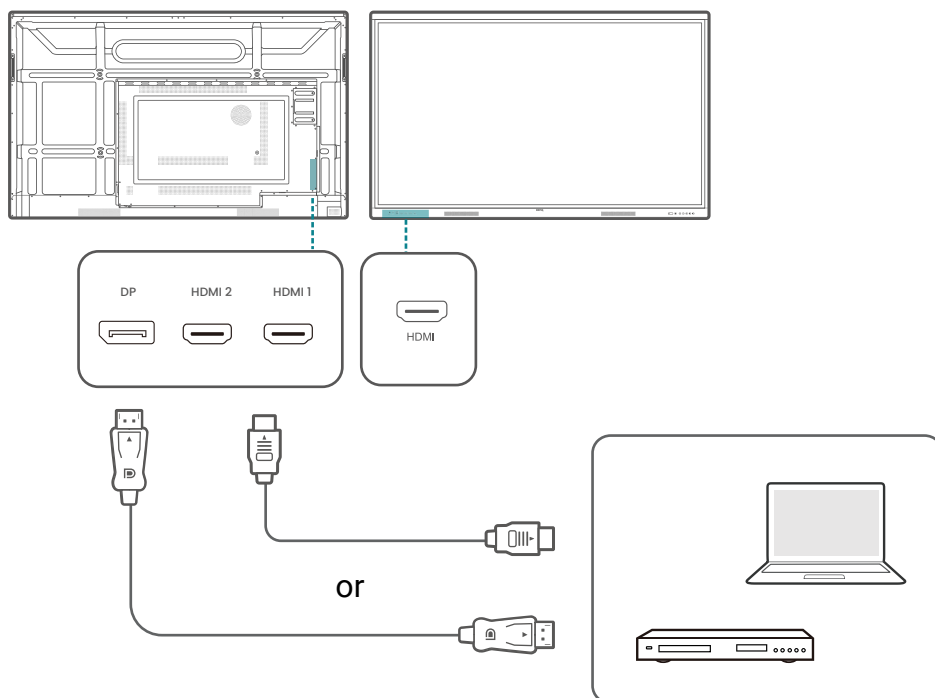


Connect the video output

Use an HDMI cable to connect the **HDMI-OUT** port to the respective input port on the device.

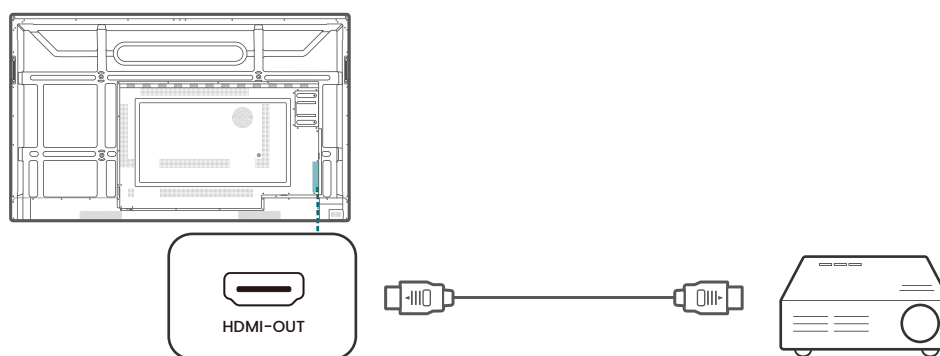

Connect to serial port

Directly connect a computer to the **RS232** port on the input/output terminals.

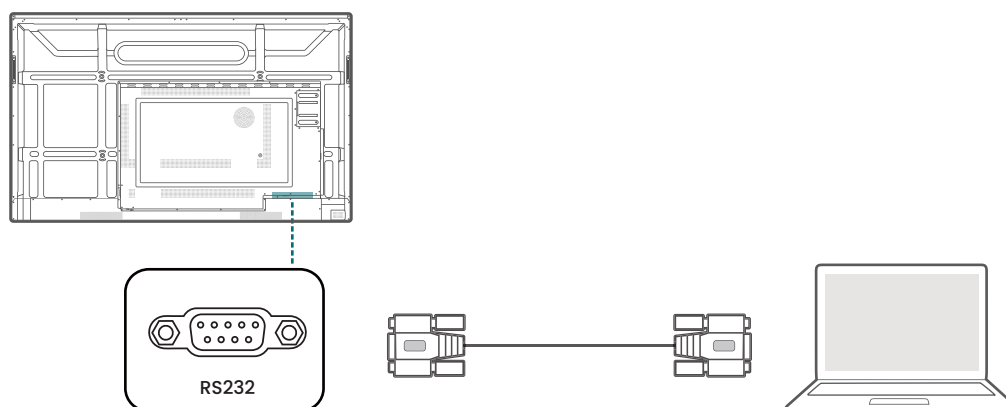

- The applicable cable is not supplied and should be purchased separately.
- This connection is applicable to straight-through RS-232C cable only.
- After using serial port line to connect central control equipment and machine, certain function of the machine can be controlled via central control equipment, such as: machine on/off, and adjustment of sound volume, etc.

Product information

Specifications

		Specifications
Item		RE6504 / RE7504 / RE8604 / RE6504F / RE7504F / RE8604F / RE6504FV / RE7504FV / RE8604FV
Panel	Size	RE6504/RE6504F/RE6504FV: 65" RE7504/RE7504F/RE7504FV: 75" RE8604/RE8604F/RE8604FV: 86"
	Light Source	DLED
	Aspect Ratio	16:9
	Resolution	3840 x 2160
	Pixel Pitch(mm)	RE6504/RE6504F/RE6504FV: 0.37(H) x 0.37(V) RE7504/RE7504F/RE7504FV: 0.43(H) x 0.43(V) RE8604/RE8604F/RE8604FV: 0.49(H) x 0.49(V)
	Brightness with Glass (Typical)	400 nits
	Brightness without Glass (Typical)	450 nits
	Contrast Ratio (Typical)	1200:1
	Viewing Angle	178°
	Technology	IR
Touch	Touch Method	Finger & Stylus
	System	Windows 11/10/8/7/Windows XP/Linux/Mac OS X/Android/Chrome
	Touch Point	Up to 40pts touch for Windows; up to 32 pts touch for Android
	Minimum Object Size	3 mm, pen tip is 4 mm/9 mm, supports 2 pens writing with 2 colors simultaneously
	Response Time	< 8 ms
	Accuracy	±1 mm, 90% area
	Glass	3.2 mm thickness, AG, 9H pencil, germ-resistant
Connectors	HDMI IN	Rear: x 2, Front: x 1 (2.0)
	HDMI Output	x 1 (4K@60Hz with audio)
	DP IN	x 1
	VGA IN	x 1
	PC-Audio IN (3.5 mm audio-in)	x 1
	Mic IN	x 1
	SPDIF (Optical)	x 1
	Audio Output (3.5mm Earphone)	x 1


	Item	Specifications
		RE6504 / RE7504 / RE8604 / RE6504F / RE7504F / RE8604F / RE6504FV / RE7504FV / RE8604FV
Connectors	USB 2.0 (Type A)	Wi-Fi dongle: x1
	USB 3.0 (Type A)	Front: x2
	USB Touch Output (OPS/ External pass through MIC/Camera/USB)	Rear: x 1, Front: x 1 (USB 2.0)
	RS232	x1
	LAN (RJ45)	OPS: 10M/100M/1000M Android: 10M/100M/1000M LAN IN x1 / LAN Out x1
	USB Type-C	Rear: Data x1 (2.0) Front: Data/Power(up to 65W)/Touch/DP x1 (3.0)
Android System	System Version	Android 13
	CPU	A73 x 4 + A53 x 4
	GPU	MaliG52 MP8
	RAM	8GB
	ROM	32GB/64GB
Video / Audio	Speaker Type	Built in speaker
	Output Power	20W x 2
Power	Power Requirements	AC 100V-240V, 50/60 Hz
	Standby Power	<0.5W
	Typical Power Consumption (W)	TBD
	Max Power Consumption (W)	TBD
	Wake Up	LAN/HDMI/VGA/DP
Others	NFC sensor	RE6504/RE7504/RE8604: N/A RE6504F/RE7504F/RE8604F/RE6504FV/RE7504FV/RE8604FV: YES
	Built-in camera	RE6504/RE7504/RE8604/RE6504F/RE7504F/RE8604F: N/A RE6504FV/RE7504FV/RE8604FV: YES
	Array mic	RE6504/RE7504/RE8604/RE6504F/RE7504F/RE8604F: N/A RE6504FV/RE7504FV/RE8604FV: x8
Mechanical	Dimension (WxHxD)	TBD
	Dimension (Package) (WxHxD)	TBD
	Net Weight Gross Weight	TBD

		Specifications
Item		RE6504 / RE7504 / RE8604 / RE6504F / RE7504F / RE8604F / RE6504FV / RE7504FV / RE8604FV
Environment	Operating Temperature	0°C ~ 40°C
	Operating Humidity	10% ~ 90% RH Non-Condensing
	Storage Temperature	-20°C ~ 60°C
	Storage Humidity	10% ~ 90% RH Non-Condensing
	Display Orientation	Landscape Only




- Specifications and functions are subject to change without notice.
- The OPS should be equipped with fire-resistant enclosures.

Dimensions (RE6504)

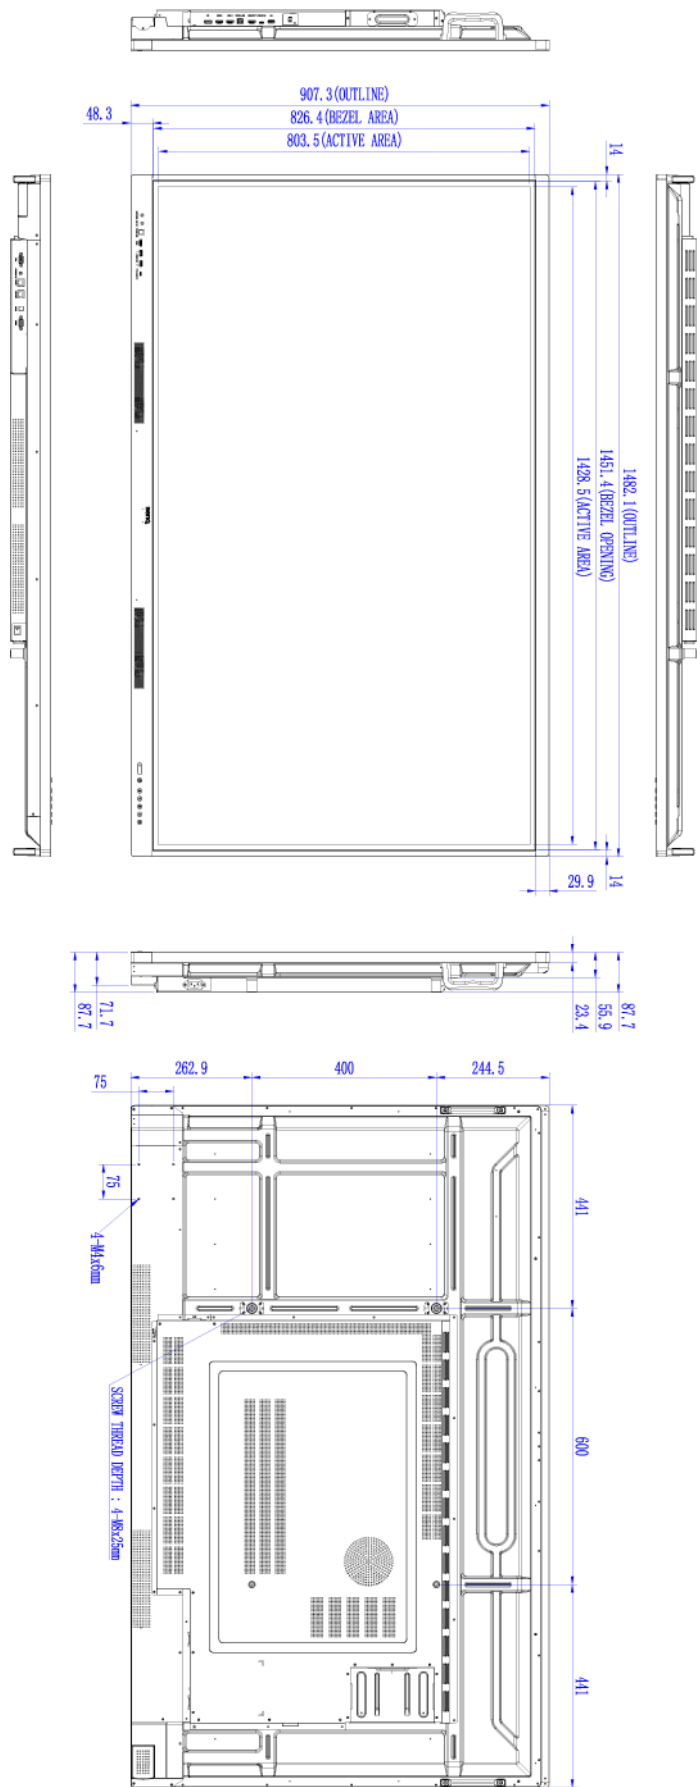


Unit: mm

Dimensions (RE7504)

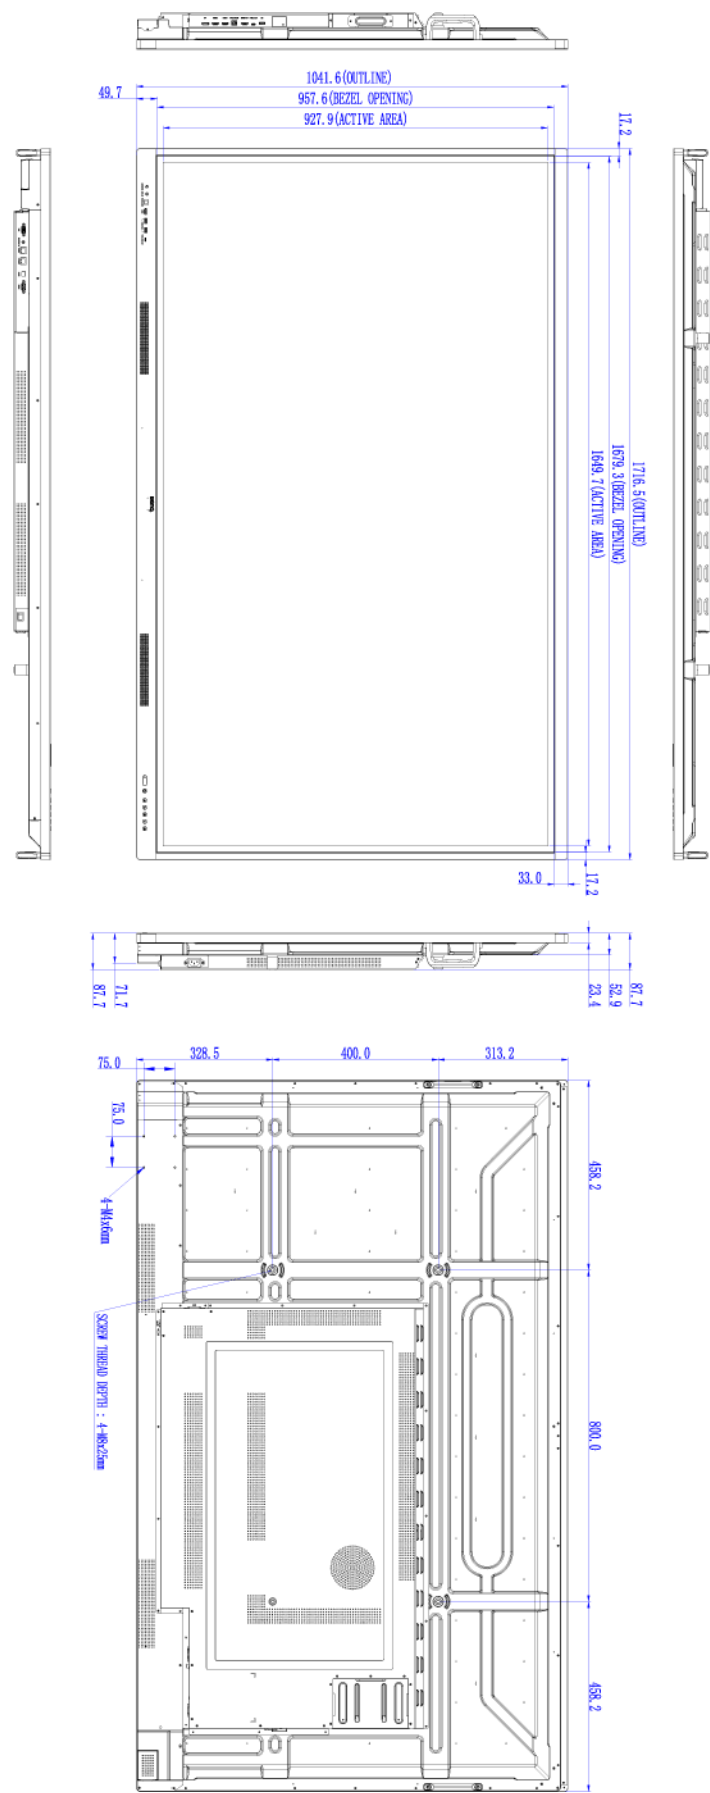


Unit: mm

Dimensions (RE8604)

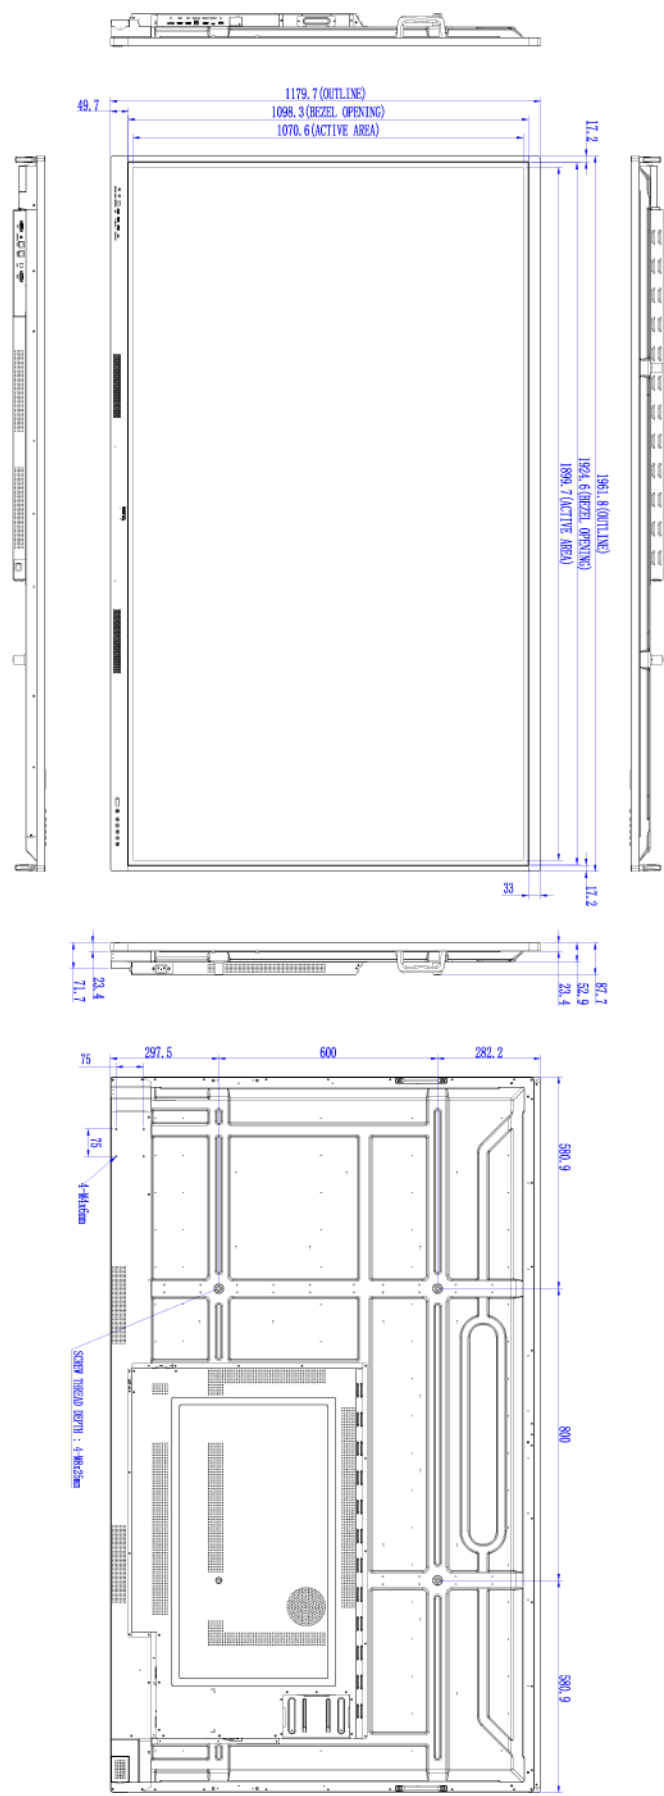


Unit: mm

Dimensions (RE6504F)

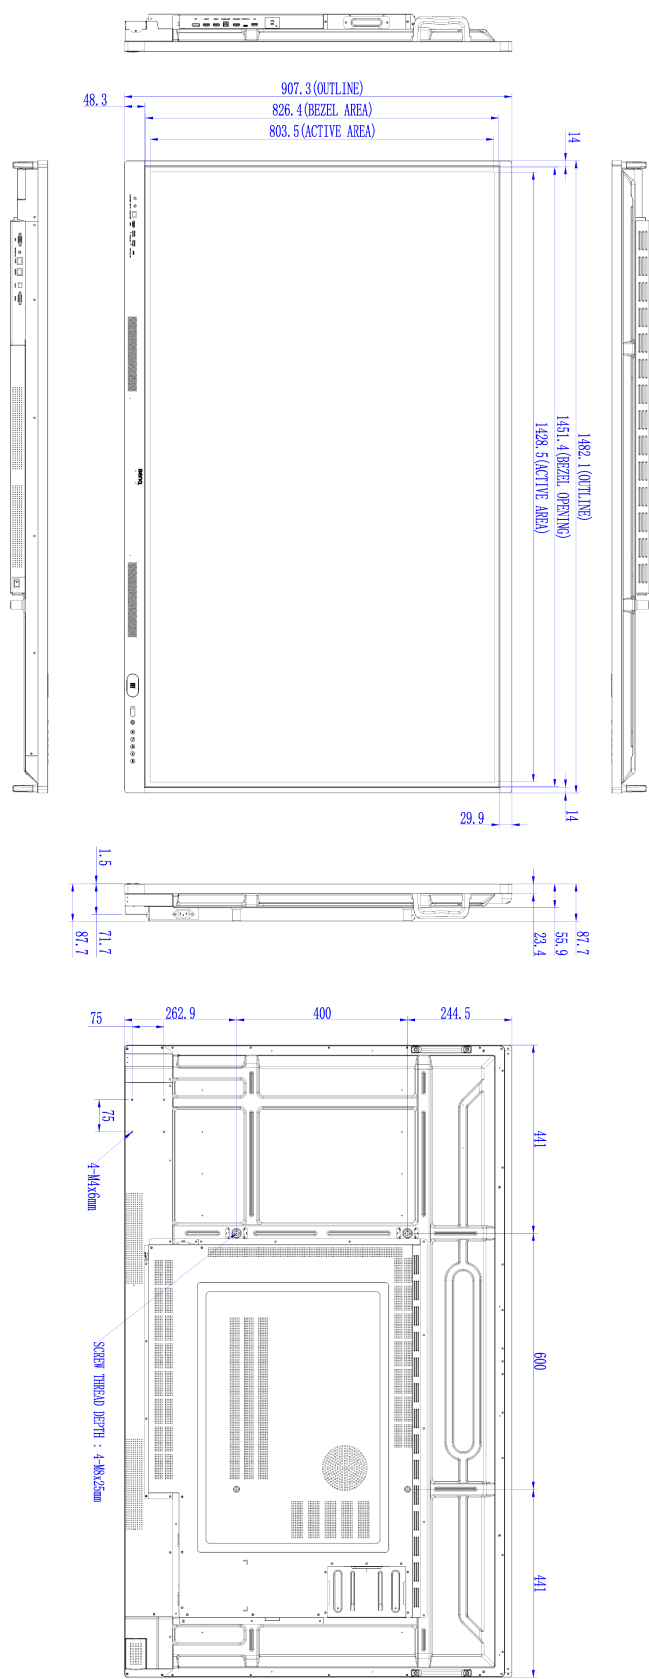


Unit: mm

Dimensions (RE7504F)

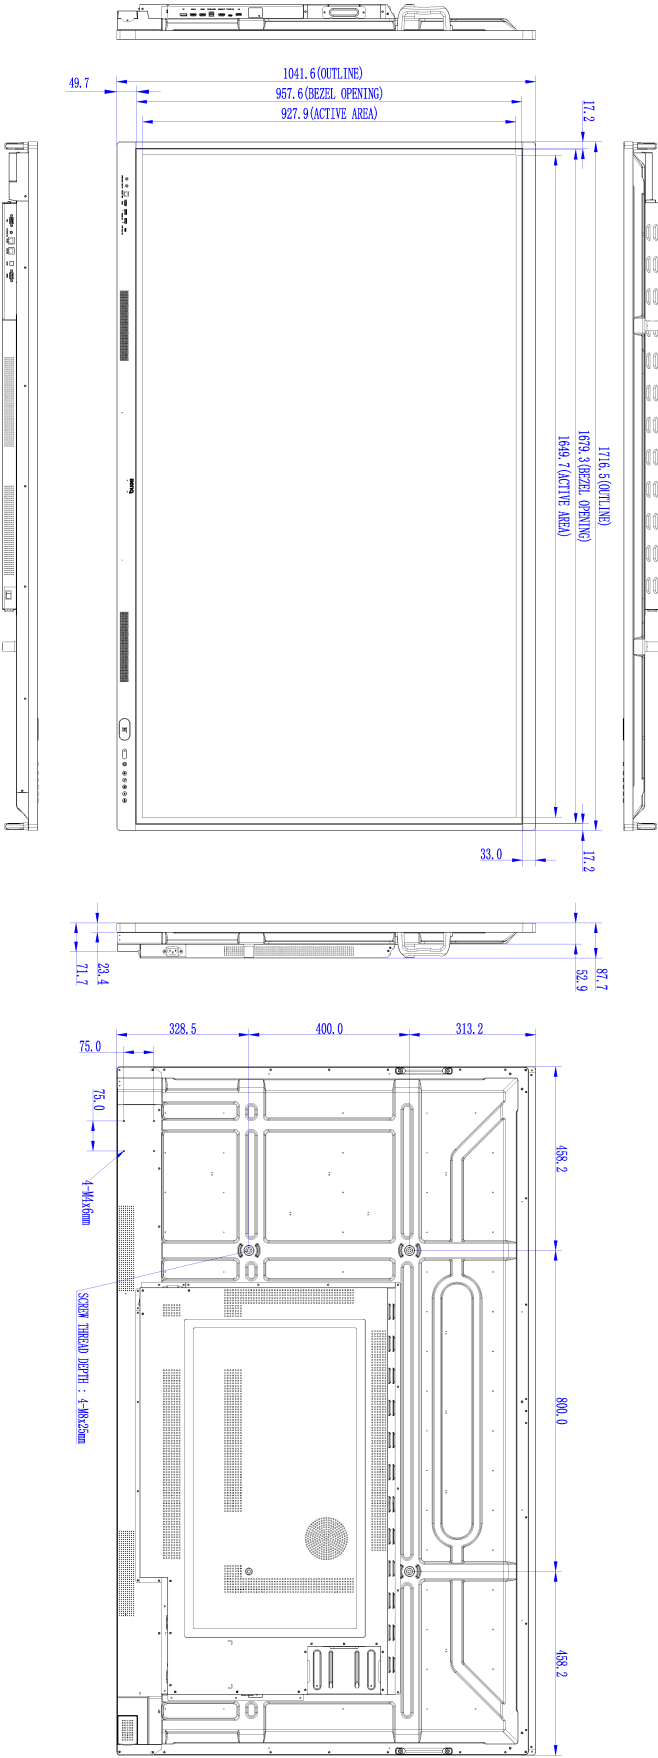


Unit: mm

Dimensions (RE8604F)

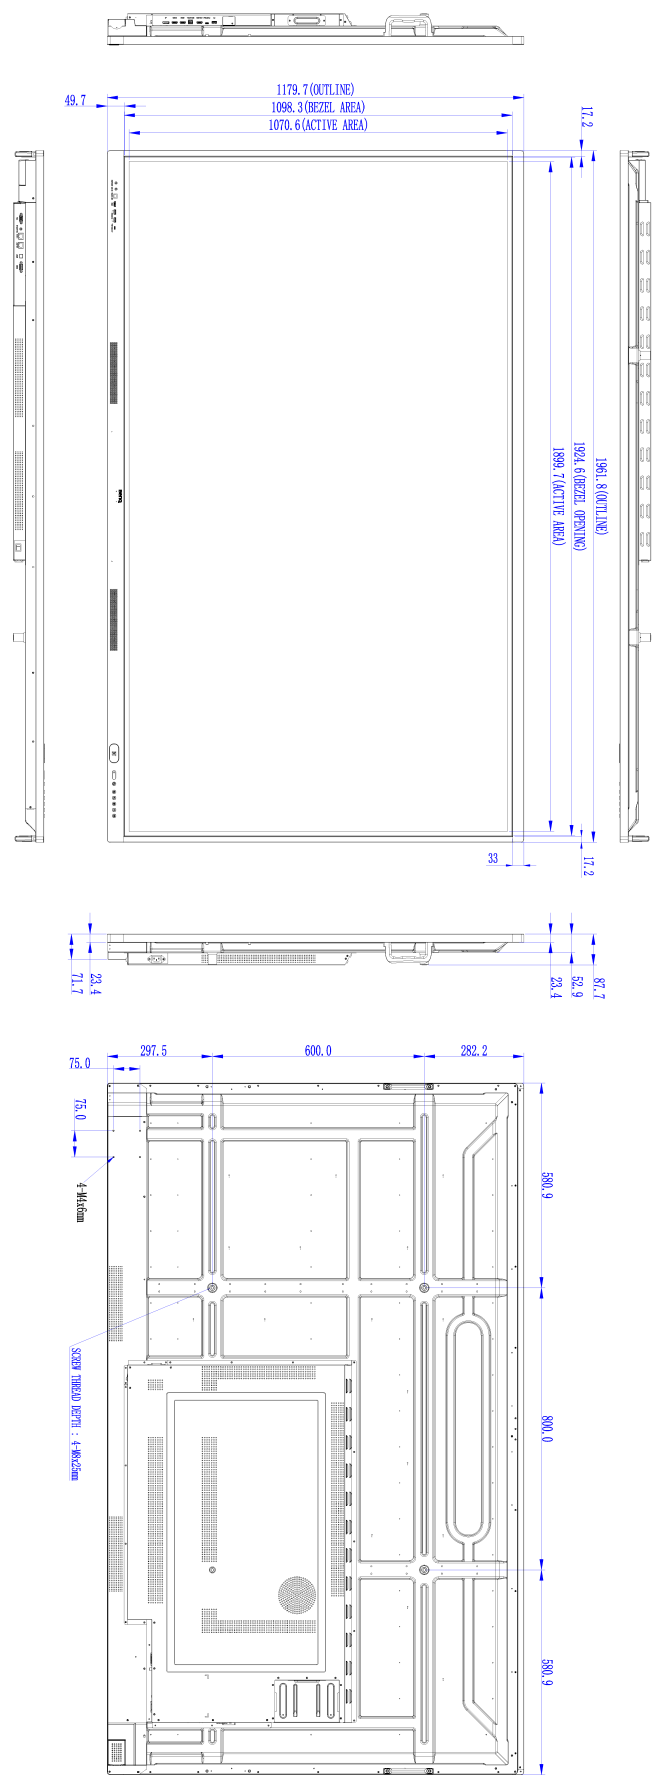


Unit: mm

Dimensions (RE6504FV)

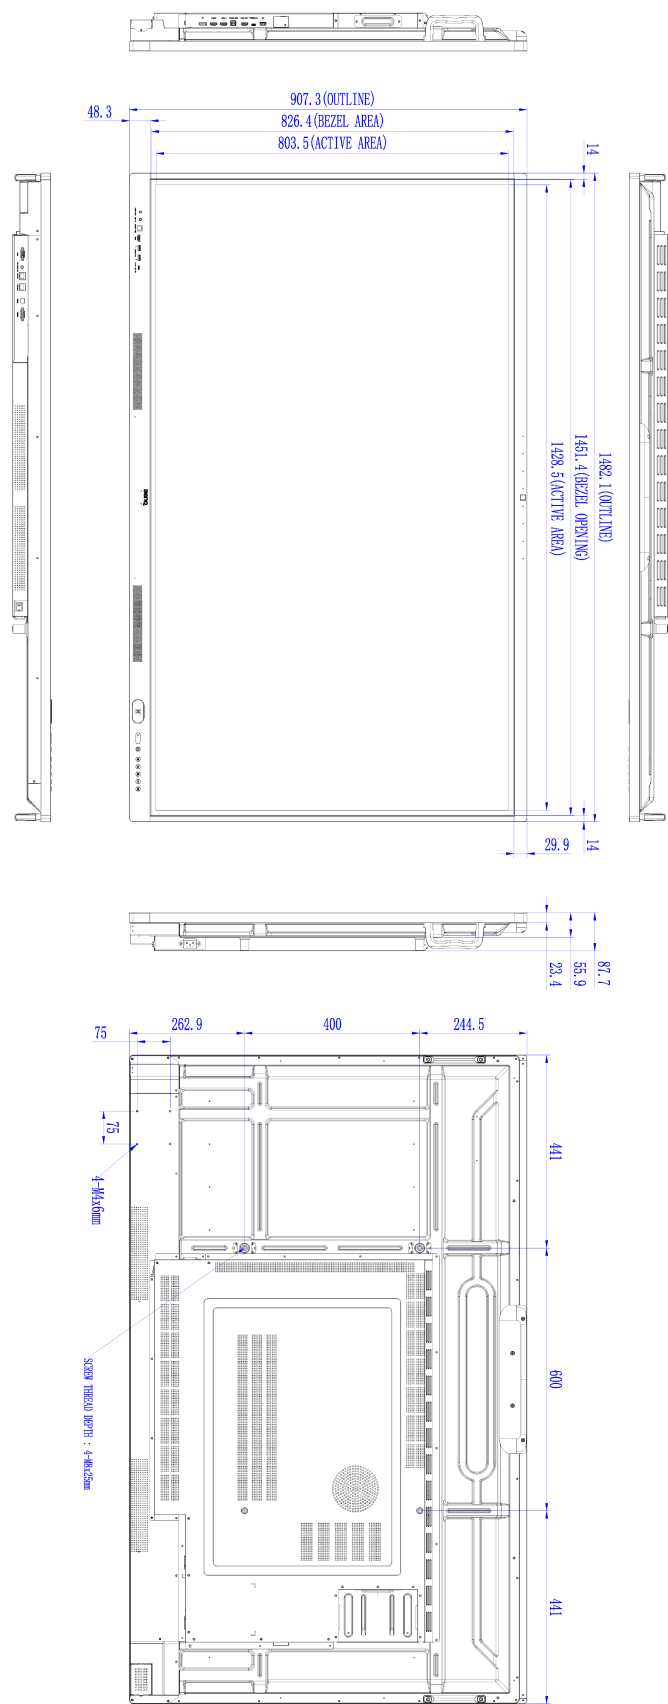


Unit: mm

Dimensions (RE7504FV)

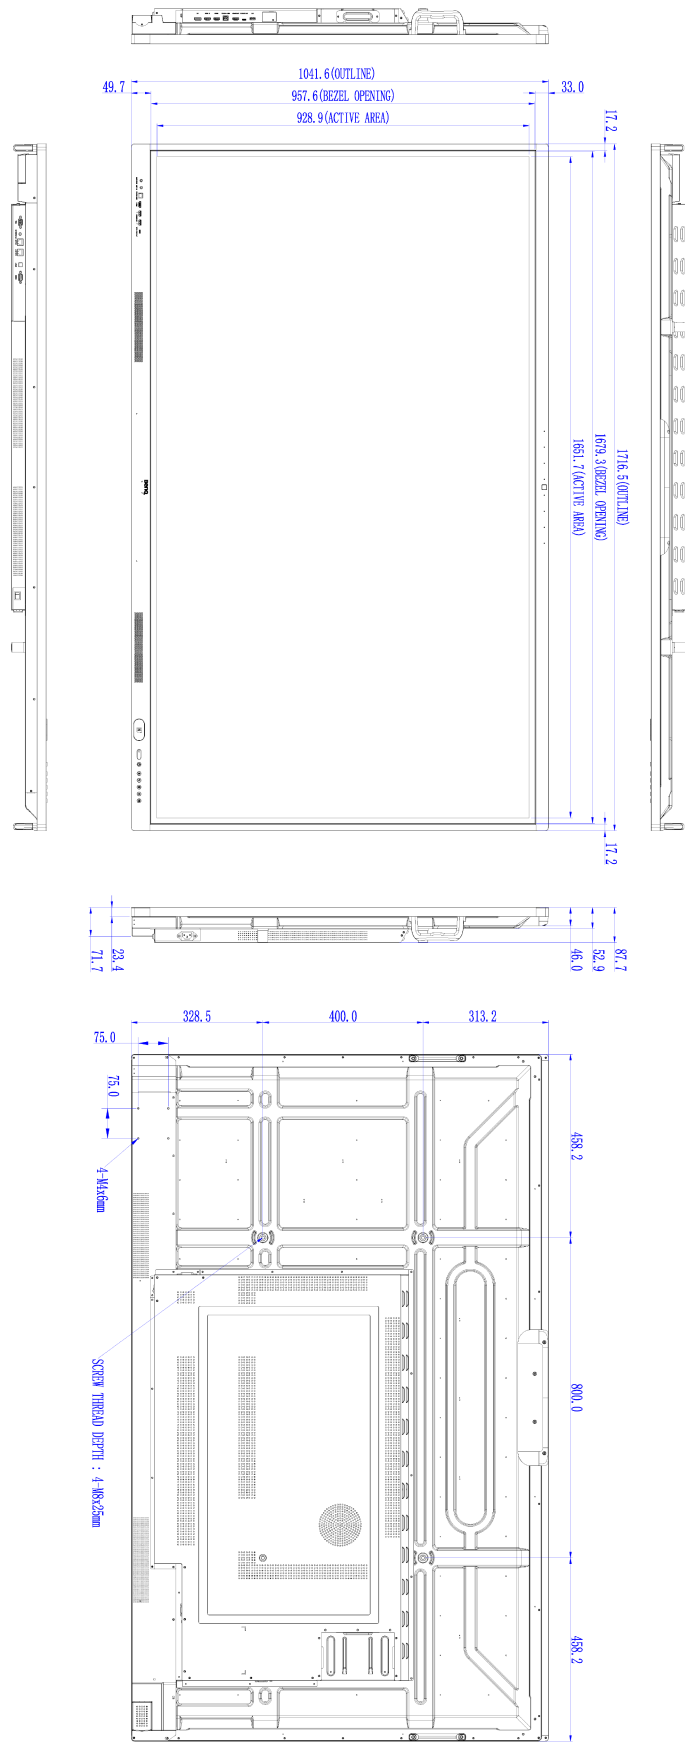

Unit: mm

Dimensions (RE8604FV)

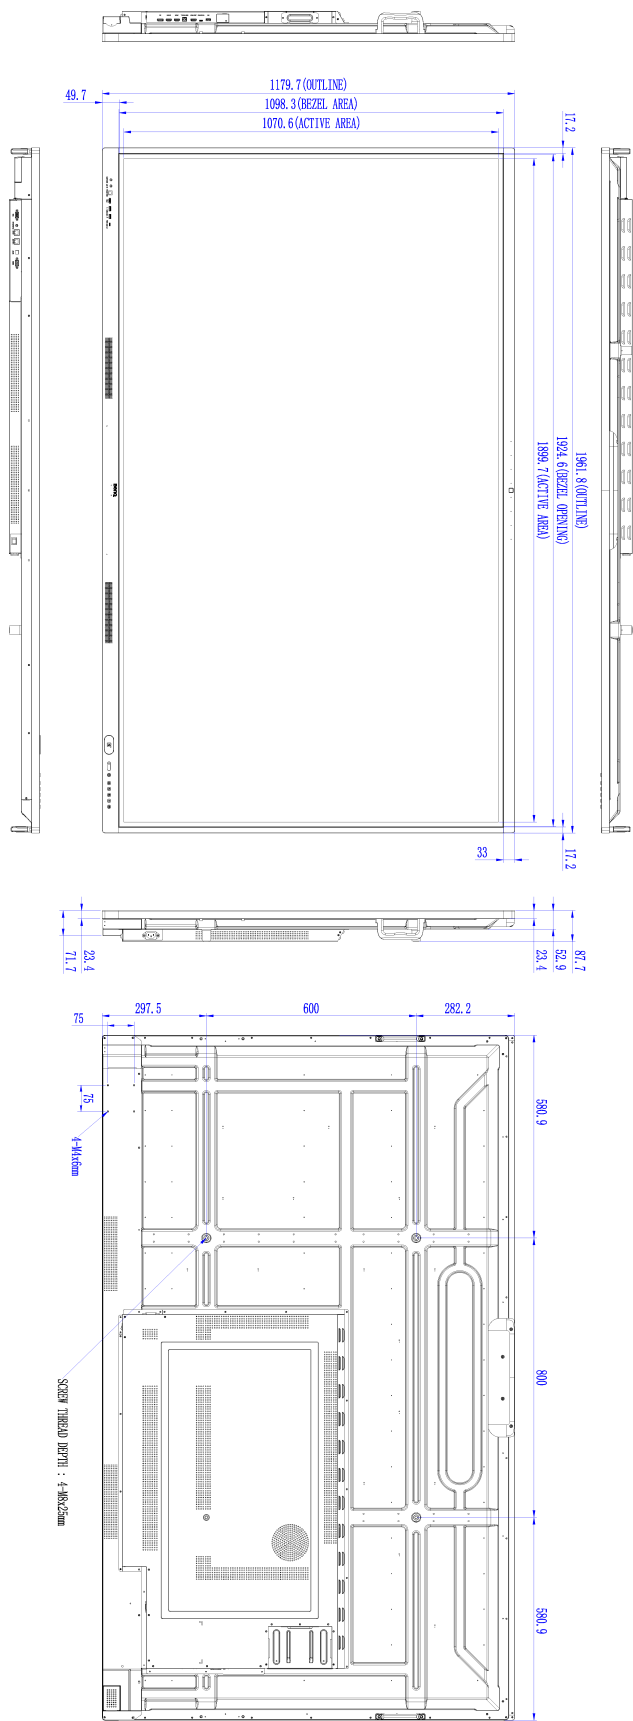

Unit: mm

Supported input signal resolution

Resolution	Input source			
	TYPE C	VGA	HDMI 2.0	DP
640 x 480 @ 60Hz		○		
720 x 400 @ 85Hz				
800 x 600 @ 60Hz		○	○	
1024 x 768 @ 60Hz		○	○	
1280 x 768 @ 60Hz		○	○	
1280 x 960 @ 60Hz			○	
1280 x 1024 @ 60Hz		○	○	
1360 x 768 @ 60Hz		○	○	
1366 x 900 @ 60Hz		○	○	
1680 x 1050 @ 60Hz		○	○	
1920 x 1080 @ 60Hz	○	○	○	○
3840 x 2160 @ 24Hz	○		○	○
3840 x 2160 @ 25Hz	○		○	○
3840 x 2160 @ 30Hz	○		○	○
3840 x 2160 @ 50Hz	○		○	○
3840 x 2160 @ 60Hz	○		○	○
480i (60Hz)			○	○
480p (60Hz)			○	○
576i (50Hz)			○	○
576p (50Hz)			○	○
720p (50Hz)			○	○
720p (60Hz)			○	○
1080i (50Hz)			○	○
1080i (60Hz)			○	○
1080p (50Hz)			○	○
1080p (60Hz)			○	○



- ○ : supported
- Blank: not supported

Troubleshooting

Problem	Solution
No picture	Check the following: • Is the display turned on? Check the power indicator of the display. • Is the signal source device turned on? Turn on the device and try again. • Are there any loose cable connections? Make sure that all cables are connected firmly. • Have you chosen an unsupported output resolution on the computer? Refer to Supported input signal resolution on page 31 to select a supported resolution and try again. • Have you chosen an unsupported output resolution on the DVD or Blu-ray disc player? Refer to Supported input signal resolution on page 31 to select a supported resolution and try again.
No sound	Check the following: • Have you turned on the mute function on the display or the input source device? Turn off the mute function or increase the audio volume level and try again. • Are there any loose cable connections? Make sure that all cables are connected firmly.
The computer input image looks strange.	• Have you chosen an unsupported output resolution on the computer? Refer to Supported input signal resolution on page 31 to select a supported resolution and try again. • Use the Auto adjust function (VGA only) to let the display automatically optimize the display of computer image. • If the result of the Auto adjust function is not satisfactory, use the Phase, H position, and V position functions to manually adjust the image. • Go to Display > Advanced settings > EDID. Set EDID to 1.4 and try again.
The control panel buttons do not work.	Have you locked the control panel buttons? Unlock the buttons and try again.
The remote control does not work.	• Have you locked the remote control function? Unlock the function and try again. • Check for incorrect battery orientation. • Check for dead batteries. • Check your distance and angle from the display. • Check whether remote control is properly being pointed at the display's remote control sensor window. • Check for any obstacle between the remote control and the remote control sensor window. • Check that the remote control sensor window is not under strong fluorescent lighting, or in direct sunlight. • Check for any devices (computer or personal digital assistant, PDA) nearby that transmit infrared signals which may cause interference to signal transmission between the remote control and the display. Turn off the infrared function of these devices.

Problem	Solution
Remote control failure	• Check whether there are other objects between remote control and television remote control receiving window, thus leading to failure of remote control. • Check whether the battery electrode in the remote control is correct. • Check whether remote control needs to replace battery.
Machine automatically shutdown.	• Whether set sleep or not. • Check whether there is sudden power outage. • Check whether there is no signal automatic shutdown.
Signal out of range	• Check whether display is set correctly. • Check whether resolution is the best resolution. • Adjust line and field synchronization in menu.
Background has vertical lines or streaks.	• Select automatic correction in menu. • Adjust clock and phase position in menu.
Image lack of color, color is incorrect	• Check whether VGA is not well connected or has quality problem. • Adjust chromaticity and brightness or contrast in menu.
Display format that is not supported.	• Select automatic correction in menu. • Adjust clock and phase position in menu.
Touch function invalid	• Check whether touch driver is installed and started. • Check whether the size of article touched is comparable with finger.
Touch positioning not correct	• Check whether driver is properly installed and make correction. • Check whether touch pen is facing the screen.
With horizontal or vertical stripes or image dithering	• Check whether signal wire is well connected. • Check whether other electronic equipment or power tools are placed around the machine.
No color, color is weak or image is weak	• Adjust chromaticity and brightness or contrast in menu. • Check whether signal wire is well connected.
With image but without sound	• Check whether mute button is pressed for mute. • Press VOL+/VOL- to adjust volume. • Check whether audio line is connected correctly.
Only one speaker has sound	• Adjust sound balance in menu. • Check whether computer sound control panel only sets up one sound channel. • Check whether audio line is connected correctly.
VGA output without sound	• Check whether the external device is connected with a headphone cable.



**Shape
the Future
of Learning**