


Digital Signage User Manual

ST4304, ST5504, ST6504








Table of contents

Product overview	4
Specifications	4
Dimensions	7
ST4304	7
ST5504	8
ST6504	9
Package contents	10
Components	11
Front panel	11
Left panel	11
Bottom panel	12
Rear panel	12
Installation requirement	13
Setting up the display	13
Installation and configuration	14
Adding the display to DMS	14
Unboxing	14
For 43" and 55" models	14
For 65" model	15
Mounting	17
Mounting in portrait position	17
Installing mounting brackets	17
Mounting the display on a wall	18
Mounting the display on a trolley	19
Powering on the display	21
Adapter	22
Install an adapter	22
Setting up launcher	23
Basic operations	25
Power button	25
User interface	26
Home screen	26
Changing the wallpaper	26
Connections	28
Video connection	28
Audio connection	28



Device Management.....	29
USB connection	29
Remote control	30
Install remote control batteries	31
Usage guidelines.....	31
Settings.....	32
Connection settings	32
Switching the input source	33
Switching to blank screen.....	33
Display settings	34
Setting an input source name.....	35
Configuring the remote control blank screen setting	35
Audio settings	36
Advanced settings	37
Connecting to the internet.....	38
Android settings	42
BenQ App Store	43
BenQ apps.....	43
Installing an app.....	44
Updating an app.....	44
Updating all apps	44
Rolling back an app to an older version.....	44
Uninstalling an app	44
File Manager.....	45
Selecting multiple files.....	45
Multimedia players	46
Media Player	46
Playback settings.....	46
PDF Player.....	47
Navigating a PDF file	47
Playback settings.....	48
Web Player	48
Adding a website	48
Controlling the players.....	49
Managing playlist.....	49
Creating a playlist.....	49
Adding new media to a playlist.....	49
Changing media sequence in a playlist.....	49



Removing media from the playlist.....	49
ClassroomCare®	50
Eye-Care solutions.....	50
Supported media	51
Supported input resolutions	51
Supported media formats	52
Troubleshooting	54
Copyright and disclaimers	56
Product support.....	57
Notice for EU customers.....	57
Safety warnings and precautions	58
Important safety instructions	58
Notes on this display	59
Notes on the LCD panel.....	59
Notes on cleaning the display.....	59
Cleaning the display screen	59
Safety notice for remote control.....	60
Battery safety notice.....	60

Product overview

This chapter provides basic information about the digital signage ST04 series.

Specifications



Important
Modifying the hardware or software of your BenQ product invalidates the warranty. BenQ is not responsible for any damage or data loss caused by the unauthorized modifications to both hardware and software and the installation of third-party add-ons and applications.

Panel

Model	ST4304	ST5504	ST6504
Screen size	43"	55"	65"
Panel type	ADS	ADS	ADS
Resolution	UHD 3840 × 2160 pixels	UHD 3840 × 2160 pixels	UHD 3840 × 2160 pixels
Active area	941.2 × 529.4 mm	1209.6 × 680.4 mm	1428.5 × 803.5 mm
Response time	8ms	8ms	8ms
Aspect ratio	16:9	16:9	16:9
Orientation	Landscape and Portrait	Landscape and Portrait	Landscape and Portrait
Contrast ratio	1,200:1	1,200:1	1,200:1
Color depth	10-bit	10-bit	10-bit
Color gamut (CIE 1976)	72% NTSC, 99% sRGB	72% NTSC, 99% sRGB	72% NTSC, 99% sRGB
Panel brightness (without glass)	350 nits	350 nits	350 nits
Backlight life	30,000 hrs	30,000 hrs	30,000 hrs

System

Model	ST4304	ST5504	ST6504
CPU	4 × Arm Cortex-A73	4 × Arm Cortex-A73	4 × Arm Cortex-A73
GPU	Arm Mali-G52 MC1	Arm Mali-G52 MC1	Arm Mali-G52 MC1
Memory	4 GB	4 GB	4 GB
Storage	32 GB	32 GB	32 GB
Operating system	Android 14	Android 14	Android 14

Connectivity

Model	ST4304	ST5504	ST6504
USB Type-A	2 × 2.0	2 × 2.0	2 × 2.0
HDMI (in out)	2 × HDMI 2.0 0	2 × HDMI 2.0 0	2 × HDMI 2.0 0
Audio out	1 × 3.5 mm audio out jack	1 × 3.5 mm audio out jack	1 × 3.5 mm audio out jack
RS-232 (in out)	1 0	1 0	1 0



Model	ST4304	ST5504	ST6504
Ethernet	1 × 10/100 Mbps (Android)	1 × 10/100 Mbps (Android)	1 × 10/100 Mbps (Android)

Built-in peripherals

Model	ST4304	ST5504	ST6504
Speaker	2 × 12 W	2 × 12 W	2 × 12 W
IR Sensor	1	1	1

Power

Model	ST4304	ST5504	ST6504
ENERGY STAR®	Yes	Yes	Yes
Power	AC 100-240V 50/60Hz	AC 100-240V 50/60Hz	AC 100-240V 50/60Hz
Standby power consumption	< 0.5 W	< 0.5 W	< 0.5 W
Typical power consumption	60 W	71 W	76 W

Physical


Model	ST4304	ST5504	ST6504
Dimensions (W × H × D)	965 × 554.9 × 59.1 mm (38 × 21.9 × 2.3 inch)	1234.2 × 706.7 × 58.9 mm (48.6 × 27.8 × 2.3 inch)	1452.9 × 829.2 × 59.7 mm (57.2 × 32.7 × 2.4 inch)
Shipping dimensions (W × H × D)	1075 × 683 × 127 mm (42.3 × 26.9 × 5 inch)	1386 × 845 × 130 mm (54.6 × 33.3 × 5.1 inch)	1635 × 987 × 159 mm (64.4 × 38.9 × 6.3 inch)
Weight (product shipping)	7.9 kg 11.7 kg (17.4 25.8 lbs)	12 kg 17.4 kg (26.5 38.4 lbs)	16.9 kg 25.3 kg (37.3 55.8 lbs)
Mount (screws)	VESA 200 × 200 mm (4 × M6 × 15 L)	VESA 400 × 200 mm (4 × M6 × 15 L)	VESA 400 × 400 mm (4 × M6 × 15 L)

Environment

Model	ST4304	ST5504	ST6504
Storage temperature	-10°C - 60°C -14°F - 140°F	-10°C - 60°C -14°F - 140°F	-10°C - 60°C -14°F - 140°F
Operating temperature	0°C - 40°C 32°F - 104°F	0°C - 40°C 32°F - 104°F	0°C - 40°C 32°F - 104°F
Storage humidity	10% - 80% RH Non- Condensing	10% - 80% RH Non- Condensing	10% - 80% RH Non- Condensing
Operating humidity	10% - 80% RH Non- condensing	10% - 80% RH Non- Condensing	10% - 80% RH Non- Condensing

Software

Model	ST4304	ST5504	ST6504
Wireless screen sharing	InstaShare 2	InstaShare 2	InstaShare 2
Device management	DMS	DMS	DMS



Model	ST4304	ST5504	ST6504
Content management	X-Sign	X-Sign	X-Sign

Accessories


Model	ST4304	ST5504	ST6504
Cables	1 × HDMI (1.5 m 4.9 ft)	1 × HDMI (1.5 m 4.9 ft)	1 × HDMI (1.5 m 4.9 ft)
	1 × RS-232 (1.8 m 5.9 ft)	1 × RS-232 (1.8 m 5.9 ft)	1 × RS-232 (1.8 m 5.9 ft)
	Power cord (by SKU)	Power cord (by SKU)	Power cord (by SKU)
Remote control	1	1	1




Note
Specifications and features are subject to change without notice.

Dimensions


ST4304

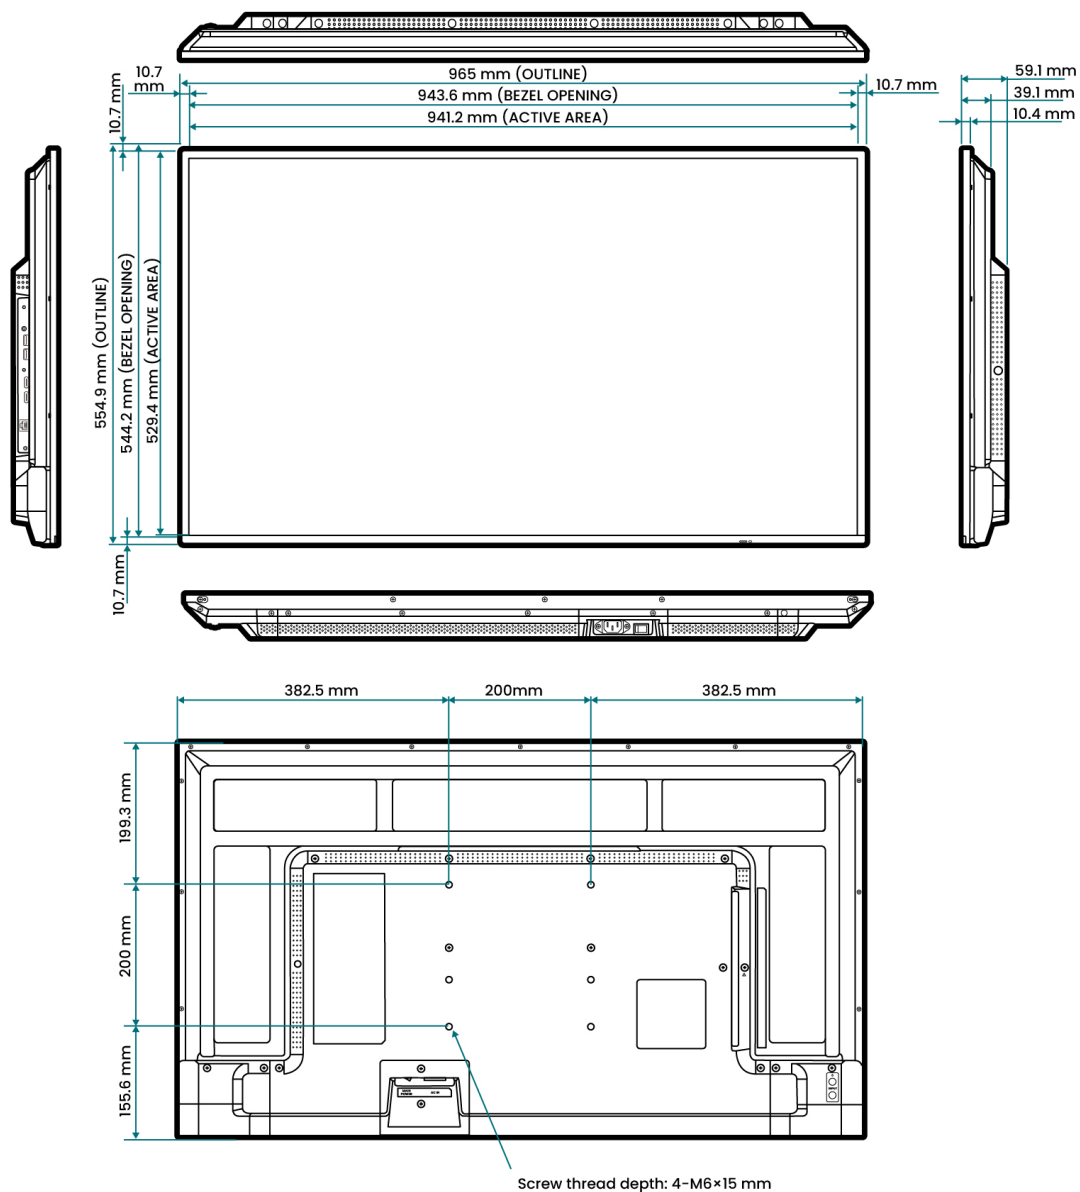

ST5504

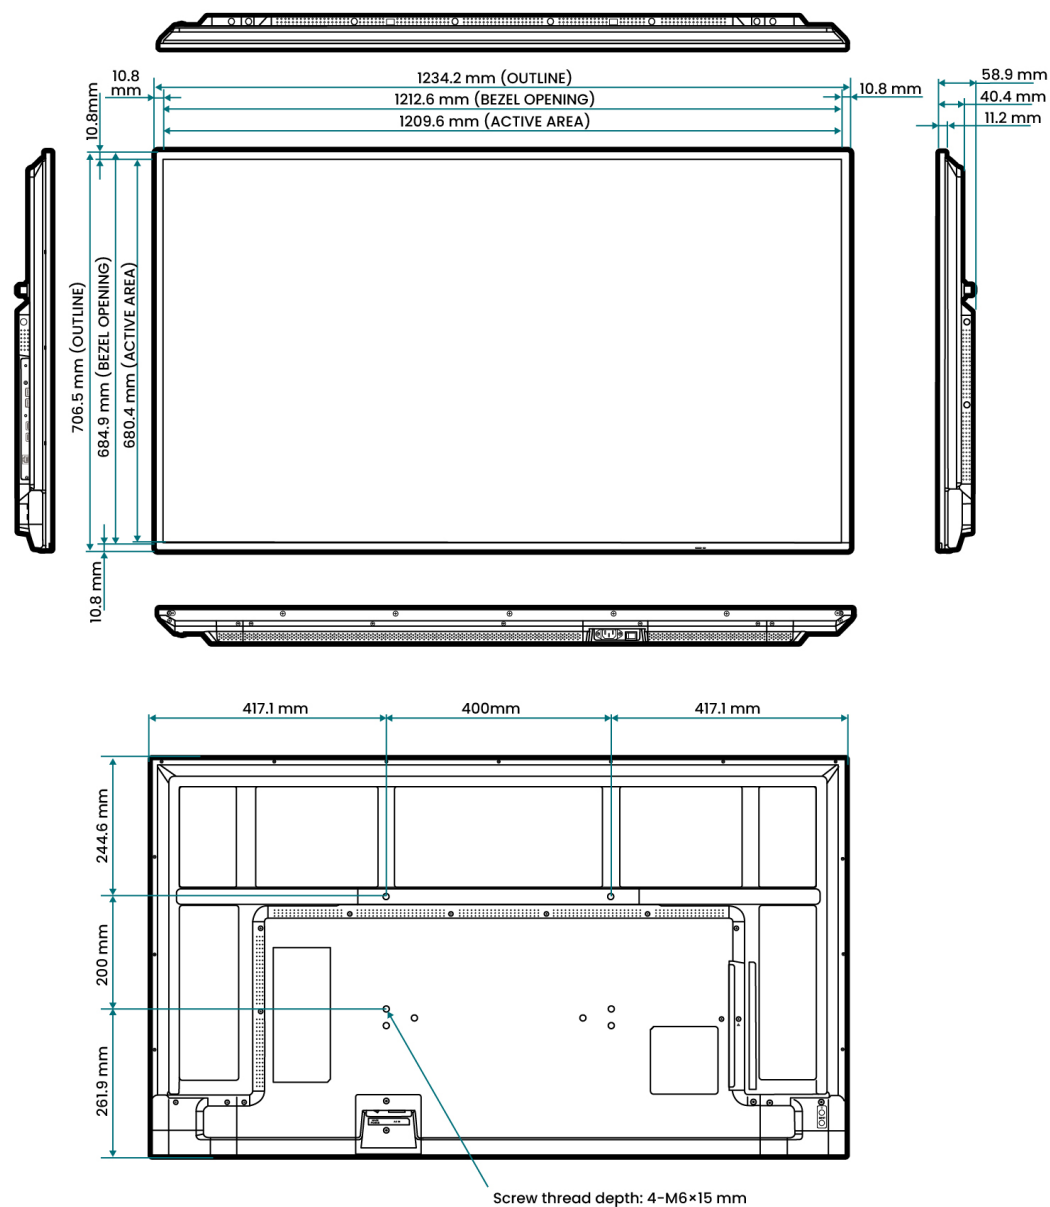

ST6504

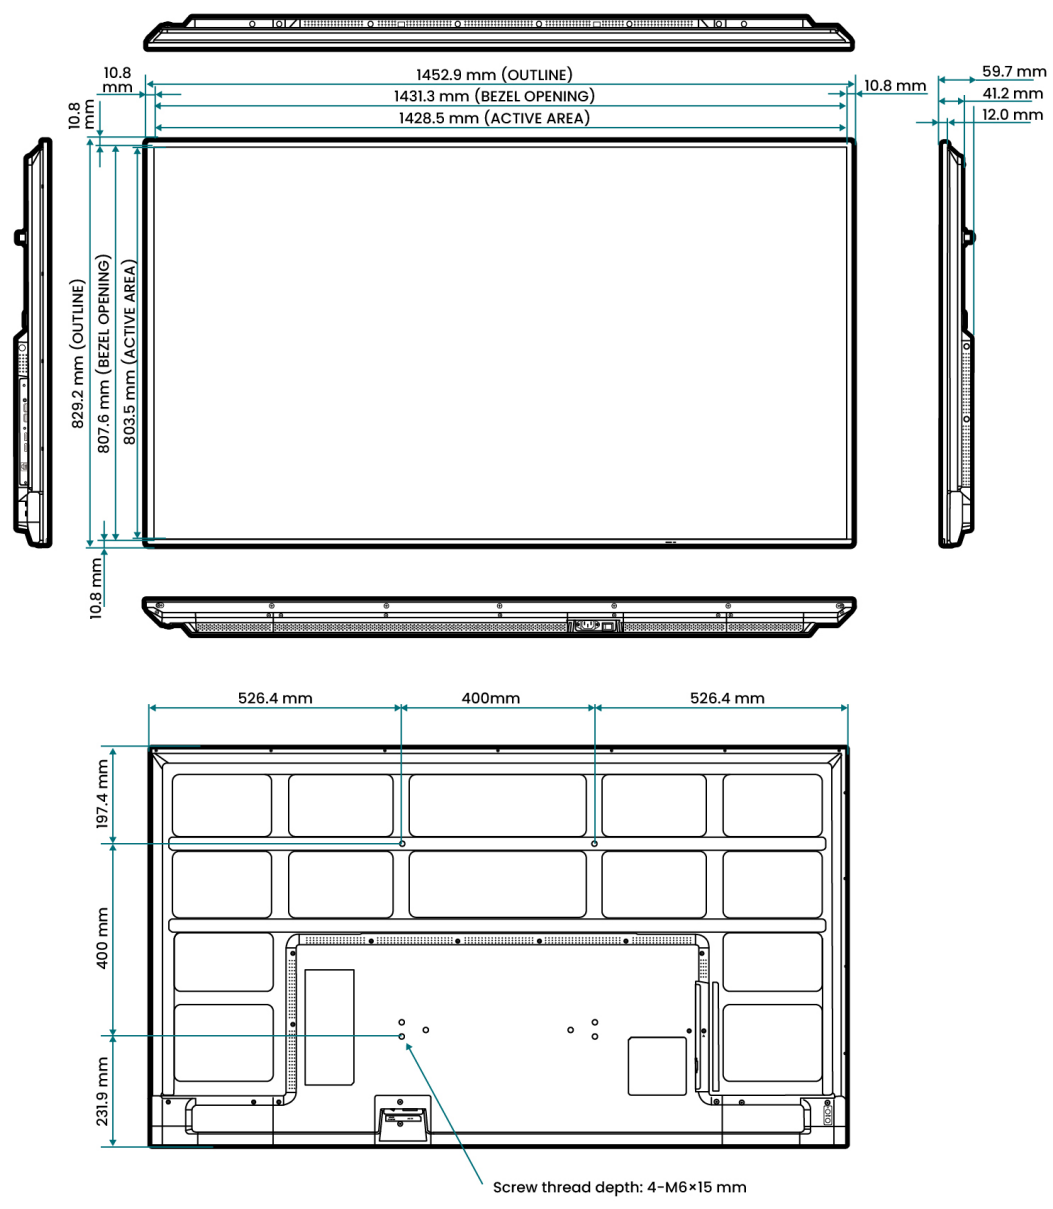


Package contents

Verify all the contents after opening the package. If any item is missing or damaged, please contact your dealer immediately.



LCD monitor



Remote control



Power cord*




HDMI cable × 1



RS-232 cable × 1



User documents
• Quick start guide
• Regulation sheets



WiFi cover with screws




Note

- * The type and quantity of power cord may differ depending on the region of purchase.
- Available accessories and the pictures shown here may differ from the actual contents and the product supplied for your region. And the package contents may subject to change without prior notice. For cables that are not supplied with your product, you can purchase them separately.




Important

- Ensure that there are no accessories left inside the box before discarding the packaging.
- Do not leave plastic bags within reach of young children or babies.
- Dispose of packaging materials wisely. Consider recycling the cardboard carton or storing the package for future transport of the display.




Components

Front panel

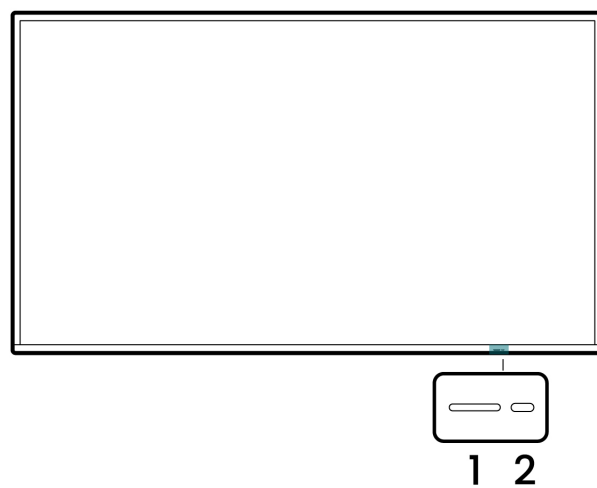

1. IR sensor
2. Power status light

Left panel

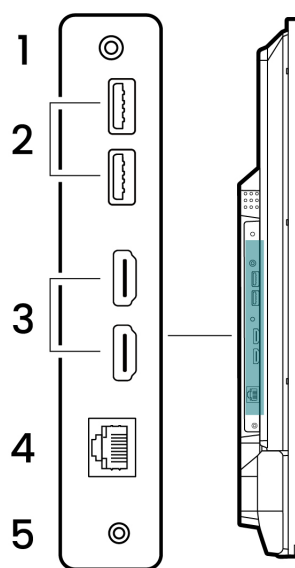

1. 3.5 mm audio out jack¹
2. USB 2.0 Type-A ports²
3. HDMI in ports³
4. Gigabit Ethernet ports⁴
5. RS-232 in port



Note


¹ The 3.5 mm audio out jack does not support audio input, including microphone input from headset devices.

² These USB 2.0 Type-A ports are dedicated for the Bluetooth Wi-Fi adapter.

³ The HDMI 1 port supports HDMI ARC.


⁴ The Gigabit Ethernet ports support data transfer speeds of 10/100 Mbps.

Bottom panel

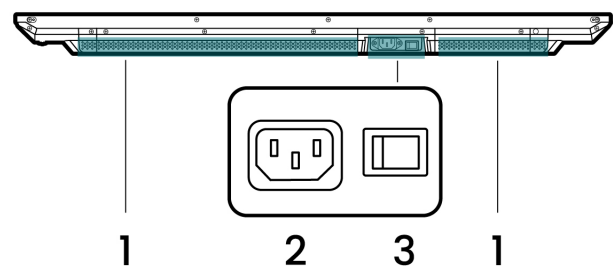

- 1. Speakers
- 2. Power input
- 3. Power switch

Rear panel

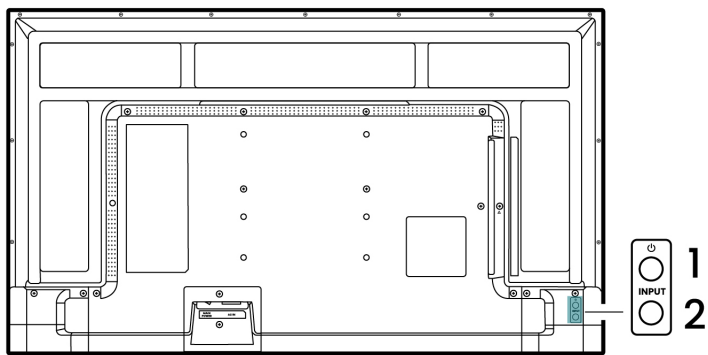


- 1. Power button
- 2. Input button¹



Note
¹ Users can press the input button to switch between input sources. For details, see [Switching the input source](#).

VESA specifications

Screw size: M6 × 15 L

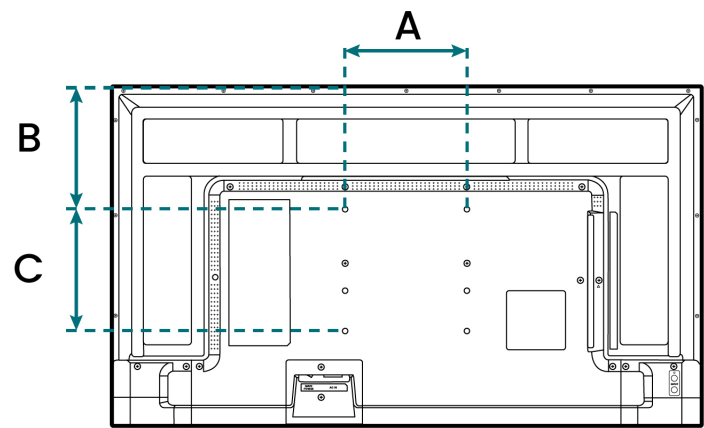


Dimension	43"	55"	65"
A	200 mm	400 mm	400 mm
B	199.3 mm	244.6 mm	197.4 mm
C	200 mm	200 mm	400 mm

Installation requirement

Category	Item
Environment	- Room temperature: 0 to 40°C (32 to 104°F) - Non-condensing relative humidity: 10 to 80% - Flat, anti-static surface with no exposure to direct sunlight, liquids, and chemicals
Hardware and peripherals	Wireless USB adapter and/or Ethernet cable
Tools	- Scissors - Phillips screwdriver - Padding - Anti-static wrist strap

Setting up the display

- Place the display in an environment that meets the requirements.
For details, see [Installation requirement](#).
- Add the display to DMS.
For details, see [Adding the display to DMS](#).
- Unbox the display.
For details, see [Unboxing](#).
- Mount the display.
For details, see [Mounting](#).
- Install any additional accessories and peripherals.
For details, see the following topics:
 - [Adapter](#)
- Connect the power cord and all applicable cables.
- Power on the display.
For details, see [Powering on the display](#).
- Set up auncher.
For details, see [Setting up launcher](#).



Installation and configuration

This chapter provides specific hardware and firmware installation and configuration steps.



Note

The images shown here are for reference only and may differ from the actual appearance of the product.

Adding the display to DMS


The BenQ Device Management Solution (DMS) is a device management platform that allows IT administrators to remotely manage their smart displays. For more information on DMS, refer to the DMS user manual.



Tip

Before unboxing each display, IT administrators can add each one to their DMS device list by scanning the device serial number barcode. BenQ recommends performing this step for easier device and firmware management.

1. Install and launch the DMS app on a mobile device.
2. Log in with a DMS administrator account.
3. Tap .
4. Scan the serial number barcode on the side of the box.

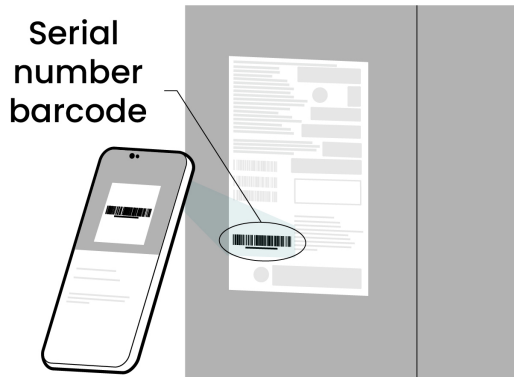

5. Enter a device name and description, and then tap **Add**.

Unboxing



Warning

To prevent serious physical injuries and damages to the display, ensure that the display is installed by at least two qualified technicians. BenQ accepts no liability for installations not performed by a professional technician.

For different model sizes, the unboxing process may vary. See below links for details.

- [For 43" and 55" models](#)
- [For 65" model](#)



For 43" and 55" models

1. Place the box in an upright position on a clean, dry, stable surface.
2. Open the box and take out the cables, accessories and user documents.




Important

Ensure that each box and their contents are accounted for before disposing any of the original packaging. For details, see [Package contents](#).

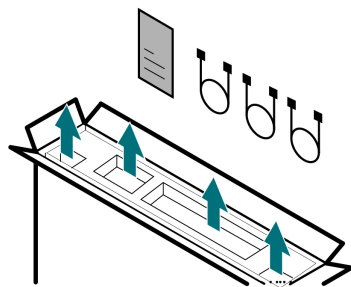

3. Remove the top panel protector. Reverse and place it on the floor as a temporary base for the display.

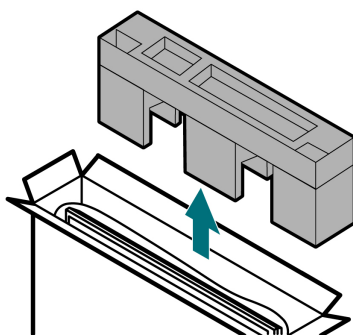


4. Carefully lift the display out of the box and place it in the temporary base.



Important


- The display should be handled by two people, one person on each side.
- Use both hands to hold the display directly by its frame.

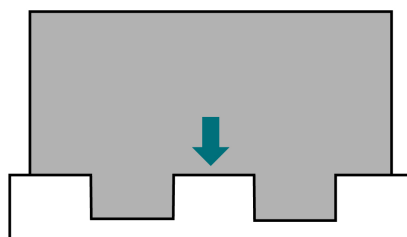


5. Remove the protective cover.


For 65" model

1. Place the box in an upright position on a clean, dry, stable surface.
2. Remove the box.
 - a. Unfasten the clips. Simultaneously pinch the handles together, and then pull it out. The total number of clips varies by model.

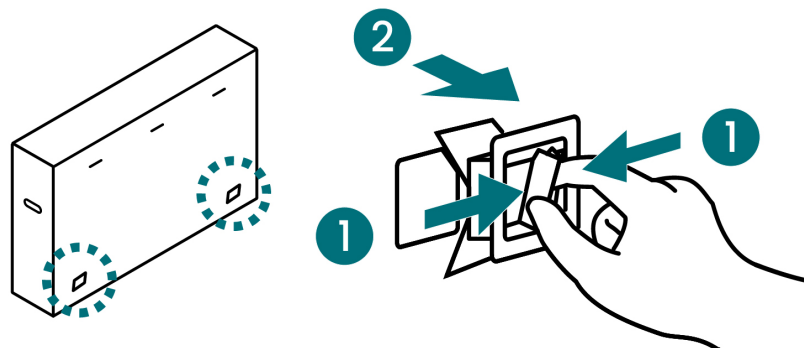



- b. Using the flaps on the side, carefully lift the box off the display.

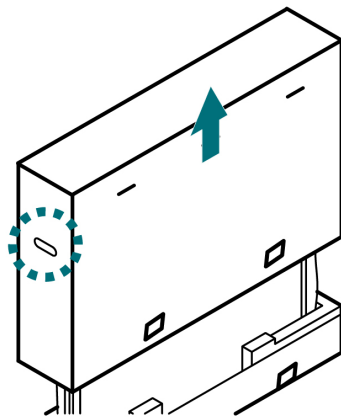


3. Collect all accessories.




Important

Ensure that each box and their contents are accounted for before disposing any of the original packaging. For details, see [Package contents](#).

4. Remove the panel protectors.

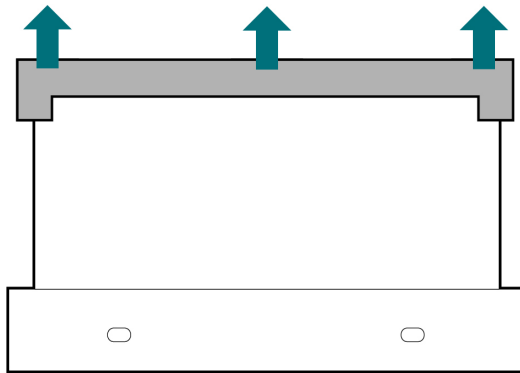

5. Remove the cardboard protector in front of the screen. Then remove the protective cover carefully while safeguarding the display.



Mounting

Wall mount is not included in the package and must be purchased separately. Refer to the third-party wall mount or trolley mount user guide for the installation instructions.



Warning


To prevent serious physical injuries and damages to the display, ensure the following:

- The display is installed by at least two qualified technicians. BenQ accepts no liability for installations not performed by a professional technician.
- The display is securely mounted in accordance with the installation instructions.

Mounting in portrait position

The smart signage can be installed in portrait position by rotating the display 90 degrees clockwise from the back.

When installed in portrait mode, the power button and IR sensor will be located in the upper right side of the display.

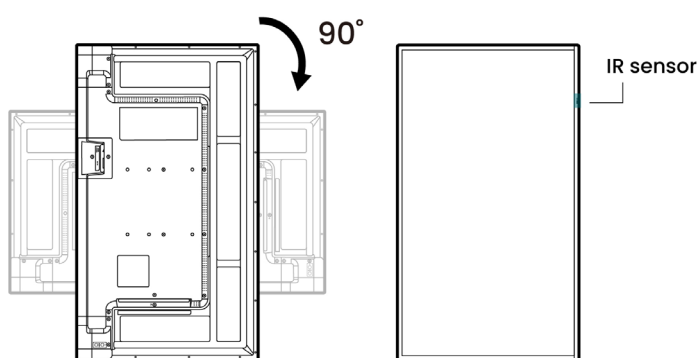

Installing mounting brackets

1. Place padding on a flat, horizontal, and object-free surface.



Important

- Ensure that the padding is clean, soft, and dry to prevent leaving marks on the screen.
- Ensure that the size of the padding is larger than the display.


2. Gently lay the display on the padding with the screen facing down





Warning

To prevent damages to the display, do not step, lean, or put pressure on the display when installing the mounting brackets.

3. Align the holes of the mounting brackets with the holes at the back of the display. Adjust the placement of the brackets depending on the height requirements of the room. For details, see [VESA specifications](#).
4. Remove the screws from the display.

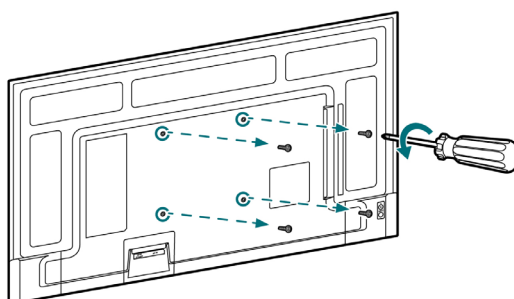


5. Attach the screws to secure the brackets in place.

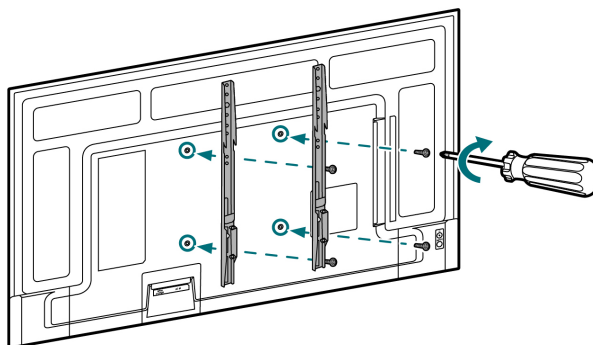

Important

Ensure that all the all screws are securely attached to the brackets. The recommended torque is 470-635 N•cm (41.59-56.20 lb•in).

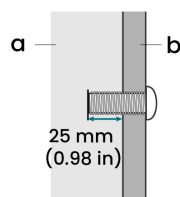


(a) Display
(b) Wall mount bracket

Mounting the display on a wall



Important

To maintain proper ventilation, ensure that there is at least 10 mm (0.39 in) of clear space between the back of the display and the wall. Take note of this when installing the wall mount.

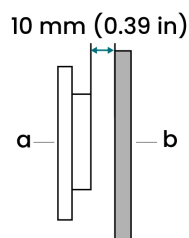


(a) Display
(b) Wall

1. Ensure that the mounting plate is securely attached to the wall.
2. Ensure that the mounting brackets are securely attached to the display.
3. Carefully lift the display to its upright position, and then carry it towards the plate.





Important


- The display should be handled by two people, one person on each side.
- Use both hands to lift the display. For models with handles, keep one hand on the handle with the other hand supporting the side or bottom corner. For models without handles, carefully lift the display directly by its frame.

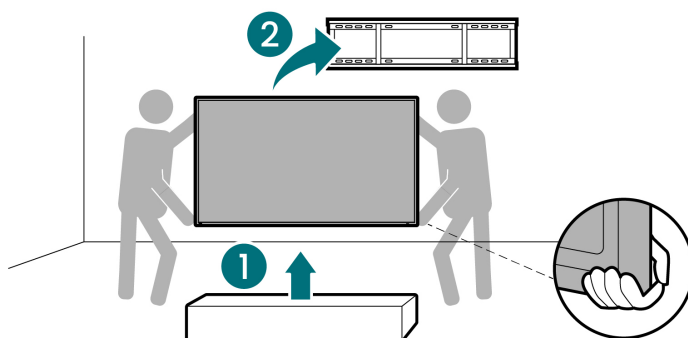

4. Align the bracket hooks with the plate, and then carefully mount the display onto the wall.

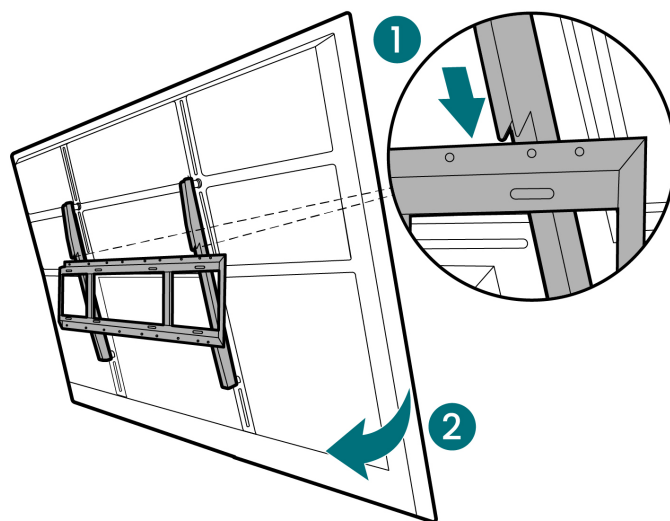


5. Attach the locking screws until they are fully secured to the mount.

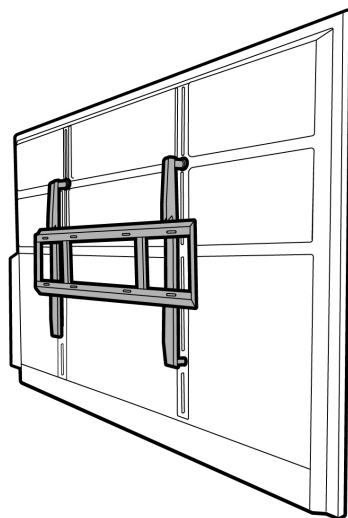

Mounting the display on a trolley

1. Lock all the trolley wheels in place.


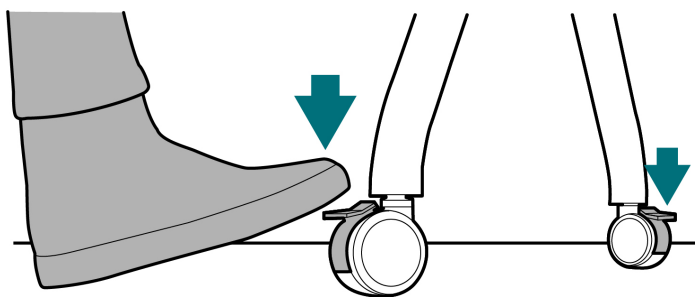


2. Ensure that the mounting brackets are securely attached to the display.
3. Carefully lift the display to its upright position, and then carry it towards the trolley.




Important


- The display should be handled by two people, one person on each side.
- Use both hands to lift the display. For models with handles, keep one hand on the handle with the other hand supporting the side or bottom corner. For models without handles, carefully lift the display directly by its frame.

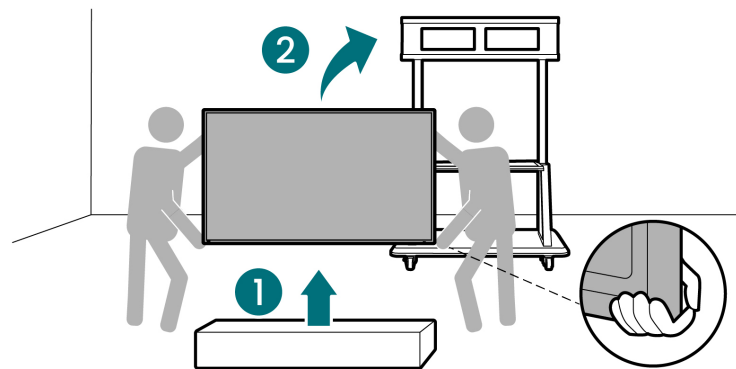


4. Align the bracket hooks with the mounting plate, and then carefully mount the display onto the trolley.

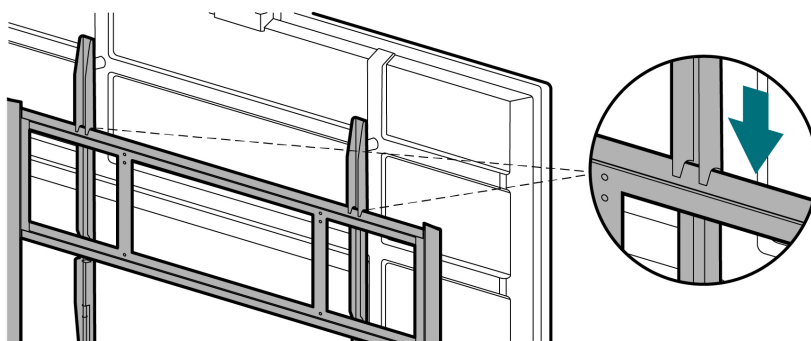

5. Attach the locking screws until they are fully secured to the mount.

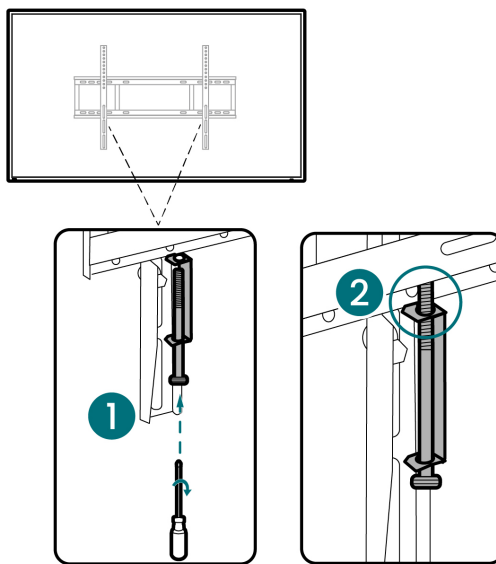



Powering on the display


1. Ensure that the power cord is connected to the display and a power source.




Important

- The supplied power cord supports 100-240V AC.
- The cord varies depending on the region. Make sure to use the appropriate type.
- Protect the power cord from being snagged, stepped on, or pinched, particularly near the plug and the point where it is connected to the display.
- Be aware of power loading when using extenders or multiple-outlet power boards.

2. Ensure that the power switch is turned on.
3. Press the Power button on the back of the display. Or use the remote control to power on.

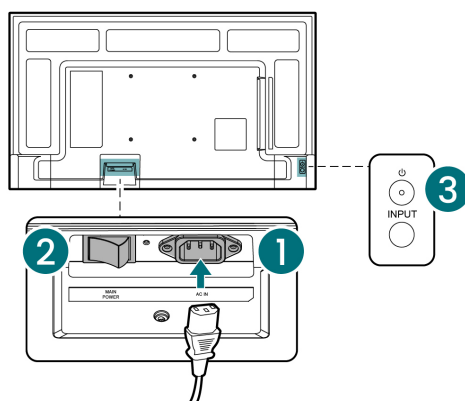



Adapter

The ST04 has USB 2.0 Type-A ports that are dedicated for the Bluetooth Wi-Fi adapter. These ports come with a security cover designed to prevent misuse and theft.



Note

The Wi-Fi adapter is not included and must be purchased separately.


Install an adapter




Warning

To prevent damages to the display, make sure to turn off the display before installing or removing the adapter.


1. Power off the display.
2. Disconnect the power cord from the electrical outlet.
3. Connect the adapter to the USB port.

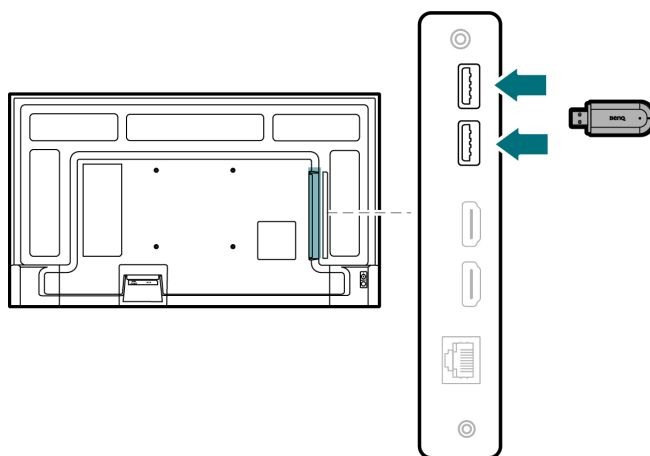

4. Align the cover with the display and attach the screws.

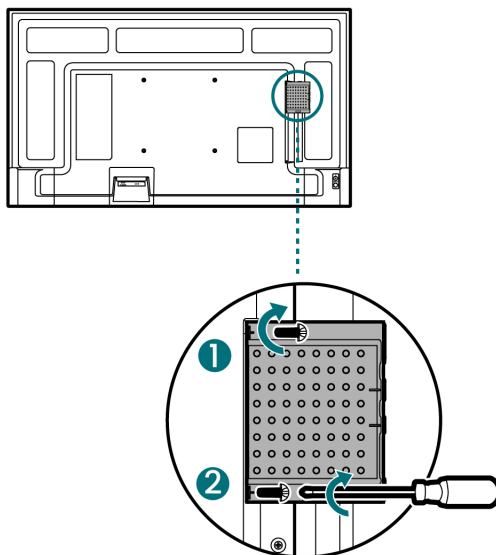

5. Connect the power cord to the electrical outlet.
6. Power on the display.




Setting up launcher




Tip

BenQ recommends using a mouse for faster setup. You can connect your mouse to the USB 2.0 Type-A ports on the bottom panel. If you are using the remote control, see [Remote control](#) for details.


1. Power on the smart signage.
2. On the **Welcome** page, select **Next** to continue.

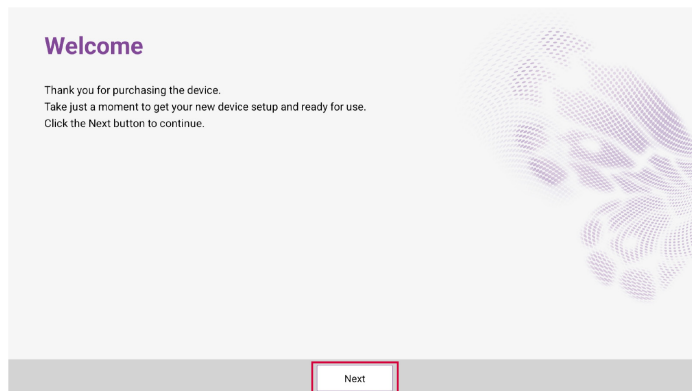


3. On the **Language** page, select **English** and select a language, and then select **Next**.

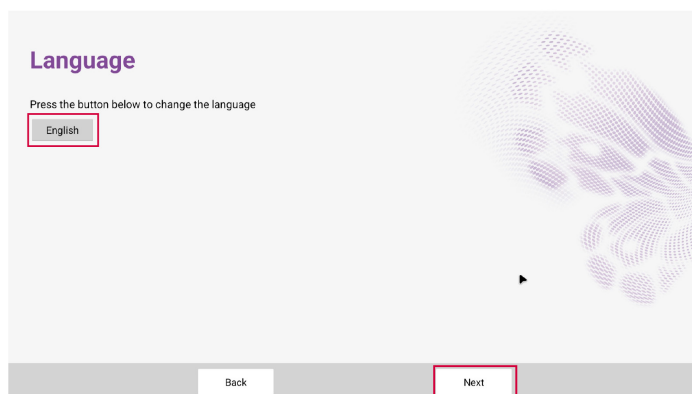


4. On the **Setup the board** page, select **Set up manually**, and then select **Next**.

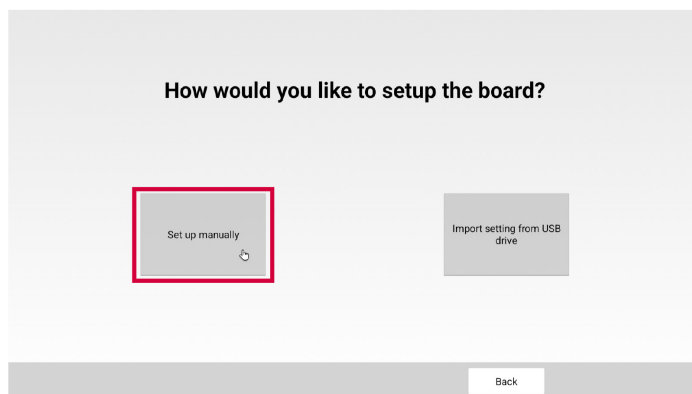


5. On the **Internet** page, select **Next** to continue.

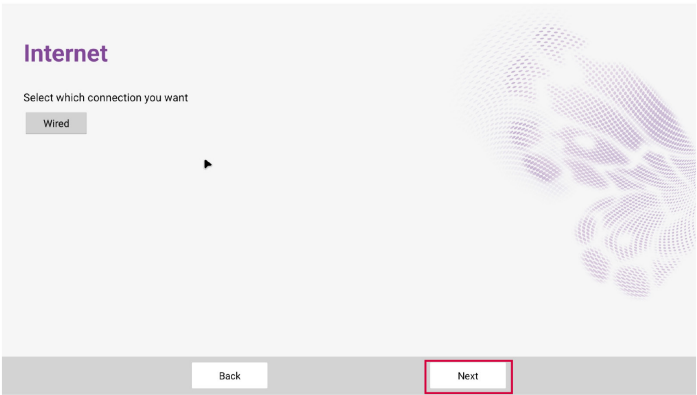


6. On the **Date & Time Settings** page, set the date and time, and then select **Next**.
7. On the **End-User License Agreement (EULA)** page, read and accept the agreement, and then select **Next**.

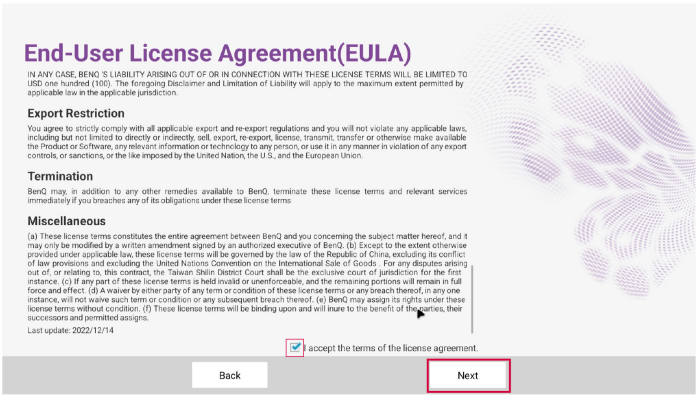


8. On the **Privacy Policy** page, read and agree to the terms, and then select **Next**.

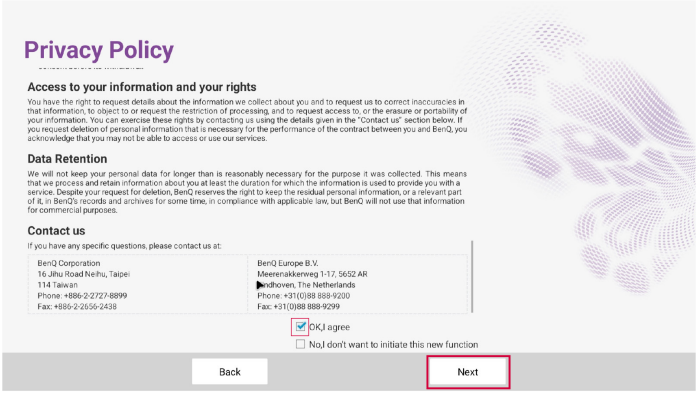

9. On the **Setup Complete** page, select **Finish** to enter home page.

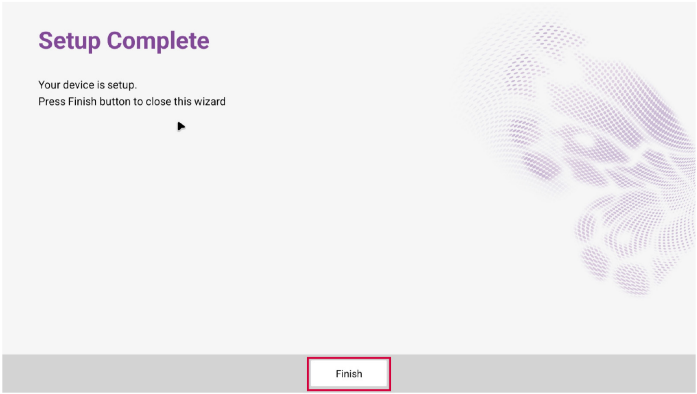



Basic operations

This chapter describes the basic display operations.


Power button

LED status

LED behavior		Display status	Description
	Solid blue	On	The display is powered on and awake.
	Blinking red and blue	Asleep	The display is powered on and in sleep mode.
	Solid red	Powered off	The display is powered off, connected to a power source, and the power switch is on.
	Off	Power switch off	The power switch is off or the display is not connected to a power source.

Operations


Operation	User action	Result
Power on	Press the button while the display is powered off.	The displays powers on.
Sleep	Press the button while the display is powered on and active.	The display goes into sleep mode.
Wake up	Press the button while the display is in sleep mode.	The display wakes up.
Power off	Press and hold the power button for 3 seconds.	A countdown timer appears and powers off the display in 3 seconds.
Force power off	Press and hold the power button for 10 seconds. If this fails, use the power switch at the bottom of the display.	The display shuts down.
	 Important: Use this method only when the display is unresponsive.	



User interface

Home screen

The ST04 smart signage provides users with direct access to files and BenQ applications from the home screen, without requiring a login. The home screen features three main components:

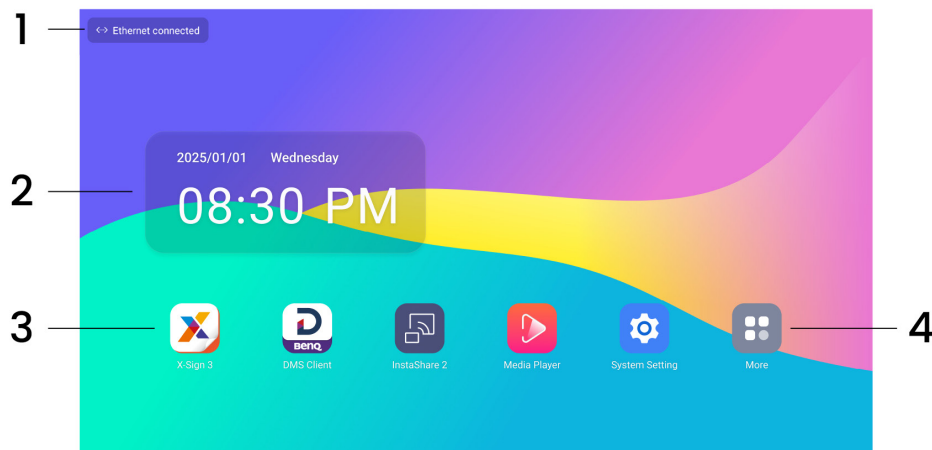

1. Network connection status
 - For internet connection issues, see [Connecting to the internet](#).
2. Date and time
3. Apps
 - For available BenQ Apps, see [BenQ App Store](#).
 - For displaying multimedia contents, see [Multimedia players](#).
 - For display setting details, see [Settings](#).
4. More
 - Select **More**  to view all apps on the smart signage.

Changing the wallpaper

1. Select **More**  on the home screen, and then select **Settings** .
2. Scroll down and find **Wallpaper**.
3. Select a wallpaper image.




Note

The image list only appears when there are image files saved on the display or on any connected USB device.

4. Select **Set wallpaper** to save the changes.

Managing notifications

The smart signage automatically receives the latest firmware and apps updates once it is connected to the internet.

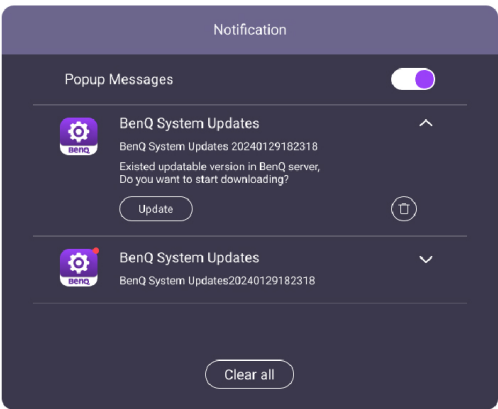

UI element	Description
Pop-up messages	Enable/Disable pop-up notifications.
	Expand/Collapse Show/Hide the update details.
Update	Select this to download and install the update.  Warning • The firmware update requires a system restart. Make sure to save all important data before proceeding. • The update process may take a few minutes to complete. Ensure that there are no interruptions. Do not power off the device or disconnect from the internet to prevent permanent damage to the display.
	Delete Select this to delete the notification.
Clear All	Select this to clear all notifications.



Tip
In case an update is deleted from the list, it can still be installed through the **Settings** menu. For details, see [Updating the firmware](#).


Connections

The smart signage has several ports that can be used to input and output data and media.

- [Video connection](#)
- [Audio connection](#)
- [Device Management \(RS-232\)](#)
- [USB connection](#)

Video connection


Connect the input device to any of the HDMI ports on the left panel.

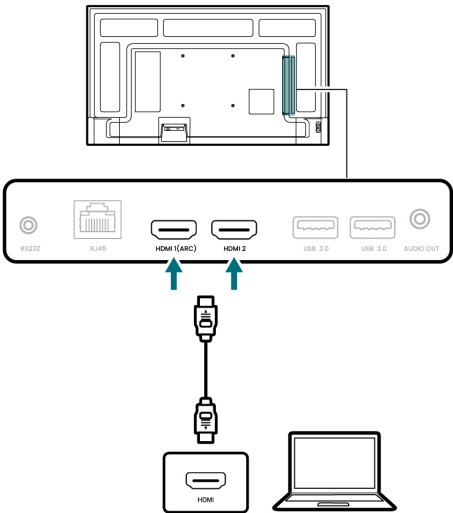

Audio connection


Use either method below to establish your audio connection:

Connection	Configuration
HDMI 1 (ARC)	1. Connect a soundbar to the HDMI 1 (ARC) port on the left panel to transmit audio from the display to the external speaker. 2. Go to Display > Advanced settings, ensure that HDMI CEC & HDMI ARC are enabled. For details, see Display settings.
3.5 mm audio out jack	Connect the audio output device to the 3.5 mm audio out jack on the left panel.

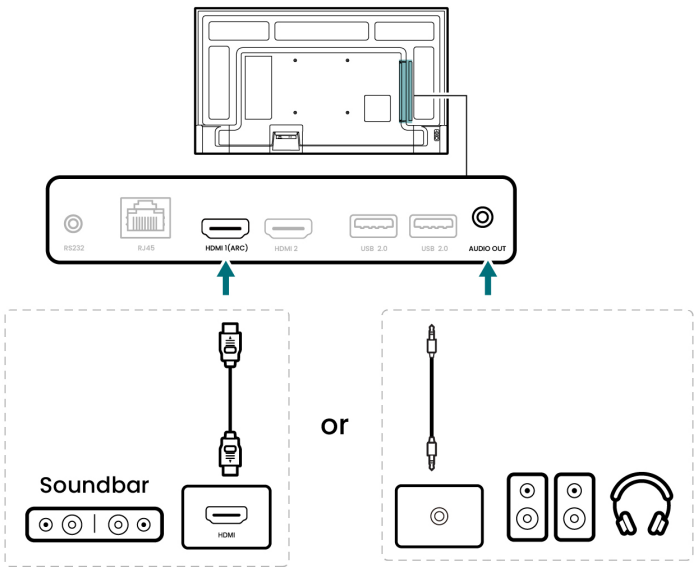


Device Management

Connect the management console using the RS-232 port on the left panel. This connection allows administrators to configure the display settings with their laptop or local management console.

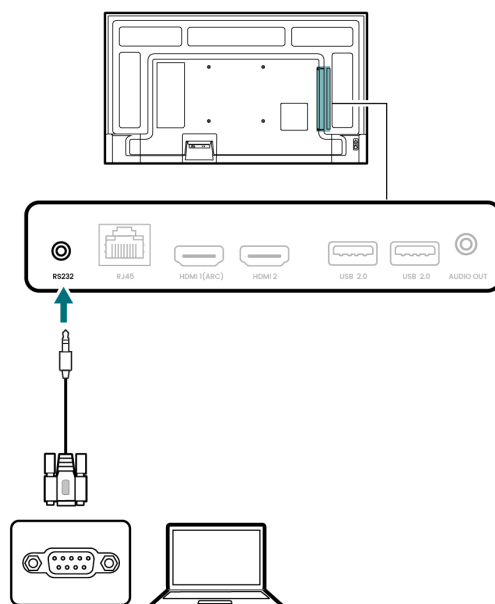

USB connection

Connect your USB devices to the USB 2.0 ports on the left panel.

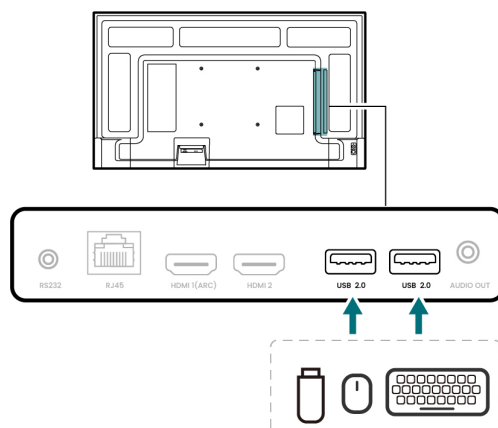


Note

When connecting devices to the any of the display's USB ports, ensure the following:

- Use a USB extension cable when connecting oversized USB dongles or sticks. The cable length is recommended to be less than 5 m (16.4 ft) for USB 2.0 slots.
- The smart signage limits the number of USB connections. If all USB slots are occupied and a USB hub is connected to the display, it will not recognize any new USB input devices.
- The USB 2.0 slots support up to 0.9A.
- Using two USB 1.1 devices simultaneously may prevent the system from functioning properly.

Remote control

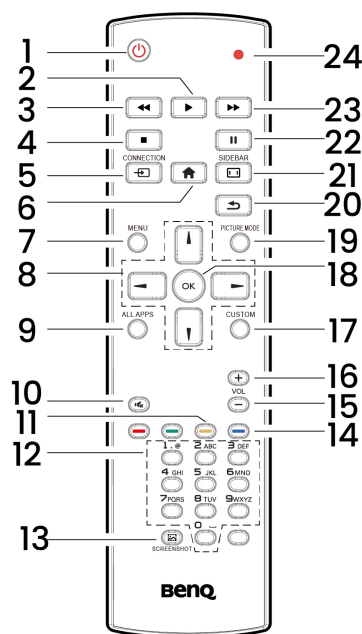


1. Power button
2. Play button
3. Previous button
4. Stop button
5. Connection button
6. Home button
7. Menu button
8. Direction buttons
9. All apps button
10. Mute button
11. Freeze screen button
12. Number buttons
13. Screenshot button
14. Blank screen button*
15. Volume down button
16. Volume up button
17. Custom button
18. OK button
19. Picture mode button
20. Return button
21. Sidebar button
22. Pause button
23. Next button
24. Status LED

The behavior of the blank screen button can be configured in the **Display** settings menu. For details, see [Configuring the remote control blank screen setting](#).




Note

* The behavior of the blank screen button can be configured in the **Display** settings menu. For details, see [Configuring the remote control blank screen setting](#).



Install remote control batteries

1. Open the remote control battery cover.
2. Insert the batteries, ensuring the positive and negative ends are facing in the correct direction.
3. Put the cover back on.

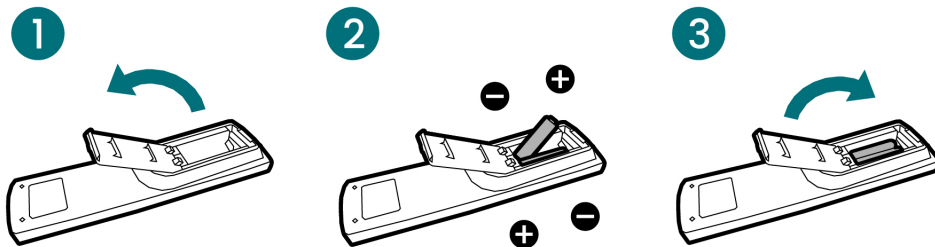


Usage guidelines

- Keep the remote control cool and dry at all times. Prolonged exposure to direct heat and humidity may cause it to malfunction.

The following guidelines are only applicable when using the IR sensor.

- Keep the IR sensor away from direct sunlight or a strong light source as this may disrupt the remote control signal. Adjust the room lighting or the placement of the display to ensure proper communication with the IR sensor.
- The maximum remote control distance is 8 m (26.2 ft) from the IR sensor.
- The remote control must be within the horizontal range of 60 degrees and the vertical range of 30 degrees to ensure proper transmission to the IR sensor.

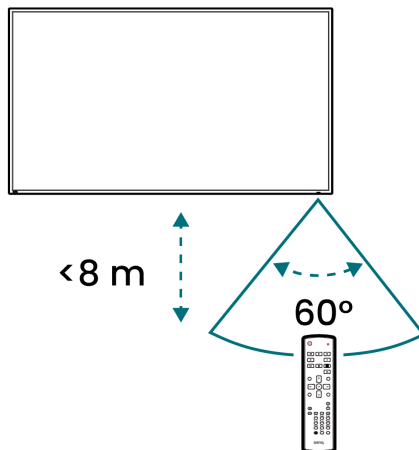


Settings

The settings menu allows users to configure their smart signage settings. There are two ways to open the menu:


- Home screen: Select **System Settings** . For details, see [Home screen](#).
- Remote control: Press the **MENU** button. For details, see [Remote control](#).

Settings	Description
Connection	Switch input sources and adjust the display brightness and volume. For details, see Connection settings .
Display	Modify the picture mode, aspect ratio, input source names, and other related display settings. For details, see Display settings .
Audio	Put the display volume on mute, adjust the audio balance, and set the sound mode. For details, see Audio settings .
Advanced	Perform system updates, export log files, set a power schedule, and configure other advanced settings. For details, see Advanced settings .
Android	Perform a factory reset and access other Android settings. For details, see Android settings .

Connection settings

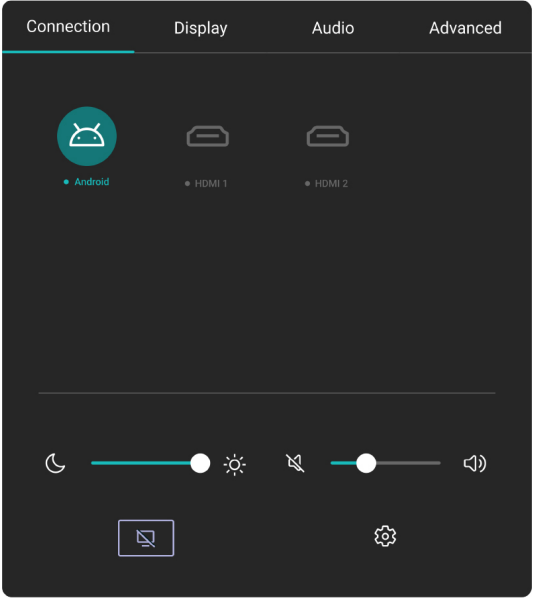

Menu item	Description
Input source	Switch to a different input source. For details, see Switching the input source .
Brightness	Adjust the slider to increase or decrease the display brightness.
Volume	Adjust the slider to increase or decrease the display volume.



Menu item	Description
Blank screen	Turn the screen blank while keeping the sound and all applications running. For details, see the following topics: • Switching to blank screen • Configuring the remote control blank screen setting
Android settings	Open the Android settings menu. For details, see Android settings .

Switching the input source

1. Connect an input source to the display.
For details, see [Connections](#).
2. Perform one of the following actions

Method	Description
Input button	Press the input button on the back of the display.
Settings menu	1. Open the System Settings  menu. 2. Select an input source.
Remote control	Press the connection button  . For details, see Remote control .



Tip

To quickly go back to the Home screen, press the Home button  on the remote control.

Switching to blank screen

Method	Description
Settings menu	1. Open the Settings menu. 2. Select .
Remote control	Press the blue button. For details, see Remote control .




Tip


Use either method to exit the blank screen:

- Press the blue button on the remote control.
- Press the power button on the remote control.
- Press the power button on the display.

Display settings

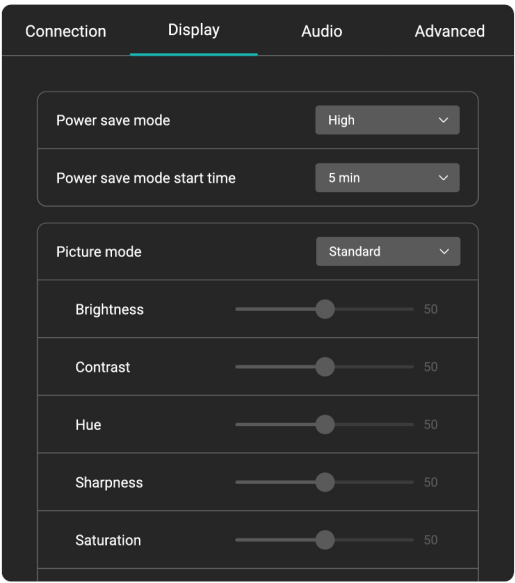

Menu item	Description
Power save mode	This mode conserves display power when the connected input source is either asleep or disconnected. • Off: Always keep the screen on. • Low: Enter sleep mode after five minutes. • High: Power off the display after five minutes.
Power save mode start time	Set the timer that initiates power save mode.
Picture mode	Select from the following preset picture modes or set a custom mode. • Standard • Bright • Soft • Custom1/Custom2: Adjust the sliders for brightness, contrast, hue, sharpness, and saturation.
Color temperature	Select from the following preset modes: • Cool • Standard • Warm
Custom source names	Set a custom source name for each input source. For details, see Setting an input source name .



Menu item		Description
Advanced settings	Aspect ratio	Select from the following options: • 16:9 • Pixel-to-pixel (PTP)
	EDID	Select an EDID setting to ensure minimal HDMI dropout when there is a mismatch between the maximum resolutions of the display and the input source. • EDID 2.0: Use 4K (3840 × 2160) @ 60Hz • EDID 1.4: Use 4K (3840 × 2160) @ 30Hz • Auto
	HDMI CEC	When this setting is enabled, users are able to control the display and all HDMI-connected devices with a single remote control.
	HDMI ARC	Set the HDMI 1 port as audio output to other audio devices.
	Pixel shift	When this setting is enabled, the display dynamically shifts the pixels on screen to prevent burn in when displaying static images.
	Dynamic contrast ratio (DCR)	When this setting is enabled, the display dynamically adjusts the backlight based on the lightest and darkest items shown on screen.
	Auto-switch source	When this setting is enabled, the display detects and switches to the new input source when it is connected to the display, and automatically reverts to the default Android screen when the source is disconnected.
	Blank button on remote	Set the behavior of the blank button on the remote control. For details, see Configuring the remote control blank screen setting .


Setting an input source name

1. In **Display** settings, select **Custom source names**.
2. Select an input source.
3. Enter a new name.
 - Maximum length: 20 characters
 - Supported characters: This field supports all characters. Special characters count as two characters.
4. Select **Save**.


Configuring the remote control blank screen setting

1. Open the **System Settings**  menu.
2. Go to **Display > Advanced settings > Blank button on remote**.
3. Select either **Monitor off & Mute** or **Monitor off**.


Audio settings

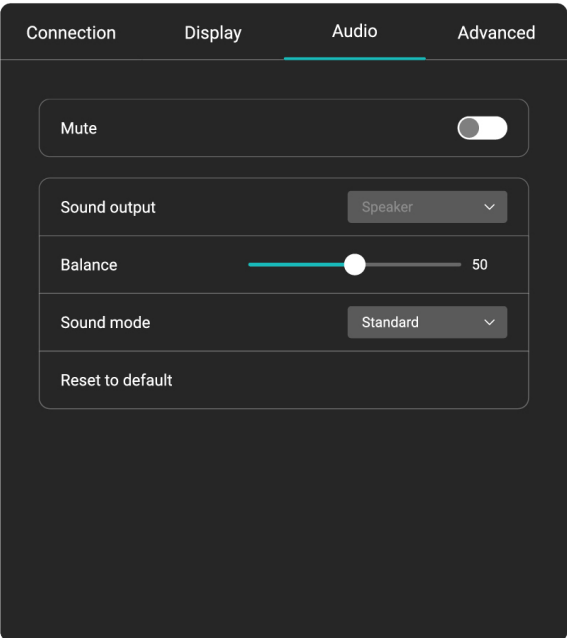


Menu item	Description
Mute	Mute all sounds from the display.  Note: Balance and sound mode are unavailable when the display audio is set to mute.
Sound output	Select your audio output source. • Both: Output from both smart signage and external speaker • Line out: Output from external speaker • Speaker: Output from smart signage
Balance	Move the slider to adjust the audio output balance.
Sound mode	Select from the following preset sound modes: • Standard • News • Cinema • Sports • Music
Reset to default	Reset the display audio to its default settings.



Advanced settings

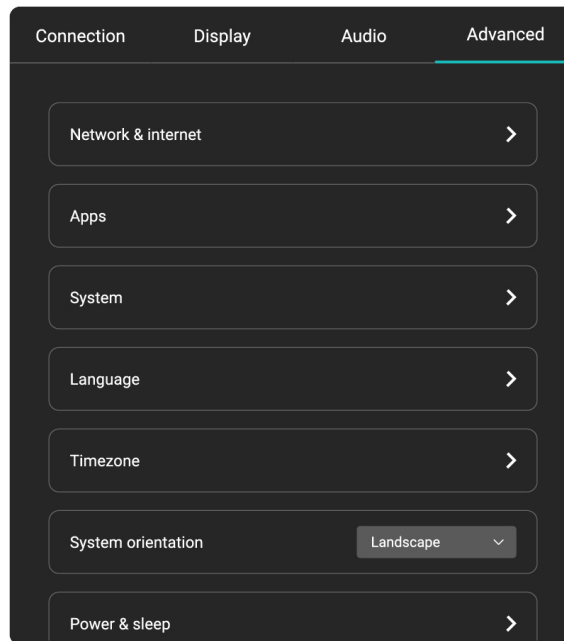

Menu item	Description
Network & internet	Use either Ethernet or Wi-Fi to connect the display to the internet. For details, see the following topics: • Connecting to the internet • Configuring proxy settings • Installing a Wi-Fi certificate
Apps	Manage the applications installed on the display.
System	Modify system settings such as the display language and time, or reset the display to its default factory settings. For details, see the following topics: • Configuring language settings • Setting the display time • Performing a factory reset
Language	Set the OSD menu language.
Timezone	Set the display timezone from the following options: • Automatic timezone • Select Time zone
System orientation	Set the system orientation to either landscape or portrait.
Power & sleep	The display powers off or enters sleep mode after being inactive for a specified period of time. For details, see Configuring power off and sleep settings .
Display locks	Enabling any of the settings listed on this screen locks the input functionality of their respective hardware components. For details, see Configuring the display locks .
Show apps in landscape	When this setting is enabled, all apps will be displayed in landscape mode.




Menu item	Description
Accessories	Configure the default microphone and camera settings for the display.
Startup settings	Configure the startup and shutdown behavior and controls for the display. For details, see Configuring startup and shutdown settings .
Power schedule	Set a recurring schedule to automatically power on and power off the display at specific times during the week. For details, see Setting a power schedule .
Log export	Export the system logs for monitoring and troubleshooting. For details, see Exporting system logs .
USB cloning	Export the display settings to a USB drive so they can be cloned to other displays of the same model. For details, see the following topics: • Exporting display settings • Importing display settings
System update	Manually update the display firmware. For details, see Updating the firmware .
About	View device details including the device name, model, serial number, and firmware version.

Connecting to the internet

Menu item	Description
Ethernet	1. Ensure that the Ethernet cable is connected to the display. For details, see Connections. 2. Open the System Settings  menu. 3. Select Advanced > Network & internet. The Network & internet menu appears. 4. Select Ethernet. 5. Enable the Ethernet connection.
Wi-Fi	1. Ensure that a Wi-Fi adapter is connected to the display. For details, see Adapter. 2. Open the System Settings  menu. 3. Select Advanced > Network & internet. The Network & internet menu appears. 4. Select Internet. 5. Enable Wi-Fi. The list of available networks appears on screen. 6. Select a network. 7. Enter the Wi-Fi password.

Configuring proxy settings

1. Ensure that the display is connected to a local area network. For details, see [Connecting to the internet](#).
2. Open the **System Settings**  menu.
3. Select **Advanced > Network & internet**. The **Network & internet** menu appears.
4. Select **Ethernet**.
5. Configure any of the following settings:



- DHCP or Static IP
 - **IP address:** Enter a fixed IP address.
 - **Default gateway:** Enter the IP address of the default gateway.
 - **Netmask:** Enter the netmask to subdivide the IP address.
 - **DNS 1:** Enter an IP address for the primary DNS server.
 - **DNS 2:** Enter an IP address for the secondary DNS server.
- Proxy settings
 - **Proxy:** Select between None, Manual, and Proxy Auto-Config.
 - **Proxy hostname:** Enter a host name for the proxy.
 - **Proxy port:** Specify the port to use.
 - **Bypass proxy for:** Specify one or more addresses.

Installing a Wi-Fi certificate

1. Ensure that the display is connected to a local area network.
For details, see [Connecting to the internet](#).
2. Open the **System Settings**  menu.
3. Select **Advanced** > **Network & internet**.
The **Network & internet** menu appears.
4. Select **Internet**.
5. Scroll to the bottom of the screen, and then select **Network preferences**.
6. Select **Install certificates**.
The Android file browser appears.
7. Select  and then locate the Wi-Fi certificate file.
8. Select the file, and then enter a name for the certificate.
9. Select **OK**.


Configuring language settings

1. Open the **System Settings**  menu.
2. Select **Advanced** > **System**.
The System menu appears.
3. Select **Languages & input**.
4. Perform one or more of the following actions:

Action	Steps
Change the display language	1. Select Languages. 2. Select a language from the list.  Tip: Select Add a language to add a language to the list.
Set the language for each app	1. Select App Languages. 2. Select an app from the list. 3. Select a language from the list.

Setting the display time

1. Open the **System Settings**  menu.
2. Select **Advanced** > **System**.
The System menu appears.
3. Select **Date & time**.
4. Perform one or more of the following actions:



Action		Steps
Set the time	Automatic	Enable Set time automatically .
	Manual	1. Disable Set time automatically. 2. Select Date. 3. Specify the date, and then select OK. 4. Select Time. 5. Specify the time, and then select OK.
Set the time zone	Automatic	1. Enable Set time zone automatically. 2. (Optional) Enable Use location to set time zone.
	Manual	1. Disable Set time zone automatically. 2. Select Time zone. 3. Select a region and a time zone.
Set the time format	Automatic	Enable Use locale default .
	Manual	1. Disable Use locale default. 2. Enable or disable Use 24-hour format.

Performing a factory reset



Warning

Performing a factory reset erases all data from the display and restores all the original device settings. Make sure to back up all important files, settings, and data before proceeding with the following steps.

1. Open the **System Settings**  menu.
2. Select **Advanced > System**.
The System menu appears.
3. Select **Reset options**.
4. Select **Erase all data (factory reset)**.
5. Select **Erase all data**.

Configuring the display locks

1. Open the **System Settings**  menu.
2. Select **Advanced > Display locks**.
3. Enable or disable any of the following locks:

Menu item	Description
Keypad lock	Prevent users from using any of the buttons on the display control panel.
Remote control lock	Prevent users from using the remote control with the display.




Tip

In case all locks are enabled, press and hold the **MENU** button on the remote control for five seconds to disable them.

Configuring startup and shutdown settings

1. Open the **System Settings**  menu.
2. Select **Advanced > Startup settings**.
3. Configure any of the following settings:

Menu item	Description
Startup source	Set a default input source that will be automatically loaded when the display is powered on.



Menu item	Description
Wake-on-LAN	When this setting is enabled, administrators can remotely power on the display through the local area network (LAN).
Standby after startup	When this setting is enabled, the display enters sleep mode after the display is powered on.
Source wake up	When this setting is enabled and the display is powered off, it automatically powers on the display when a user connects an external input source.
Power switch	Select the default power-on behavior of a powered-off display once it is connected to a power source. • Off: Keep the display powered off. • On: Automatically power on the display. • Last: Remember the last power-on status and apply that to the display.
Power off reminder	When this setting is enabled, the power off countdown appears before the display powers off. This only applies to when the display is following a power schedule or power off timer.

Configuring power off and sleep settings

1. Open the **System Settings**  menu.
2. Select **Advanced > Power & sleep**.
3. Set the power off timer.
4. Set the sleep timer.

Setting a power schedule



Important

- You can add up to 7 schedule for a single display.
- Make sure to check for conflicts when setting a schedule. If there are two or more overlapping power schedules, the display will apply all of them.

1. Open the **System Settings**  menu.
 2. Select **Advanced > Power schedule**.
 3. Select a weekday.
 4. Set the startup and shutdown times.
 5. Select a startup source.
 6. Select **Save**.
- The schedule is added to the list and is enabled by default.

Exporting system logs


1. Connect a USB drive to the display.
2. Open the **System Settings**  menu.
3. Select **Advanced > Log export**.
4. Select your USB drive as the output directory.
5. The system logs are exported to a "benq" folder in the USB drive.

Updating the firmware



Warning

- The firmware update requires a system restart. Make sure to save all important data before proceeding.
- The update process may take a few minutes to complete. Ensure that there are no interruptions. Do not power off the device or disconnect from the internet to prevent permanent damage to the display.



1. Open the **System Settings**  menu.
2. Select **Advanced** > **System update**.
3. Select **Update system**.

The system downloads and updates the firmware and then restarts automatically.

Exporting display settings

1. Connect a USB drive to the display.
2. Open the **System Settings**  menu.
3. Select **Advanced** > **USB cloning** > **Export settings**.
A confirmation message appears.
4. Select **OK**.

The settings are exported as "benq/Settings.json" to the USB drive.

Importing display settings


1. Connect the USB drive containing the settings file to the display.
2. Open the **System Settings**  menu.
3. Select **Advanced** > **USB cloning** > **Import settings**.
The file selection window appears.
4. Select the settings file, and then select **OK**.
The display imports the settings.
5. Restart the display.

Android settings

The Android settings menu combines all the miscellaneous device settings including factory reset, network and internet, Bluetooth connections, and app permissions.

There are two ways to access the Android settings menu:

- Home screen: Select **More**  on the home screen, and then select **Settings** .
- Remote control: Press the **ALL APPS** button, and then select **Settings** .

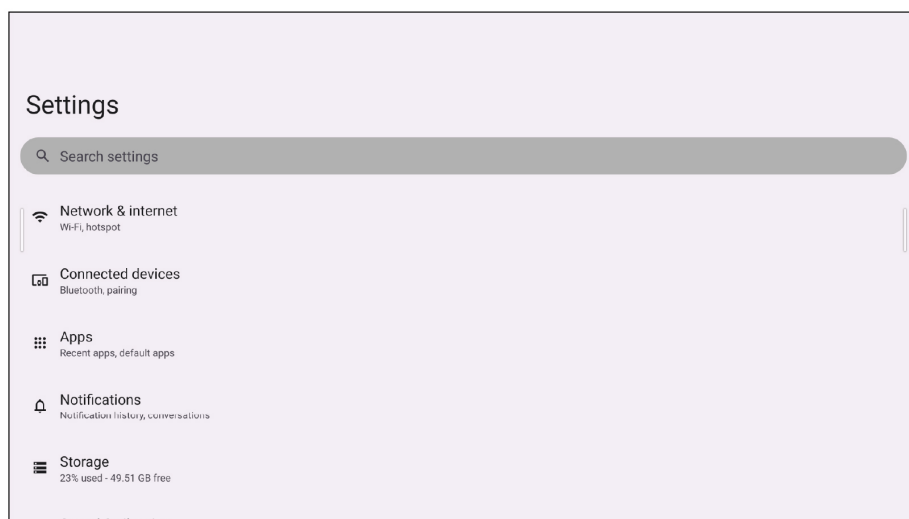

BenQ App Store


The BenQ App Store contains all the BenQ-developed apps as well as third-party partner apps designed for the smart display.




- 1. Search apps
- 2. Update center
- 3. Education partner apps
- 4. Enterprise partner apps
- 5. BenQ apps
- 6. Exit
- 7. App list

BenQ apps

Refer to each software's user manual for more information.

	DMS Client DMS Client links with DMS Cloud so the smart display can be managed from a single console.
	InstaShare 2 Users can wirelessly share content and control other device screens using the InstaShare 2 host app on the smart display.
	BenQ Notifications Receive real-time announcements related to the smart display and other installed applications.
	X-Sign Showcase scheduled or real-time content through the smart display. The app also allows for sending scheduled announcements and real-time alerts.



Installing an app

1. Ensure that the display is connected to the internet.
2. Select **More** .
3. Select **BenQ App Store**.
4. On the left menu, select any of the app libraries.
The available apps are listed.
5. Select the app to download.
6. Select **Download**.
The system automatically downloads and installs the app.
7. Restart the display.

Updating an app

1. Ensure that the display is connected to the internet.
2. Select **More** .
3. Select **BenQ App Store**.
4. On the left menu, select any of the app libraries.
5. The available apps are listed.
6. Select the app to update.
7. Select **Update**.
8. The system automatically downloads and installs the update.
9. Restart the display.

Updating all apps

1. Ensure that the display is connected to the internet.
2. Select **More** .
3. Select **BenQ App Store**.
4. On the left menu, select .
5. Select **Update All**.
6. The system automatically downloads and installs all available updates.
7. Restart the display.

Rolling back an app to an older version



Note

Only BenQ-developed apps can be rolled back to an older version.

1. Select **Settings** .
2. Select **Apps**.
3. Select the app from the list.
4. Select  > **Uninstall updates**.

Uninstalling an app



Note

Only third-party apps can be uninstalled from the smart signage.

1. Select .
2. Select **Settings** .
3. Select **Apps**.
4. Select the app from the list.
5. Select **Uninstall**.


File Manager

The smart signage contains File Manager for users to manage files and digital contents. Select **More**  on the home page and launch **File Manager** .



Selecting multiple files

1. Once you enter **File Manager**, press the right direction button on the remote control or click the mouse to highlight a file.
2. Long-press **OK** on the remote control or long press the mouse to enter multiple selection mode.
3. Select the files you want to manage.

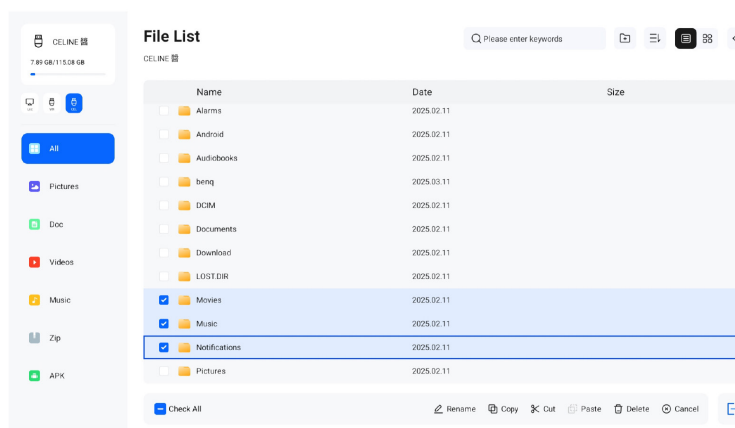


4. Navigate to the bottom of the page and choose the desired action.

Multimedia players


The smart signage contains three multimedia players for users to showcase their contents. Select **More**  on the homepage and launch either app below:

- [Media Player](#)
- [PDF Player](#)
- [Web Player](#)

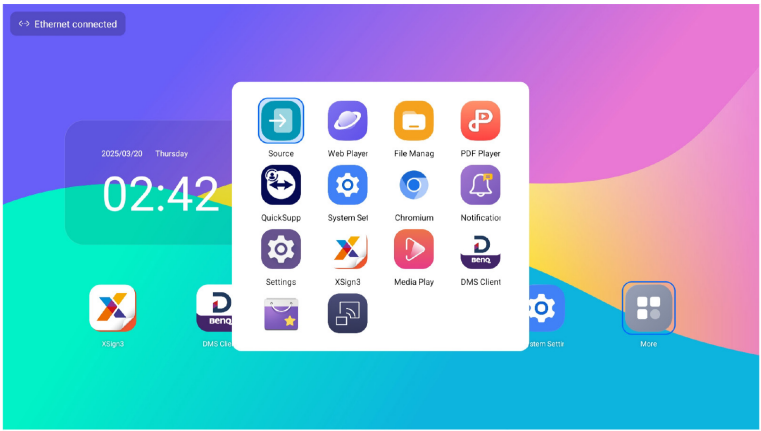

Media Player


Select **More**  on the homepage, and then select **Media Player** . For more details, see [Controlling the players](#) and [Managing playlist](#).

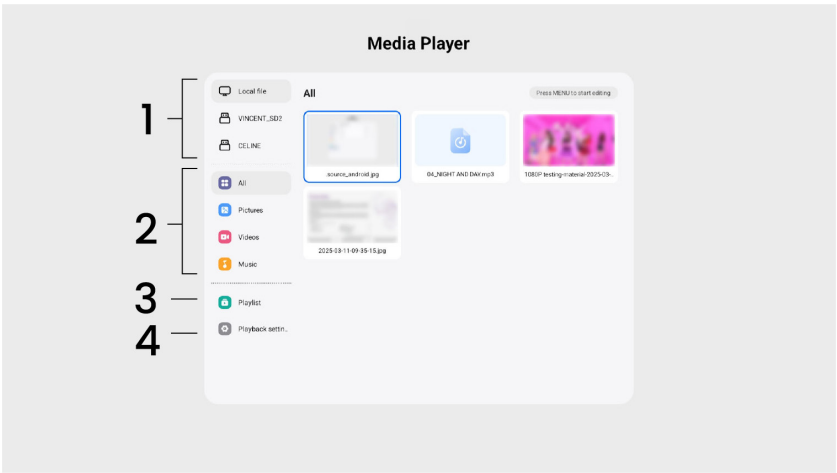

1. Local devices
2. Media type
3. Playlist
4. Playback settings

Playback settings


Menu item	Description
Play order	Select how the playlist contents will be displayed. • Sequence • Reverse • Random • Cycle



Menu item	Description
Play mode	Set media switching to automatic or manual. Select from the following options: • Auto 5s • Auto 15s • Auto 30s • Auto 60s • Manual
Play style	Choose how the media is displayed on the screen: • Full • Scale

PDF Player


Select **More**  on the homepage, and then select **PDF Player** . For more details, see [Controlling the players](#) and [Managing playlist](#).

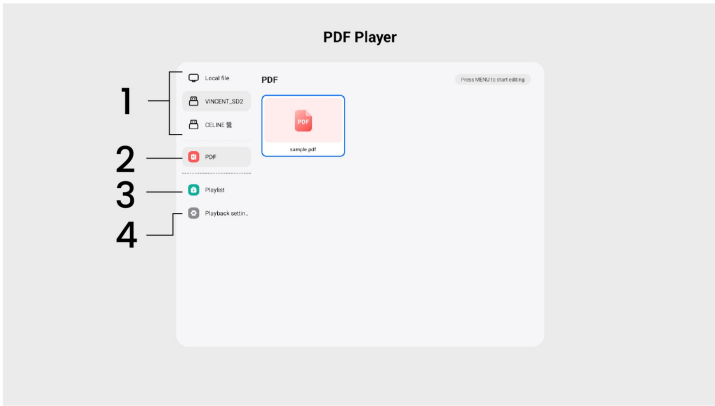

1. Local devices
2. Media type
3. Playlist
4. Playback settings

Navigating a PDF file

Once you open a PDF file, press **OK** on the remote control or click the mouse to display the navigation panel.

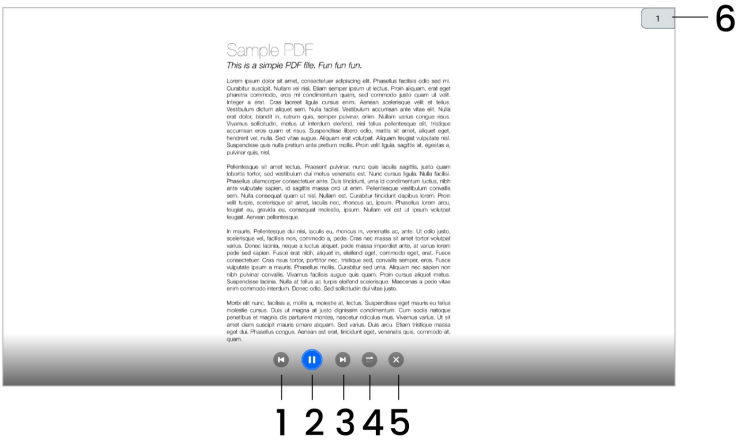


1. Return to the previous page.
2. Play/Pause
3. Go to the next page.
4. Adjust the display order.
5. Close the file.
6. Show the current page.

Playback settings

Menu item	Description
Play order	Choose a way to display the contents in the playlist. Select from the following options: • Sequence • Reverse • Random • Cycle
Play mode	Choose to switch the media automatically or manually. Select from the following options: • Auto 5s • Auto 15s • Auto 30s • Auto 60s • Manual

Web Player

Select **More**  on the homepage, and then select **Web Player** . For more details, see [Controlling the players](#).

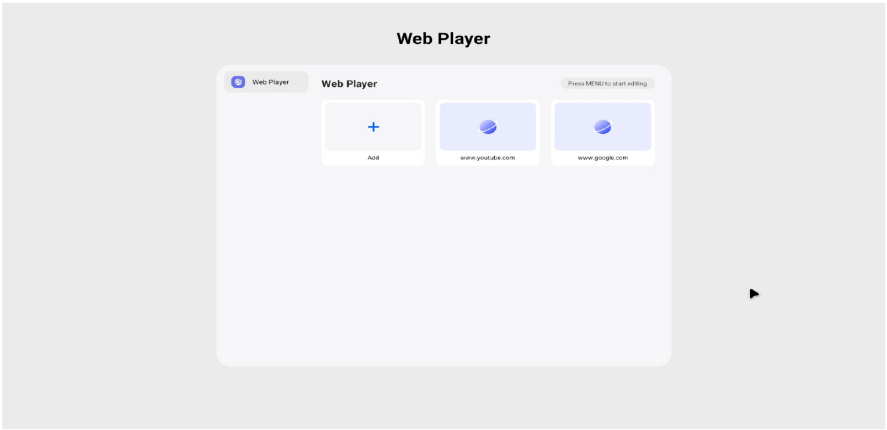

Adding a website

1. Ensure that the display is connected to the internet.
2. Select **+ Add**.
3. Enter the URL of the website.
4. Select **Confirm**.
5. Select the URL to open the website.

Controlling the players

**Tip**

BenQ recommends using a mouse for faster control. You can connect your mouse to the USB 2.0 Type-A ports on the left panel.

Action	Using a mouse	Using a remote control
Select	Click	Press OK .
Returns to previous page	Right click	Press  .
Edit	Click and hold a media until the editing options appear.	Select the object you want to edit, and then press MENU .

Managing playlist

Creating a playlist

- Under **Playlist**, and then **+ Add**.
- Enter the name of the playlist.
- Select **Confirm**.

Adding new media to a playlist


- Select a device and media type from the side panel.
- To enter editing mode, press **MENU** on the remote control. You can also click and hold the object with a mouse.
- Choose the object you want to add and then select **Add to playlist**. A selection window pops up.
- Select a playlist, and then select **Confirm**.

Changing media sequence in a playlist

- Under **Playlist**, select and enter the playlist you want to edit.
- To enter editing mode, press **MENU** on the remote control. You can also click and hold the object with a mouse.
- Select **Move up** or **Move down** to adjust the sequence of the media.

Removing media from the playlist

- Under **Playlist**, select and enter the playlist you want to edit.
- To enter editing mode, press **MENU** on the remote control. You can also click and hold the object with a mouse.
- Select **remove** to move the media out of the playlist.



ClassroomCare®

Eye-Care solutions

Low blue light


Blue light with wavelengths under 455 nm could affect vision. Eye-Care solution is designed for eyesight protection: the display provides proprietary eye-care technology with ultra-low blue light emission and no visible or invisible flicker within the range of 0-3000Hz, preventing eyestrain caused by extended sessions in front of a display. In addition, advanced anti-glare screen treatment minimizes distracting reflections and glare for optimal productivity and comfort.



Note

Suggestions for long-term use of the display:


- Rest your eyes for 10 minutes after 30 minutes of continuous use.
- For every 20 minutes of display viewing, look into the distance for 20 seconds.
- When your eyes get sore and strained, close your eyes for a minute and then roll your eyes in all directions.



Supported media


Supported input resolutions

Resolution	Input Source HDMI 2.0
3840 × 2160 @ 60Hz	V
3840 × 2160 @ 50Hz	V
3840 × 2160 @ 30Hz	V
3840 × 2160 @ 25Hz	V
3840 × 2160 @ 24Hz	V
1920 × 1080 @ 60Hz	V
1920 × 1080 @ 50Hz	V
1920 × 1080 @ 30Hz	V
1920 × 1080 @ 25Hz	V
1920 × 1080 @ 24Hz	V
1680 × 1050 @ 60Hz	V
1360 × 768 @ 60Hz	V
1280 × 1024 @ 60Hz	V
1280 × 720 @ 60Hz	V
1280 × 720 @ 50Hz	V
1280 × 720 @ 30Hz	V
1280 × 720 @ 25Hz	V
1280 × 720 @ 24Hz	V
1024 × 768 @ 60Hz	V
800 × 600 @ 60Hz	V
800 × 600 @ 75Hz	V
720 × 576 @ 50Hz	V
720 × 480 @ 60Hz	V
720 × 400 @ 70Hz	V
640 × 480 @ 75Hz	V
640 × 480 @ 60Hz	V




Supported media formats

Extension	Codec detail	Resolution
.3gp	MPEG-4 Visual	640 × 480
	MPEG-4	320 × 240
	H264	1920 × 1080
.avi	AVC	1920 × 1080
	M-JPEG	1024 × 576
	RealMagic MPEG-4	720 × 480
		720 × 576
	h264	1920 × 1080
	FF mpeg MPEG4	640 × 480
.f4v	AVC(H264)	1280 × 720
.flv	Sorenson Spark	1920 × 1080
	VP6	800 × 342
.mp4	AVC(H264)	1920 × 1080
	HEVC(H265)	1920 × 1080
	4K HEVC(4K H265)	4096 × 2304
	8K HEVC(8K H265)	8192 × 4320
.m2ts	AVC	1920 × 1080
	VC-1	1920 × 1080
.m2v	MPEG-2	480 × 576
.m4v	AVC	1280 × 720
.mkv	WMV3	1280 × 720
	MPEG-4 Visual	1920 × 1080
	AVC	1920 × 1080
	4K HEVC(4K H265)	3840 × 2160
	8K HEVC(8K H265)	8192 × 4320
	VP8	1920 × 1080
	VP9	1920 × 1080
.mov	MPEG-4 Visual	1280 × 720
	mjpa	640 × 480
	M-JPEG	640 × 480
	AVC(H264)	1920 × 1080
	4K H264	3840 × 2160
.mpeg	MPEG-2	1920 × 1080
	VC-1	1920 × 1080
	MPEG-1	720 × 576




Extension	Codec detail	Resolution
.mts	AVC	1440 × 1080
.ogm	XVID	640 × 480
.PMP	H264	480 × 272
.rmvb	RealVideo1	1280 × 720
	RealVideo2	1280 × 720
	RealVideo3	1280 × 720
	RealVideo4	1920 × 1080
.tp	MPEG-2	1920 × 1088
.ts	HEVC(H26 5)	1920 × 1080
	4K HEVC(4K H265)	4096 × 2304
	8K HEVC(8K H265)	8192 × 4320
	MPEG-1	1920 × 1080
	avs	720 × 576
	avs+	1920 × 1080
	avs2	3840 × 2160
	AVC	1920 × 1080
	MPEG-2	1920 × 1080
.vob	MPEG-2	720 × 576
.wmv	WMV1	640 × 480
	WMV2	768 × 432
	WMV3	1920 × 1080
.webm	VP8	1920 × 1080
	VP9	1920 × 1080
	4K VP9	4096 × 2160
	8K VP9	8192 × 4608
4K	AVC(H264)	4096 × 2304
	HEVC(H26 5)	4096 × 2304
	VP9	4096 × 2160
8K	HEVC(H26 5)	8192 × 4320
	VP9	8192 × 4608




Troubleshooting

Connection	Configuration
The display is not displaying images.	• Ensure that the display is powered on. For details, see Powering on the display. • If displaying content from a wired input source, ensure the following: - The input device is powered on and is securely connected to the display. - The input resolution is correct. For details, see Supported input resolutions.
The display is not playing audio.	• Ensure that the display is not on mute and that the volume is set to an adequate level. • If playing audio from an input source, ensure that the input device is powered on and securely connected to the display.
The input image is not displaying normally.	• Ensure that the input resolution is correct. For details, see Supported input resolutions. • If using an HDMI connection, optimize the image by performing the following steps: 1. Open the Settings menu. 2. Tap Display > Advanced settings. 3. Under EDID, select EDID 1.4. For details, see Display settings.
The control panel buttons are not working.	Ensure that the keypad lock is disabled. For details, see Configuring the display locks .
The remote control is not working.	Ensure the following: • The remote control lock is disabled. For details, see Configuring the display locks. • The remote control is pointed at the IR sensor and is within 8 m (26.24 ft) of the display. • The remote control batteries have sufficient charge and are inserted correctly. • There are no obstructions between the remote control and the sensor. • The sensor is away from direct sunlight or strong fluorescent lighting. • There are no infrared devices nearby that may interfere with the remote control signal.
The display has unexpectedly shut down.	• Confirm if there was a power outage. • Confirm if the display is following a power or sleep schedule. For details, see the following topics: - Configuring startup and shutdown settings - Configuring power off and sleep settings - Setting a power schedule
The colors on the display are incorrect.	• If displaying content from a wired input source, ensure that the device is securely connected to the display. • Adjust the picture mode and color temperature. For details, see Display settings.



Connection	Configuration
There is image dithering or random lines are appearing on the display.	• If displaying content from a wired input source, ensure that the input device is securely connected to the display. For details, see Connections. • Ensure that there are no other electronic equipment or power tools are placed around the display that may affect the input signal.
The image shown on the display has no color or the color is weak.	• Adjust the brightness and contrast of the display. For details, see Display settings. • If displaying content from a wired input source, ensure that the input device is securely connected to the display. For details, see Connections.
The display is showing images but no sound.	• Ensure that the display is not on mute and that the volume is set to an adequate level. • If displaying content from a wired input source, ensure that the input device is securely connected to the display. For details, see Connections.
The sound coming from the soundbar is not playing evenly.	• Adjust the sound balance. For details, see Audio settings. • Ensure the following: - The input device is securely connected to the display. - The input device is using one sound channel.



Copyright and disclaimers

Copyright

Copyright 2025 BenQ Corporation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of BenQ Corporation.


Disclaimer

BenQ Corporation makes no representations or warranties, either expressed or implied, with respect to the contents of this document. BenQ Corporation reserves the right to revise this publication and to make changes from time to time in the contents thereof without obligation to notify any person of such revision or changes.

HDMI trademark disclaimer

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade Dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.





Product support

This document aims to provide the most updated and accurate information to customers, and thus all contents may be modified from time to time without prior notice. Please visit the website for the latest version of this document and other product information. Available files vary by model.

Notice for EU customers

The dismantling information is also available on the product's downloads page. The document is provided to give customers clear repairing and recycling instructions in compliance with Commission Regulation (EU) 2019/2021. If you cannot find this information on the website, contact your local customer service representative.

For products that are within the warranty period, contact your local customer service representative.

For out-of-warranty products, BenQ recommends going to a qualified service personnel and obtaining repair parts from BenQ to ensure compatibility.



Important


Do not attempt to disassemble the product yourself unless you are fully aware of the consequences. If you cannot find the dismantling information on your product, contact your local customer service representative for assistance.

EPREL Registration Number:

ST4304: 2266191

ST5504: 2266198

ST6504: 2266206



Safety warnings and precautions


 CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN  CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		THIS EQUIPMENT MUST BE GROUNDED To ensure safe operation, the three-pin plug must be inserted only into a standard three-pin power outlet which is effectively grounded through normal household wiring. Extension cords used with the equipment must have three cores and be correctly wired to provide connection to the ground. Wrongly wired extension cords are a major cause of fatalities. The fact that the equipment operates satisfactorily does not imply that the power outlet is grounded or that the installation is completely safe. For your safety, if you are in any doubt about the effective grounding of the power outlet, please consult a qualified electrician.
	The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.	
	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.	

The mains plug of the power supply cord shall remain readily operable. The AC receptacle (mains socket outlet) shall be installed near the equipment and shall be easily accessible. To completely disconnect this equipment from the AC mains, disconnect the power cord plug from the AC receptacle.

- Do not place this display on an uneven, sloping or unstable surface (such as a trolley) where it may fall and cause damage to itself or others.
- Do not place this display near water, like a spa or pool, or in a position which will allow the splashing or spraying of water onto the display, like in front of an open window where rain water may enter.
- Do not install this display in a confined space without proper ventilation and air circulation, such as in a closed cabinet. Allow proper space around the display for dissipating heat inside. Do not block any openings and vents on the display. Overheating may result in hazards and electric shock.
- Installation of this display should only be performed by a qualified technician. Failure to install this display properly may cause injuries and damages to the personnels and the display itself. Check the installation regularly and maintain the display periodically to ensure the best working condition.
- Use only the accessories approved or recommended by the manufacturer to mount this display. Using wrong or unsuitable accessories may cause the display to fall and result in serious personal injuries. Make sure that the surface and fixing points are strong enough to sustain the weight of the display.
- To reduce the risk of electric shock, do not remove covers. No user serviceable parts inside. Refer servicing to qualified service personnel.
- To prevent personal injuries, mounting the display or installing desktop stands is required before use.

Important safety instructions

1. Do not use the display near water.
2. Do not block any ventilation openings.
3. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
4. Do not alter the polarized or grounding-type plug. A polarized plug has two blades, one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician to replace your obsolete outlet.



5. Protect the power cord from being snagged, stepped on, or pinched, particularly near the plug and the point where they are connected to the display.
6. Only use attachments and accessories specified by the manufacturer.
7. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the display. Use caution when moving the cart and display to prevent accidents and injuries.
8. Unplug the display during lightning storms or when unused for long periods of time.
9. Refer all servicing to qualified service personnel. Servicing is required when the display has been damaged in any way. These instances may include when:
 - The display is dropped or an object is dropped onto the display.
 - The display is exposed to liquid, rain, or excess moisture.
 - Its power supply cord or plug get damaged.
 - The display fails to operate normally..



Notes on this display

- To prevent the risk of physical injuries, do not attempt to lift the display alone.
- Make sure you have four or more people available to help lift the display or a flat cart to transport the display to its final location.
- Keep the display horizontal as much as possible.
- Clear a floor space before unpacking.

Notes on the LCD panel


- The Liquid Crystal Display (LCD) panel of this display has a very thin protective layer of glass which is liable to marking, scratching, or cracking if struck or exposed to pressure. The liquid crystal substrate is also liable to damage under excessive force or extreme temperatures. Please handle with care.
- The response time and brightness of the LCD panel may vary with the ambient temperature.
- Avoid placing the display in direct sunlight or where direct sunlight or spot lighting will shine onto the LCD panel, as the heat may damage the panel and the external casing of the display, and the bright light will make viewing the display more difficult than necessary.
- The LCD panel consists of individual pixels to display images and is manufactured according to the design specifications. While 99.9% of these pixels work normally, 0.01% of the pixels may remain constantly lit (in red, blue, or green) or unlit. This is a technical limitation of the LCD technology and is not a defect.
- LCD screens, like plasma display panels (PDPs) and conventional cathode ray tube (CRT) screens, are also susceptible to screen burn-in or image retention, which can be found on the screen as visible fixed lines and shades. To avoid such damage to the screen, avoid displaying still images (like on-screen display menus, TV station logos, fixed/inactive text or icons) for more than 30 minutes. Change the aspect ratio from time to time. Fill the entire screen with the image and eliminate the black bars whenever possible. Avoid displaying images in 16:9 aspect ratio over a long period of time, otherwise there may be visible burn marks on the screen as two vertical lines.
- Under certain circumstances, condensation may occur on the inner side of the cover glass, it's a natural phenomenon and will not affect the operation of the display. This condensation will usually disappear after around two hours of normal operation.

Notes on cleaning the display

Clean the frame when there is sign of malfunction on the touchscreen.

Cleaning the display screen

1. Before cleaning the screen, make sure the display is powered off and the power cord is unplugged.



2. Remove dust or dirt from the screen with a dry lint-free cloth. Make sure to use minimal force.

**Important**

Do not use paper towels or any material that may leave streaks or lint on the screen.

3. Moisten a clean, soft, lint-free cloth with 70% isopropyl alcohol.

**Warning**

- Do not use hazardous chemical or ammonia-based cleaners as this may damage the surface of the screen.
- Do not spray alcohol directly on the screen.
- Do not fully soak the cloth in liquid. If possible, spray the alcohol onto the cloth to distribute the moisture.

4. Gently wipe down the entire surface of the screen.

Safety notice for remote control

- Do not put the remote control in the direct heat and humidity.
- Do not drop the remote control.
- Do not expose the remote control to water or moisture.
- When using the remote control, ensure that there are no objects between the remote control and the remote sensor.
- If the remote control will not be used for an extended period, remove the batteries.

Battery safety notice

Using the incorrect type of batteries may cause chemical leaks or explosion. Please note the following:

- Ensure that the batteries are inserted with the positive and negative terminals in the correct direction as shown in the battery compartment.
- Different types of batteries have different characteristics. Do not mix different types of batteries.
- Do not mix old and new batteries. Mixing old and new batteries will shorten battery life or cause chemical leaks from the old batteries.
- When batteries fail to function, replace them immediately.
- Chemicals which leak from batteries may cause skin irritation. If any chemical matter seeps out of the batteries, wipe it up immediately using a dry cloth, and then replace the batteries as soon as possible.
- Due to varying storage conditions, the battery life for the batteries included with the product may be shortened. Replace them within three months or as soon as they fail to function.
- There may be local restrictions on the disposal or recycling of batteries. Follow local regulations or consult a waste disposal provider.