


BenQ Education



User Manual

BenQ Chromebox OPS TEY1C

V.1.00








Table of contents

Package contents	1
Port overview	2
Front.....	2
Rear	2
Status Indicators	3
Initial setup	4
Connecting antennas.....	4
Mounting the Chromebox	5
Connecting a mouse and keyboard	6
Connecting a wired mouse and keyboard	6
Connecting a wireless mouse and keyboard.....	6
Performing additional connections.....	7
Connecting audio components.....	7
Connecting to local area network (LAN)	7
Connecting USB devices.....	8
Powering on your Chromebox.....	9
Product information	10
Specifications.....	10
Dimensions	11
Frequently asked questions	12
Product Support	13
Safety	14
Engineering Conditions of Acceptability.....	14
Battery notices	14
Products incorporating button or coin cell batteries.....	14
Copyright and disclaimer	16




Package contents

Please take a moment to check if all the necessary items are included in the package. If anything is missing or damaged, please contact your dealer immediately.

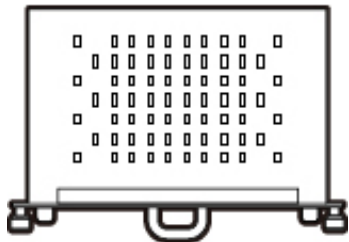

Chromebox OPS

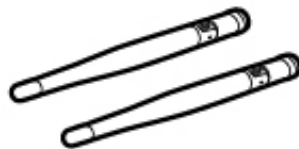

Antenna x2




Safety statements



- Before discarding the package, check that you haven't left any accessories inside the box.
- Dispose of packaging materials wisely. You can recycle the cardboard carton. Consider storing the package (if possible) for future transport of the display.
- Do not leave plastic bags within reach of young children or babies.


Port overview

Front

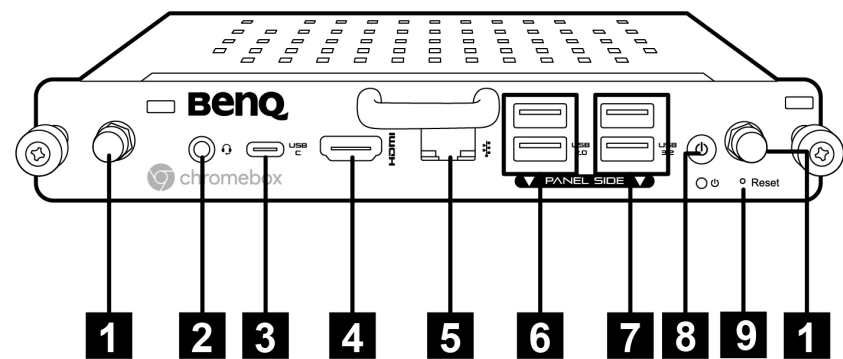


No.	Description	No.	Description
1	Antenna port	6	(2) USB-A 2.0 ports
2	Audio jack (3.5mm)	7	(2) USB-A 3.0 ports
3	USB Type-C port	8	Power button
4	HDMI 2.0 port	9	Reset hole
5	LAN port		

Rear

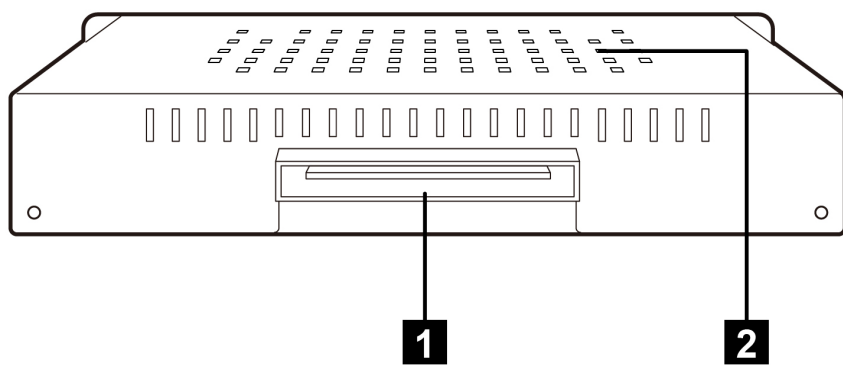


No.	Description	No.	Description
1	Docking connector	2	Ventilation holes

Status Indicators

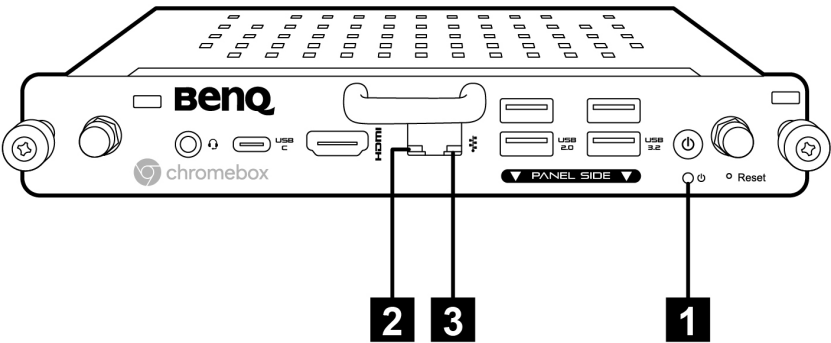

No.	Indicator	Color	Status	Description
1	Power button	Blue	On	Chromebox OPS is switched on.
			Off	Chromebox OPS is switched off.
			Flashing	Chromebox OPS is suspended.
2	LAN port	White	Flashing	Activity on the link.
			Off	No activity on the link.
3		Orange	On	Active link connection.
			Off	No link connection.




Initial setup


Connecting antennas


For wireless connectivity, secure two antennas to the front of the Chromebox.

1. Remove the rubber caps from the antenna connectors.

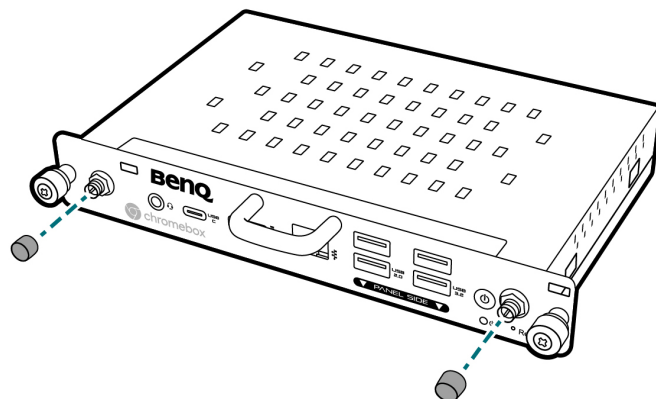


2. Firmly tighten the antennas to the connectors.

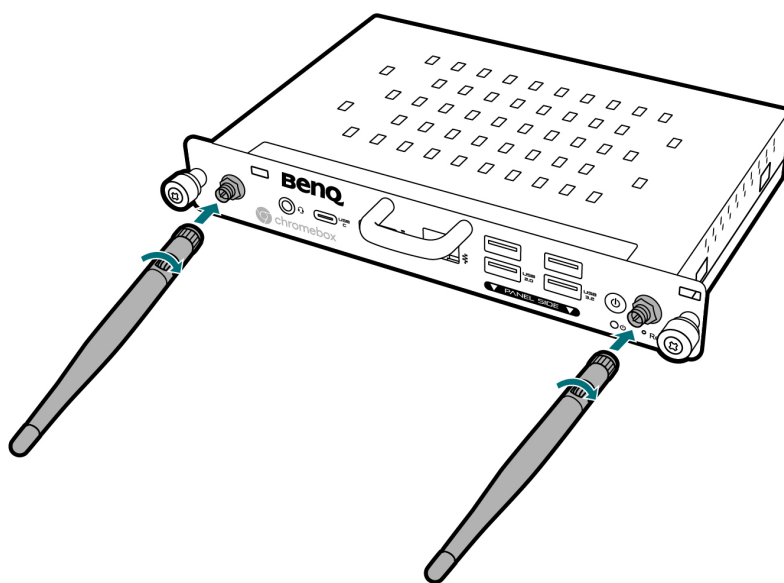



Mounting the Chromebox

1. Insert the Chromebox into the OPS slot in your TV. Push on the module firmly until it is flush with the surface of the slot.
2. Secure the Chromebox to your TV by tightening the thumb screws.

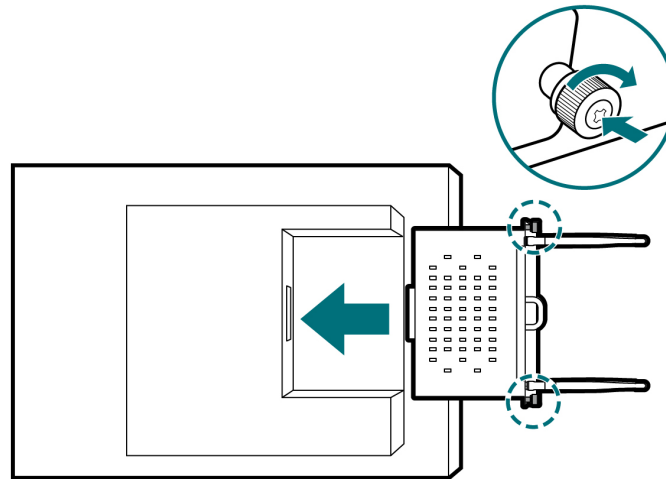


Connecting a mouse and keyboard

Your Chromebox supports both wired and wireless mouse and keyboard.


Connecting a wired mouse and keyboard

Connect the USB mouse and USB keyboard to the USB ports of your Chromebox.

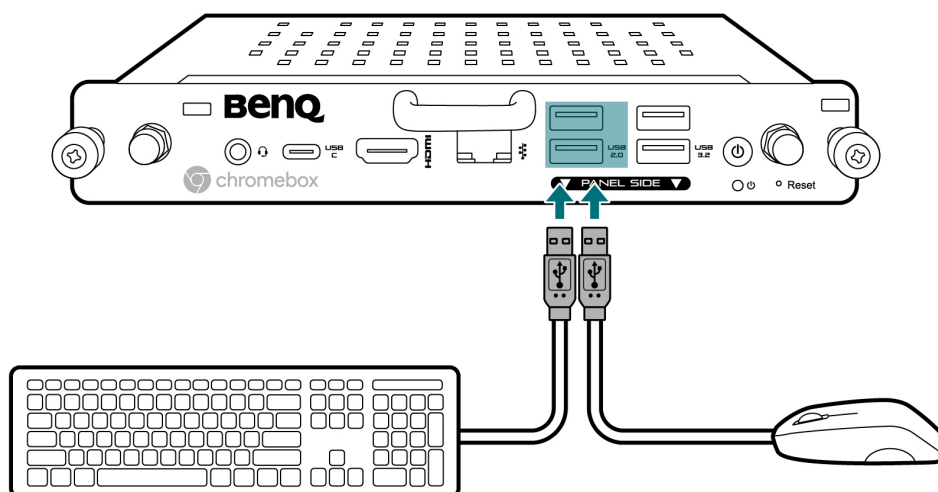

Connecting a wireless mouse and keyboard

Connect the USB receiver that is supplied with your wireless mouse and keyboard to the USB port of your Chromebox.

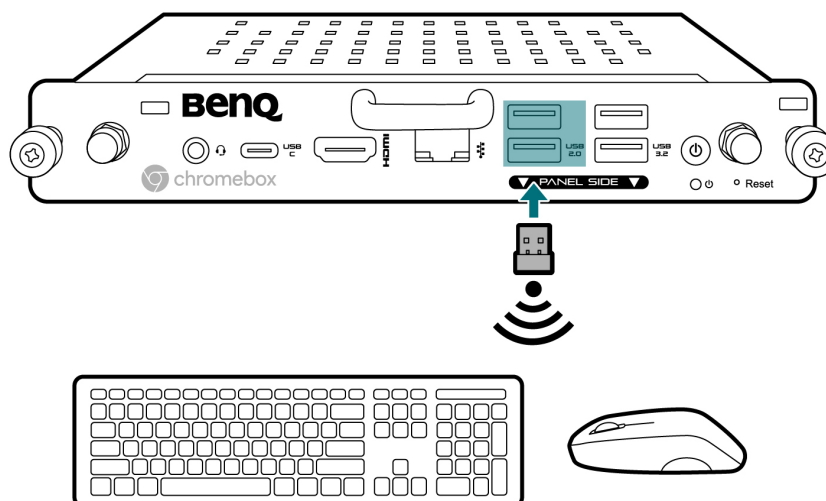


After you power on the Chromebox, the wireless mouse and keyboard are usually paired automatically. If any additional steps are required, please refer to the manual that came with your accessories.

Performing additional connections


Connecting audio components

Connect the audio component into the audio jack of your Chromebox.

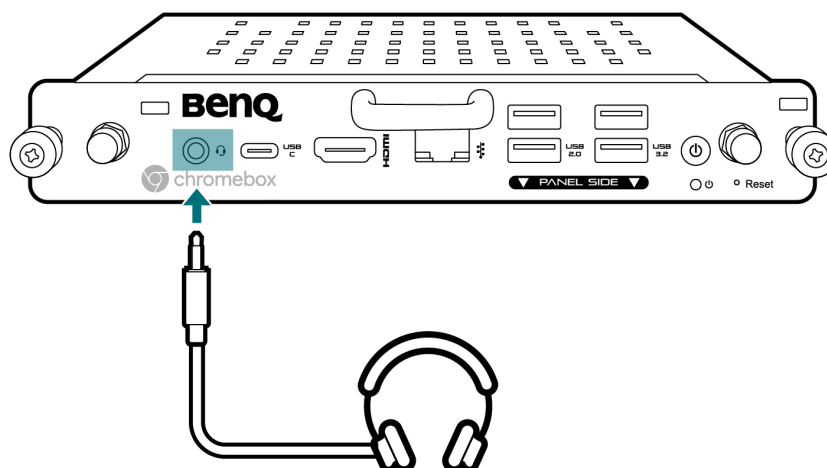

Connecting to local area network (LAN)

1. Connect one end of the RJ45 cable to the LAN port of your Chromebox.
2. Connect the other end of the RJ45 cable to a network connection device or a network wall connector.

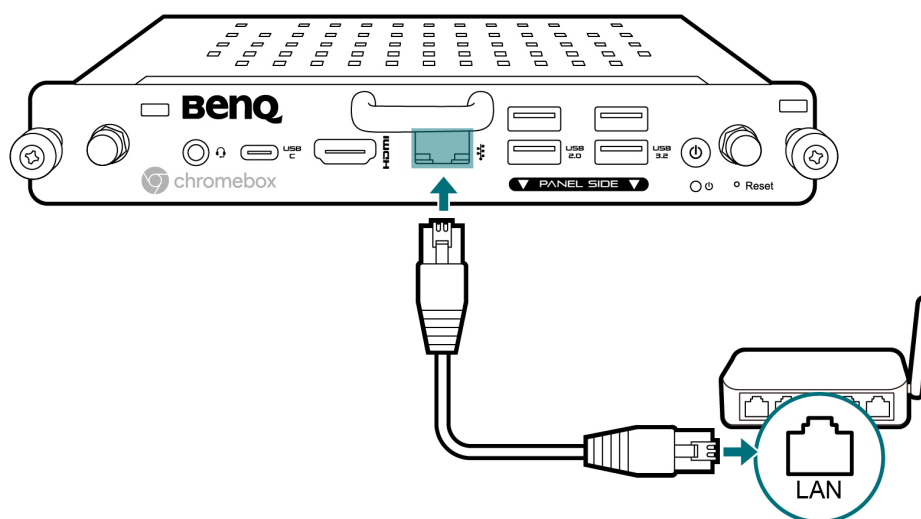


Connecting USB devices




Your Chromebox supports USB-A 2.0, USB-A 3.2 Gen1, and USB-C.


Depending on the supported USB type, connect the USB device to the respective USB port of your Chromebox.

- USB-A 3.2 compatible device connect to one of the following USB ports:

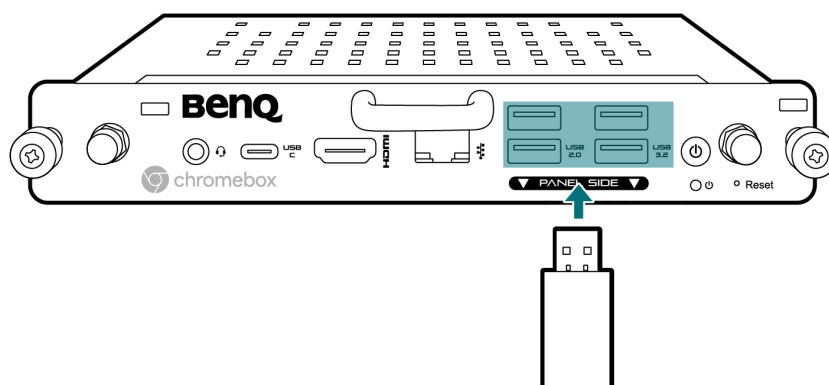


- USB-C compatible device connect to the following USB port:

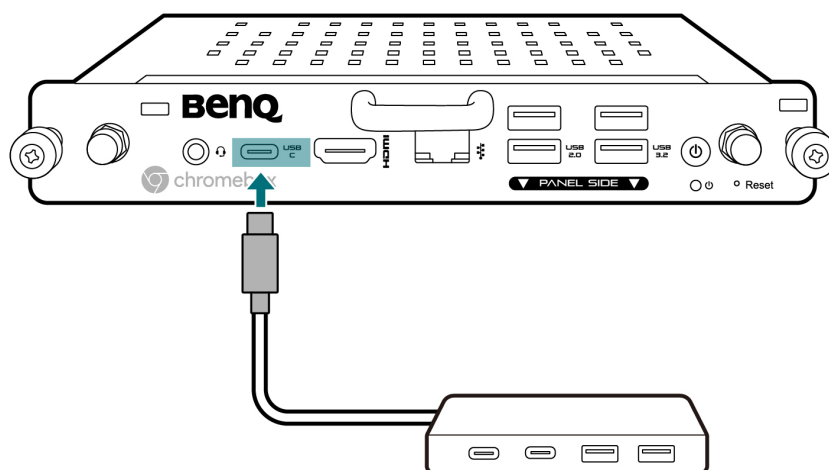



Powering on your Chromebox

To power on your Chromebox, press the **Power** button on the front panel. The **Power** button LED lights solid blue.

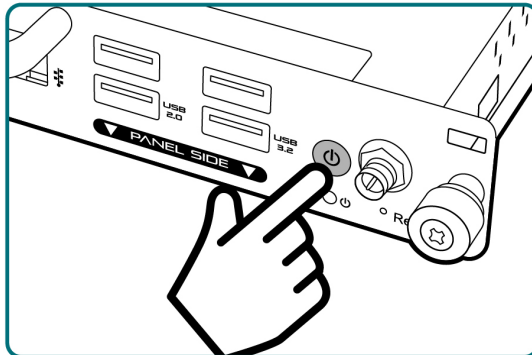

After you power on the Chromebox for the first time, you are prompted to configure some device's basic settings, such as set the language, configure accessibility options, connect to the network, and finally sign in to your Google account. Follow the on-screen instructions to complete the initial setup.


Product information

Specifications


Item		Specifications
		TEY1C
System	Platform	Alder Lake-U15 or Raptor Lake-U15 Chromebox
	Processor type	- Intel Celeron 7305 5C 1.10G BGA 8 MB 15W (Alder Lake-U15) - Intel Core i3-1315U 1.20G 10 MB 6C 15W CPU (Raptor Lake-U15)
	Graphics	- Intel® UHD Graphics - Intel Iris Xe Graphics-with shared video memory
	Integrated audio	HD audio
	Memory	SODIMM (DDR4-3200) DDR-4 module 8GB
	Storage	SSD 256GB
	Operating system	ChromeOS
Connectors	Front	- Combo x1 (Mic in & line out) - USB 3.0 x2 - USB 2.0 x2 - USB Type-C (without plug-in power on support) - RJ45 with LEDs for Gigabit LAN - HDMI 2.0 - Recover button - Antennas x2 - Power LED indicator
Dimensions	L x H x W (mm)	200 x 119 x 30 mm
Wireless and networking	LAN support	Gigabit Ethernet with speed up to 10/100/1000M GbE
	WLAN and Bluetooth support	M.2 2230 Intel Wifi6E + BT 5.2 Garfield Peak 2 AX211 non-vPro
Power source	Power supply from the Chromebox monitor.	



The Chromebox does not support hot-plug operation.



Dimensions

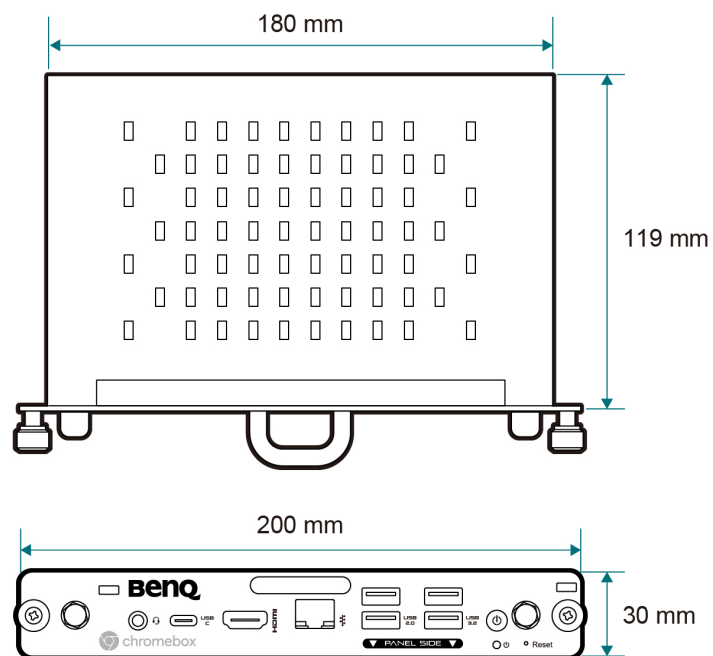


Unit: mm



Frequently asked questions


Question	Solution
What software works on a Chromebox?	Chromeboxes use apps from the Google Play Store and on the web. There are apps to be productive, get creative, enjoy movies and shows, play games and more.
How do I get more apps?	You can get more apps from the Google Play Store  or the web.
Can I use Microsoft Office software?	Chromeboxes work with Microsoft® Office. Whether it's Word, Excel® or PowerPoint®, you can easily find the apps on the web.
Where can I find my files?	All your files are stored in the Files app  . Find the app by clicking the Launcher icon  and searching "Files".
How do I transfer my local files?	Transfer your local files using a compatible storage device. Your Chromebox works with most external storage devices (e.g.: USB thumb drives, removable hard drives). You can also upload your files, photos, and videos to Google Drive. After setting up your Chromebox with your Google Account, you'll be able to access your files on Drive.
Why does my Chromebox need my Google Account information?	You'll use your Google Account to sign in to your Chromebox. It is the same account you use for Google services such as Gmail and Drive. Your Chromebox uses your account information to automatically sign you into apps and services.
How do I set this up for my child?	If you want to set up parental controls for your child, it's important that you sign in using your child's personal Google Account. If they don't already have one, you can create one during the sign-in process on your Chromebox. You will be able to add your child's school account after you complete device onboarding.



Product Support

This document aims to provide the most updated and accurate information to customers, and thus all contents may be modified from time to time without prior notice. Please visit the website for the latest version of this document and other product information. Available files vary by model.

- Make sure your computer is connected to the Internet.
- Visit the local website from www.BenQ.com. The website layout and content may vary by region/country.
- User manual and related document: www.BenQ.com > **Business** > **SUPPORT** > **Downloads** > model name > User Manual
- (EU only) Dismantled information: Available on the user manual download page. This document is provided based on Regulation (EU) 2019/2021 to repair or recycle your product. Always contact the local customer service for servicing within the warranty period. If you wish to repair an out-of-warranty product, you are recommended to go to a qualified service personnel and obtain repair parts from BenQ to ensure compatibility. Do not disassemble the product unless you are aware of the consequences. If you cannot find the dismantled information on your product, contact the local customer service for assistance.



Safety

When using this Chromebox, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Do not place the device on an uneven or unstable surface.
- Do not use this device near water.
- Do not spill water or other liquids into or on the device.
- The device may produce some heat during normal operation. If you feel the device is too warm, avoid sustained contact with exposed skin otherwise this might cause discomfort, or eventually a burn.
- Clean only with a soft cloth. If needed, dampen the cloth slightly before cleaning. Never use abrasives or cleaning solutions.
- Always disconnect the device from an electrical outlet and power off before cleaning the device.
- Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way such as:
 - Docking connector is damaged.
 - Liquid has been spilled into the device.
 - The device has been exposed to rain or moisture.
 - The device does not operate normally.
 - The device was dropped or the chassis is damaged.

Engineering Conditions of Acceptability

- The following end-product enclosures are required: Fire
- The end product should evaluate all likely positions of the equipment's orientation during installation and take opening requirements into account.

Battery notices

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade Dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.




- Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
- Leaving a battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.

Products incorporating button or coin cell batteries


Instructions and manuals, if provided, shall include all of the applicable markings in figures "Packing marking - Warning: Contains coin battery" or "Packing marking - Warning of ingestion hazard" and the statements noted below. If instructions and manuals are not provided, the statements shall be present on the principal display panel or secondary display panel of the consumer product packaging, or if there is no consumer product packaging, the accompanying hang tag or sticker label.

- a) The statement "Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate."
- b) The statement "Even used batteries may cause severe injury or death."
- c) The statement "Call a local poison control center for treatment information."
- d) A statement indicating the compatible battery type ML1220.




- e) The nominal battery voltage is 3V.
- f) The statement “Non-rechargeable batteries are not to be recharged.”
- g) The statement “Do not force discharge, recharge, disassemble, heat above (manufacturer’s specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.”


Packing marking - Warning: Contains coin battery

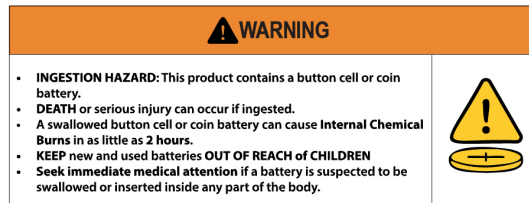

Packing marking - Warning of ingestion hazard

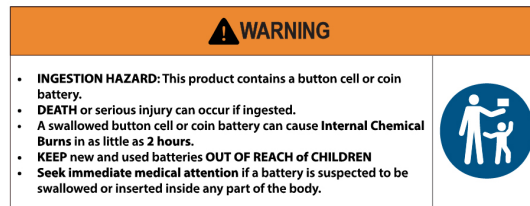

The product contains non-replaceable button/coin cell battery ML1220.



Copyright and disclaimer

Disclaimer

BenQ Corporation makes no representations or warranties, either expressed or implied, with respect to the contents of this document. BenQ Corporation reserves the right to revise this publication and to make changes from time to time in the contents thereof without obligation to notify any person of such revision or changes.


HDMI trademark disclaimer

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade Dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Copyright

Copyright 2025 BenQ Corporation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of BenQ Corporation.



Shape
the Future
of Learning

©2025 BenQ Corporation. All rights reserved. Trademarks and registered trademarks of all companies and product mentioned herein belong to their respective owners.

